

M1 Series Windrowers

Bluetooth Software Interface Kit (MD #208845) Software Update Instructions

147867 Revision K Original Instruction

The Harvesting Specialists.

M1240 Windrower, featuring Dual Direction[™] and Crossflex[™] suspension



Published: September 2021

© 2021 MacDon Industries, Ltd.

The information in this publication is based on the information available and in effect at the time of printing. MacDon Industries, Ltd. makes no representation or warranty of any kind, whether expressed or implied, with respect to the information in this publication. MacDon Industries, Ltd. reserves the right to make changes at any time without notice.

Introduction

The Bluetooth[®] Software Interface kit (MD #208845) is required to update the master controller software on M1 Series Windrowers. This document explains how to use this kit to perform software updates. Once the software has been updated, the kit can be removed from the windrower and retained for future updates.

A list of parts included in the kit is provided in Chapter 2 Parts List, page 5.

Installation Time

Software update time is approximately 20 minutes.

Conventions

The following conventions are used in this document:

- Right and left are determined from the operator's position, facing forward with the windrower in cab-forward position.
- Unless otherwise noted, use the standard torque values provided in the windrower operator's or technical manual.

NOTE:

Keep your MacDon publications up to date. The most current version of this instruction can be downloaded from our Dealer-only site (*https://portal.macdon.com*) (login required).

NOTE:

This document is currently available in English only.

List of Revisions

At MacDon, we're continuously making improvements, and occasionally these improvements affect product documentation. The following list provides an account of major changes from the previous version of this document.

Section	Summary of Change	Internal Use Only
Throughout	Software application IQANgo was IQANsync	Product Support

Introduction	i
List of Revisions	ii
Chapter 1: Safety	
1.1 Signal Words	1
1.2 General Safety	2
Chapter 2: Parts List	5
Chapter 3: Installation Instructions	7
3.1 Formatting USB Drive for Software Installation	7
3.2 Updating Harvest Performance Tracker Software	9
3.3 Installing the IQANgo Application	15
3.3.1 Installing the IQANgo App – iOS	15
3.3.2 Installing the IQANgo App – Android	
3.4 Installing an IQAN G11 Bluetooth [®] Module	
3.4.1 Updating Firmware on an IQAN G11 Bluetooth [®] Module – IOS	20
3.4.2 Updating Firmware on an IQAN G11 Bluetooth [®] Module – Android	22
3.5 Downloading Master Controller Software Update	
3.6 Updating Master Controller Software	
3.6.1 Updating Master Controller Software – iOS	29
3.6.2 Updating Master Controller Software on an Android Device	
3.7 Removing an IQAN G11 Bluetooth [®] Module	46

Chapter 1: Safety

Understanding and following safety procedures consistently will help to ensure the safety of machine operators and bystanders.

1.1 Signal Words

Three signal words, **DANGER**, **WARNING**, and **CAUTION**, are used to alert you to hazardous situations. Two signal words, **IMPORTANT** and **NOTE**, identify non-safety related information.

Signal words are selected using the following guidelines:

DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

IMPORTANT:

Indicates a situation that, if not avoided, could result in a malfunction or damage to the machine.

NOTE:

Provides additional information or advice.

1.2 General Safety

Protect yourself when assembling, operating, and servicing machinery.

The following general farm safety precautions should be part of your operating procedure for all types of machinery.

Wear all protective clothing and personal safety devices that could be necessary for the job at hand. Do **NOT** take chances. You may need the following:

- Hard hat
- Protective footwear with slip-resistant soles
- Protective glasses or goggles
- Heavy gloves
- Wet weather gear
- Respirator or filter mask

In addition, take the following precautions:

• Be aware that exposure to loud noises can cause hearing impairment. Wear suitable hearing protection devices such as earmuffs or earplugs to help protect against loud noises.



Figure 1.1: Safety Equipment



Figure 1.2: Safety Equipment



Figure 1.3: Safety Equipment

- Provide a first aid kit in case of emergencies.
- Keep a properly maintained fire extinguisher on the machine. Familiarize yourself with its use.
- Keep young children away from machinery at all times.
- Be aware that accidents often happen when Operators are fatigued or in a hurry. Take time to consider the safest way to accomplish a task. **NEVER** ignore the signs of fatigue.

- Wear close-fitting clothing and cover long hair. **NEVER** wear dangling items such as scarves or bracelets.
- Keep all shields in place. **NEVER** alter or remove safety equipment. Ensure that the driveline guards can rotate independently of their shaft, and that they can telescope freely.
- Use only service and repair parts made or approved by the equipment manufacturer. Parts from other manufacturers may not meet the correct strength, design, or safety requirements.



Figure 1.4: Safety around Equipment



Figure 1.5: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. **NEVER** attempt to clear obstructions or objects from a machine while the engine is running.
- Do **NOT** modify the machine. Unauthorized modifications may impair the functionality and/or safety of the machine. It may also shorten the machine's service life.
- To avoid injury or death from the unexpected startup of the machine, **ALWAYS** stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.
- Keep the machine service area clean and dry. Wet and/or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Ensure that all electrical outlets and tools are properly grounded.
- Keep the work area well-lit.
- Keep machinery clean. Straw and chaff on a hot engine are fire hazards. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before they are stored.
- **NEVER** use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover any sharp or extending components to prevent injury from accidental contact.



Figure 1.6: Safety around Equipment

Chapter 2: Parts List

The following parts are included in this kit.

Figure 2.1: Parts Included in Kit



Ref	Part Number	Description	Quantity
1	NSS ¹	MODULE – BLUETOOTH [®] , IQAN G11	1

^{1.} Not Sold Separately

Chapter 3: Installation Instructions

NOTE:

Throughout these instructions, when parts included in the kit are initially referenced, the part name is followed by its MacDon part number (MD #xxxxxx). If the part is not sold separately, the part name is followed by (MD #NSS). For more information, cross reference the part number to the parts list description and illustration.

3.1 Formatting USB Drive for Software Installation

The software installation procedure requires a USB drive with a maximum capacity of 32GB. To minimize software installation errors, format your USB drive before downloading any software updates onto the device.

NOTE:

This procedure shows Windows 7 operating system to format the drive.

 Plug a USB drive into a laptop or PC. An AutoPlay window (A) will appear. Click OPEN FOLDER TO VIEW FILES (B).

If the AutoPlay window does not appear, proceed to Step 2, page 7. If the AutoPlay window appears, proceed to Step 3, page 7.



Figure 3.1: Windows 7 AutoPlay Dialog Box

- 2. If the AutoPlay window does not appear, do the following:
 - a. Click on START then COMPUTER (A).
 - b. Double click on USB drive (B) to open it.
- 3. If there are files on the USB drive that require saving, move them to another USB drive or to the computer being used. Close the USB drive window.

NOTE:

Formatting the USB drive will permanently erase all content.



Figure 3.2: Windows 7 AutoPlay Dialog Box

4. Right-click on the USB drive and select FORMAT (A).



Figure 3.3: Formatting USB Drive

Capacity: 3.61 GB File system FAT32 (Default) Allocation unit size 16 kilobytes * Restore device defaults Volume label STORE N GO Format options V Quick Format Create an MS-DOS startup disk Create an MS-DOS startup disk	ormat	STORE N GO	D (U:)		83	
3.61 GB • File system FAT32 (Default) FAT32 (Default) • Allocation unit size • 16 kilobytes • Restore device defaults • Volume label • STORE N GO • Format options • Øuick Format • Create an MS-DOS startup disk •	Сара	ity:				A
File system FAT32 (Default) Allocation unit size 16 kilobytes Restore device defaults Volume label STORE N GO Format options Quick Format Create an MS-DOS startup disk C Start Cose	3.61	GB			•/	
FAT32 (Default) Allocation unit size 16 kilobytes Restore device defaults Volume label STORE N GO Format options Quick Format Create an MS-DOS startup disk Cose	File s	stem				(B)
Alocation unit size 16 kilobytes Restore device defaults Volume label STORE N GO Format options Quick Format Greate an MS-DOS startup disk C C Start Close	FAT	2 (Default)			•/	Í
16 klobytes Restore device defaults Volume label STORE N GO Format options Ø Quick Format Create an MS-DOS startup disk	Alloca	tion unit size				
Restore device defaults Volume label STORE N GO Format options Ø Quick Format Create an MS-DOS startup disk	16 ki	obytes			•	
Volume label STORE N GO Format options Quick Format Create an MS-DOS startup disk C Start Close	Res	tore device d	efaults			
STORE N GO Format options Quick Format Create an MS-DOS startup disk	Volum	e label				
Format options Quick Format Create an MS-DOS startup disk Start Close	STO	RE N GO			_1	
Create an MS-DOS startup disk	For	nat options			-1	
Create an MS-DOS startup disk	1	uick Format				
C Start Close		ireate an MS-	DOS startup	disk:		
C Start Close					3	
Starts Storts	(C		Start	Close	- 1	
	C		and the	- Source		

Figure 3.4: Formatting USB Drive

- 5. In the FORMAT window, drive CAPACITY (A) should appear at the top. Do **NOT** change this selection.
- 6. Under FILE SYSTEM (B), check that FAT32 is selected. This should be the default selection.

NOTE:

FAT32 will not be an option if USB drive size is larger than 32 GB.

- 7. Click START (C) to format the USB drive.
- 8. A warning pop-up will appear. Click OK on the warning popup to begin formatting.
- A message appears when formatting is complete. Click OK. The USB drive is now ready to use for downloading software.

3.2 Updating Harvest Performance Tracker Software

To update the Harvest Performance Tracker (HPT) display software, you must download the HPT display software update from the MacDon Dealer Portal.

NOTE:

HPT displays with software versions HPAE203586G and older are not compatible with new installation files. To update displays with software versions HPAE203586G and older, download and install the update file (install_SPW_HPAJ203586P_Installer_Update.efs) or newer. This will update the display, making it compatible with newer software versions. An attempt to install a non-installer update file will result in a red eject symbol.

Downloading HPT update

IMPORTANT:

For HPT displays with software version HPAF203586H and newer, download and install the update file (install_SPW_HPAJ203586P) or newer.

- On your computer, log on to the MacDon Dealer Portal, and navigate to PRODUCT SUPPORT (A) – MACHINE SOFTWARE (B) – M1 SERIES (C).
- 2. Locate HPT display software file (D). If more than one HPT software file is available, download the one with the highest revision level. The file will have the following naming convention (example shown):

Install_SPW_HPAB203586C.zip

- HP = Harvest Performance
- AB = Compatibility characters used to ensure that the HPT display software version is compatible with the master controller software
- 203586 = MacDon part number for the software
- C = Revision level of the software
- .zip = File extension

IMPORTANT:

Filenames are case sensitive and **MUST** remain in the format shown. Additional characters in the filenames can cause problems in the update process.

- 3. Download HPT display software file (D).
- 4. Click the downloaded file at the bottom left side of the page and select SHOW IN FILE (E).



Figure 3.5: MacDon Dealer Portal

5. Right-click downloaded file (A) and select EXTRACT ALL (B). A dialog box will open.



Figure 3.6: Extracting Zip File



Figure 3.7: Extracting Zip File

and the subscription of Streement	a service of the installe and	of these manages	A STATISTICS AND A STATISTICS
na i constante da seconda en la seconda en l		States in the	253.
	(A)		
	=		œ
1 date	¥:		02318

Figure 3.8: Extracting Zip File

6. Choose location (A) where you want to save the file. Click on EXTRACT (B).

7. Copy .efs file (A) that was extracted to a standard USB drive. The file **MUST** be saved into the top directory of the drive.

IMPORTANT:

Filenames are case sensitive and **MUST** remain in the format shown. Additional characters in the filenames can cause problems in the update process.

8. Ensure the file transfer is complete, then close the USB drive window.

- 9. Click Safely Remove Hardware icon (A) in system tray (B) (with the time and date display). A pop-up menu will appear listing all the devices that are connected to the computer.
- 10. Click the USB drive that you want to remove, right-click it and select EJECT.



Figure 3.9: USB Disconnect

Arbontest Editor - hp... A CMS Browser Westign Westign

Figure 3.10: USB Disconnect

12. In the windrower cab, turn the ignition key to ACC position (A). The windrower's electrical accessories are turned ON, but the engine remains OFF.



 Figure 3.11: Ignition Switch on Console

 A - ACC
 B - OFF

 C - RUN
 D - START

11. A pop-up message will appear saying it is safe to remove hardware. Unplug the USB drive.

Installing HPT display software

13. If the ignition was recently on, wait 2–3 minutes for CAN traffic to die down. When the system is ready, the home page will appear on the HPT display.

NOTE:

For more information about how to navigate through the HPT display, refer to the windrower operator's manual.

14. Insert the USB drive into USB port (A) at the rear of the console next to the ignition switch. After a few seconds, the HPT display will update to show the software selection page.



Figure 3.12: HPT Display – Home Page



Figure 3.13: USB Port on Console

15. Use the scroll wheel to select the software file from list (A), and then press soft key 1 on the top right corner of the display to accept it. The software update should begin and take approximately 5 minutes but can take up to 10 minutes to complete.

IMPORTANT:

Do **NOT** remove the USB drive, turn the key from the ACC position, or activate any ground speed lever (GSL) or console switches during the update.

NOTE:

List (A) will display all the HPT software file saved in the USB. List (B) will display current installed version.



Figure 3.14: Software Selection Page A - Software File(s) B - Currently Installed Software Version

16. When the update is complete, a green eject icon appears on the display. Remove the USB drive and leave the key in ACC position. The display reboots several times until the home page is displayed. It is then safe to continue.



Figure 3.15: Green Eject Icon

17. If the icon is yellow (A) or red (B) as shown at right, remove the USB drive and return to Step *14, page 12*.

NOTE:

In the event of a failed update, cycle the display power before retrying. You can wait for the battery disconnect to activate or remove the battery cables to cycle the display.

NOTE:

You may need to reformat the USB drive and reload the software onto it. Refer to *3.1 Formatting USB Drive for Software Installation, page 7.*

esoco

Figure 3.16: Yellow and Red Eject Icons



Figure 3.17: Caution Message

 If the HPT display and the master controller software compatibility characters do not match, an error will be displayed on the HPT. If the error occurs, update the master controller software as described in 3.6.1 Updating Master Controller Software – iOS, page 29 and 3.6.2 Updating Master Controller Software on an Android Device, page 35.

NOTE:

The header and windrower settings may have changed during the update. Please check all settings before operation.

3.3 Installing the IQANgo Application

The IQANgo application is available for Apple iOS and Android devices.

Refer to one of the following procedures to install the app on your device:

- 3.3.1 Installing the IQANgo App iOS, page 15
- 3.3.2 Installing the IQANgo App Android, page 16

3.3.1 Installing the IQANgo App – iOS

Before you can transfer updated software to the Harvest Performance Tracker (HPT) or master controller, you must install the IQANgo application. This procedure applies only to iOS devices.

Follow these steps to download the IQANgo application onto your iOS device:

- 1. Open the Apple App Store on your device.
- 2. Tap SEARCH (A) at the bottom of the App Store window.
- 3. Type IQANgo in search bar (B), and then press ENTER.
- 4. Tap INSTALL button (C) and enter the user password if required.



Figure 3.18: Apple App Store



Figure 3.19: Home Screen

Once installed, IQANgo app (A) will appear on your home page.

NOTE:

Check your iOS device periodically to ensure IQANgo is up-to-date.

Select OK (A) if prompted by the IQANgo app for permission to communicate via Bluetooth.



Figure 3.20: Update Screen

3.3.2 Installing the IQANgo App – Android

Before you can transfer updated software to the Harvest Performance Tracker (HPT) or master controller, you must install the IQANgo application. This procedure applies only to Android devices.

Follow these steps to download the IQANgo application onto your Android device:

1. Open Google Play Store app (A) on your device.



Figure 3.21: Google Play App

- 2. Tap SEARCH at the top of the Play Store window.
- 3. Type IQANgo in search bar (A) and then press ENTER.



Figure 3.22: Google Play Store



Figure 3.23: Google Play Store

4. Tap INSTALL button (A) and enter the user password if required.

- 5. Tap IQANgo icon (A) to open the app from your home page.
- 6. Accept/allow all permission requests (B).

NOTE:

Check your Android device periodically to ensure IQANgo is up-to-date.



Figure 3.24: Home Screen

3.4 Installing an IQAN G11 Bluetooth® Module

The IQAN G11 Bluetooth® Module is required to update the master controller software.

To install the IQAN G11 Bluetooth[®] Module, follow these steps:

- 1. Locate relay module access door (A) in the inside of the cab, in the front left corner of the headliner.
- 2. Turn latch (B) to open access door (A).



Figure 3.25: Relay Module Cover in Cab Headliner



Figure 3.26: Relay Module and Harness Connector



Figure 3.27: Relay Module and Harness Connector

3. Locate roof harness connector P826 (A).

- 4. Attach IQAN G11 Bluetooth[®] Module (A) to roof harness connector P826.
- 5. Close the relay module cover and secure with the latch.

3.4.1 Updating Firmware on an IQAN G11 Bluetooth[®] Module – IOS

This procedure is optional. It is only required if a firmware update is available.

- 1. Install IQAN G11 Bluetooth[®] Module. Refer to 3.4 Installing an IQAN G11 Bluetooth[®] Module, page 19.
- 2. Open IQANgo app (A) on your Bluetooth[®] enabled device.



Figure 3.28: IQANgo App on iOS Device

3. Select your machine (A) and tap CONNECT.

•୦୦୦ ROGERS 🕈	10:50 AM	108	86% 🗪
K Blu	etooth adapt	er	
	Type		
SELECT & MACHIN	8 Bluetooth	A	
IQAN-G11 (79412E9F-51A2-40C)	6-B77A-BA2E132	223AAE}	1
Connect		Cancel	
			21589
			6

Figure 3.29: Selecting a Windrower to Update

4. Once connected, if a firmware update is available a message will appear. Select YES (A) to update.

If an update is selected, a progress bar (A) will appear.

AND BELL LTE	10:34 AM	18 V 0 77% m
CONNECTION		
S Disconnect	t Unknown via Blueto	oth
C Remote as	sistance	
OPERATIONS		
Bluetoot	th adapter update	available
The bluetoot has an old fin	h adapter you are cor rmware. Do you want	nnecting to to update it
E- now?		
E A		
E		3
тос Уе		No
Manage file	es	
🕞 Manage pa	isswords	3
Options		3
		17 - 20
		Ry .

Figure 3.30: Firmware Update

AND BERLETE	10:34 AM	8 4 8 77% m
CONNECTION		
S Disconnec	t o Unknown via Blueto	oth
C Remote as	sistance	
Upd	fating adapter firm	nware
	1.07 -> 1.11	
A		
1		
	6.55	
OK		Cancel
Manage p	asswords	3
(한) Options		1036654
a 6		₩ 1

Figure 3.31: Firmware Update

5. When the update is complete, a FIRMWARE UPDATED dialog box (A) appears. Tap OK.

- 6. The OPTIONS screen displays the updated firmware version (A).
- If the master controller software is going to be updated, leave the IQAN G11 Bluetooth[®] Module in place. Otherwise, remove it. For instructions, refer to 3.7 *Removing an IQAN G11 Bluetooth[®] Module, page 46*.

AND BELL CTE	10:35 AM	84	@ 77% m)
CONNECTION			
S Disconnect	Joknown via Bluet	ooth	
C Remote ass	istance		
Upda	ting adapter fin	mware	
Firmware up:	dated successfully	to version 1	.11.
-	1010		
	100 %		_
ок		Cancel	
A Manage pas	swords		3
Options			10
			6655
500			m

Figure 3.32: Firmware Update

atil TELUS WI-FI 🗢	15:44	C C1 67%
<	Options	
PASSWORDS		
Always save passv	vor	0
Ask to save passw	ords	
ABOUT IQANGO		
App version		6.05.29
G11 firmware vers	ion	1.11
Show EULA	(A)
Acknowledgement	5	2
		J36656
		10

Figure 3.33: Firmware Update

3.4.2 Updating Firmware on an IQAN G11 Bluetooth® Module – Android

This procedure is optional. It is only required if a firmware update is available.

1. Install IQAN G11 Bluetooth[®] Module. Refer to 3.4 Installing an IQAN G11 Bluetooth[®] Module, page 19.

2. Open IQANgo app (A) on your Bluetooth[®] enabled device.



Figure 3.34: IQANgo App on Android Device

Figure 3.35: IQANgo App on Android Device

3. Select BLUETOOTH ADAPTER CONFIGURATION (A).

NOTE:

If your application screen does not have this option, check that the application is up-to-date.

4. Select module (A) and tap CONNECT (B).



Figure 3.36: Selecting a Windrower to Update



Figure 3.37: Firmware Update

5. Once connected, a message will pop up and a green box (A) if a firmware update is available. Tap OK (B), then tap green box (A).

NOTE:

If there is no green box, the firmware is up to date.

If an update is selected, a progress bar (A) will appear.



Figure 3.38: Firmware Update

Figure 3.39: Firmware Update

6. When the update is complete, a FIRMWARE UPDATED dialog box (A) appears. Tap OK.

- 7. The BLUETOOTH ADAPTER screen displays the updated firmware version (A). Close the app once complete.
- If the master controller software is going to be updated, leave the IQAN G11 Bluetooth[®] Module in place. Otherwise, remove it. For instructions, refer to 3.7 *Removing an IQAN G11 Bluetooth[®] Module, page 46.*

Figure 3.40: Firmware Update

3.5 Downloading Master Controller Software Update

Master controller software updates can be downloaded from the MacDon Dealer Portal to a personal computer.

- Log on to the MacDon Dealer Portal, and navigate to PRODUCT SUPPORT (D) – MACHINE SOFTWARE (B) – M1 SERIES (C).
- 2. Locate master controller software update file (A). The file will have the following naming convention (example shown):

MCAB203587D.zip

- MC = Master controller
- AB = Compatibility characters used to ensure that the master controller software version is compatible with the Harvest Performance Tracker (HPT) display software
- 203587 = MacDon part number for the software
- D = Revision level of the software
- .zip = File extension

IMPORTANT:

Filenames are case sensitive and **MUST** remain in the format shown. Additional characters in the filenames can cause problems in the update process.

If more than one master controller software file is available, download the one with the highest revision level.

- 3. Download master controller software update file (A).
- 4. Click the downloaded file at the bottom left side of the page and select SHOW IN FOLDER (B).

Figure 3.41: MacDon Dealer Portal

	* beauting	
		2
and the second second	Real and the second sec	A)
and the second second	State and so that and so that and	0
-		
-		
and the second s		
Tear		
-		- 149-C
HE 81.97		
		103625

Figure 3.42: MacDon Dealer Portal

5. Right-click on downloaded folder (A) and select EXTRACT ALL (B).

Figure 3.43: Extracting Zip File

Figure 3.44: Extracting Zip File

Figure 3.45: Extracting Zip File

6. A dialog box will open. Choose a location (A) where you want to save the file. Click on EXTRACT (B).

- 7. E-mail downloaded file (A) to your IQANgo equipped device and proceed to the master controller update procedure for your device:
 - 3.6.1 Updating Master Controller Software iOS, page 29
 - 3.6.2 Updating Master Controller Software on an Android Device, page 35

3.6 Updating Master Controller Software

Master controller software is updated using the IQANgo application which is available for Apple iOS and Android devices. Refer to one of the following procedures depending on your device:

- 3.6.1 Updating Master Controller Software iOS, page 29
- 3.6.2 Updating Master Controller Software on an Android Device, page 35

3.6.1 Updating Master Controller Software – iOS

The master controller software can be updated using an iOS device.

Before updating the master controller, ensure you have completed the following tasks:

- Install the IQANgo application from the Apple App store onto a Bluetooth[®] enabled iOS device. Refer to 3.3.1 Installing the IQANgo App – iOS, page 15
- Install an IQAN G11 Bluetooth[®] Module. Refer to 3.4 Installing an IQAN G11 Bluetooth[®] Module, page 19
- Download the master controller software update from the MacDon Dealer Portal. Refer to 3.5 Downloading Master Controller Software Update, page 27

IMPORTANT:

Filenames are case sensitive and **MUST** remain in original format. Additional characters in the filenames can cause problems in the update process.

1. Open your email program and find the e-mail with ida4 file attachment (A).

Figure 3.46: File Attachment

Transferring software file to the IQANgo application when the iQANgo icon appears

- 2. To transfer the file from your device email to the IQANgo app, tap and hold the attached ida4 file and select the iQANgo application (A) from the options.
- 3. If your device does not display iQANgo app icon (A), proceed to Step *4, page 30*, otherwise, proceed to Step *7, page 32*.

Figure 3.47: Data File Transfer

Transferring software file to the IQANgo application when the iQANgo icon does NOT appear

- 4. To transfer the file from your device email to the IQANgo app, tap and hold the attachment file. A SAVE/SHARE/COPY window will open.
- 5. Tap SAVE TO FILES (A). The file save page will open.

Figure 3.48: Save to Files Method

6. Tap IQANGO folder (A).

The IQANgo app opens and the recently added ida4 file (A) is highlighted. The file should now be available within the IQANgo app.

NOTE:

If you already have an older copy of the file saved in your IQAN FILES folder, a message will appear asking if you want to replace the existing item. Tap REPLACE.

Figure 3.49: Data File Transfer

∢Mail,di 🛠	10:59 AM	Ø 71% 🔳)
<	Select a file	B
PROJECT FILES	5	
MCAF203587J.	IDA4	
416 KBytes		
MCAK203587P	IDA4	
427 KBytes		
MCAH203587M	UDA4	
421 KBytes		
MCAG203587K	IDA4	
MCA 1202597N	IDA6	\mathbf{A}
437 KBytes	10/14	Ŷ
MCAL2035870. 416 KBytes	ida4	
MCAD203587G. 447 KBytes	IDA4	
		26
		3371
		10

Figure 3.50: Data File Transfer

Installing master controller software

 In the windrower cab, turn the ignition key to ACC position (A). The windrower's electrical accessories are turned ON, but the engine remains OFF.

NOTE:

For the following steps, you must be in or next to the windrower cab so that the Bluetooth[®] device can connect with the IQAN G11 Bluetooth[®] Module in the cab headliner.

 Figure 3.51: Ignition Switch on Console

 A - ACC
 B - OFF

 C - RUN
 D - START

all Bell LTE	10:33 AM	
CONNECTION		
S ST Connect		
Remote as	sistance	
OPERATIONS	~	
🖉 Log in	A)
Send to m	achine	2
Get clone f	rom machine	
🗧 Get setting	s from machine	
🔆 Get log fro	m machine	>
TOOLS		
Manage fil	es	3
🕞 Manage pa	isswords	5
Options		3
		036661

Figure 3.52: IQANgo Application

- 8. Enable the device's Bluetooth[®] feature.
- 9. Open the IQANgo application and tap SEND TO MACHINE (A).

- 10. Select ida4 file (A) to upload to the windrower. A pop-up window will appear.
- 11. Enter password mac226.

NOTE:

The application may request permission to save the password. If you select YES, this step will be skipped for future uploads.

12. Select SEND TO SYSTEM.

▲ Mail 。白 令	10:59 AM	07	1% 🔳)
<	Select a file		B
PROJECT FILE	s		
MCAF203587J. 416 KBytes	IDA4		
MCAK203587P 427 KBytes	.IDA4		
MCAH203587M 421 KBytes	LIDA4		
MCAG203587K 420 KBytes	.IDA4	\sim	
MCAJ203587N 437 KBytes	IDA4	(\mathbf{A})	
MCAL2035870. 416 KBytes	ida4		
MCAD203587G 447 KBytes	IDA4		
			137126
			10

Figure 3.53: Data File Transfer

13. Select Bluetooth[®] (A) in the IQANgo app. The app will scan for available windrowers.

NOTE:

If connection problems are encountered or the SELECT A MACHINE area does not populate, refer to 3.4.1 Updating Firmware on an IQAN G11 Bluetooth® Module – IOS, page 20.

- 14. Select your windrower (B) and tap CONNECT (C).
- 15. A message appears, asking if you want to update your windrower. Tap YES. A warning will appear asking you to check that the windrower is in park and the engine is turned off.

Figure 3.54: Windrower Selection

16. A message (A) appears telling you to make sure that the windrower is not moving and the engine is OFF. Select OK to start the update. A SENDING TO MODULE screen appears.

IMPORTANT:

Decline all phone calls while the update is in progress and stay in range of the IQAN G11 Bluetooth[®] Module in the cab headliner. Accepting phone calls or walking out of range interrupts the update causing you to start again.

17. When the update is complete, a SYSTEM UPDATED screen appears. Tap OK (A) to continue.

11 Ben -	2:24 PM		0276
<	Select a fil	e	E
*	*		nt.
	A		
	Attention	i 📝	
Make su	are that the machine is ice is shut down. If on	i not moving and	
Click 10	K" to start update.	CONTRACTOR CONTRACT	
			I
_			
	ок	Cancel	
-	ок	Cancel Cancel	
-	ок	Cancel Cancel	
Cor	OK DK	Cancel Cancel Cancel	
Cor	OK DK	Cancel Cancel Cancel	
Cor	OK DR	Cancel Cancel Cancei	

Figure 3.55: Engine Shut Down Message

• Bell 🗢	2:26 PM	Ø 52% #		
<	Select a file	Đ		
-	**			
*	*	æ		
	- Institute().			
	System updated!			
	S			
The compl	lete system was updated s	uccessfully.		
197.1 KBytes				
OK	(0	ancet		
	1			
Conn	ect C	ancei		
0 3	A III &	337129		
5	ntern Logs Her	Adapt		

Figure 3.56: System Updated Message

- 18. Turn windrower key to the OFF position (B).
- 19. Turn windrower key to ACC position (A).

Figure 3.57: Ignition Switch on Console A - ACC B - OFF C - RUN D - START

IMPORTANT:

If the master controller and the Harvest Performance Tracker (HPT) display software compatibility characters do not match, an error may be displayed on the HPT. If error occurs, update the HPT display software as described in 3.2 Updating Harvest Performance Tracker Software, page 9.

NOTE:

The header and windrower settings may have changed during the update. Please check all settings before operation.

Figure 3.58: Caution Message

3.6.2 Updating Master Controller Software on an Android Device

The master controller software can be updated using an Android device.

IMPORTANT:

Filenames are case sensitive and **MUST** remain in original format. Additional characters cause problems with the update process.

Before updating the master controller, ensure you have completed the following tasks:

- Install the IQANgo application from the Google Play store onto a Bluetooth[®] enabled Android device. Refer to 3.3.2 Installing the IQANgo App – Android, page 16
- Install an IQAN G11 Bluetooth® Module. Refer to 3.4 Installing an IQAN G11 Bluetooth® Module, page 19
- Download the master controller software update from the MacDon Dealer Portal. Refer to 3.5 Downloading Master Controller Software Update, page 27

- 1. Enable the Android device's Bluetooth[®] feature.
- In the windrower cab, turn the ignition key to ACC position (A). The windrower's electrical accessories are turned ON, but the engine remains OFF.

NOTE:

For the following steps, you must be in or next to the windrower cab so that the Bluetooth[®] device can connect with the IQAN G11 Bluetooth[®] Module in the cab headliner.

 Figure 3.59: Ignition Switch on Console

 A - ACC
 B - OFF

 C - RUN
 D - START

Figure 3.60: ida4 File Attachment

3. Open up the email program and select the email message with software attachment (A).

Loading an ida4 file attachment if the OPEN WITH screen appears:

- 4. On first use after installing the app, there is a pop-up requesting which app to use to process the software. Choose IQANgo (A) and ALWAYS (B).
- 5. If your device does not display the iQANgo app icon (A), proceed to Step 6, page 37, otherwise proceed to Step 15, page 41.

Figure 3.61: ida4 File Attachment

Loading an ida4 file attachment if the OPEN WITH screen does NOT appear:

- 6. If the Open With screen does not appear, select options (A) from the attachment file.
- 7. The Save To page will display. Select DEVICE (B).

Figure 3.62: ida4 File Email Attachment

8. When download is complete, return to the device home page and select MY FILES (A) from the applications.

9. From the My Files page, select INTERNAL STORAGE (A).

Figure 3.63: Android Home Page

My Files Q : Recent files ъ ъ -Categories 2 A APK **A** Internal storage SD card P Samsung Cloud Drive 4 OneDrive 1

Figure 3.64: Android My Files Page

10. From the Internal Storage page, select DOWNLOAD (A).

Figure 3.65: Android Internal Storage Page

Figure 3.66: Android Downloaded Items Page

11. Find ida4 file (A) from the downloaded items. Press and hold the file to select, then press COPY (B). A notification will appear when the file is successfully copied.

12. Select SEARCH icon (A) and enter the word iQANgo and select iQANgo Files icon (B).

Figure 3.67: Android Search Results

No files

Figure 3.68: Android iQANgo Files Page

- 13. From the lower right corner of the iQANgo Files screen, select COPY HERE (A). The file will be copied to the iQANgo file folder.
- 14. Return to the device home page and open the iQANgo application.

15. From the Operations list of the iQANgo app, select SEND TO MACHINE (A).

16. Select file (A) then select ICON (B) to send to system.

Figure 3.69: iQANgo Application

Figure 3.70: IQANgo Project Files

147867

17. Select G11 module (A). A check mark will appear.

Figure 3.71: IQANgo

- 18. If prompted, enter the password $\mbox{mac226}$ and select OK (A).
- 19. Tap on CONNECT.

Figure 3.72: IQANgo

20. Select Yes (A) to confirm update.

Figure 3.73: IQANgo

Figure 3.74: IQANgo

21. Check that the engine is OFF, the ignition key is in ACC position, and the windrower is not moving, then select OK (A) to start the update.

IMPORTANT:

Decline all phone calls while the update is in progress and stay in range of the IQAN G11 Bluetooth[®] Module in the cab headliner. Accepting phone calls or walking out of range interrupts the update and you'll need to start again. 22. A finalizing screen and progress bar (A) appears.

Figure 3.75: IQANgo Progress

Figure 3.76: IQANgo

23. When the update is complete, a SYSTEM UPDATED screen appears. Tap OK (A).

- 24. Turn windrower key to OFF position (B).
- 25. Turn windrower key to ACC position (A).

Figure 3.77: Ignition Switch on Console A - ACC B - OFF C - RUN D - START

IMPORTANT:

If the master controller and the Harvest Performance Tracker (HPT) display software compatibility characters do not match, an error may be displayed on the HPT. If error occurs, update the HPT display software as described in 3.2 Updating Harvest Performance Tracker Software, page 9.

NOTE:

The header and windrower settings may have changed during the update. Please check all settings before operation.

Figure 3.78: Caution Message

3.7 Removing an IQAN G11 Bluetooth[®] Module

The IQAN G11 Bluetooth[®] Module should be removed after any software or firmware updates.

- 1. Locate relay module access door (A) inside the cab, in the front left corner of the headliner.
- 2. Turn latch (B) to open.
- 3. Open relay module access door (A).

Figure 3.79: Relay Module Cover in Cab Headliner

Figure 3.80: Relay Module and Harness Connector

Figure 3.81: Relay Module Cover in Cab Headliner

4. Remove IQAN G11 Bluetooth[®] Module (A) from roof harness connector P826.

5. Close relay module access door (A) and turn latch (B)

to lock.

MacDon

CUSTOMERS MacDon.com

DEALERS Portal.MacDon.com

Trademarks of products are the marks of their respective manufacturers and/or distributors.

Printed in Canada