


BY MacDon

FD2 Series FlexDraper[®] Header with FM200 Float Module

Operator's Manual

215954 Revision A Original Instruction FD2 Series FlexDraper® Header

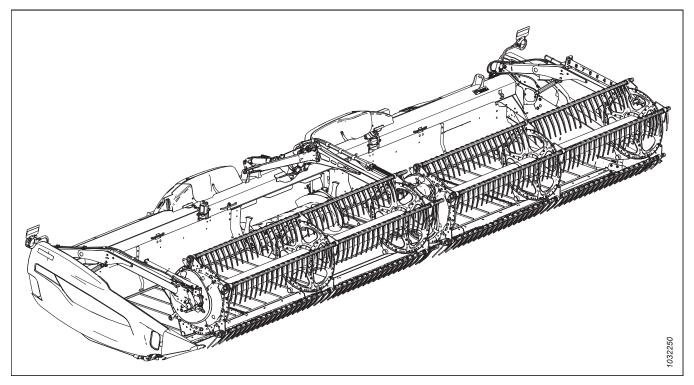

Published: August 2022

© 2022 MacDon Industries, Ltd.

The information in this publication is based on the information available and in effect at the time of printing. MacDon Industries, Ltd. makes no representation or warranty of any kind, whether expressed or implied, with respect to the information in this publication. MacDon Industries, Ltd. reserves the right to make changes at any time without notice.

Declaration of Conformity

CE	EC Declaration of Conformity		
	^{1]} MacDon	[4] As per Shipping Document	
	MacDon Industries Ltd. 680 Moray Street, Winnipeg, Manitoba, Canada R3J 3S3	[5] June 29, 2022	
	[2] Combine Header [3] MacDon FD2 Series	[6]Christoph Martens Product Integrity	
		<i></i>	
EN	BG	CZ	DA
We, [1]	Ние, [1]	Му, [1]	Vi, [1]
Declare, that the product:	декларираме, че следният продукт:	Prohlašujeme, že produkt:	erklærer, at prduktet:
Machine Type: [2]	Тип машина: [2]	Typ zařízení: [2]	Maskintype [2]
Name & Model: [3]	Наименование и модел: [3]	Název a model: [3]	Navn og model: [3]
Serial Number(s): [4]	Сериен номер(а) [4]	Sériové(á) číslo)a): [4]	Serienummer (-numre): [4]
fulfils all the relevant provisions of the Directive 2006/42/EC.	отговаря на всички приложими разпоредби на директива 2006/42/EO.	splňuje všechna relevantní ustanovení směrnice 2006/42/EC.	Opfylder alle bestemmelser i direktiv 2006/42/EF.
Harmonized standards used, as referred to in Article 7(2): EN ISO 4254-1:2013	Използвани са следните хармонизирани стандарти според чл. 7(2):	Byly použity harmonizované standardy, jak je uve- deno v článku 7(2):	Anvendte harmoniserede standarder, som henvist til i paragraf 7(2):
EN ISO 4234-1:2013 EN ISO 4254-7:2009	EN ISO 4254-1:2013	EN ISO 4254-1:2013	EN ISO 4254-1:2013
Place and date of declaration: [5]	EN ISO 4254-7:2009 Място и дата на декларацията: [5]	EN ISO 4254-7:2009 Místo a datum prohlášení: [5]	EN ISO 4254-7:2009 Sted og dato for erklæringen: [5]
Identity and signature of the person empowered to draw up the declaration: [6]	Име и подпис на лицето, упълномощено да изготви декларацията: [6]	Identita a podpis osoby oprávněné k vydání prohlášení: [6]	ldentitet på og underskrift fra den person, som er bemyndiget til at udarbejde erklæringen: [6]
Name and address of the person authorized to compile the technical file:	Име и адрес на лицето, упълномощено да състави техническия файл:	Jméno a adresa osoby oprávněné k vyplnění techni- ckého souboru:	Navn og adresse på den person, som er bemyndiget til at udarbejde den tekniske fil:
Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germany) bvonriedesel@macdon.com	Бенедикт фон Рийдезел Управител, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Германия) bvonriedesel@macdon.com	Benedikt von Riedesel generální ředitel, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Némecko) bvonriedesel@macdon.com	Benedikt von Riedesel Direktør, MacDon Europe GmbH Hagenauer Straße 59 D-65203 Wiesbaden (Tyskland) bvonriedesel@macdon.com
DE	ES	ET	FR
Wir, [1]	Nosotros [1]	Meie, [1]	Nous soussignés, [1]
Erklären hiermit, dass das Produkt:	declaramos que el producto:	deklareerime, et toode	Déclarons que le produit :
Maschinentyp: [2]	Tipo de máquina: [2]	Seadme tüüp: [2]	Type de machine : [2]
Name & Modell: [3]	Nombre y modelo: [3]	Nimi ja mudel: [3]	Nom et modèle : [3]
Seriennummer (n): [4]	Números de serie: [4]	Seerianumbrid: [4]	Numéro(s) de série : [4]
alle relevanten Vorschriften der Richtlinie 2006/42/EG erfüllt.	cumple con todas las disposiciones pertinentes de la directriz 2006/42/EC.	vastab kõigile direktiivi 2006/42/EÜ asjakohastele sätetele.	Est conforme à toutes les dispositions pertinentes de la directive 2006/42/EC.
Harmonisierte Standards wurden, wie in folgenden Artikeln angegeben, verwendet 7(2):	Se utilizaron normas armonizadas, según lo dispuesto en el artículo 7(2):	Kasutatud on järgnevaid harmoniseeritud stand- ardeid, millele on viidatud ka punktis 7(2):	Utilisation des normes harmonisées, comme indiqué dans l'Article 7(2):
EN ISO 4254-1:2013 EN ISO 4254-7:2009 Ort und Datum der Erklärung: [5]	EN ISO 4254-1:2013 EN ISO 4254-7:2009 Lugar y fecha de la declaración: [5]	EN ISO 4254-1:2013 EN ISO 4254-7:2009 Deklaratsiooni koht ja kuupäev: [5]	EN ISO 4254-1:2013 EN ISO 4254-7:2009 Lieu et date de la déclaration : [5]
Name und Unterschrift der Person, die dazu befugt ist, die Erklärung auszustellen: [6]	Identidad y firma de la persona facultada para draw redactar la declaración: [6]	Deklaratsiooni koostamiseks volitatud isiku nimi ja allkiri: [6]	Identité et signature de la personne ayant reçu le pouvoir de rédiger cette déclaration : [6]
Name und Anschrift der Person, die dazu berechtigt ist, die technischen Unterlagen zu erstellen:	Nombre y dirección de la persona autorizada para elaborar el expediente técnico:	Tehnilise dokumendi koostamiseks volitatud isiku nimi ja aadress:	Nom et adresse de la personne autorisée à consti- tuer le dossier technique :
Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden bvonriedesel@macdon.com	Benedikt von Riedesel Gerente general - MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Alemania) bvonriedesel@macdon.com	Benedikt von Riedesel Peadirektor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Saksamaa) bvonriedesel@macdon.com	Benedikt von Riedesel Directeur geheral, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Allemagne) bvonriedesel@macdon.com

The Harvesting Specialists

MacDon

EC Declaration of Conformity

		or comorning	
IT	HU	LT	LV
Noi, [1]	Mi, [1]	No. (4)	M424 [4]
Dichiariamo che il prodotto:	Ezennel kijelentjük, hogy a következő termék:	Mes, [1]	Mēs, [1]
Tipo di macchina: [2]	Gép típusa: [2]	Pareiškiame, kad šis produktas:	Deklarējam, ka produkts:
	Név és modell: [3]	Mašinos tipas: [2]	Mašīnas tips: [2]
Nome e modello: [3]	Szériaszám(ok): [4]	Pavadinimas ir modelis: [3]	Nosaukums un modelis: [3]
Numero(i) di serie: [4]	teljesíti a következő irányelv összes vonatkozó	Serijos numeris (-iai): [4]	Sērijas numurs(-i): [4]
soddisfa tutte le disposizioni rilevanti della direttiva 2006/42/CE.	előírásait: 2006/42/EK.	atitinka taikomus reikalavimus pagal Direktyvą	Atbilst visām būtiskajām Direktīvas 2006/42/EK
2000/42/02	2006/42/EB.		prasībām.
Utilizzo degli standard armonizzati, come indicato	Az alábbi harmonizált szabványok kerültek	Naudojami harmonizuoti standartai, kai nurodoma	Piemēroti šādi saskaņotie standarti , kā minēts
nell'Articolo 7(2):	alkalmazásra a 7(2) cikkely szerint:	straipsnyje 7(2):	7. panta 2. punktā:
EN ISO 4254-1:2013	EN ISO 4254-1:2013	EN ISO 4254-1:2013	EN ISO 4254-1:2013
EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009
Luogo e data della dichiarazione: [5]	A nyilatkozattétel ideje és helye: [5]	Deklaracijos vieta ir data: [5]	Deklarācijas parakstīšanas vieta un datums: [5]
Nome e firma della persona autorizzata a redigere la	Azon személy kiléte és aláírása, aki jogosult a	Asmens tapatybės duomenys ir parašas asmens,	Tās personas vārds, uzvārds un paraksts, kas ir
dichiarazione: [6]	nyilatkozat elkészítésére: [6]	įgalioto sudaryti šią deklaraciją: [6]	pilnvarota sagatavot šo deklarāciju: [6]
Nome e persona autorizzata a compilare il file	Azon személy neve és aláírása, aki felhatalmazott a műszaki dokumentáció összeállítására:	Vardas ir pavardė asmens, kuris įgaliotas sudaryti šį	Tās personas vārds, uzvārds un adrese, kas ir
tecnico:		techninį failą:	pilnvarota sastādīt tehnisko dokumentāciju:
Benedikt von Riedesel General Manager, MacDon Europe GmbH	Benedikt von Riedesel Vezérigazgató, MacDon Europe GmbH	Benedikt von Riedesel Generalinis direktorius, MacDon Europe GmbH	Benedikts fon Rīdīzels
Hagenauer Straße 59	Hagenauer Straße 59	Hagenauer Straße 59	Ģenerāldirektors, MacDon Europe GmbH Hagenauer Straße 59
65203 Wiesbaden (Germania)	65203 Wiesbaden (Németország)	65203 Wiesbaden (Vokietija)	65203 Wiesbaden (Vācija)
bvonriedesel@macdon.com	bvonriedesel@macdon.com	bvonriedesel@macdon.com	bvonriedesel@macdon.com
L			
NL	PO	PT	RO
Wij, [1]	My niżej podpisani, [1]	Nós, [1]	Noi, [1]
Verklaren dat het product:	Oświadczamy, że produkt:	Nos, [1] Declaramos, que o produto:	Declarăm, că următorul produs:
Machinetype: [2]	Typ urządzenia: [2]	Tipo de máquina: [2]	Tipul mașinii: [2]
Naam en model: [3]	Nazwa i model: [3]	Nome e Modelo: [3]	Denumirea și modelul: [3]
Serienummer(s): [4]	Numer seryjny/numery seryjne: [4]		Număr (numere) serie: [4]
voldoet aan alle relevante bepalingen van de	spełnia wszystkie odpowiednie przepisy dyrektywy	Número(s) de Série: [4]	corespunde tuturor dispozițiilor esențiale ale
Richtlijn 2006/42/EC.	2006/42/WE.	cumpre todas as disposições relevantes da Directiva 2006/42/CE.	directivei 2006/42/EC.
Geharmoniseerde normen toegepast, zoals vermeld	Zastosowaliśmy następujące (zharmonizowane)	Normas harmonizadas aplicadas, conforme referido	Au fost aplicate următoarele standarde armonizate
in Artikel 7(2):	normy zgodnie z artykułem 7(2):	no Artigo 7(2):	conform articolului 7(2):
511/50 4254 4 2042	EN ISO 4254-1:2013		EN ISO 4254-1:2013
EN ISO 4254-1:2013		EN ISO 4254-1:2013	
EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009
Plaats en datum van verklaring: [5]	Data i miejsce oświadczenia: [5]	Local e data da declaração: [5]	Data și locul declarației: [5]
Naam en handtekening van de bevoegde persoon om	Imię i nazwisko oraz podpis osoby upoważnionej do	Identidade e assinatura da pessoa autorizada a	Identitatea și semnătura persoanei împuternicite
de verklaring op te stellen: [6]	przygotowania deklaracji: [6]	elaborar a declaração: [6]	pentru întocmirea declarației: [6]
Naam en adres van de geautoriseerde persoon om het technisch dossier samen te stellen:	Imię i nazwisko oraz adres osoby upoważnionej do przygotowania dokumentacji technicznej:	Nome e endereço da pessoa autorizada a compilar o	Numele și semnătura persoanei autorizate pentru întocmirea cărții tehnice:
net teeninsen dossier samen te stellen.		ficheiro técnico: Benedikt von Riedesel	
Benedikt von Riedesel	Benedikt von Riedesel		
Benedikt von Riedesel Algemeen directeur, MacDon Europe GmbH	Benedikt von Riedesel Dyrektor generalny, MacDon Europe GmbH		Benedikt von Riedesel Manager General, MacDon Europe GmbH
Benedikt von Riedesel Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59	Manager General, MacDon Europe GmbH Hagenauer Straße 59
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland)	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy)	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha)	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania)
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59	Manager General, MacDon Europe GmbH Hagenauer Straße 59
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland)	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten:	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek:	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok:
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten:	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek:	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok:
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC.	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG.	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES.	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES.
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Iz]avljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u elanu 7(2):	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2):	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2):	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2):
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Iz]avljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæen isu usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] iz]avljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com VV, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2):
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Iz]avljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæen isu usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiebsdaen (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Iz]avljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u ėlanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u élanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh-	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvorriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen:	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] iz]avljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke:	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u élanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh- nièke datoteke: Benedikt von Riedesel	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke: Benedikt von Riedesel	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u élanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæene za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh- ničke datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] iz]avljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke:	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spíňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korit‰en is u usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæene za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh- nièke datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Tyskland)	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemčija)	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH Hagenauer Straße 59
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u ėlanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæene za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh- ničke datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH Hagenauer Straße 59	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spíňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH



EN	BG	CZ	DA
We, [1]	Ние, [1]	Му, [1]	Vi, [1]
Declare, that the product:	декларираме, че следният продукт:	Prohlašujeme, že produkt:	erklærer, at prduktet:
Machine Type: [2]	Тип машина: [2]	Typ zařízení: [2]	Maskintype [2]
Name & Model: [3]	Наименование и модел: [3]	Název a model: [3]	Navn og model: [3]
Serial Number(s): [4]	Сериен номер(а) [4]	Sériové(á) číslo)a): [4]	Serienummer (-numre): [4]
fulfils all the relevant provisions of the Directive 2006/42/EC.	отговаря на всички приложими разпоредби на директива 2006/42/EO.	splňuje všechna relevantní ustanovení směrnice 2006/42/EC.	Opfylder alle bestemmelser i direktiv 2006/42/EF.
Harmonized standards used, as referred to in Article 7(2):	Използвани са следните хармонизирани стандарти според чл. 7(2):	Byly použity harmonizované standardy, jak je uve- deno v článku 7(2):	Anvendte harmoniserede standarder, som henvist til i paragraf 7(2):
EN ISO 4254-1:2013 EN ISO 4254-7:2009	EN ISO 4254-1:2013 EN ISO 4254-7:2009	EN ISO 4254-1:2013 EN ISO 4254-7:2009	EN ISO 4254-1:2013 EN ISO 4254-7:2009
Place and date of declaration: [5]	Място и дата на декларацията: [5]	Místo a datum prohlášení: [5]	Sted og dato for erklæringen: [5]
Identity and signature of the person empowered to draw up the declaration: [6]	Име и подпис на лицето, упълномощено да изготви декларацията: [6]	Identita a podpis osoby oprávněné k vydání prohlášení: [6]	Identitet på og underskrift fra den person, som er bemyndiget til at udarbejde erklæringen: [6]
Name and address of the person authorized to compile the technical file:	Име и адрес на лицето, упълномощено да състави техническия файл:	Jméno a adresa osoby oprávněné k vyplnění techni- ckého souboru:	Navn og adresse på den person, som er bemyndiget til at udarbejde den tekniske fil:
Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germany) bvonriedesel@macdon.com	Бенедикт фон Рийдезел Управител, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Германия) bvonriedesel@macdon.com	Benedikt von Riedesel generální ředitel, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Německo) bvonriedesel@macdon.com	Benedikt von Riedesel Direktør, MacDon Europe GmbH Hagenauer Straße 59 D-65203 Wiesbaden (Tyskland) bvonriedesel@macdon.com

DE	ES	ET	FR
Wir, [1]	Nosotros [1]	Meie, [1]	Nous soussignés, [1]
Erklären hiermit, dass das Produkt:	declaramos que el producto:	deklareerime, et toode	Déclarons que le produit :
Maschinentyp: [2]	Tipo de máquina: [2]	Seadme tüüp: [2]	Type de machine : [2]
Name & Modell: [3]	Nombre y modelo: [3]	Nimi ja mudel: [3]	Nom et modèle : [3]
Seriennummer (n): [4]	Números de serie: [4]	Seerianumbrid: [4]	Numéro(s) de série : [4]
alle relevanten Vorschriften der Richtlinie	cumple con todas las disposiciones pertinentes de la	vastab kõigile direktiivi 2006/42/EÜ asjakohastele	Est conforme à toutes les dispositions pertinentes de la directive 2006/42/EC.
2006/42/EG erfüllt.	directriz 2006/42/EC.	sätetele.	
Harmonisierte Standards wurden, wie in folgenden	Se utilizaron normas armonizadas, según lo dispuesto	Kasutatud on järgnevaid harmoniseeritud stand-	Utilisation des normes harmonisées, comme indiqué
Artikeln angegeben, verwendet 7(2):	en el artículo 7(2):	ardeid, millele on viidatud ka punktis 7(2):	dans l'Article 7(2):
EN ISO 4254-1:2013	EN ISO 4254-1:2013	EN ISO 4254-1:2013	EN ISO 4254-1:2013
EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009
Ort und Datum der Erklärung: [5]	Lugar y fecha de la declaración: [5]	Deklaratsiooni koht ja kuupäev: [5]	Lieu et date de la déclaration : [5]
Name und Unterschrift der Person, die dazu befugt	Identidad y firma de la persona facultada para draw	Deklaratsiooni koostamiseks volitatud isiku nimi ja	Identité et signature de la personne ayant reçu le
ist, die Erklärung auszustellen: [6]	redactar la declaración: [6]	allkiri: [6]	pouvoir de rédiger cette déclaration : [6]
Name und Anschrift der Person, die dazu berechtigt	Nombre y dirección de la persona autorizada para	Tehnilise dokumendi koostamiseks volitatud isiku nimi ja aadress:	Nom et adresse de la personne autorisée à consti-
ist, die technischen Unterlagen zu erstellen:	elaborar el expediente técnico:		tuer le dossier technique :
Benedikt von Riedesel	Benedikt von Riedesel	Benedikt von Riedesel	Benedikt von Riedesel
General Manager, MacDon Europe GmbH	Gerente general - MacDon Europe GmbH	Peadirektor, MacDon Europe GmbH	Directeur général, MacDon Europe GmbH
Hagenauer Straße 59	Hagenauer Straße 59	Hagenauer Straße 59	Hagenauer Straße 59
65203 Wiesbaden	65203 Wiesbaden (Alemania)	65203 Wiesbaden (Saksamaa)	65203 Wiesbaden (Allemagne)
bvorriedesel@macdon.com	bvonriedesel@macdon.com	bvonriedesel@macdon.com	bvonriedesel@macdon.com

The Harvesting Specialists

MacDon

EC Declaration of Conformity

		or comorning	
IT	HU	LT	LV
Noi, [1]	Mi, [1]	No. (4)	M424 [4]
Dichiariamo che il prodotto:	Ezennel kijelentjük, hogy a következő termék:	Mes, [1]	Mēs, [1]
Tipo di macchina: [2]	Gép típusa: [2]	Pareiškiame, kad šis produktas:	Deklarējam, ka produkts:
	Név és modell: [3]	Mašinos tipas: [2]	Mašīnas tips: [2]
Nome e modello: [3]	Szériaszám(ok): [4]	Pavadinimas ir modelis: [3]	Nosaukums un modelis: [3]
Numero(i) di serie: [4]	teljesíti a következő irányelv összes vonatkozó	Serijos numeris (-iai): [4]	Sērijas numurs(-i): [4]
soddisfa tutte le disposizioni rilevanti della direttiva 2006/42/CE.	előírásait: 2006/42/EK.	atitinka taikomus reikalavimus pagal Direktyvą	Atbilst visām būtiskajām Direktīvas 2006/42/EK
2000/42/02	2006/42/EB.		prasībām.
Utilizzo degli standard armonizzati, come indicato	Az alábbi harmonizált szabványok kerültek	Naudojami harmonizuoti standartai, kai nurodoma	Piemēroti šādi saskaņotie standarti , kā minēts
nell'Articolo 7(2):	alkalmazásra a 7(2) cikkely szerint:	straipsnyje 7(2):	7. panta 2. punktā:
EN ISO 4254-1:2013	EN ISO 4254-1:2013	EN ISO 4254-1:2013	EN ISO 4254-1:2013
EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009
Luogo e data della dichiarazione: [5]	A nyilatkozattétel ideje és helye: [5]	Deklaracijos vieta ir data: [5]	Deklarācijas parakstīšanas vieta un datums: [5]
Nome e firma della persona autorizzata a redigere la	Azon személy kiléte és aláírása, aki jogosult a	Asmens tapatybės duomenys ir parašas asmens,	Tās personas vārds, uzvārds un paraksts, kas ir
dichiarazione: [6]	nyilatkozat elkészítésére: [6]	įgalioto sudaryti šią deklaraciją: [6]	pilnvarota sagatavot šo deklarāciju: [6]
Nome e persona autorizzata a compilare il file	Azon személy neve és aláírása, aki felhatalmazott a műszaki dokumentáció összeállítására:	Vardas ir pavardė asmens, kuris įgaliotas sudaryti šį	Tās personas vārds, uzvārds un adrese, kas ir
tecnico:		techninį failą:	pilnvarota sastādīt tehnisko dokumentāciju:
Benedikt von Riedesel General Manager, MacDon Europe GmbH	Benedikt von Riedesel Vezérigazgató, MacDon Europe GmbH	Benedikt von Riedesel Generalinis direktorius, MacDon Europe GmbH	Benedikts fon Rīdīzels
Hagenauer Straße 59	Hagenauer Straße 59	Hagenauer Straße 59	Ģenerāldirektors, MacDon Europe GmbH Hagenauer Straße 59
65203 Wiesbaden (Germania)	65203 Wiesbaden (Németország)	65203 Wiesbaden (Vokietija)	65203 Wiesbaden (Vācija)
bvonriedesel@macdon.com	bvonriedesel@macdon.com	bvonriedesel@macdon.com	bvonriedesel@macdon.com
L			
NL	PO	PT	RO
Wij, [1]	My niżej podpisani, [1]	Nós, [1]	Noi, [1]
Verklaren dat het product:	Oświadczamy, że produkt:	Nos, [1] Declaramos, que o produto:	Declarăm, că următorul produs:
Machinetype: [2]	Typ urządzenia: [2]	Tipo de máquina: [2]	Tipul mașinii: [2]
Naam en model: [3]	Nazwa i model: [3]	Nome e Modelo: [3]	Denumirea și modelul: [3]
Serienummer(s): [4]	Numer seryjny/numery seryjne: [4]		Număr (numere) serie: [4]
voldoet aan alle relevante bepalingen van de	spełnia wszystkie odpowiednie przepisy dyrektywy	Número(s) de Série: [4]	corespunde tuturor dispozițiilor esențiale ale
Richtlijn 2006/42/EC.	2006/42/WE.	cumpre todas as disposições relevantes da Directiva 2006/42/CE.	directivei 2006/42/EC.
Geharmoniseerde normen toegepast, zoals vermeld	Zastosowaliśmy następujące (zharmonizowane)	Normas harmonizadas aplicadas, conforme referido	Au fost aplicate următoarele standarde armonizate
in Artikel 7(2):	normy zgodnie z artykułem 7(2):	no Artigo 7(2):	conform articolului 7(2):
511/50 4254 4 2042	EN ISO 4254-1:2013		EN ISO 4254-1:2013
EN ISO 4254-1:2013		EN ISO 4254-1:2013	
EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009	EN ISO 4254-7:2009
Plaats en datum van verklaring: [5]	Data i miejsce oświadczenia: [5]	Local e data da declaração: [5]	Data și locul declarației: [5]
Naam en handtekening van de bevoegde persoon om	Imię i nazwisko oraz podpis osoby upoważnionej do	Identidade e assinatura da pessoa autorizada a	Identitatea și semnătura persoanei împuternicite
de verklaring op te stellen: [6]	przygotowania deklaracji: [6]	elaborar a declaração: [6]	pentru întocmirea declarației: [6]
Naam en adres van de geautoriseerde persoon om het technisch dossier samen te stellen:	Imię i nazwisko oraz adres osoby upoważnionej do przygotowania dokumentacji technicznej:	Nome e endereço da pessoa autorizada a compilar o	Numele și semnătura persoanei autorizate pentru întocmirea cărții tehnice:
net teeninsen dossier samen te stellen.		ficheiro técnico: Benedikt von Riedesel	
Benedikt von Riedesel	Benedikt von Riedesel		
Benedikt von Riedesel Algemeen directeur, MacDon Europe GmbH	Benedikt von Riedesel Dyrektor generalny, MacDon Europe GmbH		Benedikt von Riedesel Manager General, MacDon Europe GmbH
Benedikt von Riedesel Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59	Manager General, MacDon Europe GmbH Hagenauer Straße 59
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland)	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy)	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha)	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania)
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59	Manager General, MacDon Europe GmbH Hagenauer Straße 59
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland)	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten:	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek:	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok:
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten:	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek:	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok:
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC.	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG.	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES.	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES.
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Iz]avljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u elanu 7(2):	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2):	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2):	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2):
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Iz]avljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/4/EC. Korišæeni su usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] iz]avljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com VV, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2):
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Iz]avljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæen isu usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiebsdaen (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Iz]avljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u ėlanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6]	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u élanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh-	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvorriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6]	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6]	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen:	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] iz]avljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke:	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6]
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u élanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh- nièke datoteke: Benedikt von Riedesel	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke: Benedikt von Riedesel	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u élanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæene za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh- ničke datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] iz]avljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke:	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spíňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korit‰en is u usklađeni standardi kao što je navedeno u elanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæene za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh- nièke datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Tyskland)	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemčija)	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH Hagenauer Straße 59
Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com SR Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklaðeni standardi kao što je navedeno u ėlanu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašæene za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašæene za sastavljanje teh- ničke datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH	Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com SV Vi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG. Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH Hagenauer Straße 59	Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com SL Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/a2/ES. Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščene za pripravo tehnične datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59	Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com SK My, [1] týmto prehlasujeme, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spíňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES. Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH

UK CA	UK Declaration of Conformity			
CA	[1] MacDon [4] As per shipping document			
	MacDon Industries Ltd. 680 Moray Street, Winnipeg, Manitoba, Canada R3J 3S3	[5] June 29, 2022		
	[2] Combine Header	[6]		
	[3] MacDon FD2 Series	Christoph Martens Product Integrity		

We,	[1]
-----	-----

Declare, that the product:

Machine Type: [2]

Name & Model: [3]

Serial Number(s): [4]

fulfills all relevant provisions of the Supply of Machinery (Safety) Regulations 2008

Designated standards used are :

EN ISO 4254-1:2015 EN ISO 4254-7:2017

Place and date of declaration: [5]

Identity and signature of the person empowered to draw up the declaration: [6]

The Harvesting Specialists

MacDon

UK	UK Declaration of Conformity		
	MacDon MacDon Industries Ltd.	[4] As per Shipping Document	
	680 Moray Street, Winnipeg, Manitoba, Canada R3J 3S3	[5] June 29, 2022	
[2]	Float Module	[6]	
[3]	MacDon FM200	Christoph Martens Product Integrity	

We, [1]

Declare, that the product:

Machine Type: [2]

Name & Model: [3]

Serial Number(s): [4]

fulfills all relevant provisions of the Supply of Machinery (Safety) Regulations 2008

Designated standards used are :

EN ISO 4254-1:2015 EN ISO 4254-7:2017

Place and date of declaration: [5]

Identity and signature of the person empowered to draw up the declaration: [6]

The Harvesting Specialists

MacDon

Introduction

Your machine

This instructional manual contains information on the FD2 Series FlexDraper[®] Header and the FM200 Float Module. It must be used in conjunction with your combine operator's manual.

The FD2 Series FlexDraper[®] is specially designed to work well in all straight cut conditions, whether cutting on or above the ground, using a three-piece flexible frame to closely follow ground contours. The FM200 Float Module is used to attach an FD2 Series FlexDraper[®] to most makes and models of combines.

Your warranty

MacDon provides warranty for Customers who operate and maintain their equipment as described in this manual. A copy of the MacDon Industries Limited Warranty Policy, which explains this warranty, should have been provided to you by your Dealer. Damage resulting from any of the following conditions will void the warranty:

- Accident
- Misuse
- Abuse
- Improper maintenance or neglect
- Abnormal or extraordinary use of the machine
- Failure to use the machine, equipment, component, or part in accordance with the manufacturer's instructions

Your manual

Carefully read all the material provided before attempting to use the machine.

Use this manual as your first source of information about the machine. If you follow the instructions provided, your header will work well for many years. Contact your Dealer if you need assistance, information, or additional copies of this manual.

The following conventions are used in this document:

- Right and left are determined from the operator's position. The front of the header faces the crop; the back of the header attaches to the float module and combine.
- Unless otherwise noted, use the standard torque values provided in Chapter 7.1 Torque Specifications, page 509.

When setting up the machine or making adjustments, review and follow the recommended machine settings in all relevant MacDon publications. Failure to do so may compromise machine function and machine life and may result in a hazardous situation.

The Table of Contents and Index will guide you to specific areas of this manual. Study the Table of Contents to familiarize yourself with how the information is organized.

Keep this manual handy for frequent reference and to pass on to new Operators or Owners. The manual storage case (A) is located at the rear of the header, beside the right outer leg.

NOTE:

Keep your MacDon publications up-to-date. The most current English version can be downloaded from our website (*www.macdon.com*) or from our Dealer-only site (*https://portal.macdon.com*) (login required).

Call your MacDon Dealer if you need assistance, information, or additional copies of this manual.

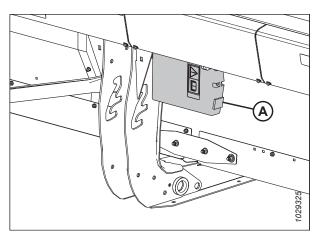


Figure 1: Manual Storage Location

This document is available in the following languages:

Czech

Danish

English

Estonian

- French
- German
- Latvian
- Lithuanian
- Polish

- Portuguese
- Romanian
- Russian
- Spanish

These manuals can be ordered from MacDon, downloaded from the MacDon Dealer Portal (*https://portal.macdon.com*) (login required), or downloaded from the MacDon website (*http://www.macdon.com*).

Summary of Changes

Section	Summary of Change	Internal Use Only
1.7 Safety Decal Locations, page 8	 Added decal MAC327086. Superseded decal MAC313726 with MAC360541. Added decal MAC360655. 	ECN 58694ECN 63008ECN 63204
1.8 Understanding Safety Signs, page 13	 Added decal MAC327086. Superseded decal MAC313726 with MAC360541. Added decal MAC360655. 	 ECN 58694 ECN 63008 ECN 63204
2.2 Product Specifications, page 23	 Added note that specifications are subject to change without notice. Added FD225 specifications. Added skid shoes and wear plates table. Added header flex range table. 	Technical Publications and Product Support ECN 63174
Removing Outboard Flex Linkage Covers, page 45	Edited instructions and illustrations to describe hardware updates.	ECN 62924
Installing Outboard Flex Linkage Covers, page 46	Edited instructions and illustrations to describe hardware updates.	ECN 62924
3.8.1 FM200 Feed Auger Configurations, page 87	Added optional configuration for Case combines to narrow feed auger.	ECN 62723 ECN 62746
Checking and Adjusting Header Float, page 127	Added IMPORTANTs. Added two WARNING statements. Clarified language. Added "Place the multi- tool" step. Added "Repeat" steps where appropriate. Revised illustration captions. Removed callout from transport wheels step. Moved "each pair of bolts" note to the relevant step. Broke out compound adjustment bolt steps into simple steps. Added steps for the right side of the float module. Added sub-section headers. Added "Proceed to" final step.	Product Support Supplier Quality
Changing Float Spring Configuration, page 132	Added float spring configuration for FD225. Removed the topic "Changing Float Spring Configuration – Confirming Type of Float Lever". New headers use one type of float lever.	Engineering

Section	Summary of Change	Internal Use Only
3.9.9 Knife Speed Information, page 156	Added knife speed information for FD225.	Engineering
Repositioning Fore-Aft Cylinders – Single Reel, page 164	Added topic for FD225.	Technical Publications
Removing Crop Dividers, page 182	Corrected terminology: hex shaft was nut.	Technical Publications
Installing Crop Dividers, page 184	Corrected terminology: hex shaft was nut.	Technical Publications
	Updated the available options in the reel displacement table.	Product Support
Every 50 Hours, page 268	Updated lubrication specification for reel drive chain, and added note to decrease the interval if chain is dry at next oiling.	Engineering
Every 250 Hours, page 274	Added inner contour wheel assemblies.	ECN 62215
4.3.3 Lubricating Reel Drive Chain, page 278	Updated lubrication procedure for reel drive chain.	Engineering
Checking Oil Level in Header Drive Completion Gearbox, page 282	Modified instructions to reflect changes to the oil checking procedure.	ECN 63056
Adding Oil to Header Drive Completion Gearbox, page 283	Modified instructions to reflect changes to the oil filling procedure.	ECN 63056
Changing Oil in Header Drive Completion Gearbox, page 284	Modified instructions to reflect changes to the oil changing procedure.	ECN 63056
4.12.3 Adjusting Deck Height, page 393	Added FD225 information.	Technical Publications
4.13.1 Reel Clearance to Cutterbar, page 410	Added FD225 information.	Technical Publications
4.15.2 Lubricating Contour Wheel System, page 460	Added 250 hour grease point.	ECN 62215
4.15.3 Zeroing Mechanical Indicator, page 462	Added new topic.	ECN 62724
4.17.1 Replacing Vertical Knife Sections, page 471	Added topic.	Technical Publications
4.17.2 Greasing Vertical Knife, page 474	Added topic.	Technical Publications
5.1.2 Crop Lifter Storage Rack Kit, page 477	Added FD225 information.	Technical Publications
5.1.5 Full Length Upper Cross Auger, page 479	Added FD225 information.	Technical Publications
5.1.7 VertiBlade [™] Vertical Knife Kit, page 480	Added FD225 information.	Technical Publications

Section	Summary of Change	Internal Use Only
5.2.1 Rock Retarder Kit, page 481	Added FD225 information.	Technical Publications
5.2.2 Four-Point Knife Guard, page 481	Added new topic.	ECN 62217
5.4.1 ContourMax™ Contour Wheels Kit, page 487	MACB7324 was superseded by MACB7335. Added FD225 information.	ECN 62171 Technical Publications
5.4.2 EasyMove™ Transport System, page 488	Added a note that the FD225 is not compatible with the transport system.	Technical Publications
	Added FD225 information.	Technical Publications
5.4.8 Sunflower Attachment, page 491	Added new topic.	ECN 62663
Recommended Fluids and Lubricants, page – Inside back cover	Updated lubrication specification for reel drive chain.	Engineering

Recording Model and Serial Number

Record the model number, serial number, and model year of the header, float module, and transport/stabilizer wheel option (if installed) in the spaces provided.

FD2 Series FlexDraper[®] Header

Header Model:

Serial Number:

Model Year:

The header's serial number plate (A) is located on the back of the header, beside the left endsheet.

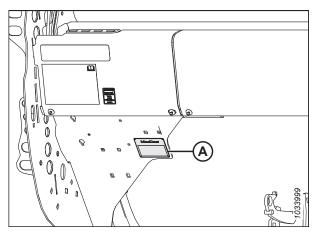


Figure 2: Header Serial Number Plate Location

Figure 3: Float Module Serial Number Plate Location

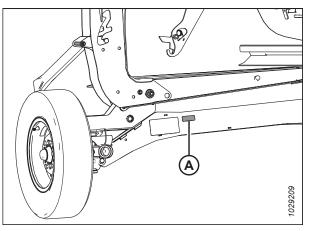


Figure 4: EasyMove[™] Transport Option

FM200 Float Module for Combine

Serial Number:

Model Year:

The float module's serial number plate (A) is located on the top left side of the float module.

EasyMove[™] Transport Option

Serial Number:

Model Year:

The EasyMove[™] transport's serial number plate (A) is located on the right axle assembly.

NOTE:

The transport is an option and may not be installed on this machine.

Declaration of Conformity	i
Introduction	vii
Summary of Changes	ix
Recording Model and Serial Number	xii
Chapter 1: Safety	1
1.1 Safety Alert Symbols	1
1.2 Signal Words	
1.3 General Safety	
1.4 Maintenance Safety	
1.5 Hydraulic Safety	
1.6 Safety Signs	
1.6.1 Installing Safety Decals	
1.7 Safety Decal Locations	8
1.8 Understanding Safety Signs	
Chaustan De Dua durat Ouranniann	24
Chapter 2: Product Overview	
2.1 Definitions	
2.2 Product Specifications	
2.3 FD2 Series FlexDraper [®] Header Dimensions	
2.4 FD2 Series FlexDraper [®] Header Component Identification	
2.4 FD2 Series FlexDraper[®] Header Component Identification2.5 FM200 Float Module Component Identification	
	29
2.5 FM200 Float Module Component Identification	29
2.5 FM200 Float Module Component Identification	29
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 	
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props 	
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props Engaging Reel Safety Props 	
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props 	
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props Bragaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields 	29
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props Bragaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields Closing Header Endshields 	29 31 32 32 32 33 33 34 35 35 36
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props Bragaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields 	29 31 32 32 33 33 34 35 35 36 37
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props a.2.2 Reel Safety Props bisengaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields Closing Header Endshields Checking and Adjusting Header Endshields Installing Header Endshields 	29 31 32 32 32 32 33 33 34 35 35 36 37 40 41
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props Bragaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields Closing Header Endshields Checking and Adjusting Header Endshields Removing Header Endshields Installing Header Endshields 3.2.4 Reel Drive Cover 	29 31 32 32 32 33 33 34 35 35 35 36 37 40 41
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props a.2.2 Reel Safety Props bisengaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields Closing Header Endshields Checking and Adjusting Header Endshields Installing Header Endshields 	29 31 32 32 32 33 33 34 35 35 36 36 37 40 41 41
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props 3.2.2 Reel Safety Props Disengaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields Closing Header Endshields Checking and Adjusting Header Endshields Installing Header Endshields 3.2.4 Reel Drive Cover Removing Reel Drive Cover Installing Reel Drive Cover S.2.5 Flex Linkage Cover 	
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props Bisengaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields Closing Header Endshields Checking and Adjusting Header Endshields Installing Header Endshields 3.2.4 Reel Drive Cover Removing Reel Drive Cover Installing Reel Drive Cover S.2.5 Flex Linkage Cover Removing Inboard Flex Linkage Covers 	29 31 32 32 32 33 33 34 35 35 35 36 36 37 40 41 41 41 43 44
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props Bingaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields Closing Header Endshields Checking and Adjusting Header Endshields Installing Header Endshields 3.2.4 Reel Drive Cover Removing Reel Drive Cover Installing Reel Drive Cover S.2.5 Flex Linkage Covers Installing Inboard Flex Linkage Covers 	29 31 32 32 32 33 33 33 34 35 35 36 36 37 40 41 41 41 41 43 44 44
 2.5 FM200 Float Module Component Identification Chapter 3: Operation 3.1 Owner/Operator Responsibilities 3.2 Operational Safety 3.2.1 Header Safety Props 3.2.2 Reel Safety Props Bisengaging Reel Safety Props Disengaging Reel Safety Props 3.2.3 Header Endshields Opening Header Endshields Closing Header Endshields Checking and Adjusting Header Endshields Installing Header Endshields 3.2.4 Reel Drive Cover Removing Reel Drive Cover Installing Reel Drive Cover S.2.5 Flex Linkage Cover Removing Inboard Flex Linkage Covers 	29 31 32 32 32 33 33 33 33 35 35 36 37 40 41 41 41 43 44 44 45 45

3.3 Break-in Period	49
3.4 Shutting down the Combine	50
3.5 Cab Controls	51
3.6 Header Attachment/Detachment	52
3.6.1 Case IH Combines Attaching Header to Case IH Combine Detaching Header from Case IH Combine	52
3.6.2 Attaching Header to / Detaching Header from FM200 Float Module Detaching Header from FM200 Float Module Attaching Header to FM200 Float Module	59
3.7 Header Setup	69
3.7.1 Header Attachments	69
3.7.2 Header Settings	69
3.7.3 Optimizing Header for Straight-Combining Canola	81
3.7.4 Reel Settings	82
3.7.5 Floating Crop Divider Settings – Optional	84
3.8 Float Module Setup	87
3.8.1 FM200 Feed Auger Configurations	87
Ultra Narrow Configuration – Auger Flighting	
Narrow Configuration – Auger Flighting	
Medium Configuration – Auger Flighting Wide Configuration – Auger Flighting	
Ultra Wide Configuration – Auger Flighting	
Auger Flighting	
3.8.2 Removing Feed Auger Fingers	110
3.8.3 Installing Feed Auger Fingers	112
3.8.4 Setting Auger Position	114
3.8.5 Checking and Adjusting Feed Auger Springs	116
3.8.6 Stripper Bars	. 117
3.9 Header Operating Variables	. 118
3.9.1 Cutting off Ground	
Adjusting Stabilizer Wheels	. 119
Adjusting EasyMove [™] Transport Wheels	
Adjusting ContourMax [™] Wheels with Foot Switch Leveling ContourMax [™] Wheel Height	
3.9.2 Cutting on Ground	
Adjusting Inner Skid Shoes	
Adjusting Outer Skid Shoes	
3.9.3 Header Float	126
Checking and Adjusting Header Float	
Changing Float Spring Configuration Locking/Unlocking Header Float	
Locking/Unlocking Header Wings	
Operating in Flex Mode	
Operating in Rigid Mode	
Disabling Flex Frown Limiter	
Enabling Flex Frown Limiter	
3.9.4 Checking and Adjusting Wing Balance	146

	3.9.5 Header Angle	
	Adjusting Header Angle from Combine	
	3.9.6 Reel Speed	
	Optional Reel Drive Sprockets	
	3.9.7 Ground Speed	
	3.9.8 Side Draper Speed	
	Adjusting Side Draper Speed	
	Feed Draper Speed	
	3.9.9 Knife Speed Information	
	Checking Knife Speed	
	3.9.10 Reel Height	
	Checking and Adjusting Reel Height Sensor Replacing Reel Height Sensor	
	3.9.11 Reel Fore-Aft Position	
	Adjusting Reel Fore-Aft Position	
	Repositioning Fore-Aft Cylinders – Single Reel	
	Repositioning Fore-Aft Cylinders – Double Reel	
	Repositioning Fore-Aft Cylinders – Triple Reel	
	Checking and Adjusting Fore-Aft Position Sensor	173
	3.9.12 Reel Tine Pitch	
	Reel Cam Settings	
	Adjusting Reel Cam	
	3.9.13 Upper Cross Auger	
	Adjusting Upper Cross Auger Position	
	Checking Upper Cross Auger for Interference	
	3.9.14 Crop Dividers	
	Removing Crop Dividers Installing Crop Dividers	
	Removing Floating Crop Dividers	
	Installing Floating Crop Dividers	
	Adjusting Floating Crop Dividers	
	3.9.15 Crop Divider Rods	197
	Removing Crop Divider Rods	197
	Installing Crop Divider Rods	
	Optional Rice Divider Rods	199
3.10	D Auto Header Height Control	200
	3.10.1 Auto Header Height Control Sensor Operation	201
	3.10.2 Sensor Output Voltage Range – Combine Requirements	203
	3.10.3 Manually Checking Voltage Limits	
	3.10.4 Replacing Float Height Sensor	
	3.10.5 Case IH 130 and 140 Series Mid-Range Combines	
	Checking Voltage Range from Combine Cab – Case IH 5130/6130/7130; 5140/6140/7140	
	Header Settings Quick Reference – Case IH 130 and 140 Series	
	Setting up Header on Combine Display – Case IH 5130/6130/7130; 5140/6140/7140	
	Calibrating Auto Header Height Control – Case IH 5130/6130/7130, 5140/6140/7140	213
	Setting Preset Cutting Height – Case 5130/6130/7130, 5140/6140/7140	
	3.10.6 Case IH 120, 230, 240, and 250 Series Combines	
	Checking Voltage Range from Combine Cab – Case IH, 120, 230, 240, and 250 Series Combines	
	Header Settings Quick Reference – Case IH 120, 230, 240, and 250 Series	
	Calibrating Auto Header Height Control – Case IH120, 230, 240, and 250 Series Combines	221

	Calibrating Auto Header Height Control – Case IH Combines with Version 28.00 or Higher	225
	Software Checking Reel Height Sensor Voltages – Case IH Combines	
	Setting Preset Cutting Height – Case IH, 120, 230, 240, and 250 Series Combines	
3.11 Lev	eling Header	
	blugging Cutterbar	
	blugging Float Module Feed Draper	
	nsport	
	.1 Transporting Header on Combine	
	.2 Towing	
	Attaching Header to Towing Vehicle	
	Precautions for Towing Header	
3.14	.3 Converting from Transport to Field Position (Option)	239
	Moving Left Outboard Wheel From Transport to Working Position – ContourMax [™] Option	
	Removing Tow-Bar	
	Storing Tow-Bar	
	Moving Front (Left) Wheels into Field Position Moving Rear (Right) Wheels into Field Position	
2 1/	.4 Converting from Field to Transport Position (Option)	
5.14	Moving Left Outboard Wheel From Working to Transport Position	
	Moving Front (Left) Wheels into Transport Position	
	Moving Rear (Right) Wheels into Transport Position	251
	Removing Tow-Bar from Storage	
	Attaching Tow-Bar	
3.15 Stor	ring the Header	257
	Maintenance and Servicing	
Chapter 4:		259
Chapter 4: 4.1 Prep	Maintenance and Servicing aring Machine for Servicing	 259 259
Chapter 4: 4.1 Prep 4.2 Main	Maintenance and Servicing aring Machine for Servicing tenance Requirements	259 259 260
Chapter 4: 4.1 Prep 4.2 Main 4.2.3	Maintenance and Servicing aring Machine for Servicing tenance Requirements I Maintenance Schedule/Record	259 259 260 260
Chapter 4: 4.1 Prep 4.2 Main 4.2.7 4.2.7	Maintenance and Servicing aring Machine for Servicing tenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection	259 260 260 260 263
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3	Maintenance and Servicing aring Machine for Servicing itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason	259 259 260 260 263 263 264
Chapter 4: 4.1 Prep 4.2 Main 4.2.: 4.2.: 4.2.: 4.2.:	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season	259 259 260 260 263 263 264 264
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.3 4.2.4 4.2.4	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines	259 260 260 263 263 264 264 264 265
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.3 Lubri	Maintenance and Servicing aring Machine for Servicing itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines cation	259 259 260 260 263 264 264 264 265 265
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.3 Lubri	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements . 1 Maintenance Schedule/Record . 2 Break-In Inspection . 3 Equipment Servicing – Preseason . 4 Equipment Servicing – End-of-Season . 5 Checking Hydraulic Hoses and Lines . 1 Lubrication Intervals .	259 260 260 263 263 264 264 264 265 266 266
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.3 Lubri	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines cation 1 Lubrication Intervals Every 10 Hours	259 260 260 263 264 264 264 265 266 266 266
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.3 Lubri	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines cation 1 Lubrication Intervals Every 10 Hours Every 25 Hours	259 260 260 263 264 264 264 265 266 266 266 266 266 266
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.3 Lubri	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines cation 1 Lubrication Intervals Every 10 Hours Every 25 Hours Every 50 Hours	259 259 260 260 263 264 264 264 265 266 266 266 266 266 267 268
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.3 Lubri	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines cation 1 Lubrication Intervals Every 10 Hours Every 25 Hours	259 259 260 260 263 264 264 264 265 266 266 266 266 266 267 268 272
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.3 Lubri	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements . 1 Maintenance Schedule/Record . 2 Break-In Inspection . 3 Equipment Servicing – Preseason. 4 Equipment Servicing – End-of-Season . 5 Checking Hydraulic Hoses and Lines . cation . 1 Lubrication Intervals . Every 10 Hours . Every 25 Hours . Every 50 Hours . Every 100 Hours .	259 259 260 260 263 264 264 265 266 266 266 266 266 266 267 268 272 274
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.2.4 4.2.4 4.2.5 4.3.5	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason. 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines cation 1 Lubrication Intervals. Every 10 Hours. Every 25 Hours. Every 50 Hours. Every 100 Hours. Every 100 Hours. Every 100 Hours. Every 250 Hours.	259 260 260 263 264 264 264 265 266 266 266 266 266 266 267 268 272 274 274 276
Chapter 4: 4.1 Prep 4.2 Main 4.2.1 4.2.1 4.2.1 4.2.1 4.2.1 4.2.1 4.3.1	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements . 1 Maintenance Schedule/Record . 2 Break-In Inspection . 3 Equipment Servicing – Preseason. 4 Equipment Servicing – End-of-Season . 5 Checking Hydraulic Hoses and Lines . cation . 1 Lubrication Intervals. Every 10 Hours. Every 50 Hours. Every 100 Hours. Every 100 Hours. Every 250 Hours. Every 500 Hours. Every 500 Hours.	259 259 260 260 263 264 264 264 265 266 266 266 266 266 267 268 272 274 276 277
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.2.4 4.2.5 4.3.5 4.3.5 4.3.5	Maintenance and Servicing. aring Machine for Servicing. tenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines cation 1 Lubrication Intervals Every 10 Hours Every 25 Hours Every 50 Hours Every 100 Hours Every 250 Hours Every 500 Hours	259 260 263 264 264 264 264 265 266 266 266 266 266 267 268 272 274 274 276 277 278
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.2.4 4.2.4 4.2.4 4.3.3 4.3.3 4.3.3 4.3.4	Maintenance and Servicing	259 259 260 260 263 264 264 264 265 266 266 266 266 266 267 268 272 274 276 277 278 279 280
Chapter 4: 4.1 Prep 4.2 Main 4.2.3 4.2.3 4.2.4 4.2.4 4.2.4 4.2.4 4.2.4 4.2.4 4.3.3 4.3.3 4.3.3 4.3.4	Maintenance and Servicing. aring Machine for Servicing. itenance Requirements 1 Maintenance Schedule/Record 2 Break-In Inspection 3 Equipment Servicing – Preseason 4 Equipment Servicing – End-of-Season 5 Checking Hydraulic Hoses and Lines cation 1 Lubrication Intervals Every 10 Hours Every 25 Hours Every 50 Hours Every 50 Hours Every 500 Hours 2 Greasing Procedure 3 Lubricating Reel Drive Chain 4 Lubricating Auger Drive Chain	259 259 260 260 263 264 264 264 265 266 266 266 266 266 267 268 272 274 276 277 278 279 280 280

	Changing Oil in Header Drive Main Gearbox	. 281
	4.3.6 Lubricating Header Drive Completion Gearbox	. 282
	Checking Oil Level in Header Drive Completion Gearbox	
	Adding Oil to Header Drive Completion Gearbox	
	Changing Oil in Header Drive Completion Gearbox	
4.4	Hydraulics	
	4.4.1 Checking Oil Level in Hydraulic Reservoir	
	4.4.2 Adding Oil to Hydraulic Reservoir	. 286
	4.4.3 Changing Oil in the Hydraulic Reservoir	. 287
	4.4.4 Changing Oil Filter	. 288
4.5	Electrical System	. 289
	4.5.1 Replacing Light Bulbs	. 289
4.6	Header Drive	. 290
	4.6.1 Removing Driveline Connecting Float Module to Combine	. 290
	4.6.2 Installing Driveline	. 292
	4.6.3 Removing Driveline Guard	. 295
	4.6.4 Installing Driveline Guard	. 297
	4.6.5 Adjusting Chain Tension – Main Gearbox	. 299
	4.6.6 Adjusting Chain Tension – Completion Gearbox	. 300
4.7	Auger	. 302
	4.7.1 Adjusting Feed Auger to Pan Clearance	
	4.7.2 Checking Feed Auger Chain Tension	. 304
	Checking Feed Auger Drive Chain Tension – Quick Method	
	Checking Feed Auger Drive Chain Tension – Thorough Method	
	4.7.3 Removing Auger Drive Chain	
	4.7.4 Installing Auger Drive Chain	
	4.7.5 Adjusting Feed Auger Drive Chain Tension	
	4.7.6 Auger Flighting	. 316
	4.7.7 Auger Fingers	
	Removing Feed Auger Fingers	
	Installing Feed Auger Fingers Checking Auger Finger Timing	
	Adjusting Auger Finger Timing	
4.8	Knife	. 324
	4.8.1 Replacing Knife Section	
	4.8.2 Removing Knife	
	4.8.3 Removing Knifehead Bearing	
	4.8.4 Installing Knifehead Bearing	
	4.8.5 Installing Knife	
	4.8.6 Spare Knives	
	4.8.7 Pointed Knife Guards and Hold-Downs	
	Pointed Knife Guards on Single-Knife Headers	
	Pointed Knife Guards on FD235 Double-Knife Header	. 333
	Pointed Knife Guards on FD240 Double-Knife Header	
	Pointed Knife Guards on FD241 Double-Knife Header Pointed Knife Guards on FD245 Double-Knife Header	
	Pointed Knife Guards on FD245 Double-Knife Header Pointed Knife Guards on FD250 Double-Knife Header	

	Adjusting Knife Guards and Guard Bar	
	Replacing Pointed Knife Guards	
	Checking Hold-Down – Pointed Knife Guards	
	Adjusting Hold-Down – Pointed Knife Guards	
	Replacing Pointed Center Knife Guard – Double-Knife	
	Checking Center Hold-Down – Pointed Knife Guards Adjusting Center Hold-Down – Pointed Knife Guards	
4.0	8 Short Knife Guards and Hold-Downs	
4.8.	Short Knife Guards and Fold-Downs	
	Short Knife Guards on Double-Knife Headers – All Sizes Except 12.5 m (41 ft.)	
	Short Knife Guards on 12.5 m (41 ft.) Double-Knife Header	
	Replacing Short Knife Guards or End Knife Guards	
	Checking Hold-Down – Short Knife Guards	354
	Adjusting Hold-Down – Short Knife Guards	
	Replacing Center Knife Guard – Double-Knife	
	Checking Center Hold-Down – Short Knife Guards	
	Adjusting Center Hold-Down – Short Knife Guards	
4.8.	9 Knifehead Shield	
	Installing Knifehead Shield	
4.9 Knife	e Drive System	361
4.9.	1 Knife Drive Box	361
	Checking Oil Level in Knife Drive Box	
	Checking Mounting Bolts	
	Changing Oil in Knife Drive Box	362
4.10 Fee	ed Deck	364
4.10	D.1 Replacing Feed Draper	364
4.10	0.2 Checking and Adjusting Feed Draper Tension	367
4.10	D.3 Feed Draper Drive Roller	368
	Removing Feed Draper Drive Roller	
	Installing Feed Draper Drive Roller	
	Removing Feed Draper Drive Roller Bearing	
	Installing Feed Draper Drive Roller Bearing	
4.10	0.4 Feed Draper Idler Roller Removing Feed Draper Idler Roller	
	Installing Feed Draper Idler Roller	
	Replacing Feed Draper Idler Roller Bearing	
4 10	0.5 Lowering Feed Deck Pan	
	D.6 Raising Feed Deck Pan	
	D.7 Checking Link Holder Hooks	
	ipper Bars	
	1.1 Removing Stripper Bars	
	1.2 Installing Stripper Bars	
	ader Side Drapers	
	2.1 Removing Side Drapers	
	2.2 Installing Side Drapers	
	2.3 Adjusting Deck Height	
4.12	2.4 Adjusting Side Draper Tension	395
4.12	2.5 Adjusting Side Draper Tracking	397

	4.12.7 Removing Side Draper Deck Idler Roller	399
	4.12.8 Replacing Side Draper Deck Idler Roller Bearing	401
	4.12.9 Installing Side Draper Deck Idler Roller	403
	4.12.10 Removing Side Draper Drive Roller	404
	4.12.11 Replacing Side Draper Drive Roller Bearing	406
	4.12.12 Installing Side Draper Drive Roller	408
4.1	3 Reel	410
	4.13.1 Reel Clearance to Cutterbar	410
	Measuring Reel Clearance	
	Adjusting Clearance between Reel and Cutterbar	414
	4.13.2 Reel Frown	
	Adjusting Reel Frown	
	4.13.3 Centering Reel	
	4.13.4 Reel Fingers.	
	Removing Steel Fingers Installing Steel Fingers	
	Removing Plastic Fingers	
	Installing Plastic Fingers	
	4.13.5 Tine Tube Bushings	423
	Removing Bushings from Reels	
	Installing Bushings onto Reels	
	4.13.6 Reel Endshields	
	Replacing Reel Endshields at Outboard Cam End	
	Replacing Reel Endshields at Inboard Cam End Replacing Reel Endshields at Outboard Tail End	
	Replacing Reel Endshields at Inboard Tail End	
	Replacing Reel Endshield Supports	
4.1	4 Reel Drive	444
	4.14.1 Reel Drive Chain	444
	Loosening Reel Drive Chain	
	Tightening Reel Drive Chain	
	4.14.2 Reel Drive Sprocket	
	Removing Reel Drive Single Sprocket	
	Installing Reel Drive Single Sprocket	
	4.14.3 Changing Reel Speed Chain Position with Two Speed Kit Installed	
	4.14.4 Double-Reel or Triple-Reel Drive U-Joint	
	Installing Double-Reel or Triple Reel U-Joint	
	4.14.5 Reel Drive Motor	
	Removing Reel Drive Motor	
	Installing Reel Drive Motor	
	4.14.6 Replacing Drive Chain	455
4.1	5 Contour Wheels – Option	458
	4.15.1 Leveling ContourMax [™] Wheel Height	458
	4.15.2 Lubricating Contour Wheel System	
	4.15.3 Zeroing Mechanical Indicator	
4.1	6 Transport System – Option	
	4.16.1 Checking Wheel Bolt Torque	

4.16.2 Checking Transport Assembly Bolt Torque	. 464
4.16.3 Checking Tire Pressure	. 466
4.16.4 Changing Tow-Bar Hitch Connection from Pintle to Clevis	. 467
4.16.5 Changing Tow-Bar Hitch Connection from Clevis to Pintle	. 469
4.17 VertiBlade [™] Vertical Knife – Option	. 471
4.17.1 Replacing Vertical Knife Sections	. 471
4.17.2 Greasing Vertical Knife	. 474
Chapter 5: Options and Attachments	477
5.1 Crop Delivery Kits	. 477
5.1.1 Crop Lifter Kit	. 477
5.1.2 Crop Lifter Storage Rack Kit	. 477
5.1.3 Crop Divider Storage Bracket Kit	. 478
5.1.4 Floating Crop Dividers	. 478
5.1.5 Full Length Upper Cross Auger	. 479
5.1.6 Rice Divider Rod Kit	. 480
5.1.7 VertiBlade [™] Vertical Knife Kit	. 480
5.2 Cutterbar Kits	. 481
5.2.1 Rock Retarder Kit	. 481
5.2.2 Four-Point Knife Guard	. 481
5.3 FM200 Float Module Kits	. 482
5.3.1 10V Sensor Adapter Kit	. 482
5.3.2 Crop Deflector Kits	. 482
5.3.3 Extended Center Filler	. 483
5.3.4 Feed Auger High-Wear Flighting Extension Kit	. 483
5.3.5 Full Interface Filler Kit	. 484
5.3.6 Hydraulic Reservoir Extension Kit	. 484
5.3.7 Lateral Tilt Plug Kit	. 485
5.3.8 Stripper Bar Kit	. 485
5.4 Header Kits	. 487
5.4.1 ContourMax [™] Contour Wheels Kit	. 487
5.4.2 EasyMove [™] Transport System	. 488
5.4.3 Inboard Steel End Finger Kit	. 488
5.4.4 Outboard Steel End Finger Kit	. 489
5.4.5 Side Hill Stabilizer Kit	. 489
5.4.6 Stabilizer Wheel Kit	
5.4.7 Steel Skid Shoes Kit	
5.4.8 Sunflower Attachment	. 491
Chapter 6: Troubleshooting	493
6.1 Crop Loss at Cutterbar	. 493
6.2 Cutting Action and Knife Components	. 496
6.3 Reel Delivery	. 500
6.4 Troubleshooting Header and Drapers	. 503

6.5 Cutting Edible Beans	505
Chapter 7: Reference	509
7.1 Torque Specifications	509
7.1.1 Metric Bolt Specifications	509
7.1.2 Metric Bolt Specifications – Cast Aluminum	512
7.1.3 O-Ring Boss Hydraulic Fittings – Adjustable	513
7.1.4 O-Ring Boss Hydraulic Fittings – Non-Adjustable	514
7.1.5 O-Ring Face Seal Hydraulic Fittings	515
7.1.6 Tapered Pipe Thread Fittings	516
7.2 Conversion Chart	518

Index

NOTE:
Add the prefix MAC to part numbers when ordering Example: MAC123456.
Recommended Fluids and Lubricants 529

Chapter 1: Safety

Understanding and consistently following these safety procedures will help to ensure the safety of those operating the machine and of bystanders.

1.1 Safety Alert Symbols

The safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

- ATTENTION!
- BECOME ALERT!
- YOUR SAFETY IS INVOLVED!

Carefully read and follow the safety message accompanying this symbol.

Why is safety important to you?

- Accidents disable and kill
- Accidents cost
- Accidents can be avoided



Figure 1.1: Safety Symbol

1.2 Signal Words

Three signal words, **DANGER**, **WARNING**, and **CAUTION**, are used to alert you to hazardous situations. Two signal words, **IMPORTANT** and **NOTE**, identify non-safety related information.

Signal words are selected using the following guidelines:

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

IMPORTANT:

Indicates a situation that, if not avoided, could result in a malfunction or damage to the machine.

NOTE:

Provides additional information or advice.

1.3 General Safety

Protect yourself when assembling, operating, and servicing machinery.

The following general farm safety precautions should be part of your operating procedure for all types of machinery.

Wear all protective clothing and personal safety devices that could be necessary for the job at hand. Do **NOT** take chances. You may need the following:

- Hard hat
- Protective footwear with slip-resistant soles
- Protective glasses or goggles
- Heavy gloves
- Wet weather gear
- Respirator or filter mask

In addition, take the following precautions:

• Be aware that exposure to loud noises can cause hearing impairment. Wear suitable hearing protection devices such as earmuffs or earplugs to help protect against loud noises.

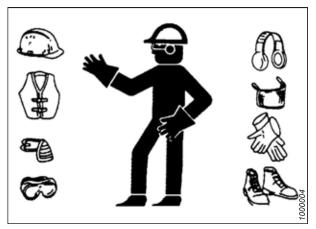


Figure 1.2: Safety Equipment



Figure 1.3: Safety Equipment

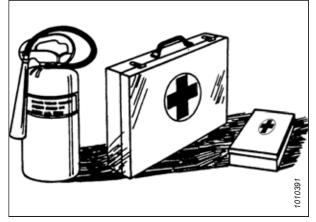


Figure 1.4: Safety Equipment

• Provide a first aid kit in case of emergencies.

- Keep a properly maintained fire extinguisher on the machine. Familiarize yourself with its use.
- Keep young children away from machinery at all times.
- Be aware that accidents often happen when Operators are fatigued or in a hurry. Take time to consider the safest way to accomplish a task. **NEVER** ignore the signs of fatigue.

- Wear close-fitting clothing and cover long hair. **NEVER** wear dangling items such as hoodies, scarves or bracelets.
- Keep all shields in place. **NEVER** alter or remove safety equipment. Ensure that the driveline guards can rotate independently of their shaft, and that they can telescope freely.
- Use only service and repair parts made or approved by the equipment manufacturer. Parts from other manufacturers may not meet the correct strength, design, or safety requirements.
- Keep hands, feet, clothing, and hair away from moving parts. **NEVER** attempt to clear obstructions or objects from a machine while the engine is running.
- Do **NOT** modify the machine. Unauthorized modifications may impair the functionality and/or safety of the machine. It may also shorten the machine's service life.
- To avoid injury or death from the unexpected startup of the machine, **ALWAYS** stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.
- Keep the machine service area clean and dry. Wet and/or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Ensure that all electrical outlets and tools are properly grounded.
- Keep the work area well-lit.
- Keep machinery clean. Straw and chaff on a hot engine are fire hazards. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before they are stored.
- **NEVER** use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover any sharp or extending components to prevent injury from accidental contact.



Figure 1.5: Safety around Equipment

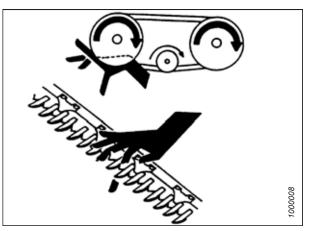


Figure 1.6: Safety around Equipment



Figure 1.7: Safety around Equipment

1.4 Maintenance Safety

Protect yourself when maintaining machinery.

To ensure your safety while maintaining the machine:

- Review the operator's manual and all safety items before operating or performing maintenance on the machine.
- Place all controls in Neutral, stop the engine, set the parking brake, remove the ignition key, and wait for all moving parts to stop before servicing, adjusting, or repairing the machine.
- Follow good shop practices:
 - Keep service areas clean and dry
 - Ensure that electrical outlets and tools are properly grounded
 - Keep the work area well lit
- Relieve pressure from hydraulic circuits before servicing and/or disconnecting the machine.
- Ensure that all components are tight and that steel lines, hoses, and couplings are in good condition before applying pressure to hydraulic systems.
- Keep hands, feet, clothing, and hair away from all moving and/or rotating parts.
- Clear the area of bystanders, especially children, when carrying out any maintenance, repairs, or adjustments.
- Install the transport lock or place safety stands under the frame before working under the machine.
- If more than one person is servicing the machine at the same time, be aware that rotating a driveline or another mechanically driven component by hand (for example, accessing a lubricant fitting) will cause drive components in other areas (belts, pulleys, and knives) to move. Stay clear of driven components at all times.
- Wear protective gear when working on the machine.
- Wear heavy gloves when working on knife components.



Figure 1.8: Safety around Equipment

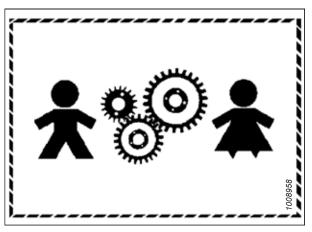


Figure 1.9: Equipment is NOT Safe for Children

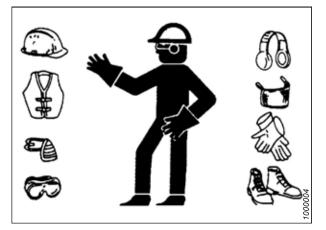
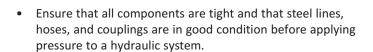


Figure 1.10: Safety Equipment

1.5 Hydraulic Safety

Protect yourself when assembling, operating, and servicing hydraulic components.

- Always place all hydraulic controls in Neutral before leaving the operator's seat.
- Ensure that all the components in the hydraulic system are kept clean and in good condition.
- Replace any worn, cut, abraded, flattened, or crimped hoses and steel lines.
- Do **NOT** attempt any makeshift repairs to hydraulic lines, fittings, or hoses by using tapes, clamps, cements, or welding. The hydraulic system operates under extremely high pressure. Makeshift repairs can fail suddenly and create hazardous conditions.
- Wear proper hand and eye protection when searching for high-pressure hydraulic fluid leaks. Use a piece of cardboard as a backstop instead of your hands to isolate and identify a leak.
- If injured by a concentrated, high-pressure stream of hydraulic fluid, seek medical attention immediately. Serious infection or toxic reaction can develop from hydraulic fluid piercing the skin.



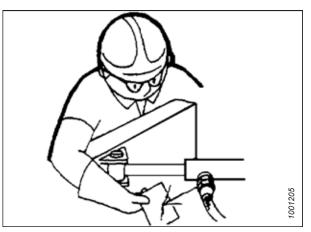


Figure 1.11: Testing for Hydraulic Leaks



Figure 1.12: Hydraulic Pressure Hazard

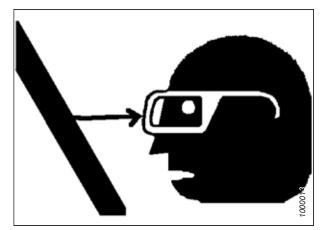


Figure 1.13: Safety around Equipment

1.6 Safety Signs

Safety signs are decals placed on the machine where there is a risk of personal injury, or where the Operator should take extra precautions before operating the controls. They are usually yellow.

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or illegible.
- If the original part on which a safety sign was installed is replaced, ensure that the repair part displays the current safety sign.
- Replacement safety signs are available from your Dealer.

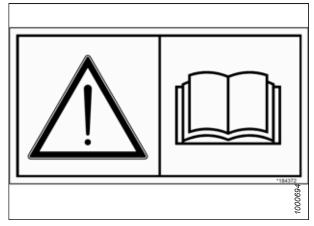


Figure 1.14: Operator's Manual Decal


1.6.1 Installing Safety Decals

Replace any safety decals that are worn or damaged.

- 1. Decide exactly where you are going to place the decal.
- 2. Clean and dry the installation area.
- 3. Remove the smaller portion of the split backing paper.
- 4. Place the decal in position and slowly peel back the remaining paper, smoothing the decal as it is applied.
- 5. Prick small air pockets with a pin and smooth them out.


1.7 Safety Decal Locations

Safety signs are usually yellow decals, and are placed on the machine where there is a risk of personal injury, or where the operator has to take extra precaution before operating controls.

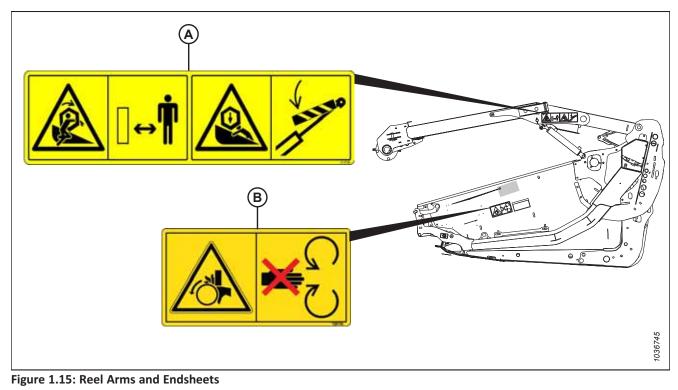

A -MAC360541 - Reel Entanglement/ Hazard (Two Locations)

B - MAC288195 - Danger, Rotating Part (Two Locations)

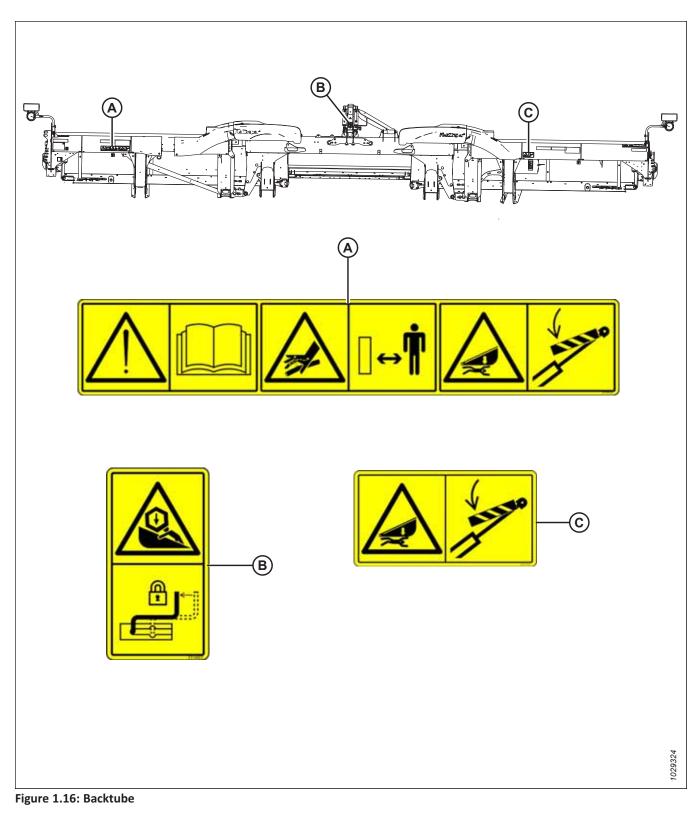

A - MAC313725 – Read Manual / High Pressure Fluid / Header Hazard C - MAC313733 – Header Crushing Hazard B - MAC311493 - Center Prop Lock

SAFETY

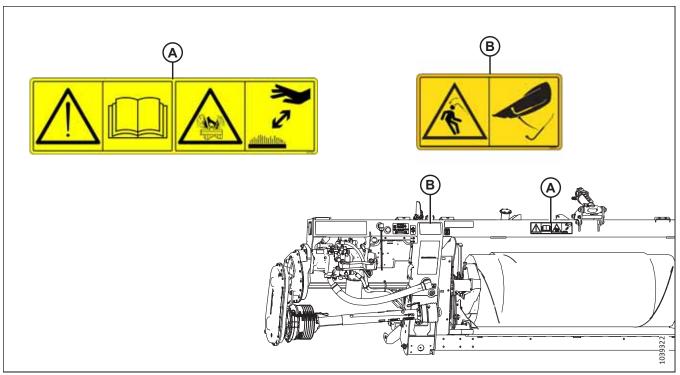


Figure 1.17: FM200 Float Module

A - MAC313728 – Read Manual / Fluid Spray Hazard

B - MAC360655 - Released Spring Energy Hazard

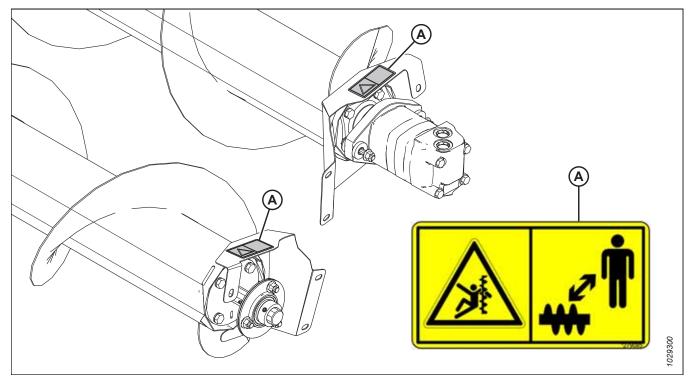


Figure 1.18: Upper Cross Auger

A - MAC279085 – Auger Warning

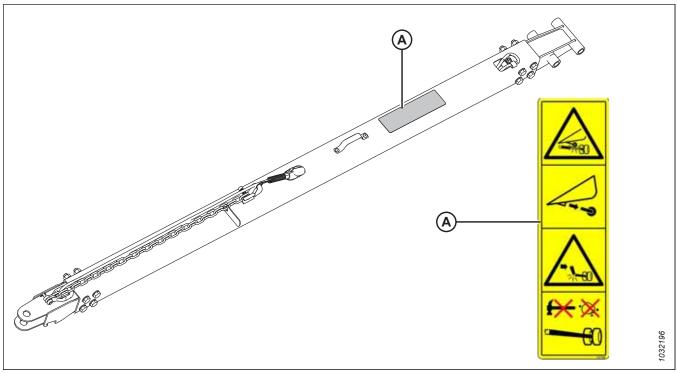


Figure 1.19: EasyMove[™] Transport System – Tow-Bar (Short Bar Shown; Long Bar Similar)

A - MAC327588 – Hitch Damage Hazard

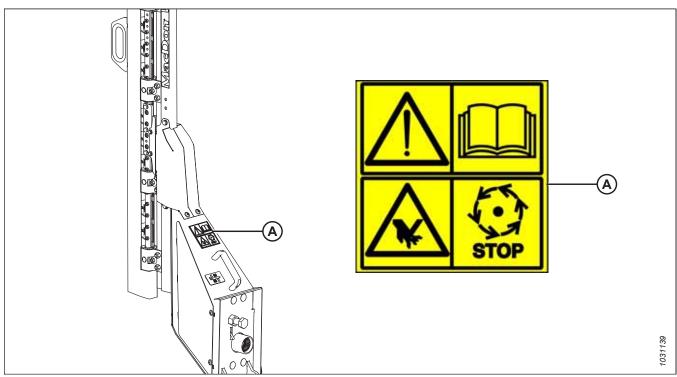


Figure 1.20: Vertical Knife

A - MAC313881 – Knife Hazard

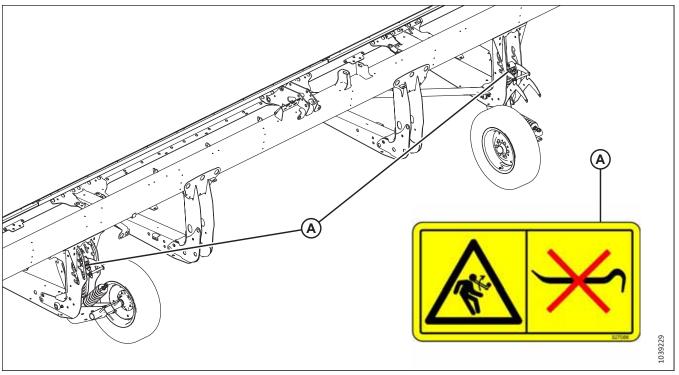


Figure 1.21: Stabilizer Wheels

A - MAC327086 – Released Spring Energy Hazard

1.8 Understanding Safety Signs

Refer to this topic to learn the hazards that each type of safety decal denotes.

MAC174436

High-pressure oil hazard

WARNING

High-pressure hydraulic fluid can penetrate human skin, which can cause serious injury such as gangrene, which can be fatal. To prevent this:

- Do **NOT** go near hydraulic fluid leaks.
- Do **NOT** use a finger or skin to check for hydraulic fluid leaks.
- Lower the load or relieve the pressure in the hydraulic system before loosening any hydraulic fittings.
- If you are injured, seek emergency medical help. IMMEDIATE surgery is required to remove hydraulic fluid which has penetrated the skin.

MAC220799

Loss of control hazard

WARNING

To prevent serious injury or death from loss of control:

• Ensure that the tow-bar lock mechanism is locked.



Figure 1.22: MAC174436



Figure 1.23: MAC220799



Figure 1.24: MAC279085

MAC279085

Auger entanglement hazard

DANGER

To prevent injury from the rotating auger:

- Stand clear of the auger while the machine is running.
- Stop the engine and remove the key before servicing the auger.
- Do **NOT** reach into moving parts while the machine is running.

Rotating object pinch hazard

CAUTION

To prevent injury:

- Stop the engine and remove the key before opening the shield.
- Do **NOT** operate without shields in place.



Figure 1.25: MAC288195

MAC311493

Reel Crushing Hazard

DANGER

• To prevent injury from the fall of a raised reel, fully raise the reel. Stop the engine and remove the key, and engage the mechanical safety lock on each reel support arm before working on or under the reel.

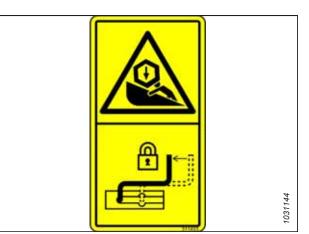


Figure 1.26: MAC311493

Read manual / high pressure fluid / header crushing hazard

DANGER

To prevent injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do **NOT** allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of the machine before starting the engine and during operation.
- Keep riders off of the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage the header drive, put the transmission in Neutral, and wait for all movement to stop before leaving the operator's position.
- Stop the engine and remove the key from the ignition before servicing, adjusting, lubricating, cleaning, or unplugging the machine.
- Engage the safety locks to prevent lowering of raised unit before servicing in the raised position.
- Use a slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

To prevent injury or death from fall of a raised header:

- Fully raise the header, stop the engine, remove the key, and engage the mechanical safety locks on the combine before going under the header.
- Alternatively, rest the header on the ground, stop the engine, and remove the key before servicing.

WARNING

To prevent serious injury, gangrene, or death:

- Do **NOT** go near leaks.
- Do **NOT** use a finger or skin to check for leaks.
- Lower the load or relieve hydraulic pressure before loosening fittings.
- High-pressure oil can easily puncture skin, and can cause serious injury, gangrene, or death.
- If injured, seek emergency medical help. Immediate surgery is required to remove oil.

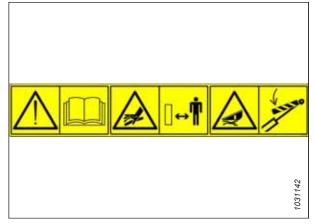


Figure 1.27: MAC313725

Reel entanglement / reel crushing hazard

DANGER

- To prevent injury from entanglement with the rotating reel, stand clear of the header while the machine is running.
- To prevent injury from the fall of the raised reel, fully raise the reel, stop the engine, remove the key, and engage the mechanical safety lock on each reel support arm before working on or under the reel.

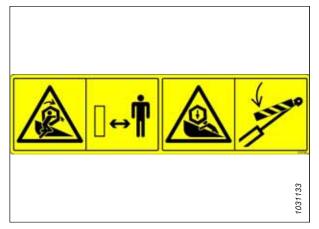


Figure 1.28: MAC360541

General hazard pertaining to machine operation and servicing / Hot fluid spray hazard

DANGER

To prevent injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do **NOT** allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of the machine before starting the engine and during operation.
- Keep riders off of the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage the header drive, put the transmission in Neutral, and wait for all movement to stop before leaving the operator's position.
- Stop the engine and remove the key from the ignition before servicing, adjusting, lubricating, cleaning, or unplugging the machine.
- Engage safety locks to prevent the lowering of a raised unit before servicing it in the raised position.
- Use a slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

CAUTION

To prevent injury from hot fluids:

- Do NOT remove the fluid fill cap when the machine is hot.
- Allow the machine to cool down before opening the fluid fill cap.
- Fluid is under pressure and may be hot.

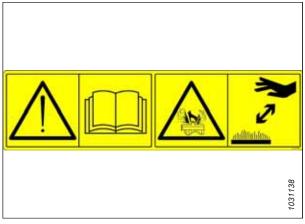


Figure 1.29: MAC313728

Header crushing hazard

DANGER

To prevent injury or death from the fall of a raised header:

- Fully raise the header, stop the engine, remove the key, and engage the mechanical safety locks on the combine before going under the header.
- Alternatively, rest the header on the ground, stop the engine, and remove the key before servicing.



Figure 1.30: MAC313733

General hazard pertaining to machine operation and servicing / knife hazard

DANGER

To prevent injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do **NOT** allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all the safety signs are installed and legible.
- Make certain everyone is clear of the machine before starting the engine and during operation.
- Keep riders off of the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage the header drive, put the transmission in Neutral, and wait for all movement to stop before leaving the operator's position.
- Stop the engine and remove the key from the ignition before servicing, adjusting, lubricating, cleaning, or unplugging the machine.
- Engage the safety locks to prevent lowering of the raised unit before servicing it in the raised position.
- Use a slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

WARNING

To prevent injury from sharp cutting knife:

- Wear heavy canvas or leather gloves when working with the knife.
- Be sure no one is near the vertical knife when removing or rotating the knife.



Figure 1.31: MAC313881

Released spring energy hazard

WARNING

To prevent injury:

- When servicing or replacing wheel axle components, the liftassist spring no longer has counterweight and becomes energized.
- Do **NOT** attempt to pry adjustment handle out of a position slot before releasing tension from the assist springs.



Figure 1.32: MAC327086

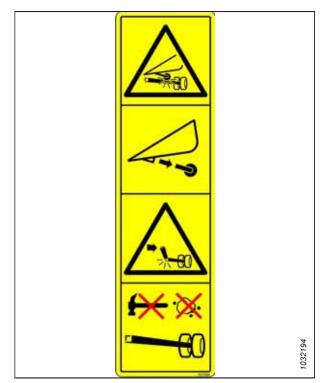


Figure 1.33: MAC327588

MAC327588

Hitch damage hazard

DANGER

To prevent serious injury or death:

- Remove the left contour wheel before transporting the header with transport.
- Do **NOT** tow a header if the transport hitch is damaged.

Chapter 2: Product Overview

Refer to this section to learn the definitions of the technical terms used in this manual, the machine's specifications, and the locations of key components.

2.1 Definitions

Term	Definition
API	American Petroleum Institute
ASTM	American Society of Testing and Materials
Bolt	A headed and externally threaded fastener designed to be paired with a nut
Center-link	A hydraulic cylinder connection between the header and the vehicle, which is used to change the angle of the header relative to the vehicle
CGVW	Combined gross vehicle weight
Export header	The header configuration typical outside North America
FD2 Series header	MacDon FD225, FD230, FD235, FD240, FD241, FD245, and FD250 FlexDraper [®] header
FFFT	Flats from finger tight
Finger tight	Finger tight is a reference position in which the given sealing surfaces or components are making contact with each other and the fitting has been tightened by hand to a point where the fitting is no longer loose and cannot be tightened further by hand
FM200	The float module used with an FD2 Series FlexDraper® header for combining
FSI	Float setting indicator
GVW	Gross vehicle weight
Hard joint	A joint made with use of a fastener where joining materials are highly incompressible
Hex key	A tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in the head (internal-wrenching hexagon drive); also known as an Allen key
hp	Horsepower
JIC	Joint Industrial Council: A standards body that developed standard sizing and shape for original 37° flared fitting
n/a	Not applicable
North American header	The header configuration typical in North America
NPT	National Pipe Thread: A style of fitting used for low-pressure port openings. Threads on NPT fittings are uniquely tapered for an interference fit
Nut	An internally threaded fastener designed to be paired with a bolt
ORB	O-ring boss: A style of fitting commonly used in port openings on manifolds, pumps, and motors

The following terms, abbreviations, and acronyms are used in this manual.

PRODUCT OVERVIEW

Term	Definition	
ORFS	O-ring face seal: A style of fitting commonly used for connecting hoses and tubes. This style of fitting is also commonly called ORS, which stands for O-Ring Seal	
SAE	Society of Automotive Engineers	
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread when inserted into a mating part	
Soft joint	A flexible joint made by use of a fastener in which the joining materials compress or relax over a period of time	
Tension	An axial load placed on a bolt or screw, usually measured in Newtons (N) or pounds (Ib This term can also be used to describe the force a belt exerts on a pulley or sprocket	
TFFT	Turns from finger tight	
Torque	The product of a force * the length of a lever arm, usually measured in Newton-meters (Nm) or foot-pounds (lbf·ft)	
Torque angle	A tightening procedure in which a fitting is assembled to a specified tightness (usually finger tight) and then the nut is turned farther by a specified number of degrees until it achieves its final position	
Torque-tension	The relationship between the assembly torque applied to a piece of hardware and the axial load it induces in a bolt or screw	
UCA	Upper cross auger	
Washer	A thin cylinder with a hole or a slot located in the center, used as a spacer, a load distribution element, or a locking mechanism	

2.2 Product Specifications

Use the specification table to reference information about a machine's specific configuration. The table lists dimensions, weights, performance ranges, and features.

NOTE:

Specifications are subject to change without notice.

The following symbols and letters are used in specification tables:

– S: standard / O_F: optional (factory installed) / O_D: optional (dealer installed) / –: not available

Cutterbar					
Effective cutting width (distance between crop divider points; cut width plus divider gather)					
FD225		7.7 m (301 in)			
FD230		9.2 m (361 in.)	S		
FD235		10.7 m (421 in.)			
FD240		12.2 m (481 in.)	S		
FD241		12.5 m (493 in.)	S		
FD245		13.7 m (541 in.)	S		
FD250		15.3 m (601 in.)	S		
Cutterbar lift range	Varies with combine model	S			
Knife					
Single-knife drive (FD225–FD240): hydraulic motor mounted to enclosed heavy duty MacDon knife drive box on the left side of header.			O _F		
	Double knife drive (FD235–FD250): one hydraulic motor, untimed, one mounted to enclosed heavy duty MacDon knife drive box on each side of header.				
Knife stroke		76 mm (3 in.)	S		
Single-knife speed (strokes per minute)	FD225 and FD235	1200–1400 spm	S		
Single-knife speed (strokes per minute)	FD230	1200–1500 spm	S		
Single-knife speed (strokes per minute)	FD240	1200–1300 spm	S		
Double-knife speed (strokes per minute)	FD235, FD240, FD241, FD245, and FD250	1200–1500 spm	S		
Knife Sections					
Over-serrated, Ultra Coarse, ClearCut [™] , QuickChange, bolted, 1.5 serrations per cm (4 serrations per inch)					
Over-serrated, Coarse, ClearCut [™] , QuickChange, bolted, 3.5 serrations per cm (9 serrations per inch)			S		
Over-serrated, Fine, ClearCut [™] , QuickChange, bolted, 5.5 serrations per cm (14 serrations per inch)					

PRODUCT OVERVIEW

Knife overlap at center (double-knife he	3 mm (1/8 in.)	S		
Guards and Hold-Downs				
Guard: ClearCut [™] Pointed, forged and double heat treated (DHT) Hold-down: forged, single adjustment bolt			O _F	
Guard: ClearCut [™] Four Point, forged and double heat treated (DHT) Hold-down: forged, single adjustment bolt			O _F	
Guard: ClearCut [™] PlugFree [™] , forged and Hold-down: forged, dual adjustment bol			O _F	
Cutterbar Wearplates and Standard Ski	d Shoes			
The FD2 Series includes wearplates acro	ss the width of the cutterbar		S	
FD225		4 Skid Shoes	S	
FD230, FD235, FD241, FD245, FD250		6 Skid Shoes	S	
Guard Angle (Cutterbar on the Ground)				
Center-link retracted		1.7 degrees	S	
Center-link extended		8.9 degrees	S	
Draper and Decks				
Draper width		1.27 m (50 in.)	S	
Draper drive		Hydraulic	S	
Draper speed: FM200 Float Module controlled		209 m/min. (687 fpm)	S	
Delivery opening width		1905 mm (75 in.)	S	
PR15 Pick-Up Reel				
Quantity of tine tubes		5 or 6		
Center tube diameter		203 mm (8 in.)	S	
Finger tip radius	Factory-set	800 mm (31 1/2 in.)	S	
Finger tip radius	Adjustment range	766–800 mm (30 3/16–31 1/2 in.)	s	
Effective reel diameter (via shaped cam action)		1.650 m (65 in.)	S	
Finger length		290 mm (11 in.)	S	
Finger spacing (nominal, staggered on alternate bats)		100 mm (4 in.)	S	
Reel drive		Hydraulic	S	
Reel speed (adjustable from cab, varies	0–67 rpm	S		
Header Frame Flex Range				

Model	Up - Standard	Down - Standard	Up - Limiter Removed	Down - Limiter Remov	ved ¹
FD225	102 mm (4 in.)	64 mm (2.5 in.)	102 mm (4 in.)	102 mm (4 in.)	
FD230	165 mm (6.5 in.)	130 mm (5 in.)	165 mm (6.5 in.)	165 mm (6.5 in.)	
FD235	205 mm (8 in.)	130 mm (5 in.)	205 mm (8 in.)	205 mm (8 in.)	
FD240 DR ²	205 mm (8 in.)	130 mm (5 in.) 205 mm (8 in.)		205 mm (8 in.)	
FD240 TR ³	205 mm (8 in.)	205 mm (8 in.)	205 mm (8 in.)	205 mm (8 in.)	
FD241	205 mm (8 in.)	130 mm (5 in.)	205 mm (8 in.)	205 mm (8 in.)	
FD245	216 mm (8.5 in.)	216 mm (8.5 in.)	216 mm (8.5 in.)	216 mm (8.5 in.)	
FD250	216 mm (8.5 in.)	216 mm (8.5 in.)	216 mm (8.5 in.)	216 mm (8.5 in.)	
FM200 Float	Module	-		-	
Feed draper		Width		2 m (78 11/16 in.)	S
Feed draper		Speed		107–122 m/min (350–400 fpm)	s
Feed auger		Width		1.630 m (64 1/8 in.)	S
Feed auger		Outside diameter		559 mm (22 in.)	S
Feed auger		Tube diameter		356 mm (14 in.)	S
Feed auger	Feed auger Speed (varies with combine model)		191–195 rpm (varies with combine model)	s	
Oil reservoir capacity			95 liters (25 US gallons)	S	
Oil type			Single grade transmission/ hydraulic fluid (THF).	_	
THF viscosity at 40°C (104°F)			60.1 cSt	_	
THF viscosity at 100°C (212°F)			9.5 cSt	_	
Upper Cross Auger					О- D
Outside diameter			330 mm (13 in.)	_	
Tube diameter			152 mm (6 in.)	_	
Stabilizer Wł	Stabilizer Wheel / EasyMove [™] Transport				О- D

^{1.} To avoid cutting off reel fingers, a greater cutterbar clearance is required when the header flex range is increased. For more information, refer to *Disabling Flex Frown Limiter*.

^{2.} Double reel

^{3.} Triple reel

PRODUCT OVERVIEW

Wheels		38 cm (15 in.)	_
Tires		225/75 R-15	—
Weight	Weight		
Estimated weight range – base header v	with float module – variances are due to different pack	age configurations.	
FD225	North America	3329–3447 kg (7331–7597 lb.)	
FD230	North America	3701–3743 kg (8160–8253 lb.)	
FD235	North America	3901–4036 kg (8600–8898 lb.)	
FD240	North America	4050–4315 kg (8928–9512 lb.)	
FD241	Export	4,287–4,340 kg (9,452–9,569 lb.)	
FD245	North America	4,498–4,555 kg (9,916–10,043 lb.)	
	Export	4,635–4,692 kg (10,218–10,345 lb.))
FD250	North America	4693–4756 kg (10,346–10,485 lb.))
	Export	4,853–4,916 kg (10,699–10,838	

2.3 FD2 Series FlexDraper[®] Header Dimensions

When operating a header it is important to know the dimensions of the machine.

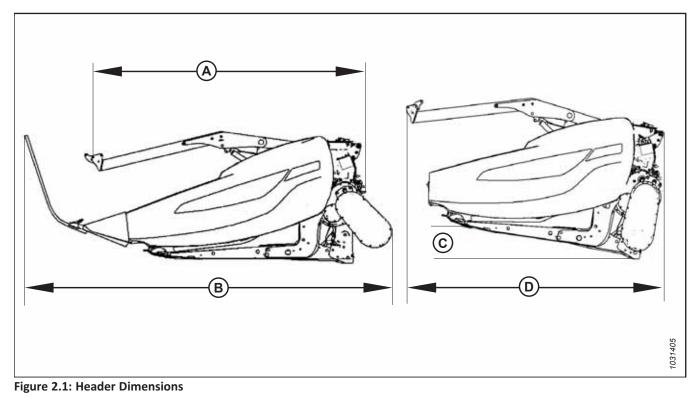


Table 2.1 Header Dimensions

Frame and Structure			
Feature Being Measured	Reference to Figure 2.1, page 27	Dimension	
Header width in field mode	_	Cut width + 500 mm (19 1/5 in.)	
Cutterbar width	_	Cut width - 500 mm (19 1/5 in.)	
Header width in transport position with FM200 installed (shortest center-link)	(A) Gearbox rotated (storage), dividers removed (refer to <i>2.1, page 27</i>)	2.6 m (103 in.)	
Header width in transport position with FM200 installed (shortest center-link)	(B) Gearbox operational, standard dividers installed (refer to <i>2.1, page 27</i>)	3.5 m (138 in.)	
Header width in transport position with reel	Gearbox rotated, dividers removed (refer to 2.1, page 27) Angle (C) required to achieve transport		
fully retracted and FM200 installed (shortest center-link)	width (D)	8° 2.591 m (102 in.)	
	Dimension (D) can be decreased by using a transport trailer with greater angle.		

2.4 FD2 Series FlexDraper[®] Header Component Identification

Familiarizing yourself with the main components of the header will make it easier to follow the operation and maintenance instructions provided in this manual.

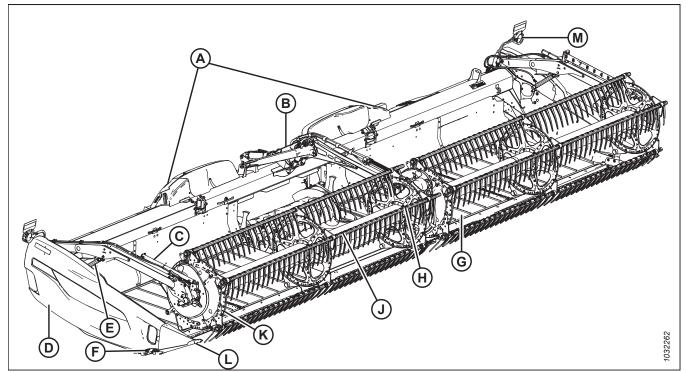


Figure 2.2: FD2 Series FlexDraper[®] Header Components

A - Wing Float Linkage

- D Endshield
- G Side Draper
- K Reel Endshield

- B Center Reel Arm E - Reel Lift Cylinder H - Center Reel Drive
 - L Crop Divider

- C Reel Fore-Aft Cylinder
- F Knife Drive Box (inside endshield)
- J Pick-up Reel
- M Header Light (except Europe)

2.5 FM200 Float Module Component Identification

Familiarizing yourself with the main components of the float module will make it easier to follow the operation and maintenance instructions provided in this manual.

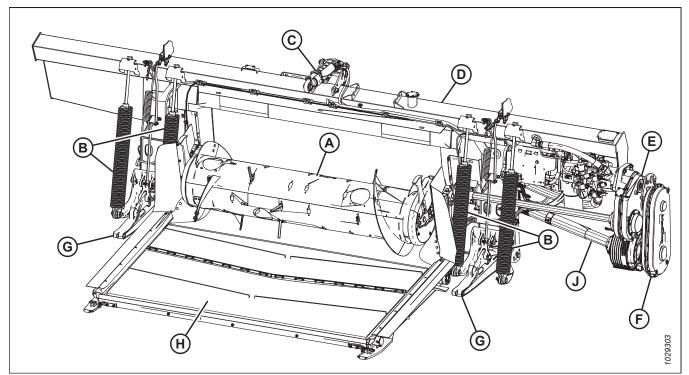


Figure 2.3: Header Side of FM200 Float Module

A - Feed Auger

- D Hydraulic Reservoir
- G Header Support Arms (x2)
- B Header Float Springs (x4)
- E Main Gearbox
- H Feed Draper

C - Center-Link

- F Completion Gearbox
- J Driveline

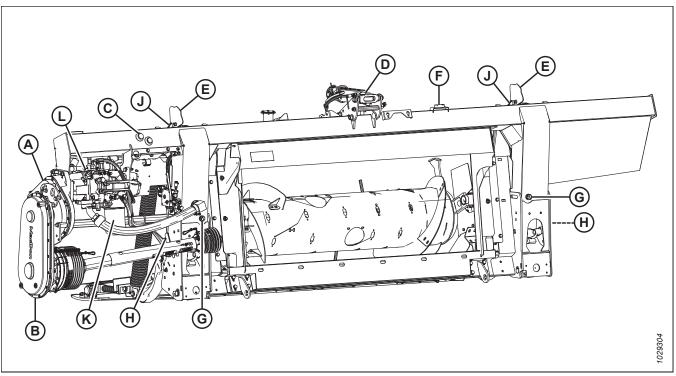


Figure 2.4: Combine Side of FM200 Float Module

- A Main Gearbox
- D Center-Link G Drain Plug (x2) K Hydraulic Filter

- **B** Completion Gearbox E - Header Height Control Indicator (x2)
- H Float Lock Handle (x2)
- L Knife, Side Draper, and Feed Draper Pump
- C Reservoir Oil Level Sight Glass
- F Bubble Level
- J Auto Header Height Control (AHHC) Sensor (x2)

Chapter 3: Operation

Safely operating your machine requires familiarizing yourself with its capabilities.

3.1 Owner/Operator Responsibilities

Owning and operating heavy equipment comes with certain duties.

- It is your responsibility to read and understand this manual completely before operating the header. Contact your MacDon Dealer if an instruction is not clear to you.
- Follow all safety messages in the manual and on safety decals on the machine.
- Remember that YOU are the key to safety. Good safety practices protect you and the people around you.
- Before allowing someone to operate the header, for however short a time or distance, make sure they have been instructed in its safe and proper use.
- Review the manual and all safety related items with all Operators annually.
- Be alert for other Operators not using recommended procedures or not following safety precautions. Correct these mistakes immediately, before an accident occurs.
- Do NOT modify the machine. Unauthorized modifications may impair the function and/or safety of the machine and may reduce the length of service you receive from your machine.
- The safety information given in this manual does not replace safety codes, insurance needs, or laws governing your area. Be sure your machine meets the standards set by these regulations.

3.2 Operational Safety

Follow all the safety and operational instructions given in this manual.

Adhere to the following safety precautions:

- Follow all safety and operational instructions provided in your operator's manuals. If you do not have a combine manual, get one from your Dealer and read it thoroughly.
- Never attempt to start the engine or operate the machine except from the operator's seat.
- Check the operation of all controls in a safe, clear area before starting work.
- Do NOT allow riders on the combine.

- Never start or move the machine until you are sure all bystanders have cleared the area.
- Avoid travelling over loose fill, rocks, ditches, or holes.
- Drive slowly through gates and doorways.
- When working on inclines, travel uphill or downhill whenever possible. Be sure to keep transmission in gear when travelling downhill.
- Never attempt to get on or off a moving machine.
- Do NOT leave the operator's station while the engine is running.

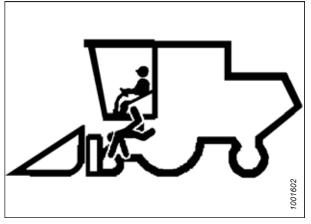


Figure 3.1: No Riders

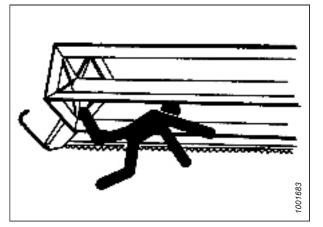


Figure 3.2: Bystander Safety

- To avoid bodily injury or death from the unexpected startup of a machine, always stop the engine and remove the key before adjusting or removing plugged material from the machine.
- Check for excessive vibration and unusual noises. If there is any indication of trouble, shut down and inspect the machine. Follow the proper shutdown procedure. For instructions, refer to 3.4 Shutting down the Combine, page 50.
- Operate only in daylight or good artificial light.

3.2.1 Header Safety Props

The header safety props located on the header lift cylinders prevent the lift cylinders from unexpectedly retracting and lowering the header. For instructions, refer to your combine operator's manual.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

3.2.2 Reel Safety Props

The reel safety props are located on the reel support arms and prevent the reel from falling unexpectedly.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

IMPORTANT:

To prevent damage to the reel support arms, do **NOT** transport the header whilen the reel safety props are engaged.

Engaging Reel Safety Props

Engage the reel safety props anytime you need to work around a raised reel. When engaged the reel safety props prevent the reel from unexpectedly lowering.

Outer reel arms

- 1. Raise reel to the maximum height.
- 2. Lift up on safety prop (A) and push forward to remove prop from hook (B).

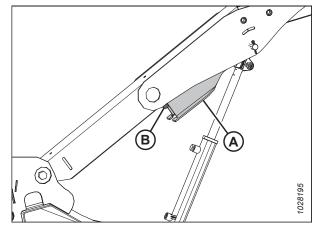


Figure 3.3: Outer Right Arm

3. Lower safety prop (A) and engage it on the cylinder shaft as shown. Repeat on the opposite arm.

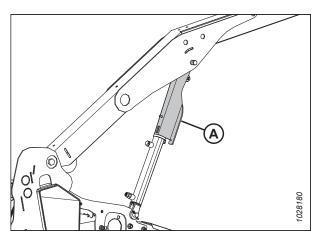


Figure 3.4: Engaged Reel Safety Prop – Outer Right Arm

Center reel arm – double- and triple-reel headers

4. Rotate handle (A) to release the spring tension and allow the spring to guide the pin into the locked position.

NOTE:

For triple-reel headers, the illustration shows the center right arm. The center left arm is opposite.

- 5. On triple-reel headers, repeat the previous step on the center left arm.
- 6. Lower the reel until the safety props contact the outer arm cylinder mounts and the center arm pins.

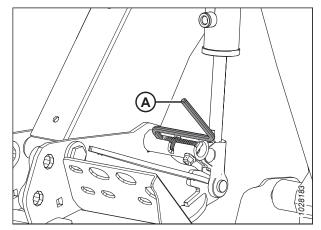


Figure 3.5: Engaged Reel Safety Prop – Center Arm

Disengaging Reel Safety Props

To ensure the proper operation of the reel and header, disengage the reel safety props once you have completed working on or around a raised reel.

Outer reel arms

- 1. Raise the reel to its maximum height.
- 2. Move reel safety prop (A) up onto hook (B) under the reel arm. Repeat on the opposite arm.

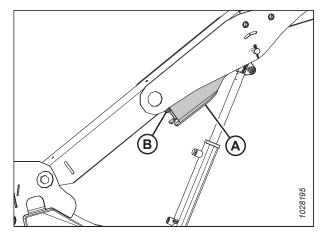


Figure 3.6: Reel Safety Prop – Right Outer Arm

Center reel arm – double- and triple-reel headers

3. Move handle (A) outboard and into slot (B) to put the pin in the unlocked position.

NOTE:

For triple-reel headers, the illustration shows the center right arm. The center left arm is opposite.

4. On triple-reel headers, repeat the previous step on the center left arm.

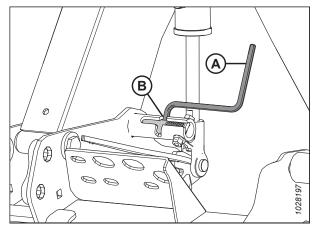


Figure 3.7: Reel Safety Prop – Center Arm

3.2.3 Header Endshields

A hinged, polyethylene endshield is fitted on each end of the header to protect critical drive components.

Opening Header Endshields

The header endshields covers knife drive components, hydraulic hoses, electrical connections, the header wrench, the spare knife, and the optional transport hitch. To access the components you will need to open the endshield.

1. Push release lever (B) using access hole (A) on the backside of the header endshield to unlock the shield.

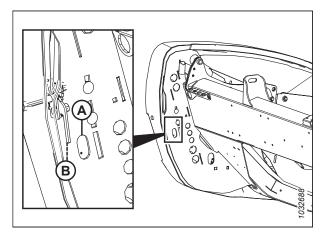


Figure 3.8: Left Header Endshield

2. Pull header endshield (A) open.

NOTE:

The header endshield is retained by tab (B) and will open in direction (C).

3. If additional clearance is required, pull the header

4. Engage safety latch (B) on hinge arm (C) to secure the

endshield free of tab (A) and then swing the shield toward

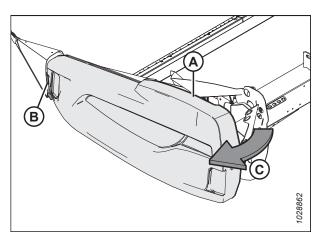


Figure 3.9: Left Header Endshield

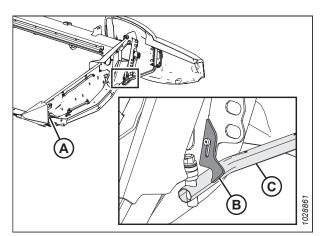


Figure 3.10: Left Header Endshield

Closing Header Endshields

the rear of the header.

shield in the fully open position.

The header endshields covers knife drive components, hydraulic hoses, electrical connections, the header wrench, the spare knife, and the optional transport hitch. After accessing the components you will need to close the endshield.

- If the endshield is fully opened and secured behind the header, disengage lock (A) to allow header endshield (B) to move.
- 2. Rotate the header endshield toward the front of the header.

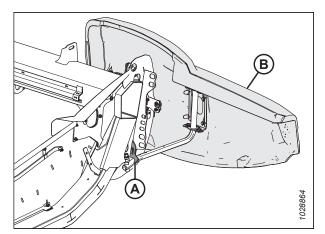


Figure 3.11: Left Header Endshield

3. While closing the endshield, ensure header endshield (A) does not contact the top of endsheet (B). If adjustment is required, refer to *Checking and Adjusting Header Endshields, page 37.*

IMPORTANT:

The aluminum endsheet will be damaged if the weight of the plastic endshield rests on it.

4. Insert the front of the header endshield behind hinge

5. Swing the header endshield in direction (A) into the closed position. Engage two-stage latch (C) with a firm push.

tab (B) and into the divider cone.

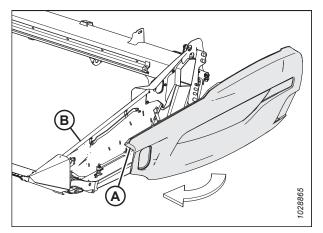


Figure 3.12: Left Header Endshield

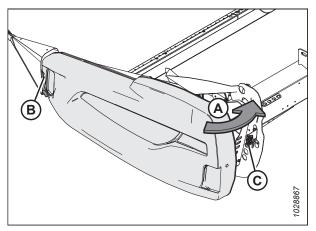


Figure 3.13: Left Header Endshield

A BSBECOL

Figure 3.14: Two-Stage Latch

Checking and Adjusting Header Endshields

Header endshields are subject to expansion or contraction caused by large temperature variations. The position of the header endshield can be adjusted to compensate for dimensional changes.

IMPORTANT:

The aluminum endsheet will be damaged if the weight of the plastic header endshield rests on it.

IMPORTANT:

Check that the header endshield is locked. Ensure bolt (A) is fully engaged on two-stage latch (B) to prevent the header endshield from opening while operating the header. If adjustment is required, refer to *Checking and Adjusting Header Endshields, page 37*.

NOTE:

The header endshield is transparent in the illustration to show the latch.

1. Check if gap (A) between header endshield (B) and endsheet (C) is 1–3 mm (0.04–0.12 in.).

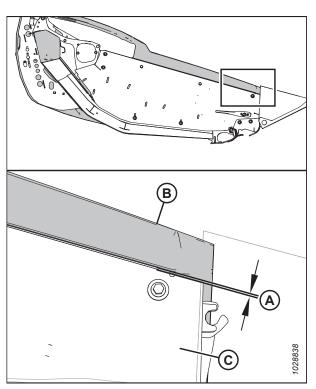


Figure 3.15: Gap between Header Endshield and Endsheet

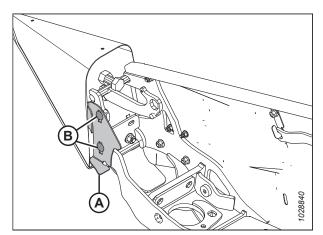


Figure 3.16: Header Endshield Support Bracket

- 2. If adjustment is required, adjust support bracket (A) as follows:
 - a. Loosen bolts (B).
 - b. Move support bracket (A) up or down as required to achieve the correct clearance.
 - c. Retighten the hardware.

3. Check if gap (A) between the front of the header endshield and support bracket (B) is 8–18 mm (0.3–0.7 in).

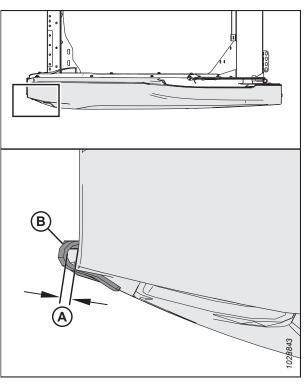


Figure 3.17: Gap between Header Endshield and Support Bracket – View from Above

Figure 3.18: Left Header Endshield

- 4. If adjustment is required, adjust the position of hinge arm (A) as follows:
 - a. Loosen four nuts (B).
 - b. Slide brackets (C) and hinge arm (A) fore or aft as required to achieve the correct clearance.
 - c. Retighten the hardware.

- Check gap (A) at the bottom front of left neck shield (E) to the edge of the end panel. The gap range is 2–4 mm (0.09–0.16 in).
- Check gap (B) at front of left neck shield (E) to the inside edge of endshield (D). The gap range is 42–52 mm (1.7–2.04 in).
- Check gap (C) at rear of left neck shield (E) to the inside edge of endshield (D). The gap range is 15–25 mm (0.68–1 in).
- Check that bolt (A) is fully engaged on two-stage latch (B) to prevent the header endshield from opening during operation.

NOTE:

The header endshield is shown transparent in the illustration.

- 9. If adjustment is required, loosen nuts (D) and slide bracket (C) up or down.
- 10. Once complete, tighten nuts (D) and check Steps *5, page 40* to *7, page 40* again.

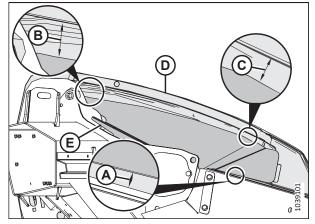


Figure 3.19: Endshield Alignment – View from Inside the Deck

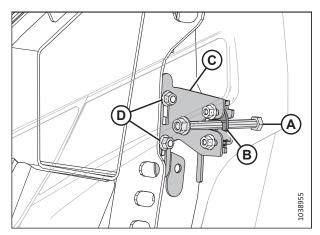


Figure 3.20: Two-Stage Latch

Removing Header Endshields

Remove the endshields when servicing the end shields.

- 1. Fully open the header endshield. For instructions, refer to *Opening Header Endshields, page 35*.
- 2. Engage latch (A) to prevent any endshield movement.
- 3. Remove self-tapping screw (B).
- 4. Slide the header endshield upwards and remove it from hinge arm (C).
- 5. Place the header endshield away from the work area.

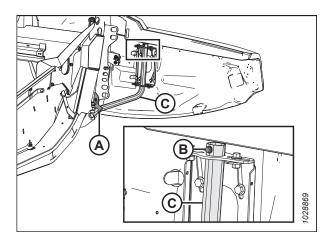


Figure 3.21: Left Header Endshield

Installing Header Endshields

To ensure the endshields are installed correctly, follow the recommended installation procedure provided here.



To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

IMPORTANT:

Be careful not to rest the endshield on the aluminum endsheet while installing.

- 1. Guide the header endshield onto hinge arm (C) and slowly slide it downwards.
- 2. Install self-tapping screw (B).
- 3. Disengage latch (A) to allow the header endshield movement.
- 4. Close the header endshield. For instructions, refer to *Closing Header Endshields, page 36*.

NOTE:

Header endshields may expand or contract when subjected to large temperature changes. The header endshield position can be adjusted to compensate for dimensional changes. For instructions, refer to *Checking and Adjusting Header Endshields, page 37*.

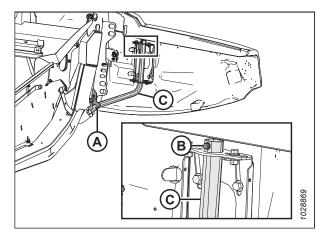


Figure 3.22: Left Header Endshield

3.2.4 Reel Drive Cover

The reel drive cover protects the reel drive components from dirt and debris.

Removing Reel Drive Cover

The reel drive cover can be removed to access the reel drive components for service.



To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Start the engine.
- 2. Adjust the reel fully forward.
- 3. Lower the header fully.
- 4. Shut down the engine, and remove the key from the ignition.

5. Rotate spring latch (A) up and over the back plate.

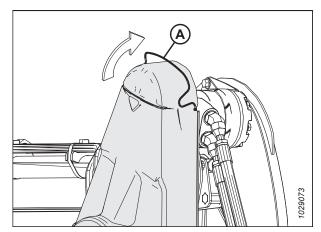


Figure 3.23: Upper Drive Cover

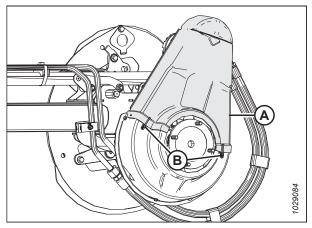


Figure 3.24: Upper Drive Cover

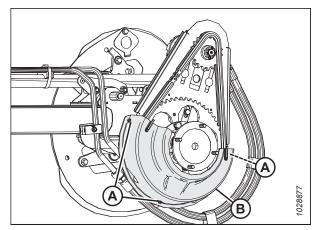


Figure 3.25: Lower Drive Cover

 Unclip upper cover (A) from the lower cover at locations (B), and remove the upper cover. Keep the two clips engaged on the lower cover.

7. If necessary, remove lower cover (B) by removing three bolts (A).

Installing Reel Drive Cover

The reel drive cover protects the drive components from weather and debris. The header should not be operated without the cover.



To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Position lower drive cover (B) (if previously removed) onto the reel drive, and secure with three bolts (A).

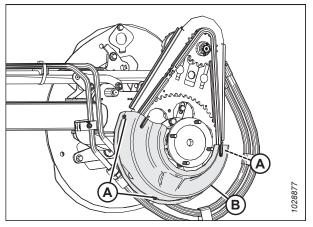


Figure 3.26: Lower Drive Cover

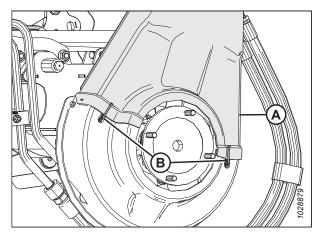


Figure 3.27: Upper Drive Cover

3. Position upper cover (A) onto the reel drive, and secure in place using two clips (B) on the lower cover.

4. Rotate spring latch (A) down to secure the upper cover to the reel drive. Ensure V-shaped loop (C) points down, and the spring end remains inserted into back plate hole (B) on both sides of the reel drive.

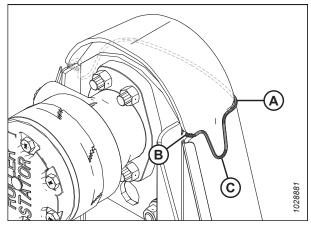


Figure 3.28: Reel Drive

3.2.5 Flex Linkage Cover

Plastic covers are attached to the header frame to protect the header wing balance mechanism from debris and weather.

Removing Inboard Flex Linkage Covers

Remove the flex linkage covers to access the header wing balance mechanism or the hydraulic lines.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Lower the header fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Remove hair pin (A) and lynch pin (B) that secure flex linkage cover (C) to the backtube.
- 4. Slide flex linkage cover (C) inboard, then lift it upward and remove it.

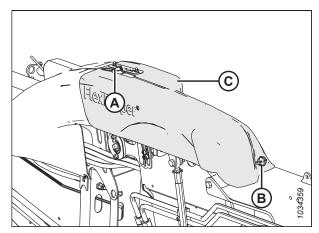


Figure 3.29: Inboard Flex Linkage Cover – Left Side

Installing Inboard Flex Linkage Covers

The inboard flex linkage covers protect the header wing balance mechanism from debris and weather. They are secured to the header with pins.

- 1. Lower flex linkage cover (A) over the linkage. Ensure that slots (B) line up with tabs (C) and (D).
- 2. Slide the flex linkage cover outboard so that tab (D) extends beyond the slot.

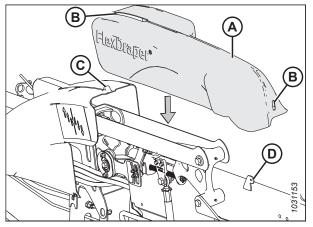


Figure 3.30: Inboard Flex Linkage Cover – Left Side

3. Secure flex linkage cover (C) with hair pin (A), and lynch pin (B).

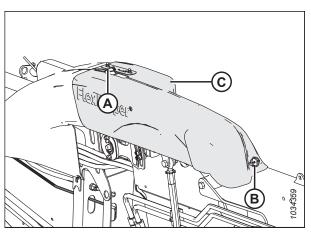


Figure 3.31: Inboard Flex Linkage Cover – Left Side

Removing Outboard Flex Linkage Covers

Remove the flex linkage covers to access the header wing balance mechanism or the hydraulic lines.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Lower the header fully.
- 2. Shut down the engine, and remove the key from the ignition.

- 3. **FD245 and FD250 headers:** Remove screws (A) and the nuts (not shown) securing middle linkage cover (B) to the bracket (not shown).
- 4. **FD245 and FD250 headers:** Remove pin (C). Remove the cover by lifting it up and over frame protrusions.

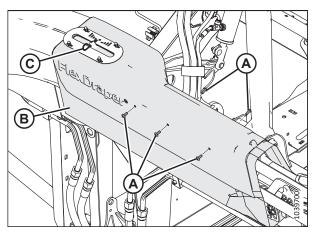


Figure 3.32: Middle Linkage Cover – FD245 and FD250 Headers Only

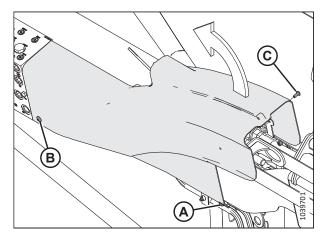


Figure 3.33: Outboard Linkage Cover

hydraulic line clamp.

5.

a.

Remove linkage cover as follows:

b. Remove screw (B) and nut (not shown). The Nyloc nut fits into a hex shape spot in the hydraulic line clamp but it is removable.

Remove screw (A). The nut is integrated into the

- c. Remove screw (C) and hex nut.
- d. Lift cover away from wing lock handle.

Installing Outboard Flex Linkage Covers

Flex linkage covers protect the header wing balance mechanism from debris and weather.

1. Position the left outboard linkage cover so that hole (A) goes over the wing lock.

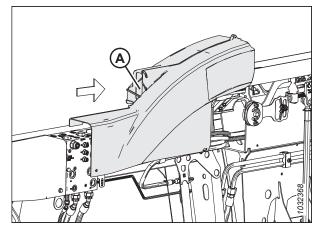


Figure 3.34: Left Linkage Cover – Rear of Header

2. Seat the notch in the cover behind bracket (A) on the backtube, and line up the end so that it is flush with manifold (B).

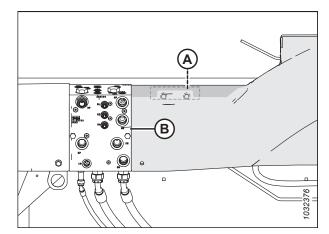


Figure 3.35: Left Linkage Cover – Rear of Header

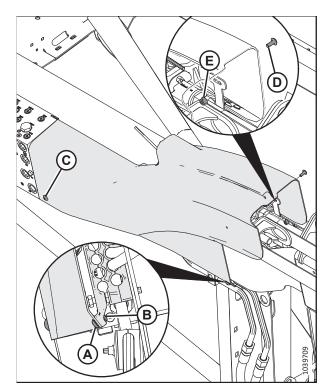


Figure 3.36: Outboard Linkage Cover – Rear of Header

- 3. Secure the outboard linkage cover as follows:
 - a. Install screw (A) and Nyloc nut (B). The nut fits into a hex shape indent in the hydraulic line clamp.
 - b. Install screw (C). The nut is integrated into the bracket.
 - c. Install screw (D) and hex nut (E) to secure the front of the cover to the bracket.

- 4. **FD245 and FD250 headers:** Place middle linkage cover (B) over flex linkage bracket and outboard linkage cover.
- 5. **FD245 and FD250 headers:** Install screws (A) and the nuts (not shown) securing middle linkage cover (B) to the bracket.
- 6. **FD245 and FD250 headers:** Install pin (C) through hole in the tab that protrudes through the flex indicator.

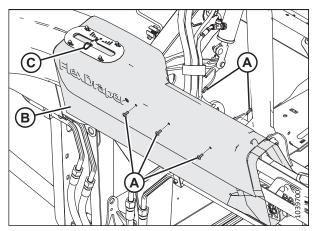


Figure 3.37: Middle Linkage Cover – FD245 and FD250 Headers Only

3.2.6 Daily Start-Up Check

Perform these checks daily before attempting to operate the machine.

- Clear the area of bystanders. Keep children away from machinery. Walk around the machine to be sure no one is under, on, or close to it.
- Wear close-fitting clothing and protective shoes equipped with slip-resistant soles.
- Remove potentially hazardous objects from the machine and from the surrounding area.
- Carry with you any protective clothing and personal safety devices that could be necessary through the day. Do NOT take chances. Personal safety devices that may be needed include a hard hat, protective glasses or goggles, heavy gloves, a respirator or filter mask, or wet weather gear.

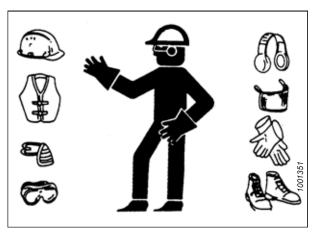


Figure 3.38: Safety Devices

• Protect against noise. Wear a suitable hearing protection device such as ear muffs or ear plugs to protect against objectionable or uncomfortably loud noises.

Perform the following checks before starting the machine:

1. Check the machine for leaks and for any parts that are missing, damaged, or nonfunctional.

IMPORTANT:

Use the proper procedure when searching for pressurized fluid leaks. For instructions, refer to 4.2.5 Checking Hydraulic Hoses and Lines, page 265.

- 2. Clean all the lights and reflectors on the machine.
- 3. Perform all daily maintenance. For instructions, refer to 4.2.1 Maintenance Schedule/Record, page 260.

3.3 Break-in Period

During the first 50 hours of operation, certain systems on the header will require extra attention. Follow this procedure to ensure the service life of the header.

NOTE:

Until you become familiar with the sound and feel of your new header, be extra alert and attentive.

DANGER

Before investigating an unusual sound or attempting to correct a problem, shut off the engine and remove the key from the ignition.

After attaching the header to the combine for the first time, follow these steps:

1. Operate the machine with the reels, drapers, and knives running slowly for five minutes. Watch and listen **FROM THE OPERATOR'S SEAT** for binding or interfering parts.

NOTE:

The reels and side drapers will not operate until hydraulic oil fills the lines.

2. Refer to 4.2.2 Break-In Inspection, page 263 and perform all specified tasks.

3.4 Shutting down the Combine

Before leaving the operator's seat for any reason, shut down the combine.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To shut down the combine, do the following:

- 1. Park on level ground whenever possible.
- 2. Lower the header fully.
- 3. Place all controls in NEUTRAL or PARK.
- 4. Disengage the header drive.
- 5. Lower and fully retract the reel.
- 6. Shut down the engine, and remove the key from the ignition.
- 7. Wait for the machine to stop moving.

3.5 Cab Controls

The header is controlled from the combine cab.

Be sure all bystanders are clear of the machine before starting the engine or engaging any header drives.

For instructions, refer to your combine operator's manual for identification of the following in-cab controls:

- Header engage/disengage control
- Header height
- Header angle
- Ground speed
- Reel speed
- Reel height
- Reel fore-aft position

3.6 Header Attachment/Detachment

This chapter includes instructions for configuring, attaching, and detaching the header.

Combine	Refer to
Case IH 7010/8010, 120, 130, 230, 240, 250 Series	3.6.1 Case IH Combines, page 52

NOTE:

Ensure the applicable functions (e.g., Automatic Header Height Control [AHHC], draper header option, hydraulic center-link option, hydraulic reel drive) are enabled on the combine and the combine computer. Failure to do so may result in improper header operation.

3.6.1 Case IH Combines

To attach the header to or detach it from a Case IH combine, follow the relevant procedure in this section.

Attaching Header to Case IH Combine

Each combine model has specific instructions on how to attach the header.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. On the combine, ensure lock handle (A) is positioned so hooks (B) can engage the float module.

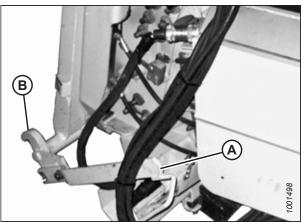


Figure 3.39: Feeder House Locks

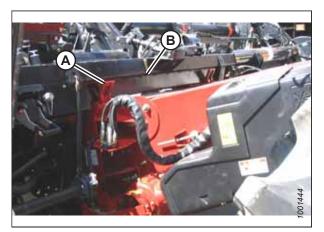


Figure 3.40: Combine and Float Module

DANGER

Ensure that all bystanders have cleared the area.

- 2. Start the engine and slowly drive the combine up to the header until feeder house saddle (A) is directly under float module top cross member (B).
- 3. Raise the feeder house slightly to lift the header, ensuring the feeder saddle is properly engaged in the float module frame.
- 4. Shut down the engine, and remove the key from the ignition.

- 5. On the left side of the feeder house, lift lever (A) on the float module and push handle (B) on the combine to engage locks (C) on both sides of the feeder house.
- 6. Push down on lever (A) so the slot in the lever engages the handle and locks the handle in place.
- 7. If lock (C) does not fully engage the pin on the float module, loosen bolts (D) and adjust lock. Retighten the bolts.

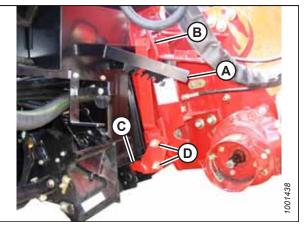


Figure 3.41: Combine and Float Module

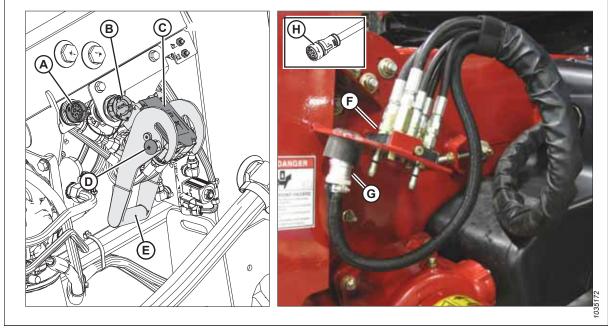


Figure 3.42: Multicoupler and Electrical Connections

- 8. Remove the caps from connectors C81B (A) and (B).
- 9. Remove the cover from hydraulic receptacle (C). Clean the receptacle mating surfaces.
- 10. Push in lock button (D) and pull handle (E) to the fully open position.
- 11. Remove hydraulic quick coupler (F) from the storage plate on the combine. Clean the mating surface of the coupler.
- 12. Position coupler (F) onto the float module receptacle (C), and push handle (E) to engage the pins into the receptacle.
- 13. Push handle (E) to closed position until lock button (D) snaps out.
- 14. Remove combine connector (G) from the storage location on the combine and connect it to receptacle (B). Turn the collar on the connector to lock it in place.
- 15. Remove cab control kit connector C81A (H) from the storage location on the combine and connect it to C81B (A). Turn the collar on the connector to lock it in place.

53

16. Pull driveline collar (A) back to release the driveline from the support bracket. Remove the driveline from the support bracket.

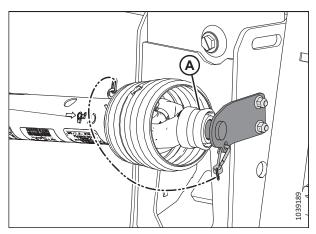


Figure 3.43: Driveline in Storage Position – Driveline MACB7038 or MACB7039

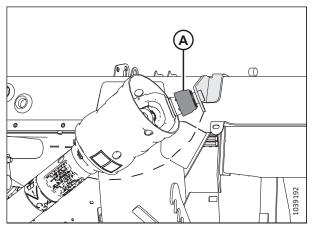


Figure 3.44: Driveline in Storage Position – Sidehill/ Hillside Driveline MAC7180, MACB7181, or MAC7326

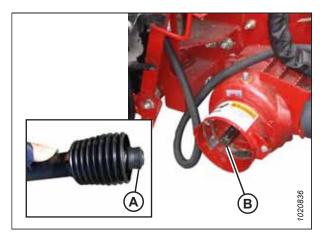


Figure 3.45: Combine Output Shaft

17. Pull back collar (A) on the end of the driveline, and push the driveline onto combine output shaft (B) until the collar locks.

 Disengage the float locks by pulling each float lock handle (A) away from the float module and setting it in unlocked position (B).

NOTE:

The illustration at the right shows the right side of the header. The float lock on the left side of the header is opposite.

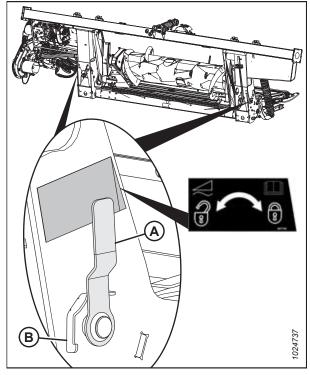


Figure 3.46: Float Lock Handle

Detaching Header from Case IH Combine

The header will need to be physically disconnected from the combine, and the hydraulic and electrical connections removed.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

- 1. Park the combine on a level surface.
- 2. Position the header slightly above the ground.
- 3. Shut down the engine, and remove the key from the ignition.

IMPORTANT:

If transport wheels are installed, the header may be detached in either transport or field mode. If detaching with the wheels in field mode, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. For instructions, refer to *Adjusting EasyMove™ Transport Wheels, page 120*.

IMPORTANT:

If stabilizer wheels are installed, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. For instructions, refer to *Adjusting Stabilizer Wheels, page 119*.

 Engage the float locks by pulling each float lock handle (A) away from the float module and setting it in locked position (B).

NOTE:

The illustration at the right shows the right side of the header. The float lock on the left side of the header is opposite.

5. Push back collar (A) on the end of the driveline and pull the driveline out of combine output shaft (B) until the collar disengages.

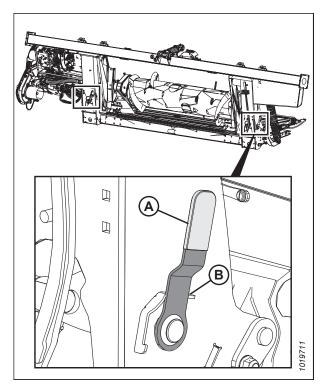


Figure 3.47: Float Lock Handle

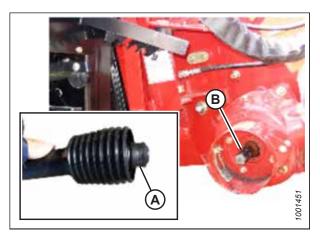


Figure 3.48: Driveline

 Store the driveline on driveline support bracket (B) by pulling back collar (A) on the driveline and fitting it onto support bracket (B). Release the collar so it locks into place on the support bracket.

7. Remove electrical connector (A) and replace cover (B).

8. Push in lock button (C) and pull handle (D) to release

multicoupler (E).

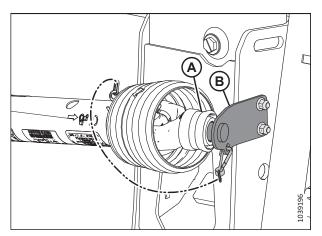


Figure 3.49: Driveline in Storage Position – Driveline MACB7038 or MACB7039

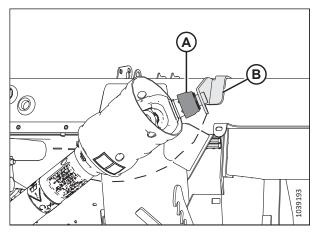


Figure 3.50: Driveline in Storage Position – Sidehill/ Hillside Driveline MACB7180, MACB7181, or MACB7326


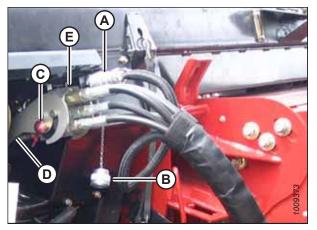


Figure 3.51: Multicoupler

- 9. Position multicoupler (A) onto storage plate (B) on the combine.
- 10. Place electrical connector (C) in storage cup (D).

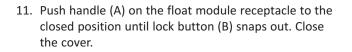

- 12. Lift lever (A) and pull, and lower handle (B) to disengage feeder house/float module lock (C).
- WARNING

Ensure that all bystanders have cleared the area.

- 13. Lower the feeder house until it disengages the float module support.
- 14. Back the combine away slowly from the float module.

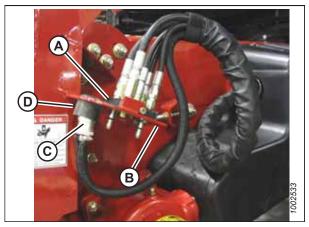


Figure 3.52: Multicoupler Storage

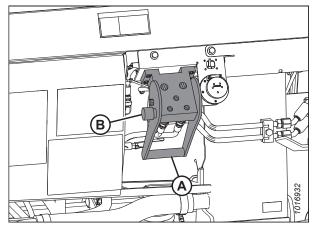


Figure 3.53: Float Module Receptacle

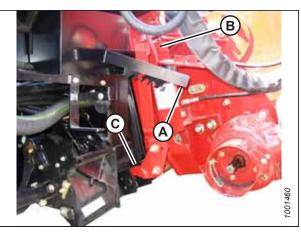


Figure 3.54: Feeder House Locks

3.6.2 Attaching Header to / Detaching Header from FM200 Float Module

To attach the float module to, or detach it from, the header, follow the relevant procedure. These procedures require that the float module remain attached to the combine.

NOTE:

If the header is equipped with transport wheels, the float module can be attached to and detached from the header while it is in either transport or field mode.

Detach the float module from the header only in the following cases:

- The header is needed for use on a windrower
- A different, float module-compatible header will be attached to the combine
- The header or float module need service or repair, and the service or repair procedures require that the float module be detached from the header

Detaching Header from FM200 Float Module

The FM200 Float Module attaches to the header, giving it the ability to closely follow ground contours. If necessary, the FM200 can be disconnected from the header.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

Keep hands clear of the area between guards and knife at all times.

Wear heavy gloves when working around or handling knives.

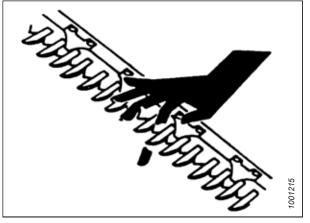


Figure 3.55: Cutterbar Hazard

- 1. Start the engine, and then lower header.
- Increase clearance under the float module feed draper by tilting the header and fully extending cylinder (A) until indicator (B) is at position E.
- 3. Raise the reel to its full height.
- 4. Stop the engine, and then remove key from the ignition.
- 5. Engage the reel safety props.

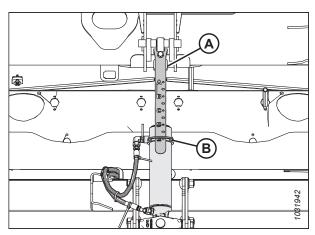


Figure 3.56: Center-Link

59

6. Move lever (A) to lock position to engage wing locks.

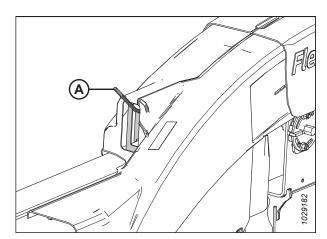


Figure 3.57: Wing Lock – Left Side Shown

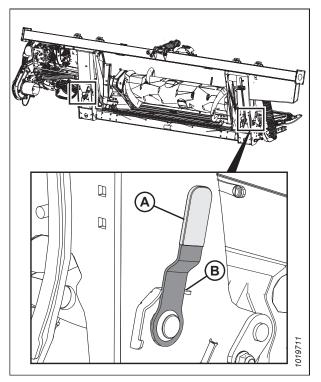


Figure 3.58: Float Lock

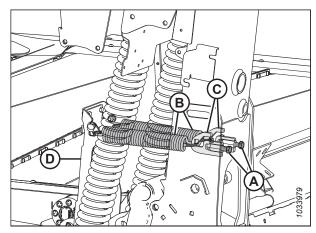


Figure 3.59: Trim Springs – Left side

 Engage the float locks by pulling each float lock handle (A) away from the float module and setting it in locked position (B).

- 8. On the back of the float module frame, remove bolts (A) to release the tension on trim springs (B).
- 9. Unhook trim springs (B) from spring tensioners (C). Allow the springs to hang on balance channel (D).
- 10. Reinstall the springs tensioner's onto the float module. Secure with bolts (A).
- 11. Repeat on the opposite side.

12. Remove two bolts (A) and fillers (B) from transition pan support angle (C). Repeat on opposite side.

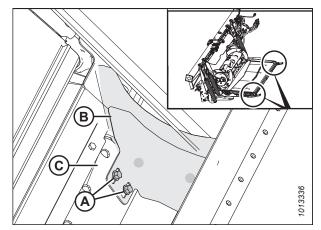


Figure 3.60: Fillers

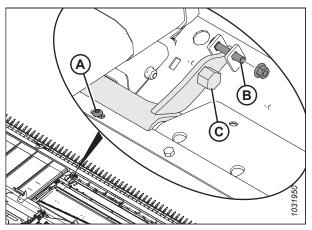


Figure 3.61: Float Module Latch

- 13. Remove and retain screw (A).
- 14. Remove the M10 nut from bolt (B).
- 15. Use a 24 mm wrench on hex bolt (C) to rotate latch downwards and slightly raise the feed deck to remove bolt (B).
- 16. Rotate latch up and back to lower the float module deck and disengage the transition pan tube.
- 17. Install screw (A).
- 18. Repeat for the opposite side of the feed draper deck.



Ensure that all bystanders have cleared the area.

- 19. Disengage the reel safety props, start the engine, lower the reel, and fully raise the header.
- 20. Stop the engine, remove the key from the ignition, and engage the combine safety props.
- 21. Loosen nut and bolt (A), and disengage hook (B) from leg on both sides of float module.

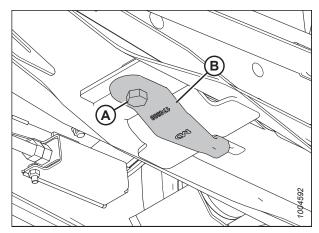


Figure 3.62: Float Module Underside

22. Rotate hook (B) 90° for storage, and retighten bolt (A) and nut.

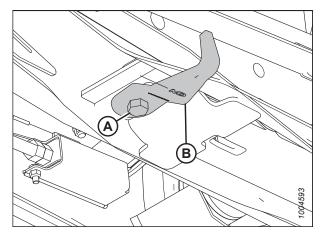


Figure 3.63: Float Module Underside


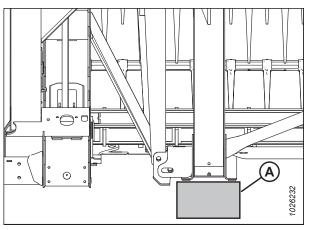


Figure 3.64: Header Leg on Block

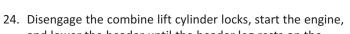

23. Place a 150 mm (6 in.) block (A) under the header leg. This

and lower the header until the header leg rests on the block or stabilizer wheels are on the ground.

will assist with disconnecting the center-link.

- 25. Disconnect the hydraulic center-link as follows:
 - a. Remove lynch pin (A) and pin (B).

NOTE:

Be careful when removing pin, there may or may not be washer(s) installed on both sides of the center-link.

- b. Lift center-link (C) clear of the bracket.
- c. Reinstall pin (B) on the bracket, and secure with lynch pin (A).

NOTE:

It may be necessary to raise or lower the feeder house to adjust the length of the center-link and relieve excess load on the center-link.

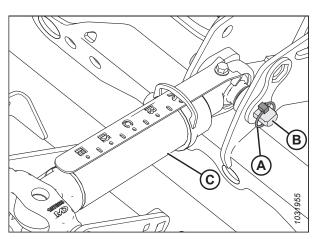


Figure 3.65: Hydraulic Center-Link

NOTE:

- If on the ground: Push reel fully forward to reduce oil loss.
- If on transport: Pull reel fully back.
- 26. Disconnect electrical connector (A).

NOTE:

If colored plastic ties are missing from any of the hoses, replace them before disconnecting the hoses.

27. Disconnect all of the hoses between the module and manifold (B). Immediately cap the hose ends to prevent oil loss.

NOTE:

Mark hose locations to assist with reattachment.

28. Store and secure hoses on float module frame.

Ensure that all bystanders have cleared the area.

- 29. Start the engine.
- 30. Lower the float module to disengage it from the header.
- 31. Slowly back away in a straight line from header.
- 32. Shut down the engine, and remove the key from the ignition.

Attaching Header to FM200 Float Module

The FD2 Series headers can be attached to the float module from either field or transport configuration.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

The transport wheels can be used to support the header. For instructions, refer to *Adjusting EasyMove™ Transport Wheels*, page 120.

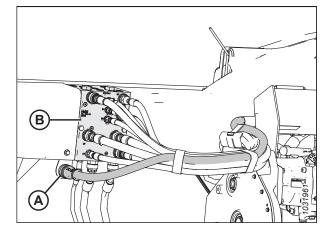


Figure 3.66: Header Connections

1. Prop up hydraulic center-link (A) with a pin (or equivalent tool) at location (B) as shown.

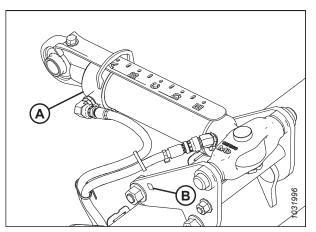


Figure 3.67: Center-Link

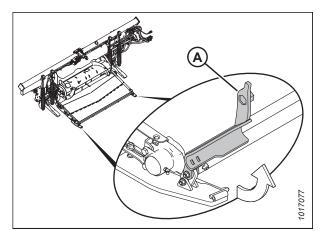


Figure 3.68: Latch

2. Ensure latches (A) at the front corners of the float module are rotated towards the rear of the float module.

Ensure that all bystanders have cleared the area.

- Start engine, and lower the combine feeder house so that float module arms (A) are aligned with header balance channels (B).
- 4. Drive slowly forward, maintaining alignment between float module arms (A) and header balance channels (B).
- Keep float module arms (A) just under balance channels (B) to ensure float module legs seat properly in the header linkage supports at location (C).

IMPORTANT:

Keep hydraulic hoses clear to prevent damage when driving into header.

6. Continue forward until float module arms (A) contact stops in balance channels (B).

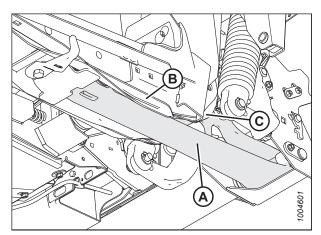


Figure 3.69: Float Module Underside

- 7. Adjust length of center-link (A) using the header angle hydraulics to approximately align center-link eye (B) with the hole in the header bracket.
- 8. Shut down the engine, and remove the key from the ignition.
- 9. Remove lynch pin (C) and pull pin (D)partially out of the bracket.

NOTE:

Be careful when pulling out the pin, there may be some washers on the pin to remove excessive play from the center-link when installed.

- 10. Remove the item used to prop up center-link (A).
- 11. Align center-link eye with the hole in the bracket, place any washers (A) removed from Step *9, page 65*, onto each side of the center-link while reinserting pin.

NOTE:

There may be none, one, or two washers.

12. Secure pin (B) with lynch pin (C).



Always connect center-link before fully raising header.

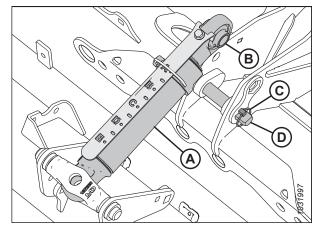


Figure 3.70: Center-Link

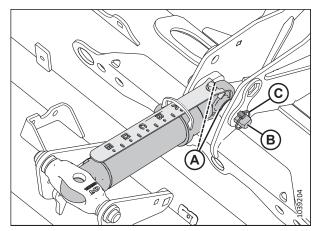


Figure 3.71: Center-Link

Ensure that all bystanders have cleared the area.

- 13. Start the engine.
- 14. Raise the float module while making sure the float module legs engage the header legs.
- 15. Raise the header fully.
- 16. Shut down the engine, and remove the key from the ignition.
- 17. Engage the header's safety props. For instructions, refer to the combine operator's manual.

18. Loosen nut and bolt (A), and reposition hook (B) as shown to engage float module arm. Tighten bolt and nut (A).

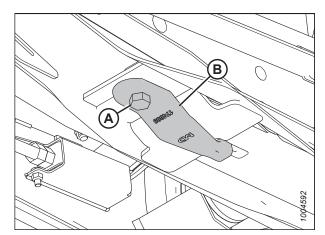


Figure 3.72: Float Module Underside

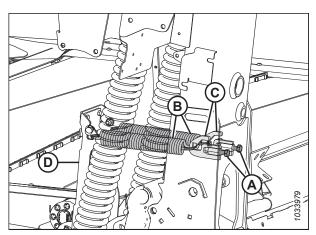


Figure 3.73: Trim Springs – Left side

- 19. On the back of the float module frame, remove bolts (A), and spring tensioners (C).
- 20. Hook trim springs (B) that are hang on balance channel (D) to spring tensioners (C).
- 21. Reinstall the springs tensioners onto the float module. Tighten bolts (A) all the way.
- 22. Repeat on the opposite side.

Wear heavy gloves when working around or handling knives.

- 23. Remove screw (A) and remove nut and bolt (B) from both sides of the opening to allow the attachment of the float module deck.
- 24. Rotate latch (C) forward and down to engage the transition pan tube.

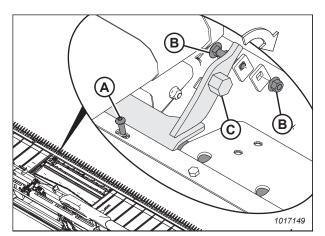


Figure 3.74: Float Module Latch

- 25. Use a 24 mm (15/16 in.) wrench on hex bolt (C) to rotate latch downwards and slightly raise the feed deck. Install nut and bolt (B) to lock the latch position.
- 26. Install screw (A).
- 27. Repeat for the opposite side of the feed draper deck.

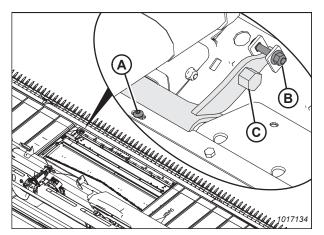


Figure 3.75: Float Module Latch

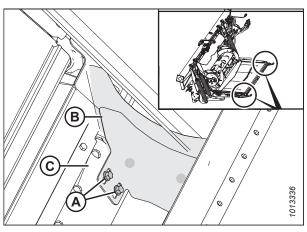


Figure 3.76: Fillers

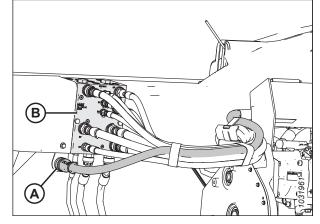


Figure 3.77: Header Connections

28. Install fillers (B) on transition pan support angle (C) using two bolts (A).

NOTE:

Ensure that there is no contact with the side draper slats.

- 29. Use a clean cloth to remove debris from couplers and receptacles.
- 30. Attach the following hydraulic hoses to manifold (B):
 - Knife pressure to port KP on manifold (orange cable tie)
 - Knife return to port KR on manifold (blue cable tie)
 - Draper pressure to port DP on manifold (green cable tie)
 - Draper return to port DR on manifold (red cable tie)
 - Case drain to port CD on manifold
- 31. Attach electrical connector C20C (A).
- 32. Check the float and confirm the header is level. For instructions, refer to the following:
 - 3.9.3 Header Float, page 126
 - 3.11 Leveling Header, page 233

Be sure all bystanders are clear of machine before starting engine or engaging any header drives.

- 33. Start the combine and perform the following inspections:
 - Raise and lower the reel to ensure the hoses are properly connected.
 - Run the header to ensure the hoses are properly connected.

34. Check for leaks.

3.7 Header Setup

For optimal performance, the header must be configured specifically for various harvesting conditions and crops.

3.7.1 Header Attachments

Optional attachments can improve performance in specific conditions or add features to the header. Optional attachments can be ordered and installed by your MacDon Dealer.

Refer to 5 Options and Attachments, page 477 for descriptions of available items.

3.7.2 Header Settings

The following tables provide a guideline for setting up the header for various harvesting conditions and crops.

For information on the reel settings, refer to 3.7.4 Reel Settings, page 82.

For information on configuring the FM200 auger, refer to 3.8.1 FM200 Feed Auger Configurations, page 87.

NOTE:

Increase side draper speed for increased performance due to increased crop material or due to increased ground speed.

-		- 1	,				
Stubble Height	102 mm (<4 in.)						
Stabilizer Wheels ⁴	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods	Draper Speed Setting ⁵	Header Angle ^{6, 7}	Reel Cam	Reel Speed % ⁸	Reel Position	Upper Cross Auger
Light	Off	8	B – C	3	10–15	6 or 7	Not required
Normal	On	7	B – C	2	10	6 or 7	Not required
Неаvу	On	7	B – C	2	10	6 or 7	Recommended
Lodged	Off	2	B – C	3 or 4	5-10	4 or 5	Not required
Stubble Height	102–203 mm (4–8 in.)	in.)					
Stabilizer Wheels	As required						
Skid Shoe Position	Down for lodged cr	Down for lodged crop conditions, middle or down for other crop conditions	e or down for other	crop conditions			
Crop Condition	Divider Rods	Draper Speed Setting ⁵	Header Angle ^{6, 7}	Reel Cam	Reel Speed % ⁸	Reel Position	Upper Cross Auger
Light	Off	8	B – C	4	10–15	6 or 7	Not required
Normal	On	7	A	2	10	6 or 7	Not required
Неаvу	On	7	A	2	10	6 or 7	Recommended
Lodged	Off	7	D	3 or 4	5-10	4 or 5	Not required

Table 3.1 Recommended FD2 Series / FM200 Draper Header Settings for Cereals

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

Setting on FM200 draper control.

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. 8. 7. 6. . 8.

Cutting height is controlled with a combination of skid shoes and header angle.

Percentage above ground speed.

Table 3.1 Recomm	Table 3.1 Recommended FD2 Series / FM200 Draper Header Settings for Cereals (continued)	FM200 Draper Head	er Settings for Cerea	als (continued)			
Stubble Height	203 mm + (8 in. +)						
Stabilizer Wheels As required	As required						
Skid Shoe Position	Not applicable						
Crop Condition	Divider Rods	Draper Speed Setting ⁵	Header Angle ^{6, 7}	Reel Cam	Reel Speed % ⁸	Reel Position	Upper Cross Auger
Light	Off	8	A	4	10–15	6 or 7	Not required
Normal	On	7	A	2	10	6 or 7	Not required
Неаvу	On	7	B – C	2	10	6 or 7	Not required
Lodged	Off	7	B – C	3 or 4	5-10	4 or 5	Not required

Lentils
for
Settings
ber Header
Draper
/ FM200
FD2 Series /
Recommended
Table 3.2

			0				
Stubble Height	On ground						
Stabilizer Wheels ⁹	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods	Draper Speed Setting ¹⁰	Header Angle ^{11, 12}	Reel Cam	Reel Speed % ¹³	Reel Position	Upper Cross Auger
Light	On	8	B – C	2	5-10	6 or 7	Not required
Normal	On	7	B – C	2	10	6 or 7	Not required
Неаvу	On	7	B – C	2	10	6 or 7	Not required
Lodged	On	7	D	2	5–10	6 or 7	Not required

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing. Setting on FM200 draper control. 9. 11. 13.

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

Cutting height is controlled with a combination of skid shoes and header angle.

Percentage above ground speed.

Table 3.3 Recomme	Table 3.3 Recommended FD2 Series / FM200 Draper		Header Settings for Peas				
Stubble Height	On ground						
Stabilizer Wheels ¹⁴	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods	Draper Speed Setting ¹⁵	Header Angle ^{16, 17}	Reel Cam	Reel Speed % ¹⁸	Reel Position	Upper Cross Auger
Light	On	7	B – C	2	5–10	6 or 7	Recommended
Normal	On	7	B – C	2	10	6 or 7	Recommended
Неаvу	On	7	B – C	2	10	4 or 5	Recommended
Lodged	On	7	D	2	5-10	4 or 5	Recommended

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing. Setting on FM200 draper control. 14. 15. 16. 13.

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. Cutting height is controlled with a combination of skid shoes and header angle.

Percentage above ground speed.

			,				
Stubble Height	102–203 mm (4–8 in.)	in.)					
Stabilizer Wheels ¹⁹	As required						
Skid Shoe Position	Down for light or h	Down for light or heavy crop conditions, middle or down for normal or lodged crop conditions	middle or down for	· normal or lodged ci	rop conditions		
Crop Condition	Divider Rods	Draper Speed Setting ²⁰	Header Angle ^{21, 22}	Reel Cam	Reel Speed % ²³	Reel Position	Upper Cross Auger
Light	On	7	A	2	5-10	6 or 7	Recommended
Normal	On	7	B – C	1	10	6 or 7	Recommended
Неаvу	On	8	B – C	1	10	3 or 4	Recommended
Lodged	On	7	D	2	5–10	3 or 4	Recommended
Stubble Height	203 mm + (8 in. +)						
Stabilizer Wheels ¹⁹	As required						
Skid Shoe Position	Not applicable						
Crop Condition	Divider Rods	Draper Speed Setting ²⁰	Header Angle ^{21, 22}	Reel Cam	Reel Speed % ²³	Reel Position	Upper Cross Auger
Light	On	7	А	2	5–10	6 or 7	Recommended
Normal	On	7	B – C	2	10	6 or 7	Recommended
Неаvу	On	8	B – C	1 or 2	10	3 or 4	Recommended
Lodged	On	7	D	2 or 3	5–10	3 or 4	Recommended

Table 3.4 Recommended FD2 Series / FM200 Draper Header Settings for Canola

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing. Setting on FM200 draper control.

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. 19. 20. 21. 23.

Cutting height is controlled with a combination of skid shoes and header angle.

Percentage above ground speed.

Stubble Height	102 mm (<4 in.)						
Stabilizer Wheels ²⁴	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods ²⁵	Draper Speed Setting ²⁶	Header Angle ^{27, 28}	Reel Cam	Reel Speed % ²⁹	Reel Position	Upper Cross Auger
Light	Rice divider rod	4	D	2	10–15	6 or 7	Not required
Normal	Rice divider rod	4	B – C	2	10	4 or 5	Not required
Неаvу	Rice divider rod	4	B – C	2	10	4 or 5	Not required
Lodged	Rice divider rod	4	D	2	5–10	4 or 5	Not required
Stubble Height	102–203 mm (4–8 in.)	in.)					
Stabilizer Wheels ²⁴	As required						
Skid Shoe Position	Middle or down						
Crop Condition	Divider Rods ²⁵	Draper Speed Setting ²⁶	Header Angle ^{27, 28}	Reel Cam	Reel Speed % ²⁹	Reel Position	Upper Cross Auger
Light	Rice divider rod	4	D	3	10–15	6 or 7	Not required
Normal	Rice divider rod	4	B – C	3	10	6 or 7	Not required
Неаvу	Rice divider rod	4	B – C	3	10	6 or 7	Not required
Lodged	Rice divider rod	4	D	4	5–10	6 or 7	Not required

nded ED3 Series / EM200 Draner Header Settings for California Rice Tahla 3 5 Raco Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

The rice divider rod is available. Rice divider rod not required on both ends of header.

Setting on FM200 draper control. 24. 25. 26. 27. 28. 29.

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. Cutting height is controlled with a combination of skid shoes and header angle.

Percentage above ground speed.

OPERATION

Table 3.5 Recommended FD2 Series / FM200 Draper Header Settings for California Rice (continued)

		•					
Stubble Height	203 mm + (8 in. +)						
Stabilizer Wheels ²⁴	As required						
Skid Shoe Position	Not applicable						
Crop Condition	Divider Rods ²⁵	Draper Speed Setting ²⁶	Header Angle ^{27, 28}	Reel Cam	Reel Speed % ²⁹	Reel Position	Upper Cross Auger
Light	Rice divider rod	4	А	3	10–15	6 or 7	Not required
Normal	Rice divider rod	4	B – C	3	10	6 or 7	Not required
Неаvу	Rice divider rod	4	B – C	3	10	6 or 7	Not required
Lodged	Rice divider rod	4	D	4	5-10	6 or 7	Not required

		- 1	יי				
Stubble Height	51-152 mm (2-6 in.)	(.,					
Stabilizer Wheels ³⁰	As required						
Skid Shoe Position	Middle or down						
Crop Condition	Divider Rods	Draper Speed Setting ³¹	Header Angle ^{32, 33}	Reel Cam	Reel Speed % ³⁴	Reel Position	Upper Cross Auger
Light	Off	9	D	2 or 3	10–15	6 or 7	Not required
Normal	Off	9	B – C	2 or 3	10	6 or 7	Not required
Неаvу	Off	9	B – C	2 or 3	10	6 or 7	Not required
Lodged	Off	9	D	3 or 4	5–10	4 or 5	Not required
Stubble Height	152 mm + (6 in. +)						
Stabilizer Wheels ³⁰	As required						
Skid Shoe Position	Not applicable						
Crop Condition	Divider Rods	Draper Speed Setting ³¹	Header Angle ^{32, 33}	Reel Cam	Reel Speed % ³⁴	Reel Position	Upper Cross Auger
Light	Off	9	А	2 or 3	10–15	6 or 7	Not required
Normal	Off	9	B – C	2 or 3	10	6 or 7	Not required
Неаvу	Off	6	B – C	2 or 3	10	6 or 7	Not required
Lodged	off	9	D	3 or 4	5–10	4 or 5	Not required

Table 3.6 Recommended FD2 Series / FM200 Draper Header Settings for Delta Rice

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing. Setting on FM200 draper control.

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. 30. 31. 33. 33.

Cutting height is controlled with a combination of skid shoes and header angle.

Percentage above ground speed.

Table 3.7 Recomme	Table 3.7 Recommended FD2 Series / FM200 Draper		Header Settings for Edible Beans	Beans			
Stubble Height	On ground						
Stabilizer Wheels ³⁵	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods	Draper Speed Setting ³⁶	Header Angle ^{37, 38}	Reel Cam	Reel Speed % ³⁹	Reel Position	Upper Cross Auger
Light	On	8	D	2	5-10	6 or 7	Not required
Normal	On	7	B – C	2	10	6 or 7	Not required
Неаvу	On	7	B – C	2	10	6 or 7	Not required
Lodged	On	7	D	2	5-10	6 or 7	Not required

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing. Setting on FM200 draper control. 35. 36. 37. 33.

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

Cutting height is controlled with a combination of skid shoes and header angle. Percentage above ground speed.

		•)				
Stubble Height	51–153 mm (2–6 in.)	(.					
Stabilizer Wheels ⁴⁰	As required						
Skid Shoe Position	Down for lodged cr	Down for lodged crop conditions, middle or down for other crop conditions	e or down for other	crop conditions			
Crop Condition	Divider Rods	Draper Speed Setting ⁴¹	Header Angle ^{42, 43}	Reel Cam	Reel Speed % ⁴⁴	Reel Position	Upper Cross Auger
Light	On	8	B – C	2	5–10	6 or 7	Not required
Normal	On	7	А	2	10	6 or 7	Not required
Неаvу	On	7	B – C	2	10	6 or 7	Not required
Lodged	On	7	D	2	5–10	6 or 7	Not required

Table 3.8 Recommended FD2 Series / FM200 Draper Header Settings for Flax

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing. Setting on FM200 draper control. 40.

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. 41. 42. 44.

Cutting height is controlled with a combination of skid shoes and header angle.

Percentage above ground speed.

3.7.3 Optimizing Header for Straight-Combining Canola

Ripe canola can be straight-combined, but most varieties are susceptible to pod shatter and subsequent seed loss. This section provides information on the recommended attachments, settings, and adjustments to optimize FD2 Series FlexDraper[®] Headers for straight-combining canola to reduce seed loss.

Recommended attachments

To optimize the header for straight-combining canola, make the following modifications:

- Install a full-length upper cross auger
- Install vertical knives

NOTE:

Each kit includes installation instructions and the necessary hardware. For more information, refer to 5 Options and Attachments, page 477.

Recommended settings

To optimize the header for straight-combining canola, make the following adjustments:

- Relieve the tension on the auger spring. For instructions, refer to 3.8.5 Checking and Adjusting Feed Auger Springs, page 116.
- Set the reel speed so that it is equal to the combine's ground speed. Increase the speed as needed For instructions, refer to 3.9.6 Reel Speed, page 152.
- Set the side draper speed to position six on in-cab side draper speed control. For instructions, refer to 3.9.8 Side Draper Speed, page 154.
- Adjust the reel height so that fingers just engage the crop. For instructions, refer to 3.9.10 Reel Height, page 158.
- Adjust the reel fore-aft position. For instructions, refer to Adjusting Reel Fore-Aft Position, page 163.
- Move the reel fore-aft cylinders to the alternative aft location. For instructions, refer to *Repositioning Fore-Aft Cylinders Double Reel, page 167* or *Repositioning Fore-Aft Cylinders Triple Reel, page 170*.
- Set the reel cam to position 1. For instructions, refer to Adjusting Reel Cam, page 178.
- Set auger to floating position. For instructions, refer to 3.8.4 Setting Auger Position, page 114.

3.7.4 Reel Settings

Refer to this procedure to learn how various combinations of reel position and cam setting affect the reel finger profile.

Table 3.9 FD2 Series Recommended Reel Settings

Cam Setting Number (Finger Speed Gain)	Reel Position Number	Reel Finger Pattern			
1 (0%)	6 or 7	Store			
2 (20%)	6 or 7	101B20			

Cam Setting Number (Finger Speed Gain)	Reel Position Number	Reel Finger Pattern			
3 (30%)	3 or 4				
4 (35%)	2 or 3	101822			

Table 3.9 FD2 Series Recommended Reel Settings (continued)

NOTE:

- Adjust the reel forward to get closer to the ground while tilting the header back. Fingers/tines will dig into the ground at extreme reel-forward positions, so adjust the skid shoes or header angle to compensate. Adjust the reel rearward to position the reel farther away from the ground when tilting the header forward.
- Header tilt can be increased to position the reel closer to the ground, or decreased to position the reel farther from the ground, while keeping material flowing onto drapers.
- To leave the maximum amount of stubble in lodged crop, raise the header and increase the header tilt to keep the reel close to the ground. Position the reel fully forward.
- The reel may have to be moved back to prevent lumps or plugging on the cutterbar in thinner crops.
- Minimum crop carrying capacity (the minimum area of exposed draper between the reel and the header backsheet) occurs with the reel in the farthest aft position.
- Maximum crop carrying capacity (the maximum area of exposed draper between the reel and the header backsheet) occurs with the reel in the farthest forward position.
- Due to the nature of the cam action, the tip speed of the fingers/tines at the cutterbar becomes higher than that of the reel speed at higher cam settings. For more information, refer to Table *3.9, page 82*.

3.7.5 Floating Crop Divider Settings – Optional

Floating crop dividers can be adjusted for different crop conditions.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

For instructions on how to make adjustments to the floating crop divider, refer to *Adjusting Floating Crop Dividers, page 190*. For settings, refer to the applicable stubble height table below.

	Header Angle ⁴⁵	Stubble Height	Header Main Shoes	DownStop	Fore Aft Position	Top Deflector Height	Side Deflector Height	Top Deflector Whisker
Normal	А	125 mm 5 inch	Down	2	1	1	С	In
	А	125 mm 5 inch	Down	2	3	1	С	In
	E	50 mm 2 inch	Down	1	1	1.5	С	In
	E	50 mm 2 inch	Down	1	3	1.5	С	In
Lodged	А	125 mm 5 inch	Down	2	3	1	С	Out
	А	125 mm 5 inch	Down	2	4	1	С	Out
	E	50 mm 2 inch	Down	1	3	2	D	Out
	E	50 mm 2 inch	Down	1	4	2	D	Out
	А	125 mm 5 inch	Down	2	4	3	D	Out
Severely Lodged	А	125 mm 5 inch	Down	2	5	4	D	Out
	E	50 mm 2 inch	Down	1	4	3	С	Out
	E	50 mm 2 inch	Down	1	5	4	С	Out

Table 3.10 Stubble Height 50 mm to 125 mm (2 in. to 5 in.)

45. A (min) – E (max)

	Header Angle ⁴⁵	Stubble Height	Header Main Shoes	DownStop	Fore Aft Position	Top Deflector Height	Side Deflector Height	Top Deflector Whisker
	А	100 mm 4 inch	MID	2	1	1	С	In
Normal	А	100 mm 4 inch	MID	2	3	1	С	In
	E	20 mm 3/4 inch	MID	1	1	1	С	In
	E	20 mm 3/4 inch	MID	1	3	1	С	In
	А	100 mm 4 inch	MID	2	3	1	С	Out
Lodged	А	100 mm 4 inch	MID	2	4	2	С	Out
	E	20 mm 3/4 inch	MID	1	3	1	D	Out
	E	20 mm 3/4 inch	MID	1	4	2	D	Out
	А	100 mm 4 inch	MID	2-3	4	3	D	Out
Severely Lodged	А	100 mm 4 inch	MID	2-3	5	4	D	Out
	E	20 mm 3/4 inch	MID	1	4	3	С	Out
	E	20 mm 3/4 inch	MID	1	5	4	С	Out

Table 3.11 Stubble Height 20 mm to 100 m	nm (3/4 in. to 4 in.)
--	-----------------------

	Header Angle ⁴⁵	Stubble Height	Header Main Shoes	DownStop	Fore Aft Position	Top Deflector Height	Side Deflector Height	Top Deflector Whisker
	А	50 mm 2 inch	Up	2	1-3	1	С	In
Normal	А	50 mm 2 inch	Up	2	1-3	1	С	In
	E	16 mm 5/8 inch	Up	1	1	2	С	In
	E	16 mm 5/8 inch	Up	1	3	1	С	In
	А	50 mm 2 inch	Up	2	3	1	С	Out

	Header Angle ⁴⁵	Stubble Height	Header Main Shoes	DownStop	Fore Aft Position	Top Deflector Height	Side Deflector Height	Top Deflector Whisker
Lodged	А	50 mm 2 inch	Up	3	4	1	С	Out
	E	16 mm 5/8 inch	Up	1	3-4	2	D	Out
	E	16 mm 5/8 inch	Up	1	3-4	2	D	Out
	А	50 mm 2 inch	Up	2-3	4	3	D	Out
Severely Lodged	А	50 mm 2 inch	Up	2-3	5	4	D	Out
	E	16 mm 5/8 inch	Up	1	4	2.5	С	Out
	E	16 mm 5/8 inch	Up	1	5	4	С	Out

 Table 3.12
 Stubble Height 16 mm to 50 mm (5/8 in. to 2 in.) Cutterbar on Ground (continued)

3.8 Float Module Setup

The following sections outline the recommended float module setup guidelines for your specific combine model and crop type; however, the recommendations cannot cover all conditions.

If feeding problems develop with the float module, refer to 6 Troubleshooting, page 493.

3.8.1 FM200 Feed Auger Configurations

The FM200 feed auger can be configured to suit various crop conditions; there are five configurations available.

Ultra Narrow configuration: Ultra Narrow configuration uses 8 long bolt-on flightings (4 on the left and 4 on the right) and 18 auger fingers. This optional configuration may improve feeding performance on combines with narrow feeder houses. It may also be helpful when harvesting rice.

NOTE:

Dimensions (A) and (B) are the same for both ends of the auger. They should be within 15 mm (9/16 in.) of the numbers given.

NOTE:

You will need to drill holes in the flighting and in the drum to install the extra flighting.

For more information on converting to Ultra Narrow configuration, refer to *Ultra Narrow Configuration – Auger Flighting, page 89*.

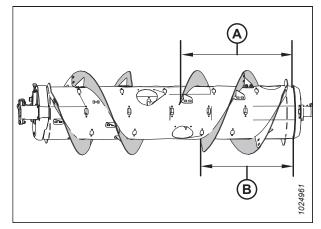


 Figure 3.78: Ultra Narrow Configuration – Rear View

 A - 760 mm (29 15/16 in.)
 B - 602 mm (23 11/16 in.)

Narrow configuration: The narrow configuration uses 4 long bolt-on flightings (2 on the left and 2 on the right) and 18 feed auger fingers.

NOTE:

Dimensions (A) and (B) are the same for both ends of the auger. They should be within 15 mm (9/16 in.) of the numbers given.

Narrow configuration is an optional configuration for the following combines:

 Case 2166/88, 2344/66/77/88, 2577/88, 5/6/7088, 5/6/ 7130, 5/6/7140, 5/6/7150

For more information on converting to Narrow configuration, refer to *Narrow Configuration – Auger Flighting, page 93*.

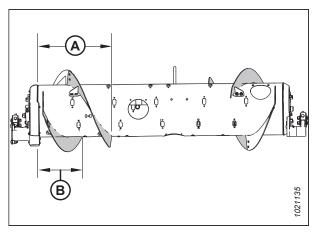


 Figure 3.79: Narrow Configuration – Rear View

 A - 514 mm (20 1/4 in.)
 B - 356 mm (14 in.)

Medium configuration: The medium configuration uses 4 short bolt-on flightings (2 on the left and 2 on the right) and 22 feed auger fingers.

NOTE:

Dimensions (A) and (B) are the same for both ends of the auger. They should be within 15 mm (9/16 in.) of the numbers given.

Medium configuration is a standard configuration for the following combines:

 Case IH 2166/88, 2344/66/77/88, 2577/88, 5/6/7088, 5/6/ 7130, 5/6/7140,5/6/7150,7/8/9230, 7/8/9240, 7/8/9250

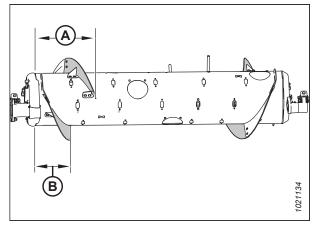


 Figure 3.80: Medium Configuration – Rear View

 A - 410 mm (16 1/8 in.)
 B - 260 mm (10 1/4 in.)

For more information on converting to Medium configuration, refer to *Medium Configuration – Auger Flighting, page 96*.

Wide configuration: The wide configuration uses 2 short bolt-on flightings (1 on the left and 1 on the right) and 30 feed auger fingers.

NOTE:

Dimensions (A) and (B) are the same for both ends of the auger. They should be within 15 mm (9/16 in.) of the numbers given.

NOTE:

This configuration may increase combine capacity on wide feeder house combines in certain crop conditions.

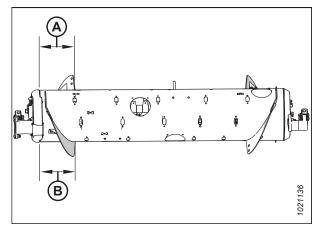


Figure 3.81: Wide Configuration – Rear View A - 257 mm (10 1/8 in.) B - 257 mm (10 1/8 in.)

For more information on converting to Wide configuration, refer to Wide Configuration – Auger Flighting, page 98.

Ultra Wide configuration: The Ultra Wide configuration uses only factory-welded flighting (A) is responsible for conveying the crop. No bolt-on flighting is installed and a total of 30 auger fingers are recommended for this configuration.

Ultra Wide configuration is an optional configuration for wide feeder house combines.

NOTE:

This configuration may improve feeding for wide feeder house combines.

For more information on converting to Ultra Wide configuration, refer to *Ultra Wide Configuration – Auger Flighting, page 101.*

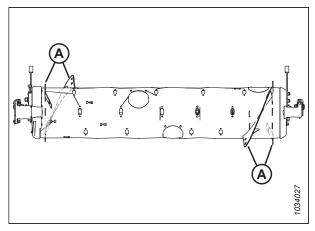


Figure 3.82: Ultra Wide Configuration – Rear View

Ultra Narrow Configuration – Auger Flighting

Ultra Narrow configuration uses eight long bolt-on flightings (four on the left and four on the right), and 18 auger fingers are recommended.

NOTE:

You will need to drill holes in the flighting and in the drum to install the four additional flightings.

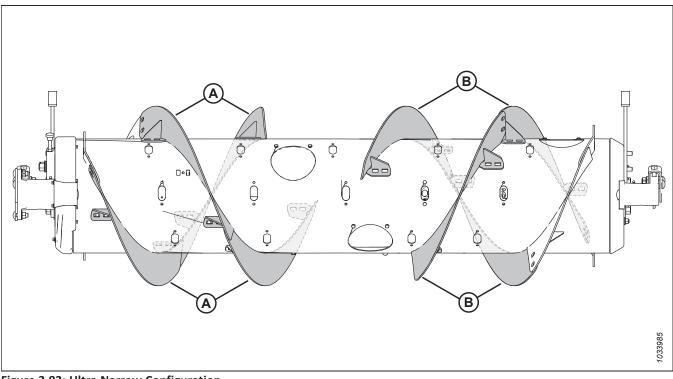


Figure 3.83: Ultra Narrow Configuration

A - Left Long Flighting (MAC287889)

B - Right Long Flighting (MAC287890)

To convert to Ultra Narrow configuration from Narrow Configuration:

One flighting kit (MAC357234 or MACB7345⁴⁶) and some holedrilling are required to install flightings (A). Add or remove auger fingers as necessary to optimize feeding for your combine and crop conditions.

IMPORTANT:

Extra hardware is included in these kits. Be sure to use the correct hardware at the correct location to prevent damage and to maximize performance.

- For flighting installation instructions, refer to *Installing Bolt-On Flighting, page 105.*
- To install the additional flightings that require hole drilling, refer to Installing Additional Bolt-On Flighting – Ultra Narrow Configuration Only, page 108.
- For finger installation/removal instructions, refer to 3.8.3 Installing Feed Auger Fingers, page 112 and 3.8.2 Removing Feed Auger Fingers, page 110.

To convert to Ultra Narrow configuration from Medium, Wide, or Ultra Wide configuration:

Two flighting kits (MAC357234 or MACB7345⁴⁶) and some hole-drilling is required to convert to this configuration.

You will need to replace existing short flightings (A)⁴⁷ with long flightings (B). Add or remove auger fingers as necessary to optimize feeding for your combine and crop conditions.

IMPORTANT:

Extra hardware is included in these kits. Be sure to use the correct hardware in the correct location to prevent damage and to maximize performance.

- For flighting replacement instructions, refer to *Removing Bolt-On Flighting, page 103* and *Installing Bolt-On Flighting, page 105*.
- To install the additional flightings that require hole drilling, refer to Installing Additional Bolt-On Flighting Ultra Narrow Configuration Only, page 108.
- For finger installation/removal instructions, refer to 3.8.3 Installing Feed Auger Fingers, page 112 and 3.8.2 Removing Feed Auger Fingers, page 110.

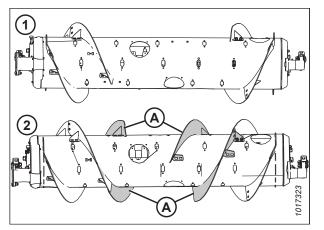


Figure 3.84: Auger Configurations – Rear View 1 - Narrow Configuration 2 - Ultra Narrow Configuration

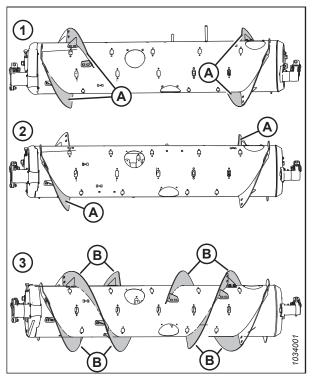


Figure 3.85: Auger Configurations – Rear View 1 - Medium Configuration 2 - Wide Configuration 3 - Ultra Narrow Configuration

^{46.} MAC357234 is available only through MacDon Parts. MACB7345 is available only through Whole Goods. Both kits contain wear-resistant flightings.

^{47.} The quantity of existing short flightings is either 0, 2, or 4, depending on the current configuration.

NOTE:

If converting from Ultra Wide configuration, there is no existing bolt-on flighting to remove because that configuration uses only the factory-welded flighting (A).

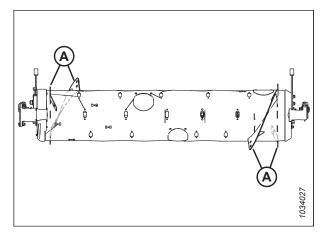


Figure 3.86: Ultra Wide Configuration

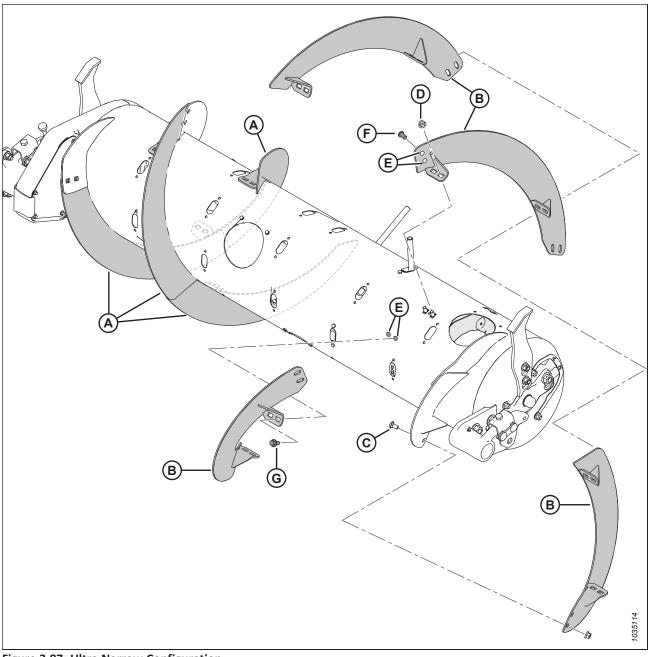


Figure 3.87: Ultra Narrow Configuration

- A Left Long Flighting (MAC287889)
- B Right Long Flighting (MAC287890)
- E Drilled Holes 11 mm (7/16 in.) ⁴⁸
- C M10 x 20 mm Carriage Bolt (MAC136178)
- F M10 x 20 mm Button Head Bolt (MAC135723)⁴⁹


G - M10 x 20 mm Flange Head Bolt (MAC152655)⁵⁰

D - M10 Center Lock Flange Nut (MAC135799)

- 48. Each of the four additional flightings require six drilled holes to install (four in the auger and two in the adjacent flighting).
- 49. Used on the holes drilled in the existing flighting.
- 50. Used on the holes drilled in the auger.

Narrow Configuration – Auger Flighting

Narrow configuration uses four long bolt-on flightings (two on the left and two on the right), and 18 auger fingers.

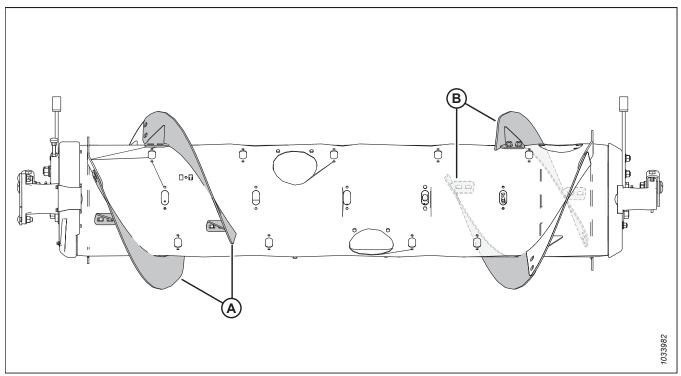



B - Right Long Flighting (MAC287890)

A - Left Long Flighting (MAC287889)

To convert to Narrow configuration from Ultra Narrow Configuration:

Remove four flightings (A) from the auger and install additional auger fingers. A total of 18 auger fingers is recommended for this configuration.

- For flighting removal instructions, refer to *Removing Bolt-On Flighting, page 103*.
- For finger installation instructions, refer to *3.8.3 Installing Feed Auger Fingers, page 112.*

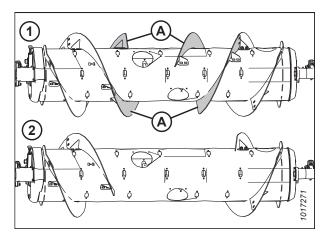


 Figure 3.89: Auger Configurations – Rear View

 1 - Ultra Narrow Configuration
 2 - Narrow Configuration

To convert to Narrow configuration from Medium, Wide, or Ultra Wide configuration:

One flighting kit (MAC357234 or MACB7345⁵¹) is required. You will need to replace any of the existing short flightings (A)⁵² with long flightings (B) and remove the extra auger fingers. A total of 18 auger fingers is recommended for this configuration.

IMPORTANT:

NOTE:

the factory-welded flighting (A).

Extra hardware is included in these kits. Be sure to use the correct hardware in the correct location to prevent damage and to maximize performance.

- For flighting replacement instructions, refer to *Removing Bolt-On Flighting, page 103* and *Installing Bolt-On Flighting, page 105*.
- For finger removal instructions, refer to 3.8.2 Removing Feed Auger Fingers, page 110.

If converting from Ultra Wide configuration, there is no existing bolt-on flighting to remove because that configuration uses only

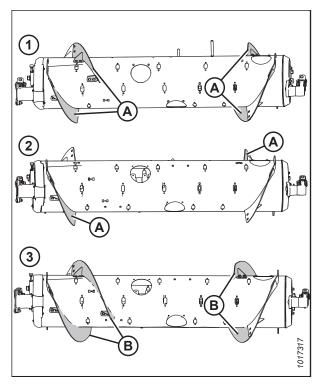


Figure 3.90: Auger Configurations – Rear View

- 1 Medium Configuration 3 - Narrow Configuration
- 2 Wide Configuration

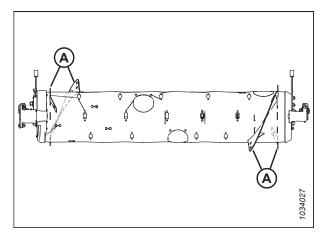


Figure 3.91: Ultra Wide Configuration

^{51.} MAC357234 is available only through MacDon Parts. MACB7345 is available only through Whole Goods. Both kits contain wear-resistant flightings.

^{52.} The quantity of existing short flightings is either 0, 2, or 4, depending on the current configuration.

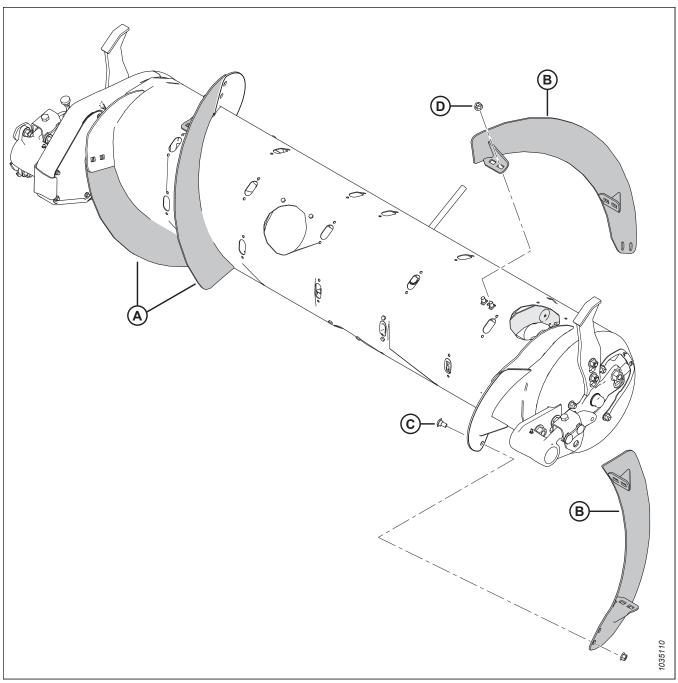


Figure 3.92: Narrow Configuration


A - Left Long Flighting (MAC287889)

C - M10 x 20 mm Carriage Bolt (MAC136178)

- B Right Long Flighting (MAC287890)
- D M10 Center Lock Flange Nut (MAC135799)

Medium Configuration – Auger Flighting

Medium configuration uses four short bolt-on flightings (two on the left and two on the right), and 22 auger fingers are recommended.

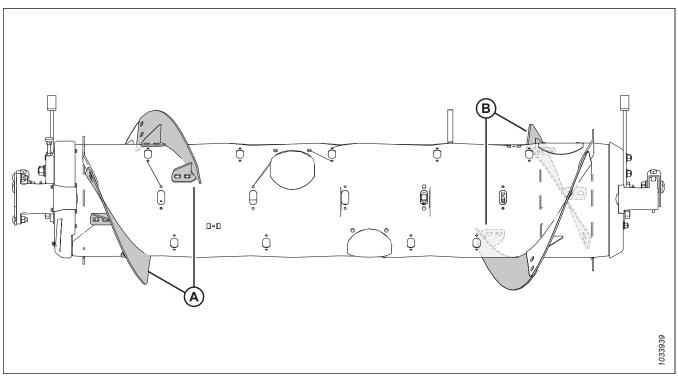



A - Left Short Flighting (MAC287888)

B - Right Short Flighting (MAC287887)

To convert to Medium configuration from Wide configuration:

One flighting kit (MAC357233 or MACB7344⁵³) is required. You will need to install new flightings (A) and remove the extra auger fingers. A total of 22 auger fingers is recommended for this configuration.

- For flighting installation instructions, refer to *Installing Bolt-On Flighting, page 105.*
- For finger removal instructions, refer to *3.8.2 Removing Feed Auger Fingers, page 110.*

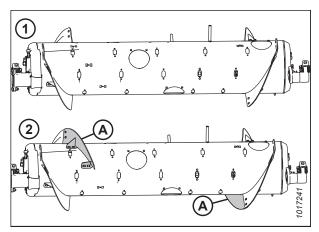


Figure 3.94: Auger Configurations – Rear View 1 - Wide Configuration 2 - Medium Configuration

^{53.} MAC357233 is available only through MacDon Parts. MACB7344 is available only through Whole Goods. Both kits contain wear-resistant flightings.

To convert to Medium configuration from Narrow or Ultra Narrow configuration:

Two flighting kits (MAC357233 or MACB7344⁵³) are required. You will need to replace long flightings (A)⁵⁴ with short flightings (B) and install additional auger fingers. A total of 22 auger fingers is recommended for this configuration.

- For flighting replacement instructions, refer to *Removing Bolt-On Flighting, page 103* and *Installing Bolt-On Flighting, page 105*.
- For finger installation instructions, refer to *3.8.3 Installing Feed Auger Fingers, page 112.*

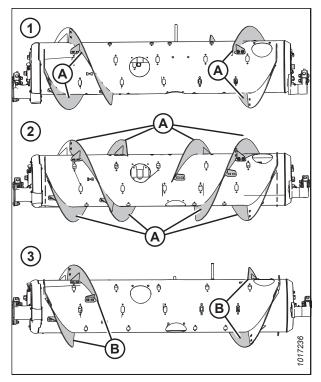


Figure 3.95: Auger Configurations – Rear View

- 1 Narrow Configuration 3 - Medium Configuration
- 2 Ultra Narrow Configuration


To convert to Medium configuration from Ultra Wide configuration:

Two flighting kits (MAC357233 or MACB7344⁵³) are required. You will need to install four short flightings onto the existing welded flightings (A) and remove the extra auger fingers. A total of 22 auger fingers is recommended for this configuration.

- For flighting installation instructions, refer to *Installing Bolt-On Flighting, page 105.*
- For finger removal instructions, refer to *3.8.2 Removing Feed Auger Fingers, page 110.*

Figure 3.96: Ultra Wide Configuration

^{54.} The quantity of existing long flightings is either 4 or 8, depending on the current configuration.

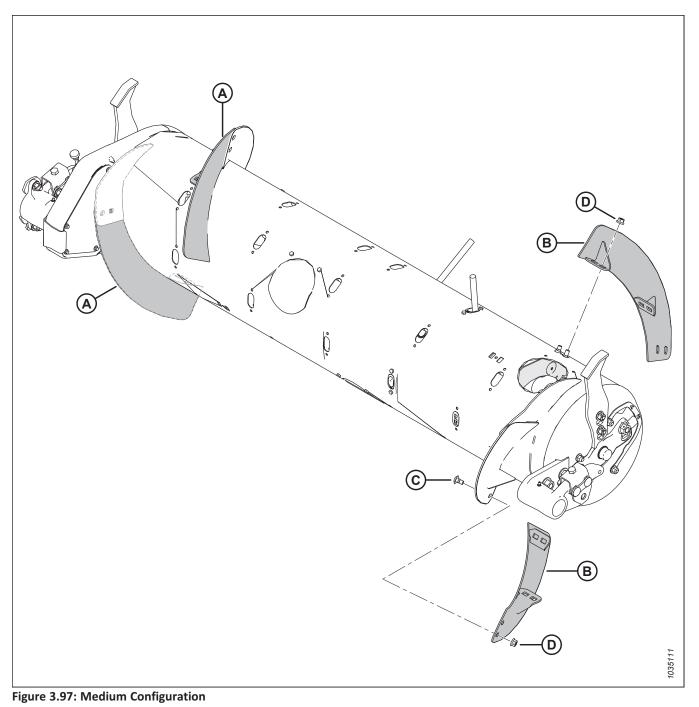

A - Left Short Flighting (MAC287888)

C - M10 x 20 mm Carriage Bolt (MAC136178)


- B Right Short Flighting (MAC287887)
- D M10 Center Lock Flange Nut (MAC135799)

Wide Configuration – Auger Flighting

Wide configuration uses two short bolt-on flightings (one on the left and one on the right), and 30 auger fingers are recommended.

NOTE:

This configuration may increase combine capacity on wide feeder house combines in certain crop conditions.

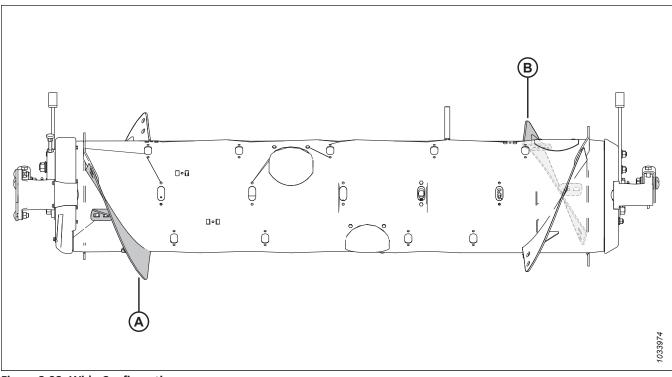



A - Left Short Flighting (MAC287888)

To convert to Wide configuration from Medium Configuration:

Remove existing flightings (A) from the auger and install additional auger fingers. A total of 30 auger fingers is recommended for this configuration.

- For flighting removal instructions, refer to *Removing Bolt-On Flighting, page 103*.
- For finger installation instructions, refer to 3.8.3 Installing Feed Auger Fingers, page 112.

B - Right Short Flighting (MAC287887)

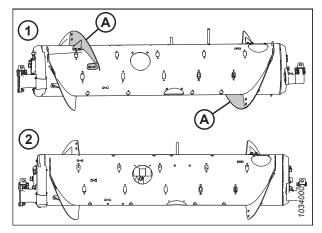


Figure 3.99: Auger Configurations – Rear View 1 - Medium Configuration 2 - Wide Configuration

To convert to Wide configuration from Ultra Wide configuration:

One flighting kits (MAC357233 or MACB7344⁵⁵) is required. You will need to install two short flightings onto the existing welded flightings (A). A total of 30 auger fingers is recommended for this configuration.

- For flighting installation instructions, refer to *Installing Bolt-On Flighting, page 105.*
- If required to remove auger fingers, refer to 3.8.2 Removing Feed Auger Fingers, page 110.

To convert to Wide configuration from Narrow or Ultra Narrow configuration:

One flighting kit (MAC357233 or MACB7344⁵⁵) is required. You will need to replace existing long flightings (A)⁵⁶ with short flightings (B) and install additional auger fingers. A total of 30 auger fingers is recommended for this configuration.

- For flighting replacement instructions, refer to *Removing Bolt-On Flighting, page 103* and *Installing Bolt-On Flighting, page 105*.
- For finger installation instructions, refer to 3.8.3 Installing Feed Auger Fingers, page 112.

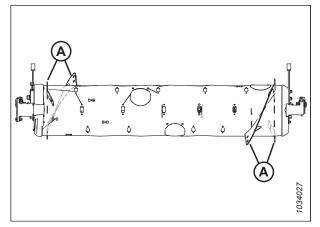


Figure 3.100: Ultra Wide Configuration


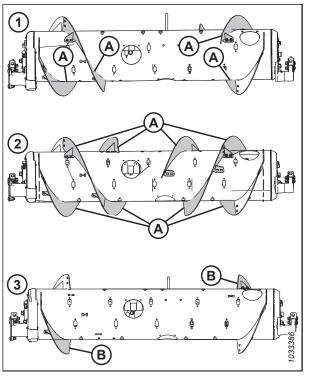


Figure 3.101: Auger Configurations – Rear View 1 - Narrow Configuration 3 - Wide Configuration 2 - Ultra Narrow Configuration

^{55.} MAC357233 is available only through MacDon Parts. MACB7344 is available only through Whole Goods. Both kits contain wear-resistant flightings.

^{56.} The quantity of existing long flightings is either 4 or 8, depending on the current configuration.

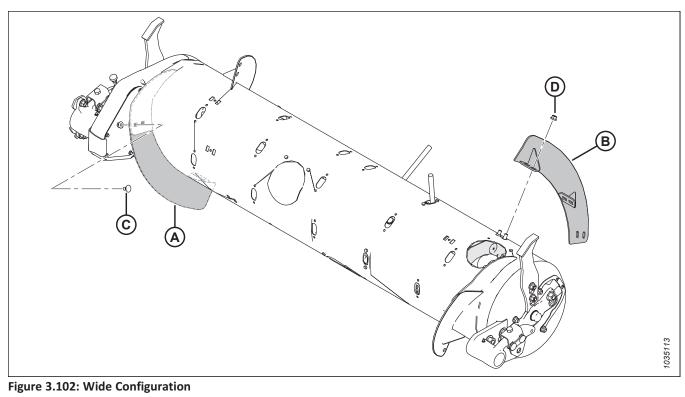

- A Left Short Flighting (MAC287888)
- C M10 x 20 mm Carriage Bolt (MAC136178)

- B Right Short Flighting (MAC287887)
- D M10 Center Lock Flange Nut (MAC135799)

Ultra Wide Configuration – Auger Flighting

Ultra Wide configuration uses no bolt-on flighting; only factory-welded flighting is responsible for conveying the crop. A total of 30 auger fingers is recommended for this configuration.

NOTE:

This configuration may increase combine capacity on wide feeder house combines in certain crop conditions.

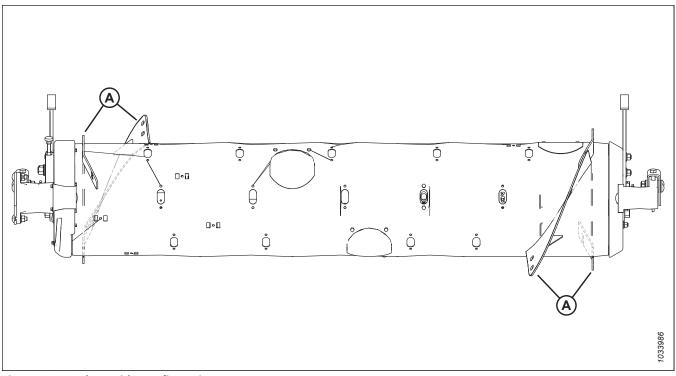


Figure 3.103: Ultra Wide Configuration

A - Factory-Welded Flighting

To convert to Ultra Wide configuration:

Remove all existing bolt-on flightings (A) from the auger and install additional auger fingers if required. A total of 30 auger fingers is recommended for this configuration.

- For flighting removal instructions, refer to *Removing Bolt-On Flighting, page 103*.
- For finger installation instructions, refer to 3.8.3 Installing Feed Auger Fingers, page 112.

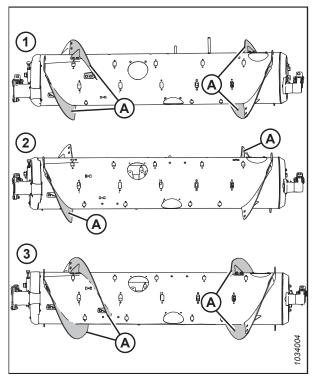


Figure 3.104: Auger Configurations – Rear View

2 - Wide Configuration

1 - Medium Configuration 3 - Narrow Configuration

Auger Flighting

The auger flighting on the FM200 can be configured for particular harvesting and crop conditions.

For instructions, refer to 3.8.1 FM200 Feed Auger Configurations, page 87 for combine/crop specific configurations.

Removing Bolt-On Flighting

The feed auger has removable flighting that can be customized to the different models of combines.

Before removing the bolt-on flighting, determine the quantity and type of flighting required. For information on the different flighting configurations, refer to 3.8.1 FM200 Feed Auger Configurations, page 87.

To remove bolt-on flighting, follow these steps:

- 1. To improve access to the feed auger, remove the float module from the combine.
- 2. Rotate the auger as needed.

NOTE:

The illustrations in this procedure show the feed auger separated from the float module for clarity. The procedure can be performed with the feed auger installed in the float module.

3. Remove bolts (A) and access cover (B). Retain these parts for reassembly. If necessary, remove multiple access covers.

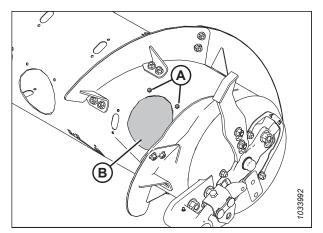


Figure 3.105: Auger Access Cover – Right Side

4. Remove bolts and nuts (B) and remove flighting (A).

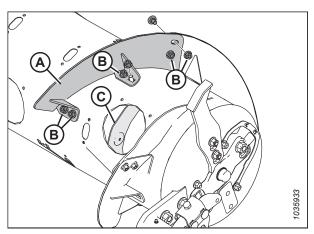


Figure 3.106: Short Flighting – Right Side

NOTE:

The illustration shows new long flighting (A) installed.

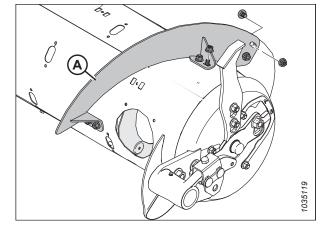


Figure 3.107: Long Flighting – Right Side

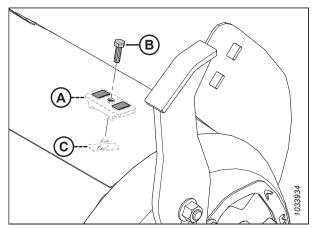


Figure 3.108: Installing Slot Plugs

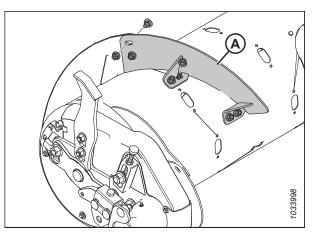


Figure 3.109: Short Flighting – Left Side

 Install slot plug (A) with M6 bolt (B) and tee nut (C) at each location from which the flighting was removed. Torque to 9 Nm (80 lbf·in).

NOTE:

6.

side of the auger.

If the plug bolts are **NOT** new, coat them with mediumstrength threadlocker (Loctite[®] 243 or equivalent) prior to installation.

Repeat this procedure to remove flighting (A) from the left

 Reinstall access cover(s) (A) using retained bolts (B) and the welded nuts inside the auger. Coat bolts with mediumstrength threadlocker (Loctite[®] 243 or equivalent) and torque to 9 Nm (80 lbf·in).

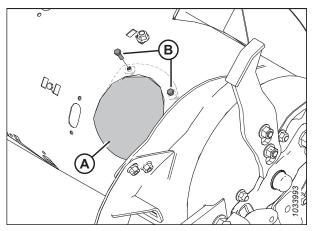


Figure 3.110: Access Cover – Right Side

Installing Bolt-On Flighting

The feed auger has removable flighting that can be customized to the different models of combines.

Before installing the bolt-on flighting, determine the quantity and type of flighting required. For information on the different flighting configurations, refer to 3.8.1 FM200 Feed Auger Configurations, page 87.

To install bolt-on flighting, follow these steps:

- 1. To improve access to the feed auger and ease installation, remove the float module from the combine.
- 2. Rotate the auger as needed.

NOTE:

The illustrations in this procedure show the feed auger separated from the float module for clarity. This procedure can be performed with the feed auger installed in the float module.

3. Remove bolts (A) and access cover (B). Retain for reassembly. If necessary, remove multiple access covers.

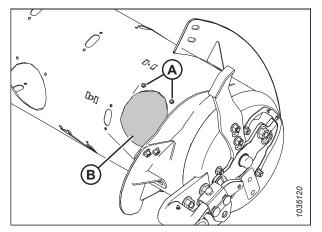


Figure 3.111: Auger Access Cover – Right Side

 Line up the new bolt-on flighting (A) in position to determine which slot plugs need to be removed from the auger. The new flighting overlaps on the outboard side of the adjacent flighting.

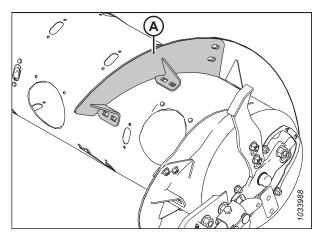


Figure 3.112: Right Side of Auger

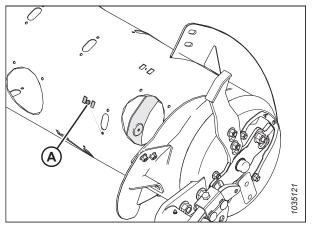


Figure 3.113: Right Side of Auger

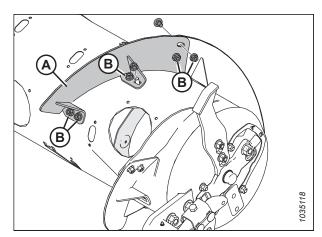


Figure 3.114: Short Flighting – Right Side

5. Remove applicable slot plugs(s) (A).

6. Install flighting (A) using M10 x 20 mm square neck carriage bolts and center lock nuts at locations (B).

IMPORTANT:

The bolt heads must be installed on the inside of the auger to prevent damage to the auger's internal components.

IMPORTANT:

The bolts that attach the flightings to each other must have the bolt heads on the inboard (crop side) of the flighting.

 Torque the six nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on the flighting, then torque them to 61 Nm (45 lbf·ft).

NOTE:

The illustration shows long flighting (A) installed.

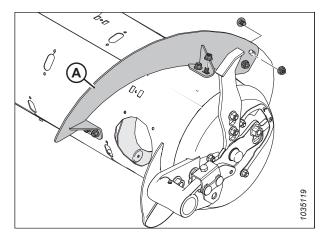


Figure 3.115: Long Flighting – Right Side

Beecol Beecol

Figure 3.116: Short Flighting – Left Side

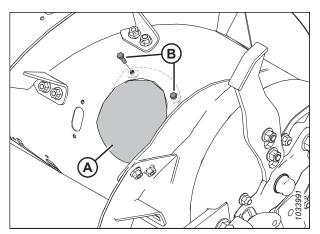


Figure 3.117: Access Cover – Right Side

8. Repeat the procedure to install flighting (A) on the left side of the auger.

NOTE:

Flighting performs best when no gaps are present. If desired, use silicone sealant to fill the gaps.

- Reinstall access cover(s) (A) using retained bolts (B) and the welded nuts inside the auger. Coat bolts with mediumstrength threadlocker (Loctite[®] 243 or equivalent) and torque to 9 Nm (80 lbf-in).
- 10. If converting to Ultra Narrow configuration and drilling is required to install the remaining flighting, proceed to *Installing Additional Bolt-On Flighting Ultra Narrow Configuration Only, page 108.*

Installing Additional Bolt-On Flighting – Ultra Narrow Configuration Only

When converting the feed auger to Ultra Narrow configuration, some hole drilling is required to install additional flighting.

NOTE:

This procedure assumes the feed auger is currently in Narrow configuration (4 long flightings [A] installed).

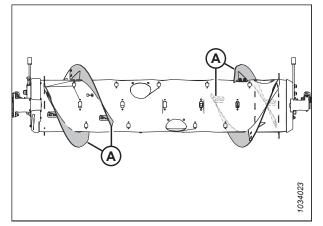


Figure 3.118: Narrow Configuration

To install the four additional long flightings for Ultra Narrow configuration, follow these steps:

- 1. To improve access to the feed auger and ease installation, remove the float module from the combine.
- 2. Rotate the auger as needed.

NOTE:

The illustrations in this procedure show the feed auger separated from the float module for clarity. This procedure can be performed with the feed auger installed in the float module.

- 3. Place new flighting (A) outboard of existing flighting (B) on the left side of the auger, as shown.
- 4. Mark hole locations (C) onto existing flighting (B).
- 5. Remove nearest access cover to existing flighting (B). Retain the hardware for reassembly.
- 6. Remove existing bolt-on flighting (B) from the auger. Retain the hardware for reassembly.

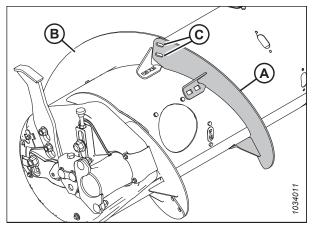


Figure 3.119: Left Side of Auger

- 7. Drill two 11 mm (7/16 in.) holes at the marked locations (A) on the existing flighting.
- 8. Reinstall the existing bolt-on flighting.

IMPORTANT:

Ensure the carriage bolt heads are on the inside of the auger to prevent damage to the internal components.

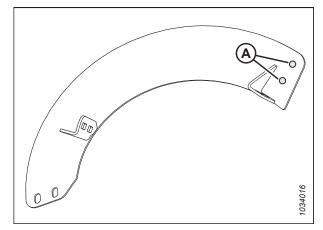


Figure 3.120: Drilling Locations

- Place new flighting (A) into position on the auger, outboard of existing flighting (B).
- 10. Secure with two M10 x 20 mm button head bolts and center lock nuts (C).

IMPORTANT:

Ensure the bolt heads are on the inboard side (crop side) and the nuts are on the outboard side of the flighting.

11. Stretch flighting (A) to fit the auger tube as shown. Use the slotted holes on the flighting to get the best fit around the auger tube.

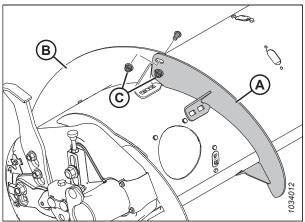


Figure 3.121: Left Side of Auger

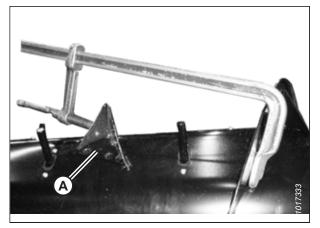


Figure 3.122: Flighting Stretched Axially

12. With the flighting in the desired position, mark four hole locations (A) and drill 11 mm (7/16 in.) holes in the auger tube.

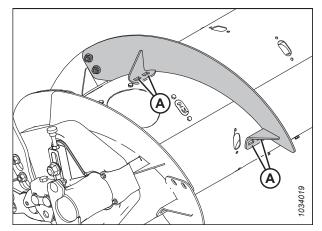


Figure 3.123: Flighting on Left Side of Auger

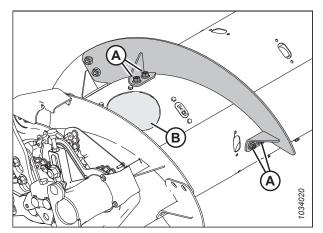


Figure 3.124: Left Side of Auger

- 13. Remove nearest access cover(s) (B). Retain the cover for reinstallation.
- 14. Secure the flighting to the auger at drilled holes (A) using four M10 x 20 mm flange head bolts and center lock nuts.
- 15. Repeat Step *2, page 108* to Step *14, page 110* for the other flighting on the left side of the auger.
- 16. Repeat Step *2, page 108* to Step *14, page 110* for both flightings on the right side of the auger.
- 17. Torque all flighting nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on the flighting, then torque the nuts and bolts to 61 Nm (45 lbf·ft).

NOTE:

Flighting performs best when there are no gaps between the flighting and the auger drum. If desired, use silicone sealant to fill any gaps.

- 18. Add or remove auger fingers as necessary to optimize feeding for your combine and crop conditions. For instructions, refer to *3.8.2 Removing Feed Auger Fingers, page 110* or *3.8.3 Installing Feed Auger Fingers, page 112*.
- If you are not adding or removing auger fingers, reinstall all access covers. Coat the retained bolts with mediumstrength threadlocker (Loctite[®] 243 or equivalent), then use them to secure the auger covers. Torque to 9 Nm (80 lbf·in).

3.8.2 Removing Feed Auger Fingers

The feed auger uses fingers to bring crop into the feeder house. The quantity of fingers varies for the different models of combines.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

IMPORTANT:

When removing auger fingers from the feed auger, work from outside inward. Make sure there is an equal number of fingers on each side of the auger.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the reel fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 5. Remove bolts (A) and access cover (B) closest to the finger you are removing. Retain parts for reinstallation.

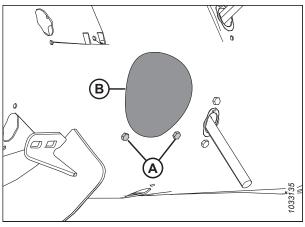
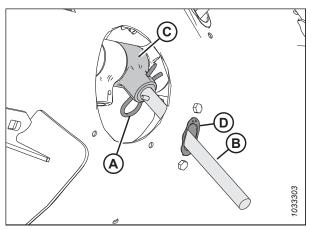



Figure 3.125: Auger Access Hole Cover

- 6. Remove finger as follows:
 - a. Remove hairpin (A). Pull finger (B), out of finger holder (C).
 - b. Push finger (B) through guide (D) and into the drum.Pull the finger out of the drum access hole.

NOTE:

If the finger is broken, remove any remnants from holder (C) and from inside the drum.



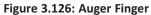

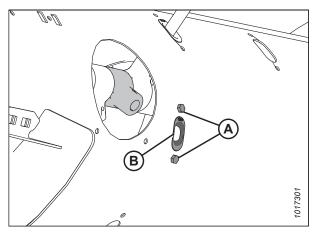



Figure 3.127: Auger Finger Hole

7. Remove and retain two bolts (A) and tee nuts (not shown) securing finger guide (B) to the auger. Remove guide (B).

Position plug (A) into the hole from inside the auger. Secure with two M6 hex head bolts (B) and tee nuts. Torque to 9 Nm (80 lbf·in).

NOTE:

Bolts (B) come with a threadlocker patch that will wear off if the bolts are removed. If reinstalling bolts (B), apply medium-strength threadlocker (Loctite[®] 243 or equivalent) before installation.

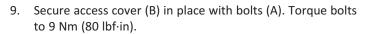

NOTE:

Bolts (A) come with a threadlocker patch that will wear off if the bolts are removed. If reinstalling bolts (A), apply medium-strength threadlocker (Loctite[®] 243 or equivalent) before installation.

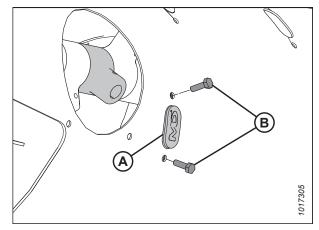


Figure 3.128: Plug

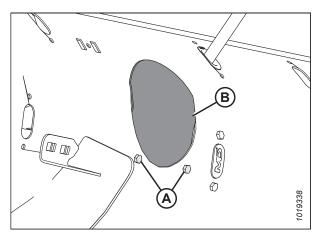


Figure 3.129: Auger Access Hole Cover

3.8.3 Installing Feed Auger Fingers

The feed auger uses fingers to bring crop into the feeder house. The quantity of fingers varies for the different models of combines.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

IMPORTANT:

When installing additional fingers, ensure you install an equal number on each side of the auger.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.

4. Insert guide (B) from inside the auger and secure it with bolts (A) and tee nuts (not shown).

IMPORTANT:

Always install a new guide when replacing a solid finger.

NOTE:

Bolts (A) come with a threadlocker patch that will wear off if the bolts are removed. If reinstalling bolts (A), apply medium-strength threadlocker (Loctite[®] 243 or equivalent) before installation.

- 5. Torque bolts (A) to 9 Nm (80 lbf·in).
- 6. Place auger finger (A) inside the drum. Insert one end of auger finger (A) up through the bottom of guide (B) and insert the other end into holder (C).
- Secure the finger by inserting hairpin (D) into the holder. Make sure the round end (the S-shaped side) of the hairpin faces the chain drive side of the auger. Make sure the closed end of the hairpin points in the direction of augerforward rotation.

IMPORTANT:

Position the hairpin as described in this step to prevent the hairpin from falling out during operation. If fingers are lost, the header might not be able to feed crop into the combine properly. Fingers that fall into the drum might damage the auger's internal components.

 Secure access cover (B) in place with bolts (A). Torque the bolts to 9 Nm (80 lbf·in).

NOTE:

Bolts (A) come with a threadlocker patch that will wear off if the bolts are removed. If reinstalling bolts (A), apply medium-strength threadlocker (Loctite[®] 243 or equivalent) before installation.

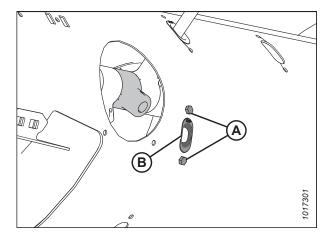


Figure 3.130: Auger Finger Hole

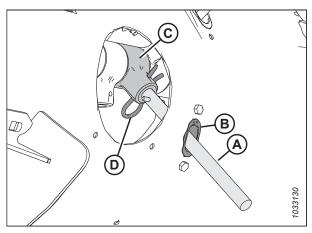


Figure 3.131: Auger Finger

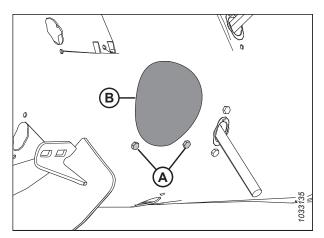


Figure 3.132: Auger Access Hole Cover

3.8.4 Setting Auger Position

The auger position has two settings: floating and fixed. The factory setting is the floating position, and is recommended for most crop conditions.

Auger float adjustment arms (A) are located at the bottom left and bottom right of the float module.

Figure 3.133: Auger Float Adjustment Arms

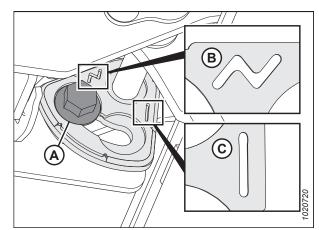


Figure 3.134: Auger Float Positions

If bolt (A) is next to floating symbol (B), the auger is in the floating position. If bolt (A) is next to fixed symbol (C), the auger is in the fixed position.

Make sure left and right brackets are set to the same position; two bolts (A) must be in the same location to prevent damage to the machine during operation.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

To set the auger position, follow these steps:

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the header fully.
- 3. Engage the header's safety props. For instructions, refer to the combine operator's manual.
- 4. Shut down the engine, and remove the key from the ignition.

5. Using a 21 mm wrench, loosen bolt (A) until the bolt head is clear of bracket (B).

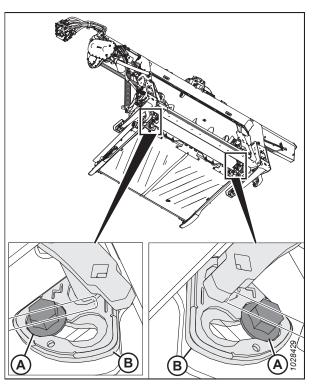


Figure 3.135: Feed Auger Float Adjustment

6. Using a breaker bar in the square hole on arm (B), move the arm forward until bolt (A) is in the slot on bracket next to the fixed symbol.

NOTE:

If changing the auger position from fixed to floating, move the arm in the opposite direction.

7. Tighten bolt (A) to 122 Nm (90 lbf·ft).

IMPORTANT:

Bolt (A) must be properly seated in the recess on the bracket before tightening the bolt. If arm (B) can be moved after tightening the bolt, then bolt (A) is not seated properly.

8. Repeat on the opposite side.

IMPORTANT:

Bolt (A) on each side of the float module must be in the same position to prevent damage to the machine during operation.

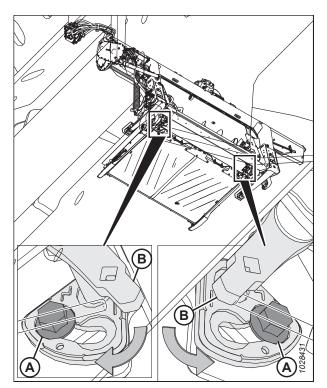


Figure 3.136: Feed Auger Float Adjustment

3.8.5 Checking and Adjusting Feed Auger Springs

The feed auger has an adjustable spring tensioning system that allows the auger to float on top of the crop instead of crushing and damaging it. The factory-set tension is adequate for most crop conditions.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the header safety props. Refer to the combine operator's manual for instructions.
- 5. Check the thread length protruding past nut (A). The length should be 22–26 mm (7/8–1 in.).

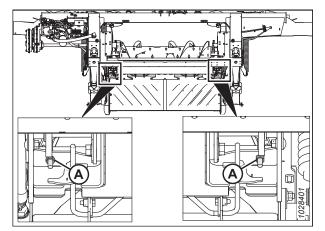


Figure 3.137: Spring Tensioner

If adjustment is required, follow these steps:

6. Loosen upper jam nut (A) on the spring tensioner.

NOTE:

The upper jam nut is located on other side of the plate.

- 7. Turn lower nut (B) until thread (C) protrudes 22–26 mm (7/8–1 in.).
- 8. Tighten jam nut (A).
- 9. Repeat Steps *6, page 116* to *8, page 116* on the opposite side.

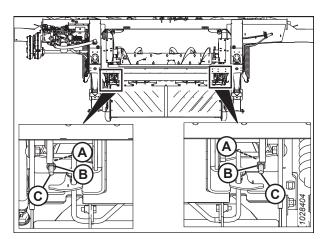


Figure 3.138: Spring Tensioner

3.8.6 Stripper Bars

A stripper bar kit may have been supplied with your header. Installing the stripper bar kit improves feeding in certain crops, such as rice.

For information on removing and installing the stripper bars, refer to 4.11 Stripper Bars, page 389.

3.9 Header Operating Variables

Satisfactory function of the header requires making adjustments to suit various crops and conditions.

Correctly adjusting the header reduces crop loss and speeds harvesting. Proper adjustments, along with timely maintenance, will also increase the service life of the header.

The variables listed in Table 3.13, page 118 and detailed on the following pages will affect the performance of your header.

You will quickly become adept at adjusting the machine to achieve the results you desire. Most of the settings below have been configured at the factory, but the settings can be changed to suit various crops and harvesting conditions.

Table 3.13 Operating Variables

Variable	Refer to					
Cutting height	3.9.1 Cutting off Ground, page 118 3.9.2 Cutting on Ground, page 124					
Header float	3.9.3 Header Float, page 126					
Header angle	3.9.5 Header Angle, page 150					
Reel speed	3.9.6 Reel Speed, page 152					
Ground speed	3.9.7 Ground Speed, page 153					
Draper speed	3.9.8 Side Draper Speed, page 154					
Knife speed	3.9.9 Knife Speed Information, page 156					
Reel height	3.9.10 Reel Height, page 158					
Reel fore-aft position	3.9.11 Reel Fore-Aft Position, page 163					
Reel tine pitch	3.9.12 Reel Tine Pitch, page 176					
Crop divider rods	3.9.14 Crop Dividers, page 182					
Feed auger configurations	3.8.1 FM200 Feed Auger Configurations, page 87					

3.9.1 Cutting off Ground

The header's design allows you to cut crop above the ground, which results in stubble being cut to a uniform height. Follow these recommendations when configuring the header to cut above ground level.

When cutting above ground level:

• Use the stabilizer wheels on the header (if this optional component is installed) to set the cutting height. The stabilizer wheel system is designed to minimize bouncing at the header ends and may be used to float the header to achieve an even cutting height when cutting above ground level in cereal grains.

NOTE:

The header wings must be locked when using the stabilizer wheel system.

• The ContourMax[™] contour wheels provide consistent cutting height information back to the header so it can flex, maintain accurate and consistent cutting height, and still use the combine's auto height control seamlessly. The contour wheels contact the ground, which allows the cutterbar to remain at a fixed height above the ground even through rolling contours. There is no adjustment necessary to the factory auto height control settings.

NOTE:

The header wings must be locked when using the ContourMax[™] system.

The stabilizer wheel system (or stabilizer/transport wheel system) cutting height is controlled by the combine header height control.

If the Stabilizer Wheels kit is installed, refer to Adjusting Stabilizer Wheels, page 119 to change the wheel position.

If the EasyMove[™] Transport option is installed, refer to *Adjusting EasyMove[™] Transport Wheels, page 120* to change the wheel position.

If the ContourMax wheels are installed, refer to Adjusting ContourMax[™] Wheels with Foot Switch, page 121 to change the wheel position.

Adjusting Stabilizer Wheels

A properly adjusted header will achieve a balance between the amount of header weight carried by the float and the amount carried by the stabilizer wheels.

Refer to 3.7.2 Header Settings, page 69 for recommended use in specific crops and crop conditions.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Raise the header until the stabilizer wheels are off the ground.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Hold axle pivot handle (B); do NOT lift.

NOTE:

Lifting the handle will make the system harder to take out from slot (C).

- 4. Pull suspension handle (A) rearward to remove the pin from slot (C).
- 5. Lift the wheel to the desired height position using support (B), and engage the support channel into center slot (C) in the upper support.
- 6. Suspension handle (A) should snap into the slot. If not, push in (for middle and lower position) or pull in (for top position) the suspension handle to ensure it is seated in the slot.
- 7. Use the combine's auto header height control (AHHC) to automatically maintain cutting height. For instructions, refer to *3.10 Auto Header Height Control, page 200* and your combine operator's manual for details.

NOTE:

The height sensor on the FM200 Float Module must be connected to the combine height control system in the cab.

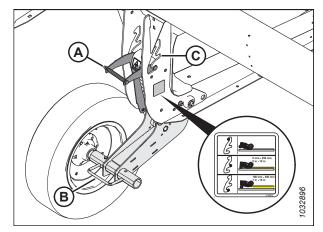


Figure 3.139: Stabilizer Wheel

Adjusting EasyMove[™] Transport Wheels

A properly adjusted header will achieve a balance between the amount of header weight carried by the float and the amount carried by the transport wheels.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Raise the header so the transport wheels are off the ground.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Check that the float is working properly. For instructions, refer to *Checking and Adjusting Header Float, page 127*.
- 4. Hold axle pivot handle (C); do **NOT** lift.

NOTE:

Lifting the handle will make the system harder to take out from slot (B).

- 5. Pull suspension handle (A) rearward to remove pin from slot (B).
- 6. Adjust wheel to desired slot position.
- 7. Suspension handle (A) should snap into slot. If not, push in (for middle position) or pull in (for top position) suspension handle to ensure it is seated into the slot.
- 8. Hold axle pivot handle (A); do NOT lift.

NOTE:

Lifting the handle will make the system harder to take out from the slot.

- 9. Pull suspension handle (B) rearward to remove the pin from the slot.
- 10. Adjust the wheel to the desired slot position.

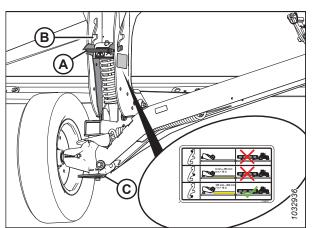


Figure 3.140: Right Wheel

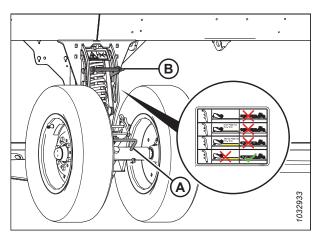


Figure 3.141: Left Wheel

- 11. Suspension handle (B) should snap into the slot. If not, pull out the suspension handle to ensure it is seated into the slot.
- 12. Use the combine's auto header height control (AHHC) to automatically maintain cutting height. For instructions, refer to *3.10 Auto Header Height Control, page 200* and your combine operator's manual for details.

NOTE:

The height sensor on the FM200 Float Module must be connected to the combine header control module in the cab.

Adjusting ContourMax[™] Wheels with Foot Switch

The ContourMax^M wheels allow the header to mirror the contours of the ground, and can be adjusted between 25 mm (1 in.) and 457 mm (18 in.) from the ground surface. A foot switch allows the wheel's electronically actuated hydraulic functions to be controlled from the combine cab.

To avoid bodily injury or death from the unexpected startup or fall of the raised header, stop the engine, remove the key from the ignition, and engage the safety props before going under the header for any reason. If using a lifting vehicle, be sure the header is secure before proceeding.

Ensure that all bystanders have cleared the area.

- 1. Ensure that all bystanders have cleared the area, and then start the combine engine.
- 2. Locate the ContourMax[™] foot switch.
- 3. Press and hold the foot switch to activate the ContourMax[™] wheels.

NOTE:

When the ContourMax[™] foot switch is activated and the reel fore-aft button on the combine's multifunction handle is pressed, the contour wheels will move regardless of the fore-aft / header tilt switch position.

- 4. To ensure the hydraulic cylinders are properly phased, press and hold the REEL AFT button on the combine multifunction handle to extend the wheels all the way down, then hold the button for 30 seconds. Press and hold the REEL FORE button on the combine multifunction handle to fully retract the wheels, then hold the button for 30 seconds. seconds.
- 5. Operate the hydraulic controls on the multifunction handle to move the wheels to the desired height.
- 6. Release the foot switch to deactivate the ContourMax[™] wheels. The header tilt and the fore-aft functions should operate normally.

The following table describes what functionality the reel fore/aft buttons will have on the header when the contour wheel foot switch and the fore-aft/header tilt switch are in various (active/inactive) states. The X indicates a switch is active.

Activated Switch				
ContourMax [™] Foot Switch Condition	Fore-Aft / Header Angle Switch Position		Combine Multifunction Handle Controls	
	Fore-Aft	Angle	Reel Fore	Reel Aft
_	х	_	Reel forward	Reel back
_	_	Х	Header angle extend	Header angle retract
Х	—	Х	ContourMax [™] retract	ContourMax [™] extend (increase cut height)
х	Х	_	(decrease cut height)	

Table 3.14 Control Logic Chart

NOTE:

When the contour wheels are fully retracted, the cutterbar can be on the ground when the header angle is set approximately between (B) and (E); the contour wheels will contact the ground when the header angle is set between (A) and (B).

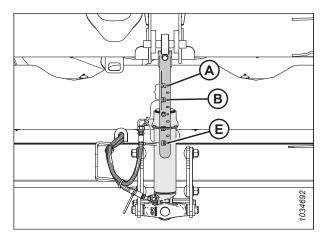


Figure 3.142: Header Angle Indicator

Leveling ContourMax[™] Wheel Height

The ContourMax[™] wheels allow the header to mirror the contours of the ground, and can be adjusted between 0 mm (0 in.) and 457 mm (18 in.) from the ground surface.

To avoid bodily injury or death from unexpected startup or fall of a raised machine, stop engine, remove key, and engage lift cylinder lock-out valves before going under machine for any reason.

Ensure that all bystanders have cleared the area.

NOTE:

The header float must be set before leveling the ContourMax[™]. For instructions refer to *Checking and Adjusting Header Float, page 127*.

NOTE:

The wing balance must be set before leveling the ContourMax[™]. For instructions refer to 3.9.4 Checking and Adjusting Wing Balance, page 146.

- 1. Unlock the header wings. For instructions, refer to Locking/Unlocking Header Wings, page 138.
- 2. Unlock the header float. For instructions refer to *Locking/Unlocking Header Float, page 138*.
- 3. Start the engine. For instructions, refer to the combine operator's manual.
- 4. Park the combine on a level surface.
- 5. Lower the reel fully.

 Set ContourMax[™] wheel height indicator (A) to number 2 (B).

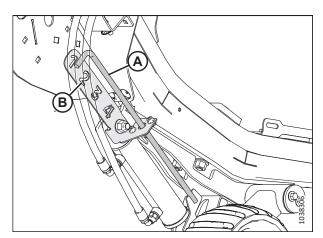


Figure 3.143: Height Indicator – Rear Left End

- 7. Lower the header until the auto header height indicator (A) is at number 2 (B).
- 8. Shut down the engine, and remove the key from the ignition.

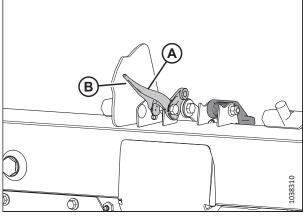


Figure 3.144: Float Setting Indicator

- At the center of the header, measure distance (A) from the ground to the tip of the center guard and record the measurement.
- 10. At each end of the header, measure the distance (A) from the ground to the tip of the end guard and record both of the measurements.
 - If the difference between the end measurements and the center measurement is less than 25 mm (1 in.), no adjustment is required.
 - If the difference between the end measurements and the center measurement is greater than 25 mm (1 in.), adjustment is required. Continue to the next step.

Ensure that all bystanders have cleared the area.

- 11. Start the engine.
- 12. Raise the header fully.
- 13. Engage the header's safety props. For instructions, refer to the combine operator's manual.

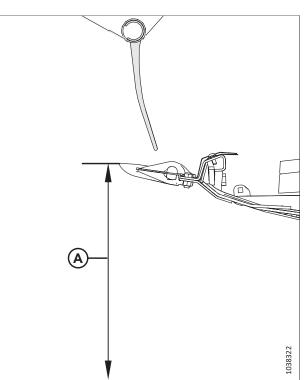


Figure 3.145: Float Setting Indicator

- 14. Remove pin (A).
- 15. Reposition adjuster plate (B) in the slot to align with a different hole. There is approximately 24 mm (1/2 in.) difference between each of the holes.
 - If the measurement is less than the measurement at the center of the header, move the adjuster plate **TOWARD** the cutterbar.
 - If the measurement is more than the measurement at the center of the header, move the adjuster plate
 AWAY from the cutterbar.
- 16. On the opposite end on the header, repeat Step 14, page 124 and Step 15, page 124.

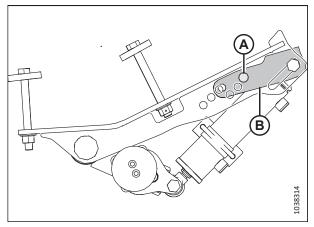


Figure 3.146: Pin Location – Left Outer Wheel

- 17. Disengage the header safety props. Refer to the combine operator's manual for instructions.
- 18. Lower the header until the auto header height indicator is at number 2.
- 19. Shut down the engine, and remove the key from the ignition.
- 20. Measure the guard to ground distance again. Verify that the three measurements are the same. If more adjustment is required, repeat Step 14, page 124.

3.9.2 Cutting on Ground

Cutting height will vary depending on crop type, crop conditions, cutting conditions, etc.

Cutting on the ground is performed with the flexible cutterbar unlocked, header fully lowered, and the cutterbar on the ground. The orientation of the knife and knife guards relative to the ground (header angle) is controlled by the skid shoes and the center-link—it is **NOT** controlled by the header lift cylinders. The skid shoes, center-link, and flex lockout allow you to adjust to field conditions and maximize the amount of material cut while reducing damage to the knife caused by stones and debris.

The flexible cutterbar and header float system floats the header over the surface to compensate for ridges, trenches, and other variations in ground contour to prevent the cutterbar from pushing into the ground or leaving uncut crop.

Refer to the following for additional information:

- Adjusting Inner Skid Shoes, page 124
- Adjusting Outer Skid Shoes, page 125
- 3.9.3 Header Float, page 126
- 3.9.5 Header Angle, page 150

Adjusting Inner Skid Shoes

The skid shoes and center-link allow you to adjust to field conditions and maximize the amount of material cut while reducing damage to the knife caused by stones and debris.


To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

IMPORTANT:

Running skid shoes in the down position can result in accelerated wear of the skid shoe wear plates.

- 1. Raise the header fully.
- Shut down the engine, and remove the key from the ignition. 2.
- Engage the header's safety props. For instructions, refer to the combine operator's manual. 3.
- 4. Raise the stabilizer wheels or transport wheels fully (if installed). For instructions, refer to the following:
 - Adjusting EasyMove[™] Transport Wheels, page 120
 - Adjusting Stabilizer Wheels, page 119
- Remove lynch pin (A) from each skid shoe. 5.
- 6. Hold shoe (B) and remove pin (C) by disengaging from the frame and pulling away from the shoe.
- 7. Raise or lower skid shoe (B) to achieve the desired position using the holes in support (D) as a guide.
- 8. Install pin (C) in the desired position on support (D), engage in frame, and secure with lynch pin (A).
- 9. Check that all skid shoes are adjusted to the same position.
- 10. Adjust the header angle to the desired working position using the machine's header angle controls. If the header angle is not critical, set it to the mid-position.
- 11. Check the header float. For instructions, refer to 3.9.3 Header Float, page 126.



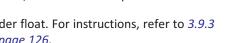

Adjusting Outer Skid Shoes

The skid shoes and center-link allow you to adjust to field conditions and maximize the amount of material cut while reducing damage to the knife caused by stones and debris.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

IMPORTANT:

Running skid shoes in the down position can result in accelerated wear of the skid shoe wear plates.

- 1. Raise the header fully.
- Shut down the engine, and remove the key from the ignition. 2.
- Engage the header's safety props. For instructions, refer to the combine operator's manual. 3.
- 4. Raise the stabilizer wheels or transport wheels fully (if installed). For instructions, refer to the following:
 - Adjusting EasyMove[™] Transport Wheels, page 120
 - Adjusting Stabilizer Wheels, page 119



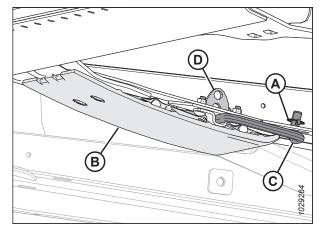


Figure 3.147: Inner Skid Shoe

- 5. Remove lynch pin (A) from each skid shoe pin (C).
- 6. Hold skid shoe (B) and remove pin (C) by disengaging from the bracket and pulling away from the shoe.
- 7. Raise or lower skid shoe (B) to achieve the desired position using the holes in the support plate as a guide.
- 8. Reinstall pin (C) in the desired position on the support plate, engage the pin into the bracket, and secure with lynch pin (A).
- 9. Ensure all skid shoes are adjusted to the same position.
- 10. Check the header float. For instructions, refer to *3.9.3 Header Float, page 126*.

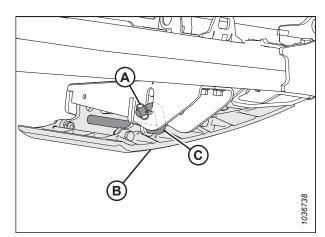


Figure 3.148: Outer Skid Shoe

3.9.3 Header Float

The header float system supports the majority of the header weight to reduce the ground pressure at the cutterbar, allowing the header to more easily follow the ground and quickly respond to sudden ground contour changes or obstacles.

Header float is indicated on the float indicator (A). Values 0 to 4 represent the force of the cutterbar on the ground with 0 being the minimum and 4 being the maximum. They also represent where the header is at in the float range, 0 being the bottom end of the float range and 4 being the top end of the float range.

NOTE:

The indicator on the left side of the float module is for float indication and float settings; the indicator on the right side is for float settings only.

The maximum force is determined by the tension on the float module's adjustable float springs. Float can be changed to suit field and crop conditions and is dependent on what options have been installed on the header.

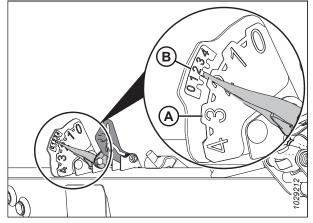


Figure 3.149: Float Indicator – Left Side

NOTE:

The small number set (B) at the top of the float indicator is used to check and adjust the float setting. For instructions, refer to *Checking and Adjusting Header Float, page 127*.

The FD2 Series FlexDraper[®] Header performs best with minimum ground pressure under normal conditions. Readjust the float if adding optional attachments to the header that affect header weight.

- 1. Set the float for cutting on the ground as follows:
 - a. Ensure the header float locks are disengaged. For instructions, refer to *Locking/Unlocking Header Float*, page 138.
 - b. Lower the feeder house using the combine header controls until float indicator (A) reaches the desired float value (cutterbar ground force). Set the float indicator initially to float value 2 and adjust as necessary.
- 2. Set the float for cutting off the ground as follows:
 - a. Adjust the contour wheels. For instructions, refer to 3.9.1 Cutting off Ground, page 118.
 - b. Note the float value on the float indicator and maintain this value during operation (disregard minor fluctuations on the indicator).

Checking and Adjusting Header Float

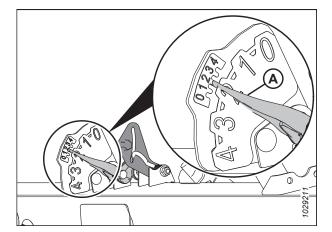


Figure 3.150: Cutting on the Ground

The header is equipped with a suspension system that floats the header over the ground to compensate for ridges, trenches, and other variations in ground contour. If the header float is not set properly, the cutterbar may scoop dirt or leave uncut crop. If the float setting is not satisfactory, the float will need to be inspected and adjusted.

IMPORTANT:

Do **NOT** use the float module springs to level the header.

Use the following guidelines when adjusting the float:

- Set the header float as light as possible, but not so light that the header bounces when the combine is moving. This will help prevent knife breakage, soil pushing, soil build-up at the cutterbar in wet conditions, and excessive wear to the skid plates.
- To prevent the header from bouncing excessively and cutting unevenly when the float is light, operate the combine at a lower ground speed.
- To cut crop while the header is above ground level, use the stabilizer wheels in conjunction with the header float. This will minimize bouncing at the header ends and will help regulate the cut height. For instructions, refer to *Adjusting Stabilizer Wheels, page 119*.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

If adequate header float cannot be achieved using all of the available adjustments, change the float spring configuration. For instructions, refer to .

To check and adjust the float settings, do the following:

Preliminary steps

- 1. Park the combine on a level surface.
- 2. Locate spirit level (A) on top of the float module frame. Ensure that the bubble is in the center. If adjustment is required, refer to *3.11 Leveling Header, page 233*.
- Position the header so that the cutterbar is 254–356 mm (10–14 in.) off the ground.

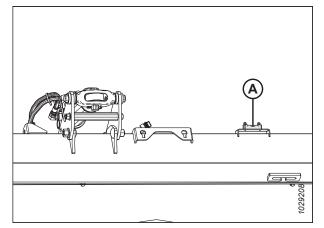


Figure 3.151: Spirit Level

4. Adjust the reel fore-aft position so that the indicator on left indicator bracket (A) is at position 6.

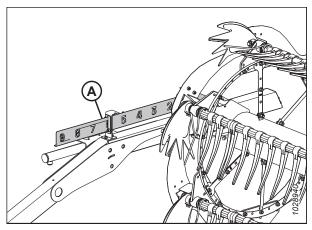


Figure 3.152: Fore-Aft Position

Figure 3.153: Center-Link

- 5. Adjust center-link (A) so that indicator (B) is at position **D** on the gauge.
- 6. Lower the reel fully.
- 7. Shut down the engine, and remove the key from the ignition.
- 8. Lock the header wings. For instructions, refer to *Locking/ Unlocking Header Wings, page 138.*
- 9. If transport wheels are installed on the header, move the transport wheels to the uppermost position.

- On the left side of the float module, pull float lock handle (A) away from the float module and pull the float lock handle down and into position (B) (UNLOCK).
- 11. Repeat the previous step on the right side of the float module.

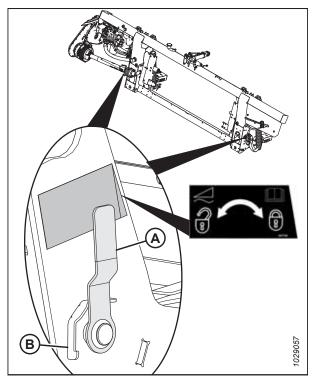


Figure 3.154: Header Float Lock in Locked Position

- 12. Open the left endshield. For instructions, refer to *Opening Header Endshields, page 35*.
- 13. Remove hairpin (A) securing multi-tool (B) to the bracket on the left endsheet.
- 14. Remove multi-tool (B). Replace the hairpin.

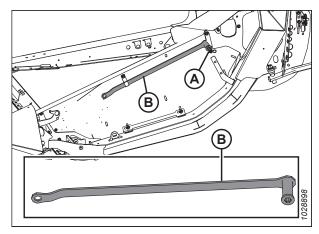


Figure 3.155: Multi-Tool Location

Setting float setting levers

- 15. On the left side of the float module, lift float setting lever (A) by hand so that the lever is free of slack.
- 16. Place the flat end of multi-tool (B) on the float setting lever as shown. The multi-tool should be angled slightly toward the front of the float module.

IMPORTANT:

To prevent damage to the float setting lever, ensure that multi-tool (B) is fully engaged with the lever.

Once the float setting lever has been set, remove the multi-tool from the lever IMMEDIATELY. If the lever falls to its starting position while the multi-tool is engaged with it, injury can occur.

- 17. Pull multi-tool (B) toward the back of the float module until float setting lever (A) is locked into place and will not return to its original position. Remove the multi-tool.
- 18. Repeat Steps *15, page 130* to *17, page 130* to set the right float setting lever.

IMPORTANT:

BOTH the left and the right float setting levers must be set before the float on **EITHER SIDE** of the header can be adjusted.

19. Place the multi-tool back in its storage location. Secure the multi-tool with the hairpin.

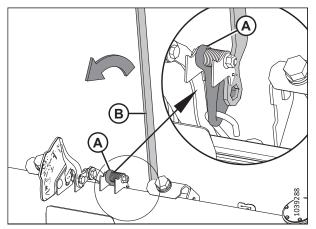


Figure 3.156: Multi-Tool Engaged with Left Float Setting Assembly

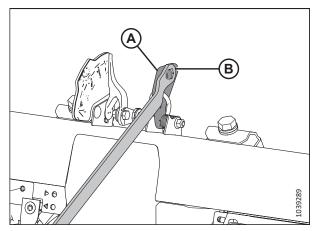


Figure 3.157: Left Float Setting Lever in Set Position

Checking float

20. Set the left float by pushing the left end of the header down by approximately 76 mm (3 in.). Allow the header to rise. Repeat this step at least three times.

NOTE:

Moving the left side of the header up and down ensures that the reading on the left float setting indicator (FSI) will be accurate.

- 21. On the left side of the float module, inspect smaller float setting indicator (FSI) (B). Arm (A) on the FSI should point to the number 2.
 - If arm (A) on FSI (B) points to a value higher than 2, the float is too heavy.
 - If arm (A) on FSI (B) points to a value lower than 2, the float is too light.

NOTE:

The larger numbers are used to determine the float height setting. They are used when the header is being operated in the field.

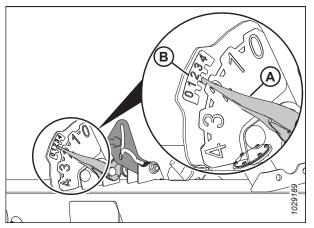


Figure 3.158: Left Float Setting Indicator

Adjusting float

- 22. On the left side of the float module, loosen bolts (C). Move spring locks (B) so that bolt heads (A) are accessible.
- 23. Increase or decrease the float on the left side of the float module as needed:
 - To increase the float, turn both left adjustment bolts (A) clockwise.
 - To decrease the float, turn both left adjustment bolts (A) counterclockwise.

NOTE:

Each pair of bolts (A) must be adjusted by the same amount.

- 24. Set the left float again. Refer to Step *20, page 130* for instructions.
- 25. Check the left FSI indicator again. Refer to Step *21, page 131* for instructions.
- 26. If the left float setting is not satisfactory, repeat Step 23, *page 131* to Step 25, *page 131* until the left float setting is satisfactory.
- 27. Check and adjust the right float. For instructions, refer to Step *20, page 130* to Step *26, page 131*.
- 28. On both sides of the float module, lock adjustment bolts (A) with spring locks (B). Ensure that bolt heads (A) are engaged in the spring lock cutouts. Tighten bolts (C) to secure the spring locks.

Releasing float setting levers

29. Start the engine.

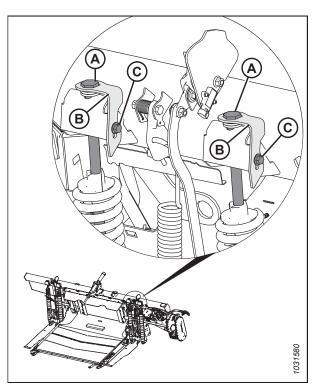


Figure 3.159: Left Float Adjustment

Do NOT use the multi-tool to release the float setting lever. Using the multi-tool to release the float setting lever can result in injury.

- 30. Use the combine to fully lower the header. This will cause the left and right float setting levers to return to their original positions.
- 31. The wing balance will need to be adjusted. Proceed to 3.9.4 Checking and Adjusting Wing Balance, page 146.

Changing Float Spring Configuration

The float springs are configured according to the weight of the header. You may have to change the float spring configuration if optional equipment is added or removed from the header.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

This procedure is not required for the FD225 header; the float spring should be placed in the back hole of the float lever.

NOTE:

This procedure is not required for the FD240 double-knife header; the spring should be placed in the front hole.

NOTE:

This procedure is not required for the FD241 double-knife header; the spring should be placed in the front hole.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Calculate the float spring configuration as follows:
 - a. Determine the total header weight based on Table *3.15, page 133*.

Example:

FD235 single knife base header weight [2600 kg (5750 lb.)]+ vertical knives [70 kg (150 lb.)] + no options = 2670 kg (5900 lb.)

b. Compare the total weight to Table 3.16, page 134 and determine if the float springs should be installed in front hole (A) or back hole (B) in the float lever.
 Example:

FD235 base header [2600 kg (5750 lb.)] + vertical knives [70 kg (150 lb.)] + no options = 2670 kg (5900 lb.)

This FD235 is in the lighter weight range, and therefore the float springs must be installed in the back hole of the float levers.

If you add the optional upper cross auger [180 kg (400 lb.)] and the transport [360 kg (800 lb.)], the total weight will increase to 3210 kg (7100 lb.), and you will have to move the float springs to the front hole in the float levers because the header is now in the heavier weight range.

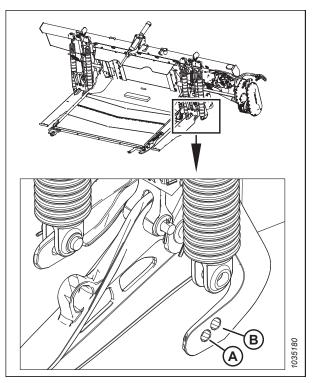


Figure 3.160: Left Float Spring – Installed in Rear Float Lever Hole

OPERATION

Table 3.15 Header Weight Calculator

Total weight = Header weight **without** dividers and options (A) + **one** divider option (B) + sum of optional equipment (C) and (D).

Category	Description	Weight		
(A) Base Header – select one	FD225 single knife	N/A. Use the back hole on the float lever.		
	FD230 single knife	2400 kg (5300 lb.)		
	FD235 single knife	2600 kg (5750 lb.)		
	FD235 double knife	2700 kg (5950 lb.)		
	FD240 single knife	2800 kg (6150 lb.)		
	FD240 double knife	N/A. Use the front hole on the float lever.		
	FD241 double knife	N/A. Use the front hole on the float lever.		
	FD245 double knife	3225 kg (7100 lb.)		
	FD250 double knife	3400 kg (7500 lb.)		
(B) Dividers – select one , if installed	Rice divider rods	20 kg (50 lb.)		
	Vertical knives	185 kg (407 lb.) ⁵⁷		
(C) Optional Upper Cross Auger – select one if installed ⁵⁸	9.1 m (30 ft.) two piece auger	142 kg (312 lb.)		
	10.7 m (35 ft.) two piece	156 kg (343 lb.)		
	12.2 m (40 ft.) three piece	168 kg (370 lb.)		
	12.5 m (41 ft.) two piece	163 kg (360 lb.)		
	13.7 m (45 ft.) three piece	191 kg (420 lb.)		
	15.2 m (50 ft.) three piece	212 kg (468 lb.)		
(D) Other Options – add any installed options	Transport	360 kg (800 lb.)		
	Contour wheels	205 kg (450 lb.)		
	Stabilizer wheels	160 kg (350 lb.)		

^{57.} Weight includes hydraulic package for FD250.

^{58.} Add 24.5 kg (54 lbs) for hydraulic plumbing if required.

Header	Lighter Weight Range	Float Lever Hole	Heavier Weight Range	Float Lever Hole
FD225 single-knife	Use the back hole on the float lever.			
FD230 single-knife	2400–2675 kg (5300–5900 lb.)	Back	2676–3215 kg 5901–7100 lb.	Front
FD235 single-knife	2600–3050 kg (5750–6700 lb.)	Back	3051–3415 kg 6701–7550 lb.	Front
FD235 double-knife	2700–3150 kg (5950–6900 lb.)	Back	3151–3515 kg (6901–7750 lb.)	Front
FD240 single-knife	2800–3200 kg (6150–7000 lb.)	Back	3201–3615 kg (7001–7950 lb.)	Front
FD240 double-knife	Use the front hole on the float lever.			
FD241 double-knife	Use the front hole on the float lever.			
FD245 double-knife	3225–3475 kg (7100–7650 lb.)	Back	3476–4050 kg (7651–8900 lb.)	Front
FD250 double-knife	3400–3800 kg (7500–8350 lb.)	Back	3801–4215 kg (8351–9300 lb.)	Front

3. Lock the header float by pulling the float lock handle into position (A) on both sides of the float module.

NOTE:

The float is unlocked when the handle is in position (B).

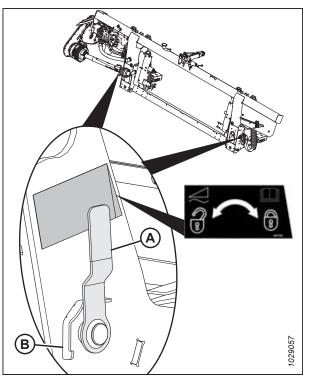


Figure 3.161: Header Float Lock in Locked Position

- 4. Access float spring adjustment bolts (A) by loosening bolts (C) and rotating spring locks (B) forward.
- 5. Loosen adjustment bolts (A) equally until the springs are loose.

NOTE:

The adjustment bolts will rise slightly above the washers when the springs are loose.

Figure 3.162: Float Adjustment – Left

Figure 3.163: Left Float Spring – Installed in Rear Float Lever Hole

- 6. Remove cotter pin (C) from pin (A).
- 7. Remove pin (A) and washers (B).

OPERATION

8. Align spring to the front (A) or back (B) float lever hole according to the float requirements in Table 3.16, page 134.

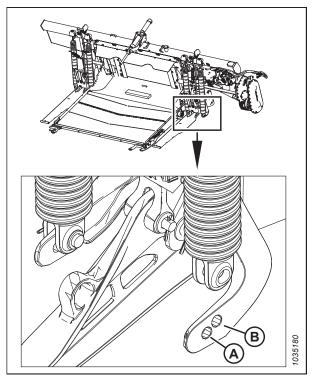


Figure 3.164: Left Float Spring – Installed in Rear Float Lever Hole

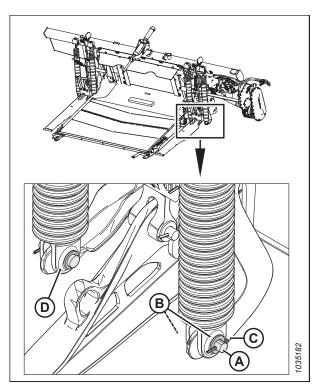


Figure 3.165: Left Float Spring – Installed in Rear Float Lever Hole

- 9. Install pin (A) with two washers (B) into the new hole.
- 10. Secure the pin with cotter pin (C).
- 11. Repeat Step *6, page 135* to Step *10, page 136* for other spring (D).

- 12. Retighten adjustment bolts (A) an equal amount to ensure the float springs are the same length.
- 13. Repeat Step *4, page 135* to Step *12, page 137* on the pair of float springs (B) on the opposite side of the float module.
- 14. Check the float. For instructions, refer to *Checking and Adjusting Header Float, page 127.*

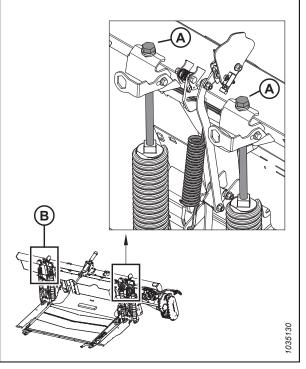


Figure 3.166: Float Adjustment – Left

Locking/Unlocking Header Float

Two header float locks—one on each side of the float module—lock and unlock the header float system.

IMPORTANT:

The float locks must be engaged when the header is being transported with the float module attached so there is no relative movement between the float module and the header. The float locks also must be locked when detaching the float module from the combine to enable the feeder house to release the float module.

To disengage (unlock) the float locks, pull float lock handle (A) into position (B). In this position, the header is unlocked, and can float with respect to the float module.

To engage (lock) the float locks, push float lock handle (A) into position (C). In this position, the header cannot move with respect to the float module.

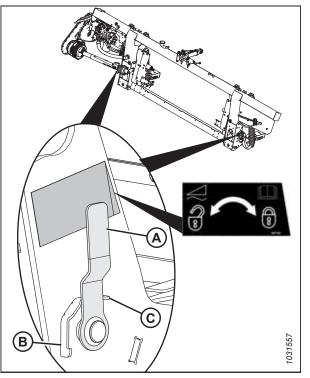


Figure 3.167: Float Lock – in Locked Position

Locking/Unlocking Header Wings

Locking the wings allows the FlexDraper[®] header to be operated as a rigid header with the cutterbar straight. Unlocking the wings allows the three sections of the cutterbar to move independently to follow the ground contours.

1. **Locking:** Lock the wing by moving spring handle (A) to the top of the slot as shown.

NOTE:

There should be an audible click when you move the spring handle indicating that the internal mechanism engaged or disengaged. If the lock mechanism does not engage, proceed to Step *2, page 139*.

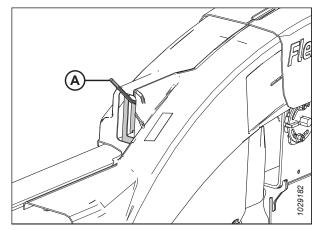


Figure 3.168: Wing in Locked Position

Unlocking: Unlock the wing by moving spring handle (A) to the bottom of the slot as shown.

NOTE:

There should be an audible click when you move the spring handle indicating that the internal mechanism engaged or disengaged. If the lock mechanism does not disengage, proceed to Step *2, page 139*.

Open the left endshield. For instructions, refer to *Opening Header Endshields, page 35*.

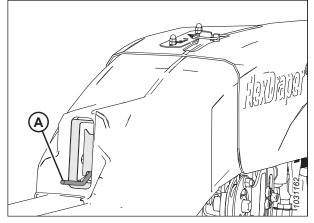


Figure 3.169: Wing in Unlocked Position

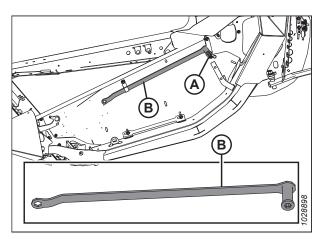


Figure 3.170: Left Endsheet

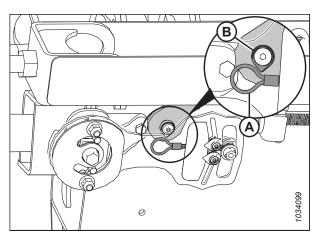


Figure 3.171: Flex Checker Cable Lock – Left Side

- 2. Remove hairpin (A) securing the multi-tool to the holder bracket on the left endsheet.
- 3. Remove multi-tool (B) and reinstall the hairpin to the tool holder.

4. Attach flex checker cable (A) to flex checker cable lock (B).

NOTE:

Parts have been removed from the illustration for clarity.

5. Use multi-tool (A) on wing balance plate (B) to move the wing up/down until you hear the lock click.

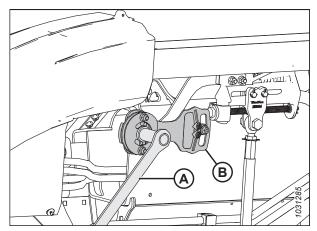


Figure 3.172: Wing Lock Mechanism

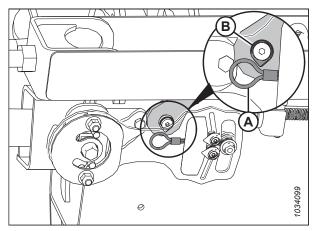


Figure 3.173: Flex Checker Cable Lock – Left Side

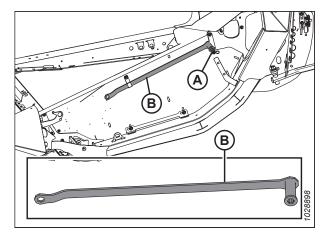


Figure 3.174: Left Endsheet

6. Detach flex checker cable (A) from flex checker cable lock (B).

NOTE:

Parts have been removed from the illustration for clarity.

- 7. Return multi-tool (B) to its storage position, and secure with hairpin (A).
- 8. Close the left endshield. For instructions, refer to *Closing Header Endshields, page 36*.

Operating in Flex Mode

The header is designed to operate with the cutterbar on the ground. The three sections move independently to follow the ground contours. When the wings are unlocked, they are free to move up and down.

Unlock the wings as follows:

the left endsheet.

- 1. Move spring handle (A) in the lower slot to unlock the wing. You should hear the lock disengage.
- 2. If the lock link does not disengage, move the wing by raising and lowering the header, changing the header angle, or driving the combine until it disengages.
- 3. If the lock still does not disengage, continue to next step.
- 4. Open the left endshield. For instructions, refer to *Opening Header Endshields, page 35*.

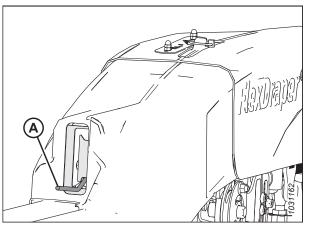


Figure 3.175: Wing in Unlocked Position

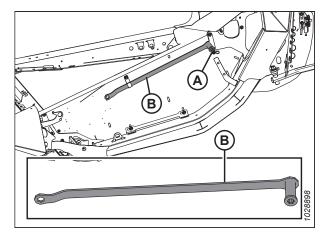


Figure 3.176: Left Endsheet

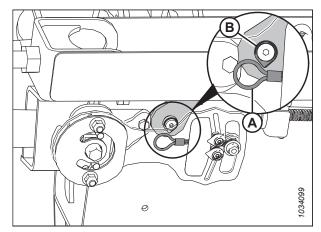


Figure 3.177: Flex Checker Cable Lock – Left Side

6. Remove multi-tool (B), and reinstall the hairpin onto the bracket.

7. Attach flex checker cable (A) to flex checker cable lock (B).

Parts have been removed from the illustration for clarity.

5. Remove hairpin (A) securing the multi-tool to bracket on

NOTE:

OPERATION

8. Use multi-tool (A) on plate (B) to move the wing up and down until the lock disengages.

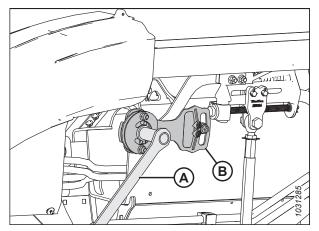


Figure 3.178: Wing Lock in Unlocked Position

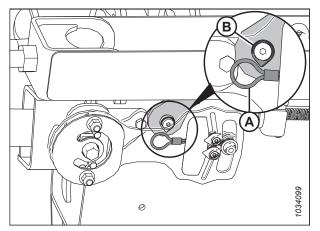


Figure 3.179: Flex Checker Cable Lock – Left Side

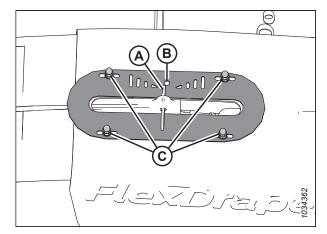


Figure 3.180: Wing Movement Indicator on Top of Flex Linkage Cover – Left Side Shown

12. Close the left endshield. For instructions, refer to Closing Header Endshields, page 36.

9. Detach flex checker cable (A) from flex checker cable lock (B).

NOTE:

Parts have been removed from the illustration for clarity.

- 10. Return multi-tool (A) to its storage position and reinstall the linkage cover.
- 11. If necessary, balance the wing. For instructions, refer to *3.9.4 Checking and Adjusting Wing Balance, page 146.*

NOTE:

With the header attached to a combine, wings locked and straight, lynch pin (A) should point to the center of indicator (B). If not, calibrate the indicator by loosening bolts (C) that fasten to the shield and adjust the indicators position. While harvesting with the wings unlocked, the indicator should periodically move through the range. If the indicator remains stuck at either end of the range, refer to *Checking and Adjusting Header Float, page 127* and *3.9.4 Checking and Adjusting Wing Balance, page 146*.

Operating in Rigid Mode

The header is designed to operate with the cutterbar on the ground. Locking the wings allows the header to be operated as a rigid header with the cutterbar straight. When the three sections of the header are locked, the cutterbar is rigid and moves up and down at the same time.

Lock the wings as follows:

- 1. Move spring handle (A) in the upper slot to lock the wing. The locking should be audible.
- 2. If the lock link does not engage, move the wing by raising and lowering the header, changing the header angle, or driving the combine until it engages.
- 3. If the lock still does not engage, continue to Step *4, page 143*.
- 4. Remove the flex linkage cover. For instructions, refer to *Removing Inboard Flex Linkage Covers, page 44*.
- 5. Remove hairpin (A) securing multi-tool to the holder bracket on the left endsheet.
- 6. Remove multi-tool (B) from its storage location, and reinstall the hairpin on the multi-tool holder.

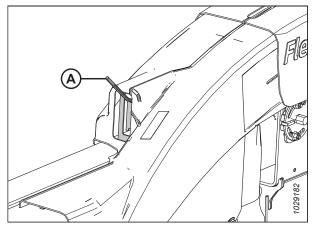


Figure 3.181: Wing in Locked Position

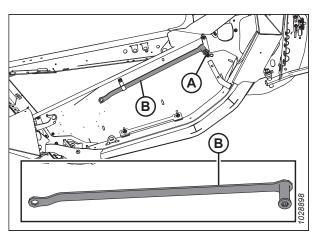


Figure 3.182: Left Endsheet

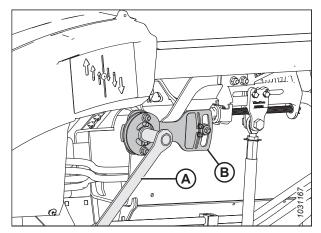


Figure 3.183: Wing in Locked Position

- 7. Use multi-tool (A) on plate (B) to move the wing up and down until the lock engages.
- 8. Return multi-tool (A) to its storage position, and reinstall the linkage cover.
- 9. Reinstall the flex linkage cover. For instructions, refer to *Installing Inboard Flex Linkage Covers, page 45*.

Disabling Flex Frown Limiter

Disabling the flex frown limiter increases the flex range which can help the header follow ground contours on uneven terrain, and may be preferred when a close reel-to-cutterbar relationship is not critical, such as when harvesting tall crops like standing cereals or canola.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

NOTE:

When the flex frown limiter plate is removed, the reel to cutterbar clearance will not be able to be as close, and will require adjustment. Refer to 4.13.1 Reel Clearance to Cutterbar, page 410 for specifications.

- 1. Park the combine on a level surface.
- 2. Lock the header wings. For instructions, refer to Locking/Unlocking Header Wings, page 138.
- 3. Extend the hydraulic center-link fully.
- 4. Lower the header fully.
- 5. Shut down the engine, and remove the key from the ignition.
- 6. Remove two bolts (A).
- 7. Remove flex frown limiter plate (B).

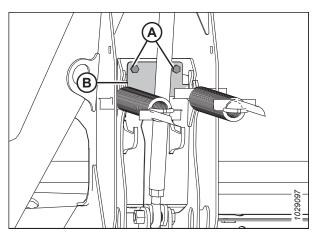


Figure 3.184: Flex Frown Limiter Plate

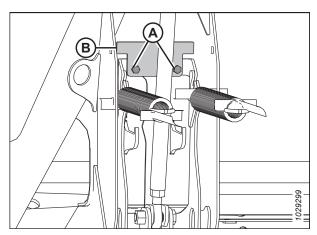


Figure 3.185: Flex Frown Limiter Plate

- 8. Flip limiter plate (B) upside down.
- 9. Install flex frown limiter plate (B).
- 10. Reinstall two bolts (A).
- 11. Repeat Step *6, page 144* to Step *10, page 144* on the opposite side.
- 12. To avoid cutting off reel fingers when the header forms a frown shape, adjust the reel finger clearance, refer to *4.13.1 Reel Clearance to Cutterbar, page 410* for specifications.

Enabling Flex Frown Limiter

Enabling the flex frown limiter limits the header's ability to frown, allowing the reel to be very close to the cutterbar. A close reel-to-cutterbar relationship is ideal when harvesting short crops such as lentils, lodged peas, or short soybeans.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

NOTE:

When installing the flex float limiter plate, the reel to cutterbar clearance will be to closer and should be adjusted. Refer to *4.13.1 Reel Clearance to Cutterbar, page 410* for specifications.

- 1. Park the combine on a level surface.
- 2. Lock the header wings. For instructions, refer to Locking/Unlocking Header Wings, page 138.
- 3. Lower the header fully.
- 4. Extend the hydraulic center-link fully.
- 5. Shut down the engine, and remove the key from the ignition.
- 6. Remove two bolts (A).
- 7. Remove flex frown limiter plate (B).

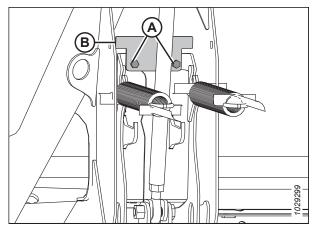


Figure 3.186: Flex Frown Limiter Plate

- 8. Flip limiter plate (B) upside down.
- 9. Install flex frown limiter plate (B).
- 10. Reinstall two bolts (A).
- 11. Repeat on the opposite side.
- 12. Adjust the reel finger clearance, refer to *Adjusting Clearance between Reel and Cutterbar, page 414* for specifications.

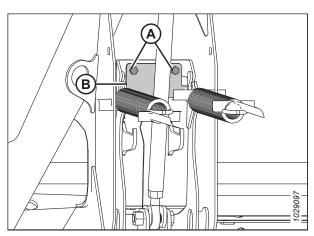


Figure 3.187: Flex Frown Limiter Plate

3.9.4 Checking and Adjusting Wing Balance

Wing balance is important for ground following. Operators should adjust the balance of each wing if the header is not following the ground contours properly.

DANGER

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

Ensure that all bystanders have cleared the area.

IMPORTANT:

To ensure correct wing balance readings, make sure the header float is set properly before proceeding. For instructions, refer to *Checking and Adjusting Header Float, page 127*. The float module must be sitting level before performing any adjustments.

NOTE:

The header wings are balanced when it takes an equal amount of force to move a wing up or down.

If a header wing has a tendency to be in a smile (A) or a frown (B) position, and the header is missing crop or pushing dirt, the wing balance may require adjusting.

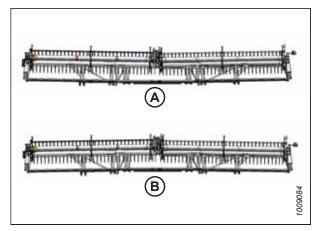


Figure 3.188: Wing Imbalance

Figure 3.189: Fore-Aft Position

- 1. Adjust the reel fore-aft position so that the indicator on left indicator bracket (A) is at position 6.
- 2. Lower the reel fully.

- 3. Adjust center-link (A) so that indicator (B) is at position **D** on the gauge.
- 4. If installed, move the transport wheels or contour wheels so that they are supported by the header. For instructions, refer to Adjusting EasyMove[™] Transport Wheels, page 120 or Adjusting ContourMax[™] Wheels with Foot Switch, page 121.
- 5. Park the combine on a level surface.
- 6. Position the header until it is 254–356 mm (10–14 in.) off the ground.

7. Locate spirit level (A) on top of the float module frame. Ensure that the bubble is in the center. If adjustment is required, refer to *3.11 Leveling Header, page 233*.

8. Shut down the engine, and remove the key from

9. Remove the linkage cover. For instructions, refer to *Removing Inboard Flex Linkage Covers, page* 44.

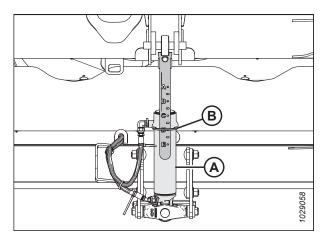


Figure 3.190: Center-Link

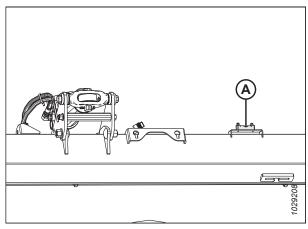


Figure 3.191: Spirit Level

10. Attach flex checker cable (A) to flex checker cable lock (B).

NOTE:

the ignition.

Some parts have been made transparent to show the cable lock.

11. Open the left header endshield. For instructions, refer to *Opening Header Endshields, page 35*.

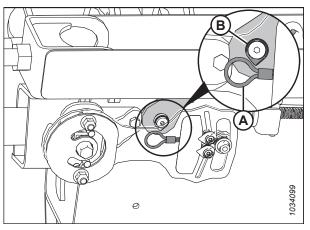


Figure 3.192: Flex Checker Cable Lock – Left Side

- 12. Remove hairpin (A) securing the multi-tool to tool holder bracket on the left endsheet.
- 13. Remove multi-tool (B), and reinstall the hairpin to the tool holder.

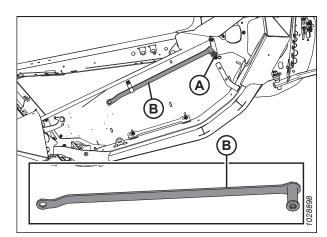


Figure 3.193: Left Endsheet

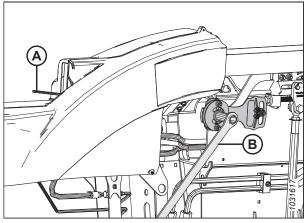


Figure 3.194: Wing Unlocked Position

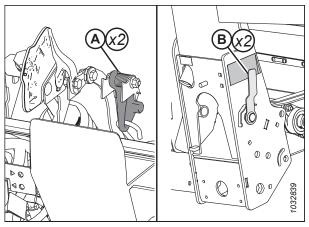


Figure 3.195: Checker Plate Assembly

14. Unlock the wing you are checking by moving spring handle (A) to the lower **(UNLOCK)** position. Unlock **ONLY** the wing you are checking. Ensure the opposite wing is locked.

NOTE:

There should be an audible click when you move the spring handle indicating that the internal mechanism engaged or disengaged.

- 15. If the internal lock mechanism does not engage, move the wing with multi-tool (B) until you hear an audible click.
- 16. Ensure float checking toggles (A) are disengaged (down) on both sides of the float module.
- 17. Ensure float locks (B) are engaged (up) on both sides of the float module.

- 18. On the flex checker plate, pinch indicators (A) and (B) together with your fingers.
- 19. Use multi-tool (C) to rotate the flex checker plate up until the pin reaches the end of the slot. Lower indicator (B) will move down to give the first reading.
- 20. Use multi-tool (C) to rotate the flex checker plate down until pin reaches the end of the slot. Upper indicator (A) will move up to give the second reading.

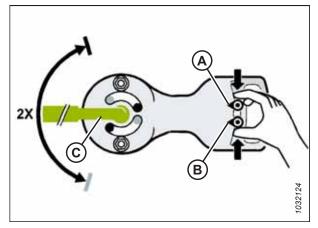


Figure 3.196: Wing Balance Adjustment – Left Side Shown

- 21. Interpret the reading on the flex checker plate as follows:
 - If the wing is too light (A), make it heavier by turning adjuster bolt (D) to move clevis (E) in direction (F). Recheck the wing balance. Adjust as required until wing is balanced (C), and then proceed to the next step.
 - If the wing is too heavy (B), make it lighter by turning adjuster bolt (D) to move clevis (E) in direction (G). Recheck the wing balance. Adjust as required until wing is balanced (C), and then proceed to the next step.
 - If the wing is balanced (C), no action is required. Proceed to the next step.
- 22. Move the spring handle to the upper (LOCK) position.
- 23. If the lock does not engage, move the wing up and down with multi-tool until it locks.

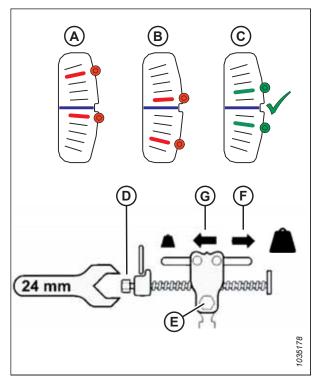



Figure 3.197: Wing Balance Adjustment – Left Side Shown

24. Remove flex checker cable (A) from flex checker cable lock (B).

IMPORTANT:

The flex checker cable may be damaged if it is left in place.

25. Repeat the procedure on the opposite side.

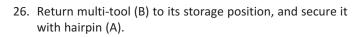

27. Reinstall the linkage covers. For instructions, refer to *Installing Outboard Flex Linkage Covers, page 46* or *Installing Inboard Flex Linkage Covers, page 45*.

NOTE:

Adjustment to the main float may be required to maintain good wing balance when operating in the field. For instructions, refer to *Checking and Adjusting Header Float, page 127*.

 If the cutterbar is not straight when the wings are in lock mode, then further adjustments are required. Contact your MacDon Dealer.

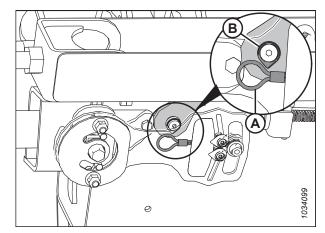


Figure 3.198: Flex Checker Cable Lock – Left Side

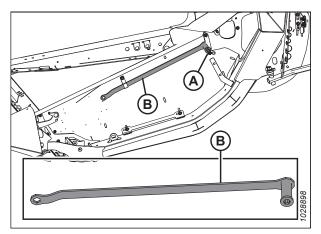


Figure 3.199: Left Endsheet

3.9.5 Header Angle

Header angle is adjustable to accommodate different crop conditions and/or soil types and can be adjusted using the center-link between the combine and the header.

Refer to Adjusting Header Angle from Combine, page 151 for combine-specific adjustment details.

Header angle (A) is the angle between the header and the ground.

The header angle controls distance (B) between the cutterbar knife and the ground and is critical when cutting crop at ground level.

Adjusting the header angle pivots the header at the point of skid shoe/ground contact (C).

Guard angle (D) is the angle between the upper surface of the cutterbar guards and the ground.

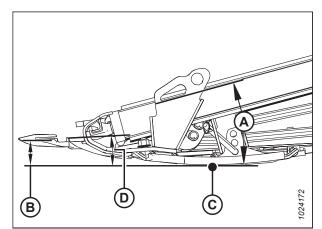


Figure 3.200: Header Angle

- 1. Set the header angle according to the type and condition of crop and soil as follows:
 - a. Use shallower settings (A) (position **A** on the indicator) for normal cutting conditions and wet soil to reduce soil buildup at the cutterbar. Shallow angle settings also minimize damage to the knife in stony fields.
 - b. Use steeper settings (E) (position **E** on the indicator) for lodged crops and crops that are close to the ground such as soybeans.

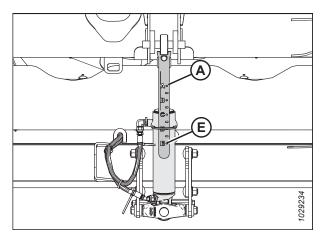


Figure 3.201: Center-Link

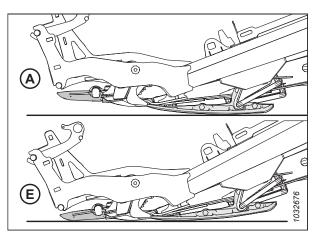


Figure 3.202: Guard Angles

Shallowest angle (A) (center-link fully retracted) is at 1.7°, and produces the highest stubble when cutting on the ground.

Steepest angle (E) (center-link fully extended) is at 8.9°, and produces the lowest stubble when cutting on the ground.

Choose an angle that maximizes performance for your crop and field conditions.

Adjusting Header Angle from Combine

The header angle is adjusted from the combine cab using a switch on the operator's control handle and an indicator on the center-link or on the monitor in the cab. The header angle is determined by the length of the center-link between the combine float module and the header, or by the degree of feeder house tilt on certain combine models.

Case combines:

Case combines use control handle switches to adjust the center-link to change the header angle.

1. Press and hold SHIFT button (A) on the backside of the control handle and press switch (B) to tilt the header forward or press switch (C) to tilt the header back.



Figure 3.203: Case Combine Controls

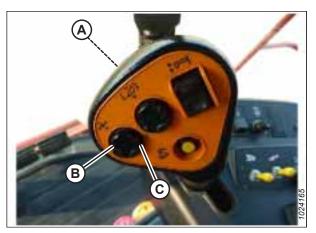


Figure 3.204: Case Combine Controls

3.9.6 Reel Speed

Reel speed is one of the factors that determines how crop is moved from the cutterbar onto the drapers.

The reel performs best when it appears to be driven by the ground. It should move the cut crop evenly through the cutterbar and onto the drapers without bunching and with minimal disturbance.

In standing crop, reel speed should be slightly higher than, or equal to, the ground speed.

In flattened crop or crop that is leaning away from the cutterbar, the reel speed needs to be higher than the ground speed. To achieve this, either increase the reel speed or decrease the ground speed.

Excessive shattering of grain heads or crop loss over the header backtube may indicate that the reel speed is too high. Excessive reel speed also increases reel component wear and overloads the reel drive.

NOTE:

Excessive reel speed will also cause the reel circuit to go over relief. The reel will speed up and slow down at each bat when operating in heavy, tough, and lodged crops. Reducing the reel speed, so it is closer to the ground speed, will still allow the reel to lift the crop while not trying to pull it out of the ground. This will also reduce seed loss from the reel trying to comb through the crop, instead of just lifting it.

For recommended reel speeds in specific crops and conditions, refer to 3.7.2 Header Settings, page 69.


The reel speed is adjustable using the controls in the combine cab. For instructions, refer to the combine operator's manual for adjustment details.


Optional Reel Drive Sprockets

Optional sprockets for use in special crop conditions are available as an alternative to the factory-installed single sprocket.

The header is factory-equipped with a 19-tooth reel drive single sprocket, which is suitable for most crops. Replacing the 19-tooth reel drive single sprocket with optional dual reel drive sprocket (A) will provide more torque to the reel in heavy cutting conditions. With the optional dual reel drive sprocket installed, an optional 52-tooth sprocket (B) can also be added on top of the existing 56-tooth lower sprocket that will allow for higher reel speed in light crops when operating at increased ground speed. With these two optional sprockets installed, switching from high-torque to high-speed and vice versa will be quick and easy. For sprocket information, refer to Table , and contact your MacDon Dealer for ordering information.

OPERATION

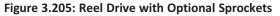

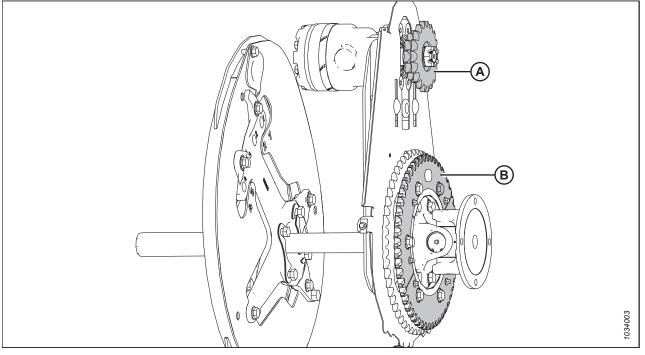

A - Dual Reel Drive Sprocket (MAC273451, MAC273452, or MAC273453)⁵⁹

B - 52-Tooth Sprocket (MAC273689)⁶⁰

Table 3.17 Optional Sprockets

Sprocket	Machine Hydraulics	Combine	Application	Optional Drive Sprocket
Dual reel drive sprocket (A)	13.79 MPa (2000 psi)	Case IH 7010, 8010, 7120, 8120, 88 Series	Combining down rice	10/20 tooth
Lower sprocket (B)	_	All	Light crops	52 tooth

3.9.7 Ground Speed

Operating the header at the appropriate ground speed for the conditions results in cleanly cut crop and even feeding.

Reduce the vehicle's ground speed in difficult cutting conditions to reduce equipment wear.


Use lower ground speeds when harvesting very light crops (for example, short soybeans) to allow the reel to pull in short plants. Start at 4.8–5.8 km/h (3.0–3.5 mph) and adjust the speed as needed.

Higher ground speeds may require heavier float settings to prevent excessive bouncing, which can result in uneven cutting and possible damage to the cutting components. If ground speed is increased, draper and reel speeds should generally be increased to handle the extra material.

Figure 3.206, page 154 illustrates the relationship between ground speed and area cut for the various sized headers.

^{59.} These sprockets are sold separately (individual parts).

^{60.} This sprocket is included in kit MAC311882.

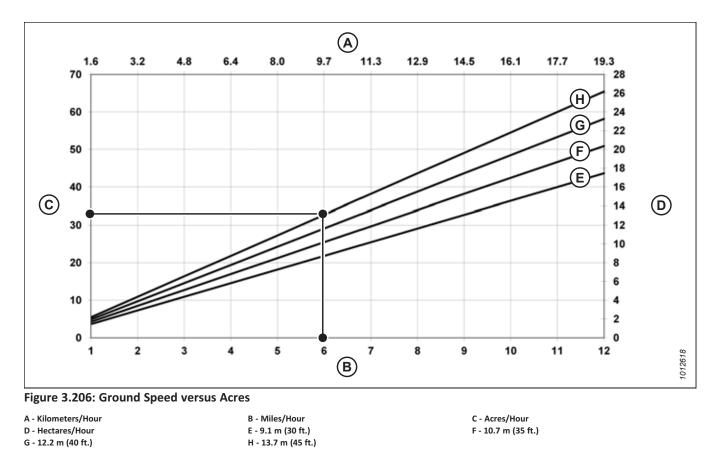

Example: A 12.2 m (40 ft.) header operating at a ground speed of 9.7 km/h (6 mph) would produce a cut area of approximately 11.3 hectares (28 acres) in one hour.

3.9.8 Side Draper Speed

Operating with the correct draper speed is an important factor for achieving good flow of cut crop away from the cutterbar.

Side draper speed must be optimized for crop density, ground speed, and feeder house capacity. Side drapers that run too fast, will pull crop off the cutterbar, and can result in crop bunches at the feed draper Side drapers that run too slow, will allow the feed draper to pull crop off of the side drapers, and can result in uneven feeding also.

Adjust the side draper speed to achieve efficient crop feeding onto the float module feed draper. For instructions, refer to *Adjusting Side Draper Speed, page 155*.

Adjusting Side Draper Speed

The side drapers carry the cut crop to the float module feed draper, which then feeds it into the combine. The speed is adjustable to suit a variety of crops and crop conditions.

Side drapers (A) are driven by hydraulic motors and a pump that is powered by the combine feeder house drive through a gearbox on the float module. Side draper speed is adjustable in cab on the side draper speed control, which regulates the flow to the draper hydraulic motors.

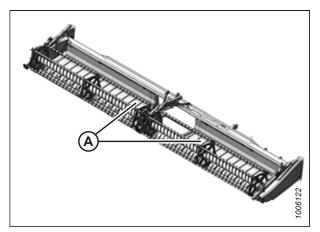


Figure 3.207: Side Drapers

1. Rotate knob (A) to setting 6 as a starting point.

NOTE:

Switch (B) activates the header tilt or reel fore-aft controls. For instructions on header tilt or reel fore-aft controls, refer to *Adjusting Header Angle from Combine, page 151*.

NOTE:

For CNH combines the switch to activate the header tilt or reel fore-aft controls is on the back of the ground speed lever (GSL).

- 2. For recommended draper settings, refer to one of the following:
 - 3.7.2 Header Settings, page 69
 - 3.7.3 Optimizing Header for Straight-Combining Canola, page 81

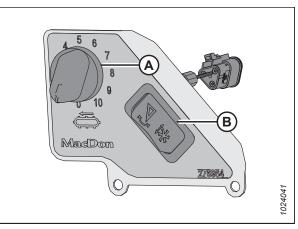


Figure 3.208: In-Cab Side Draper Speed Control

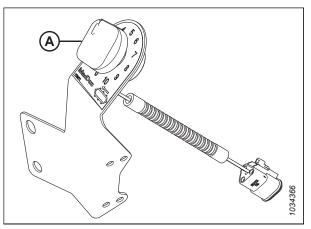


Figure 3.209: CNH In-Cab Side Draper Speed Control

Feed Draper Speed

The feed draper moves the cut crop from the side drapers into the float module feed auger.

The float module feed draper (A) is driven by a hydraulic motor and a pump that is powered by the combine feeder house drive through a gearbox on the float module.

The feed draper speed is determined by the combine feeder house speed and cannot be independently adjusted.

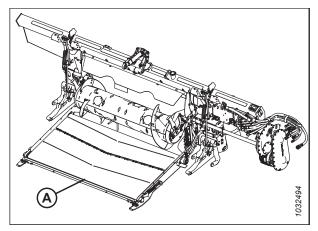


Figure 3.210: FM200 Float Module

3.9.9 Knife Speed Information

The float module is driven by a driveline that is attached to the combine feeder house. The driveline attaches to a gearbox that drives the knife drive pump.

Table 3.18 Feeder House Speed

Combine	Feeder House Speed (rpm)	
Case IH	580	

	Recommended Knife Drive Speed Range (rpm)		
Header	Single-Knife Drive	Double-Knife Drive	
FD225	600–700	_	
FD230	600–750	_	
FD235	600–700	600–750	
FD240	600–650	600–750	
FD241	_	600–750	
FD245	—	600–750	
FD250	_	600–750	

Table 3.19 FD2 Series Header Knife Speed

NOTE:

All sizes of headers are set to 650 rpm. This knife speed will work fine in normal cutting conditions.

IMPORTANT:

Ensure the knife speed is within the range of rpm values in Table 3.19, page 156. For instructions, refer to Checking Knife Speed, page 157.

IMPORTANT:

To avoid causing the knife to overspeed, set the knife speed while the feeder house speed is to set maximum speed.

Checking Knife Speed

Knife speed is important to proper operation of the header.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.

DANGER

Ensure that all bystanders have cleared the area.

- 3. Start the engine. For instructions, refer to the combine operator's manual.
- 4. Engage the header drive, and run the feeder house at the maximum speed. For maximum speed information, refer to Table *3.20, page 157*.

Table 3.20 Feeder House Speed

Combine	Feeder House Speed (rpm)
Case IH	580

IMPORTANT:

Before checking the knife speed, make sure the feeder house is set to maximum speed. This will prevent the knife from overspeeding when making further adjustments.

- 5. Run the float module and the header until the oil temperature is 38°C to 52°C (100°F to 125°F).
- 6. Measure the rpm of flywheel (A) with a hand-held photo tachometer.

NOTE:

One revolution (rpm) is equivalent to two knife strokes (spm) (1 rpm = 2 spm).

7. Shut down the engine, and remove the key from the ignition.

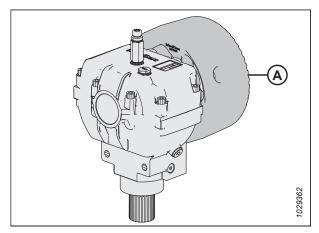


Figure 3.211: Flywheel

Г

8. Compare the flywheel rpm measurement with the rpm values in Table *3.20, page 157*.

NOTE:

All header models are factory-set to 650 rpm. This knife speed will work fine in normal cutting conditions.

 Contact your MacDon Dealer if the pulley rpm measurement exceeds the specified rpm range for your header.

Header	Recommended K Range	nife Drive Speed (rpm)
neauer	Single-Knife Drive	Double-Knife Drive
FD225	600–700	_
FD230	600–750	—
FD235	600–700	600–750
FD240	600–650	600–750
FD241	_	600–750
FD245	_	600–750
FD250	_	600–750

3.9.10 Reel Height

The reel operating position depends on the type of crop and cutting conditions.

Set the reel height and fore-aft position to carry material past the knife and onto the drapers with minimal damage to the crop.

The reel height is controlled manually or with button presets on the ground speed lever (GSL) in the combine cab. Refer to your combine operator's manual for instructions on controlling reel height or setting up auto reel height presets. Where applicable, this manual contains instructions for presetting reel height on selected combines. Refer to *3.10 Auto Header Height Control, page 200* for more information.

For more information on fore-aft positioning, refer to 3.9.11 Reel Fore-Aft Position, page 163.

Table 3.22 Reel Position

Crop Condition	Reel Position
Lodged rice	 Lower the reel Change reel speed and/or cam setting Change fore-aft position by extending the reel
Bushy or heavy standing (all)	Raised

The following conditions might result if the reel is set too low:

- Crop loss over the header backtube
- Crop disturbance on the drapers caused by the reel fingers
- Crop pushed down by the tine tubes
- Tall crop wrapped around the reel drive and ends

The following conditions might result if the reel is set too high:

- Cutterbar plugging
- Crop lodging and being left uncut
- Grain stalks dropping ahead of the cutterbar

Table 3.21 FD2 Series Header Knife Speed

For recommended reel heights for specific crops and crop conditions, refer to 3.7.2 Header Settings, page 69.

IMPORTANT:

Maintain adequate clearance to prevent fingers contacting the knife or the ground. For instructions, refer to 4.13.1 Reel Clearance to Cutterbar, page 410.

Checking and Adjusting Reel Height Sensor

The orientation of the reel height sensor arm must be checked manually at the sensor, and the output voltage range of the sensor can be checked either manually at the sensor or from inside the cab.

IMPORTANT:

Ensure the minimum reel height is properly set before adjusting the reel height sensor. For instructions, refer to 4.13.1 Reel Clearance to Cutterbar, page 410.

NOTE:

For in-cab instructions, refer to the combine operator's manual.



DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

DANGER

Ensure that all bystanders have cleared the area.

Checking and adjusting sensor arm orientation

- 1. Park the combine on a level surface.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. On the right endsheet, locate reel height sensor (A). It connects to the right reel arm.

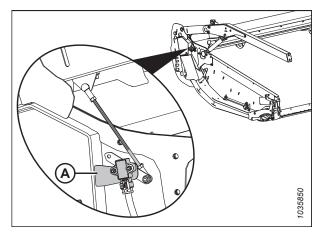


Figure 3.212: Reel Height Sensor Location

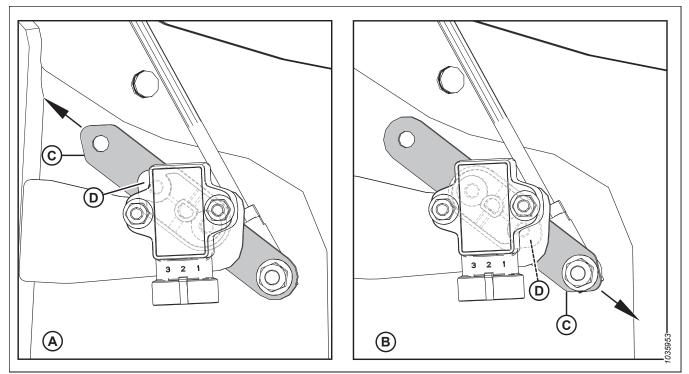


Figure 3.213: Sensor Arm/Pointer Configurations

A - Incorrect Configuration

B - Case/New Holland Configuration

D - Sensor Pointer (Located Between Sensor and Sensor Arm)

4. Check that sensor arm (C) and pointer (D) are configured properly for your machine, refer to Figure 3.213, page 160.

NOTE:

C - Sensor Arm

In configuration **A**, the arrow indicates that the pointed end of the sensor arm is pointed toward the back of the header.

In configuration **B**, the arrow indicates that the pointed end of the sensor arm is pointed toward the front of the header.

5. If the sensor arm orientation is incorrect, remove sensor arm (C) and reposition it in the correct orientation. Torque the nut to 8.2 Nm (6 lbf·ft).

Checking and adjusting sensor output voltage when the reel is lowered

- 6. Engage the parking brake.
- 7. Start the engine. For instructions, refer to the combine operator's manual.
- 8. Lower the reel fully.
- 9. Use the combine display or a voltmeter (if measuring the sensor manually) to measure the voltage range when the reel is lowered. Refer to Table *3.23, page 160* for range requirements.

Table 3.23 Reel Height Sensor Voltage Limits

Combine Type	Recommended	Voltage Range
	Voltage with Reel Raised	Voltage with Reel Lowered
Case/New Holland	0.7–1.1 V	3.9–4.3 V

- 10. Shut down the engine, and remove the key from the ignition.
- 11. Using a voltmeter, measure the voltage between the ground (pin 2 wire) and the signal (pin 3 wire) at reel height sensor (B).
- Check if the voltage is within the recommended voltage range. If the voltage is not within range, loosen jam nuts (D) and (E), and adjust the rod length. Hand-tighten the jam nuts, and then use a wrench to tighten them another quarter-turn.

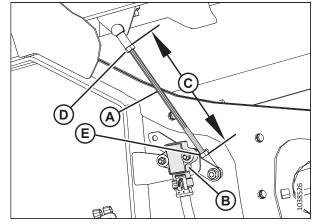


Figure 3.214: Reel Height Sensor – Right Reel Arm with Reel Down

Checking and adjusting sensor output voltage when the reel is raised

- 13. Start the engine, and fully raise the reel.
- 14. Use the combine display or a voltmeter (if measuring the sensor manually) to measure the voltage range when the reel is raised. Refer to Table *3.23, page 160* for range requirements.
- 15. Shut down the engine, and remove the key from the ignition.
- 16. Using a voltmeter, measure the voltage between the ground (pin 2 wire) and the signal (pin 3 wire) at the reel height sensor (A).
- 17. If the voltage is not within the recommended range, loosen two M5 hex nuts (B) and rotate sensor (A) to achieve the recommended voltage range. Tighten nuts (B) to 2.5 Nm (2 lbf·ft).
- 18. Repeat checking and adjusting until the voltage range is within the range specified.
- 19. Start the engine.
- 20. Lower the reel fully.
- 21. Recheck the voltage range and ensure it is still within the range specified. Adjust if required.

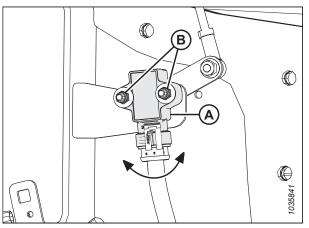


Figure 3.215: Reel Height Sensor – Right Reel Arm with Reel Up


Replacing Reel Height Sensor

The reel height sensor is used to reference where the reel is positioned above from the cutterbar.


To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

- 1. Start the engine.
- 2. Lower the reel fully.

- 3. Shut down the engine, and remove the key from the ignition.
- 4. Disconnect the harness from sensor (A).
- 5. Remove two hex head bolts (B) from sensor arm (C). Retain the hardware for reinstallation.

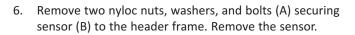

 Install new sensor (B) onto bracket (C) on the header frame. Attach it using retained bolts (A), washers, and nyloc nuts. Torque bolts (A) to 2–3 Nm (17–27 lbf·in).

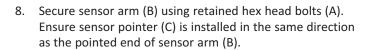

- 9. Torque bolts (A) to 4 Nm (35 lbf·in).
- 10. Connect the harness to the sensor.
- 11. Check the sensor voltage range. For instructions, refer to *Checking and Adjusting Reel Height Sensor, page 159.*

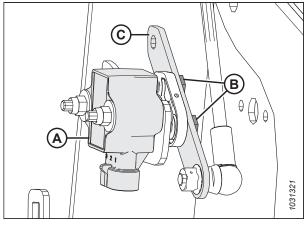


Figure 3.216: Reel Height Sensor – Right Reel Arm

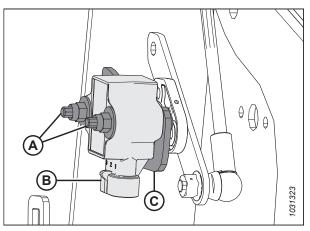


Figure 3.217: Reel Height Sensor – Right Reel Arm

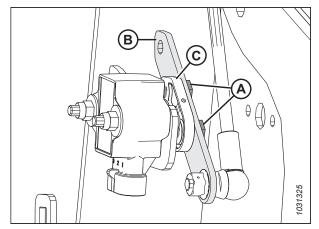


Figure 3.218: Reel Height Sensor – Right Reel Arm

3.9.11 Reel Fore-Aft Position

Reel fore-aft position is a critical factor for achieving the best results in adverse conditions. The factory-recommended reel position has the position marker centered over numbers (4–5 on the indicator). This suits normal conditions, but the fore-aft position can be adjusted as required using the controls inside the cab.

The reel can be moved approximately 155 mm (6 in) farther aft by repositioning the fore-aft cylinders on the header's reel arms to accommodate certain crop conditions.

- For single-reel headers, refer to Repositioning Fore-Aft Cylinders Single Reel, page 164.
- For double-reel headers, refer to Repositioning Fore-Aft Cylinders Double Reel, page 167.
- For triple-reel headers, refer to *Repositioning Fore-Aft Cylinders Triple Reel, page 170.*

The reel position indicator (A) is located at the left reel arm. Bracket (B) is the reel fore-aft position marker.

For straight standing crop, center the reel over the cutterbar (4–5 on indicator).

For crops that are down, tangled, or leaning, it may be necessary to move the reel ahead of the cutterbar (lower number on indicator).

NOTE:

If experiencing difficulty picking up flattened crop, adjust to a steeper header angle. Refer to *3.9.5 Header Angle, page 150* for adjustment instructions. Adjust reel position only if header angle adjustments are not satisfactory.

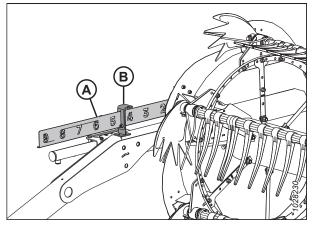


Figure 3.219: Fore-Aft Indicator

NOTE:

In crops that are difficult to pick up such as rice, or severely lodged crops that require full forward positioning of the reel, set the reel tine pitch to provide proper placement of the crop onto the drapers. Refer to 3.9.12 Reel Tine Pitch, page 176 for adjustment details.

Adjusting Reel Fore-Aft Position

The factory-set reel position suits many conditions, but the fore-aft position can be adjusted as required using the controls inside the cab.

To adjust the reel fore-aft position, follow these steps:

1. Select FORE-AFT mode on the selector switch in the cab.

- Operate the hydraulics to move the reel to the desired position while using fore-aft indicator (A) as a reference. Bracket (B) is the position marker.
- 3. Check the reel clearance to cutterbar after making changes to the cam setting. Refer to the following for measurement and adjustment procedures:
 - 4.13.1 Reel Clearance to Cutterbar, page 410
 - 4.13.2 Reel Frown, page 418

IMPORTANT:

Operating with the reel too far forward can result in the fingers contacting the ground. When operating with the reel in this position, lower the skid shoes or adjust the header tilt as required to prevent damaging the fingers.

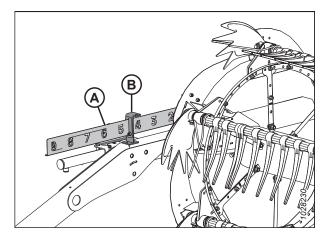


Figure 3.220: Fore-Aft Indicator

Repositioning Fore-Aft Cylinders – Single Reel

The reel can be moved approximately 155 mm (6 in.) farther aft by repositioning the fore-aft cylinders on the reel arms. This may be desirable when straight-combining canola.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

IMPORTANT:

Ensure all fore-aft cylinders are set to the same position.

- 1. Position reel fully aft with support arms horizontal.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Remove hairpin (A) securing multi-tool to holder bracket on left endsheet.
- 4. Remove multi-tool (B), and reinstall hairpin to holder.

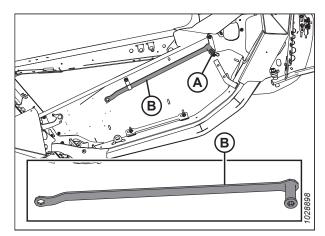


Figure 3.221: Left Endsheet

Reposition the outer right cylinder as follows:

1. Remove split ring (A), clevis pin (B), and flat washer securing the right fore-aft cylinder in the forward position.

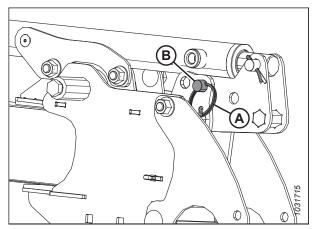


Figure 3.222: Right Arm Cylinder – Forward Position

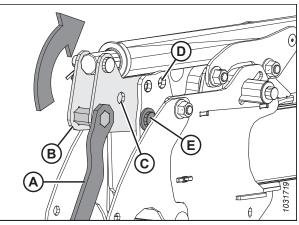


Figure 3.223: Right Arm Cylinder – Forward Position

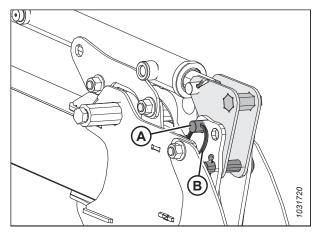


Figure 3.224: Right Arm Cylinder – Aft Position

2. Use multi-tool (A) to push bracket (B) rearward until hole (C) aligns with hole (D). The reel will move rearward as bracket (B) rotates on bottom pin (E).

3. When the bracket holes are lined up, secure in aft position with clevis pin (A), washer, and split ring (B).

Reposition the outer left cylinder as follows:

1. Remove split ring (A) and clevis pin (B) securing the left cylinder in forward position on cylinder bracket (C).

2. Grab hold of the cylinder, and use guides (A) to slide the cylinder along the bracket slot and into aft position (B).

Reinstall clevis pin (A) and split ring (B) to secure the

cylinder in aft position (C) on the bracket.

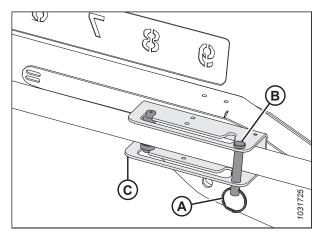


Figure 3.225: Left Arm Cylinder – Forward Position

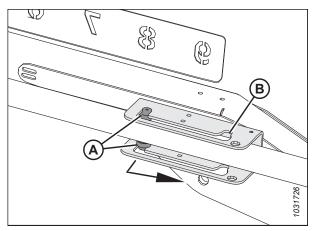


Figure 3.226: Left Arm Cylinder – Forward Position

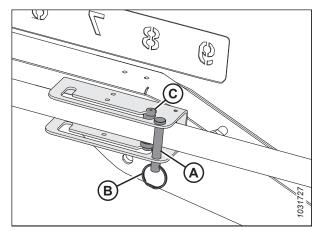


Figure 3.227: Left Arm Cylinder – Aft Position

- 4. Check reel clearance to backsheet, upper cross auger (if installed), and reel braces.
- 5. Adjust reel tine pitch (if required). For adjustment procedures, refer to 3.9.12 Reel Tine Pitch, page 176.

3.

Repositioning Fore-Aft Cylinders – Double Reel

The reel can be moved approximately 155 mm (6 in.) farther aft by repositioning the fore-aft cylinders on the reel arms. This may be desirable when straight-combining canola.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

IMPORTANT:

Ensure all fore-aft cylinders are set to the same position.

- 1. Position the reel fully aft so that the support arms are horizontal.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Remove hairpin (A) securing the multi-tool to the holder bracket on the left endsheet.
- 4. Remove multi-tool (B), and reinstall the hairpin to the holder.

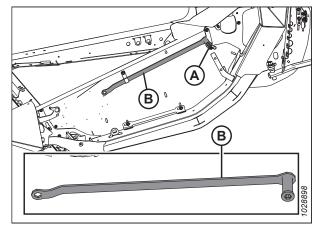


Figure 3.228: Left Endsheet

Repositioning the center cylinder

NOTE:

There are two center cylinders on triple-reel headers.

5. Remove split ring (A), clevis pin (B), and the washer securing the center fore-aft cylinder in the forward position.

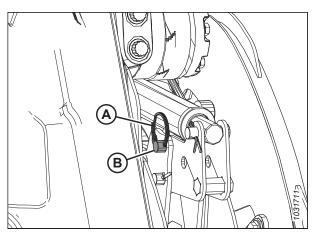


Figure 3.229: Center Arm Cylinder – Forward Position

6. Use multi-tool (A) to push bracket (B) rearward until hole (C) aligns with hole (D). The reel will move rearward as bracket (B) rotates on bottom pin (E).

7. Secure the center arm cylinder in the aft position with clevis pin (A), washer, and split ring (B).

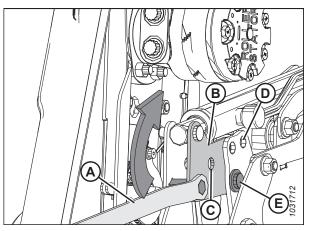


Figure 3.230: Center Arm Cylinder – Forward Position

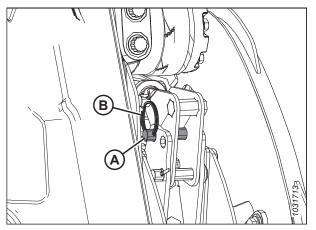


Figure 3.231: Center Arm Cylinder – Aft Position

Repositioning the outer right cylinder

1. Remove split ring (A), clevis pin (B), and flat washer securing the right fore-aft cylinder in the forward position.

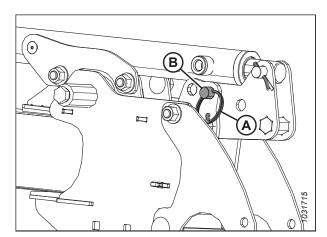


Figure 3.232: Right Arm Cylinder – Forward Position

2. Use multi-tool (A) to push bracket (B) rearward until hole (C) aligns with hole (D). The reel will move rearward as bracket (B) rotates on bottom pin (E).

3. Secure the right fore-aft cylinder in the aft position with clevis pin (A), washer, and split ring (B).

1. Remove split ring (A) and clevis pin (B) securing the left cylinder in forward position on cylinder bracket (C).

Repositioning the outer left cylinder

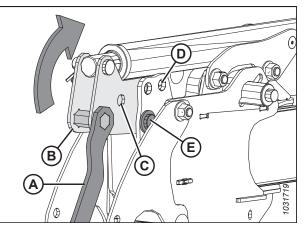


Figure 3.233: Right Arm Cylinder – Forward Position

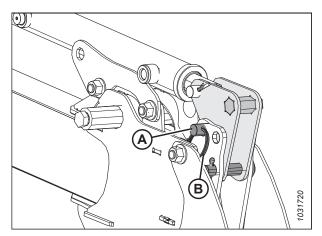


Figure 3.234: Right Arm Cylinder – Aft Position

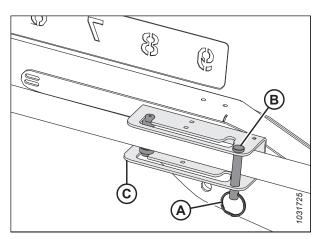


Figure 3.235: Left Arm Cylinder – Forward Position

2. Slide cylinder guides (A) along the bracket slot and into aft position (B).

Reinstall clevis pin (A) and split ring (B) to secure the

cylinder in aft position (C) on the bracket.

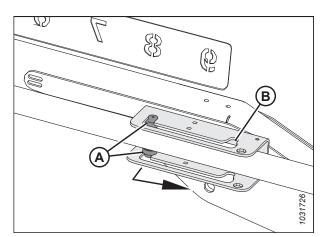


Figure 3.236: Left Arm Cylinder – Forward Position

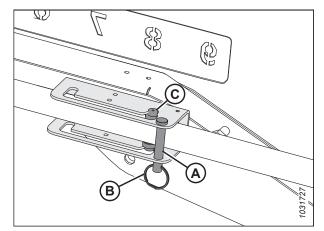


Figure 3.237: Left Arm Cylinder – Aft Position

- 4. Ensure clearance between reel and backsheet, upper cross auger (if installed), and reel braces.
- 5. For recommended reel settings based on crop and conditions, refer to 3.7 Header Setup, page 69.

Repositioning Fore-Aft Cylinders – Triple Reel

The reel can be moved approximately 155 mm (6 in.) farther aft by repositioning the fore-aft cylinders on the reel arms This may be desirable when straight-combining canola.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

IMPORTANT:

3.

Ensure all fore-aft cylinders are set to the same position.

- 1. Position the reel fully aft with the support arms horizontal.
- 2. Shut down the engine, and remove the key from the ignition.

- 3. Remove hairpin (A) securing the multi-tool to the holder bracket on the left endsheet.
- 4. Remove multi-tool (B), and reinstall the hairpin onto the holder.

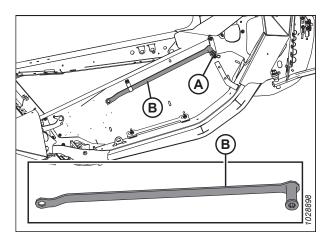


Figure 3.238: Left Endsheet

Repositioning the center left and center right fore-aft cylinders

5. Remove split ring (A) and clevis pin (B) securing the center fore-aft cylinder in the forward position.

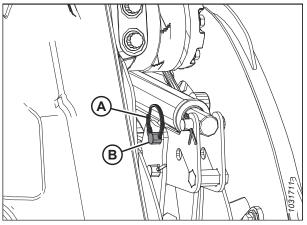


Figure 3.239: Center Left Arm Cylinder – Forward Position

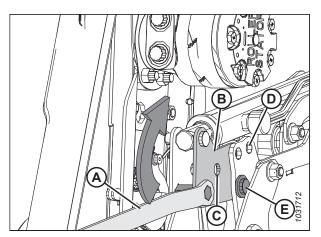


Figure 3.240: Center Left Arm Cylinder – Forward Position

 Use multi-tool (A) to push bracket (B) rearward until hole (C) aligns with hole (D). The reel will move rearward as bracket (B) rotates on bottom pin (E).

7. Secure the center left cylinder in the aft position with clevis pin (A) and split ring (B).

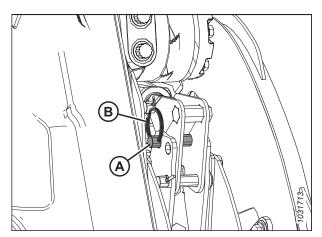


Figure 3.241: Center Left Arm Cylinder – Aft Position

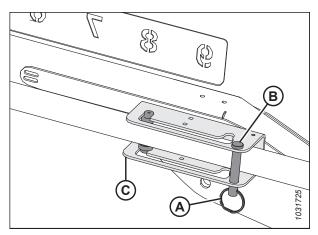


Figure 3.242: Outer Left Arm Cylinder – Forward Position

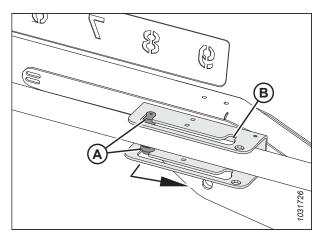


Figure 3.243: Outer Left Arm Cylinder – Forward Position

- Repositioning the outer left and outer right fore-aft cylinders
- 1. Remove split ring (A) and clevis pin (B) securing the left cylinder in the forward position on cylinder bracket (C).

2. Slide cylinder guides (A) along the bracket slot and into aft position (B).

3. Reinstall clevis pin (A) and split ring (B) to secure the cylinder in aft position (C) on the bracket.

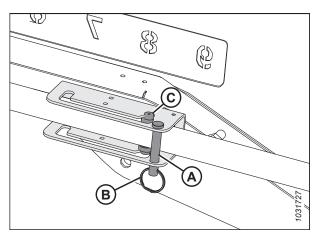


Figure 3.244: Outer Left Arm Cylinder – Aft Position

- 4. Ensure clearance between reel and backsheet, upper cross auger (if installed), and reel braces
- 5. For recommended reel settings based on crop and conditions, refer to 3.7 Header Setup, page 69.

Checking and Adjusting Fore-Aft Position Sensor

There is a sensor that informs the combine where the reel is positioned when adjusted in the fore and aft directions, and displays that information for the operator. The sensor arm's orientation and the sensor's output voltage range must be set correctly for your machine.

Checking and adjusting the orientation of the sensor arm

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Park the combine on a level surface.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Check the orientation of sensor arm (C) and hardware (D). Ensure that the sensor arm is configured properly for your machine; refer to Figure 3.245, page 174.

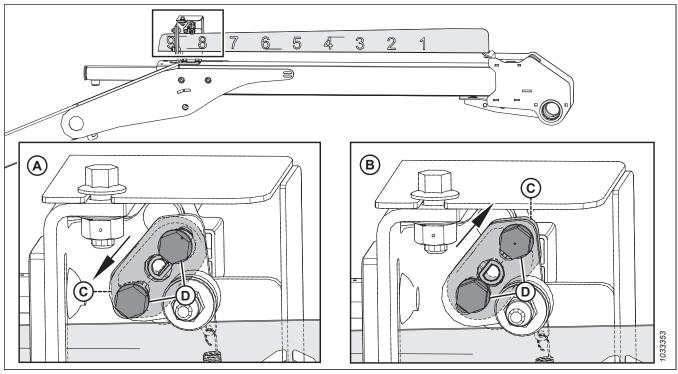


Figure 3.245: Sensor Arm Configurations

A - Incorrect Configuration

C - Sensor Arm

B - Case/New Holland Configuration

D - Mounting Hardware

- If sensor arm (C) is not oriented correctly, remove it and then reinstall it in the correct orientation. 4.

Checking and adjusting the sensor's output voltage

WARNING

Check to be sure all bystanders have cleared the area.

5. Engage the parking brake.

IMPORTANT:

To measure the output voltage of the fore-aft sensor, the engine needs to be running and supplying power to the sensor. Always engage the parking brake and stay away from the reel.

6. Start the engine.

 Adjust the reel to the fully forward position. Dimension (B) (from the sensor bracket to the end of the indicator) should be 62–72 mm (2.4–2.8 in.).

8. Use the combine display or a voltmeter (if measuring the sensor manually) to measure the voltage range. If using a

• For Case and New Holland combines: 0.7–1.1 V

9. Shut down the engine, and remove the key from

and pin 3 (signal). The range should be

the ignition.

voltmeter, check sensor (A) voltage between pin 2 (ground)

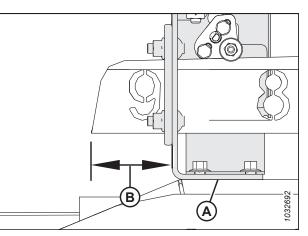


Figure 3.246: Fore-Aft Bracket

Figure 3.247: Fore-Aft Sensor

- 10. If adjustment is required, loosen hardware (A) and rotate sensor (B) until the voltage is in the correct range.
- 11. Once sensor adjustment is complete, torque the hardware to 2.1 Nm (22 lbf·in).

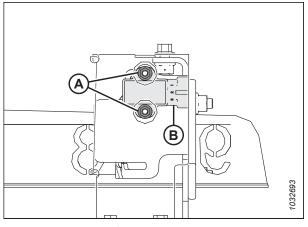


Figure 3.248: Fore-Aft Sensor

3.9.12 Reel Tine Pitch

Reel tine pitch is a term used to describe the position of the reel fingers in relation to the cutterbar. The reel tine pitch can be changed by changing the reel fore-aft position and the reel cam setting. You may wish to change the reel tine pitch to suit different harvesting conditions.

Changing the reel position has the largest impact on the reel tine pitch. Changing the cam setting, on the other hand, has a smaller impact on reel tine pitch. For example, with the cam position range at 33°, the corresponding finger pitch range is only 5° at the lowest point of the reel's rotation.

For the best results, use the minimum cam setting that delivers the crop past the rear edge of the cutterbar and onto the drapers. For more information, refer to *3.7.2 Header Settings, page 69*.

Reel Cam Settings

Changing the cam position allows you to adjust the point at which the reel fingers release gathered crop to the drapers. Recommendations are provided for reel cam settings in various harvesting conditions.

The setting numbers are visible above the slots on the cam disc. For instructions, refer to Adjusting Reel Cam, page 178.

NOTE:

For the recommended reel tine pitch setting to use in various harvesting conditions, refer to 3.7.2 Header Settings, page 69.

Cam Position 1, Reel Position 6 or 7 delivers the most even crop flow onto the drapers without fluffing or disturbing the material.

- This setting will release crop close to the cutterbar. Use this setting when the cutterbar is on the ground while harvesting.
- Some crops will not be delivered past the cutterbar when the cutterbar is raised off tof he ground while the reel is far forward. Therefore, set the initial reel speed so that it close to the ground speed.

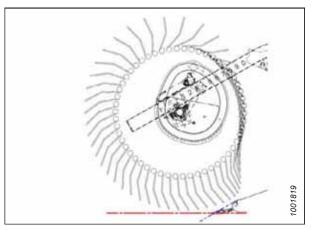


Figure 3.249: Finger Profile – Position 1

Cam Position 2, Reel Position 3 or 4 is the recommended starting position for most crops and conditions.

- If the crop is stalling on the cutterbar when the reel is in the forward position, increase the cam setting to push the crop past the rear edge of the cutterbar.
- If the crop is getting fluffed or if there is a disruption to the flow across the drapers, decrease the cam setting.
- This setting results in the reel fingertip speed being approximately 20% faster than the reel speed.

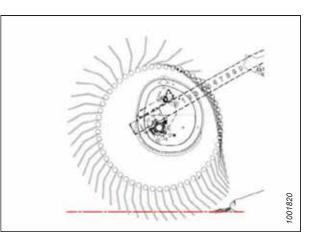


Figure 3.250: Finger Profile – Position 2

Cam Position 3, Reel Position 6 or 7 is mainly used to leave long stubble.

- This position allows the reel to reach forward and lift the crop across the knife and onto the drapers.
- This setting results in the reel fingertip speed being approximately 30% faster than the reel speed.

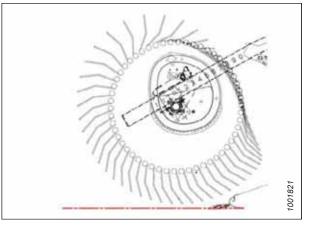


Figure 3.251: Finger Profile – Position 3

Cam Position 4, Reel Position 2 or 3 is used with the reel is fully forward. Using this setting results in the header leaving the maximum amount of stubble when harvesting in lodged crops.

- This position allows the reel to reach forward and lift the crop across the knife and onto the drapers.
- This setting results in the reel fingertip speed being approximately 35% faster than the reel speed.

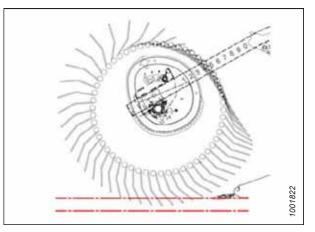


Figure 3.252: Finger Profile – Position 4

Cam Position 4, Header Angle at Maximum, and Reel Fully Forward provides the maximum amount of reel reach below the cutterbar to pick up lodged crops.

- This position leaves a significant amount of stubble when the cutting height is set to approximately 203 mm (8 in.). In damp materials such as rice, it is possible to double the combine's ground speed because of the reduction of cut material.
- This setting results in a the reel fingertip speed being approximately 35% faster than the reel speed.

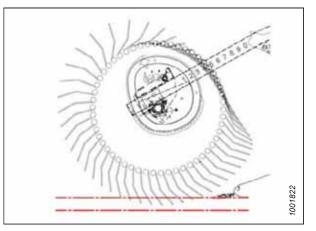


Figure 3.253: Finger Profile – Position 4

NOTE:

Using higher cam settings when the reel's fore-aft position is set between 4 and 5 results in drastically decreased draper capacity. This happens because the reel fingers continually engage with crop that is already moving on the drapers, resulting in disrupted flow into the combine feeder house. Higher cam settings are recommended only when the reel is at or close to the fully forward setting.

Adjusting Reel Cam

The reel cam can be adjusted to change the reel tine pitch.

IMPORTANT:

Always check the reel-to-cutterbar clearance after adjusting the reel tine pitch and reel fore-aft positions. For information, refer to 4.13.1 Reel Clearance to Cutterbar, page 410.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

If there are multiple reel cams, the adjustments need to be made on all of the reel cams.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Remove hairpin (A) securing multi-tool (B) to bracket on the left endsheet.

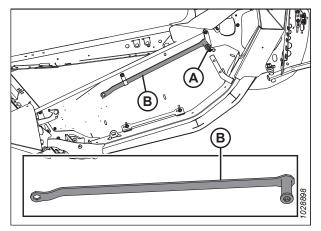


Figure 3.254: Left Endsheet

3. Turn latch pin (A) **COUNTERCLOCKWISE** using multi-tool to release the cam disc.

IMPORTANT:

Refer to the cam latch decal for the locking/unlocking rotation direction. Forcing the cam latch in the wrong direction can damage the roll pins.

4. Use the multi-tool on bolt (B) to rotate the cam disc and align latch pin (A) with the desired cam disc hole position (C) (1 to 4).

NOTE:

Bolt (B) is welded to the cam support.

5. Turn latch pin (A) **CLOCKWISE** to engage and lock the cam disc.

IMPORTANT:

Ensure the cam is secured into position before operating the machine.

6. Repeat the above procedure for all reels.

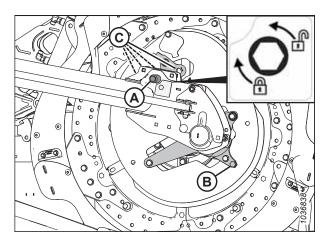


Figure 3.255: Cam Disc Positions

3.9.13 Upper Cross Auger

The Upper Cross Auger (UCA) improves crop feeding into the center of the header in heavy crop conditions. It is ideal for high-volume harvesting forages, oats, canola, mustard, and other tall, bushy, hard-to-convey crops.

The shutoff valve (A) turns off the UCA when it is not needed.

NOTE:

Even though the UCA is shut off, it still needs to be greased at the regular intervals because of the movement of the wings.

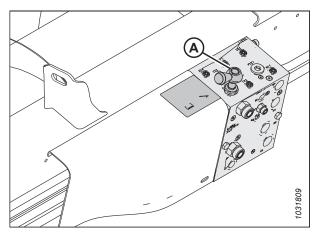


Figure 3.256: Shutoff Valve

Adjusting Upper Cross Auger Position

The upper cross auger (UCA) has an adjustable mount that allows the auger position to be adjusted for different harvesting conditions. Headers with three-piece augers have two adjustable mounts: one on each end of the center auger.

NOTE:

For information on the positions of the primary and secondary front bolts, refer to Figure 3.259, page 180.

The mount(s) are initially installed in the rear-most position, so that front bolt (A) is in the primary position. This is the recommended configuration for most conditions.

When front bolt (A) is in the primary position, the auger and the reel are safe to operate in any position. The position of the auger can be adjusted (to a limited extent) by changing the position of the mount with respect to rear bolt (B).

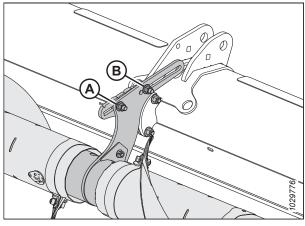


Figure 3.257: Initial Position of Adjustable Mounts – Two-Piece Auger

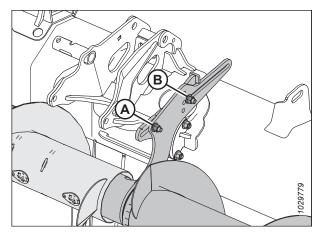


Figure 3.258: Initial Position of Adjustable Mounts – Three-Piece Auger

When the front bolt is moved to secondary position (B), the auger position can be adjusted to a greater extent. For threepiece augers, additional secondary positions (B) are available if you wish to raise or lower the auger. When the front bolt is in one of these positions, the fore-aft adjustment is limited, which prevents the UCA from interfering with the feed auger and the header frame.

IMPORTANT:

When the front bolt is in one of secondary positions (B) and the reel is in its rear-most position, the reel fingers and cam arms may contact the UCA. When the reel is moved fully back (for example, when harvesting canola), the UCA must also be moved fully back in order to allow for sufficient clearance between the reel fingers and the auger.

Move the auger forward to

- Help convey light crops, especially on side hills
- Improve the feeding of light crops
- Reduce the reel carry over or the crop flow disruption caused by the reel

Move the auger rearward to

- Increase the available volume for conveying heavy crop
- Keep the auger close to the deflectors to prevent crop from getting behind the auger and wrapping around the auger

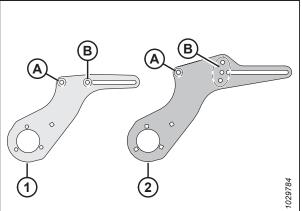


Figure 3.259: Adjustable Mount Details

- 1 Two-Piece Auger Mount
- 2 Three-Piece Auger Mount
- A Primary Position for Front Bolt
- B Secondary Position(s) for Front Bolt

To adjust the auger position, do the following:

1. Locate the adjustable mount.

NOTE:

On two-piece augers, the adjustable mount protrudes from the center support assembly. On three-piece augers, the adjustable mount protrudes from the ends of the center auger.

NOTE:

The illustration shows the left adjustable mount on a threepiece auger. The adjustable mount on a two-piece auger is similar, but has only one secondary position for the front bolt instead of three. Refer to Figure *3.259, page 180* for more information.

- 2. If desired, relocate front bolt and nut (A). The front bolt and nut have two possible locations on two-piece augers: the primary location and the secondary location. On threepiece augers, there are four possible locations: one primary location and three secondary locations.
- 3. Loosen front nut (A) and rear nut (B) just enough to allow the adjustable mount to slide.
- 4. Move the mount to the desired position.
- 5. Retighten nuts (A) and (B). Torque the nuts to 69 Nm (51 lbf·ft).
- 6. If a three-piece UCA is installed, repeat this procedure on the second adjustable mount.

IMPORTANT:

On headers with three-piece augers, ensure that both mounts are in the same position.

7. Check for interference between the reel fingers and the UCA. Check for interference between the cam arms and the UCA along the entire hydraulic fore-aft range of the reel. For instructions, refer to *Checking Upper Cross Auger for Interference, page 181.*

Checking Upper Cross Auger for Interference

If the upper cross auger (UCA) is out of adjustment, it can contact the reel or the header frame. The clearance between the UCA and certain header components will need to be inspected.

Ensure that all bystanders have cleared the area.

- 1. Start the engine.
- 2. Fully retract the reel in the fore-aft dimension.

NOTE:

Fully retracting the reel will ensure that the reel is as close as possible to the UCA.

NOTE:

If the reel cam adjustment is changed, this procedure will need to be performed again.

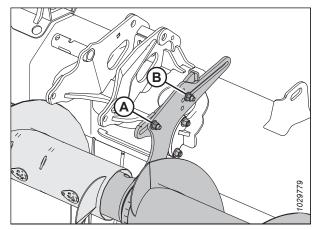


Figure 3.260: Initial Position of Adjustable Mounts – Three-Piece Auger

3. Place 254–356 mm (10–14 in) blocks under the cutterbar at both ends of the header. Lower the reel onto the blocks so that the header wings form a smile shape.

To prevent injury or death from the unexpected startup of the machine, stop the engine and remove the key from the ignition before you make adjustments to the machine.

- 4. Shut down the engine, and remove the key from the ignition.
- Manually rotate UCA (A). Ensure that the clearance between the UCA and the header components is at least 10 mm (13/32 in.) at the following locations:
 - Reel cam arms (B)
 - Reel fingers (C)
 - Reel cylinder supports (D)
 - FD241, FD245, and FD250: Split frame joint (E)
- 6. If the clearance between the UCA and the header components requires adjustment, proceed to *Adjusting Upper Cross Auger Position, page 179.*

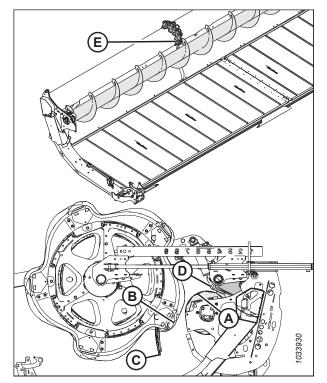


Figure 3.261: UCA Clearance Check Locations

3.9.14 Crop Dividers

Crop dividers are used to separate the crop when harvesting. They are removable to allow the installation of vertical knives or the sunflower attachment, and to decrease transport width.

Standard crop dividers are provided with all headers. Optional floating crop dividers may also be purchased. Refer to 5.1.4 *Floating Crop Dividers, page 478*.

Removing Crop Dividers

Crop dividers can be removed to allow installation of other options or to decrease transport width.



To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

- 1. Lower the reel and raise the header. For instructions, refer to your combine operator's manual for instructions.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the safety props. For instructions, refer to your combine operator's manual for instructions.

- 4. Open the endshields. For instructions, refer to *Opening Header Endshields, page 35*.
- 5. Remove lynch pin (A).
- 6. Hold onto crop divider (E).
- 7. Rotate hex shaft (B) on divider latch (C) forward to disengage it from bolt (D).

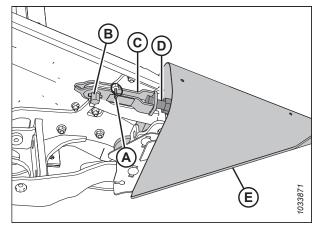


Figure 3.262: Crop Divider with Latch

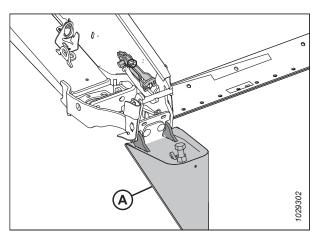


Figure 3.263: Crop Divider with Latch

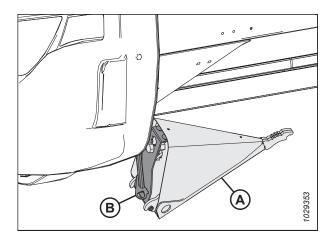


Figure 3.264: Optional Crop Divider Storage

- 8. Lower crop divider (A), and remove it from the endsheet.
- 9. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36*.

- 10. If installed, place crop divider (A) onto optional storage position on bracket (B).
- 11. If not installed, place crop dividers in a safe location.

Installing Crop Dividers

Follow these instructions to properly instal the crop dividers.



DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

- Start the engine. 1.
- 2. Lower the reel fully.
- Raise the header fully. 3.
- Shut down the engine, and remove the key from the ignition. 4.
- Engage the header safety props. Refer to the combine operator's manual for instructions. 5.
- 6. If optional storage bracket is installed. Remove crop divider (A) from storage position by lifting the crop divider so that bolt (B) clears the slot in storage bracket (C).
- 7. If not installed, retrieve crop dividers from where they were stored.
- 8. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.

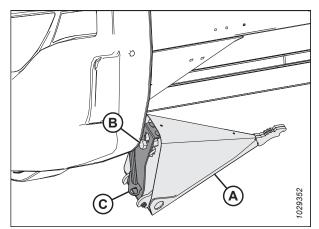


Figure 3.265: Optional Crop Divider

- 9. Insert crop divider lugs (A) into holes in the endsheet as shown.
- 10. Remove lynch pin (B) from latch (C).

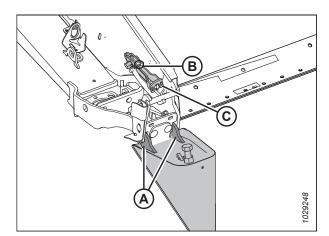


Figure 3.266: Crop Divider with Latch

11. Lift the forward end of latch (A) and crop divider (B).

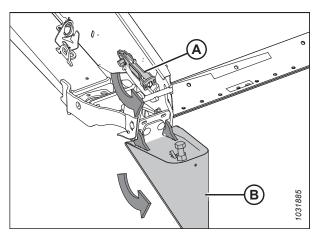


Figure 3.267: Crop Divider with Latch

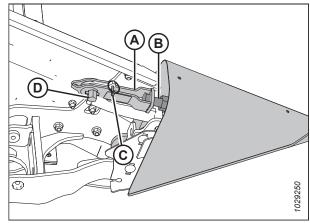


Figure 3.268: Crop Divider with Latch

12. Engage latch (A) onto crop divider bolt (B).

13. Rotate hex shaft (D) on latch (A) counter-clockwise to engage lock.

NOTE:

Hex shaft (D) requires a torque of 40–54 Nm (30–40 lbf·ft) to close the latch. If adjustment is required, loosen latch (A) and adjust bolt (B) to correct the amount of torque required.

- 14. Secure with lynch pin (C).
- 15. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36.*

Removing Floating Crop Dividers

Floating crop dividers can be removed to allow installation of other attachments or the standard crop dividers.

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop the engine and remove the key from the ignition before making adjustments to the machine. If it is impossible to engage safety props and impractical to block the header, NEVER climb onto or go underneath an unsupported header.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the reel fully.
- 3. Raise the header 60–90 cm (2–3 ft.) off the ground.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Open the endshield.

- 6. Retrieve multi-tool (A) from the left endsheet.
- 7. Remove lynch pin (B).
- 8. Install multi-tool (A) onto hex shaft (C).
- 9. Rotate the multi-tool downwards until latch (D) releases from bolt (E).
- 10. Lift latch (D) up and off bolt (E).

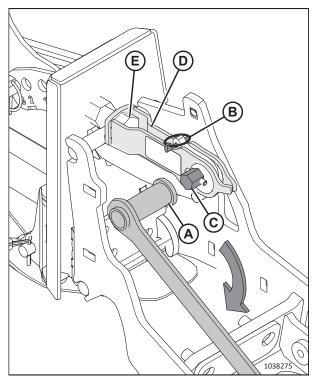


Figure 3.269: Floating Crop Divider Installed

- 11. Tilt the crop divider forward and pull it out of the header.
- 12. Reinstall lynch pin (A).
- 13. Close the endshield.

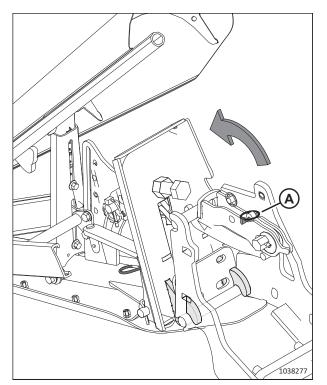


Figure 3.270: Latch Released

Installing Floating Crop Dividers

Follow these instructions to properly install the floating crop dividers.

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop the engine and remove the key from the ignition before making adjustments to the machine. If it is impossible to engage safety props and impractical to block the header, NEVER climb onto or go underneath an unsupported header.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the reel fully.
- 3. Raise the header 60–90 cm (2–3 ft.) off the ground.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Open the endshield.
- 6. Remove lynch pin (A) from quick latch (B).
- 7. Attach multi-tool (C) (stored on the left endsheet) to hex shaft (D) and rotate to release latch (B).
- 8. If crop dividers (E) are installed, lift latch (B) off of bolt (F) and set the crop dividers aside.

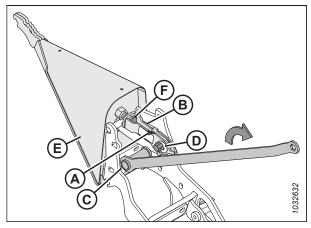


Figure 3.271: Crop Divider Installed

9. Insert crop divider lugs (A) into the slots in the header frame.

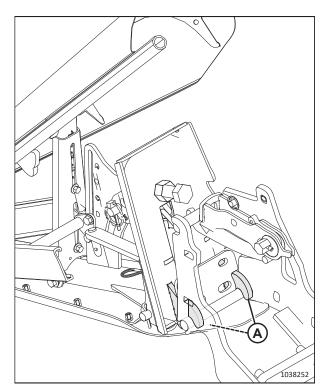


Figure 3.272: Crop Divider Installation

Figure 3.273: Quick Latch

10. Lift the forward end of quick latch (A), and rotate crop divider (B) up into position.

- 11. Engage quick latch (A) onto the bolt.
- 12. Make sure the latch closes tightly and crop divider stop (B) contacts header stop (C).

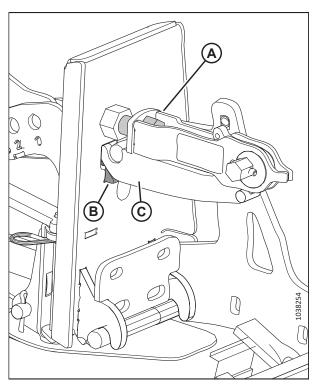


Figure 3.274: Crop Divider Latched to Header

- If the latch requires adjustment, loosen nut (A), and adjust the length of bolt (B) until it takes 40–54 Nm (30–40 lbf·ft) of torque on hex shaft (C) to close the latch.
- 14. Retighten nut (A).
- 15. Attach multi-tool (D) onto hex shaft (C) and rotate the multi-tool to lock the latch.
- 16. Install lynch pin (E) to secure the quick latch in place.
- 17. Repeat Step *6, page 187* to Step *16, page 189* at the opposite end of the header to install the opposite crop divider.

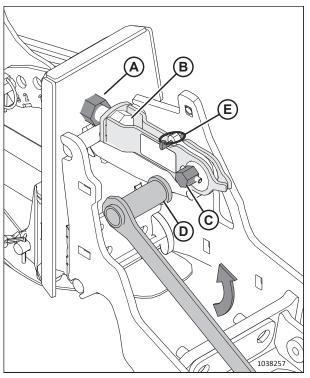


Figure 3.275: Latch Adjustment

- 18. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36*.
- 19. Check the float. For instructions, refer to Checking and Adjusting Header Float, page 127.
- 20. Check the wing balance. For instructions, refer to 3.9.4 Checking and Adjusting Wing Balance, page 146

Adjusting Floating Crop Dividers

Crop dividers can be adjusted for different crop conditions.

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop the engine and remove the key from the ignition before making adjustments to the machine. If it is impossible to engage safety props and impractical to block the header, NEVER climb onto or go underneath an unsupported header.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the reel fully.
- 3. Raise the header 60–90 cm (2–3 ft.) off the ground.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Refer to the chart according to the stubble height range and reel configuration:
 - Field with a stubble height of 50–125 mm (2–5 in.): Refer to Step 6, page 191.
 - Field with a stubble height of 20–100 mm (3/4–4 in.): Refer to Step 7, page 192.
 - Cutterbar on the ground, field with a stubble height of 16–50 mm (5/8–2 in.): Refer to Step 8, page 193.

6. Adjust the h	Adjust the header according to the settings in the table row that describes the crop condition and the stubble height:	settings in the t	able row that d	escribes the cro	p condition and the	stubble height:		
a. Adjust t h Adjust t	Adjust the header angle.							
	היה הכממרו שוומ שווסכש.		To a Deflection C					
c. Adjust ti reel sup	Aajust the floating crop alvider (Down Stop reel supports or the reel. For instructions, r		efer to Step <i>9, page 194</i> to Step <i>15, page 196</i> .	ide Kod) and cc e 194 to Step 1.	to Top Deflector side Kod) and confirm the range of motion set by the down stop does NUT contact the efer to Step <i>9, page 194</i> to Step <i>15, page 196</i> .	iotion set by the c	aown stop does NU	contact the
	Stubble Height	Header Angle ⁶¹	Header Skid Shoes	Down Stop	Nose Cone Fore- Aft Position	Top Deflector Height	Side Deflector Height	Top Deflector Side Rod
Standing Crop	125 mm (5 in.)	А	Down	2	1 or 3	1	С	Ч
	50 mm (2 in.)	ш	Down	1	1 or 3	1.5	U	Ч
Lodged	125 mm (5 in.)	A	Down	2	3 or 4	1	U	Out
	50 mm (2 in.)	Ц	Down	1	3 or 4	2	D	Out
Severely Lodged ⁶²	125 mm (5 in.)	A	Down	2	4	3	D	Out
	125 mm (5 in.)	А	Down	2	5	4	D	Out
	50 mm (2 in.)	Ц	Down	1	4	3	U	Out
	50 mm (2 in.)	ш	Down	1	5	4	C	Out

Table 3.24 Floating Crop Divider Settings – Double- or Triple-Reel Header, Field with a Stubble Height of 50–125 mm (2–5 in.)

_	
in.	
4	
4	
3	
nn	
0	
-100	
20	
of	
ght	
lei	
е Т	
bbl	
itul	
a	
ith	
l wit	
ielc	
Ē	
dei	
lea	
Ē	
Re	
ole	
Trip	
۰ ٦	
le	
ouk	
ŏ	
gs I	
tin	
Set	
er	
vid	
Ö	
rop	
С Ю	
tin	
loa	
5	
3.2	
le	
Tab	
-	

- Adjust the header according to the settings in the table row that describes the crop condition and the stubble height: 7.
- a. Adjust the header angle.
- b. Adjust the header skid shoes.
- Adjust the floating crop divider (Down Stop to Top Deflector Side Rod) and confirm the range of motion set by the down stop does NOT contact the ن ن

	Stubble Height	Header Angle ⁶³	Header Skid Shoes	Down Stop	Nose Cone Fore- Aft Position	Top Deflector Height	Side Deflector Height	Top Deflector Side Rod
Standing Crop	100 mm (4 in.)	А	Middle	2	1 or 3	1	С	п
	20 mm (3/4 in.)	E	Middle	1	1 or 3	1	C	п
Lodged	100 mm (4 in.)	А	Middle	2	3	1	С	Out
	100 mm (4 in.)	А	Middle	2	4	2	С	Out
	20 mm (3/4 in.)	E	Middle	1	3	1	D	Out
	20 mm (3/4 in.)	E	Middle	1	4	2	D	Out
Severely Lodged ⁶⁴	100 mm (4 in.)	A	Middle	2 or 3	4	£	D	Out
	100 mm (4 in.)	А	Middle	2 or 3	5	4	D	Out
	20 mm (3/4 in.)	E	Middle	1	4	3	С	Out
	20 mm (3/4 in.)	E	Middle	1	5	4	C	Out

63. A (min) – E (max)
64. Crop canopy lower than 150 mm (6 in.)

OPERATION

8. Adjust the h	leader according to	the settings in th	e table row th	at describes th	Adjust the header according to the settings in the table row that describes the crop condition and the stubble height:	d the stubble heig	ht:	
a. Adjust t	Adjust the header angle.							
b. Adjust t	Adjust the header skid shoes.	ss.						
c. Adjust t reel sup	Adjust the floating crop divider (Down Sto reel supports or the reel. For instructions,	ider (Down Stop or instructions, re	to Top Deflect efer to Step 9,	or Side Rod) aı <i>page 194</i> to St	Adjust the floating crop divider (Down Stop to Top Deflector Side Rod) and confirm the range of motion set by the down stop does NOT contact the reel supports or the reel. For instructions, refer to Step <i>9, page 194</i> to Step <i>15, page 196</i> .	e of motion set by	' the down stop doe	s NOT contact the
	Stubble Height	Header Angle ⁶⁵	Header Skid Shoes	Down Stop	Nose Cone Fore- Aft Position	Top Deflector Height	Side Deflector Height	Top Deflector Side Rod
Standing Crop	50 mm (2 in.)	А	Up	2	1 or 3	1	С	п
	16 mm (5/8 in.)	E	Up	1	1	2	С	п
	16 mm (5/8 in.)	E	Up	1	3	1	С	п
Lodged	50 mm (2 in.)	А	Up	2	3	1	С	Out
	50 mm (2 in.)	А	Up	3	4	1	С	Out
	16 mm (5/8 in.)	E	Up	1	3 or 4	2	D	Out
Severely Lodged ⁶⁶	50 mm (2 in.)	A	Up	2 or 3	4	З	D	Out
	50 mm (2 in.)	А	Up	2 or 3	5	4	D	Out
	16 mm (5/8 in.)	E	Up	1	4	2.5	С	Out
	16 mm (5/8 in.)	E	Up	1	5	4	С	Out

Table 3.26 Floating Crop Divider Settings – Double- or Triple-Reel Header, Cutterbar on the Ground, Field with a Stubble Height of 16–50 mm (5/8–2 in.)

A (min) – E (max) Crop canopy lower than 150 mm (6 in.) 65. 66.

- 9. **Down stop:** Remove lynch pin (A) from the clevis pin and then remove the clevis pin.
- 10. Tilt the divider and install the clevis pin into a numbered hole "1" to "3". Secure the clevis pin with the lynch pin.

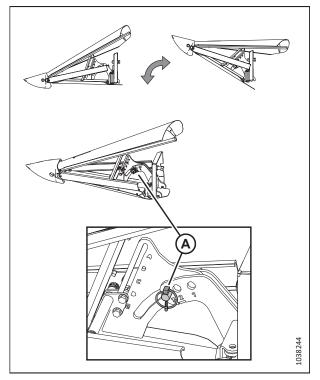


Figure 3.276: Down Stop Adjustment

11. **Nose cone fore-aft:** Remove bolt (A), move the tube in or out, and install the bolt into one of the five tube holes.

NOTE:

In example (B), the bolt is installed in tube hole "1". In example (C), the bolt is installed in tube hole "5".

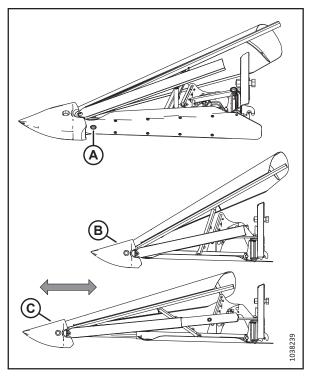


Figure 3.277: Nose Cone Fore-aft Adjustment

- 12. **Top deflector height:** Loosen the nuts on bolts (A), slide the center support to the desired setting (1 to 4.5), and tighten the nuts.
 - Align the dots with the support to set half-increments. Example (B) is 2.5.
 - Align the number with the support to set full increments. Example (C) is 2.

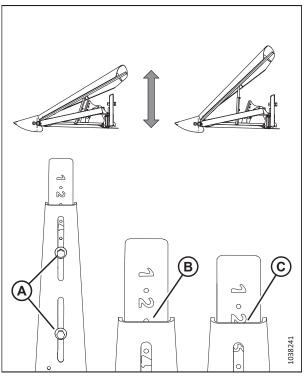


Figure 3.278: Top Deflector Height Adjustment

 Side deflector height: Loose the nuts on bolts (A), slide deflectors until notch (B) is at the desired setting "A" to "E", and tighten nuts.

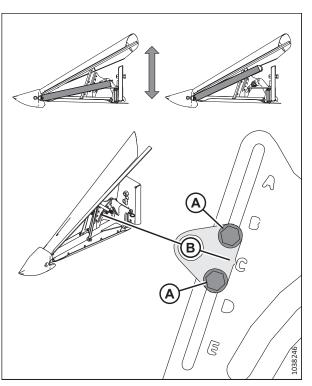


Figure 3.279: Side Deflector Height Adjustment

14. **Top deflector side rod:** Loosen nut (A) and bolt (B), and swing rod (C) outward or inward. Tighten nut (A) to 39 Nm (29 lbf·ft). Tighten bolt (B) to 52 Nm (38 lbf·ft).


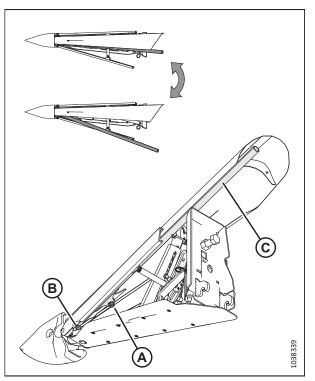


Figure 3.280: Top Deflector Side Rod Adjustment

B

C

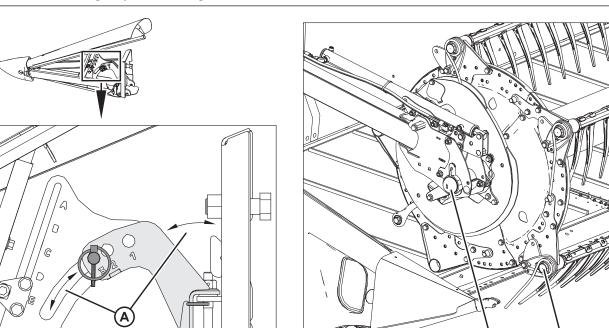

15. **Range of motion check:** Lift and lower the floating crop divider through the range of motion (A) set by the down stop. Confirm the floating divider does **NOT** contact reel supports (B) or reel (C).

Figure 3.281: Floating Crop Divider Range of Motion

1038338

3.9.15 Crop Divider Rods

Removable crop divider rods are provided with the header and to be used in conjunction with crop dividers to help separate crop when harvesting. The rods are most useful when crop is bushy or down. In standing crops, using only crop dividers is recommended.

Table 3.27 Crop Divider Rods Recommended Use

With Div	der Rods	Without Divider Rods
Alfalfa	Lodged cereal	Edible beans
Canola	Peas	Milo
Flax	Soybeans	Rice
Grass seed	Sudan grass	Soybeans
Lentils	Winter forage	Standing cereal

Removing Crop Divider Rods

Crop divider rods can be removed from the ends of the crop dividers and stored on the header.

1. Loosen bolt (B) and remove crop divider rod (A) from both sides of the header.

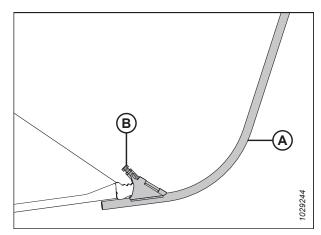


Figure 3.282: Crop Divider Rod

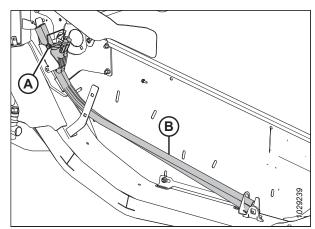


Figure 3.283: Right Endsheet

2. Store both crop divider rods (B) on the right endsheet, and secure with lynch pin (A).

Installing Crop Divider Rods

The crop divider rods can be installed on the ends of the crop dividers to help separate bushy crop.

- 1. Open the right endshield. For instructions, refer to Opening Header Endshields, page 35.
- 2. Undo lynch pin (A) securing divider rods (B) to the header endsheet, and remove the divider rods from the storage location.
- 3. Reinstall lynch pin (A).

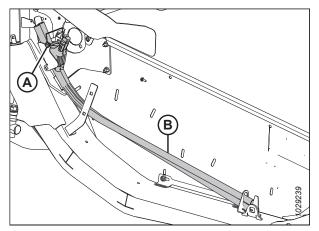


Figure 3.284: Divider Rods in Storage Location at Right Header Endsheet

- 4. Position crop divider rod (A) on the tip of the crop divider as shown and tighten bolt (B).
- 5. Repeat the procedure at the opposite end of the header.
- 6. Close the right endshield. For instructions, refer to *Closing Header Endshields, page 36*.

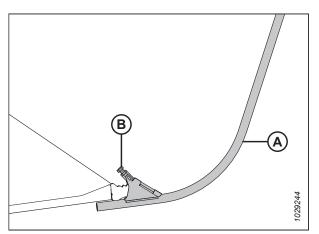


Figure 3.285: Divider Rod on Crop Divider

Optional Rice Divider Rods

The optional rice divider rods are used assist with tall and tangled rice crops. They can be installed on the ends of the crop dividers.

Rice divider rods provide improved performance in tall and tangled rice crops. For more bundle information, refer to *5.1.6 Rice Divider Rod Kit, page 480*.

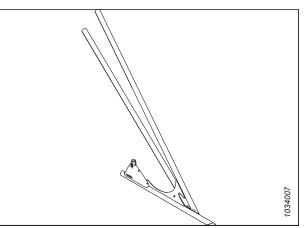


Figure 3.286: Optional Divider Rod for Rice

Rice divider rods are stored at the rear of both endsheets on storage bracket (A) and secured in place with pin (B). The installation and removal of these rods are the same as the procedures for standard crop divider rods.

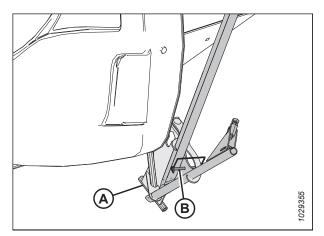


Figure 3.287: Rice Divider Rod Storage

3.10 Auto Header Height Control

MacDon's auto header height control (AHHC) feature works in conjunction with the AHHC option available on certain combine models.

There are two hall-effect sensors (A) installed on the float setting indicators on the float module. These sensors send signals to the combine allowing it to maintain a consistent cutting height and an optimum float as the header follows ground contours.


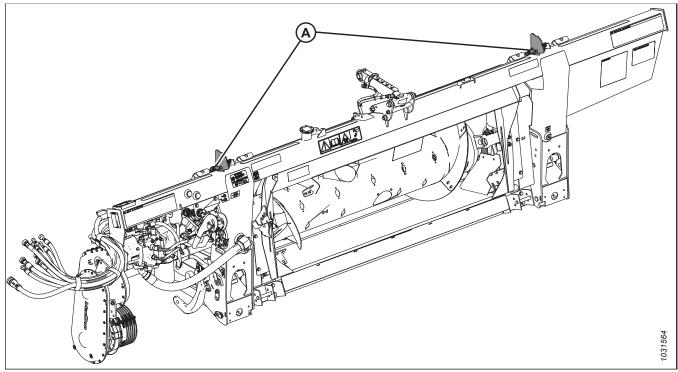


Figure 3.288: FM200 Float Module

To configure the AHHC system for your specific combine model, refer to the relevant procedure:

- 3.10.5 Case IH 130 and 140 Series Mid-Range Combines, page 208
- 3.10.6 Case IH 120, 230, 240, and 250 Series Combines, page 217

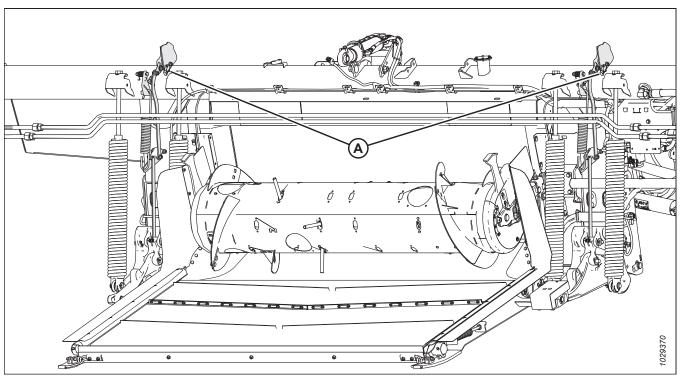

3.10.1 Auto Header Height Control Sensor Operation

Figure 3.289: FM200 Float Module

The position sensors supplied with the auto header height control (AHHC) system are hall-effect sensors. Normal operating signal voltages for the sensors fall between 10% (0.5 VDC) and 90% (4.5 VDC). An increase in sensor voltage correlates to a decrease in ground pressure, or if you are cutting off the ground on gauge wheels an increase in the header cut height.

Sensor errors result in a 0 V signal, indicating a faulty sensor, incorrect supply voltage, or a damaged wiring harness.

Sensors

Two hall-effect sensors are installed on float indicator needles (A). As the header follows ground contours, the sensors communicate with the combine causing it to raise and lower the feeder house to maintain a consistent cutting height and optimum float.

Normal operating signal voltages for the sensors fall between 10% (0.5 VDC) and 90% (4.5 VDC). An increase in sensor voltage correlates to an increase in header height. Any sensor error results in a 0 V signal, which indicates either a faulty sensor or lack of supply voltage.

Before using the AHHC feature, you must do the following:

- 1. Prepare the combine to use the AHHC feature (applies only to some combine models—refer to the instructions for your combine).
- 2. Calibrate the sensors used by the AHHC system so that the combine can correctly interpret data from the hall-effect sensors on the float module (for more information, refer to the instructions for your combine).

NOTE:

Once calibration is complete, you are ready to use the AHHC feature in the field. Individual combine settings can improve AHHC performance (for more information, refer to your combine operators manual).

Sensor voltage must be between 0.5–4.5 V. If the voltage is too close to either end of the voltage range, there will be difficulty with calibration and operation of the AHHC. A properly set sensor will have room on both ends of the voltage range.

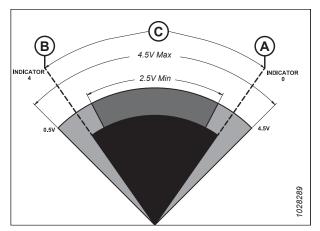


Figure 3.290: Sensor Range Properly Set

A - High Voltage B - Low Voltage

C - Sensor Operating Range

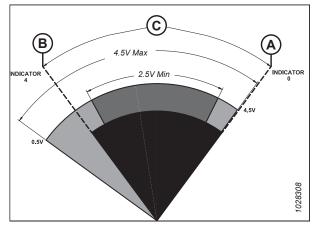


Figure 3.291: Sensor Range too Close to the High Voltage Limit

B - Low Voltage

A - High Voltage

C - Sensor Operating Range

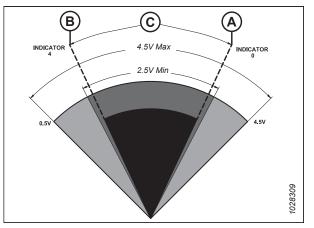


Figure 3.292: Sensor Range too Narrow

A - High Voltage B - Low Voltage

C - Sensor Operating Range

A sensor that is adjusted too close to the high voltage or low voltage limit will have difficulty staying within the sensor's operating range of 0.5–4.5 V. If the sensor moves out of range, the AHHC will stop functioning correctly.

A sensor with a voltage range that is too narrow will have difficulty staying within the set range. The combine will continually seek to keep the sensor within the set range.

3.10.2 Sensor Output Voltage Range – Combine Requirements

The auto header height control (AHHC) sensor output must be within a specific voltage range for each combine, or the AHHC feature will not work properly.

Table 3.28 Combine Voltage Limits

Combine	Lower Voltage Limit	Upper Voltage Limit	Range
Case IH 5088/6088/7088, 5130/6130/7130, 7010/8010, 7120/8120/9120, 7230/8230/9230, and 7240/8240/9240	0.5 V	4.5 V	2.5 V

3.10.3 Manually Checking Voltage Limits

In order for the auto header height to function properly the voltage needs to be set properly.

NOTE:

Some combines can check the voltages from the cab. For instructions, refer to the instructions for your combine.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Park the combine on a level surface.
- 3. Position the header so that the cutterbar is 254–356 mm (10–14 in.) off the ground.

Checking sensor upper voltage limit

4. Extend the guard angle until header angle indicator (A) is at **E**.

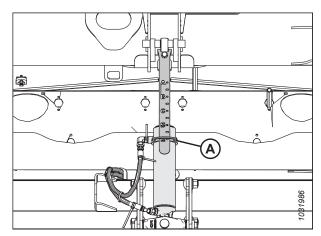


Figure 3.293: Center-Link

- 5. Float indicator pointer (A) should be at 0 (B).
- 6. Shut down the engine, and remove the key from the ignition.

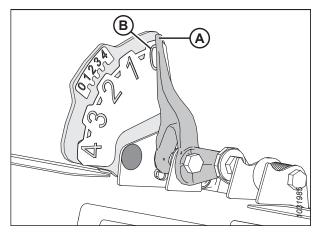


Figure 3.294: Left Float Indicator - View from Rear

7. Check that the float lock linkage is on the down stops (washer [A] cannot be moved) at both locations.NOTE:

If the header is **NOT** on its down stops, the voltage may go out of range during operation causing a malfunction of the AHHC system. If the header is not on down stops, refer to *3.11 Leveling Header, page 233* for instructions.

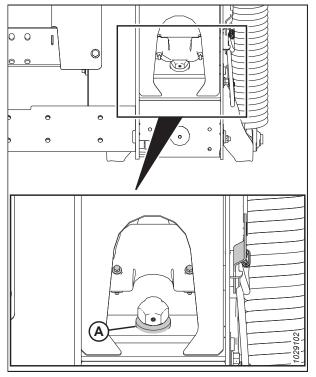


Figure 3.295: Down Stop Washer

- 8. Locate connector P600 (A) at the left front of the float module.
- 9. Remove plug cap (B).
- 10. Turn the key to the run position.
- 11. Check P600 for power from the combine. There should be 5V at pin 7.
 - Pin 7 FM2215E power
 - Pin 8 FM2515E ground
- On connector P600, confirm upper voltage from left sensor (pins 1 and 8), and right sensor (pins 3 and 8).
 For voltage, Refer to 3.10.2 Sensor Output Voltage Range – Combine Requirements, page 203.
 - Pin 1 FM3326A left sensor signal
 - Pin 3 FM3328A right sensor signal
 - Pin 8 FM2515E ground

NOTE:

If the standard plug is installed in P600, the plug sends the average of both sensors to the combine. If the optional lateral tilt plug is installed, then the plug sends separate voltage signals from both sensors to the combine.

Checking sensor lower voltage limit

13. Extend the guard angle until header angle indicator (A) is at **E**.

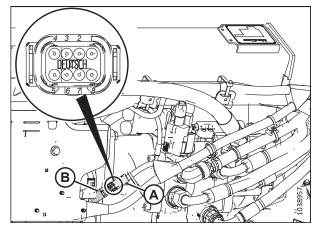


Figure 3.296: Left Float Indicator – View from Rear

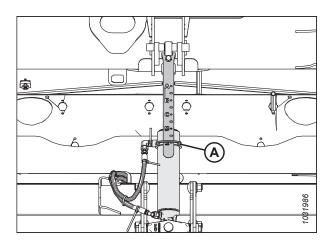


Figure 3.297: Center-Link

- 14. Fully lower header on the ground, float indicator pointer (A) should be at **4** (B).
- 15. Turn the key to the run position.
- 16. On connector P600, confirm lower voltage from left sensor (pins 1 and 8), and right sensor (pins 3 and 8).
 For voltage, Refer to 3.10.2 Sensor Output Voltage Range Combine Requirements, page 203.
 - Pin 1 FM3326A left sensor signal
 - Pin 3 FM3328A right sensor signal
 - Pin 8 FM2515E ground

NOTE:

If the standard plug is installed in P600, the plug sends the average of both sensors to the combine. If the optional lateral tilt plug is installed, then the plug sends separate voltage signals from both sensors to the combine.

B A

Figure 3.298: Left Float Indicator – View from Rear

3.10.4 Replacing Float Height Sensor

Two magnetic sensors are installed on the float setting indicators. As the header follows ground contours, the sensors communicate with the combine causing it to raise and lower the feeder house to maintain a consistent cutting height and optimum float.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

This procedure can be completed on either side of the float module.

- 1. Park the combine on a level surface.
- 2. Lower the header fully.
- 3. Lower the reel fully.
- 4. Shut down the engine, and remove the key from the ignition.

5. Disconnect harness plug P537 (C) from the sensor on the left side of the float module.

NOTE:

9.

If replacing the float height indicator sensor on the right side of the float module, disconnect plug P539.

6. Remove bolt (A).

8. Remove two bolts and nuts (A).

11. Install two bolts and nuts (A).

Remove and discard old sensor (B).

10. Install new sensor (B), with the plug facing down.

Bolt heads should be on the same side as the decal.

7. Remove indicator plate (B) complete with the sensor.

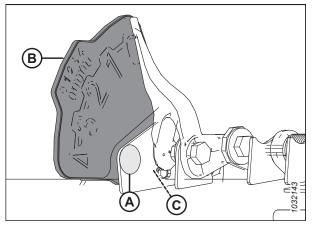


Figure 3.299: Float Setting Indicator – Left

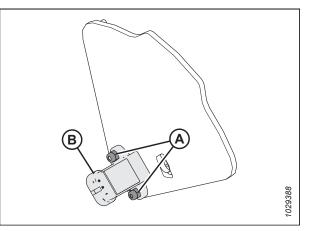


Figure 3.300: Float Height Sensor

- 12. Install indicator plate (B) complete with the sensor.
- 13. Install bolt (A).

NOTE:

- 14. Connect harness plug (C).
- 15. Check the voltage range. For instructions, refer to *3.10.3 Manually Checking Voltage Limits, page 203*.

NOTE:

Some combines can check voltages from the cab. For instructions, refer to the instructions for your combine.

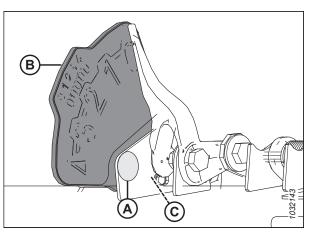


Figure 3.301: Float Setting Indicator - Left

3.10.5 Case IH 130 and 140 Series Mid-Range Combines

To make your header's auto header height control (AHHC) system compatible with Case IH 130 and 140 Series mid-range combines, you must set your combine's header configuration options for the particular model of header, configure the reel speed settings, set up the AHHC controls, and calibrate the AHHC system to ensure that it is working correctly.

Checking Voltage Range from Combine Cab – Case IH 5130/6130/7130; 5140/6140/7140

The auto header height control sensor needs to operate in a specific voltage range in order to work properly.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

Ensure that all bystanders have cleared the area.

- 1. Position the header 254–356 mm (10–14 in.) above the ground, and unlock the float.
- 2. Check that the float lock linkage is on the down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on the down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the auto header height control (AHHC) system. If the header is not on the down stops, refer to 3.11 Leveling Header, page 233 for instructions.

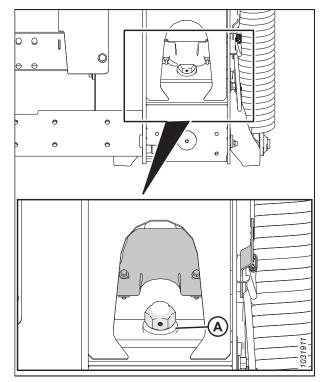


Figure 3.302: Float Lock

- 3. If the pointer is not on zero, loosen bolt (A) and slide float indicator plate (B) until pointer (C) is on **0** (D).
- 4. Tighten bolt (A).

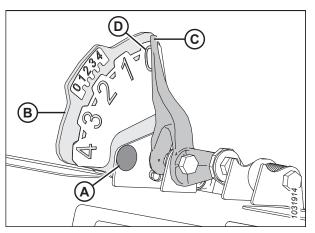


Figure 3.303: Float Indicator

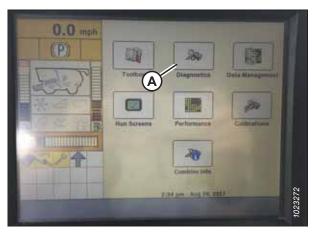


Figure 3.304: Case IH Combine Display

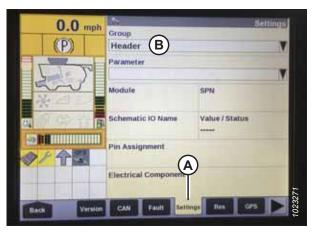


Figure 3.305: Case IH Combine Display

- 5. Ensure the header float is unlocked.
- 6. On the main page of the combine display, select DIAGNOSTICS (A). The DIAGNOSTICS page appears.

- 7. Select SETTINGS (A). The SETTINGS page appears.
- 8. From the GROUP menu, select HEADER (B).

9. From the PARAMETER menu, select LEFT HEIGHT/TILT SENSOR (A).

10. The SETTINGS page updates to display the voltage in

view the full range of voltage readings.

VALUE/STATUS field (A). Lower the feeder house fully, and then raise it 254–356 mm (10–14 in.) off the ground to

0.0 mph	*	Settings
The second se	Group	
(P)	Header	V
	Parameter	0
17.2	Left Height/Tilt Ser	nsor (A)
and	Module UCM	SPN 57
	Schematic IO Name AN59	Value / Status 4.30 ∨
合國	Pin Assignment 3B-12	
	Electrical Component	2
Back Version	CAN Fault Sett	

Figure 3.306: Case IH Combine Display

0.0 mph (P)	Group Header Parameter Left Height/Tilt Ser	Settings V Isor
	Module UCM Schematic IO Name AN59	SPN 57 Value / Status 4.30 V
	Pin Assignment 3B-12 Electrical Component	Ŭ
Back Version	CAN Fault Sett	

Figure 3.307: Case IH Combine Display

Header Settings Quick Reference - Case IH 130 and 140 Series

Use the information in the following table to quickly reference the recommended settings for a FD2 Series FlexDraper[®].

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

For detailed instructions, proceed to the Case IH 130 and 140 Series combine header setup and calibration procedures.

Ta	able 3.29 Header Settings – Case I	H 130 and 140 Series

Setup Parameter	Suggested Setting	
Cutting type	Platform	
Header pressure float	Not installed	
IIIIC baight consitivity 67	Two sensor system	250
HHC height sensitivity ⁶⁷	One sensor system	180
HHC tilt sensitivity	150	

^{67.} If hunting occurs during operation, decrease the HUNTING setting by 20 points at a time until hunting no longer occurs.

Setup Parameter	Suggested Setting	
	Standard 19-tooth drive sprocket	4
Reel drive type	Optional high-torque 14-tooth drive sprocket	5
	Optional high-torque 10-tooth drive sprocket	6
Reel height sensor	Yes	
	Two sensor system	YES
Autotilt	One sensor system	NO

Table 3.29 Header Settings – Case IH 130 and 140 Series (continued)

Setting up Header on Combine Display – Case IH 5130/6130/7130; 5140/6140/7140

To set up the header to work with a Case IH 5130/6130/7130 or 5140/6140/7140 combine, you will need to access the HEADER SETUP page on the combine display.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

1. On the main page of the combine display, select TOOLBOX (A).

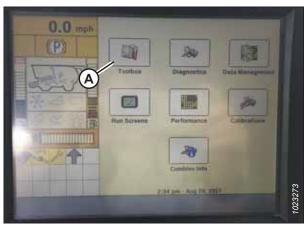


Figure 3.308: Case IH Combine Display

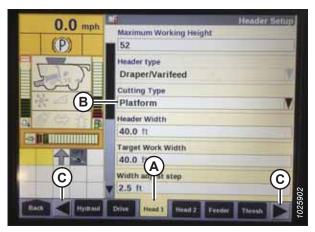


Figure 3.309: Case IH Combine Display

2. Select HEAD 1 tab (A). The HEADER SETUP page appears.

NOTE:

To locate the HEAD 1 tab, you may need to scroll to the right using side arrows (C).

3. From CUTTING TYPE menu (B), select PLATFORM.

- 4. Select HEAD 2 tab (A). The HEADER SETUP 2 page appears.
- 5. From HEADER PRESSURE FLOAT menu (B), select NOT INSTALLED.

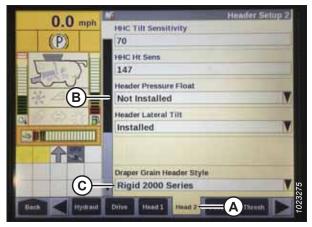


Figure 3.310: Case IH Combine Display

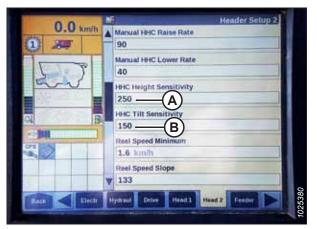


Figure 3.311: Case IH Combine Display



Figure 3.312: Case IH Combine Display

- 6. Locate HHC HEIGHT SENSITIVITY field (A). Enter the following settings:
 - If using a two-sensor system: Set HHC HEIGHT SENSITIVITY to 250.
 - If using a single-sensor system: Set HHC HEIGHT SENSITIVITY to 180.

NOTE:

If hunting occurs during operation, decrease the HUNTING setting by 20 points at a time until hunting no longer occurs.

- 7. Set HHC TILT SENSITIVITY (B) to 150. Increase or decrease as desired.
- 8. From REEL DRIVE TYPE menu (A), select one of the following:
 - 4 if you are using a standard 19-tooth drive sprocket.
 - 5 if you are using an optional high-torque 14-tooth drive sprocket.
 - 6 if you are using an optional high-torque 10-tooth drive sprocket.

9. From REEL HEIGHT SENSOR menu (A), select YES.



Figure 3.313: Case IH Combine Display

0.0 km/h	Autotilt Yes (A)	Header Setup 2
57	Autolevel in Headland Yes	V
CL B		
	Hyperson Driver Hund 1 Hund	2 Feeder

Figure 3.314: Case IH Combine Display

Calibrating Auto Header Height Control – Case IH 5130/6130/7130, 5140/6140/7140

The auto header height control (AHHC) sensor output must be calibrated for each combine, or the AHHC feature will not work properly.

Ensure that all bystanders have cleared the area.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

NOTE:

This procedure applies to combines with a software version below 28.00. For instructions on calibrating the AHHC for combines with a software version 28.00 or above, refer to *Calibrating Auto Header Height Control – Case IH Combines with Version 28.00 or Higher Software, page 225*.

- 10. Locate AUTOTILT field (A).
 - If using a two-sensor system: Select YES in the AUTOTILT field.
 - If using a single-sensor system: Select NO in the AUTOTILT field.

1. To view the software version, select the DIAGNOSTICS button from the Home Screen, then select VERSION tab (A).



Figure 3.315: Case IH Combine Display

NOTE:

If the header float is set too light, it can prevent the calibration of the AHHC. In order to prevent the header from separating from the float module, it may be necessary to change the float to a heavier setting during the calibration procedure.

NOTE:

For the best performance of the auto header height control (AHHC) system, perform the ground calibration with the center-link set to **D**. When calibration is complete, adjust the center-link back to the desired header angle. For instructions, refer to *3.9.5 Header Angle, page 150*.

- 2. Ensure that the center-link is set to **D**.
- 3. Confirm that all electrical and hydraulic connections between the header and float module are functional.
- 4. Start the combine engine, but do **NOT** engage the separator or the feeder house.
- 5. Locate the HEADER CONTROL switch on the right console, and set to HT (this is AHHC mode).
- 6. Hold the DOWN button for 10 seconds, or until the combine feeder house has been lowered all the way down (the feeder house will stop moving).
- 7. Push the RAISE button and hold it until the feeder house travels all the way up. It will stop 61 cm (2 ft.) above the ground for 5 seconds, then it will resume traveling upward. This is an indication that calibration is successful.

NOTE:

If the float was changed to a heavier setting to complete the AHHC calibration procedure, adjust it to the recommended operating float weight after the calibration is complete.

Setting Preset Cutting Height – Case 5130/6130/7130, 5140/6140/7140

Once the cab combine display has been configured, the preset cutting heights can be used.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

Ensure that all bystanders have cleared the area.

NOTE:

Indicator (A) should be at position 0 (B) with the header 254–356 mm (10–14 in.) off the ground. When the header is on the ground, the indicator should be at position 1 (C) for low ground pressure, and at position 4 (D) for high ground pressure. Crop and soil conditions determine the amount of float to use. The ideal setting is as light as possible without header bouncing or missing crop. Operating with heavy settings prematurely wears the cutterbar wearplates.

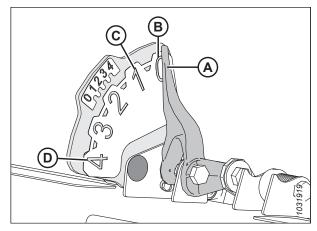


Figure 3.316: Float Indicator

- 1. Engage the separator and header.
- 2. Manually raise or lower the header to the desired cutting height.
- 3. Press 1 on button (A). A yellow light next to the button will illuminate.

NOTE:

When setting presets, always set the header position before setting the reel position. If the header and the reel are set at the same time, the reel setting will not be saved.

- 4. Manually raise or lower the reel to the desired working position.
- 5. Press 1 on button (A). A yellow light next to the button will illuminate.
- 6. Manually raise or lower the header to a second desired cutting height.
- 7. Press 2 on button (A). A yellow light next to the button will illuminate.
- 8. Manually raise or lower the reel to the desired working position.
- 9. Press 2 on button (A). A yellow light next to the button will illuminate.



Figure 3.317: Case Combine Console



Figure 3.318: Case Combine Console

Up and down arrows should now appear in MANUAL HEIGHT box (A) on the RUN 1 page on the combine display. This indicates that the auto header height control (AHHC) is functioning.

10. To enable the presets, activate AHHC button (A) to place the header on the ground. To enable the first preset, tap the button once. To enable the second preset, tap the button twice.

To lift the header to maximum working height, hold the SHIFT button on the back of the control handle while tapping AHHC button (A).

11. The maximum working height can be adjusted on the HEADER SETUP page on the combine display. Enter the desired height in MAXIMUM WORKING HEIGHT field (A).



Figure 3.319: Case Combine Display – Run 1 Page



Figure 3.320: Case Combine Control Handle

0.0 mph	Header Sett	Ð
	Maximum Working Height	121
(P)(A)-	52	
	Header type	
	Draper/Varifeed	y.
m	Cutting Type	
一次日日	Platform	
	Header Width	
	40.0 ft	
	Target Work Width	
行國	40.0 ft	
	Width adjust step	
	V 2.5 ft	1
Back Hystraul	Divis Head 1 Head 2 Farmer Street	-
	Drive Head3 Head2 Feeder Thresh	а.

Figure 3.321: Case Combine Display – Header Setup Page

12. If you need to change the position of one of the presets, you can fine-tune this setting with button (A) on the combine console.



Figure 3.322: Case Combine Console

3.10.6 Case IH 120, 230, 240, and 250 Series Combines

To make your header's auto header height control (AHHC) system compatible with Case IH 120, 230, 240, and 250 series combines, you must set your combine's header configuration options for the particular model of header, configure the reel speed settings, set up the AHHC controls, and calibrate the AHHC system to ensure that it is working correctly.

Checking Voltage Range from Combine Cab – Case IH, 120, 230, 240, and 250 Series Combines

In order for the auto header height control (AHHC) system to work correctly, the header height sensors must be sending the correct voltage readings. The sensor outputs can be viewed using the combine display.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

Ensure that all bystanders have cleared the area.

1. Position the header 254–356 mm (10–14 in.) above the ground, and unlock the float.

2. Check that the float lock linkage is on the down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on the down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the auto header height control (AHHC) system. If the header is not on the down stops, refer to 3.11 Leveling Header, page 233 for instructions.

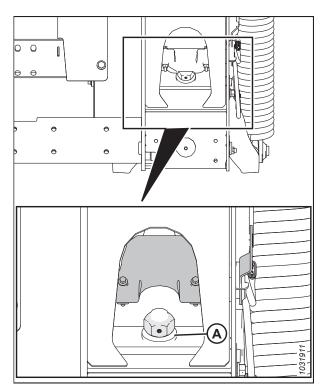


Figure 3.323: Float Lock

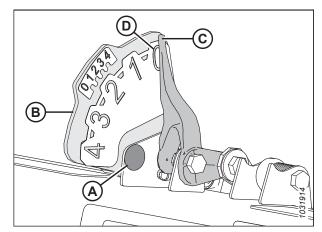


Figure 3.324: Float Indicator

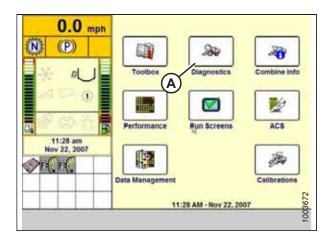


Figure 3.325: Case IH Combine Display

- 3. If the pointer is not on zero, loosen bolt (A) and slide float indicator plate (B) until pointer (C) is on **0** (D).
- 4. Tighten bolt (A).

- 5. Ensure the header float is unlocked.
- 6. Select DIAGNOSTICS (A) on the MAIN page. The DIAGNOSTICS page opens.
- 7. Select SETTINGS. The SETTINGS page opens.

8. Select GROUP drop-down menu (A). The GROUP dialog box opens.

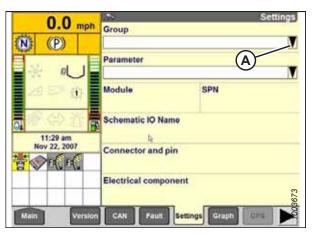


Figure 3.326: Case IH Combine Display

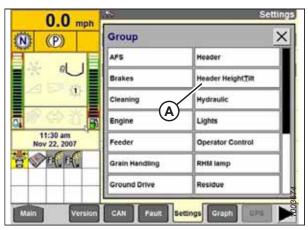


Figure 3.327: Case IH Combine Display

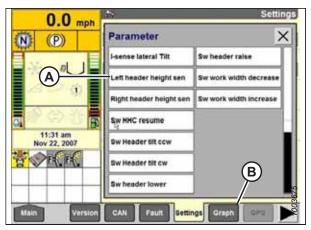


Figure 3.328: Case IH Combine Display

Header Settings Quick Reference – Case IH 120, 230, 240, and 250 Series

Use the information in the following table to quickly reference the recommended settings for a 2 Series draper header.

NOTE:

The setting options vary based on the combine software version. For version 28.00 or higher, refer to Table *3.30, page 220*; for lower versions, refer to Table *3.31, page 221*.

9. Select HEADER HEIGHT/TILT (A). The PARAMETER page opens.

 Select LEFT HEADER HEIGHT SEN (A), and then select GRAPH button (B). The exact voltage is displayed at top of page. Raise and lower the header to see the full range of voltage readings.

For detailed instructions, proceed to the Case IH 120, 230, 240, and 250 Series combine header setup and calibration procedures.

Table 3.30 Header Settings – Case IH 120, 230, 240), and 250 Series (Software Version 28.00 or Higher)
--	--

Setup Parameter	Suggested Setting	
Header sub type	2000	
Frame type	Flex	
Header sensors	Enable	
Header pressure float	No	
Height/Tilt Response	Fast	
Auto height override	Yes	
IC height sensitivity ⁶⁸ Two sensor system 250		250
	One sensor system 180	
HHC tilt sensitivity	150	
Reel height sensor	Yes	
A	Two sensor system	Yes
Autotilt	One sensor system	No

^{68.} If hunting occurs during operation, decrease the HUNTING setting by 20 points at a time until hunting no longer occurs.

Setup Parameter	Suggested Setting	
Header style	Flexhead	
Auto reel speed slope	133	
Header pressure float	No	
Reel drive	Hydraulic	
Reel fore-back	Yes	
LUIC baight consitivity 69	Two sensor system	250
HHC height sensitivity ⁶⁹	One sensor system	180
HHC tilt sensitivity	150	
Fore/Aft control	Yes	
Hdr fore/aft tilt	Yes	
Header type (Head2 Tab)	Draper	
Cutting type	Platform	
Header width	Set according to header specification	
Header usage	Set according to header specification	
Reel height sensor	Yes	
	Two sensor system	Yes
Autotilt	One sensor system	No

Table 3.31 Header Settings – Case IH 120, 230, 240, and 250 Series (Below Software Version 28.00)

Calibrating Auto Header Height Control – Case IH120, 230, 240, and 250 Series Combines

The auto header height control (AHHC) sensor output must be calibrated for each combine, or the AHHC feature will not work properly.

DANGER

Clear the area of bystanders. Keep children away from the machinery. Walk around the machine to be sure that no one is under, on, or close to it.

NOTE:

This procedure applies to combines with a software version below 28.00. For instructions on calibrating the AHHC for combines with software version 28.00 or above, refer to *Calibrating Auto Header Height Control – Case IH Combines with Version 28.00 or Higher Software, page 225*.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

^{69.} If hunting occurs during operation, decrease the HUNTING setting by 20 points at a time until hunting no longer occurs.

NOTE:

If the header float is set too light, it can prevent the calibration of the AHHC. You may need to set the float heavier for calibration procedure so the header does not separate from the float module.

NOTE:

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to *3.9.5 Header Angle, page 150*.

- 1. Ensure the center-link is set to **D**.
- 2. Confirm that all electrical and hydraulic connections between the header and float module are functional.
- 3. Select TOOLBOX (A) on the MAIN page.

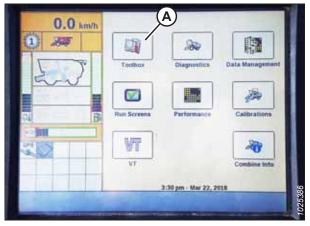


Figure 3.329: Case IH Combine Display

4. Select HEADER tab (A).

NOTE:

To locate the HEADER tab, you may need to scroll to the right using side arrows (C).

5. Set HEADER STYLE (B).

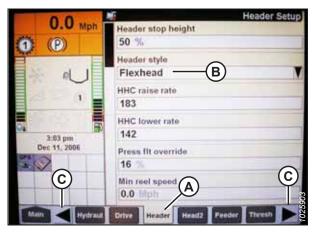


Figure 3.330: Case IH Combine Display

6. Set AUTO REEL SPEED SLOPE.

NOTE:

The AUTO REEL SPEED SLOPE value automatically maintains the speed of the reel relative to ground speed. For example, if the value is set to 133, then the reel will turn faster than the ground speed. The reel's speed should be faster than the combine's ground speed; however, adjust the value according to crop conditions.

- 7. Set HEADER PRESSURE FLOAT to NO if equipped, and ensure REEL DRIVE is set to HYDRAULIC.
- 8. Set REEL FORE-BACK to YES (if applicable).

- 9. Locate HHC HEIGHT SENSITIVITY field (A), and set it as follows:
 - If using a two-sensor system: Set HHC HEIGHT SENSITIVITY to 250.
 - If using a single-sensor system: Set HHC HEIGHT SENSITIVITY to 180.

NOTE:

If hunting occurs during operation, decrease this setting by 20 points at a time until hunting no longer occurs.

10. Set HHC TILT SENSITIVITY (B) to 150. Increase or decrease sensitivity as desired.



Figure 3.331: Case IH Combine Display

0.0		Header Setup
0.0 Mph	Reel fore-back	
O (P)	Yes	
	Vertical knives	
ER ALE	No	V
	Reel vertical position	
1	No	V
-	Reel horizontal position	
3:04 pm	No	V
Dec 11, 2008	Reel speed sensor	
-	No	V
	Height sensitivity	
	100	er Thread
	Drive Header Head2 Feed	er Thresh

Figure 3.332: Case IH Combine Display

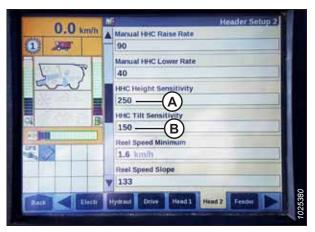


Figure 3.333: Case IH Combine Display

11. Set FORE/AFT CONTROL and HDR FORE/AFT TILT to YES (if applicable).

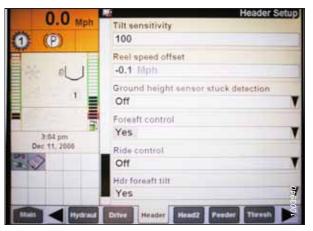


Figure 3.334: Case IH Combine Display

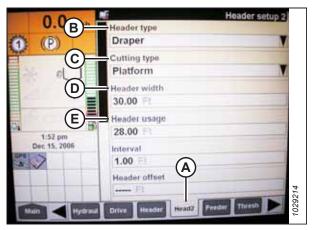


Figure 3.335: Case IH Combine Display



Figure 3.336: Case IH Combine Display

- 12. Press HEAD2 (A) at the bottom of the page.
- 13. Ensure HEADER TYPE (B) is set to DRAPER.

NOTE:

If the recognition resistor is plugged in to the header harness, you will not be able to change this.

- 14. Set CUTTING TYPE (C) to PLATFORM.
- 15. Set HEADER WIDTH (D) and HEADER USAGE (E) to the appropriate values.
- 16. From the REEL HEIGHT SENSOR menu, select YES (A).

- 17. Locate AUTOTILT field (A) and set it as follows:
 - If using a two-sensor system: Select YES in the AUTOTILT field.
 - If using a single-sensor system: Select NO in the AUTOTILT field.

NOTE:

If the float was changed to a heavier setting to complete the AHHC calibration procedure, adjust it to the recommended operating float after the calibration is complete.



Figure 3.337: Case IH Combine Display

Calibrating Auto Header Height Control – Case IH Combines with Version 28.00 or Higher Software

Calibrate the auto header height control (AHHC) sensor output for each combine, or the AHHC feature will not work properly.

Clear the area of bystanders. Keep children away from the machinery. Walk around the machine to be sure that no one is under, on, or close to it.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

1. To view the software version, select the DIAGNOSTICS button from the Home Screen, then select VERSION tab (A).

NOTE:

If the header float is set too light, it can prevent the calibration of the AHHC. You may need to set the float heavier for the calibration procedure so the header does not separate from the float module.

NOTE:

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to *3.9.5 Header Angle, page 150*.

- 2. Set the header center-link to **D**.
- 3. Raise the header onto the down stops and unlock the float.
- 4. Place the wings in the locked position.



Figure 3.338: Case IH Combine Display

Adjusting settings in the combine display

5. Select TOOLBOX (A) on the MAIN page.

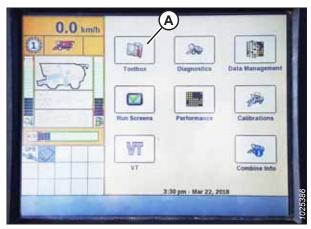


Figure 3.339: Case IH Combine Display

0.0	ttő Ho	ader Setup 1
0.0 km/h	Maximum Work Height	
1 200	40 %	
	Header Type	
5 7	Draper/Varifeed	V
and	Header Sub Type	
	2000	V
QL 5	Cutting Type	
and the second se	Platform	Y
STREET.	Frame Type	
art C	Rigid	Y
B	Header Width	(B)
Ŷ	¥ 12.00 m	Ý I
	CONTRACTOR OF TAXABLE	1025904
Batt EHCE	Bythmid Drive Head 1 Head 2	025 1 2 aprese

Figure 3.340: Case IH Combine Display

0.0 mph		Headen Selupit
and the second	Maximum Work Height	
	Header Sub Type	×
J-J-J	No shift function	
	2000 — A	and the second second
1000 AP. 380	3000	Concession in the
Ci Ditta	16-40ft VariFeed	V.
0%0	40ft VariFeed/Flex	V
	46-52ft VariFeed	
	29.0 ft	53
	Hydraul Onve Head 2	1009753

Figure 3.341: Case IH Combine Display

6. Select HEAD 1 tab (A).

NOTE:

To locate the HEAD 1 tab, you may need to scroll to the right using side arrows (B).

- 7. Locate the HEADER SUB TYPE field.
- 8. Select 2000 (A).

9. Return to the Head 1 page and choose FLEX from FRAME TYPE drop-down menu (A).

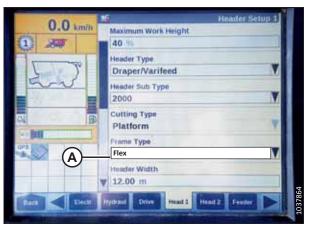


Figure 3.342: Case IH Combine Display

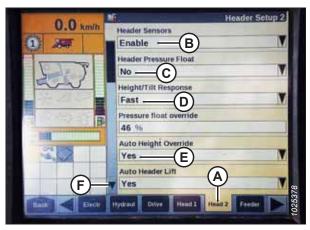


Figure 3.343: Case IH Combine Display

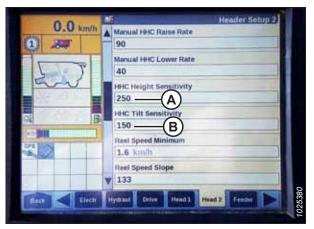


Figure 3.344: Case IH Combine Display

- 10. Select HEAD 2 tab (A).
- 11. In HEADER SENSORS field (B), select ENABLE.
- 12. In HEADER PRESSURE FLOAT field (C), select NO.
- 13. In HEIGHT/TILT RESPONSE field (D), select FAST.
- 14. In AUTO HEIGHT OVERRIDE field (E), select YES.
- 15. Press down arrow (F) to go to the next page.
- 16. Locate HHC HEIGHT SENSITIVITY field (A), and set it as follows:
 - If using a single-sensor system: Set HHC HEIGHT SENSITIVITY to 180.
 - If using a two-sensor system: Set HHC HEIGHT SENSITIVITY to 250.

NOTE:

If hunting occurs during operation, decrease this setting by 20 points at a time until hunting no longer occurs.

17. Set HHC TILT SENSITIVITY (B) to 150. Increase or decrease the sensitivity as desired.

18. From the REEL HEIGHT SENSOR menu, select YES (A).



Figure 3.345: Case IH Combine Display

0.0 km/h	Autotilt	Header Setup 2
1 207	Yes — (A)	V
53	Autolevel in Headland Yes	V
		1
		120
	Hydraud Druss Hoad 1 Her	12 Feder D

Figure 3.346: Case IH Combine Display

- 19. Scroll to the AUTOTILT field (A), and set it as follows:
 - If using a two-sensor system: Select YES in the AUTOTILT field.
 - If using a single-sensor system: Select NO in the AUTOTILT field.

Calibrating Auto Header Height Control

- 20. Select CALIBRATION on the combine display and press the right arrow navigation key to enter the information box.
- 21. Select HEADER (A), and press ENTER. The CALIBRATION dialog box opens.

NOTE:

Use the UP and DOWN navigation keys to move between options.

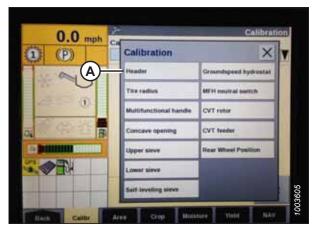


Figure 3.347: Case IH Combine Display

22. Follow the calibration steps in the order in which they appear in the dialog box. As you proceed through the calibration process, the display will automatically update to show the next step.

NOTE:

Pressing the ESC key during any of the steps or letting the system sit idle for over 3 minutes will stop the calibration procedure.

NOTE:

Refer to your combine operator's manual for an explanation of any error codes.

23. When all steps have been completed, CALIBRATION SUCCESSFUL message displays on the page. Exit the CALIBRATION menu by pressing the ENTER or ESC key.

NOTE:

If the float was set heavier to complete the AHHC calibration procedure, adjust it to the recommended operating float after the calibration is complete.

24. Ensure AUTO HEIGHT icon (A) appears on the monitor as shown at location (B). When the header is set for cutting on the ground, this verifies that the combine is correctly using the sensor on the header to sense ground pressure.

NOTE:

Icons (A) and (B) appear on the monitor only after engaging the separator and header, and then pressing HEADER RESUME button on the control panel.

NOTE:

AUTO HEIGHT field (B) may appear on any of the RUN tabs and not necessarily on the RUN 1 tab.



Figure 3.348: Case IH Combine Display



Figure 3.349: Case IH Combine Display

Checking Reel Height Sensor Voltages - Case IH Combines

The voltage output of the reel height sensors can be inspected using the combine display in the cab.

Clear the area of bystanders. Keep children away from the machinery. Walk around the machine to be sure that no one is under, on, or close to it.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

OPERATION

1. On the main page of the combine display, select DIAGNOSTICS (A). The DIAGNOSTICS page appears.

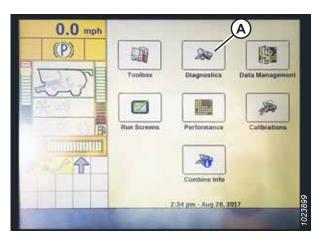


Figure 3.350: Case IH Combine Display



Figure 3.351: Case IH Combine Display

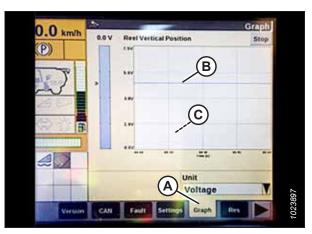


Figure 3.352: Case IH Combine Display

- 2. Select SETTINGS tab (A). The SETTINGS page appears.
- 3. From the GROUP menu, select HEADER (B).
- 4. From the PARAMETER menu, select REEL VERTICAL POSITION (C).

- 5. Select GRAPH tab (A). The REEL VERTICAL POSITION graph appears.
- 6. Lower the reel to view upper voltage (B). The voltage should be 4.1–4.5 V.
- 7. Raise the reel to view lower voltage (C). The voltage should be 0.5–0.9 V.
- 8. If either voltage is out of range, refer to *Checking and Adjusting Reel Height Sensor, page 159*.

Setting Preset Cutting Height – Case IH, 120, 230, 240, and 250 Series Combines

Once the auto header height control (AHHC) system has been configured to work with the header, the preset cutting height can be set.

DANGER

Clear the area of bystanders. Keep children away from the machinery. Walk around the machine to be sure that no one is under, on, or close to it.

NOTE:

Changes may have been made to the combine controls or the display since this document was published. Refer to the combine operator's manual for the most up-to-date information.

NOTE:

Indicator (A) should be at position 0 (B) with the header 254–356 mm (10–14 in.) off the ground. When the header is on the ground, the indicator should be at position 1 (C) for low ground pressure, and at position 4 (D) for high ground pressure. Crop and soil conditions determine the amount of float to use. The ideal setting is as light as possible without header bouncing or missing crop. Operating with heavy settings prematurely wears the cutterbar wearplates.

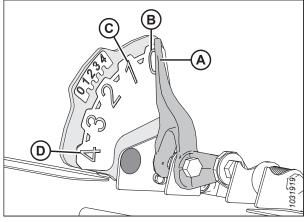


Figure 3.353: Float Indicator

- 1. Engage the separator and the header.
- 2. Manually raise or lower the header to a desired cutting height.
- 3. Press SET #1 switch (A). The light beside switch (A) will illuminate.

NOTE:

Use switch (C) for fine adjustments.

NOTE:

When setting the presets, always set the header position before setting the reel position. If the header and the reel are set at the same time, the reel setting will not be saved.

- 4. Manually raise or lower the reel to the desired position.
- 5. Press SET #1 switch (A). The light beside switch (A) will light up.
- 6. Manually raise or lower the header to a second desired cutting height.
- 7. Press SET #2 switch (B). The light beside switch (B) will light up.



Figure 3.354: Case Combine Controls

- 8. Manually raise or lower the reel to a second desired working position.
- 9. Press SET #2 switch (B). The light beside switch (B) will light up.
- 10. To swap between the set points, press HEADER RESUME (A).
- 11. To raise the header, press and hold SHIFT button (B) at the back of the control handle and press HEADER RESUME switch (A). To lower the header, press HEADER RESUME switch (A) once to return to the header preset height.

NOTE:

Pressing HEADER RAISE/LOWER switches (C) and (D) disengages AUTO HEIGHT mode. Press HEADER RESUME (A) to re-engage AUTO HEIGHT mode.



Figure 3.355: Case Combine Controls

3.11 Leveling Header

The float module is factory-set to provide the proper level for the header. It should not normally require adjustment.

If the header is not level, perform the following checks prior to adjusting the leveling linkages:

- Check the combine tire pressures.
- Check that the combine feeder house is level. Refer to your combine operator's manual for instructions.
- Check that the top of the float module is level and parallel with the feeder house.

NOTE:

The float springs are **NOT** used to level the header.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Park the combine on a level surface.
- 2. Position the header so that the cutterbar is 254–356 mm (10–14 in.) off the ground.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Lock the header wings. For instructions, refer to Locking/Unlocking Header Wings, page 138.
- 5. Check, and if necessary adjust the float. For instructions, refer to Checking and Adjusting Header Float, page 127.
- Disengage both header float locks by pulling float lock handle (A) away from the float module and pushing the float lock handle down and into position (B) (UNLOCK).

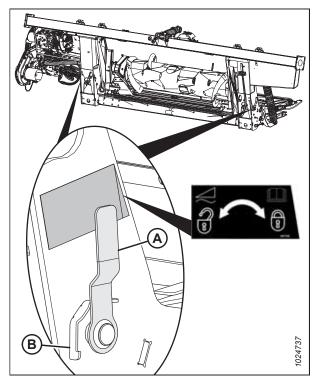


Figure 3.356: Header Float Lock in Locked Position

 On the high side of the header, make small (1/4–1/2 turn) counterclockwise adjustments to nut (A) to level the header.

NOTE:

Set screw (B) does not require loosening for adjustments up to one-half turn of nut (A).

IMPORTANT:

Adjustment of more than two turns in either direction may adversely affect header float.

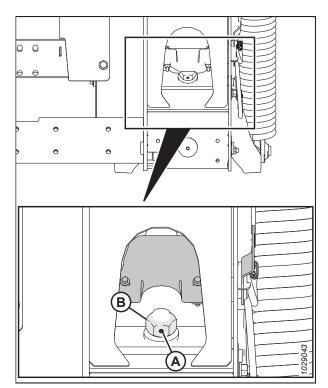


Figure 3.357: Float Lock – Right

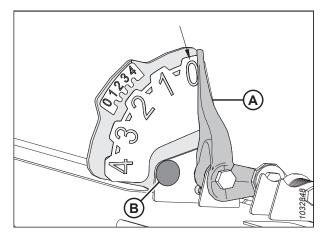


Figure 3.358: Left Float Indicator

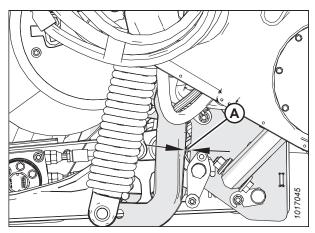


Figure 3.359: Bell Crank

After adjusting the high side of the header, reset float indicator needle (A) to zero by loosening the nut that secures bolt (B), and center the indicator needle on zero.

NOTE:

Ensure a minimum clearance of 2-3 mm (1/8 in.) (A) between the frame and the back of the bell crank lever.

NOTE:

Check the float after leveling header. For instructions, refer to *Checking and Adjusting Header Float, page 127*.

3.12 Unplugging Cutterbar

Follow this procedure if an obstruction prevents the cutterbar from working correctly.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

IMPORTANT:

Lowering a rotating reel on a plugged cutterbar will damage the reel components.

To unplug the cutterbar, reverse the combine feeder house. If the cutterbar is still plugged, do the following:

- 1. Stop the forward movement of the machine and disengage the header drives.
- 2. Raise the header to prevent it from filling with dirt, and engage the header drive clutch.
- 3. If the plug does **NOT** clear, disengage the header drive clutch and fully raise the header.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Engage the header's safety props. For instructions, refer to the combine operator's manual.
- 6. Clean off the cutterbar by hand.

3.13 Unplugging Float Module Feed Draper

Crop sometimes gets wedged between the feed draper and the feed deck. Follow this procedure to safely clear any obstructions in the float module's feed draper.

- 1. Stop the forward movement of the machine and disengage the header drives.
- 2. Raise the header slightly off the ground, and raise the reel.
- 3. Reverse the combine feed according to the manufacturer specifications (reverse feed varies among different combine models).
- 4. Turn the side draper speed down to 0.
- 5. Engage the header drive.
- 6. Slowly increase the side draper speed to the previous settings once the plug has been cleared.

3.14 Transport

There are two ways to transport the header: attached to a combine and towed behind a combine or an agricultural tractor.

For more information, refer to

- 3.14.1 Transporting Header on Combine, page 237
- 3.14.2 Towing, page 237

3.14.1 Transporting Header on Combine

In conditions with good visibility, you can transport the header while it is attached to a combine.



Do NOT drive the combine with the header attached on a road or highway at night, or in conditions which reduce visibility, such as fog or rain. The width of the header may not be apparent under these conditions.

- Check local laws for width regulations and lighting or marking requirements before transporting on roads.
- Follow all recommended procedures in your combine operator's manual for transporting, towing, etc.
- Disengage the header drive clutch when travelling to and from the field.
- Before driving on a roadway, be sure flashing amber lamps, red tail lamps, and head lamps are clean and working properly. Pivot amber lamps for best visibility by approaching traffic. Always use lamps when travelling on roads to provide adequate warning to other vehicles.
- Do NOT use field lamps on roads-they may confuse other drivers.
- Before driving on a roadway, clean slow moving vehicle signs and reflectors, adjust rear view mirrors, and clean windows.
- Lower the reel fully and raise the header unless transporting in hills.
- Maintain adequate visibility and be alert for roadside obstructions, oncoming traffic, and bridges.
- When travelling downhill, reduce speed and keep the header at a minimum height to provide maximum stability if forward momentum is stopped for any reason. Raise the header completely at the bottom of the grade to avoid contacting the ground.
- Travel at safe speeds to ensure complete machine control and stability at all times.

3.14.2 Towing

Headers with the EasyMove[™] Transport option can be towed behind a combine or an agricultural tractor at a maximum speed of 32 km/h (20 mph).

For instructions, refer to the towing vehicle's operator's manual.

Attaching Header to Towing Vehicle

The header can be towed to multiple locations using a towing vehicle. Follow the instructions below to prevent loss of control leading to bodily injury and/or machine damage.

Adhere to the following slow speed transport instructions to prevent loss of control leading to bodily injury and/or machine damage:

- Weight of towing vehicle must exceed header weight to ensure adequate control and braking performance.
- Do NOT tow with any highway-capable vehicle. Use only an agricultural tractor, agricultural combine, or a properly configured MacDon windrower.
- Ensure reel is fully lowered and back on support arms to increase header stability during transport. For headers with hydraulic reel fore-aft, never connect the fore-aft couplers to each other or the circuit will be complete and the reel could creep forward during transport.
- Check that all pins are properly secured in transport position at wheel supports, cutterbar support, and hitch.
- Check tire condition and pressure prior to transporting.
- Connect hitch to towing vehicle using a proper hitch pin with a spring locking pin or other suitable fastener.
- Attach hitch safety chain to towing vehicle. Adjust safety chain length to provide only enough slack to permit turning.
- Connect header seven-pole plug wiring harness to mating receptacle on towing vehicle. (The seven-pole receptacle is available from your MacDon Dealer parts department.)
- Ensure lights are functioning properly and clean the slow moving vehicle sign and other reflectors. Use flashing warning lights unless prohibited by law.

Precautions for Towing Header

Review this list of cautions before attaching and towing a header behind a combine or an agricultural tractor.

Adhere to the following slow speed transport instructions to prevent loss of control leading to bodily injury and/or machine damage:

- Do NOT exceed 32 km/h (20 mph).
- Reduce transport speed to less than 8 km/h (5 mph) for slippery or rough conditions.
- Turn corners at only very low speeds (8 km/h [5 mph] or less) as header stability is reduced while cornering. Do NOT accelerate when making or coming out of a turn.
- Obey all highway traffic regulations in your area when transporting on public roads. Use flashing amber lights unless prohibited by law.

3.14.3 Converting from Transport to Field Position (Option)

The header needs to be converted back to field position if it was towed to a new location.

Moving Left Outboard Wheel From Transport to Working Position – ContourMax[™] Option

The left outboard wheel need to be repositioned to the working position after being in the transport position.

DANGER

To avoid bodily injury or death from unexpected startup or fall of raised header, stop the engine, remove the key, and engage the safety props before going under the header. If you are using a lifting device to support the header, be sure that the header is secure before proceeding.

- 1. Start the engine.
- 2. Raise the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the header safety props or support the header on blocks on level ground. If using blocks to support the header, ensure the header is approximately 914 mm (36 in.) off the ground.
- 5. Remove lynch pin (A).
- 6. Remove locking pin (B).
- 7. Slide wheel assembly (C) out of storage bracket (D).

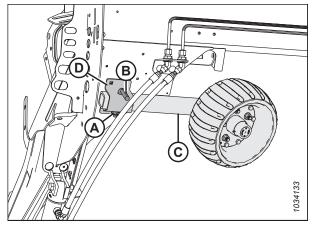


Figure 3.360: Left Wheel Assembly

Figure 3.361: Left Wheel Assembly

- With the wheel facing inboard, align wheel assembly (C) with the isolator assembly and slide it towards the front of the header until the pin holes line up.
- 9. Install locking pin (B).
- 10. Install lynch pin (A).

Removing Tow-Bar

Remove the tow bar from the transport location when converting from the transport position.

1. Block the header tires with wheel chocks (A) to prevent header from rolling.

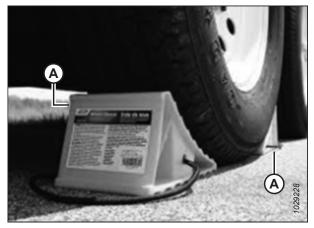


Figure 3.362: Tire Blocking

- 2. Disconnect electrical connector (A) and safety chain (B) from towing vehicle and store as shown.
- 3. If removing a tow-bar with an extension, proceed to Step *4*, *page 240*. If removing a tow-bar without an extension, proceed to Step *16*, *page 242*.

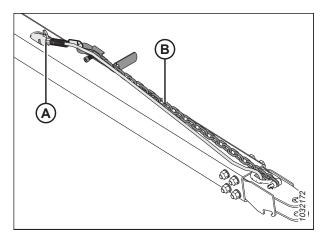


Figure 3.363: Tow-Bar Assembly

Removing tow-bar installed with an extension:

- 4. Disconnect tow-bar harness (A) from extension harness (B).
- 5. Remove lynch pin (C) from latch.

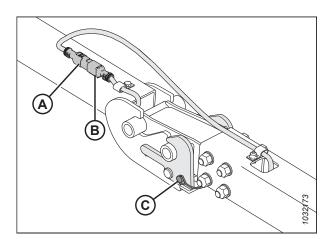


Figure 3.364: Tow-Bar / Extension Harness

- 6. Secure tow-bar harness (A) in storage location.
- 7. Lift up on hitch near latch connection to take weight off of latch. While lifting, pull up on latch handle (B) to clear towbar lug, and then slowly lower assembly to the ground.
- 8. Lift end of tow-bar (C) and pull away from extension (D).

9. Unplug tow-bar extension electrical harness (A) from left transport pivot harness (B).

10. Remove lynch pin (A) from transport pivot (B).

11. Push back on latch (C) to free extension (D).

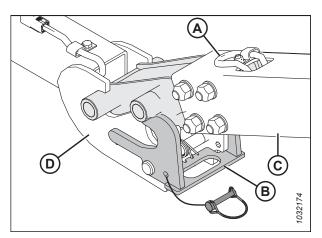


Figure 3.365: Tow-Bar / Extension Joint

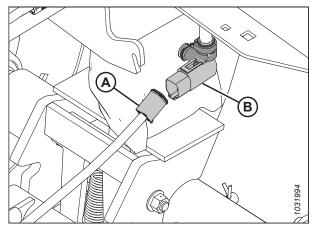


Figure 3.366: Tow-Bar Electrical Connection

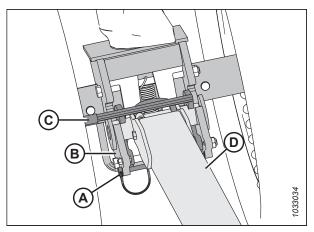


Figure 3.367: Tow-Bar Extension and Transport Pivot

MAC215954

- 12. Lift extension (A) and pull away from transport pivot (B).
- 13. Secure extension harness (C) inside the tow-bar extension tube (A).
- 14. Reinstall lynch pin in left transport pivot for safe keeping.
- 15. For tow-bar storage, refer to *Storing Tow-Bar, page 243*.

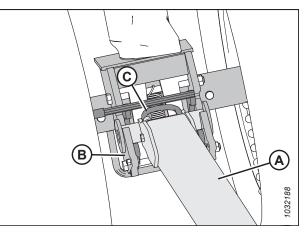


Figure 3.368: Latch Disengaged from Extension

Removing tow-bar installed without an extension:

16. Unplug tow-bar extension electrical harness (A) from left transport pivot harness (B).

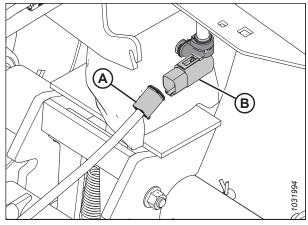


Figure 3.369: Tow-Bar Electrical Connection

B A COECCI

Figure 3.370: Tow-Bar and Left Transport Pivot

17. Remove lynch pin (A), then push back on latch (B) to free the tow-bar.

- 18. Lift tow-bar (A) and pull away from transport pivot (B).
- 19. Reinstall lynch pin in left transport pivot for safe keeping.
- 20. For tow-bar storage, refer to *Storing Tow-Bar, page 243*.

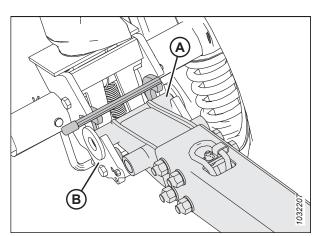


Figure 3.371: Tow-Bar and Left Transport Pivot

Storing Tow-Bar

Store the tow bar in the backtube when not in use.

Tow-bar Extension

- 1. Insert tube end (B) of tow-bar extension (A) onto pin (C).
- 2. Rotate tow-bar extension to cradle (D).

NOTE:

To prevent tow-bar extension from shaking loose, ensure extension bar engages groove in bracket (E).

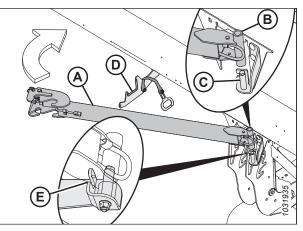


Figure 3.372: Tow-Bar Extension Storage

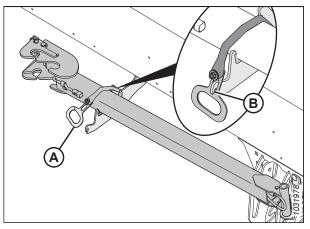


Figure 3.373: Tow-Bar Extension Storage

3. Secure tow-bar extension by hooking strap handle (A) onto notch in cradle (B).

Tow-bar

- 4. Open left endshield. For instructions, refer to *Opening Header Endshields, page 35*.
- 5. With tow chain and harness (A) facing up, insert hitch end (B) of tow bar into left backtube.

IMPORTANT:

Header endshield removed from illustration for clarity.

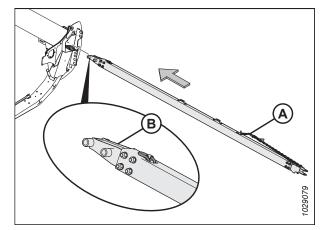


Figure 3.374: Hitch End

- 6. Slide tow-bar inside the backtube until hooks (A) engage the slots of support angle (B).
- 7. Close header endshield. For instructions, refer to *Closing Header Endshields, page 36*.

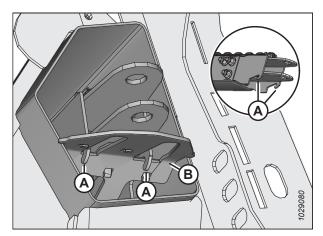


Figure 3.375: Clevis End Retainer Hooks

Moving Front (Left) Wheels into Field Position

This procedure explains how to move the wheels to the highest storage position, but you may wish to use a lower position, depending on whether or not you want the wheels to support the header during field operations. This procedure assumes that the tow-bar has been removed.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

DANGER

Ensure that all bystanders have cleared the area.

- 1. Start the engine.
- 2. Raise the header until the transport wheels are 51–102 mm (2–4 in.) off the ground.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the header's safety props. For instructions, refer to the combine operator's manual.

5. Turn left transport wheel assembly (A) 90° in the direction shown.

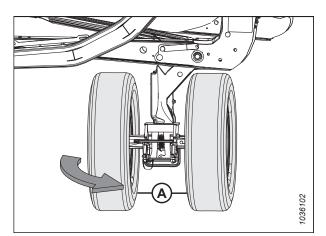


Figure 3.376: Left Transport Wheels in Transport Mode

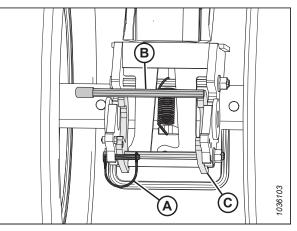


Figure 3.377: Left Transport Wheels – Rotation Lock Latch Disengaged

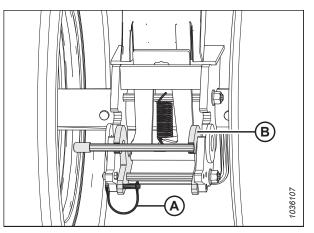


Figure 3.378: Left Transport Wheels – Rotation Lock Latch Engaged

6. Remove lynch pin (A). Pull handle (B) to engage latch (C) this will prevent the transport wheel assembly from rotating.

7. Secure latch (B) with lynch pin (A).

8. To unlock the pivot, use your foot to apply pressure to bolt (B) while pushing handle (A) downward.

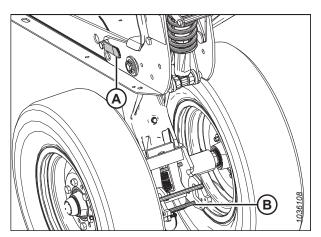


Figure 3.379: Left Transport Wheels – Pivot Released

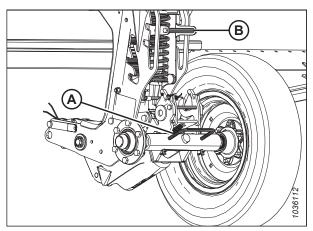


Figure 3.380: Left Transport Wheels in Highest Storage Position

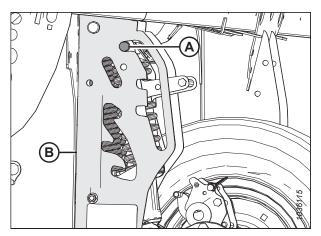


Figure 3.381: Left Transport Wheel Pivot Pin in Highest Storage Position

Moving Rear (Right) Wheels into Field Position

The rear (right) transport wheels can be converted from transport to field (storage) position with a few simple steps.

This procedure demonstrates how to move the wheels to the highest storage position, but you may wish to use a lower position, depending on whether or not you want the wheels to support the header during field operations.

9. Lift up on handle (A) while pulling back on handle (B) to lift the left wheel assembly into the highest storage position.

NOTE:

Parts have been removed from the illustration for clarity.

10. Ensure that pin (A) is visible at the highest storage position in plate (B).

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

- 1. Start the engine.
- 2. Raise the header until the transport wheels are 51–102 mm (2–4 in.) off the ground.

NOTE:

Raise the header high enough that the cylinder safety props can be engaged—you will need to work under the header to complete this procedure.

NOTE:

If engaging the safety props requires raising the header to a height where it is inconvenient to work on, use blocks to support the header so that the transport wheels are 51–102 mm (2–4 in.) off the ground.

- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the header's safety props. For instructions, refer to the combine operator's manual.
- 5. On the right transport axle, remove lynch pin (A) from the right transport axle latch.
- 6. Support the right transport axle using wheel handle (B), then push handle (C) to release the right transport axle from the header frame.
- 7. Lower the right transport axle to the ground using wheel handle (B).
- 8. Reinstall lynch pin (A) into the latch.

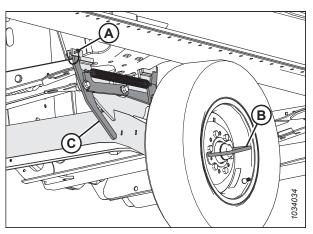


Figure 3.382: Right Transport Axle Latched in Transport Position

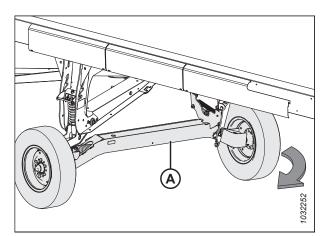


Figure 3.383: Right Transport Axle Rotation

9. Lift and rotate right transport axle (A) in the direction shown using the wheel handle.

OPERATION

 Using wheel handle (A), lift and position right transport axle (B) to field support (C) to engage the latch.

 Pull transport height adjustment handle (A) and lift axle pivot handle (B) to move the axle to the highest storage position. Ensure that pin (C) is visible at the highest storage

12. Adjust the skid shoe position at the right transport leg to match the other skid shoes. For instructions, refer to

Adjusting Inner Skid Shoes, page 124.

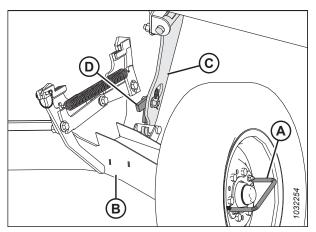


Figure 3.384: Right Transport Axle Latched in Field Position

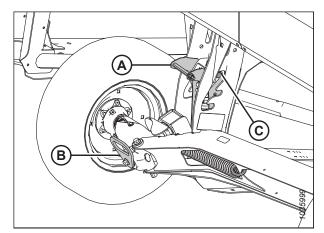


Figure 3.385: Right Transport Wheels in Highest Storage Position

3.14.4 Converting from Field to Transport Position (Option)

The header needs to be converted to the transport when being towed to a new location.

Moving Left Outboard Wheel From Working to Transport Position

The left outboard wheel need to be moved to the transport position before the header can be towed.

position as shown.

To avoid bodily injury or death from unexpected startup or fall of raised header, stop the engine, remove the key, and engage the safety props before going under the header. If you are using a lifting device to support the header, be sure that the header is secure before proceeding.

- 1. Start the engine.
- 2. Raise the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the header safety props or support the header on blocks on level ground. If using blocks to support the header, ensure the header is approximately 914 mm (36 in.) off the ground.

- 5. Remove lynch pin (A).
- 6. Remove locking pins (B).
- 7. Slide left wheel assembly (C) towards the back of the header.

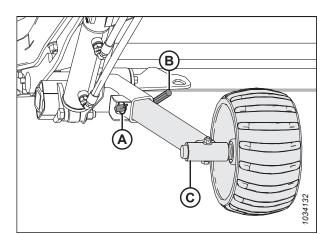


Figure 3.386: Left Wheel Assembly

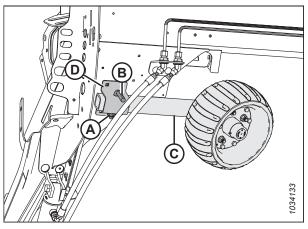


Figure 3.387: Left Wheel Assembly

8. With the wheel facing out, slide left wheel assembly (C) into storage bracket (D).

- 9. Install locking pin (B).
- 10. Install lynch pin (A).

Moving Front (Left) Wheels into Transport Position



To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

Stand clear of the wheels and release the linkage carefully; the wheels will drop suddenly once the mechanism is released.

- 1. Start the engine.
- 2. Raise the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the header safety props or support the header on blocks on level ground. If using blocks to support the header, ensure the header is approximately 914 mm (36 in.) off the ground.

OPERATION

 Adjust gauge wheel height to transport position (lowest slot). Pull suspension handle (A) outward and push down on axle pivot handle (B) until transport position is reached.

- 6. Secure left transport pivot by pushing pivot handle (A) forward until latch is engaged.
- 7. Pull back on pivot handle to verify that latch is fully engaged.

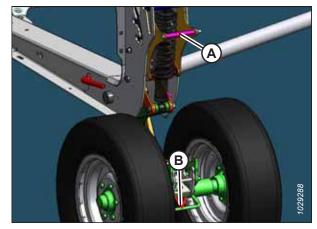


Figure 3.388: Gauge Wheel

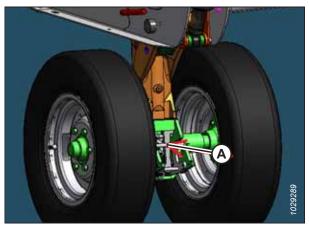


Figure 3.389: Gauge Wheel

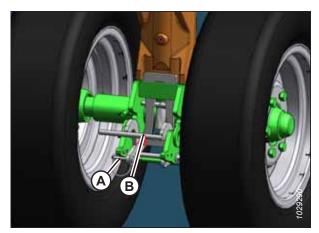


Figure 3.390: Gauge Wheel

- 8. Remove clevis pin (A) securing latch.
- 9. Push pivot handle (B) up to unlock wheel assembly.

10. Turn front wheel assembly clockwise, 90°.

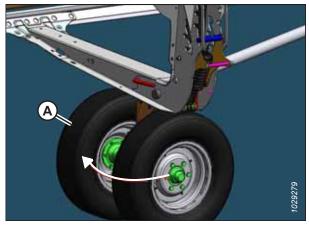


Figure 3.391: Gauge Wheel

Moving Rear (Right) Wheels into Transport Position

When towing the header it must be converted into the transport position.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

Stand clear of the wheels and release the linkage carefully; the wheels will drop suddenly once the mechanism is released.

- 1. Fully raise the skid shoe at the right transport axle. For instructions, refer to *Adjusting Inner Skid Shoes, page 124*.
- 2. Adjust gauge wheel height to transport position (lowest slot) as follows:
 - If in top slot, push on handle (A) to release.
 - If in mid slot, pull on handle (A) to release.
- 3. Pull suspension handle (A) outward and push down on axle pivot handle (B).

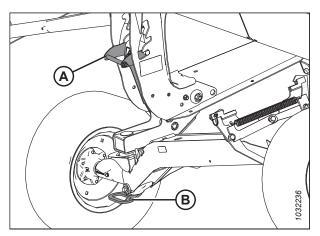


Figure 3.392: Gauge Wheels

OPERATION

4. Push down on latch (A) at right field support (B) to unlock.

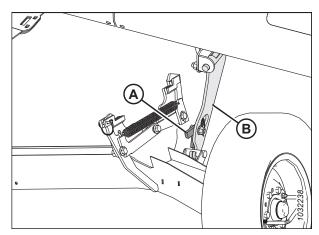


Figure 3.393: Right Field Support

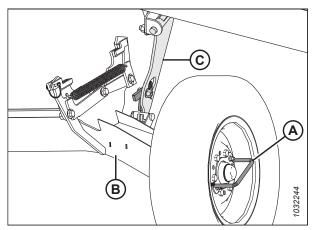


Figure 3.394: Right Field Support

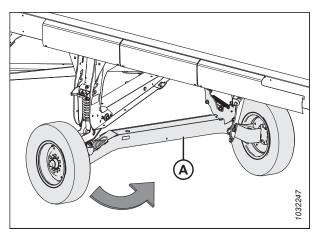


Figure 3.395: Right Transport Axle

5. Lift wheel handle (A) to remove right transport axle (B) from right field support (C), then lower right transport axle to the ground.

6. Use wheel handle and rotate right transport axle (A) under the header frame.

- 7. Remove clevis pin (A) from right transport axle latch.
- 8. Lift right transport axle with wheel handle (B) until latch engages.
- 9. Push down on wheel handle (B) to verify latch is engaged.
- 10. Secure latch by reinstalling clevis pin (A).

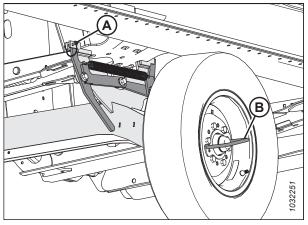


Figure 3.396: Right Transport Axle

Removing Tow-Bar from Storage

Remove the tow-bar from the backtube storage location when converting to the transport position.

Tow-Bar Extension

- 1. Remove strap (A) from cradle (B) to free tow-bar extension (C).
- 2. Rotate tow-bar extension to unlock from pin (D).
- 3. Lift tow-bar extension away (C) from pin (D).

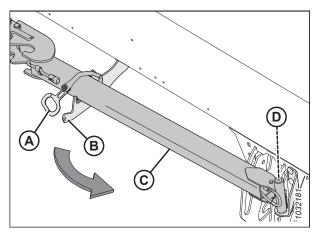


Figure 3.397: Tow-Bar Extension in Storage

Tow-Bar

- 4. Open left endshield. For instructions, refer to *Opening Header Endshields, page 35.*
- 5. Pull tow-bar forward until it hits the stop. Lift the tow-bar to free clevis stop (C) and hook (A) from support angle (B), then pull it out of tube.

NOTE:

Backtube is shown transparent in illustration at right.

6. Slide tow-bar out from header backtube.

NOTE:

Use caution to avoid contact with any nearby hydraulic or electrical hoses and lines.

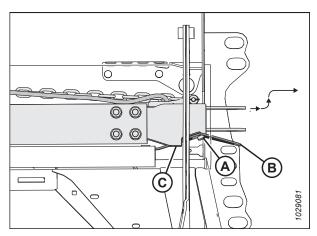


Figure 3.398: Tow-Bar in Storage

Attaching Tow-Bar

The tow-bar consists of two sections which make storage and handling easier.

- 1. Block the header tires with wheel chocks (A) to prevent header from rolling.
- 2. Remove tow-bar from storage. For instructions, refer to *Removing Tow-Bar from Storage, page 253*.
- 3. If installing a tow-bar and extension, proceed to Step 4, *page 254*. If installing tow-bar only, proceed to Step 18, *page 256*.



Figure 3.399: Tire Blocking

Installing tow-bar and extension:

- 4. Remove lynch pin (A) from left transport pivot (B).
- 5. Push extension (D) into lugs of left transport pivot until latch (C) engages.
- 6. Reinstall lynch pin (A) to transport pivot to secure extension.
- 7. Retrieve the end of extension harness (E) from inside the extension tube.

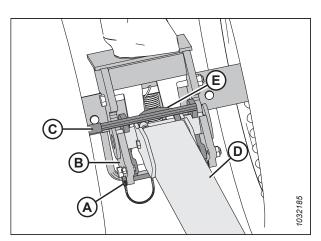


Figure 3.400: Tow-Bar Extension to Left Transport Pivot

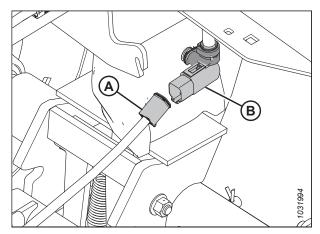


Figure 3.401: Tow-Bar Electrical Connection

8. Connect extension wiring harness (A) to left transport pivot harness (B).

- 9. Remove lynch pin (E) from latch (B).
- 10. Position end of tow-bar (C) on extension lugs then lower tow-bar to the ground.
- 11. Lift extension (D) for latch (B) to engage to tow-bar (C).
- 12. Retrieve the end of tow-bar harness (A) from storage location.

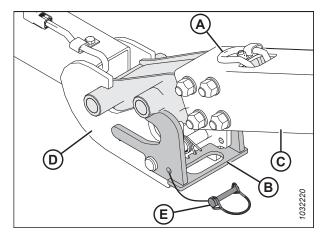


Figure 3.402: Tow-Bar to Extension

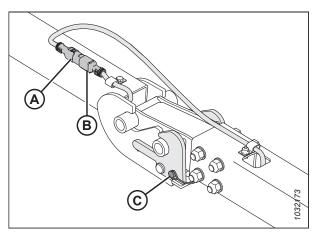


Figure 3.403: Tow-Bar / Extension Harness

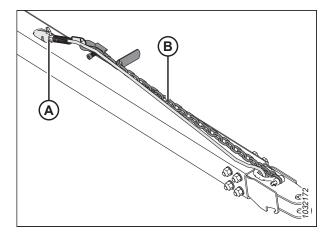



Figure 3.404: Tow-Bar Wiring Harness

- 13. Connect tow-bar harness (A) to extension harness (B).
- 14. Reinstall lynch pin (C) to latch to secure tow-bar.

- 15. Retrieve tow-bar wiring harness (A) and safety chain (B) from storage location.
- 16. Connect tow-bar wiring harness to vehicle, and secure safety chain from tow-bar to tow vehicle.
- 17. Turn on tow vehicle's 4-way flashers and check that all lights on header are working.

Installing tow-bar only:

- 18. Remove lynch pin (A) from left transport pivot (B).
- 19. Push tow-bar (C) into lugs of left transport pivot until latch (D) engages.
- 20. Reinstall lynch pin (A) to transport pivot to secure tow-bar.
- 21. Retrieve the end of tow-bar harness (E).

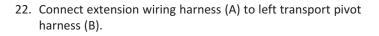

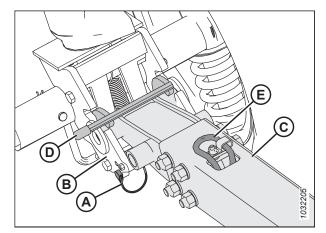


Figure 3.405: Tow-Bar and Left Transport Pivot

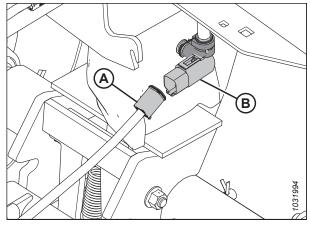


Figure 3.406: Tow-Bar Electrical Connection

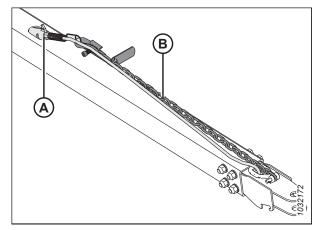


Figure 3.407: Tow-Bar Wiring Harness

- 23. Retrieve tow-bar wiring harness (A) and safety chain (B) from storage location.
- 24. Connect tow-bar wiring harness to vehicle, and secure safety chain from tow-bar to tow vehicle.
- 25. Turn on tow vehicle's 4-way flashers and check that all lights on header are working.

3.15 Storing the Header

When putting the header into storage at the end of the season, perform this procedure. Storing the header properly helps to ensure its service life.

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.

Cover the cutterbar and the knife guards to prevent injury from accidental contact.

- 1. Clean the header thoroughly.
- 2. Store the header in a dry, protected place if possible. If storing the header outdoors, always cover it with a waterproof canvas or other protective material.

NOTE:

If storing the header outdoors, remove the drapers and store them in a dark, dry place. If not removing the drapers, store the header with the cutterbar lowered so that water and snow will not accumulate on the drapers. The weight of water and snow accumulation puts significant stress on the drapers and the header frame.

- 3. Lower the header onto blocks to keep the cutterbar off of the ground.
- 4. Lower the reel completely. If the header will be stored outdoors, tie the reel to the frame to prevent rotation caused by the wind.
- 5. Repaint all worn or chipped painted surfaces to prevent rust from forming.
- 6. Loosen the drive belts.
- 7. Lubricate the header thoroughly, leaving excess grease on the fittings to keep moisture out of the bearings.
- 8. Apply grease to the exposed threads, cylinder rods, and sliding surfaces of components.
- 9. Check for worn components and repair them as necessary.
- 10. Check for broken components and order the replacements from your Dealer. Immediate repair of these items will save time and effort at the beginning of next season.
- 11. Replace or tighten any missing or loose hardware. Ensure that loose hardware is tightened to the recommended torque value. For more information, refer to 7.1 Torque Specifications, page 509.

Chapter 4: Maintenance and Servicing

This chapter contains the information necessary to perform routine maintenance and occasional servicing tasks on your machine. The word "maintenance" refers to scheduled tasks that help your machine operate safely and effectively; "Service" refers to tasks that must be performed when a part needs to be repaired or replaced. For advanced service procedures, contact your Dealer.

A parts catalog is provided in the plastic manual case at the rear by the right header leg.

Log hours of operation and use the maintenance record provided (refer to 4.2.1 Maintenance Schedule/Record, page 260) to keep track of your scheduled maintenance.

4.1 Preparing Machine for Servicing

Observe all safety precautions before beginning service on the machine.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

To avoid personal injury, follow all the safety precautions listed before servicing header or opening drive covers.

Before servicing the machine, follow these steps:

- 1. Lower the header fully. If it is necessary to service the header in the raised position, always engage the safety props.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the park brake.
- 4. Wait for all moving parts to stop.

4.2 Maintenance Requirements

Regular maintenance is the best insurance against early wear and untimely breakdowns. Following the maintenance schedule will increase your machine's life. Log hours of operation, use the maintenance record, and keep copies of your maintenance records (refer to *4.2.1 Maintenance Schedule/Record, page 260*).

Periodic maintenance requirements are organized according to service intervals. If a service interval specifies more than one timeframe, e.g., 100 hours or annually, service the machine at whichever interval is reached first.

IMPORTANT:

Recommended intervals are for average conditions. Service the machine more often if operating under adverse conditions (severe dust, extra heavy loads, etc.).

When servicing the machine, refer to the appropriate section in this Maintenance and Servicing chapter and use only specified fluids and lubricants. Refer to inside back cover for recommended fluids and lubricants.

Carefully follow safety messages. For instructions, refer to 4.1 Preparing Machine for Servicing, page 259 and 1 Safety, page 1.

4.2.1 Maintenance Schedule/Record

Recording maintenance allows the user to keep track of when maintenance is performed.

	Action:			✓ – Check					♦ – Lubricate						🛦 – Change					
	Hour meter reading																			
	Service date																			
	Serviced by																			
First	irst Use Refer to 4.2.2 Break-In Inspection, page 263.																			
End	nd of Season Refer to 4.2.4 Equipment Servicing – End-of-Season, page 264							64.												
10 H	10 Hours or Daily (Whichever Occurs First)																			
~	✓ Hydraulic hoses and lines; refer to 4.2.5 Checking Hydraulic Hoses and Lines, page 265 ⁷⁰																			
~	Knife sections, guards, and hold-downs; refer to 4.8 Knife, page 32470																			
~	Tire pressure; refer to 4.16.3 Checking Tire Pressure, page 46670																			
٠	Feed draper rollers; refer to Every 10 Hours, page	ge 2	66																	
~	Link holder hooks; refer to 4.10.7 Checking Link	Hol	der I	Нос	oks, p	age	386	70												
~	✓ Axle bolt torque; refer to 4.16.2 Checking Transport Assembly Bolt Torque, page 464																			
25 H	25 Hours																			
✓	Hydraulic oil level at reservoir; refer to 4.4.1 Checking Oil Level in Hydraulic Reservoir, page 28670																			
٠	Knifeheads; refer to <i>Every 25 Hours, page 267</i> ⁷⁰																			
50 H	50 Hours or Annually																			

^{70.} MacDon recommends keeping a record of daily maintenance as evidence of a properly maintained machine.

MAINTENANCE AND SERVICING

			_	_						
٠	Driveline and driveline universals; refer to <i>Every 50 Hours, page 268</i>									
٠	Upper cross auger right bearing; refer to <i>Every</i> 50 Hours, page 268									
٠	Upper cross auger sliding hubs; refer to <i>Every</i> 50 Hours, page 268									
٠	Upper cross auger center support and U-joint; refer to <i>Every 50 Hours, page 268</i>									
٠	Float module auger pivots; refer to <i>Every 50</i> <i>Hours, page 268</i>									
٠	Feed draper roller bearings, 3 locations; refer to Every 50 Hours, page 268									
•	Reel drive chain (If chain is dry at next oiling interval – consider decreasing oiling interval.); refer to <i>Every 50 Hours, page 268</i>									
	Knife drive box lubricant (first 50 hours only); refer to <i>Changing Oil in Knife Drive Box, page</i> <i>362</i>									
	Header drive main gearbox lubricant (first 50 hours only); refer to <i>Changing Oil in Header</i> <i>Drive Main Gearbox, page 281</i>									
	Header drive completion gearbox lubricant (first 50 hours only); refer to <i>Changing Oil in</i> <i>Header Drive Completion Gearbox, page 284</i>									
100 I	Hours or Annually (Whichever Occurs First)	•								
~	Auger to pan and feed draper clearance; refer to 4.7.1 Adjusting Feed Auger to Pan Clearance, page 302									
~	Main gearbox lubricant level; refer to Checking Oil Level in Header Drive Main Gearbox, page 280									
~	Completion gearbox lubricant level; refer to Checking Oil Level in Header Drive Completion Gearbox, page 282									
~	Reel drive chain tension; refer to 4.14.1 Reel Drive Chain, page 444									
~	Reel finger/cutterbar clearance; refer to 4.13.1 Reel Clearance to Cutterbar, page 410									
~	Wheel bolt torque; refer to 4.16.1 Checking Wheel Bolt Torque, page 464									

MAINTENANCE AND SERVICING

		 -	-		 	 -	 	 	
~	Knife drive box lubricant level; refer to Checking Oil Level in Knife Drive Box , page 361								
~	Knife drive box mounting bolts; refer to <i>Checking Mounting Bolts, page 362</i>								
٠	Auger drive chain; refer to <i>Every 100 Hours,</i> page 272								
٠	Float pivots; refer to <i>Every 100 Hours, page</i> 272								
•	Float spring tensioners; refer to Every 100 Hours, page 272								
250 I	Hours or Annually (Whichever Occurs First)								
٠	Reel shaft bearings; refer to <i>Every 250 Hours, page 274</i>								
•	Reel drive U-joint; refer to <i>Every 250 Hours, page 274</i>								
٠	Bell crank linkage; refer to Every 250 Hours, page 274								
	Hydraulic oil filter; refer to 4.4.4 Changing Oil Filter, page 288								
500 I	Hours or Annually (Whichever Occurs First)								
٠	Gauge wheel / slow speed transport wheel bearings; refer to <i>Every 500 Hours, page 276</i>								
٠	Contour wheel hub; refer to 4.15.2 Lubricating Contour Wheel System, page 460								
~	Header drive main gearbox chain tension; refer to 4.6.5 Adjusting Chain Tension – Main Gearbox, page 299								
~	Header drive completion gearbox chain tension; refer to <i>4.6.6 Adjusting Chain Tension</i> – Completion Gearbox, page 300								
1000	Hours or 3 Years (Whichever Occurs First)								
	Knife drive box lubricant; refer to Changing Oil in Knife Drive Box, page 362								
	Header drive main gearbox lubricant; refer to Changing Oil in Header Drive Main Gearbox, page 281								

Header drive completion gearbox lubricant; refer to Changing Oil in Header Drive Completion Gearbox, page 284									
Hydraulic oil; refer to 4.4.3 Changing Oil in the Hydraulic Reservoir, page 287									

4.2.2 Break-In Inspection

Break-in inspection involves checking belts, fluids, and performing general machine inspections for loose hardware or other areas of concern. Break-in inspections ensure that all components can operate for an extended period without requiring service or replacement. The break-in period is the first 50 hours of operation after the machine's initial start up.

Inspection Interval	Item	Refer to
5 Minutes	Check hydraulic oil level in reservoir (check after first run-up and after the hydraulic hoses have filled with oil).	4.4.1 Checking Oil Level in Hydraulic Reservoir, page 286
5 Hours	Check for loose hardware and tighten to required torque.	7.1 Torque Specifications, page 509
10 Hours	Check auger drive chain tension.	Checking Feed Auger Drive Chain Tension – Thorough Method, page 306
10 Hours	Check knife drive box mounting bolts.	Checking Mounting Bolts, page 362
10 Hours	Grease the feed draper bearings.	Every 10 Hours, page 266
50 Hours	Change float module gearbox oil.	Changing Oil in Header Drive Main Gearbox, page 281
50 Hours	Change float module hydraulic oil filter.	4.4.4 Changing Oil Filter, page 288
50 Hours	Change knife drive box lubricant.	Changing Oil in Knife Drive Box, page 362
50 Hours	Check gearbox chain tension.	4.6.5 Adjusting Chain Tension – Main Gearbox, page 299 and 4.6.6 Adjusting Chain Tension – Completion Gearbox, page 300

4.2.3 Equipment Servicing – Preseason

Equipment should be inspected and serviced at the beginning of each operating season.

- Review this manual to refresh your memory on the safety and operating recommendations.
- Review all the safety decals and other decals on the header and note the hazard areas.
- Be sure all the shields and guards are properly installed and secured. Never alter or remove safety equipment.
- Be sure you understand and have practiced safe use of all controls. Know the capacity and operating characteristics of the machine.
- Ensure you have a first aid kit and fire extinguisher. Know where they are and how to use them.
- 1. Lubricate the machine completely. For instructions, refer to 4.3 Lubrication, page 266.
- 2. Perform all annual maintenance tasks. For instructions, refer to 4.2.1 Maintenance Schedule/Record, page 260.

4.2.4 Equipment Servicing – End-of-Season

Equipment should be inspected and serviced at the end of each operating season.

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.

Cover the cutterbar and the knife guards to prevent injury from accidental contact.

- 1. Clean the header thoroughly.
- 2. Store the header in a dry, protected place, if possible. If storing the header outdoors, always cover the machine with a waterproof canvas or other protective material.

NOTE:

If storing the machine outdoors, remove the drapers and store them in a dark, dry place. If not removing the drapers, store the header with the cutterbar lowered so that water and snow will not accumulate on the drapers. The weight of water and snow accumulation puts significant stress on the drapers and header.

- 3. Lower the header onto blocks to keep the cutterbar off of the ground.
- 4. Lower the reel completely. If the header will be stored outdoors, tie the reel to the frame to prevent rotation caused by the wind.
- 5. Repaint all worn or chipped painted surfaces to prevent rust.
- 6. Loosen the drive belts.
- 7. Lubricate the header thoroughly, leaving excess grease on the fittings.
- 8. Apply grease to exposed threads, cylinder rods, and the sliding surfaces of components.
- 9. Lubricate the knife. Refer to the inside back cover for the recommended lubricants.
- 10. Check for broken components and order replacements from your Dealer. Immediate repair of these items will save time and effort at the beginning of next season.

11. Tighten any loose hardware. For torque specifications, refer to 7.1 Torque Specifications, page 509.

4.2.5 Checking Hydraulic Hoses and Lines

Check hydraulic hoses and lines daily for signs of leaks.

WARNING

- Avoid high-pressure fluids. Escaping fluid can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic lines. Tighten all connections before applying pressure. Keep hands and body away from pin holes and nozzles which eject fluids under high pressure.
- If any fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury or gangrene may result.



Figure 4.1: Hydraulic Pressure Hazard

• Use a piece of cardboard or paper to search for leaks.

IMPORTANT:

Keep hydraulic coupler tips and connectors clean. Allowing dust, dirt, water, or foreign material to enter the system is the major cause of hydraulic system damage. Do **NOT** attempt to service hydraulic systems in the field. Precision fits require a perfectly clean connection during overhaul.

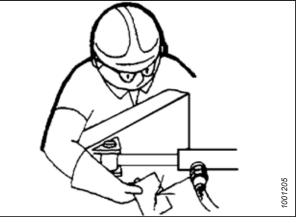


Figure 4.2: Testing for Hydraulic Leaks

- 1. Start the machine, and engage the header. While running, raise and lower the header and reel. Also extend and retract the reel. Run it for 10 minutes.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Once the machine has been sitting still for several hours, walk around it checking for hoses, lines, and fittings that are visibly leaking oil.

4.3 Lubrication

Grease zerk locations are marked on the machine by decals showing a grease gun and the greasing interval, which will be specified in terms of hours of header operation.

Refer to the inside back cover for information on the recommended lubricants.

Log the header's hours of operation. Use the maintenance record provided in this manual to keep track of what maintenance procedures have been performed on the header, and when. For more information, refer to *4.2.1 Maintenance Schedule/Record, page 260*.

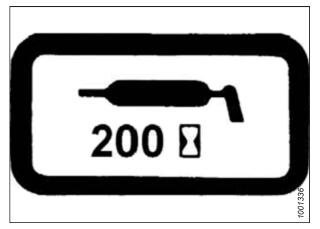


Figure 4.3: Grease Interval Decal

4.3.1 Lubrication Intervals

The lubrication intervals are specified in terms of hours of header operation. Maintaining accurate maintenance records is the best way to ensure these procedures are performed in a timely fashion.

Every 10 Hours

Daily maintenance is required to keep your machine operating at peak performance. It also allows you to do a visual inspection of the machine that may help identify issues early.

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

IMPORTANT:

When greasing, clear any debris and excess grease from around the bearing and bearing housing. Inspect the condition of the bearing and bearing housing. Grease the feed draper drive roller bearing until grease comes out of the seal. Wipe any excess grease from area after greasing.

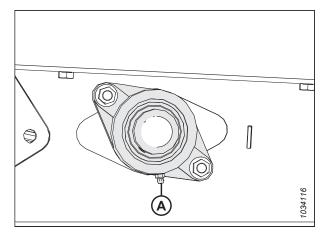


Figure 4.4: Feed Draper Drive Roller

MAINTENANCE AND SERVICING

IMPORTANT:

When greasing, clear any debris, and excess grease from around the bearing housing. Inspect the condition of the roller and bearing housing. Grease the feed draper idler roller bearing until grease comes out of the seal. Initial greasing on a new header may require additional grease (may require 5-10 pumps). Wipe any excess grease from area after greasing.

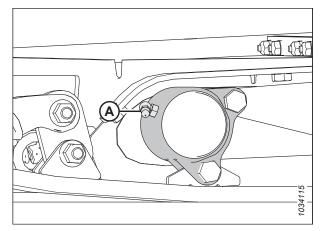


Figure 4.5: Feed Draper Idler Roller

Every 25 Hours

Regular maintenance is required to keep your machine operating at peak performance. It also allows you to do a visual inspection of the machine that may help identify issues early.

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

Lubricate knifehead (A) every 25 hours. Check for signs of excessive heating on the first few guards after greasing. If required, relieve the pressure by pressing the check-ball in the grease fitting.

IMPORTANT:

Overgreasing the knifehead puts pressure on the knife, causing it to rub against the guards, resulting in excessive wear from binding. Do **NOT** overgrease the knifehead. Apply only one to two pumps using a mechanical grease gun (do **NOT** use an electric grease gun). If more than six to eight pumps of the grease gun are required to fill the cavity, replace the seal in the knifehead. For instructions, refer to *4.8.3 Removing Knifehead Bearing, page 327*.

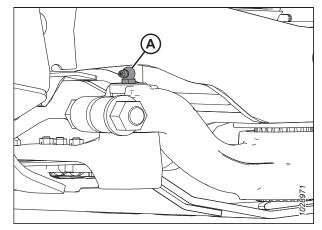


Figure 4.6: Knifehead

Every 50 Hours

Maintenance is required to keep your machine operating at peak performance. It also allows you to do a visual inspection of the machine that may help identify issues early.

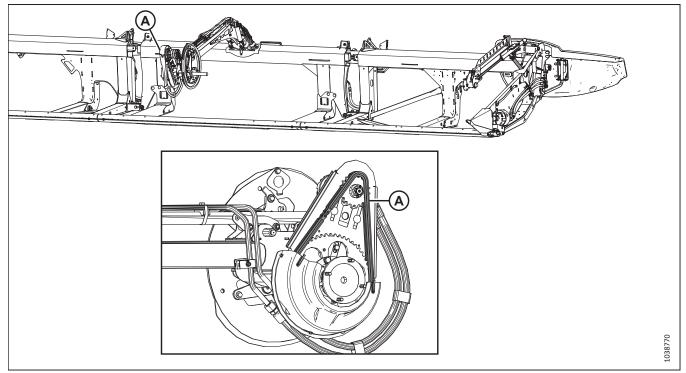


Figure 4.7: Reel


A - Reel Drive Chain. To lubricate, refer to 4.3.3 Lubricating Reel Drive Chain, page 278.

IMPORTANT:

Use chain oil that has a viscosity of 100-150 sCt at 40°C (typically medium to heavy chain oil) or mineral oil Sae 20W50 that has no detergents or solvents.

NOTE:

If chain is dry at next oiling interval, decrease the oiling interval.

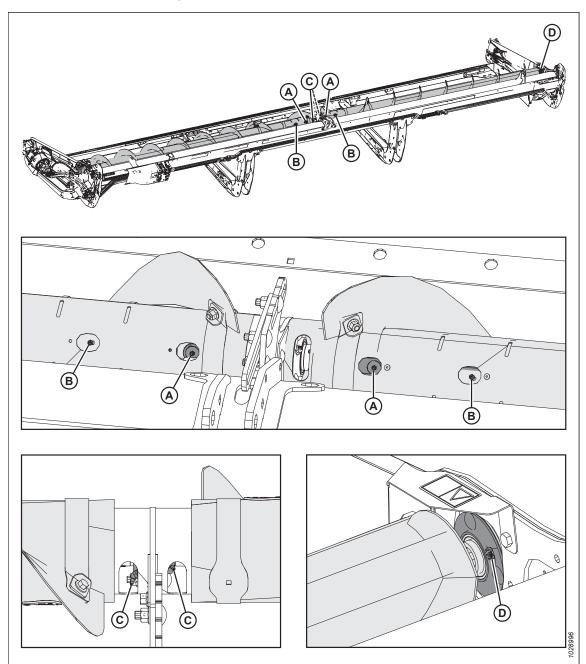

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

Figure 4.8: Two-Piece Upper Cross Auger

A - Upper Cross Auger U-joints (Two Places)

C - Upper Cross Auger Center Bearings (Two Places)

B - Upper Cross Auger Sliding Hubs (Two Places) D - Right End Bearing

IMPORTANT:

The Upper Cross Auger must be greased regularly even when turned off as components of the UCA move when the header flexes, regardless of whether the auger is turning or not.


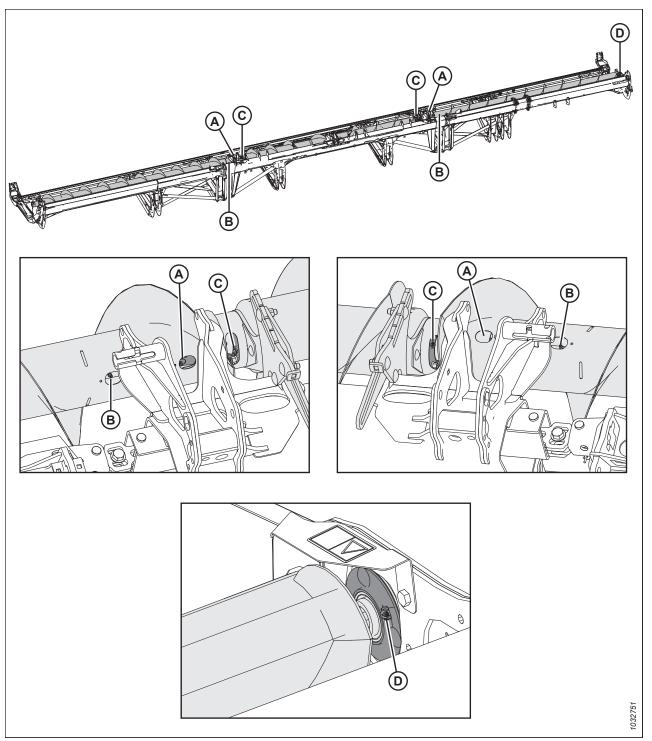



Figure 4.9: Three-Piece Upper Cross Auger

A - Upper Cross Auger U-joints (Two Places) C - Upper Cross Auger Center Bearings (Two Places) B - Upper Cross Auger Sliding Hubs (Two Places) D - Right End Bearing

IMPORTANT:


The Upper Cross Auger must be greased regularly even when turned off as components of the UCA move when the header flexes, regardless of whether the auger is turning or not.

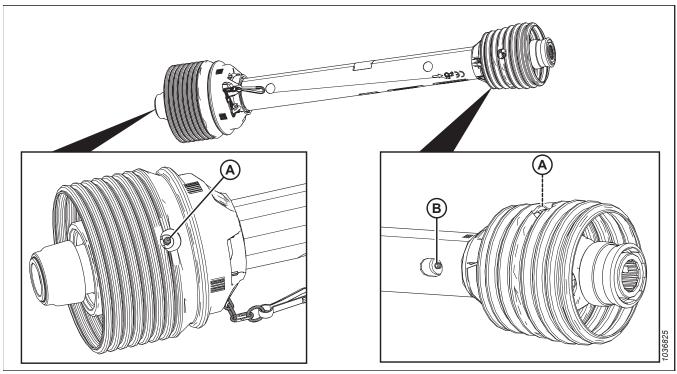


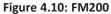

A - Driveline Universal (Two Places)

B - Driveline Slip Joint⁷¹

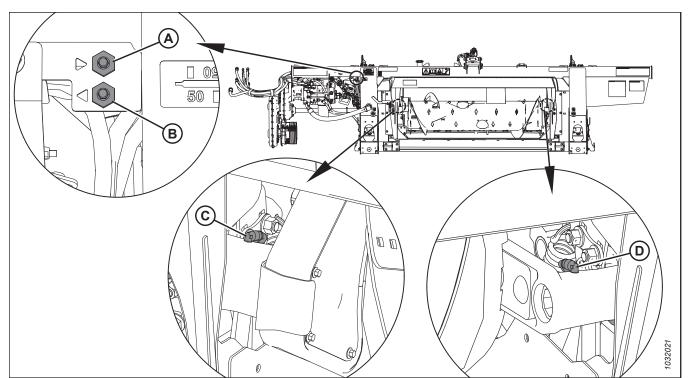

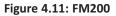

A - Remote Grease Line for Auger Pivot (Right Side) C - Auger Pivot (Left Side) B - Remote Grease Line for Auger Pivot (Left Side) D - Auger Pivot (Right Side)

^{71.} Use high temperature extreme pressure (EP2) performance grease with 10% max molybdenum disulphide (NLGI Grade 2) lithium base.

Every 100 Hours

Maintenance is required to keep your machine operating at peak performance. It also allows you to do a visual inspection of the machine that may help identify issues early.

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

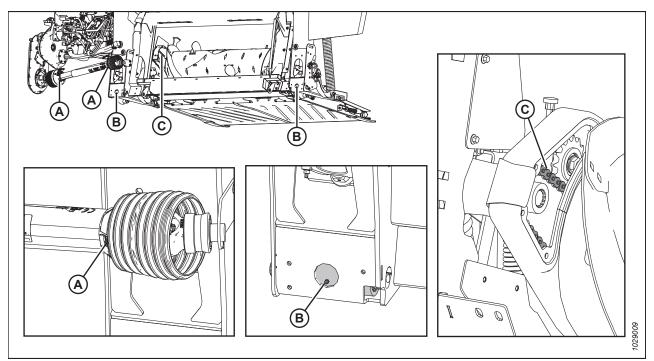


Figure 4.12: FM200

A - Driveline Guards (Both Ends)

B - Float Pivots (Right and Left)

C - Auger Drive Chain. To lubricate, refer to 4.3.4 Lubricating Auger Drive Chain, page 279.

MAINTENANCE AND SERVICING

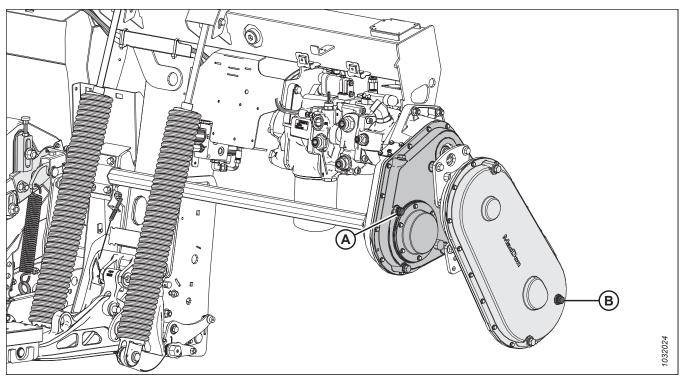


Figure 4.13: FM200

- A Main Gearbox Oil Level. To lubricate, refer to 4.3.5 Lubricating Header Drive Main Gearbox, page 280.
- B Completion Gearbox Oil Level. To lubricate, refer to 4.3.6 Lubricating Header Drive Completion Gearbox, page 282.

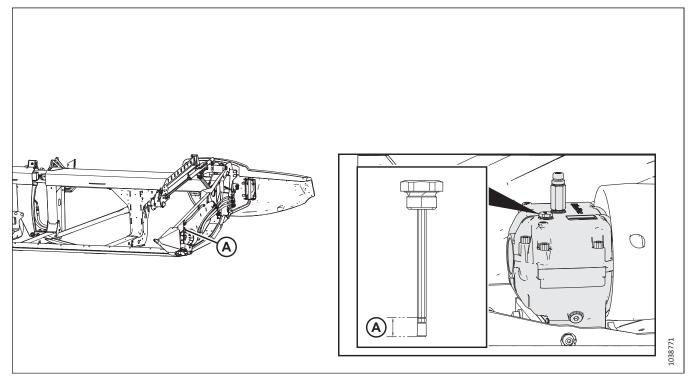


Figure 4.14: Knife Drive Box

B - Knife Drive Box Oil Level. To lubricate, refer to Checking Oil Level in Knife Drive Box , page 361.

Every 250 Hours

Maintenance is required to keep your machine operating at peak performance. It also allows you to do a visual inspection of the machine that may help identify issues early.

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

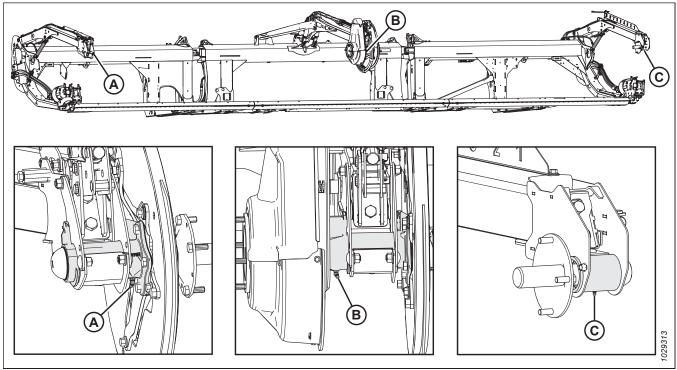


Figure 4.15: Reel

A - Reel Right Bearing (One Place)

- B Reel Center Bearing (One Place)
- C Reel Left Bearing (One Place)

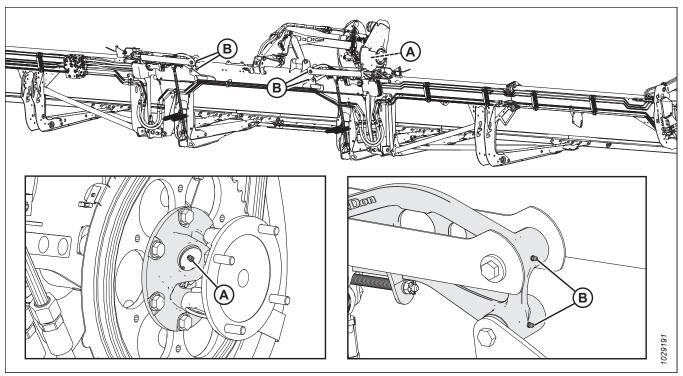


Figure 4.16: Reel

A - Reel U-joint (One Place)⁷²

B - Flex Linkage (Two Places) – Both Sides

^{72.} U-joint has an extended lubrication cross and bearing kit. Stop greasing when greasing becomes difficult or if U-joint stops taking grease. Overgreasing will damage U-joint. Six to eight pumps are sufficient at first grease (factory). Increase grease interval as U-joint wears and requires more than six pumps.

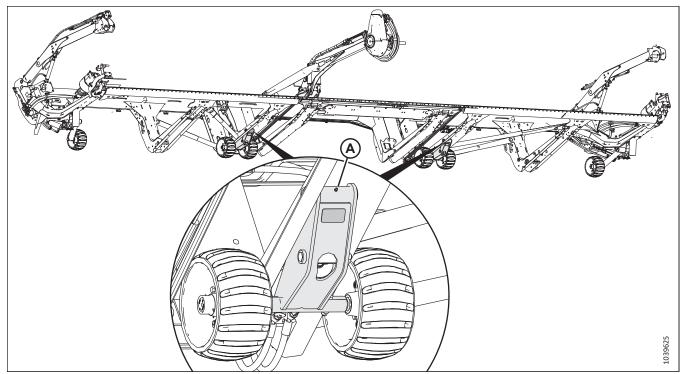


Figure 4.17: Inner Contour Wheel Assemblies

A - Inner Wheel Assemblies (Two Places)

Every 500 Hours

Maintenance is required to keep your machine operating at peak performance. It also allows you to do a visual inspection of the machine that may help identify issues early.

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

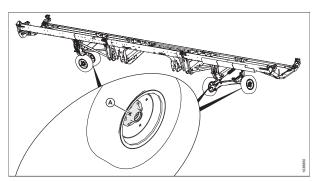


Figure 4.18: Every 500 Hours A - Wheel Bearings (Four Places)

4.3.2 Greasing Procedure

Greasing points are identified on the machine by decals showing a grease gun and grease interval in hours of operation. Grease point layout decals are located on the header and on the right side of the float module.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Refer to inside back cover for recommended lubricants.

Log hours of operation and use the Maintenance Record provided to keep a record of scheduled maintenance. Refer to *4.2.1 Maintenance Schedule/Record, page 260*.

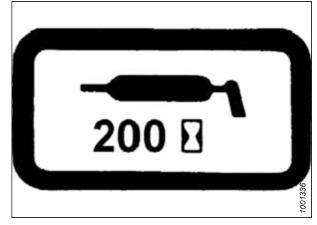


Figure 4.19: Greasing Interval Decal

1. Wipe the grease fitting with a clean cloth before greasing to avoid injecting it with dirt and grit.

IMPORTANT:

Use clean, high-temperature, extreme-pressure grease only.

- 2. Inject the grease through the fitting with a grease gun until grease overflows the fitting (except where noted).
- 3. Leave the excess grease on the fitting to keep the dirt out.
- 4. Replace any loose or broken grease fittings immediately.
- 5. Remove and thoroughly clean any fitting that will not take grease. Also clean the lubricant passageway. Replace the fitting if necessary.

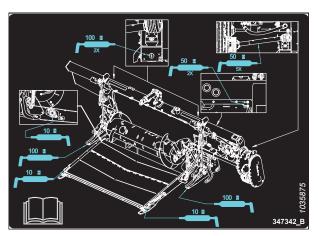


Figure 4.20: FM200 Grease Point Layout Decal

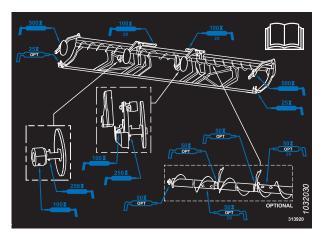


Figure 4.21: FD2 Series Grease Point Layout Decal

4.3.3 Lubricating Reel Drive Chain

Lubrication protects the chain and drive sprockets against wear.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Be sure all bystanders are clear of the machine before starting the engine or engaging any header drives.

IMPORTANT:

Do NOT use grease or motor oils to lubricate reel drive chain.

1. Remove the reel drive cover. For instructions, refer to *Removing Reel Drive Cover, page 41*.

IMPORTANT:

Use a chain oil with a viscosity of 100–150 sCt at 40°C (104°F) (typically medium to heavy chain oil) or a mineral oil (SAE 20W50) that has no detergents or solvents.

- Apply a liberal amount of chain oil with an oil can, brush, or aerosol to the inside of chain (A) while manually rotating reel to cover all of the chain.
- 3. Reinstall the reel drive cover. For instructions, refer to *Installing Reel Drive Cover, page 43*.

Ensure that all bystanders have cleared the area.

- 4. Start the engine. For instructions, refer to the combine operator's manual.
- 5. Run the header and reel for a few minutes so the oil will spread into the chain.

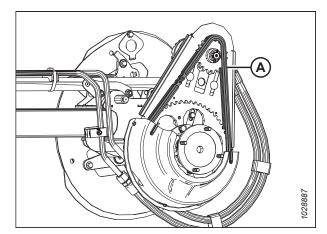


Figure 4.22: Drive Chain

4.3.4 Lubricating Auger Drive Chain

Lubricate the auger drive chain according to the interval specified in the maintenance schedule. The auger drive chain can be lubricated with the float module attached to the combine, but this procedure is easier to perform when the float module is detached from the header.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

The auger drive cover consists of an upper and lower cover and a metal inspection panel. Only the metal inspection panel needs to be removed to perform this procedure.

1. Remove four bolts (A) and metal inspection panel (B).

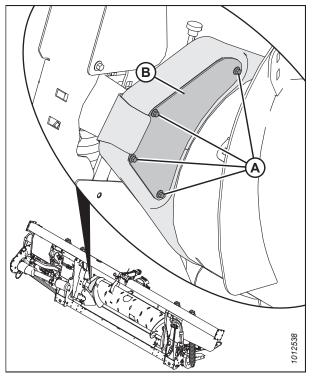


Figure 4.23: Auger Drive Inspection Panel

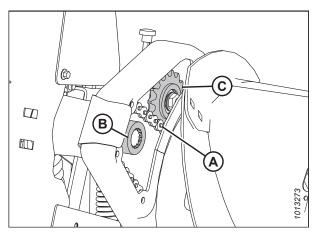


Figure 4.24: Auger Drive Chain

- 2. Apply a liberal amount of grease to chain (A), drive sprocket (B), and idler sprocket (C).
- 3. Rotate the auger and apply grease to more areas of the chain, if necessary.

MAINTENANCE AND SERVICING

4. Reinstall metal inspection panel (B). Secure the panel with four bolts (A).

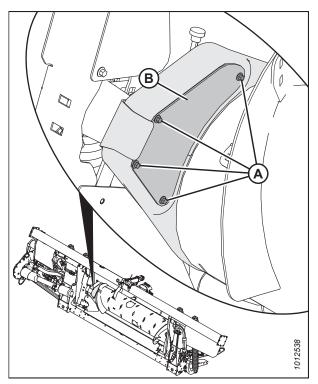


Figure 4.25: Auger Drive Inspection Panel

4.3.5 Lubricating Header Drive Main Gearbox

Checking Oil Level in Header Drive Main Gearbox

Check the header drive gearbox oil level every 100 hours.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Lower the header fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Remove oil level plug (A) from main gearbox (B) and check that the oil level is up to the bottom of the hole.
- 4. Add oil if required. For instructions, refer to *Adding Oil to Header Drive Main Gearbox, page 281.*
- 5. Reinstall oil level plug (A).

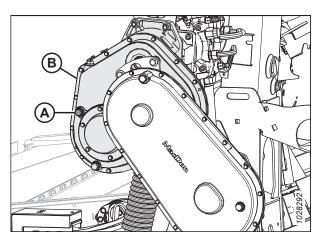


Figure 4.26: Header Drive Main Gearbox

Adding Oil to Header Drive Main Gearbox

The main gearbox includes fill, check, and drain plugs for quickly checking and servicing the gear lubricant while mounted to the float module.



To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Remove filler plug (B) and oil level plug (A) from the main gearbox.
- 2. Add oil into filler hole (B) until it runs out of oil level plug hole (A). Refer to the inside back cover for recommended fluids and lubricants.
- 3. Replace oil level plug (A) and filler plug (B).

NOTE:

The oil drain plug is magnetic. Ensure the magnetic plug is installed in the oil drain position.

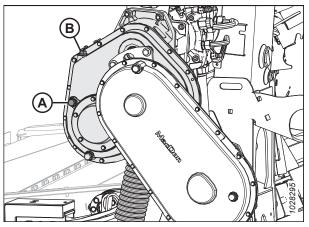


Figure 4.27: Header Drive Main Gearbox

Changing Oil in Header Drive Main Gearbox

Change the header drive gearbox oil after the first 50 hours of operation and every 1000 hours (or 3 years) thereafter.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Ensure that all bystanders have cleared the area.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Engage the header to warm up the oil.

- 3. Raise or lower the header to position oil drain plug (A) at its lowest point.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Place a suitably sized container (approximately 4 liters [1 US gal]) underneath the gearbox drain to collect the oil.
- 6. Remove oil drain plug (A) and filler plug (C), and allow the oil to drain.
- 7. Replace oil drain plug (A) and remove oil level plug (B).
- 8. Add oil through filler plug (C) until it runs out of oil level hole (B). Refer to this manual's inside back cover for recommended lubricants.

NOTE:

The main gearbox holds approximately 2.75 liters (2.9 quarts) of oil.

9. Replace oil level plug (B) and filler plug (C).

4.3.6 Lubricating Header Drive Completion Gearbox

Checking Oil Level in Header Drive Completion Gearbox

Check the header drive gearbox oil level every 100 hours.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Lower the header fully.
- 2. Shut down the engine, and remove the key from the ignition.

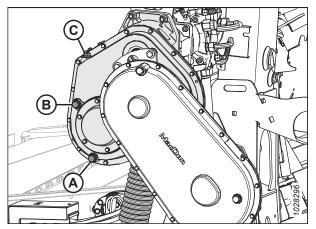


Figure 4.28: Header Drive Main Gearbox

- 3. Remove oil level plug (A) from the completion gearbox. The oil should be at the level of the port.
- 4. If there is an insufficient amount of oil in the completion gearbox, add oil through filler plug (B). For instructions, refer to Adding Oil to Header Drive Completion Gearbox, page 283.
- 5. Reinstall oil level plug (A).

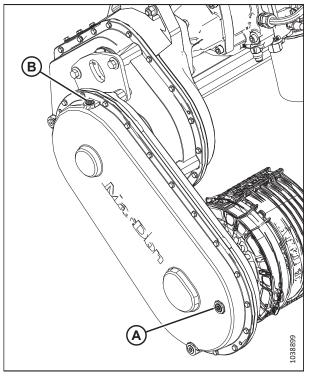


Figure 4.29: Header Drive Completion Gearbox

Adding Oil to Header Drive Completion Gearbox

The completion gearbox includes fill, check, and drain plugs for quickly checking and servicing the gear lubricant while mounted to the float module.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Lower the cutterbar to the ground, and ensure the completion gearbox is in working position.
- 2. Shut down the engine, and remove the key from the ignition.

- 3. Remove filler plug (B) and oil level plug (A).
- 4. Add oil into filler hole (B) until it runs out of oil level plug hole (A). Refer to the inside back cover for recommended fluids and lubricants.
- 5. Replace oil level plug (A) and filler plug (B). Torque plugs to 30–40 Nm (22–30 lbf·ft).

NOTE:

The oil drain plug is magnetic. Ensure the magnetic plug is installed in the oil drain position.

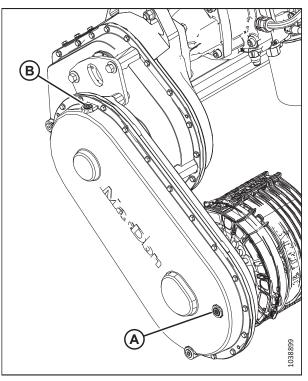


Figure 4.30: Header Drive Completion Gearbox

Changing Oil in Header Drive Completion Gearbox

Change the header drive gearbox oil after the first 50 hours of operation and every 1000 hours (or 3 years) thereafter.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

DANGER

Ensure that all bystanders have cleared the area.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Engage the header to warm up the oil.

- 3. Raise or lower the header to position oil drain plug (A) at its lowest point.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Place a suitably sized container (approximately 4 liters [1 US gal]) underneath the gearbox drain to collect the oil.
- 6. Remove oil drain plug (A) and filler plug (C), and allow the oil to drain.
- 7. Replace oil drain plug (A).

NOTE:

The oil drain plug is magnetic. Ensure the magnetic plug is installed in oil drain position (A), not in oil level check position (B).

- 8. Remove oil level plug (B).
- 9. Add oil through filler plug (C) until it runs out of oil level hole (B). Refer to this manual's inside back cover for recommended lubricants.

NOTE:

The header drive gearbox holds approximately 2.25 liters (2.4 quarts) of oil.

10. Replace oil level plug (B) and filler plug (C).

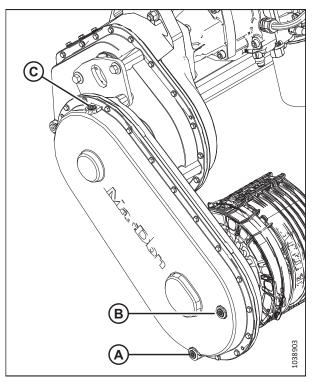


Figure 4.31: Header Drive Completion Gearbox

4.4 Hydraulics

The float module frame acts as an oil reservoir. Refer to the inside back cover for information on the float module's oil requirements.

4.4.1 Checking Oil Level in Hydraulic Reservoir

Check the hydraulic oil level in the reservoir every 25 hours.

NOTE:

Check the level when the oil is cold.

- Check the oil level using lower sight (A) and upper sight (B) with the cutterbar just touching the ground and with the center-link retracted.
- 2. Ensure the oil is at the appropriate level for the terrain as follows:
 - Normal terrain (1): Maintain level so lower sight (A) is full, and upper sight (B) is empty.
 - Hilly terrain (2): Maintain level so lower sight (A) is full, and upper sight (B) is up to one-half filled.

NOTE:

It may be necessary to slightly reduce the oil level when ambient temperatures are above 35°C (95°F) to prevent overflow at the breather when normal operating temperatures are reached.

NOTE:

It is **OK** to use the hilly terrain oil level even in normal terrain as long as the fill neck extension is installed (MACB6057).

4.4.2 Adding Oil to Hydraulic Reservoir

If the oil level in the hydraulic reservoir is low, or if the oil has been drained, oil will need to be added.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.

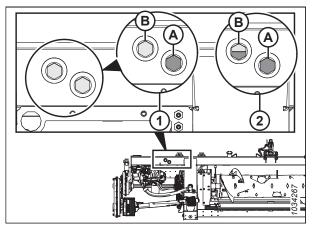


Figure 4.32: Oil Level Sight Glasses

2. Clean any dirt or debris from filler cap (A).



The oil reservoir may be under pressure; remove the cap slowly.

- 3. Turn filler cap (A) clockwise to remove it.
- 4. Fill the hydraulic oil reservoir with warm oil (approximately 21°C [70°F]) until the appropriate fill level is reached. For instructions, refer to 4.4.1 Checking Oil Level in Hydraulic Reservoir, page 286 for information on how to check the hydraulic oil level. Refer to this manual's inside back cover for information on the capacity of the reservoir and the type of oil to use.

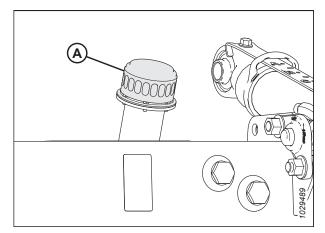


Figure 4.33: Oil Reservoir Filler Cap

IMPORTANT:

Warm oil will flow through the mesh filler screen better than cold oil. Do **NOT** remove the screen.

- 5. Reinstall filler cap (A).
- 6. Recheck the oil level. For instructions, refer to 4.4.1 *Checking Oil Level in Hydraulic Reservoir, page 286.*

4.4.3 Changing Oil in the Hydraulic Reservoir

Change the hydraulic oil in the reservoir every 1000 hours or 3 years (whichever comes first).

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Start engine.
- 2. Engage the header to warm up the oil.
- 3. Shut down the engine, and remove the key from the ignition.
- Place a suitably sized container (at least 50 liters [13 gallons]) under each of the two oil drain plugs (A) located at the back on each side of the frame.
- 5. Remove oil drain plugs (A) with a 7/8 in. hex socket and allow the oil to drain.
- 6. Replace oil drain plugs (A) when reservoir is empty.
- 7. Change the oil filter if required. For instructions, refer to *4.4.4 Changing Oil Filter, page 288*.
- 8. Add oil to the reservoir. For instructions, refer to 4.4.2 *Adding Oil to Hydraulic Reservoir, page 286*.

NOTE:

The hydraulic oil tank capacity is approximately 95 liters (25 gallons).

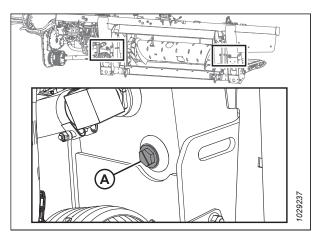


Figure 4.34: Reservoir Drain

4.4.4 Changing Oil Filter

Change the oil filter after the first 50 hours of operation and every 250 hours thereafter.

Obtain filter kit (MAC320360)⁷³ from your MacDon Dealer.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Clean around the mating surfaces of filter (A) and integrated pump (B).
- 3. Place a suitably sized container (approximately 1 liter [0.26 gallons]) under the filter to collect oil runoff.
- 4. Twist-off filter (A) by hand and clean the exposed filter port in the integrated pump.
- 5. Apply a thin film of clean oil to the O-ring provided with the new filter.
- 6. Turn the new filter onto integrated pump (B) until the O-ring contacts the mating surface. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the new filter. Overtightening can damage the O-ring and filter.

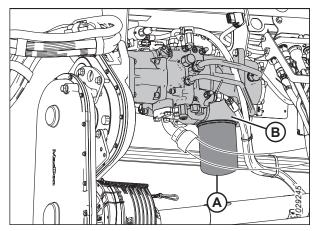


Figure 4.35: FM200 Integrated Pump

^{73.} Part number MAC202986 is printed on the filter, but service the filter using kit MAC320360. The kit includes installation instructions.

4.5 Electrical System

The electrical system for the header is powered by the combine. The header has various lights and sensors that require power.

4.5.1 Replacing Light Bulbs

Lights are an important safety feature. Replace damaged or malfunctioning bulbs or lamps immediately.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

Use bulb trade #1156 for amber transport lights and #1157 for the red tail light (Slow Speed Transport option).

Clearance Lights (North America Only)

- Use a Phillips screwdriver to remove the three screws (A) from the fixture, and remove the plastic lens. Retain screws (A).
- 2. Replace the bulb, and reinstall the plastic lens and screws.

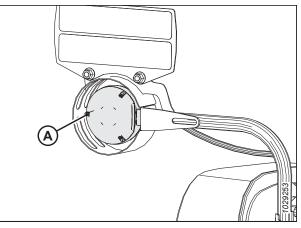


Figure 4.36: Left Clearance Light

Slow Speed Transport Lights

- 3. Use a Phillips screwdriver to remove screws (A) from the fixture, and remove the plastic lens. Retain screws (A).
- 4. Replace the bulb, and reinstall the plastic lens and screws.

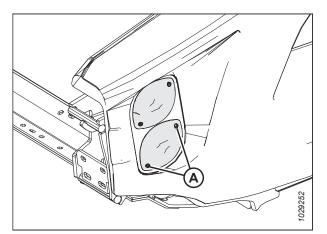


Figure 4.37: Optional Slow Speed Transport – Red and Amber Lights

4.6 Header Drive

The header drive consists of a driveline from the combine to the FM200 Float Module gearbox that drives the feed auger and hydraulic pumps. The pumps provide hydraulic power to the drapers, knives, and optional equipment.

4.6.1 Removing Driveline Connecting Float Module to Combine

The driveline transfers power from the combine PTO to the header float module completion gearbox. A quick release collar allows the driveline to be removed when disconnecting the header float module from the combine.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the reel fully.
- 3. Lower the header fully.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Disconnect driveline safety chain (A) from the slot on the aluminum plate.

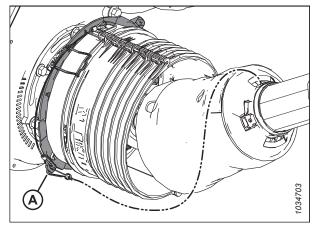


Figure 4.38: Driveline Shield

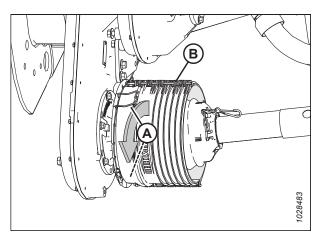


Figure 4.39: Driveline Shield

6. Pry clips (A) up to release shield (B).

7. Slide shield (A) along driveline to access quick disconnect collar (B).

NOTE:

If the cover does not slide, use a prying tool.

- 8. Pull back quick disconnect collar (B) to release the driveline yoke. Slide the driveline off of the gearbox shaft.
- 9. Slide the driveline through the shield, then lower it to the ground.

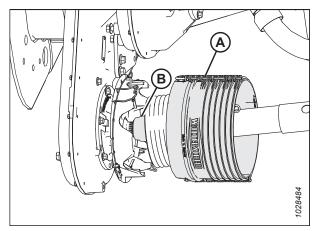


Figure 4.40: Driveline Shield

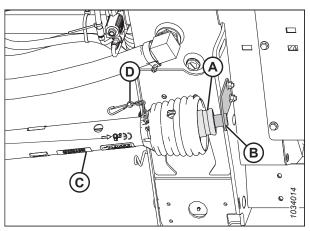


Figure 4.41: Driveline Shield

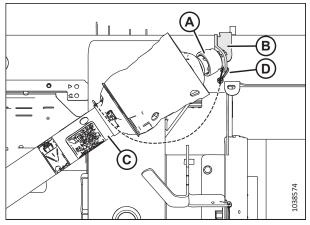


Figure 4.42: Optional Side-Hill Driveline Shield

- 10. Disconnect chain (D) from support bracket (B).
- 11. On the opposite end of driveline (C), pull back quick disconnect collar (A) to release the driveline yoke.
- 12. Slide the yoke off of support bracket (B).
- 13. Remove driveline (C).

4.6.2 Installing Driveline

The driveline transfers power from the combine PTO to the header's float module completion gearbox. It will need to be installed on the float module.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the reel fully.
- 3. Lower the header fully.
- 4. Shut down the engine, and remove the key from the ignition.
- Position driveline support bracket (A) (supplied with the driveline) on the left inside of the float module as shown. Secure the bracket with two M10, 30 mm bolts and flange nuts (B).

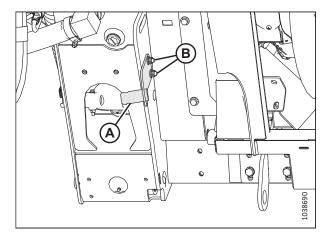


Figure 4.43: Driveline Support Bracket

- 6. On the end of driveline (D) which has arrow (C) pointing toward the collar, pull back quick disconnect collar (A).
- 7. Slide the yoke onto support bracket (B).
- 8. Connect safety chain (E) to the support bracket.

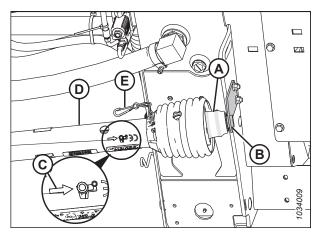


Figure 4.44: Driveline Shield

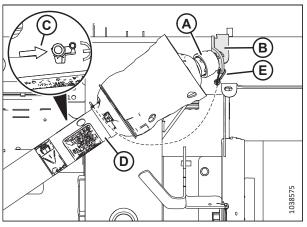


Figure 4.45: Optional Side-Hill Driveline Shield

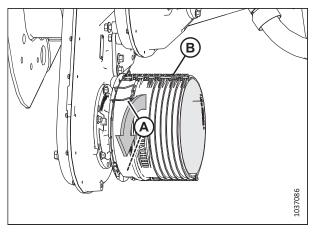


Figure 4.46: Driveline Shield

9. Pry clips (A) up to release shield (B).

- 10. Slide the driveline through shield (A). Pull back the quick disconnect collar (B) to release the driveline yoke.
- 11. Slide the driveline onto the gearbox shaft until it locks onto the shaft.

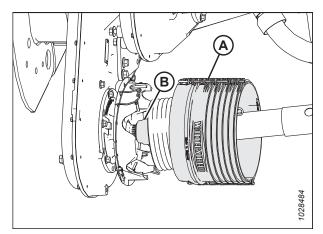


Figure 4.47: Driveline Shield

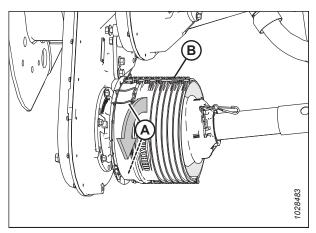


Figure 4.48: Driveline Shield

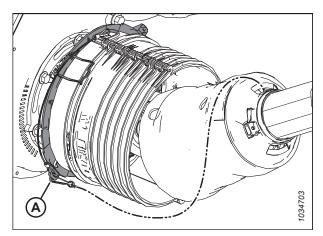


Figure 4.49: Driveline Shield

12. Slide the shield towards the gearbox until clips (A) secure shield (B).

13. Attach driveline safety chain (A) to the slot on the aluminum plate.

Removing Driveline Guard 4.6.3

The main driveline guard must remain attached to the driveline during operation, but it can be removed for maintenance purposes.

DANGER

hitting the ground.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

The driveline does **NOT** need to be removed from the float module in order to remove the driveline guard.

- 1. Shut down the combine, and remove the key from the ignition.
- 2. Pull driveline collar (A) away from power take-off (PTO) support (B). Slide yoke (C) off support (B), and release collar (A).

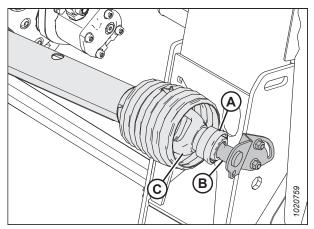


Figure 4.50: Combine End of Driveline

3. Lift the combine end of driveline (A) from the hook, and extend the driveline until it separates. Hold the float module end of driveline (B) to prevent it from dropping and



Figure 4.51: Separated Driveline

4. Use a slotted screwdriver to release grease fitting/lock (A).

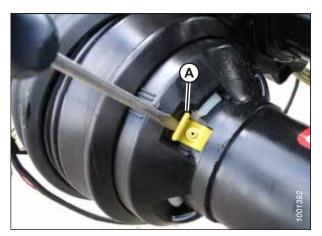


Figure 4.52: Driveline Guard

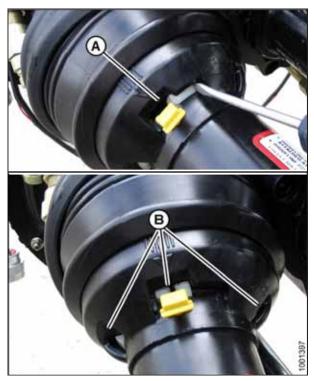


Figure 4.53: Driveline Guard

- 5. Rotate driveline guard locking ring (A) counterclockwise using a screwdriver until lugs (B) line up with the slots in the guard.
- 6. Pull the guard off the driveline.

4.6.4 Installing Driveline Guard

The driveline guard must be installed before the header can be safely operated.

1. Slide the guard onto the driveline, and line up the slotted lug on locking ring (A) with arrow (B) on the guard.



Figure 4.54: Driveline Guard



Figure 4.55: Driveline Guard



Figure 4.56: Driveline Guard

2. Push the guard onto the ring until the locking ring is visible in slots (A).

3. Use a slotted screwdriver to rotate ring (A) clockwise.

4. Push grease fitting (A) back into the guard.



Figure 4.57: Driveline Guard

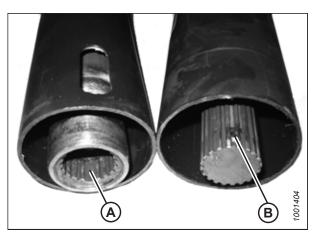


Figure 4.58: Driveline

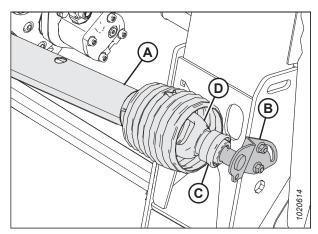


Figure 4.59: Combine End of Driveline

5. Assemble the driveline.

IMPORTANT:

The splines are keyed to align the universals. Align weld (A) with missing spline (B) when assembling. Failure to align the halves of the shaft can cause excessive vibration and feed auger/gearbox failures.

 Position the combine end of driveline (A) on power take-off (PTO) storage support (B). Pull back collar (C) on the driveline and slide the driveline onto the support until driveline yoke (D) locks onto the support. Release collar (C).

4.6.5 Adjusting Chain Tension – Main Gearbox

The gearbox drive chain tension is factory-set, but tension adjustments are required after the first 50 hours, then every 500 hours or annually (whichever comes first). With the exception of oil changes, the gearbox drive chain requires no other regular maintenance.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove four bolts (A), cover (B), and gasket (C) from the main gearbox.

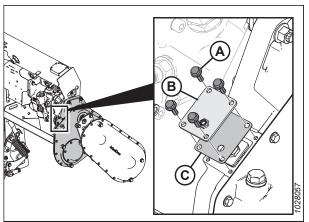


Figure 4.60: Main Gearbox Chain Tensioner Cover

Figure 4.61: Main Gearbox Chain Tensioner

- 2. Remove retainer plate (A).
- 3. Tighten bolt (B) to 250 Ncm (22 lbf·in).
- 4. Loosen bolt (B) 2 flats (2/6 turn).

MAINTENANCE AND SERVICING

5. If required, turn bolt (B) slightly until retainer plate (A) can be installed.

Reinstall chain adjusting cover (B) and gasket (C).

7. Install four bolts (A). Torque the hardware to 9.5 Nm

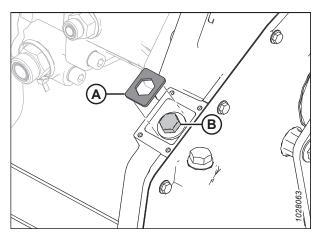


Figure 4.62: Main Gearbox Chain Tensioner

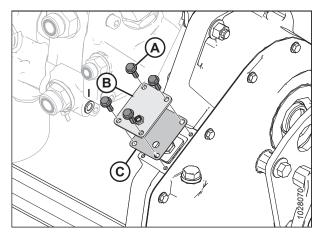


Figure 4.63: Main Gearbox Chain Tensioner Cover

4.6.6 Adjusting Chain Tension – Completion Gearbox

The gearbox drive chain tension is factory-set, but tension adjustments are required after the first 50 hours, then every 500 hours or annually (whichever comes first). With the exception of oil changes, the gearbox drive chain requires no other regular maintenance.

6.

(84 lbf·in).

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Remove the driveline. For instructions, refer to *4.6.1 Removing Driveline Connecting Float Module to Combine, page 290*.

MAINTENANCE AND SERVICING

5. Remove three bolts (A) that secure input driveline guard base (B).

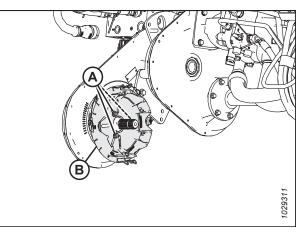


Figure 4.64: Completion Gearbox Chain Tensioner Cover

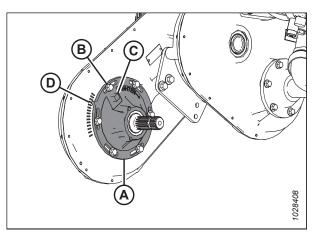


Figure 4.65: Completion Gearbox Chain Tensioner Cover

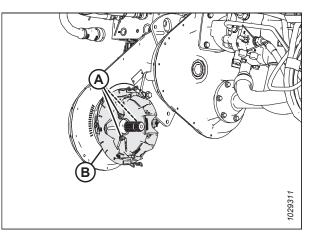


Figure 4.66: Completion Gearbox Chain Tensioner Cover

- 6. Loosen six bolts (B), that secure chain tension hub (A) to the gearbox.
- 7. Locate machined feature (C). Using a wrench, turn hub (A) clockwise to tighten the chain.
- 8. With light pressure on the wrench, determine which mark (D) on the gearbox housing aligns with the indicator pointer on the hub.
- 9. Set proper chain tension by slightly turning hub (A) back one mark.
- 10. Tighten six bolts (B), that secure cover (A). Torque bolts to 25 Nm (18 lbf·ft).
- 11. Install driveline guard base (B). Secure it with three bolts (A).
- 12. Install the driveline. For instructions, refer to *4.6.2 Installing Driveline, page 292*.

4.7 Auger

The FM200 Float Module auger feeds the cut crop from the draper decks into the combine feeder house.

4.7.1 Adjusting Feed Auger to Pan Clearance

Operators should maintain an appropriate distance between the feed auger and the feed auger pan.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

IMPORTANT:

Maintain an appropriate distance between the feed auger and the feed auger pan. Too little clearance may result in the fingers or flighting contacting and damaging the feed draper or pan when operating the header at certain angles. Look for evidence of contact when greasing the float module.

- 1. Extend the center-link to the steepest header angle (setting E), and position the header 254–356 mm (10–14 in.) off the ground.
- 2. Lock the header wings. For instructions, refer to Locking/Unlocking Header Wings, page 138.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Check that the float lock linkage is on the down stops (washer [A] cannot be rotated) at both locations.

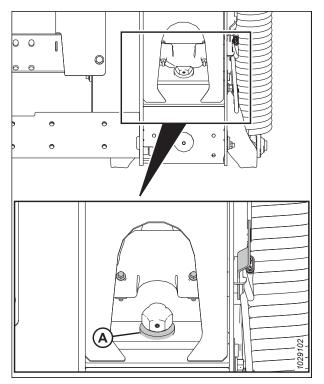


Figure 4.67: Down Stop Washer

5. Before adjusting the auger-to-pan clearance, check the auger float position to determine how much clearance is required:

IMPORTANT:

Make sure bolts (A) are set at the same location on both ends of the header to avoid damaging the machine during operation.

• If bolt head (A) is closest to floating symbol (B), the auger is in the floating position.

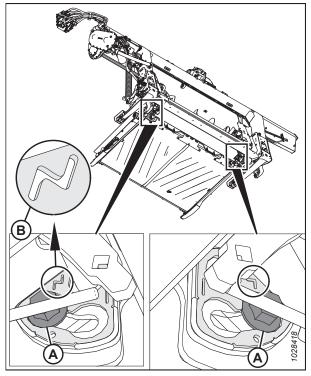


Figure 4.68: Floating Position

• If bolt head (A) is closest to fixed symbol (B), the auger is in the fixed position.

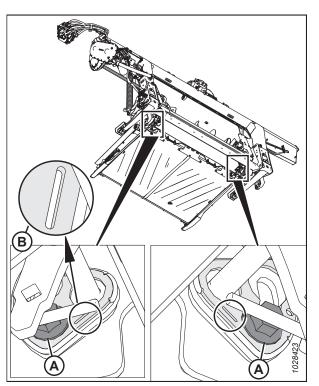


Figure 4.69: Fixed Position

- 6. Check clearance (C) between the feed auger flighting to the pan.
 - If the feed auger is in the fixed position, clearance should be between 24–28 mm (15/16–1 1/8 in.).
 - If the feed auger is in the floating position, clearance should be between 11.5–15.5 mm (7/16–5/8 in.).
- 7. If adjustment is required, loosen two nuts (B) and rotate the auger to position the flighting over the feed pan.
- 8. Turn bolt (A) clockwise to increase clearance (C); turn bolt (A) counterclockwise to decrease clearance (C).
 - If the feed auger is in the fixed position, set clearance to 24–28 mm (15/16–1 1/8 in.).
 - If the feed auger is in the floating position, set clearance to 11.5–15.5 mm (7/16–5/8 in.).

NOTE:

The clearance increases between 25-40 mm (1-1 1/2 in.) when the center-link is fully retracted.

9. Repeat Step *6, page 304* and Step *8, page 304* for the opposite end of the auger.

IMPORTANT:

Adjusting one side of the auger can affect the other side. Always double-check both sides of the auger after making final adjustments.

- 10. Tighten nuts (B) on both ends of the feed auger. Torque the nuts to 96 Nm (70 lbf·ft).
- 11. Rotate the feed auger and double-check clearances.

4.7.2 Checking Feed Auger Chain Tension

The auger is chain-driven by the float module drive system sprocket attached to the side of the auger.

There are two methods for checking the auger drive chain tension: the quick method is intended for frequent checks; the thorough method is more accurate and should be used when replacing or reinstalling the chain.

Refer to the appropriate procedure for check auger chain tension:

- Checking Feed Auger Drive Chain Tension Quick Method, page 304
- Checking Feed Auger Drive Chain Tension Thorough Method, page 306

Checking Feed Auger Drive Chain Tension - Quick Method

The auger is chain-driven by the float module drive system sprocket attached to the side of the auger.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

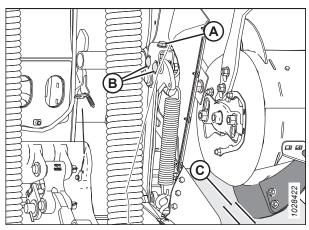


Figure 4.70: Auger Clearance

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

Ensure that all bystanders have cleared the area.

NOTE:

There are two methods for checking the auger drive chain tension: the quick method is intended for frequent checks; the thorough method (refer to *Checking Feed Auger Drive Chain Tension – Thorough Method, page 306*) is more accurate and should be used when the auger drive chain is reinstalled or replaced.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the header fully.
- 3. Raise the reel fully.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 6. Rotate auger (A) by hand in the reverse direction until it cannot turn anymore.
- 7. Mark a line (B) across the drum and bottom cover.

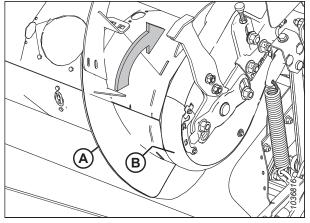


Figure 4.71: Feed Auger Drive

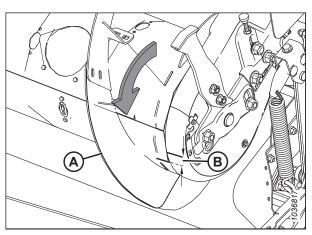


Figure 4.72: Feed Auger Drive

8. Rotate auger (A) by hand in the forward direction until it cannot turn anymore. The marked line will split.

9. Measure the distance between two lines (B).

For a new chain:

- If distance (B) is 1–4 mm (0.04–0.16 in.), no adjustment is required.
- If distance (B) is greater than 4 mm (0.16 in.), the auger drive chain tension needs adjusting. For instructions, refer to 4.7.5 Adjusting Feed Auger Drive Chain Tension, page 314.

For a used chain:

- If distance (B) is 3–8 mm (0.12–0.31 in.), no adjustment is required.
- If distance (B) is greater than 8 mm (0.31 in.), the auger drive chain tension needs adjusting. For instructions, refer to 4.7.5 Adjusting Feed Auger Drive Chain Tension, page 314.

Checking Feed Auger Drive Chain Tension – Thorough Method

The auger is chain-driven by the float module drive system sprocket attached to the side of the auger.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

Ensure that all bystanders have cleared the area.

NOTE:

There are two methods for checking the auger drive chain tension: the thorough method is more accurate and should be used when reinstalling or replacing the chain; the quick method (refer to *Checking Feed Auger Drive Chain Tension – Quick Method, page 304*) is intended for frequent checks.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the header fully.
- 3. Raise the reel fully.
- 4. Engage the reel safety props. For instructions, refer to Engaging Reel Safety Props, page 33.
- 5. Detach the header from the combine. For instructions, refer to 3.6 Header Attachment/Detachment, page 52.
- 6. Shut down the engine, and remove the key from the ignition.

- 7. On the left side of the feed auger, remove four bolts (A) and inspection panel (B).
- 8. Remove bolts (C) and remove indicator/clamp (D) that holds the two covers together.
- 9. Remove bolt (E).
- 10. Remove bolt and washer (H) that secure the bottom cover.
- 11. Rotate bottom cover (F) forward to remove.

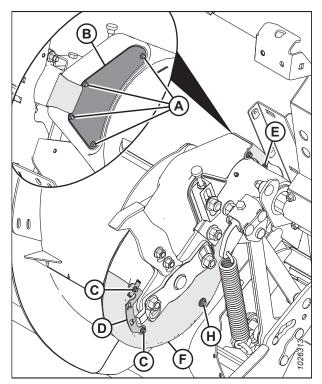


Figure 4.73: Feed Auger Drive – Rear View

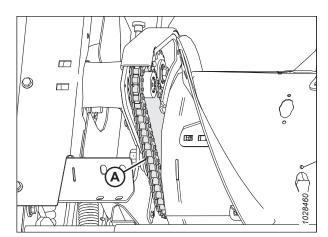


Figure 4.74: Feed Auger Chain – Rear View

 Check chain at midspan (A). There should be 4 mm (0.16 in.) of deflection. If adjustment is required, refer to 4.7.5 Adjusting Feed Auger Drive Chain Tension, page 314.

MAINTENANCE AND SERVICING

- 13. Position bottom cover (F) and secure with bolt and washer (H).
- 14. Install bolt (E).
- 15. Secure the bottom cover to the top cover with clamp/ indicator (D) and bolts (C).
- 16. Install inspection panel (B) and secure with four bolts (A). Tighten bolts (A) and torque to 3.5 Nm (30 lbf·in).

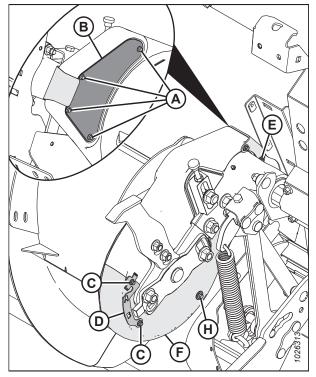


Figure 4.75: Feed Auger Drive – Rear View

4.7.3 Removing Auger Drive Chain

The chain tensioner can take up slack for only a single pitch. Replace the chain when the chain has worn or stretched beyond the limits of the tensioner.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

Replace the chain with endless chain (MAC220317).

NOTE:

Illustrations show the left side of the auger.

- 1. Tilt the header fully back to maximize space between the auger and the feed pan.
- 2. Detach the header from the combine. For instructions, refer to 3.6 Header Attachment/Detachment, page 52.

3. Place wooden blocks (A) under the auger to prevent the auger from dropping onto the feed draper and damaging it.

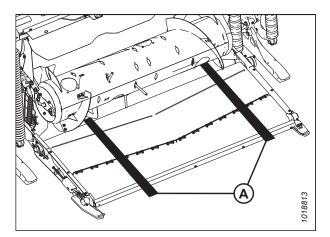


Figure 4.76: Blocks under the Auger

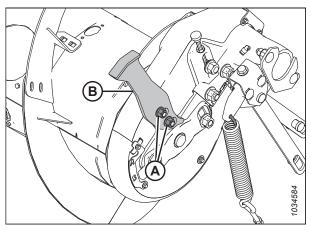


Figure 4.77: Auger Bumper – Left Side

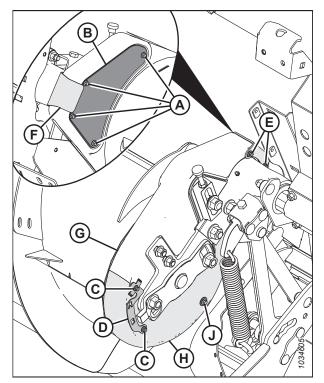


Figure 4.78: Auger Drive

4. Loosen two bolts (A) and remove bumper (B). Repeat on the opposite side.

- 5. On the left side of the auger, remove bolts (E) and remove cover retainer (F).
- 6. Remove four bolts (A) and inspection panel (B).
- 7. Remove bolts (C) and remove indicator/clamp (D) that holds top cover (G) and bottom cover (H) together.
- 8. Remove bolt and washer (J) that secure bottom cover (H).
- 9. Rotate top cover (G) and bottom cover (H) forward to remove from the auger.

 To release the chain tension, loosen jam nut (C) and turn thumbscrew (D) counterclockwise to release the bolt holding sprocket (B) and preventing it from being raised up.

IMPORTANT:

Do **NOT** loosen thin nut (E) on the inboard side of the idler sprocket spindle.

- Loosen idler sprocket nut (A), and raise sprocket (B) to the uppermost position to release the tension on the chain. Tighten nut (A) to hold sprocket in place.
- 12. Remove screw (F) and washer (G).
- 13. Remove two bolts and nuts (A).

NOTE:

A second person may be needed to lift or support the auger to completely remove the bolts.

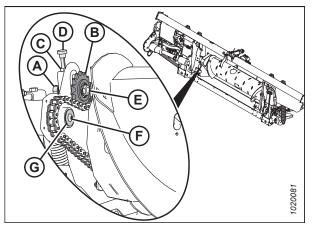


Figure 4.79: Auger Drive

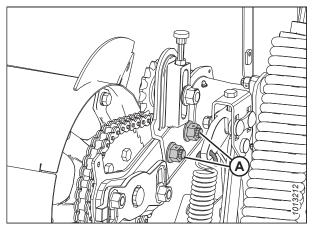


Figure 4.80: Auger Support Arm

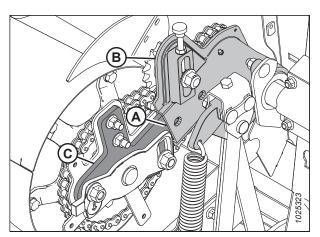


Figure 4.81: Auger

14. Using a pry bar at location (A) between support arm (C) and auger pivot (B), pry the auger to the right.

15. Remove drive sprocket (A) and chain (B) from spline shaft.


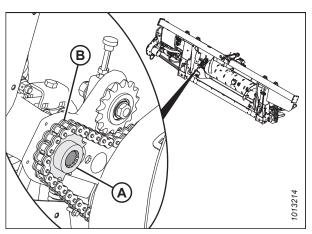


Figure 4.82: Auger Drive

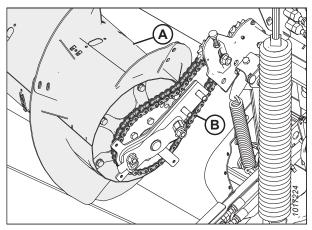

16. Maneuver auger (A) sideways and forward so that endless chain (B) can be removed from the auger.

Figure 4.83: Auger Drive

4.7.4 Installing Auger Drive Chain

The auger drive chain transfers power from the main gearbox to the feed auger.

NOTE:

Illustrations show the left side of the auger.

1. Place drive chain (B) over the sprocket on the drive side of auger (A).

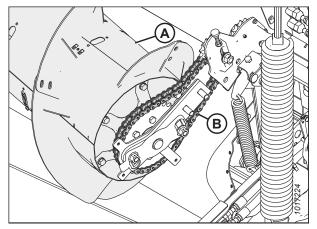


Figure 4.84: Auger Drive

2. Place drive sprocket (B) into chain (A) and align the sprocket onto the shaft.

NOTE:

The shoulder of drive sprocket (B) should face the auger.

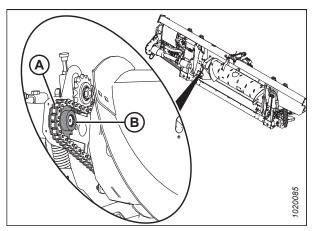


Figure 4.85: Auger Drive

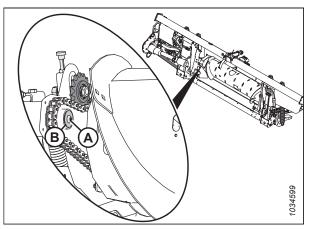


Figure 4.86: Auger Drive

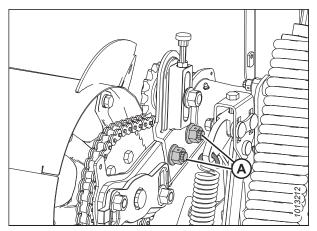


Figure 4.87: Auger Drive

- 3. Apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to threads of screw (A).
- 4. Install washer (B) and secure it with screw (A).

5. Slide the auger drum assembly toward the casting, and then reinstall two bolts and nuts (A).

6. Rotate the auger in reverse to take up the slack in the lower strand of the chain.

IMPORTANT:

Do **NOT** loosen thin nut (C) on the inboard side of the idler sprocket spindle.

7. Turn adjuster thumbscrew (D) clockwise to move idler sprocket (B) until it is **FINGER TIGHT ONLY.**

IMPORTANT:

Do **NOT** overtighten.

- 8. Tighten idler nut (A) and torque to 265 Nm (195 lbf·ft).
- 9. Tighten jam nut (A).

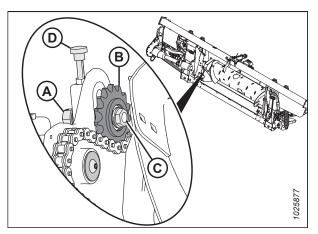


Figure 4.88: Auger Drive

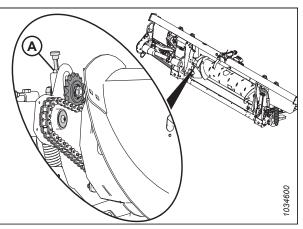


Figure 4.89: Auger Drive

Figure 4.90: Auger

- 10. Position bottom cover (H) and secure with bolt and washer (J).
- 11. Position top cover (G). Secure top and bottom covers with clamp/indicator (D) and bolts (C).
- 12. Install inspection panel (B) and secure with four bolts (A). Tighten bolts (A) and torque to 3.5 Nm (30 lbf·in).
- 13. Install cover retainer (F) and secure with two bolts (E).

MAINTENANCE AND SERVICING

14. Remove wooden blocks (A) from the feed draper.

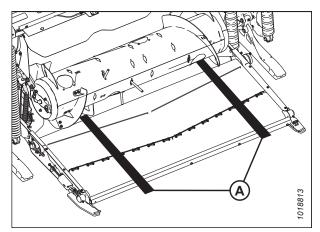


Figure 4.91: Blocks under the Auger

4.7.5 Adjusting Feed Auger Drive Chain Tension

The auger is chain-driven by the float module drive system sprocket attached to the side of the auger. Insufficient chain tension can prematurely wear sprockets or damage the chain.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

Ensure that all bystanders have cleared the area.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Lower the header fully.
- 3. Raise the reel fully.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 5. Detach the header from the combine. For instructions, refer to 3.6 Header Attachment/Detachment, page 52.
- 6. Shut down the engine, and remove the key from the ignition.

7. Remove four bolts (A) and inspection panel (B) to view chain.

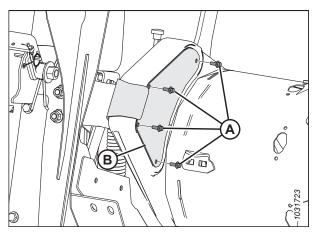


Figure 4.92: Left Side of Auger Drive – Rear View

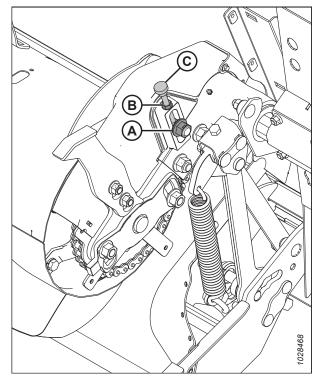


Figure 4.93: Left Side of Auger Drive - Front View

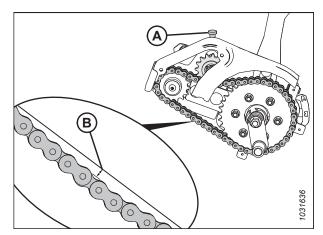


Figure 4.94: Feed Auger Chain Deflection

- 8. Loosen jam nut (B).
- 9. Loosen idler nut (A) slightly to allow idler to move by turning adjuster (C).
- 10. Rotate the auger in reverse to take up slack in the upper strand of the chain.

11. Turn adjuster thumbscrew (A) clockwise to increase tension until chain deflection (B) is 4 mm (0.16 in.) at midspan.

The covers have been removed from the illustration for

IMPORTANT:

NOTE:

clarity.

Do **NOT** overtighten.

- 12. When adjustment is complete, tighten jam nut (A).
- 13. Tighten the idler nut (B) and torque to 265 Nm (195 lbf·ft).
- 14. Recheck midspan chain deflection after tightening the idler and jam nut.

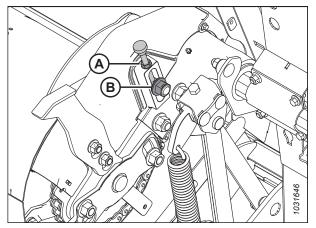


Figure 4.95: Feed Auger Chain – Front View

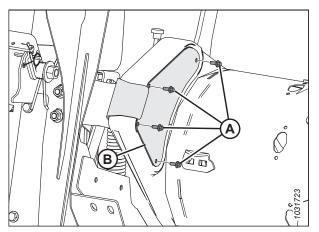


Figure 4.96: Left Side of Auger Drive – Rear View

15. Install inspection panel (B) and secure with four bolts (A).

16. Torque bolts (A) to 3.5 Nm (30 lbf·in).

4.7.6 Auger Flighting

The auger flighting on the FM200 can be configured for particular harvesting and crop conditions.

For instructions, refer to 3.8.1 FM200 Feed Auger Configurations, page 87 for combine/crop specific configurations.

4.7.7 Auger Fingers

The FM200 auger uses retracting tines to feed the crop into the combine feeder house. Some conditions may require the removal or installation of fingers for optimal crop feeding. Replace any worn or damaged fingers.

Removing Feed Auger Fingers

The feed auger has fingers that extend and retract to pull crop into the feeder house on the combine. Fingers may need to be removed from the auger drum to change its configuration profile.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Ensure that all bystanders have cleared the area.

MAINTENANCE AND SERVICING

IMPORTANT:

When removing auger fingers, work from the outside inward. Make sure there is an equal number of fingers on both sides of the auger when complete.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the reel fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to Engaging Reel Safety Props, page 33.
- 5. Locate the access cover closest to the finger to be removed. Remove and retain bolts (A) and access cover (B).

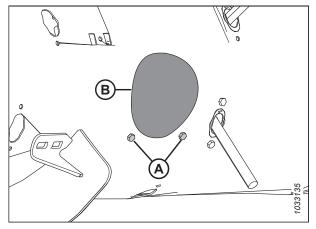


Figure 4.97: Auger Access Hole Cover

- 6. Remove hairpin (A). Pull finger (B) out of finger holder (C).
- 7. If the finger is broken, remove any remnants from holder (C) and from inside the drum.

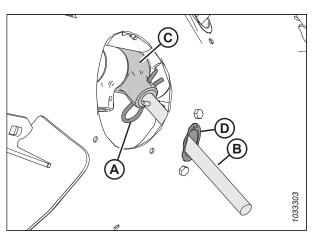


Figure 4.98: Auger Finger

8. Remove and retain two bolts (A) and the tee nuts (not shown) securing finger guide (B) to the auger. Remove guide (B).

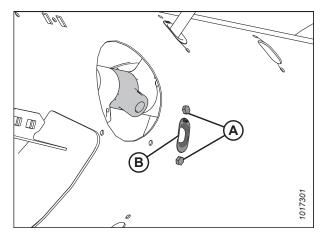


Figure 4.99: Auger Finger Hole

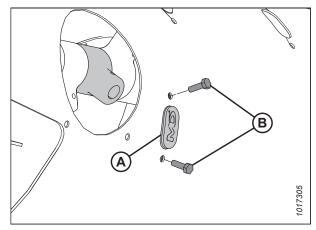


Figure 4.100: Plug Installed in Auger

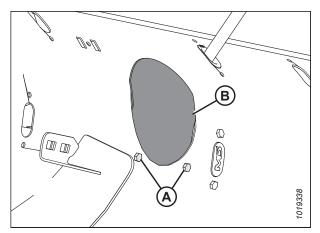


Figure 4.101: Auger Access Hole Cover

9. Place plug (A) in the hole from inside the auger. Secure the plug with two M6 hex head bolts (B) and tee nuts. Torque the bolts to 9 Nm (80 lbf·in).

NOTE:

Bolts (B) come with a threadlocker patch that will wear off if the bolts are removed. If reinstalling bolts (B), apply medium-strength threadlocker (Loctite[®] 243 or equivalent) before installation.

10. Secure access cover (B) with bolts (A). Torque the bolts to 9 Nm (80 lbf·in).

NOTE:

Bolts (A) come with a threadlocker patch that will wear off if the bolts are removed. If you are reusing bolts (A), apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to the threads of the bolts before you install them.

Installing Feed Auger Fingers

The feed auger has fingers that extend and retract to pull crop into the feeder house on the combine. Fingers may need to be installed onto the auger drum to change its configuration profile.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Ensure that all bystanders have cleared the area.

IMPORTANT:

When installing additional fingers, ensure you install an equal number on each side of the auger.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to Engaging Reel Safety Props, page 33.
- 4. Remove bolts (A) and access cover (B) closest to the finger you are removing. Retain the parts for reinstallation.

5. Remove two bolts (B), tee nuts (not shown), and plug (A).

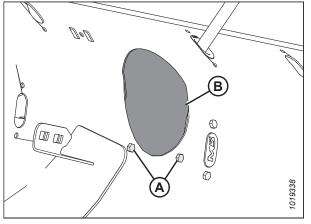


Figure 4.102: Auger Access Hole Cover

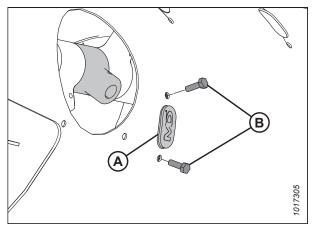


Figure 4.103: Auger Finger Hole

6. Insert guide (B) from inside the auger and secure it with bolts (A) and tee nuts (not shown).

IMPORTANT:

Always install a new guide when replacing a solid finger.

NOTE:

Bolts (A) come with a threadlocker patch that will wear off if the bolts are removed. If reinstalling bolts (A), apply medium-strength threadlocker (Loctite[®] 243 or equivalent) before installation.

- 7. Torque bolts (A) to 9 Nm (80 lbf·in).
- Place auger finger (A) inside the drum. Insert auger finger (A) up through the bottom of guide (B) and insert the other end into holder (C).
- 9. Secure the finger by inserting hairpin (D) into the holder. Ensure that the round end (S-shaped side) of the hairpin faces the chain drive side of the auger. Make sure the closed end of the hairpin points in the direction in which the auger rotates.

IMPORTANT:

Position the hairpin as described in this step to prevent the hairpin from falling out during operation. If fingers are lost, the header might not be able to feed crop into the combine properly. Fingers that fall into the drum might damage internal components.

10. Secure access cover (B) in place with bolts (A). Torque the bolts to 9 Nm (80 lbf·in).

NOTE:

Bolts (A) come with a threadlocker patch that will wear off if the bolts are removed. If reinstalling bolts (A), apply medium-strength threadlocker (Loctite[®] 243 or equivalent) before installation.

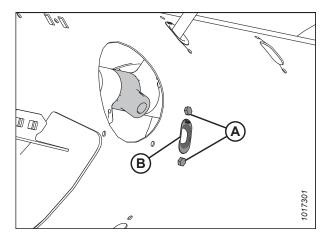


Figure 4.104: Auger Finger Hole

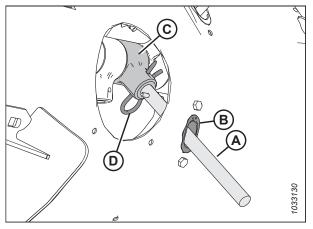


Figure 4.105: Auger Finger

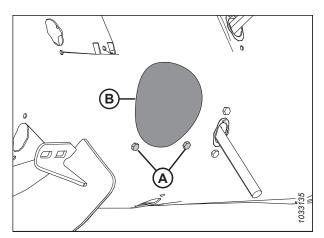


Figure 4.106: Auger Access Hole Cover

Checking Auger Finger Timing

The feed auger has fingers that extend and retract to pull crop into the feeder house on the combine. This procedure determines where the fingers are when they are fully extended from the auger.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Ensure that all bystanders have cleared the area.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the reel fully.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Check that indicator (C) is set to the same position at each end of the auger.

NOTE:

There are two different auger tine extension positions: **A** and **B**. Position **A** is used for canola and position **B** is used for grains. The factory setting for the indicator is position **B**.

IMPORTANT:

To avoid damaging the auger beyond repair, it is extremely important that both sides are at the same setting.

- 6. To adjust the indicator position, refer to *Adjusting Auger Finger Timing, page 321*.
- 7. Disengage the reel safety props. For instructions, refer to *Disengaging Reel Safety Props, page 34*.

Adiusting Auger Finger Timing

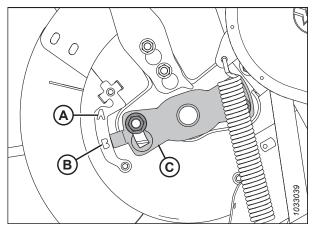


Figure 4.107: Auger Tine Timing – Left Side of Auger Shown

The feed auger has fingers that extend and retract to pull crop into the feeder house on the combine. This procedure determines where the fingers are when they are fully extended from the auger.

NOTE:

The illustrations show only the left side of the auger; however, the procedure applies to both sides.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

Ensure that all bystanders have cleared the area.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the reel fully.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Shut down the engine, and remove the key from the ignition.
- Locate finger timing indicator (C) at the end of the auger. There are two auger tine extension positions: Position A and position B.
- 6. Loosen nuts (D) and adjust finger timing indicator (C) to the desired position.

IMPORTANT:

The timing indicator on both ends of the auger must be set at the same position; if not, the auger will be damaged beyond repair.

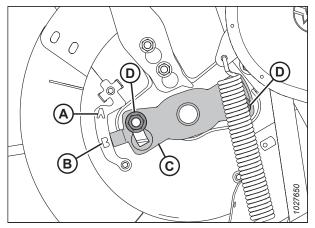


Figure 4.108: Auger Tine Timing Indicator

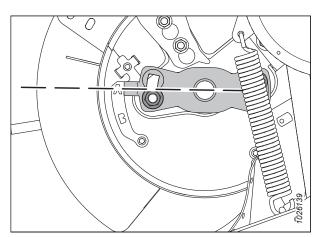


Figure 4.109: Auger Position A

NOTE:

If the finger timing indicator is pointing at position **A**, it indicates that at that point the auger fingers will be fully extended. This allows the crop to be engaged and released earlier before entering the feeder house. This setting is best used for canola or bushy crops.

NOTE:

If the indicator is pointing at position **B**, it indicates that at that point the auger fingers will be fully extended. This allows the crop to be engaged and released later before entering the feeder house. This setting is best used for grains or beans.

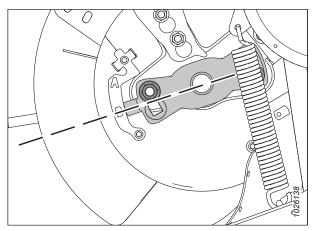


Figure 4.110: Auger Position B

- 7. Tighten nuts (A) once adjustment is complete. Torque nuts to 115 Nm (85 lbf·ft).
- 8. Disengage the reel safety props. For instructions, refer to *Disengaging Reel Safety Props, page 34*.

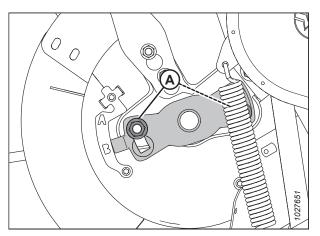


Figure 4.111: Auger Tine Timing Indicator

4.8 Knife

The knives on the cutterbar cut the crop. The knives, guards, and knifehead will require maintenance from time to time.



WARNING

Keep hands clear of the area between guards and knife at all times.

WARNING

Wear heavy gloves when working around or handling knives.

CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to 4.1 Preparing Machine for Servicing, page 259.

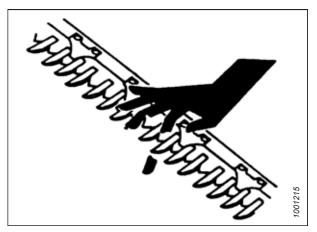


Figure 4.112: Cutterbar Hazard

4.8.1 **Replacing Knife Section**

Inspect the knife sections daily and ensure they are firmly bolted to the knife back and are not worn or damaged (worn and damaged sections leave behind uncut plants). Worn or damaged sections can be replaced without removing the knife from the cutterbar.

DANGER

To prevent injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key from the ignition before leaving the operator's seat or making adjustments to the machine. Never work on or beneath an unsupported header. If the header is fully raised, always engage the safety props. If the header is off of the ground but not raised to its full height, place blocks under the header.

WARNING

Exercise caution when working around the cutterbar. Knife sections are sharp and can cause serious injury. Wear heavy gloves when working around or handling knife sections or the knife.

- 1. Raise the reel fully.
- Engage the reel safety props. For instructions, refer to Engaging Reel Safety Props, page 33. 2.
- Shut down the engine, and remove the key from the ignition. 3.

4. If a hold-down is present, remove nuts (A) and holddown (B) to access the knife section that is being replaced.


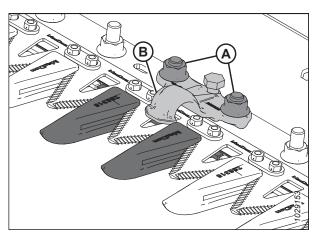


Figure 4.113: Cutterbar

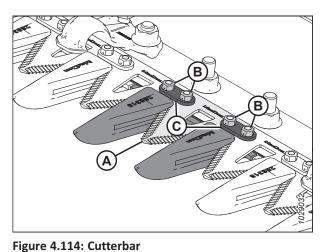

Stroke the knife as required to access the hardware.

5. Remove bolts and nuts (B). Retain hardware.

- 6. For sections near the drive end, remove bars (C) and lift knife section (A) off the knife back bar.
- 7. Clean dirt off the knife back bar, and position the new knife section onto the knife back bar.

IMPORTANT:

NOTE:

Cut quality may be affected if fine and coarsely serrated knife sections are used on the same knife.

- 8. For sections near the drive end, reposition bars (C).
- 9. If a hold-down was removed earlier, install it along with bolts and nuts (B).

NOTE:

Ensure bolt heads fully engage into oblong holes on the knife back bar.

- 10. Torque nuts (B) to 12 Nm (9 lbf·ft).
- 11. If necessary, replace hold-downs that were removed. To check hold-down adjustment, refer to *Checking Hold-Down Pointed Knife Guards, page 341* or *Checking Hold-Down Short Knife Guards, page 354*.

4.8.2 Removing Knife

Inspect the knife daily and ensure it is not damaged. If it is damaged it will need to be removed and replaced.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

Stand to the rear of the knife during removal to reduce the risk of injury from cutting edges. Wear heavy gloves when handling the knife.

NOTE:

For single knife headers, the knifehead is located on the left side of the knife. For double knife headers, there are two knifeheads and they are located both right and left sides of the knife. Verify which knife needs to be removed before beginning.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.
- 3. Manually move the knife to the middle of its stroke range.
- 4. Clean the area around the knifehead.
- 5. Remove grease fitting (A) from the pin.

NOTE:

Removing the grease fitting will make it easier to reinstall the knifehead pin later.

- 6. Remove bolt and nut (B).
- 7. Use a screwdriver or chisel in slot (C) to release the load on the knifehead pin.
- Use a screwdriver or chisel to pry the knifehead pin upwards in the pin groove until the knifehead pin is clear of the knifehead.
- 9. Push knife assembly (A) inboard until it is clear of drive arm (B).

NOTE:

Frame and endshield parts have been removed from the illustration to reveal the knifehead components.

- 10. Unless it is being replaced, seal knifehead bearing (C) with plastic or tape to keep out dirt and debris.
- 11. Pull knife drive arm (B) to the outside position to give clearance for the knife.
- 12. Remove knife (A).

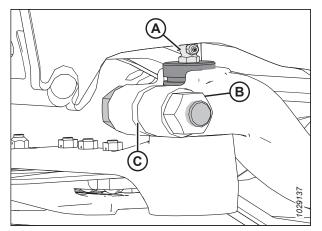


Figure 4.115: Knifehead

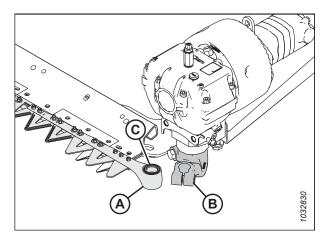


Figure 4.116: Left Knifehead

4.8.3 Removing Knifehead Bearing

The knifehead bearing allows the knifehead pin to rotate within the knifehead as the drive arm strokes the knife back and forth. If the bearing is worn or damaged, it will need to be replaced.

DANGER

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

Stand to the rear of the knife during removal to reduce the risk of injury from cutting edges. Wear heavy gloves when handling the knife.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Remove the knife. For instructions, refer to 4.8.2 Removing Knife, page 325.

NOTE:

Because the bearing is being replaced, it is not necessary to wrap the knifehead to protect the bearing.

5. Use a flat-ended tool with the same diameter as pin (A). Tap seal (B), bearing (C), plug (D), and O-ring (E) from the underside of the knifehead.

NOTE:

Seal (B) can be replaced without removing the bearing. When changing the seal, check the pin and needle bearing for wear and replace if necessary.

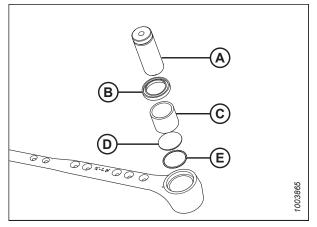


Figure 4.117: Knifehead Bearing Assembly

4.8.4 Installing Knifehead Bearing

The knifehead bearing allows the knifehead pin to rotate within the knifehead as the drive arm strokes the knife back and forth. Once the old bearing has been removed from the knifehead, a new one can be installed.

- 1. Place O-ring (E) and plug (D) into the knifehead.
- Use a flat-ended tool (A) with the same approximate diameter as bearing (C), and push the bearing into the knifehead until the top of the bearing is flush with the step in the knifehead.

IMPORTANT:

Install the bearing with the stamped end (the end with the identification markings) facing up.

3. Install seal (B) into the knifehead with the lip facing outwards.

IMPORTANT:

To prevent premature knifehead or knife drive box failure, ensure there is a tight fit between the knifehead pin and the needle bearing, and between the knifehead pin and the output arm.

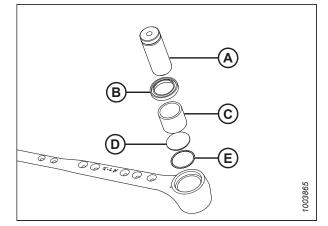


Figure 4.118: Knifehead Bearing Assembly

4. Install the knife. For instructions, refer to 4.8.5 Installing Knife, page 328.

4.8.5 Installing Knife

Inspect the knife daily and ensure it is not damaged. If it is damaged it will need to be removed and replaced.

DANGER

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

Stand to the rear of the knife during removal to reduce the risk of injury from cutting edges. Wear heavy gloves when handling the knife.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.

- 3. Grease the knife head bearing prior to assembly spread grease around bearing evenly.
- 4. Install knife assembly (A).

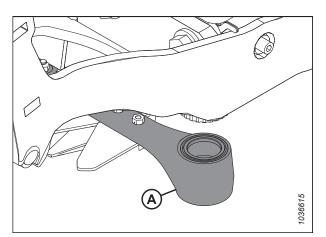


Figure 4.119: Knife Drive Box

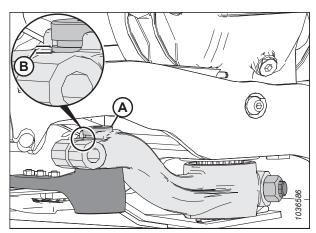


Figure 4.120: Knifehead

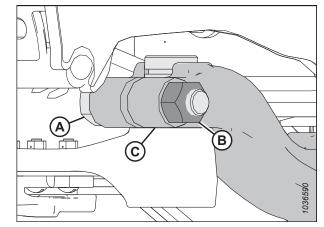


Figure 4.121: Knifehead

- 5. Install knifehead pin (A) through the drive arm and into the knifehead.
- 6. Position knifehead pin (A), so that groove (B) is 2 mm (5/64 in.) above the drive arm.

- Secure the knifehead pin with M16 x 85 mm hex bolt (A) and hex nut (B). Install the bolt from the inboard side of the arm. Torque the bolt to 220 Nm (162 lbf·ft).
- Rotate he flywheel attached to the knife drive box to manually stroke knife arm (A) to the inside limit of travel, and ensure there is still 0.2–1.2 mm (1/64–3/64 in.) clearance (C) between the drive arm and the knifehead.
- 9. If no adjustment is required, proceed to Step *10, page 330*. If drive arm adjustment is required, contact your MacDon Dealer.

10. Reinstall grease fitting (A), and slowly apply grease. Apply grease until the knifehead has a **SLIGHT** downward movement, then stop.

IMPORTANT:

Do **NOT** overgrease the knifehead. Overgreasing leads to knife misalignment causing excessive heating of guards and overloading of drive systems. If overgreasing occurs, remove the grease fitting to release pressure.

NOTE:

If air is trapped in the bearing cavity, the knifehead will begin to move down before it has filled with grease.

- 11. Move the knife drive arm to the mid-stroke position, and ensure the knife back bar doesn't contact the front of first guard (A).
- 12. If the knife back bar contacts the front of the first guard, remove bolts (B), reposition the guard forward, and reinstall the bolts. Torque bolts to 85 Nm (63 lbf·ft). If the necessary clearance (zero contact between back bar and front of first guard) is not achievable, then additional shims are required between the knife drive box and the mounting plate. Contact your MacDon Dealer.
- 13. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36*.

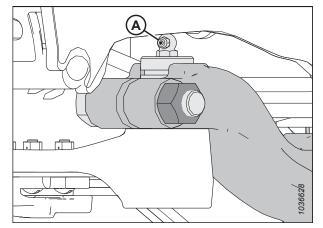


Figure 4.122: Knifehead

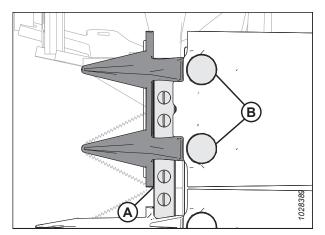


Figure 4.123: First Knife Guard – View from below Knife

4.8.6 Spare Knives

Two spare knives (A) can be stored in the header backtube at the right end. Ensure the spare knives are secured in place with latch (B) and hairpin (C).

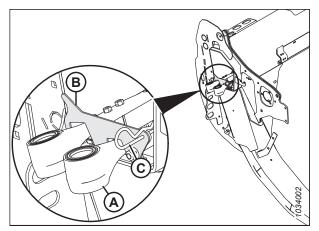


Figure 4.124: Spare Knives

4.8.7 **Pointed Knife Guards and Hold-Downs**

Knife guards assist with aligning the knife bar. Hold-downs hold the sections on the knife bar down against the knife guards to ensure proper cutting.

The following knife guards and hold-downs are used in pointed guard configurations:

NOTE:

Pointed knife guard configurations require two short knife guards; one at each end of the cutterbar.

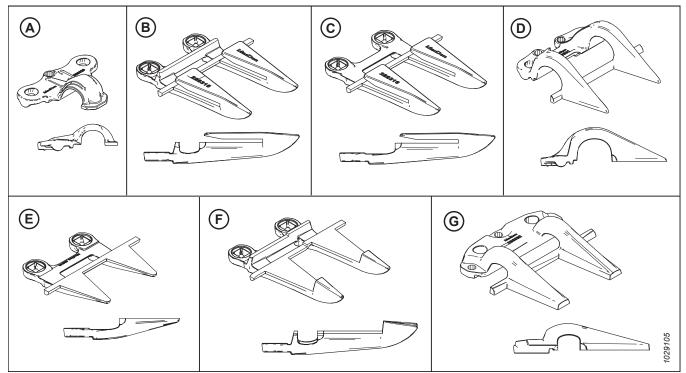


Figure 4.125: Guard and Hold-Down Types used in Pointed Knife Guard Configurations

A - Pointed Hold-Down (MAC286329)

- C Pointed-End Knife Guard (without Wear Bar) (MAC286316)⁷⁴
- E PlugFree[™] End Knife Guard (without Wear Bar) (MAC286319)⁷⁵
- G Pointed Center Hold-Down (MAC286332)⁷⁶

- B Pointed Knife Guard (MAC286315)
- D PlugFree[™] End Hold-Down (MAC286331)
- F Pointed Center Knife Guard (MAC286317)⁷⁶

Guards are configured differently on different headers. When replacing pointed guards and hold-downs, ensure you use the correct sequence for your header. The following will guide you to the different configurations:

- Pointed Knife Guards on Single-Knife Headers, page 332
- Pointed Knife Guards on FD235 Double-Knife Header, page 333
- Pointed Knife Guards on FD240 Double-Knife Header, page 334
- Pointed Knife Guards on FD241 Double-Knife Header, page 335
- Pointed Knife Guards on FD245 Double-Knife Header, page 336
- Pointed Knife Guards on FD250 Double-Knife Header, page 337

^{74.} Installed in positions 2, 3, and 4 on drive side(s). Refer to *Replacing Pointed Knife Guards, page 340* for reference.

^{75.} Installed in position 1 on drive side(s). Single-knife headers use standard guard MAC286318) on the right end.

^{76.} Double-knife headers only.

Pointed Knife Guards on Single-Knife Headers

Knife guards assist with aligning the knife bar. Hold-downs hold the sections on the knife bar down against the knife guards to ensure proper cutting.

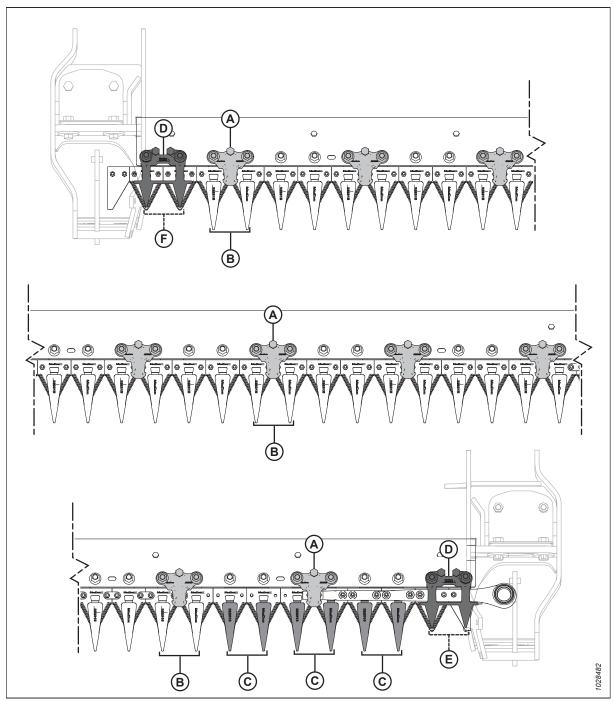


Figure 4.126: Pointed Knife Guard and Hold-Down Locations – Single-Knife Headers

A - Pointed Hold-Down (MAC286329)

- C Pointed End Knife Guard (without Wear Bar) (MAC286316)
- E Short Knife Guard (without Wear Bar) (MAC286319)

- B Pointed Knife Guard (MAC286315)
- D Short Knife Hold-Down (MAC286331)
- F- Short Knife Guard (MAC286318)

Pointed Knife Guards on FD235 Double-Knife Header

Knife guards assist with aligning the knife bar. Hold-downs hold the sections on the knife bar down against the knife guards to ensure proper cutting.

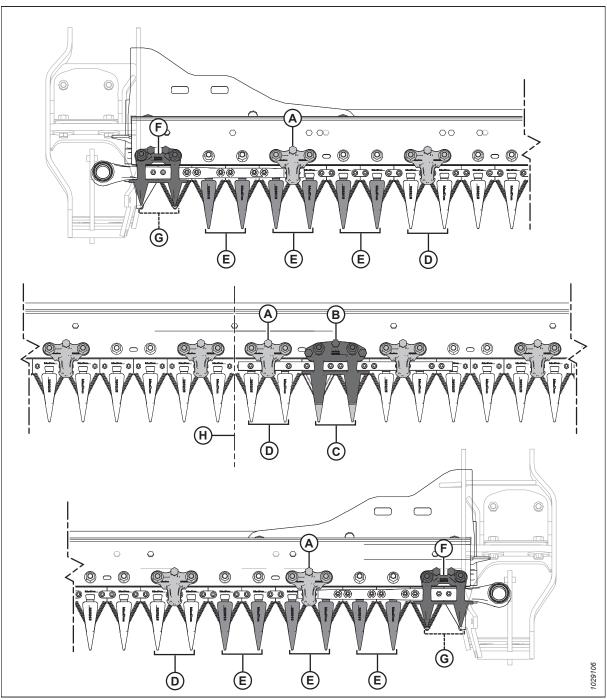


Figure 4.127: Pointed Guard and Hold-Down Locations

- A Pointed Hold-Down (MAC286329)
- C Pointed Center Knife Guard (MAC286317)
- E Pointed End Knife Guard (without Wear Bar) (MAC286316)
- G Short Knife Guard (without Wear Bar) (MAC286319)

- B Pointed Center Hold-Down (MAC286332)
- D Pointed Knife Guard (MAC286315)
- F Short Knife Hold-Down (MAC286331)
- H Center of Header

Pointed Knife Guards on FD240 Double-Knife Header

Knife guards assist with aligning the knife bar. Hold-downs hold the sections on the knife bar down against the knife guards to ensure proper cutting.

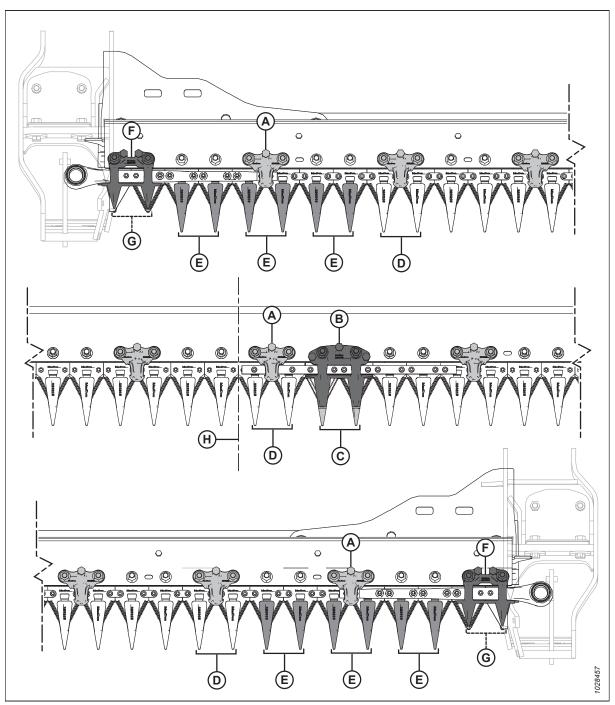


Figure 4.128: Pointed Knife Guard and Hold-Down Locations – FD240 Double-Knife Header

- A Pointed Hold-Down (MAC286329)
- C Pointed Center Knife Guard (MAC286317)
- E Pointed End Knife Guard (without Wear Bar) (MAC286316)
- G Short Knife Guard (without Wear Bar) (MAC286319)

- B Pointed Center Hold-Down (MAC286332)
- D Pointed Knife Guard (MAC286315)
- F Short Knife Hold-Down (MAC286331)
- H Center of Header

Pointed Knife Guards on FD241 Double-Knife Header

Knife guards assist with aligning the knife bar. Hold-downs hold the sections on the knife bar down against the knife guards to ensure proper cutting.

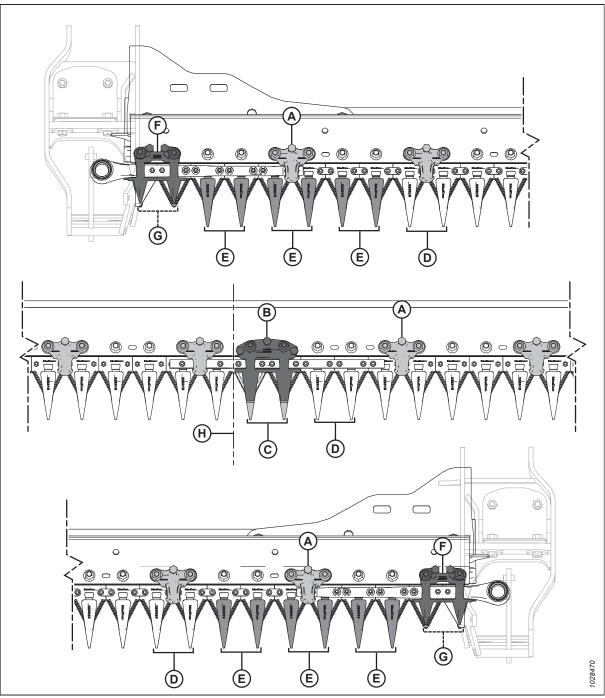


Figure 4.129: Pointed Knife Guard and Hold-Down Locations

- A Pointed Hold-Down (MAC286329)
- C Pointed Center Knife Guard (MAC286317)
- E Pointed End Knife Guard (without Wear Bar) (MAC286316)
- G Short Knife Guard (without Wear Bar) (MAC286319)

- B Pointed Center Hold-Down (MAC286332)
- D Pointed Knife Guard (MAC286315)
- F Short Knife Hold-Down (MAC286331)
- H Center of Header

Pointed Knife Guards on FD245 Double-Knife Header

Knife guards assist with aligning the knife bar. Hold-downs hold the sections on the knife bar down against the knife guards to ensure proper cutting.

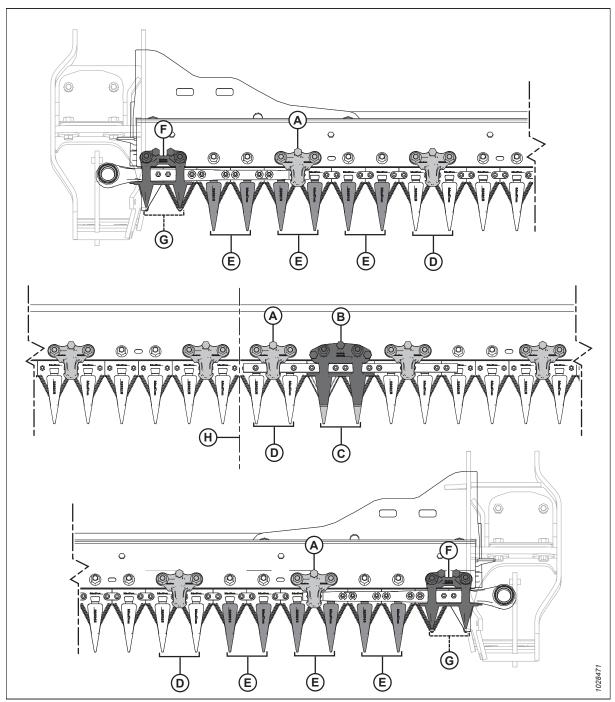


Figure 4.130: Pointed Guard and Hold-Down Locations

- A Pointed Hold-Down (MAC286329)
- C Pointed Center Knife Guard (MAC286317)
- E Pointed End Knife Guard (without Wear Bar) (MAC286316)
- G Short Knife Guard (without Wear Bar) (MAC286319)

B - Pointed Center Hold-Down (MAC286332)

- D Pointed Knife Guard (MAC286315)
- F Short Knife Hold-Down (MAC286331)
- H Center of Header

Pointed Knife Guards on FD250 Double-Knife Header

Knife guards assist with aligning the knife bar. Hold-downs hold the sections on the knife bar down against the knife guards to ensure proper cutting.

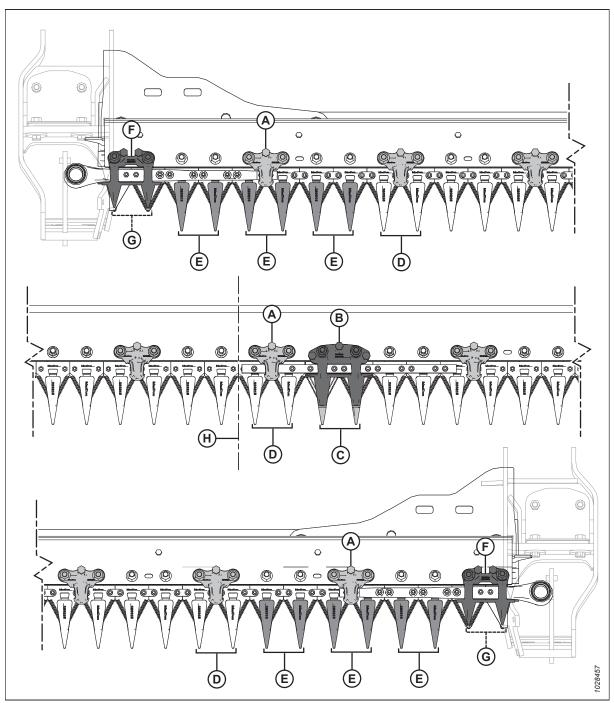


Figure 4.131: Pointed Knife Guard and Hold-Down Locations – FD250 Double-Knife Header

- A Pointed Hold-Down (MAC286329)
- C Pointed Center Knife Guard (MAC286317)
- E Pointed End Guard (without Wear Bar) (MAC286316)
- G Short Knife Guard (without Wear Bar) (MAC286319)

- B Pointed Center Hold-Down (MAC286332)
- D Pointed Knife Guard (MAC286315)
- F -Short Knife Hold-Down (MAC286331)
- H Center of Header

Adjusting Knife Guards and Guard Bar

If a knife guard or the guard bar is misaligned due to contact with a rock or similar obstruction, use the guard straightening tool (MAC286705) available from your MacDon Dealer to correct the issue.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. To adjust the guard tips upwards, position tool (A) as shown, and pull up.

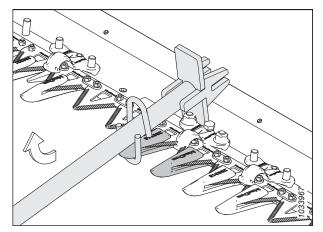


Figure 4.132: Upward Adjustment - Pointed Guard

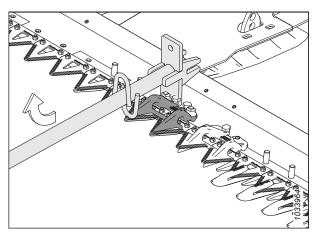


Figure 4.133: Upward Adjustment – Short Knife Guard

5. To adjust the guard tips downwards, position tool (A) as shown, and push down.

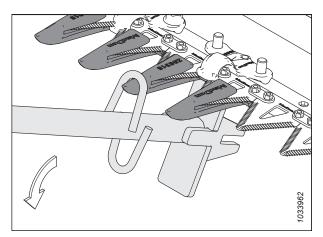


Figure 4.134: Downward Adjustment – Pointed Guard

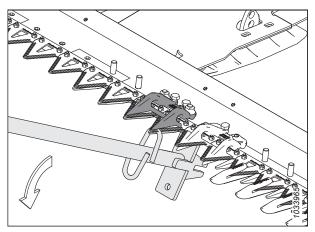


Figure 4.135: Downward Adjustment – Short Knife Guard

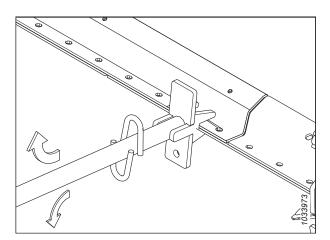


Figure 4.136: Guard Bar Adjustment – No Guards

6. To adjust the guard bar up or down, position tool (A) as shown, and push on the tool accordingly.

Replacing Pointed Knife Guards

Guards become dull and need to be replaced. This procedure is for replacing standard guards and the special (drive side) guards closest to the knife drive motor.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

IMPORTANT:

When replacing pointed knife guards, ensure the hold-down sequence is correct for your header type and width. For more information, refer to *4.8.7 Pointed Knife Guards and Hold-Downs, page 331*.

IMPORTANT:

Single- and double-knife headers: On both ends of the header, position 1 (outboard guard) is a short knife guard. On the drive side(s) of the header, positions 2, 3, and 4 are pointed end knife guards (without wear bar). Starting at position 5, the remaining guards are pointed knife guards. Ensure that the proper replacement guards are installed at these locations.

IMPORTANT:

Double-knife headers: A pointed center knife guard installed where the two knives overlap. The pointed center knife guard has a slightly different replacement procedure. For instructions, refer to *Replacing Pointed Center Knife Guard – Double-Knife, page 343*.

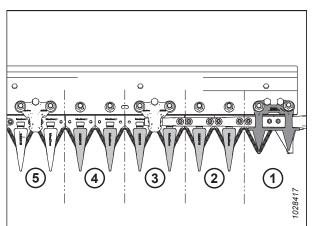


Figure 4.137: Drive Side Pointed Knife Guards

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.
- 5. Rotate the flywheel attached to the knife drive box to manually stroke the knife until the knife sections are spaced midway between the guards.
- 6. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36*.

- 7. Remove two nuts and bolts (B) securing pointed knife guard (A) and hold-down (C) (if applicable) to the cutterbar.
- 8. Remove pointed knife guard (A), hold-down (C), and the plastic wearplate. Discard the pointed knife guard.

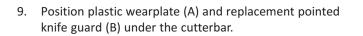


Figure 4.139: Pointed Knife Guard and Wearplate B

Figure 4.140: Pointed Knife Guards

Checking Hold-Down – Pointed Knife Guards

85 Nm (63 lbf·ft).

Perform DAILY inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

This procedure is for standard hold-downs. To check the center hold-down on double-knife headers, refer to Checking Center Hold-Down – Pointed Knife Guards, page 346.


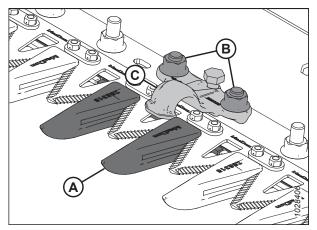


Figure 4.138: Pointed Knife Guards

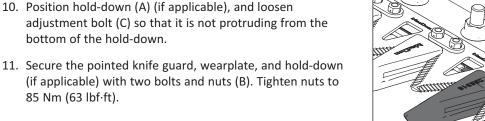

12. If there is a hold-down at this location, proceed with adjustment. Refer to Adjusting Hold-Down - Pointed Knife Guards, page 342.

1028428

A

NOTE:

Align the guards prior to adjusting the hold-down. For instructions, refer to *Adjusting Knife Guards and Guard Bar, page 338*.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

WARNING

Wear heavy gloves when working around or handling knives.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Raise the reel fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 5. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.
- Rotate the flywheel attached to the knife drive box to manually stroke the knife to position knife section (A) under hold-down (B).
- Push down on knife section (A) with approximately 44 N (10 lbf) of force, and use a feeler gauge to measure the clearance between hold-down (B) and the knife section. Ensure the clearance is 0.1–0.5 mm (0.004–0.020 in.).
- 8. If adjustment is required, refer to Adjusting Hold-Down Pointed Knife Guards, page 342.
- 9. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36*.

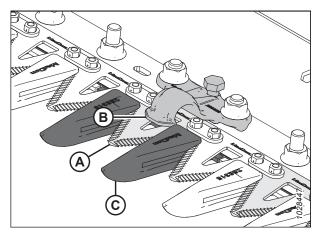


Figure 4.141: Pointed Hold-Down

Adjusting Hold-Down – Pointed Knife Guards

Perform **DAILY** inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

This procedure is for standard hold-down. To adjust the center hold-down on double-knife headers, refer to *Adjusting Center Hold-Down – Pointed Knife Guards, page 346*.

NOTE:

Align guards prior to adjusting the hold-down. For instructions, refer to Adjusting Knife Guards and Guard Bar, page 338.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Adjust the hold-down clearance as follows:
 - a. To lower the front of hold-down (A) and decrease clearance, turn adjuster bolt (B) clockwise.
 - b. To raise the front of hold-down (A) and increase clearance, turn adjuster bolt (B) counterclockwise.

NOTE:

For larger adjustments, it may be necessary to loosen nuts (C) before turning adjuster bolt (B). After adjustment, retighten nuts to 85 Nm (63 lbf·ft).

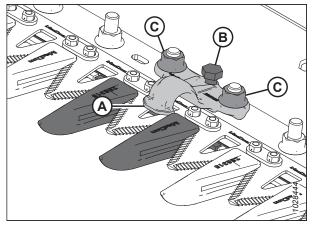


Figure 4.142: Pointed Hold-Down

5. Run the header at low engine speed, and listen for noise caused by insufficient clearance. Readjust as necessary.

IMPORTANT:

Insufficient hold-down clearance will result in overheating of the knife and guards.

Replacing Pointed Center Knife Guard – Double-Knife

The guard at the center of a double-knife header (where the two knives overlap) requires a slightly different replacement procedure than a pointed knife guard.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.

- 4. Remove two nuts and bolts (C) securing guard (A) and hold-down (B) to the cutterbar.
- 5. Remove guard (A), plastic wearplate, and hold-down (B).

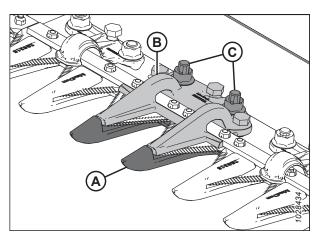


Figure 4.143: Pointed Center Knife Guard

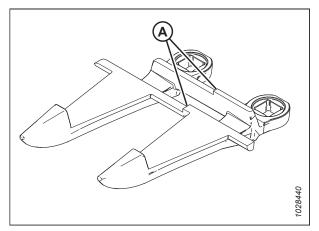


Figure 4.144: Pointed Center Knife Guard

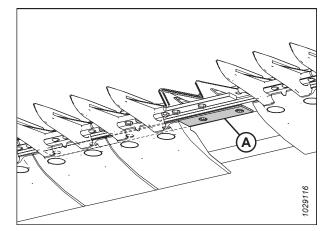


Figure 4.145: Cutterbar

IMPORTANT:

guard.

Ensure the replacement guard is the correct guard with offset cutting surfaces (A).

6. Before installing the new pointed center knife guard,

ensure overlap shim (A) is present under the cutterbar, and the thick end of the shim is positioned under the center

MAC215954

MAINTENANCE AND SERVICING

7. Position plastic wearplate (A) and new guard (B) under the cutterbar.

8. Thread three adjustment bolts (A) so they are protruding 4 mm (5/32 in.) from the bottom of pointed center hold-

9. Position center hold-down (B) onto the cutterbar.

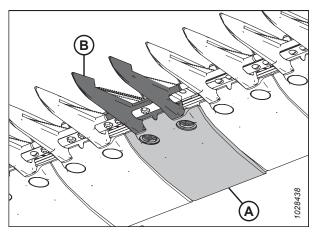


Figure 4.146: Pointed Center Knife Guard and Wearplate


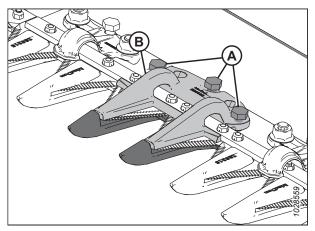


Figure 4.147: Pointed Center Knife Guard

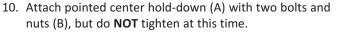

IMPORTANT:

down (B).

Hold-down (A) must accommodate the two overlapping knives at the center guard location. Ensure the proper replacement guard is installed at this location.

- 11. Adjust the hold-down until the clearance is acceptable.
 - For adjustment instructions, refer to Adjusting Center Hold-Down – Pointed Knife Guards, page 346.
 - For clearance specifications, refer to *Checking Center* Hold-Down – Pointed Knife Guards, page 346.
- 12. Tighten nuts (B) to 85 Nm (63 lbf·ft).
- 13. Recheck the clearance.
 - If the clearance is acceptable, the installation of the hold-down is complete.
 - If the clearance is unacceptable, repeat Step *11, page 345* to Step *13, page 345* until the clearance is satisfactory.

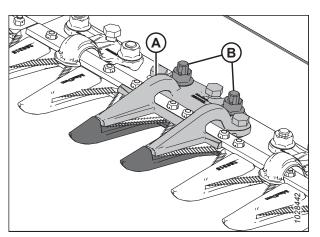


Figure 4.148: Pointed Center Knife Guard

Checking Center Hold-Down – Pointed Knife Guards

Perform **DAILY** inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.
- 5. Rotate the flywheel attached to the knife drive box to manually stroke the knife fully inboard until the knife sections are under hold-down (A). Repeat for the opposite knife.
- Push down on the knife section with approximately 44 N (10 lbf) of force, and use a feeler gauge to measure the clearance between hold-down (A) and the knife section. Ensure the clearance is as follows:
 - At tip (B) of hold-down: 0.1–0.5 mm (0.004–0.020 in.)
 - At rear (C) of hold-down: 0.1–1.0 mm (0.004–0.040 in.)
- 7. If adjustment is required, refer to *Adjusting Center Hold-Down – Pointed Knife Guards, page 346.*
- If no adjustment is required, tighten nuts (D) to 85 Nm (63 lbf·ft).
- 9. Recheck clearance after tightening nuts, and adjust if necessary.
- 10. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36*.

Adjusting Center Hold-Down – Pointed Knife Guards

Perform **DAILY** inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

WARNING

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

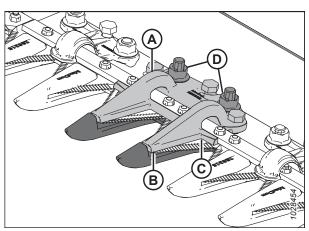


Figure 4.149: Pointed Center Hold-Down

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Loosen mounting hardware (B).
- 5. Turn adjuster bolts (A) as follows:
 - To increase the clearance, turn adjuster bolts (A) clockwise (tighten).
 - To decrease the clearance, turn adjuster bolts (A) counterclockwise (loosen).
- 6. To adjust clearance at tip only, adjust using only center (rear) adjustment bolt (C).
 - To increase the clearance, turn adjuster bolt (C) counterclockwise (loosen).
 - To decrease the clearance, turn adjuster bolt (C) clockwise (tighten).
- 7. Tighten nuts (B) to 85 Nm (63 lbf·ft).
- 8. Recheck clearances, and make further adjustments if necessary.

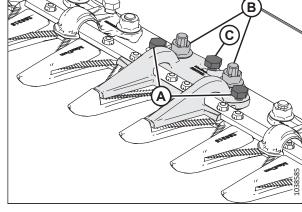


Figure 4.150: Pointed Center Hold-Down

9. Run the header at low engine speed, and listen for noise caused by insufficient clearance.

IMPORTANT:

Insufficient hold-down clearance will result in overheating of the knife and guards—readjust as necessary.

4.8.8 Short Knife Guards and Hold-Downs

Short knife guards are less likely to plug the knife in tough crops such as grasses and canola.

The following knife guards and hold-downs are used in short knife guard configurations:

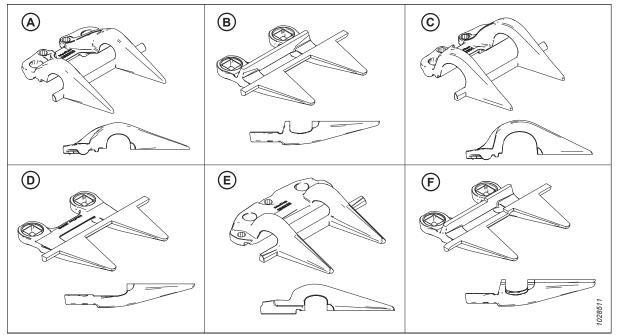


Figure 4.151: Guard and Hold-Down Types used in Short Knife Guard Configurations

- A PlugFree[™] Hold-Down (MAC286330)
- C PlugFree[™] End Hold-Down (MAC286331)⁷⁷

- B PlugFree[™] Knife Guard (MAC286318)
- D PlugFree^m End Knife Guard (without Wear Bar) (MAC286319)⁷⁸

E - PlugFree[™] Center Hold-Down (MAC286333)⁷⁹

- F PlugFree[™] Center Knife Guard (MAC286320)⁷⁹


Guards are configured differently on different headers. When replacing short knife guards and hold-downs, ensure you use the correct sequence for your header. The following will guide you to the different configurations:

- Short Knife Guards on Single-Knife Headers, page 349 •
- Short Knife Guards on Double-Knife Headers All Sizes Except 12.5 m (41 ft.), page 350 •
- Short Knife Guards on 12.5 m (41 ft.) Double-Knife Header, page 351

^{77.} Installed in positions 1–3 on drive side(s); installed in position 1 at right end of single-knife headers.

^{78.} Installed in positions 1-4 on drive side(s). Single-knife headers use standard guard (MAC286318) on the right end.

^{79.} Double-knife headers only.

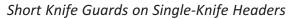

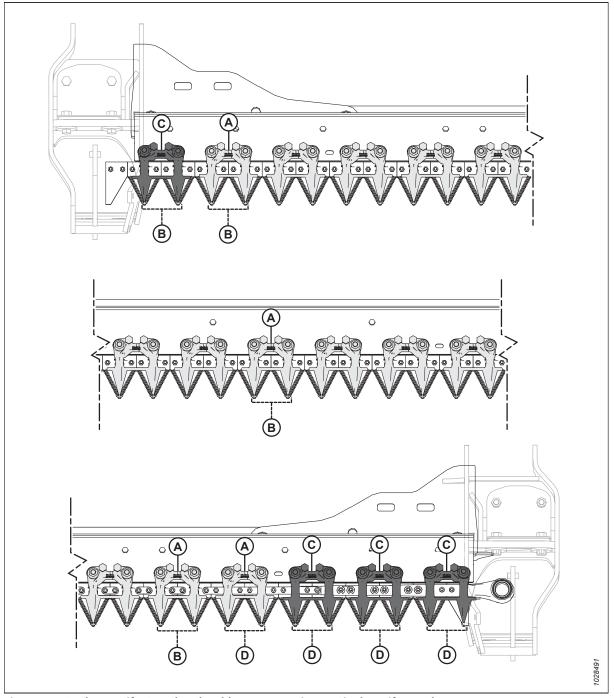


Figure 4.152: Short Knife Guard and Hold-Down Locations - Single-Knife Headers


A - Short Knife Hold-Down (MAC286330)

C - Short Knife End Hold-Down (x4) (MAC286331)

B - Short Knife Guard (MAC286318)

D - Short Knife End Knife Guard (without Wear Bar) (x5) (MAC286319)

MAINTENANCE AND SERVICING

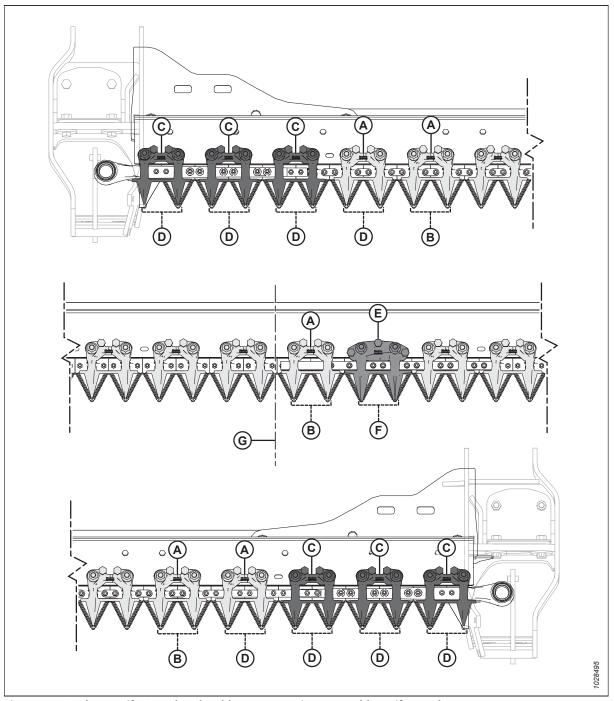


Short Knife Guards on Double-Knife Headers – All Sizes Except 12.5 m (41 ft.)

Figure 4.153: Short Knife Guard and Hold-Down Locations – Double-Knife Headers

A - Short Knife Hold-Down (MAC286330)

- C Short Knife End Hold-Down (x6) (MAC286331)
- E Short Knife Center Hold-Down (MAC286333)
- G Center of Header

- B Short Knife Guard (MAC286318)
- D -Short Knife End Knife Guard (without Wear Bar) (x8) (MAC286319)
- F Short Knife Center Knife Guard (MAC286320)

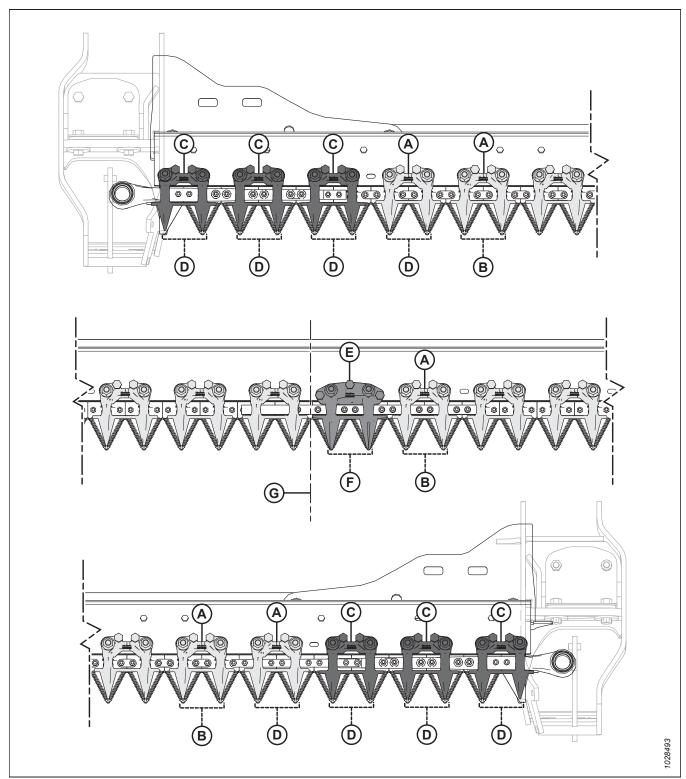

Short Knife Guards on 12.5 m (41 ft.) Double-Knife Header

Figure 4.154: Short Knife Guard and Hold-Down Locations – 12.5 m (41 ft.) Double-Knife Header

A - Short Knife Hold-Down (MAC286330)

- C Short Knife End Hold-Down (x6) (MAC286331)
- E Short Knife Center Hold-Down (MAC286333)

G - Center of Header

B - Short Knife Guard (MAC286318)

- D Short Knife End Knife Guard (without Wear Bar) (x8) (MAC286319)
- F Short Knife Center Knife Guard (MAC286320)

Replacing Short Knife Guards or End Knife Guards

Short knife guards or end knife guards are less likely to plug the knife in tough crops such as grasses and canola, and are factory-installed.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

IMPORTANT:

Double-knife headers have an offset center knife guard installed where the two knives overlap. The center knife guard has a slightly different replacement procedure. For instructions, refer to *Replacing Center Knife Guard – Double-Knife, page 355*.

To replace a short knife guard or end knife guard, follow these steps:

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Remove two nuts and bolts (A) securing short knife guard (B) and hold-down (C) to the cutterbar.
- 5. Remove short knife guard (B), hold-down (C), and the plastic wearplate.

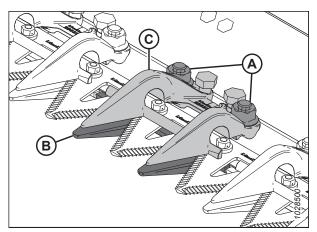


Figure 4.155: Short Knife Guards

IMPORTANT:

The first four knife guards (A) on the drive sides of the header are called end knife guards and do **NOT** have wear bars. Ensure the proper replacement knife guards are installed at these locations.

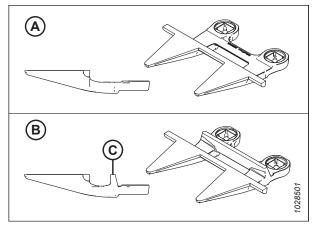


Figure 4.156: End Knife Guard and Short Knife Guards A - End Knife Guard (MAC286319)

B - Short Knife Guard (with wear bar [C]) (MAC286318)

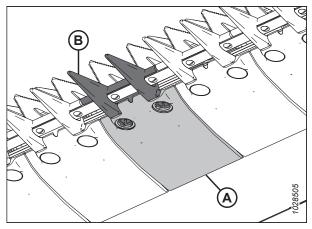


Figure 4.157: Short Knife Guard and Wearplate

 Position hold-down (A), and loosen two adjustment bolts (B) so that they are not protruding from the bottom of the hold-down.

6. Position plastic wearplate (A) and replacement short knife

guard (B) under the cutterbar.

- 8. Secure the short knife guard, wearplate, and hold-down with two bolts and nuts (C), but do **NOT** tighten yet.
- 9. Adjust the hold-down until the clearance is acceptable.
 - For adjustment instructions, refer to Adjusting Hold-Down – Short Knife Guards, page 354.
 - For clearance specifications, refer to *Checking Hold-Down Short Knife Guards, page 354*.
- 10. Tighten nuts (C) to 85 Nm (63 lbf·ft).

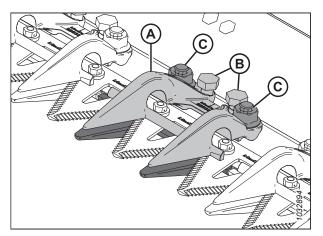


Figure 4.158: Short Knife Guard

- 11. Recheck the clearance.
 - If the clearance is acceptable, the installation of the hold-down is complete.
 - If the clearance is unacceptable, repeat Step 9, page 353 to Step 11, page 353 until the clearance is satisfactory.

Checking Hold-Down – Short Knife Guards

Perform **DAILY** inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

To check the center hold-down on double-knife headers, refer to *Checking Center Hold-Down – Short Knife Guards, page 358*.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Manually stroke the knife to position the section under hold-down (A).
- Push down on knife section with approximately 44 N (10 lbf) of force, and use a feeler gauge to measure the clearance between the tip of hold-down (B) and the knife section. Ensure the clearance is 0.1–0.5 mm (0.004–0.020 in.).
- 6. If adjustment is required, refer to Adjusting Hold-Down Short Knife Guards, page 354.

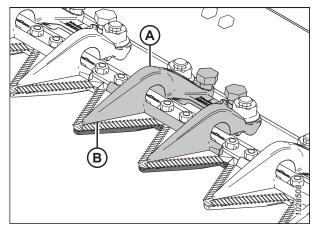


Figure 4.159: Short Knife Guards

Adjusting Hold-Down – Short Knife Guards

Perform **DAILY** inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

To adjust the center hold-down on double-knife headers, refer to *Adjusting Center Hold-Down – Short Knife Guards, page 358*.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Adjust the hold-down clearance as follows:
 - a. To decrease the clearance, turn adjuster bolts (A) clockwise.
 - b. To increase the clearance, turn adjuster bolts (A) counterclockwise.

NOTE:

For larger adjustments, it may be necessary to loosen nuts (B) before turning adjuster bolts (A). After adjustment, retighten nuts to 85 Nm (63 lbf·ft).

- c. Recheck the first point after adjusting the second point, as adjustments to each side can influence the other.
- d. Make further adjustments as necessary.

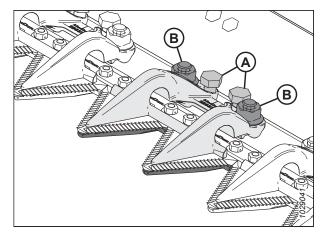


Figure 4.160: Short Knife Guard Hold-Down

- 5. Recheck clearances, and make further adjustments if necessary.
- 6. Run the header at low engine speed, and listen for noise caused by insufficient clearance. Readjust as necessary.

IMPORTANT:

Insufficient hold-down clearance will result in overheating of the knife and guards.

Replacing Center Knife Guard – Double-Knife

The offset guard at the center of a double-knife header (where the two knives overlap) requires a slightly different replacement procedure than a standard guard.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.

- 4. Remove two nuts and bolts (C) securing center knife guard (A) and hold-down (B) to the cutterbar.
- 5. Remove center knife guard (A), plastic wearplate, and hold-down (B).

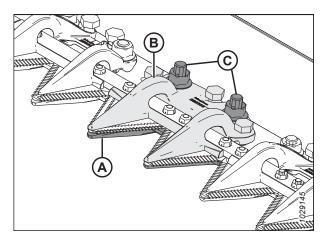


Figure 4.161: Center Knife Guard

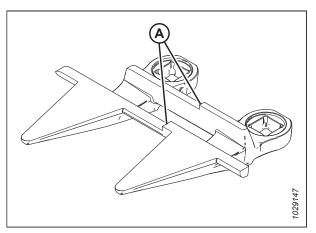


Figure 4.162: Center Knife Guard

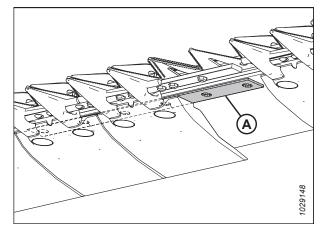


Figure 4.163: Cutterbar

IMPORTANT:

Ensure the replacement center knife guard is the correct guard with offset cutting surfaces (A).

6. Before installing the new center knife guard, ensure overlap shim (A) is present under the cutterbar, and the thick end of the shim is positioned under the center knife guard.

MAINTENANCE AND SERVICING

7. Position plastic wearplate (A) and new center knife guard (B) under the cutterbar.

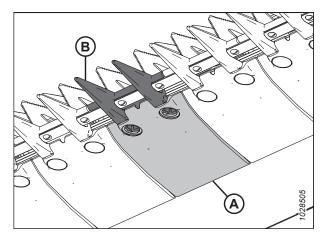


Figure 4.164: Center Knife Guard and Wearplate

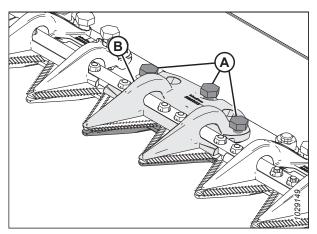


Figure 4.165: Center Knife Guard

- Thread three adjustment bolts (A) so they are protruding 4 mm (5/32 in.) from the bottom of center hold-down (B).
- 9. Position center hold-down (B) onto the cutterbar.

10. Attach center hold-down (A) with two bolts and nuts (B), but do **NOT** tighten at this time.

IMPORTANT:

Hold-down (A) must accommodate the two overlapping knives at the center knife guard location. Ensure the proper replacement center knife guard is installed at this location.

- 11. Adjust the hold-down until the clearance is acceptable.
 - For adjustment instructions, refer to Adjusting Center Hold-Down Short Knife Guards, page 358.
 - For clearance specifications, refer to *Checking Center* Hold-Down – Short Knife Guards, page 358.
- 12. Tighten nuts (B) to 85 Nm (63 lbf·ft).
- 13. Recheck the clearance.
 - If the clearance is acceptable, the installation of the hold-down is complete.
 - If the clearance is unacceptable, repeat Step *11, page 357* to Step *13, page 357* until the clearance is satisfactory.

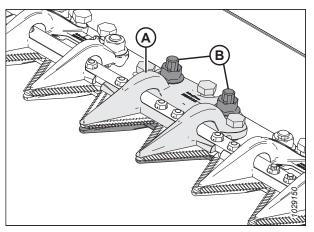


Figure 4.166: Center Knife Guard

Checking Center Hold-Down - Short Knife Guards

Perform **DAILY** inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the reel safety props. For instructions, refer to Engaging Reel Safety Props, page 33.
- 4. Manually stroke both knives to their inboard end so that knife sections are under hold-down (A).
- Push down on knife section with approximately 44 N (10 lbf) of force, and use a feeler gauge to measure the clearance between hold-down (A) and the knife section. Ensure the clearance is as follows:
 - At tip (B) of hold-down: 0.1–0.5 mm (0.004–0.020 in.)
 - At rear (C) of hold-down: 0.1–1.0 mm (0.004–0.040 in.)
- 6. If adjustment is required, refer to Adjusting Center Hold-Down – Short Knife Guards, page 358.
- If no adjustment is required, tighten nuts (D) to 85 Nm (63 lbf·ft).

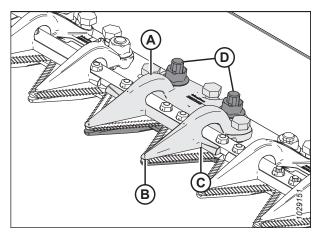


Figure 4.167: Center Knife Guard Hold-Down

8. Recheck clearance after tightening nuts.

Adjusting Center Hold-Down – Short Knife Guards

Perform **DAILY** inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.

MAINTENANCE AND SERVICING

- 3. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 4. Loosen mounting hardware (B).
- 5. Turn adjuster bolts (A) as follows:
 - To increase the clearance, turn adjuster bolts (A) clockwise (tighten).
 - To decrease the clearance, turn adjuster bolts (A) counterclockwise (loosen).
- 6. To adjust the clearance at tip only, adjust using only center (rear) adjustment bolt (C).
 - To increase the clearance, turn adjuster bolt (C) counterclockwise (loosen).
 - To decrease the clearance, turn adjuster bolt (C) clockwise (tighten).
- 7. Tighten nuts (B) to 85 Nm (63 lbf·ft).
- 8. Run the header at low engine speed, and listen for noise caused by insufficient clearance. Readjust as necessary.

IMPORTANT:

Insufficient hold-down clearance will result in overheating of the knife and guards.

4.8.9 Knifehead Shield

The knifehead shield attaches to the endsheet and reduces the knifehead opening to prevent cut crop from accumulating in the knifehead cutout.

IMPORTANT:

Remove the shields when using the cutterbar on the ground in muddy conditions. Mud may pack into the cavity behind the shield which could result in knife drive box failure.

Installing Knifehead Shield

The knifehead shield is primarily used in rice and fine grasses to keep crop from getting caught in the delivery opening. Not recommended in all conditions.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel fully.
- 2. Lower the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.

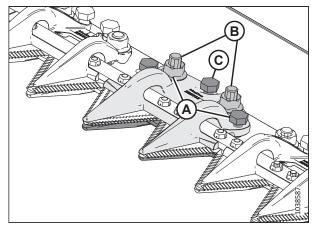


Figure 4.168: Center Hold-Down

- 5. Retrieve the knifehead shields from the manual storage case.
- Place knifehead shield (A) against the endsheet as shown. Align the shield so the cutout matches the profile of the knifehead and/or hold-downs.
- 7. Align the mounting holes and secure with two M10 x 30 hex head bolts, washers (B), and nuts.
- Tighten bolts (B) just enough to hold knifehead shield (A) in place while allowing it to be adjusted as close to the knifehead as possible.
- 9. Manually rotate the knife drive box pulley to move the knife and check for areas of contact between the knifehead and knifehead shield (A). Adjust the shield to eliminate interference with the knife if necessary.
- 10. Tighten bolts (B).

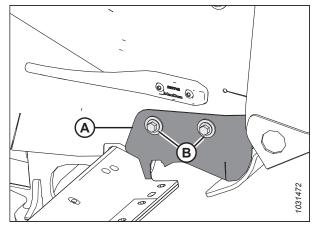


Figure 4.169: Knifehead Shield

4.9 Knife Drive System

The knife drive system transforms pumped hydraulic pressure into a mechanical motion that strokes a series of serrated knife blades at the front of the header back and forth to cut a variety of crops.

4.9.1 Knife Drive Box

Knife drive box is driven by a hydraulic motor and converts rotational motion into the reciprocating motion of the knife.

Single-knife headers have a knife drive box (A) and motor (B) on the left side; double-knife headers have a knife drive box and motor at each end.

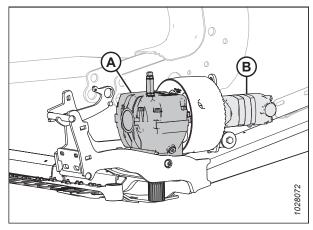


Figure 4.170: Left Side Knife Drive Box Shown – Right Side Similar

Checking Oil Level in Knife Drive Box

Single-knife headers have one knife drive box and double-knife headers have two knife drive boxes. To access the knife drive box(es), the endshield(s) must be fully opened.

DANGER

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

- 1. Lower the header fully.
- 2. Adjust the header angle so that the top of the knife drive box is level with the ground.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.

5. Remove oil level dipstick (A) and check the oil level. The oil level must be within range (B), that is, between the lines near the bottom of the dipstick.

NOTE:

Before checking the oil level, ensure the top of the knife drive box is horizontal and oil level dipstick (A) is screwed in.

- Reinstall oil level dipstick (A), and tighten to 23 Nm (17 lbf·ft).
- 7. If the header is configured with a dual knife system, repeat the oil level check on the opposite side of the header.

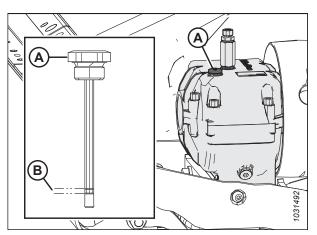


Figure 4.171: Knife Drive Box

Checking Mounting Bolts

Check the torque on the four knife drive box mounting bolts (A) and (B) after the first 10 hours of operation and every 100 hours thereafter.

1. Ensure all bolts are torqued to 343 Nm (253 lbf·ft). Torque side bolts (A) first, then torque bottom bolts (B).

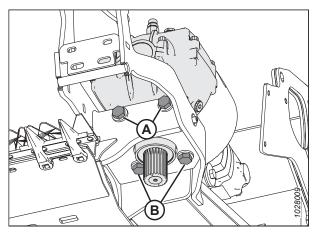


Figure 4.172: Knife Drive Box – View from Below

Changing Oil in Knife Drive Box

Change the knife drive box lubricant after the first 50 hours of operation and every 1000 hours (or 3 years) thereafter.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

- 1. Raise the header fully.
- 2. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.

- Place a container large enough to hold approximately 1.5 L (0.4 US gal) under the knife drive box to collect the oil.
- 4. Remove dipstick (A) and drain plug (C).
- 5. Allow the oil to drain from the knife drive box and into the container placed below it.
- 6. Reinstall drain plug (C).
- Add 1.5 L (0.4 US gal) of oil to the knife drive box. Refer to the inside back cover for recommended fluids and lubricants.

NOTE:

Check the oil level with the top of knife drive box horizontal and with oil level dipstick (A) screwed in.

- 8. Check that the oil level is within range (B).
- 9. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36.*

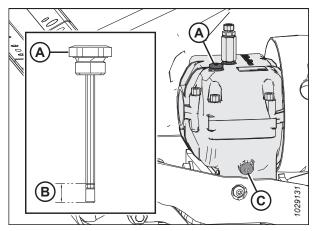


Figure 4.173: Knife Drive Box

4.10 Feed Deck

The feed deck is located on the FM200 Float Module. It consists of a motor and feed draper that conveys cut crop to the feed auger.

4.10.1 Replacing Feed Draper

Replace the feed draper if it is torn, cracked, or missing slats.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

- 1. Raise the header fully.
- 2. Raise the reel fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the header's safety props. For instructions, refer to the combine operator's manual.
- 5. Engage the reel safety props. For instructions, refer to Engaging Reel Safety Props, page 33.
- To access the draper: Remove five countersunk screws (A) and retainer (B). Remove one button head screw and washer (C). Flip mid-filler (D) over. Repeat this step on the opposite side of the feed deck.

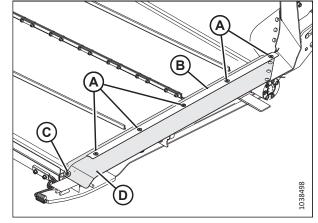


Figure 4.174: Draper Seal

Figure 4.175: Feed Draper Tensioner

 To release the draper tension, loosen jam nut (A) and turn bolt (B) counterclockwise. Repeat at the opposite side of the header.

- 8. Remove the following hardware (A) from idler roller casting (B) on both sides of the feed deck:
 - Socket head bolt, washer, and nut.
- 9. Move the idler roller back within the cutout in the frame to aid in draper replacement.

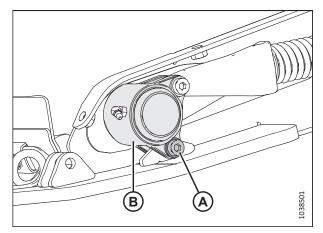


Figure 4.176: Idler Roller Bearing Housing

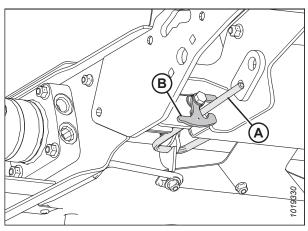


Figure 4.177: Feed Deck Pan Handle and Left Side Pan Handle Latch

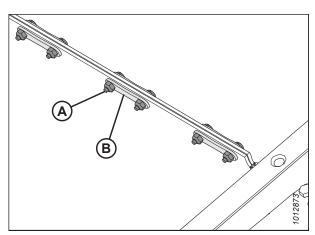
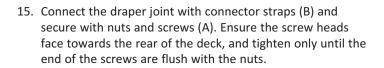


Figure 4.178: Draper Connector

 Unlatch feed deck pan handle (A) from handle latch supports (B) on both sides of the feed deck. This will drop the door down and allow access to the feed deck draper and rollers.

- 11. Remove nuts and screws (A), and remove draper connector straps (B).
- 12. Pull the draper from the deck.

- 13. Install the new draper over drive roller (A). Make sure the draper guides fit into drive roller grooves (B).
- 14. Pull draper along bottom of feed deck and over idler roller (C).



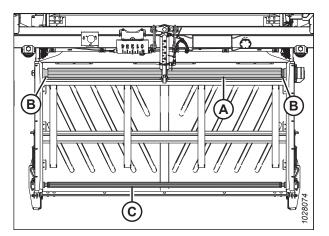


Figure 4.179: Float Module Feed Draper


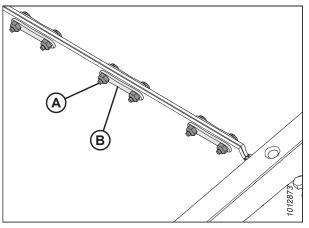


Figure 4.180: Draper Connector Straps

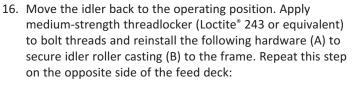

- Socket head bolt, washer, and nut.
- 17. Tighten bolt (A) to 12 Nm (9 lbf·ft).

IMPORTANT:

Do **NOT** fully tighten bolt (A).

18. Adjust the draper tension. For instructions, refer to 4.10.2 *Checking and Adjusting Feed Draper Tension, page 367.*

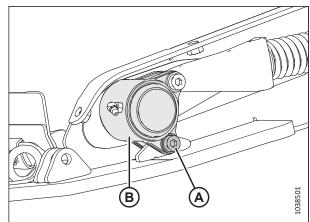


Figure 4.181: Idler Roller Bearing Housing

MAINTENANCE AND SERVICING

19. Close the feed deck by latching pan handle latch support (B) to feed deck pan handle (A) at both sides of the feed deck.

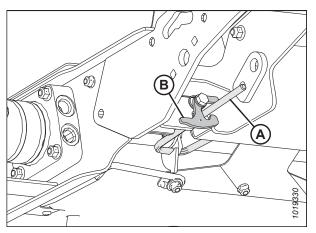


Figure 4.182: Feed Deck Pan Handle and Left Side Pan Handle Latch

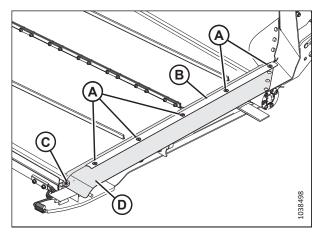


Figure 4.183: Draper Seal

4.10.2 Checking and Adjusting Feed Draper Tension

Proper tension is required for the feed draper not to slip or have tracking issues.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

NOTE:

Illustrations show the left side of the float module. The right side is opposite.

- 1. Raise the header fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the header safety props. Refer to the combine Operator's Manual.

Checking feed draper tension:

4. Ensure the draper guide (the rubber track on the underside of the draper) is properly engaged in the groove on the drive roller and the idler roller is between the guides.

 Reinstall mid-filler (D) with one button head screw and washer (C). Reinstall retainer (B) with five countersunk screws (A). Repeat this step on the opposite side of the feed deck.

5. Check the position of spring retainer disc (A). If the feed draper tracks properly and the spring retainers on both sides of the draper are correctly positioned, then no adjustment is necessary.

NOTE:

The starting position of spring retainer disc (A) is centered within the U shape on indicator (B); however, the position of the disc (A) will vary after draper tracking adjustment.

6. If adjustment is necessary, proceed to Step 7, page 368.

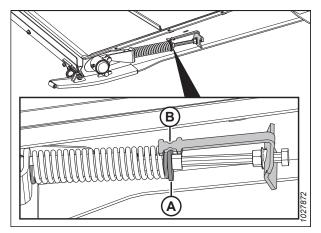


Figure 4.184: Feed Draper Tensioner

Adjusting feed draper tension:

 Adjust the draper tension by loosening jam nut (A) and turning bolt (B) clockwise to increase draper tension or counterclockwise to decrease draper tension. Retainer disc (C) should be in the middle of indicator (D).

IMPORTANT:

For small tension adjustments, you may need to only adjust one side of the draper. For larger tension adjustments and to avoid uneven draper tracking, you may need to adjust both sides of the draper equally.

- If the draper is not tracking properly, retainer disc (C) can be adjusted so that it is NOT in the middle of indicator (D), but within the following range:
 - Loosened to 3 mm (1/8 in.), retainer disc (C) will move towards the front of the deck from center of indicator (D).
 - Tightened to 6 mm (1/4 in.), retainer disc (C) will move towards the back of the deck from the center of indicator (D).
- 9. Tighten jam nut (A). Ensure flange nut (E) is tight against the indicator bracket.

4.10.3 Feed Draper Drive Roller

The feed draper drive roller is hydraulically driven to rotate the feed draper and convey crop toward the feeder house auger.

Removing Feed Draper Drive Roller

The feed draper drive roller needs to be removed when repairing or replacing it.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

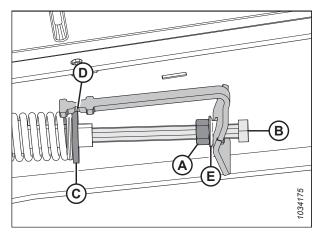


Figure 4.185: Feed Draper Tensioner – Left Side

MAINTENANCE AND SERVICING

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the reel fully.
- 3. Raise the header fully.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 6. Engage the header's safety props. For instructions, refer to the combine operator's manual.
- 7. To release the draper tension, loosen jam nut (A) and turn bolt (B) counterclockwise. Repeat at the opposite side of the header.

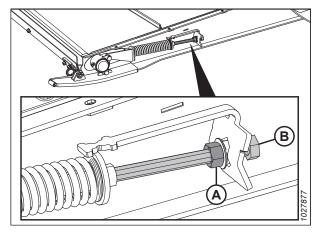


Figure 4.186: Feed Draper Tensioner

- 8. Remove nuts and screws (A), and remove draper connector straps (B).
- 9. Lift the sides of the draper to expose the rollers.

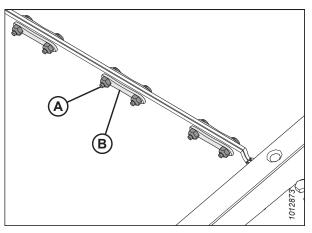


Figure 4.187: Draper Connector

10. On the right side of the deck, remove two nuts (A) and bolts from drive roller bearing housing (B).

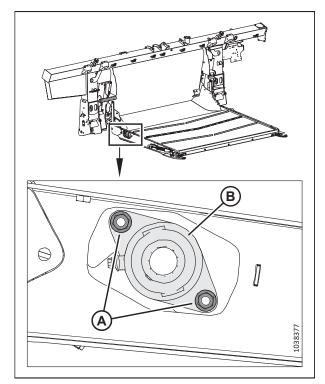


Figure 4.188: Drive Roller Bearing

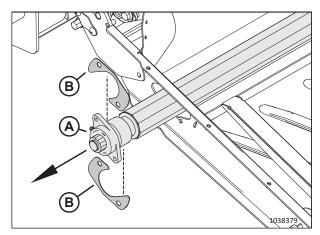


Figure 4.189: Drive Roller

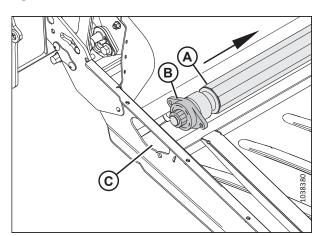


Figure 4.190: Drive Roller

- 11. Slide the drive roller with bearing assembly (A) to the right until the left end comes off of the motor spline.
- 12. Remove both covers (B).

- 13. Lift the left end out of the frame.
- 14. Slide assembly (A) to the left, guiding bearing housing (B) through frame opening (C).
- 15. Remove roller (A).

Installing Feed Draper Drive Roller

The feed draper drive roller needs to be installed after it has been repaired or replaced.

- 1. Apply grease to the motor spline.
- 2. Guide bearing end (A) of the drive roller through frame opening (B).

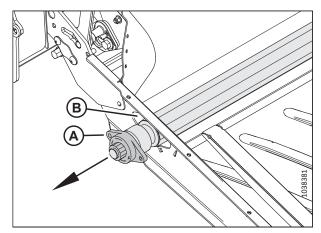


Figure 4.191: Drive Roller – Bearing End

3. Slide the left end of drive roller (A) onto spline of motor (B).

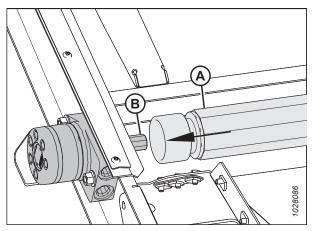


Figure 4.192: Motor

- 4. Install two bolts (A) into the feed deck.
- 5. Install both covers (B) onto the two bolts.

IMPORTANT:

Position the covers in the order shown.

- 6. Secure the drive roller bearing housing using two nuts (D).
- 7. Install the feed deck draper. For instructions, refer to 4.10.1 *Replacing Feed Draper, page 364*.
- 8. Tension the feed draper. For instructions, refer to *4.10.2 Checking and Adjusting Feed Draper Tension, page 367.*

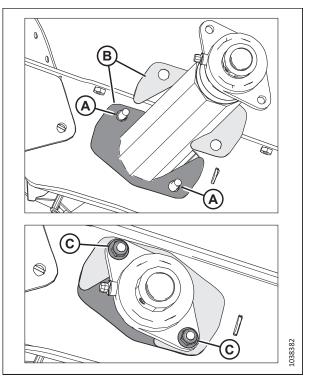


Figure 4.193: Drive Roller – Bearing End

Removing Feed Draper Drive Roller Bearing

The feed draper drive roller bearing helps the roller turn. The bearing needs to be removed when replacing it.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

- 1. Raise the reel fully.
- 2. Raise the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 5. Engage the header's safety props. For instructions, refer to the combine operator's manual.

 To release the draper tension, loosen jam nut (A) and turn bolt (B) counterclockwise. Repeat at the opposite side of the header.

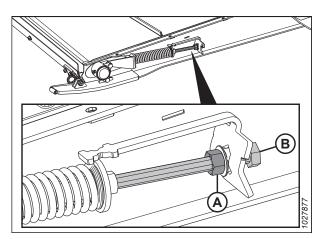


Figure 4.194: Feed Draper Tensioner

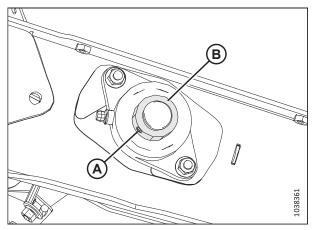


Figure 4.195: Feed Draper Drive Roller Bearing

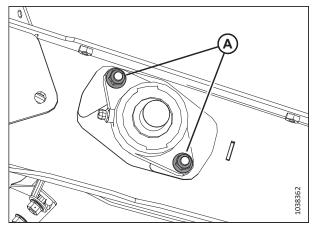


Figure 4.196: Feed Draper Drive Roller Bearing

- 7. Loosen set screw (A) on bearing lock (B).
- 8. Using a hammer and punch, tap bearing lock (B) in the direction opposite to the auger rotation to release the lock.

9. Remove two nuts (A).

10. Remove bearing housing (A).

NOTE:

If the bearing is seized on the shaft, it may be easier to remove the drive roller assembly. For instructions, refer to *Removing Feed Draper Drive Roller, page 368*.

11. Check both covers (B) for damage. If you need to replacement them, obtain kit MAC347553.

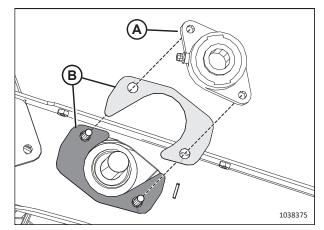


Figure 4.197: Feed Draper Drive Roller Bearing

Installing Feed Draper Drive Roller Bearing

The bearing is held in place with bolts and a lock collar.

- 1. Install two bolts (A) into the feed deck.
- 2. Install both covers (B) onto the two bolts.

IMPORTANT:

Position the covers in the order shown.

- 3. Install drive roller bearing housing (C) onto the shaft.
- 4. Secure the housing using two nuts (D).
- 5. Install bearing lock collar (E) onto the shaft.
- 6. Using a hammer and punch, tap the bearing lock in the direction of auger rotation to lock.
- 7. Tighten bearing lock set screw (F).
- 8. Tension the feed draper. For instructions, refer to *4.10.2 Checking and Adjusting Feed Draper Tension, page 367.*

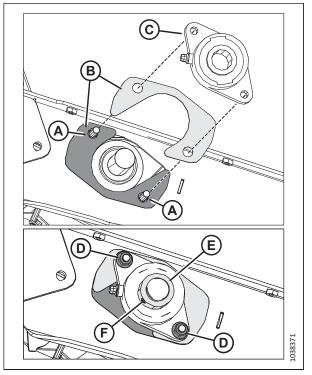


Figure 4.198: Feed Draper Drive Roller Bearing

4.10.4 Feed Draper Idler Roller

The feed draper idler roller is driven by the friction of the feed draper being turned by the drive roller. Like the drive roller, the idler roller helps the feed draper convey crop to the auger.

Removing Feed Draper Idler Roller

The feed draper idler roller needs to be removed when being repaired or replaced.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

- 1. Raise the reel fully.
- 2. Raise the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 5. Engage the header's safety props. For instructions, refer to the combine operator's manual.
- To release the draper tension, loosen jam nut (A) and turn bolt (B) counterclockwise. Repeat at the opposite side of the header.

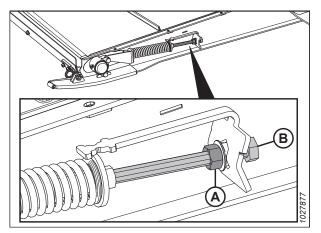


Figure 4.199: Feed Draper Tensioner

- 7. Remove nuts and screws (A), and remove draper connector straps (B).
- 8. Separate the draper.
- 9. Lower the front of the feed deck.

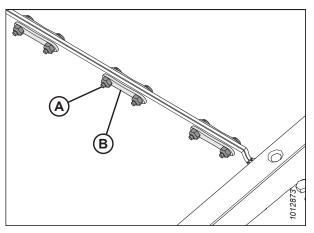


Figure 4.200: Draper Connector

10. Remove dust cap (A) and nut (B) from bearing housing (C).

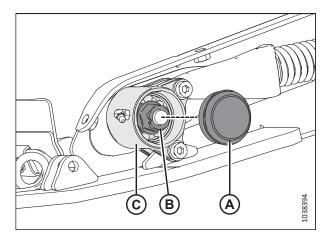


Figure 4.201: Idler Roller Bearing Housing

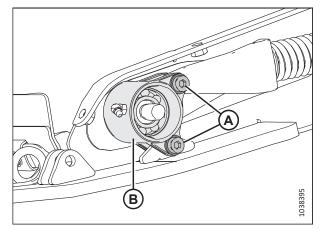


Figure 4.202: Idler Roller Bearing Housing

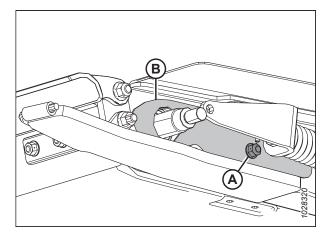


Figure 4.203: Idler Roller Cover

- 11. Remove the following hardware from location (A) that secures the bearing housing to the deck skid and tensioner:
 - Socket head bolt, washer, and nut.
- 12. Remove bearing housing (B) from the idler roller.
- 13. Repeat Step *10, page 376* to Step *12, page 376* on the opposite side of the feed deck.

14. On one side of the deck frame, remove nut (A) and cover (B).

15. Slide idler roller (A) out through the cutout in the deck frame.

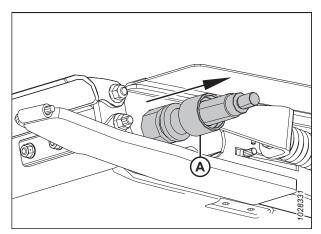


Figure 4.204: Idler Roller

Installing Feed Draper Idler Roller

The feed draper idler roller needs to be installed after it has been repaired or replaced.

- 1. Slide cover (A) over one end of the idler roller.
- 2. Brush idler roller shaft (B) with oil.
- 3. Carefully rotate bearing assembly (C) onto the shaft by hand to prevent seal damage.

IMPORTANT:

Ensure the bearing assembly is square to the shaft to prevent seal damage during installation.

4. After the bearing and both seals are seated around the shaft, install nut (A) and torque it to 81 Nm (60 lbf·ft).

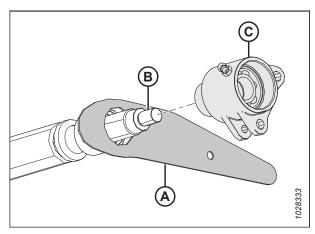


Figure 4.205: Idler Roller

decessor

Figure 4.206: Idler Roller

5. Slide idler roller (A) through the cutout in the deck frame.

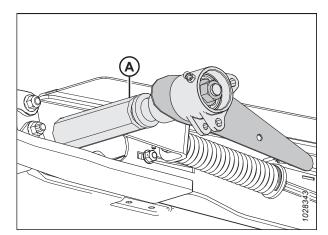


Figure 4.207: Feed Deck – Left Side

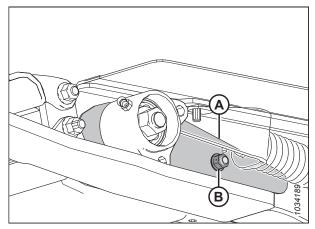


Figure 4.208: Idler Cover – Left Side

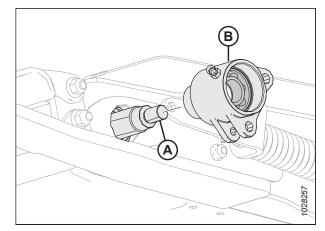


Figure 4.209: Feed Deck – Left Side

- 6. Install the bolt from inside of the feed deck to secure idler cover (B).
- 7. Install nut (B). Do **NOT** overtighten the nut. It should be snug, as it holds the idler cover in place and it must move with the idler roller.

- 8. Slide the idler roller out through the cutout on the opposite side of the deck frame.
- 9. Brush idler roller shaft (A) with oil.
- 10. Carefully rotate bearing assembly (B) onto shaft (A) by hand to prevent seal damage.

IMPORTANT:

Ensure the bearing assembly is square to the shaft to prevent seal damage during installation.

- 11. After the bearing and both seals are seated around the shaft, install nut (A) and torque it to 81 Nm (60 lbf·ft).
- 12. Repeat Step 1, page 377 to Step 11, page 379 on the opposite side.

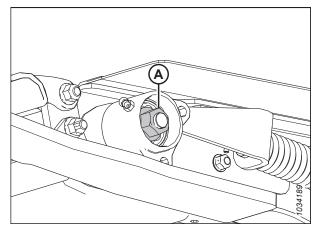


Figure 4.210: Feed Deck – Left Side

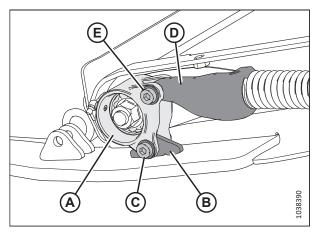


Figure 4.211: Idler Roller Bearing – Left Side

- 13. Rotate idler roller housing (A) until the holes in the lower tabs aligns with the hole in welded tab (B).
- 14. Apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to the bolt threads, and then insert the following hardware at location (C).
 - Socket head bolt, washer, and nut.
- 15. Align the hole in cast support (D) with the holes in the upper tab on idler roller housing (A).
- 16. Apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to the bolt threads, and then insert the following hardware at location (E).
 - Socket head bolt, washer, and nut.
- 17. Tighten bolts (C) and (E) to 12 Nm (9 lbf·ft).

IMPORTANT:

Do **NOT** fully tighten bolts (C) and (E).

- 18. Repeat Step *13, page 379* to Step *17, page 379* on the opposite side.
- 19. Fill the bearing cavity with grease, and install dust cap (A) on both ends of the idler roller. Repeat this step on the opposite side.
- 20. Check that the grease fittings on both sides are working. Grease the feed draper idler roller bearing until grease comes out of the seal. Wipe any excess grease from area after greasing.

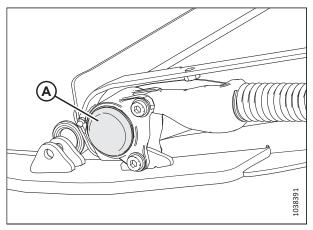


Figure 4.212: Feed Deck – Left Side

- 21. Close the feed draper and secure it with connector straps (B), screws (A), and nuts.
- 22. Tension the feed draper. For instructions, refer to *4.10.2 Checking and Adjusting Feed Draper Tension, page 367.*

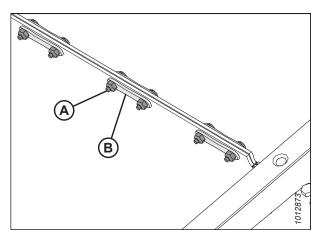


Figure 4.213: Draper Connector

Replacing Feed Draper Idler Roller Bearing

The feed draper idler roller bearing helps the roller turn. The bearing needs to be removed when replacing it.

NOTE:

Procedure is the same for both sides. Left side is shown.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

- 1. Raise the reel fully.
- 2. Raise the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to Engaging Reel Safety Props, page 33.
- 5. Engage the header's safety props. For instructions, refer to the combine operator's manual.
- 6. To release the draper tension, loosen jam nut (A) and turn bolt (B) counterclockwise. Repeat at the opposite side of the header.

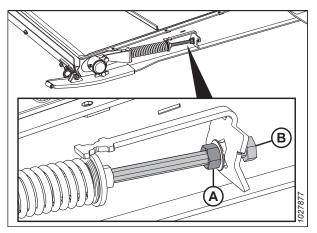


Figure 4.214: Feed Draper Tensioner

 Unlatch feed deck pan handle (A) from handle latch supports (B) on both sides of the feed deck. This will drop the door down and allow access to the feed deck draper and rollers.

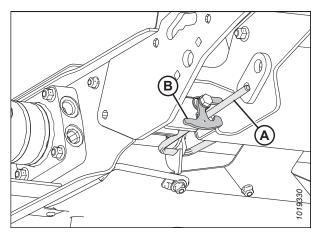


Figure 4.215: Feed Deck Pan Handle and Left Side Pan Handle Latch

Figure 4.216: Idler Roller Bearing – Left Side

- 8. Remove the following hardware from location (A) that secures the bearing housing to the deck skid and tensioner:
 - Socket head bolt, washer, and nut.
- 9. Remove dust cap (B).

10. Remove nut (A), and remove bearing housing (B) from the deck.

NOTE:


If the bearing is seized on the shaft, it may be easier to remove the idler roller assembly. For instructions, refer to *Removing Feed Draper Idler Roller, page 375*.

- 11. Secure housing (D), and remove internal retaining ring (A), bearing (B), and two seals (C).
- 12. Apply oil to the bore before assembling the parts.
- 13. Install seals (C) into housing (D).

NOTE:

Ensure the flat side of the seal is facing inward.

- 14. Pack bearing (B) with grease and install as shown.
- 15. Install retaining ring (A).

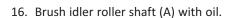

17. Carefully rotate bearing assembly (B) onto shaft (A) by hand to prevent seal damage.

IMPORTANT:

Ensure the bearing assembly is square to the shaft to prevent seal damage during installation.

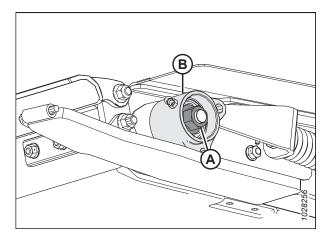


Figure 4.217: Idler Roller Bearing – Left Side

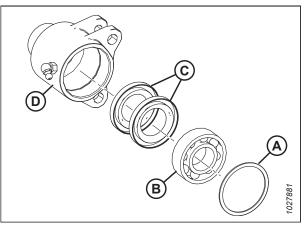


Figure 4.218: Bearing Assembly

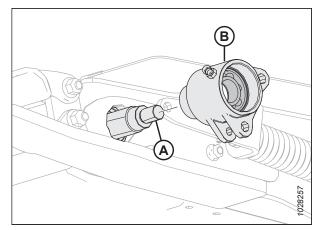


Figure 4.219: Idler Roller Bearing – Left Side

 After the bearing and both seals are seated around the shaft, install nut (A) and torque it to 81 Nm (60 lbf·ft).

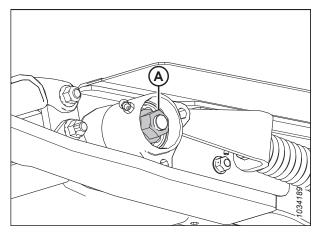


Figure 4.220: Idler Roller Bearing – Left Side

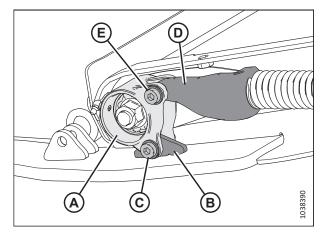


Figure 4.221: Idler Roller Bearing – Left Side

- 19. Rotate idler roller housing (A) until the holes in the lower tabs aligns with the hole in welded tab (B).
- 20. Apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to the bolt threads, and then insert the following hardware at location (C).
 - Socket head bolt, washer, and nut.
- 21. Align the hole in cast support (D) with the holes in the upper tab on idler roller housing (A).
- 22. Apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to the bolt threads, and then insert the following hardware at location (E).
 - Socket head bolt, washer, and nut.
- 23. Tighten bolts (C) and (E) to 12 Nm (9 lbf·ft).

IMPORTANT:

Do **NOT** fully tighten bolts (C) and (E).

- 24. Repeat Step *8, page 381* to Step *23, page 383* on the opposite side.
- 25. Fill the bearing cavity with grease, and install dust cap (A) on both ends of the idler roller.
- 26. Check that the grease fitting is working.
- 27. Repeat Step *25, page 383* to Step *26, page 383* on the opposite side.
- 28. Tension the feed draper. For instructions, refer to 4.10.2 *Checking and Adjusting Feed Draper Tension, page 367.*

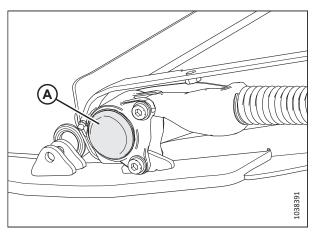


Figure 4.222: Feed Deck – Left Side

4.10.5 Lowering Feed Deck Pan

The feed deck pan protects the feed draper from items on the ground. It can be opened and closed to access the feed draper.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

- 1. Raise the header fully.
- 2. Engage the header safety props. Refer to the combine operator's manual for instructions.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. On the underside of the feed deck, rotate latch (A) to unlock handle (B). Repeat on the opposite end of the feed deck.

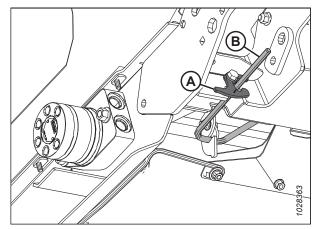


Figure 4.223: Underside of Feed Deck

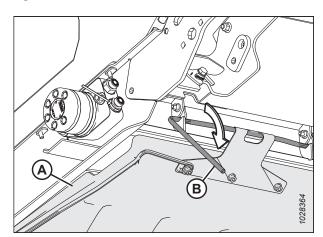


Figure 4.224: Underside of Feed Deck

5. Hold pan (A) and rotate handle (B) downward to release the pan.

6. Lower feed deck pan (A).

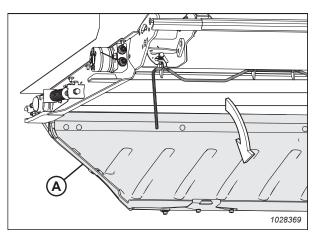


Figure 4.225: Feed Deck Pan

4.10.6 Raising Feed Deck Pan

The feed deck pan protects the feed draper from items on the ground. It can be opened and closed to access the feed draper.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

1. Raise feed deck pan (A).

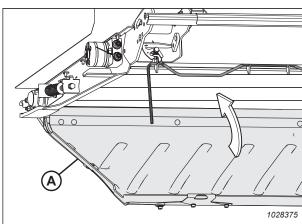


Figure 4.226: Feed Deck Pan

2. Engage lock handle (A) in three feed deck pan hooks (B).

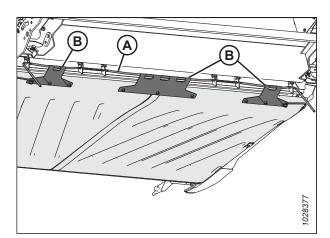


Figure 4.227: Underside of Feed Deck Pan

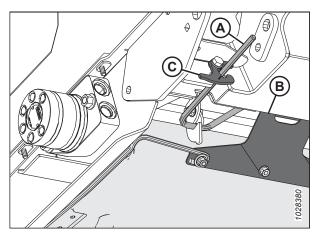


Figure 4.228: Underside of Feed Deck Pan

3. Rotate handles (A) upwards, bringing the feed deck pan into the locked position.

NOTE:

Ensure that all three deck pan hooks (B) are secured on the lock handle.

4. Hold the feed deck pan in place, and rotate latch (C) to lock handle (A).

4.10.7 Checking Link Holder Hooks

Check the left and right link holder hooks **DAILY** to ensure they are not cracked or broken.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

- 1. Raise the header fully.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the header safety props. Refer to the combine operator's manual for instructions.

4. Before operation, ensure both link holder hooks (A) are engaged on the float module under the feed deck as shown.

• Undamaged link holder hook (A)

• Stretched link holder (not shown)

٠

Damaged/broken link holder hook (B)

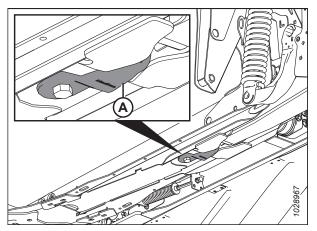


Figure 4.229: Feed Deck – View from Below

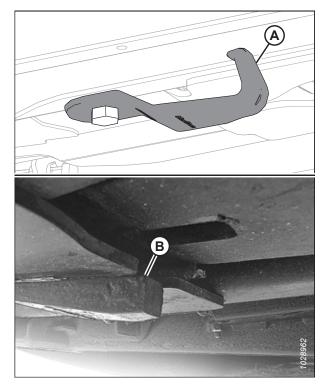


Figure 4.230: Link Holder Hooks

NOTE:

To move hook (A) to the storage position, loosen bolt (B) and rotate the hook 90° .

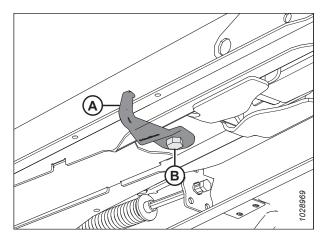


Figure 4.231: Link Holder Hook in Storage Position

4.11 Stripper Bars

Stripper bars are installed into the float module opening to improve feeding in crops such as rice. They may need to be removed, depending on the desired float module configuration.

4.11.1 Removing Stripper Bars

The stripper bars are secured to the float module frame with four bolts and nuts.

- 1. Detach the header from the combine. For instructions, refer to 3.6 Header Attachment/Detachment, page 52.
- 2. Remove four bolts and nuts (A) securing stripper bar (B) to the float module frame, and remove the stripper bar.

NOTE:

There may only be two upper bolts on stripper bar (B).

3. Repeat at the opposite side of the header.

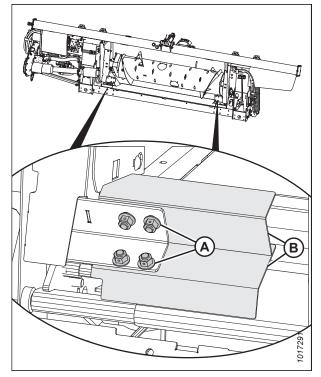


Figure 4.232: Stripper Bar

4.11.2 Installing Stripper Bars

The stripper bars are installed in the lower corners of the float module opening.

1. Detach the header from the combine. For instructions, refer to 3.6 Header Attachment/Detachment, page 52.

2. Position stripper bar (B) as shown so the notch is at the corner of the frame.

NOTE:

It is ok to only install the upper two bolts on the stripper bars, if the lower two bolts are too difficult to install.

- 3. Secure stripper bar (B) to the float module with four bolts and nuts (A). Ensure the nuts are facing the combine.
- 4. Repeat at the opposite side of the header.

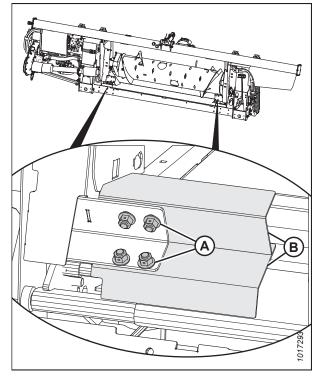


Figure 4.233: Stripper Bar

4.12 Header Side Drapers

There are two header side drapers. They convey cut crop to the float module feed draper and auger. Replace the drapers if they are torn, cracked, or missing slats.

4.12.1 Removing Side Drapers

Replace the drapers if they are torn, cracked, or missing slats.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the reel fully.
- 3. Raise the header fully.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Engage the header safety props. Refer to the combine operator's manual for instructions.
- 6. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.

Ensure that all bystanders have cleared the area.

- 7. Start the engine.
- 8. Move the draper until the draper joint is in the work area.
- 9. Shut down the engine, and remove the key from the ignition.
- 10. Release the tension on the draper. For instructions, refer to 4.12.4 Adjusting Side Draper Tension, page 395.

- 11. Remove nuts and screws (A), and tube connectors (B) from the draper joint.
- 12. Remove screws (C), bridge connector (D), and nuts from the front end of the draper joint.
- 13. Pull the draper from the deck.

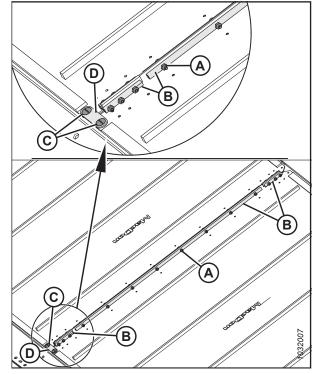


Figure 4.234: Draper Connectors

4.12.2 Installing Side Drapers

Side drapers are used to bring cut crop to the center of the header. To ensure they are installed correctly, follow the recommended installation procedure provided here.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- 2. Raise the reel fully.
- 3. Raise the header fully.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Engage the header safety props. Refer to the combine operator's manual for instructions.
- 6. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 7. Apply talc, baby powder, or talc/graphite lubricant mix to the underside of the draper guides and to the draper surface that forms the seal with the cutterbar.
- 8. Insert the draper into the deck at the inboard end at the drive roller. Pull the draper into the deck while feeding it at the end.
- 9. Feed in the draper until it can be wrapped around the drive roller.
- 10. Insert the opposite end of the draper into the deck over the rollers. Pull the draper fully into the deck.

 Attach the ends of the draper with tube connectors (B), screws (A) (with the heads facing the center opening), and nuts.

NOTE:

The two short tube connectors are attached at the front and rear of the draper.

12. Install bridge connector (D) using screws (C) and the nuts at the front end of the draper joint.

NOTE:

Hold screws (C) at a 90° angle to bridge connector (D) while tightening the nuts. Allowing the screws to rotate while tightening will cause the bridge connector to bow up.

- 13. Torque the nuts to 9.5 Nm (7 lbf·ft).
- 14. Adjust the draper tension. For instructions, refer to 4.12.4 *Adjusting Side Draper Tension, page 395*.
- 15. Operate the drapers with the engine at idle so the talc or talc/graphite lubricant makes contact and adheres to the draper seal surfaces.

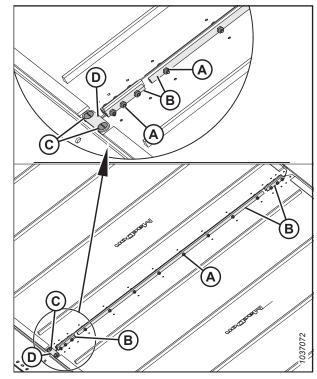


Figure 4.235: Draper Connectors

4.12.3 Adjusting Deck Height

A properly adjusted deck height will prevent material from entering into the side drapers and stalling them.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the safety props before going under the header for any reason.

IMPORTANT:

New factory-installed drapers are pressure and heat checked at the factory. The gap between draper and cutterbar is set to 1-3 mm (0.04-0.12 in.).

- Lower the header onto four blocks (A) (305–356 mm [12–14 in.]). One block at each end and one block at each hinge point.
- 2. Shut down the engine, and remove the key from the ignition.

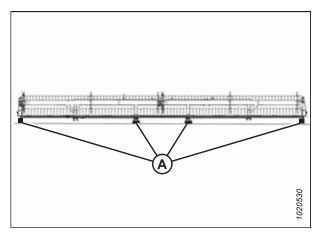


Figure 4.236: Header on Blocks

NOTE:

Take measurements at deck supports (A) with the header in the working position. Depending on the header size, there are between two and four supports per deck.

- 3. Check that clearance (A) between draper (B) and metal seal (C) is 0–2 mm (0.004–0.08 in.).
- 4. Loosen the draper tension. For instructions, refer to *4.12.4 Adjusting Side Draper Tension, page 395*.

5. Lift front edge of draper (A) past cutterbar (B) to expose the

Measure and note the thickness of the draper belt.

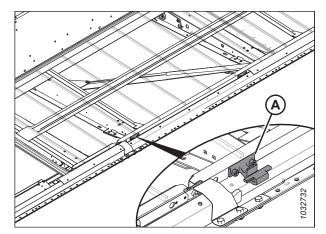


Figure 4.237: Draper Deck Supports

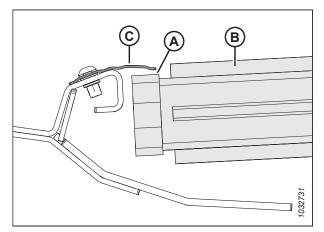


Figure 4.238: Draper Seal

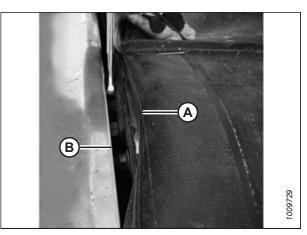


Figure 4.239: Deck Support

deck support.

6.


NOTE:

The deck is shown with the draper removed.

- 7. Loosen two lock nuts (A) on deck support (B) one half-turn **ONLY**.
- 8. Tap deck (C) with a hammer and block of wood to lower the deck relative to the deck supports. Tap deck support (B) using a punch to raise the deck relative to the deck supports.

Table 4.1 Number of Deck Supports (B)

Model	Quantity
FD225	6
FD230	8
FD235, FD240, FD241	10
FD250	14

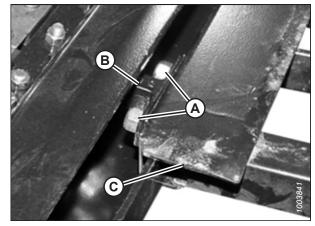

A]

В

1032719

Figure 4.240: Deck Support

C

- 9. Use a gauge that is the same thickness as the draper belt, plus 1 mm (0.04 in.). Slide the thickness gauge along deck (A) under the metal seal (C) in order to properly set the gap.
- 10. To create a seal, adjust deck (A) so that clearance (B) between metal seal (C) and deck is the same thickness as the draper belt plus 1 mm (0.04 in.).

NOTE:

When checking clearance at either roller, measure from the roller tube, NOT the deck.

- 11. Tighten deck support hardware (D).
- 12. Recheck gap (B) with thickness gauge. For instructions, refer to Step 9, page 395.

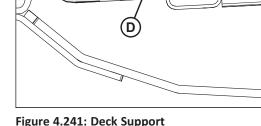


Figure 4.241: Deck Support

4.12.4 **Adjusting Side Draper Tension**

The drapers are tensioned at the factory and should **NOT** require adjustment. If adjustment is required, draper tension should be just enough to prevent slipping and to keep the draper from sagging below the cutterbar.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine, remove the key, and engage the vehicle's safety props before going under the machine for any reason.

1. Ensure tensioner indicator (A) covers the inboard half of the window.

Ensure that all bystanders have cleared the area.

- 2. Start the engine. For instructions, refer to the combine operator's manual.
- 3. Raise the header fully.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Engage the header's safety props. For instructions, refer to the combine operator's manual.

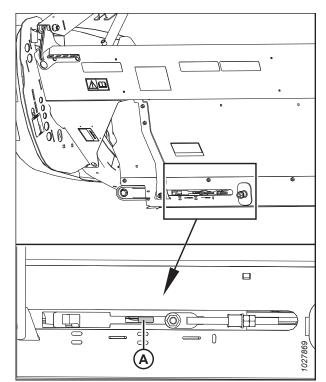


Figure 4.242: Checking Tension Adjuster – Left Side Shown, Right Side Opposite

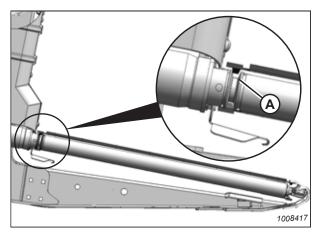


Figure 4.243: Drive Roller

6. Check that the draper guide (the rubber track on the underside of the draper) is properly engaged in groove (A) of the drive roller.

7. Check that idler roller (A) is between guides (B).

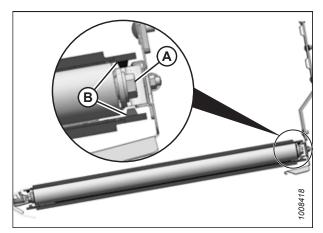


Figure 4.244: Idler Roller

Figure 4.245: Adjusting Tensioner – Left Side Shown, Right Side Opposite

IMPORTANT:

Do **NOT** adjust nut (C). This nut is used for draper alignment only.

 Turn adjuster bolt (A) clockwise to tighten, and counterclockwise to loosen. Tensioner indicator (B) will move inboard to show that the draper is tightening. Tighten the adjuster bolt until the tensioner indicator covers the inboard half of the window.

IMPORTANT:

To avoid premature failure of the draper, draper rollers, and/or tightener components, do **NOT** operate the header with the tensioner indicator not visible.

4.12.5 Adjusting Side Draper Tracking

The side draper tracking is adjusted by aligning the drive and idler draper rollers.

Draper tracking is set at the factory and will only need to be adjusted if the draper tracking is incorrect.

NOTE:

The left draper deck is shown in the illustration. The right deck is opposite.

NOTE:

Some parts were removed from the illustration for clarity.

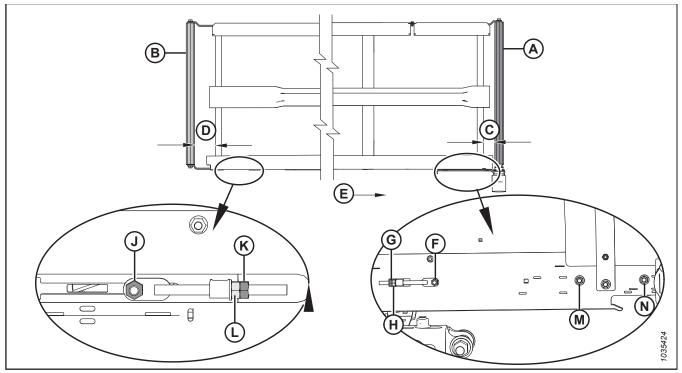


Figure 4.246: Draper Tracking Adjustments

- A Drive Roller
- D Idler Roller Adjust
- G Jam Nut for Drive Roller
- K Jam Nut for Idler Roller N - Nut on Drive Roller Side

B - Idler Roller E - Draper Direction

H - Adjuster Nut for Drive Roller

- L Adjuster Nut for Idler Roller
- C Drive Roller Adjust F - Nut on Drive Roller Side J - Nut on Idler Roller Side
- M Nut on Drive Roller Side
- 1. To determine which roller requires adjustment and which adjustments are necessary, refer to the following table:

Table 4.2 Draper Tracking

Tracking	Location	Adjustment	Method
Toward backsheet	Drive roller	Increase C	Tighten adjuster nut (H)
Toward Cutterbar	Drive roller	Decrease C	Loosen adjuster nut (H)
Toward backsheet	Idler roller	Increase D	Tighten adjuster nut (L)
Toward Cutterbar	ldler roller	Decrease D	Loosen adjuster nut (L)

- 2. Adjust drive roller (A) to change **C** (refer to Table *4.2, page 398*) as follows:
 - a. Loosen nuts (F), (M), and (N), and jam nut (G).
 - b. Turn adjuster nut (H).
 - c. Tighten nuts (F), (M), and (N), and jam nut (G).
- 3. Adjust idler roller (B) to change **D** (refer to Table 4.2, page 398) as follows:
 - a. Loosen nut (J) and jam nut (K).
 - b. Turn adjuster nut (L).

NOTE:

If the draper does not track at the idler roller end after the idler roller adjustment, the drive roller is likely not square to the deck. Adjust the drive roller, and then readjust the idler roller.

c. Tighten nut (J) and jam nut (K).

4.12.6 Inspecting Draper Roller Bearing

The draper rollers have non-greaseable bearings; however, the external seal should be checked every 200 hours (more frequently in sandy conditions) to achieve maximum bearing life.

Using an infrared thermometer, check for bad draper roller bearings as follows:

- Engage the header and run the drapers for approximately 3 minutes.
- Check the temperature of the draper roller bearings at each of roller arms (A), (B), and (C) on each deck. Ensure the temperature does not exceed 44°C (80°F) above the ambient temperature.

Replace roller bearings that exceed maximum recommended temperature. For instructions, refer to:

- 4.12.8 Replacing Side Draper Deck Idler Roller Bearing, page 401
- 4.12.11 Replacing Side Draper Drive Roller Bearing, page 406

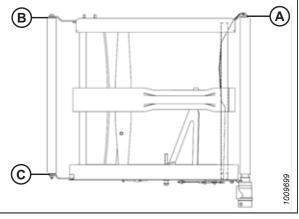


Figure 4.247: Roller Arms

4.12.7 Removing Side Draper Deck Idler Roller

The side draper deck has a roller on either end of the deck. One is the idler roller and one is the drive roller.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Ensure that all bystanders have cleared the area.

1. Start the engine and engage the header until the side draper connector is accessible (preferably close to the outboard end of the deck).

- Lower the header onto four blocks (A) (305–356 mm [12–14 in.]). One block at each end and one block at each hinge point.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 5. Engage the header's safety props. For instructions, refer to the combine operator's manual.
- Loosen the draper by turning adjuster bolt (A) counterclockwise until the adjuster bolt runs out of adjustment and hits a hard stop.

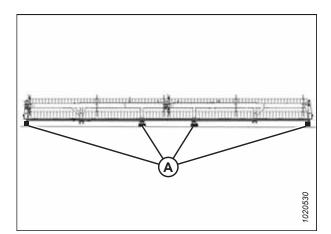


Figure 4.248: Header on Blocks

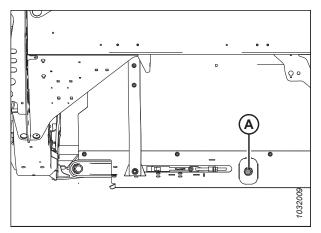


Figure 4.249: Tensioner – Left Side Shown

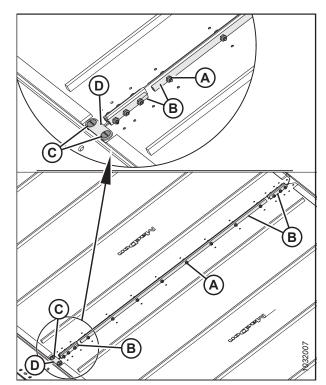


Figure 4.250: Draper Connectors

- 7. Remove screws (C), bridge connector (D), and nuts from the front end of the draper joint.
- 8. Remove nuts and screws (A) and tube connectors (B) from the draper joint.
- 9. Pull the draper off the idler roller.

- 10. Remove bolt (A) and washer from the idler roller at the back of the header deck.
- 11. Remove bolt (B) and washer from the idler roller at the front of the header deck.
- 12. Spread roller arms (C) and (D), and remove the idler roller.

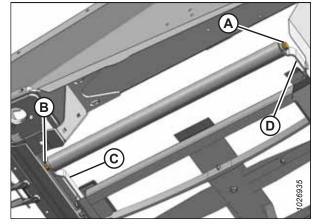


Figure 4.251: Idler Roller

4.12.8 Replacing Side Draper Deck Idler Roller Bearing

The side draper deck idlers rollers have bearings installed to allow the roller to turn.

- 1. Remove draper deck idler roller. For instructions, refer to 4.12.7 Removing Side Draper Deck Idler Roller, page 399.
- 2. Clamp idler roller (A) in a vise with cloth wrapped around the roller to prevent damage to the roller.
- 3. Use a slide hammer to remove bearing assembly (B) and seal (C) from the roller.

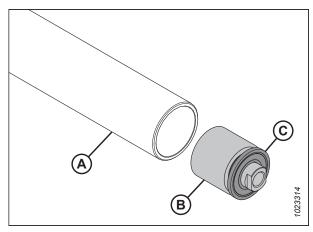


Figure 4.252: Idler Roller Bearing and Seal

IMPORTANT:

When installing the new bearing, do **NOT** place the end of the roller directly onto the ground. Bearing assembly (A) protrudes past roller tube (B), and placing the end on the ground will push the bearing farther into the tube.

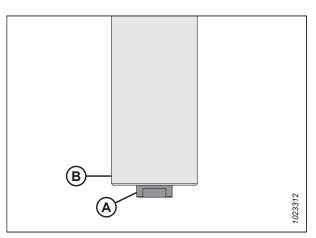


Figure 4.253: Idler Roller

- 4. Cut a relief (A) into a block of wood.
- 5. Place the end of idler roller (B) onto the block, with the protruding bearing assembly inside relief (A).

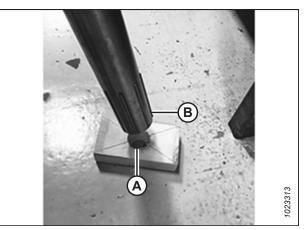


Figure 4.254: Idler Roller

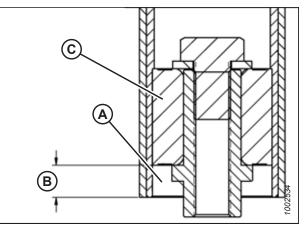


Figure 4.255: Idler Roller Bearing

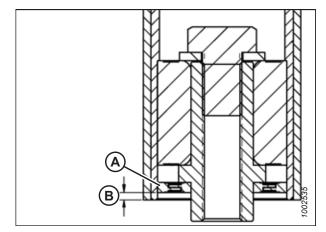


Figure 4.256: Idler Roller Bearing

Install new bearing assembly (C) by pressing the outer race of the bearing into the tube until it is 14–15 mm (9/16–19/32 in.) (B) from the outside edge of the tube.

NOTE:

Before installing new seal, fill area (A) with approximately 8 pumps of grease.

 Install new seal (A) by pressing on the inner and outer race of the seal until it is 3–4 mm (1/8–3/16 in.) (B) from the outside edge of the tube.

NOTE:

The seal can be oriented in either direction.

8. Reinstall the idler roller. For instructions, refer to *4.12.9 Installing Side Draper Deck Idler Roller, page 403.*

4.12.9 Installing Side Draper Deck Idler Roller

The side draper deck has a roller on either end of the deck. One is the idler roller and one is the drive roller.

1. Install idler roller (A) between idler arms (B), and secure with two bolts (C) and washers. Tighten the bolts to 95 Nm (70 lbf·ft).

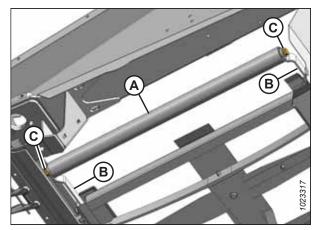


Figure 4.257: Idler Roller

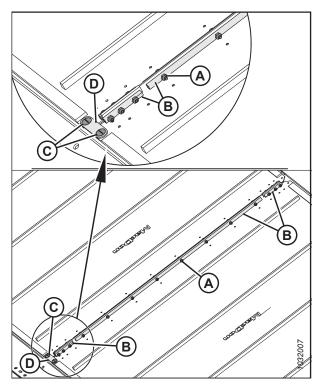


Figure 4.258: Draper Connector

 Attach the ends of draper with tube connectors (B), screws (A) (with the heads facing the center opening), and nuts.

NOTE:

The two short tube connectors are attached at the front and rear of the draper.

3. Install bridge connector (D) using screws (C) and the nuts at the front end of the draper joint.

- 4. Tighten the draper by turning adjuster bolt (A) clockwise. For instructions, refer to 4.12.4 Adjusting Side Draper Tension, page 395.
- 5. Disengage the reel and header safety props.

Check to be sure all bystanders have cleared the area.

- 6. Start the engine and lower the header and the reel.
- 7. Run machine to verify that draper tracks correctly. Refer to *4.12.4 Adjusting Side Draper Tension, page 395* if additional adjustment is necessary.

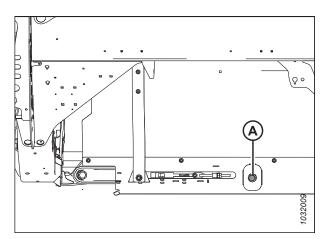


Figure 4.259: Draper Tensioner

4.12.10 Removing Side Draper Drive Roller

The side draper deck has a roller on either end of the deck. One is the idler roller and one is the drive roller.

DANGER

To prevent injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key from the ignition before leaving the operator's seat or making adjustments to the machine. Never work on or beneath an unsupported header. If the header is fully raised, always engage the safety props. If the header is off of the ground but not raised to its full height, place blocks under the header.

Ensure that all bystanders have cleared the area.

- 1. If the draper connector is not visible, engage the header until the connector is accessible (preferably close to the outboard end of the deck).
- 2. Start the engine.
- 3. Raise the header fully.
- 4. Raise the reel fully.
- 5. Shut down the engine, and remove the key from the ignition.
- 6. Engage the reel safety props. For instructions, refer to the header operator's manual.
- 7. Engage the header safety props. Refer to the combine operator's manual for instructions.

 Loosen the draper by turning adjuster bolt (A) counterclockwise until the adjuster bolt runs out of adjustment and hits a hard stop.

IMPORTANT:

Do **NOT** adjust nut (B). This nut is used for draper alignment only.

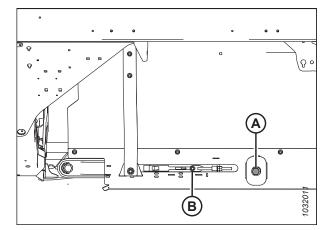


Figure 4.260: Draper Tensioner

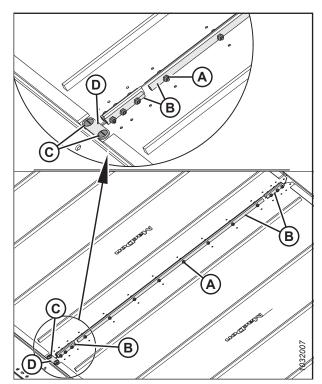


Figure 4.261: Draper Connectors

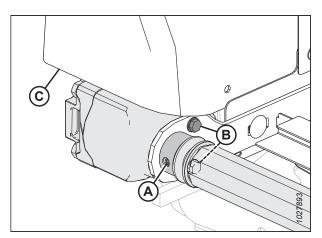


Figure 4.262: Drive Roller

- 9. Remove nuts and screws (A), and tube connectors (B) from the draper joint.
- 10. Remove screws (C), bridge connector (D), and nuts from the front end of the draper joint.
- 11. Pull the draper off the drive roller.

12. Align the set screws with the hole (A) in the guard. Remove the two set screws holding the motor onto the drive roller.

NOTE:

The set screws are 1/4 turn apart.

13. Loosen two bolts (B) securing the motor to the drive roller arm.

NOTE:

It may be necessary to remove plastic shield (C) to gain access to the top bolt.

NOTE:

It may be necessary to pry between the roller and bracket (A) to remove the roller from shaft.

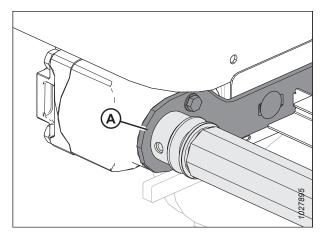


Figure 4.263: Drive Roller

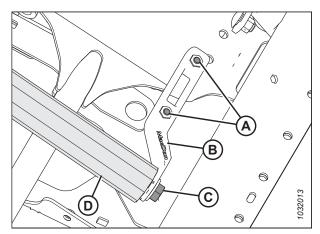


Figure 4.264: Drive Roller

15. Remove bolt (C) and the washer securing the opposite end of the drive roller to support arm (B).

14. Loosen two bolts (A) securing support arm (B).

16. Remove drive roller (D).

4.12.11 Replacing Side Draper Drive Roller Bearing

You will need a slide hammer to remove and replace the bearing on a drive roller.

1. Remove the draper idler roller assembly. For instructions, refer to *4.12.10 Removing Side Draper Drive Roller, page* 404.

- 2. Remove bearing assembly (A) and seal (B) from roller tube (C) as follows:
 - a. Attach slide hammer (D) to threaded shaft (E) in the bearing assembly.
 - b. Tap out bearing assembly (A) and seal (B).
- 3. Clean the inside of roller tube (C), check the tube for signs of wear or damage, and replace if necessary.

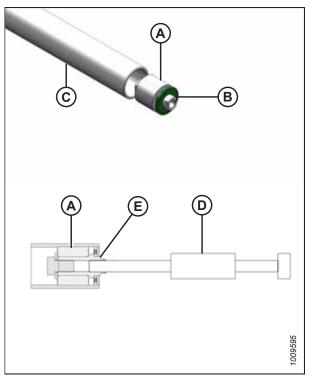


Figure 4.265: Roller Bearing

- Install new bearing assembly (A) by pressing the outer race of the bearing into the tube until it is 14–15 mm (9/16–19/32 in.) (B) from the outside edge of the tube.
- 5. Apply grease in front of bearing assembly (A). Refer to the inside back cover of this book for grease specifications.
- 6. Install new seal (C) at the roller opening, and install a flat washer (1.0 in. I.D. x 2.0 in. O.D.) on the seal.
- Tap seal (C) into the roller opening with a suitably sized socket. Tap the washer and bearing assembly (A) until the seal is 3–4 mm (1/8–3/16 in.) (D) from the outside edge of the tube.

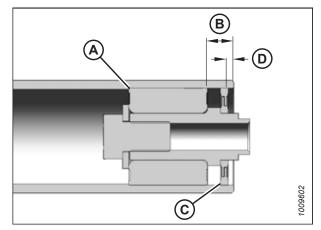


Figure 4.266: Roller Bearing

4.12.12 Installing Side Draper Drive Roller

The side draper deck has a roller on either end of the deck. One is the idler roller and one is the drive roller.

- 1. Position drive roller (A) between the roller support arms.
- 2. Secure the drive roller with washer and bolt (B).
- 3. Tighten bolts (C) on the support arm.
- 4. Torque bolt (B) to 95 Nm (70 lbf·ft).
- 5. Grease the motor shaft and insert it into the end of drive roller (A).

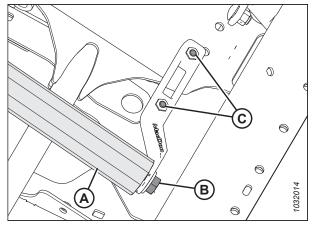


Figure 4.267: Drive Roller

- 6. Secure the motor to the roller support with two bolts (B). Torque the bolts to 27 Nm (20 lbf·ft).
- 7. Ensure the motor is all the way into the roller, and straight key is still in place when fully inserted.
- 8. Tighten the two set screws (not shown) through access hole (A).

NOTE:

Tighten any loosened bolts and reinstall plastic shield (C), if previously removed.

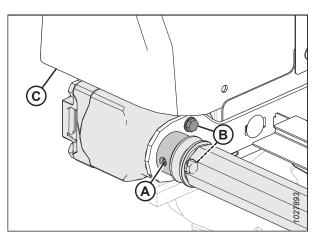


Figure 4.268: Drive Roller

9. Wrap the draper over the drive roller, and attach the ends of draper with tube connectors (B), screws (A) (with the heads facing the center opening), and nuts.

NOTE:

The two short tube connectors are attached at the front and rear of the draper.

10. Install bridge connector (D) using screws (C) and nuts at the front end of the draper joint.

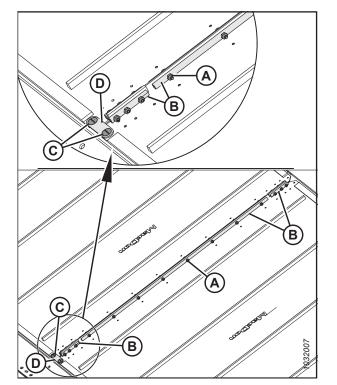


Figure 4.269: Draper Connector

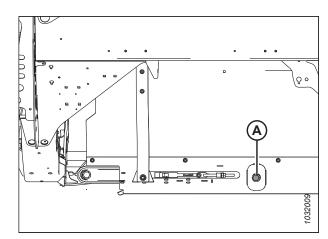


Figure 4.270: Draper Tensioner – Left Side Shown

- 11. Tighten the draper by turning adjuster bolt (A) clockwise. For instructions, refer to *4.12.4 Adjusting Side Draper Tension, page 395*.
- 12. Disengage the reel and header safety props. For instructions, refer to *Disengaging Reel Safety Props, page* 34.

DANGER

Ensure that all bystanders have cleared the area.

- 13. Start the engine, and lower the header and reel.
- 14. Run the machine to verify the draper tracks correctly. If additional adjustment is necessary, refer to *4.12.5 Adjusting Side Draper Tracking, page 397*.

4.13 Reel

The reel features a uniquely shaped cam, which allows the fingers to get underneath lodged crop and pick it up before it is cut.

To avoid personal injury, before servicing machine or opening drive covers, refer to 4.1 Preparing Machine for *Servicing, page 259*.

4.13.1 Reel Clearance to Cutterbar

The minimum clearance between the reel fingers and the cutterbar ensures that the reel fingers do not contact the cutterbar during operation. The clearance is set at the factory, but some adjustment may be necessary before operation.

1. The dimensions required for finger tip to the top of pointed guard (B), or short guard (C) to cutterbar clearance (A) is shown in the tables below.

Header	End Panels	Beside Center Arm	
FD225	20 mm (0.80 in.)	45 mm (1.77 in.)	

Table 4.4 Finger to Guard Clearance – Double Reel

Table 4.3 Finger to Guard Clearance – Single Reel

Header	End Panels	At Hinge Points
FD230	20 mm (0.80 in.)	45 mm (1.77 in.)
FD235 FD240 FD241	20 mm (0.80 in.)	20 mm (0.80 in.)
FD240	20 mm (0.80 in.)	20 mm (0.80 in.)

Table 4.5 Finger to Guard Clearance – Triple Reel

Header	Outer End Panels	Beside Center Arms
FD240 FD241 FD245 FD250	20 mm (0.80 in.)	20 mm (0.80 in.)

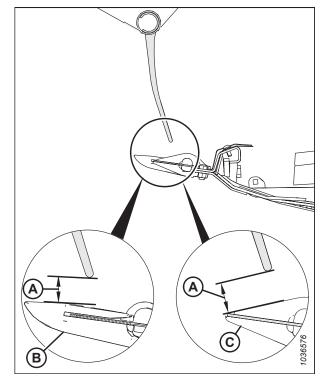


Figure 4.271: Finger Clearance

Measuring Reel Clearance

Reel clearance refers to the gap between the ends of the reel fingers and the cutterbar. Depending on the configuration of the header, reel clearance can vary across the length of the header. To determine if the reel clearance is acceptable, it must first be measured.



To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

DANGER 4

Ensure that all bystanders have cleared the area.

- 1. Start the engine. For instructions, refer to the combine operator's manual.
- Park the combine on a level surface. 2.

just inboard of the wing flex points.

3. Adjust the reel fore-aft position until the number seven on fore-aft indicator (A) is hidden by sensor support (B).

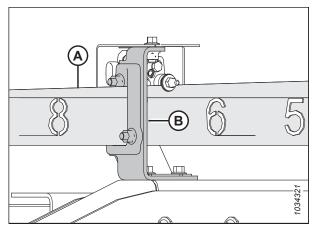


Figure 4.272: Reel Fore-Aft Position

4. Single-reel headers: Raise the header high enough to place two 254 mm (10 in.) high blocks (A) under the cutterbar, 111111111111 10

Figure 4.273: FlexDraper[®] Block Locations – Single Reel

1039024

5. **Double-reel headers:** Raise the header high enough to place two 254 mm (10 in.) high blocks (A) under the cutterbar, just inboard of the wing flex points.

NOTE:

Blocks are **NOT** needed to support the wings of triple-reel headers.

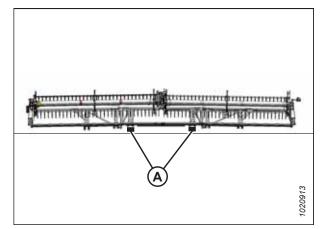


Figure 4.274: FlexDraper[®] Block Locations – Double Reel

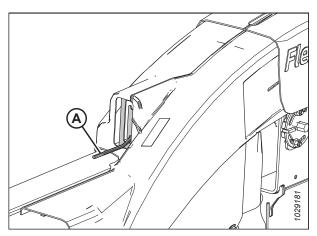


Figure 4.275: Wing Lock in UNLOCK Position

6. **Single-reel and double-reel headers:** Move wing lock spring handles (A) down to the **UNLOCK** position.

NOTE:

The reel clearance of triple-reel headers must be measured while the wings are locked.

7. Lower the header fully. The wings of single-reel and doublereel headers should be in the full frown position; the wings of triple-reel headers should be level with the center deck.

- 8. Rotate the reel by hand until a tine tube is directly above the cutterbar.
- 9. Measure and record clearance (A) between the tip of the fingers and one of the guards at the end of the reels, either pointed guard (B) or short guard (C). For the clearance specifications, refer to *4.13.1 Reel Clearance to Cutterbar, page 410*.

For the measurement locations, refer to

- Single-reel headers: Figure 4.277, page 413
- Double-reel headers: Figure 4.278, page 414
- Triple-reel headers: Figure 4.279, page 414

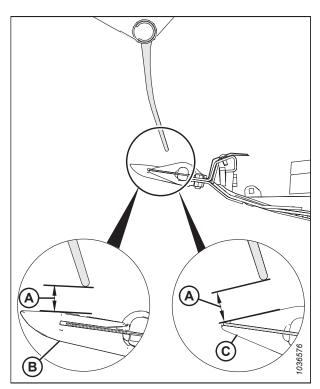


Figure 4.276: Finger Clearance

Single-reel measurement locations (A): Outer ends of the reel (two places).

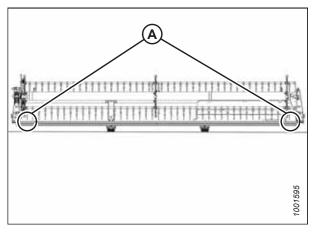


Figure 4.277: FlexDraper[®] Measurement Locations – Single Reel

MAINTENANCE AND SERVICING

Double-reel measurement locations (A): Outer ends of the reels and at both hinge points (four places).

Triple-reel measurement locations (A): Both ends of three

10. Adjust the reel clearance, if necessary. For instructions, refer to Adjusting Clearance between Reel and Cutterbar,

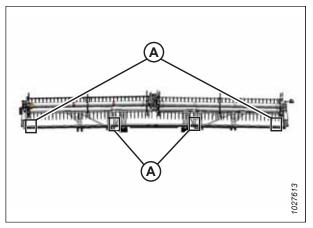


Figure 4.278: FlexDraper[®] Measurement Locations – Double Reel

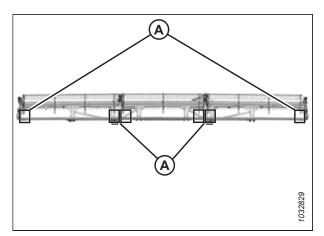


Figure 4.279: FlexDraper[®] Measurement Locations – Triple Reel

Adjusting Clearance between Reel and Cutterbar

Make sure there is sufficient clearance between the reel and cutterbar to prevent the knife from cutting reel finger tips off during operation.

To adjust the clearance between the reel and cutterbar, follow these steps:

reels (six places).

page 414.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Ensure that all bystanders have cleared the area.

- 1. Measure the reel clearance before proceeding. For instructions, refer to *Measuring Reel Clearance, page 410*.
- 2. Start the engine. For instructions, refer to the combine operator's manual.

MAINTENANCE AND SERVICING

3. Adjust the reel fore-aft position until the number seven on fore-aft indicator (A) is hidden by sensor support (B).

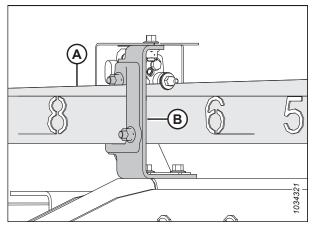


Figure 4.280: Fore-Aft Position

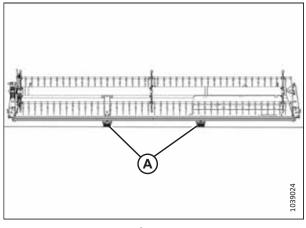


Figure 4.281: FlexDraper[®] Block Locations – Single Reel

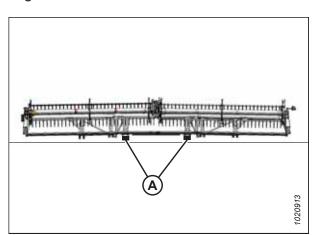


Figure 4.282: FlexDraper[®] Block Locations – Double Reel

 Raise the header high enough to place two 254 mm (10 in.) high blocks (A) under the cutterbar, just inboard of the wing flex points.

5. Raise the header high enough to place two 254 mm (10 in.) high blocks (A) under the cutterbar, just inboard of the wing flex points.

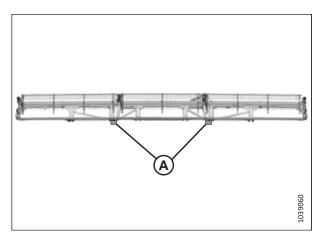


Figure 4.283: FlexDraper[®] Block Locations – Triple Reel

- 6. Lower the reel fully, and continue holding the control button down to phase the cylinders.
- 7. Shut down the engine, and remove the key from the ignition.
- 8. Adjust the clearance at the outboard ends of the reel as follows:
 - a. Loosen bolt (A) on the outer arm cylinder.
 - b. Adjust cylinder rod (B) as required:
 - To increase clearance to the cutterbar, turn cylinder rod (B) out of clevis to raise the reel.
 - To decrease clearance to the cutterbar, turn cylinder rod (B) into clevis to lower the reel.
 - c. Tighten bolt (A).
- 9. Repeat Step 8, page 416 at opposite side of the header.

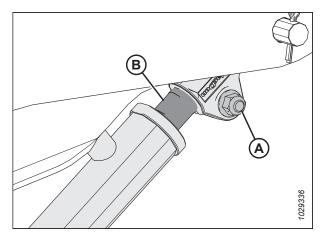


Figure 4.284: Outside Arm Cylinder

- 10. Loosen bolts (A) on both center arm cylinders.
- 11. Adjust the clearance as follows:

IMPORTANT:

Adjust both cylinder rods equally.

- To increase clearance to the cutterbar, turn cylinder rods (D) out of clevis to raise the reel.
- To decrease clearance to the cutterbar, turn cylinder rods (D) into clevis to lower the reel.
- 12. Ensure distance measurement (B) is equal on both cylinders.

NOTE:

Distance measurement (B) is from the center of mounting pins (C) to the tops of the notches in cylinder rods (D).

- Verify that both mounting pins (C) cannot be rotated by hand. If one of the mounting pins is free to rotate, then adjust cylinder rods (D) as required until both cylinder rods take the load:
 - Turn cylinder rod out of the clevis to increase the load on the cylinder rod.

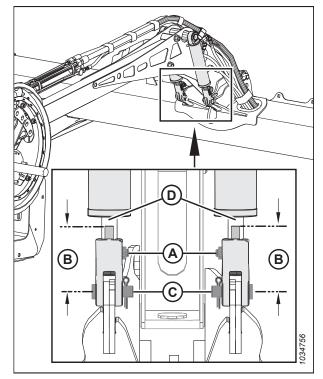


Figure 4.285: Center Arm Cylinders

- Turn cylinder rod into the clevis to decrease the load on the cylinder rod.
- 14. Tighten bolts (A).
- 15. Triple reel: Repeat Step 10, page 417 to Step 14, page 417 for the other center reel arm.

DANGER

Ensure that all bystanders have cleared the area.

- 16. Start the engine.
- 17. Raise the reel fully.
- 18. Lower the reel fully, and continue holding the control button down to phase the cylinders.
- 19. Shut down the engine, and remove the key from the ignition.
- 20. Check measurements again and, if necessary, repeat the adjustment procedures.
- 21. Move the reel back to ensure the steel end fingers do not contact the deflector shields.
- 22. If contact occurs, adjust the reel upward to maintain the clearance at all reel fore-aft positions. If contact cannot be avoided after adjusting the reel, trim the steel end fingers to obtain proper clearance.
- 23. Periodically check for evidence of contact during operation, and adjust clearance as required.

4.13.2 Reel Frown

The reel must be set up to frown (providing more clearance at the center of the reel than at the ends) to compensate for reel flexing.

Adjusting Reel Frown

The reel must be set up to frown (provide more clearance at the center of the reel than at the ends) to compensate for reel flexing.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

- Position the reel over the cutterbar (between 4 and 5 on fore-aft position indicator [A]) to provide adequate clearance at all reel fore-aft positions. Bracket (B) is the position marker.
- 2. Record the measurement at each reel disc location for each reel tube.

NOTE:

Measure the frown profile before disassembling the reel for servicing so the profile can be maintained during reassembly.

- 3. Shut down the engine, and remove the key from the ignition.
- 4. Start with the reel disc closest to the center of the header and proceed outward towards the ends, adjusting the header profile as follows:
 - a. Remove bolts (A).
 - b. Loosen bolt (B) and adjust arm (C) until the desired measurement is obtained between the reel tube and cutterbar.

NOTE:

Allow the reel tubes to curve naturally and position the hardware accordingly.

c. Reinstall bolts (A) in the aligned holes and tighten them.

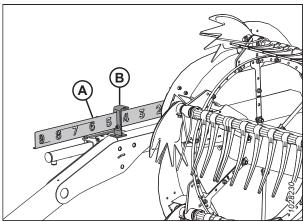


Figure 4.286: Fore-Aft Position Indicator

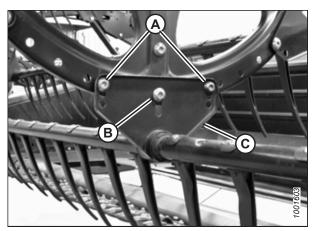


Figure 4.287: Center Reel Disc

4.13.3 Centering Reel

The reel needs to be centered on the header to avoid any contact with the end panels.

DANGER

To prevent bodily injury or death from the unexpected startup of the machine, always stop the engine and remove the key before adjusting the machine.

- 1. Start the engine.
- 2. Lower the reel fully.
- 3. Lower the header fully.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Measure clearance (A) at locations (B) between the reel tine tube and the endsheet at both ends of the header. The clearances should be the same if the reel is centered.

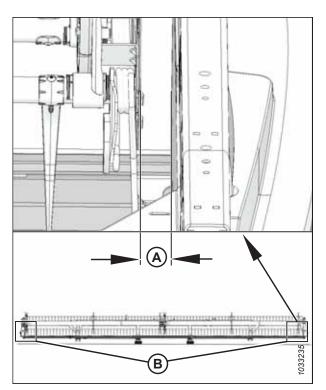


Figure 4.288: Centering Reel

- 6. Loosen bolt (A) on brace (B) at the center support arm.
- 7. Move the forward end of reel support arm (C) laterally as required to center the reel.
- 8. Tighten bolt (A) and torque to 457 Nm (337 lbf·ft).

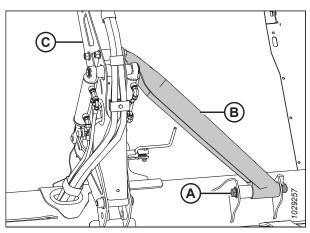


Figure 4.289: Center Support Arm

4.13.4 Reel Fingers

If a reel finger is damaged or worn, it will need to be removed so it can be replaced. Reel fingers are either steel or plastic.

IMPORTANT:

Keep the reel fingers in good condition and straighten or replace them as necessary.

Removing Steel Fingers

Damaged steel fingers will need to be cut off of the reel tine tube.



To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to avoid damaging it and other components.

- 1. Lower the header fully.
- 2. Raise the reel fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 5. Remove the tine tube bushings from the applicable tine tube at the center and left reel discs. For instructions, refer to *Removing Bushings from Reels, page 423*.
- 6. Attach tine tube arms (B) to the reel disc at original attachment locations (A).
- 7. Cut the damaged finger so it can be removed from the tine tube.
- 8. Remove bolts from the existing fingers and slide the fingers over to replace the finger that was cut off in Step 7, page 420 (remove tine tube arms [B] from the tine tubes as necessary).

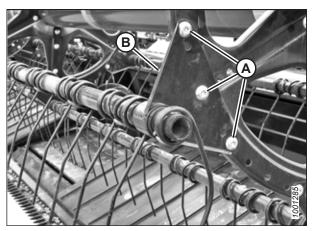


Figure 4.290: Tine Tube Arm

Installing Steel Fingers

Once the old steel finger has been removed, a new finger can be pushed onto the tine tube.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube and other components.

MAINTENANCE AND SERVICING

NOTE:

This procedure assumes a finger has been removed from the machine. For instructions about removing fingers, refer to *Removing Steel Fingers, page 420*.

- 1. Slide the new finger and tine tube arm (A) onto the end of the tube.
- 2. Install the tine tube bushings. For instructions, refer to *Installing Bushings onto Reels, page 428*.
- 3. Attach the fingers to the tine tube with bolts and nuts (B).

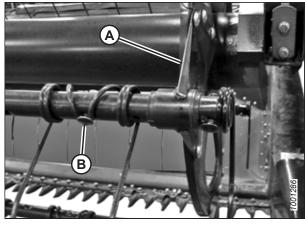


Figure 4.291: Tine Tube

Removing Plastic Fingers

Plastic reel fingers are secured to the tine tube with a single Torx[®] screw.



To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

- 1. Lower the header fully.
- 2. Raise the reel fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.
- 5. Remove screw (A) using a Torx[®] Plus 27 IP socket wrench.

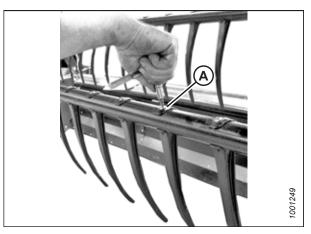


Figure 4.292: Removing Plastic Finger

6. Push the clip at the top of the finger back towards the reel tube as shown and remove the finger from the tube.

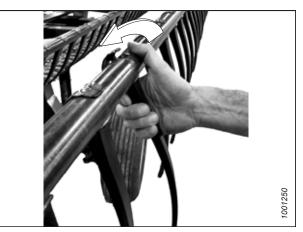


Figure 4.293: Removing Plastic Finger

Installing Plastic Fingers

Once the old plastic reel finger has been removed, the new one can be installed.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

NOTE:

This procedure assumes a finger has been removed from the machine. For information about removing fingers, refer to *Removing Plastic Fingers, page 421*.

- 1. Position the new finger on the rear of the tine tube. Engage the lug at the bottom of the finger in the lower hole in the tine tube.
- 2. Lift the top flange gently and rotate the finger as shown until the lug in the top of the finger engages the upper hole in the tine tube.



Figure 4.294: Installing Plastic Finger

3. Install screw (A) using a Torx[®] Plus 27 IP socket wrench and torque it to 8.5–9.0 Nm (75–80 lbf·in).

IMPORTANT:

Do **NOT** apply force to the finger prior to tightening the mounting screw. Applying force without tightening the mounting screw will break the finger or shear the locating pins.



Figure 4.295: Installing Plastic Finger

4.13.5 Tine Tube Bushings

The reel tine tube rests in a tine tube bushing, which is secured to the reel disc. If a tine tube bushing is damaged or worn, it will need to be replaced.

Removing Bushings from Reels

The bushing clamps securing the tine tube to the bushing will need to be released so that the bushing halves can be removed.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube and other components.

- 1. Lower the header fully.
- 2. Raise the reel fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the reel safety props. For instructions, refer to *Engaging Reel Safety Props, page 33*.

NOTE:

If replacing only the cam end bushing, proceed to Step 10, page 425.

Center disc and tail end bushings

5. Remove the reel endshields and endshield support (C) from the tail end of the reel at the applicable tine tube location.

NOTE:

There are no endshields on the center disc.

6. Remove bolts (A) securing tine tube arm (B) to the disc.

IMPORTANT:

Note the hole locations in the arm and disc and ensure bolts (A) are reinstalled at the original locations.

7. Release bushing clamps (A) using a small screwdriver to separate the serrations. Pull the clamp off the tine tube.

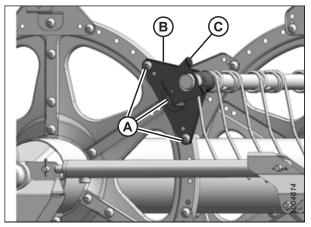


Figure 4.296: Tail End

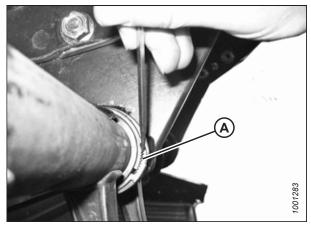


Figure 4.297: Bushing Clamp

B A

Figure 4.298: Bushing

- 8. Rotate tine tube arm (A) until clear of the disc and slide the arm inboard off of bushing (B).
- Remove bushing halves (B). If required, remove the next steel or plastic finger, so the arm can slide off the bushing. Refer to the following procedures as necessary:
 - Removing Plastic Fingers, page 421
 - Removing Steel Fingers, page 420

Cam end bushings

10. Remove the endshields and endshield support (A) from the applicable tine tube location on the cam end.

NOTE:

Removing cam end bushings requires the tine tube to be moved through the disc arms to expose the bushing.

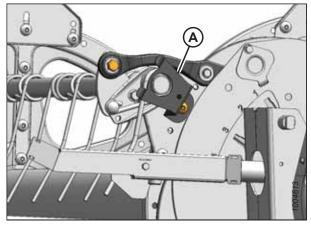


Figure 4.299: Cam End

11. Remove the reel endshields and endshield support (C) from the tail end of the reel at the applicable tine tube location.

NOTE:

There are no endshields on the center disc.

12. Remove bolts (A) securing tine tube arms (B) to the tail and center discs.

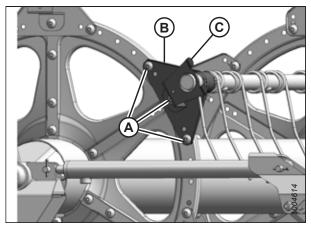


Figure 4.300: Tail End

Tine tube reinforcing kit (option)

 Release the bushing clamps or disconnect the support channels from the tine tube support (if installed) depending on which tine tube is being moved. Three tine tubes (A) require channel disconnection and two tine tubes (B) require only bushing clamp removal.

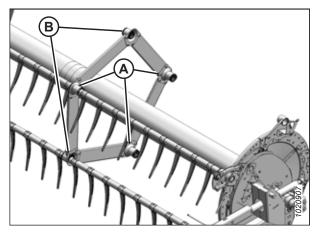


Figure 4.301: Tine Tube Supports

14. Remove bolt (A) from the cam linkage so tine tube (B) is free to rotate.

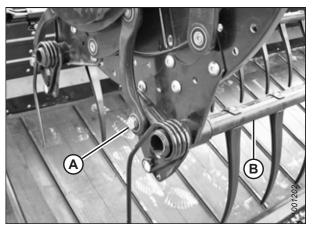


Figure 4.302: Cam End

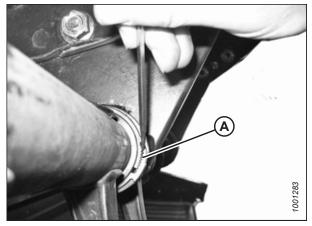


Figure 4.303: Bushing Clamp

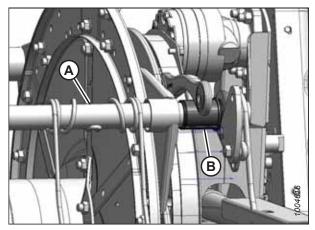


Figure 4.304: Cam End

15. Release bushing clamps (A) at the cam disc using a small screwdriver to separate the serrations. Move the clamps off the bushings.

- 16. Slide tine tube (A) outboard to expose bushing (B).
- 17. Remove bushing halves (B). If required, remove the next steel or plastic finger so the arm can slide off the bushing. Refer to the following procedures if necessary:
 - Removing Plastic Fingers, page 421
 - Removing Steel Fingers, page 420

Tine tube reinforcing kit bushings – option

- 18. Locate support (A) that requires a new bushing.
- 19. Remove four bolts (B) securing channel (C) to support (A).
- 20. Remove screw (E) and remove finger (D) if it is too close to the support to allow access to the bushing. For instructions, refer to *Removing Plastic Fingers, page 421* or *Removing Steel Fingers, page 420*.

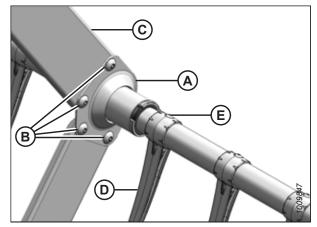


Figure 4.305: Tine Tube Support

Figure 4.306: Bushing Clamp

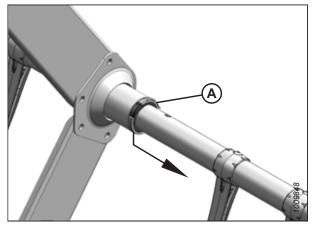


Figure 4.307: Tine Tube Reinforcing Kit Bushing Clamp – Option

21. Release bushing clamps (A) using a small screwdriver to separate the serrations.

22. Move clamps (A) off the bushings.

23. On each reel, there are three right-facing supports (A). Slide the support off bushing halves (B).

- 24. On each reel, there are two left-facing supports (A). Rotate the supports until the flanges clear the channels before moving them off bushing (B). Move the tube slightly away from the reel if necessary.
- 25. Remove bushing halves (B) from the tine tubes.

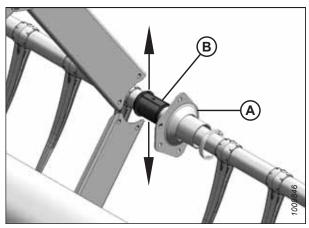


Figure 4.308: Tine Tube Reinforcing Kit Support – Option

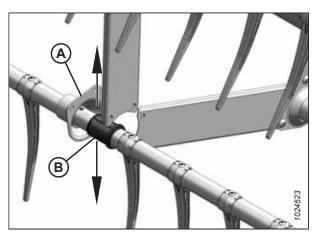


Figure 4.309: Tine Tube Reinforcing Kit Opposite Support – Option

Installing Bushings onto Reels

Once the old tine tube bushing halves have been removed, the new ones can be installed.

NOTE:

This procedure assumes the steps for Removing Bushings from Reels, page 423 have been completed.

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube or other components.

 Use a pair of modified channel lock pliers (A) to install bushing clamps (C). Secure pliers in a vise and grind a notch (B) into the end of each arm to fit the clamp as shown.

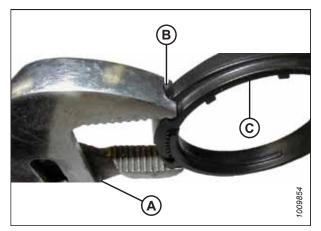


Figure 4.310: Modified Channel Lock Pliers

Cam end bushings

- Position bushing halves (B) on tine tube (A) with the flangeless end adjacent to the tine tube arm, and position the lug in each bushing half into the hole in the tine tube.
- Slide tine tube (A) towards the tail end of the reel to insert bushing (B) into the tine tube arm. If the tine tube supports are installed, ensure the bushings at those locations slide into the support.
- 4. Reinstall the previously removed fingers. Refer to the following procedures as necessary:
 - Removing Plastic Fingers, page 421
 - Removing Steel Fingers, page 420
- 5. Install bushing clamp (A) onto the tine tube adjacent to the flangeless end of bushing (B).
- 6. Position clamp (A) on bushing (B) so the edges of the clamp and bushing are flush when the clamp is fit into the groove on the bushing and the lock tabs are engaged.

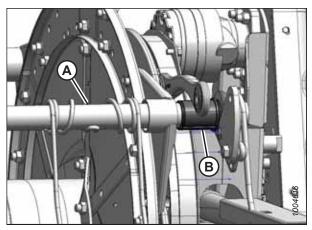


Figure 4.311: Cam End

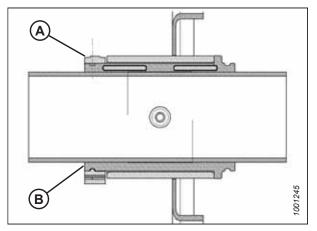


Figure 4.312: Bushing

7. Tighten clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

Overtightening the clamp may result in breakage.

B

Figure 4.313: Installing Clamp

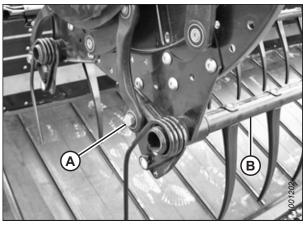


Figure 4.314: Cam End

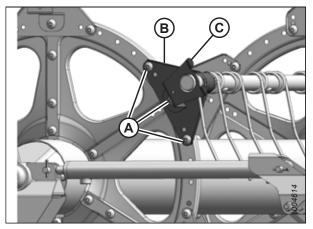


Figure 4.315: Tail End

 Line up tine tube (B) with the cam arm and install bolt (A). Torque the bolt to 165 Nm (120 lbf·ft).

- 9. Install bolts (A) securing tine tube arm (B) to the center disc.
- 10. Install tine tube arm (B) and endshield support (C) to the tail end of the reel at the applicable tine tube location and secure with bolts (A).

NOTE:

There are no endshields on the center discs.

- 11. Install endshield support (A) at the applicable tine tube location at the cam end.
- 12. Reinstall the reel endshields. For instructions, refer to *4.13.6 Reel Endshields, page 434*.

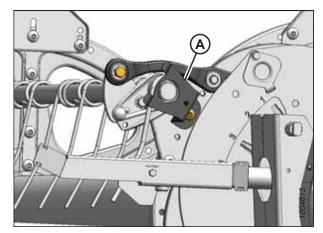


Figure 4.316: Cam End

Center disc and tail end bushings

- Position bushing halves (B) on tine tube (A) with the flangeless end adjacent to the tine tube arm, and position the lug in each bushing half into the hole in the tine tube.
- 14. Slide tine tube (A) onto bushing (B) and position against the disc at the original location.
- 15. Reinstall the previously removed fingers. For instructions, refer to:
 - Removing Plastic Fingers, page 421
 - Removing Steel Fingers, page 420

A

Figure 4.317: Cam End

- 16. Install bushing clamp (A) onto the tine tube adjacent to the flangeless end of bushing (B).
- 17. Position clamp (A) on bushing (B) so the edges of the clamp and bushing are flush when the clamp is fit into the groove on the bushing and the lock tabs are engaged.

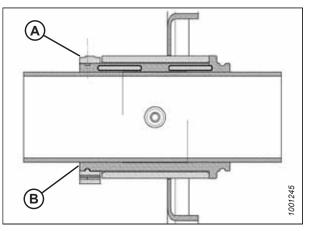


Figure 4.318: Bushing

18. Tighten clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

center disc.

NOTE:

secure with bolts (A).

Overtightening the clamp may result in breakage.

19. Install bolts (A) securing tine tube arm (B) to the

There are no endshields on the center discs.

20. Install tine tube arm (B) and endshield support (C) to the tail end of the reel at the applicable tine tube location and

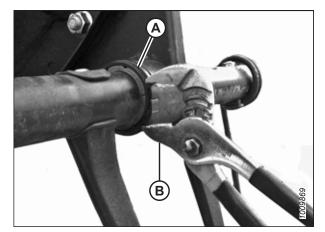


Figure 4.319: Installing Clamp

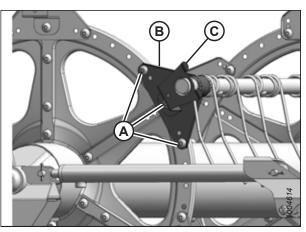


Figure 4.320: Tail End



21. Position bushing halves (B) on tine tube (A) with the flangeless end adjacent to the tine tube arm, and position the lug in each bushing half into the hole in the tine tube.

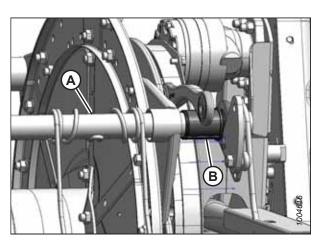


Figure 4.321: Cam End

MAINTENANCE AND SERVICING

22. On each reel, there are three right-facing supports (A). Slide the support onto bushing (B).

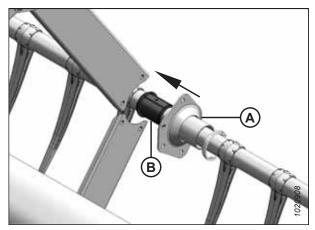


Figure 4.322: Tine Tube Reinforcing Kit Support – Option

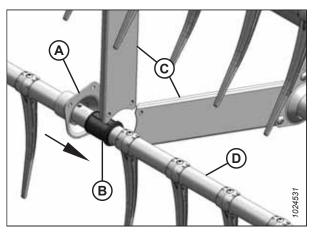


Figure 4.323: Tine Tube Reinforcing Kit Opposite Support – Option

support (A) until its flanges clear channels (C) before moving the support onto bushing (B).

23. On each reel, there are two left-facing supports (A). Rotate

NOTE:

If necessary, move tine tube (D) slightly away from the reel to allow the support flange enough room to clear the channel.

- 24. Install bushing clamp (A) onto the tine tube adjacent to the flangeless end of bushing (B).
- 25. Position clamp (A) on bushing (B) so the edges of the clamp and bushing are flush when the clamp is fit into the groove on the bushing and the lock tabs are engaged.

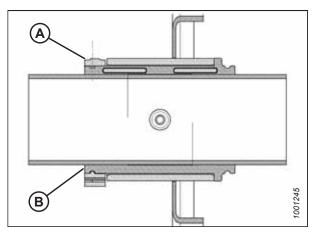


Figure 4.324: Bushing

26. Tighten clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

Overtightening the clamp may result in breakage.

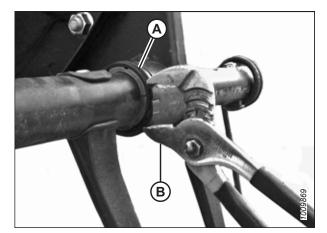


Figure 4.325: Installing Clamp

- Reattach channels (C) to three right-facing supports (A) on each reel with screws (B) and nuts. Torque the screws to 43 Nm (32 lbf·ft).
- 28. Using screws (E), reinstall any fingers (D) that were previously removed. For instructions, refer to:

29. Reattach channels (C) to two left-facing supports (A) on

30. Using screws (E), reinstall any fingers (D) that were previously removed. For instructions, refer to:

Installing Plastic Fingers, page 422 Installing Steel Fingers, page 420

each reel with screws (B) and nuts. Torque screws to 43 Nm

- Installing Plastic Fingers, page 422
- Installing Steel Fingers, page 420

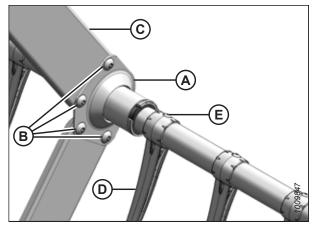


Figure 4.326: Tine Tube Reinforcing Kit Support – Option


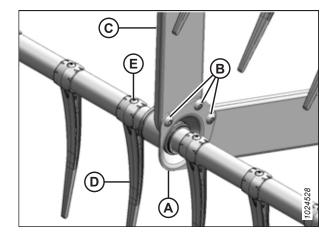


Figure 4.327: Tine Tube Reinforcing Kit Opposite Support – Option

4.13.6 Reel Endshields

(32 lbf·ft).

Reel endshields and supports do not require regular maintenance, but they should be checked periodically for damage and loose or missing fasteners. Slightly dented or deformed endshields and supports are repairable, but it's necessary to replace severely damaged components.

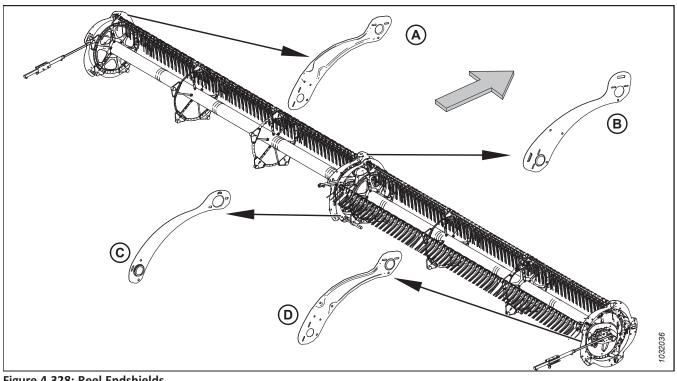

There are four kinds of endshields. Ensure you are installing the correct endshield to the proper location as shown below.

Figure 4.328: Reel Endshields

A - Tail End, Outboard (MAC311695) C - Tail End, Inboard (MAC311795)

B - Cam End, Inboard (MAC273823) D - Cam End, Outboard (MAC311694)

NOTE:

Arrow points to the front of machine.

Replacing Reel Endshields at Outboard Cam End

The procedure for replacing reel endshields is applicable to the inboard and outboard cam end. Exceptions are noted where applicable.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Endshields are different for inboard and outboard cam end. Refer to Figure 4.328, page 435.

NOTE:

Arrows in the following illustrations point to the front of machine.

- 1. Lower the header and reel.
- 2. Shut down the engine, and remove the key from the ignition.

MAINTENANCE AND SERVICING

- 3. Rotate the reel manually until reel endshield (A) requiring replacement is accessible.
- 4. Remove three bolts (B).

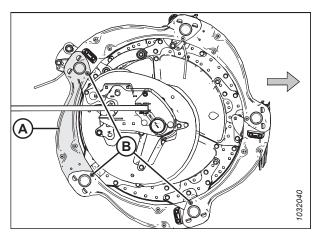


Figure 4.329: Reel Endshields – Outboard Cam End

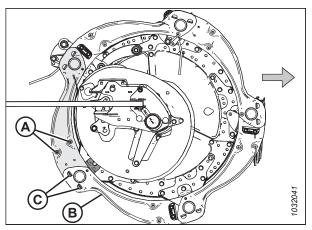


Figure 4.330: Reel Endshields – Outboard Cam End

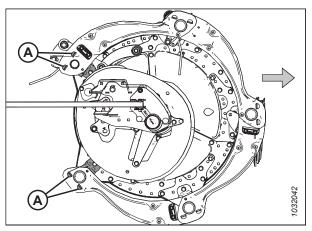


Figure 4.331: Reel Endshield Removed – Outboard Cam End

- 5. Remove two screws (A), nuts, and outboard cam deflector. Retain for reinstallation.
- 6. Lift the end of reel endshield (B) off support (C).

7. Remove the reel endshield from supports (A).

- 8. Slightly lift the end of existing reel endshield (A) off of support (B).
- 9. Position new reel endshield (C) onto support (B) under existing reel endshield (A).
- 10. Position the other end of new reel endshield (C) onto other support (D) over existing reel endshield (E).
- 11. Reinstall three bolts (F).
- 12. Reinstall two screws (G), outboard cam deflector, and nuts (removed in Step *5, page 436*) on the new reel endshield.
- 13. Tighten all hardware.

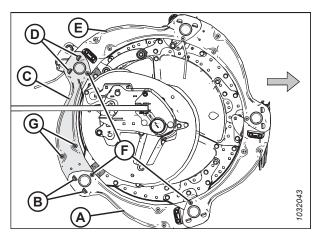


Figure 4.332: Reel Endshields – Outboard Cam End

Replacing Reel Endshields at Inboard Cam End

The procedure for replacing reel endshields is applicable to the inboard and outboard cam end.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Endshields are different for inboard and outboard cam end. Refer to Figure 4.328, page 435.

NOTE:

Arrows in the following illustrations point to the front of machine.

- 1. Lower the reel fully.
- 2. Lower the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Rotate the reel manually until reel endshield (A) requiring replacement is accessible.
- 5. Remove three bolts (B).

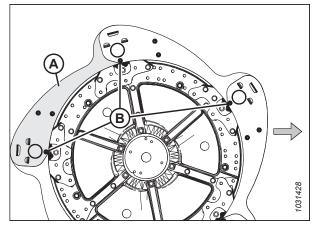


Figure 4.333: Reel Endshields – Inboard Cam End

- 6. Remove and retain two screws (A), cam deflector, and nuts from the reel endshield.
- 7. Lift the end of reel endshield (B) off support (C).

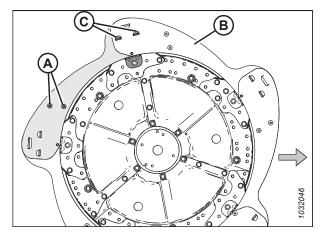


Figure 4.334: Reel Endshields – Inboard Cam End

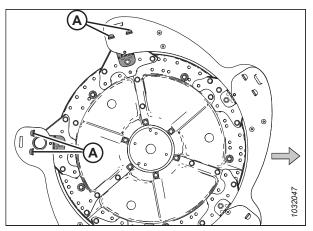


Figure 4.335: Reel Endshield Removed – Inboard Cam End

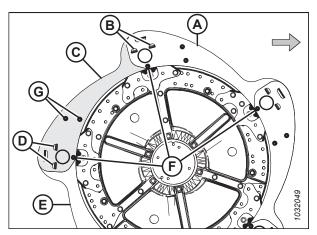


Figure 4.336: Reel Endshields – Inboard Cam End

8. Remove the reel endshield from supports (A).

- 9. Slightly lift the end of existing reel endshield (A) off of support (B).
- 10. Position new reel endshield (C) onto support (B) under existing reel endshield (A).
- 11. Position the other end of new reel endshield (C) onto other support (D) over existing reel endshield (E).
- 12. Reinstall three bolts (F).
- 13. Reinstall two screws (G), cam deflector, and nuts (removed in Step *6, page 438*) on the new reel endshield.
- 14. Tighten all hardware.

Replacing Reel Endshields at Outboard Tail End

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Lower the reel fully.
- 2. Lower the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Rotate the reel manually until reel endshield requiring replacement (A) is accessible.
- 5. Remove three bolts (B).

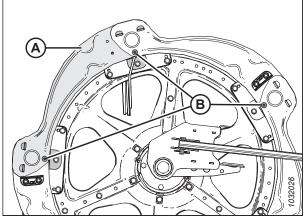


Figure 4.337: Reel Endshields – Outboard Tail End

6. Lift the end of reel endshield (A) off support (B).

7. Remove the reel endshield from supports (A).

8. Remove the reel paddle, if installed on the reel endshield.

Reel end paddles (B) are installed alternately on the reel

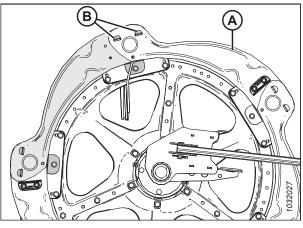


Figure 4.338: Reel Endshields – Outboard Tail End

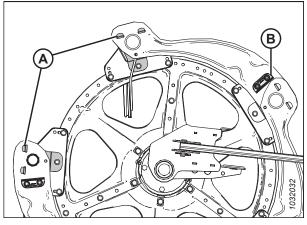


Figure 4.339: Reel Endshield Removed – Outboard Tail End

NOTE:

endshields.

- 9. Slightly lift the end of reel endshield (A) off of support (B).
- 10. Position new reel endshield (C) onto support (B) under existing reel endshield (A).
- 11. Position the other end of new reel endshield (C) onto other support (E) over the existing reel endshield.
- 12. Reinstall three bolts (D).
- 13. Reinstall the paddle (removed in Step *8, page 439*) onto the new reel endshield if previously installed.
- 14. Tighten all hardware.

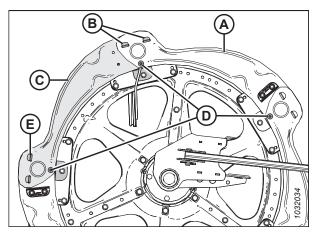


Figure 4.340: Reel Endshields – Outboard Tail End

Replacing Reel Endshields at Inboard Tail End

The reel endshields need to be replaced if they are damaged.

DANGER

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

IMPORTANT:

Reel endshields are different for inboard and outboard tail end of header. For illustration, refer to 4.328, page 435.

- 1. Lower the reel fully.
- 2. Lower the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Rotate the reel manually until reel endshield requiring replacement (A) is accessible.
- 5. Remove six M10 screws (B) and nuts. Retain the hardware for reinstallation.

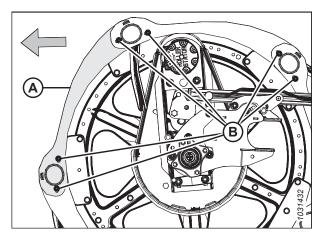


Figure 4.341: Reel Endshields – Inboard Tail End

- 6. Lift other endshield (A) to disengage the tab from endshield (B).
- 7. Lift the end of reel endshield (B) off endshield (C), and rotate endshield (B) downward.

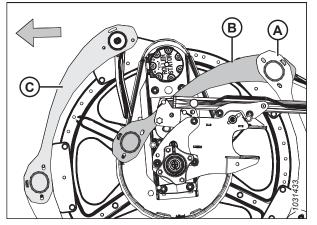


Figure 4.342: Reel Endshields – Inboard Tail End

- Remove M10 bolt (A), nut (B), and end finger retainer (C) from tine tube that secure the bushing and tail end finger. Retain for reassembly.
- 9. Slide endshield bushing (D) to remove. Retain the bushing for reassembly.
- 10. Remove and discard damaged reel endshield (E).

- 11. Position new reel endshield (A), and engage tab onto another endshield (B).
- 12. Position the other end of new endshield (A) on tine tube and secure with bushing (C).

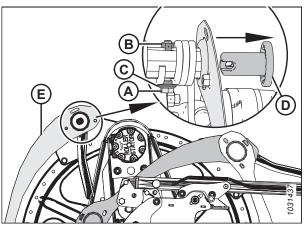


Figure 4.343: Reel Endshields – Inboard Tail End

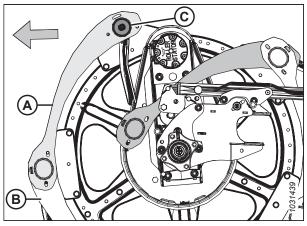


Figure 4.344: Reel Endshields – Inboard Tail End

- 13. Position tail end finger (A) as shown.
- 14. Secure tail end finger (A) and bushing (installed in Step 12, page 441) with M10 bolt (B), end finger retainer (C), and nut (D).

- 15. Rotate reel endshield (A) upward and engage tabs (B) on both ends.
- 16. Secure reel endshields using six M10 screws and nuts (C).
- 17. Torque nuts (C) to 35 Nm (26 lbf·ft). Do **NOT** overtighten the nuts to prevent flattening of the tube.

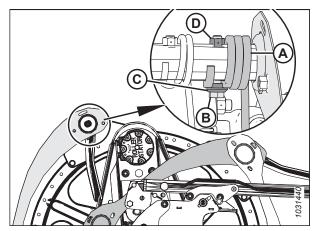


Figure 4.345: Reel Endshields – Inboard Tail End

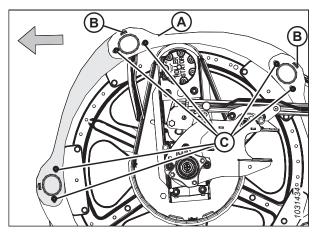


Figure 4.346: Reel Endshields – Inboard Tail End

Replacing Reel Endshield Supports

The reel endshield supports need to be replaced if they are damaged.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

All illustrations shown are from the outboard cam end.

- 1. Lower the reel fully.
- 2. Lower the header fully.
- 3. Shut down the engine, and remove the key from the ignition.

- 4. Rotate the reel manually until the reel endshield support requiring replacement is accessible.
- 5. Remove bolt (B) securing reel endshields to support (A).
- 6. Remove bolts (C) from support (A) and two adjacent supports.

- 7. Move reel endshields (A) and support (B) away from the tine tube, then remove the support from the endshields.
- Insert tabs of new support (B) into the slots in reel endshields (A). Ensure the tabs engage both reel endshields.

- 9. Secure support (A) to the disc sector with bolt (B) and nut. Do **NOT** tighten.
- 10. Secure reel endshields (C) to support (A) with bolt (D) and nut. Do **NOT** tighten.
- 11. Reattach the other supports with bolts (E) and nuts.
- 12. Check the clearance between the tine tube and reel endshield support and adjust if necessary.
- 13. Torque the nuts to 27 Nm (20 lbf·ft).

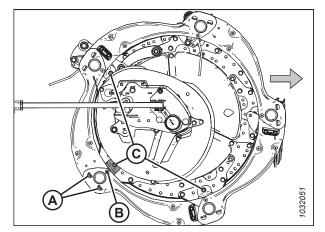


Figure 4.347: Reel Endshield Supports

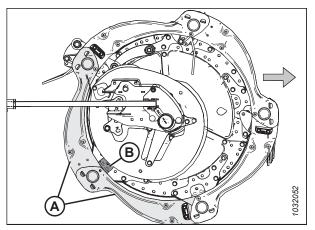


Figure 4.348: Reel Endshield Supports

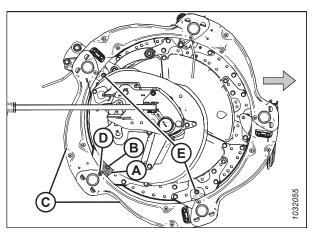


Figure 4.349: Reel Endshield Supports

4.14 Reel Drive

The hydraulically driven reel motor drives a chain that is attached to the center arm between the reels on a double-reel header, and to the left-center arm on a triple-reel header.

4.14.1 Reel Drive Chain

The reel drive chain transfers power from the hydraulically driven reel motor to the sprockets that rotate the reels.

Loosening Reel Drive Chain

The tension on the reel drive chain can be loosened to allow access to drive components.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

- 1. Start the engine.
- 2. Lower the header fully.
- 3. Adjust the reel fully forward.
- 4. Shut down the engine, and remove the key from the ignition.
- 5. Remove the reel drive cover. For instructions, refer to *Removing Reel Drive Cover, page 41*.
- 6. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.
- 7. Remove hairpin (A) securing multi-tool (B) to the bracket on the left endsheet.
- 8. Remove multi-tool (B), and reinstall the hairpin on the bracket.

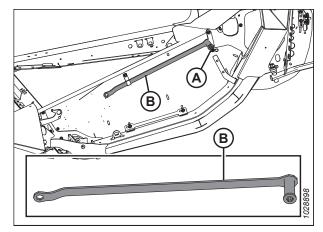


Figure 4.350: Multi-Tool Storage Location

MAINTENANCE AND SERVICING

IMPORTANT:

Do **NOT** loosen the motor mount, it is factory-adjusted and secured with Belleville washers. Chain tension is adjusted without loosening the drive mounting bolts.

- 9. Push tension retainer (A) clockwise with your thumb, and hold it in the unlocked position.
- 10. Place multi-tool (B) onto chain tensioner (C), and rotate the multi-tool upwards to loosen the chain tension.
- 11. Return the multi-tool to the storage position.

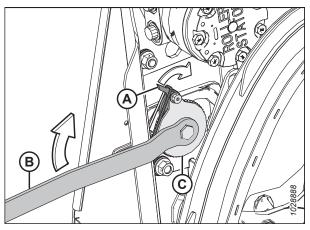


Figure 4.351: Reel Drive

Tightening Reel Drive Chain

A correctly tensioned drive chain ensures optimum power transfer while minimizing component wear.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.
- 3. Remove hairpin (A) securing multi-tool (B) to the bracket on the left endsheet.
- 4. Remove multi-tool (B), and reinstall the hairpin on the bracket.

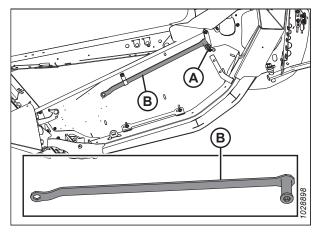


Figure 4.352: Multi-Tool Storage Location – Left Side

5. Place multi-tool (A) onto chain tensioner (B).

IMPORTANT:

Do **NOT** loosen the motor mount, it is factory-adjusted and secured together with Belleville washers. Chain tension is adjusted without loosening the drive mounting bolts.

6. Rotate multi-tool (A) downward until the chain is tight.

 Once the chain is tight, rotate the multi-tool upward to properly engage the teeth from the lock/latch into the tightener teeth. If the tightener will not skip a tooth before tightening, do NOT force the tightener to the next notch.

IMPORTANT:

Do **NOT** overtighten the chain. If overtightened, the chain will put excessive loads on the sprockets, causing the motor bearings and/or other components to fail prematurely.

IMPORTANT:

There should be approximately 38 mm (1 1/2 in.) of play on one side (A) of the chain, while it is tight on the other side (B). This level of tension and play in the chain is required to skip one notch on the chain tightener.

- 8. Rotate the reel by hand to verify that the chain is still engaged properly on all teeth on lower sprocket (A). To prevent damaging components, ensure the chain does not get too tight as the reel is rotated.
- 9. Return the multi-tool to the storage position.
- 10. Close the endshield. For instructions, refer to *Closing Header Endshields, page 36.*

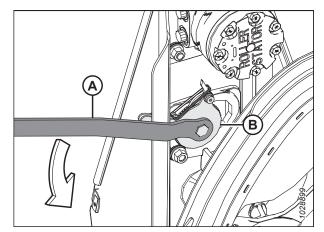


Figure 4.353: Reel Drive

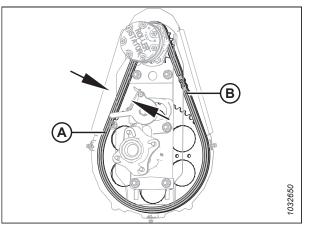


Figure 4.354: Reel Drive

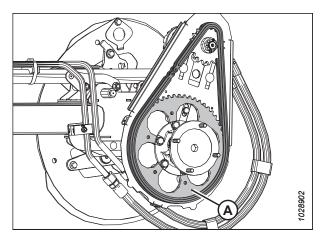


Figure 4.355: Reel Drive

4.14.2 Reel Drive Sprocket

The reel drive sprocket is attached to the reel drive motor.

For Case IH and New Holland combine models, configure the combine according to the reel sprocket size in order to optimize the auto reel to ground speed control. Refer to the combine service manual for more information.

NOTE:

A two-speed reel drive option is available. Order kit MAC311882.

Removing Reel Drive Single Sprocket

The reel drive sprocket is attached to the reel drive motor. By changing the drive and driven sprockets the speed and torque of the reel can be changed.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Remove the reel drive cover. For instructions, refer to *Removing Reel Drive Cover, page 41*.
- 3. Loosen reel drive chain (A). For instructions, refer to *Loosening Reel Drive Chain, page 444*.
- 4. Remove reel drive chain (A) from reel drive sprocket (B).

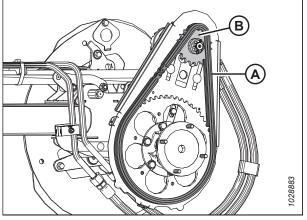


Figure 4.356: Single Sprocket

- 5. Remove the cotter pin and slotted nut (A) from the motor shaft.
- 6. Remove reel drive sprocket (B). Ensure the key remains in the shaft.

IMPORTANT:

To avoid damaging the motor, use a puller if drive sprocket (B) does not come off by hand. Do **NOT** use a pry bar and/or hammer to remove the drive sprocket.

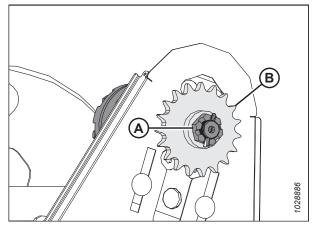


Figure 4.357: Single Sprocket

Installing Reel Drive Single Sprocket

The reel drive sprocket is attached to the reel drive motor. By changing the drive and driven sprockets the speed and torque of the reel can be changed.

4.

5.

6.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Align the keyway in sprocket (B) with the key on the motor shaft, and slide the sprocket onto the shaft. Secure it with slotted nut (A).
- 2. Torque slotted nut (A) to 12 Nm (9 lbf·ft).

Install drive chain (A) onto drive sprocket (B).

Reel Drive Chain, page 445.

Installing Reel Drive Cover, page 43.

Tighten the drive chain. For instructions, refer to *Tightening*

Reinstall the reel drive cover. For instructions, refer to

3. Install the cotter pin. If necessary, tighten slotted nut (A) to the next slot to install the cotter pin.

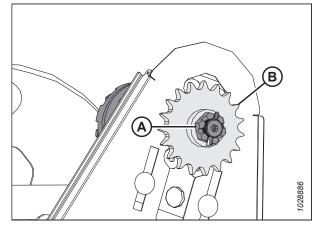


Figure 4.358: Single Sprocket

Notesting to the second s

Figure 4.359: Single Sprocket

4.14.3 Changing Reel Speed Chain Position with Two Speed Kit Installed

The reel drive sprocket is attached to the reel drive motor. By changing the drive and driven sprockets the speed and torque of the reel can be changed.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to Opening Header Endshields, page 35.
- 3. Loosen the reel drive chain. For instructions, refer to Loosening Reel Drive Chain, page 444.

4. Move chain (A) from the current set of sprockets to other set (B).

NOTE:

The inner set of sprockets are for high torque applications, and the outer set of sprockets are for high speed applications.

NOTE:

- If converting from the high speed setting to the high torque setting, move the chain on the top driver sprocket first. This will allow for more chain slack to make the change on the bottom driven sprocket
- If converting from the high torque setting to the high speed setting, move the chain on the bottom driven sprocket first. This will allow for more slack to make the change on the top driver sprocket.

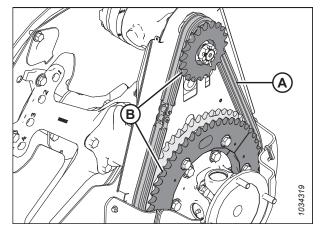


Figure 4.360: Reel Drive Sprocket

5. Tighten the reel drive chain. For instructions, refer to *Tightening Reel Drive Chain, page 445*.

4.14.4 Double-Reel or Triple-Reel Drive U-Joint

On headers equipped with a double-reel, the double-reel drive U-joint allows each reel to move independently.

Lubricate the U-joint according to the specifications. For instructions, refer to 4.3 Lubrication, page 266.

Replace the U-joint if severely worn or damaged. For instructions, refer to *Removing Double-Reel or Triple Reel Drive U-Joint, page 449*.

Removing Double-Reel or Triple Reel Drive U-Joint

If the double-reel U-joint is worn or damaged, it will need to be replaced.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Remove the drive cover. For instructions, refer to Removing Reel Drive Cover, page 41.
- 3. Support the inboard end of the right reel with a front end loader and nylon slings (A) or equivalent lifting devices.

IMPORTANT:

To avoid damaging or denting the center tube, support the reel as close to the end disc as possible.

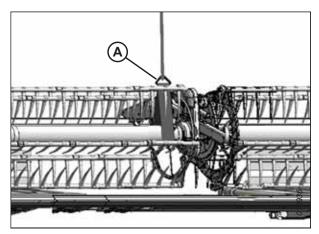


Figure 4.361: Supporting Reel

4. Remove four bolts (A) securing the reel tube to U-joint flange (B), and move the reel sideways.

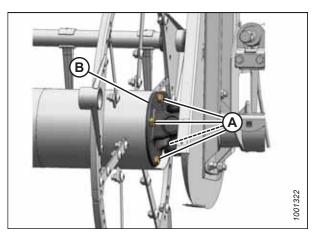


Figure 4.362: U-Joint

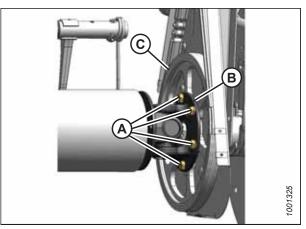


Figure 4.363: U-Joint

7. **Triple reel only:** There is a shim (A) between the reel tube and the U-joint. Make sure to retain this shim for reinstallation.

Remove six bolts (A) attaching U-joint flange (B) to driven

It may be necessary to move the right reel sideways so that

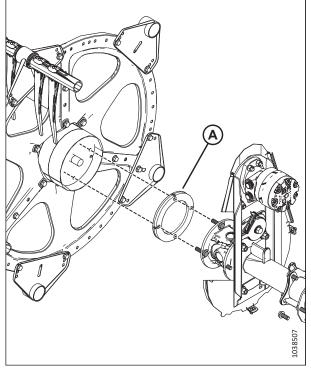


Figure 4.364: Shim – Triple Reel Only

5.

6.

sprocket (C).

NOTE:

Remove the U-joint.

the U-joint can clear the tube.

Installing Double-Reel or Triple Reel U-Joint

Once the old U-joint has been removed, the new one can be installed.

- 1. Position U-joint flange (B) onto driven sprocket (C) as shown.
- Apply medium-strength threadlocker (Loctite[®] 243 or equivalent), and install six bolts (A). Hand-tighten the bolts; do NOT torque the bolts.

NOTE:

Only four bolts (A) are shown in the illustration at right.

NOTE:

It may be necessary to move the right reel sideways so that the U-joint can clear the reel tube.

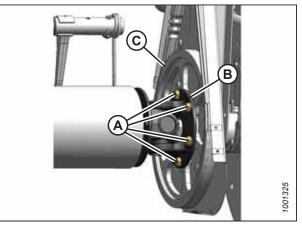


Figure 4.365: U-Joint

3. **Triple reel only:** Make sure shim (A) is placed between the reel tube and the U-joint. Align the holes in the shim with the holes in the reel tube.


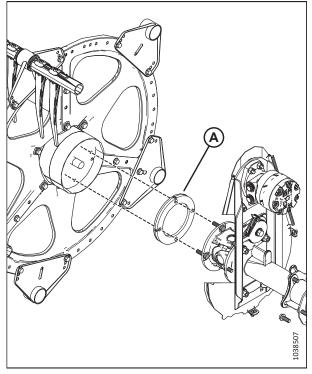


Figure 4.366: Shim – Triple Reel Only

- 4. Position the reel tube against the reel drive and engage the stub shaft into the U-joint pilot hole.
- 5. Rotate the reel until the holes in the end of the reel tube and U-joint flange (B) line up.
- 6. Apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to four 1/2 in. bolts (A) and secure in the flange.
- 7. Torque the ten bolts to 110 Nm (81 lbf·ft).

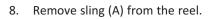

9. Install the drive cover. For instructions, refer to *Installing Reel Drive Cover, page 43*.

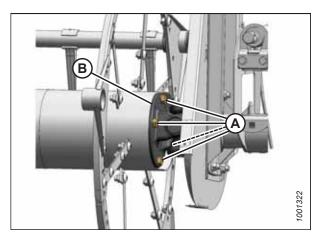


Figure 4.367: U-Joint

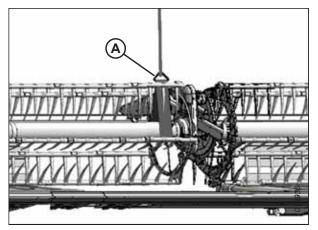


Figure 4.368: Supporting Reel

4.14.5 Reel Drive Motor

The reel drive motor is used on the reel drive system on double-reel, and triple reel draper headers. This motor does not require regular maintenance or servicing. If problems occur with the motor, remove it and have it serviced by your MacDon Dealer.

Removing Reel Drive Motor

Follow this procedure to remove the reel drive motor if it has an issue. If problems occur with the motor, remove it and have it serviced by your MacDon Dealer.

To prevent injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Loosen the drive chain. For instructions, refer to *Loosening Reel Drive Chain, page 444*.
- 3. Remove the drive sprocket. For instructions, refer to Removing Reel Drive Single Sprocket, page 447.

4. Mark hydraulic lines (A) and their locations in motor (B) to ensure correct reinstallation.

NOTE:

Before disconnecting the hydraulic lines, clean the motor's ports and exterior surfaces.

5. Disconnect hydraulic lines (A) at motor (B). Cap or plug open ports and lines.

- 6. If countersunk screws (B) are not accessible through the openings in the chain case, loosen the mounting hardware on motor mount (A), and slide the motor mount up or down until the screws are accessible.
- 7. Remove four countersunk screws (B), and remove motor (C).
- 8. If the motor is being replaced, remove the hydraulic fittings from the old motor and install them in the new motor using the same orientations.

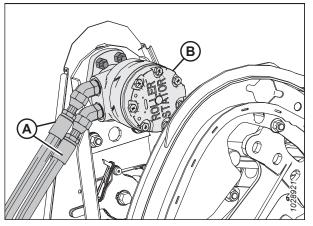


Figure 4.369: Reel Motor and Hoses

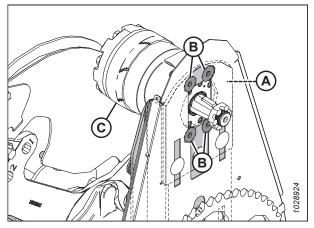


Figure 4.370: Reel Drive Motor Mounting Screws

Installing Reel Drive Motor

Follow this procedure to install the reel drive motor. If problems occur with the motor, remove it and have it serviced by your MacDon Dealer.

 If mounting holes (B) are not accessible through the openings in the chain case, loosen the mounting hardware on motor mount (A), and slide the motor mount up or down as required.


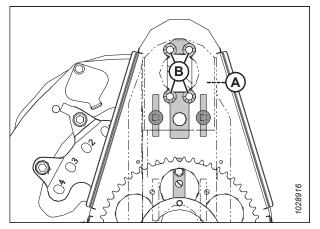


Figure 4.371: Reel Drive Motor Mounting Holes

- 2. Attach motor (A) to motor mount (B) with four M12 x 40 mm countersunk screws and nuts (C).
- 3. Torque the hardware to 95 Nm (70 lbf·ft).
- 4. If installing a new motor, install the hydraulic fittings (not shown) from the original motor.

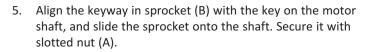

- 6. Torque slotted nut (A) to 12 Nm (9 lbf·ft).
- 7. Install the cotter pin. If necessary, tighten slotted nut (A) to the next slot to install the cotter pin.

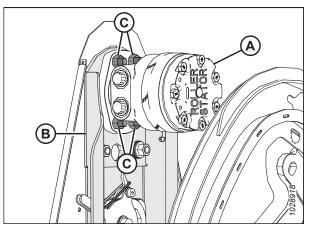


Figure 4.372: Reel Drive Motor

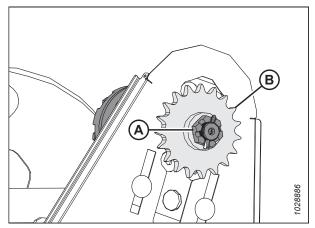


Figure 4.373: Reel Drive

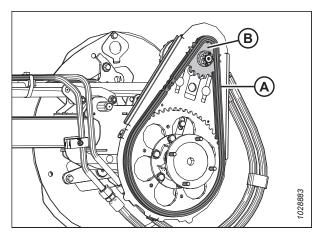


Figure 4.374: Reel Drive

8. Install drive chain (A) onto drive sprocket (B).

- If mounting hardware (A) was loosened for this procedure, ensure there are three stacked Belleville washers per bolt (B) before retightening.
- 10. Orient the Bellville washers so that the outer edge of first washer (C) is against the casting, and the outer edges of the next two washers (D) are facing each other.
- 11. Tighten nuts (A) until they bottom out (47–54 Nm [35–40 lbf·ft]), then back off a 3/4 turn.
- 12. Tighten the drive chain. For instructions, refer to *Tightening Reel Drive Chain, page 445*.

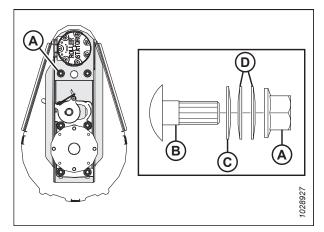


Figure 4.375: Reel Drive Motor Mount

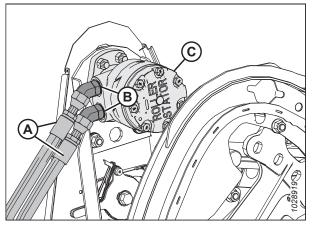


Figure 4.376: Reel Motor and Hoses

Remove the caps or plugs from the ports and lines and connect hydraulic lines (A) to hydraulic fittings (B) on motor (C).

NOTE:

Ensure hydraulic lines (A) are installed in their original locations.

4.14.6 Replacing Drive Chain

The drive chain allows the hydraulic reel drive motor to turn the reel. It can be replaced if damaged or worn.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Remove the reel drive cover. For instructions, refer to *Removing Reel Drive Cover, page 41*.
- 3. Loosen the drive chain. For instructions, refer to *Loosening Reel Drive Chain, page 444*.

4. Support the inboard end of the right reel with a front-end loader and nylon slings (A) or equivalent lifting devices.

IMPORTANT:

Avoid damaging or denting the center tube by supporting the reel as close to the end of the reel as possible.

5. Remove four bolts (A) securing the reel tube to U-joint flange (B).

- 6. Move the right reel sideways to separate reel tube (A) from U-joint (B).
- 7. Remove drive chain (C).
- 8. Route chain (C) over U-joint (B) and position onto the sprockets.

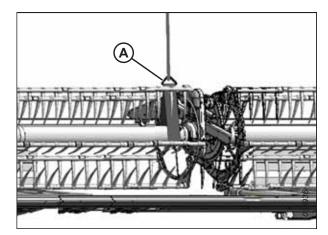


Figure 4.377: Supporting Reel

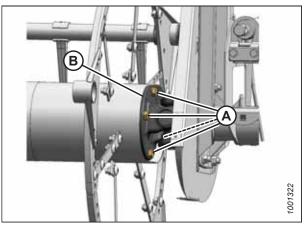


Figure 4.378: U-Joint

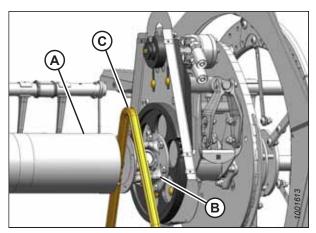


Figure 4.379: Replacing Chain

- 9. Position the right reel tube against the reel drive and engage the stub shaft into the U-joint pilot hole.
- 10. Rotate the reel until the holes in end of the reel tube and U-joint flange line up.
- 11. Apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to four 1/2 in. bolts (A) and secure them to the flange with lock washers.
- 12. Torque bolts (A) to 109 Nm (80 lbf·ft).

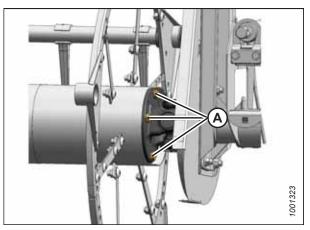


Figure 4.380: U-Joint

Figure 4.381: Supporting Reel

- 13. Remove temporary reel sling (A).
- 14. Tighten the drive chain. For instructions, refer to *Tightening Reel Drive Chain, page 445*.
- 15. Reinstall the reel drive cover. For instructions, refer to *Installing Reel Drive Cover, page 43*.

4.15 Contour Wheels – Option

The ContourMax[™] Contour Wheels option allows the header to flex with the contours of the field leaving a consistent stubble height while cutting up to 46 cm (18 in.) above the ground.

4.15.1 Leveling ContourMax[™] Wheel Height

The ContourMax^M wheels allow the header to mirror the contours of the ground, and can be adjusted between 0 mm (0 in.) and 457 mm (18 in.) from the ground surface.

To avoid bodily injury or death from unexpected startup or fall of a raised machine, stop engine, remove key, and engage lift cylinder lock-out valves before going under machine for any reason.

Ensure that all bystanders have cleared the area.

NOTE:

The header float must be set before leveling the ContourMax[™]. For instructions refer to *Checking and Adjusting Header Float, page 127*.

NOTE:

The wing balance must be set before leveling the ContourMax[™]. For instructions refer to 3.9.4 Checking and Adjusting Wing Balance, page 146.

- 1. Unlock the header wings. For instructions, refer to *Locking/Unlocking Header Wings, page 138*.
- 2. Unlock the header float. For instructions refer to Locking/Unlocking Header Float, page 138.
- 3. Start the engine. For instructions, refer to the combine operator's manual.
- 4. Park the combine on a level surface.
- 5. Lower the reel fully.
- Set ContourMax[™] wheel height indicator (A) to number 2 (B).

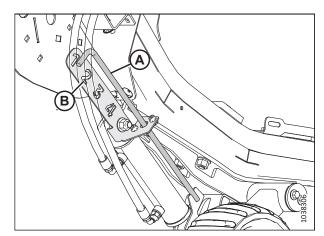


Figure 4.382: Height Indicator – Rear Left End

- 7. Lower the header until the auto header height indicator (A) is at number 2 (B).
- 8. Shut down the engine, and remove the key from the ignition.

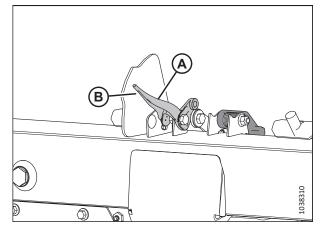


Figure 4.383: Float Setting Indicator

- 9. At the center of the header, measure distance (A) from the ground to the tip of the center guard and record the measurement.
- 10. At each end of the header, measure the distance (A) from the ground to the tip of the end guard and record both of the measurements.
 - If the difference between the end measurements and the center measurement is less than 25 mm (1 in.), no adjustment is required.
 - If the difference between the end measurements and the center measurement is greater than 25 mm (1 in.), adjustment is required. Continue to the next step.

Ensure that all bystanders have cleared the area.

- 11. Start the engine.
- 12. Raise the header fully.
- 13. Engage the header's safety props. For instructions, refer to the combine operator's manual.

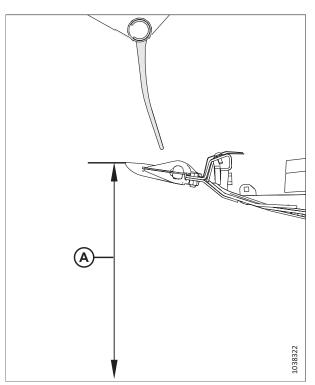


Figure 4.384: Float Setting Indicator

- 14. Remove pin (A).
- 15. Reposition adjuster plate (B) in the slot to align with a different hole. There is approximately 24 mm (1/2 in.) difference between each of the holes.
 - If the measurement is less than the measurement at the center of the header, move the adjuster plate TOWARD the cutterbar.
 - If the measurement is more than the measurement at the center of the header, move the adjuster plate
 AWAY from the cutterbar.
- 16. On the opposite end on the header, repeat Step 14, page 460 and Step 15, page 460.

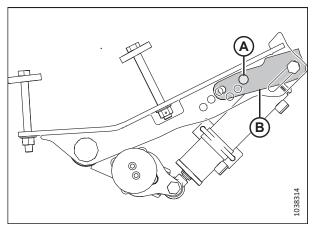


Figure 4.385: Pin Location – Left Outer Wheel

- 17. Disengage the header safety props. Refer to the combine operator's manual for instructions.
- 18. Lower the header until the auto header height indicator is at number 2.
- 19. Shut down the engine, and remove the key from the ignition.
- 20. Measure the guard to ground distance again. Verify that the three measurements are the same. If more adjustment is required, repeat Step 14, page 460.

4.15.2 Lubricating Contour Wheel System

Lubricating the contour wheel system will help ensure reliable operation and maximize the service life of the components.

The components of the contour wheel system require lubrication at different intervals:

- Lubricate the inner wheel assemblies every 250 hours
- Lubricate the wheel axles annually

DANGER

To avoid bodily injury or death from unexpected startup or fall of raised header, stop the engine, remove the key, and engage the safety props before going under the header. If you are using a lifting device to support the header, be sure that the header is secure before proceeding.

- 1. Start the engine.
- 2. Raise the header fully.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Engage the header safety props or support the header on blocks on level ground. If using blocks to support the header, ensure the header is approximately 914 mm (36 in.) off the ground.

MAINTENANCE AND SERVICING

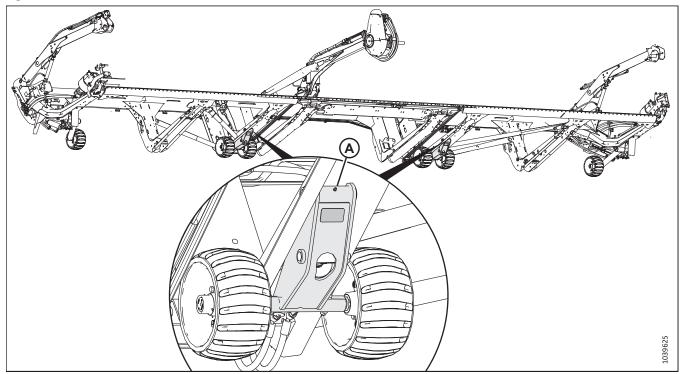


Figure 4.386: Inner Contour Wheel Assemblies

A - Inner Wheel Assemblies (Two Places)

- 5. Apply grease to lubrication points (A) at the two inner wheel assemblies.
- 6. Remove rubber plug (A) from contour wheel hub. Retain the plug for reinstallation.

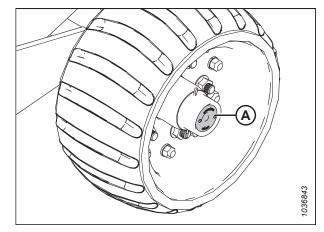


Figure 4.387: Rubber Plug on Contour Wheel Axle

7. Apply grease at lubrication point (A), and allow the excess grease to flow out the front of the axle hub.

IMPORTANT:

Grease **SLOWLY**. Rapid greasing may force rear seal to move.

- 8. Reinstall rubber plug (B).
- 9. Repeat the procedure for the remaining contour wheels.

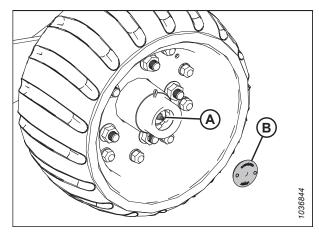


Figure 4.388: Lubrication Point on Contour Wheel Axle

4.15.3 Zeroing Mechanical Indicator

Zero the mechanical indicator to make sure it operates accurately.

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop the engine and remove the key from the ignition before making adjustments to the machine. If it is impossible to engage safety props and impractical to block the header, NEVER climb onto or go underneath an unsupported header.

MAINTENANCE AND SERVICING

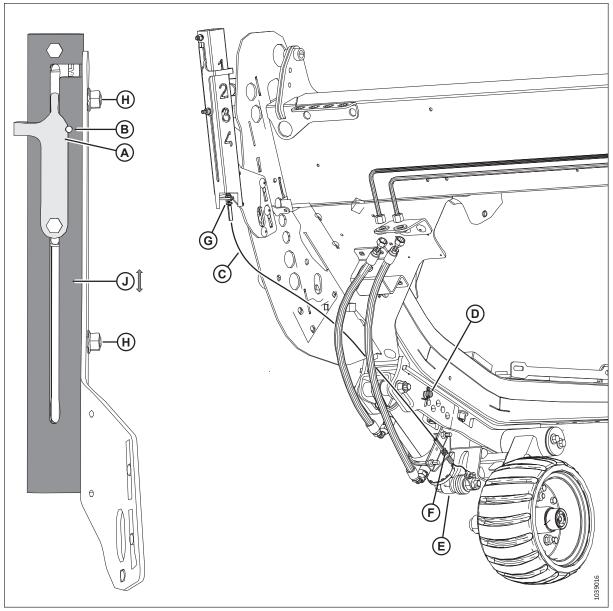


Figure 4.389: Mechanical Indicator

- 1. Shut down the engine, and remove the key from the ignition.
- 2. The mechanical indicator is zeroed when the notch in indicator (A) is aligned with hole (B) under the following conditions:
 - Cable (C) is tight
 - Pin is installed in hole (D)
 - Cylinder (E) is fully retracted
- 3. If the notch is not aligned with the hole under those conditions, adjust any or all of the following parts:
 - Loosen two nuts (H) and slide tube (J) up or down. Tighten the nuts.
 - Adjust cable jam nuts at locations (G) or (F). Tighten the cable jam nuts to 6 Nm (4 lbf·ft).

4.16 Transport System – Option

The header can be equipped with a set of transport wheels, so that the header can be towed by a combine or tractor.

Refer to *Adjusting EasyMove™ Transport Wheels, page 120* for more information.

4.16.1 Checking Wheel Bolt Torque

The transport wheel bolt torque should be checked after one operating hour following the installation of the wheels, and every 100 operating hours thereafter.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Follow the bolt tightening sequence shown, and torque the wheel bolts to 115 Nm (85 lbf·ft).

IMPORTANT:

Whenever a wheel is removed and reinstalled, check the wheel bolt torque after 1 hour of operation and every 100 hours thereafter.

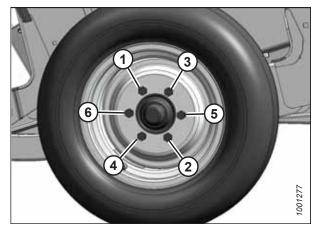


Figure 4.390: Bolt Tightening Sequence

4.16.2 Checking Transport Assembly Bolt Torque

The hardware that secures the optional transport system components to the header must be checked daily to ensure safe operation.

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

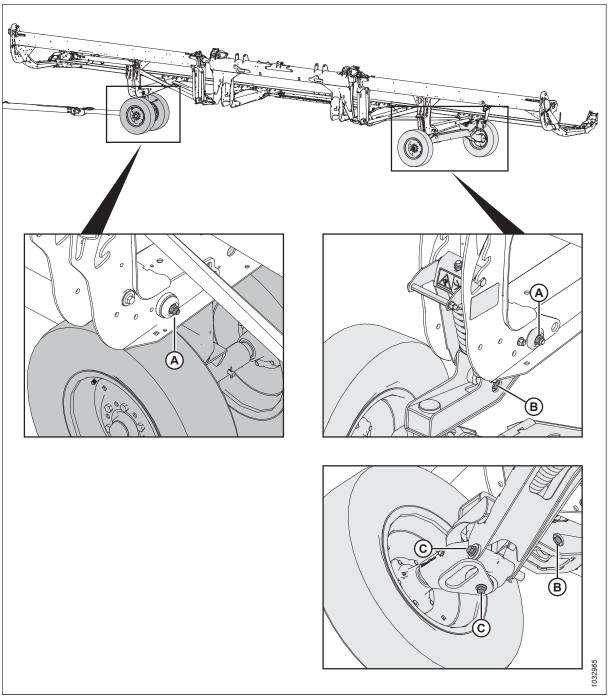


Figure 4.391: Transport Assembly Bolts

- 1. Check the following bolts **DAILY** to ensure bolts are torqued to specified values:
 - Bolts (A) to 234 Nm (173 lbf·ft)
 - Bolts (B) to 343 Nm (253 lbf·ft)
 - Bolts (C) to 343 Nm (253 lbf·ft)

4.16.3 Checking Tire Pressure

Proper tire pressure ensures tires perform properly and wear evenly.

- A tire can explode during inflation, which could cause serious injury or death.
- Do NOT stand over tire. Use a clip-on chuck and extension hose.
- Do NOT exceed maximum inflation pressure indicated on tire label or sidewall.
- Replace tires that have defects.
- Replace wheel rims that are cracked, worn, or severely rusted.
- Never weld a wheel rim.

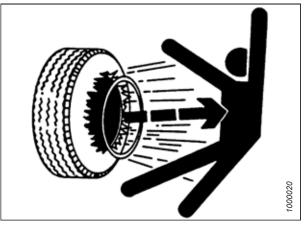


Figure 4.392: Inflation Warning

- Never use force on an inflated or partially inflated tire.
- Make sure the tire is correctly seated before inflating to operating pressure.
- If the tire is not correctly positioned on the rim or is overinflated, the tire bead can loosen on one side causing air to escape at high speed and with great force. An air leak of this nature can thrust the tire in any direction endangering anyone in the area.
- Make sure all the air is removed from the tire before removing the tire from the rim.
- Do NOT remove, install, or repair a tire on a rim unless you have the proper equipment and experience to perform the job.
- Take the tire and rim to a qualified tire repair shop.
- 1. Check the tire pressure. For pressure specifications, refer to Table 4.6, page 466.
- 2. Make sure the tire is correctly seated on the rim before inflating.
 - a. If the tire is not correctly positioned on the rim, take the tire to a qualified tire repair shop.
- 3. If inflation is required, use a clip-on chuck and an extension hose to inflate the tire to the desired pressure.

IMPORTANT:

Do NOT exceed maximum inflation pressure indicated on tire label or sidewall.

Table 4.6 Tire Inflation Pressure

Size	Load Range	Pressure
225/75 R15	E	552 kPa (80 psi)

4.16.4 Changing Tow-Bar Hitch Connection from Pintle to Clevis

The transport tow-bar includes clevis and pintle ring towing mounts.

- 1. Remove the hairpin from clevis pin (A) and disconnect chain (B). Store clevis pin (A) with the pintle hitch adapter.
- 2. Remove four nuts, four bolts, and eight flat washers (C) from the end of the tow-bar. Retain the hardware for reinstallation.

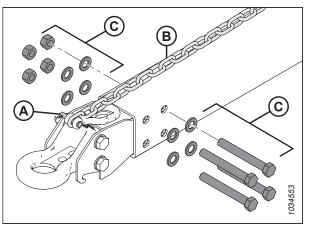


Figure 4.393: Removing Pintle Towing Adapter

- 3. Tape or tie 6 m (20 ft.) of pull-line to harness transport end (A).
- 4. Remove bolt (B) securing the harness in the P-clip. Retain the bolt.
- 5. From hitch end (C), gently pull the harness out through the opening in pintle (D) until you can see the pull-line, then disconnect the pull-line and set the pintle aside. Leave the pull-line inside the tow-bar.

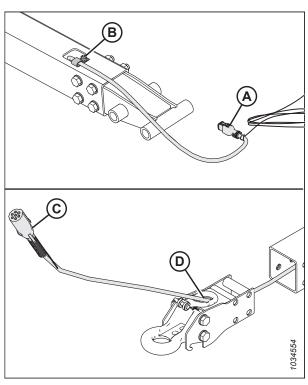


Figure 4.394: Removing Pintle Towing Adapter

- 6. Retrieve the clevis adapter. Insert transport connector (A) of the electrical harness through opening (B) in the ring on the clevis adapter.
- 7. Tie or tape pull-line (C) to the harness. Using the pull-line at the transport end, gently pull the harness through the tow-bar.
- 8. Ensure that transport end (A) of the harness extends 48 cm (18 7/8 in.) past P-clip (D).
- 9. Secure the harness in the P-clip with the bolt removed in Step *6, page 468*.

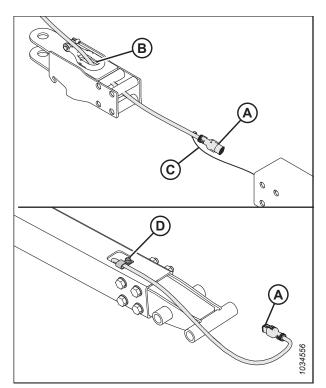


Figure 4.395: Installing Clevis Ring Adapter

Figure 4.396: Installing Clevis Ring Adapter

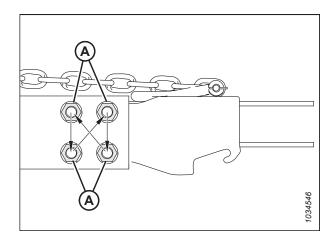


Figure 4.397: Torque Sequence

10. Install four nuts, four bolts, and eight flat washers (A) to secure the clevis adapter to the tow-bar.

NOTE:

Ensure that hardware (A) is reinstalled in the same orientation it was in before it was removed.

11. Reconnect the chain with clevis pin (B) and secure it with the cotter pin.

- Tighten nuts (A) in the cross pattern shown. Recheck each nut in sequence until they are torqued to 310 Nm (229 lbf·ft).
- 13. Insert the hitch pin into the clevis adapter. Secure the pin with the lynch pin.

NOTE:

The pins are not shown in the illustration.

4.16.5 Changing Tow-Bar Hitch Connection from Clevis to Pintle

The transport tow-bar includes clevis and pintle ring towing mounts.

- 1. Remove the hairpin from clevis pin (A) and disconnect chain (B). Store clevis pin (A) with the clevis adapter.
- 2. Remove four nuts, four bolts, and eight flat washers (C) from the end of the tow-bar. Retain the hardware for reinstallation.

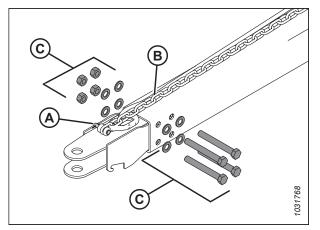


Figure 4.398: Removing Clevis Adapter

- 3. Tape or tie 6 m (20 ft.) of pull-line to harness transport end (A).
- 4. Remove bolt (B) securing the harness in the P-clip. Retain the bolt for reinstallation.
- From hitch end (C), gently pull the harness out through the opening in clevis (D) until you can see the pull-line, then disconnect the pull-line and set the clevis adapter aside. Leave the pull-line inside the tow-bar.

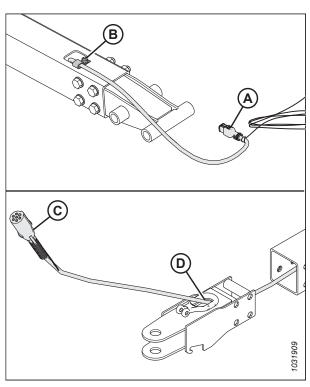


Figure 4.399: Removing Clevis Towing Adapter

- 6. Insert transport connector (A) of the electrical harness through opening (B) in the pintle ring adapter.
- Tie or tape pull-line (C) to the harness. Gently pull the harness through the tow-bar with the pull line at the transport end.
- 8. Ensure that transport end (A) of the harness extends 48 cm (18 7/8 in.) past P-clip (D).
- 9. Secure the harness in the P-clip with the bolt removed in Step *4, page 469*.

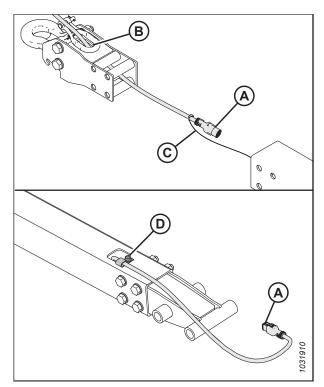


Figure 4.400: Installing Pintle Ring Adapter

Figure 4.401: Installing Pintle Ring Adapter

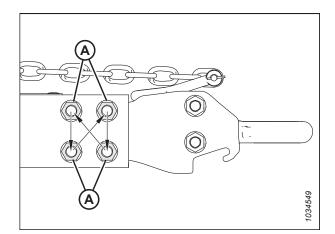


Figure 4.402: Torque Sequence

10. Reinstall four nuts, four bolts, and eight flat washers (A) to secure the pintle ring adapter to the tow-bar.

NOTE:

Ensure that hardware (A) is reinstalled with the four bolt heads on the same side.

11. Reconnect the chain with clevis pin (B) and secure it with the cotter pin.

- Tighten nuts (A) in the cross pattern shown. Recheck each nut in sequence until they are torqued to 310 Nm (229 lbf·ft).
- 13. Insert the hitch pin into the pintle ring adapter. Secure the pin with the lynch pin.

NOTE:

The pins are not shown in the illustration.

4.17 VertiBlade[™] Vertical Knife – Option

The optional vertical knife kit is a vertical crop cutter that is mounted to each end of the header. The vertical knife slices through tangled, shatter-prone crops such as canola to reduce seed loss.

4.17.1 Replacing Vertical Knife Sections

The VertiBlade[™] Vertical Knife Kit includes a service kit that supplies four replacement knife sections. Follow these instructions to replace a damaged knife section.

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

Install vertical knife guards before attaching or removing vertical knives. Wear heavy gloves when working around or handling knives.

- 1. Raise the header 153–254 mm (6–10 in.) off of the ground.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Engage the safety props.
- 4. Open the header endshields.
- 5. Detach the vertical knife from the header and set aside.
- 6. Remove retaining pin (A) from the knife guard.
- 7. Remove the knife guard using handle (B).

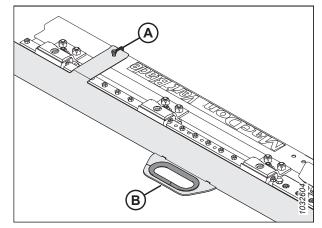


Figure 4.403: Vertical Knife Guard

8. Remove three bolts (A) securing milling bar (B) to the blade bracket and knife section assembly (C). Tilt milling bar (B) upwards and slide assembly (C) out.

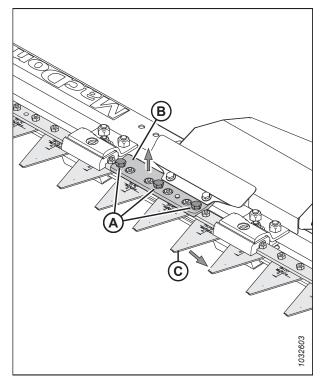


Figure 4.404: Vertical Knife – Guard Removed

NOTE:

If you cannot tilt milling bar (A) upwards enough to slide knife section assembly (B) out, remove two bolts (C) attaching hood (D) to the vertical knife assembly. Loosen two nuts (E) to loosen slide rail (F). Milling bar (A) should now be loose enough to tilt upwards.

IMPORTANT:

You should not need to loosen clip hardware (G) and clips (H) to slide the knife section assembly out. If you need to loosen this hardware, make sure to tighten the hardware properly by following Step *13, page 473* during reinstallation. Overtightening can cause the motor to overheat, melt plastic components, and burn out. Undertightening can cause debris to plug the knives.

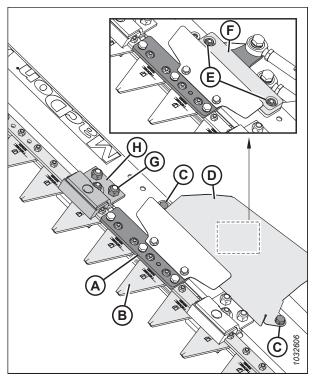


Figure 4.405: Vertical Knife – Guard Removed

- 9. Remove two screws (A) and nuts (B) securing knife section (C) to bracket (D).
- 10. Apply medium-strength threadlocker (Loctite[®] 243 or equivalent) to two new screws (A) (MAC313790) from the kit.
- 11. Attach new knife section (C) (MAC313788) to bracket (D) using two screws (A) and nuts (B) (MAC313789).
- 12. Tighten nuts (B) to 7 Nm (5 lbf·ft).

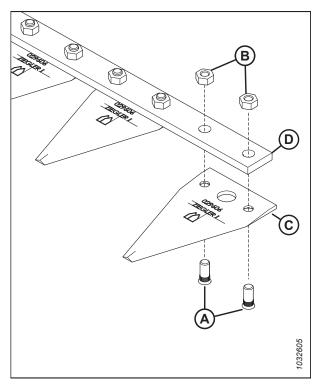


Figure 4.406: Knife Section Assembly

- 13. If you loosened clip hardware (A), (B), and clips (C), tighten the hardware as follows:
 - a. Tighten M8 nut (A) so that gap (D) at the tip of knife sections (E) does **NOT** exceed 3 mm (1/8 in.).
 - b. Make sure clips (C) do **NOT** clamp too tightly and restrict knife movement.
 - c. Tighten two M10 nuts (B) to 50 Nm (37 lbf·ft).
- 14. Reinstall remaining components and knife guard. Installation is the reverse of removal.

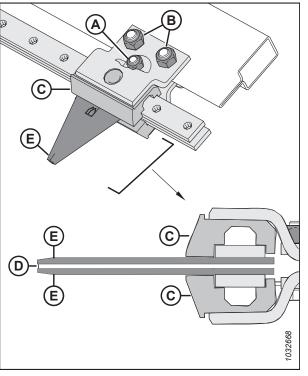


Figure 4.407: Gap Between Clip and Knife Section

4.17.2 Greasing Vertical Knife

Regular maintenance is required to keep your machine operating at peak performance. It also allows you to do a visual inspection of the machine that may help identify issues early.

Use high temperature high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base.

Lubricate the vertical knife push rods (A) after initial installation, and then every 50 hours thereafter.

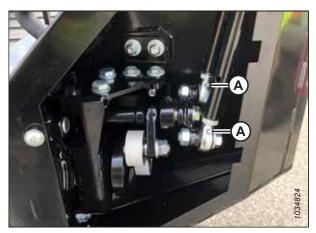


Figure 4.408: Grease Zerks on Vertical Knife Push Rods – Right Side Shown, Left Side Opposite

To lubricate the vertical knife push rods, follow these steps:

NOTE:

Some parts have been removed from the illustrations for clarity.

DANGER

To prevent bodily injury or death from the unexpected start-up or fall of a raised machine, always stop the engine and remove the key before leaving the operator's seat, and always engage the safety props before going under the machine for any reason.

- 1. Lower the header to the ground.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Remove hex socket button head screws (A), and remove access cover (B).

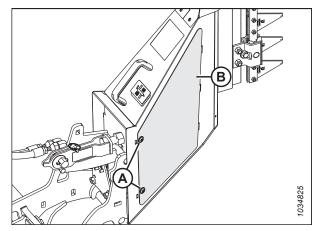


Figure 4.409: Vertical Knife Access Cover – Right Side Shown, Left Side Opposite

MAINTENANCE AND SERVICING

4. Apply grease to each push rod grease zerk (A) (2 per vertical knife as shown).

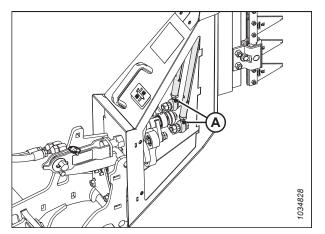


Figure 4.410: Grease Zerks on Vertical Knife Push Rods – Right Side Shown, Left Side Opposite

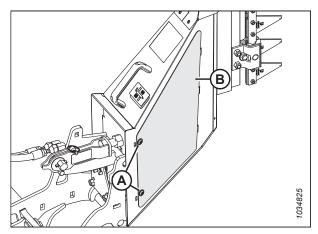


Figure 4.411: Vertical Knife Access Cover – Right Side Shown, Left Side Opposite

- 5. Reinstall access cover (B) and secure it with hex socket button head screws (A).
- 6. Repeat the greasing procedure for the opposite vertical knife.

Chapter 5: Options and Attachments

The following options and attachments are available for use with your header. See your MacDon Dealer for availability and ordering information.

5.1 Crop Delivery Kits

Crop delivery is the process of how the crop gets from the cutterbar to the feeder house. Optional crop delivery kits can optimize header performance for specific crops or conditions.

5.1.1 Crop Lifter Kit

Crop lifters are recommended for severely lodged cereal crops where the operator wants maximum possible stubble height.

Installation instructions are included in the kit.

Each kit (MACB7022) contains 10 lifters. Order the following number of kits depending on header size:

- 7.6 m (25 ft.) 3 kits
- 9.1 m (30 ft.) 3 kits
- 10.6 m (35 ft.) 4 kits
- 12.1 m (40 ft.) 4 kits
- 12.5 m (41 ft.) –4 kits
- 13.7 m (45 ft.) 5 kits
- 15.2 m (50 ft.) 5 kits

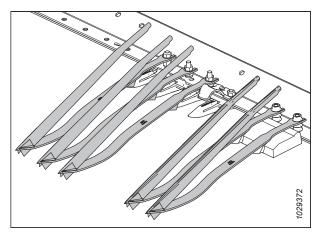


Figure 5.1: Grain Crop Lifter Kit

5.1.2 Crop Lifter Storage Rack Kit

Crop lifter racks are used to store crop lifters at the rear of the header.

Installation instructions are included in the kit.

MACB7023

NOTE:

FD225 headers use one MACB7023 kit only.

NOTE:

This kit is for one side only. Order two kits for both sides of the header.

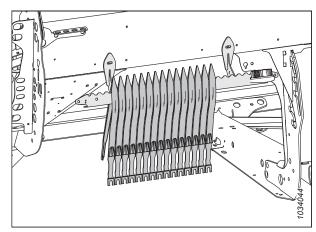


Figure 5.2: Crop Lifter Rack kit – Left Side

5.1.3 Crop Divider Storage Bracket Kit

The divider storage bracket kit is used to store the standard divider cones on the header.

Installation instructions are included in the kit.

MACB7030

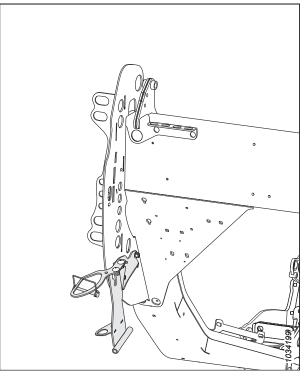


Figure 5.3: Divider Storage Bracket Kit – MACB7030

5.1.4 Floating Crop Dividers

Floating dividers follow the ground contour and allow for improved dividing in both lodged and standing crops and reduce trampling.

Installation instructions are included in the kit.

MACB7346

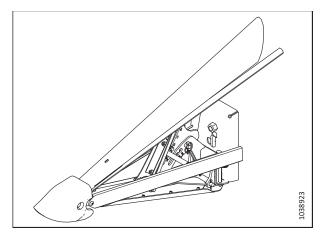


Figure 5.4: Floating Crop Divider

5.1.5 Full Length Upper Cross Auger

The upper cross auger attaches to the header in front of the backtube, and improves crop feeding into the center of the header in heavy crop conditions.

The upper cross auger (UCA) (A) is ideal for high-volume harvesting of forages, oats, canola, mustard, and other tall, bushy, hard-to-feed crops. Order the following bundles:

Base auger package

Includes auger, mounts, drive, and hydraulic completion plumbing for headers that are upper cross auger ready.

Order from the following list of kits according to your header size:

- 7.6 m (25 ft.) MAC6413 (two piece)
- 9.1 m (30 ft.) MACB6414 (two piece)
- 10.6 m (35 ft.) MACB6415 (two piece)
- 12.1 m (40 ft.) MACB6417 (three piece)
- 12.5 m (41 ft.) MACB6416 (two piece)
- 13.7 m (45 ft.) MACB6418 (three piece)
- 15.2 m (50 ft.) MACB6419 (three piece)

Hydraulic Plumbing Package

Required only for headers without factory installed UCA hydraulics. Includes hydraulic lines to make header UCA ready, if not factory configured.

Order from the following list of kits according to your header size:

- 7.6 m (25 ft.) MACB7338 (two piece)
- 9.1 m (30 ft.) MACB7117 (two piece)
- 10.6 m (35 ft.) MACB7118 (two piece)
- 12.1 m (40 ft.) MACB7119 (three piece)
- 12.5 m (41 ft.) MACB7120 (two piece)
- 13.7 m (45 ft.) MACB7119 (three piece)
- 15.2 m (50 ft.) MACB7121 (three piece)

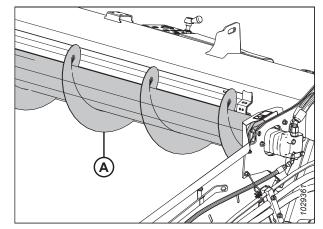


Figure 5.5: Upper Cross Auger

5.1.6 Rice Divider Rod Kit

Rice divider rods attach to the left and right crop dividers and divide tall and tangled rice crops in a similar manner to standard crop divider rods performing in standing crops.

The kit includes both left and right rods, and storage brackets.

Installation instructions are included in the kit.

MACB7238

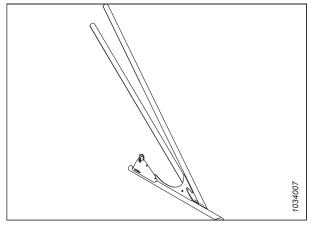


Figure 5.6: Left Rice Divider Rod Kit

5.1.7 VertiBlade[™] Vertical Knife Kit

The VertiBlade[™] is a vertical crop cutter that is mounted to each end of the header. It is used to cut though lodged or tangled crops.

Order the following bundles:

Base VertiBlade[™]

Includes knives, mounts, drive, and hydraulic completion plumbing to complete installation on power-divider ready header.

MACB7029

Hydraulic Plumbing Package

The hydraulic plumbing packages are required only for headers without factory-installed power divider hydraulics. The package includes hydraulic lines to make the header power-divider (VertiBlade[™]) ready.

Order one of the following based on your header size:

- 7.6 m (25 ft.) MACB7339
- 9.1 m (30 ft.) MACB7127
- 10.6 m (35 ft.) MACB7128
- 12.1 m (40 ft.) MACB7129
- 12.5 m (41 ft.) MACB7130
- 13.7 m (45 ft.) MACB7195
- 15.2 m (50 ft.) MACB7131

Installation instructions are included in kits.

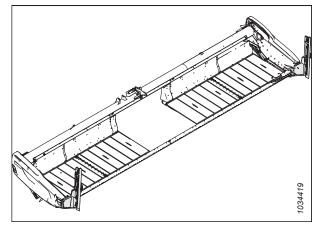


Figure 5.7: VertiBlade[™] Vertical Knife Kit

5.2 Cutterbar Kits

The cutterbar is located on the front of the header. It supports the knife and guards which is used to cut the crop.

5.2.1 Rock Retarder Kit

A rock retarder extends the height of the cutterbar lip to help prevent rocks rolling onto the draper decks.

Order bundles by header size:

- FD225, FD230, FD235, and FD241 MACB7122
- FD240, FD245, and FD250 MACB7123

NOTE:

Installation instructions are included in the kits.

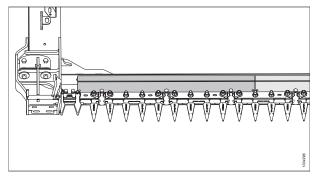


Figure 5.8: Rock Retarder Kit

5.2.2 Four-Point Knife Guard

Four-point guards provide increased knife protection in very rocky conditions, and can improve header performance with shatter-prone crops by reducing side-to-side crop motion.

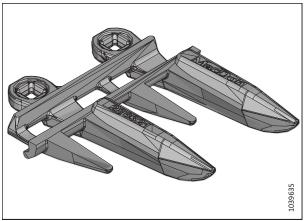


Figure 5.9: Four-Point Knife Guard

Four point guard kits are available for all FD2 Series header sizes. Refer to the Parts Catalog or contact your Dealer for part numbers.

5.3 FM200 Float Module Kits

The float module is used to attach the header to the combine. It combines the crop flow from both side drapers and also pulls crop into the combine feeder house.

5.3.1 10V Sensor Adapter Kit

This kit is for NH CR/CX Combines that use 10V sensors.

MACB7241

This kit is for the following NH CR/CX Combines:

- All CX800/CX8000/CX900 combines
- CR9040/CR9060 combines before serial number HAJ111000
- CR9070 combines before serial number Y8G1412000

5.3.2 Crop Deflector Kits

This kit installs different sizes of crop deflectors on the float module depending on feeder house size.

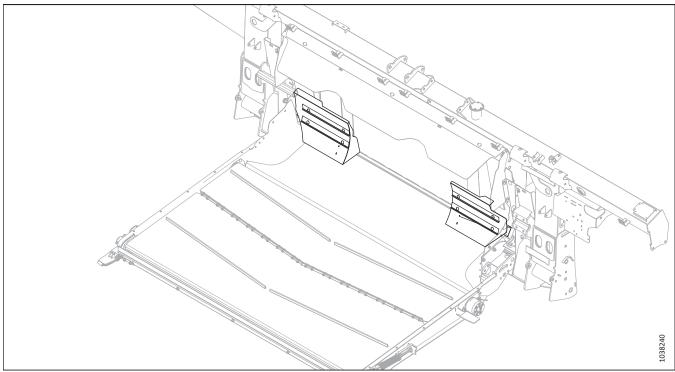


Figure 5.10: Crop Deflectors

Combine Feeder House Size	Bundle Number
Ultra Narrow	MACB7314
Narrow	MACB7347
Medium	MACB7348

5.3.3 Extended Center Filler

This kit is for the float module. It is a longer filler plate to seal the area behind the transition pan.

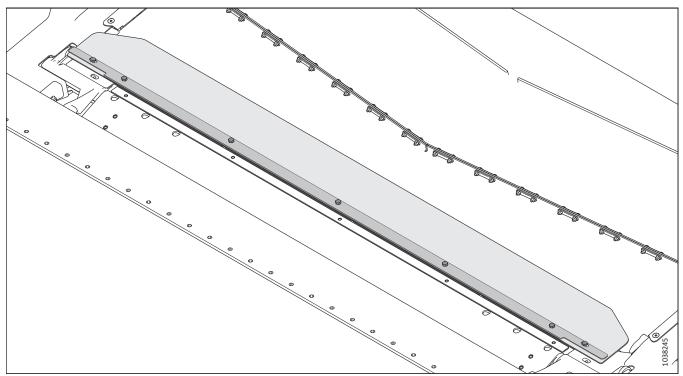


Figure 5.11: Extended Center Filler MACB6450

NOTE:

Installation instructions are included in the kit.

5.3.4 Feed Auger High-Wear Flighting Extension Kit

The flighting extension kit may allow better feeding of crop in green/wet straw conditions (for example, rice and green cereals).

Refer to *3.8.1 FM200 Feed Auger Configurations, page 87* for a list of flighting combinations.

MACB6400

NOTE:

Installation instructions are included in the kit.

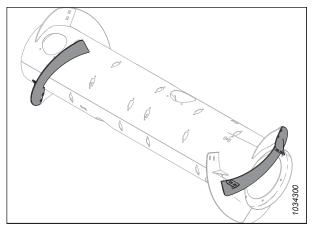


Figure 5.12: Feed Auger High-Wear Flighting Extension Kit

5.3.5 Full Interface Filler Kit

The Full Interface Filler Kit provides additional sealing between float module and header.

NOTE:

This kit is only available for European-configured headers.

Installation instructions are included in the kit.

MACB7031

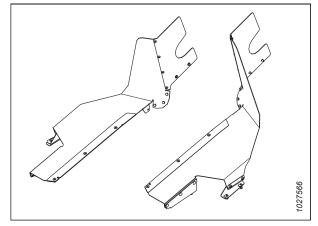


Figure 5.13: Full Interface Filler Kit

5.3.6 Hydraulic Reservoir Extension Kit

The hydraulic reservoir fill extension kit extends the breather cap position. This allows the float module to operate on steep hillsides while maintaining oil supply to the suction side of the pump.

This kit is recommended when operating on hills exceeding 5°.

MACB6057

NOTE:

Installation instructions are included in the kits.

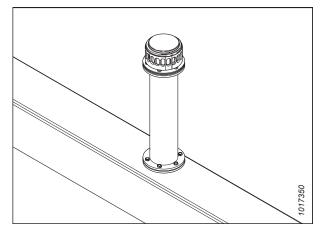


Figure 5.14: Hydraulic Reservoir Extension Kit

5.3.7 Lateral Tilt Plug Kit

This kit allows the combine lateral tilt to work with Auto Header Height Control (AHHC).

MACB7196

Not recommended for slopes over 10% grade.

NOTE:

Installation instructions are included in the kits.



Figure 5.15: Lateral Tilt Plug

5.3.8 Stripper Bar Kit

Stripper bars improve feeding in certain crops such as rice. They are **NOT** recommended in cereal crops.

Select the stripper bar kit based on combine feeder house width. For information, refer to Table *5.1, page 485*.

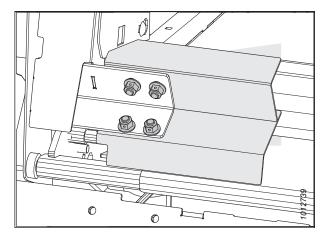


Figure 5.16: Stripper Bar Kit

NOTE:

Installation instructions are included in the kits.

Table 5.1 Stripper Bar Configurations and Recommendations

Bundle (MAC)	Stripper Bar Length	Opening Width Float Module	Recommended Feeder House Width
B6042	265 mm (10 1/2 in.)	1317 mm (52 in.)	1250–1350 mm (49–65 in.)
B6044	325 mm (13 in.)	1197 mm (47 in.)	For specialty crops only
B6045	365 mm (14 1/2 in.)	1117 mm (44 in.)	1100 mm (43 1/2 in.) and below

OPTIONS AND ATTACHMENTS

Bundle (MAC)	Stripper Bar Length	Opening Width Float Module	Recommended Feeder House Width
B6046	403 mm (16 in.)	1041 mm (41 in.)	For specialty crops only
B6213	515 mm (20 in.)	817 mm (32 in.)	For specialty crops only

Table 5.1 Stripper Bar Configurations and Recommendations (continued)

5.4 Header Kits

Header options add features or enhancements to the header frame rather than a specific system or function.

5.4.1 ContourMax[™] Contour Wheels Kit

The ContourMax[™] provides flex and auto header height control (AHHC) for stubble heights of 25–457 mm (1–18 in.) (standard header provides 0–152 mm [0–6 in.])

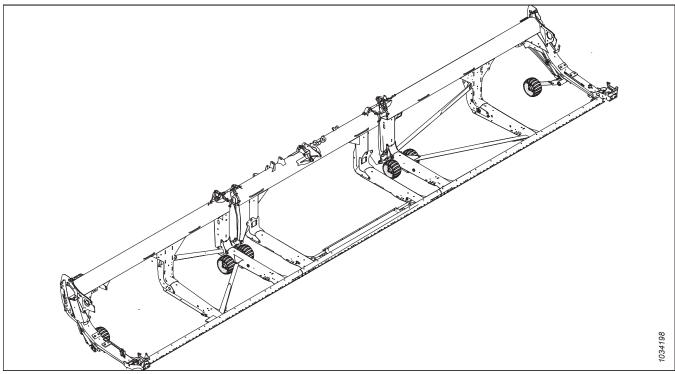


Figure 5.17: ContourMax[™] Contour Wheels

The kit consists of four wheel sets and hydraulic height adjustment from inside the combine cab. Installation instructions are included in the kit. Order the following bundles:

Base ContourMax[™] Package: Includes wheels, mounts, cylinders, control valve, and hydraulic plumbing to complete installation on ContourMax[™] ready header.

MACB7335

*Hydraulic Plumbing Package:*Includes hydraulic lines to make the header ContourMax[™] ready if it is not factory configured. Order from the following list of ContourMax[™] Contour Wheel hydraulic plumbing packages according to your header model:

- FD225 MACB7340
- FD230 MACB7082
- FD235 MACB7083
- FD240 MACB7113
- FD241 MACB7114
- FD245 MACB7193
- FD250 MACB7116

MACC2101

5.4.2 EasyMove[™] Transport System

The EasyMove[™] Transport System makes it faster than ever to move your header from field to field. When operating in the field, the wheels can also be used as stabilizer wheels.

Installation instructions are included in the kit.

In order to complete the installation of this kit, order one of the following according to header size:

- 9.1 m (30 ft.) MACC2048
- 10.6 m (35 ft.) MACC2048
- 12.1 m (40 ft.) MACC2050
- 12.5 m (41 ft.) MACC2050
- 13.7 m (45 ft.) MACC2050
- 15.2 m (50 ft.) MACC2050

MACC2048 consists of

- Stabilizer Wheels / Slow Speed Transport Base Kit MACB6288
- Wheels and Tires MACB6275
- Short Tow Pole MACB7391

MACC2050 consists of

- Stabilizer Wheels / Slow Speed Transport Base Kit MACB6288
- Wheels and Tires White Rims MACB6275
- Long Tow Pole MACB7392

NOTE:

The EasyMove[™] Transport System is not compatible with FD225 headers.

5.4.3 Inboard Steel End Finger Kit

Optional fingers to be used in difficult crops, lodged canola, and forage, where the angled plastic finger yields and distorts from heavy crop loads.

Installation instructions are included in the kit.

MAC311972

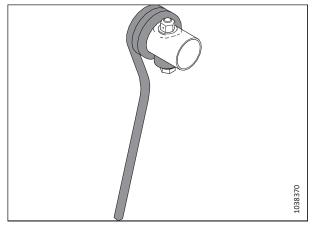


Figure 5.19: Inboard Steel End Finger

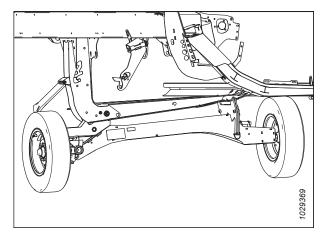


Figure 5.18: EasyMove[™] Transport System

5.4.4 Outboard Steel End Finger Kit

Optional fingers to be used in difficult crops such as lodged canola, and forage, where the angled plastic finger yields and distorts from heavy crop loads.

Installation instructions are included in the kit.

MAC311959

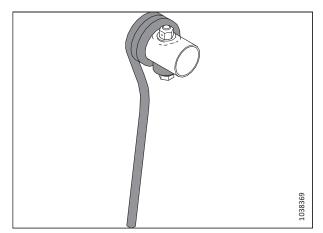


Figure 5.20: Outboard Steel End Finger

5.4.5 Side Hill Stabilizer Kit

The side hill stabilizer kit is recommended for cutting on side hills with a grade steeper than 5°.

Installation instructions are included in the kit.

MACB7028

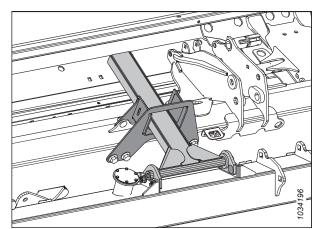


Figure 5.21: Side Hill Stabilizer Kit

5.4.6 Stabilizer Wheel Kit

The stabilizer wheel kit stabilizes the headers lateral movement when cutting at heights higher than possible with the standard skid shoes.

Installation and adjustment instructions are included in the kit.

MACC2051

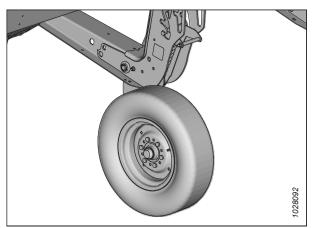


Figure 5.22: Stabilizer Wheel Kit

5.4.7 Steel Skid Shoes Kit

The steel skid shoes kit provides extended wear skid shoes for use in rocky, abrasive conditions.

IMPORTANT:

Not recommended for wet mud or conditions that are prone to sparking.

The kit contains two skid shoes. For full replacement of standard skid shoes, order three bundles (six shoes total).

MACB6801

NOTE:

Installation instructions are included in the kit.

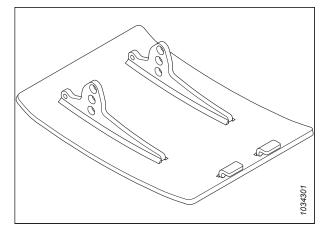


Figure 5.23: Steel Skid Shoes Kit

5.4.8 Sunflower Attachment

This kit allows the FD2 Series FlexDraper[®] (with pointed guards only), to be converted to a sunflower header.

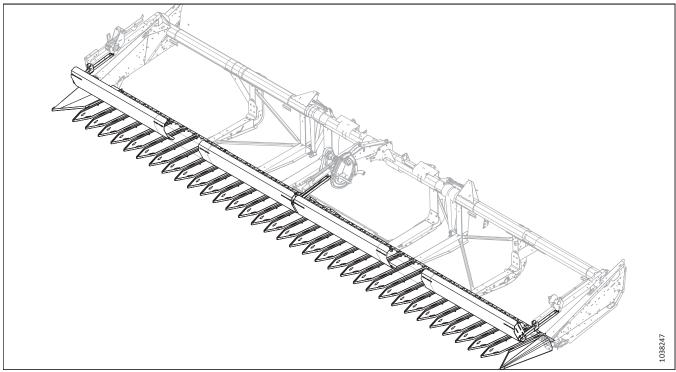


Figure 5.24: Sunflower Attachment

Order the Sunflower Attachment Kit according to header size:

- 9.1 m (30 ft.) MACC2086
- 10.6 m (35 ft.) MACC2087
- 12.1 m (40 ft.) triple reel MACC2169
- 12.1 m (40 ft.) double reel MACC2088
- 12.5 m (41 ft.) double reel MACC2088
- 13.7 m (45 ft.) MACC2089
- 15.2 m (50 ft.) MACC2170

The collector contains: Base Kit, Pan, and Deflectors

Base Kit – contains common brackets, end dividers, cutterbar pan supports, lean bar components, and hardware MACB7302

Pan Kit – contains five pans per kit (two spares). Order the number of kits depending on headers size MACB7303

- 9.1 m (30 ft.) The base kit contains enough pans for 9.1 m (30 ft.) headers. No additional pan kits are required.
- 10.6 m (35 ft.) 1 kit
- 12.1 m (40 ft.) 2 kits
- 13.7 m (45 ft.) 3 kits
- 15.2 m (50 ft.) 4 kits

OPTIONS AND ATTACHMENTS

Deflectors – contains lean bar panels and additional cutterbar pan supports:

- 9.1 m (30 ft.) MACB7304
- 10.6 m (35 ft.) MACB7305
- 12.1 m (40 ft.) triple reel MACB7395
- 12.1 m (40 ft.) double reel MACB7306
- 12.5 m (41 ft.) double reel MACB7306
- 13.7 m (45 ft.) MACB7307
- 15.2 m (50 ft.) MACB7396

Chapter 6: Troubleshooting

Troubleshooting tables are provided to help you diagnose and solve any problems you may have with the header.

6.1 Crop Loss at Cutterbar

Use the following tables to determine the cause of crop loss at the cutterbar and the recommended solution.

Table 6.1 Troubleshooting – Crop	Loss at Cutterbar
----------------------------------	-------------------

Problem	Solution	Refer to
Symptom: Does not pick up downed crop		
Cutterbar too high	Lower cutterbar	 3.9.1 Cutting off Ground, page 118 3.9.2 Cutting on Ground, page 124
Header angle too low	Increase header angle	3.9.5 Header Angle, page 150
Reel too high	Lower reel	3.9.10 Reel Height, page 158
Reel too far back	Move reel forward	3.9.11 Reel Fore-Aft Position, page 163
Ground speed too fast for reel speed	Increase reel speed or reduce ground speed	3.9.6 Reel Speed, page 1523.9.7 Ground Speed, page 153
Reel fingers not lifting crop sufficiently	Increase finger pitch aggressiveness	3.9.12 Reel Tine Pitch, page 176
Reel fingers not lifting crop sufficiently	Install crop lifters	MacDon Dealer
Symptom: Heads shattering or breaking	off	
Reel speed too fast	Reduce reel speed	3.9.6 Reel Speed, page 152
Reel too low	Raise reel	3.9.10 Reel Height, page 158
Ground speed too fast	Reduce ground speed	3.9.7 Ground Speed, page 153
Crop too ripe	Operate at night when humidity is higher	_
Symptom: Material accumulating in the	gap between the cut-out in endsheet ar	nd the knifehead
Crop heads leaning away from knifehead hole in endsheet	Add knifehead shields (except in damp or sticky soils)	4.8.9 Knifehead Shield, page 359
Symptom: Strips of uncut material		
Guards plugged with debris	Install short knife guards	4.8.8 Short Knife Guards and Hold- Downs, page 348
Broken knife sections	Replace broken sections	4.8.1 Replacing Knife Section, page 324
Symptom: Excessive bouncing at normal field speed		

Table 6.1 Troubleshooting – Crop Loss at Cutterbar (continued)

Problem	Solution	Refer to
Float set too light	Adjust header float	3.9.3 Header Float, page 126
Symptom: Divider rod running down sta	anding crop	
Divider rods too long	Remove divider rod	3.9.14 Crop Dividers, page 182
Symptom: Crop not being cut at ends		
Reel not frowning or not centered in header	Adjust reel horizontal position or reel frown	 3.9.11 Reel Fore-Aft Position, page 163 4.13.2 Reel Frown, page 418
Knife hold-down not adjusted properly	Adjust the hold-down so that the knife works freely but still keeps sections from lifting off of the guards	 Adjusting Hold-Down – Pointed Knife Guards, page 342 or Adjusting Hold-Down – Short Knife Guards, page 354
Knife sections or guards are worn or broken	Replace all worn and broken cutting parts	4.8 Knife, page 324
Header is not level	Level the header	3.11 Leveling Header, page 233
Reel fingers not lifting crop properly ahead of knife	Adjust reel position and/or finger pitch	 3.9.11 Reel Fore-Aft Position, page 163 3.9.12 Reel Tine Pitch, page 176
Divider runs down thick crop at ends preventing proper feeding due to material bridging the guards	Replace 3–4 end guards with short knife guard	 4.8.8 Short Knife Guards and Hold- Downs, page 348 MacDon Dealer
Symptom: Bushy or tangled crop flows	over the divider rod, and builds up on th	e endsheets
Divider rods providing insufficient separation	Install long divider rods	3.9.14 Crop Dividers, page 182
Symptom: Cut grain falling ahead of the	e cutterbar	
Ground speed too slow	Increase ground speed	3.9.7 Ground Speed, page 153
Reel speed too slow	Increase reel speed	3.9.6 Reel Speed, page 152
Reel too high	Lower reel	3.9.10 Reel Height, page 158
Cutterbar too high	Lower cutterbar	 3.9.1 Cutting off Ground, page 118 3.9.2 Cutting on Ground, page 124
Reel too far forward	Move reel back on arms	3.9.11 Reel Fore-Aft Position, page 163

Table 6.1 Troubleshooting – Crop Loss at Cutterbar (continued)

Problem	Solution	Refer to
Cutting at speeds over 10 km/h (6 mph) with 10-tooth reel drive sprocket	Replace with 19-tooth reel drive sprocket	4.14.2 Reel Drive Sprocket, page 446
Worn or broken knife components	Replace components	4.8 Knife, page 324

6.2 Cutting Action and Knife Components

Use the following tables to determine the cause of the cutting action and knife component problems and the recommended repair procedure.

Table 6.2 Troubleshooting – Cutting Action and Knife Components

Problem	Solution	Refer to
Symptom: Ragged or uneven cutting of	crop	
Knife hold-down not adjusted properly	Adjust the hold-down	 Adjusting Hold-Down – Pointed Knife Guards, page 342 Adjusting Hold-Down – Short Knife Guards, page 354
Knife sections or guards are worn or broken	Replace all worn and broken cutting parts	 Replacing Pointed Center Knife Guard – Double-Knife, page 343 Replacing Pointed Knife Guards, page 340 Replacing Center Knife Guard – Double-Knife, page 355 Replacing Short Knife Guards or End Knife Guards, page 352 4.8.1 Replacing Knife Section, page 324
Knife is not operating at recommended speed	Feeder house speed set too low or knife speed not adjusted to proper range	Checking Knife Speed, page 157
Ground speed too fast for reel speed	Reduce ground speed or increase reel speed	 3.9.6 Reel Speed, page 152 3.9.7 Ground Speed, page 153
Reel fingers not lifting crop properly ahead of knife	Adjust reel position/finger pitch	 3.9.11 Reel Fore-Aft Position, page 163 3.9.12 Reel Tine Pitch, page 176
Cutterbar too high	Lower cutting height	3.9.1 Cutting off Ground, page 118 or 3.9.2 Cutting on Ground, page 124
Header angle too flat	Steepen header angle	3.9.5 Header Angle, page 150
Cutting edge of guards not close enough or parallel to knife sections	Align guards	Adjusting Knife Guards and Guard Bar, page 338
Tangled/tough-to-cut crop	Install short knife guards	MacDon Dealer • Adjusting Hold-Down – Pointed Knife Guards, page 342 or Adjusting Hold-Down – Short Knife Guards, page 354

Problem	Solution	Refer to
Reel too far back	Move the reel forward	3.9.11 Reel Fore-Aft Position, page 163
Symptom: Knife plugging		
Reel too high or too far forward	Lower the reel or move reel rearward	 3.9.10 Reel Height, page 158 3.9.11 Reel Fore-Aft Position, page 163
Ground speed too high	Decrease the ground speed	3.9.7 Ground Speed, page 153
Improper knife hold-down adjustment	Adjust the hold-down	Adjusting Hold-Down – Pointed Knife Guards, page 342 or Adjusting Hold- Down – Short Knife Guards, page 354
Dull or broken knife section	Replace knife section	4.8.1 Replacing Knife Section, page 324
Bent or broken guards	Align or replace the guards	Adjusting Knife Guards and Guard Bar, page 338
Reel fingers not lifting crop properly ahead of knife	Adjust the reel position/finger pitch	 3.9.11 Reel Fore-Aft Position, page 163 3.9.12 Reel Tine Pitch, page 176
Steel pick-up fingers contacting knife	Increase the reel clearance to cutterbar or adjust "frown"	• 4.13.2 Reel Frown, page 418
Float too heavy	Adjust the springs for lighter float	Checking and Adjusting Header Float, page 127
Mud or dirt build-up on cutterbar	Raise the cutterbar by lowering skid shoes	3.9.2 Cutting on Ground, page 124
Mud or dirt build-up on cutterbar	Flatten the header angle	3.9.5 Header Angle, page 150
Knife is not operating at recommended speed	Check the engine speed of combine or header knife speed	 Combine operator's manual Checking Knife Speed, page 157
Symptom: Excessive header vibration		
Knife hold-down not adjusted properly	Adjust hold-down	 Adjusting Hold-Down – Pointed Knife Guards, page 342 or Adjusting Hold-Down – Short Knife Guards, page 354
Excessive knife wear	Replace knife	4.8.2 Removing Knife, page 3254.8.5 Installing Knife, page 328

TROUBLESHOOTING

Table 6.2 Troubleshooting – Cutting Action and Knife Components (continued)

Problem	Solution	Refer to
Knife hold-down not adjusted properly	Adjust hold-down	 Adjusting Hold-Down – Pointed Knife Guards, page 342 Adjusting Center Hold-Down – Pointed Knife Guards, page 346 Adjusting Hold-Down – Short Knife Guards, page 354 Adjusting Center Hold-Down – Short Knife Guards, page 358
Excessive knife wear	Replace knife	4.8.2 Removing Knife, page 3254.8.5 Installing Knife, page 328
Loose or worn knifehead pin or drive arm	Tighten or replace parts	4.8.1 Replacing Knife Section, page 324
Symptom: Excessive vibration of float n	nodule and header	
Incorrect knife speed	Adjust knife speed	Checking Knife Speed, page 157
Bent cutterbar	Straighten the cutterbar	MacDon Dealer
Symptom: Excessive breakage of knife	sections or guards	
Knife hold-down not adjusted properly	Adjust the hold-down	 Adjusting Hold-Down – Pointed Knife Guards, page 342 or Adjusting Hold-Down – Short Knife Guards, page 354
Cutterbar operating too low in stony conditions	Raise cutterbar using skid shoes	3.9.2 Cutting on Ground, page 124
Float is set too heavy	Adjust float springs for lighter float	Checking and Adjusting Header Float, page 127
Bent or broken guard	Straighten or replace the guard	 4.8.7 Pointed Knife Guards and Hold-Downs, page 331 or 4.8.8 Short Knife Guards and Hold- Downs, page 348
Header angle too steep	Flatten the header angle	3.9.5 Header Angle, page 150
Symptom: Knife back breakage		
Bent or broken guard	Straighten or replace the guard	 4.8.7 Pointed Knife Guards and Hold-Downs, page 331 or 4.8.8 Short Knife Guards and Hold- Downs, page 348

Table 6.2	Troubleshooting – Cutting Action and Knife Components (continued)
-----------	---

Problem	Solution	Refer to
Worn knifehead pin	Replace the knifehead pin	 4.8.3 Removing Knifehead Bearing, page 327 and 4.8.4 Installing Knifehead Bearing, page 328
Dull knife	Replace the knife	 4.8.2 Removing Knife, page 325 and 4.8.5 Installing Knife, page 328
Knife speed too fast	Lower the knife speed	Consult your MacDon Dealer
Loose knife section hardware	Check/tighten all of the knife hardware	_

6.3 Reel Delivery

Use the following tables to determine the cause of reel delivery problems and the recommended repair procedure.

Table 6.3 Troubleshooting – Reel Delivery

Problem	Solution	Refer to
Symptom – Reel not releasing material in normal standing crop		
Reel speed too fast	Reduce the reel speed	3.9.6 Reel Speed, page 152
Reel too low	Raise the reel	3.9.10 Reel Height, page 158
Reel tines too aggressive	Reduce the cam setting	3.9.12 Reel Tine Pitch, page 176
Reel too far back	Move the reel forward	3.9.11 Reel Fore-Aft Position, page 163
Symptom – Reel not releasing materia	I in lodged and standing crop (reel fully lo	owered)
Reel tines too aggressive for standing crop	Reduce the cam setting (one or two) or move reel forward	3.9.12 Reel Tine Pitch, page 176
Symptom – Wrapping on reel end		
Reel tines too aggressive	Reduce the cam setting	3.9.12 Reel Tine Pitch, page 176
Reel too low	Raise the reel	3.9.10 Reel Height, page 158
Reel speed too fast	Reduce the reel speed	3.9.6 Reel Speed, page 152
Reel not centered in header	Center the reel in the header	4.13.3 Centering Reel, page 418
Symptom – Reel releases crop too qui	ckly	
Reel tines not aggressive enough	Increase the cam setting to match reel delivery to the reel fore-aft position	3.9.12 Reel Tine Pitch, page 176
Reel too far forward	Move the reel back to match the reel cam setting	3.9.11 Reel Fore-Aft Position, page 163
Symptom – Reel will not lift		
Reel lift couplers are incompatible or defective	Change the quick coupler	MacDon dealer
Symptom – Reel will not turn		
Quick couplers not properly connected	Connect the couplers	3.6 Header Attachment/Detachment, page 52
Reel drive chain disconnected or broken	Connect/replace the chain	4.14.6 Replacing Drive Chain, page 455
Symptom – Reel motion uneven under no load		
Excessive slack in reel drive chain	Tighten the chain	Tightening Reel Drive Chain, page 445
Symptom – Reel motion is uneven or stalls in heavy crops		
Reel speed too fast	Reduce the reel speed	3.9.6 Reel Speed, page 152

Table 6.3	Troubleshooting – Reel Delivery (continued)
-----------	---

Problem	Solution	Refer to
Reel fingers not aggressive enough	Move to a more aggressive finger pitch notch	3.9.12 Reel Tine Pitch, page 176
Reel too low	Raise the reel	3.9.10 Reel Height, page 158
Relief valve on combine (not on combine float module) has low relief pressure setting	Increase the relief pressure to the manufacturer's recommendations	Combine operator's manual
Low oil reservoir level on combine		
NOTE: Sometimes there is more than one reservoir	Fill to the proper level	Combine operator's manual
Relief valve malfunction	Replace the relief valve	Combine operator's manual
Cutting tough crops with standard torque (19-tooth) reel drive sprocket	Replace the sprocket with an appropriate high torque sprocket to match the combine reel circuit pressure	 4.14.2 Reel Drive Sprocket, page 446 Install Two Speed Kit (MAC311882)
Symptom – Plastic fingers cut at tip		·
Insufficient reel to cutterbar clearance	Increase the clearance	4.13.1 Reel Clearance to Cutterbar, page 410
Symptom – Plastic fingers bent rearwa	ard at tip	•
Reel digging into ground with reel speed slower than ground speed	Raise the header	• 3.9.2 Cutting on Ground, page 124
Reel digging into ground with reel speed slower than ground speed	Decrease the header tilt	3.9.5 Header Angle, page 150
Reel digging into ground with reel speed slower than ground speed	Move the reel aft	3.9.11 Reel Fore-Aft Position, page 163
Symptom – Plastic fingers bent forward at tip		
Reel digging into ground with reel speed faster than ground speed	Raise the header	• 3.9.2 Cutting on Ground, page 124
Reel digging into ground with reel speed faster than ground speed	Decrease the header tilt	3.9.5 Header Angle, page 150
Reel digging into ground with reel speed faster than ground speed	Move the reel aft	3.9.11 Reel Fore-Aft Position, page 163
Symptom – Plastic fingers bent close to tine tube		

Table 6.3 Troubleshooting – Reel Delivery (continued)

Problem	Solution	Refer to
Excessive plugging at cutterbar with wads of crop accumulating at cutterbar while maintaining reel operation	Correct the plugging/cutting issues	3.12 Unplugging Cutterbar, page 235
Excessive plugging at cutterbar with wads of crop accumulating at cutterbar while maintaining reel operation	Stop the reel before plugging becomes excessive	3.12 Unplugging Cutterbar, page 235

6.4 Troubleshooting Header and Drapers

Use the following tables to determine the header and draper problems and the recommended repair procedure.

Table 6.4 Troubleshooting – Header and Drapers

Problem	Solution	Refer to	
Symptom: Insufficient header lift			
Low relief pressure	Increase the relief pressure	Combine Dealer	
Symptom: Insufficient side draper spee	d		
Speed control set too low	Increase the speed control setting	3.9.8 Side Draper Speed, page 154	
Combine header drive too slow	Adjust to the correct speed for the combine model	Combine operator's manual	
Symptom: Insufficient feed draper spe	ed		
Relief pressure too low	Test the feed draper hydraulic system	See your MacDon Dealer	
Combine header drive too slow	Adjust to the correct speed for the combine model	Combine operator's manual	
Symptom: Feed draper will not move			
Drapers are loose	Tighten the drapers	4.10.2 Checking and Adjusting Feed Draper Tension, page 367	
Drive or idler roller wrapped with material	Loosen the draper and clean the rollers	4.10.2 Checking and Adjusting Feed Draper Tension, page 367	
Slat or connector bar jammed by frame or material	Loosen the draper and clear the obstruction	4.10.2 Checking and Adjusting Feed Draper Tension, page 367	
Roller bearing seized	Replace the roller bearing	Replacing Feed Draper Idler Roller Bearing, page 380	
Low hydraulic oil	Fill the combine hydraulic oil reservoir to the full level	Combine operator's manual	
Incorrect relief setting at flow control valve	Adjust the relief setting	• • MacDon Dealer	
Symptom: Side Draper stalling			
Material not feeding evenly off knife	Lower the reel	3.9.10 Reel Height, page 158	
Material not feeding evenly off knife	Install short knife guards	4.8.8 Short Knife Guards and Hold- Downs, page 348	
Symptom: Hesitation in the flow of bulky crop			
Header angle too low	Increase the header angle	3.9.5 Header Angle, page 150	
Material overload on drapers	Increase the side draper speed	3.9.8 Side Draper Speed, page 154	

TROUBLESHOOTING

Table 6.4 Troubleshooting – Header and Drapers (continued)

Problem	Solution	Refer to
Material overload on drapers	Install an upper cross auger	5.1.5 Full Length Upper Cross Auger, page 479
Material overload on drapers	Add flighting extensions	MacDon Dealer
Symptom: Drapers back-feed		
Drapers running too slow in heavy crop	Increase the draper speed	3.9.8 Side Draper Speed, page 154
Symptom: Crop is thrown across the opening and under opposite side draper		
Drapers running too fast in light crop	Reduce the draper speed	3.9.8 Side Draper Speed, page 154
Symptom: Material accumulating on the end deflectors and releasing in bunches		
End deflectors too wide	For headers with manual deck shift only, trim the deflector or replace with a narrow deflector (MAC172381)	3.12 Unplugging Cutterbar, page 235

6.5 Cutting Edible Beans

Use the following tables to determine the cause of any cutting edible bean problems and the recommended solutions.

Table 6.5 Troubleshooting – Cutting Edible Beans

Problem	Solution	Refer to	
Symptom: Plants being stripped and complete or partial plants left behind			
Header off ground	Lower the header to ground and run it on the skid shoes and/or the cutterbar	3.9.2 Cutting on Ground, page 124	
Float set too light—rides on high spots and does not lower soon enough	Set the float to 335–338 N (75–85 lbf). Increase or decrease as necessary to prevent the header from bouncing excessively or plowing into soft ground	3.9.3 Header Float, page 126	
Reel too high with cylinders fully retracted	Adjust the reel height	3.9.10 Reel Height, page 158	
Finger pitch not aggressive enough	Adjust the finger pitch	3.9.12 Reel Tine Pitch, page 176	
Reel too far aft	Move the reel forward until the fingertips skim the soil surface with the header on the ground and the header angle properly adjusted	3.9.11 Reel Fore-Aft Position, page 163	
Header angle too shallow	Adjust the header angle	Adjusting Header Angle from Combine, page 151	
Header angle too shallow	Increase the header angle by fully retracting lift cylinders (if cutting on ground)	Adjusting Header Angle from Combine, page 151	
Reel too slow	Adjust the reel speed to be marginally faster than ground speed	3.9.6 Reel Speed, page 152	
Ground speed too fast	Lower the ground speed	3.9.7 Ground Speed, page 153	
Skid shoes too low	Raise the skid shoes to the highest setting	3.9.2 Cutting on Ground, page 124	
Dirt packing on bottom of cutterbar with plastic wear strips on cutterbar; raises the cutterbar off the ground	Ground too wet – allow soil to dry	_	
Dirt packing on bottom of cutterbar with plastic wear strips on cutterbar; raises the cutterbar off the ground	Float too heavy	Checking and Adjusting Header Float, page 127	
Dirt packing on bottom of cutterbar with plastic wear strips on cutterbar; raises the cutterbar off the ground	Manually clean the bottom of the cutterbar when excessive accumulation occurs	_	
Header not level	Level the header	3.11 Leveling Header, page 233	

Table 6.5 Troubleshooting – Cutting Edible Beans (continued)

Problem	Solution	Refer to
Worn or damaged knife sections	Replace the sections or replace the knife	4.8 Knife, page 324
Parts of vines get caught in pointed guard tip. (Occurs more in row- cropped beans that are hilled from cultivating.)	Install the short knife guard conversion kit	4.8.8 Short Knife Guards and Hold- Downs, page 348
Pushing of crop debris on the ground	Install the short knife guards	4.8.8 Short Knife Guards and Hold- Downs, page 348
Knife speed too low	Increase the feeder house speed or check that the knife speed is set within the recommended range	3.9.9 Knife Speed Information, page 156 or Checking Knife Speed, page 157
Symptom: Excessive losses at dividers		
Divider rod running down crop and shattering the pods	Remove the divider rod	3.9.14 Crop Dividers, page 182
Vines and plants build up on the endsheet	Install the divider rod	3.9.14 Crop Dividers, page 182
Symptom: Plant vines pinched between	top of draper and cutterbar	
Cutterbar fills with debris when draper to cutterbar gap is properly adjusted	Raise the header fully at each end of the field (or as required) and shift decks back and forth to help clean out the cutterbar	_
Shifting the decks with the header raised does not clean out the cutterbar debris.	Manually remove the debris from the cutterbar cavity to prevent damaging the drapers	_
Symptom: Crop accumulating at guards	and not moving rearward onto the drap	iers
Reel finger pitch not aggressive enough	Increase the finger aggressiveness (cam position)	3.9.12 Reel Tine Pitch, page 176
Reel too high	Lower the reel	3.9.10 Reel Height, page 158
Minimum reel clearance to cutterbar setting too high	Adjust the minimum reel height with cylinders fully retracted	4.13.1 Reel Clearance to Cutterbar, page 410
Reel too far forward	Reposition the reel	3.9.11 Reel Fore-Aft Position, page 163
Symptom: Crop wrapping around reel		
Reel too low	Raise the reel	3.9.10 Reel Height, page 158
Symptom: Reel shattering pods		
Reel too far forward	Reposition the reel	3.9.11 Reel Fore-Aft Position, page 163
Reel speed too high	Reduce the reel speed	3.9.6 Reel Speed, page 152

Table 6.5 Troubleshooting – Cutting Edible Beans (continued)

Problem	Solution	Refer to	
Bean pods too dry	Cut at night when heavy dew is present and pods have softened	_	
Reel finger pitch not aggressive enough	Increase the finger aggressiveness (cam position)	3.9.12 Reel Tine Pitch, page 176	
Symptom: Cutterbar guards breaking			
Float insufficient (float setting too heavy)	Increase the float (adjust to lighter float setting)	3.9.3 Header Float, page 126	
Excessive number of rocks in field	Consider installing optional short knife guards Note: With the installation of short knife guards, you are trading guard damage for section damage (although changing sections with short knife guards is easier)	MacDon Dealer	
Symptom: Cutterbar pushing too much	debris and dirt		
Header too heavy	Readjust the float to make the header lighter	3.9.3 Header Float, page 126	
Header angle too steep	Decrease the header angle	3.9.5 Header Angle, page 150	
Guards plug with debris or and soil	Install the short knife guard	4.8.8 Short Knife Guards and Hold- Downs, page 348	
Insufficient support for the header	Install the center skid shoes	3.9.2 Cutting on Ground, page 124	
Symptom: Crop wrapping around reel e	nds		
Uncut crop interfering on reel ends	Add reel endshields	Header parts catalog	
Symptom: Cutterbar fills up with dirt			
Excessive gap between the draper and the cutterbar	Raise the header fully at each end of field (or as required) and shift the decks back and forth to help clean out the cutterbar	_	
Symptom: Reel occasionally carries over plants in the same location			
Steel fingers bent and hooking plants from drapers	Straighten the fingers (steel)	_	
Dirt accumulation on end of fingers preventing plants from falling off fingers onto drapers	Raise the reel	3.9.10 Reel Height, page 158	
Dirt accumulation on end of fingers preventing plants from falling off fingers onto drapers	Adjust the reel fore-aft position to move the fingers out of the ground	3.9.11 Reel Fore-Aft Position, page 163	
Symptom: Cutterbar pushing soil			

Table 6.5	Troubleshooting – Cutting Edible Beans (continued)
-----------	--	------------

Problem	Solution	Refer to
Tire tracks or row crop ridges	Cut at an angle to crop rows or ridges	—
Rolling terrain along length of field	Cut at 90° to the rolling terrain (provided knife floats across without digging in)	_
Symptom: Reel carries over an excessive amount of plants or wads		
Excessive accumulation of crop on drapers (up to reel center tube)	Increase the draper speed	3.9.8 Side Draper Speed, page 154
Finger pitch too slow	Increase the finger pitch	3.9.12 Reel Tine Pitch, page 176

Chapter 7: Reference

The procedures and information in this chapter can be referred to as needed.

7.1 Torque Specifications

The following tables provide torque values for various bolts, cap screws, and hydraulic fittings. Refer to these values only when no other torque value has been specified in a given procedure.

- Tighten all bolts to the torque values specified in the charts below, unless you are directed otherwise in this manual.
- Replace removed hardware with hardware of the same strength and grade.
- Refer to the torque value tables as a guide when periodically checking the tightness of bolts.
- Understand the torque categories for bolts and cap screws by reading the markings on their heads.

Jam nuts

Jam nuts require less torque than nuts used for other purposes. When applying torque to finished jam nuts, multiply the torque applied to regular nuts by 0.65 to obtain the modified torque value.

Self-tapping screws

Refer to the standard torque values when installing the self-tapping screws. Do **NOT** install the self-tapping screws on structural or otherwise critical joints.

7.1.1 Metric Bolt Specifications

Specifications are provided for the appropriate final torque values to secure various sizes of metric bolts.

NOTE:

The torque values provided in the following metric bolt torque tables apply to hardware installed dry; that is, hardware with no grease, oil, or threadlocker on the threads or heads. Do **NOT** add grease, oil, or threadlocker to bolts or cap screws unless you are directed to do so in this manual.

Nominal	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
Size (A)	Min.	Max.	Min.	Max.
3-0.5	1.4	1.6	*13	*14
3.5-0.6	2.2	2.5	*20	*22
4-0.7	3.3	3.7	*29	*32
5-0.8	6.7	7.4	*59	*66
6-1.0	11.4	12.6	*101	*112
8-1.25	28	30	20	23
10-1.5	55	60	40	45
12-1.75	95	105	70	78
14-2.0	152	168	113	124
16-2.0	236	261	175	193
20-2.5	460	509	341	377
24-3.0	796	879	589	651

Table 7.1 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut



Nominal	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
Size (A)	Min.	Max.	Min.	Max.
3-0.5	1	1.1	*9	*10
3.5-0.6	1.5	1.7	*14	*15
4-0.7	2.3	2.5	*20	*22
5-0.8	4.5	5	*40	*45
6-1.0	7.7	8.6	*69	*76
8-1.25	18.8	20.8	*167	*185
10-1.5	37	41	28	30
12-1.75	65	72	48	53
14-2.0	104	115	77	85
16-2.0	161	178	119	132
20-2.5	314	347	233	257
24-3.0	543	600	402	444

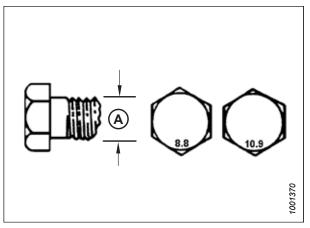


Figure 7.1: Bolt Grades

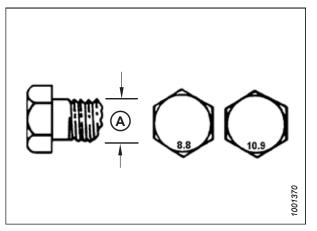


Figure 7.2: Bolt Grades

Nominal	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
Size (A)	Min.	Max.	Min.	Max.
3-0.5	1.8	2	*18	*19
3.5-0.6	2.8	3.1	*27	*30
4-0.7	4.2	4.6	*41	*45
5-0.8	8.4	9.3	*82	*91
6-1.0	14.3	15.8	*140	*154
8-1.25	38	42	28	31
10-1.5	75	83	56	62
12-1.75	132	145	97	108
14-2.0	210	232	156	172
16-2.0	326	360	242	267
20-2.5	637	704	472	521
24-3.0	1101	1217	815	901

Table 7.3 Metric Class 10.9 Bolts and Class 10 Free **Spinning Nut**


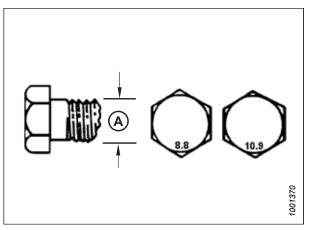


Figure 7.3: Bolt Grades

Table 7.4 Metric Class 10.9 Bolts and Class 10 Distorted
Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
	Min.	Max.	Min.	Max.
3-0.5	1.3	1.5	*12	*13
3.5-0.6	2.1	2.3	*19	*21
4-0.7	3.1	3.4	*28	*31
5-0.8	6.3	7	*56	*62
6-1.0	10.7	11.8	*95	*105
8-1.25	26	29	19	21
10-1.5	51	57	38	42
12-1.75	90	99	66	73
14-2.0	143	158	106	117
16-2.0	222	246	165	182
20-2.5	434	480	322	356
24-3.0	750	829	556	614



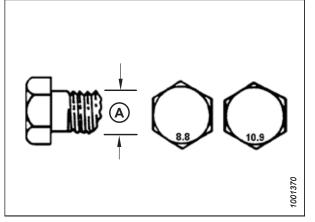

7.1.2 Metric Bolt Specifications – Cast Aluminum

Specifications are provided for the appropriate final torque values for various sizes of metric bolts in cast aluminum.

NOTE:

The torque values provided in the following metric bolt torque tables apply to hardware installed dry; that is, hardware with no grease, oil, or threadlocker on the threads or heads. Do **NOT** add grease, oil, or threadlocker to bolts or cap screws unless you are directed to do so in this manual.

	Bolt Torque			
Nominal Size (A)	8.8 (Cast Aluminum)		10.9 (Cast Aluminum)	
	Nm	Nm lbf·ft		lbf∙ft
M3	_	_	_	1
M4	_	_	4	2.6
M5	-	-	8	5.5
M6	9	6	12	9
M8	20	14	28	20
M10	40	28	55	40
M12	70	52	100	73
M14	-	-	-	_
M16	-	_	_	_

Table 7.5 Metric Bolt Bolting into Cast Aluminum

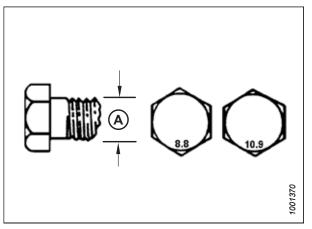


Figure 7.5: Bolt Grades

7.1.3 O-Ring Boss Hydraulic Fittings – Adjustable

The standard torque values are provided for adjustable hydraulic fittings. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, refer to the value specified in the procedure instead.

- 1. Inspect O-ring (A) and seat (B) for dirt or defects.
- Back off lock nut (C) as far as possible. Ensure that washer (D) is loose and is pushed toward lock nut (C) as far as possible.
- 3. Ensure that O-ring (A) is **NOT** on the threads. Adjust O-ring (A) if necessary.
- 4. Apply hydraulic system oil to O-ring (A).

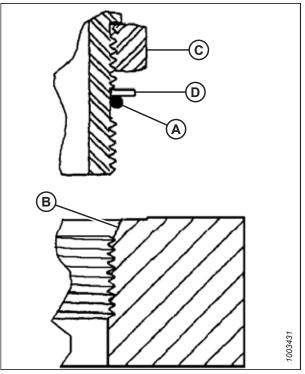


Figure 7.6: Hydraulic Fitting

- 5. Install fitting (B) into the port until backup washer (D) and O-ring (A) contact part face (E).
- 6. Position the angle fittings by unscrewing no more than one turn.
- Turn lock nut (C) down to washer (D) and tighten it to the torque value indicated in the table. Use two wrenches, one on fitting (B) and the other on lock nut (C).
- 8. Verify the final condition of the fitting.

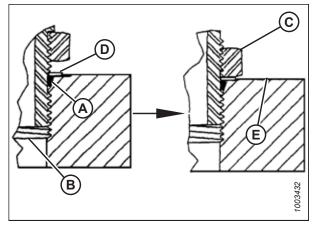


Figure 7.7: Hydraulic Fitting

	Thursd Circ (in)	Torque Value ⁸⁰		
SAE Dash Size	Thread Size (in.)	Nm	lbf·ft (*lbf·in)	
-2	5/16–24	6–7	*53–62	
-3	3/8–24	12–13	*106–115	
-4	7/16–20	19–21	14–15	
-5	1/2–20	21–33	15–24	
-6	9/16–18	26–29	19–21	
-8	3/4–16	46–50	34–37	
-10	7/8–14	75–82	55–60	
-12	1 1/16–12	120–132	88–97	
-14	1 3/8–12	153–168	113–124	
-16	1 5/16–12	176–193	130–142	
-20	1 5/8–12	221–243	163–179	
-24	1 7/8–12	270–298	199–220	
-32	2 1/2–12	332–365	245–269	

Table 7.6 O-Ring Boss (ORB) Hydraulic Fittings – Adjustable

7.1.4 O-Ring Boss Hydraulic Fittings – Non-Adjustable

The standard torque values are provided for non-adjustable hydraulic fittings. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, refer to the value specified in the procedure instead.

Torque values are shown in the table below.

- 1. Inspect O-ring (A) and seat (B) for dirt or defects.
- 2. Ensure that O-ring (A) is **NOT** on the threads. Adjust O-ring (A)if necessary.
- 3. Apply hydraulic system oil to the O-ring.
- 4. Install fitting (C) into the port until the fitting is hand-tight.
- 5. Torque fitting (C) according to values in Table 7.7, page 515.
- 6. Verify the final condition of the fitting.

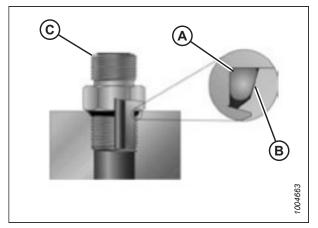


Figure 7.8: Hydraulic Fitting

^{80.} Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

		Torque Value ⁸¹		
SAE Dash Size	Thread Size (in.)	Nm	lbf·ft (*lbf·in)	
-2	5/16–24	6–7	*53–62	
-3	3/8–24	12–13	*106–115	
-4	7/16–20	19–21	14–15	
-5	1/2–20	21–33	15–24	
-6	9/16–18	26–29	19–21	
-8	3/4–16	46–50	34–37	
-10	7/8–14	75–82	55–60	
-12	1 1/16–12	120–132	88–97	
-14	1 3/8–12	153–168	113–124	
-16	1 5/16–12	176–193	130–142	
-20	1 5/8–12	221–243	163–179	
-24	1 7/8–12	270–298	199–220	
-32	2 1/2–12	332–365	245–269	

Table 7.7 O-Ring Boss (ORB) Hydraulic Fittings – Non-Adjustable

7.1.5 O-Ring Face Seal Hydraulic Fittings

The standard torque values are provided for O-ring face seal hydraulic fittings. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, refer to the value specified in the procedure instead.

Torque values are shown in the Table 7.8, page 516

1. Ensure that the sealing surfaces and the fitting threads are free of burrs, nicks, scratches, and any foreign material.

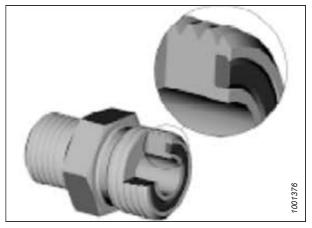


Figure 7.9: Hydraulic Fitting

^{81.} Torque values shown are based on lubricated connections as in reassembly.

- 2. Apply hydraulic system oil to O-ring (B).
- 3. Align the tube or hose assembly so that the flat face of sleeve (A) or (C) comes into full contact with O-ring (B).
- 4. Thread tube or hose nut (D) until it is hand-tight. The nut should turn freely until it bottoms out.
- 5. Torque the fittings according to values in Table *7.8, page 516*.

NOTE:

If applicable, hold the hex flange on fitting body (E) to prevent the rotation of the fitting body and the hose when tightening fitting nut (D).

- 6. Use three wrenches when assembling unions or joining two hoses together.
- 7. Verify the final condition of the fitting.

Table 7.8 O-Ring Face Seal (ORFS) Hydraulic Fittings

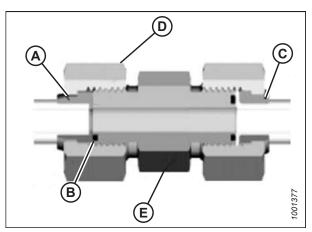


Figure 7.10: Hydraulic Fitting

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ⁸²	
			Nm	lbf·ft
-3	Note ⁸³	3/16	-	_
-4	9/16	1/4	25–28	18–21
-5	Note ⁸³	5/16	-	-
-6	11/16	3/8	40–44	29–32
-8	13/16	1/2	55–61	41–45
-10	1	5/8	80–88	59–65
-12	1 3/16	3/4	115–127	85–94
-14	Note ⁸³	7/8	-	_
-16	1 7/16	1	150–165	111–122
-20	1 11/16	1 1/4	205–226	151–167
-24	1–2	1 1/2	315–347	232–256
-32	2 1/2	2	510–561	376–414

7.1.6 Tapered Pipe Thread Fittings

The standard torque values are provided for tapered pipe thread fittings. If a procedure specifies a different torque value for the same type and size of fitting found in this topic, refer to the value specified in the procedure instead.

Assemble pipe fittings as follows:

^{82.} Torque values and angles shown are based on lubricated connection as in reassembly.

^{83.} O-ring face seal type end not defined for this tube size.

REFERENCE

- 1. Ensure that the fitting and the port threads are free of burrs, nicks, scratches, and any other form of contamination.
- 2. Apply paste-type pipe thread sealant to the external pipe threads.
- 3. Thread the fitting into the port until it is hand-tight.
- 4. Torque the connector to the appropriate torque angle. The turns from finger tight (TFFT) and flats from finger tight (FFFT) values are shown in Table 7.9, page 517. Ensure that the tube end of a shaped connector (typically a 45° or 90° elbow) is aligned to receive the incoming tube or hose assembly. Always finish the alignment of the fitting in the direction of tightening. Never loosen the threaded connectors to achieve alignment.
- 5. Clean all residue and any excess thread conditioner with an appropriate cleaner.
- 6. Inspect the final condition of the fitting. Pay special attention to the possibility of cracks in the port opening.
- 7. Mark the final position of the fitting. If a fitting leaks, disassemble the fitting and check it for damage.

NOTE:

The failure of fittings due to over-torquing may not be evident until the fittings are disassembled and inspected.

Table 7.9 Hydraulic Fitting Pipe Thread

Tapered Pipe Thread Size	Recommended TFFT	Recommended FFFT
1/8–27	2–3	12–18
1/4–18	2–3	12–18
3/8–18	2–3	12–18
1/2-14	2–3	12–18
3/4–14	1.5–2.5	12–18
1–11 1/2	1.5–2.5	9–15
1 1/4–11 1/2	1.5–2.5	9–15
1 1/2–11 1/2	1.5–2.5	9–15
2–11 1/2	1.5–2.5	9–15

REFERENCE

7.2 Conversion Chart

Both SI units (including metric) and US customary units (sometimes referred to as standard units) of measurement are used in this manual. A list of those units along with their abbreviations and conversion factors is provided here for your reference.

Quantity	SI Units (I	Metric)	Factor	US Customary Units (Standard)	
	Unit Name	Abbreviation]	Unit Name	Abbreviation
Area	hectare	ha	x 2.4710 =	acre	acres
Flow	liters per minute	L/min	x 0.2642 =	US gallons per minute	gpm
Force	Newton	N	x 0.2248 =	pound force	lbf
Length	millimeter	mm	x 0.0394 =	inch	in.
Length	meter	m	x 3.2808 =	foot	ft.
Power	kilowatt	kW	x 1.341 =	horsepower	hp
Pressure	kilopascal	kPa	x 0.145 =	pounds per square inch	psi
Pressure	megapascal	MPa	x 145.038 =	pounds per square inch	psi
Pressure	bar (Non-SI)	bar	x 14.5038 =	pounds per square inch	psi
Torque	Newton meter	Nm	x 0.7376 =	pound feet or foot pounds	lbf·ft
Torque	Newton meter	Nm	x 8.8507 =	pound inches or inch pounds	lbf·in
Temperature	degrees Celsius	°C	(°C x 1.8) + 32 =	degrees Fahrenheit	°F
Velocity	meters per minute	m/min	x 3.2808 =	feet per minute	ft/min
Velocity	meters per second	m/s	x 3.2808 =	feet per second	ft/s
Velocity	kilometers per hour	km/h	x 0.6214 =	miles per hour	mph
Volume	liter	L	x 0.2642 =	US gallon	US gal
Volume	milliliter	mL	x 0.0338 =	ounce	OZ.
Volume	cubic centimeter	cm ³ or cc	x 0.061 =	cubic inch	in. ³
Weight	kilogram	kg	x 2.2046 =	pound	lb.

Table 7.10 Conversion Chart

Index

NOTE:

Add the prefix MAC to part numbers when ordering Example: MAC123456.

10V sensor adapter kit	
------------------------	--

Α

AHHC, See auto header height control API	
definition	21
ASTM	
definition	21
augers	302
auger drive sprockets	
adjusting auger drive chain tension	314
auger position	
auger to pan clearance	
drive chains	
adjusting chain tension	314
checking chain tension	306
checking tension	304
installing	311
lubricating	279
removing	308
feed auger configurations	87
medium configuration	96
narrow configuration	93
ultra narrow configuration	89
ultra wide configuration	101
wide configuration	98
fingers	316
adjusting finger timing	
checking finger timing	
installing112,	
removing110,	
flighting103,	
installing105,	
optional feed auger flighting	
removing	103
tension springs	
checking and adjusting	116
tines, See fingers	
auto header height control	
Case IH 120 series	
Case IH 120 series combines	217
adjusting	
preset cutting height	231
calibrating	• -
auto header height control	221
sensor output voltage	
checking voltage range from the cab	
Case IH 130 series combines208,	210

Case IH 140 series combines	208
Case IH 230 series combines	217
adjusting	
preset cutting height	231
calibrating	
auto header height control	221
sensor output voltage	
checking voltage range from the cab	217
Case IH 230, 240, 250 series	
Case IH 240 series combines	
adjusting	
preset cutting height	231
calibrating	
auto header height control	221
sensor output voltage	
checking voltage range from the cab	217
Case IH 250 series combines	
adjusting	
preset cutting height	231
calibrating	
auto header height control	221
sensor output voltage	
checking voltage range from the cab	217
Case IH 5130/6130/7130 combines	
adjusting	
preset cutting height	214
calibrating	
auto header height control	213
sensor output voltage	210
checking voltage range from the cab	208
setting up header on combine display	
Case IH 5140/6140/7140 combines	211
adjusting	
preset cutting height	214
sensor output voltage	217
checking voltage range from the cab	208
setting up header on combine display	
Case IH 7010 combines	211
sensor output voltage	
checking voltage range from the cab	217
Case IH combines	217
checking reel height sensor voltage	229
Case IH combines with version 28.00 software	225
calibrating auto header height control	225
definition float height sensor	
replacing	206
quick reference	
sensor operation	
	201

sensor output voltage 2	203
combine requirements 2	203
manually checking voltage limits 2	203

В

bearings
feed draper
installing drive roller bearing
removing drive roller bearing
idler roller bearings
replacing 401
knifehead bearings
installing 328
removing 327
side draper
inspecting draper roller bearing
replacing drive roller bearing 406
bolts
definition21
break-in inspections
break-in periods

С

cams
adjusting reel cam 178
reel cam settings176
Case IH combines
attaching combine to header52
detaching combine from header55
center-links
definition21
CGVW
definition21
chains
auger drive chain
adjusting chain tension 314
checking auger drive chain tension
installing 311
lubricating 279
removing 308
completion gearbox drive chain
adjusting chain tension 300
main gearbox drive chain
adjusting chain tension 299
reel drive chain
adjusting chain tension
replacing
tightening 445
combines
attaching header to combine
Case IH
detaching combine from header

Case IH	55
transporting header	237
on combine	237
towing the header	.237–238
attaching to towing vehicle	238
component identification	
FD2 Series FlexDraper [®] Header	
float module – FM200	
conversion chart	518
crop deflectors	482
crop delivery	
options	477
crop divider rods	
removing	
crop divider storage bracket kit	478
crop dividers	
adjusting	190
floating	
adjusting	
installing on header	
removing from header	
installing on header	
removing from header	
crop lifter kit	
crop lifter rack kit	477
cutterbars	
options	
unplugging	235
cutting	
off the ground	
adjusting stabilizer wheels	
adjusting transport wheels	
on ground level	124

D

daily start-up checks
adjusting deck height 393
definition of terms
divider rods 197
removing
DK
definition21
DKD
definition21
DR
definition21
draper roller bearings
inspecting 399
drapers
adjusting side draper speed
float module
adjusting draper tension

checking draper tension	
feed deck	
replacing feed draper	364
side draper decks	
drive rollers	
installing	408
removing	404
idler rollers	
installing	403
removing	399
replacing bearing	401
side draper speed	154
side drapers	
adjusting tracking	397
installing	392
removing	391
drive roller bearings	
installing feed draper drive roller	374
removing feed draper drive roller	
side draper drive roller	
replacing drive roller bearing	406
drive rollers	
feed draper	368
installing	371
removing	368
side draper	
installing	408
removing	
drivelines	
driveline guards	
installing	297
removing	
installing driveline	
removing driveline from combine to float	
module	290
drives	
header drive	290

Ε

EasyMove [™] Slow Speed Transport System changing tow-bar hitch connection from clevis to
pintle 469
EasyMove [™] transport wheels
adjusting 120
electrical system
maintaining electrical system 289
replacing light bulbs 289
sensors
AHHC sensors 201
reel height sensor
replacing161
equipment servicing — end of season
equipment servicing — preseason
extended center filler 483

F

FD2 Series	
definition	21
feed auger configurations	87
medium configuration	. 96
narrow configuration	
ultra narrow configuration	
ultra wide configuration	
wide configuration	
feed auger flighting	483
feed deck	
checking link holder hooks	386
feed deck pan	
lowering feed deck pan	384
raising feed deck pan	
feed drapers	
adjusting draper tension	367
adjusting speed	
checking draper tension	
drive roller bearing	
installing	374
drive rollers	
installing	
removing	368
idler roller	
installing idler roller	
removing drive roller bearing	
removing idler roller	
replacing feed draper	
replacing idler roller bearing	
FFFT	
definition	21
finger tight	
definition	. 21
fingers	
auger fingers	316
adjusting finger timing	
checking finger timing	
installing	
removing	
plastic reel fingers	
installing	422
removing	
steel reel fingers	
installing	420
removing	
flex float system	
flex frown limiter	
disable	144
enable	
flex modes	
operating in flex mode	141
flighting	
installing105,	
5	

removing 103	
float 126	
header float	
changing float spring configuration	
checking and adjusting 127	
header float locks 138	
wing float locks	
lock/unlock138	
locked	
unlocked 141	
float modules	
attaching float module to header63	
auger drive	
adjusting auger drive chain tension	
augers	
auger fingers	
checking finger timing	
installing	
removing	
auger to pan clearance	
fingers	
adjusting finger timing 321	
optional feed auger flighting	
detaching from combine and header	
feed auger configurations	
feed deck	
checking link holder hooks	
feed deck pan	
lowering	
raising	
feed draper	
adjusting draper tension	
checking draper tension	
drive roller	
installing 371	
removing	
drive roller bearing	
installing 374	
idler roller 375	
installing idler roller 377	
removing drive roller bearing	
removing idler roller	
replacing feed draper 364	
replacing idler roller bearing	
flighting103, 316	
setup	
stripper bars 389	
installing 389	
kits 117	
removing	
unplugging	
floating crop dividers	
FM200 component identification	
FM200 Float Module	
definition	

FSI	
definition	21
full interface filler kit	484

G

gearboxes	
completion	
adding oil	283
adjusting chain tension	300
changing oil	284
checking oil level	282
lubricating	282
main	
adding oil	281
adjusting chain tension	299
changing oil	281
checking oil level	280
lubricating	280
glossary	
greasing	
every 10 hours	266
every 100 hours	272
every 25 hours	267
every 250 hours	274
every 50 hours	268
every 500 hours	
greasing procedure	277
maintenance schedule/records	
ground speeds	153
guards	
adjusting knife guards	338
replacing center knife guards	
replacing end knife guards	352
replacing pointed center knife guards	343
replacing pointed knife guards	340
replacing short knife guards	352
GVW	
definition	

Н

hard joint	
definition	21
HDS	
definition	
header angles	
adjustment range	150
header drapers, See side drapers	
adjusting side draper tension	395
header drives	290
completion gearbox drive chain	300
driveline guards	
installing	297

removing	295
main gearbox drive chain	299
header endshields	35
adjusting	37
checking	37
closing	36
installing	41
opening	35
removing	
header safety props	
headers	
attaching float module	63
attachments	
changing float spring configuration	
checking and adjusting	
controls	
detaching from combine and float module	
float	
float locks	
header angle	150
adjusting from combine	151
leveling	
operating variables	
optimizing for straight combining canola	
options	
recommended settings	
-	
setup	
storing header	
towing header	238
transporting header	227
on combine	
towing the header237-	
attaching to towing vehicle	238
hex keys	
definition	21
hold-down	
pointed center hold-down	
adjusting	346
checking	346
pointed knife guard	
checking	341
pointed knife guard hold-downs	
adjusting	342
short knife guard	
adjusting	354
short knife guard center hold-down	
adjusting	
checking	358
short knife guards	
checking	354
hoses and lines	
hydraulic	265
hp	
definition	21
hydraulic reservoir extension	484

hydraulics	
changing oil filter	288
changing reservoir oil	287
fittings	
O-ring boss (ORB) adjustable	513
O-ring boss (ORB) non-adjustable	514
O-ring face seal (ORFS)	515
tapered pipe thread fittings	516
hoses and lines	265
hydraulic safety	6
reservoir	286
adding oil	286
checking oil level in reservoir	286

I

inspections	
break-in inspections	263
maintenance schedule/records	260
ISC	
definition	

J

IIC	
definition	21

Κ

knife	
definition	21
knife drive boxes	
changing oil3	362
checking mounting bolts3	362
checking oil level3	361
knife drive system 3	361
knife drive box 3	361
knife guards	
pointed knife guards and hold-downs	331
short knife guards and hold-downs	348
knife drives	
knife speed	
checking knife speed 1	157
knife speed values 1	156
knife guards	
adjusting guards 3	338
pointed knife guards	
configurations 3	331
replacing center knife guards 3	355
replacing end knife guards 3	352
replacing pointed center knife guards	343
replacing pointed knife guards 3	340
replacing short knife guards 3	352
short knife guards	

configurations
double-knife
FD245 pointed guard configuration
knifehead bearings
installing 328
removing
knifehead shields 359
installing 359
knives
installing knife 328
removing knife 325
replacing knife sections 324
spare knife location 330
troubleshooting 496

L

lataral tilt alug	105
lateral tilt plug	485
light bulbs – replacing	289
lubrication	266
lubrication and servicing	266
auger drive chains	279
greasing procedure	
header drive completion gearbox	
changing oil	284
checking oil level	282
lubricating gearbox	282
header drive main gearbox	
changing oil	281
checking oil level	280
lubricating gearbox	280
reel drive chain	278

Μ

maintenance and servicing	259
contourMax™	
lubricating	460
electrical system	289
end of season servicing	264
preparing for servicing	259
preseason servicing	
requirements	
safety	
schedule	
service intervals	
storage	257
maintenance requirements	
servicing	
break-in inspections	263
maintenance schedule/records	
MDS	
definition	21

metric bolts torque specifications	
recordsxii motors reel drive motor	
installing	

Ν

n/a	
definition	
NPT	
definition	
nut	
definition	

0

oils	
changing knife drive box oil	362
header drive completion gearbox	
adding oil	283
header drive main gearbox	
adding oil	281
operating modes	
flex mode	141
rigid mode	143
operating variables	
headers	118
operations	31
optimizing headers	
straight combining canola	81
options	477
contourMax [™]	458
adjusting wheels with foot switch	121
leveling wheel height122,	458
lubricating	460
crop delivery	477
feed auger flighting	483
stripper bar kit	485
upper cross auger (UCA)	479
cutterbars	481
rock retarder kit	481
vertical knife kit	480
float modules	482
10V sensor adapter kit	482
crop deflectors kits	482
extended center filler kit	483
full interface filler kit	484
hydraulic reservoir extension kit	484
lateral tilt plug kit	485

header	487
crop divider storage bracket kit	478
crop lifter rack kit	477
floating crop dividers	478
grain crop lifter kit	477
reel	
inboard steel end finger kit	488
outboard steel end finger kit	489
rice divider rod kit	480
sunflower attachment kit	491
wheels	
stabilizer wheel kit	490
knifehead shields	359
installing	359
reel drive sprockets	152
rice divider rods	199
transport systems	464
ORB	
definition	21
ORFS	
definition	21
owner/operator responsibilities	

Ρ

pick-up reels	410
adjusting reel frown	418
centering	418
fore-aft position	
adjusting	163
repositioning cylinders	
double reel	167
single reel	164
frown	418
recommended setting	82
reel cam	
adjusting reel cam	178
settings and guidelines	176
reel clearance	
adjusting	414
measuring	410
reel drive motors	452
reel drives	
covers	41
installing	43
removing	41
double-reel drive U-joint	
installing	451
removing	449
double-reel U-joint	449
drive sprockets	446
optional for special conditions	152
dual sprocket (optional)	
installing	448
installing motors	453

loosening chain	444
removing motor	452
replacing chain	455
single sprocket	
removing	447
single sprockets	
installing	448
tightening chain	445
triple-reel drive U-joint	
removing449,	451
reel endshields	434
replacing endshield supports	442
replacing endshields at inboard cam end	437
replacing inboard tail end	440
replacing outboard tail end	438
reel fingers	419
installing plastic fingers	422
installing steel fingers	420
removing plastic fingers	421
removing steel fingers	420
reel fore-aft position	163
reel height	158
reel height sensor	
replacing sensor	161
reel safety props	33
disengaging	34
engaging	33
reel speed	152
reel tine pitch	
tine tube bushings	
installing	
removing	423
pointed knife guards and hold-down	
double knife	
FD235 pointed guard configuration	
FD240 pointed knife guard configuration	
FD241 pointed knife guard configuration	
FD250 pointed knife guard configuration	337
single knife	
pointed knife guard configuration	332
PR15 pick-up reels	
fore-aft position	
repositioning cylinders	4
double reel	
product overview	21

R

recommended fluids and lubricants 529
recommended settings
header 69
reel
reel clearance
adjusting 414
measuring 410

reel drive chains
loosening 444
replacing 455
tightening 445
reel drive motors
installing
removing
reel drive system
reel drives
double-reel U-joint
installing
removing
triple-reel U-joint
removing
reel endshields
replacing endshield supports
replacing endshields at inboard cam end
replacing endshields at outboard cam end
replacing inboard tail end
replacing outboard tail end
reel fingers
installing plastic fingers
installing steel fingers
removing plastic fingers
removing steel fingers
reel fore-aft positions, See pick-up reels
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, <i>See</i> pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting
reel fore-aft positions, See pick-up reels adjusting

S

SAE	
definition21	
safety1	

daily start-up checks	
general safety	3
header safety props	
hydraulic safety	6
maintenance safety	
operational safety	
reel safety props	
safety alert symbols	1
safety sign decals	7
installing decals	
interpreting decals	
locations	8
signal words	2
screws	
definition	
SDD	
definition	
sensors	
AHHC sensors	
checking and adjusting reel fore-aft position	
checking and adjusting reel height sensor	159
reel height sensor	
replacing	161
serial numbers	
locations	
records	xii
service intervals	
lubrication	266
servicing, See maintenance and servicing	
short knife guards and hold-down	
double knife	
short knife guard configuration – 12.5 m (41	
ft.)	
short knife guard configuration – all except 2	
(41 ft.)	350
short knife guards and hold-downs	
single knife	
short knife guard configuration	
shutting down procedures	50
side draper systems	
inspecting draper roller bearing	
replacing drive roller bearing	406
SKD	
definition	
skid shoes, See cutting on the ground	
adjusting inner skid shoes	
adjusting outer skid shoes	125
soft joints	
definition	
spare knives	330
specifications	
FD2 Series FlexDraper [®] Header and float modu	
specifications	
FD2 series FlexDraper [®] header dimensions	
torque specifications	509

speeds	
adjusting side draper speed	155
feed draper speed	156
ground speed	153
knife speed	
checking knife speed	157
knife speed data	156
reel speed	152
side draper speed	154
sprockets 41, 43,	
adjusting reel drive chain tension	444
loosening reel drive chain	
optional reel drive sprocket	
reel drive	
installing dual sprocket (optional)	448
installing single sprocket	
removing single sprocket	
tightening reel drive chain	
stabilizer wheel Kit	
stabilizer wheels	
adjusting	119
start-up	110
daily checks	48
storing the header	
straight combining canola	237
optimizing headers	81
stripper bars	
float module	405
installing	200
removing	
sunflower attachment	
	491

Т

tension	
definition	
TFFT	
definition	
tine tube bushings	
installing	428
removing	423
tire inflation/pressures	466
torque	
definition	
torque angles	
definition	21
torque specifications	509
metric bolt specifications	509
cast aluminum	512
O-ring boss (ORB) hydraulic fittings – adjustable	513
O-ring boss (ORB) hydraulic fittings – non-	
adjustable	514
O-ring face seal (ORFS) fittings	515
tapered pipe thread fittings	516
transport bolts	464

torque-tension	
definition	21
tow-bar	
storing	253
tow-bars	
attaching	254
removing	240
storing	243
towing the header	
attaching to towing vehicle	238
converting from field to transport	
moving wheels	
front (left) wheels to transport position	249
rear (right) wheels to transport position	
converting from transport to field	
moving wheels	
front (left) wheels to field position	244
rear (right) wheels to field position	
removing tow-bar	
removing tow-bar from storage	
storing tow-bar	
moving left outboard wheel from transport to worki	
position	-
transport assembly bolts	
transport systems	
converting from field to transport	
moving wheels	
front (left) wheels to transport position	249
rear (right) wheels to transport position	
converting from transport to field	
moving wheels	
front (left) wheels to field position	244
rear (right) wheels to field position	
removing tow-bar	
removing tow-bar from storage	
storing tow-bar	
moving left outboard wheel from transport to worki	
position	-
tire inflation/pressures	
transporting header	
on combine	
towing the header	
attaching to towing vehicle	
wheel bolt torques	
troubleshooting	
crop loss at cutterbar	
cutting action and knife components	
cutting action and kine components	
header and drapers	
reel delivery	
1001 udlivel y	200

U U-joint

U-joints	
double-reel U-joint	449

installing
triple-reel U-joint
removing449, 451
UCA
definition21
unplugging
cutterbar 235
float module 236
upper cross augers179, 479
adjusting position179

V

vertical knife	kits	480

W

washers
definition21
wheels and tires
stabilizer wheel Kit (option) 490
tire inflation/pressures 466
wheel bolt torques 464
wing balance
checking and adjusting wing balance 146
wobble boxes, See knife drive system, knife drive box
WOT
definition21

Recommended Fluids and Lubricants

Ensure your machine operates at top efficiency by using clean fluids and lubricants only.

- Use clean containers to handle all fluids and lubricants.
- Store fluids and lubricants in an area protected from dust, moisture, and other contaminants.

Table: Recommended Fluids and Lubricants

Lubricant	Specification	Description	Use	Capacities
Grease	SAE multi-purpose	High temperature extreme pressure (EP) performance with 1% max. molybdenum disulphide (NLGI Grade 2) lithium base	As required unless otherwise specified	_
		High temperature extreme pressure (EP) performance with 10% max. molybdenum disulphide (NLGI Grade 2) lithium base	Driveline slip-joints	_
Gear lubricant	SAE 85W-140	API service class GL-5	Knife drive box	1.5 liters (1.3 quarts)
			Main gearbox	2.75 liters (2.9 quarts)
			Completion gearbox	2.25 liters (2.4 quarts)
	Single grade trans-hydraulic oil. Viscosity at 60.1 cSt @ 40°C (104°F)Viscosity at 9.5 cSt @ 100°C (212°F)			
Hydraulic oil	Recommended brands:	Lubricant trans / hydraulic oil	Header drive systems reservoir	95 liters (25.1 US gallons)
	Petro-Canada Duratran			
	John Deere Hy-Gard J20C			
	Case Hy-Tran Ultraction			
	AGCO Power Fluid 821 XL			
Chain oil	Chain oil with a viscosity of 100–150 sCt at 40°C (104°F) or mineral oil SAE 20W-50 that has no detergents or solvents	Chain oil is formulated to provide good wear protection and resistance to foaming. It protects the chain and drive sprockets against wear.	Reel drive chain	_



BY MacDon

CUSTOMERS MacDon.com

DEALERS Portal.MacDon.com

Trademarks of products are the marks of their respective manufacturers and/or distributors.

Printed in Canada