

D1 Series Draper Header for Combines

**IMPORTANT: PAGE 33 HAS
BEEN UPDATED SINCE THIS
MANUAL WAS PUBLISHED.**


Operator's Manual

214408 Revision A

2018 Model Year

Original Instruction

D1 Series Draper Header for Combines

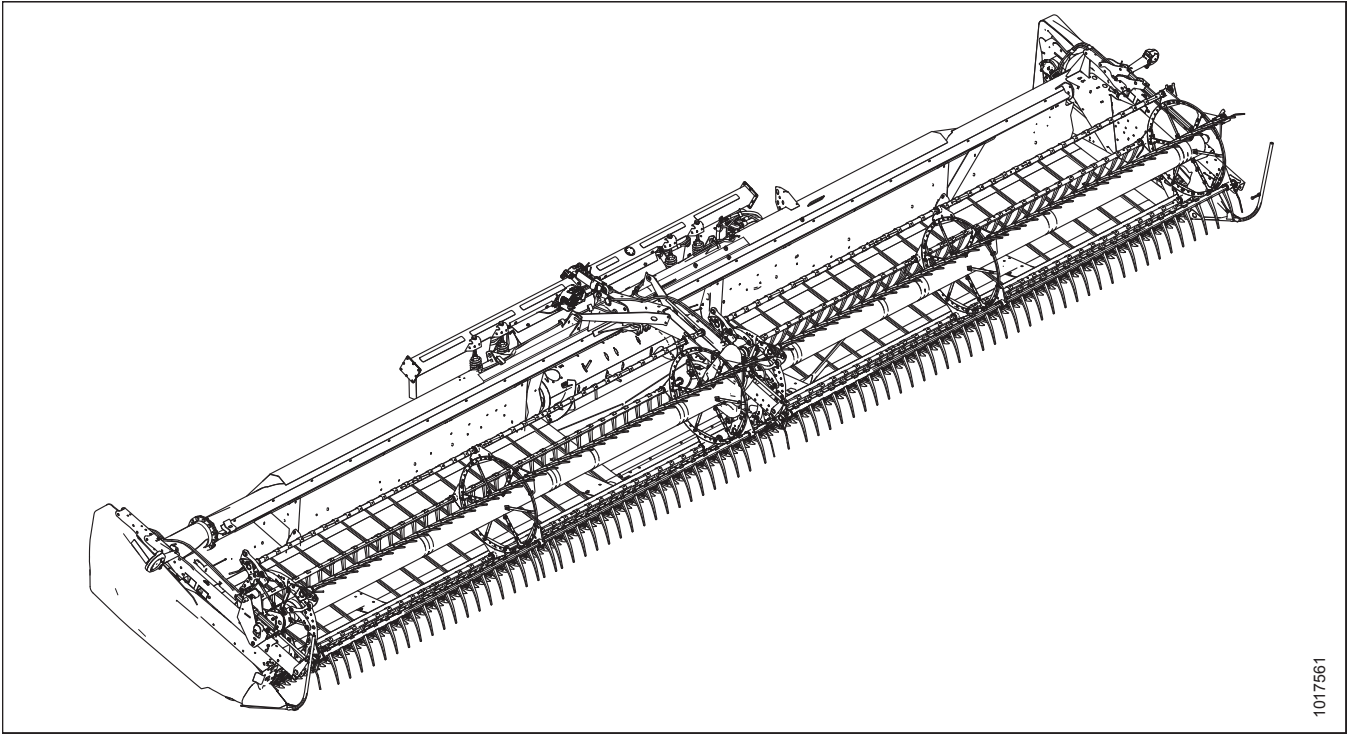

1017561

Published: January 2018.

Declaration of Conformity



EC Declaration of Conformity

[1] **MacDon**

MacDon Industries Ltd.
680 Moray Street,
Winnipeg, Manitoba, Canada
R3J 3S3

[4] As per shipping document

[5] November 9, 2017

[2] Combine Draper Header

[3] MacDon D1 Series

[6] _____
Christoph Martens
Product Integrity

EN	BG	CZ	DA
We, [1] Declare, that the product: Machine Type: [2] Name & Model: [3] Serial Number(s): [4] fulfils all the relevant provisions of the Directive 2006/42/EC. Harmonized standards used, as referred to in Article 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Place and date of declaration: [5] Identity and signature of the person empowered to draw up the declaration: [6] Name and address of the person authorized to compile the technical file: Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germany) bvonriedesel@macdon.com	Ние, [1] декларираме, че следният продукт: Тип машина: [2] Наименование и модел: [3] Сериен номер(а) [4] отговаря на всички приложими разпоредби на директива 2006/42/ЕО. Използвани са следните хармонизирани стандарти според чл. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Място и дата на декларацията: [5] Име и подпис на лицето, упълномощено да изготви декларацията: [6] Име и адрес на лицето, упълномощено да състави техническия файл: Бенедикт фон Рийдезел Управител, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Германия) bvonriedesel@macdon.com	My, [1] Prohlašujeme, že produkt: Typ zařízení: [2] Název a model: [3] Sériové(á) číslo(a): [4] splňuje všechna relevantní ustanovení směrnice 2006/42/EC. Byly použity harmonizované standardy, jak je uvedeno v článku 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Místo a datum prohlášení: [5] Identita a podpis osoby oprávněné k vydání prohlášení: [6] Jméno a adresa osoby oprávněné k vyplnění technického souboru: Benedikt von Riedesel generální ředitel, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Německo) bvonriedesel@macdon.com	Vi, [1] erklærer, at produktet: Maskintype [2] Navn og model: [3] Serienummer (-numre): [4] Opfylder alle bestemmelser i direktiv 2006/42/EF. Anvendte harmoniserede standarder, som henviser til i paragraf 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Sted og dato for erklæringen: [5] Identitet på og underskrift fra den person, som er bemyndiget til at udarbejde erklæringen: [6] Navn og adresse på den person, som er bemyndiget til at udarbejde den tekniske fil: Benedikt von Riedesel Direktør, MacDon Europe GmbH Hagenauer Straße 59 D-65203 Wiesbaden (Tyskland) bvonriedesel@macdon.com

DE	ES	ET	FR
Wir, [1] Erklären hiermit, dass das Produkt: Maschinentyp: [2] Name & Modell: [3] Seriennummer (n): [4] alle relevanten Vorschriften der Richtlinie 2006/42/EG erfüllt. Harmonisierte Standards wurden, wie in folgenden Artikeln angegeben, verwendet 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Ort und Datum der Erklärung: [5] Name und Unterschrift der Person, die dazu befugt ist, die Erklärung auszustellen: [6] Name und Anschrift der Person, die dazu berechtigt ist, die technischen Unterlagen zu erstellen: Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden bvonriedesel@macdon.com	Nosotros [1] declaramos que el producto: Tipo de máquina: [2] Nombre y modelo: [3] Números de serie: [4] cumple con todas las disposiciones pertinentes de la directriz 2006/42/EC. Se utilizaron normas armonizadas, según lo dispuesto en el artículo 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Lugar y fecha de la declaración: [5] Identidad y firma de la persona facultada para draw redactar la declaración: [6] Nombre y dirección de la persona autorizada para elaborar el expediente técnico: Benedikt von Riedesel Gerente general - MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Alemania) bvonriedesel@macdon.com	Meie, [1] deklareerime, et toode Seadme tüüp: [2] Nimi ja mudel: [3] Seerianumbrid: [4] vastab kõigile direktiivi 2006/42/EÜ asjakohastele sätetele. Kasutatud on järgnevald harmoniseeritud standardeid, millele on viidatud ka punktis 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Deklaratsiooni koht ja kuupäev: [5] Deklaratsiooni koostamiseks volitatud isiku nimi ja allkiri: [6] Tehnilise dokumendi koostamiseks volitatud isiku nimi ja aadress: Benedikt von Riedesel Peadirektor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Saksamaa) bvonriedesel@macdon.com	Nous soussignés, [1] Déclarons que le produit : Type de machine : [2] Nom et modèle : [3] Numéro(s) de série : [4] Est conforme à toutes les dispositions pertinentes de la directive 2006/42/EC. Utilisation des normes harmonisées, comme indiqué dans l'Article 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Lieu et date de la déclaration : [5] Identité et signature de la personne ayant reçu le pouvoir de rédiger cette déclaration : [6] Nom et adresse de la personne autorisée à constituer le dossier technique : Benedikt von Riedesel Directeur général, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Allemagne) bvonriedesel@macdon.com

EC Declaration of Conformity

<p>IT</p> <p>Noi, [1] Dichiariamo che il prodotto: Tipo di macchina: [2] Nome e modello: [3] Numero(i) di serie: [4] soddisfa tutte le disposizioni rilevanti della direttiva 2006/42/CE.</p> <p>Utilizzo degli standard armonizzati, come indicato nell'Articolo 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Luogo e data della dichiarazione: [5] Nome e firma della persona autorizzata a redigere la dichiarazione: [6] Nome e persona autorizzata a compilare il file tecnico: Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com</p>	<p>HU</p> <p>Mi, [1] Ezennel kijelentjük, hogy a következő termék: Gép típusa: [2] Név és modell: [3] Szériaszám(ok): [4] teljesíti a következő irányelv összes vonatkozó előírásait: 2006/42/EK.</p> <p>Az alábbi harmonizált szabványok kerültek alkalmazásra a 7(2) cikkely szerint: EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>A nyilatkozattétel ideje és helye: [5] Azon személy kiléte és aláírása, aki jogosult a nyilatkozat elkészítésére: [6] Azon személy neve és aláírása, aki felhatalmazott a műszaki dokumentáció összeállítására: Benedikt von Riedesel Vezérigazgató, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Németország) bvonriedesel@macdon.com</p>	<p>LT</p> <p>Mes, [1] Pareiškiami, kad šis produktas: Mašinos tipas: [2] Pavadinimas ir modelis: [3] Serijos numeris (-iai): [4] atitinka taikomus reikalavimus pagal Direktyvą 2006/42/EB.</p> <p>Naudojami harmonizuoti standartai, kai nurodoma straipsnyje 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Deklaracijos vieta ir data: [5] Asmens tapatybės duomenys ir parašas asmens, įgaliojoto sudaryti šią deklaraciją: [6] Vardas ir pavardė asmens, kuris įgaliojotas sudaryti šį techninį failą: Benedikt von Riedesel Generalinis direktorius, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Vokietija) bvonriedesel@macdon.com</p>	<p>LV</p> <p>Mēs, [1] Deklarējam, ka produkts: Mašīnas tips: [2] Nosaukums un modelis: [3] Sērijas numurs(-i): [4] Atbilst visām būtiskajām Direktīvas 2006/42/EK prasībām.</p> <p>Piemēroti šādi saskaņotie standarti, kā minēts 7. panta 2. punktā: EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Deklarācijas parakstīšanas vieta un datums: [5] Tās personas vārds, uzvārds un paraksts, kas ir pilnvarota sagatavot šo deklarāciju: [6] Tās personas vārds, uzvārds un adrese, kas ir pilnvarota sastādīt tehnisko dokumentāciju: Benedikts fon Rīdizels Generāldirektors, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Vācija) bvonriedesel@macdon.com</p>
<p>NL</p> <p>Wij, [1] Verklaren dat het product: Machinetype: [2] Naam en model: [3] Serienummer(s): [4] voldoet aan alle relevante bepalingen van de Richtlijn 2006/42/EC.</p> <p>Geharmoniseerde normen toegepast, zoals vermeld in Artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Plaats en datum van verklaring: [5] Naam en handtekening van de bevoegde persoon om de verklaring op te stellen: [6] Naam en adres van de geautoriseerde persoon om het technisch dossier samen te stellen: Benedikt von Riedesel Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com</p>	<p>PO</p> <p>My niżej podpisani, [1] Oświadczamy, że produkt: Typ urządzenia: [2] Nazwa i model: [3] Numer seryjny/numery seryjne: [4] spełnia wszystkie odpowiednie przepisy dyrektywy 2006/42/WE.</p> <p>Zastosowaliśmy następujące (zharmonizowane) normy zgodnie z artykułem 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Data i miejsce oświadczenia: [5] Imię i nazwisko oraz podpis osoby upoważnionej do przygotowania deklaracji: [6] Imię i nazwisko oraz adres osoby upoważnionej do przygotowania dokumentacji technicznej: Benedikt von Riedesel Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com</p>	<p>PT</p> <p>Nós, [1] Declaramos, que o produto: Tipo de máquina: [2] Nome e Modelo: [3] Número(s) de Série: [4] cumpre todas as disposições relevantes da Directiva 2006/42/CE.</p> <p>Normas harmonizadas aplicadas, conforme referido no Artigo 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Local e data da declaração: [5] Identidade e assinatura da pessoa autorizada a elaborar a declaração: [6] Nome e endereço da pessoa autorizada a compilar o ficheiro técnico: Benedikt von Riedesel Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com</p>	<p>RO</p> <p>Noi, [1] Declarăm, că următorul produs: Tipul mașinii: [2] Denumirea și modelul: [3] Număr (numere) serie: [4] corespunde tuturor dispozițiilor esențiale ale directivei 2006/42/CE.</p> <p>Au fost aplicate următoarele standarde armonizate conform articolului 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Data și locul declarației: [5] Identitatea și semnătura persoanei împuternicite pentru întocmirea declarației: [6] Numele și semnătura persoanei autorizate pentru întocmirea cărții tehnice: Benedikt von Riedesel Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com</p>
<p>SR</p> <p>Mi, [1] Izjavljujem da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(evi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC.</p> <p>Korišćeni su usklađeni standardi kao što je navedeno u članu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašćenog za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašćene za sastavljanje tehničke datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemačka) bvonriedesel@macdon.com</p>	<p>SV</p> <p>Mi, [1] Intygat att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG.</p> <p>Harmonierade standarder används, såsom anges i artikel 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Tyskland) bvonriedesel@macdon.com</p>	<p>SL</p> <p>Mi, [1] izjavljam, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES.</p> <p>Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščenega za pripravo tehnične datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemčija) bvonriedesel@macdon.com</p>	<p>SK</p> <p>My, [1] týmto prehlasujem, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES.</p> <p>Použité harmonizované normy, ktoré sa uvádzajú v článku č. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemecko) bvonriedesel@macdon.com</p>

1023960



EC Declaration of Conformity

[1] **MacDon**

MacDon Industries Ltd.
680 Moray Street,
Winnipeg, Manitoba, Canada
R3J 3S3

[4] As per shipping document

[5] November 9, 2017

[2] Float Module

[6] _____

[3] MacDon FM100

Christoph Martens
Product Integrity

EN	BG	CZ	DA
We, [1] Declare, that the product: Machine Type: [2] Name & Model: [3] Serial Number(s): [4] fulfils all the relevant provisions of the Directive 2006/42/EC. Harmonized standards used, as referred to in Article 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Place and date of declaration: [5] Identity and signature of the person empowered to draw up the declaration: [6] Name and address of the person authorized to compile the technical file: Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germany) bvonriedesel@macdon.com	Ние, [1] декларираме, че следният продукт: Тип машина: [2] Наименование и модел: [3] Сериен номер(а) [4] отговаря на всички приложими разпоредби на директива 2006/42/ЕО. Използвани са следните хармонизирани стандарти според чл. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Място и дата на декларацията: [5] Име и подпис на лицето, упълномощено да изготви декларацията: [6] Име и адрес на лицето, упълномощено да състави техническия файл: Бенедикт фон Рийдесел Управител, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Германия) bvonriedesel@macdon.com	My, [1] Prohláštujeme, že produkt: Typ zařízení: [2] Název a model: [3] Sériové(á) číslo(a): [4] splňuje všechna relevantní ustanovení směrnice 2006/42/EC. Byly použity harmonizované standardy, jak je uvedeno v článku 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Místo a datum prohlášení: [5] Identita a podpis osoby oprávněné k vydání prohlášení: [6] Jméno a adresa osoby oprávněné k vyplnění technického souboru: Benedikt von Riedesel generální ředitel, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Německo) bvonriedesel@macdon.com	Vi, [1] erklærer, at produktet: Maskintype [2] Navn og model: [3] Serienummer (-numre): [4] Opfylder alle bestemmelser i direktiv 2006/42/EF. Anvendte harmoniserede standarder, som henviser til i paragraf 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Sted og dato for erklæringen: [5] Identitet på og underskrift fra den person, som er bemyndiget til at udarbejde erklæringen: [6] Navn og adresse på den person, som er bemyndiget til at udarbejde den tekniske fil: Benedikt von Riedesel Direktør, MacDon Europe GmbH Hagenauer Straße 59 D-65203 Wiesbaden (Tyskland) bvonriedesel@macdon.com
DE	ES	ET	FR
Wir, [1] Erklären hiermit, dass das Produkt: Maschinentyp: [2] Name & Modell: [3] Seriennummer (n): [4] alle relevanten Vorschriften der Richtlinie 2006/42/EG erfüllt. Harmonisierte Standards wurden, wie in folgenden Artikeln angegeben, verwendet 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Ort und Datum der Erklärung: [5] Name und Unterschrift der Person, die dazu befugt ist, die Erklärung auszustellen: [6] Name und Anschrift der Person, die dazu berechtigt ist, die technischen Unterlagen zu erstellen: Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden bvonriedesel@macdon.com	Nosotros [1] declaramos que el producto: Tipo de máquina: [2] Nombre y modelo: [3] Números de serie: [4] cumple con todas las disposiciones pertinentes de la directriz 2006/42/EC. Se utilizaron normas armonizadas, según lo dispuesto en el artículo 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Lugar y fecha de la declaración: [5] Identidad y firma de la persona facultada para draw redactar la declaración: [6] Nombre y dirección de la persona autorizada para elaborar el expediente técnico: Benedikt von Riedesel Gerente general - MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Alemania) bvonriedesel@macdon.com	Meie, [1] deklareerime, et toode Seadme tüüp: [2] Nimi ja mudel: [3] Seerianumbriid: [4] vastab kõigile direktiivi 2006/42/EÜ asjakohastele sätetele. Kasutatud on järgnevald harmoniseeritud standardeid, millele on viidatud ka punktis 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Deklaratsiooni koht ja kuupäev: [5] Deklaratsiooni koostamiseks volitatud isiku nimi ja allkiri: [6] Tehnilise dokumendi koostamiseks volitatud isiku nimi ja aadress: Benedikt von Riedesel Peadirektor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Saksamaa) bvonriedesel@macdon.com	Nous soussignés, [1] Déclarons que le produit : Type de machine : [2] Nom et modèle : [3] Numéro(s) de série : [4] Est conforme à toutes les dispositions pertinentes de la directive 2006/42/EC. Utilisation des normes harmonisées, comme indiqué dans l'Article 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Lieu et date de la déclaration : [5] Identité et signature de la personne ayant reçu le pouvoir de rédiger cette déclaration : [6] Nom et adresse de la personne autorisée à constituer le dossier technique : Benedikt von Riedesel Directeur général, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Allemagne) bvonriedesel@macdon.com

The Harvesting Specialists

MacDon

1023961

EC Declaration of Conformity

<p>IT</p> <p>Noi, [1] Dichiaro che il prodotto: Tipo di macchina: [2] Nome e modello: [3] Numero(i) di serie: [4] soddisfa tutte le disposizioni rilevanti della direttiva 2006/42/CE.</p> <p>Utilizzo degli standard armonizzati, come indicato nell'Articolo 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Luogo e data della dichiarazione: [5] Nome e firma della persona autorizzata a redigere la dichiarazione: [6] Nome e persona autorizzata a compilare il file tecnico: Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com</p>	<p>HU</p> <p>Mi, [1] Ezzelent kijelentjük, hogy a következő termék: Gép típusa: [2] Név és modell: [3] Számszám(ok): [4] teljesíti a következő irányelv összes vonatkozó előírásait: 2006/42/EK.</p> <p>Az alábbi harmonizált szabványok kerültek alkalmazásra a 7(2) cikkely szerint:</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>A nyilatkozattétel ideje és helye: [5] Azon személy kiléte és aláírása, aki jogosult a nyilatkozat elkészítésére: [6] Azon személy neve és aláírása, aki felhatalmazott a műszaki dokumentáció összeállítására: Benedikt von Riedesel Vezérigazgató, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Németország) bvonriedesel@macdon.com</p>	<p>LT</p> <p>Mes, [1] Pareiškiami, kad šis produktas: Mašinos tipas: [2] Pavadinimas ir modelis: [3] Serijos numeris (-iai): [4] atitinka taikomus reikalavimus pagal Direktyvą 2006/42/EB.</p> <p>Naudojami harmonizuoti standartai, kai nurodoma straipsnyje 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Deklaracijos vieta ir data: [5] Asmens tapatybės duomenys ir parašas asmens, įgaliojoto sudaryti šią deklaraciją: [6] Vardas ir pavardė asmens, kuris įgaliojotas sudaryti šį techninį failą: Benedikt von Riedesel Generalinis direktorius, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Vokietija) bvonriedesel@macdon.com</p>	<p>LV</p> <p>Mēs, [1] Deklarējam, ka produkts: Mašīnas tips: [2] Nosaukums un modelis: [3] Sērijas numurs(-i): [4] Atbilst visām būtiskajām Direktīvas 2006/42/EK prasībām.</p> <p>Piemēroti šādi saskaņotie standarti , kā minēts 7. panta 2. punktā:</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Deklarācijas parakstīšanas vieta un datums: [5] Tās personas vārds, uzvārds un paraksts, kas ir pilnvarota sagatavot šo deklarāciju: [6] Tās personas vārds, uzvārds un adrese, kas ir pilnvarota sastādīt tehnisko dokumentāciju: Benedikts fon Rīdizels Ģenerāldirektors, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Vācija) bvonriedesel@macdon.com</p>
<p>NL</p> <p>Wij, [1] Verklaren dat het product: Machinetype: [2] Naam en model: [3] Serienummer(s): [4] voldoet aan alle relevante bepalingen van de Richtlijn 2006/42/EC.</p> <p>Geharmoniseerde normen toegepast, zoals vermeld in Artikel 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Plaats en datum van verklaring: [5] Naam en handtekening van de bevoegde persoon om de verklaring op te stellen: [6] Naam en adres van de geautoriseerde persoon om het technisch dossier samen te stellen: Benedikt von Riedesel Algemeen directeur, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com</p>	<p>PO</p> <p>My niżej podpisani, [1] Oświadczamy, że produkt: Typ urządzenia: [2] Nazwa i model: [3] Numer seryjny/numery seryjne: [4] spełnia wszystkie odpowiednie przepisy dyrektywy 2006/42/WE.</p> <p>Zastosowaliśmy następujące (zharmonizowane) normy zgodnie z artykulem 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Data i miejsce oświadczenia: [5] Imię i nazwisko oraz podpis osoby upoważnionej do przygotowania deklaracji: [6] Imię i nazwisko oraz adres osoby upoważnionej do przygotowania dokumentacji technicznej: Benedikt von Riedesel Dyrektor generalny, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com</p>	<p>PT</p> <p>Nós, [1] Declaramos, que o produto: Tipo de máquina: [2] Nome e Modelo: [3] Número(s) de Série: [4] cumpre todas as disposições relevantes da Directiva 2006/42/CE.</p> <p>Normas harmonizadas aplicadas, conforme referido no Artigo 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Local e data da declaração: [5] Identidade e assinatura da pessoa autorizada a elaborar a declaração: [6] Nome e endereço da pessoa autorizada a compilar o ficheiro técnico: Benedikt von Riedesel Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com</p>	<p>RO</p> <p>Noi, [1] Declarăm, că următorul produs: Tipul mașinii: [2] Denumirea și modelul: [3] Număr (numere) serie: [4] corespunde tuturor dispozițiilor esențiale ale directivei 2006/42/EC.</p> <p>Au fost aplicate următoarele standarde armonizate conform articolului 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Data și locul declarației: [5] Identitatea și semnătura persoanei împuternicite pentru întocmirea declarației: [6] Numele și semnătura persoanei autorizate pentru întocmirea cărții tehnice: Benedikt von Riedesel Manager General, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germania) bvonriedesel@macdon.com</p>
<p>SR</p> <p>Mi, [1] Izjavljujemo da proizvod Tip mašine: [2] Naziv i model: [3] Serijski broj(ovi): [4] Ispunjava sve relevantne odredbe direktive 2006/42/EC.</p> <p>Korišćeni su usklađeni standardi kao što je navedeno u članu 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Datum i mesto izdavanja deklaracije: [5] Identitet i potpis lica ovlašćenog za sastavljanje deklaracije: [6] Ime i adresa osobe ovlašćene za sastavljanje tehničke datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemačka) bvonriedesel@macdon.com</p>	<p>SV</p> <p>Mi, [1] Intygar att produkten: Maskintyp: [2] Namn och modell: [3] Serienummer: [4] uppfyller alla relevanta villkor i direktivet 2006/42/EG.</p> <p>Harmonierade standarder används, såsom anges i artikel 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Plats och datum för intyget: [5] Identitet och signatur för person med befogenhet att upprätta intyget: [6] Namn och adress för person behörig att upprätta den tekniska dokumentationen: Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Tyskland) bvonriedesel@macdon.com</p>	<p>SL</p> <p>Mi, [1] izjavljamo, da izdelek: Vrsta stroja: [2] Ime in model: [3] Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive 2006/42/ES.</p> <p>Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo izjave: [6] Ime in naslov osebe, pooblaščenca za pripravo tehnične datoteke: Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemčija) bvonriedesel@macdon.com</p>	<p>SK</p> <p>My, [1] týmto prehlasujem, že tento výrobok: Typ zariadenia: [2] Názov a model: [3] Výrobné číslo: [4] splňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES.</p> <p>Použitie harmonizované normy, ktoré sa uvádzajú v článku č. 7(2):</p> <p>EN ISO 4254-1:2013 EN ISO 4254-7:2009</p> <p>Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto prehlásenie: [6] Meno a adresa osoby oprávnenej zostaviť technický súbor: Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemecko) bvonriedesel@macdon.com</p>

Introduction

This instructional manual contains information on the D1 Series Draper Header and the FM100 Float Module. It must be used in conjunction with your combine operator's manual. The FM100 Float Module is used to attach a D1 Series Draper Header to a combine.

The D1 Series Draper Header is specially designed as a straight cut header and is equipped to work well in all straight cut conditions—whether cutting on or above the ground.

Carefully read all the material provided before attempting to use the machine.

Use this manual as your first source of information about the machine. If you follow the instructions provided, your header will work well for many years. If you require more detailed service information, a technical manual is available from your MacDon Dealer.

MacDon provides warranty for Customers who operate and maintain their equipment as described in this manual. A copy of the MacDon Industries Limited Warranty Policy, which explains this warranty, should have been provided to you by your Dealer. Damage resulting from any of the following conditions will void the warranty:

- Accident
- Misuse
- Abuse
- Improper maintenance or neglect
- Abnormal or extraordinary use of the machine
- Failure to use the machine, equipment, component, or part in accordance with the manufacturer's instructions

The following conventions are used in this document:

- Right and left are determined from the operator's position. The front of the header faces the crop; the back of the header attaches to the combine.
- Unless otherwise noted, use the standard torque values provided in Chapter *8.1 Torque Specifications*, page 569 and in the technical manual.

When setting up the machine or making adjustments, review and follow the recommended machine settings in all relevant MacDon publications. Failure to do so may compromise machine function and machine life and may result in a hazardous situation.

The Table of Contents and Index will guide you to specific areas of this manual. Study the Table of Contents to familiarize yourself with how the information is organized.

NOTE:

Keep your MacDon publications up-to-date. The most current version can be downloaded from our Dealer-only site (<https://portal.macdon.com>) (login required).

Keep this manual handy for frequent reference and to pass on to new Operators or Owners. A manual storage case (A) is located inside the header left endshield.

Call your MacDon Dealer if you need assistance, information, or additional copies of this manual.

This document is available in English, Czechoslovakian, German, French, Portuguese, and Russian.

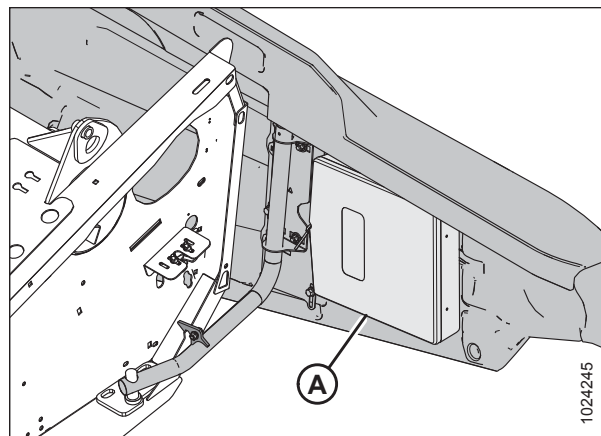


Figure 1. Manual Storage Location

List of Revisions

Summary of Change	Location
Updated publication date.	Inside front cover.
Added description about direction and torque conventions.	<i>Introduction, page v</i>
Updated header weight ranges.	<i>2.2 Specifications, page 23</i>
Corrected labeling for header width in table's frame and structure section.	<i>2.2 Specifications, page 23</i>
Updated procedure steps.	<i>Engaging Reel Safety Props, page 33</i>
Updated illustrations.	<ul style="list-style-type: none"> • <i>3.7.1 Float Module Feed Auger Configurations, page 59</i> • <i>Converting from Ultra Narrow Configuration or Narrow Configuration to Medium Configuration, page 61</i> • <i>Converting from Wide Configuration to Medium Configuration, page 64</i> • <i>Converting from Medium Configuration or Wide Configuration to Narrow Configuration, page 66</i> • <i>Converting from Ultra Narrow Configuration to Narrow Configuration, page 68</i> • <i>Converting from Ultra Narrow or Narrow Configuration to Wide Configuration, page 71</i> • <i>Converting from Medium Configuration or Wide Configuration to Ultra Narrow Configuration, page 74</i> • <i>Converting from Narrow Configuration to Ultra Narrow Configuration, page 78</i>
Expanded topic content, explaining header angle settings.	<i>3.7.4 Header Angle, page 94</i>
Updated topic with instructions for setting header angle using a variety of combine controls.	<i>Adjusting Header Angle from Combine, page 96</i>
Added content about optional in-cab side draper speed control kit.	<i>Adjusting Header Draper Speed, page 105</i>
Updated range labeling in procedure.	<i>Checking and Adjusting Reel Height Sensor, page 109</i>
Updated illustrations.	<i>Repositioning Fore-Aft Cylinders on Single Reel, page 115</i>
Updated illustrations.	<i>Repositioning Fore-Aft Cylinders on Double Reel, page 117</i>

Summary of Change	Location
Updated illustrations.	<i>Repositioning Fore-Aft Cylinders with Multi-Crop Rapid Reel Conversion Option, page 120</i>
Updated illustrations.	<i>Repositioning Fore-Aft Cylinders on European-Configured Headers, page 123</i>
Reorganized content for mid-range Case IH combines into its own section and added Case IH 5140/6140/7140 combines.	<ul style="list-style-type: none"> • <i>3.8.4 Case IH 5130/6130/7130 and 5140/6140/7140 Mid-Range Combines, page 153</i> • <i>Setting up the Header on the Combine Display (Case IH 5130/6130/7130; 5140/6140/7140), page 153</i> • <i>Checking Voltage Range from Combine Cab (Case IH 5130/6130/7130; 5140/6140/7140), page 154</i> • <i>Calibrating Auto Header Height Control (Case IH 5130/6130/7130, 5140/6140/7140), page 157</i> • <i>Setting Preset Cutting Height (Case 5130/6130/7130, 5140/6140/7140), page 157</i>
Added steps for setting reel height presets and activating the reel height sensor on combine display.	<ul style="list-style-type: none"> • <i>Setting up the Header on the Combine Display (Case IH 5130/6130/7130; 5140/6140/7140), page 153</i> • <i>Calibrating the Auto Header Height Control (Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240), page 166</i> • <i>Calibrating the Auto Header Height Control (Case Combines with Version 28.00 or Higher Software), page 169</i> • <i>Setting Preset Cutting Height (Case 5130/6130/7130, 5140/6140/7140), page 157</i> • <i>Setting Preset Cutting Height (Case 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240), page 173</i> • <i>Setting Preset Cutting Height (John Deere S Series), page 226</i> • <i>Setting up Auto Header Height Control (New Holland CR Series), page 275</i> • <i>Setting Preset Cutting Height (New Holland CR Series – 2015 and Later), page 282</i>
Added new topic.	<i>Setting Header Controls (Case 8010), page 163</i>
Added content for Case IH 7240/8240/9240 combines.	<ul style="list-style-type: none"> • <i>Checking Voltage Range from the Combine Cab (Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240), page 164</i>

Summary of Change	Location
	<ul style="list-style-type: none"> • <i>Calibrating the Auto Header Height Control (Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240), page 166</i> • <i>Setting Preset Cutting Height (Case 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240), page 173</i>
Added reel height related topics.	<ul style="list-style-type: none"> • <i>Checking Reel Height Sensor Voltages (Case IH), page 171</i> • <i>Checking Reel Height Sensor Voltages (New Holland), page 281</i> • <i>Checking Reel Height Sensor Voltages (John Deere S and T Series), page 231</i> • <i>Calibrating Reel Height Sensor (John Deere S and T Series), page 234</i>
Updated illustration.	<i>Setting Preset Cutting Height (Case 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240), page 173</i>
Added note to beginning of topic, updated steps and illustrations.	<i>Setting Preset Cutting Height (John Deere S Series), page 226</i>
Added new auto header height control topics for John Deere S7 Series combines.	<ul style="list-style-type: none"> • <i>3.8.12 John Deere S7 Series Combines, page 236</i> • <i>Setting up Header (John Deere S7 Series), page 236</i> • <i>Checking Voltage Range from the Combine Cab (John Deere S7 Series), page 240</i> • <i>Calibrating Feeder House (John Deere S7 Series), page 242</i> • <i>Calibrating Header (John Deere S7 Series), page 245</i>
Added topics for installing and removing UCA flighting in operation section of manual.	<ul style="list-style-type: none"> • <i>3.12 Upper Cross Auger (UCA), page 292</i> • <i>3.12.1 Removing UCA Flighting, page 292</i> • <i>3.12.2 Installing UCA Flighting, page 293</i>
Updated procedures to include illustrations and instructions for driveline safety chains.	<ul style="list-style-type: none"> • <i>4.2.1 Attaching Header to Case IH Combine, page 312</i> • <i>4.2.2 Detaching Header from Case IH Combine, page 317</i>
Updated illustration.	<i>Every 50 Hours, page 374</i>
Added information about changing oil filter at 250-hour service intervals.	<i>Every 250 Hours, page 379</i>

Summary of Change	Location
Updated illustration to show new transport light.	5.5.1 Replacing Light Bulbs, page 393
Updated procedure to include illustrations and instructions for driveline safety chains.	5.6.2 Installing Driveline, page 395
Updated illustrations showing feed auger finger timing adjustment assembly.	<ul style="list-style-type: none"> • 5.7.1 Adjusting Auger to Pan Clearance, page 401 • 5.7.2 Checking Auger Drive Chain Tension, page 404 • 5.7.3 Adjusting Auger Drive Chain Tension, page 405 • 5.7.4 Removing Auger Drive Chain, page 405 • 5.7.5 Installing Auger Drive Chain, page 408
Replaced content for checking and adjusting feed auger finger timing with new topic as there is now only the one timing setting.	Auger Finger Timing, page 416
Updated procedure to include instruction for checking belt tension.	Checking and Tensioning Non-Timed Knife Drive Belts, page 444
Updated procedure to include instruction for checking belt tension and updated illustrations.	Checking and Tensioning Timed Knife Drive Belts, page 449
Updated bundle number (MD #B6590) and kit illustration.	6.2.1 Multi-Crop Rapid Reel Conversion Kit, page 542
Updated bundle number (MD #B5691) and kit illustration.	6.2.2 Reel Arm Extension Kit (European-configured Headers Only), page 542
Included Extended Center Filler kit (MD #B6450) in list of available options.	6.3.3 Extended Center Filler, page 545
Updated right vertical knife bundle number for non-European-configured headers.	6.3.6 Vertical Knife Mounts and Double Vertical Knife Hose Kits, page 547
Included rock retarder kits (MD #B5084, B5085) in list of available options.	6.3.4 Rock Retarder, page 546
Updated UCA option bundle numbers for model year 2018.	6.5.8 Upper Cross Auger (UCA), page 554
Added topic for European markets-only upper cross auger (UCA) options.	6.5.9 European Combine Upper Cross Auger (UCA), page 555

Model and Serial Number

Record the model number, serial number, and model year of the header, combine float module, and transport / stabilizer wheel option (if installed) in the spaces provided.

NOTE:

Right and left designations are determined from the operator's position, facing forward.

Draper Header

Header Model: _____

Serial Number: _____

Year: _____

The serial number plate (A) is located in the upper corner on the left endsheet.

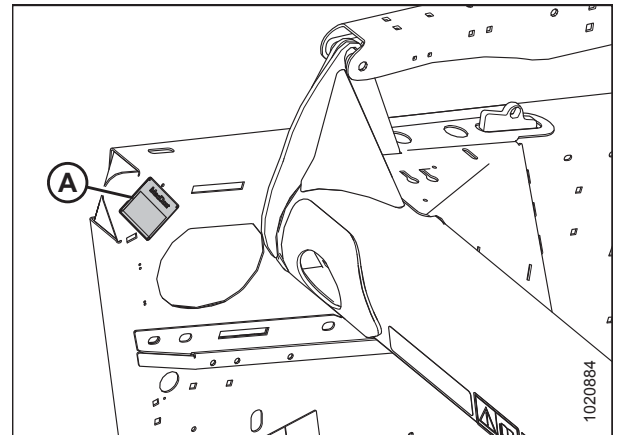


Figure 2. Header, Left Side Endshield

Combine Float Module

Float Module

Model: _____

Serial Number: _____

Year: _____

The serial number plate (A) is located at the top left side of the float module.

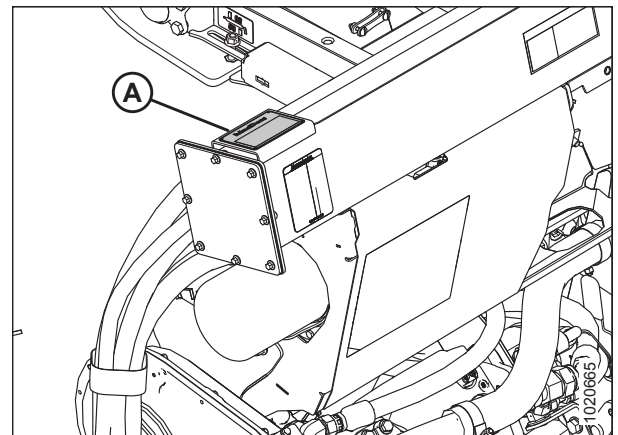


Figure 3. Float Module

Slow Speed Transport / Stabilizer Wheel Option

Serial Number: _____

Year: _____

The serial number plate (A) is located on the right axle assembly.

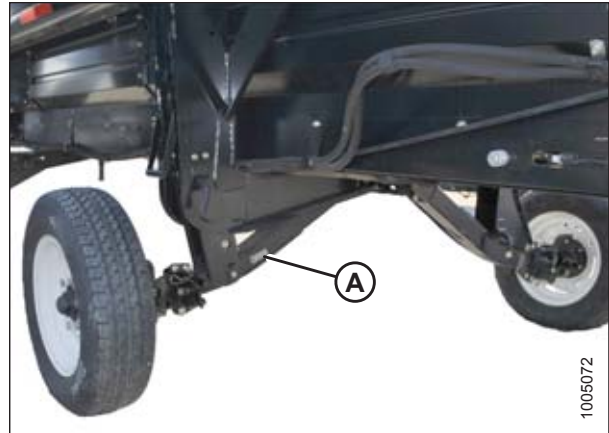


Figure 4. Transport/Stabilizer Option

TABLE OF CONTENTS

Declaration of Conformity	i
Introduction	v
List of Revisions	vii
Model and Serial Number	xi
Chapter 1: Safety	1
1.1 Safety Alert Symbols	1
1.2 Signal Words	2
1.3 General Safety	3
1.4 Maintenance Safety	5
1.5 Hydraulic Safety	6
1.6 Safety Signs	7
1.6.1 Installing Safety Decals	7
1.7 Safety Decal Locations	8
1.8 Understanding Safety Signs	15
Chapter 2: Product Overview	21
2.1 Definitions	21
2.2 Specifications	23
2.3 Component Identification	28
2.3.1 D1 Series Combine Header	28
2.3.2 FM100 Float Module	29
Chapter 3: Operation	31
3.1 Owner/Operator Responsibilities	31
3.2 Operational Safety	32
3.2.1 Header Safety Props	33
3.2.2 Reel Safety Props	33
Engaging Reel Safety Props	33
Disengaging Reel Safety Props	34
3.2.3 Endshields	35
Opening Endshields	35
Closing Endshields	36
Removing Endshields	37
Installing Endshields	37
Checking and Adjusting Endshields	38
3.2.4 Daily Start-Up Check	39
3.3 Break-in Period	40
3.4 Shutting down the Machine	41
3.5 Cab Controls	42
3.6 Header Setup	43
3.6.1 Header Attachments	43
3.6.2 Header Settings	43

TABLE OF CONTENTS

3.6.3 Optimizing Header for Straight Combining Canola	54
Checking and Adjusting Feed Auger Springs	55
3.6.4 Reel Settings	56
3.7 Header Operating Variables	58
3.7.1 Float Module Feed Auger Configurations	59
Converting from Ultra Narrow Configuration or Narrow Configuration to Medium Configuration	61
Converting from Wide Configuration to Medium Configuration	64
Converting from Medium Configuration or Wide Configuration to Narrow Configuration	66
Converting from Ultra Narrow Configuration to Narrow Configuration	68
Converting from Medium Configuration to Wide Configuration	69
Converting from Ultra Narrow or Narrow Configuration to Wide Configuration	71
Optional Modification to Wide Configuration	73
Converting from Medium Configuration or Wide Configuration to Ultra Narrow Configuration	74
Converting from Narrow Configuration to Ultra Narrow Configuration	78
3.7.2 Cutting Height	81
Cutting off the Ground	81
Cutting on the Ground	85
3.7.3 Header Float	87
Checking and Adjusting Header Float	87
Locking/Unlocking Header Float	93
3.7.4 Header Angle	94
Adjusting Header Angle from Combine	96
3.7.5 Reel Speed	102
Optional Reel Drive Sprockets	103
3.7.6 Ground Speed	103
3.7.7 Draper Speed	104
Adjusting Header Draper Speed	105
Feed Draper Speed	106
3.7.8 Knife Speed Data	107
Checking Knife Speed	108
3.7.9 Reel Height	109
Checking and Adjusting Reel Height Sensor	109
Replacing Reel Height Sensor	111
3.7.10 Reel Fore-Aft Position	114
Adjusting Reel Fore-Aft Position	115
Repositioning Fore-Aft Cylinders on Single Reel	115
Repositioning Fore-Aft Cylinders on Double Reel	117
Repositioning Fore-Aft Cylinders with Multi-Crop Rapid Reel Conversion Option	120
Repositioning Fore-Aft Cylinders on European-Configured Headers	123
3.7.11 Reel Tine Pitch	127
Reel Cam Settings	127
Adjusting Reel Cam	130
3.7.12 Crop Dividers	130
Removing Crop Dividers with Latch Option from Header	130
Removing Crop Dividers without Latch Option from Header	131
Installing Crop Dividers with Latch Option onto Header	132
Installing Crop Dividers without Latch Option onto Header	133
3.7.13 Crop Divider Rods	135

TABLE OF CONTENTS

Removing Crop Divider Rods	135
Installing Crop Divider Rods	136
Rice Divider Rods	136
3.7.14 Setting Auger Position	137
3.8 Auto Header Height Control (AHHC).....	139
3.8.1 Sensor Operation	140
3.8.2 Sensor Output Voltage Range – Combine Requirements	141
10-Volt Adapter (MD #B6421) – New Holland Combines Only	141
Manually Checking Voltage Range: One-Sensor System	142
Manually Checking Voltage Range: Two-Sensor System	144
Adjusting Voltage Limits: One-Sensor System	146
Adjusting Voltage Limits: Two-Sensor System.....	147
Replacing the Auto Header Height Control (AHHC) Sensor (One-Sensor System).....	149
3.8.3 Case IH 5088/6088/7088 Combines	150
Calibrating the Auto Header Height Control (Case IH 5088/6088/7088)	150
Setting the Sensitivity of the Auto Header Height (Case IH 5088/6088/7088).....	151
3.8.4 Case IH 5130/6130/7130 and 5140/6140/7140 Mid-Range Combines.....	153
Setting up the Header on the Combine Display (Case IH 5130/6130/7130; 5140/6140/7140).....	153
Checking Voltage Range from Combine Cab (Case IH 5130/6130/7130; 5140/6140/7140).....	154
Calibrating Auto Header Height Control (Case IH 5130/6130/7130, 5140/6140/7140)	157
Setting Preset Cutting Height (Case 5130/6130/7130, 5140/6140/7140).....	157
3.8.5 Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230 and 7240/8240/9240 Combines	160
Checking Voltage Range from the Combine Cab (Case 8010).....	160
Setting Header Controls (Case 8010).....	163
Checking Voltage Range from the Combine Cab (Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240).....	164
Calibrating the Auto Header Height Control (Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240).....	166
Calibrating the Auto Header Height Control (Case Combines with Version 28.00 or Higher Software).....	169
Checking Reel Height Sensor Voltages (Case IH)	171
Setting Preset Cutting Height (Case 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240).....	173
3.8.6 Challenger and Massey Ferguson 6 and 7 Series Combines	174
Checking Voltage Range from the Combine Cab (Challenger and Massey Ferguson).....	174
Engaging the Auto Header Height Control (Challenger and Massey Ferguson)	176
Calibrating the Auto Header Height Control (Challenger and Massey Ferguson).....	177
Adjusting the Header Height (Challenger and Massey Ferguson)	179
Adjusting the Header Raise/Lower Rate (Challenger and Massey Ferguson)	179
Setting the Sensitivity of the Auto Header Height Control (Challenger and Massey Ferguson).....	180
3.8.7 Gleaner R65/R66/R75/R76 and S Series Combines	181
Checking Voltage Range from the Combine Cab (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)	181
Engaging the Auto Header Height Control (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)	183
Calibrating the Auto Header Height Control (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)	185
Turning off the Accumulator (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)	186

TABLE OF CONTENTS

Adjusting the Header Raise/Lower Rate (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)	187
Adjusting Ground Pressure (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)	187
Adjusting the Sensitivity of the Auto Header Height Control (AHHC) (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)	188
Troubleshooting Alarms and Diagnostic Faults (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)	189
3.8.8 Gleaner S9 Series Combines	191
Setting up the Header (Gleaner S9 Series)	191
Setting up Reel Settings (Gleaner S9 Series)	196
Setting up Automatic Header Controls (Gleaner S9 Series)	197
Calibrating the Header (Gleaner S9 Series)	199
Operating Header (Gleaner S9 Series)	203
Header In-Field Settings	204
3.8.9 John Deere 60 Series Combines	205
Checking Voltage Range from the Combine Cab (John Deere 60 Series)	205
Calibrating the Auto Header Height Control (John Deere 60 Series)	208
Turning the Accumulator Off (John Deere 60 Series)	209
Setting the Sensing Grain Header Height to 50 (John Deere 60 Series)	210
Setting the Sensitivity of the Auto Header Height Control (John Deere 60 Series)	211
Adjusting the Threshold for the Drop Rate Valve (John Deere 60 Series)	212
3.8.10 John Deere 70 Series Combines	213
Checking Voltage Range from the Combine Cab (John Deere 70 Series)	213
Calibrating Feeder House Speed (John Deere 70 Series)	216
Calibrating the Auto Header Height Control (John Deere 70 Series)	216
Setting the Sensitivity of the Auto Header Height Control (John Deere 70 Series)	218
Adjusting the Manual Header Raise/Lower Rate (John Deere 70 Series)	219
3.8.11 John Deere S and T Series Combines	220
Checking Voltage Range from the Combine Cab (John Deere S and T Series)	220
Calibrating the Auto Header Height Control (John Deere S and T Series)	222
Setting the Sensitivity of the Auto Header Height Control (John Deere S and T Series)	224
Adjusting the Manual Header Raise/Lower Rate (John Deere S and T Series)	225
Setting Preset Cutting Height (John Deere S Series)	226
Calibrating Feeder House Fore-Aft Tilt Range (John Deere S and T Series)	229
Checking Reel Height Sensor Voltages (John Deere S and T Series)	231
Calibrating Reel Height Sensor (John Deere S and T Series)	234
3.8.12 John Deere S7 Series Combines	236
Setting up Header (John Deere S7 Series)	236
Checking Voltage Range from the Combine Cab (John Deere S7 Series)	240
Calibrating Feeder House (John Deere S7 Series)	242
Calibrating Header (John Deere S7 Series)	245
3.8.13 CLAAS 500 Series Combines	247
Calibrating the Auto Header Height Control (CLAAS 500 Series)	247
Setting Cutting Height (CLAAS 500 Series)	249
Setting the Sensitivity of the Auto Header Height Control (CLAAS 500 Series)	251
Adjusting Auto Reel Speed (CLAAS 500 Series)	254
3.8.14 CLAAS 600 and 700 Series Combines	257
Calibrating the Auto Header Height Control (CLAAS 600 and 700 Series)	257
Setting Cutting Height (CLAAS 600 and 700 Series)	260
Setting the Sensitivity of the Auto Header Height Control (CLAAS 600 and 700 Series)	260
Adjusting Auto Reel Speed (CLAAS 600 and 700 Series)	262
3.8.15 New Holland Combines (CR/CX Series—Pre-2015 Model Year)	263

TABLE OF CONTENTS

Checking Voltage Range from the Combine Cab (New Holland).....	263
Setting up Auto Header Height Control (New Holland CR/CX Series)	266
Calibrating the Auto Header Height Control (New Holland CR/CX Series).....	267
Adjusting Header Raise Rate (New Holland CR/CX Series)	269
Setting the Header Lower Rate (New Holland CR/CX Series).....	270
Setting the Sensitivity of the Auto Header Height Control (New Holland CR/CX Series).....	271
Setting Preset Cutting Height (New Holland CR/CX Series)	271
3.8.16 New Holland Combines (CR Series—Model Year 2015 and Later)	273
Checking Voltage Range from the Combine Cab (New Holland CR Series).....	273
Setting up Auto Header Height Control (New Holland CR Series).....	275
Calibrating the Auto Header Height Control (New Holland CR Series).....	279
Checking Reel Height Sensor Voltages (New Holland)	281
Setting Preset Cutting Height (New Holland CR Series – 2015 and Later).....	282
Setting Maximum Work Height (New Holland CR Series).....	284
Configuring Reel Fore-Aft, Header Tilt, and Header Type (New Holland CR Series).....	286
3.9 Leveling the Header	288
3.10 Unplugging the Cutterbar	290
3.11 Unplugging the Float Module.....	291
3.12 Upper Cross Auger (UCA)	292
3.12.1 Removing UCA Flighting.....	292
3.12.2 Installing UCA Flighting.....	293
3.13 Transporting the Header	294
3.13.1 Transporting Header on Combine	294
3.13.2 Towing.....	295
Attaching Header to Towing Vehicle	295
Towing the Header.....	295
3.13.3 Converting from Transport to Field Position	296
Removing Tow-Bar	296
Storing the Tow-Bar	297
Moving Front (Left) Wheels into Field Position	299
Moving Rear (Right) Wheels into Field Position.....	300
3.13.4 Converting from Field to Transport Position	302
Moving Front (Left) Wheels into Transport Position	302
Moving Rear (Right) Wheels into Transport Position.....	304
Attaching Tow-Bar	307
3.14 Storing the Header	310
Chapter 4: Header Attachment/Detachment.....	311
4.1 Float Module Setup	311
4.1.1 Using Auger Flighting	311
4.1.2 Using Stripper Bars	311
4.2 Case IH Combines	312
4.2.1 Attaching Header to Case IH Combine.....	312
4.2.2 Detaching Header from Case IH Combine.....	317
4.3 AGCO (Challenger, Gleaner, and Massey Ferguson) Combines	320
4.3.1 Attaching Header to a Challenger, Gleaner, or Massey Ferguson Combine.....	320
4.3.2 Detaching Header from a Challenger, Gleaner, or Massey Ferguson Combine.....	325

TABLE OF CONTENTS

4.4 John Deere Combines	328
4.4.1 Attaching Header to John Deere Combine	328
4.4.2 Detaching Header from John Deere Combine	332
4.5 CLAAS Combines	335
4.5.1 Attaching Header to CLAAS Combine.....	335
4.5.2 Detaching Header from CLAAS Combine.....	340
4.6 New Holland Combines	343
4.6.1 Attaching Header to New Holland CR/CX Combine.....	343
4.6.2 Detaching Header from New Holland CR/CX Combine.....	347
4.6.3 CR Feeder Deflectors	351
4.7 Attaching and Detaching Header from Float Module	353
4.7.1 Attaching Header to Float Module.....	353
4.7.2 Detaching Header from Float Module.....	358
Chapter 5: Maintenance and Servicing	365
5.1 Preparing Machine for Servicing	365
5.2 Maintenance Specifications	366
5.2.1 Installing a Sealed Bearing.....	366
5.3 Maintenance Requirements	367
5.3.1 Maintenance Schedule/Record	367
5.3.2 Break-In Inspection	370
5.3.3 Preseason Servicing	370
5.3.4 End-of-Season Service.....	371
5.3.5 Checking Hydraulic Hoses and Lines	372
5.3.6 Lubrication and Servicing.....	372
Service Intervals.....	372
Greasing Procedure.....	381
Lubricating Reel Drive Chain – Double Reel	382
Lubricating Auger Drive Chain	385
Lubricating Header Drive Gearbox.....	386
5.4 Hydraulics	389
5.4.1 Checking Oil Level in Hydraulic Reservoir	389
5.4.2 Adding Oil to Hydraulic Reservoir	390
5.4.3 Changing Oil in Hydraulic Reservoir	391
5.4.4 Changing Oil Filter	392
5.5 Electrical System	393
5.5.1 Replacing Light Bulbs	393
5.6 Header Drive	394
5.6.1 Removing Driveline	394
5.6.2 Installing Driveline	395
5.6.3 Removing Driveline Guard	396
5.6.4 Installing Driveline Guard.....	398
5.6.5 Adjusting Gearbox Drive Chain Tension	400

TABLE OF CONTENTS

5.7 Auger	401
5.7.1 Adjusting Auger to Pan Clearance	401
5.7.2 Checking Auger Drive Chain Tension	404
5.7.3 Adjusting Auger Drive Chain Tension	405
5.7.4 Removing Auger Drive Chain	405
5.7.5 Installing Auger Drive Chain	408
5.7.6 Auger Fingers	410
Removing Feed Auger Fingers	410
Installing Feed Auger Fingers	412
Replacing Feed Auger Finger Guides	415
Using Auger Flighting	416
Auger Finger Timing	416
5.8 Knife	417
5.8.1 Replacing Knife Section	417
5.8.2 Removing Knife	418
5.8.3 Removing Knifehead Bearing	419
5.8.4 Installing Knifehead Bearing	420
5.8.5 Installing Knife	420
5.8.6 Spare Knife	421
5.8.7 Knife Guards	422
Adjusting Knife Guards	422
Replacing Pointed Guards	423
Replacing Stub Guards	426
Checking Knife Hold-Downs	427
5.8.8 Knifehead Shield	429
Installing Knifehead Shield	430
5.9 Knife Drive System	431
5.9.1 Knife Drive Box	431
Checking Knife Drive Box	431
Checking Mounting Bolts	432
Removing Knife Drive Box	433
Removing Knife Drive Box Pulley	435
Installing Knife Drive Box Pulley	436
Installing Knife Drive Box	436
Changing Oil in Knife Drive Box	439
5.9.2 Knife Drive Belts	440
Non-Timed Knife Drive Belts	440
Timed Double-Knife Drive Belts	445
5.10 Feed Draper	457
5.10.1 Replacing Feed Draper	457
5.10.2 Adjusting Feed Draper Tension	459
5.10.3 Feed Draper Drive Roller	460
Removing Feed Draper Drive Roller	460
Installing Feed Draper Drive Roller	462
Replacing Feed Draper Drive Roller Bearing	463
5.10.4 Feed Draper Idler Roller	466
Removing Feed Draper Idler Roller	466

TABLE OF CONTENTS

Replacing Feed Draper Idler Roller Bearing	467
Installing Feed Draper Idler Roller	468
5.10.5 Lowering Float Module Feed Deck Pan	469
5.10.6 Raising Float Module Feed Deck Pan	470
5.11 Float Module Stripper Bars and Feed Deflectors	472
5.11.1 Removing Stripper Bars	472
5.11.2 Installing Stripper Bars	473
5.11.3 Replacing Feed Deflectors on New Holland CR Combines.....	473
5.12 Header Drapers	475
5.12.1 Removing Side Drapers	475
5.12.2 Installing Side Drapers	476
5.12.3 Adjusting Draper Tension	478
5.12.4 Adjusting Header Draper Tracking	480
5.12.5 Adjusting Deck Height	482
5.12.6 Header Draper Roller Maintenance.....	484
Inspecting Draper Roller Bearing	484
Draper Deck Idler Roller	484
Draper Deck Drive Roller	487
5.12.7 Draper Deflectors	491
Removing Narrow Draper Deflectors	491
Installing Narrow Draper Deflectors.....	492
5.13 Reel	494
5.13.1 Reel Clearance to Cutterbar.....	494
Measuring Reel Clearance	495
Adjusting Reel Clearance	497
5.13.2 Reel Frown	498
Adjusting Reel Frown.....	498
5.13.3 Centering the Reel	499
Centering Double Reel.....	499
Centering Single Reel	500
5.13.4 Reel Fingers	500
Removing Steel Fingers	500
Installing Steel Fingers.....	501
Removing Plastic Fingers.....	502
Installing Plastic Fingers	503
5.13.5 Tine Tube Bushings.....	504
Removing Bushings from Five-, Six-, or Nine-Bat Reels.....	504
Installing Bushings on Five-, Six-, or Nine-Bat Reels	509
5.13.6 Reel Endshields	518
Replacing Reel Endshields.....	518
Replacing Reel Endshield Supports	520
5.14 Reel System	521
5.14.1 Reel Drive Cover	521
Removing Reel Drive Cover	521
Installing Reel Drive Cover	522
5.14.2 Reel Drive Chain Tension.....	524
Loosening Reel Drive Chain	524

TABLE OF CONTENTS

Tightening Reel Drive Chain	525
5.14.3 Reel Drive Sprocket.....	526
Removing Reel Drive Sprocket	526
Installing Reel Drive Sprocket.....	527
5.14.4 Double-Reel U-Joint	528
Removing Double-Reel U-Joint	528
Installing Double-Reel U-Joint	529
5.14.5 Reel Drive Motor	530
Removing Reel Drive Motor.....	530
Installing Reel Drive Motor	531
5.14.6 Replacing Drive Chain on Double Reel	532
5.14.7 Replacing Drive Chain on Single Reel.....	534
5.14.8 Replacing Reel Speed Sensor.....	534
Replacing AGCO (Challenger, Gleaner, and Massey Ferguson) Sensor	534
Replacing John Deere Reel Speed Sensor.....	536
Replacing CLAAS 400 Series Reel Speed Sensor	536
Replacing CLAAS 500/700 Series Reel Speed Sensor	537
5.15 Transport System (Optional)	538
5.15.1 Checking Wheel Bolt Torque	538
5.15.2 Checking Axle Bolt Torque	539
5.15.3 Checking Tire Pressure.....	540
Chapter 6: Options and Attachments	541
6.1 Float Module.....	541
6.1.1 Hillside Extension Kit	541
6.2 Reel	542
6.2.1 Multi-Crop Rapid Reel Conversion Kit.....	542
6.2.2 Reel Arm Extension Kit (European-configured Headers Only).....	542
6.2.3 Lodged Crop Reel Finger Kit	543
6.2.4 PR15 Tine Tube Reel Conversion Kit	543
6.2.5 Reel Endshield Kit	543
6.2.6 Tine Tube Reinforcing Kit.....	544
6.3 Cutterbar	545
6.3.1 Cutterbar Wearplate	545
6.3.2 Knifehead Shield.....	545
6.3.3 Extended Center Filler.....	545
6.3.4 Rock Retarder.....	546
6.3.5 Stub Guard Conversion Kit.....	546
6.3.6 Vertical Knife Mounts and Double Vertical Knife Hose Kits.....	547
6.4 Header	548
6.4.1 Divider Latch Kit.....	548
6.4.2 Stabilizer Wheels	548
6.4.3 Secondary Stabilizer Wheel	549
6.4.4 Stabilizer / Slow Speed Transport Wheels	549
6.4.5 Backsheet Extension Kit	550

TABLE OF CONTENTS

6.5 Crop Delivery	551
6.5.1 FM100 Dual Auto Header Height Control (AHHC) Sensor Kit.....	551
6.5.2 FM100 Feed Auger Flighting	551
6.5.3 In-Cab Draper Speed Control (ICDSC) Kit.....	552
6.5.4 Draper Deflector (Narrow).....	552
6.5.5 Draper Deflector (Wide).....	553
6.5.6 Stripper Bars.....	553
6.5.7 Auger Dent Repair Kit.....	554
6.5.8 Upper Cross Auger (UCA)	554
6.5.9 European Combine Upper Cross Auger (UCA)	555
6.5.10 Rice Divider Rods.....	555
Chapter 7: Troubleshooting	557
7.1 Crop Loss at Cutterbar	557
7.2 Cutting Action and Knife Components	560
7.3 Reel Delivery	564
7.4 Header and Drapers.....	567
Chapter 8: Reference	569
8.1 Torque Specifications	569
8.1.1 Metric Bolt Specifications.....	569
8.1.2 Metric Bolt Specifications Bolting into Cast Aluminum	571
8.1.3 Flare-Type Hydraulic Fittings.....	572
8.1.4 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable).....	573
8.1.5 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable).....	575
8.1.6 O-Ring Face Seal (ORFS) Hydraulic Fittings	576
8.1.7 Tapered Pipe Thread Fittings	577
8.2 Conversion Chart.....	578
8.3 Unloading and Assembly	579
Index	581
Recommended Fluids and Lubricants	Inside Back Cover

1 Safety

1.1 Safety Alert Symbols

This safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

- **ATTENTION!**
- **BECOME ALERT!**
- **YOUR SAFETY IS INVOLVED!**

Carefully read and follow the safety message accompanying this symbol.

Why is safety important to you?

- Accidents disable and kill
- Accidents cost
- Accidents can be avoided



Figure 1.1: Safety Symbol

1.2 Signal Words

Three signal words, **DANGER**, **WARNING**, and **CAUTION**, are used to alert you to hazardous situations. Signal words are selected using the following guidelines:



DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.



CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

1.3 General Safety

CAUTION

The following are general farm safety precautions that should be part of your operating procedure for all types of machinery.

Protect yourself.

- When assembling, operating, and servicing machinery, wear all protective clothing and personal safety devices that could be necessary for job at hand. Do **NOT** take chances. You may need the following:
 - Hard hat
 - Protective footwear with slip resistant soles
 - Protective glasses or goggles
 - Heavy gloves
 - Wet weather gear
 - Respirator or filter mask
- Be aware that exposure to loud noises can cause hearing impairment or loss. Wear suitable hearing protection devices such as earmuffs or earplugs to help protect against loud noises.



Figure 1.2: Safety Equipment



Figure 1.3: Safety Equipment

- Provide a first aid kit for use in case of emergencies.
- Keep a fire extinguisher on the machine. Be sure fire extinguisher is properly maintained. Be familiar with its proper use.
- Keep young children away from machinery at all times.
- Be aware that accidents often happen when Operator is tired or in a hurry. Take time to consider safest way. Never ignore warning signs of fatigue.

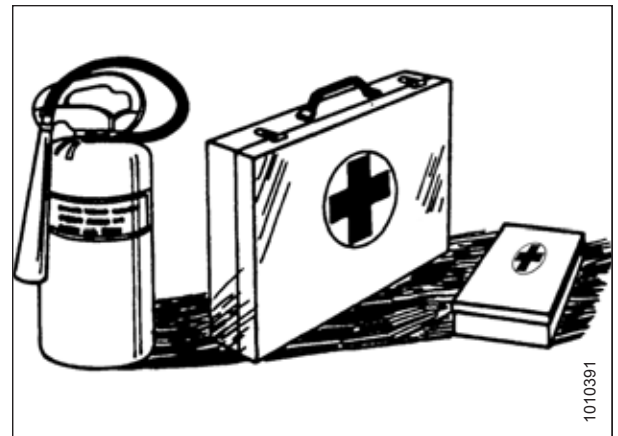


Figure 1.4: Safety Equipment

SAFETY

- Wear close-fitting clothing and cover long hair. Never wear dangling items such as scarves or bracelets.
- Keep all shields in place. **NEVER** alter or remove safety equipment. Make sure driveline guards can rotate independently of shaft and can telescope freely.
- Use only service and repair parts made or approved by equipment manufacturer. Substituted parts may not meet strength, design, or safety requirements.



Figure 1.5: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. **NEVER** attempt to clear obstructions or objects from a machine while engine is running.
- Do **NOT** modify machine. Unauthorized modifications may impair machine function and/or safety. It may also shorten machine's life.
- To avoid bodily injury or death from unexpected startup of machine, **ALWAYS** stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

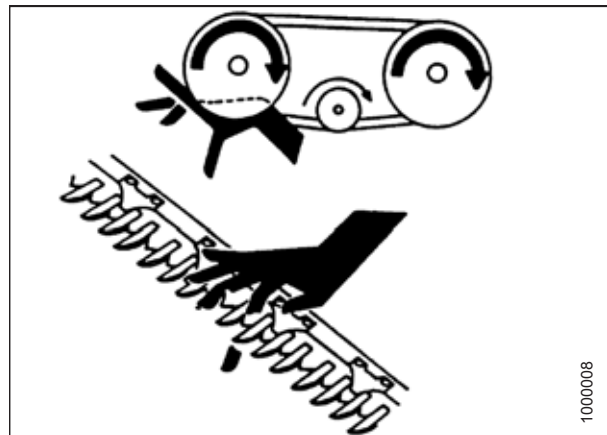


Figure 1.6: Safety around Equipment

- Keep service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
- Keep work area well lit.
- Keep machinery clean. Straw and chaff on a hot engine is a fire hazard. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before storage.
- **NEVER** use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover sharp or extending components to prevent injury from accidental contact.



Figure 1.7: Safety around Equipment

1.4 Maintenance Safety

To ensure your safety while maintaining machine:

- Review operator's manual and all safety items before operation and/or maintenance of machine.
- Place all controls in Neutral, stop the engine, set the park brake, remove the ignition key, and wait for all moving parts to stop before servicing, adjusting, and/or repairing.
- Follow good shop practices:
 - Keep service areas clean and dry
 - Be sure electrical outlets and tools are properly grounded
 - Keep work area well lit
- Relieve pressure from hydraulic circuits before servicing and/or disconnecting machine.
- Make sure all components are tight and that steel lines, hoses, and couplings are in good condition before applying pressure to hydraulic systems.
- Keep hands, feet, clothing, and hair away from all moving and/or rotating parts.
- Clear area of bystanders, especially children, when carrying out any maintenance, repairs, or adjustments.
- Install transport lock or place safety stands under frame before working under machine.
- If more than one person is servicing machine at same time, be aware that rotating a driveline or other mechanically-driven component by hand (for example, accessing a lube fitting) will cause drive components in other areas (belts, pulleys, and knives) to move. Stay clear of driven components at all times.
- Wear protective gear when working on machine.
- Wear heavy gloves when working on knife components.



Figure 1.8: Safety around Equipment

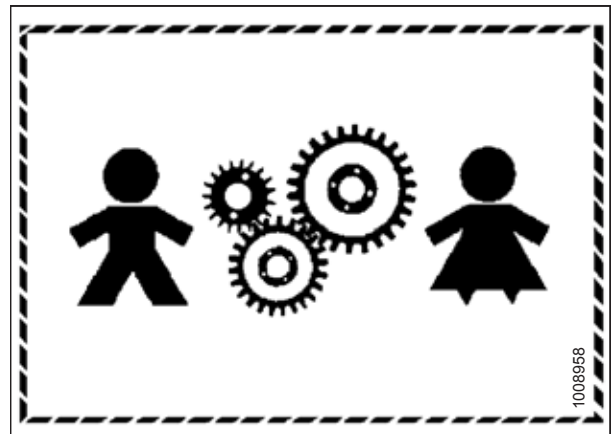


Figure 1.9: Equipment NOT Safe for Children



Figure 1.10: Safety Equipment

1.5 Hydraulic Safety

- Always place all hydraulic controls in Neutral before dismounting.
- Make sure that all components in hydraulic system are kept clean and in good condition.
- Replace any worn, cut, abraded, flattened, or crimped hoses and steel lines.
- Do **NOT** attempt any makeshift repairs to hydraulic lines, fittings, or hoses by using tapes, clamps, cements, or welding. The hydraulic system operates under extremely high pressure. Makeshift repairs will fail suddenly and create hazardous and unsafe conditions.



Figure 1.11: Testing for Hydraulic Leaks

- Wear proper hand and eye protection when searching for high-pressure hydraulic leaks. Use a piece of cardboard as a backstop instead of hands to isolate and identify a leak.
- If injured by a concentrated high-pressure stream of hydraulic fluid, seek medical attention immediately. Serious infection or toxic reaction can develop from hydraulic fluid piercing the skin.



Figure 1.12: Hydraulic Pressure Hazard

- Make sure all components are tight and steel lines, hoses, and couplings are in good condition before applying pressure to a hydraulic system.

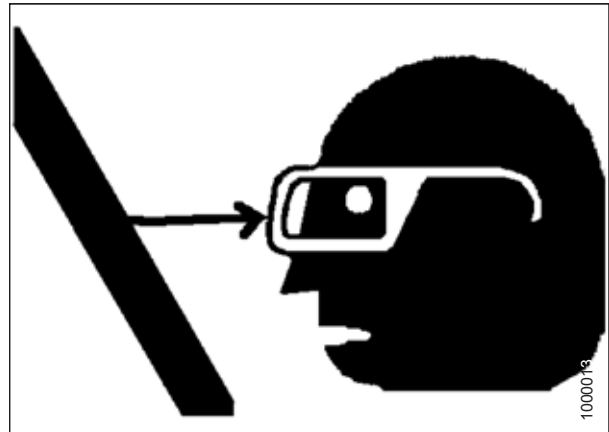


Figure 1.13: Safety around Equipment

1.6 Safety Signs

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or become illegible.
- If original part on which a safety sign was installed is replaced, be sure repair part also bears current safety sign.
- Replacement safety signs are available from your MacDon Dealer Parts Department.

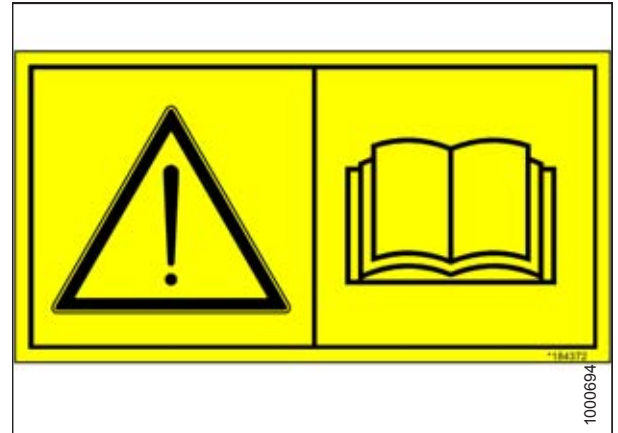



Figure 1.14: Operator's Manual Decal

1.6.1 Installing Safety Decals

1. Clean and dry installation area.
2. Decide on exact location before you remove decal backing paper.
3. Remove smaller portion of split backing paper.
4. Place decal in position and slowly peel back remaining paper, smoothing decal as it is applied.
5. Prick small air pockets with a pin and smooth out.


1.7 Safety Decal Locations

Figure 1.15: Upper Cross Auger

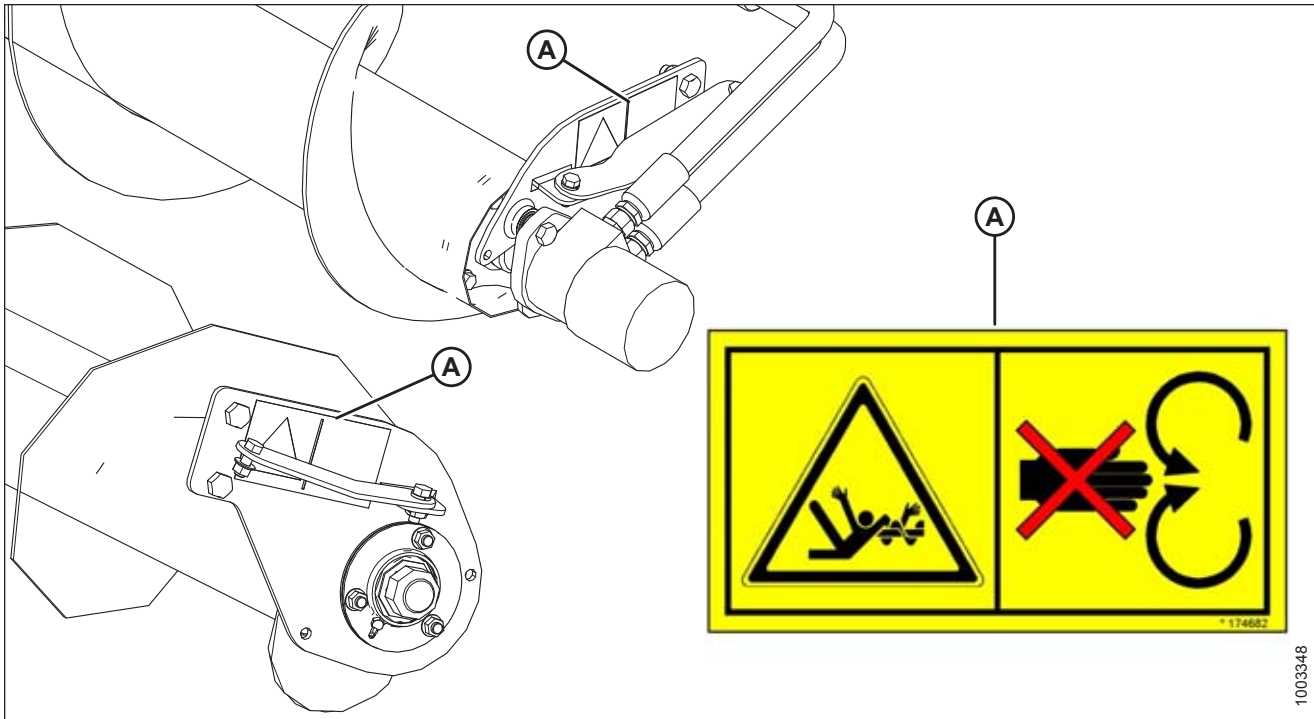

A - MD #174682


Figure 1.16: Slow Speed Transport

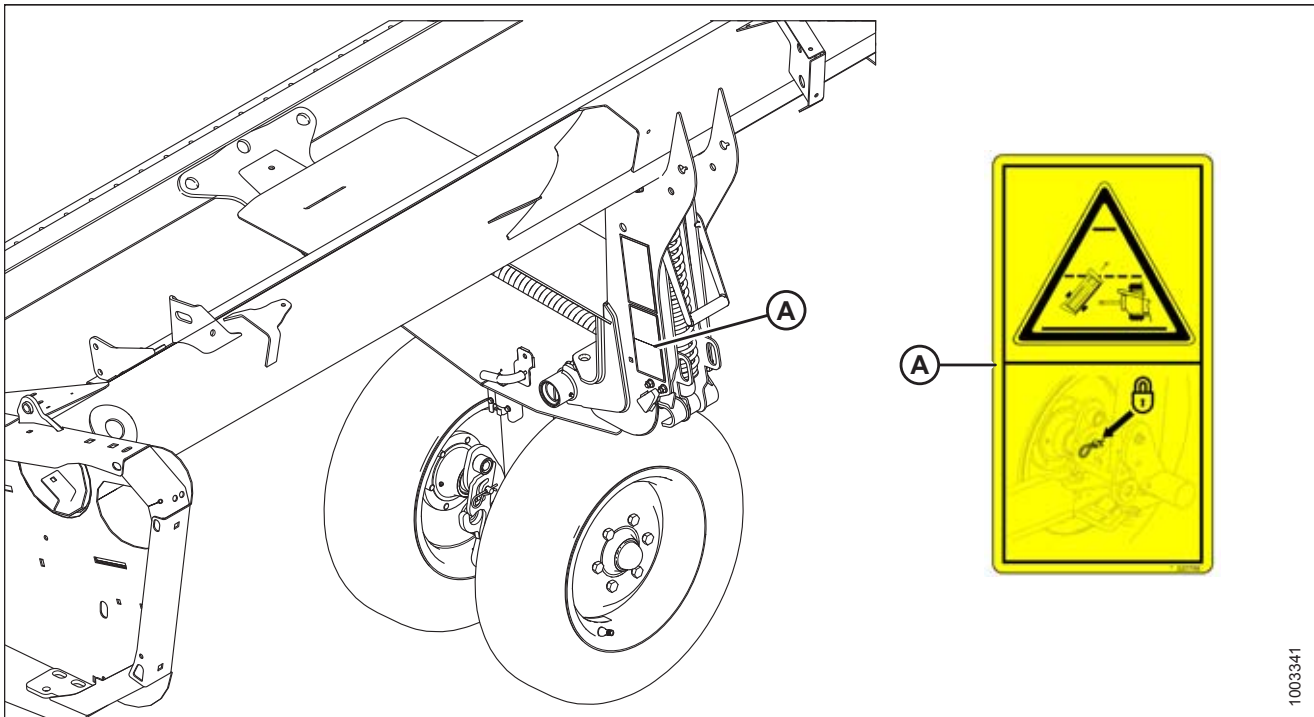

A - MD #220799

SAFETY


Figure 1.17: Slow Speed Transport Tow-Bar

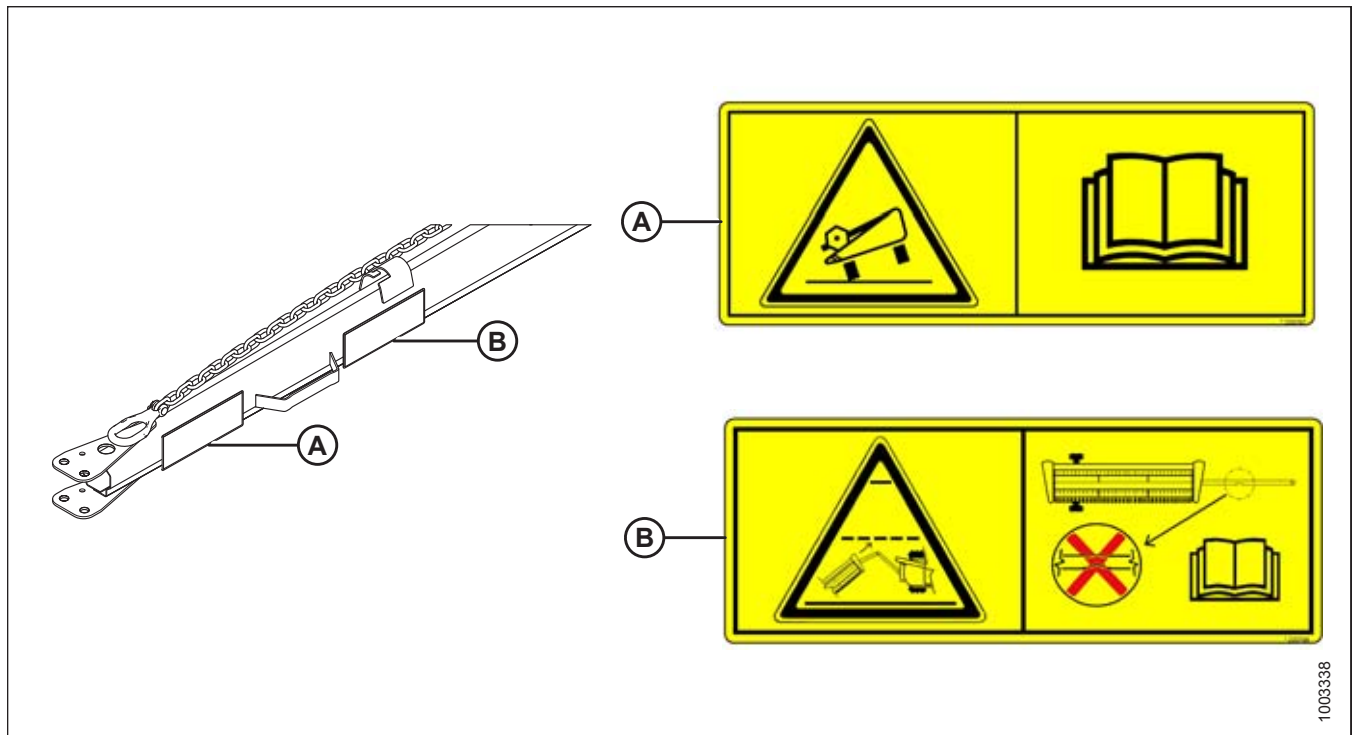

A - MD #220797

B - MD #220798


Figure 1.18: Vertical Knife

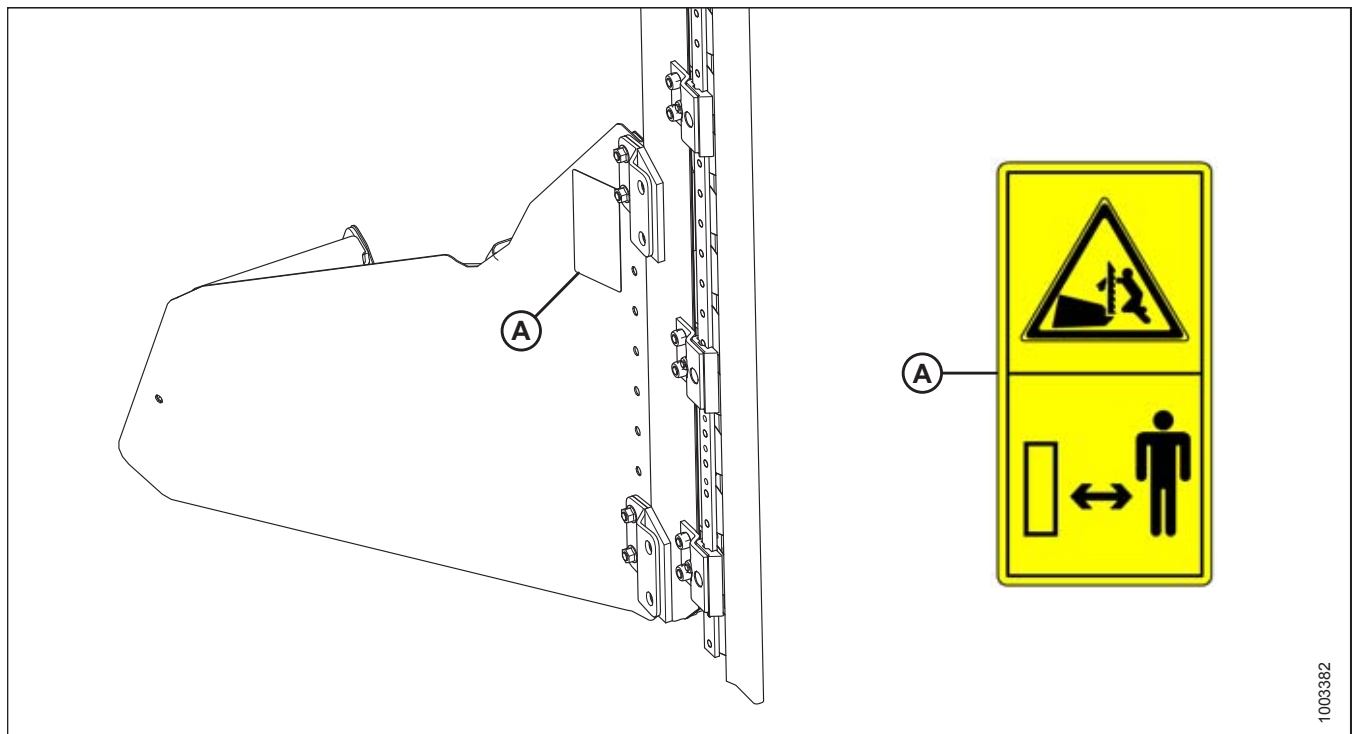

A - MD #174684

SAFETY

Figure 1.19: Endsheets, Reel Arms, and Backsheet

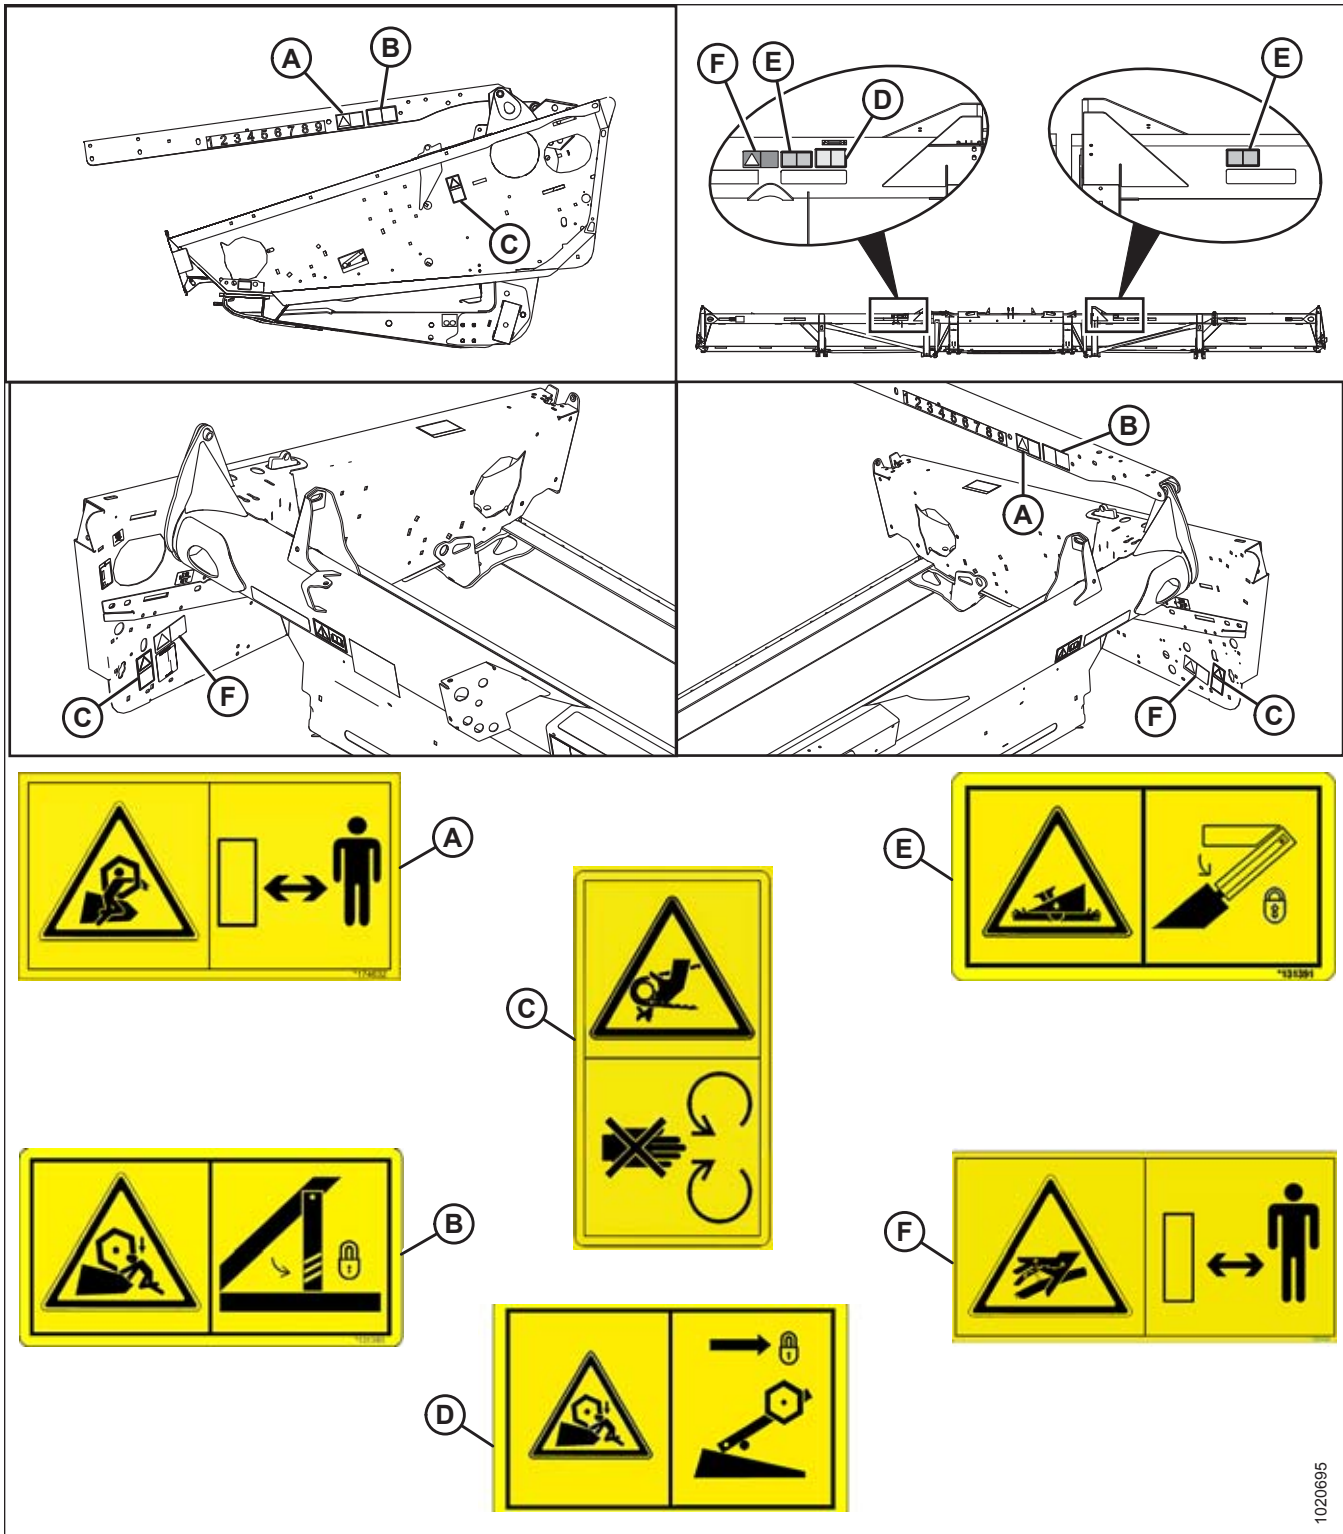


A - MD #174632
D - MD #131392 (Double Reel Only)

B - MD #131393
E - MD #131391 (Two Places)

C - MD #184422
F - MD #166466 (Three Places)

SAFETY

Figure 1.20: Backtube

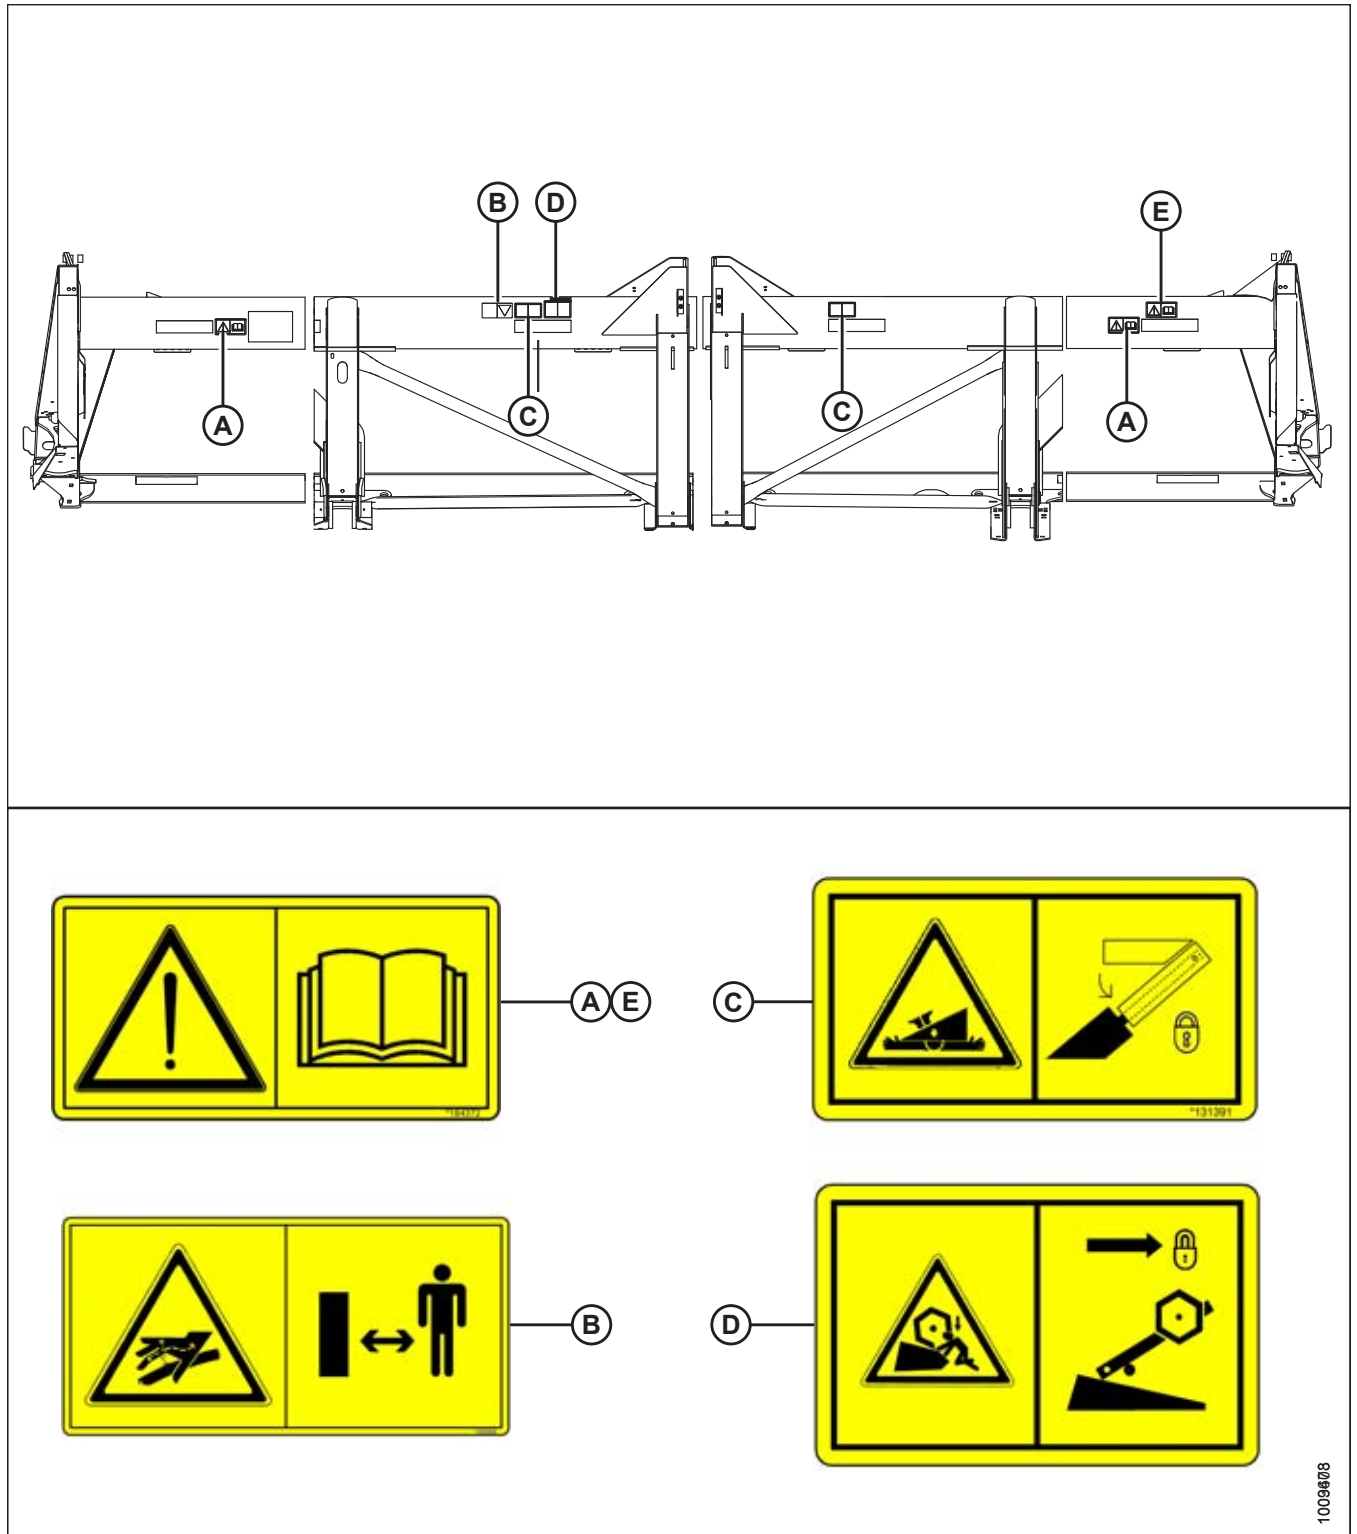


A - MD #184372
D - MD #131392

B - MD #166466
E - MD #184372 (Split Frame)

C - MD #131391

SAFETY

Figure 1.21: Backtube: 6.1 m (20 ft.) Header

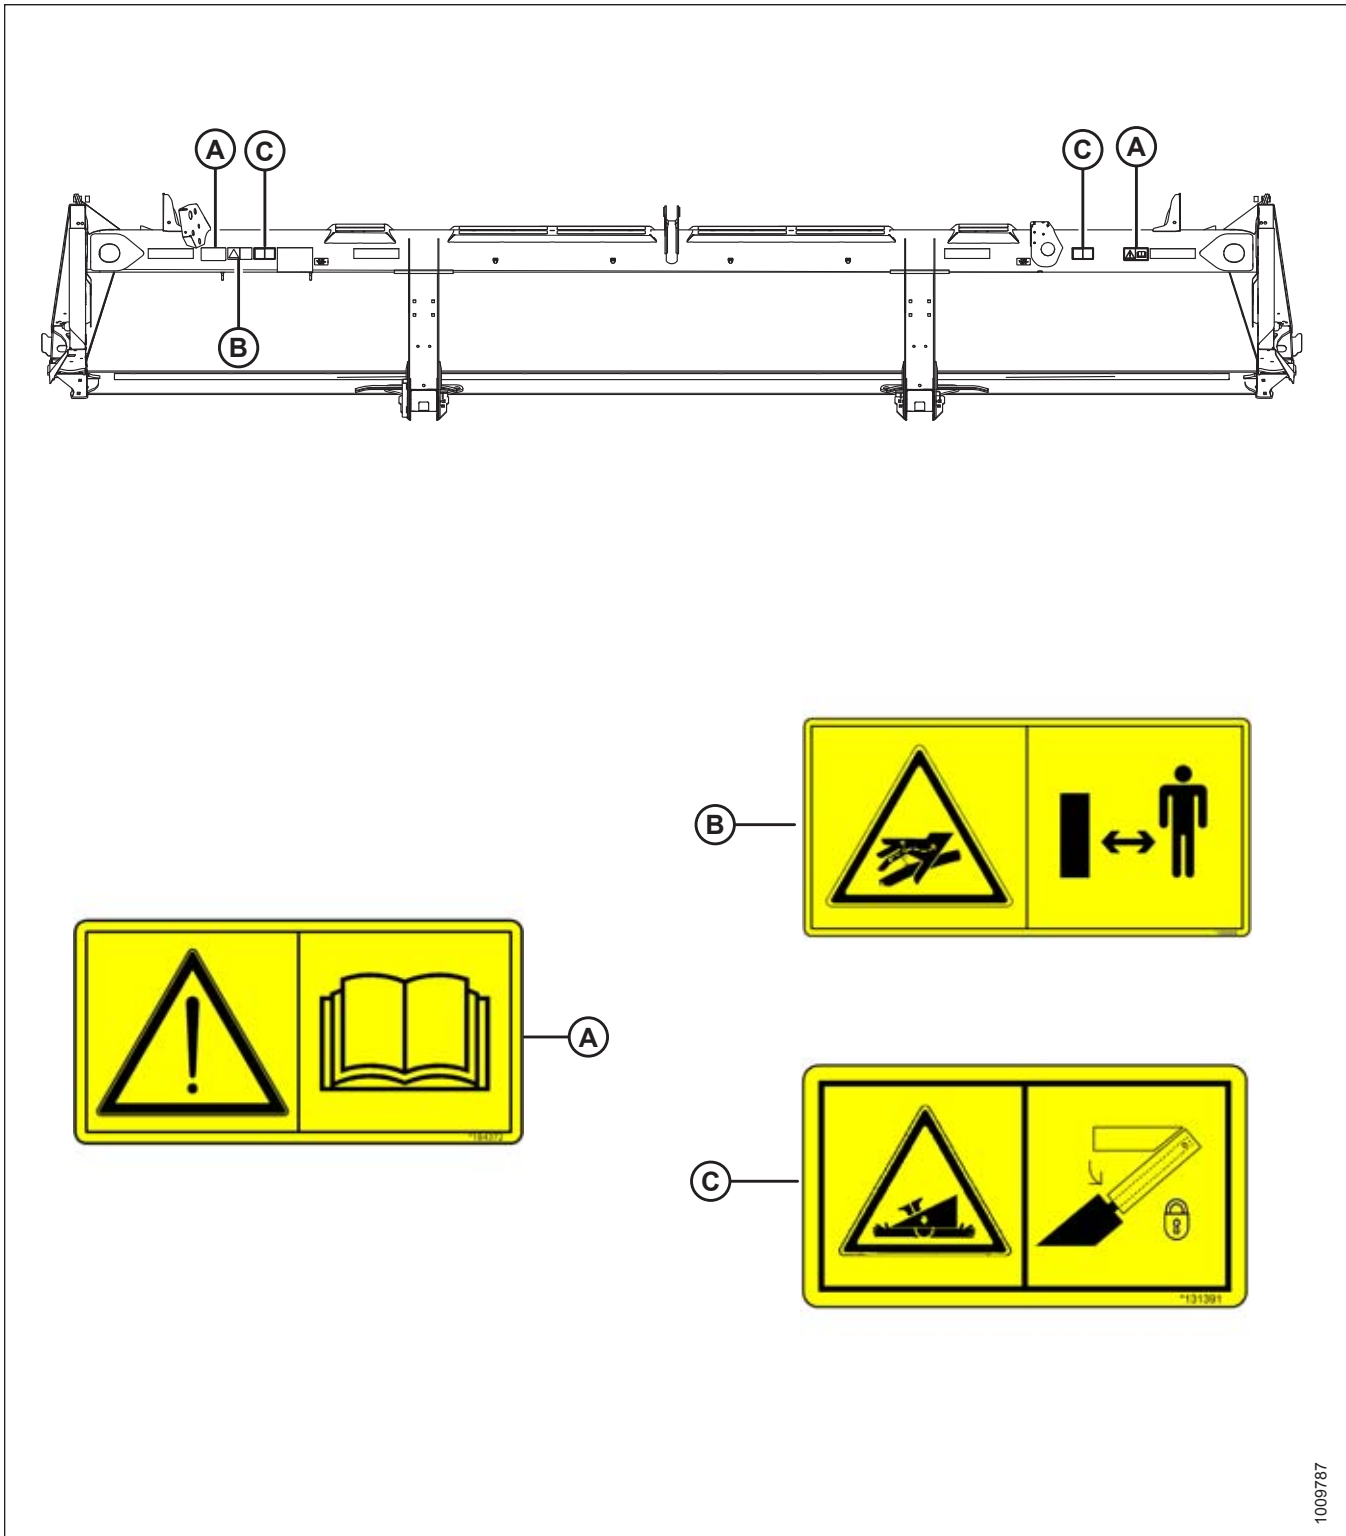


A - MD #184372

B - MD #166466

C - MD #131391

SAFETY

Figure 1.22: Backtube: 7.6 m (25 ft.) Header

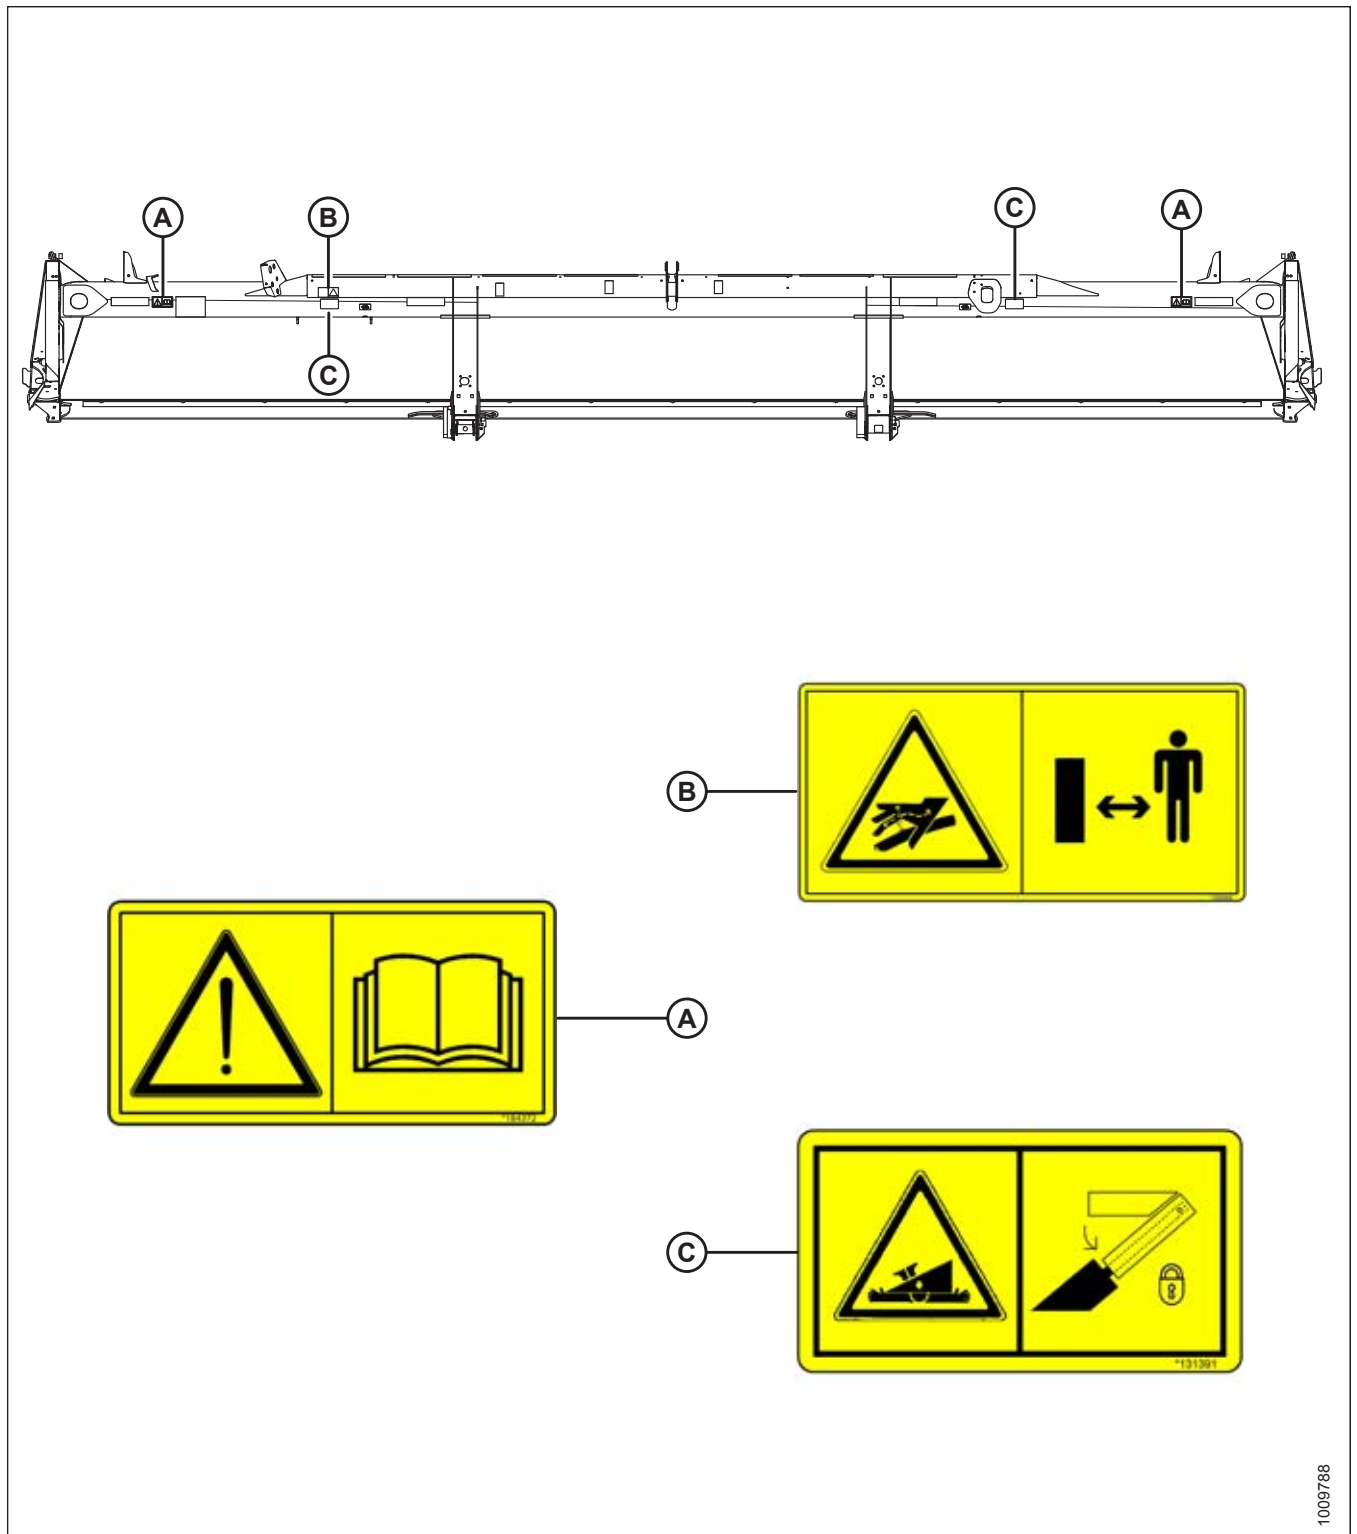


A - MD #184372

B - MD #166466

C - MD #131391

SAFETY

Figure 1.23: Backtube: 9.1 m, 10.6 m, 12.2 m, and 13.7 m (30 ft., 35 ft., 40 ft., and 45 ft.) Headers

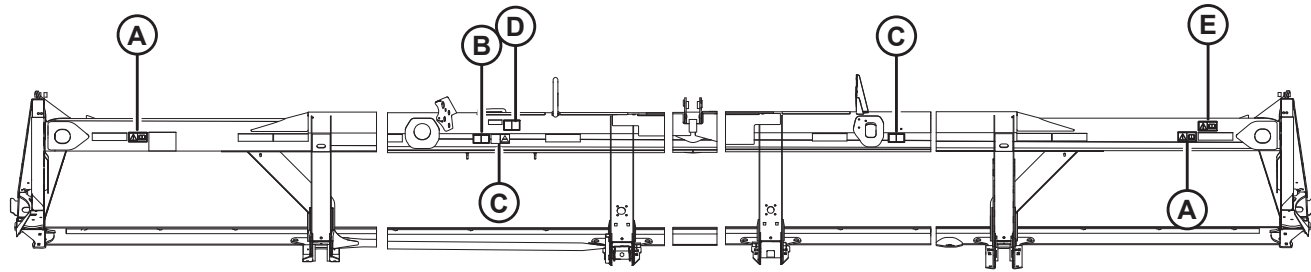

(A) (E)



(C)



(B)



(D)

1009789

A - MD #184372 (Except 12.2 m [40 ft.] Split Frame)
D - MD #131392 (9.1 m and 10.6 m [30 ft. and 35 ft.]
Double Reel Only)

B - MD #166466
E - MD #184372 (12.2 m [30 ft.] Split Frame)

C - MD #131391

1.8 Understanding Safety Signs

MD #113482

General hazard pertaining to machine operation and servicing

CAUTION

To avoid injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions.
- Do not allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of machine before starting engine and during operation.
- Keep riders off the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage header drive, put transmission in Neutral, and wait for all movement to stop before leaving operator's position.
- Stop the engine and remove the key before servicing, adjusting, lubricating, cleaning, or unplugging machine.
- Engage safety props to prevent lowering of header or reel before servicing in the raised position.
- Use slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

MD #131391

Crushing hazard

DANGER

- Rest header on ground or engage safety props before going under unit.



Figure 1.24: MD #113482

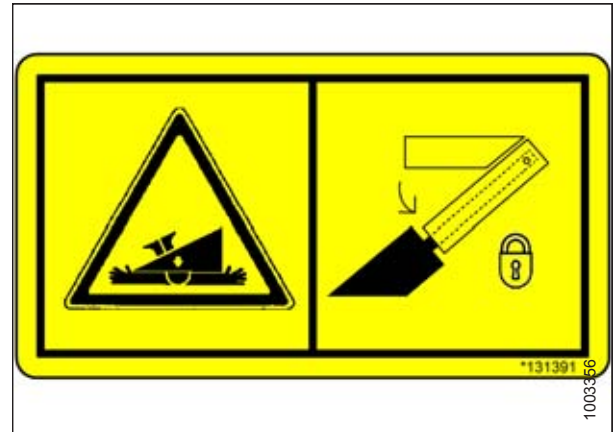


Figure 1.25: MD #131391

SAFETY

MD #131392

Crushing hazard

WARNING

- To avoid injury from fall of raised reel; fully raise reel, stop the engine, remove the key, and engage safety prop on each reel support arm before working on or under reel.

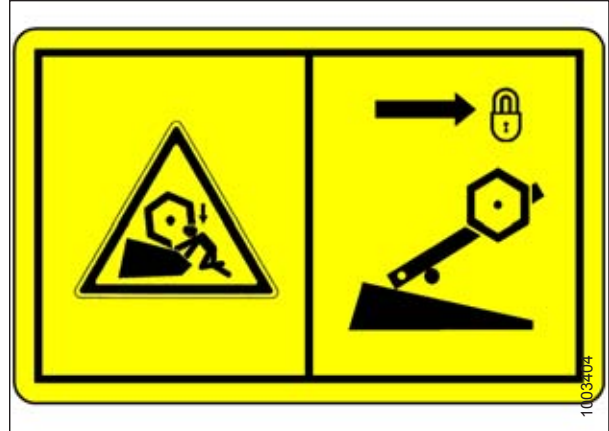


Figure 1.26: MD #131392

MD #131393

Reel hazard

WARNING

- To avoid injury from fall of raised reel; fully raise reel, stop the engine, remove the key, and engage safety prop on each reel support arm before working on or under reel.



Figure 1.27: MD #131393

MD #166466

High pressure oil hazard

WARNING

- Do not go near leaks.
- High pressure oil easily punctures skin causing serious injury, gangrene, or death.
- If injured, seek emergency medical help. Immediate surgery is required to remove oil.
- Do not use finger or skin to check for leaks.
- Lower load or relieve hydraulic pressure before loosening fittings.



Figure 1.28: MD #166466

SAFETY

MD #174436

High pressure oil hazard

WARNING

- Do not go near leaks.
- High pressure oil easily punctures skin causing serious injury, gangrene, or death.
- If injured, seek emergency medical help. Immediate surgery is required to remove oil.
- Do not use finger or skin to check for leaks.
- Lower load or relieve hydraulic pressure before loosening fittings.



Figure 1.29: MD #174436

MD #174632

Reel entanglement hazard

CAUTION

- To avoid injury from entanglement with rotating reel, stand clear of header while machine is running.



Figure 1.30: MD #174632

MD #184372

General hazard pertaining to machine operation and servicing

CAUTION

To avoid injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions.
- Do not allow untrained persons to operate the machine.
- Review safety instructions with all Operators annually.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of machine before starting engine and during operation.
- Keep riders off the machine.
- Keep all shields in place and stay clear of moving parts.

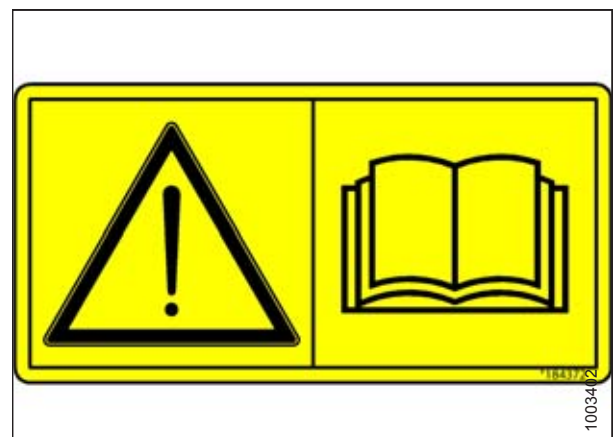


Figure 1.31: MD #184372

SAFETY

- Disengage header drive, put transmission in Neutral, and wait for all movement to stop before leaving operator's position.
- Stop the engine and remove the key from the ignition before servicing, adjusting, lubricating, cleaning, or unplugging machine.
- Engage safety props to prevent lowering of raised unit before servicing in the raised position.
- Use slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

MD #184422

Keep shields in place hazard

WARNING

- Do not place hand.
- To avoid injury, stop the engine and remove the key before opening power drive system shield.
- Keep all shields in place.



Figure 1.32: MD #184422

MD #220797

Tipping hazard in transport mode

WARNING

- Read the operator's manual for more information on potential tipping or roll-over of header while transporting.

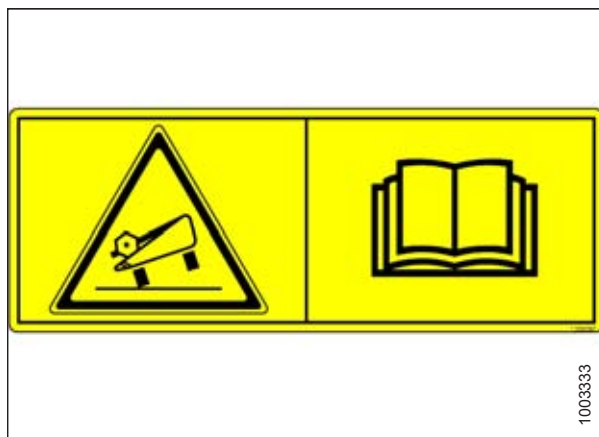


Figure 1.33: MD #220797

SAFETY

MD #220798

Loss of control hazard in transport

CAUTION

- Do not tow the header with a dented or otherwise damaged tow pole (the circle with the red X shows a dent in the pole).
- Consult the operator's manual for more information.



Figure 1.34: MD #220798

MD #220799

Transport/roading hazard

WARNING

- Ensure tow-bar lock mechanism is locked.



Figure 1.35: MD #220799

MD #279085

Auger entanglement hazard

WARNING

- To avoid injury from rotating auger, stand clear of auger while machine is running.



Figure 1.36: MD #279085

2 Product Overview

2.1 Definitions

The following terms and acronyms may be used in this manual.

Term	Definition
AHHC	Automatic Header Height Control
API	American Petroleum Institute
ASTM	American Society of Testing and Materials
Bolt	A headed and externally threaded fastener that is designed to be paired with a nut
Center-link	A hydraulic cylinder link between header and machine used to change header angle
CGVW	Combined gross vehicle weight
D1 Series header	MacDon D120, D125, D130, D135, D140, or D145 combine draper header from D1 model number series
DK	Double knife
DKD	Double-knife drive
DDD	Double-draper drive
DR	Double reel
Export header	Header configuration typical outside North America
Finger tight	Finger tight is a reference position where sealing surfaces or components are making contact with each other, and fitting has been tightened to a point where fitting is no longer loose
FFFT	Flats from finger tight
GSL	Ground speed lever
GVW	Gross vehicle weight
Hard joint	A joint made with use of a fastener where joining materials are highly incompressible
Header	A machine that cuts crop and feeds it into an attached combine
Hex key	A tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in head (internal-wrenching hexagon drive); also known as an Allen key and various other synonyms
HDS	Hydraulic deck shift
hp	Horsepower
JIC	Joint Industrial Council: A standards body that developed standard sizing and shape for original 37° flared fitting
Knife	A cutting device which uses a reciprocating cutter (also called a sickle)
MDS	Mechanical deck shift
n/a	Not applicable

PRODUCT OVERVIEW

Term	Definition
NPT	National Pipe Thread: A style of fitting used for low pressure port openings. Threads on NPT fittings are uniquely tapered for an interference fit
Nut	An internally threaded fastener that is designed to be paired with a bolt
ORB	O-ring boss: A style of fitting commonly used in port opening on manifolds, pumps, and motors
ORFS	O-ring face seal: A style of fitting commonly used for connecting hoses and tubes This style of fitting is also commonly called ORS, which stands for O-ring seal
rpm	Revolutions per minute
RoHS (Reduction of Hazardous Substances)	A directive by the European Union to restrict use of certain hazardous substances (such as hexavalent chromium used in some yellow zinc platings)
SAE	Society of Automotive Engineers
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread into a mating part
SDD	Single-drawer drive
Soft joint	A joint made with use of a fastener where joining materials are compressible or experience relaxation over a period of time
spm	Strokes per minute
SR	Single reel
Truck	A four-wheel highway/road vehicle weighing no less than 3400 kg (7500 lb.)
Timed knife drive	Synchronized motion applied at cutterbar to two separately driven knives from a single hydraulic motor
Tension	Axial load placed on a bolt or screw, usually measured in Newtons (N) or pounds (lb.)
TFFT	Turns from finger tight
Torque	The product of a force X lever arm length, usually measured in Newton-meters (Nm) or foot-pounds (lbf-ft)
Torque angle	A tightening procedure where fitting is assembled to a precondition (finger tight) and then nut is turned farther a number of degrees to achieve its final position
Torque-tension	The relationship between assembly torque applied to a piece of hardware and axial load it induces in bolt or screw
UCA	Upper cross auger
Non-timed knife drive	Unsynchronized motion applied at cutterbar to two separately driven knives from a single hydraulic motor or two hydraulic motors
Washer	A thin cylinder with a hole or slot located in the center that is to be used as a spacer, load distribution element, or a locking mechanism

2.2 Specifications

The following symbol and letters are used in Table 2.1, page 23 and Table 2.2, page 26:

| D1 | FM100 | Attachments

S: standard / O_F: optional (factory installed) / O_D: optional (dealer installed) / —: not available

Table 2.1 Header Specifications

Cutterbar			
Effective cutting width (distance between crop divider points)			
6.1 m (20 ft.) header		6096 mm (240 in.)	S
7.6 m (25 ft.) header		7620 mm (300 in.)	S
9.1 m (30 ft.) header		9144 mm (360 in.)	S
10.6 m (35 ft.) header		10,668 mm (420 in.)	S
12.2 m (40 ft.) header		12,192 mm (480 in.)	S
13.7 m (45 ft.) header		13,716 mm (540 in.)	S
Cutterbar lift range		Varies with combine model	—
Knife			
Single-knife drive (all sizes): One hydraulic motor with V-belt to one heavy duty MD knife drive box			O _F
Double-knife drive 6.1–10.6 m [20–35 ft.] (timed): One hydraulic motor with two cogged belts to two heavy duty MD knife drive boxes			O _F
Double-knife drive 12.2–13.7 m [40 and 45 ft.] (non-timed): Two hydraulic motors with V-belts to two heavy duty MD knife drive boxes			O _F
Knife stroke		76 mm (3 in.)	S
Single-knife speed ¹	7.6 m (25 ft.) header	1200–1450 (strokes/min.)	S
Single-knife speed ¹	9.1 m (30 ft.) header	1200–1400 (strokes/min.)	S
Single-knife speed ¹	10.6 m (35 ft.) header	1100–1300 (strokes/min.)	S
Single-knife speed ¹	12.2 m (40 ft.) header	1050–1200 (strokes/min.)	S
Double-knife speed ¹	6.1 m and 7.6 m (20 ft. and 25 ft.) headers	1400–1700 (strokes/min.)	S
Double-knife speed ¹	9.1 m and 10.6 m (30 ft. and 35 ft.) headers	1200–1500 (strokes/min.)	S
Double-knife speed ¹	12.2 m and 13.7 m (40 ft. and 45 ft.) headers	1100–1400 (strokes/min.)	S

- Under normal cutting conditions, set knife speed at the knife drive pulley between 600 and 640 rpm (1200 and 1280 spm). If set to low side of chart, you could experience knife stalling.

PRODUCT OVERVIEW

Table 2.1 Header Specifications (continued)


Knife Sections			
Over-serrated / solid / bolted / 3.5 serrations per cm (9 serrations per inch)			O _F
Over-serrated / solid / bolted / 14 serrations per inch			O _F
Knife overlap at center (double-knife headers)		3 mm (1/8 in.)	S
Guards and Hold-Downs			
Guard: pointed / forged / double heat treated (DHT) Hold-down: Sheet metal / adjustment bolt			O _F
Guard: pointed / forged / case hardened (CH) Hold-down: Sheet metal / adjustment bolt			O _F
Guard: stub / forged bottom / forged top / adjustment plate			O _F
Guard: stub / forged bottom / sheet metal top / adjustment bolt			O _F
Guard Angle (Cutterbar on Ground)			
Center-link retracted	6.1 m and 7.5 m (20 ft. and 25 ft.) headers	7.0 degrees	S
Center-link retracted	9.1–13.7 m (30–45 ft.) headers	2.0 degrees	S
Center-link extended	6.1 m and 7.5 m (20 ft. and 25 ft.) headers	12.4 degrees	S
Center-link extended	9.1–13.7 m (30–45 ft.) headers	7.4 degrees	S
Draper (Conveyor) and Decks			
Draper width		1057 mm (41-19/32 in.)	S
Draper drive		Hydraulic	S
Draper speed (FM100 Float Module controlled)		193 m/min. (0–635 fpm)	S
PR15 Pick-Up Reel			S
Quantity of tine tubes		5, 6, or 9	—
Center tube diameter: All reel sizes except 10.6 m (35 ft.) single span		203 mm (8 in.)	—
10.6 m (35 ft.) single span		254 mm (10 in.)	—
Finger tip radius	Factory assembled	800 mm (31-1/2 in.)	—
Finger tip radius	Adjustment range	766–800 mm (30-3/16 – 31-1/2 in.)	—
Effective reel diameter (via cam profile)		1650 mm (65 in.)	—
Finger length		290 mm (11 in.)	—
Finger spacing (staggered on alternate bats)		150 mm (6 in.)	—
Reel drive		Hydraulic	S
Reel speed (adjustable from cab, varies with combine model)		0–67 rpm	S

PRODUCT OVERVIEW

Table 2.1 Header Specifications (continued)

Frame and Structure				
Header width	Field mode		Cut width + 1384 mm (5.1 in.)	S
Header width	Transport mode: reel fore-aft fully retracted, shortest center-link	(A) long dividers removed ²	2500 mm (98 in.)	—
Header width	Transport mode: reel fore-aft fully retracted, shortest center-link	(B) long dividers installed ²	2684 mm (106 in.)	—

Figure 2.1: Header Width

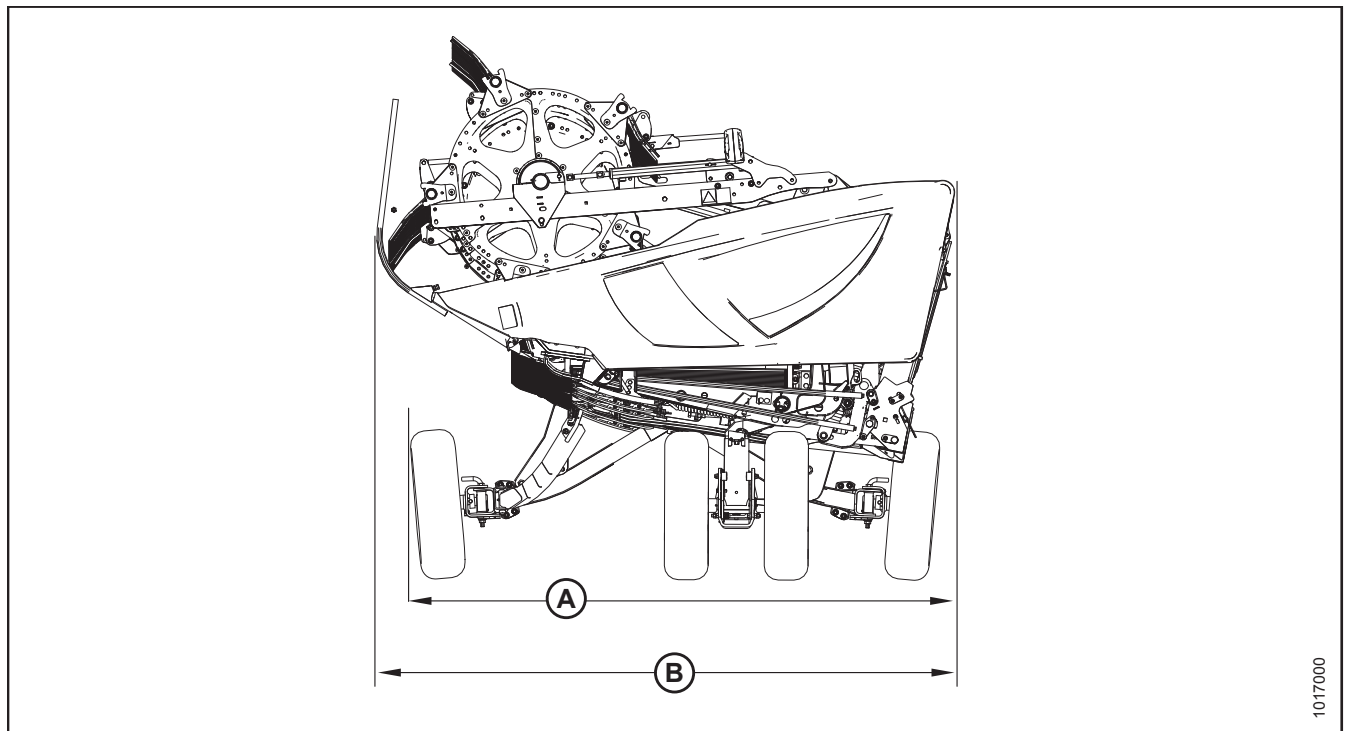

2. Refer to Figure 2.1, page 25.

PRODUCT OVERVIEW

Table 2.2 Header Attachments

FM100 Float Module				
Feed draper	Width		2.000 m (78-11/16 in.)	S
Feed draper	Speed		107–122 m/min (350–400 fpm)	S
Feed auger	Width		1.660 m (65-5/16 in.)	S
Feed auger	Outside diameter		559 mm (22 in.)	S
Feed auger	Tube diameter		356 mm (14 in.)	S
Feed auger	Speed (varies with combine model)		190 rpm	S
Oil reservoir capacity			75 liters (20 US gallons)	S
Oil type			DURATRAN™	—
Driveline overall length ³	Case, New Holland	Maximum (extended)	1.230 m (48-7/16 in.)	O _F
Driveline overall length ³	Case, New Holland	Minimum (compressed)	603 mm (23-3/4 in.)	O _F
Driveline overall length ³	Challenger, Gleaner, John Deere, CLAAS, Massey Ferguson	Maximum (extended)	1.262 m (49-11/16 in.)	O _F
Driveline overall length ³	Challenger, Gleaner, John Deere, CLAAS, Massey Ferguson	Minimum (compressed)	916 mm (36-1/16 in.)	O _F
Driveline overall length ³	John Deere 9650/9660	Maximum (extended)	775 mm (30-1/2 in.)	O _F
Driveline overall length ³	John Deere 9650/9660	Minimum (compressed)	880 mm (34-5/8 in.)	O _F
Upper Cross Auger				O _D
Outside diameter			305 mm (12 in.)	—
Tube diameter			152 mm (6 in.)	—
Stabilizer Wheel / Slow Speed Transport				O _D
Wheels			15 in.	—
Tires			P205/75 R-15	—

3. Subtract 265 mm (10-7/16 in.) for length between yoke pins.

PRODUCT OVERVIEW


Table 2.3 Header Weight

Estimated weight range for base header without performance options or float module (variances are due to different package configurations)		
6.0 m (20 ft.) header		1517–1623 kg (3345–3580 lb.)
7.6 m (25 ft.) header		1609–1756 kg (3547–3872 lb.)
9.1 m (30 ft.) header		2003–2341 kg (4415–5160 lb.)
10.7 m (35 ft.) header		2209–2626 kg (4870–5790 lb.)
12.2 m (40 ft.) header	North America frame	2540–2617 kg (5600–5770 lb.)
12.2 m (40 ft.) header	Export frame	2640–2665 kg (5820–5875 lb.)
13.7 m (45 ft.) header	North America frame	2749 kg (6060 lb.)
13.7 m (45 ft.) header	Export frame	2794 kg (6160 lb.)

2.3 Component Identification

2.3.1 D1 Series Combine Header

Figure 2.2: D1 Series Combine Header – Double Reel Shown

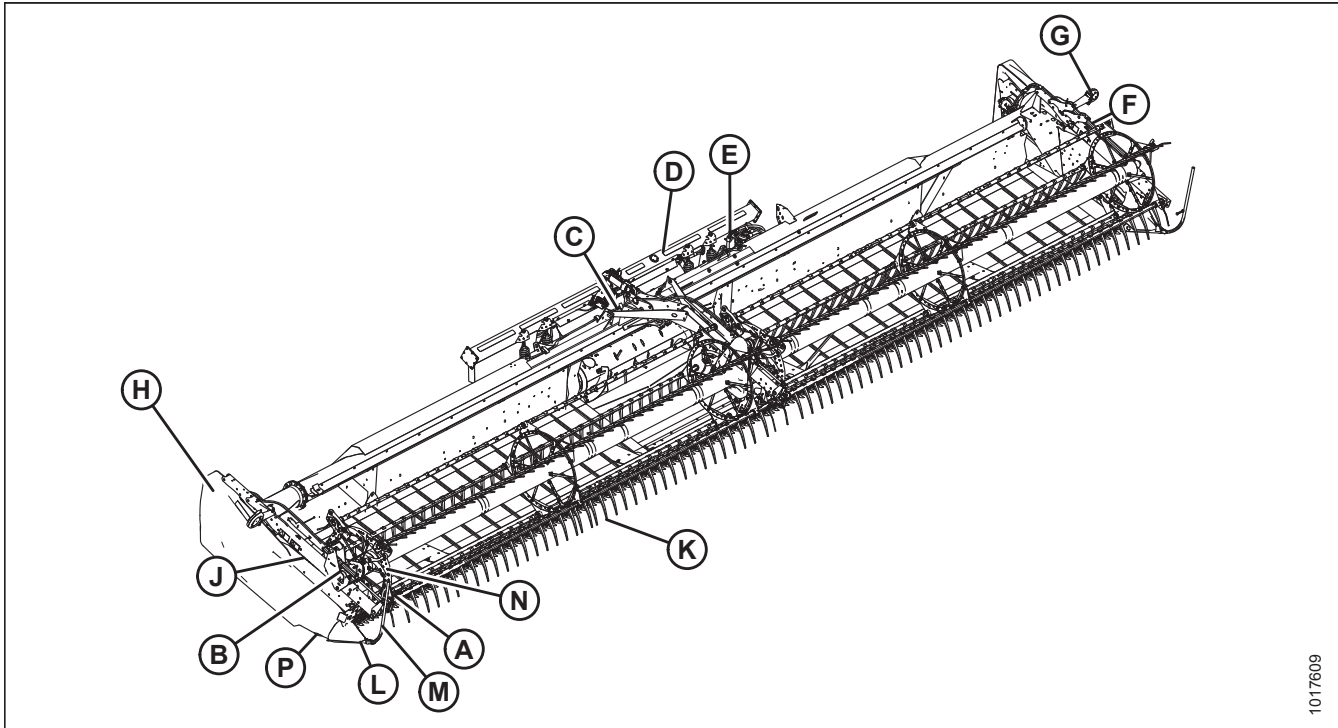

A - Pick-Up Reel
D - FM100 Float Module
G - Transport Light
K - Reel Fingers
N - Reel Endshields


B - Reel Drive and Cam
E - Hydraulic Connections
H - Endshield
L - Divider Cone
P - Knife Drive Box (Behind Endshield)

C - Center-Link
F - Reel Fore-Aft Cylinder
J - Reel Lift Cylinder
M - Divider Rod

1017609

2.3.2 FM100 Float Module

Figure 2.3: Header Side of FM100 Float Module

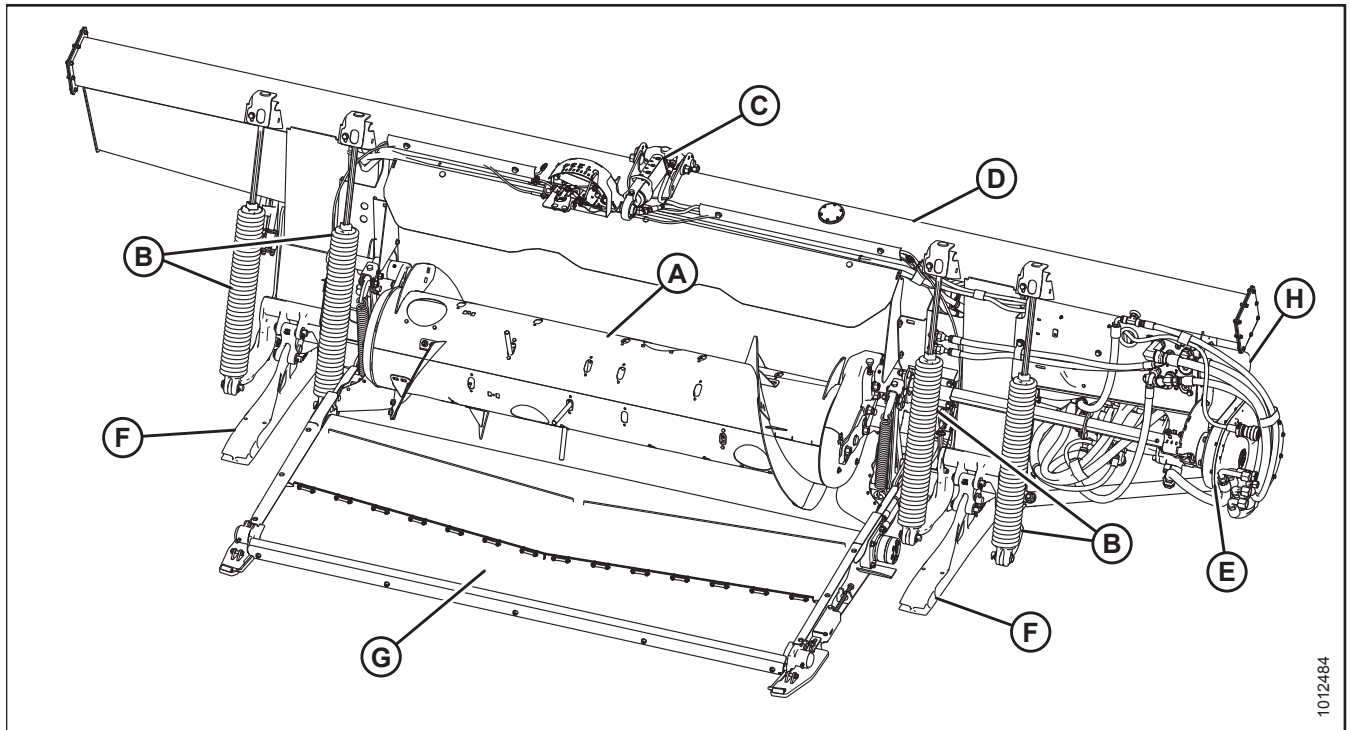

A - Feed Auger
D - Hydraulic Reservoir
G - Feed Draper


B - Header Float Springs
E - Gearbox
H - Hydraulic Filter

C - Center-Link
F - Header Support Arms

1012484

PRODUCT OVERVIEW

Figure 2.4: Combine Side of FM100 Float Module

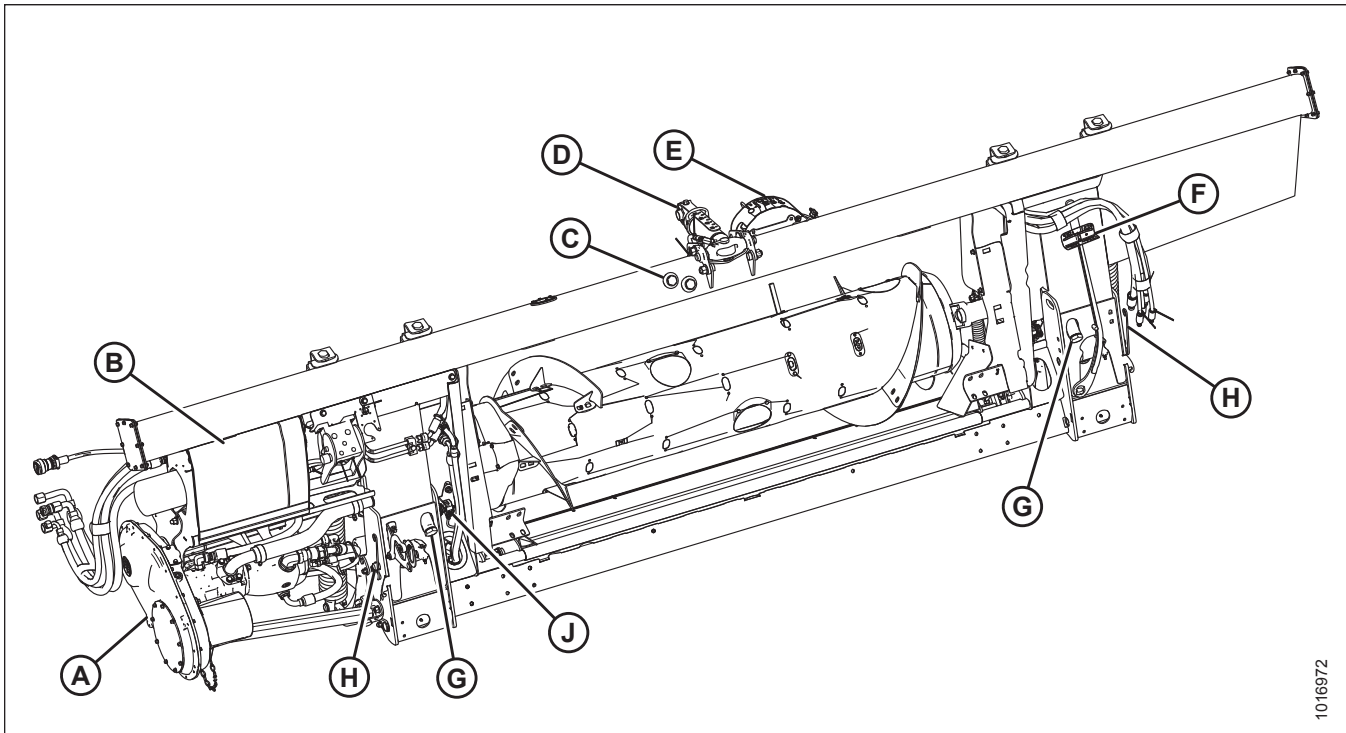

A - Float Module Gearbox
D - Center-Link
G - Drain Tube (x2)

B - Hydraulic Compartment Cover
E - Header Height Control Indicator
H - Float Lock Handle (x2)

C - Reservoir Oil Level Sight Glass
F - Torque Wrench
J - Auto Header Height Control (AHC) Sensor

1016972

3 Operation

3.1 Owner/Operator Responsibilities



CAUTION

- It is your responsibility to read and understand this manual completely before operating the header. Contact your MacDon Dealer if an instruction is not clear to you.
- Follow all safety messages in the manual and on safety decals on the machine.
- Remember that YOU are the key to safety. Good safety practices protect you and the people around you.
- Before allowing anyone to operate the header, for however short a time or distance, make sure they have been instructed in its safe and proper use.
- Review the manual and all safety related items with all Operators annually.
- Be alert for other Operators not using recommended procedures or not following safety precautions. Correct these mistakes immediately, before an accident occurs.
- Do NOT modify the machine. Unauthorized modifications may impair the function and/or safety of the machine and also may reduce the length of service you receive from your machine.
- The safety information given in this manual does not replace safety codes, insurance needs, or laws governing your area. Be sure your machine meets the standards set by these regulations.

3.2 Operational Safety

CAUTION

Adhere to the following safety precautions:

- Follow all safety and operational instructions provided in your operator's manuals. If you do not have a combine manual, get one from your Dealer and read it thoroughly.
- Never attempt to start the engine or operate the machine except from the combine seat.
- Check the operation of all controls in a safe, clear area before starting work.
- Do NOT allow riders on the combine.



Figure 3.1: No Riders

CAUTION

- Never start or move the machine until you are sure all bystanders have cleared the area.
- Avoid travelling over loose fill, rocks, ditches, or holes.
- Drive slowly through gates and doorways.
- When working on inclines, travel uphill or downhill whenever possible. Be sure to keep transmission in gear when travelling downhill.
- Never attempt to get on or off a moving machine.
- Do NOT leave operator's station while the engine is running.
- To avoid bodily injury or death from unexpected startup of a machine, always stop the engine and remove the key before adjusting or removing plugged material from the machine.
- Check for excessive vibration and unusual noises. If there is any indication of trouble, shut down and inspect the machine. Follow proper shutdown procedure. Refer to [3.4 Shutting down the Machine, page 41](#).
- Operate only in daylight or good artificial light.

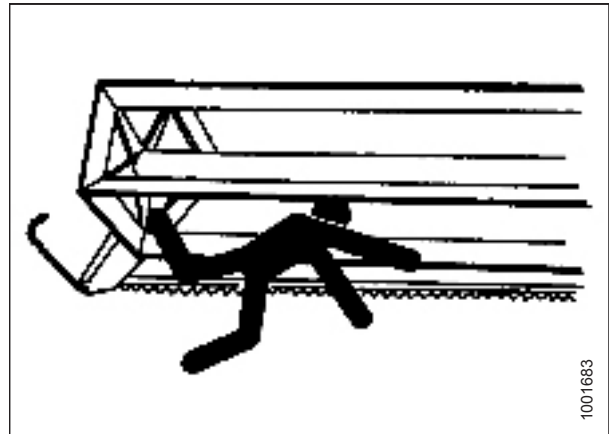


Figure 3.2: Bystander Safety

3.2.1 Header Safety Props

The header safety props, located on the header lift cylinders, prevent the lift cylinders from unexpectedly retracting and lowering the header. Refer to your combine operator's manual for instructions.

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

3.2.2 Reel Safety Props

The reel safety props, located on the reel support arms, prevent the reel from unexpectedly lowering.

IMPORTANT:

To prevent damage to the reel support arms, do NOT transport the header when the reel safety props are engaged.

Engaging Reel Safety Props

Engage the reel safety props whenever you intend to work on or around a raised reel. When engaged, the reel safety props prevent the reel from falling unexpectedly.

DANGER

To prevent bodily injury or death from the unexpected start-up of the machine, always stop the engine and remove the key from the ignition before making adjustments to the machine.

WARNING

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

1. Raise the reel fully.
2. Shut down the engine, and remove the key from the ignition.
3. Move reel safety props (A) to the engaged position (as shown). **The prop MUST be placed on the top surface of raised lug (B), making contact with the cylinder mount, to ensure positive engagement.**

NOTE:

Keep pivot bolt (C) sufficiently tight so that the prop remains in the stored position when not in use, but can still be engaged using hand force.

4. Repeat the previous step on the opposite side of the header.

**THE CONTENT ON THIS PAGE
HAS CHANGED SINCE THIS
MANUAL (214408 REVISION A)
WAS PUBLISHED.**

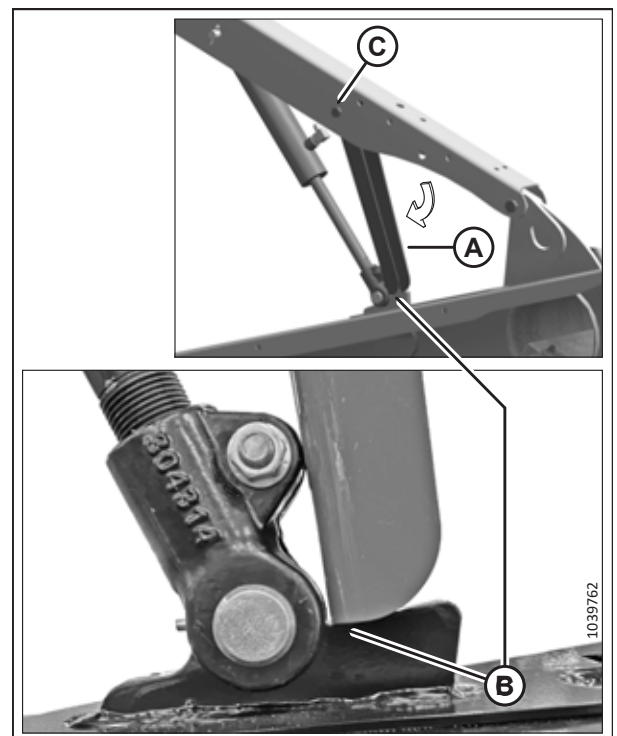


Figure 3.3: Engaged Reel Safety Prop – Left Shown

OPERATION

4. Use handle (A) to move lock rod to inboard position (B), which engages pin (C) under prop.
5. Lower reel until safety props contact the outer arm cylinder mounts and the center arm pins.

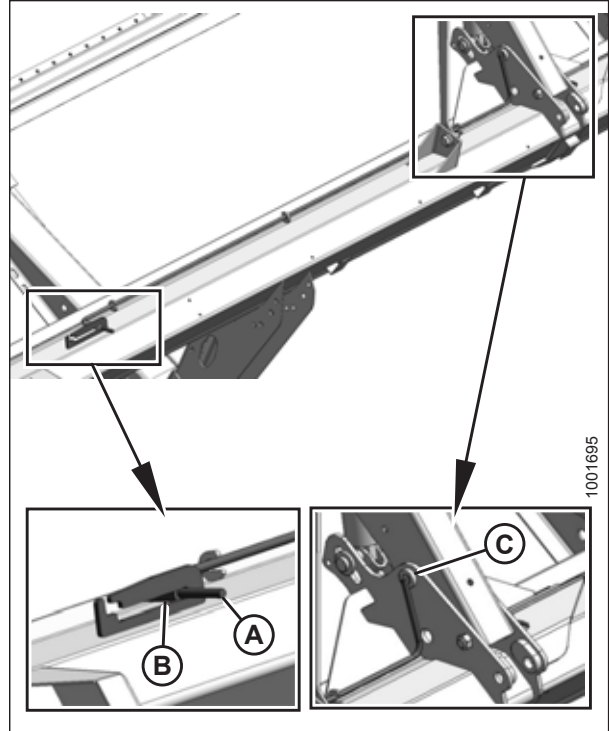


Figure 3.4: Reel Safety Prop – Center Arm

Disengaging Reel Safety Props

1. Raise the reel to maximum height.
2. Move the reel safety props (A) back inside the reel arms.

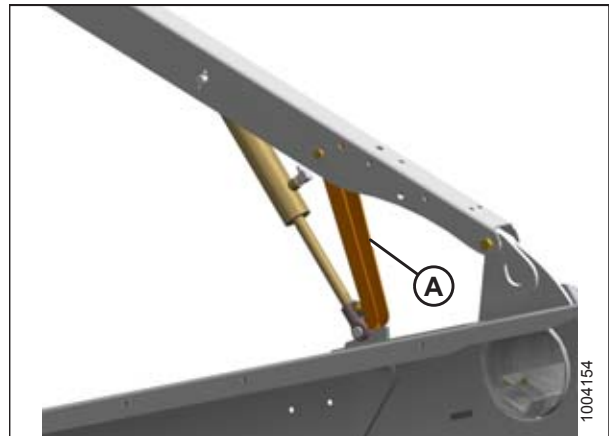


Figure 3.5: Reel Safety Prop – Left Side Shown (Right Opposite)

OPERATION

3. Use the handle (B) on double-reel headers to move the lock rod (A) to the outboard position.

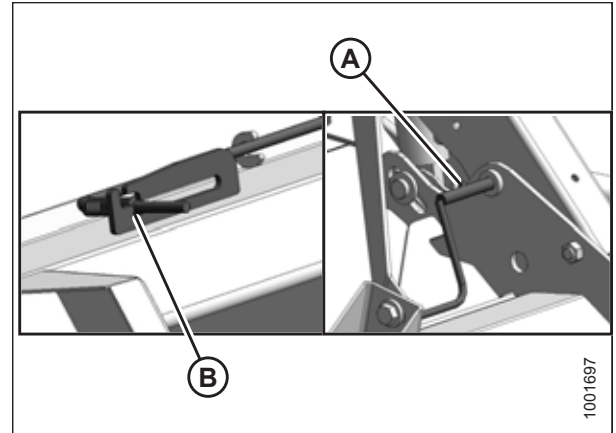


Figure 3.6: Reel Safety Prop – Center Arm

3.2.3 Endshields

A hinged, polyethylene endshield is fitted on each end of the header.

Opening Endshields

1. Push release lever (A) located on the backside of the endshield to unlock the shield.
2. Pull endshield open using handle depression (B).

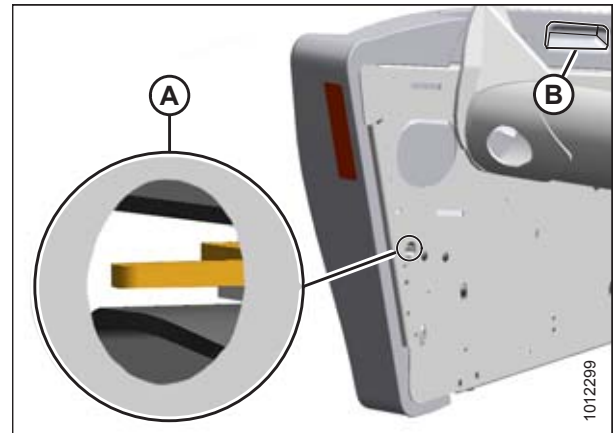


Figure 3.7: Left Endshield

3. Pull endshield at handle depression (A). Endshield is retained by a hinge tab (B) and will open in direction (C).

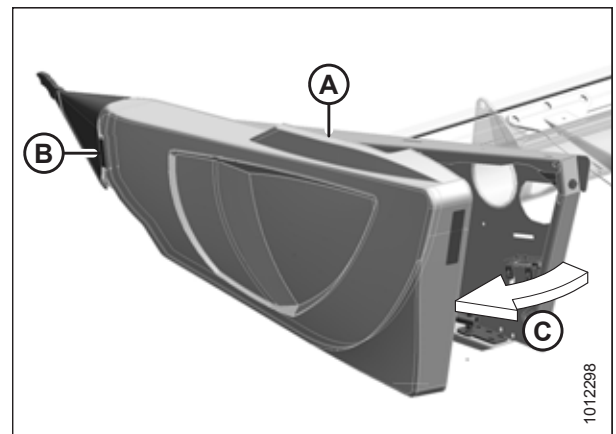


Figure 3.8: Left Endshield

OPERATION

4. Pull the endshield free of hinge tab (A) if additional clearance is required, and swing shield towards the rear of the header.
5. Engage safety latch (B) on hinge arm to secure the shield in fully-open position.

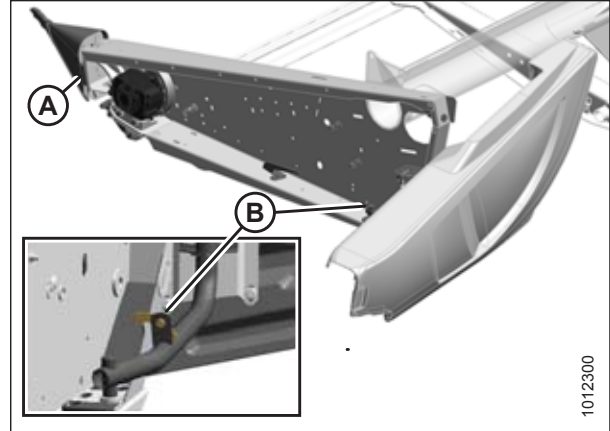


Figure 3.9: Left Endshield

Closing Endshields

1. Disengage lock (B) to allow endshield to move.
2. Insert front of endshield behind hinge tab (A) and into divider cone.

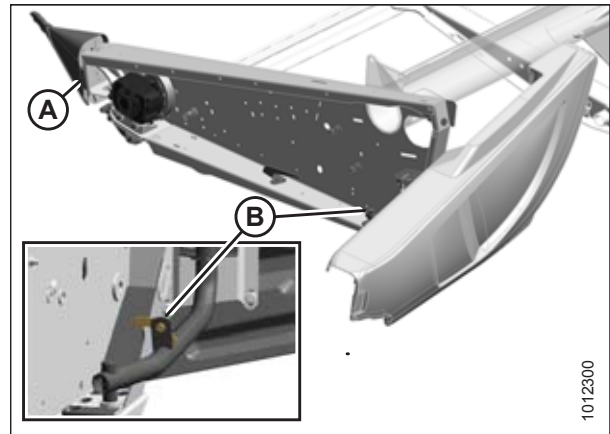


Figure 3.10: Left Endshield

3. Swing endshield in direction (A) into closed position. Engage lock with a firm push.
4. Check that endshield is locked.

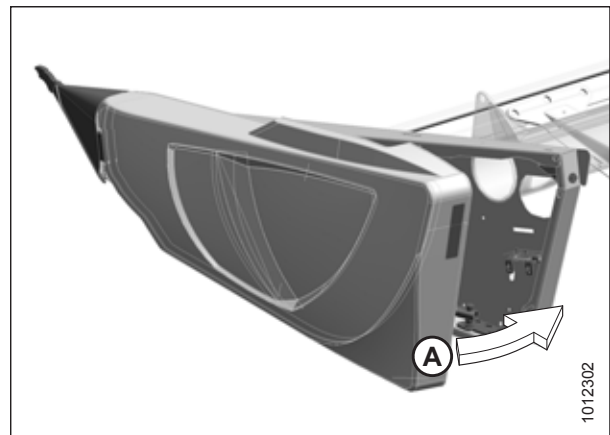


Figure 3.11: Left Endshield

OPERATION

Removing Endshields

1. Fully open endshield. Refer to [Opening Endshields, page 35](#).
2. Engage lock (A) to prevent endshield movement.
3. Remove self-tapping screw (B).
4. Slide endshield upwards and remove from hinge arm.
5. Place endshield away from work area.

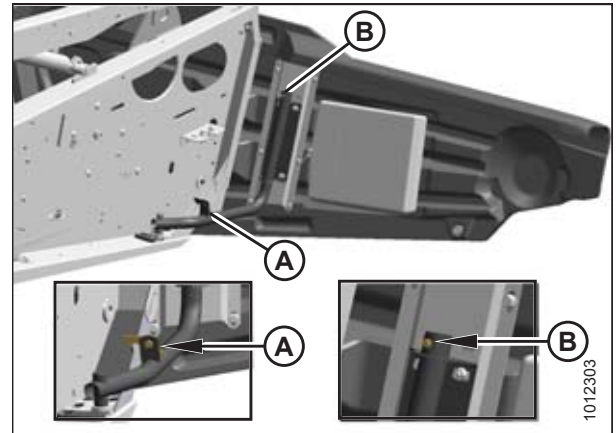


Figure 3.12: Left Endshield

Installing Endshields

1. Guide endshield onto hinge arm and slowly slide it downwards.
2. Install self-tapping screw (B).
3. Disengage lock (A) to allow endshield movement.
4. Close endshield. Refer to [Closing Endshields, page 36](#).

NOTE:

Endshields may expand or contract when subjected to large temperature changes. Top pin and lower latch bracket positions can be adjusted to compensate for dimensional changes. Refer to [Checking and Adjusting Endshields, page 38](#).

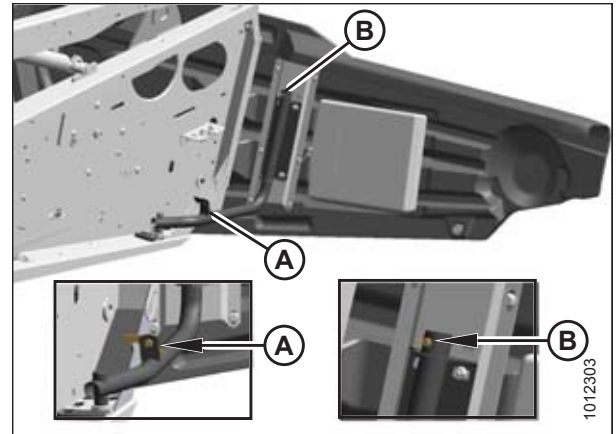


Figure 3.13: Left Endshield

OPERATION

Checking and Adjusting Endshields

Endshields are subject to expansion or contraction caused by large temperature variations. The position of the top pin and lower latch can be adjusted to compensate for dimensional changes.

1. Check gap (X) between front end of shields and header frame and compare to the values in Table 3.1, page 38.

Table 3.1 Endshield Gap at Various Temperatures

Temperature in Degrees °C (°F)	Gap (X) mm (in.)
7 (45)	13–18 (1/2 – 23/32)
18 (65)	10–15 (3/8 – 19/32)
29 (85)	7–12 (9/32 – 15/32)
41 (105)	4–9 (5/32 – 11/32)

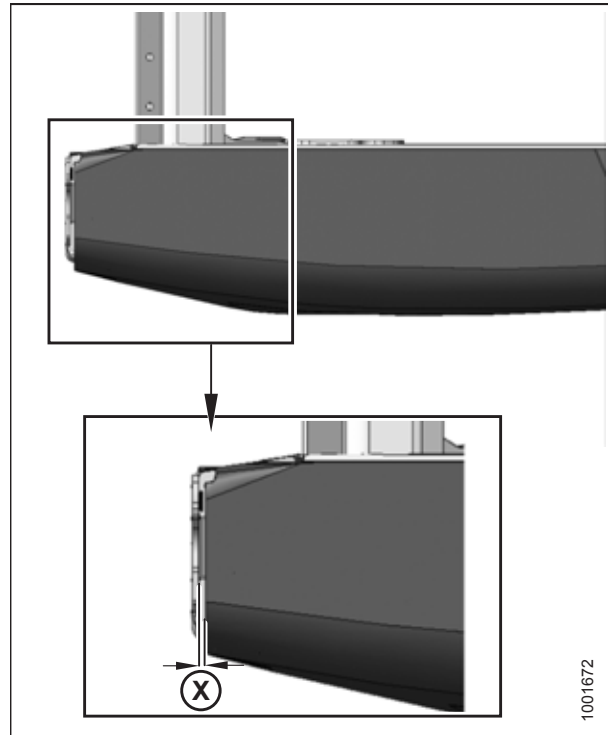


Figure 3.14: Gap between Endshield and Header Frame

NOTE:

If adjustment is required, follow these steps:

1. Loosen the four bolts (A) on the support tube bracket (B).

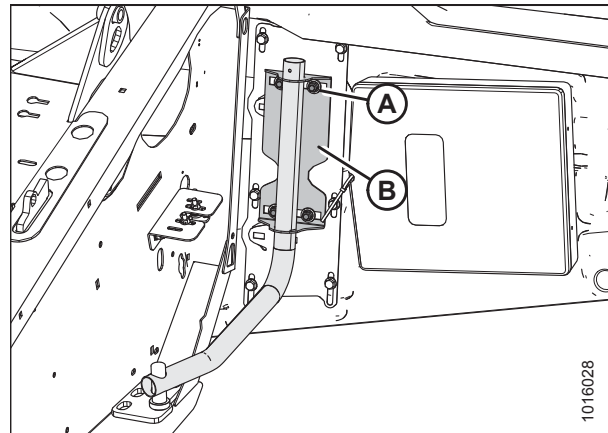


Figure 3.15: Left Endshield Support Tube

OPERATION

2. Loosen the three bolts (A) on latch assembly (B).
3. Adjust latch assembly (B) to achieve the desired gap between the front end of shield and header frame. Refer to Table 3.1, page 38 for recommended endshield gap at various temperatures.
4. Tighten the three bolts (A) on the latch assembly.
5. Tighten the four bolts on the support tube bracket.
6. Close endshield.

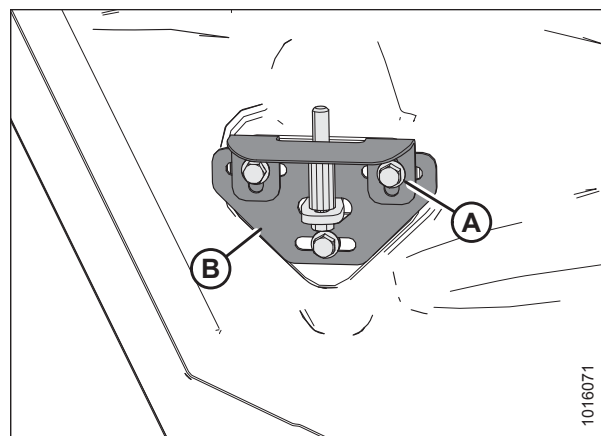


Figure 3.16: Left Endshield Latch Assembly

3.2.4 Daily Start-Up Check



CAUTION

- Clear the area of other persons, pets, etc. Keep children away from machinery. Walk around the machine to be sure no one is under, on, or close to it.
- Wear close-fitting clothing and protective shoes with slip-resistant soles.
- Remove foreign objects from the machine and surrounding area.
- Carry with you any protective clothing and personal safety devices that could be necessary through the day. Do NOT take chances. You may need a hard hat, protective glasses or goggles, heavy gloves, a respirator or filter mask, or wet weather gear.
- Protect against noise. Wear a suitable hearing protective device such as ear muffs or ear plugs to protect against objectionable or uncomfortably loud noises.



Figure 3.17: Safety Devices

Complete the following tasks each day before start-up:

1. Check the machine for leaks and any parts that are missing, broken, or not working correctly.

NOTE:

Use proper procedure when searching for pressurized fluid leaks. Refer to [5.3.5 Checking Hydraulic Hoses and Lines, page 372](#).

2. Clean all lights and reflective surfaces on the machine.
3. Perform all daily maintenance. Refer to [5.3.1 Maintenance Schedule/Record, page 367](#).

3.3 Break-in Period

CAUTION

Before investigating an unusual sound or attempting to correct a problem, shut off engine and remove key.

NOTE:

Until you become familiar with the sound and feel of your new header, be extra alert and attentive.

After attaching the header to the combine for the first time, follow these steps:

1. Operate the machine with the reels, drapers, and knives running slowly for five minutes. Watch and listen **FROM THE OPERATOR'S SEAT** for binding or interfering parts.

NOTE:

Reels and side drapers will not operate until oil flow fills the lines.

2. Refer to [5.3.2 Break-In Inspection, page 370](#) and perform all the specified tasks.

3.4 Shutting down the Machine

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

To shut down, and before leaving the combine seat for any reason, follow these steps:

1. Park on level ground whenever possible.
2. Lower the header fully.
3. Place all controls in NEUTRAL or PARK.
4. Disengage the header drive.
5. Lower and fully retract the reel.
6. Stop the engine and remove the key from the ignition.
7. Wait for all movement to stop.

3.5 Cab Controls

CAUTION

Be sure all bystanders are clear of machine before starting engine or engaging any header drives.

Refer to your combine operator's manual for identification of the following in-cab controls:

- Header engage/disengage control
- Header height
- Header angle
- Ground speed
- Reel speed
- Reel height
- Reel fore-aft position

3.6 Header Setup

3.6.1 Header Attachments

Several attachments to improve the performance of your header are available as options that can be installed by your MacDon Dealer. Refer to [6 Options and Attachments, page 541](#) for descriptions of available items.

3.6.2 Header Settings

The following tables provide a guideline for setting up the D1 Draper Header; however, the suggested settings can be changed to suit various crops and conditions not covered in the tables.

Refer also to [3.6.4 Reel Settings, page 56](#).

For FM100 auger configurations, refer to [3.7.1 Float Module Feed Auger Configurations, page 59](#).

Table 3.2 Recommended D1 Series / FM100 Combine Header Settings for Cereals

Stubble Height	102 (<4)						
Stabilizer Wheels ⁴	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods	Draper Speed Setting ⁵	Header Angle ^{6,7}	Reel Cam	Reel Speed % ⁸	Reel Position	Upper Cross Auger
Light	Off	8	B – C	3	10–15	6 or 7	Not required
Normal	On	7	B – C	2	10	6 or 7	Not required
Heavy	On	7	B – C	2	10	6 or 7	Recommended
Lodged	Off	7	B – C	3 or 4	5–10	4 or 5	Not required
Stubble Height	102–203 (4–8)						
Stabilizer Wheels	As required						
Skid Shoe Position	Down for lodged crop conditions, middle or down for other crop conditions						
Crop Condition	Divider Rods	Draper Speed Setting ⁵	Header Angle ^{6,7}	Reel Cam	Reel Speed % ⁸	Reel Position	Upper Cross Auger
Light	Off	8	B – C	4	10–15	6 or 7	Not required
Normal	On	7	A	2	10	6 or 7	Not required
Heavy	On	7	A	2	10	6 or 7	Recommended
Lodged	Off	7	D	3 or 4	5–10	4 or 5	Not required

4. Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.
5. Setting on FM100 draper control.
6. Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.
7. Cutting height is controlled with a combination of skid shoes and header angle.
8. Percentage above ground speed.

Table 3.2 Recommended D1 Series / FM100 Combine Header Settings for Cereals (continued)

Stubble Height	203+ (8+)						
Stabilizer Wheels	As required						
Skid Shoe Position	Not applicable						
Crop Condition	Divider Rods	Draper Speed Setting ⁵	Header Angle ^{6,7}	Reel Cam	Reel Speed % ⁸	Reel Position	Upper Cross Auger
Light	Off	8	A	4	10–15	6 or 7	Not required
Normal	On	7	A	2	10	6 or 7	Not required
Heavy	On	7	B – C	2	10	6 or 7	Not required
Lodged	Off	7	B – C	3 or 4	5–10	4 or 5	Not required

Table 3.3 Recommended D1 Series / FM100 Combine Header Settings for Lentils

Stubble Height	On ground						
Stabilizer Wheels ⁹	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods	Draper Speed Setting ¹⁰	Header Angle ^{11 12}	Reel Cam	Reel Speed % ¹³	Reel Position	Upper Cross Auger
Light	On	8	B – C	2	5–10	6 or 7	Not required
Normal	On	7	B – C	2	10	6 or 7	Not required
Heavy	On	7	B – C	2	10	6 or 7	Not required
Lodged	On	7	D	2	5–10	6 or 7	Not required

9. Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

10. Setting on FM100 draper control.

11. Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

12. Cutting height is controlled with a combination of skid shoes and header angle.

13. Percentage above ground speed.

Table 3.4 Recommended D1 Series / FM100 Combine Header Settings for Peas

Stubble Height	On ground						
Stabilizer Wheels ¹⁴	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods	Draper Speed Setting ¹⁵	Header Angle ^{16 17}	Reel Cam	Reel Speed % ¹⁸	Reel Position	Upper Cross Auger
Light	On	7	B – C	2	5–10	6 or 7	Recommended
Normal	On	7	B – C	2	10	6 or 7	Recommended
Heavy	On	7	B – C	2	10	4 or 5	Recommended
Lodged	On	7	D	2	5–10	4 or 5	Recommended

14. Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

15. Setting on FM100 draper control.

16. Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

17. Cutting height is controlled with a combination of skid shoes and header angle.

18. Percentage above ground speed.

Table 3.5 Recommended D1 Series / FM100 Combine Header Settings for Canola

Stubble Height	102–203 (4–8)							
Stabilizer Wheels¹⁹	As required							
Skid Shoe Position	Down for light or heavy crop conditions, middle or down for normal or lodged crop conditions							
Crop Condition	Divider Rods	Draper Speed Setting²⁰	Header Angle^{21 22}	Reel Cam	Reel Speed %²³	Reel Position	Upper Cross Auger	
Light	On	7	A	2	5–10	6 or 7	Recommended	
Normal	On	7	B – C	1	10	6 or 7	Recommended	
Heavy	On	8	B – C	1	10	3 or 4	Recommended	
Lodged	On	7	D	2	5–10	3 or 4	Recommended	
Stubble Height	203+ (8+)							
Stabilizer Wheels¹⁹	As required							
Skid Shoe Position	Not applicable							
Crop Condition	Divider Rods	Draper Speed Setting²⁰	Header Angle^{21 22}	Reel Cam	Reel Speed %²³	Reel Position	Upper Cross Auger	
Light	On	7	A	2	5–10	6 or 7	Recommended	
Normal	On	7	B – C	2	10	6 or 7	Recommended	
Heavy	On	8	B – C	1 or 2	10	3 or 4	Recommended	
Lodged	On	7	D	2 or 3	5–10	3 or 4	Recommended	

19. Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

20. Setting on FM100 draper control.

21. Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

22. Cutting height is controlled with a combination of skid shoes and header angle.

23. Percentage above ground speed.

Table 3.6 Recommended D1 Series / FM100 Combine Header Settings for California Rice

Stubble Height	102 (<4)						
Stabilizer Wheels²⁴	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods²⁵	Draper Speed Setting²⁶	Header Angle^{27 28}	Reel Cam	Reel Speed %²⁹	Reel Position	Upper Cross Auger
Light	Rice divider rod	4	D	2	10–15	6 or 7	Not required
Normal	Rice divider rod	4	B – C	2	10	4 or 5	Not required
Heavy	Rice divider rod	4	B – C	2	10	4 or 5	Not required
Lodged	Rice divider rod	4	D	2	5–10	4 or 5	Not required
Stubble Height	102–203 (4–8)						
Stabilizer Wheels²⁴	As required						
Skid Shoe Position	Middle or down						
Crop Condition	Divider Rods²⁵	Draper Speed Setting²⁶	Header Angle^{27 28}	Reel Cam	Reel Speed %²⁹	Reel Position	Upper Cross Auger
Light	Rice divider rod	4	D	3	10–15	6 or 7	Not required
Normal	Rice divider rod	4	B – C	3	10	6 or 7	Not required
Heavy	Rice divider rod	4	B – C	3	10	6 or 7	Not required
Lodged	Rice divider rod	4	D	4	5–10	6 or 7	Not required

24. Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

25. The rice divider rod is available. Rice divider rod not required on both ends of header.

26. Setting on FM100 draper control.

27. Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

28. Cutting height is controlled with a combination of skid shoes and header angle.

29. Percentage above ground speed.

Table 3.6 Recommended D1 Series / FM100 Combine Header Settings for California Rice (continued)

Stubble Height	203+ (8+)						
Stabilizer Wheels²⁴	As required						
Skid Shoe Position	Not applicable						
Crop Condition	Divider Rods²⁵	Draper Speed Setting²⁶	Header Angle^{27 28}	Reel Cam	Reel Speed %²⁹	Reel Position	Upper Cross Auger
Light	Rice divider rod	4	A	3	10–15	6 or 7	Not required
Normal	Rice divider rod	4	B – C	3	10	6 or 7	Not required
Heavy	Rice divider rod	4	B – C	3	10	6 or 7	Not required
Lodged	Rice divider rod	4	D	4	5–10	6 or 7	Not required

Table 3.7 Recommended D1 Series / FM100 Combine Header Settings for Delta Rice

Stubble Height	51–152 (2–6)							
Stabilizer Wheels³⁰	As required							
Skid Shoe Position	Middle or down							
Crop Condition	Divider Rods	Draper Speed Setting³¹	Header Angle^{32 33}	Reel Cam	Reel Speed %³⁴	Reel Position	Upper Cross Auger	
Light	Off	6	D	2 or 3	10–15	6 or 7	Not required	
Normal	Off	6	B – C	2 or 3	10	6 or 7	Not required	
Heavy	Off	6	B – C	2 or 3	10	6 or 7	Not required	
Lodged	Off	6	D	3 or 4	5–10	4 or 5	Not required	
Stubble Height	152+ (6+)							
Stabilizer Wheels³⁰	As required							
Skid Shoe Position	Not applicable							
Crop Condition	Divider Rods	Draper Speed Setting³¹	Header Angle^{32 33}	Reel Cam	Reel Speed %³⁴	Reel Position	Upper Cross Auger	
Light	Off	6	A	2 or 3	10–15	6 or 7	Not required	
Normal	Off	6	B – C	2 or 3	10	6 or 7	Not required	
Heavy	Off	6	B – C	2 or 3	10	6 or 7	Not required	
Lodged	Off	6	D	3 or 4	5–10	4 or 5	Not required	

30. Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

31. Setting on FM100 draper control.

32. Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

33. Cutting height is controlled with a combination of skid shoes and header angle.

34. Percentage above ground speed.

Table 3.8 Recommended D1 Series / FM100 Combine Header Settings for Edible Beans

Stubble Height	On ground						
Stabilizer Wheels ³⁵	Storage						
Skid Shoe Position	Up or middle						
Crop Condition	Divider Rods	Draper Speed Setting ³⁶	Header Angle ^{37 38}	Reel Cam	Reel Speed % ³⁹	Reel Position	Upper Cross Auger
Light	On	8	D	2	5–10	6 or 7	Not required
Normal	On	7	B – C	2	10	6 or 7	Not required
Heavy	On	7	B – C	2	10	6 or 7	Not required
Lodged	On	7	D	2	5–10	6 or 7	Not required

35. Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

36. Setting on FM100 draper control.

37. Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

38. Cutting height is controlled with a combination of skid shoes and header angle.

39. Percentage above ground speed.

Table 3.9 Recommended D1 Series / FM100 Combine Header Settings for Flax

Stubble Height	51–153 (2–6)						
Stabilizer Wheels⁴⁰	As required						
Skid Shoe Position	Down for lodged crop conditions, middle or down for other crop conditions						
Crop Condition	Divider Rods	Draper Speed Setting⁴¹	Header Angle^{42 43}	Reel Cam	Reel Speed %⁴⁴	Reel Position	Upper Cross Auger
Light	On	8	B – C	2	5–10	6 or 7	Not required
Normal	On	7	A	2	10	6 or 7	Not required
Heavy	On	7	B – C	2	10	6 or 7	Not required
Lodged	On	7	D	2	5–10	6 or 7	Not required

40. Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain and to minimize bouncing.

41. Setting on FM100 draper control.

42. Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height.

43. Cutting height is controlled with a combination of skid shoes and header angle.

44. Percentage above ground speed.

3.6.3 Optimizing Header for Straight Combining Canola

Ripe canola can be straight combined, but most varieties are very susceptible to shelling and subsequent seed loss. This section provides recommended attachments, settings, and adjustments to optimize D1 Series Draper Headers for straight combining canola.

Recommended attachments

The optimization includes the following modifications to the header:

- Installing a full-length upper cross auger
- Installing vertical knives
- Installing short center reel braces

NOTE:

Each kit includes installation instructions and the necessary hardware. Refer to [6 Options and Attachments, page 541](#).

Recommended settings

Optimizing the header requires adjustments to the following settings:

- Moving the reel fore-aft cylinders to the alternative aft location. Refer to [Repositioning Fore-Aft Cylinders on Double Reel, page 117](#) or [Repositioning Fore-Aft Cylinders on Single Reel, page 115](#).
- Adjusting reel fore-aft position. Refer to [Adjusting Reel Fore-Aft Position, page 115](#).
- Adjusting reel height so that fingers just engage the crop. Refer to [3.7.9 Reel Height, page 109](#).
- Setting reel cam to position 1. Refer to [Adjusting Reel Cam, page 130](#).
- Setting reel speed equal to ground speed and increase as required. Refer to [3.7.5 Reel Speed, page 102](#).
- Set the side draper speed to position nine on FM100 control valve. Refer to [3.7.7 Draper Speed, page 104](#).
- Set auger to floating position. Refer to [3.7.14 Setting Auger Position, page 137](#).
- Loosen auger spring tension. Refer to [Checking and Adjusting Feed Auger Springs, page 55](#).

Checking and Adjusting Feed Auger Springs

The feed auger has an adjustable spring tensioning system that allows the auger to float on top of the crop instead of crushing and damaging it. The factory-set tension is adequate for most crop conditions.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Raise header to full height.
2. Shut down the combine, and remove the key from the ignition.
3. Engage header lift cylinder safety props.
4. Check the thread length protruding past the nut (B). Length should be 22–26 mm (7/8–1 in.).

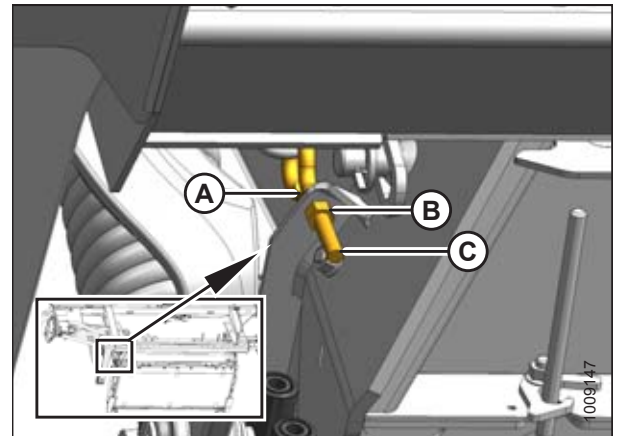


Figure 3.18: Spring Tensioner

If adjustment is required, follow these steps:

1. Loosen upper jam nut (A) on spring tensioner.
2. Turn lower nut (B) until the thread (C) protrudes 22–26 mm (7/8–1 in.).
3. Tighten jam nut (A).
4. Repeat Steps 1, [page 55](#) to 3, [page 55](#) on opposite side.

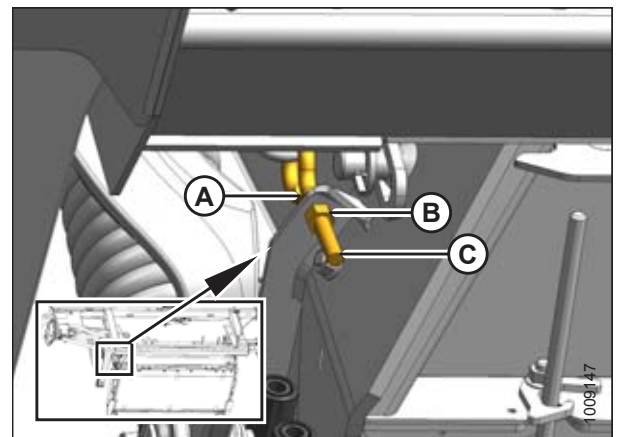
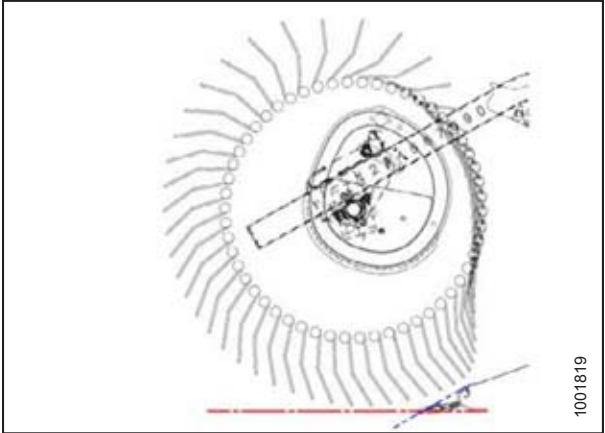
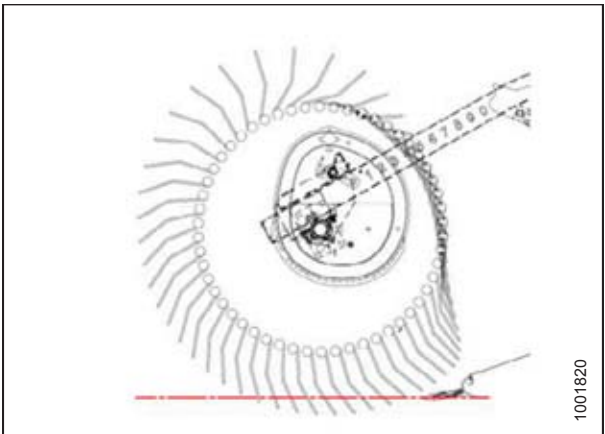


Figure 3.19: Spring Tensioner

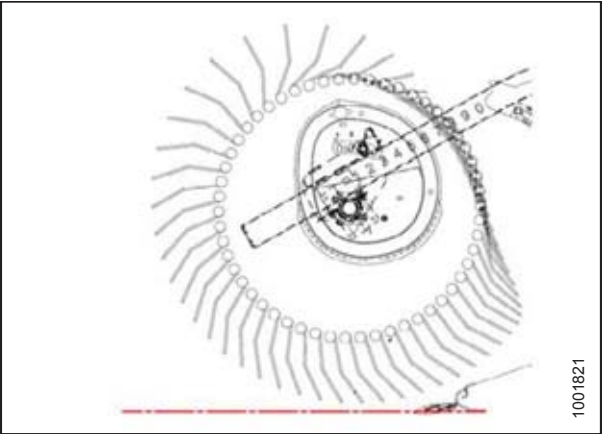
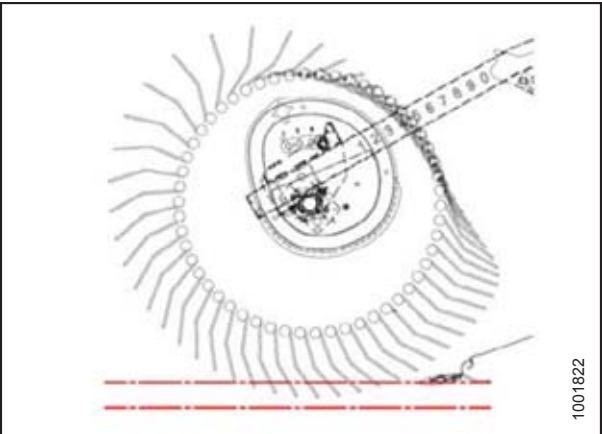
3.6.4 Reel Settings

Table 3.10 D1 Series Recommended Reel Settings

Cam Setting Number (Finger Speed Gain)	Reel Position Number	Reel Finger Pattern
1 (0)	6 or 7	
2 (20%)	3 or 4	

OPERATION

Table 3.10 D1 Series Recommended Reel Settings (continued)

Cam Setting Number (Finger Speed Gain)	Reel Position Number	Reel Finger Pattern
3 (30%)	6 or 7	
4 (35%)	2 or 3	

NOTE:

- Adjust the reel forward to get closer to the ground while tilting the header back. Fingers/tines will dig into the ground at extreme reel-forward positions, so adjust skid shoes or header angle to compensate. Adjust the reel rearwards to position the reel farther away from the ground when tilting the header forward.
- Header tilt can be increased to position the reel closer to the ground, or decreased to position the reel farther from the ground, while keeping material flowing onto drapers.
- To leave the maximum amount of stubble behind in lodged crop, raise the header and increase the header tilt to keep the reel close to the ground. Position the reel fully forward.
- The reel may have to be moved back to prevent lumps or plugging on the cutterbar in thinner crops.
- Minimum crop carrying capacity (minimum area of exposed draper between the reel and the header backsheet) occurs with the reel in the furthest aft position.
- Maximum crop carrying capacity (maximum area of exposed draper between the reel and the header backsheet) occurs with the reel in the furthest forward position.
- Due to the nature of the cam action, the tip speed of the fingers/tines at the cutterbar becomes higher than that of the reel speed at higher cam settings. Refer to Table 3.10, page 56.

3.7 Header Operating Variables

Satisfactory function of the header in all situations requires making proper adjustments to suit various crops and conditions.

Correct operation reduces crop loss and increases productivity. As well, proper adjustments and timely maintenance will increase the length of service you receive from your machine.

The variables listed in Table 3.11, [page 58](#) and detailed on the following pages will affect the performance of your header.

You will quickly become adept at adjusting the machine to achieve the results you desire. Most of the adjustments have been preset at the factory, but the settings can be changed to suit crop conditions.

Table 3.11 Operating Variables

Variable	Refer to
Cutting height	Cutting off the Ground, page 81 ; Cutting on the Ground, page 85
Header float	3.7.3 Header Float, page 87
Header angle	3.7.4 Header Angle, page 94
Reel speed	3.7.5 Reel Speed, page 102
Ground speed	3.7.6 Ground Speed, page 103
Reel height	3.7.9 Reel Height, page 109
Reel fore-aft position	3.7.10 Reel Fore-Aft Position, page 114
Reel tine pitch	3.7.11 Reel Tine Pitch, page 127
Crop divider rods	3.7.12 Crop Dividers, page 130
Feed auger configurations	3.7.1 Float Module Feed Auger Configurations, page 59

3.7.1 Float Module Feed Auger Configurations

The FM100 feed auger can be configured to suit various crop conditions; there are four configurations available. Check the conversion instructions to determine if additional auger flighting kits are required.

Narrow configuration is a standard configuration for the following combines:

- Gleaner (R6/75, R6/76, S6/77, S6/7/88, S96/7/8)
- New Holland CR (920/940/960, 9020/40/60/65, 6090/7090, 8060/8070/8080)

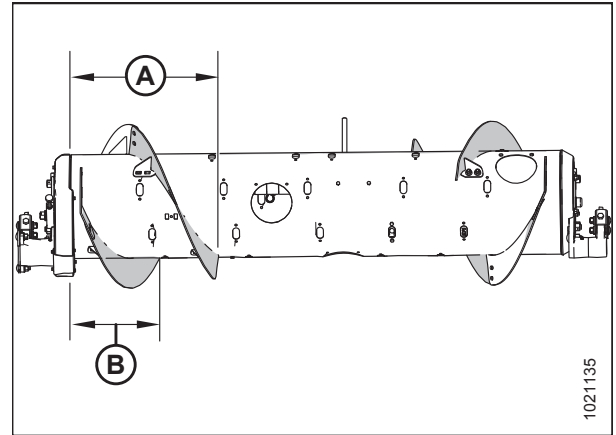


Figure 3.20: Narrow Configuration (Rear View)

A - 514 mm (20-1/4 in.)

B - 356 mm (14 in.)

NOTE:

Dimensions are the same on the other end of the auger. They should be within 15 mm (9/16 in.) of the numbers given.

To convert to Narrow configuration from Medium or Wide configuration, refer to [Converting from Medium Configuration or Wide Configuration to Narrow Configuration, page 66](#).

To convert to Narrow configuration from Ultra Narrow configuration, refer to [Converting from Ultra Narrow Configuration to Narrow Configuration, page 68](#).

Medium configuration is a standard configuration for the following combines:

- Case (5/6/7088, 7/8010, 7/8/9120, 5/6/7130, 7/8/9230, 5/6/7140, 7/8/9240)
- Challenger (66/67/680B, 54/560C, 54/560E)
- CLAAS (56/57/58/590R, 57/58/595R, 62/63/64/65/66/670, 73/74/75/76/77/780)
- John Deere (95/96/97/9860, 95/96/97/9870, S65/66/67/68/690, T670)
- Massey Ferguson (96/97/9895, 9520/40/60, 9545/65, 9380)
- New Holland CR (970/980, 9070/9080, 8090/9090, X.90, X.80)
- New Holland CX (8X0, 80X0, 8.X0, 8080/8090 Elevation)
- Versatile (RT490)

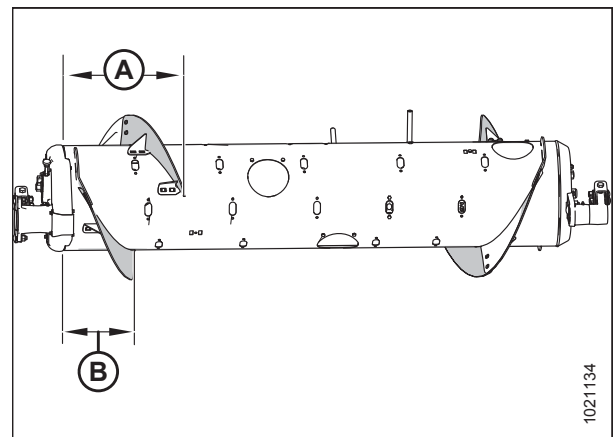


Figure 3.21: Medium Configuration (Rear View)

A - 410 mm (16-1/8 in.)

B - 260 mm (10-1/4 in.)

NOTE:

Dimensions are the same on the other end of the auger. They should be within 15 mm (9/16 in.) of the numbers given.

OPERATION

To convert to Medium configuration from Narrow or Ultra Narrow configuration, refer to [Converting from Ultra Narrow Configuration or Narrow Configuration to Medium Configuration, page 61](#).

To convert to Medium configuration from Wide configuration, refer to [Converting from Wide Configuration to Medium Configuration, page 64](#).

Wide configuration is an optional configuration for the following combines:

- Challenger (670B/680B, 540C/560C, 540E/560E)
- CLAAS (590R/595R, 660/670, 760/770/780)
- John Deere (T670)
- Massey Ferguson (9895, 9540, 9560, 9545, 9565, 9380)
- New Holland CX (8X0, 80X0, 8.X0)

NOTE:

This configuration may increase combine capacity on wide feeder house combines in certain crop conditions.

NOTE:

In some conditions, feeding may be further improved by removing all bolt-on flighting. Refer to [Optional Modification to Wide Configuration, page 73](#).

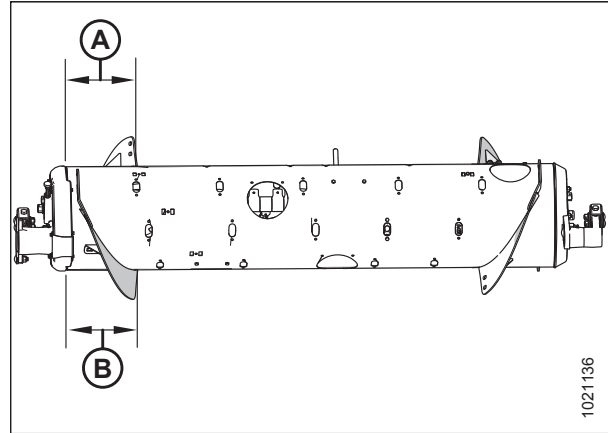


Figure 3.22: Wide Configuration (Rear View)

A - 257 mm (10-1/8 in.)

B - 257 mm (10-1/8 in.)

NOTE:

Dimensions are the same on the other end of the auger. They should be within 15 mm (9/16 in.) of the numbers given.

To convert to Wide configuration from Medium configuration, refer to [Converting from Medium Configuration to Wide Configuration, page 69](#).

To convert to Wide configuration from Narrow or Ultra Narrow configuration, refer to [Converting from Ultra Narrow or Narrow Configuration to Wide Configuration, page 71](#).

Ultra Narrow configuration is an optional configuration that may improve feeding performance on combines with narrow feeder houses. It may also be helpful when harvesting rice.

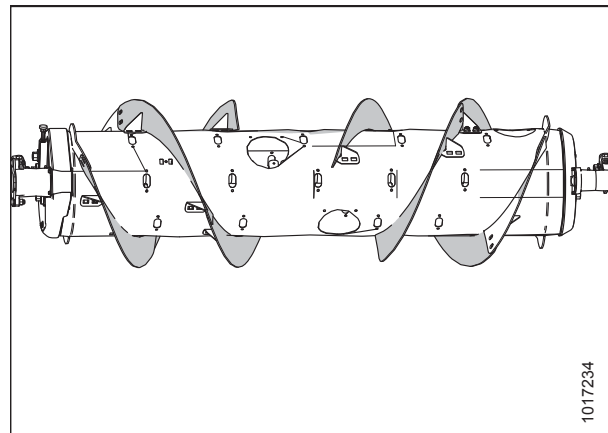


Figure 3.23: Ultra Narrow Configuration (Rear View)

To convert to Ultra Narrow configuration from Medium or Wide configuration, refer to [Converting from Medium Configuration or Wide Configuration to Ultra Narrow Configuration, page 74](#).

OPERATION

To convert to Ultra Narrow configuration from Narrow configuration, refer to [Converting from Narrow Configuration to Ultra Narrow Configuration, page 78](#).

Converting from Ultra Narrow Configuration or Narrow Configuration to Medium Configuration

Two kits of either MD #287031 or B6215⁴⁵ are required to convert to this configuration.

Ultra Narrow, Narrow, and Medium auger configurations are shown at right. When converting from the Ultra Narrow configuration or Narrow configuration to Medium configuration, you will need to replace the existing flightings (A) with flightings (B).

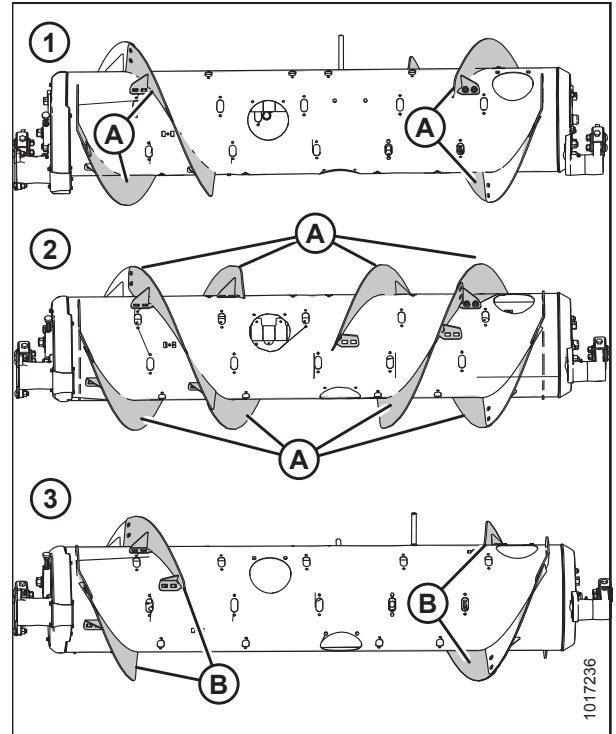


Figure 3.24: Auger Configurations (Rear View)

1 - Narrow Configuration 2 - Ultra Narrow Configuration
3 - Medium Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to [4 Header Attachment/Detachment, page 311](#).

NOTE:

Some parts have been removed from the illustrations for clarity.

45. MD #287031 is available for ordering only through MacDon Parts. B6215 is available for ordering only through Whole Goods. The former contains wear-resistant flightings while the latter contains regular flightings.

OPERATION

2. Remove bolts (A) and access cover (B) from right end of auger. Retain for reassembly later.

NOTE:

If necessary, remove multiple access covers for ease of access.

3. Remove hardware (C) and bolt-on flighting (D) from the right end of the auger. Repeat for all the remaining hardware and bolt-on flighting. Discard flighting, but retain hardware to attach new flighting.
4. Repeat Steps 2, [page 62](#) and 3, [page 62](#) at the left side of the feed auger.

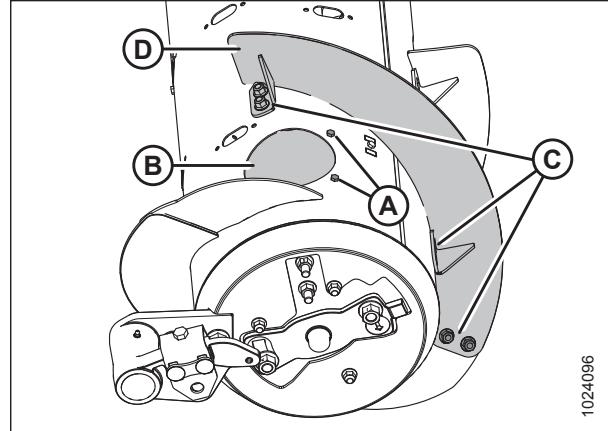


Figure 3.25: Narrow Configuration (Right Side)

5. Remove flighting slot plug (B), M6 bolt (A), and tee nut from inside the feed auger. Repeat at the left side of the feed auger. Retain plug and hardware for reinstallation.

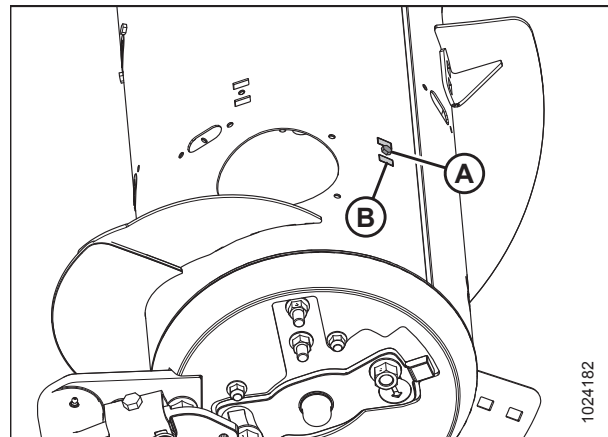


Figure 3.26: Narrow Configuration (Right Side)

6. Install two bolt-on flightings (A) on the right side as shown, and secure each flighting with six carriage head bolts and nuts at location (B).

IMPORTANT:

Flighting bolt heads must be installed on inside of auger to prevent damage to internal components.

NOTE:

Flightings are **NOT** included in this kit. Order flighting kits MD #287031 or B6215 separately.

7. Torque all nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on flighting, then torque them to 58–64 Nm (43–47 lbf·ft).

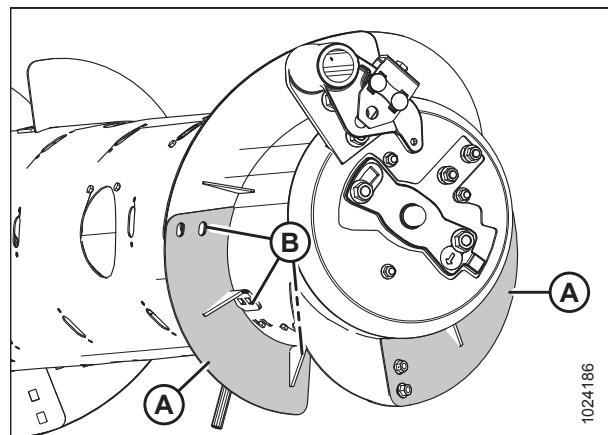


Figure 3.27: Medium Configuration (Right Side)

OPERATION

8. Install two bolt-on flightings (A) on the left side as shown, and secure each flighting with six carriage head bolts and nuts retained from Step 3, [page 62](#) at location (B).

IMPORTANT:

Flighting bolt heads must be installed on inside of auger to prevent damage to internal components.

NOTE:

Flightings are **NOT** included in this kit. Order flighting kits MD #287031 or MD #B6215 separately.

9. Torque all nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on flighting, then torque them to 58–64 Nm (43–47 lbf·ft).
10. Use the access hole (A) to position the flighting slot plug (B) from inside the feed auger (as shown) and secure with a 20 mm long M6 hex head bolt (C) and tee nut. Use flighting and hardware retained from Step 5, [page 62](#). Repeat for the remaining locations previously used to mount the flighting in Step 3, [page 62](#) and Step 4, [page 62](#).
11. Install additional auger fingers. A total of 22 auger fingers is recommended for this configuration. Refer to [Installing Feed Auger Fingers, page 412](#).

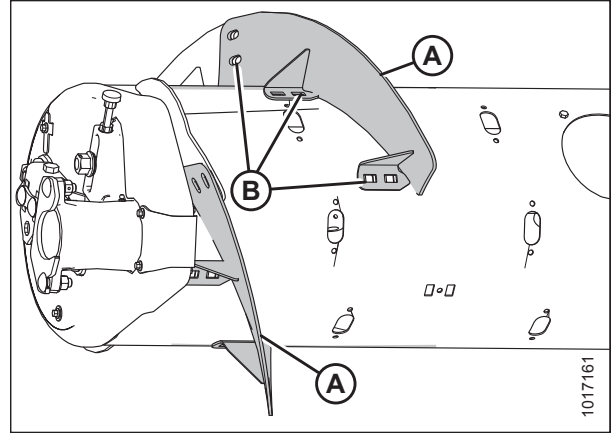


Figure 3.28: Medium Configuration (Left Side)

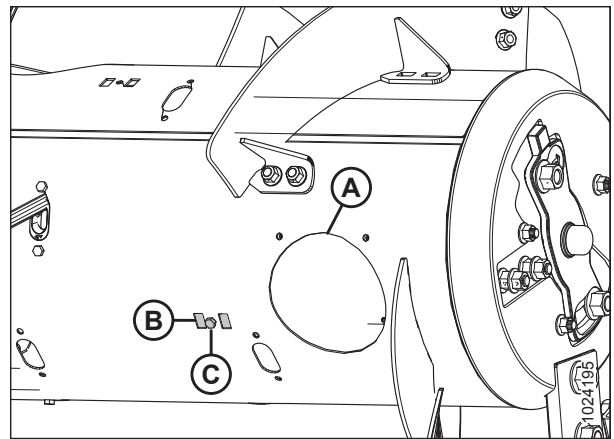


Figure 3.29: Medium Configuration Flighting Plug (Right Side)

OPERATION

Converting from Wide Configuration to Medium Configuration

One kit (either MD #287031 or B6215⁴⁶) is required to convert to this configuration.

Wide and Medium auger configurations are shown at right. When converting from wide configuration to Medium configuration, you will need to install new flightings (A).

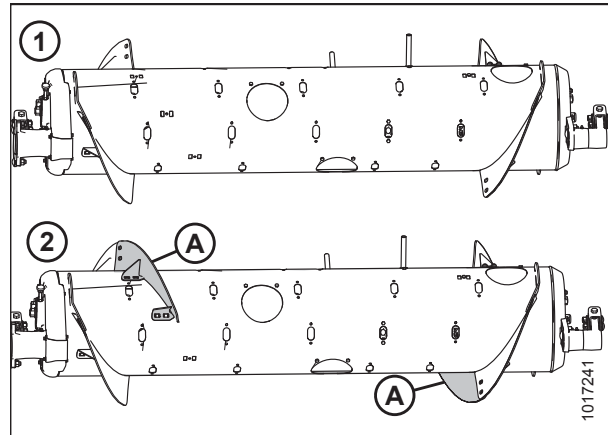


Figure 3.30: Auger Configurations (Rear View)

1 - Wide Configuration

2 - Medium Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to [4 Header Attachment/Detachment, page 311](#).

NOTE:

Some parts have been removed from the illustrations for clarity.

2. Remove bolts (A) and remove the access cover (B) on the right side of the auger. Retain for reassembly later.

NOTE:

If necessary, remove multiple access covers for ease of access.

3. Remove and discard the two flighting slot plugs (C) on the right side of the auger.

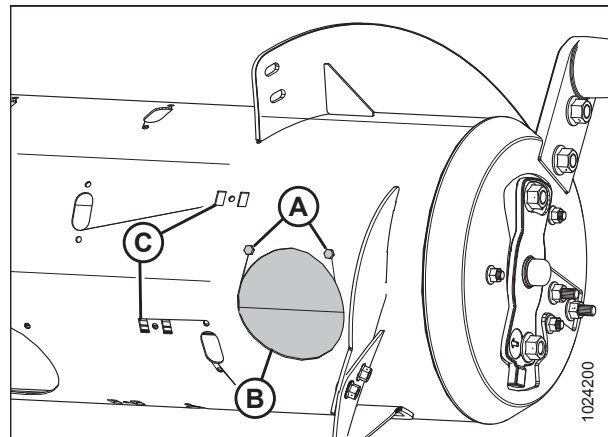


Figure 3.31: Wide Configuration (Right Side)

46. MD #287031 is available for ordering only through MacDon Parts. B6215 is available for ordering only through Whole Goods. The former contains wear-resistant flightings; the latter contains regular flightings.

OPERATION

4. Install bolt-on fighting (A) on the right side of the auger as shown, and secure with six carriage head bolts and six nuts at location (B).

IMPORTANT:

Bolt heads must be installed on inside of auger to prevent damage to internal components.

5. Torque all nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on fighting, then torque them to 58–64 Nm (43–47 lbf·ft).

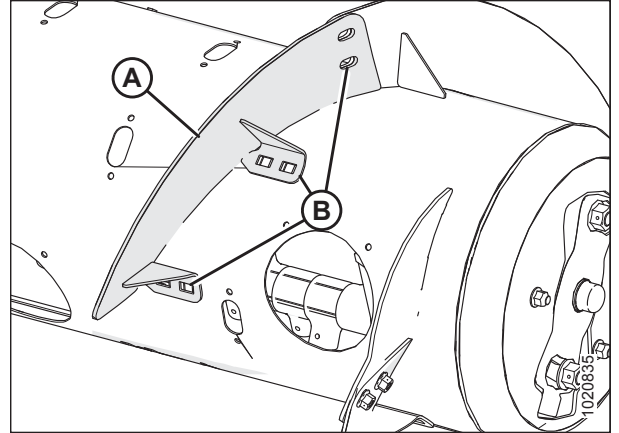


Figure 3.32: Medium Configuration (Right Side)

6. Repeat Step 2, [page 64](#) and Step 3, [page 64](#) at the left side of auger.
7. Install bolt-on fighting (A) on the left side as shown, and secure with six carriage head bolts and six nuts at location (B).

IMPORTANT:

Bolt heads must be installed on inside of auger to prevent damage to internal components.

8. Torque all nuts and bolts (B) to 47 Nm (35 lbf·ft) to eliminate deflection on fighting, then torque them to 58–64 Nm (43–47 lbf·ft).
9. Remove extra auger fingers. A total of 22 fingers are recommended for this configuration. Refer to [Removing Feed Auger Fingers, page 410](#).

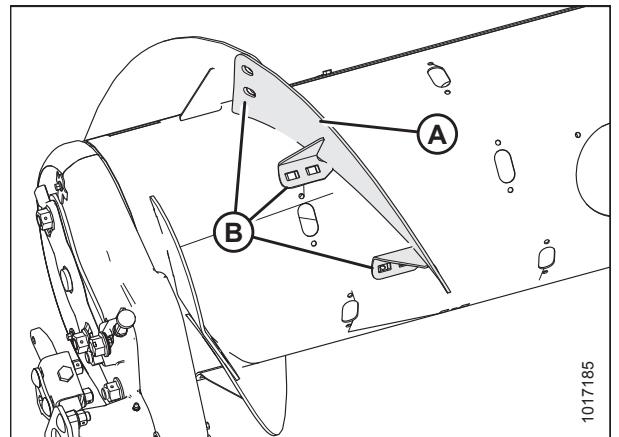


Figure 3.33: Medium Configuration (Left Side)

OPERATION

Converting from Medium Configuration or Wide Configuration to Narrow Configuration

Two of either MD #287032, B6400, or B6216⁴⁷ are required to convert to this configuration. Extra hardware is included in these kits. Be sure to use the correct hardware in the correct location to prevent damage and to maximize performance.

Medium, Wide, and Narrow auger configurations are shown at right. When converting from the Medium or Wide configuration to the Narrow configuration, you will need to replace the existing flightings (A) with flightings (B).

NOTE:

Ideally, the flighting should fit tight against the auger tube; however, gaps are not uncommon. Crop material may collect in this gap, but generally this will not affect performance. If desired, silicone sealant may be used to fill these gaps.

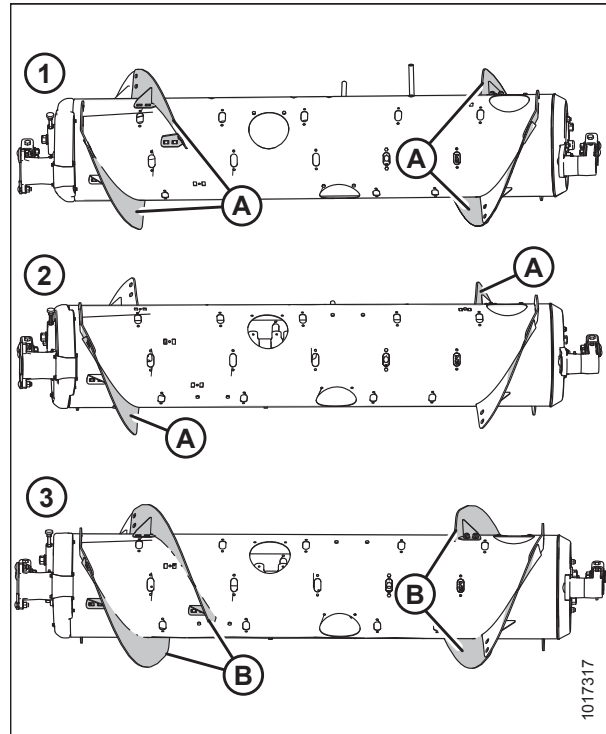


Figure 3.34: Auger Configurations (Rear View)

1 - Medium Configuration
3 - Narrow Configuration

2 - Wide Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to [4 Header Attachment/Detachment, page 311](#).

NOTE:

Some parts have been removed from the illustrations for clarity.

47. MD #287032 is available for ordering only through MacDon Parts. B6400 and B6216 are available for ordering only through Whole Goods. The first two contain wear-resistant flightings; the third contains regular flightings.

OPERATION

2. Remove bolts (A) and access cover (B) from the right side of the auger. Retain for reassembly.
3. Remove hardware (C) and bolt-on flighting (D) from the auger.
4. Remove and discard the flighting slot plug (E) located close to the end of the flighting (D).
5. **Converting from Medium configuration:** Repeat above steps for the other flighting on the right side.

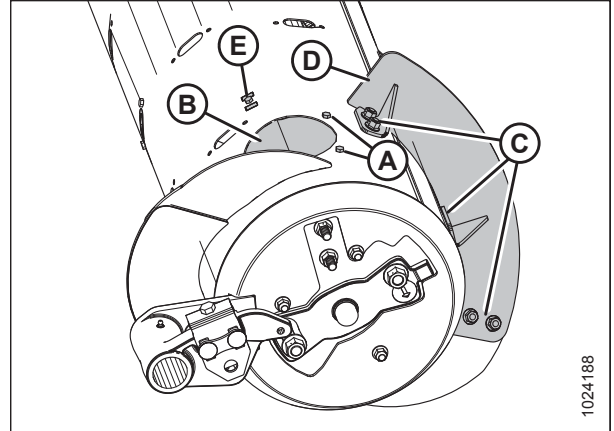


Figure 3.35: Wide Configuration (Right Side)

6. **Converting from Wide configuration:** Remove bolts (A), access cover (B), and two flighting slot plugs (C) from the right side of the auger.
7. Repeat Steps 2, page 67 to 6, page 67 at the left side of the feed auger.

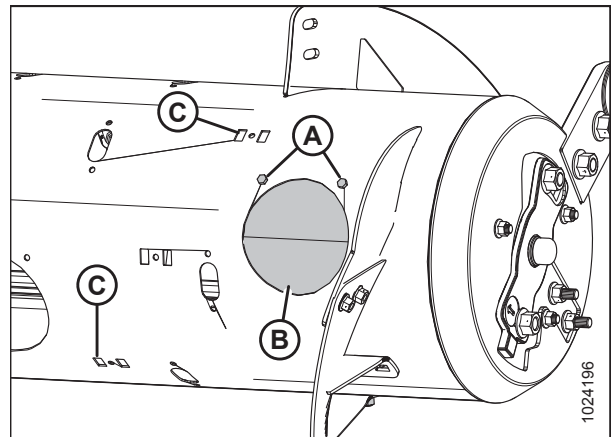


Figure 3.36: Wide Configuration (Right Side)

8. Install two bolt-on flightings (A) on the right side as shown, and secure each flighting with six carriage head bolts and nuts at location (B).

IMPORTANT:

Bolt heads must be installed on inside of auger to prevent damage to internal components.

9. Torque all nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on flighting, then torque them to 58–64 Nm (43–47 lbf·ft).
10. Install flighting slot plug (MD #213084) at location (C) from inside the auger and secure with an M6 hex head bolt (MD #252703) and tee nut (MD #197263). Repeat for the other flighting mounting locations.

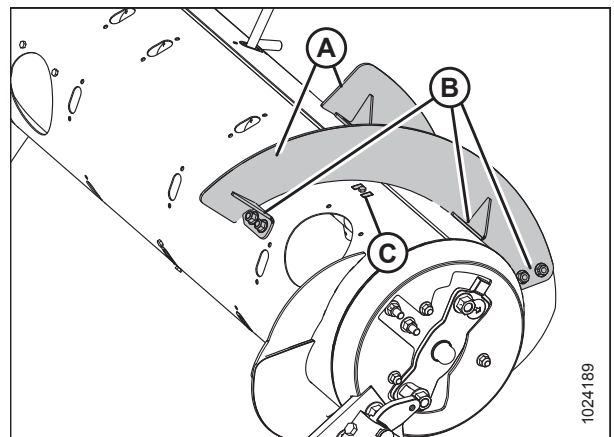


Figure 3.37: Narrow Configuration (Right Side)

OPERATION

11. Install two bolt-on flightings (A) on the left side as shown, and secure each flighting with six carriage head bolts (MD #136178) and nuts (MD #135799) at location (B).

IMPORTANT:

Bolt heads must be installed on inside of auger to prevent damage to internal components.

12. Torque all nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on flighting, then torque them to 58–64 Nm (43–47 lbf·ft).
13. Install flighting slot plug (C) (MD #213084) from inside the auger and secure with an M6 hex head bolt (MD #252703) and tee nut (MD #197263). Repeat for the other flighting mounting location used to mount the previous flighting in Step 3, [page 67](#).
14. Remove extra auger fingers. A total of 18 fingers is recommended for this configuration. Refer to [Removing Feed Auger Fingers](#), [page 410](#).

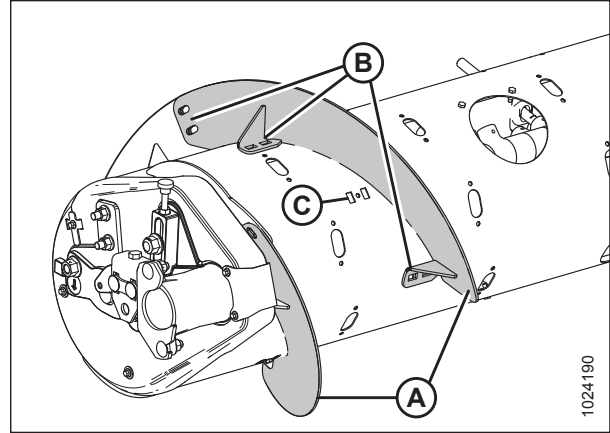


Figure 3.38: Narrow Configuration (Left Side)

Converting from Ultra Narrow Configuration to Narrow Configuration

The Ultra Narrow and Narrow auger configurations are shown at right. Existing flightings (A) are removed from the auger when converting to the Narrow configuration.

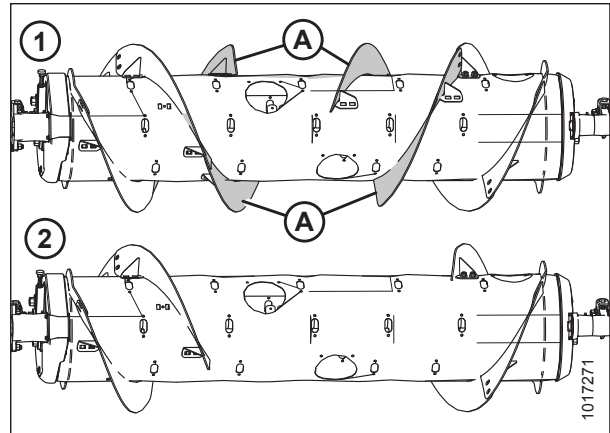


Figure 3.39: Auger Configurations (Rear View)

1 - Ultra Narrow Configuration 2 - Narrow Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to [4 Header Attachment/Detachment](#), [page 311](#).

OPERATION

2. Remove bolts (A) and access cover (B). Retain for reassembly.

NOTE:

Some parts are removed from the illustration for clarity.

3. Remove hardware from location (C), and remove bolt-on flighting (D) from feed auger.
4. Repeat procedure for the remaining three inboard flightings.
5. Install additional auger fingers. A total of 18 fingers are recommended for this configuration. Refer to [Installing Feed Auger Fingers, page 412](#) for instructions.

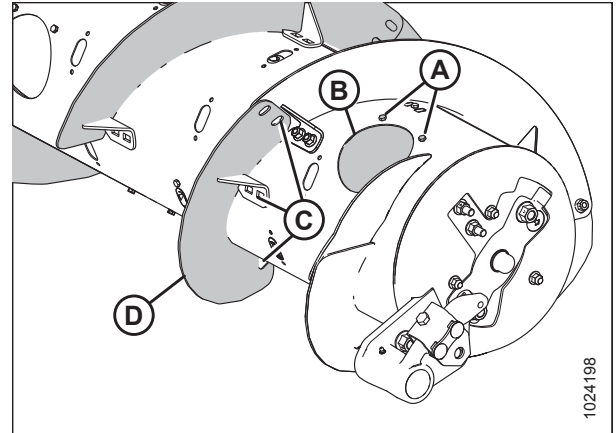


Figure 3.40: Ultra Narrow Configuration (Right Side)

Converting from Medium Configuration to Wide Configuration

The Medium and Wide auger configurations are shown at right. When converting from the Medium configuration to the Wide configuration, you will need to remove existing flightings (A) from auger and add auger fingers.

Four flighting plugs (MD #213084), M6 hex head bolts (MD #252703), and M6 tee nuts (MD #197263) are needed to cover exposed flighting mounting holes after the flightings are removed. These parts can be ordered from a MacDon Dealer.

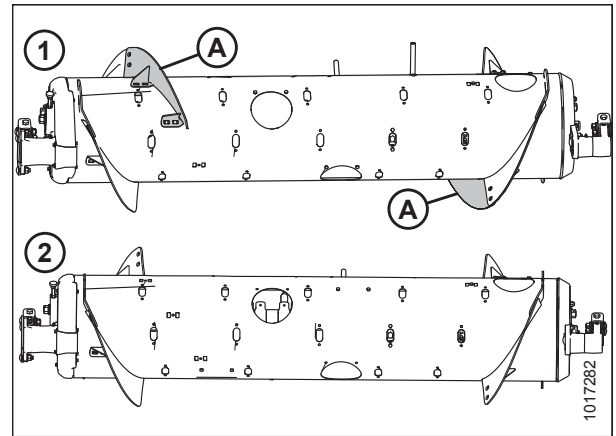


Figure 3.41: Auger Configurations (Rear View)
1 - Medium Configuration 2 - Wide Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to [4 Header Attachment/Detachment, page 311](#).

NOTE:

Some parts have been removed from the illustrations for clarity.

OPERATION

2. Remove bolts (A) and access cover (B). Retain for reassembly.
3. Remove hardware from location (C), and remove bolt-on fighting (D) from the feed auger.

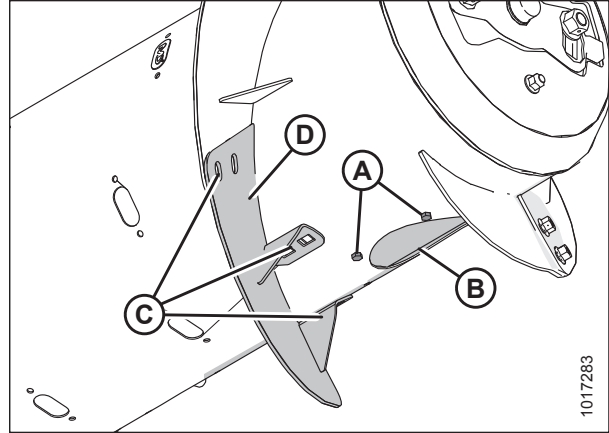


Figure 3.42: Right Side of Medium Configuration

4. Install fighting slot plug (A) (MD #213084) in the fighting slot from inside the auger. Secure with M6 hex head bolts (B) (MD #252703) and tee nuts (MD #197263).
5. Repeat above steps at the left side of the auger.
6. Install additional fingers. A total of 30 fingers are recommended for this configuration. Refer to [Installing Feed Auger Fingers, page 412](#).

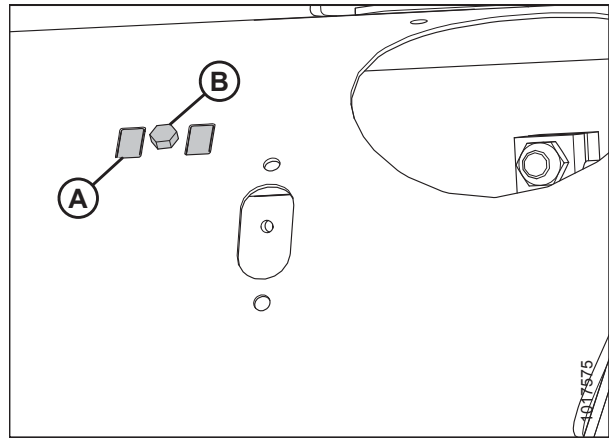


Figure 3.43: Right Side of Wide Configuration

OPERATION

Converting from Ultra Narrow or Narrow Configuration to Wide Configuration

One kit (either MD #287031 or B6215⁴⁸) is required to convert to this configuration. Two flighting plugs (MD #213084), two M6 hex head bolts (MD #252703), and two M6 tee nuts (MD #197263) are recommended to close the flighting mounting locations. These parts can be ordered from a MacDon Dealer.

The Narrow, Ultra Narrow, and Wide auger configurations are shown at right. When converting from the Narrow or Ultra Narrow configuration to the Wide configuration, you will need to replace the existing flightings (A).

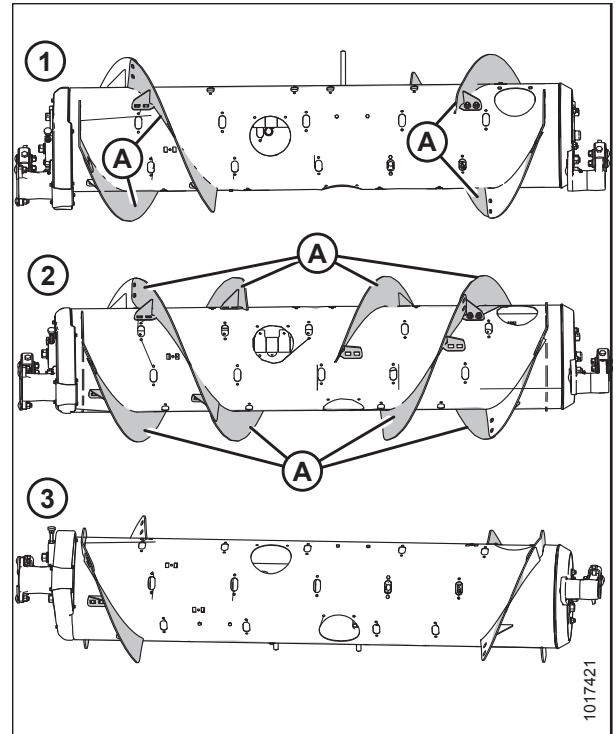


Figure 3.44: Auger Configurations (Rear View)

1 - Narrow Configuration

2 - Ultra Narrow Configuration

3 - Wide Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to [4 Header Attachment/Detachment, page 311](#).

48. MD #287031 is available for ordering only through MacDon Parts. B6215 is available for ordering only through Whole Goods. The former contains wear-resistant flightings; the latter contains regular flightings.

OPERATION

2. Remove bolts (A) and access cover (B) from the right side of the auger. Retain for reassembly later.

NOTE:

Some parts have been removed from the illustrations for clarity.

3. Remove hardware (C) and bolt-on fighting (D) from the right side of the auger. Discard fighting, but retain hardware to attach the new fighting.
4. Remove fighting slot plug, bolt, and tee nut (E). Retain for reinstallation later.

NOTE:

Only two fighting slot plugs (E) should be removed—one from each outboard side of the auger.

5. Repeat Step 2, page 72 and Step 3, page 72 for the remaining bolt-on fighting(s).
6. Install the new bolt-on fighting (A) using six carriage head bolts and nuts (B) on the right side of the auger.

IMPORTANT:

Fighting bolt heads must be installed on inside of auger to prevent damage to internal components.

NOTE:

Flightings are **NOT** included in this kit. Order fighting kits MD #287031 or B6215 separately.

7. Reinstall fighting slot plug (C) removed in Step 4, page 72.

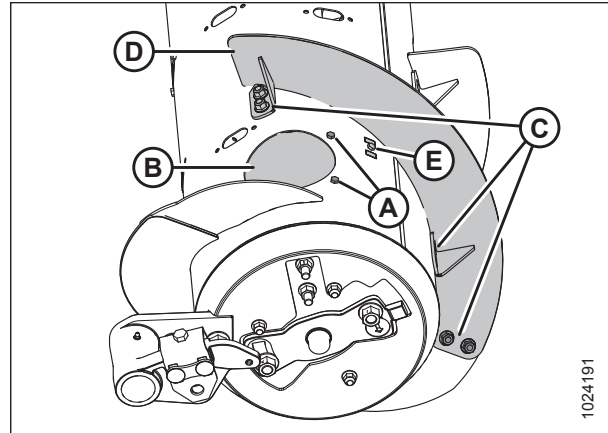


Figure 3.45: Narrow Configuration (Right Side)

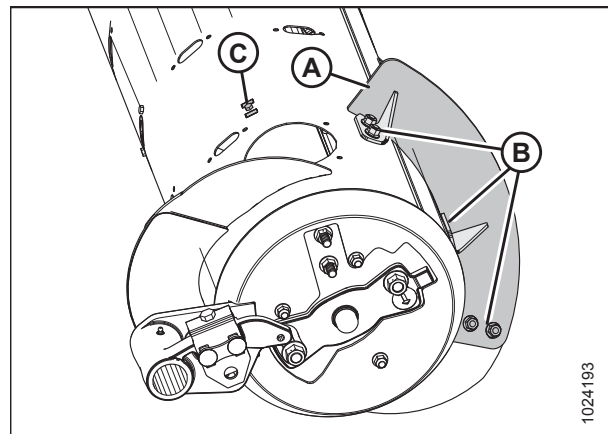


Figure 3.46: Wide Configuration (Right Side)

8. Install the new bolt-on fighting (A) on the left side of the auger using six carriage head bolts and nuts (B).

IMPORTANT:

Fighting bolt heads must be installed on inside of auger to prevent damage to internal components.

NOTE:

Flightings are **NOT** included in this kit. Order fighting kits MD #287031 or B6215 separately.

9. Reinstall fighting slot plug (C) removed in Step 4, page 72.

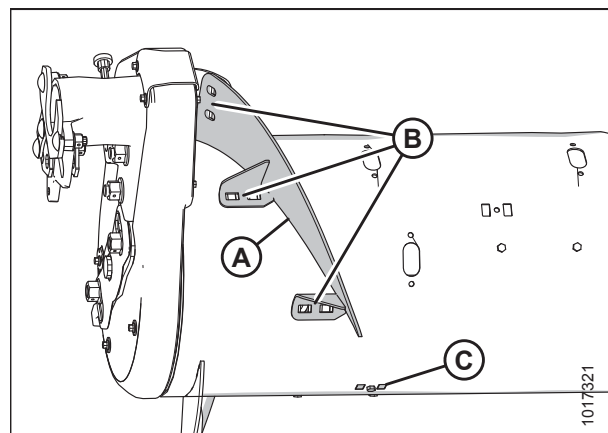


Figure 3.47: Wide Configuration (Left Side)

OPERATION

10. Install the remaining flighting slot plugs (MD #213084) using the M6 hex head bolts (MD #252703) and tee nuts (MD #197263) in the locations previously used to mount the flighting in Step 3, page 72 and Step 5, page 72.
11. Install additional auger fingers. There should be a total of 30 fingers in this configuration. Auger fingers and all required parts are included in kit. Refer to *Installing Feed Auger Fingers*, page 412.

Optional Modification to Wide Configuration

In some conditions, feeding may be further improved by removing all bolt-on flightings (A). Four flighting plugs (MD #213084), M6 bolts (MD #252703), and M6 tee nuts (MD #197263) are recommended to cover the flighting mounting holes. These parts can be ordered from a MacDon Dealer.

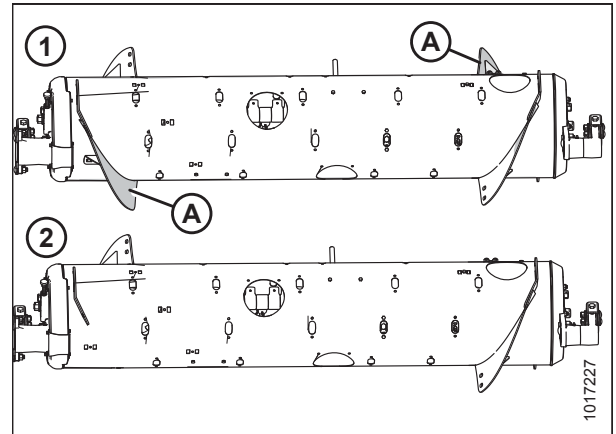


Figure 3.48: Auger Configurations (Rear View)

1 - Wide Configuration

2 - Modified Wide Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to *4 Header Attachment/Detachment*, page 311.

NOTE:

Some parts have been removed from the illustrations for clarity.

2. Remove two bolts and access cover (A).
3. Remove hardware (B), and bolt-on flighting (C).
4. Install flighting slot plugs (MD #213084) in the flighting mounting locations (D) and secure with M6 bolts (MD #252703) and tee nuts (MD #197263).
5. Repeat at the left side of the auger.
6. Install additional auger fingers. A total of 30 fingers are recommended for this configuration. Refer to *Installing Feed Auger Fingers*, page 412.

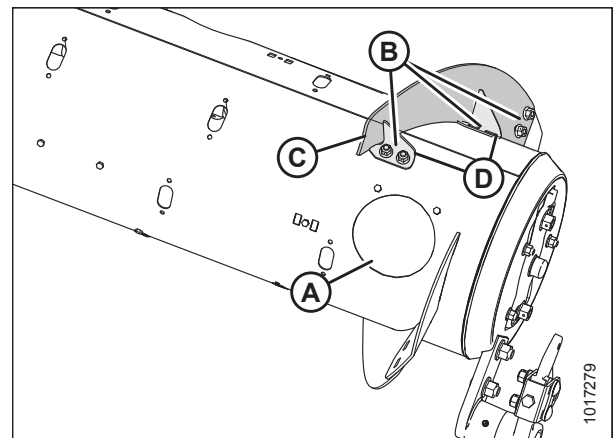


Figure 3.49: Wide Configuration (Right Side)

OPERATION

Converting from Medium Configuration or Wide Configuration to Ultra Narrow Configuration

Four kits of either MD #287032, B6400, or B6216⁴⁹ and some hole-drilling are required to convert to the Ultra Narrow configuration. Extra hardware is included in these kits. Be sure to use the correct hardware in the correct location to prevent damage and to maximize performance.

NOTE:

A wear-resistant long flighting kit is available for this configuration conversion. This kit includes long tungsten carbide coated flightings that have increased durability for harvesting abrasive crops like rice. If this is required, order four kits of either MD #287032 or MD #B6400⁵⁰ instead of four kits of MD #B6216.

Medium, Wide, and Ultra Narrow auger configurations are shown at right. When converting to the Ultra Narrow configuration, existing flightings (A) are removed and new flightings (B) are installed.

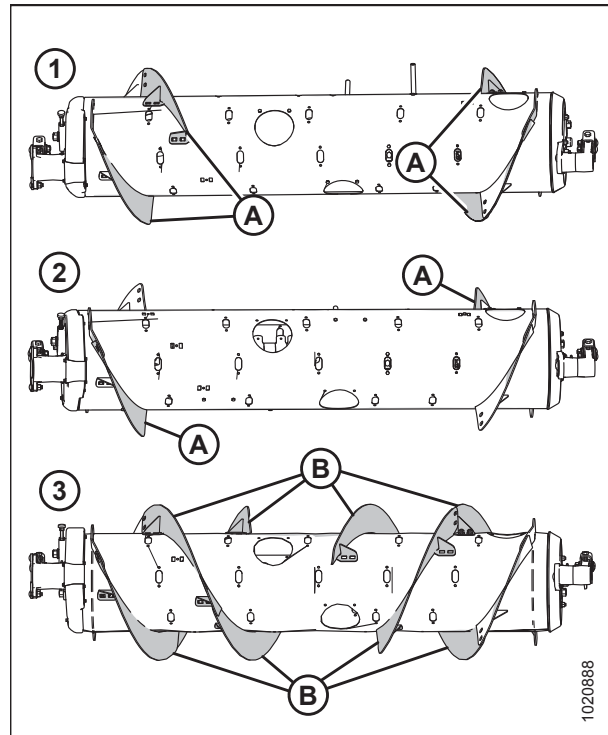


Figure 3.50: Auger Configurations (Rear View)

1 - Medium Configuration 2 - Wide Configuration
3 - Ultra Narrow Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to [4 Header Attachment/Detachment, page 311](#).

NOTE:

Some parts have been removed from the illustrations for clarity.

49. MD #287032 is available for ordering only through MacDon Parts. B6400 and B6216 are available for ordering only through Whole Goods. The first two contain wear-resistant flightings; the third contains regular flightings.

50. MD #287804 is available for ordering only through MacDon Parts. B6400 is available for ordering only through Whole Goods. They contain the same parts.

OPERATION

2. Remove bolts (A) and access cover (B) from the right side of the auger. Retain for reassembly.
3. Remove hardware (C) and bolt-on flighting (D) from the auger.
4. Remove the flighting slot plug (E) located close to the end of the flighting (D).
5. **Converting from Medium configuration:** Repeat above steps for the other bolt-on flighting on the same side.

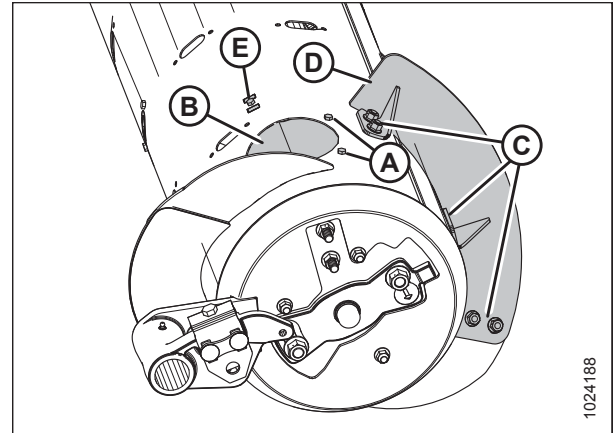


Figure 3.51: Wide Configuration (Right Side)

6. **Converting from Wide configuration:** Remove bolts (A), access cover (B), and two flighting slot plugs (C) from the right side of the auger.
7. Repeat Steps 2, page 75 to 6, page 75 at the left side of the auger.

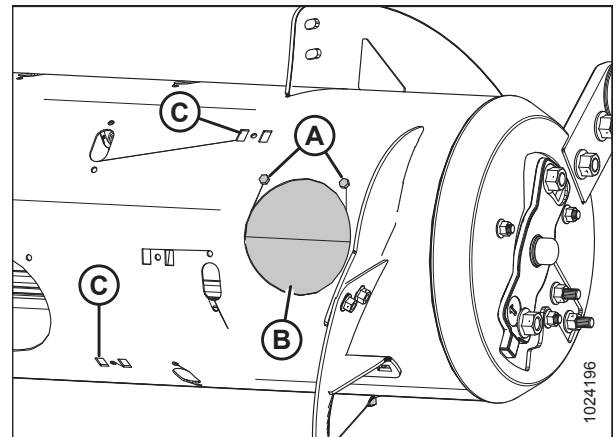


Figure 3.52: Wide Configuration (Right Side)

8. Position two bolt-on flightings (A) on the right side, as shown. Temporarily secure flightings with two carriage head bolts and nuts at each location (B).

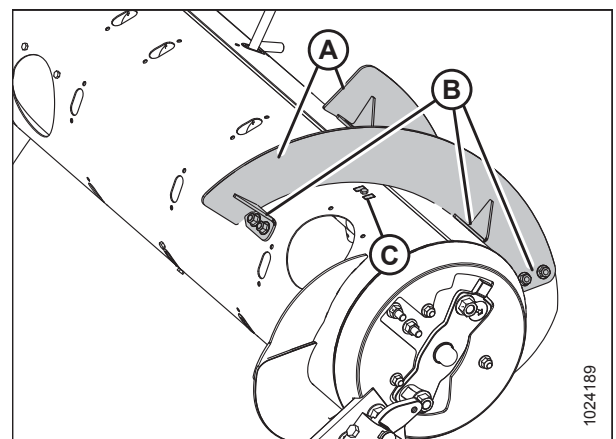


Figure 3.53: Right Side of Auger

OPERATION

9. Position another bolt-on flighting (A) outboard of the temporarily installed flighting (B). Mark hole locations (C) of the bolt-on flighting onto the temporarily installed bolt-on flighting (B).
10. Remove temporarily installed bolt-on flighting (B) from the auger and drill two 11 mm (7/16 in.) holes at the marked locations.
11. Install the bolt-on flighting (B) with newly drilled holes using six carriage head bolts and nuts.

IMPORTANT:

Carriage bolt heads must be installed on inside of auger to prevent damage to internal components.

12. Repeat Steps 9, page 76 to 11, page 76 to the remaining bolt-on flighting on the right side of the auger.
13. Position two bolt-on flightings (A) on the left side, as shown. Temporarily secure flightings with two carriage head bolts and nuts at each location (B).

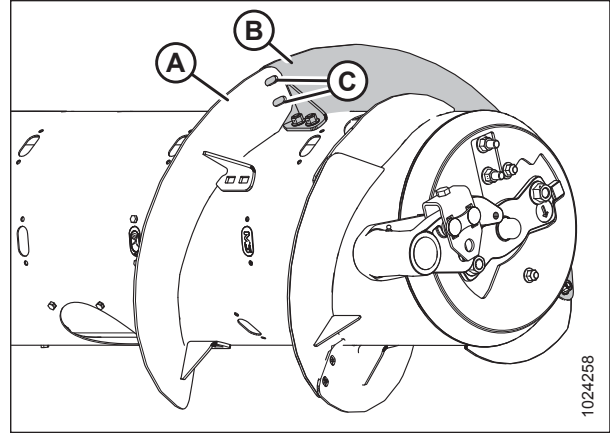


Figure 3.54: Right Side of Auger

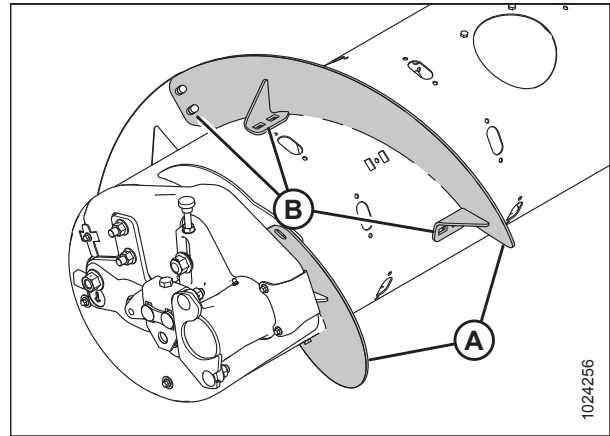


Figure 3.55: Left Side of Auger

14. Position another bolt-on flighting (A) outboard of the temporarily installed flighting (B). Mark hole locations (C) of the bolt-on flighting onto the temporarily installed bolt-on flighting.
15. Remove temporarily installed bolt-on flighting (B) from the auger and drill two 11 mm (7/16 in.) holes at the marked locations.
16. Install the bolt-on flighting (B) with newly drilled holes using six carriage head bolts and nuts.

IMPORTANT:

Carriage bolt heads must be installed on inside of auger to prevent damage to internal components.

17. Repeat Steps 14, page 76 to 16, page 76 to the remaining bolt-on flighting on the left side of the auger.

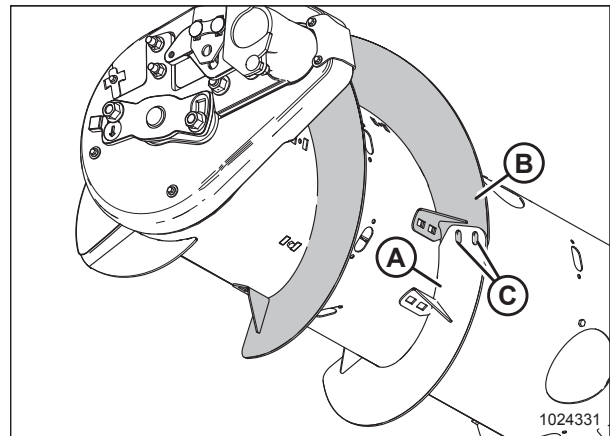


Figure 3.56: Left Side of Auger

OPERATION

18. Place bolt-on flighting (A) outboard of the other flighting (B) on the left side of the auger, as shown.
19. Temporarily secure bolt-on flighting (A) with two button head bolts and nuts at location (C).

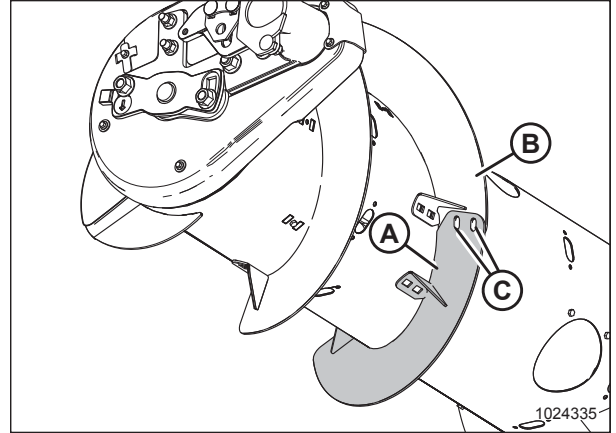


Figure 3.57: Left Side of Auger

20. Stretch flighting (A) to fit auger tube as shown. Use slotted holes on flighting to get the best fit around the auger tube.

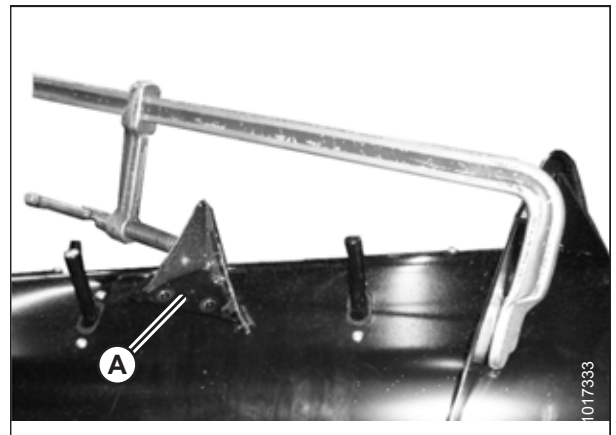


Figure 3.58: Flighting Stretched Axially

21. With flighting in the desired position, mark hole locations (A) on auger tube.
22. Remove the flighting (B) from auger, and drill 11 mm (7/16 in.) holes at the marked locations (A) on auger tube.
23. Remove nearest access cover(s). Retain for reinstallation.
24. Install the bolt-on flighting (B) using two button head bolts and nuts at location (C), and four flange head bolts and nuts at location (A).

IMPORTANT:

Ensure bolt heads at location (C) are on the inboard (crop side) and nuts are on the outboard side of the flighting.

25. Repeat Steps 18, page 77 to 24, page 77 for the remaining flighting on the left side of the auger.

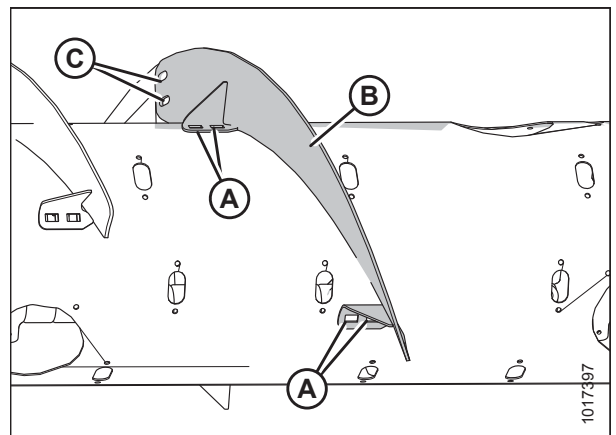


Figure 3.59: Left Side of Auger

OPERATION

26. Place bolt-on flighting (A) outboard of the other flighting (B) on the right side of the auger as shown.
27. Temporarily secure bolt-on flighting (A) with two button head bolts and nuts at location (C).
28. Repeat Steps 20, page 77 to for both pieces of flighting on the right side of the auger.
29. Install flighting slot plugs (MD #213084) in the flighting mounting locations and secure with M6 bolts and tee nuts.
30. Torque all nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on flighting, then retorque them to 58–64 Nm (43–47 lbf·ft).

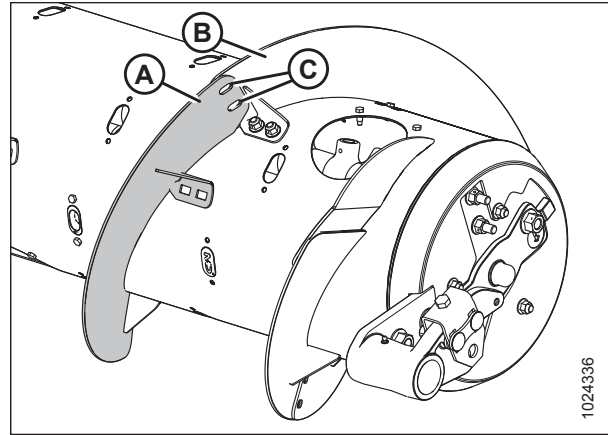


Figure 3.60: Right Side of Auger

NOTE:

Ideally, the flighting should fit tightly against the auger tube; however, gaps are not uncommon. Crop material may collect in these gaps, but generally, this will not affect performance. If desired, you can use silicone sealant to fill these gaps.

31. Add or remove auger fingers to optimize feeding for your combine and crop conditions. Refer to [Installing Feed Auger Fingers, page 412](#) or [Removing Feed Auger Fingers, page 410](#).
32. If not adding or removing auger fingers, reinstall all access covers and secure with bolts. Coat bolts with medium-strength threadlocker (Loctite® 243 or equivalent) and torque to 8.5 Nm (75 lbf·in).

Converting from Narrow Configuration to Ultra Narrow Configuration

Two kits of either MD #287032, B6400, or B6216⁵¹ and some hole-drilling are required to convert to this configuration. Extra hardware is included in these kits. Be sure to use the correct hardware at the correct location to prevent damage and to maximize performance.

NOTE:

A wear-resistant long flighting kit is available for this configuration conversion. This kit includes long tungsten carbide coated flightings that have increased durability for harvesting abrasive crops like rice. If this is required, order two kits of either MD #287032 or B6400⁵² instead of two kits of B6216.

51. MD #287032 is available for ordering only through MacDon Parts. B6400 and B6216 are available for ordering only through Whole Goods. MD #287032 and B6400 contain wear-resistant flightings. B6216 contains regular flightings.

52. MD #287032 is available for ordering only through MacDon Parts. B6400 and B6216 are available for ordering only through Whole Goods.

OPERATION

NOTE:

Additional holes on the auger are needed before these flightings (A) can be installed.

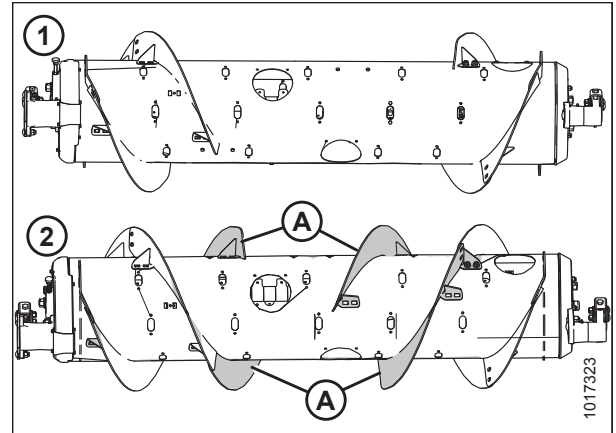


Figure 3.61: Auger Configurations (Rear View)

1 - Narrow Configuration

2 - Ultra Narrow Configuration

1. To improve access and ease installation, remove float module from combine. For instructions, refer to [4 Header Attachment/Detachment, page 311](#).

NOTE:

Some parts have been removed from the illustrations for clarity.

2. Place new bolt-on flighting (A) outboard of the existing flighting (B) on the left side of the auger, as shown.
3. Mark hole locations (C) of the new bolt-on flighting (A) onto existing bolt-on flighting (B).
4. Remove nearest access cover to existing bolt-on flighting (B). Retain hardware for reassembly.
5. Remove existing bolt-on flighting (B) from the auger. Retain hardware for reassembly.
6. Drill two 11 mm (7/16 in.) holes at the marked locations of existing bolt-on flighting (B).
7. Reinstall existing bolt-on flighting (B) on the auger.

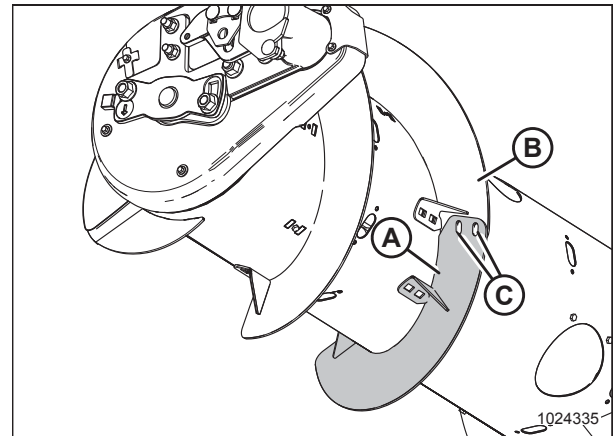


Figure 3.62: Left Side of Auger

NOTE:

Ensure carriage bolt heads are on the inside of the auger to prevent damage to internal components.

OPERATION

8. Place new bolt-on fighting (A) outboard of the existing fighting (B) of the left side of the auger, as shown.
9. Secure with two button head bolts and nuts at location (C).

IMPORTANT:

Ensure bolt heads are on the inboard (crop side) and nuts are on the outboard side of the fighting.

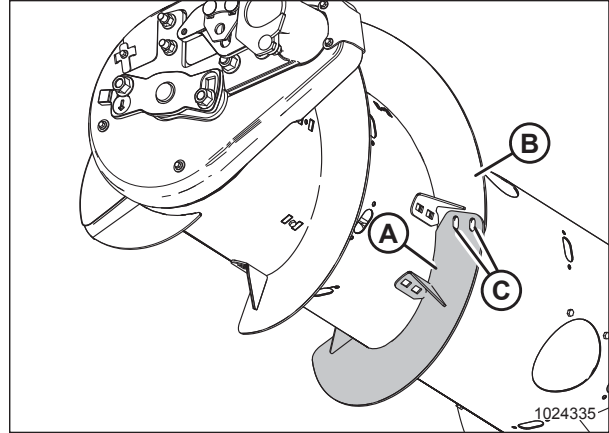


Figure 3.63: Left Side of Auger

10. Stretch fighting (A) to fit auger tube as shown. Use slotted holes on fighting to get the best fit around the auger tube.

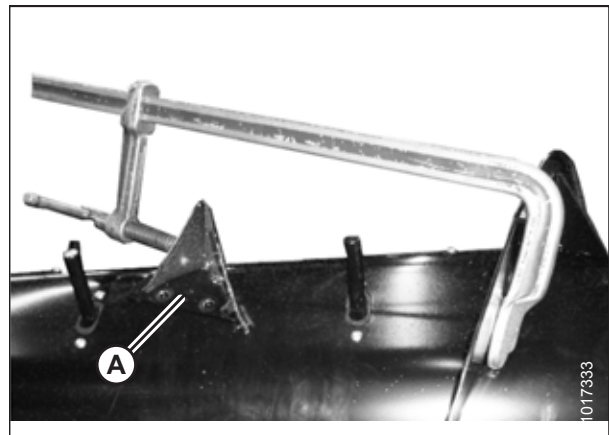


Figure 3.64: Fighting Stretched Axially

11. With fighting in desired position, mark hole locations (A) and drill 11 mm (7/16 in.) holes in auger tube.
12. Remove nearest access cover(s). Retain for reinstallation.
13. Secure bolt-on fighting on the newly drilled holes (A) using four flange head bolts and nuts.
14. Repeat Steps 2, page 79 to 13, page 80 for the other fighting on the left side of the auger.

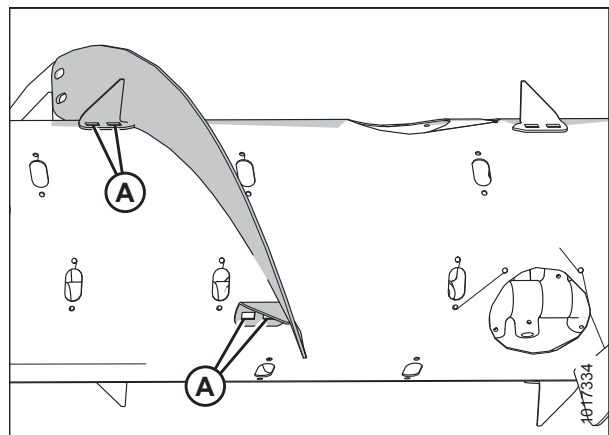


Figure 3.65: Fighting on Left Side of Auger

OPERATION

15. Place flighting (A) outboard of the existing flighting (B) on the right side of the auger, as shown.
16. Repeat Steps 3, [page 79](#) to 13, [page 80](#) for both flightings on the right side of the auger.
17. Install flighting slot plugs (MD #213084) in the flighting mounting locations and secure with M6 bolts (MD #252703) and tee nuts (MD #197263).
18. Torque all nuts and bolts to 47 Nm (35 lbf·ft) to eliminate deflection on flighting, then torque nuts and bolts again to 58–64 Nm (43–47 lbf·ft).

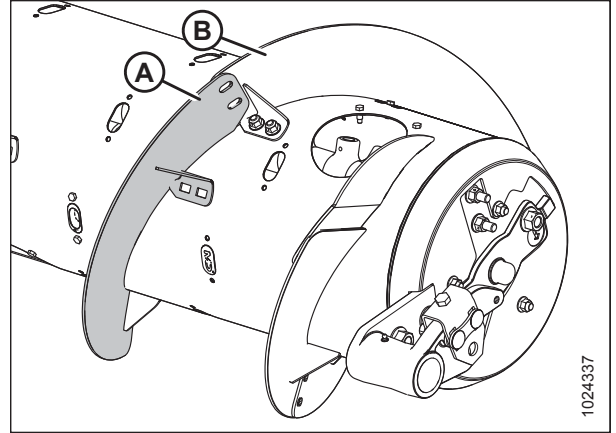


Figure 3.66: Flighting on Right Side of Auger

NOTE:

Ideally, the flighting should fit tightly against the auger tube; however, gaps are not uncommon. Crop material may collect in these gaps, but generally, this will not affect performance. If desired, you can use silicone sealant to fill these gaps.

19. Add or remove auger fingers as necessary to optimize feeding for your combine and crop conditions. Refer to [Installing Feed Auger Fingers, page 412](#) or [Removing Feed Auger Fingers, page 410](#).
20. If not adding or removing auger fingers, reinstall all access covers and secure with bolts. Coat bolts with medium-strength threadlocker (Loctite® 243 or equivalent) and torque to 8.5 Nm (75 lbf·in).

3.7.2 Cutting Height

The header design allows you to cut the crop above the ground in relation to the desired stubble height or to cut the crop at ground level with the header on the ground. Cutting height will vary depending on a range of factors including crop type, crop conditions, etc.

Cutting off the Ground

The header's design allows operators to cut crop above the ground in relation to desired stubble height. The cutting height will vary depending on factors including crop type, crop conditions, etc.

The stabilizer wheel system is designed to minimize bouncing at the header ends and may be used to float the header to achieve an even cutting height when cutting above ground level in cereal grains. The system produces even stubble height and greatly reduces operator fatigue.

Cutting height is controlled using a combination of the combine header height control and a stabilizer wheel system (or stabilizer / slow speed transport wheel system).

The stabilizer wheel system (or stabilizer / slow speed transport wheel system) is available only for 9.1 m (30 ft.), 10.7 m (35 ft.), 12.2 m (40 ft.), and 13.7 m (45 ft.) headers.

If stabilizer wheels are installed, refer to [Adjusting Stabilizer Wheels, page 84](#) to change the wheel position.

If stabilizer / slow speed transport wheels are installed, refer to [Adjusting Stabilizer / Slow Speed Transport Wheels, page 82](#) to change the wheel position.

OPERATION

Adjusting Stabilizer / Slow Speed Transport Wheels

A properly adjusted header will achieve a balance between the amount of header weight carried by the float and the amount carried by the stabilizer / slow speed transport wheels.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Raise the header so the stabilizer wheels are off the ground. Shut down engine and remove the key.
2. Check that the float is working properly. Refer to [Checking and Adjusting Header Float, page 87](#).
3. Remove the hairpin (A) from the latch on the right wheel assembly.
4. Disengage the latch (B), lift the wheel out of the hook, and place on the ground as shown. (This reduces weight of assembly and makes adjusting the wheel position easier.)
5. Lift the left wheel slightly to support the weight, and the pull handle (C) upwards to release the lock.
6. Lift the left wheel to the desired height and engage the support channel into the slot (D) in the upper support.
7. Push down on the handle (C) to lock.
8. Lift the right wheel back into the field position and ensure the latch (B) is engaged.
9. Secure the latch with hairpin (A).
10. Support the wheel weight by lifting slightly with one hand, and pull up on handle (A) to release the lock.
11. Lift the wheels to the desired height, and engage the support channel into the slot (B) in the upper support.
12. Push down on the handle (A) to lock.

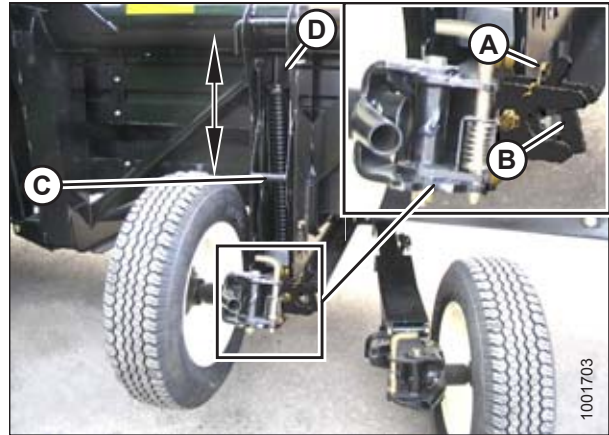


Figure 3.67: Right Wheel

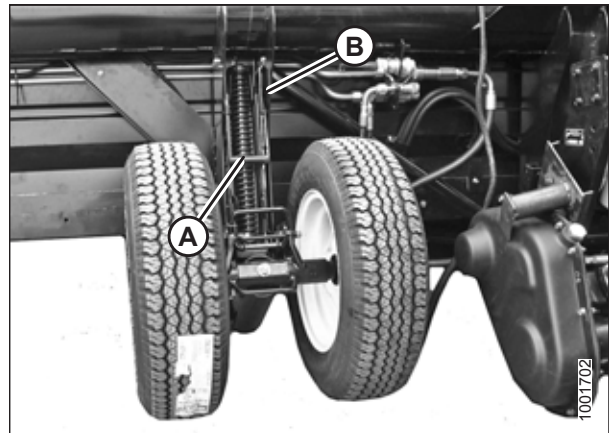


Figure 3.68: Left Wheel

OPERATION

13. Lower the header to the desired cutting height using the combine controls and check the load indicator (A).

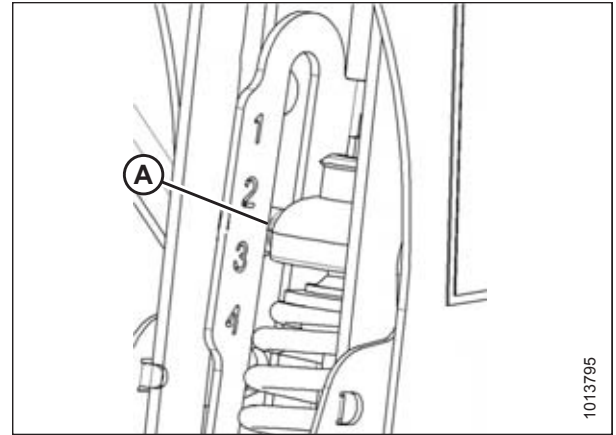


Figure 3.69: Load Indicator

14. Adjust the header angle to the desired working angle with the machine's header angle controls. If header angle is not critical, set it to mid-position.

IMPORTANT:

Continuous operation with excessive spring compression (i.e., load indicator reading greater than 4 or a compressed length [A] less than 295 mm [11-5/8 in.]) can result in damage to the suspension system.

15. Use the combine's auto header height control (AHHC) to automatically maintain cutting height. Refer to [3.8 Auto Header Height Control \(AHHC\)](#), page 139 and your combine operator's manual for details.

NOTE:

The height sensor on the FM100 Float Module must be connected to the combine header control module in the cab.

NOTE:

Header angle adjustments or AHHC ground pressure control may be used to adjust the cutting height while moving.

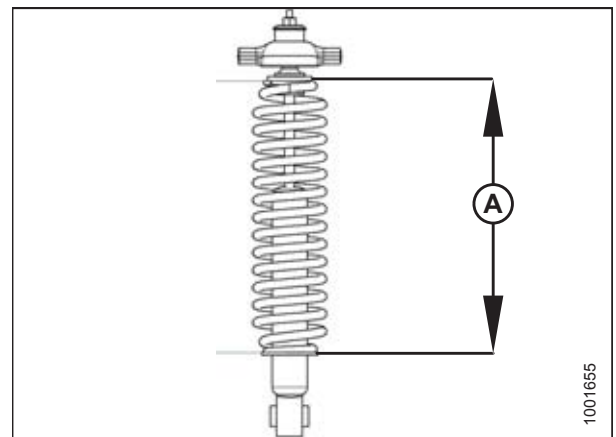


Figure 3.70: Spring Compression

OPERATION

Adjusting Stabilizer Wheels

A properly adjusted header will achieve a balance between the amount of header weight carried by the float and the amount carried by the stabilizer wheels.

Refer to [3.6.2 Header Settings, page 43](#) for recommended use in specific crops and crop conditions.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Raise the header until the stabilizer wheels are off the ground. Shut down engine and remove the key.
2. Check that the float is working properly. Refer to [3.7.3 Header Float, page 87](#).
3. Support the wheel weight by lifting slightly with one hand on handle (B), and pull up on the handle (A) to release the lock.
4. Lift the wheel using handle (B), and engage the support channel into the center slot (C) in the upper support.
5. Push down on the handle (A) to lock.

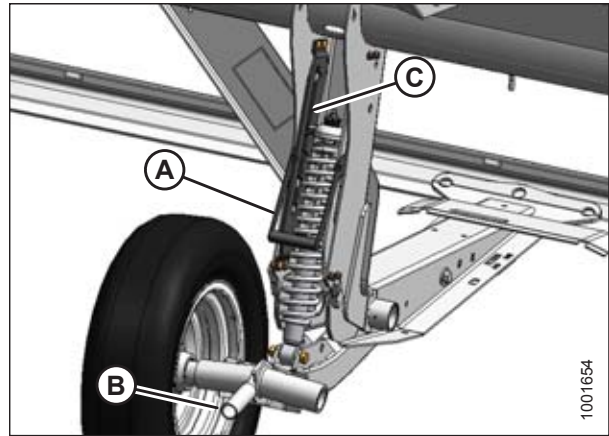


Figure 3.71: Stabilizer Wheel

6. Lower the header to the desired cutting height using the combine controls and check the load indicator (A).

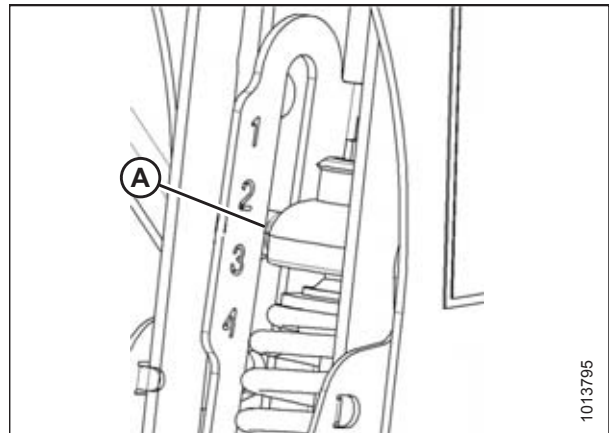


Figure 3.72: Load Indicator

OPERATION

- Adjust the header angle to the desired working angle with the machine's header angle controls. If header angle is not critical, set it to mid-position.

IMPORTANT:

Continuous operation with excessive spring compression (i.e., load indicator reading greater than 4 or a compressed length less than 295 mm [11-5/8 in.]) (A) can result in damage to the suspension system.

- Use the combine's Auto Header Height Control (AHHC) to automatically maintain cutting height. Refer to [3.8 Auto Header Height Control \(AHHC\)](#), page 139 and your combine operator's manual for details.

NOTE:

The height sensor on the FM100 Float Module must be connected to the combine height control system in the cab.

NOTE:

Header angle adjustments or AHHC ground pressure control may be used to adjust the cutting height while moving.

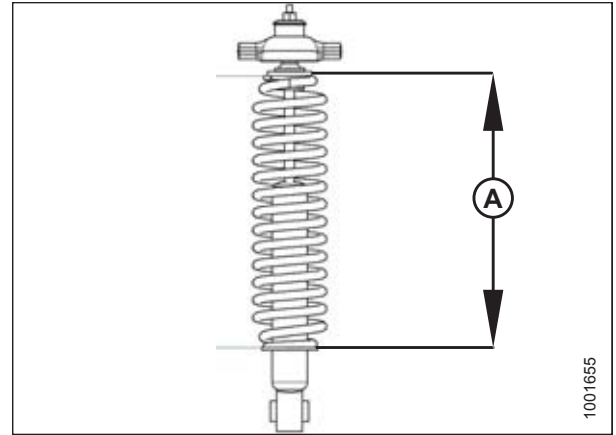


Figure 3.73: Spring Compression

Cutting on the Ground

Header design allows you to cut crop at ground level with the header on the ground. Cutting height will vary depending on what kind of crop, crop conditions, etc.

Cutting on the ground is performed with the header fully lowered and the cutterbar on the ground. The orientation of the knife and knife guards relative to the ground (header angle) is controlled by the skid shoes and the center-link—it is **NOT** controlled by the header lift cylinders. The skid shoes and center-link allow you to adjust to field conditions and maximize the amount of material cut while reducing damage to the knife caused by stones and debris.

The header float system floats the header over the surface to compensate for ridges, trenches, and other variations in ground contour to prevent the cutterbar from pushing into the ground or leaving uncut crop.

Refer to the following for additional information:

- [Adjusting Inner Skid Shoes](#), page 85
- [Adjusting Outer Skid Shoes](#), page 86
- [3.7.4 Header Angle](#), page 94
- [3.7.3 Header Float](#), page 87

Adjusting Inner Skid Shoes



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- Raise header to full height, engage safety props.
- Shut off the engine, and remove key.

OPERATION

3. Raise the stabilizer wheels or slow speed transport wheels fully (if installed). Refer to the following:

- [Adjusting Stabilizer Wheels, page 84](#)
- [Adjusting Stabilizer / Slow Speed Transport Wheels, page 82](#)

4. Remove the lynch pin (A) from each skid shoe.
5. Hold the shoe (B) and remove the pin (C) by disengaging from the frame and pulling away from the shoe.
6. Raise or lower the skid shoe (B) to achieve the desired position using the holes in the support (D) as a guide.
7. Install the pin (C), engage in frame, and secure with lynch pin (A).
8. Check that all of the skid shoes are adjusted to the same position.

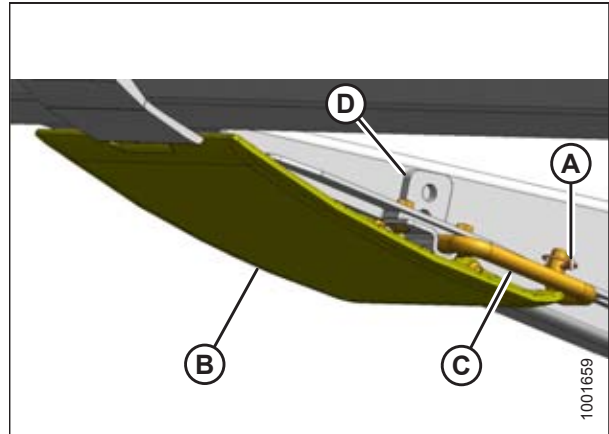


Figure 3.74: Inner Skid Shoe

9. Adjust the header angle to the desired working position using the machine's header angle controls. If the header angle is not critical, set it to the mid-position.
10. Check the header float. Refer to [3.7.3 Header Float, page 87](#).

Adjusting Outer Skid Shoes



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Raise the header to its full height, engage the safety props.
2. Shut off the engine, and remove the key from the ignition.
3. Raise the stabilizer wheels or slow speed transport wheels fully (if installed). Refer to the following:

- [Adjusting Stabilizer Wheels, page 84](#)
- [Adjusting Stabilizer / Slow Speed Transport Wheels, page 82](#)

4. Remove the lynch pin (A) from each skid shoe (B).
5. Hold the shoe (B) and remove the pin (C) by disengaging from the frame and pulling away from the shoe.
6. Raise or lower the skid shoe (B) to achieve the desired position using the holes in the support (D) as a guide.
7. Reinstall pin (C), engage in frame, and secure with lynch pin (A).
8. Check that all of the skid shoes are adjusted to the same position.
9. Check the header float. Refer to [3.7.3 Header Float, page 87](#).

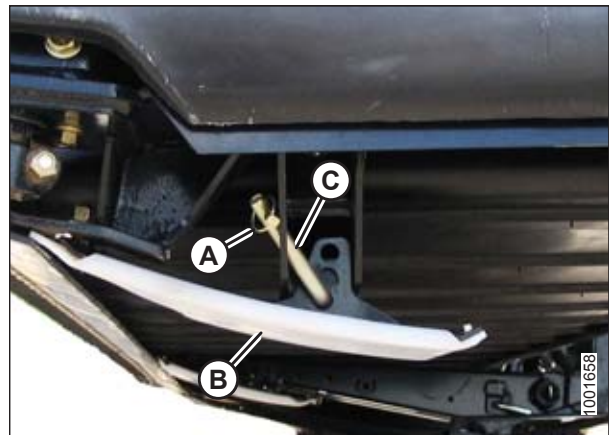


Figure 3.75: Outer Skid Shoe

3.7.3 Header Float

The header float system reduces the ground pressure at the cutterbar allowing the header to more easily follow the ground and quickly respond to sudden ground contour changes or obstacles.

Header float is indicated on the float indicator (A). Values 0 to 4 represent the force of the cutterbar on the ground with 0 being the minimum and 4 being the maximum.

The maximum force is determined by the tension on the float module's adjustable float springs. Float can be changed to suit field and crop conditions and is dependent on what options have been installed on the header. Refer to [Checking and Adjusting Header Float, page 87](#).

The D1 Series combine header performs best with minimum ground pressure under normal conditions. Readjust the float if adding optional attachments to the header that affect header weight.

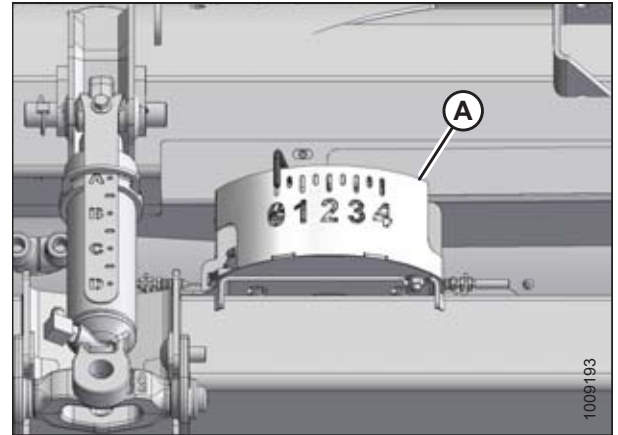


Figure 3.76: Float Indicator

1. Set the float for cutting on the ground as follows:
 - a. Ensure the header float locks are disengaged. Refer to [Locking/Unlocking Header Float, page 93](#).
 - b. Lower feeder house using the combine header controls until the float indicator (A) reaches the desired float value (cutterbar ground force). Set the float indicator initially to float value 2 and adjust as necessary.
2. Set the float for cutting off the ground as follows:
 - a. Set up the stabilizer wheels. Refer to [Cutting off the Ground, page 81](#).
 - b. Note the float value on the float indicator and maintain this value during operation (disregard minor fluctuations on the indicator).

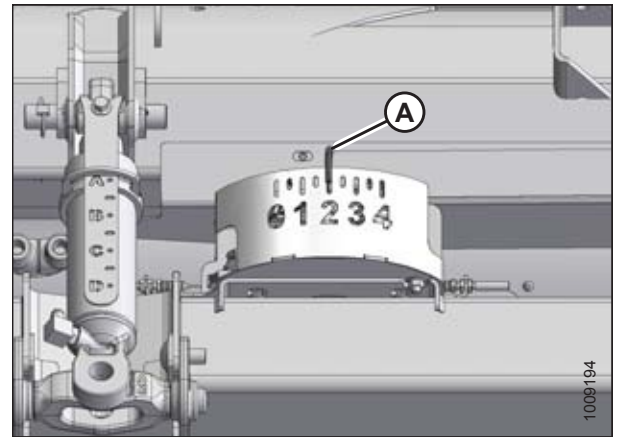


Figure 3.77: Cutting on the Ground

Checking and Adjusting Header Float

The header is equipped with a suspension system that floats the header over the ground to compensate for ridges, trenches, and other variations in ground contour. If the header float is not set properly, it may cause the cutterbar to push into the ground or leave uncut crop. This procedure describes how to check header float and adjust to the factory-recommended settings.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

Use the following guidelines when adjusting float:

- Turn each adjustment bolt pair equally. Refer to Step 12, [page 91](#), and repeat torque wrench reading procedure on both sides of header.

OPERATION

- Set header float as light as possible without causing excessive bouncing to prevent knife component breakage, soil scooping, or soil build-up at the cutterbar in wet conditions.
- To avoid excessive bouncing and leaving a ragged cut, use a slower ground speed with a light float setting, if necessary.
- When cutting off the ground, use the stabilizer wheels in conjunction with header float to minimize bouncing at the header ends and to control cut height. Refer to [Adjusting Stabilizer Wheels, page 84](#).

NOTE:

If adequate header float cannot be achieved using all of the available adjustments, an optional heavy duty spring is available. See your MacDon Dealer or refer to the parts catalog for ordering information.

To check and adjust header float, follow these steps:

1. Level the header and float module. If the header and float module are not level, perform the following checks before adjusting the float:

IMPORTANT:

Do **NOT** use the float module float springs to level the header.

- Park the combine on a level surface.
 - Check that the combine feeder house is level. Refer to your combine operator's manual for instructions.
 - Check that the top of the float module is level with the combine axle.
 - Ensure the combine tires are inflated equally.
2. Adjust header so that the cutterbar is 150–254 mm (6–10 in.) off the ground.
 3. Extend the header angle hydraulic cylinder to between **B** and **C** on indicator (A).
 4. Adjust the reel fore-aft position to between 5 and 6 on the position indicator decal (A) located on the reel right arm.
 5. Lower the reel fully.
 6. Shut down the combine, and remove the key from the ignition.

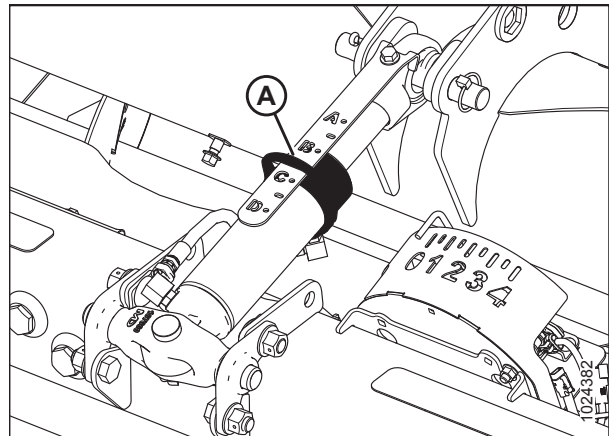


Figure 3.78: Center-Link

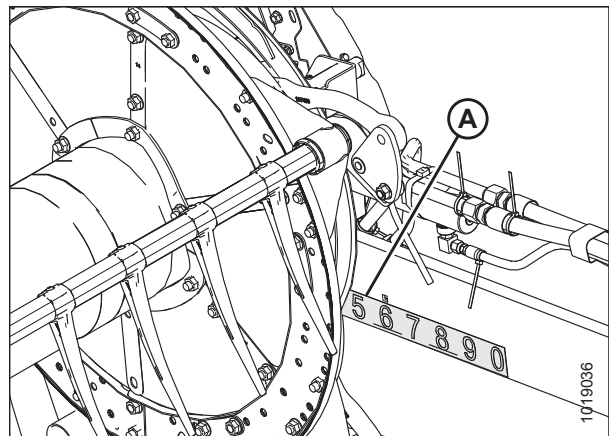


Figure 3.79: Fore-Aft Position

OPERATION

7. Disengage both header float locks by pulling the float lock handle (A) away from the float module and pushing the float lock handle down and into position (B) (**UNLOCK**).

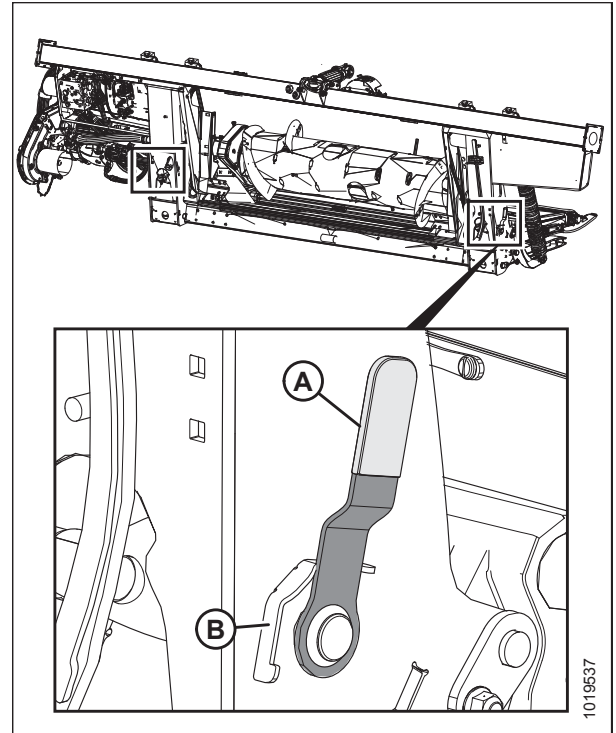


Figure 3.80: Header Float Lock (in Locked Position)

8. Place stabilizer wheels and slow speed transport wheels (if equipped) in storage position as follows:
 - a. Support the wheel weight by lifting slightly with one hand, and pull up on handle (A) to release the lock.
 - b. Lift the wheels to the desired height, and engage the support channel into the slot (B) in the upper support.
 - c. Push down on the handle (A) to lock.

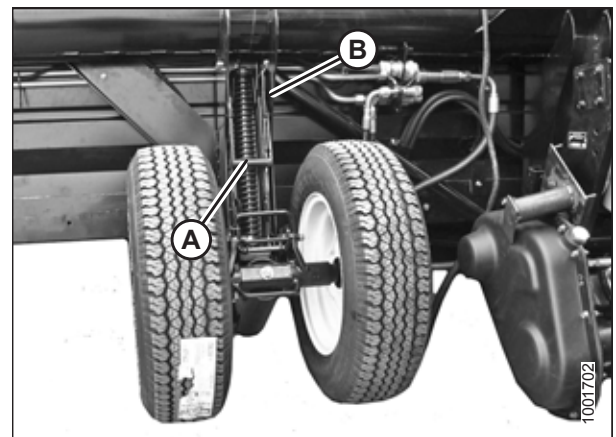


Figure 3.81: Left Wheel

OPERATION

9. Remove the supplied torque wrench (A) from its storage position at the right side of the float module frame. Pull in the direction shown to disengage the wrench from the hook.

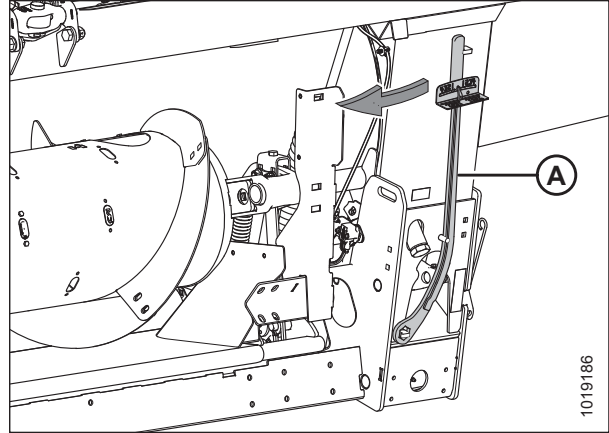


Figure 3.82: Torque Wrench Storage Location

10. Place the torque wrench (A) onto the float lock (B). Note the position of the wrench for checking left or right side.
11. Push down on wrench to rotate bell crank (C) forward.

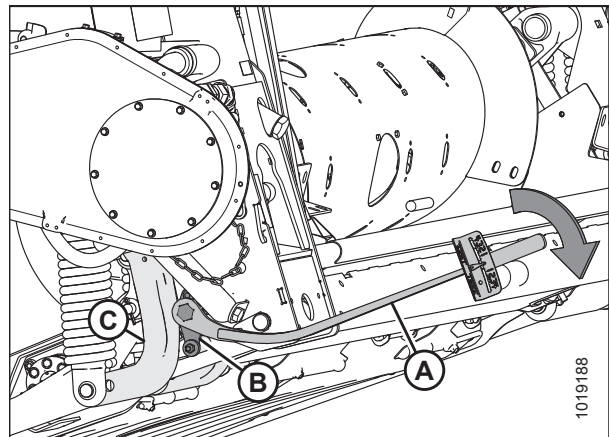


Figure 3.83: Float Module – Left Side

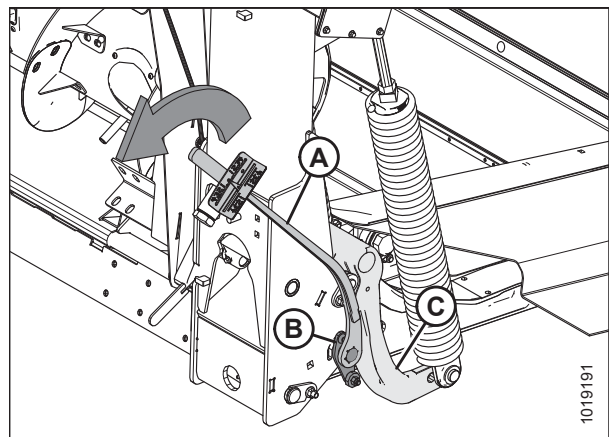


Figure 3.84: Float Module – Right Side

OPERATION

12. Push down on the wrench until indicator (A) reaches a maximum reading and then begins to decrease. Note the maximum reading. Repeat at opposite side.

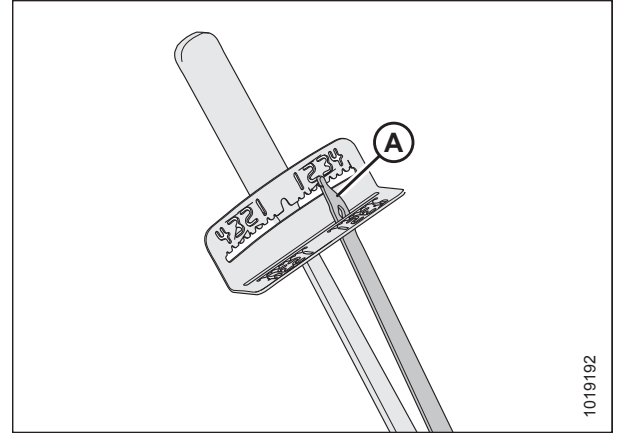


Figure 3.85: Torque Wrench

13. Use the following table as a guide for float settings:
 - If reading on the wrench is high, the header is heavy
 - If reading on the wrench is low, the header is light

Table 3.12 Float Settings

Header Size	Indicator Reading	
	Cutting on the Ground	Cutting off the Ground
6.1 m, 7.6 m, 9.1 m, and 10.7 m (20 ft., 25 ft., 30 ft., and 35 ft.)	1-1/2 to 2	2 to 2-1/2
12.2 m and 13.7 m (40 ft. and 45 ft.)	2 to 2-1/2	2-1/2 to 3

OPERATION

14. Before adjusting the float spring adjustment bolts (A), rotate the spring locks (B) by loosening bolts (C).
15. To increase float (decrease header weight), turn both adjustment bolts (A) on the left side clockwise. Repeat adjustment at opposite side.

NOTE:

Turn each bolt pair equally.

16. To decrease float (increase header weight), turn left side adjustment bolts (A) counterclockwise. Repeat at opposite side.

NOTE:

Turn each bolt pair equally.

17. Adjust the float so the wrench readings are equal on both sides of the header.
18. Lock adjustment bolts (A) with spring locks (B). Ensure bolt heads (A) are engaged in the spring lock cutouts. Tighten bolts (C) to secure spring locks in place.

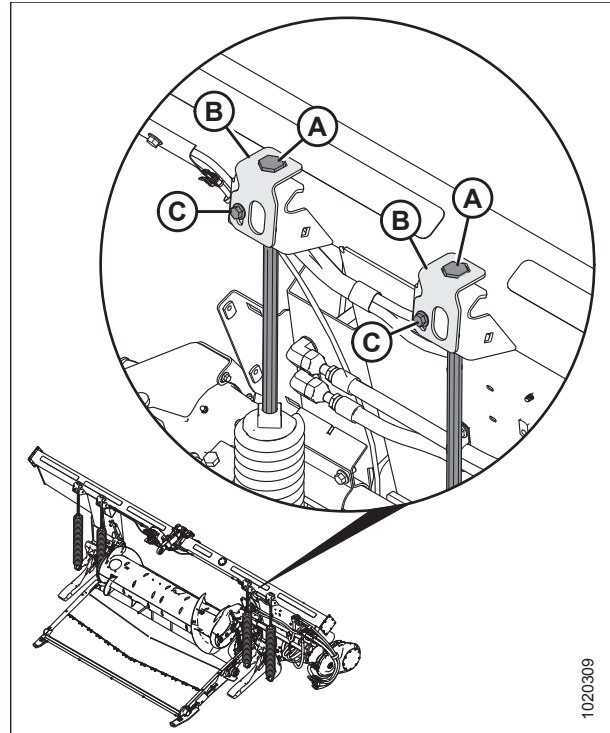


Figure 3.86: Float Adjustment (Left Side Shown)

OPERATION

Locking/Unlocking Header Float

Two header float locks—one on each side of the float module—lock and unlock the header float system.

IMPORTANT:

The float locks must be engaged when the header is being transported with the float module attached so there is no relative movement between the float module and the header. The float locks also must be locked when detaching from the combine to enable the feeder house to release the float module.

To **disengage (unlock) float locks**, pull the float lock handle (A) into position (B) (**UNLOCK**). In this position, the header is unlocked, and can float with respect to the float module.

To **engage (lock) float locks**, push the float lock handle (A) into position (C) (**LOCK**). In this position, the header cannot move with respect to the float module.

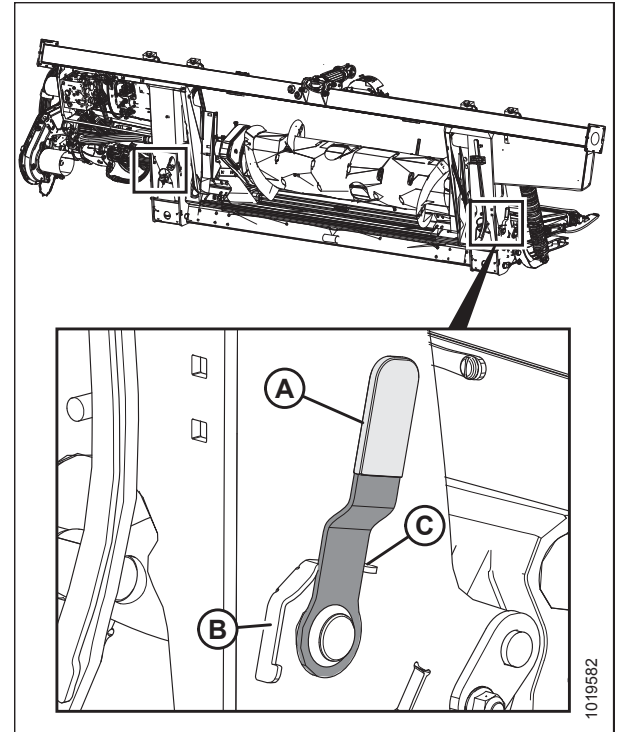


Figure 3.87: Float Lock (in Locked Position)

3.7.4 Header Angle

Header angle is adjustable to accommodate different crop conditions and/or soil types and can be adjusted using the center-link between the combine and the header. Some combines have an adjustable feeder house which provides the operator an alternate method for controlling header angle.

Refer to [Adjusting Header Angle from Combine, page 96](#) for combine-specific adjustment details.

Header angle (A) is the angle between the header and the ground.

The header angle controls the distance (B) between the cutterbar knife and the ground and is a critical component for effective cutting crop at ground level.

Adjusting the header angle pivots the header at the point of skid shoe/ground contact (C).

Guard angle (D) is the angle between the upper surface of the cutterbar guards and the ground.

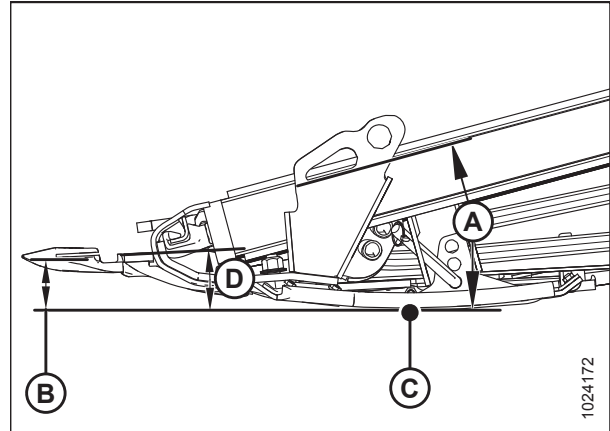


Figure 3.88: Header Angle

1. Set the header angle according to the type and condition of crop and soil as follows:
 - a. Use shallower settings (A) (position **A** on the indicator) for normal cutting conditions and wet soil to reduce soil build-up at the cutterbar. Shallow angle settings also minimize damage to the knife in stony fields.
 - b. Use steeper settings (D) (position **D** on the indicator) for lodged crops and crops that are close to the ground such as soybeans.

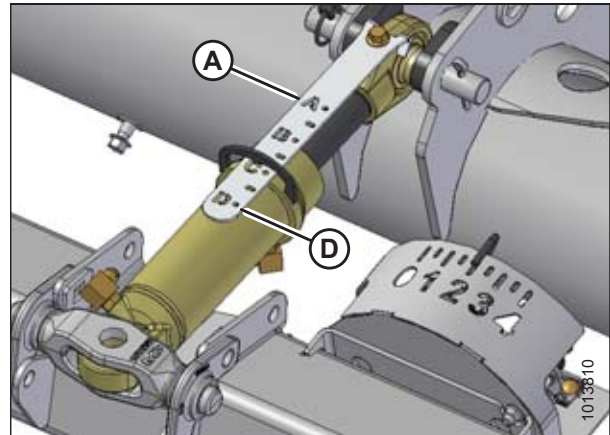


Figure 3.89: Center-Link

The shallowest angle (A) (center-link fully retracted) produces the highest stubble when cutting on the ground.

The steepest angle (D) (center-link fully extended) produces the lowest stubble when cutting on the ground.

Choose an angle that maximizes performance for your crop and field conditions. Refer to the table below for a summary of adjustment ranges.

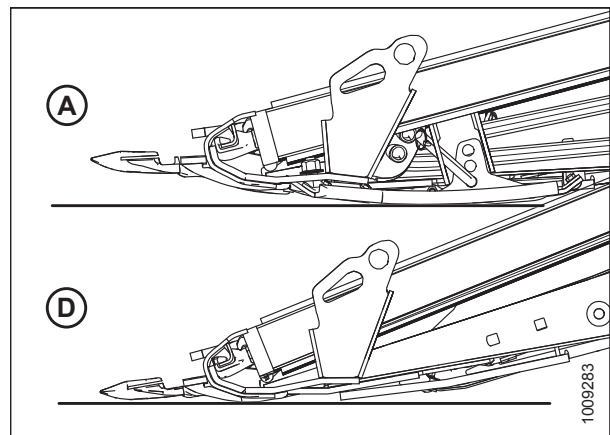


Figure 3.90: Guard Angles

OPERATION

Table 3.13 D1 Header Angle

Header Size	Guard Angle
6.1 and 7.6 m (20 and 25 ft.)	7.0–12.4°
9.1–13.7 m (30–45 ft.)	2.0–7.4°

Refer to [3.6.2 Header Settings, page 43](#) for recommended header/guard angle settings for your particular crop conditions.

OPERATION

Adjusting Header Angle from Combine

The header/guard angle is adjusted from the combine cab with a switch on the operator's control handle and an indicator on the center-link or on the monitor in the cab. The header/guard angle is determined by the length of the center-link between the combine float module and the header, or by tilting the feeder house on selected combines.

Case combines:

Case combines use control handle switches to adjust the center-link to change header angle.

1. Press and hold SHIFT button (A) on backside of control handle and press switch (B) to tilt header forward or press switch (C) to tilt the header back.



Figure 3.91: Case Controls



Figure 3.92: Case Controls

OPERATION

New Holland combines:

New Holland combines use control handle switches to adjust the center-link to change header angle.

1. Press and hold SHIFT button (A) on backside of control handle and press switch (B) to tilt header forward (steeper angle) or switch (C) to tilt header back (shallower angle).

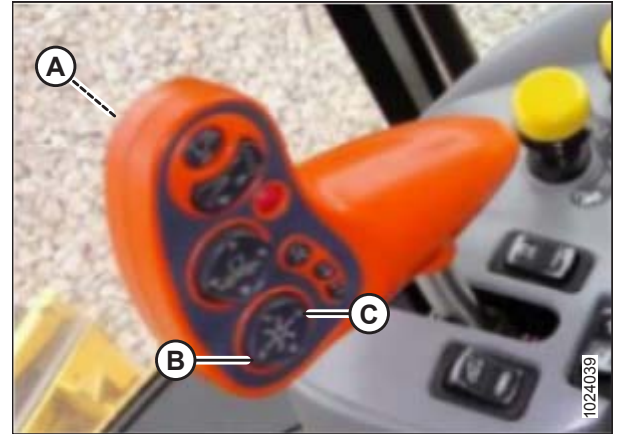


Figure 3.93: NH CR/CX Controls

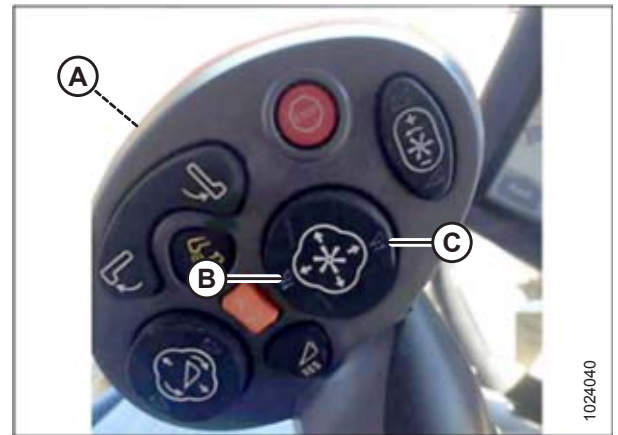


Figure 3.94: NH CR/CX Controls

AGCO combines:

AGCO combines use a combination of the reel fore-aft switches on the control handle and a dealer-installed auxiliary rocker switch which toggles between reel fore-aft and header tilt functionality. The location of the rocker switch varies with combine model.

OPERATION

1. **Gleaner A only:** Open armrest cover (A) (Gleaner A only) to expose row of switches, and press dealer-installed rocker switch (B) to HEADER TILT position.

NOTE:

Gleaner A shown. Other AGCO combine models have rocker switch on the console (not shown).

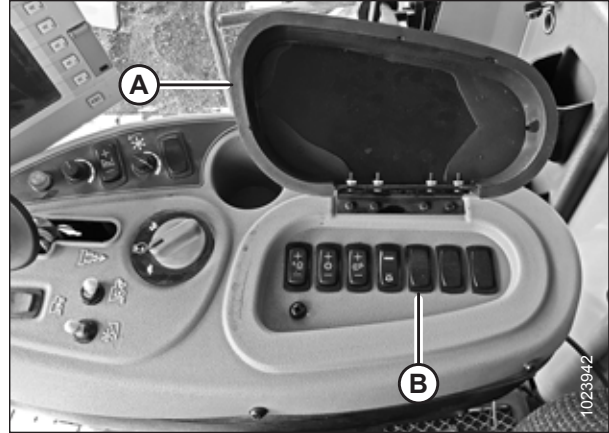


Figure 3.95: Gleaner A Console

2. Press button (A) on control handle to tilt header forward (steeper angle) or button (B) to tilt header back (shallower angle).



Figure 3.96: Gleaner Controls

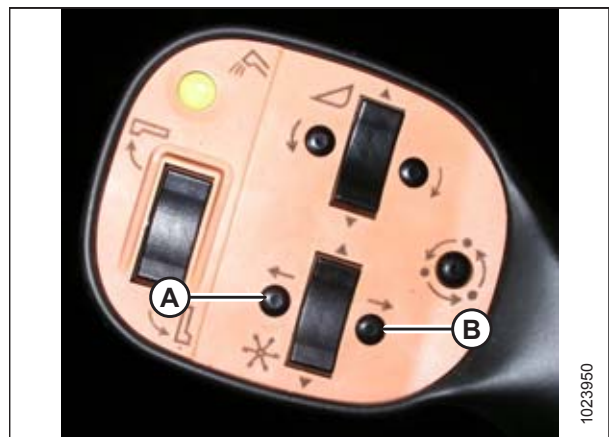


Figure 3.97: Gleaner Controls

OPERATION



Figure 3.98: Challenger/Massey Controls

CLAAS combines:

CLAAS (with factory-installed fore-aft / header tilt switch): Newer CLAAS combines use a combination of the reel fore-aft switches on the control handle and a factory-installed auxiliary rocker switch which toggles between reel fore-aft and header tilt functionality.

1. Press HOTKEY switch (A) on operator's console to deck plate position (the header icon [B] with the arrows pointing to each other).

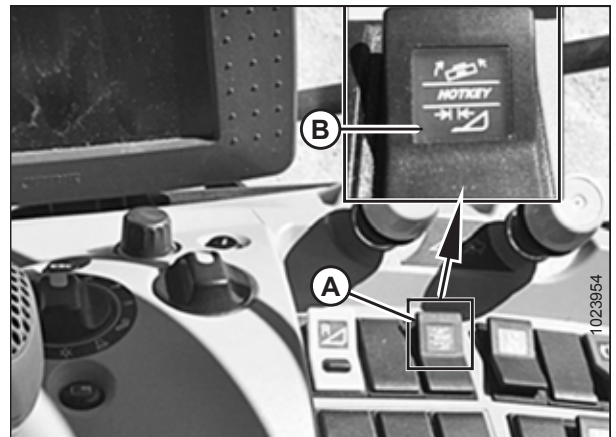


Figure 3.99: CLAAS 700 Console

OPERATION

2. Press and hold switch (A) on rear of control handle.
3. Press switch (C) to tilt header forward (steeper angle) or switch (B) to tilt header back (shallower angle).

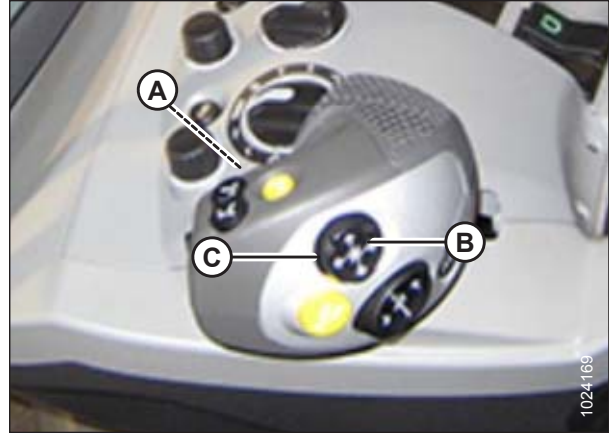


Figure 3.100: CLAAS 600/700 Control Handle



Figure 3.101: CLAAS 500 Control Handle

John Deere combines:

John Deere S700: S700 Series combines use a feeder house deckplate tilting system for header fore-aft adjustment, instead of using the MacDon center-link for header tilt.

1. Press switch (A) to tilt header forward (steeper angle) or switch (B) to tilt header back (shallower angle).



Figure 3.102: John Deere 700 Control

OPERATION

John Deere (except S700 Series): John Deere combines use a combination of the reel fore-aft switches on the control handle and a dealer-installed auxiliary rocker switch which toggles between reel fore-aft and header tilt functionality.

1. Press reel fore-aft / header tilt switch (A) on console into HEADER TILT position.

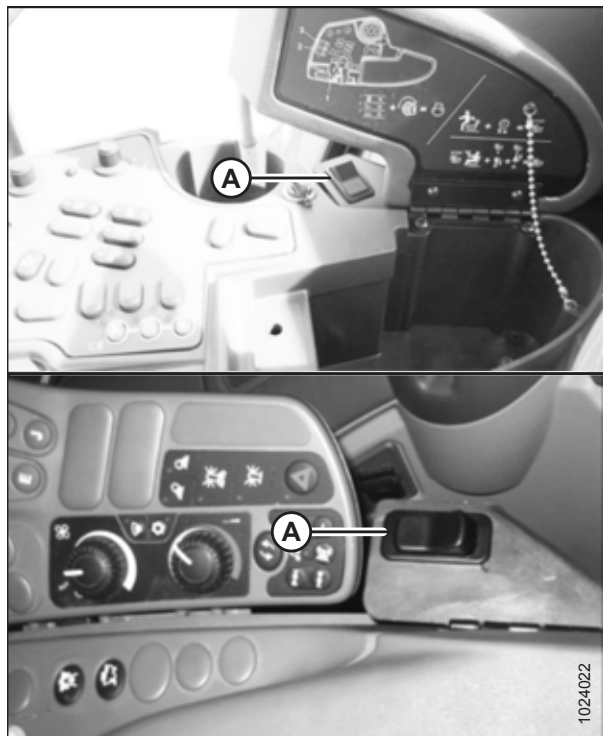


Figure 3.103: John Deere Consoles

2. Press switch (A) to tilt header forward (steeper angle) or switch (B) to tilt header back (shallower angle).



Figure 3.104: John Deere Control Handle

Versatile combines:

Versatile combines use a combination of the reel fore-aft switches on the control handle and a factory-installed auxiliary rocker switch on the combine control console which toggles between reel fore-aft and header tilt functionality.

OPERATION

1. Press ON switch (A) on console to place controls in HEADER TILT mode.
2. Press button (B) on control handle to tilt header forward (steeper angle) or button (C) to tilt header back (shallower angle).

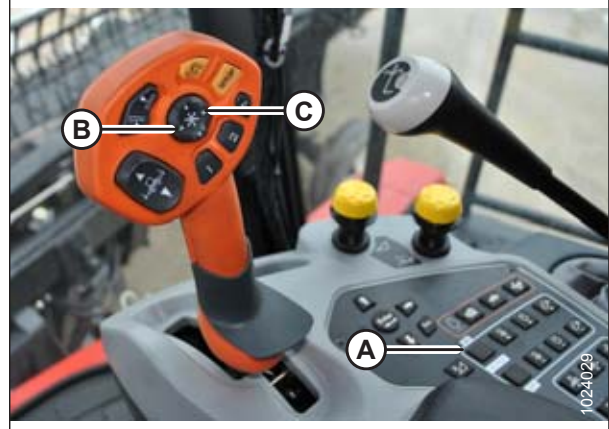


Figure 3.105: Versatile Control Handle and Console

3.7.5 Reel Speed

Reel speed is one of the factors that determines how crop is moved from the cutterbar onto the drapers.

The reel performs best when it appears to be driven by the ground. It should move the cut crop evenly through the cutterbar and onto the drapers without bunching and with minimal disturbance.

In standing crop, reel speed should be slightly higher than, or equal to, ground speed.

In flattened crop or crop that is leaning away from the cutterbar, the reel speed needs to be higher than the ground speed. To achieve this, either increase the reel speed or decrease the ground speed.

Excessive shattering of grain heads or crop loss over the header backtube may indicate that the reel speed is too high. Excessive reel speed also increases reel component wear and overloads the reel drive.

Slower reel speeds can be used with nine-bat reels, which is advantageous in shatter-prone crops.

NOTE:

Nine-bat reels are available on 6.1 m and 7.6 m (20 ft. and 25 ft.) headers from the factory. A conversion kit to change from a six-bat reel to a nine-bat reel is available for these headers.

For recommended reel speeds in specific crops and conditions, refer to [3.6.2 Header Settings, page 43](#).

The reel speed is adjustable using the controls in the combine cab. Refer to your combine operator's manual for adjustment details.

OPERATION

Optional Reel Drive Sprockets

Optional reel drive sprockets for use in special crop conditions are available as an alternative to the factory-installed sprocket.

The header is factory-equipped with a 19-tooth reel drive sprocket which is suitable for most crops. Other sprockets are available that provide more torque to the reel in heavy cutting conditions or allow for higher reel speeds in light crops when operating at increased ground speeds. Refer to Table 3.14, page 103, and contact your MacDon Dealer for ordering information.

Table 3.14 Optional Reel Drive Sprockets

Machine Hydraulics	Combine	Application	Optional Drive Sprocket
13.79–14.48 MPa (2000–2100 psi)	Gleaner Transverse Rotary	Combining down rice	10 tooth
17.24 MPa (2500 psi)	CLAAS 500, 700 Series, Challenger Axial Rotary	Combining down rice	12 tooth
20.68 MPa (3000 psi)	NH CR, CX, Case IH 7010, 8010, 7120, 8120, 88 Series	Combining down rice	14 tooth
Low flow (under 42 L/min [11 gpm])	—	Combining light crops above 16 km/hr (10 mph)	21 tooth

For installation details, refer to [5.14.3 Reel Drive Sprocket, page 526](#).

3.7.6 Ground Speed

Operating at the proper ground speed will result in cleanly cut crops and evenly distributed material into the combine.

Reduce ground speed in difficult cutting conditions to reduce loads on cutting components and drives.


Use lower ground speeds in very light crops (e.g., short soybeans) to allow the reel to pull in short plants. Start at 4.8–5.8 km/h (3.0–3.5 mph) and adjust as required.

Higher ground speeds may require heavier float settings to prevent excessive bouncing that causes uneven cutting and possible damage to the cutting components. If ground speed is increased, draper and reel speeds should generally be increased to handle the extra material.

Figure 3.106, page 104 illustrates the relationship between ground speed and area cut for the various sized headers.

OPERATION

Figure 3.106: Ground Speed versus Acres

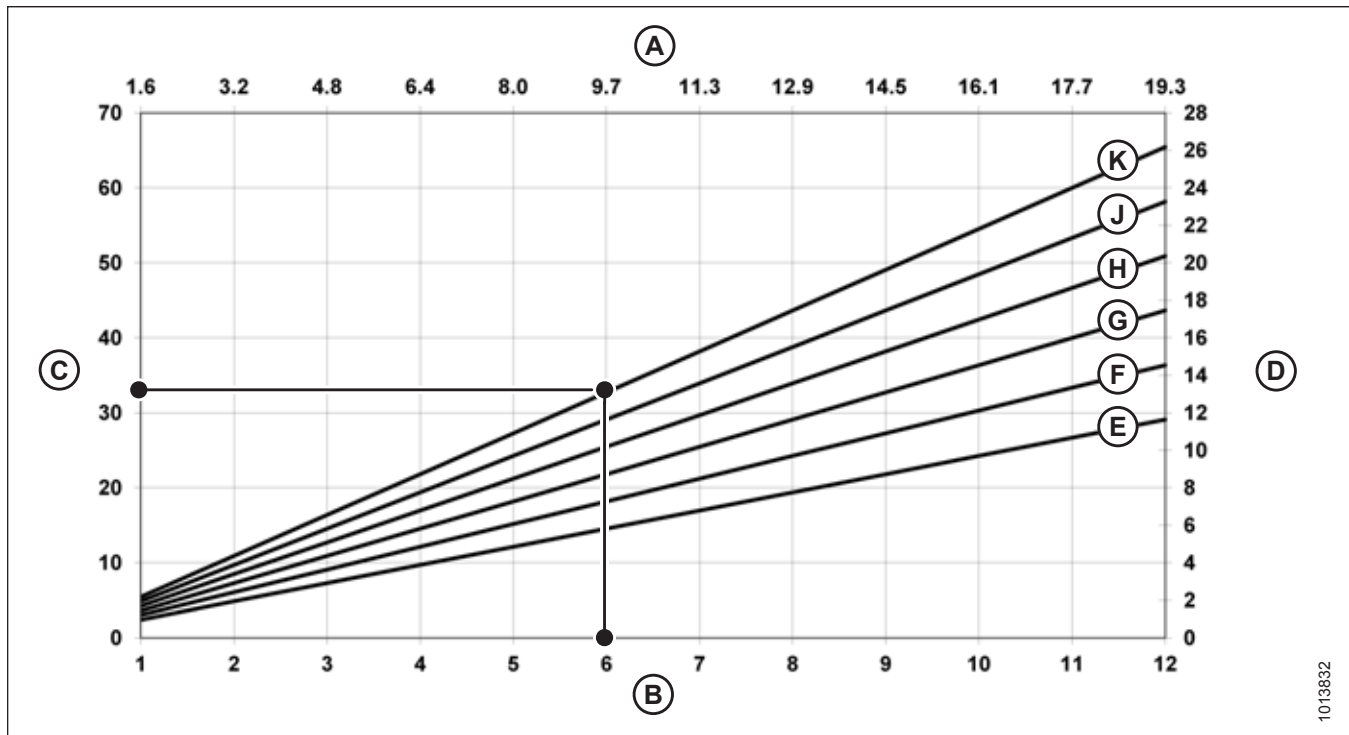

A - Kilometers/Hour

B - Miles/Hour

C - Acres/Hour

D - Hectares/Hour

E - 6.1 m (20 ft.)

F - 7.6 m (25 ft.)

G - 9.1 m (30 ft.)

H - 10.6 m (35 ft.)

J - 12.2 m (40 ft.)

K - 13.7 m (45 ft.)

Example: A 13.7 m (45 ft.) header operating at a ground speed of 9.7 km/h (6 mph) would produce a cut area of approximately 13.4 hectares (33 acres) in one hour.

3.7.7 Draper Speed

Correct draper speed is an important factor for achieving good flow of the cut crop away from the cutterbar.

The side drapers and feed draper operate independently of each other; therefore, the speeds are controlled differently. The side draper speed is adjusted with a manually adjustable control valve that is mounted on the float module. The float module feed draper speed is fixed to the combine feeder house speed and cannot be independently adjusted.

Adjust the draper speed to achieve efficient crop feeding onto the float module feed draper. Refer to [Adjusting Header Draper Speed, page 105](#).

OPERATION

Adjusting Header Draper Speed

The side drapers carry the cut crop to the float module feed draper which then feeds it into the combine. The speed is adjustable to suit crops and crop conditions.

The side drapers (A) are driven by hydraulic motors and a pump that is powered by the combine feeder house drive through a gearbox on the float module. Side draper speed is adjustable with the flow control valve on the float module which regulates the flow to the draper hydraulic motors. Draper speed is also adjustable with an optional control in the cab. See below.

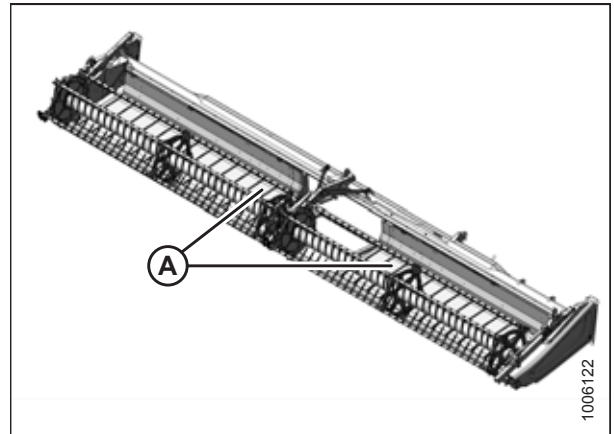


Figure 3.107: Side Drapers

To access the flow control valve, pull bottom of compartment cover (A) to open.

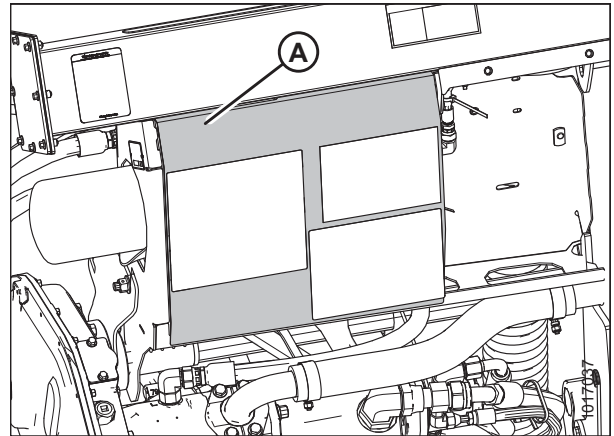


Figure 3.108: Hydraulic Compartment Cover

The flow control valve (A) has settings from 0–9 on the barrel to indicate the draper speed. The flow control valve is factory-set to 6 which should be sufficient for normal crop feeding.

To change the draper speed, shut down the combine and rotate the flow control valve dial to adjust the control.

Refer to one of the following for recommended draper speed settings:

- [3.6.2 Header Settings, page 43](#)
- [3.6.3 Optimizing Header for Straight Combining Canola, page 54](#)

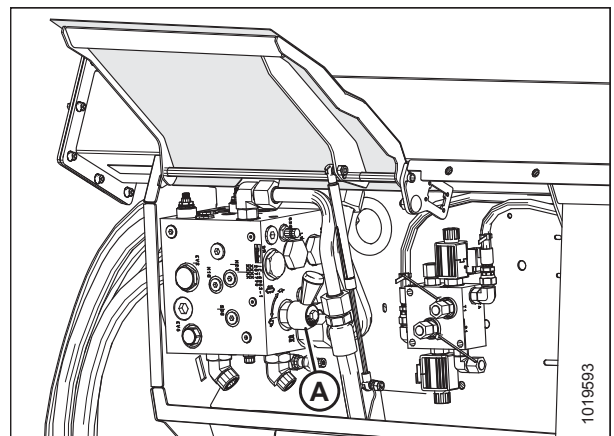


Figure 3.109: Flow Control Valve (Parts Removed for Clarity)

OPERATION

If the optional in-cab side draper speed control kit is installed, rotate the knob (A) to the desired setting with the header in either operating or shutdown mode. Set the knob to 6 for normal crop delivery. Switch (B) activates the header tilt or reel fore-aft controls. Refer to [Adjusting Header Angle from Combine, page 96](#).

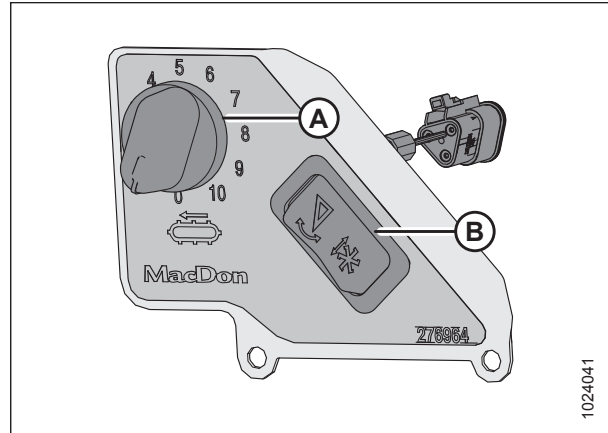


Figure 3.110: In-Cab Side Draper Speed Control

Feed Draper Speed

The feed draper moves the cut crop from the side drapers into the float module feed auger.

The float module feed draper (A) is driven by a hydraulic motor and a pump that is powered by the combine feeder house drive through a gearbox on the float module.

The feed draper speed is determined by the combine feeder house speed and cannot be independently adjusted.

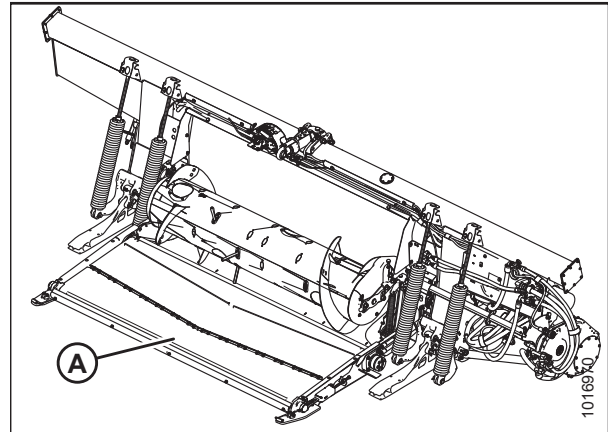


Figure 3.111: FM100 Float Module

3.7.8 Knife Speed Data

The header knife drive is powered by the FM100 hydraulic pump which is driven by the combine feeder house. There is no separate adjustment to control the knife speed.

IMPORTANT:

For variable speed feeder houses, the rpm values shown at right represent the MINIMUM feeder house speeds.

Table 3.15 Feeder House Speed

Combine	Feeder House Speed (rpm)
John Deere	490
Case IH	580
Gleaner	625
Massey Ferguson	625
Challenger	625
New Holland	580
CLAAS ⁵³	420

IMPORTANT:

Ensure the knife speed is within the range of rpm values in Table 3.16, page 107. Refer to *Checking Knife Speed*, page 108.

IMPORTANT:

Under normal cutting conditions, knife speed taken at the knife drive pulley should be set between 600–640 rpm (1200–1280 spm). If set to low side of chart, you could experience knife stalling.

Table 3.16 D1 Header Knife Speed

Header Size m (ft.)	Recommended Knife Drive Speed Range (rpm)	
	Single-Knife Drive	Double-Knife Drive
7.6 m (25 ft.)	600–725	700–850 ⁵⁴
9.1 m (30 ft.)	600–700	600–750 ⁵⁴
12.1 m (35 ft.)	550–650	600–750 ⁵⁴
12.2 m (40 ft.)	525–600	550–700
13.7 m (45 ft.)	—	550–700

53. The rear shaft speed on CLAAS combines is 420 rpm (speed shown on cab display monitor also will be 420). The output shaft speed is actually 750 rpm.

54. Only available on windrower configured headers.

Checking Knife Speed

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Stop the engine, and remove the key from the ignition.
2. Open the left endshield (A). Refer to [Opening Endshields, page 35](#).



Figure 3.112: Left Endshield

WARNING

Check to be sure all bystanders have cleared the area.

3. Start the engine, engage the header drive, and run the combine at operating rpm.
4. Run float module and header for 10 minutes to warm up oil to 38°C (100°F).
5. Measure the rpm of the knife drive box pulley (A) with a hand-held tachometer.
6. Shut down the combine.
7. Compare pulley rpm measurement with the rpm values in the knife speed chart. Refer to [3.7.8 Knife Speed Data, page 107](#).
8. Contact your MacDon Dealer if the pulley rpm measurement exceeds the specified rpm range for your header.

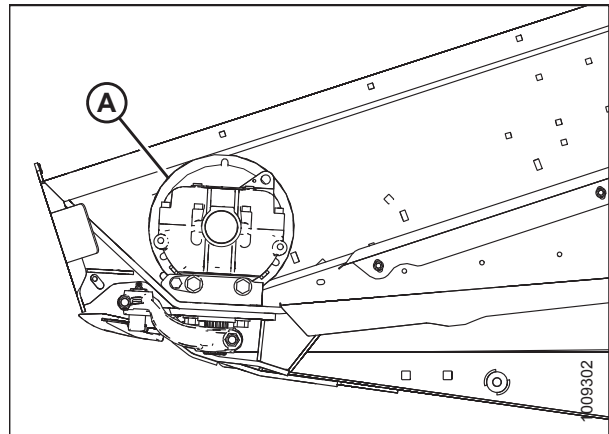


Figure 3.113: Knife Drive Pulley

3.7.9 Reel Height

The reel operating position depends on the type of crop and cutting conditions. Set the reel height and fore-aft position to carry material past the knife and onto the drapers with minimal damage to the crop. Refer to [3.7.10 Reel Fore-Aft Position, page 114](#).

The reel height is controlled manually with switches in the combine cab, or with button presets on the ground speed lever (GSL). Refer to your combine operator's manual for instructions on controlling reel height or setting up auto reel height presets. Where applicable, this manual contains instructions for presetting reel height on selected combines. Refer to [3.8 Auto Header Height Control \(AHHC\), page 139](#).

Table 3.17 Reel Height

Crop Condition	Reel Position
Lodged rice	Lowered (also change reel speed and/or cam setting)
Bushy or heavy standing (all)	Raised

The following conditions might result if the reel is set too low:

- Crop loss over the header backtube
- Crop disturbance on the drapers caused by the reel fingers
- Crop being pushed down by the tine tubes

The following conditions might result if the reel is set too high:

- Cutterbar plugging
- Crop lodging and being left uncut
- Grain stalks dropping ahead of cutterbar

Refer to [3.6.2 Header Settings, page 43](#) for recommended reel heights for specific crops and crop conditions.

IMPORTANT:

Maintain adequate clearance to prevent fingers contacting the knife or the ground. Refer to [5.13.1 Reel Clearance to Cutterbar, page 494](#).

Checking and Adjusting Reel Height Sensor

The output voltage range of the auto reel height sensor can be checked from inside the combine or manually at the sensor. For in-cab instructions, refer to the combine operator's manual. To check the voltage range manually, refer to the following procedure.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Ensure minimum reel height is properly set before adjusting reel height sensor. Refer to [5.13.1 Reel Clearance to Cutterbar, page 494](#).

IMPORTANT:

To measure the output voltage of the reel height sensor, the combine engine needs to be running and supplying power to the sensor. Always engage the combine parking brake and stay away from the reel.

Table 3.18 Reel Height Sensor Voltage Limits

Combine Type	Voltage Range	
	X Voltage	Y Voltage
Case/New Holland	0.5–0.9 V	4.1–4.5 V
John Deere	4.1–4.5 V	0.5–0.9 V
CLAAS	4.1–4.5 V	0.5–0.9 V

NOTE:

For CLAAS combines: To avoid a collision of the reel with the cab, the machine is equipped with an automatic reel height limitation. Some CLAAS combines have an automatic shutoff feature that engages when the automatic reel height limitation is reached. When raising the header by more than 80 percent, the reel is automatically lowered. The automatic lowering of the reel can be manually overridden, and a warning will appear on the CEBIS terminal.

1. Engage the combine parking brake.
2. Start engine and lower reel fully.
3. Use the combine display or a voltmeter (if measuring the sensor manually) to measure voltage range **Y**. Refer to Table [3.18, page 110](#) for range requirements.
4. If using a voltmeter, measure the voltage between the ground (Pin 2 wire) and the signal (Pin 3 wire) at the reel height sensor (B).
5. Stop the engine and remove key.
6. Adjust length of threaded rod (A) to modify voltage range **Y**.
7. Repeat checking and adjusting until voltage range **Y** is within the range specified.

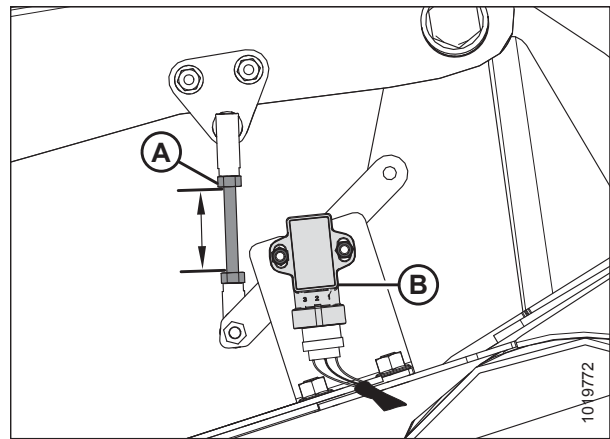


Figure 3.114: Reel Height Sensor – Right Reel Arm (Reel Down)

OPERATION

8. Start engine, and raise the reel fully.
9. Use the combine display or a voltmeter (if measuring the sensor manually), to measure voltage range **X**. Refer to Table 3.18, page 110 for range requirements.
10. If using a voltmeter, measure the voltage between the ground (Pin 2 wire) and the signal (Pin 3 wire) at the reel height sensor (A).
11. Stop the engine and remove key.
12. Loosen two M5 hex nuts (B) and rotate sensor (A) to achieve voltage range **X**.
13. Repeat checking and adjusting until voltage range **X** is within the range specified.
14. Start the engine and lower reel fully.
15. Recheck voltage range **Y** and ensure it is still within the range specified. Adjust if required.

Replacing Reel Height Sensor

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Start engine and lower reel fully.
2. Stop engine and remove key.
3. Disconnect sensor from harness.
4. Remove two hex head bolts (A) from sensor arm (B). Retain hardware for reinstallation.

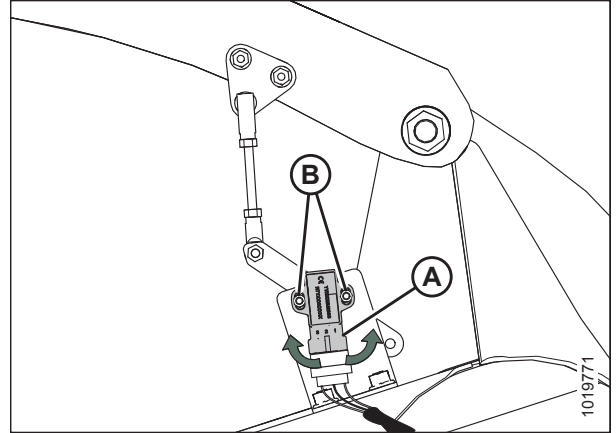


Figure 3.115: Reel Height Sensor – Right Reel Arm (Reel Up)

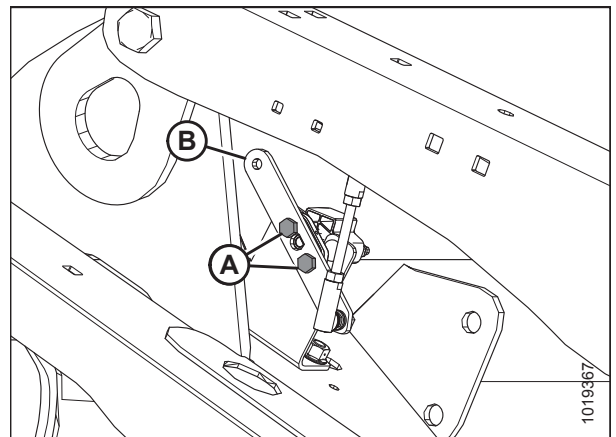


Figure 3.116: Reel Height Sensor – Right Reel Arm

OPERATION

5. Remove two nyloc nuts and bolts (A) from reel height sensor and remove sensor.
6. Install new sensor (B) in sensor bracket and attach using retained bolts and nyloc nuts.

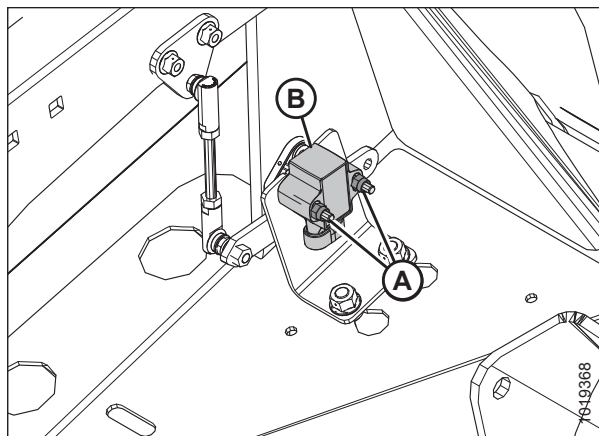


Figure 3.117: Reel Height Sensor – Right Reel Arm

7. Connect sensor arm (B) using retain hex head bolts (A).
8. Connect sensor to harness.

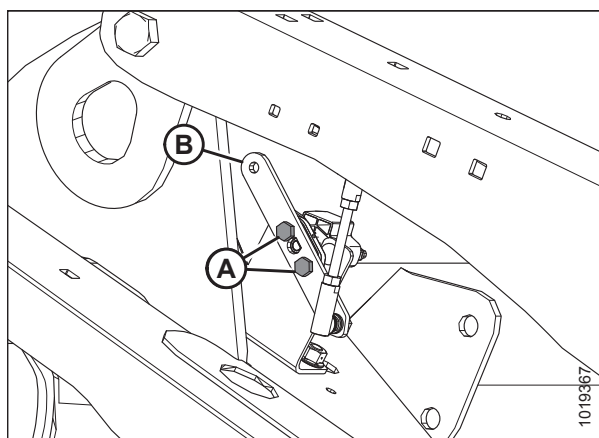


Figure 3.118: Reel Height Sensor – Right Reel Arm

OPERATION

9. Check that sensor arm and the threaded rod are parallel. If not, loosen two center lock flange nuts (A), and adjust sensor mounting bracket (B) until the threaded rod (C) is parallel with the sensor arm (D). Tighten center lock flange nuts.
10. Check the sensor voltage range. Refer to [Checking and Adjusting Reel Height Sensor](#), page 109.

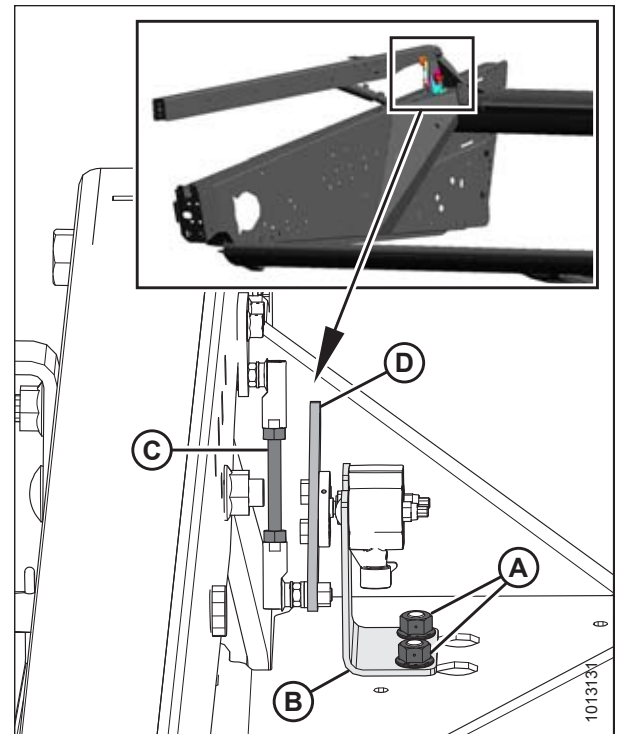


Figure 3.119: Reel Height Sensor – Right Reel Arm (Front View)

3.7.10 Reel Fore-Aft Position

Reel fore-aft position is a critical factor for achieving the best results in adverse conditions. The reel position is factory-set for normal conditions, but it can be adjusted forwards or backwards as required using the controls inside the cab.

The reel on **non European-configured headers** can be moved approximately 227 mm (9 in.) farther aft by repositioning the fore-aft cylinders on the header's reel arms to accommodate certain crop conditions.

- For single-reel headers, refer to [Repositioning Fore-Aft Cylinders on Single Reel, page 115](#).
- For double-reel headers, refer to [Repositioning Fore-Aft Cylinders on Double Reel, page 117](#).

The reel on **European-configured headers** can be moved approximately 67 mm (2.6 in.) farther aft by repositioning the fore-aft cylinders on the header's reel arms to accommodate certain crop conditions. Refer to [Repositioning Fore-Aft Cylinders on European-Configured Headers, page 123](#).

If the combine is equipped with the Multi-Crop Rapid Reel Conversion option, refer to [Repositioning Fore-Aft Cylinders with Multi-Crop Rapid Reel Conversion Option, page 120](#).

NOTE:

The Multi-Crop Rapid Reel Conversion option is not available for European-configured headers.

Decal (A) is attached to the right reel support arm for identifying reel position. The aft edge of the cam disc (B) is the reel fore-aft position marker.

For straight standing crop, center the reel over the cutterbar (4–5 on decal).

For crops that are down, tangled, or leaning, it may be necessary to move the reel ahead of the cutterbar (lower number on decal).

NOTE:

If experiencing difficulty picking up flattened crop, adjust to a steeper header angle. Refer to [3.7.4 Header Angle, page 94](#) for adjustment instructions. Adjust reel position only if header angle adjustments are not satisfactory.

For recommended reel positions in specific crops and crop conditions, refer to [3.6.2 Header Settings, page 43](#).

NOTE:

In crops that are difficult to pick up such as rice, or severely lodged crops that require full forward positioning of the reel, set the reel tine pitch to provide proper placement of the crop onto the drapers. Refer to [3.7.11 Reel Tine Pitch, page 127](#) for adjustment details.

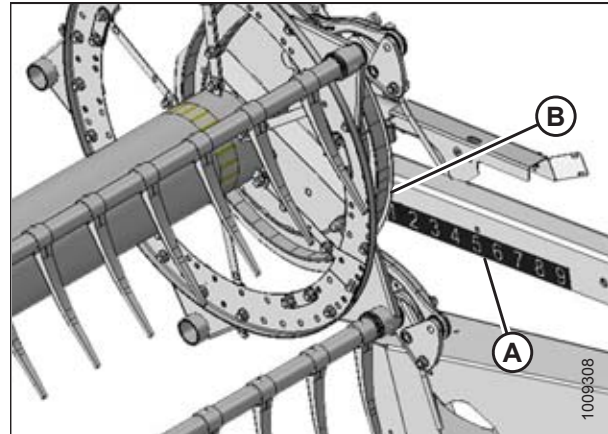


Figure 3.120: Fore-Aft Decal

Adjusting Reel Fore-Aft Position

1. Select FORE-AFT mode on the selector switch in the cab.
2. Operate the hydraulics to move the reel to the desired position while using the decal (A) as a reference.
3. Check the reel clearance to cutterbar after making changes to the cam setting. Refer to the following for measurement and adjustment procedures:
 - [5.13.1 Reel Clearance to Cutterbar, page 494](#)
 - [5.13.2 Reel Frown, page 498](#)

IMPORTANT:

Operating with the reel too far forward can result in the fingers contacting the ground. When operating with the reel in this position, lower the skid shoes or adjust the header tilt as required to prevent damaging the fingers.

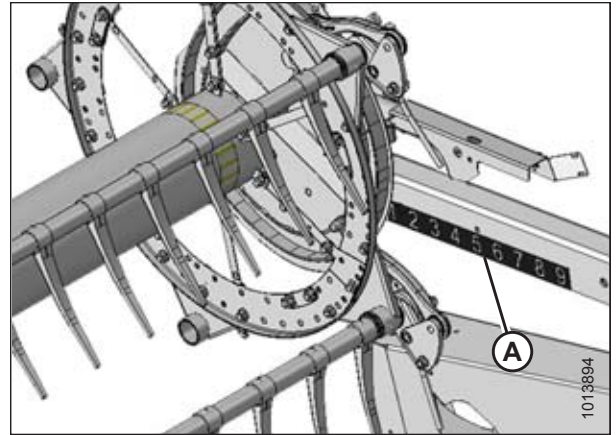


Figure 3.121: Fore-Aft Decal

Repositioning Fore-Aft Cylinders on Single Reel

The reel can be moved approximately 227 mm (9 in.) farther aft by repositioning the fore-aft cylinders on the reel arms. This may be desirable when straight-combining canola.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

Reposition the right reel arm cylinder as follows:

NOTE:

Reel components not shown in illustration for improved clarity.

1. Position reel fully aft with support arms horizontal.
2. Stop the engine and remove the key from the ignition.
3. Remove the four nuts and bolts (A) securing the cylinder bracket (B) to the reel arm (C). Retain hardware.

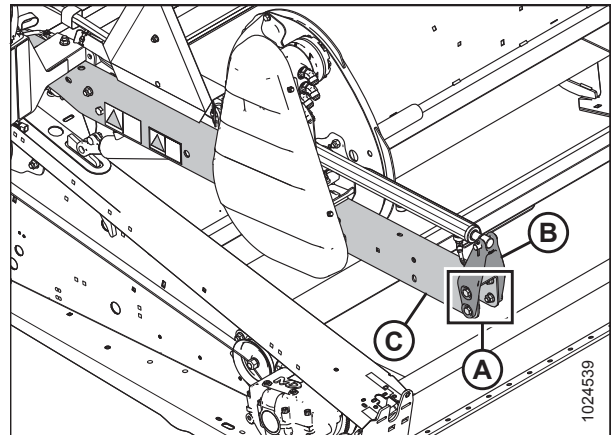


Figure 3.122: Right Reel Arm Cylinder in Forward Position

OPERATION

4. Push/pull the reel until bracket (B) lines up with the aft set of holes in the reel arm (C).
5. Reinstall the four nuts and bolts (A) and secure the cylinder bracket (B) to the reel arm at the new position.

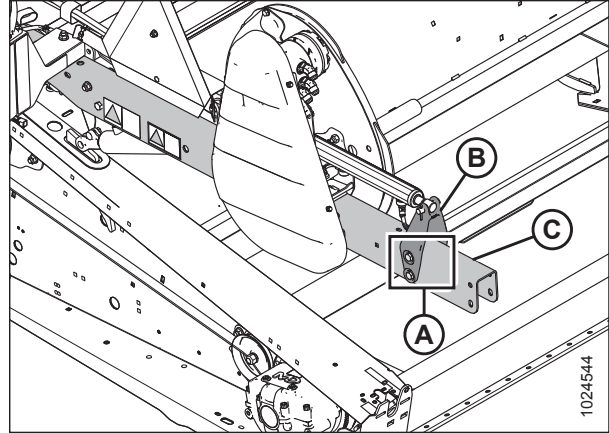


Figure 3.123: Right Reel Arm Cylinder in Aft Position

Reposition the left reel arm cylinder as follows:

NOTE:

Reel components not shown in illustration for improved clarity.

1. Remove pin (A) securing cylinder (B) to bracket/light assembly (C).
2. Remove nuts and bolts (D) securing bracket/light assembly (C) to the reel arm, and remove the bracket/light assembly.
3. If necessary, remove the cable tie securing the harness to the bracket/light assembly (C) or reel arm.
4. Swivel the light to the working position as shown.

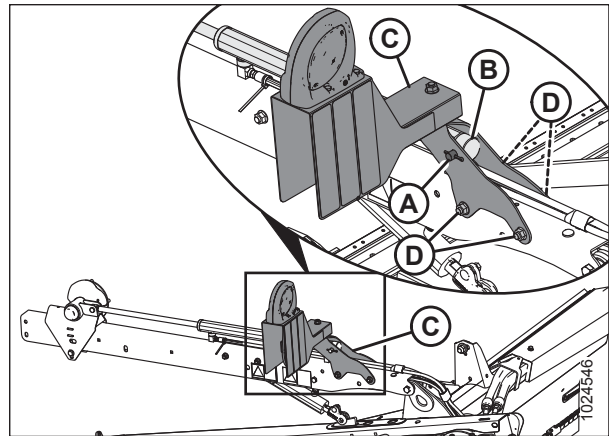


Figure 3.124: Left Reel Arm Cylinder in Forward Position

OPERATION

5. Reposition the bracket/light assembly (C) on the reel arm as shown, and secure with four nuts and bolts (D). Tighten hardware.
6. Push the reel back and attach cylinder (B) to the bracket/light assembly (C) with pin (A). Secure pin with cotter pin.
7. Secure the light harness to the bracket/light assembly (C) using a cable tie.
8. Check the reel clearance to the backsheet, upper cross auger (if installed), and reel braces.
9. Adjust the reel tine pitch if necessary. Refer to [3.7.11 Reel Tine Pitch, page 127](#).

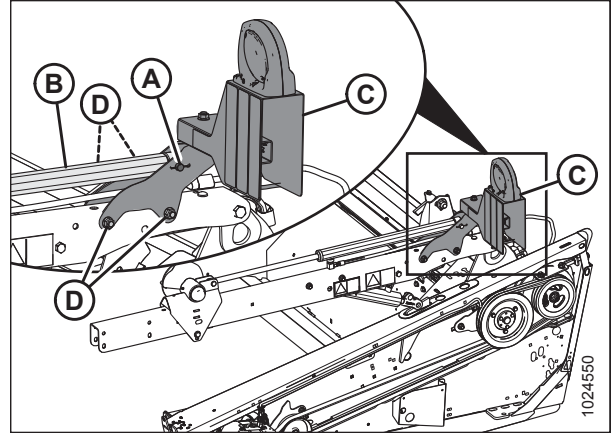


Figure 3.125: Left Reel Arm Cylinder in Aft Position

Repositioning Fore-Aft Cylinders on Double Reel

The reel can be moved approximately 227 mm (9 in.) farther aft by repositioning the fore-aft cylinders on the reel arms. This may be desirable when straight-combining canola.

NOTE:

MD #B5605 (Short Brace Kit For Center Reel Arm) must be installed before repositioning fore-aft cylinders.

If the Multi-Crop Rapid Reel Conversion option is installed, refer to [Repositioning Fore-Aft Cylinders with Multi-Crop Rapid Reel Conversion Option, page 120](#).

NOTE:

The Multi-Crop Rapid Reel Conversion option is not available for European-configured headers.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

OPERATION

Reposition the center reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustration for improved clarity.

1. Position reel fully aft with support arms horizontal.
2. Stop engine and remove key.
3. Remove four nuts and bolts (A) securing cylinder bracket (B) to reel arm (C). Retain hardware.

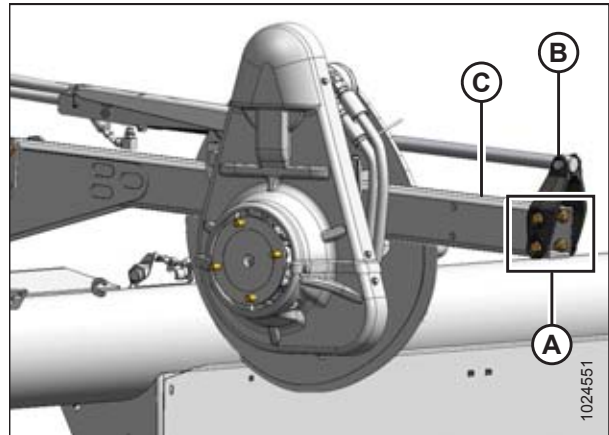


Figure 3.126: Right Arm – Forward Position

4. Push/pull reel until bracket (B) lines up with the aft set of holes in reel arm (C).
5. Reinstall four nuts and bolts (A) to secure bracket (B) to reel arm at new position.

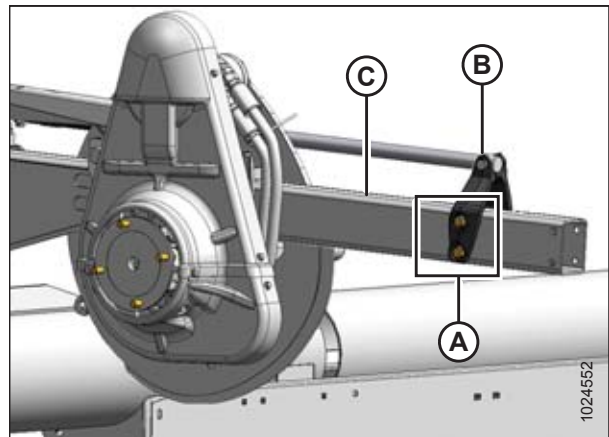


Figure 3.127: Right Arm – Aft Position

OPERATION

Reposition the right reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustrations for improved clarity.

1. Remove four bolts (A) securing cylinder bracket (B) to the reel arm (C).

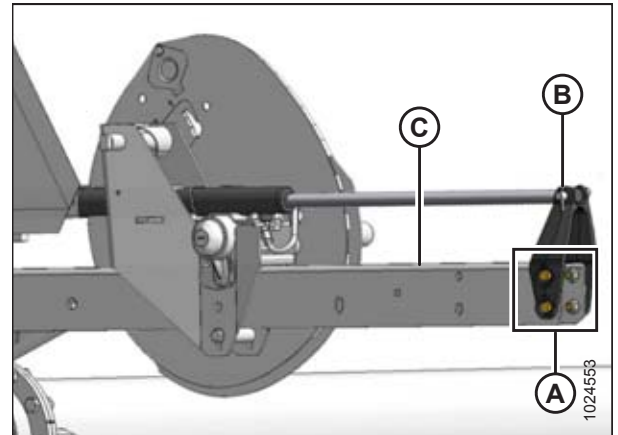


Figure 3.128: Right Reel Arm Cylinder in Forward Position

2. Push reel back until bracket (B) lines up with the aft set of holes in the reel arm (C).
3. Reinstall the four bolts (A) to secure bracket to reel arm at new position.

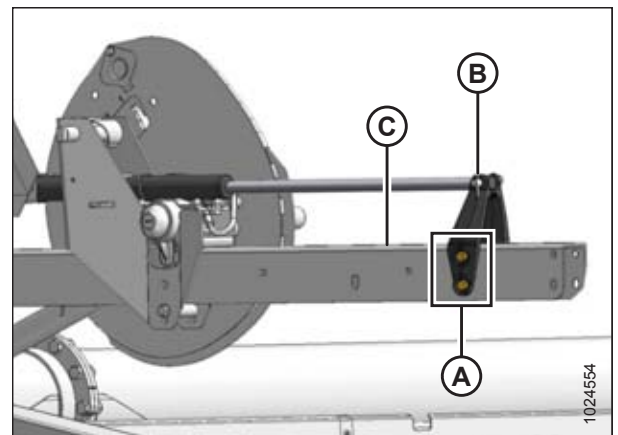


Figure 3.129: Right Reel Arm Cylinder in Aft Position

Reposition the left reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustrations for improved clarity.

OPERATION

1. Remove pin (A) securing cylinder (B) to bracket/light assembly (C).
2. Remove four nuts and bolts (D) securing bracket/light assembly (C) to reel arm and remove bracket/light assembly. Retain hardware.
3. Remove cable tie (not shown) securing harness to bracket/light assembly (C) or to reel arm (if necessary).
4. Swivel light to working position as shown.

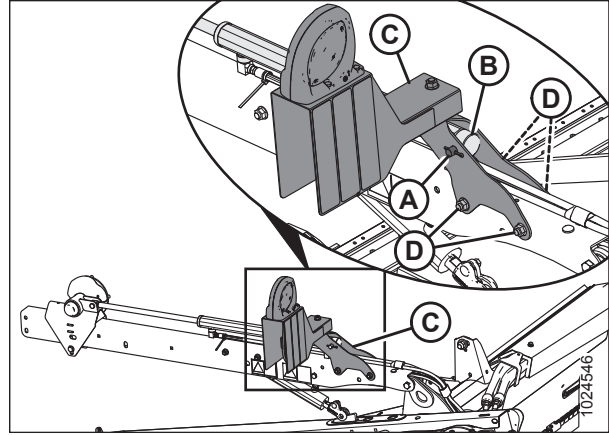


Figure 3.130: Left Reel Arm Cylinder in Forward Position

5. Reposition bracket/light assembly (C) onto reel arm as shown, and secure using four nuts and bolts (D). Tighten hardware.
6. Push reel back and reinstall cylinder (B) onto bracket/light assembly (C) using pin (A). Secure pin with cotter pin.
7. Secure light harness to bracket/light assembly (C) or to reel arm using plastic cable tie (not shown).
8. Check reel clearance to backsheet, upper cross auger (if installed), and reel braces.
9. Adjust reel tine pitch (if required). For adjustment procedures, refer to [3.7.11 Reel Tine Pitch, page 127](#).

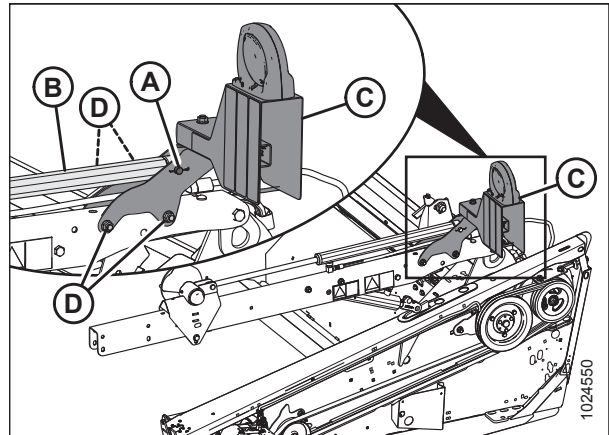


Figure 3.131: Left Reel Arm Cylinder in Aft Position

Repositioning Fore-Aft Cylinders with Multi-Crop Rapid Reel Conversion Option

The reel can be moved approximately 227 mm (9 in.) farther aft by repositioning the fore-aft cylinders on the reel arms. The Multi-Crop Conversion option is applicable to double-reel headers only.

NOTE:

MD #B5605 (Short Brace Kit For Center Reel Arm) must be installed before repositioning fore-aft cylinders.

NOTE:

Multi-Crop Rapid Reel Conversion option is not available for European-configured headers.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

OPERATION

Reposition the left reel arm cylinder as follows:

NOTE:

Some reel components not shown in illustrations for improved clarity.

1. Position reel fully aft with support arms horizontal.
2. Stop the engine and remove the key from the ignition.
3. Remove ring (A) from and clevis pin (B) on inboard side of bracket (C). Retain ring and clevis pin.
4. Push the reel back until the cylinder barrel (D) lines up with reel position 2 hole on bracket.
5. Reinstall clevis pin (B) at the new position and secure with ring (A).

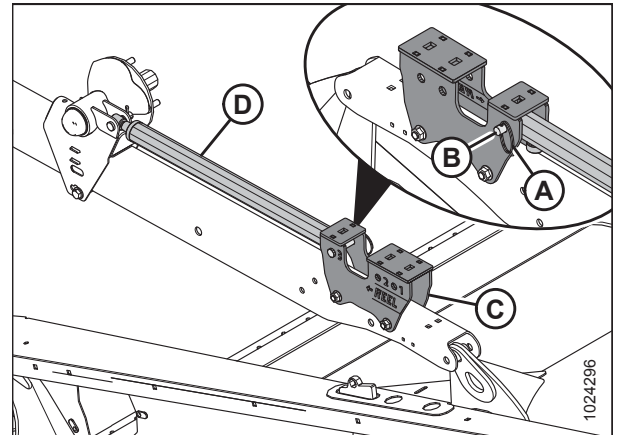


Figure 3.132: Left Reel Arm in Forward Position

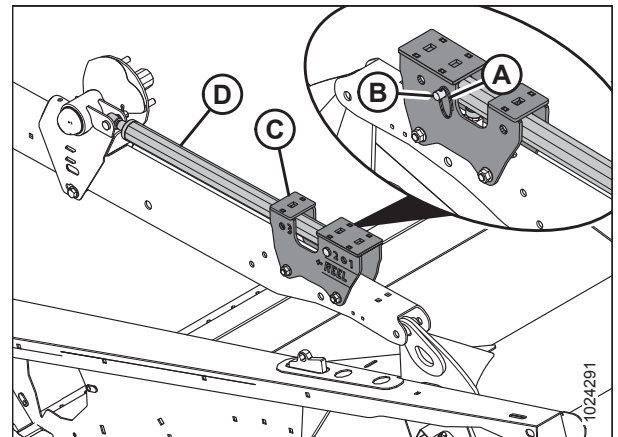


Figure 3.133: Left Reel Arm in Aft Position

OPERATION

Reposition the center reel arm cylinder as follows:

NOTE:

Some reel components not shown in illustrations for improved clarity.

1. Remove ring (A), clevis pin (B), and washers (C) from bracket (D). Retain ring, clevis pin, and washers.

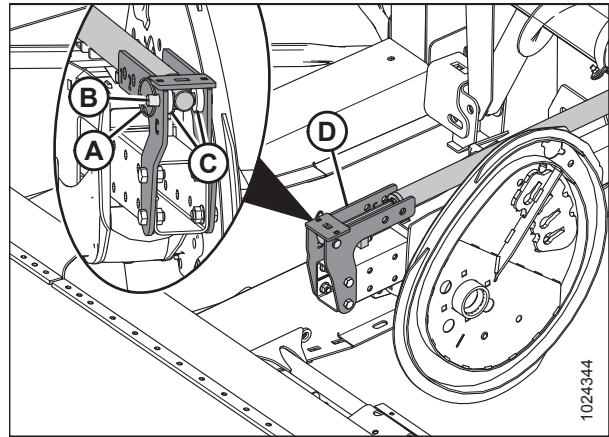


Figure 3.134: Center Reel Arm in Forward Position

2. Push the reel back until the end of the cylinder (E) lines up with reel position 2 hole on bracket (D). Position washers (C) on both sides of the cylinder end inside the bracket.
3. Reinstall clevis pin (B) at the new position and secure with ring (A).

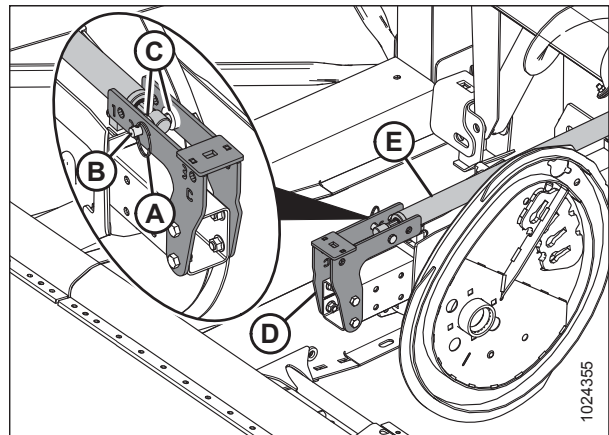


Figure 3.135: Center Reel Arm in Aft Position

OPERATION

Reposition the right reel arm cylinder as follows:

NOTE:

Some reel components not shown in illustrations for improved clarity.

1. Remove ring (A), clevis pin (B), and washers (C) from bracket (D). Retain ring, clevis pin, and washers.
2. Push the reel back until end of cylinder (E) lines up with reel position 2 hole on bracket (D).

NOTE:

Washers inside center arm support bracket not shown in illustration at right.

3. Reinstall clevis pin (B) at the new position and secure with ring (A).

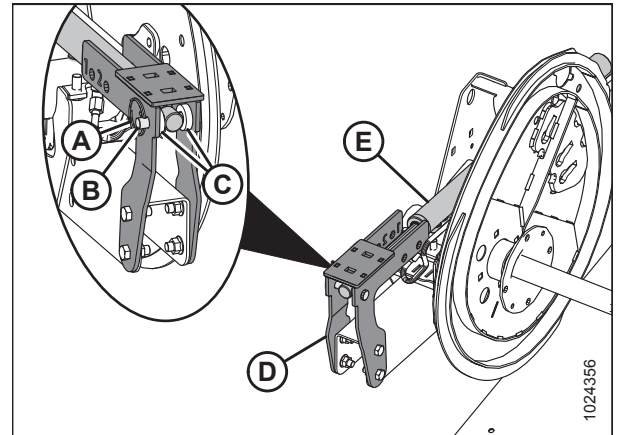


Figure 3.136: Right Reel Arm in Forward Position

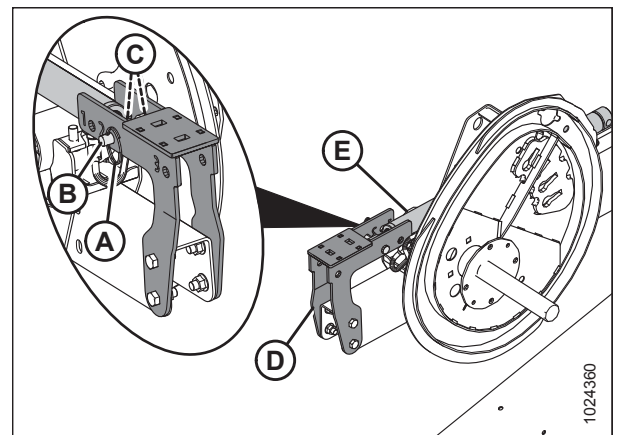


Figure 3.137: Right Reel Arm in Aft Position

Repositioning Fore-Aft Cylinders on European-Configured Headers

The reel can be moved approximately 67 mm (2.6 in.) farther aft from factory setting by repositioning the fore-aft cylinders on the reel arms. This may be desirable when straight-combining canola.

For instructions for repositioning the fore-aft cylinders on a non European-configured header, refer to [Repositioning Fore-Aft Cylinders on Double Reel, page 117](#).

Reposition center reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustrations for improved clarity.

NOTE:

Reels on European-configured headers are at their most forward setting when cylinders are set in position 2 on the fore-aft arm brackets. Reels on these headers are in their most aft position when cylinders are set in position 1 on the fore-aft arm brackets.

OPERATION

1. Remove the securing ring (A), pin (B), and washers inside the center arm fore-aft support bracket (C). Retain washers, pin, and ring.

NOTE:

Washers inside center arm support bracket not shown in illustration at right.

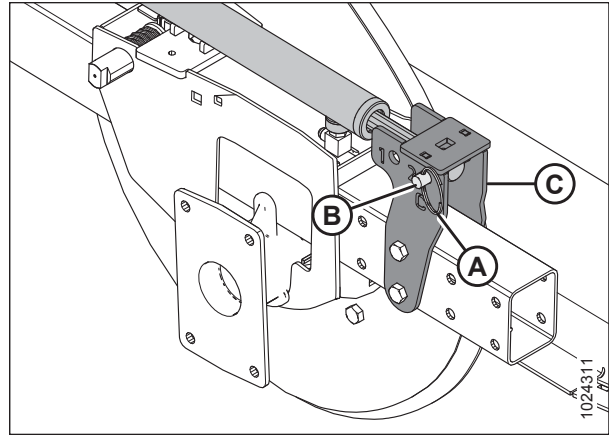


Figure 3.138: Center Reel Arm in Forward Position

2. Push the reel back until the end of the cylinder (A) lines up with the aft setting holes (B) (position 1) in the fore-aft support bracket (C). Position washers (D) on both sides of the cylinder end (A) inside the support bracket (C).

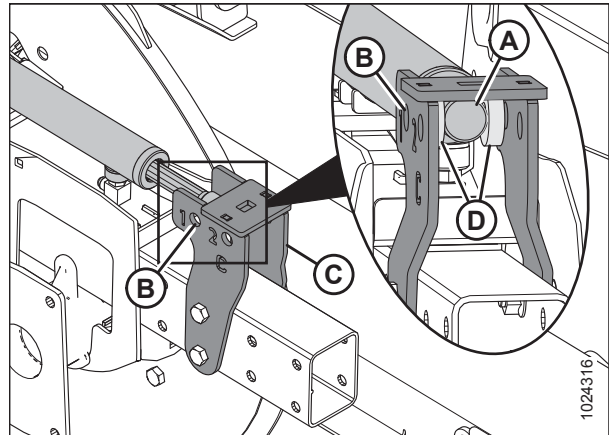


Figure 3.139: Center Reel Arm

3. Insert pin (A) and secure cylinder (B) and washers in the center arm support bracket (C). Secure pin (A) with ring (D).

NOTE:

Washers inside center arm support bracket not shown in illustration at right.

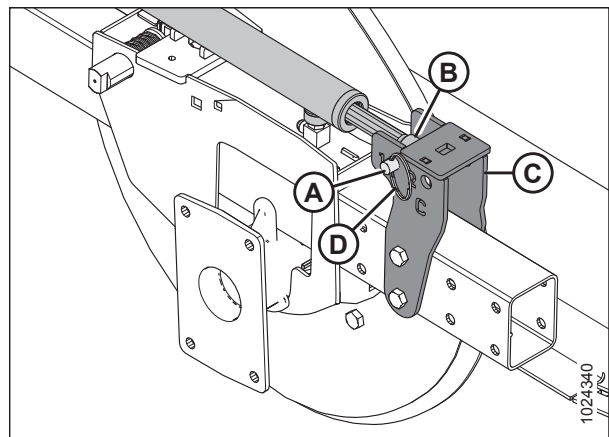


Figure 3.140: Center Reel Arm in Aft Position

Reposition right reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustrations for improved clarity.

OPERATION

NOTE:

Reels on European-configured headers are at their most forward setting when cylinders are set in position 2 on the fore/aft arm brackets. Reels on these headers are in their most aft position when cylinders are set in position 1 on the fore-aft arm brackets.

1. Remove ring (A), pin (B), and washers (D) securing the reel arm cylinder (C) to the interior of the right fore-aft arm bracket. Retain washers, ring, and pin.

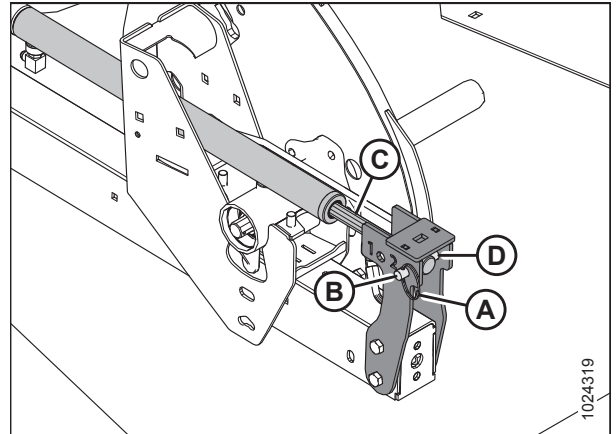


Figure 3.141: Right Reel Arm Cylinder in Forward Position

2. Push the reel back until the end of the cylinder (A) lines up with the aft setting holes (B) in the support bracket (C). Position washers (D) on both sides of the cylinder end (A) inside the support bracket (C).

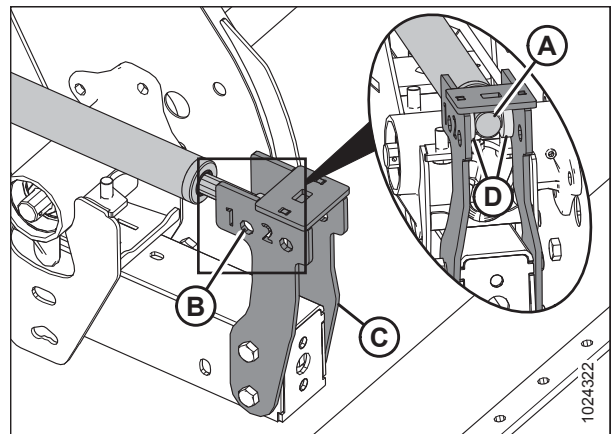


Figure 3.142: Right Reel Arm Cylinder

3. Insert pin (A) into the aft setting holes, and through the cylinder end (C) and washers (D). Secure the pin with ring (B).

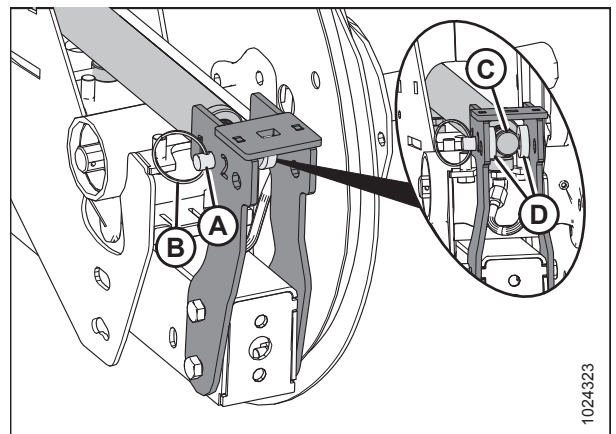


Figure 3.143: Right Reel Arm Cylinder in Aft Position

OPERATION

Reposition left reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustrations for improved clarity.

NOTE:

Reels on European-configured headers are at their most forward setting when cylinders are set in position 2 on the support brackets. Reels on these headers are in their most aft position when cylinders are set in position 1 on the support brackets.

1. Remove ring (A) and pin (B) inside the left fore-aft support bracket (D) securing the cylinder (C). Retain pin and ring.

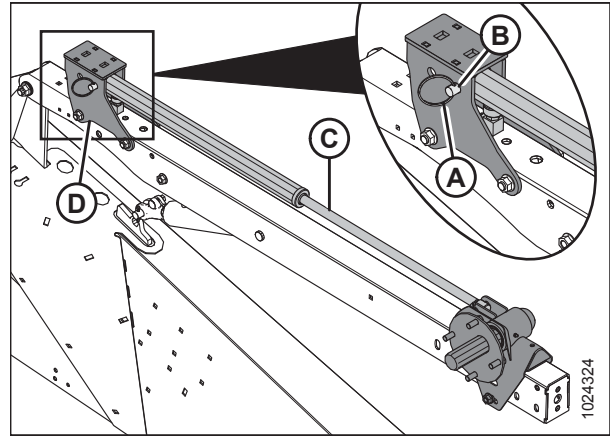


Figure 3.144: Left Reel Arm Cylinder in Forward Position

2. Push reel back toward the header until the end of the cylinder (A) lines up with the aft setting holes (B) (position 1) in the support bracket (C).

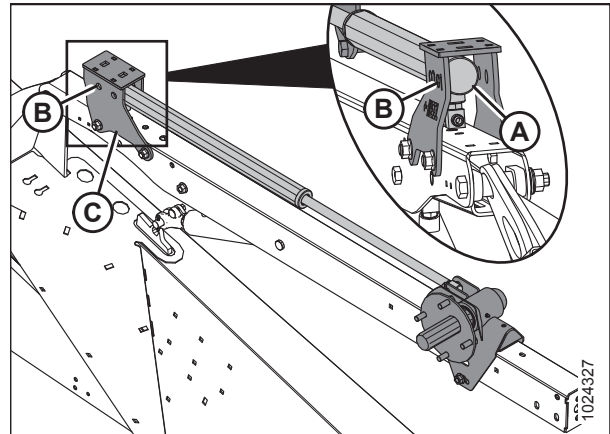


Figure 3.145: Left Reel Arm Cylinder

OPERATION

3. Insert clevis pin (A) into the aft setting holes in the support bracket (B) and through the end of the cylinder (C). Secure pin with ring (D).
4. Check the reel clearance to the backsheet, upper cross auger (if installed), and reel braces.
5. Adjust the reel tine pitch if necessary. Refer to [3.7.11 Reel Tine Pitch, page 127](#).

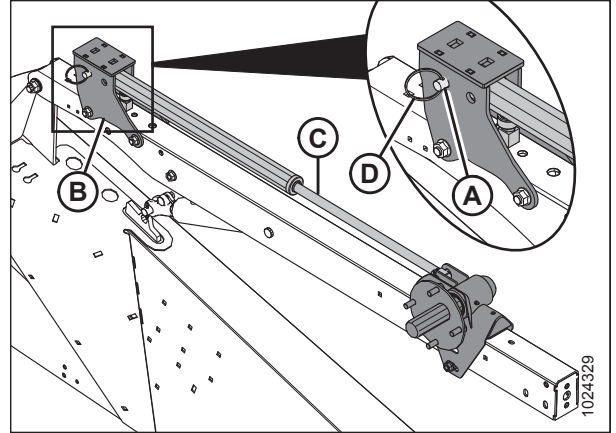


Figure 3.146: Left Reel Arm Cylinder in Aft Position

3.7.11 Reel Tine Pitch

IMPORTANT:

The following describes the conceptual and operational guidelines of the pick-up reel. Please read carefully before operating the machine.

The pick-up reel is designed to pick up flattened and severely lodged crops. Because the cam setting is mainly used to determine how the crop gets delivered onto the drapers, it is not always necessary to increase the tine pitch (select a higher cam setting) to pick up lodged crops.

The positioning of the fingers relative to the ground (tine pitch) is not significantly affected by the cam setting. For example, with the cam position range at 33° , the corresponding finger pitch range is only 5° at the lowest point of the reel's rotation.

For the best results, use the minimum cam setting that delivers the crop past the rear edge of the cutterbar and onto the drapers. Refer to [3.6.2 Header Settings, page 43](#).

Reel Cam Settings

The following outlines the function of each cam setting and provides set-up guidelines for various crop conditions.

The setting numbers are visible above the slots on the cam disc. Refer to [Adjusting Reel Cam, page 130](#).

OPERATION

Cam Position 1, Reel Position 6 or 7 delivers the most even crop flow onto the drapers without fluffing or disturbing the material.

- This setting will release crop close to the cutterbar and works best if the cutterbar is on the ground.
- Some crops will not be delivered past the cutterbar when the cutterbar is raised off the ground and the reel is pushed forward; therefore, set the initial reel speed approximately equal to the ground speed.

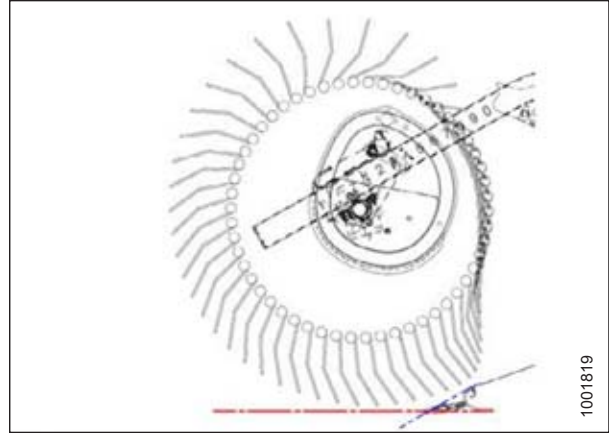


Figure 3.147: Finger Profile – Position 1

Cam Position 2, Reel Position 3 or 4 is the recommended starting position for most crops and conditions.

- If the crop is stalling on the cutterbar when the reel is in the forward position, increase the cam setting to push the crop past the rear edge of the cutterbar.
- If the crop is getting fluffed or if there is a disruption to the flow across the drapers, decrease the cam setting.
- This setting generates a fingertip speed that is approximately 20% faster than the reel speed.

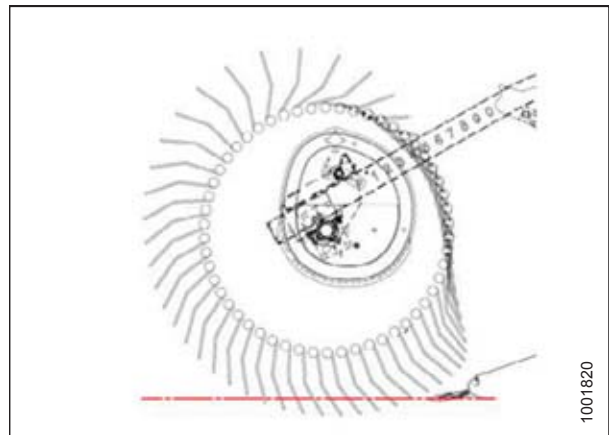


Figure 3.148: Finger Profile – Position 2

Cam Position 3, Reel Position 6 or 7 is mainly used to leave long stubble.

- This position allows the reel to reach forward and lift the crop across the knife and onto the drapers.
- This setting generates a fingertip speed that is approximately 30% faster than the reel speed.

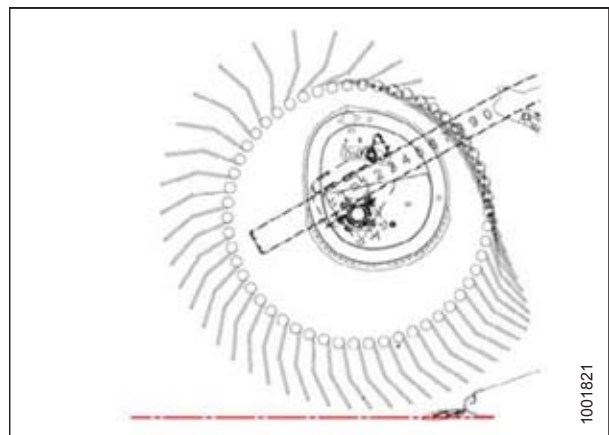


Figure 3.149: Finger Profile – Position 3

OPERATION

Cam Position 4, Reel Position 2 or 3 is used with the reel fully forward to leave the maximum amount of stubble in lodged crops.

- This position allows the reel to reach forward and lift the crop across the knife and onto the drapers.
- This setting generates a fingertip speed that is approximately 35% faster than the reel speed.

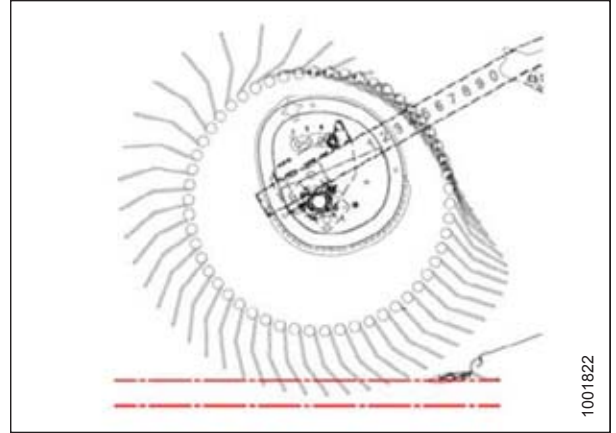


Figure 3.150: Finger Profile – Position 4

Cam Position 4, Header Angle At Maximum, and Reel Fully Forward provides the maximum amount of reel reach below the cutterbar to pick up lodged crops.

- Leaves a significant amount of stubble when cutting height is set to approximately 203 mm (8 in.). In damp materials such as rice, it is possible to double the ground speed because of the reduction of cut material.
- This setting generates a fingertip speed that is approximately 35% faster than the reel speed.

NOTE:

Higher cam settings with the reel fore-aft position set between 4–5 sharply decreases the draper capacity because the reel disrupts the crop flow across the drapers and the fingers engage the crop that is moving on the drapers.

High cam settings are recommended only with the reel at, or close to, full forward settings.

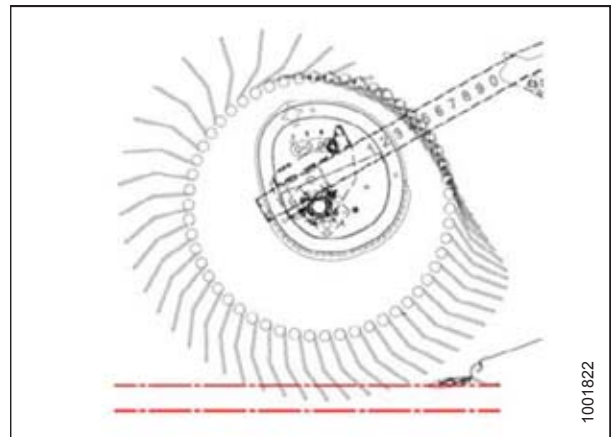


Figure 3.151: Finger Profile – Position 4

IMPORTANT:

The reel to cutterbar clearance should always be checked following adjustments to reel tine pitch and reel fore-aft position (refer to [5.13.1 Reel Clearance to Cutterbar, page 494](#)). Refer to [3.6.2 Header Settings, page 43](#) for recommended reel tine pitch in specific crops and crop conditions.

Adjusting Reel Cam

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Turn the latch pin (A) counterclockwise using a 3/4 in. wrench to release the cam disc.
2. Use the wrench on bolt (B) to rotate the cam disc and align the latch pin (A) with the desired cam disc hole position (C) (1 to 4).

NOTE:

Bolt (B) is positioned through the cam disc (transparent view shown in illustration for improved clarity).

3. Turn the latch pin (A) clockwise to engage and lock the cam disc.
4. Repeat the above procedure for the opposite reel.

IMPORTANT:

Ensure the cam is secured into position before operating the machine.

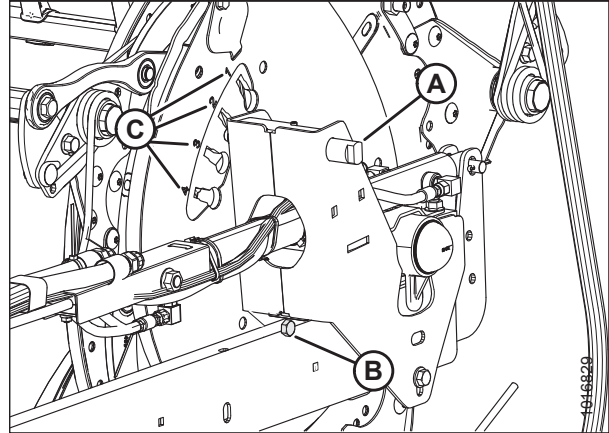


Figure 3.152: Cam Disc Positions

3.7.12 Crop Dividers

Crop dividers are used to help divide the crop when harvesting. They are removable to allow installation of vertical knives and to decrease transport width.

Removing Crop Dividers with Latch Option from Header

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Lower reel, raise header, stop engine, remove key, and engage header safety props. Refer to your combine operator's manual for instructions.
2. Open or remove endshields. Refer to [3.2.3 Endshields, page 35](#).

OPERATION

3. Lift safety lever (A).
4. Hold onto crop divider (B), push lever (C) to open latch, and lower crop divider.

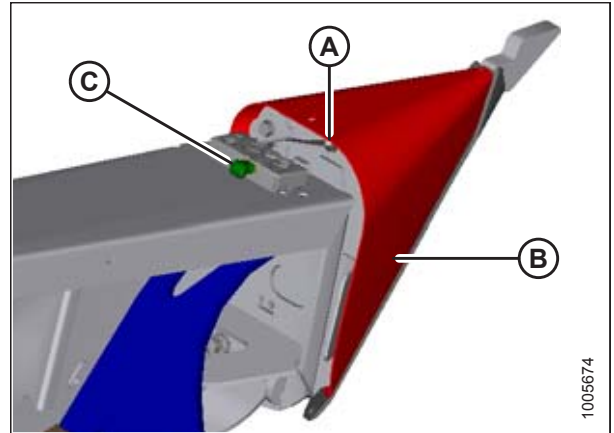


Figure 3.153: Crop Divider

5. Lift crop divider off endsheet and store as follows:
 - a. Insert pin (A) on crop divider into hole in endsheet at location shown.
 - b. Lift crop divider and position lugs (B) on crop divider into bracket on endsheet. Ensure lugs engage bracket.
6. Close or install endshields. Refer to [3.2.3 Endshields, page 35](#).

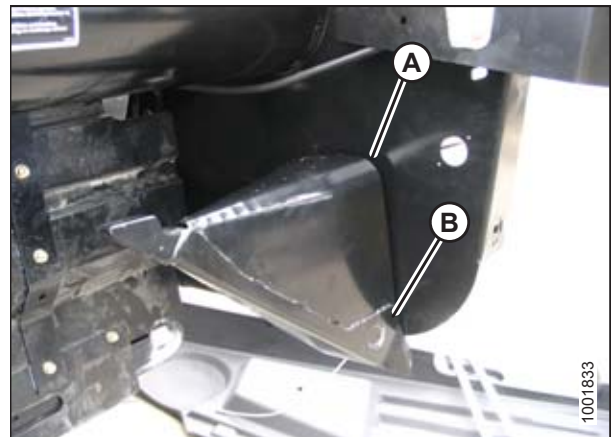


Figure 3.154: Stored Crop Divider

Removing Crop Dividers without Latch Option from Header

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Lower reel and raise header. Refer to your combine operator's manual for instructions.
2. Stop engine and remove key.
3. Engage safety props. Refer to your combine operator's manual for instructions.
4. Open or remove endshields. Refer to [3.2.3 Endshields, page 35](#).

OPERATION

5. Remove bolt (A), lock washer, and flat washer.
6. Lower crop divider (B) and then lift to remove from endsheet.
7. Close or install endshields. Refer to [3.2.3 Endshields](#), [page 35](#).

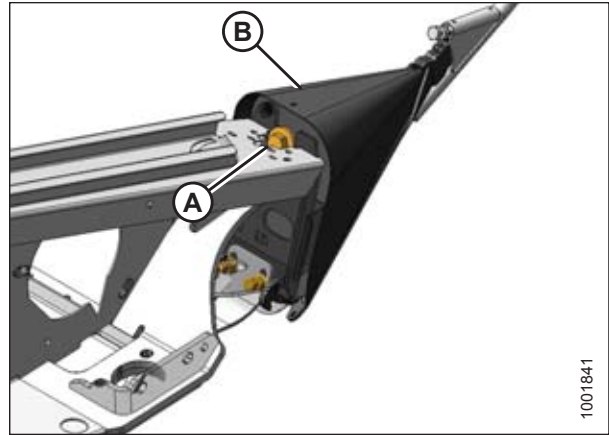


Figure 3.155: Crop Divider

Installing Crop Dividers with Latch Option onto Header

⚠ DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Lower reel and raise header. Refer to your combine operator's manual for instructions.
2. Stop engine and remove key.
3. Engage safety props. Refer to your combine operator's manual for instructions.
4. Open or remove endshields. Refer to [3.2.3 Endshields](#), [page 35](#).
5. Remove crop divider from storage location by lifting crop divider to disengage lugs (A) at lower end and then lowering it slightly to disengage pin (B) from endsheet.

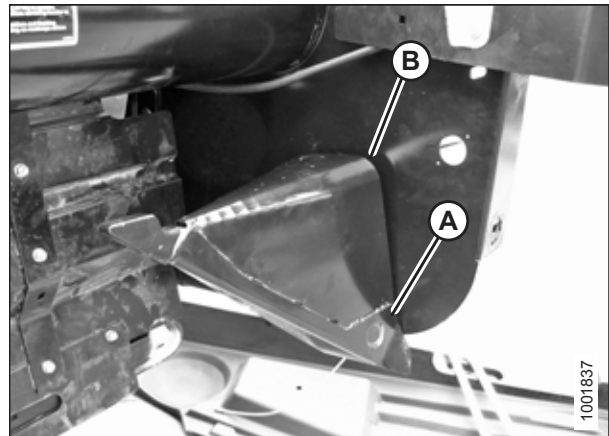


Figure 3.156: Stored Crop Divider

OPERATION

6. Position crop divider as shown by inserting lugs (A) into holes in endsheet.
7. Lift forward end of crop divider until pin (B) at top of crop divider engages and closes latch (C).
8. Push safety lever (D) downwards to lock pin into latch (C).

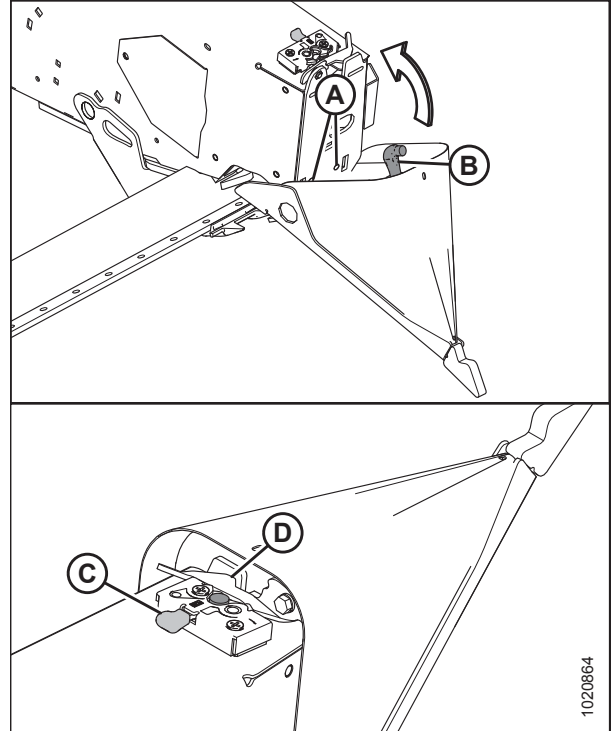


Figure 3.157: Crop Divider

9. Pull the tip of the crop divider to ensure there is no lateral movement. If necessary, adjust bolts (A) to tighten crop divider and eliminate lateral movement.
10. Close or install endshields. Refer to [3.2.3 Endshields](#), page 35.

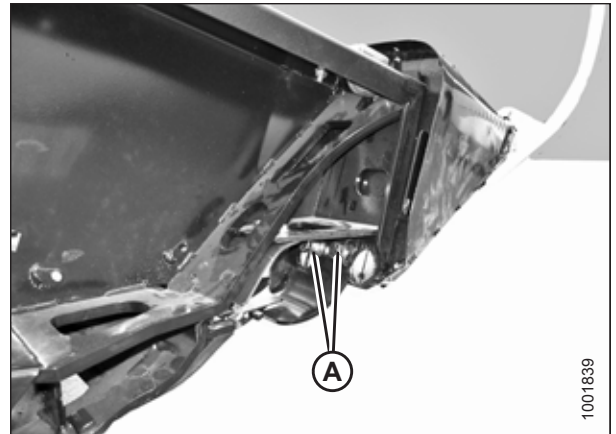


Figure 3.158: Crop Divider

Installing Crop Dividers without Latch Option onto Header

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Lower reel and raise header. Refer to your combine operator's manual for instructions.
2. Stop engine and remove key.
3. Engage safety props. Refer to your combine operator's manual for instructions.

OPERATION

4. Open or remove endshields. Refer to [3.2.3 Endshields, page 35](#).
5. Remove crop divider from storage location by lifting crop divider to disengage lugs (A) at lower end and then lowering it slightly to disengage pin (B) from endsheet.

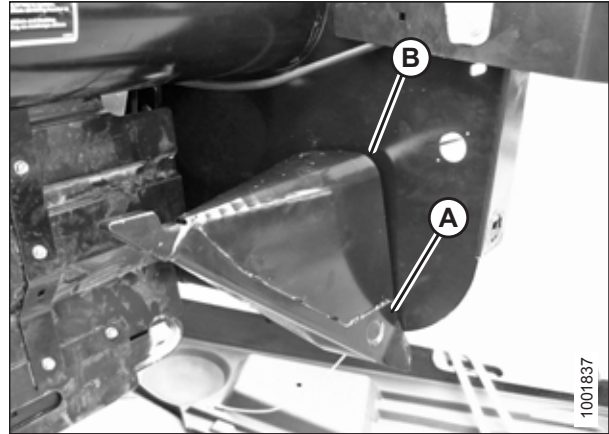


Figure 3.159: Stored Crop Divider

6. Position crop divider as shown by inserting lugs (A) into holes in endsheet.

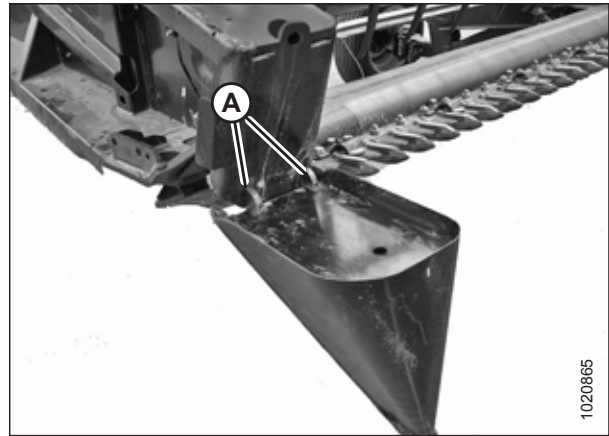


Figure 3.160: Crop Divider

7. Lift forward end of crop divider and install bolt (A) and special stepped washer (B) (step towards divider). Tighten bolt.
8. Pull the tip of the crop divider to ensure there is no lateral movement. If necessary, adjust bolts (C) to tighten crop divider and eliminate lateral movement.
9. Close or install endshields. Refer to [3.2.3 Endshields, page 35](#).

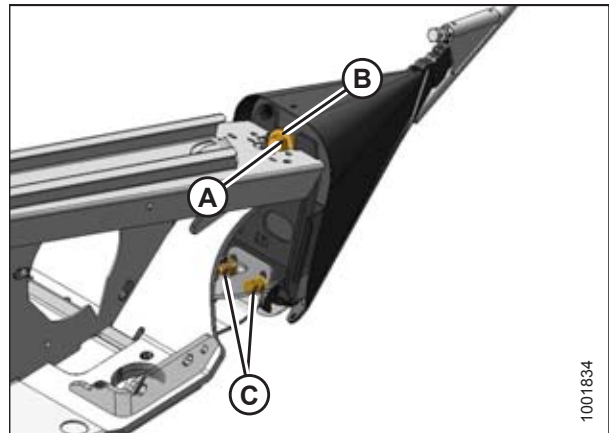


Figure 3.161: Crop Divider

3.7.13 Crop Divider Rods

Crop divider rods are used in conjunction with crop dividers. The removable crop divider rods are most useful when crop is down. In standing crops, using only crop dividers is recommended.

Table 3.19 Crop Divider Rods Recommended Use

With Divider Rods		Without Divider Rods
Alfalfa	Lodged cereal	Edible beans
Canola	Peas	Milo
Flax	Soybeans	Rice
Grass seed	Sudan grass	Soybeans
Lentils	Winter forage	Standing cereal

Removing Crop Divider Rods

1. Loosen bolt (A) and remove crop divider rod (B) from both sides of header.

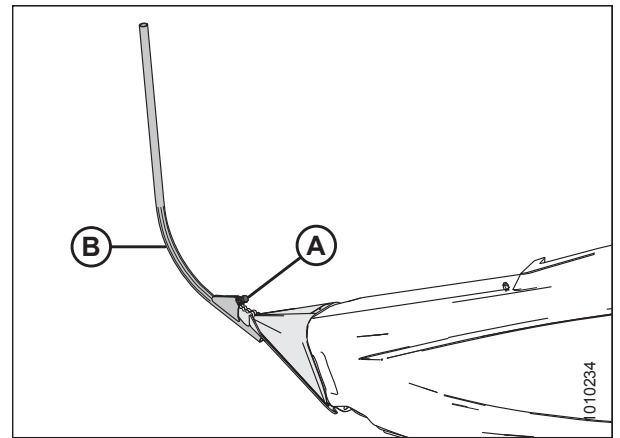


Figure 3.162: Crop Divider Rod

2. Store both crop divider rods (A) inboard on the right side endsheet.

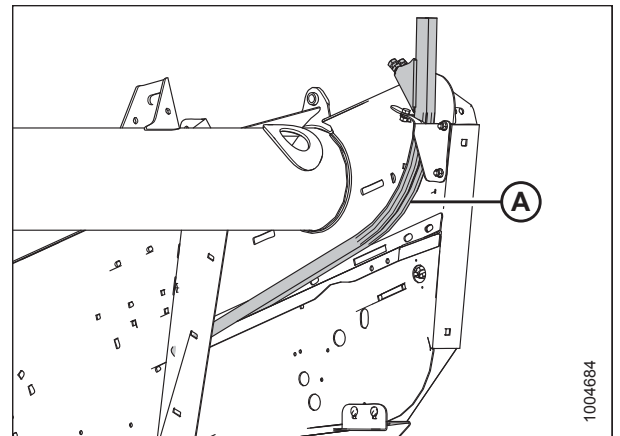


Figure 3.163: Right Side Endsheets

OPERATION

Installing Crop Divider Rods

1. Remove crop divider rods (A) from storage location on inboard of right side endsheet.

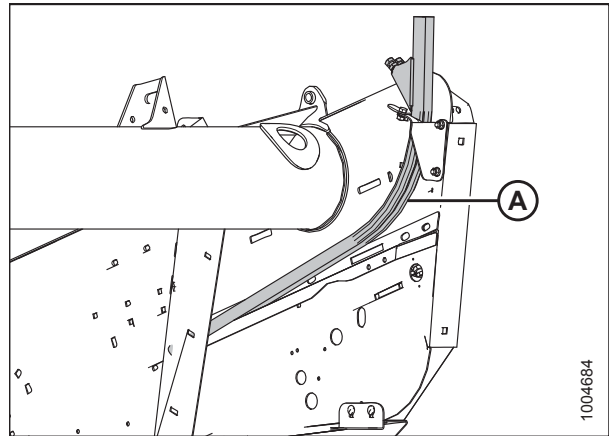


Figure 3.164: Right Side Endsheet

2. Position crop divider rod (B) on tip of crop divider as shown and tighten bolt (A).
3. Repeat procedure at opposite end of header.

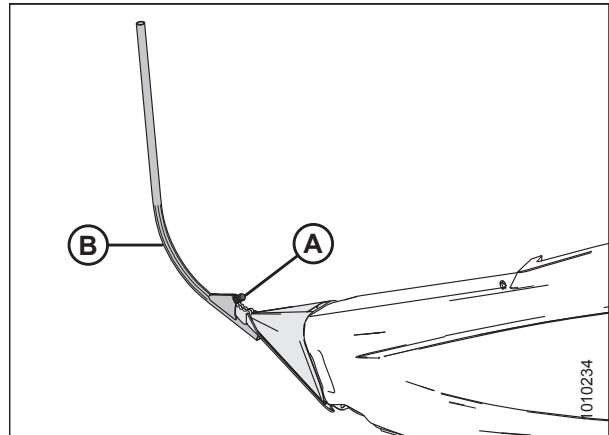


Figure 3.165: Divider Rod on Crop Divider

Rice Divider Rods

Optional rice divider rods provide improved performance in tall and tangled rice crops. The installation and removal procedures for these rods are the same as the installation and removal procedures for standard crop divider rods. Refer to [6.5.10 Rice Divider Rods, page 555](#).



Figure 3.166: Divider Rod for Rice

3.7.14 Setting Auger Position

The auger position has two settings—floating and fixed. The factory setting is the floating position, and is recommended for most crop conditions.

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

The auger float adjustment arms (A) are located at the bottom left and bottom right of the float module.

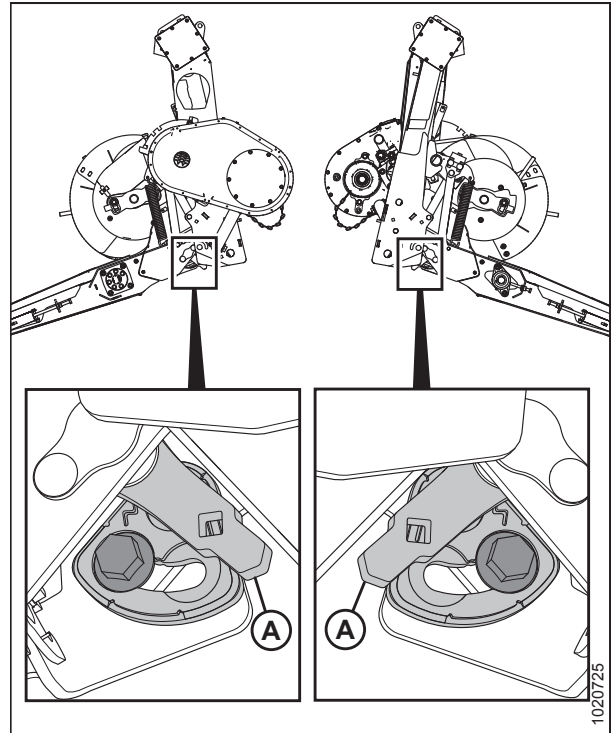


Figure 3.167: Auger Float Adjustment Arms

If bolt (A) is next to the floating symbol (B), the auger is in the floating position. If bolt (A) is next to the fixed symbol (C), the auger is in the fixed position.

CAUTION

Make sure left and right sides are set to the same position; the two bolts (A) must be in the same location to prevent damage to the machine during operation.

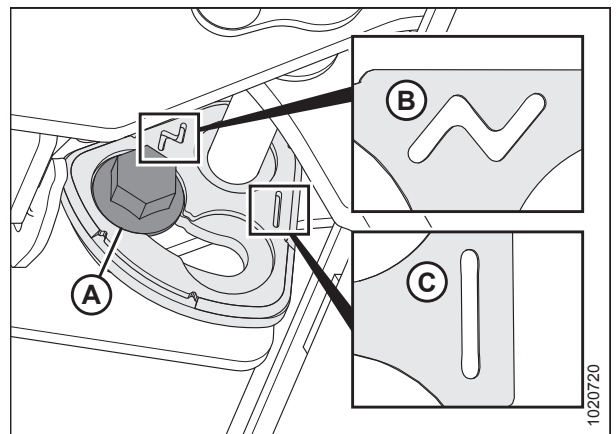


Figure 3.168: Auger Float Positions

OPERATION

To set the auger position, follow these steps:

1. Extend center-link to the steepest header angle.
2. Raise header to full height, and engage safety props.
3. Shut down combine, and remove key from ignition.
4. Using a 21 mm (13/16 in.) wrench, loosen bolt (A) until the bolt head is clear of bracket (B).

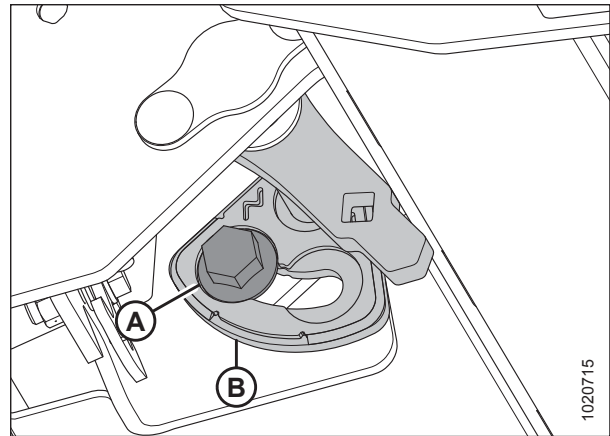


Figure 3.169: Auger Float Adjustment Arm – Left Side

5. Using the same wrench, move arm (B) forward until bolt (A) is in the slot on bracket next to the fixed symbol (C). The arm can also be moved using a breaker bar in the square hole (D).

NOTE:

If changing the auger position from fixed to floating, move arm in opposite direction.

6. Tighten bolt (A) to 122 Nm (90 lbf-ft).

IMPORTANT:

Bolt (A) must be properly seated in recess on bracket before tightening bolt. If arm (B) can be moved after tightening bolt, then bolt (A) is not seated properly.

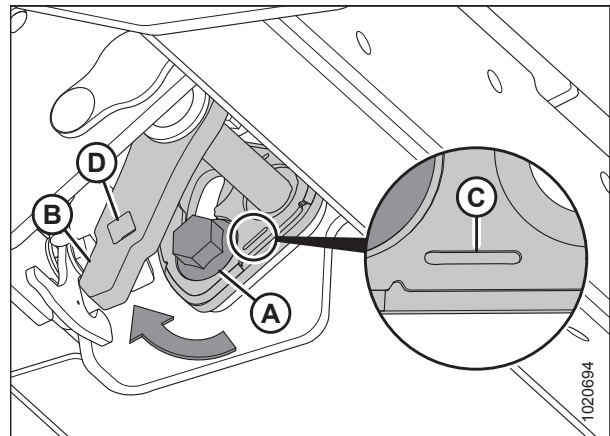


Figure 3.170: Auger Float Adjustment Arm – Left Side

7. Repeat on opposite side.

IMPORTANT:


Both bolts (A) must be in the same position to prevent damage to the machine during operation.

3.8 Auto Header Height Control (AHHC)

MacDon's auto header height control (AHHC) feature works in conjunction with the AHHC option available on certain combine models.

A sensor is installed in the float indicator box (A) on the FM100 Float Module. This sensor sends a signal to the combine allowing it to maintain a consistent cutting height and an optimum float as the header follows ground contours. A two-sensor system is also available as an optional kit. Refer to [6.5.1 FM100 Dual Auto Header Height Control \(AHHC\) Sensor Kit, page 551](#).

Figure 3.171: FM100 Float Module

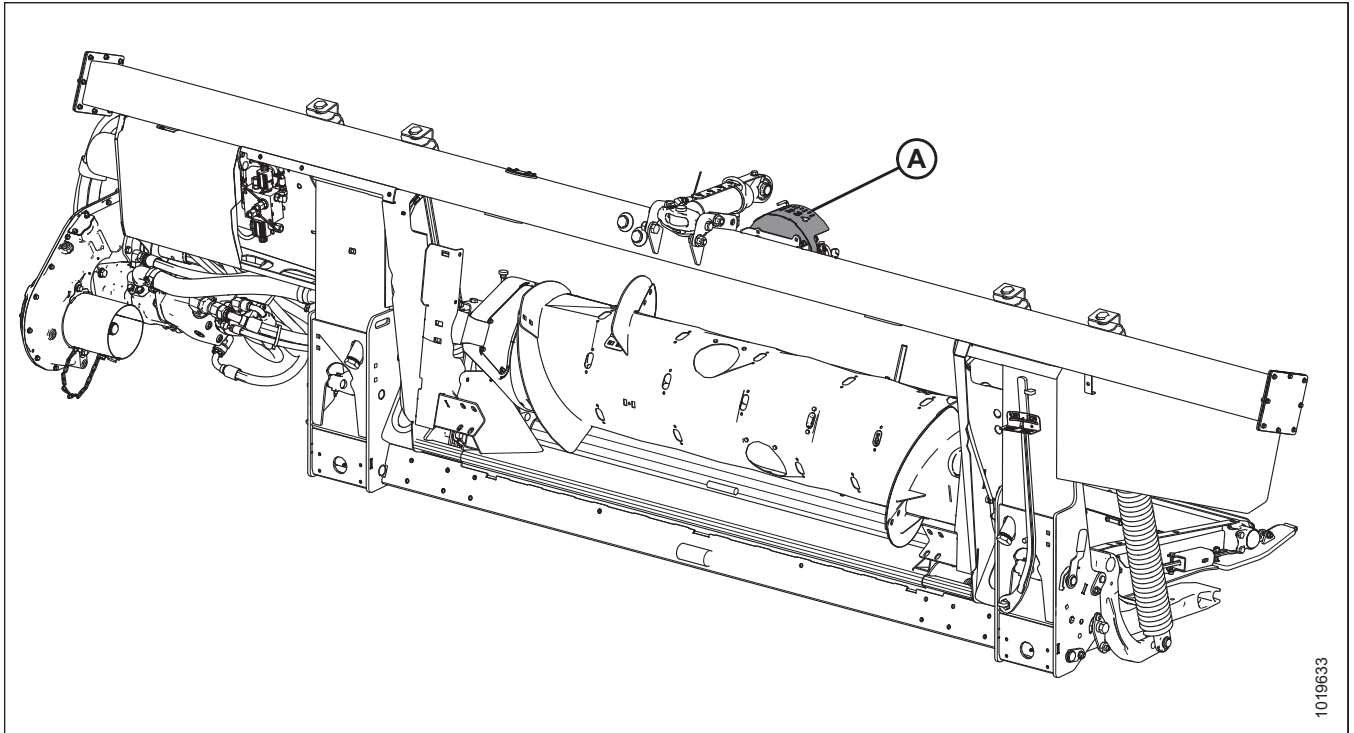

FM100 Float Modules are factory-equipped for AHHC; however, before using the AHHC feature, you must do the following:

1. Ensure that the AHHC sensor's output voltage range is appropriate for the combine.
For more information, refer to [3.8.2 Sensor Output Voltage Range – Combine Requirements, page 141](#).
2. Prepare the combine to use the AHHC feature (applies only to some combine models—refer to the instructions for your combine).
3. Calibrate the AHHC system so that the combine can correctly interpret data from the height sensor on the combine float module (refer to the instructions for your combine).

NOTE:

Once calibration is complete, you are ready to use the AHHC feature in the field. Individual combine settings can improve AHHC performance (refer to your combine instruction manual).

Refer to the following instructions for your specific combine model:

- [3.8.3 Case IH 5088/6088/7088 Combines, page 150](#)
- [3.8.5 Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230 and 7240/8240/9240 Combines, page 160](#)

OPERATION

- [*3.8.6 Challenger and Massey Ferguson 6 and 7 Series Combines, page 174*](#)
- [*3.8.7 Gleaner R65/R66/R75/R76 and S Series Combines, page 181*](#)
- [*3.8.8 Gleaner S9 Series Combines, page 191*](#)
- [*3.8.9 John Deere 60 Series Combines, page 205*](#)
- [*3.8.10 John Deere 70 Series Combines, page 213*](#)
- [*3.8.11 John Deere S and T Series Combines, page 220*](#)
- [*3.8.13 CLAAS 500 Series Combines, page 247*](#)
- [*3.8.14 CLAAS 600 and 700 Series Combines, page 257*](#)
- [*3.8.15 New Holland Combines \(CR/CX Series—Pre-2015 Model Year\), page 263*](#)
- [*3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\), page 273*](#)

3.8.1 Sensor Operation

The position sensors supplied with the auto header height control (AHHC) system are hall-effect sensors containing sealed connectors. Normal operating signal voltages for the sensors fall between 10% (0.5 VDC) and 90% (4.5 VDC). An increase in sensor voltage correlates to an increase in header height.

Any sensor error results in a 0 V signal, indicating either a faulty sensor or lack of proper supply voltage.

3.8.2 Sensor Output Voltage Range – Combine Requirements

The auto header height control (AHHC) sensor output must be within a specific voltage range for each combine, or the AHHC feature will not work properly.

Table 3.20 Combine Voltage Limits

Combine	Low Voltage Limit	High Voltage Limit	Range (Difference between High and Low Limits)
Challenger, Gleaner A, Massey Ferguson	0.5 V	4.5 V	2.5 V
Case IH 5088/6088/7088, 5130/6130/7130, 7010/8010, 7120/8120/9120, 7230/8230/9230, and 7240/8240/9240	0.5 V	4.5 V	2.5 V
Case IH 2588/2577	2.8 V	7.2 V	4.0 V
Gleaner R and S Series	0.5 V	4.5 V	2.5 V
John Deere 60, 70, S, and T Series	0.5 V	4.5 V	2.5 V
CLAAS 500/600/700 Series	0.5 V	4.5 V	2.5 V
New Holland CR/CX - 5 V system	0.7 V	4.3 V	2.5 V
New Holland CR/CX - 10 V system	2.8 V	7.2 V	4.1–4.4 V

NOTE:
Some combine models do not support checking sensor output voltage from the cab (early Case 23/2588 series, CLAAS 500/600/700 Series). For these models, check output voltage manually. Refer to [Manually Checking Voltage Range: One-Sensor System, page 142](#) or [Manually Checking Voltage Range: Two-Sensor System, page 144](#).

10-Volt Adapter (MD #B6421) – New Holland Combines Only

New Holland combines with a 10 V system require the 10 V adapter (A) (MD #B6421) for proper calibration of the auto header height control (AHHC) feature.

If a 10 V New Holland combine does not have the adapter installed, the AHHC output will always read 0 V, regardless of sensor position.

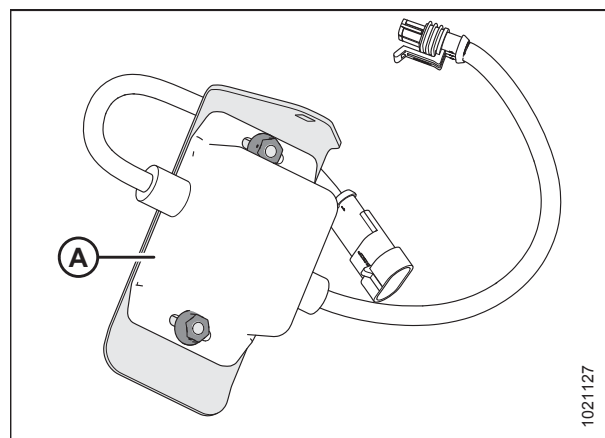


Figure 3.172: 10 V Adapter (MD #B6421)

OPERATION

Use a voltmeter to measure the voltage between Pin 1 (power) and Pin 2 (ground) wires at the AHHC sensor (A). This will determine whether the combine has a 5 V system or a 10 V system.

NOTE:

Combine key must be in ON position, but engine does not need to be running.

The three possible voltage readings are as follows:

- 0 V – combine key is in OFF position, or there is a faulty harness/bad connection
- 5 V – standard combine reading
- 10 V – 10 V combine reading; adapter (MD #276759) is required

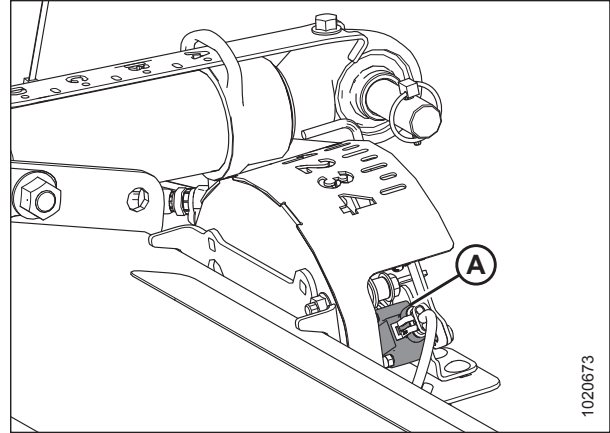


Figure 3.173: Float Indicator Box

Manually Checking Voltage Range: One-Sensor System

The one-sensor system is standard for the FM100 Float Module. If equipped with the optional two-sensor system, refer to [Manually Checking Voltage Range: Two-Sensor System, page 144](#).

The output voltage range of the auto header height control (AHHC) sensors in some combines can be checked from the cab. For instructions, refer to your combine operator's manual or the AHHC instructions later in this document.

To manually check the sensor's output voltage range, follow these steps:

1. Extend guard angle fully; the header angle indicator should be at **D**.
2. Position the header 150 mm (6 in.) above the ground, and unlock the float.
3. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

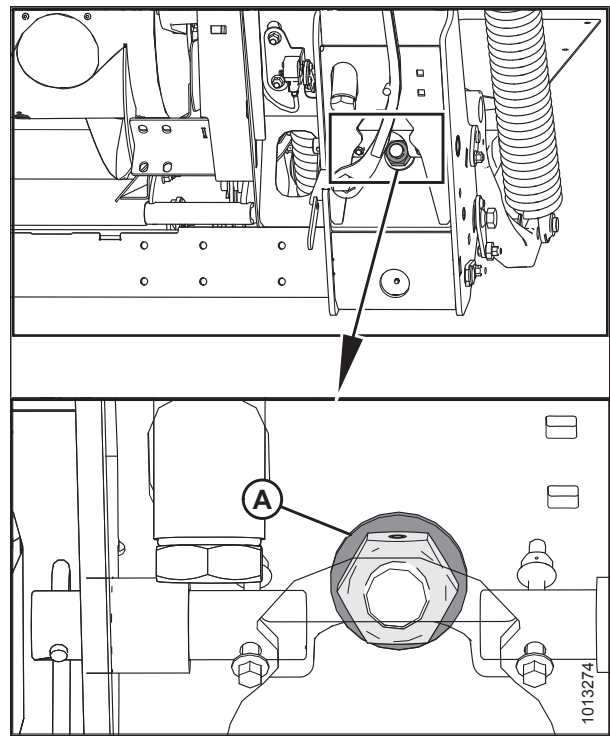


Figure 3.174: Down Stop Washer

OPERATION

- Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on 0.

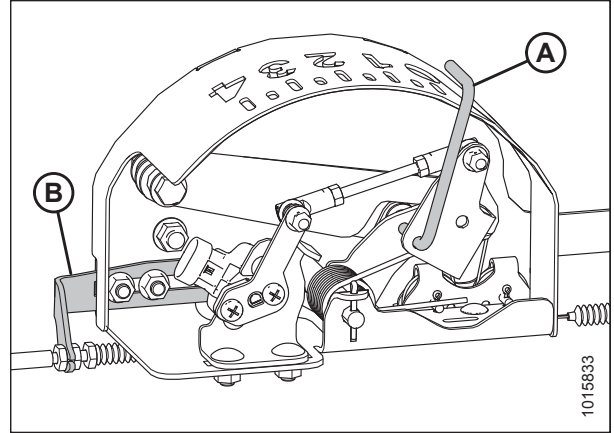


Figure 3.175: Float Indicator Box

- Use a voltmeter (A) to measure the voltage between the ground (Pin 2) and signal (Pin 3) wires at the AHHC sensor in the float indicator box. Ensure it is at the high voltage limit for the combine. Refer to Table 3.20, page 141.

NOTE:

The wiring harness connector must be attached to the sensor. Do **NOT** disconnect it.

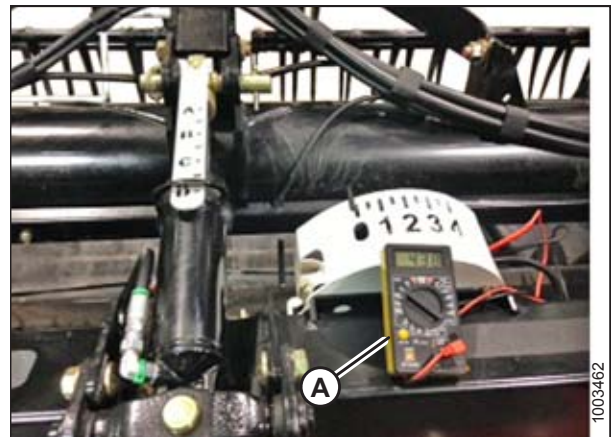


Figure 3.176: Measuring Voltage at Float Indicator Box

- Fully lower the combine feeder house, and float the header up off the down stops (float indicator should be at 4, and the float module should be fully separated from the header).

NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

- Use a voltmeter (A) to measure the voltage between the ground and signal wires at the AHHC sensor in the float indicator box. It should be at the low voltage limit for the combine. Refer to Table 3.20, page 141.

NOTE:

The wiring harness connector must be attached to the sensor. Do **NOT** disconnect it.

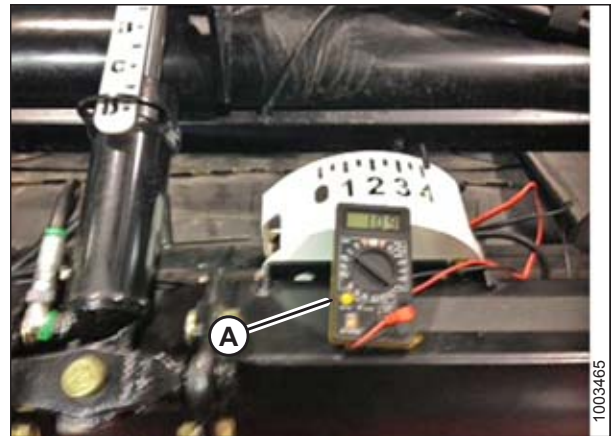


Figure 3.177: Measuring Voltage at Float Indicator Box

- If the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient, adjust the voltage limits. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).

OPERATION

Manually Checking Voltage Range: Two-Sensor System

FM100 Float Modules equipped with the optional two-sensor system have a left and right sensor located on the back frame of the float module.

To manually check the sensor's output voltage range, follow these steps:

1. Extend guard angle fully; the header angle indicator should be at **D**.
2. Position the header 150 mm (6 in.) above the ground, and unlock the float.
3. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

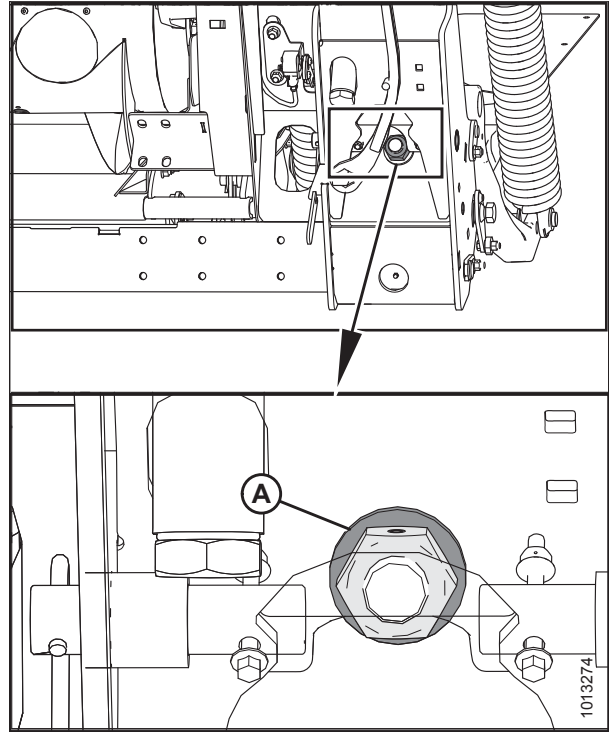


Figure 3.178: Down Stop Washer

4. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on 0.

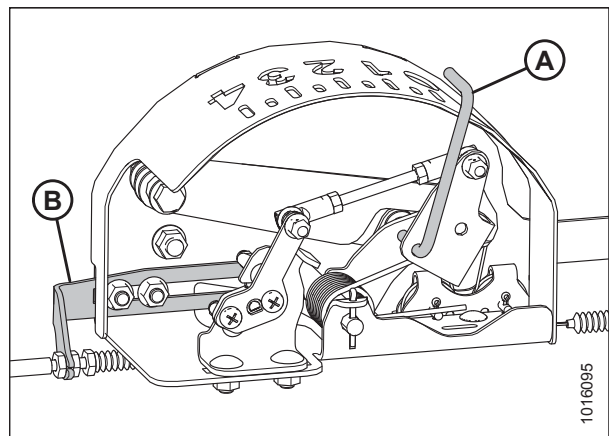


Figure 3.179: Float Indicator Box

OPERATION

5. Use a voltmeter to measure the voltage between the ground (Pin 2) and signal (Pin 3) wires of the AHHC sensor (A) at the back of the float module side frame. Ensure it is at the high voltage limit for the combine. Refer to Table 3.20, page 141.

NOTE:

The wiring harness connector must be attached to the sensor. Do **NOT** disconnect it.

6. Repeat at the opposite side.

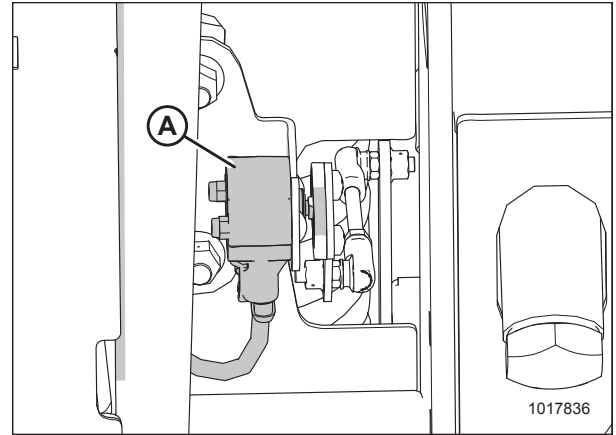


Figure 3.180: Optional Two-Sensor Kit – Right Sensor

7. Fully lower the combine feeder house, and float the header up off the down stops (float indicator [A] should be at 4, and the float module should be fully separated from the header).

NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

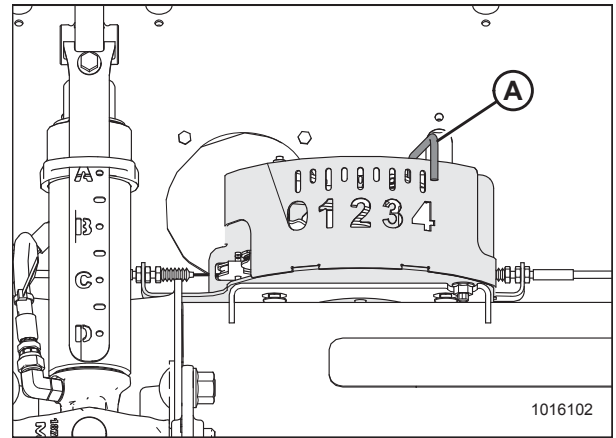


Figure 3.181: Float Indicator Box

8. Using a voltmeter, measure the voltage between the ground (Pin 2) and signal (Pin 3) wires of the AHHC sensor (A) at the back of the side frame. Ensure it is at the high voltage limit for the combine. Refer to Table 3.20, page 141.

NOTE:

The wiring harness connector must be attached to the sensor. Do **NOT** disconnect it.

9. If the sensor voltage is not within the low and high limits, or if the range between the low and high limits is insufficient, adjust the voltage limits. Refer to [Adjusting Voltage Limits: Two-Sensor System, page 147](#).
10. Repeat at the opposite side.

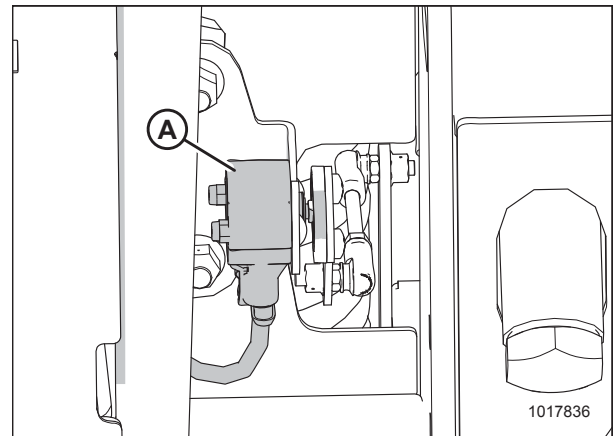


Figure 3.182: Optional Two-Sensor Kit – Right Sensor

Adjusting Voltage Limits: One-Sensor System

Follow this procedure if you have checked the voltage range (either manually or from the cab) and found that the sensor voltage is not within the low and high limits or that the range between the low and high limits is insufficient.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Follow these steps to adjust the upper voltage limit:
 - a. Extend guard angle fully; the header angle indicator should be at **D**.
 - b. Position header 152–254 mm (6–10 in.) above the ground; the float indicator should be at 0.
 - c. Check the upper voltage limit using the combine display or voltmeter. Refer to Table 3.20, page 141.
 - d. Loosen sensor mounting nuts (A).
 - e. Rotate sensor (B) counterclockwise to increase high voltage limit and clockwise to decrease it.
 - f. Tighten sensor mounting nuts (A).

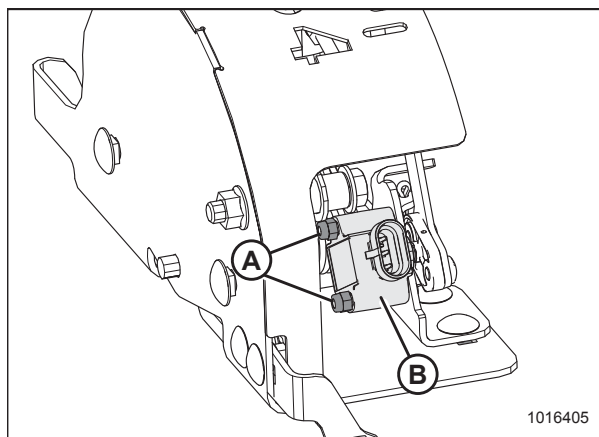


Figure 3.183: AHC Sensor Assembly

2. Follow these steps to adjust the lower voltage limit:
 - a. Extend guard angle fully; the header angle indicator should be at **D**.
 - b. Fully lower header on the ground; the float indicator should be at 4.
 - c. Check the lower voltage limit using the combine display or voltmeter. Refer to Table 3.20, page 141.
 - d. Loosen sensor mounting nuts (A).
 - e. Rotate sensor (B) counterclockwise to increase low voltage limit and clockwise to decrease it.
 - f. Tighten sensor mounting nuts (A).

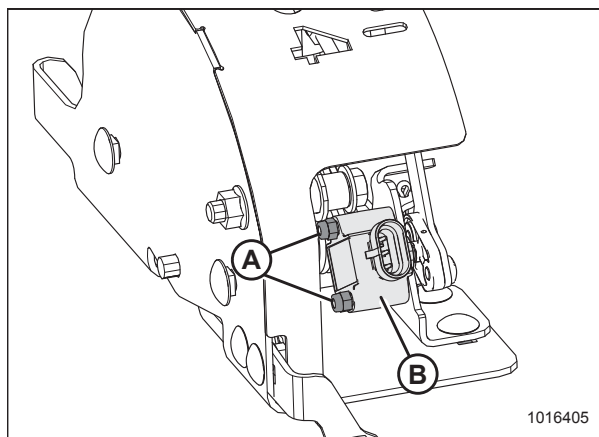


Figure 3.184: AHC Sensor Assembly

3. After making adjustments, recheck both the upper and lower voltage limits to make sure they are within the required range according to Table 3.20, page 141.

OPERATION

4. If unable to get the voltage within the required range, loosen mounting bolts (A) and shift sensor assembly (B) inboard as shown.

NOTE:

If sensor assembly is shifted right or left, it may be necessary to repeat Steps 1, [page 146](#) and 2, [page 146](#) to achieve the proper voltage limits.

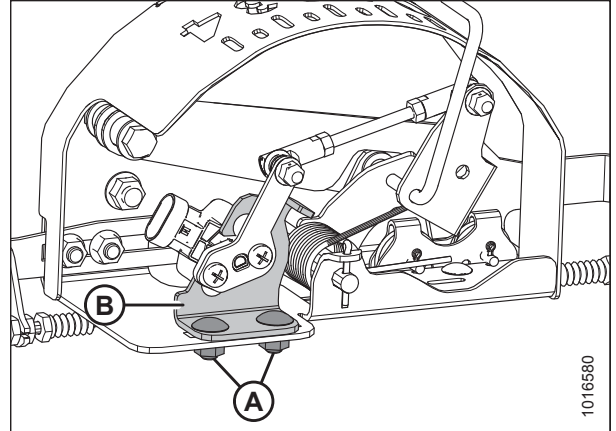


Figure 3.185: AHC Sensor Assembly

Adjusting Voltage Limits: Two-Sensor System

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Extend guard angle fully; the header angle indicator should be at **D**.
2. Position header 150–254 mm (6–10 in.) above the ground; the float indicator should be at **0**.
3. Follow these steps to adjust left sensor voltage:
 - a. Loosen sensor mounting nuts (A).
 - b. Rotate sensor (B) counterclockwise to lower the voltage. Rotate sensor clockwise to raise the voltage.
 - c. Check that the left sensor is at the correct upper voltage limit according to Table 3.20, [page 141](#).
 - d. Tighten sensor mounting nuts (A).

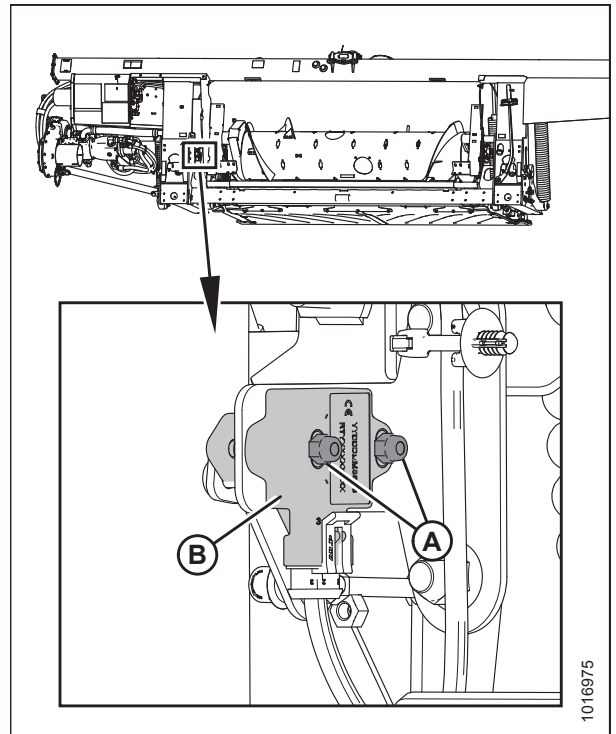


Figure 3.186: Optional Two-Sensor Kit – Left Sensor

OPERATION

4. Follow these steps to adjust right sensor voltage:
 - a. Loosen sensor mounting nuts (A).
 - b. Rotate sensor (B) clockwise to lower the voltage. Rotate sensor counterclockwise to raise the voltage.
 - c. Check that the right sensor is at the correct upper voltage limit according to Table 3.20, page 141.
 - d. Tighten sensor mounting nuts (A).

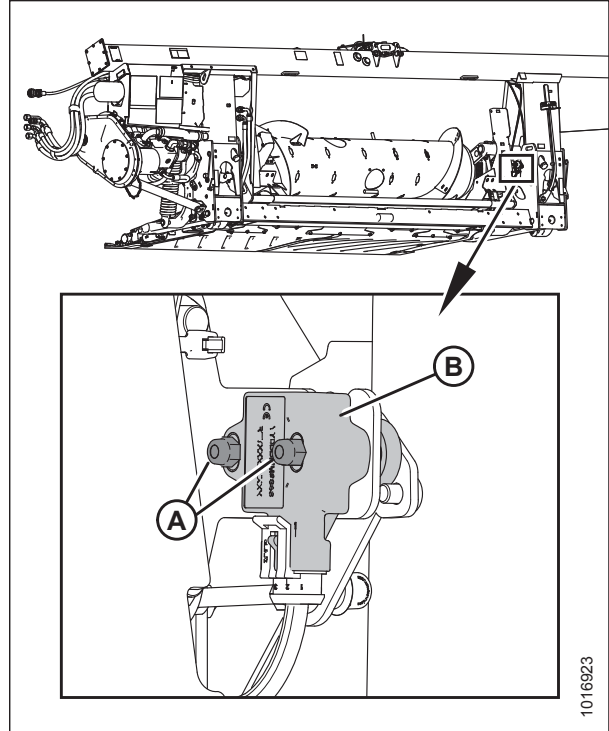


Figure 3.187: Optional Two-Sensor Kit – Right Sensor

5. Fully lower the header; the float indicator (A) should be at 4.
6. Check that both sensors are at the correct lower voltage limit according to Table 3.20, page 141.

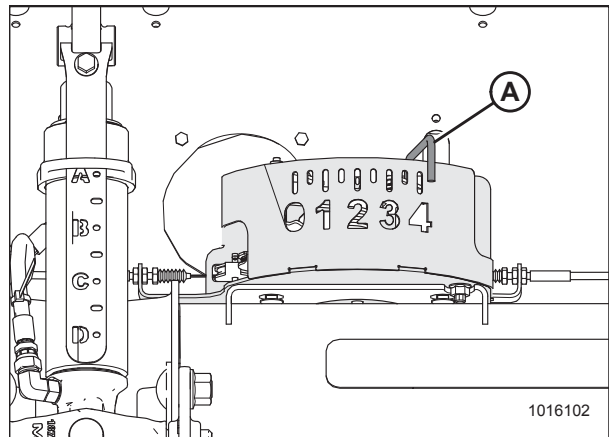


Figure 3.188: Float Indicator Box

Replacing the Auto Header Height Control (AHHC) Sensor (One-Sensor System)

CAUTION

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Disconnect the wiring harness (A) from the existing sensor (B).
2. Remove the two screws (C) that secure the sensor (B) to the sensor arm (D).

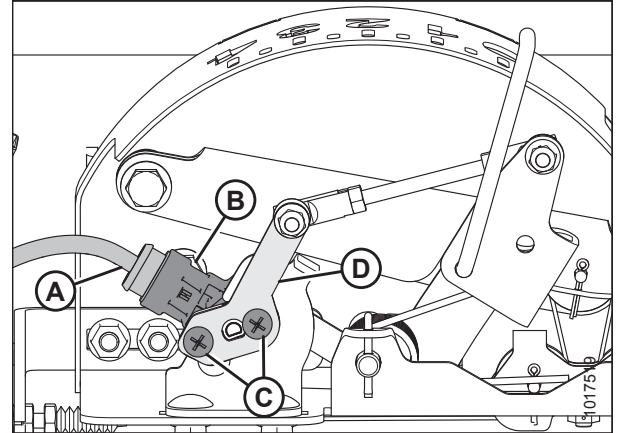


Figure 3.189: AHHC Sensor

3. Swing the sensor arm (A) upwards to gain access to the two bolts (B) securing the sensor (C) to the bracket (D).
4. Remove the two bolts and nuts (B) that secure the sensor (C) to the bracket (D).
5. Pull sensor (C) away from the bracket (D).

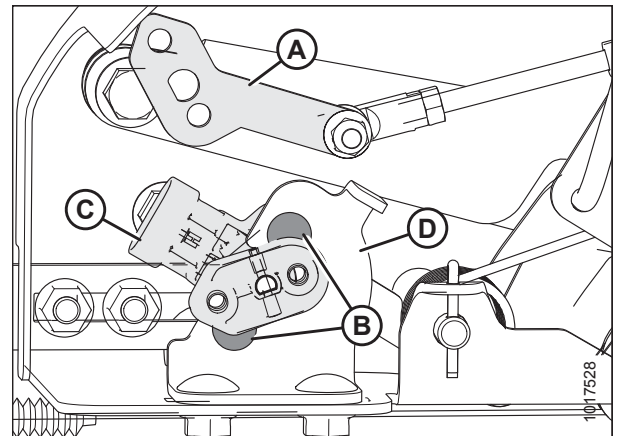


Figure 3.190: AHHC Sensor

IMPORTANT:

To avoid damaging the new sensor, install sensor as follows:

6. Position the new sensor (A) on the bracket (B).
7. Secure with two bolts (C) and nuts (D).

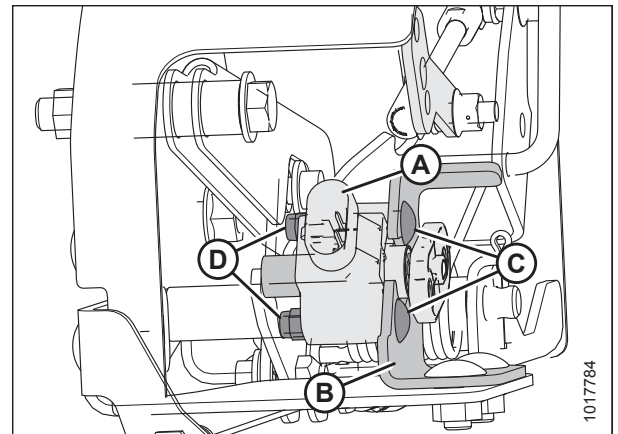


Figure 3.191: AHHC Sensor

OPERATION

8. Attach sensor arm (A) to the sensor (B) and secure with two screws (C).
9. Reconnect the wiring harness to the plug (B) on the sensor.
10. Check the voltage range of the new sensor, and adjust if necessary. Refer to:
 - [Manually Checking Voltage Range: One-Sensor System, page 142](#)
 - [Adjusting Voltage Limits: One-Sensor System, page 146](#)

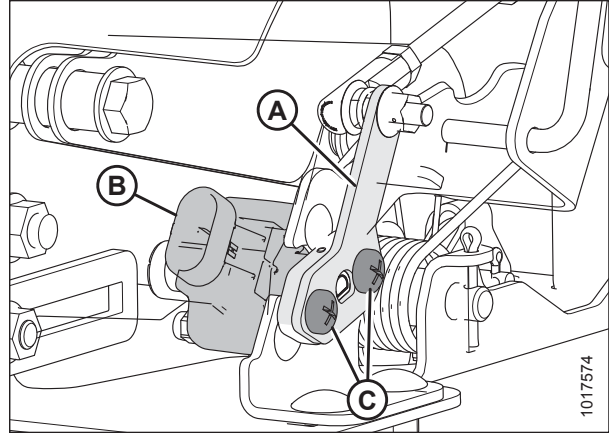


Figure 3.192: AHHC Sensor

3.8.3 Case IH 5088/6088/7088 Combines

Calibrating the Auto Header Height Control (Case IH 5088/6088/7088)

For best performance of the auto header height control (AHHC) system, perform ground calibration with center-link set to **D**. When calibration is complete, adjust the center-link back to desired header angle. For instructions, refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

CAUTION

Check to be sure all bystanders have cleared the area.

1. Ensure center-link is set to **D**.
2. Set the float on the header. Refer to [3.7.3 Header Float, page 87](#). Position fore-aft in mid span.
3. Start the combine engine, but do **NOT** have separator or feeder house engaged.
4. Locate HEADER CONTROL switch (A) on the right console, and set to HT (this is AHHC mode).

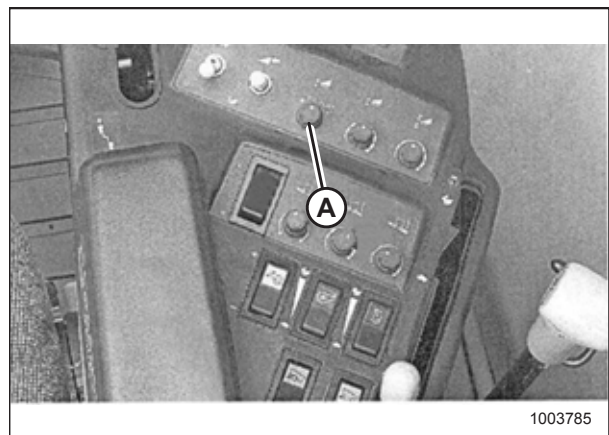


Figure 3.193: Right Console

OPERATION

5. Press the HEADER LOWER switch (A) on the control handle until the float module and header are fully lowered. You may need to hold the switch for several seconds.
6. Press the HEADER RAISE switch (A) on the control handle. The header should stop at about the halfway point. Continue holding the HEADER RAISE switch, and the header will rise until the feeder house reaches its upper limit. The AHHC system is now calibrated.

NOTE:

If float was set heavier to complete the ground calibration procedure, adjust to recommended operating float after the calibration is complete.

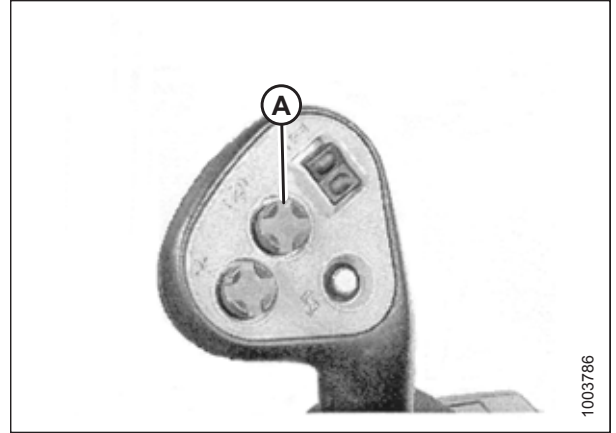


Figure 3.194: Control Handle (Case IH 2300/2500)

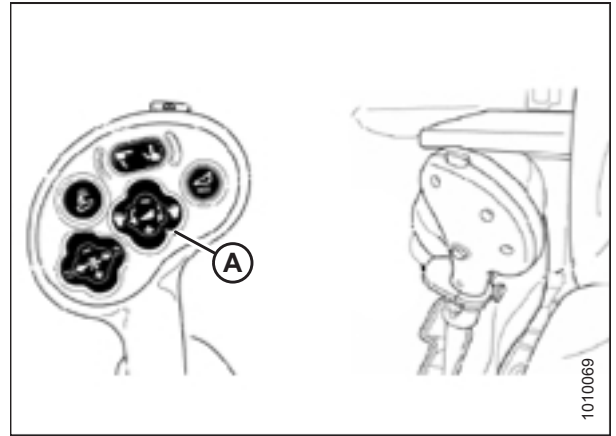


Figure 3.195: Control Handle (Case IH 5088/6088/7088)

Setting the Sensitivity of the Auto Header Height (Case IH 5088/6088/7088)

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

OPERATION

1. Use the HEADER SETTINGS key (M) to display the HEADER SENSITIVITY CHANGE page as shown in Figure 3.197, page 152.
2. Use the UP or DOWN keys (E) or (H) to adjust the highlighted item. The height sensitivity setting range is 0 (least sensitive) to 250 (most sensitive) in increments of 10.

NOTE:

Adjustments take effect immediately. Use the CANCEL key to return to the original settings.

3. Use the HEADER SETTINGS key (M) to highlight the next changeable item.
4. Use the ENTER key (D) to save changes and return to the monitor screen. If there are no changes, the screen will return to the monitor screen after 5 seconds.



Figure 3.196: Combine Controls

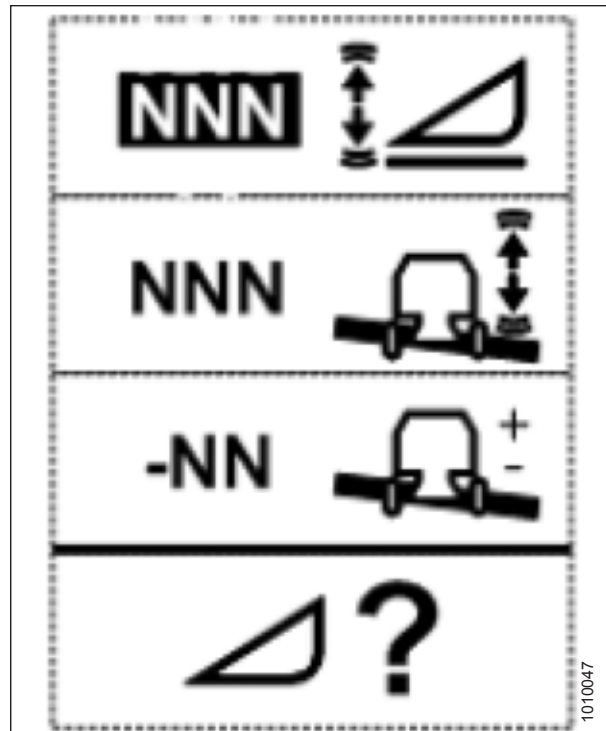


Figure 3.197: Height Sensitivity Change Page

3.8.4 Case IH 5130/6130/7130 and 5140/6140/7140 Mid-Range Combines

Setting up the Header on the Combine Display (Case IH 5130/6130/7130; 5140/6140/7140)

1. On the main page of the combine display, select TOOLBOX (A).

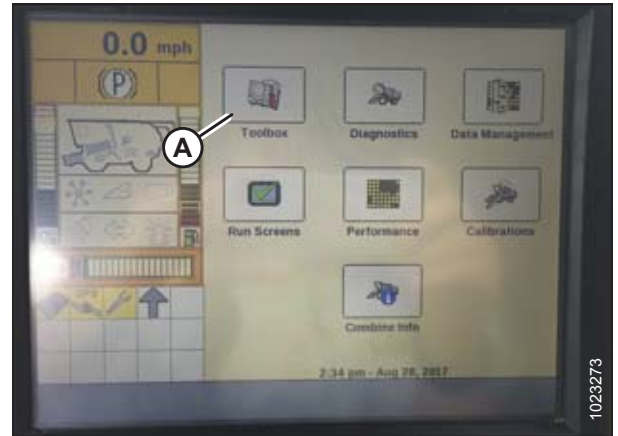


Figure 3.198: Case IH Combine Display

2. Select the HEAD 1 tab (A). The HEADER SETUP page displays.
3. From the CUTTING TYPE menu (B), select PLATFORM.



Figure 3.199: Case IH Combine Display

4. Select the HEAD 2 tab (A). The HEADER SETUP 2 page displays.
5. From the HEADER PRESSURE FLOAT menu (B), select NOT INSTALLED.
6. If you are operating a D1 Draper Header, from the DRAPER GRAIN HEADER STYLE menu (C), select RIGID 2000 SERIES.

If you are operating an FD1 FlexDraper® Header, from the DRAPER GRAIN HEADER STYLE menu (C), select FLEX 2000 SERIES.

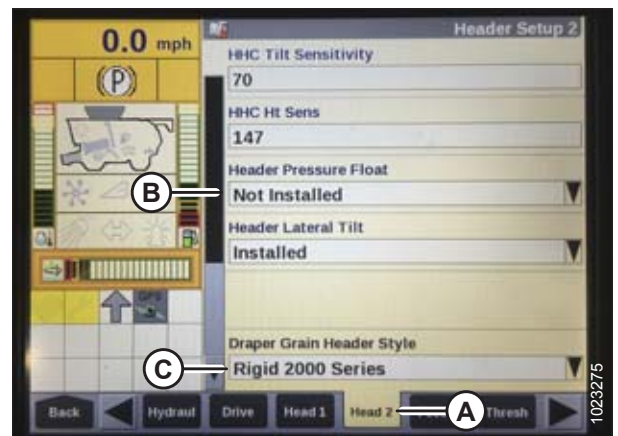


Figure 3.200: Case IH Combine Display

OPERATION

7. From the REEL DRIVE TYPE menu (A), select
 - 4 if you are using a 19-tooth drive sprocket
 - 5 if you are using a 14-tooth drive sprocket
 - 6 if you are using a 10-tooth drive sprocket

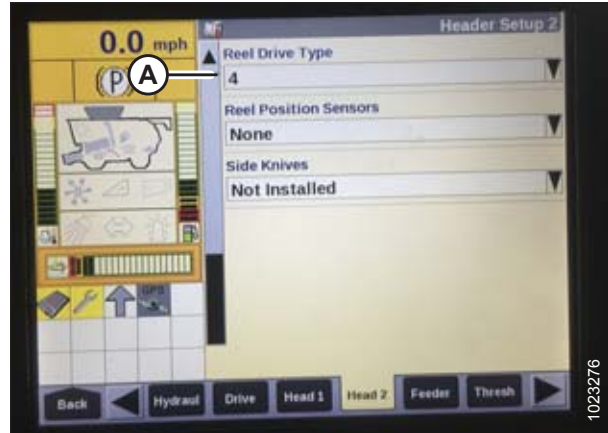


Figure 3.201: Case IH Combine Display

8. From the REEL HEIGHT SENSOR menu (A), select YES.



Figure 3.202: Case IH Combine Display

Checking Voltage Range from Combine Cab (Case IH 5130/6130/7130; 5140/6140/7140)

NOTE:

Changes may have been made to combine controls or display since this document was published. Refer to combine operator's manual for updates.



CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.

OPERATION

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the auto header height control (AHHC) system.

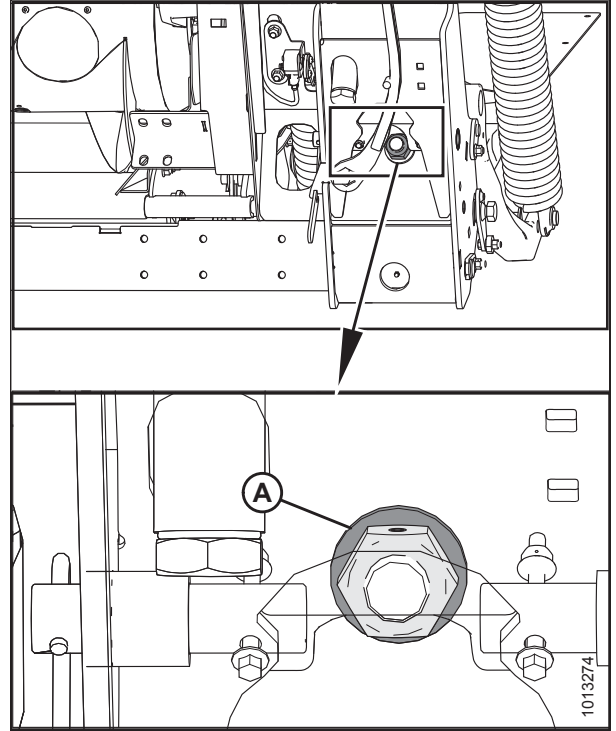


Figure 3.203: Float Lock

3. Adjust cable take-up bracket (B) (if necessary) until pointer (A) on float indicator is on 0.
4. Ensure header float is unlocked.

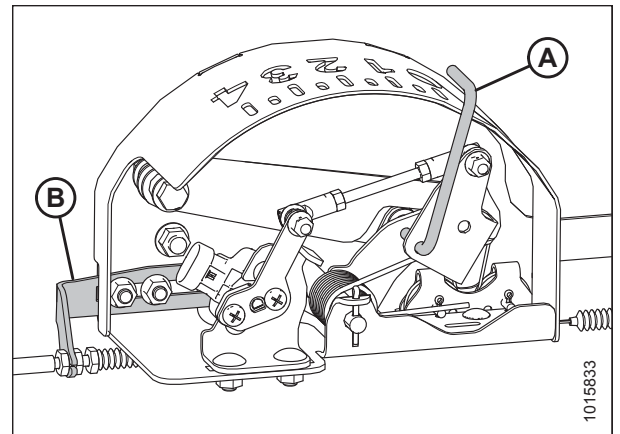


Figure 3.204: Float Indicator Box

OPERATION

- On the main page of the combine display, select **DIAGNOSTICS (A)**. The **DIAGNOSTICS** page opens.

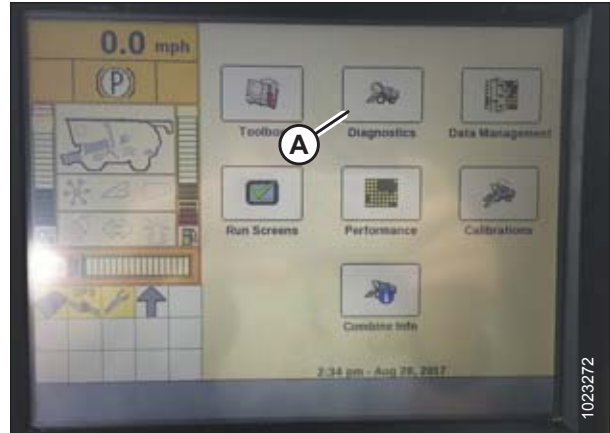


Figure 3.205: Case IH Combine Display

- Select **SETTINGS (A)**. The **SETTINGS** page opens.
- From the **GROUP** menu, select **HEADER (B)**.

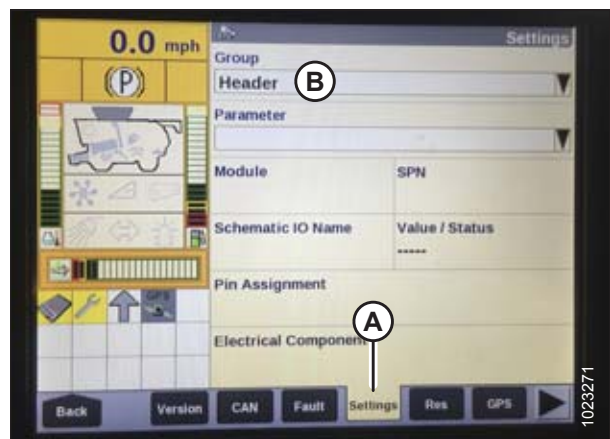


Figure 3.206: Case IH Combine Display

- From the **PARAMETER** menu, select **LEFT HEIGHT/TILT SENSOR (A)**.



Figure 3.207: Case IH Combine Display

OPERATION

9. The SETTINGS page updates to display the voltage in the VALUE/STATUS field (A). Lower the feeder house fully, and then raise it 305 mm (12 in.) off the ground to view the full range of voltage readings.
10. If the sensor voltage is not within the low and high limits, or if the range between the low and high limits is insufficient, adjust the voltage limits. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).



Figure 3.208: Case IH Combine Display

Calibrating Auto Header Height Control (Case IH 5130/6130/7130, 5140/6140/7140)

For best performance of the auto header height control (AHHC), perform these procedures with center-link set to D. When setup and calibration are complete, adjust center-link back to desired header angle. Refer to [3.7.4 Header Angle, page 94](#).

NOTE:

This procedure applies to combines with a software version below 28.00. For instructions on calibrating the AHHC for combines with software version 28.00 or above, refer to [Calibrating the Auto Header Height Control \(Case Combines with Version 28.00 or Higher Software\), page 169](#).

NOTE:

Changes may have been made to combine controls or display since this document was published. Refer to combine operator's manual for updates.

1. Ensure center-link is set to **D**.
2. Ensure all header and float module electrical and hydraulic connections are made.
3. Lower the combine feeder house all the way down (the feeder house will stop moving).
4. Hold the DOWN button for 10 seconds.
5. Push the RAISE button and hold it until the feeder house travels all the way up. It will stop 61 cm (2 ft.) above ground for 5 seconds, then it will resume lift. This is an indication that calibration is successful.

Setting Preset Cutting Height (Case 5130/6130/7130, 5140/6140/7140)

To set preset cutting height, follow these steps:

NOTE:

Changes may have been made to combine controls or display since this document was published. Refer to combine operator's manual for updates.



CAUTION

Check to be sure all bystanders have cleared the area.

OPERATION

NOTE:

The indicator (A) should be at position 0 (B) with the header 152 mm (6 in.) off the ground. If not, the float sensor output voltage should be checked. Refer to Step 4, page 143. When the header is on the ground, the indicator should be at position 1 (C) for low ground pressure, and at position 4 (D) for high ground pressure. Crop and soil conditions determine the amount of float to use. The ideal setting is as light as possible without header bouncing or missing crop. Operating with heavy settings prematurely wears the cutterbar wearplates.

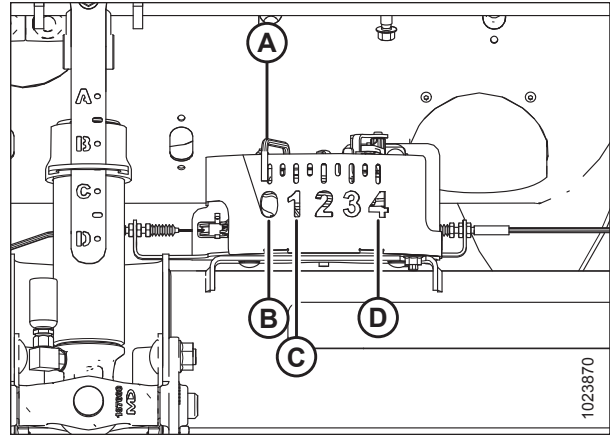


Figure 3.209: Float Indicator Box

1. Engage separator and header.
3. Manually raise or lower header to desired cutting height.
4. Press 1 on button (A). A yellow light next to the button will illuminate.

NOTE:

When setting presets, always set header position before setting reel position. If header and reel are set at the same time, the reel setting will not save.

5. Manually raise or lower reel to desired position.
6. Press 1 on button (A). A yellow light next to the button will illuminate.



Figure 3.210: Case Combine Console

7. Manually raise or lower header to a second desired cutting height.
8. Press 2 on button (A). A yellow light next to the button will illuminate.
9. Manually raise or lower reel to desired position.
10. Press 2 on button (A). A yellow light next to the button will illuminate.



Figure 3.211: Case Combine Console

OPERATION

Up and down arrows should now appear in the MANUAL HEIGHT box (A) on the RUN 1 page on the combine display. This indicates that the auto header height control (AHHC) is functioning.



Figure 3.212: Case Combine Display – Run 1 Page

11. To enable the presets, activate AHHC button (A) to place the header on the ground. To enable the first preset, tap the button once. To enable the second preset, tap the button twice.

To lift the header to maximum working height, hold the SHIFT button on the back of the control handle while tapping AHHC button (A).



Figure 3.213: Case Combine Control Handle

12. The maximum working height can be adjusted on the HEADER SETUP page on the combine display. Enter the desired height in the MAXIMUM WORKING HEIGHT field (A).



Figure 3.214: Case Combine Display – Header Setup Page

OPERATION

13. If you need to change the position of one of the presets, you can fine tune this setting with button (A) on the combine console.



Figure 3.215: Case Combine Console

3.8.5 Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230 and 7240/8240/9240 Combines

Checking Voltage Range from the Combine Cab (Case 8010)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.

OPERATION

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHC system.

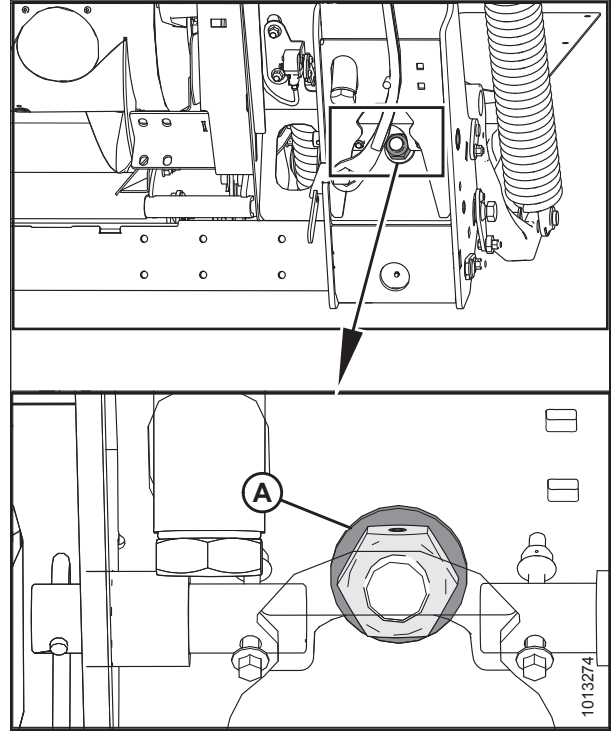


Figure 3.216: Float Lock

3. Adjust cable take-up bracket (B) (if necessary) until pointer (A) on float indicator is on 0.

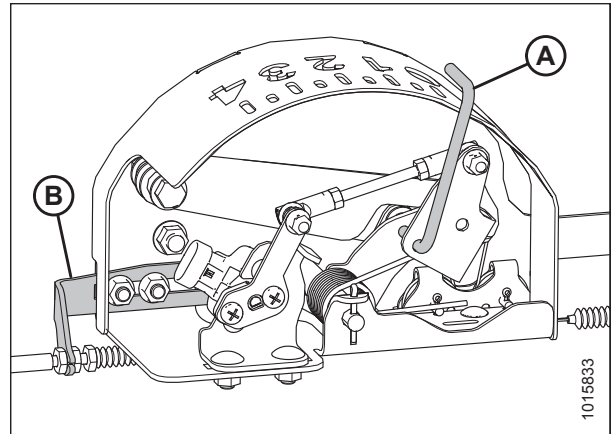


Figure 3.217: Float Indicator Box

OPERATION

4. Ensure header float is unlocked.
5. Select DIAG (A) on the Universal display MAIN screen. The DIAG screen displays.

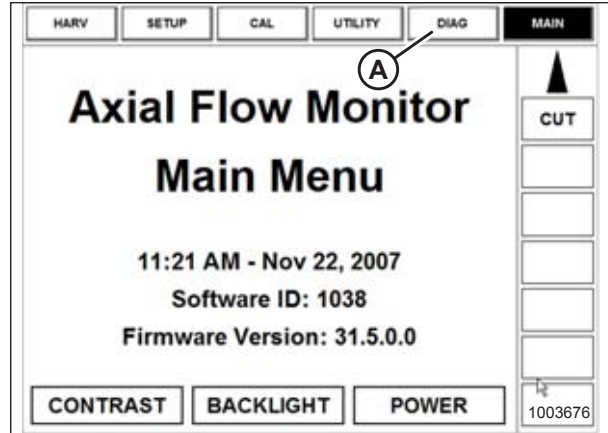


Figure 3.218: Case 8010 Combine Display

6. Select SUB SYSTEM (A). The SUB SYSTEM screen displays.

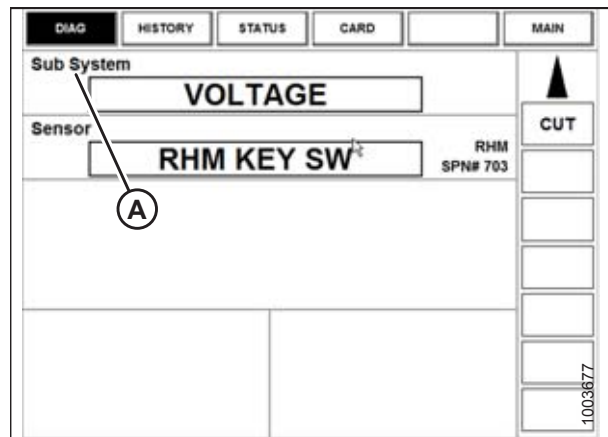


Figure 3.219: Case 8010 Combine Display

7. Select HDR HEIGHT/TILT (A). The SENSOR screen displays.

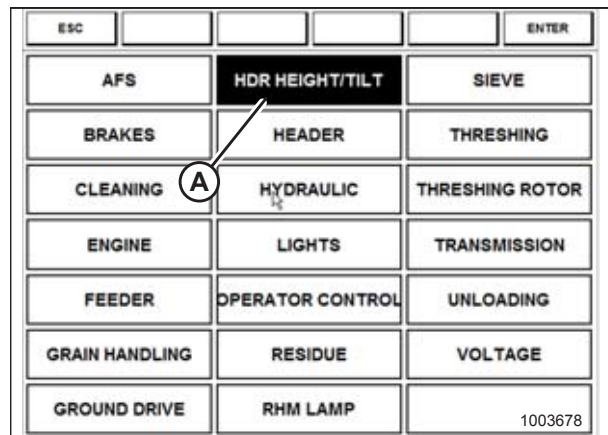


Figure 3.220: Case 8010 Combine Display

OPERATION

8. Select LEFT SEN (A). The exact voltage is displayed. Raise and lower the header to see the full range of voltage readings.

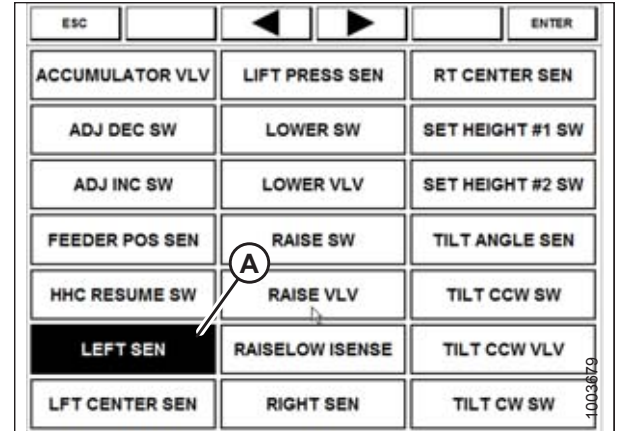


Figure 3.221: Case 8010 Combine Display

9. If the sensor voltage is not within the low and high limits, or if the range between the low and high limits is insufficient, adjust the voltage limits. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).



Figure 3.222: Case 8010 Combine Display

Setting Header Controls (Case 8010)

The following procedure applies to Case 8010 combines without a shift button on the control handle.

The reel fore/aft switches (A) also control header fore/aft tilt if header is equipped with the fore/aft tilt option. The switches can be configured to allow the Operator to swap between reel fore/aft and header fore/aft tilt.

To set the header controls, follow these steps:

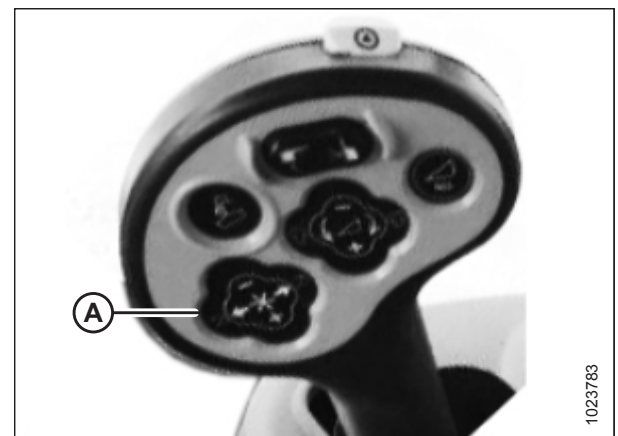


Figure 3.223: Case Combine Controls

OPERATION

1. To swap between reel fore/aft controls and header fore/aft tilt controls, go to the LAYOUT tab, select FORE/AFT CONTROL (A) from the legend, and place it on one of the operator-configurable screens (HARV1, HARV2, HARV3) or ADJUST under the RUN menu.

NOTE:

H F/A (B) is displayed on the status bar on the right of the screen when HEADER is selected with the FORE/AFT CONTROL.

2. If HEADER is selected with the FORE/AFT CONTROL, press the reel aft button on the control handle to tilt the header rearward, or press the reel fore button on the control handle to tilt the header forward.

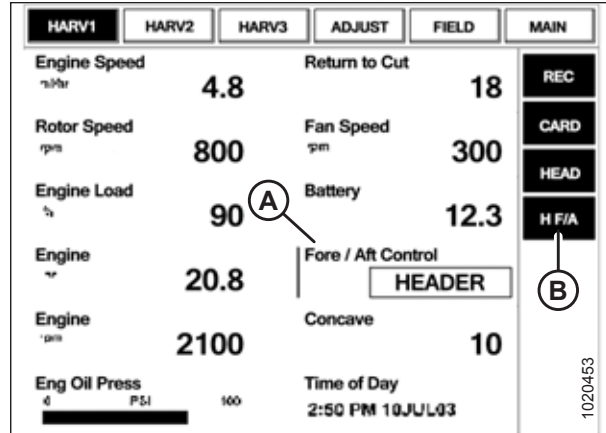


Figure 3.224: Case Combine Display

Checking Voltage Range from the Combine Cab (Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the auto header height control (AHHC) system.

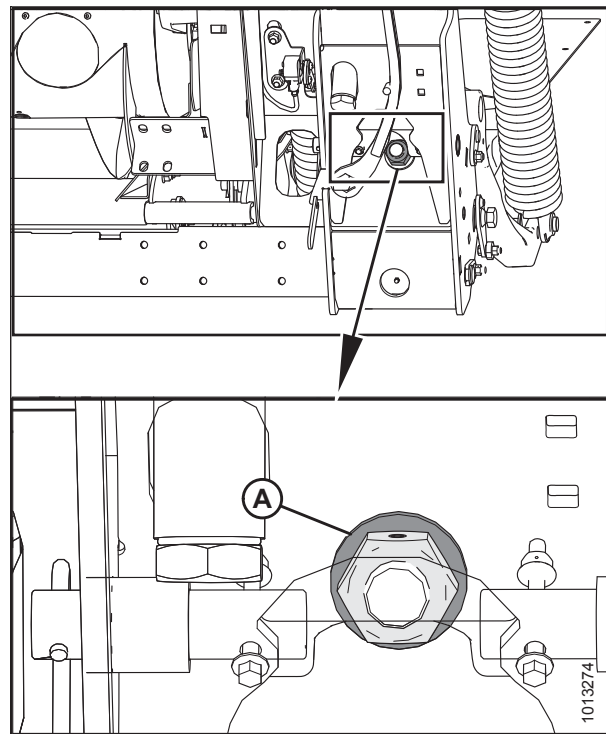


Figure 3.225: Float Lock

OPERATION

3. Adjust cable take-up bracket (B) (if necessary) until pointer (A) on float indicator is on 0.

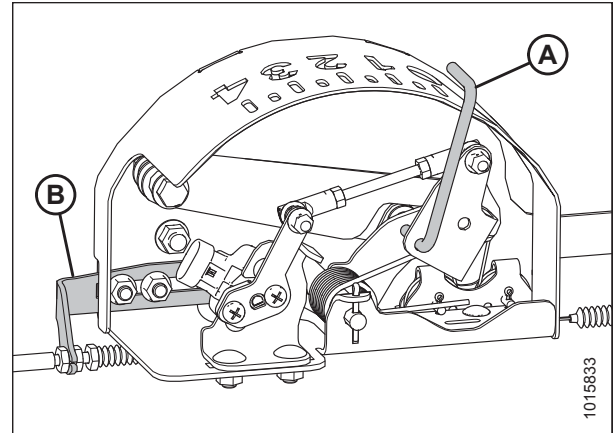


Figure 3.226: Float Indicator Box

4. Ensure header float is unlocked.
5. Select DIAGNOSTICS (A) on the MAIN page. The DIAGNOSTICS page opens.
6. Select SETTINGS. The SETTINGS page opens.

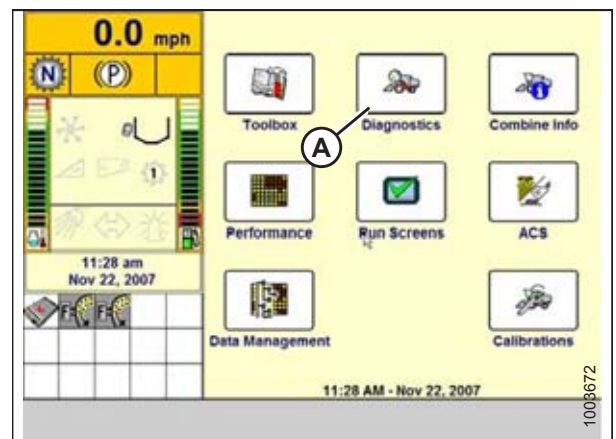


Figure 3.227: Case IH Combine Display

7. Select the GROUP arrow (A). The GROUP dialog box opens.

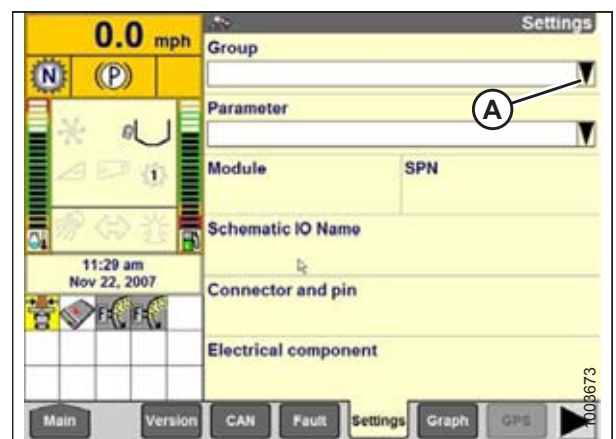


Figure 3.228: Case IH Combine Display

OPERATION

8. Select HEADER HEIGHT/TILT (A). The PARAMETER page opens.

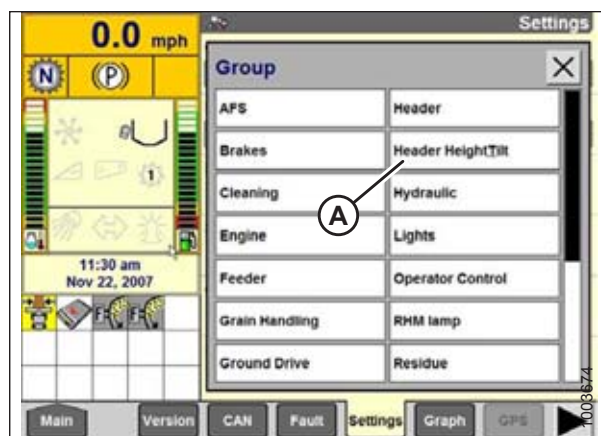


Figure 3.229: Case IH Combine Display

9. Select LEFT HEADER HEIGHT SEN (A), and then select the GRAPH button (B). The exact voltage is displayed at top of page. Raise and lower the header to see the full range of voltage readings.
10. If the sensor voltage is not within the low and high limits, or if the range between the low and high limits is insufficient, adjust the voltage limits. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).

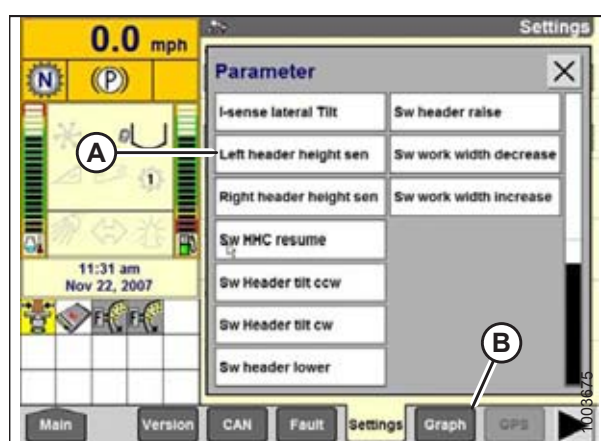


Figure 3.230: Case IH Combine Display

Calibrating the Auto Header Height Control (Case IH 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to [3.7.4 Header Angle, page 94](#).

NOTE:

This procedure applies to combines with a software version below 28.00. For instructions on calibrating the AHHC for combines with software version 28.00 or above, refer to [Calibrating the Auto Header Height Control \(Case Combines with Version 28.00 or Higher Software\), page 169](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to **D**.
2. Ensure all header and float module electrical and hydraulic connections are made.
3. Select TOOLBOX on the MAIN page, and then select HEADER.

OPERATION

4. Set appropriate HEADER STYLE.



Figure 3.231: Case IH Combine Display

5. Set AUTO REEL SPEED SLOPE.
6. Set HEADER PRESSURE FLOAT to NO if equipped, and ensure REEL DRIVE is HYDRAULIC.



Figure 3.232: Case IH Combine Display

7. Install REEL FORE-BACK (if applicable).
8. Set HEIGHT SENSITIVITY to desired value. The recommended starting point is 180.

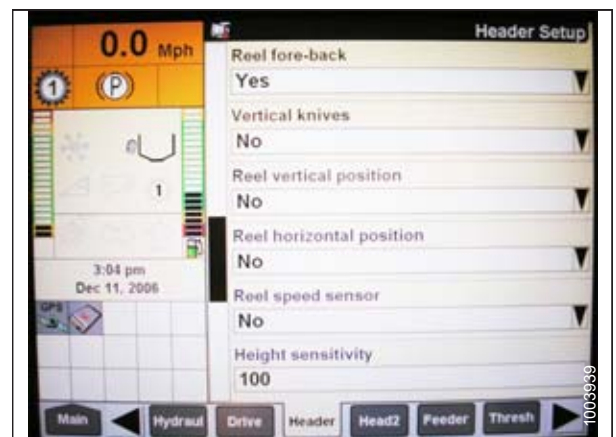


Figure 3.233: Case IH Combine Display

OPERATION

9. Install FORE/AFT CONTROL and HDR FORE/AFT TILT (if applicable).

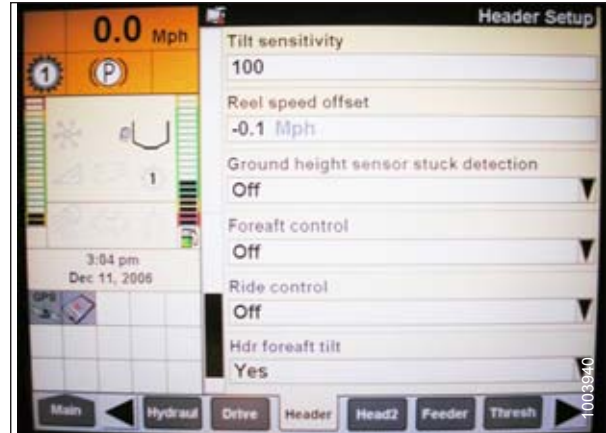


Figure 3.234: Case IH Combine Display

10. Press HEAD2 at bottom of page.
11. Ensure HEADER TYPE is DRAPER.

NOTE:

If recognition resistor is plugged in to header harness, you will not be able to change this.

12. Set cutting type to PLATFORM.
13. Set appropriate HEADER WIDTH and HEADER USAGE.



Figure 3.235: Case IH Combine Display

14. From the REEL HEIGHT SENSOR menu, select YES (A).



Figure 3.236: Case IH Combine Display

OPERATION

Calibrating the Auto Header Height Control (Case Combines with Version 28.00 or Higher Software)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure header center-link is set to **D**.
2. Select TOOLBOX on the MAIN page, and then select HEADER SETUP.
3. Locate the HEADER SUB TYPE field. It will be located on either the HEAD 1 or the HEAD 2 tab.
4. Select 2000 (A).



Figure 3.237: Case IH Combine Display

5. Locate the HEADER SENSORS and HEADER PRESSURE FLOAT fields. They will be located on either the HEAD 1 or the HEAD 2 tab.
6. Select ENABLE (A) in the HEADER SENSORS field.
7. Select NO (B) in the HEADER PRESSURE FLOAT field.

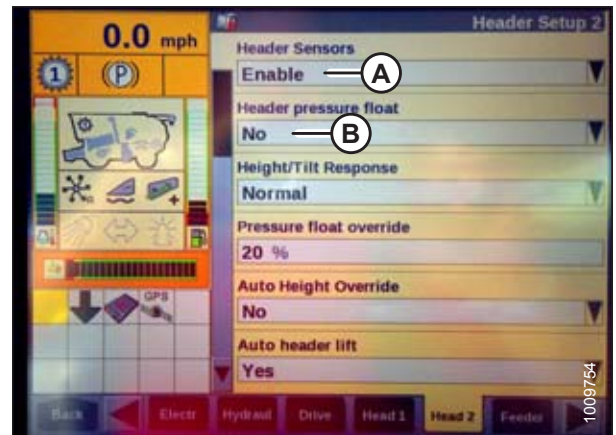


Figure 3.238: Case IH Combine Display

OPERATION

8. From the REEL HEIGHT SENSOR menu, select YES (A).



Figure 3.239: Case IH Combine Display

NOTE:

Icons (A) and (B) appear on the monitor only after engaging the separator and header, and then pressing HEADER RESUME button on the control panel.

9. Ensure AUTO HEIGHT icon (A) appears on the monitor and is displayed as shown at location (B). When the header is set for cutting on the ground, this verifies that the combine is correctly using the potentiometer on the header to sense ground pressure.

NOTE:

AUTO HEIGHT field (B) may appear on any of the RUN tabs and not necessarily on the RUN 1 tab.



Figure 3.240: Case IH Combine Display

10. Select CALIBRATION on the combine display, and press the right arrow navigation key to enter the information box.
11. Select HEADER (A), and press ENTER. The CALIBRATION dialog box opens.

NOTE:

You can use the up and down navigation keys to move between options.



Figure 3.241: Case IH Combine Display

OPERATION

- Follow the calibration steps in the order in which they appear in the dialog box. As you proceed through the calibration process, the display will automatically update to show the next step.

NOTE:

Pressing the ESC key during any of the steps or letting the system sit idle for more than 3 minutes will cause the calibration procedure to stop.

NOTE:

Refer to your combine operator's manual for an explanation of any error codes.



Figure 3.242: Case IH Combine Display

- When all steps have been completed, CALIBRATION SUCCESSFUL message is displayed on the page. Exit the CALIBRATION menu by pressing the ENTER or ESC key.

NOTE:

If float was set heavier to complete ground calibration procedure, adjust to recommended operating float after the calibration is complete.

Checking Reel Height Sensor Voltages (Case IH)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

- On the main page of the combine display, select **DIAGNOSTICS** (A). The **DIAGNOSTICS** page opens.

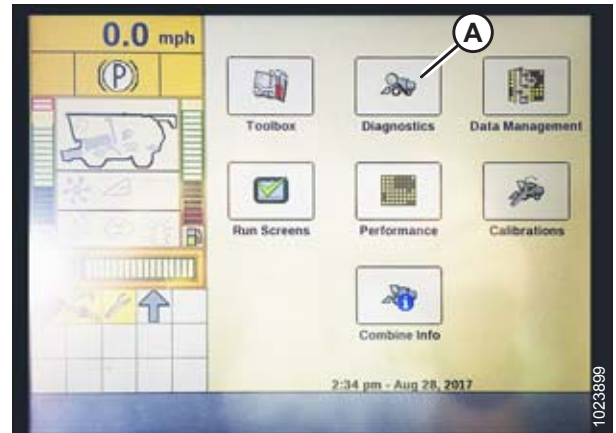


Figure 3.243: Case IH Combine Display

OPERATION

2. Select SETTINGS tab (A). The SETTINGS page opens.
3. From the GROUP menu, select HEADER (B).
4. From the PARAMETER menu, select REEL VERTICAL POSITION (C).



Figure 3.244: Case IH Combine Display

5. Select GRAPH tab (A). The REEL VERTICAL POSITION graph displays.
6. Lower the reel to view the high voltage (B). The voltage should be 4.1–4.5 V.
7. Raise the reel to view the low voltage (C). The voltage should be 0.5–0.9 V.
8. If either voltage is out of range, refer to [Checking and Adjusting Reel Height Sensor, page 109](#).

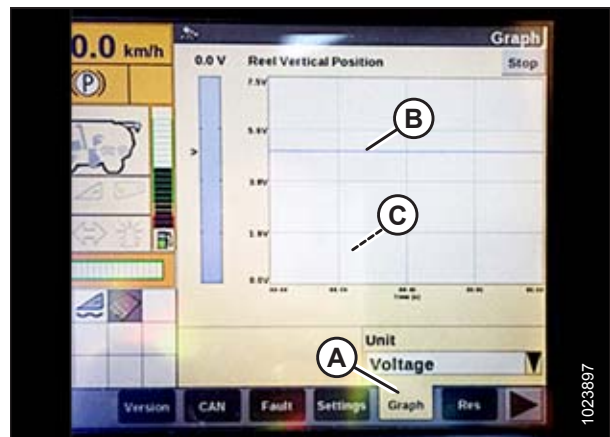


Figure 3.245: Case IH Combine Display

OPERATION

Setting Preset Cutting Height (Case 7010/8010, 7120/8120/9120, 7230/8230/9230, 7240/8240/9240)

To set the preset cutting height, follow these steps:

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

The indicator (A) should be at position 0 (B) with the header 152 mm (6 in.) off the ground. If not, the float sensor output voltage should be checked. Refer to Step 4, [page 143](#). When the header is on the ground, the indicator should be at position 1 (C) for low ground pressure, and at position 4 (D) for high ground pressure. Crop and soil conditions determine the amount of float to use. The ideal setting is as light as possible without header bouncing or missing crop. Operating with heavy settings prematurely wears the cutterbar wearplates.

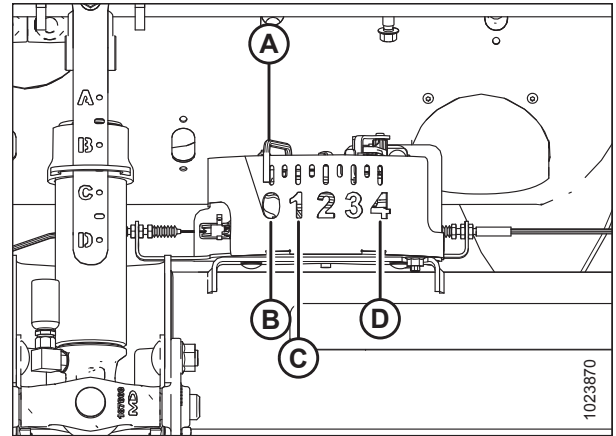


Figure 3.246: Float Indicator Box

1. Engage separator and header.
2. Manually raise or lower header to a desired cutting height.
3. Press SET #1 switch (A). The light (C) beside switch (A) will illuminate.

NOTE:

Use switch (E) for fine adjustments.

NOTE:

When setting presets, always set header position before setting reel position. If header and reel are set at the same time, the reel setting will not save.

4. Manually raise or lower reel to desired position.
5. Press SET #1 switch (A). The light (C) beside switch (A) will illuminate.
6. Manually raise or lower header to a second desired cutting height.
7. Press SET #2 switch (B). The light (D) beside switch (B) will illuminate.
8. Manually raise or lower reel to a second desired position.
9. Press SET #2 switch (B). The light (D) beside switch (B) will illuminate.

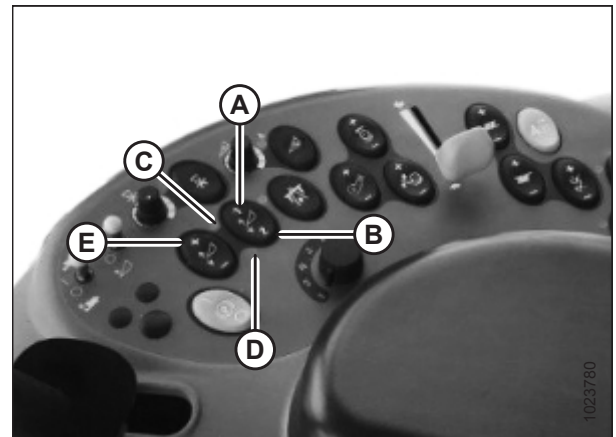


Figure 3.247: Case Combine Controls

A - Set 1 Switch B - Set 2 Switch
C - Lamp D - Lamp
E - Fine Adjustment Switch

OPERATION

10. To swap between set points, press HEADER RESUME (A).
11. To raise header at headlands, press and hold SHIFT button (B) at the back of the control handle and press HEADER RESUME switch (C). To lower header, press HEADER RESUME switch (C) once to return to header preset height.

NOTE:

Pressing the HEADER RAISE/LOWER switches (C) and (D) disengages AUTO HEIGHT mode. Press HEADER RESUME (A) to reengage.



Figure 3.248: Case Combine Controls

3.8.6 Challenger and Massey Ferguson 6 and 7 Series Combines

Checking Voltage Range from the Combine Cab (Challenger and Massey Ferguson)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the auto header height control (AHHC) system.

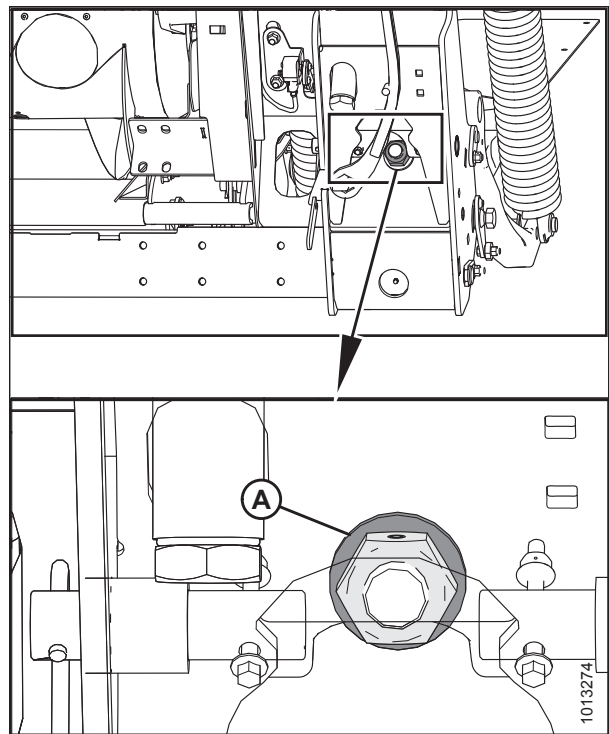


Figure 3.249: Float Lock

OPERATION

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on 0.

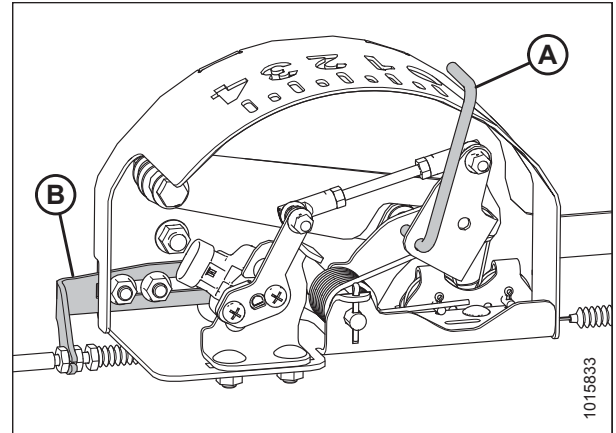


Figure 3.250: Float Indicator Box

4. Go to the FIELD page on the combine monitor, and then press the diagnostics icon. The MISCELLANEOUS page displays.
5. Press the VMM DIAGNOSTIC button (A). The VMM DIAGNOSTIC page displays.



Figure 3.251: Challenger Combine Display

6. Go to the ANALOG IN tab (A), and then select VMM MODULE 3 by pressing the text box below the four tabs. The voltage from the AHHC sensor is now displayed on page as HEADER HEIGHT RIGHT POT and HEADER HEIGHT LEFT POT. The readings may be slightly different.

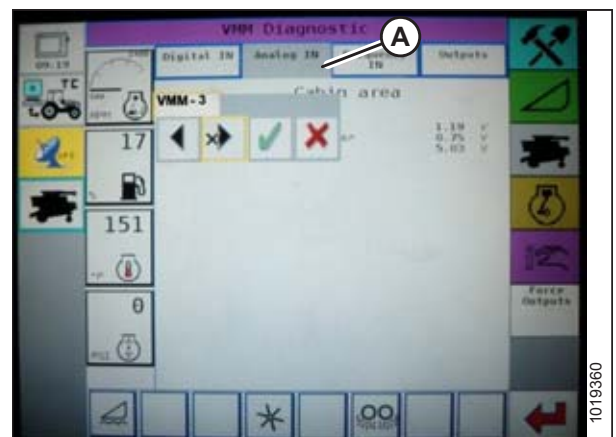


Figure 3.252: Challenger Combine Display

OPERATION

7. Fully lower the combine feeder house (float module should be fully separated from the header).

NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

8. Read voltage.
9. Raise header so cutterbar is 150 mm (6 in.) off the ground.
10. Read voltage.



Figure 3.253: Challenger Combine Display

11. If the sensor voltage is not within the low and high limits, or if the range between the low and high limits is insufficient, adjust the voltage limits. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#) or [Adjusting Voltage Limits: Two-Sensor System, page 147](#).

Engaging the Auto Header Height Control (Challenger and Massey Ferguson)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

The following system components are required in order for the auto header height control (AHHC) to work:

- Main module (PCB board) and header driver module (PCB board) mounted in card box in fuse panel module (FP)
- Multi-function control handle operator inputs
- Operator inputs mounted in the control console module (CC) panel

NOTE:

In addition to the above components, the electrohydraulic header lift control valve is an integral part of the system.

Engage the AHHC as follows:

1. Scroll through the header control options on the combine display using the header control switch until the AHHC icon (A) is displayed in the first message box. The AHHC will adjust the header height in relation to the ground according to the height setting and sensitivity setting.

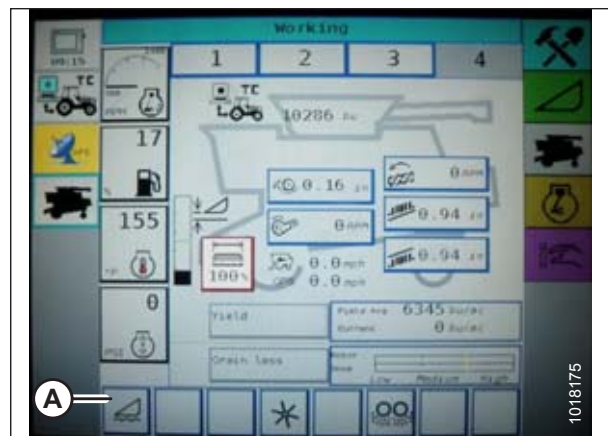


Figure 3.254: Challenger Combine Display

OPERATION

Calibrating the Auto Header Height Control (Challenger and Massey Ferguson)

NOTE:

For best performance of the auto header height control (AHHC) system, perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to **D**.
2. On the FIELD screen, press the DIAGNOSTICS icon (A). The MISCELLANEOUS screen appears.



Figure 3.255: Challenger Combine Display

3. Press the CALIBRATIONS button (A). The CALIBRATIONS screen appears.

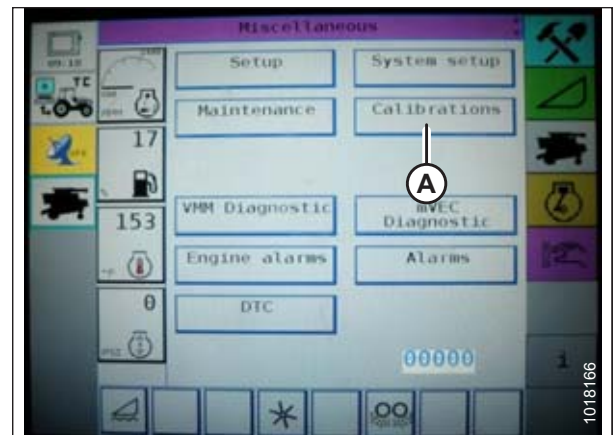


Figure 3.256: Challenger Combine Display

OPERATION

- Press the HEADER button (A). The HEADER CALIBRATION screen displays a warning.



Figure 3.257: Challenger Combine Display

- Read the warning message, and then press the green check mark button.

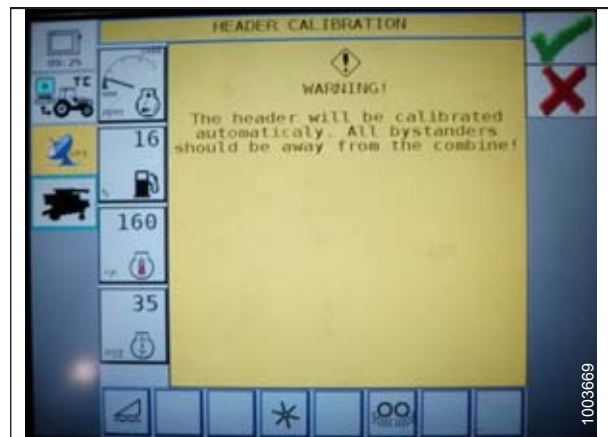


Figure 3.258: Challenger Combine Display

- Follow the on-screen prompts to complete calibration.

NOTE:

The calibration procedure can be canceled at anytime by pressing the cancel button in the bottom right corner of the screen. While the header calibration is running, the calibration can also be canceled by using the UP, DOWN, TILT RIGHT, OR TILT LEFT buttons on the control handle.

NOTE:

If the combine does not have HEADER TILT installed or if it is inoperable, you may receive warnings during calibration. Press the green check mark if these warnings appear. This will not affect the AHHC calibration.



Figure 3.259: Challenger Combine Display

OPERATION

Adjusting the Header Height (Challenger and Massey Ferguson)

Once the auto header height control (AHHC) is activated, press and release the HEADER LOWER button on the control handle. The AHHC will automatically lower the header to the selected height setting.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

You can adjust the selected AHHC height using the HEIGHT ADJUSTMENT knob (A) on the control console. Turning the knob clockwise increases the selected height, and turning the knob counterclockwise decreases the selected height.



Figure 3.260: Height Adjustment Knob on the Combine Control Console

Adjusting the Header Raise/Lower Rate (Challenger and Massey Ferguson)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Press the Header icon (A) on the FIELD screen. The HEADER screen displays.

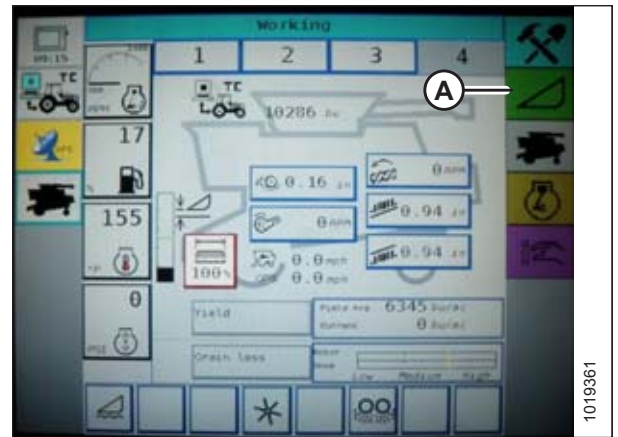


Figure 3.261: Challenger Combine Display

OPERATION

2. Press HEADER CONTROL (A). The HEADER CONTROL screen displays.

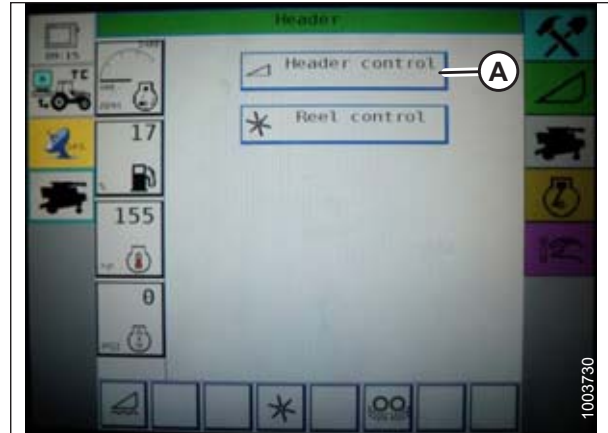


Figure 3.262: Challenger Combine Display

3. Go to the TABLE SETTINGS tab.
4. Press up arrow on MAX UP PWM to increase percentage number and increase raise speed. Press down arrow on MAX UP PWM to decrease percentage number and decrease raise speed.
5. Press up arrow on MAX DOWN PWM to increase percentage number and increase lower speed. Press down arrow on MAX DOWN PWM to decrease percentage number and decrease lower speed.

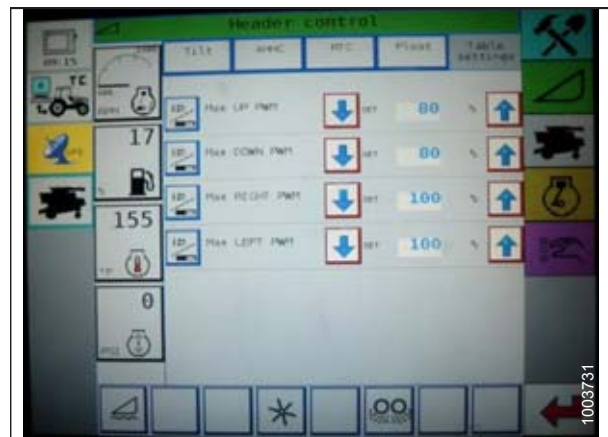


Figure 3.263: Challenger Combine Display

Setting the Sensitivity of the Auto Header Height Control (Challenger and Massey Ferguson)

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Press the HEADER icon on the FIELD screen. The HEADER screen appears.

OPERATION

2. Press the HEADER CONTROL button (A). The HEADER CONTROL screen appears. You can adjust sensitivity on this screen using the up and down arrows.

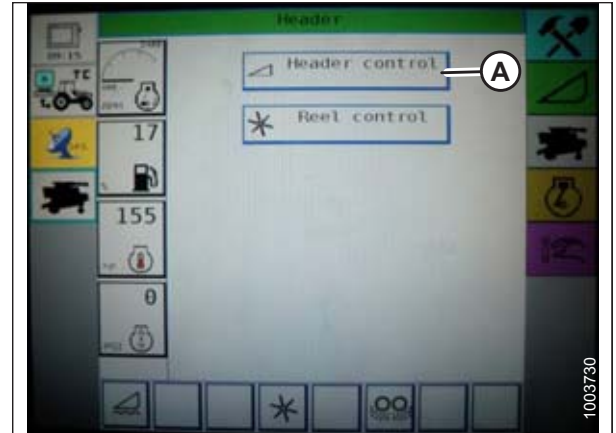


Figure 3.264: Challenger Combine Display

3. Adjust the sensitivity to the maximum setting.
4. Activate the AHHC, and press the HEADER LOWER button on the control handle.
5. Decrease the sensitivity until the feeder house remains steady and does not bounce up and down.

NOTE:

This is the maximum sensitivity and is only an initial setting. The final setting must be made in the field as the system reaction will vary with changing surfaces and operating conditions.

NOTE:

If maximum sensitivity is not needed, a less sensitive setting will reduce the frequency of header height corrections and component wear. Partially opening the accumulator valve will cushion the action of the header lift cylinders and reduce header hunting.



Figure 3.265: Challenger Combine Display

3.8.7 Gleaner R65/R66/R75/R76 and S Series Combines

Checking Voltage Range from the Combine Cab (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.

OPERATION

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHC system.

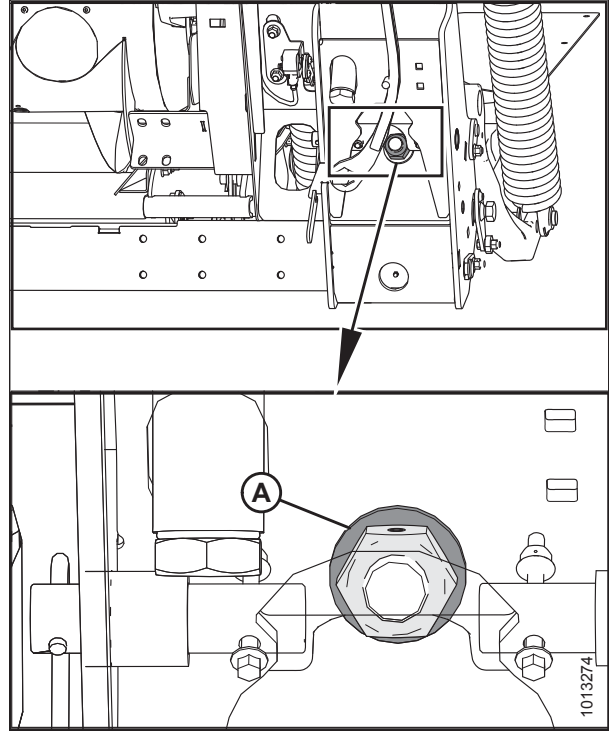


Figure 3.266: Float Lock

3. Ensure pointer (A) on the float indicator box is on 0. If necessary, adjust the cable take-up bracket (B) until pointer is on 0.


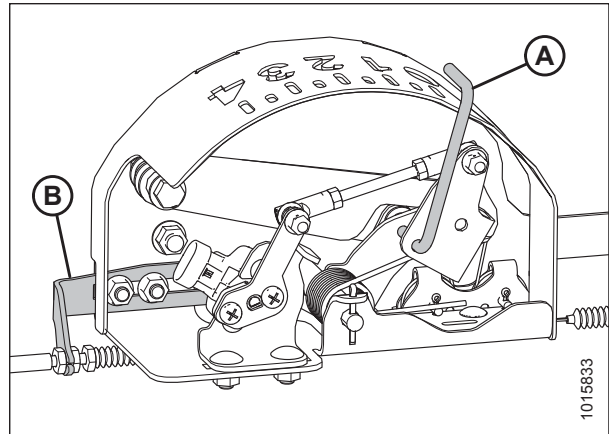


Figure 3.267: Float Indicator Box

Figure 3.268: Combine Heads-Up Display

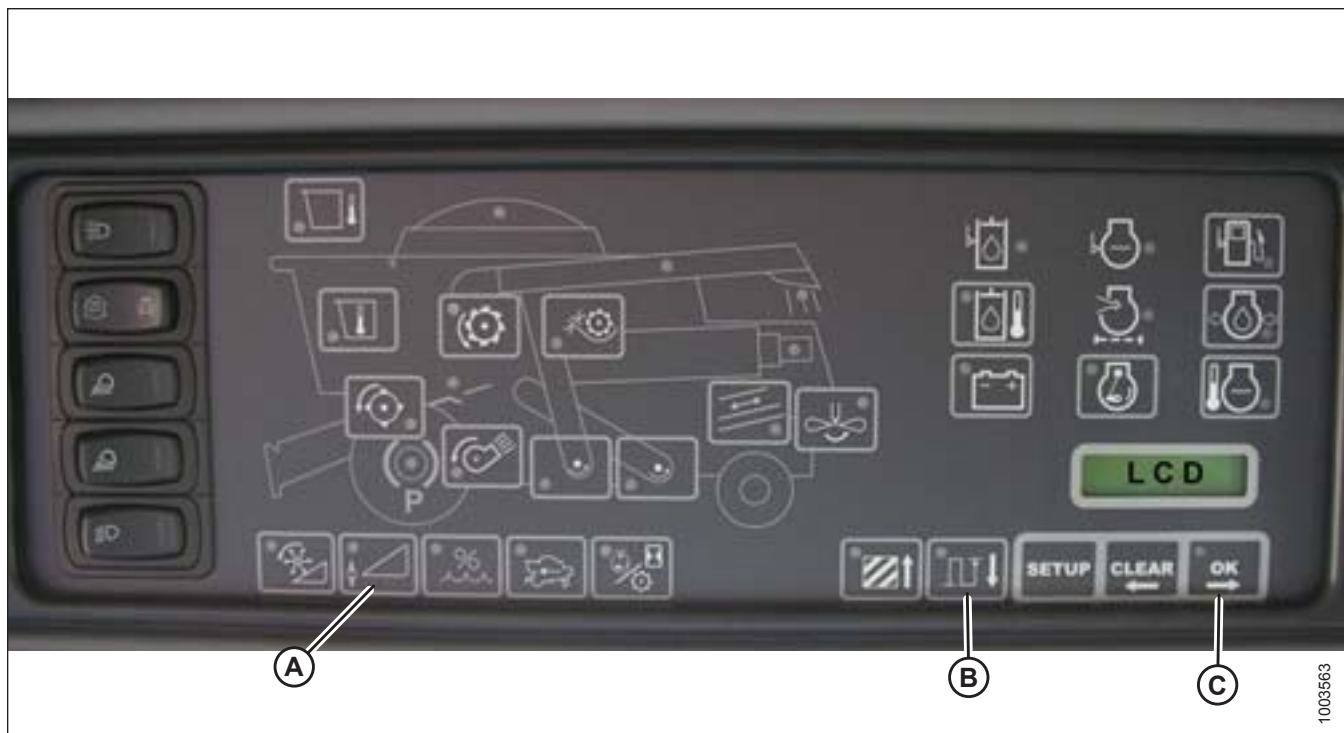

4. Ensure header float is unlocked.
5. Press and hold button (A) on the heads-up display for 3 seconds to enter diagnostic mode.
6. Scroll down using button (B) until LEFT is displayed on the LCD screen.
7. Press the OK button (C). The number indicated on the LCD screen is the voltage reading from the sensor of the AHHC. Raise and lower the header to see the full range of voltage readings.

Engaging the Auto Header Height Control (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

The following system components are required in order for the auto header height control (AHHC) to work:

- Main module (PCB board) and header driver module (PCB board) mounted in card box in fuse pane module (FP).
- Multi-Function Control Handle operator inputs.
- Operator inputs mounted in the control console module (CC) panel.

NOTE:

In addition to the above components, the electrohydraulic header lift control valve also is an integral part of the system.

OPERATION

Figure 3.269: Combine Auto Header Height Controls



1. Press the AUTO MODE (A) button until the AHHC LED light (B) begins flashing. If the RTC light is flashing, press the AUTO MODE (A) button again until it switches to AHHC.
2. Briefly press button (A) on the control handle. The AHHC light should change from flashing to solid. The header also should drop toward the ground. The AHHC is now engaged and can be adjusted for height and sensitivity.
3. Use controls to adjust height and sensitivity to changing ground conditions such as shallow gullies and field drainage trenches.

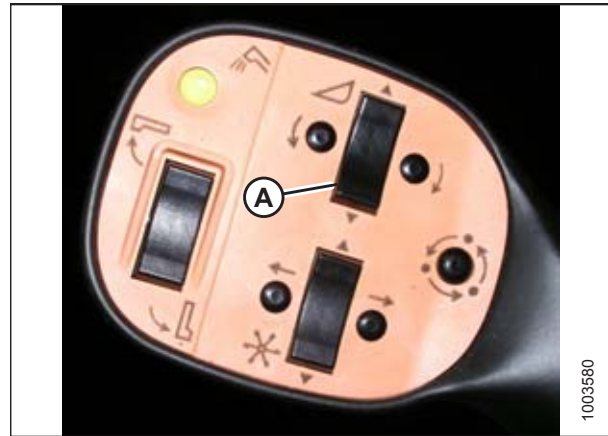


Figure 3.270: Control Handle

OPERATION

Calibrating the Auto Header Height Control (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)

Calibration should be done on flat, level ground without the header clutches engaged. Header height and header tilt must not be in auto or standby modes. The engine rpm must be above 2000 rpm. The header tilt option on 2004 and earlier model combines does not work with MacDon headers. This system will have to be removed and disabled in order to calibrate the auto header height control (AHHC). Refer to combine manual for instructions.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

Figure 3.271: Combine Auto Header Height Controls



A - AUTO MODE Button
D - Raise Header
G - CAL2 Button

B - AHHC Light
E - Lower Header

C - CAL1 Button
F - AUTO Mode

NOTE:

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to [3.7.4 Header Angle, page 94](#).

1. Ensure center-link is set to **D**.
2. Press AUTO MODE button (A) until the AHHC light (B) is illuminated.
3. Press and hold CAL1 button (C) until you see the following lights flash: raise header (D), lower header (E), tilt auto mode (F), and AHHC (B).
4. Fully lower the header, and continue to hold the HEADER LOWER button for 5–8 seconds to ensure float module has separated from header.
5. Press CAL2 button (G) until lower header light (E) stops flashing, and release it when the raise header light (D) begins flashing.

OPERATION

6. Raise header to its maximum height (ensure the header is resting on the down-stop pads).
7. Press CAL2 button (G) until the raise header light (D) turns off.

NOTE:

The following steps are applicable only to 2005 and newer combines with the Smartrac feeder house.

8. Wait for the HEADER TILT LEFT light (not shown) to start flashing, and then tilt header to the maximum left position.
9. Press CAL2 button (G) until the HEADER TILT LEFT light (not shown) stops flashing, and release button when the HEADER TILT RIGHT light (not shown) begins flashing.
10. Tilt the header to the maximum right position.
11. Press CAL2 button (G) until all of the following lights flash: raise header (D), lower header (E), height auto mode (A), right header and left header (not shown), and tilt auto mode (F).
12. Center the header.
13. Press CAL1 button (C) to exit calibration and save all values to the memory. All lights should stop flashing.

Turning off the Accumulator (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)

The accumulator will affect the combine's reaction time and greatly inhibit the auto header height control's performance.

Refer to the combine operator's manual for proper procedure when turning accumulator off and on. For best performance, turn the feeder house accumulator off.

NOTE:

The accumulator is located in front of the front left axle beam.



Figure 3.272: Combine Accumulator ON/OFF Switch

A - Accumulator Lever (Off Position)

OPERATION

Adjusting the Header Raise/Lower Rate (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

The auto header height control (AHHC) system's stability is affected by hydraulic flow rates. Ensure that the header raise (A) and header lower (B) adjustable restrictors in the hydraulic manifold are adjusted so that it takes approximately 6 seconds to raise the header from ground level to maximum height (hydraulic cylinders fully extended), and approximately 6 seconds to lower the header from maximum height to ground level.

If there is too much header movement (for example, hunting) when the header is on the ground, adjust the lower rate to a slower rate of drop: 7 or 8 seconds.

NOTE:

Make this adjustment with the hydraulic system at normal operating temperature (54.4°C [130°F]) and the engine running at full throttle.



Figure 3.273: Header Raise and Lower Adjustable Restrictors

Adjusting Ground Pressure (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

The indicator (A) should be at position 0 (B) with the header 152 mm (6 in.) off the ground. If not, the float sensor output voltage should be checked. Refer to Step 4, page 143. When the header is on the ground, the indicator should be at position 1 (C) for low ground pressure, and at position 4 (D) for high ground pressure. Crop and soil conditions determine the amount of float to use. The ideal setting is as light as possible without header bouncing or missing crop. Operating with heavy settings prematurely wears the cutterbar wearplates.

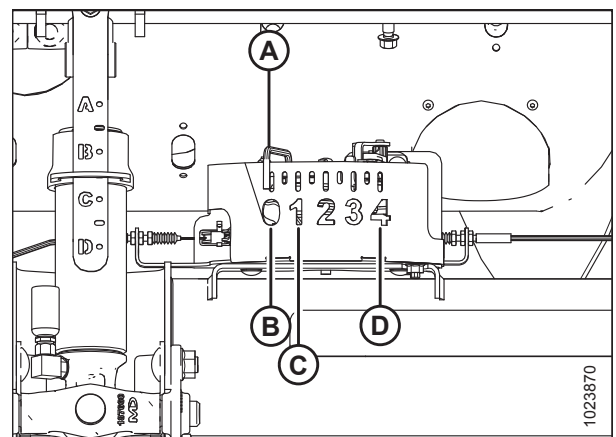


Figure 3.274: Float Indicator Box

OPERATION

1. Ensure the header is in auto header height control (AHHC) mode. This is indicated by the AUTO MODE LED light (A) displaying a continuous, solid light.
2. The header will lower to the height (ground pressure) corresponding to the position selected with the height control knob (B). Turn the knob counterclockwise for minimum ground pressure, and clockwise for maximum ground pressure.



Figure 3.275: AHHC Console

Adjusting the Sensitivity of the Auto Header Height Control (AHHC) (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

Figure 3.276: Auto Header Height Control Console



The SENSITIVITY ADJUSTMENT dial (A) controls the distance the cutterbar must travel up or down before the AHHC reacts and raises or lowers the feeder house.

When the SENSITIVITY ADJUSTMENT dial (A) is set to maximum (turned completely clockwise), only small changes in ground height are needed to cause the feeder house to raise or lower. In this position, the cutterbar

OPERATION

moves up and down approximately 19 mm (3/4 in.) before the control module signals the hydraulic control valve to raise or lower the header frame.

When the SENSITIVITY ADJUSTMENT dial (A) is set to minimum (turned completely counterclockwise), large changes in ground height are needed to cause the feeder house to raise or lower. In this position, the cutterbar moves up and down approximately 51 mm (2 in.) before the control module signals the hydraulic control valve to raise or lower the header frame.

The HEADER SENSE LINE input also changes the range of the sensitivity. When connected to a draper, the counterclockwise position (least sensitive) allows for approximately 102 mm (4 in.) of vertical travel before correction is made.

Troubleshooting Alarms and Diagnostic Faults (Gleaner R65/R66/R75/R76 and Pre-2016 S Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.


Display type:

Displayed on tachometer (A) as XX or XXX.



Figure 3.277: Tachometer

Figure 3.278: Combine Heads-Up Display

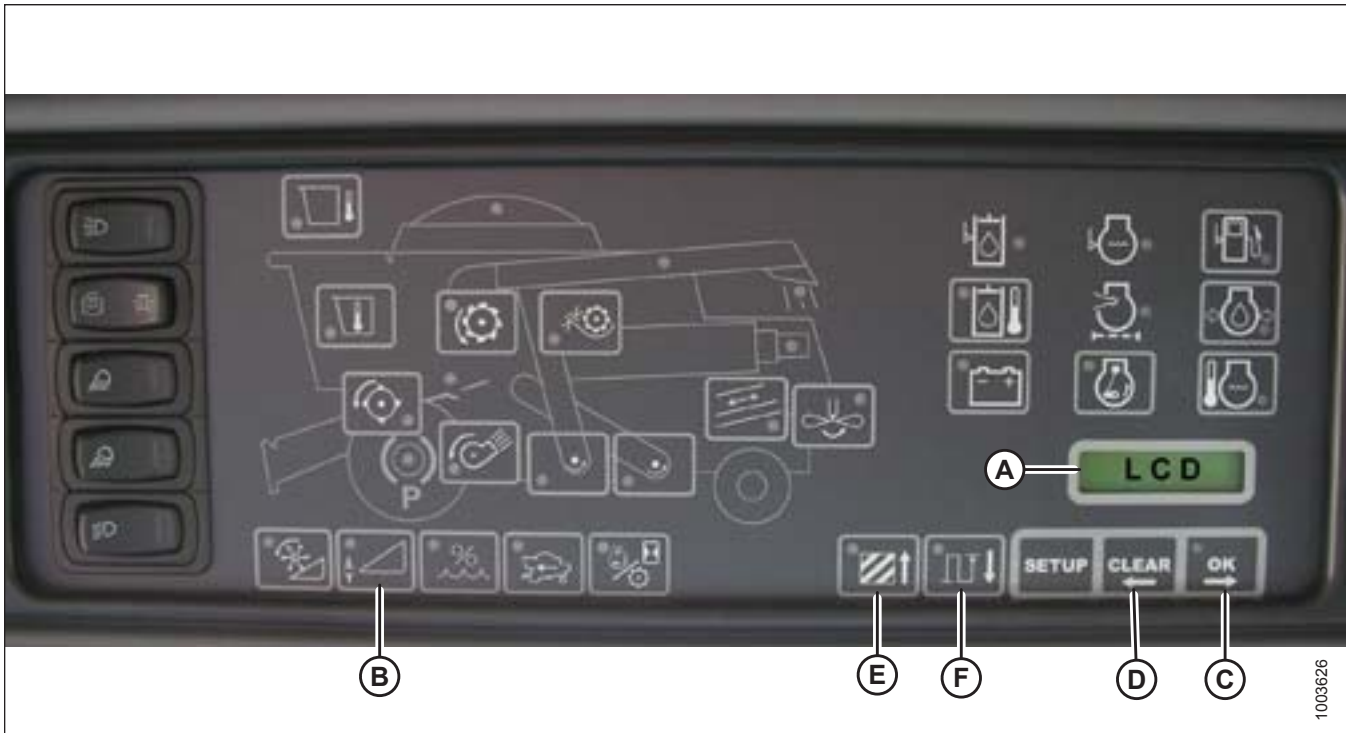

NOTE:

Displayed on LCD (A) as XX in. or XXX cm.

Alarm conditions:

If an error message is received from the fuse panel, an audible alarm sounds. The alarm buzzer sounds five times every 10 seconds. The LCD on the electronic instrument panel (EIP) indicates the header system in error as HDR CTRL followed by HGT ERR for height, and HDR CTRL followed by TILT ERR for tilt. The header height LED flashes yellow two times every second.

When an alarm condition occurs, a green LED flashes on and off (green, yellow, or red depending on the input). In addition, a message is displayed on the LCD to identify the nature of the alarm. For example, HYD TEMP, OPEN, SHRT will be flashed alternately.

Diagnostic fault failures:

Refer to Figure 3.278, page 190.

Pressing the header height switch (B) for a minimum of 5 seconds will put the EIP in header diagnostic mode. The LCD (shown on previous screen) will display the message HDR DIAG when the EIP has entered header diagnostic mode.

In this mode, after 3 seconds, header fault parameter labels are displayed on the EIP LCD. All the information displayed is read-only.

The OK (C) and CLEAR (D) buttons allow you to scroll through the list of parameters. If there are no active fault codes, the EIP LCD will display NO CODE.

When a parameter is displayed, its label is displayed for 3 seconds, after which its value is automatically displayed.

Pressing the OK button (C) while the value is displayed will advance to the next parameter and display its label.

OPERATION

When a parameter label is displayed and the OK button (C) is pressed before 3 seconds, the parameter's value will be displayed.

Pressing AREA (E) will cycle through the options. When LEFT is displayed on the LCD, press the OK button (C), and the auto header height control (AHHC) voltage will be shown on the display.

Press the DIST button (F) to cycle back through the table.

Press the CLEAR button (D) to exit header diagnostics and return to normal mode.

Refer to [3.8.1 Sensor Operation, page 140](#).

3.8.8 Gleaner S9 Series Combines

Setting up the Header (Gleaner S9 Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

The AGCO Tyton terminal (A) is used to set up and manage a MacDon draper header on a Gleaner S9 combine. Use the touch screen display to select the desired item on the screen.



Figure 3.279: Gleaner S9

A - Tyton Terminal B - Control Handle
C - Throttle D - Header Control Cluster

1. On the top right quadrant of the home screen, touch the COMBINE icon (A). The COMBINE MAIN MENU opens.



Figure 3.280: Combine Icon on Home Page

OPERATION

2. On the COMBINE MAIN MENU, touch HEADER SETTINGS (A). The HEADER SETTINGS screen opens.



Figure 3.281: Header Settings in Combine Main Menu

OPERATION

3. Touch the HEADER CONFIGURATION field (A).
A screen showing predefined headers opens.
- If your MacDon header is already set up, it appears on the header list. Touch the MacDon header title (B) to highlight the selection in blue, and then touch the green check mark (E) to continue.
 - If only the default header (D) is shown, touch the ABC button (C), and use the on-screen keyboard to enter the MacDon header information. When complete, select one of the following options to return to the HEADER SETTINGS screen:
 - The green check mark (E) saves the settings
 - The garbage can icon (F) deletes the highlighted header from the list
 - The red X (G) cancels the change(s)

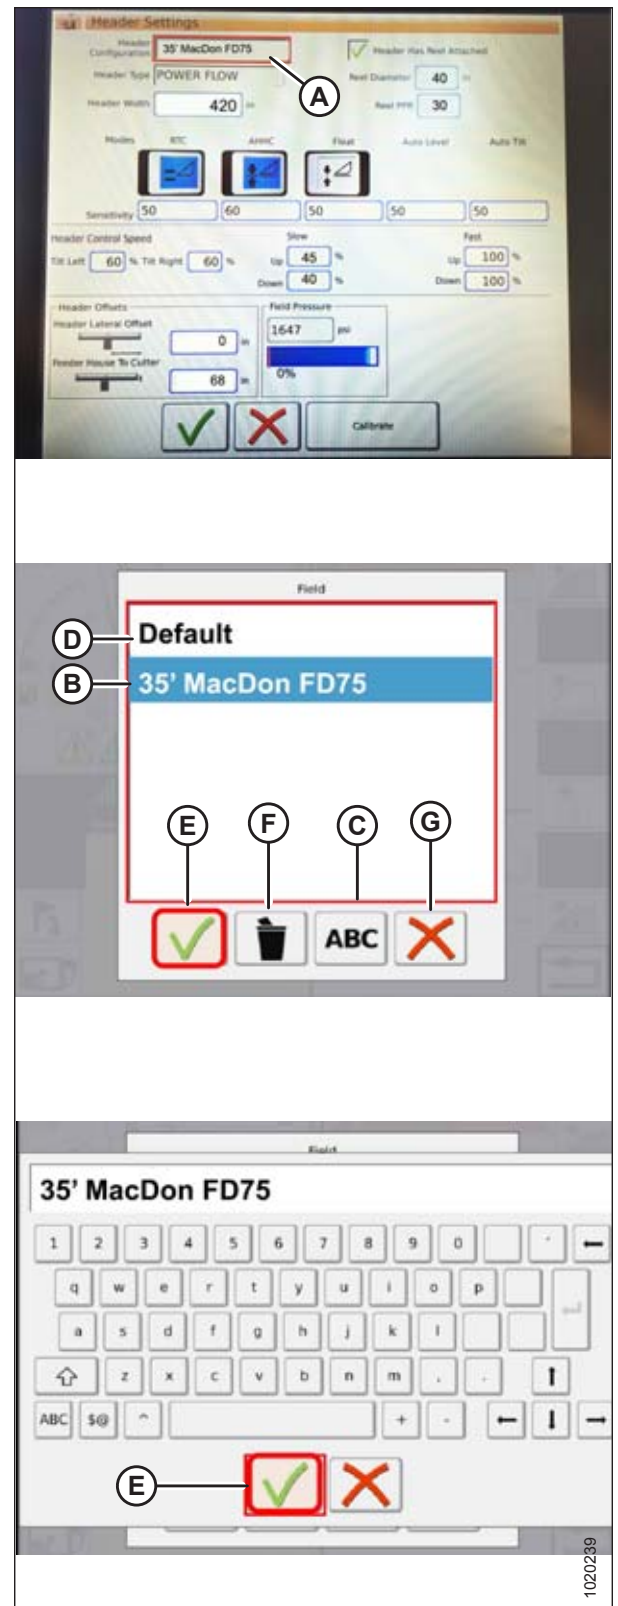


Figure 3.282: Header Configuration Menu on Header Settings Page

OPERATION

4. To specify the type of header installed on the machine, touch the HEADER TYPE field (A).

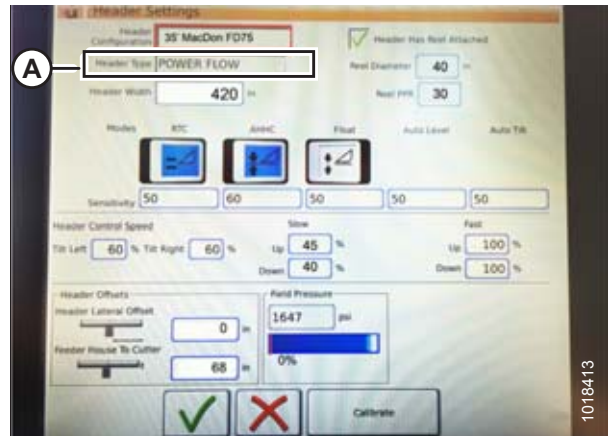


Figure 3.283: Header Settings

5. A list of predefined header types appears.
 - For MacDon D1 Series Draper and FD1 Series FlexDraper headers, touch POWER FLOW (A)
 - Touch the green check mark (B) to save the selection and continue

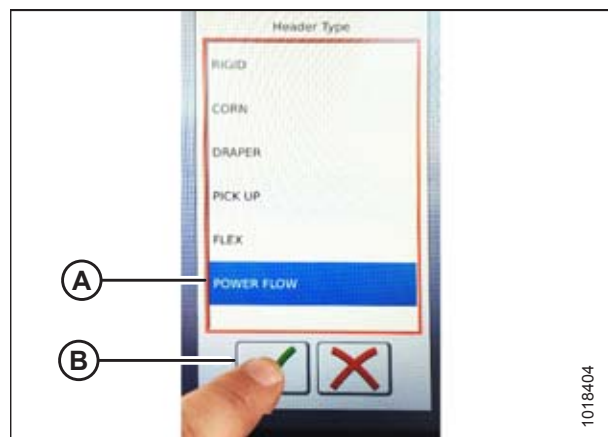


Figure 3.284: Header Type

6. Make sure that the HEADER HAS REEL ATTACHED check box (A) is checked.

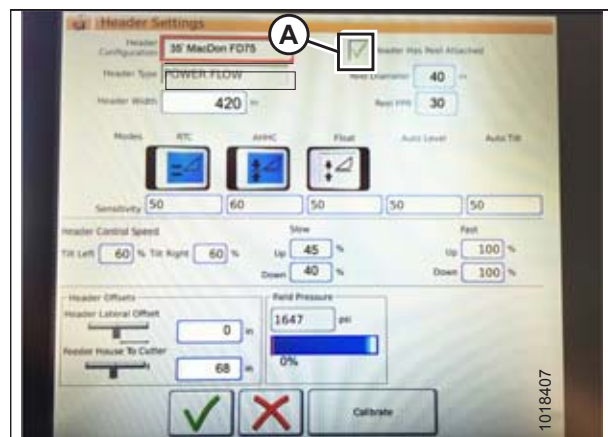


Figure 3.285: Header Settings

OPERATION

7. Touch the REEL DIAMETER field (A) and a numeric keypad displays. Enter **40** for a MacDon reel.
8. Touch the REEL PPR (Pulses Per Revolution) field (B) and enter **30** as the value for your MacDon header. (PPR is determined by the number of teeth on the reel speed sprocket).

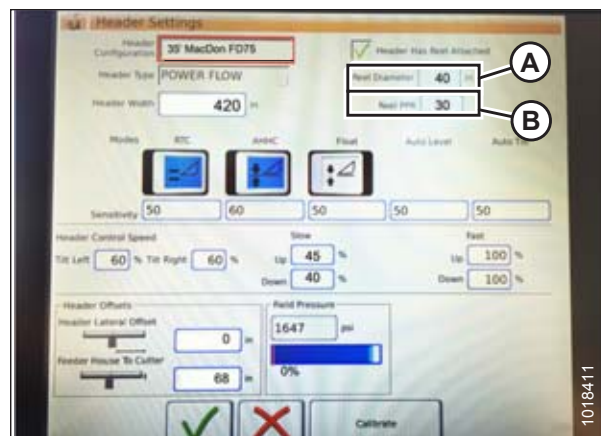


Figure 3.286: Header Settings

9. Touch the green check mark (B) at the bottom of the numeric keypad (A) when complete, or the red X to cancel.

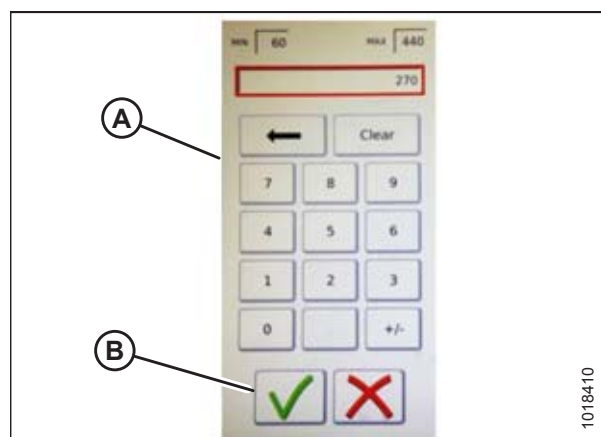


Figure 3.287: Numeric Keypad

10. When complete, touch the green check mark (A) at the bottom of the HEADER SETTINGS screen.



Figure 3.288: Header Settings Page

Setting up Reel Settings (Gleaner S9 Series)

CAUTION

Clear the area of other persons, pets etc. Keep children away from machinery. Walk around the machine to be sure no one is under, on, or close to it.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. From the COMBINE MAIN MENU, touch REEL SETTINGS (A) to open the REEL SETTINGS screen.



Figure 3.289: Reel Settings on Combine Main Menu

2. To set minimum reel speed, touch the SPEED MINIMUM FIELD (B). The on-screen keyboard displays. Enter the desired value. Touch the green check mark to accept the new value, or the red X to cancel. The reel speed (in mph) and rpm are shown.

NOTE:

At the bottom of the REEL SETTINGS screen, the reel diameter and reel pulses per revolution (PPR) are displayed. These values have already been set in the HEADER SETTINGS screen.

3. Reel speed is calibrated in the REEL SETTINGS screen by touching the CALIBRATE button (A) in the top right of the screen.



Figure 3.290: Reel Settings Calibration

OPERATION

4. The CALIBRATION WIZARD opens and displays a hazard message warning screen.
5. Make sure to meet all the conditions listed on the CALIBRATION WIZARD warning screen. Press the green check mark to accept and start reel calibration. Pressing the red X will cancel the calibration procedure.



Figure 3.291: Calibration Wizard

6. An informational message appears in the CALIBRATION WIZARD that reel calibration has started. The reel will begin turning slowly and increase to high speed. A progress bar is provided. If necessary, touch the red X to cancel. Otherwise, wait for the message that reel calibration has completed successfully. Touch the green check mark to save the calibrated settings.



Figure 3.292: Calibration Progress

Setting up Automatic Header Controls (Gleaner S9 Series)

Automatic header functions are configured on the HEADER SETTINGS screen.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

OPERATION

1. **Automatic Control Functions:** There are toggle (OFF/ON) switches on the HEADER SETTINGS screen for the automatic control functions. For MacDon headers, ensure the following two functions are enabled as shown:

- RTC (return to cut) (A)
- AHHC (automatic header height control) (B)

All other switches are disabled (not highlighted).

2. The **Sensitivity** setting (C) controls how responsive a control (RTC or AHHC) is to a given change in sensor feedback. The setting fields are located directly below the toggle switches. To enter a new sensitivity setting, touch the setting field below the specific toggle switch, and enter the new value in the on-screen keyboard.

- Increase sensitivity if the combine does not change the feeder position quickly enough when in Auto Mode.
- Decrease sensitivity if the combine hunts for a position in Auto Mode.

NOTE:

Recommended sensitivity starting points for MacDon headers are:

- 50 for RTC (A)
- 60 for AHHC (B)

3. **Header Speed:** The HEADER CONTROL SPEED area (A) on the HEADER SETTINGS screen is used to adjust the following speeds:

- Tilt left and right is the lateral tilt of the combine faceplate
- Header up and down (slow and fast speeds) is a two-stage button with slow speed on the first detent and fast on the second

NOTE:

Recommended header control speed starting points

- Slow: 45 up / 40 down
- Fast: 100 up / 100 down

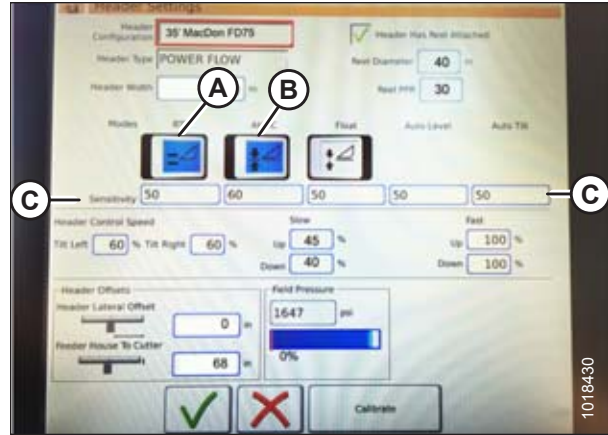


Figure 3.293: Automatic Controls and Sensitivity Settings



Figure 3.294: Header Speed Control Settings

OPERATION


4. **Header Offsets (A):** Offset distances are important for yield mapping. There are two adjustable dimensions on the HEADER SETTINGS screen:

- Header Lateral Offset: the distance between the centerline of the header and the centerline of the machine. This should be set at **0** for a MacDon header.
- Feeder House to Cutter: the distance from the machine interface to the cutterbar. This should be set at **68** for a MacDon header.



Figure 3.295: Header Offset Settings

Figure 3.296: MacDon Header Settings Inputs

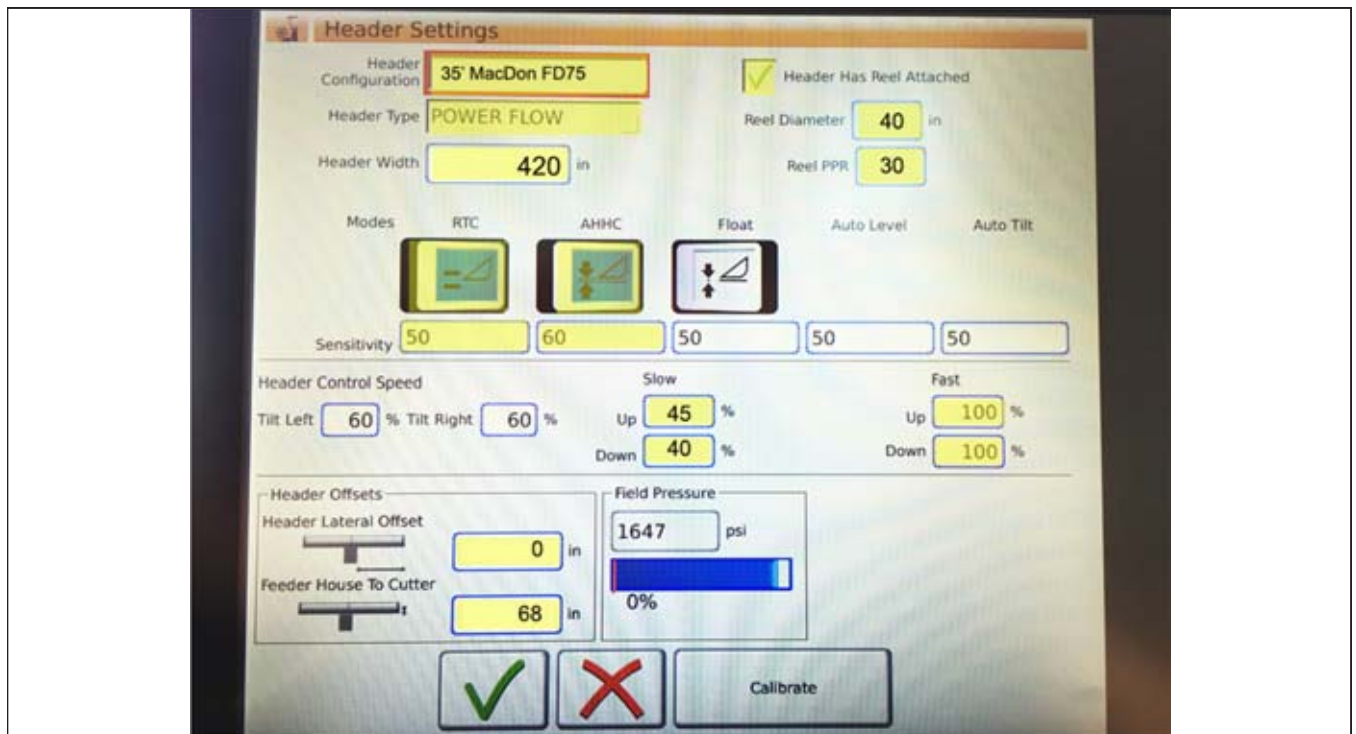

Calibrating the Header (Gleaner S9 Series)

The auto header control functions are configured on the HEADER SETTINGS screen.

CAUTION

Clear the area of other persons, pets etc. Keep children away from machinery. Walk around the machine to be sure no one is under, on, or close to it.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

OPERATION

1. On the COMBINE MAIN MENU, touch HEADER SETTINGS (A).

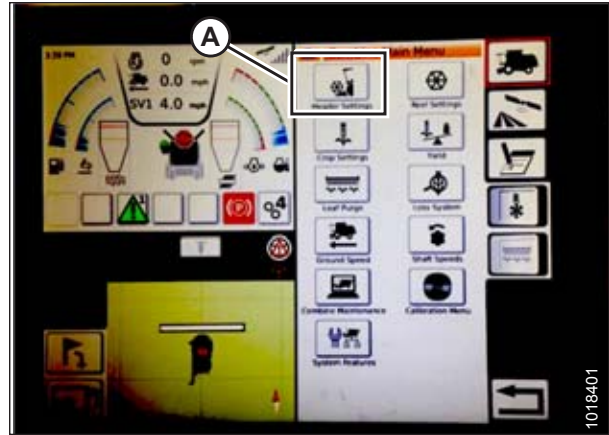


Figure 3.297: Combine Main Menu

2. Touch CALIBRATE (A) at the bottom right of the screen. The HEADER CALIBRATION screen displays.

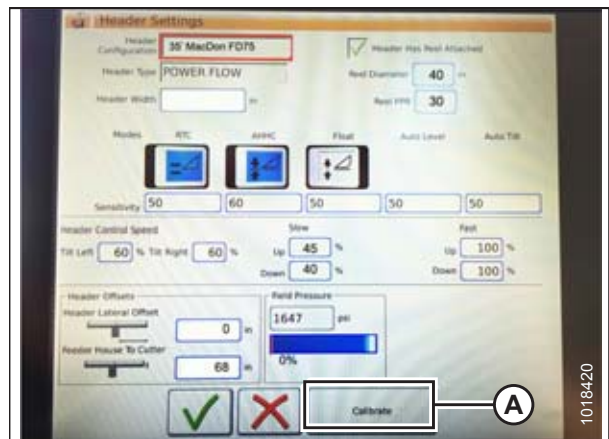


Figure 3.298: Calibration

The right side of the screen shows the Header Calibration information (A). Results are shown for a variety of sensors (B):

- Left and right header sensor (voltage) (values will be the same with MacDon headers)
- Header height sensor (mA)
- Tilt position sensor (mA)

The following valid modes are shown with check marks (C) below the sensor values (B):

- Return to cut
- Automatic header height control

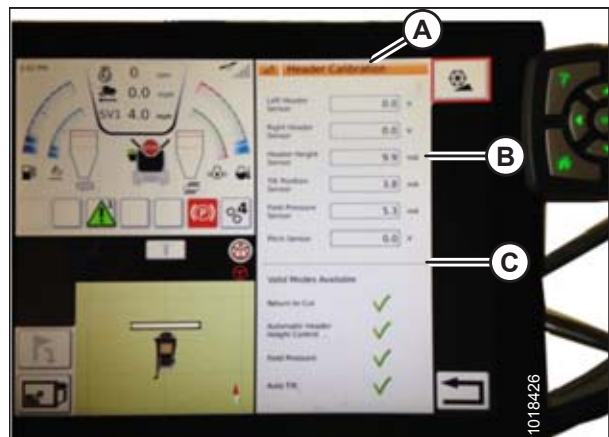


Figure 3.299: Header Calibration Page

CAUTION

Clear the area of other persons, pets etc. Keep children away from machinery. Walk around the machine to be sure no one is under, on, or close to it.

OPERATION

- On the control handle, touch the HEADER DOWN button (A). Sensor values start changing on the HEADER CALIBRATION screen as the header lowers.

NOTE:

The header needs to be lowered all the way, and then raised off the ground. The range should be between **0.5 and 4.5 V**. If the value is not in that range, the sensor needs to be adjusted. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#) or [Adjusting Voltage Limits: Two-Sensor System, page 147](#).



Figure 3.300: Header Down Switch

- When the sensor values are stable, touch the CALIBRATE icon (A).

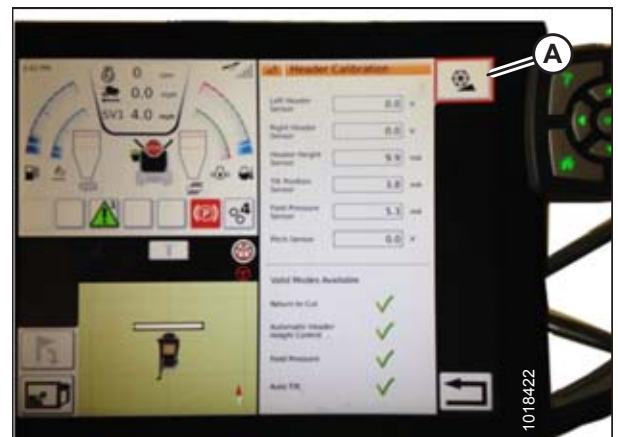


Figure 3.301: Header Calibration

- The hazard message warning screen for HEADER CALIBRATION appears. Make sure that all conditions are met.
- Touch the green check mark at the bottom of the screen to start the CALIBRATION WIZARD.



Figure 3.302: Header Calibration Warning

OPERATION

A progress bar is provided and the wizard can be stopped at any time by touching the red X. The header moves automatically and erratically during this process.



Figure 3.303: Calibration In Progress

7. When the calibration is complete, a message displays, and summary information (A) is shown. Green check marks confirm the functions have been calibrated (B). Touch the bottom green check mark (C) to save.



Figure 3.304: Completed Calibration Page

NOTE:

Touch the CALIBRATION icon (A) on the COMBINE MAIN MENU screen to open the CALIBRATION MENU where you can choose from a variety of calibrations including header and reel calibration.



Figure 3.305: Direct Calibration Menu

OPERATION

Operating Header (Gleaner S9 Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

The following controls are used to operate the auto header height control (AHHC) functions:

- Tyton Terminal (A)
- Control Handle (B)
- Throttle (C)
- Header Control Cluster (D)

Use the combine operator's manual to familiarize yourself with the controls.



Figure 3.306: Gleaner S9

1. With the header running, set lateral tilt switch (A) to MANUAL.
2. Engage the AHHC by pressing the switch (B) upward to the I position.

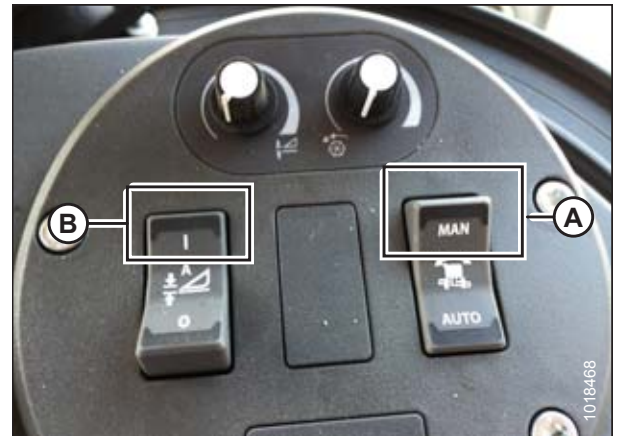


Figure 3.307: Header Control Cluster

3. Press the AHHC control switch (A) on the control handle to engage the AHHC. The header moves to the current setpoint position.



Figure 3.308: AHHC on Control Handle

OPERATION

4. Use the HEADER HEIGHT SETPOINT control dial (A) as necessary to fine-tune the position.



Figure 3.309: Header Control Cluster

Header In-Field Settings

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. To view header group settings, touch the HEADER icon (A) on the right side of the home screen.
2. The following information is displayed:
 - CURRENT POSITION of the header (B).
 - SETPOINT cut-off position (C) (indicated by red line)
 - HEADER symbol (D) – touch to adjust the setpoint cut-off position using the scroll wheel on the right side of the Tyton terminal.
 - CUT HEIGHT for the AHHC (E) – fine-tune with the header height setpoint control dial on the header control cluster.
 - HEADER WORKING WIDTH (F)
 - HEADER PITCH (G)

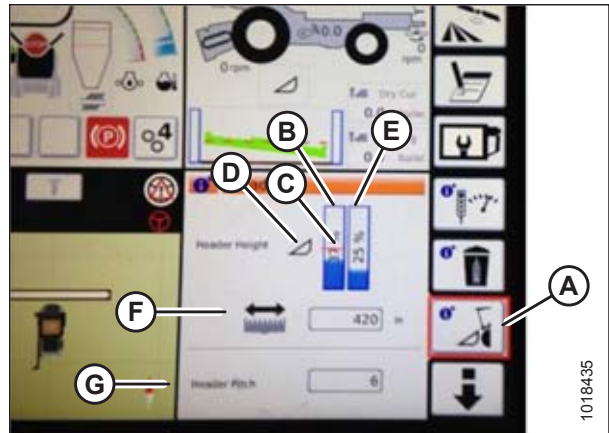


Figure 3.310: Header Groups

OPERATION

3. Touching a field opens the on-screen keyboard so that values can be adjusted. Enter the new value and touch the green check mark when complete.

NOTE:

The scroll wheel (A) is located on the right side of the Tyton terminal.



Figure 3.311: Adjustment Wheel on Right Side of Tyton Terminal

NOTE:

HEADER HEIGHT SETPOINT control dial (A) is on the header control cluster.



Figure 3.312: Header Control Cluster

3.8.9 John Deere 60 Series Combines

Checking Voltage Range from the Combine Cab (John Deere 60 Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.

OPERATION

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

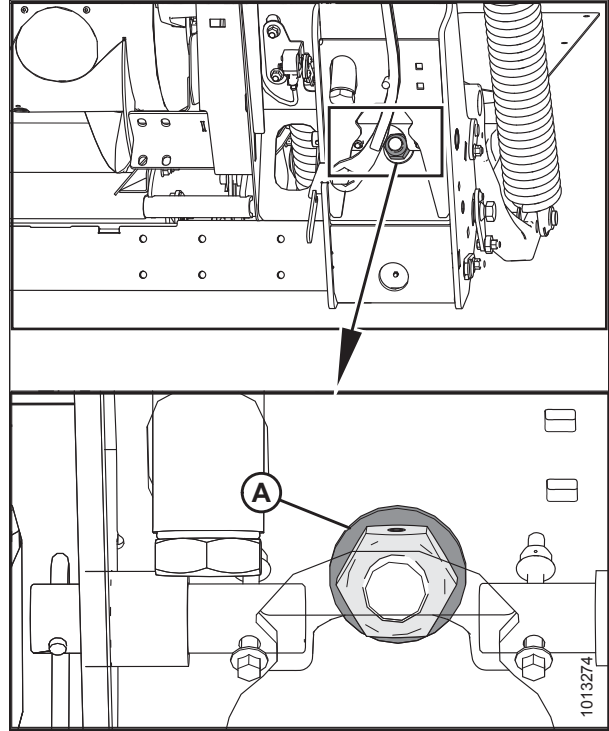


Figure 3.313: Float Lock

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on 0.


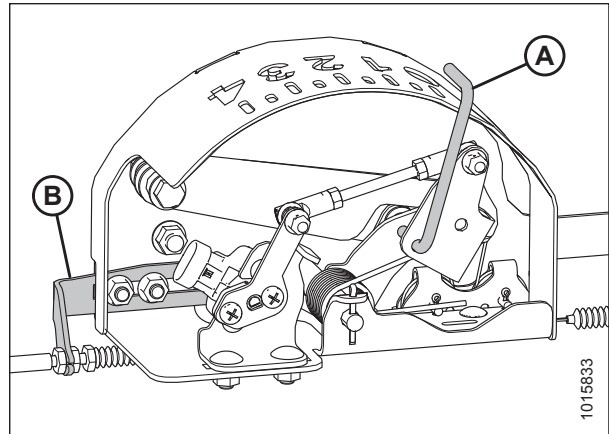


Figure 3.314: Float Indicator Box

Figure 3.315: John Deere Combine Display

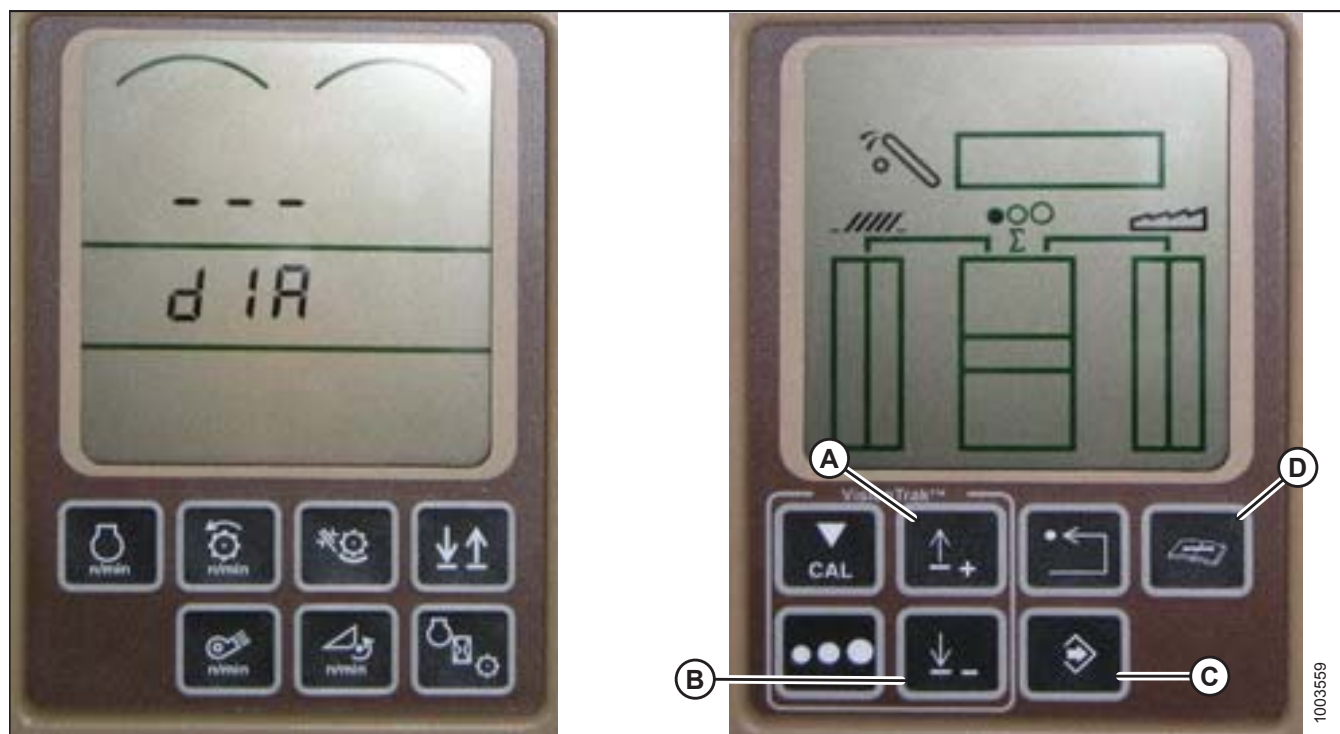

4. Press the DIAGNOSTIC button (D) on the monitor—DIA appears on the monitor.
5. Press the UP button (A) until EO1 appears on the monitor—this is the header adjustments.
6. Press the ENTER button (C).
7. Press the UP (A) or DOWN button (B) until 24 is displayed on the top portion of the monitor—this is the voltage reading for the sensor.
8. Ensure header float is unlocked.
9. Start the combine, and fully lower feeder house to the ground.

NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

10. Check the sensor reading on the monitor. The reading should be above 0.5 volts.
11. Raise the header so it is just off the ground. The reading on the monitor should read below 4.5 volts.
12. If the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient, refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).

OPERATION

Calibrating the Auto Header Height Control (John Deere 60 Series)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



CAUTION

Check to be sure all bystanders have cleared the area.

1. Ensure center-link is set to **D**.
2. Rest header on down stops, and unlock float.
3. Start the combine.
4. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
5. Press the CAL button (B). DIA-CAL appears on the monitor.

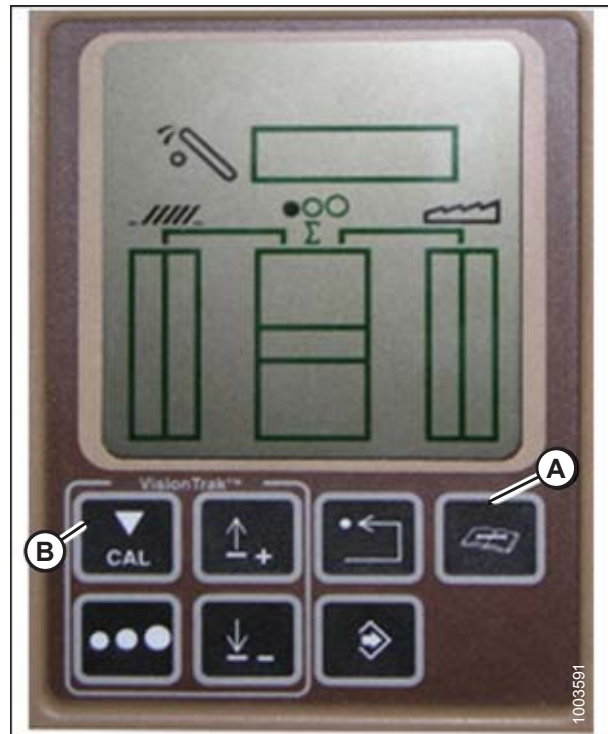


Figure 3.316: John Deere Combine Display

OPERATION

6. Press the UP or DOWN buttons until HDR appears on the monitor.
7. Press the ENTER button. HDR H-DN appears on the monitor.
8. Fully lower feeder house to the ground.

NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

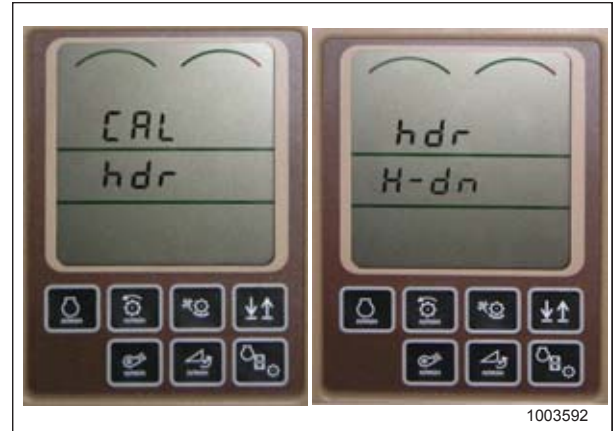


Figure 3.317: John Deere Combine Display

9. Press the CAL button (A) to save the calibration of the header. HDR H-UP appears on the monitor.
10. Raise the header 3 feet off the ground and press the CAL button (A). EOC appears on the monitor.
11. Press the ENTER button (B) to save the calibration of the header. Your AHHC is now calibrated.

NOTE:

If an error code appears during calibration, the sensor is out of voltage range and will require adjustment. Refer to [Checking Voltage Range from the Combine Cab \(John Deere 60 Series\)](#), page 205.

NOTE:

After the calibration is complete, adjust combine operation settings to ensure proper field operation.

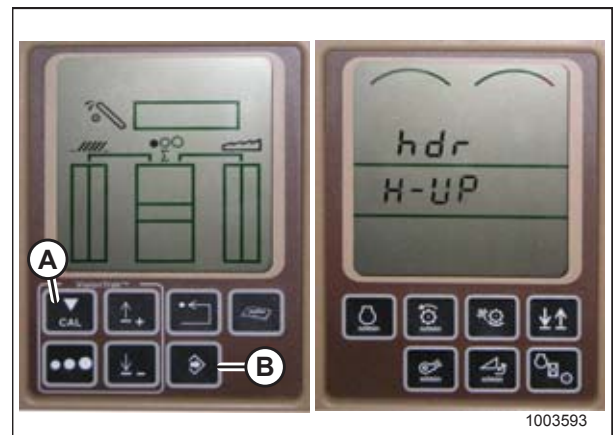


Figure 3.318: John Deere Combine Display

Turning the Accumulator Off (John Deere 60 Series)

The accumulator is a hydraulic device that cushions the shock of hydraulic fluid when installing a heavy header onto the combine.

NOTE:

The accumulator should not be used when operating the combine with a D1 and FM100 attached.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

OPERATION

1. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
2. Press the UP button (B) until EO1 appears on the monitor, and press ENTER (D). This is the header adjustment.
3. Press the UP (B) or DOWN (C) button until 132 is displayed on the top portion of the monitor. This is the reading for the accumulator.
4. Press ENTER (D) to select 132 as the accumulator reading (this will allow you to change the display to a three-digit number so it has a 0 in it, for example, x0x).
5. Press the UP (B) or DOWN (C) button until the desired number is displayed, and press the CAL button (E).
6. Press ENTER (D) to save the changes. The accumulator is now deactivated.

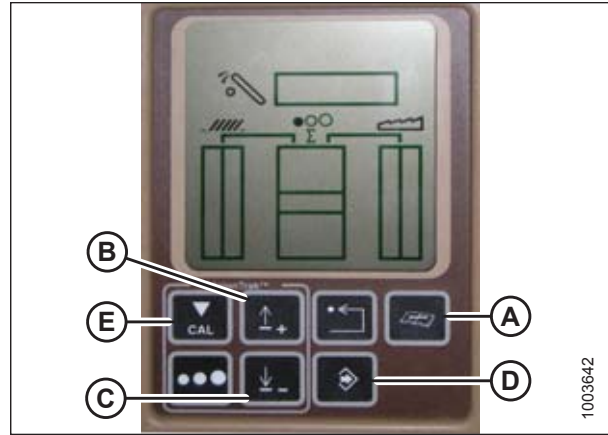


Figure 3.319: John Deere Combine Display

Setting the Sensing Grain Header Height to 50 (John Deere 60 Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

To set the sensing grain header height, follow these steps:

1. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
2. Press the UP button (B) until EO1 appears on the monitor, and press ENTER (D). This is the header adjustment.
3. Press the UP (B) or DOWN (C) button until 128 is displayed on the top portion of the monitor. This is the reading for the sensor.
4. Press ENTER (D) to select 128 as the sensor reading (this will allow you to change the display to a three-digit number so it has a 50 in it).
5. Press the UP (B) or DOWN (C) button until the desired number is displayed, and press the CAL button (E).
6. Press ENTER (D) to save the changes. The height is now set.

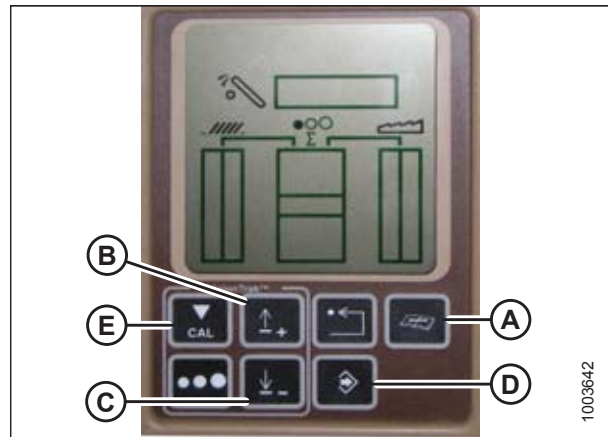


Figure 3.320: John Deere Combine Display

OPERATION

NOTE:

Do **NOT** use the active header float function (A) in combination with the MacDon auto header height control (AHHC)—the two systems will counteract one another. The header symbol (B) on the display should **NOT** have a wavy line under it and should appear exactly as shown on the Active Header Control Display in Figure 3.321, page 211.

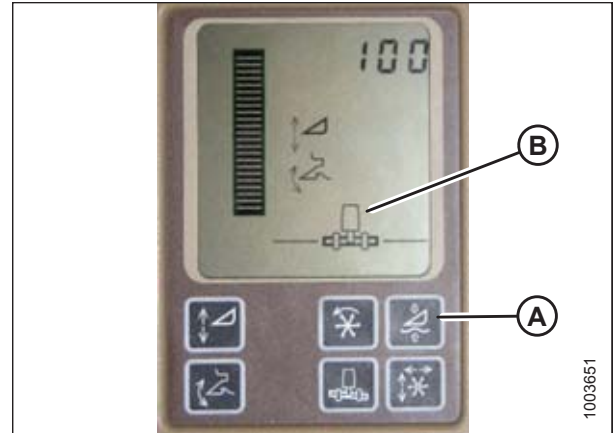


Figure 3.321: John Deere Combine Display

Setting the Sensitivity of the Auto Header Height Control (John Deere 60 Series)

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
2. Press the UP button (B) until EO1 appears on the monitor, and press ENTER (D). This is the header adjustment.
3. Press the UP (B) or DOWN (C) button until 112 is displayed on the monitor. This is your sensitivity setting.

NOTE:

The lower the reading, the higher the sensitivity. Ideal operating range is typically between 50 and 80.

4. Press ENTER (D) to select 112 as the sensitivity setting (this will allow you to change the first digit of the number sequence).
5. Press UP (B) or DOWN (C) until the desired number is displayed, then press the CAL button (E). This will bring you to the second digit. Repeat this procedure until the desired setting is achieved.
6. Press ENTER (D) to save changes.

NOTE:

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.

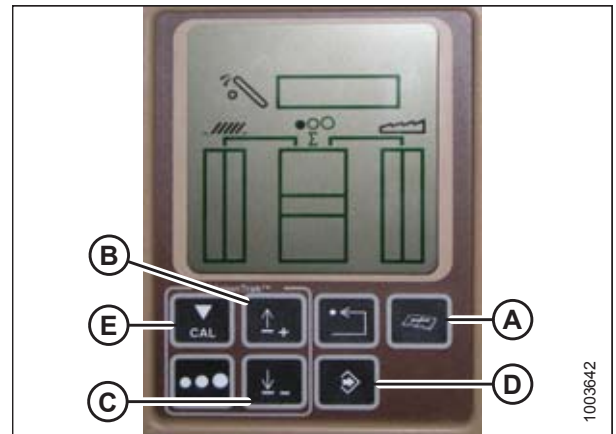


Figure 3.322: John Deere Combine Display

OPERATION

Adjusting the Threshold for the Drop Rate Valve (John Deere 60 Series)

This procedure explains how to adjust the point at which the restrictor valve opens allowing full flow to the lift cylinders.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.

1. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
2. Press the UP button (B) until EO1 appears on the monitor and press ENTER (C). This is the header adjustment.
3. Press the UP (B) or DOWN button until 114 is displayed on the top portion of the monitor. This is the setting that adjusts when the fast drop rate starts with respect to the dead band.

NOTE:

The default setting is 100. Ideal operating range is typically between 60 and 85.

4. Press ENTER (C) to select 114 as the fast drop rate (this will allow you to change the first digit of the number sequence).
5. Press UP (B) or DOWN (E) until the desired number is displayed, then press the CAL button (D). This will bring you to the second digit. Repeat this procedure until the desired setting is achieved.
6. Press ENTER (C) to save changes.

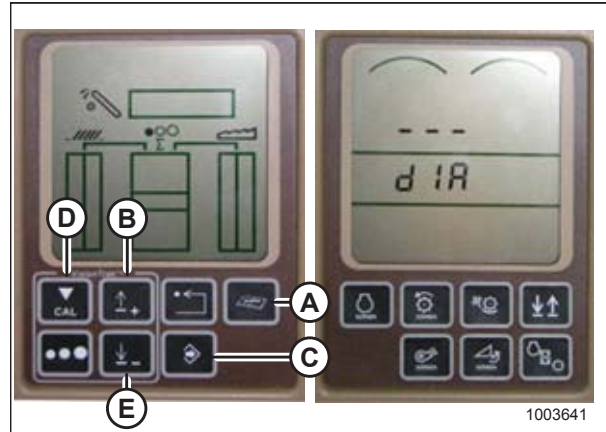


Figure 3.323: John Deere Combine Display

3.8.10 John Deere 70 Series Combines

Checking Voltage Range from the Combine Cab (John Deere 70 Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHC system.

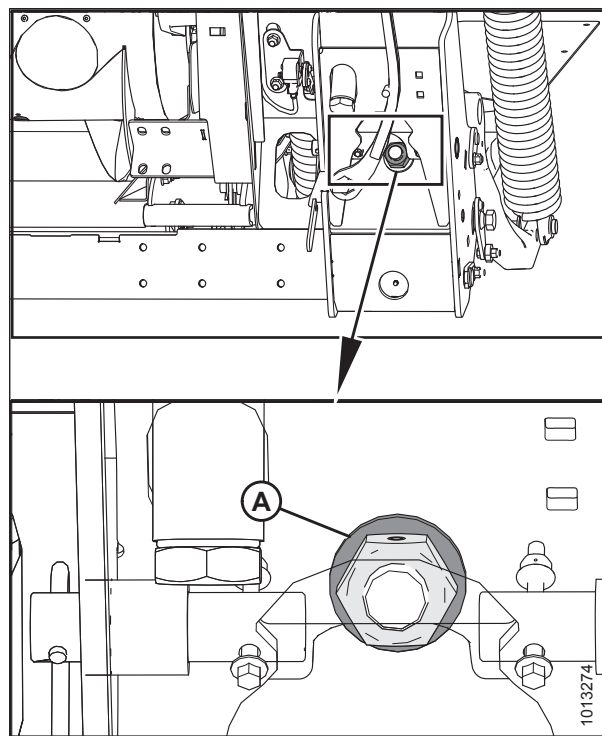


Figure 3.324: Float Lock

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on 0.

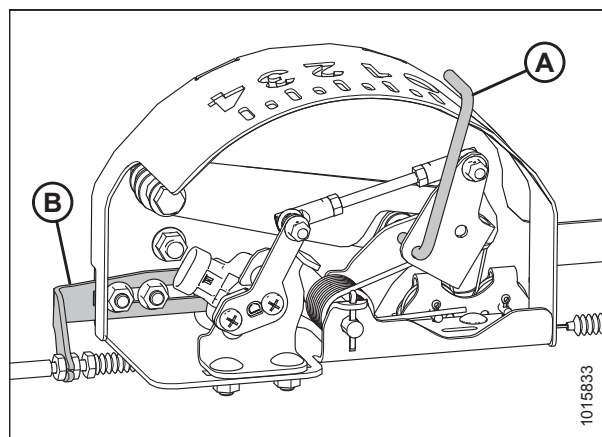


Figure 3.325: Float Indicator Box

OPERATION

4. Press the HOME PAGE button (A) on the main screen of the monitor.



Figure 3.326: John Deere Combine Display

5. Ensure the three icons (A) depicted in the illustration at right appear on the monitor.



Figure 3.327: John Deere Combine Display

6. Use scroll knob (A) to highlight the middle icon (the green i) and press the check mark button (B) to select it. This will bring up the Message Center.

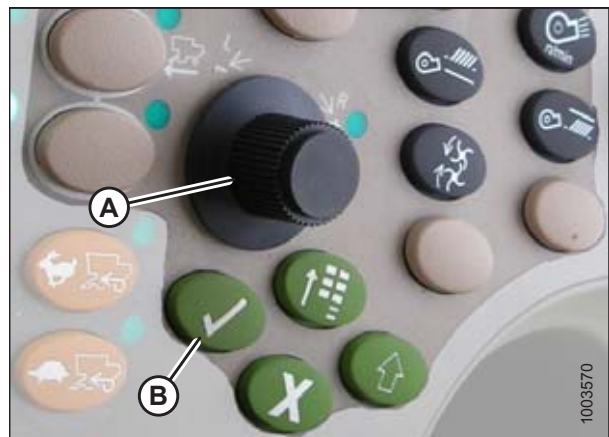


Figure 3.328: John Deere Combine Control Console

OPERATION

7. Use the scroll knob to highlight DIAGNOSTIC ADDRESSES (A) from the right column and select it by pressing the check mark button.
8. Use the scroll knob to highlight the drop-down box (B) and press the check mark button to select it.



Figure 3.329: John Deere Combine Display

9. Use the scroll knob to highlight LC 1.001 VEHICLE (A) and press the check mark button to select it.



Figure 3.330: John Deere Combine Display

10. Use the scroll knob to highlight the down arrow (A) and press the check mark button to scroll through the list until 029 DATA (B) is displayed and voltage reading (C) appears on the monitor.

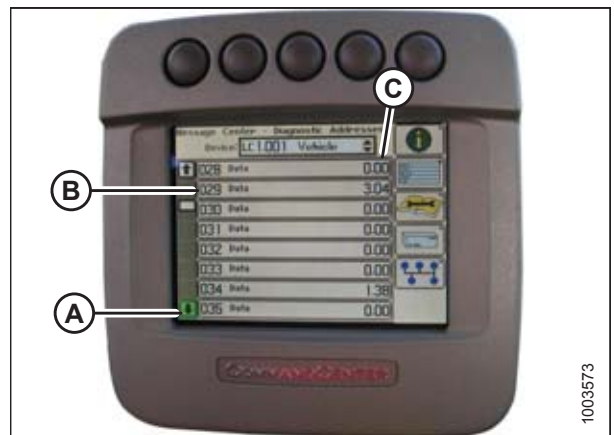


Figure 3.331: John Deere Combine Display

11. Ensure header float is unlocked.
12. Start the combine and fully lower feeder house to the ground.

NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

OPERATION

13. Check the sensor reading on the monitor.
14. Raise the header so it is just off the ground and recheck the sensor reading.
15. If the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient, refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).

Calibrating Feeder House Speed (John Deere 70 Series)

The feeder house speed must be calibrated before you calibrate the auto header height control (AHH) system. Refer to the combine operator's manual for instructions.

Calibrating the Auto Header Height Control (John Deere 70 Series)

For best performance of the auto header height control (AHH), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

CAUTION

Check to be sure all bystanders have cleared the area.

1. Ensure center-link is set to **D**.
2. Rest header on down stops and unlock float.
3. Start the combine.
4. Press the button located fourth from the left along the top of the monitor (A) to select the icon that resembles an open book with a wrench on it (B).
5. Press the top button (A) a second time to enter diagnostics and calibration mode.

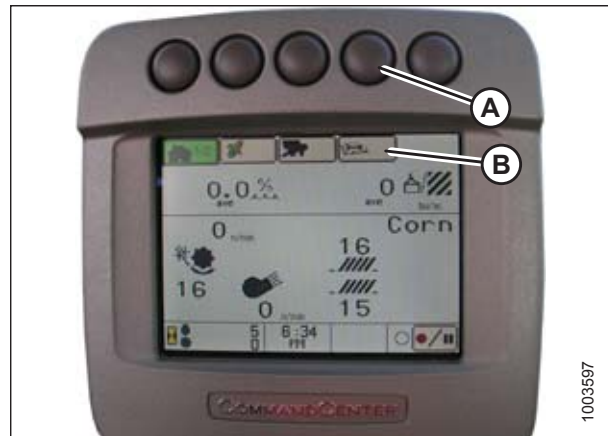


Figure 3.332: John Deere Combine Display

OPERATION

6. Select HEADER in box (A) by scrolling down to the box using the scroll knob, and then pressing the check mark button (knob and button are shown in Figure 3.334, page 217).
7. Scroll down to the lower right icon that resembles an arrow in a diamond (B) and press the check mark button to select it.

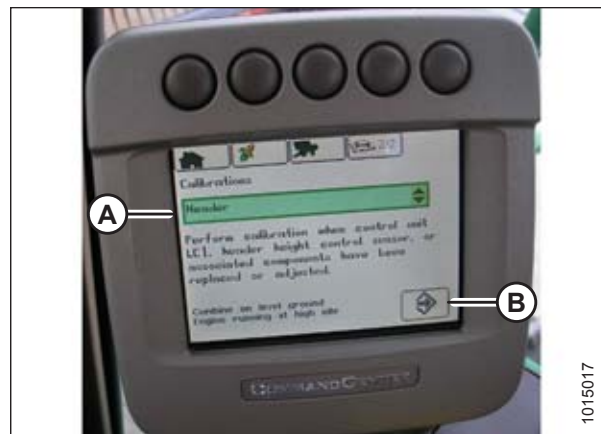


Figure 3.333: John Deere Combine Display

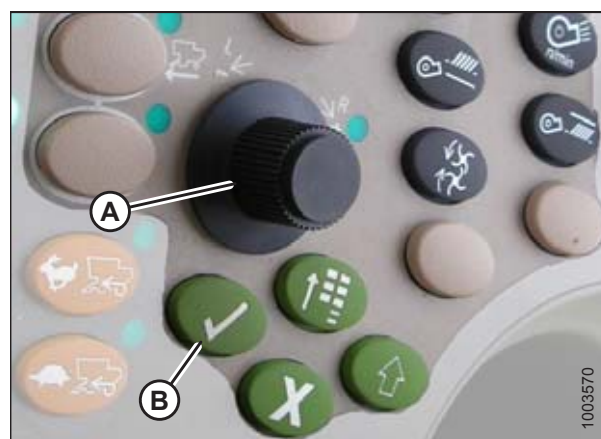


Figure 3.334: John Deere Combine Control Console

A - Scroll Knob

B - Check Mark Button

8. Follow the steps listed on the monitor to perform the calibration.

NOTE:

If an error code appears on screen, the sensor is not in the correct working range. Refer to [Checking Voltage Range from the Combine Cab \(John Deere S and T Series\)](#), page 220 to check and adjust the range.

OPERATION

Setting the Sensitivity of the Auto Header Height Control (John Deere 70 Series)

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Press button (A) twice and the current sensitivity setting will appear on the monitor (the lower the reading, the lower the sensitivity).
2. Use scroll knob (B) to adjust the sensitivity setting. The adjustment will be saved automatically.

NOTE:

If the screen remains idle for a short period of time, it will automatically return to the previous screen. Pressing the check mark button (C) also will return the monitor to the previous screen.

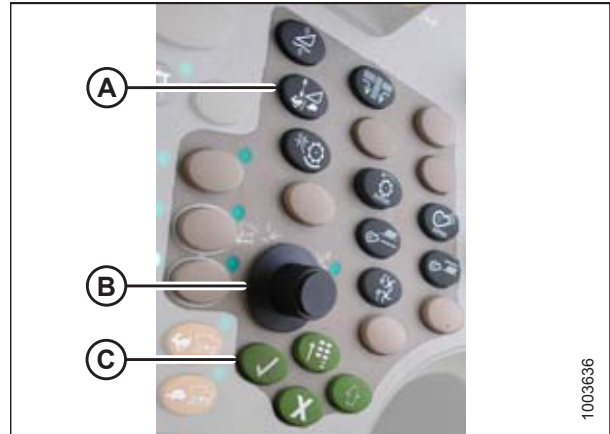


Figure 3.335: John Deere Combine Control Console

NOTE:

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.



Figure 3.336: John Deere Combine Display

OPERATION

Adjusting the Manual Header Raise/Lower Rate (John Deere 70 Series)

The weight of the header will dictate the rate at which the header can be raised or lowered during operation.

To manually adjust the header raise/lower rate, do the following steps:

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Press button (A) and the current raise/lower rate setting will appear on the monitor (the lower the reading, the slower the rate).
2. Use scroll knob (B) to adjust the rate. The adjustment will be saved automatically.

NOTE:

If the screen remains idle for a short period of time, it will automatically return to the previous screen. Pressing the check mark button (C) will also return the monitor to the previous screen.

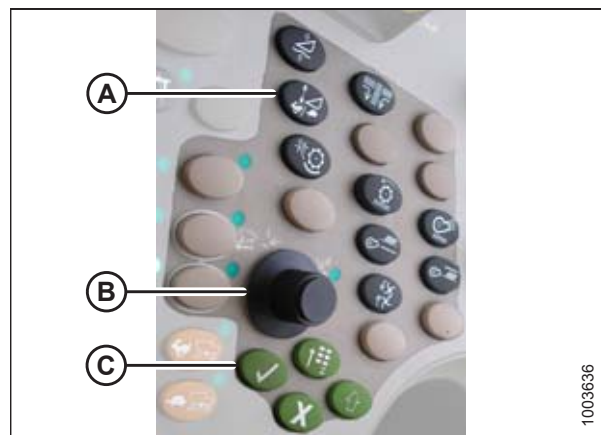


Figure 3.337: John Deere Combine Control Console

NOTE:

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.



Figure 3.338: John Deere Combine Display

3.8.11 John Deere S and T Series Combines

Checking Voltage Range from the Combine Cab (John Deere S and T Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

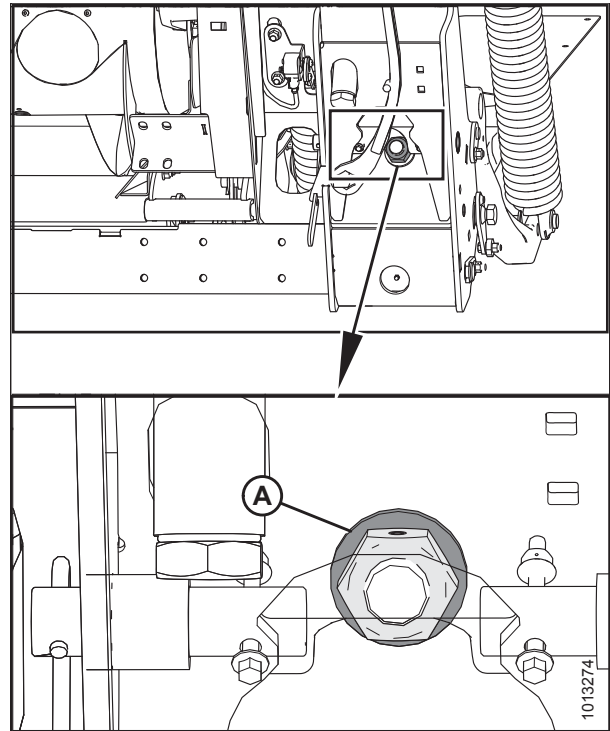


Figure 3.339: Float Lock

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on 0.

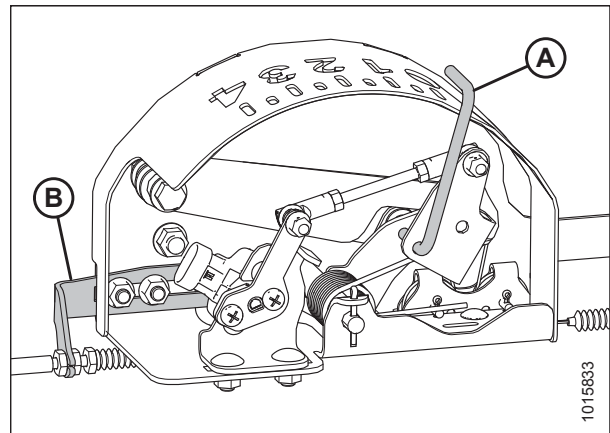


Figure 3.340: Float Indicator Box

OPERATION

4. Press the CALIBRATION icon (A) on the main screen of the monitor. The CALIBRATION screen appears.



Figure 3.341: John Deere Combine Display

5. Press the DIAGNOSTIC READINGS icon (A) on the CALIBRATION screen. The DIAGNOSTIC READINGS screen appears. This screen provides access to calibrations, header options, and diagnostic information.

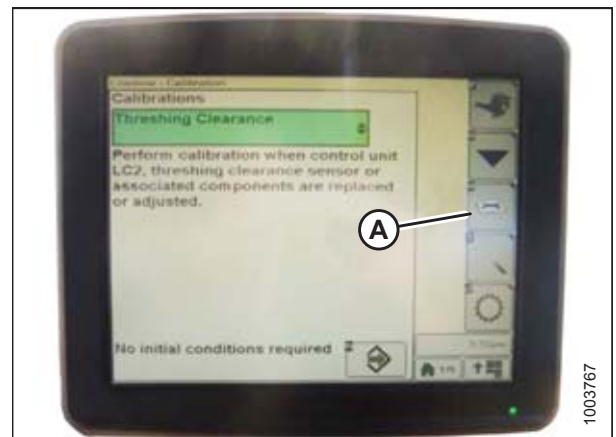


Figure 3.342: John Deere Combine Display

6. Select AHHC RESUME (A) and a list of calibration options appears.



Figure 3.343: John Deere Combine Display

OPERATION

7. Select the AHHC SENSING option.
8. Press the icon that resembles an arrow in a box (A). The AHHC SENSING menu appears and five screens of information are displayed.



Figure 3.344: John Deere Combine Display

9. Press icon (A) until it reads Page 5 near the top of the screen and the following sensor readings appear:

- LEFT HEADER HEIGHT
- CENTER HEADER HEIGHT
- RIGHT HEADER HEIGHT

A reading is displayed for both left and right sensors. On the MacDon header, there may be one sensor located in the float indicator box (standard) or two sensors located at the back of the float module side frame (optional).

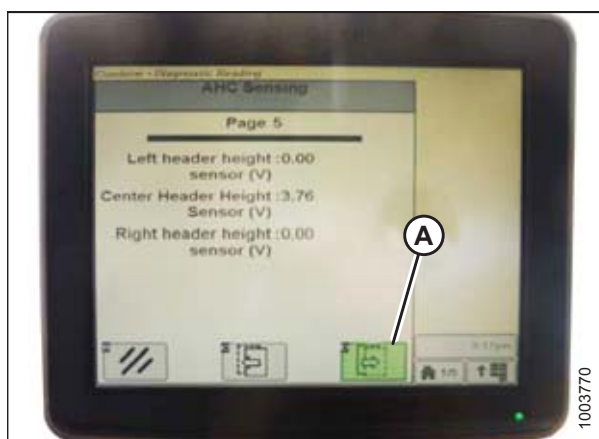


Figure 3.345: John Deere Combine Display

10. Ensure header float is unlocked.
11. Start the combine and fully lower feeder house to the ground.

NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

12. Check the sensor reading on the monitor.
13. If the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).

Calibrating the Auto Header Height Control (John Deere S and T Series)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

OPERATION

1. Ensure center-link is set to **D**.
2. Rest header on down stops and unlock float.
3. Press the DIAGNOSTIC icon (A) on the main screen of the monitor. The CALIBRATION screen appears.



Figure 3.346: John Deere Combine Display

4. Select THRESHING CLEARANCE (A) and a list of calibration options appears.

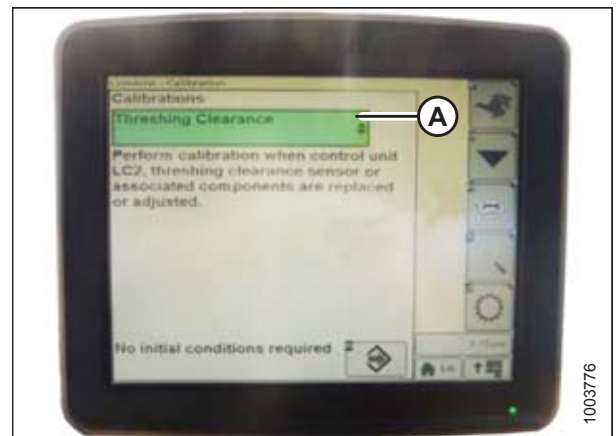


Figure 3.347: John Deere Combine Display

5. Select FEEDER HOUSE SPEED (A) and calibrate.
6. Select HEADER (B) and calibrate.

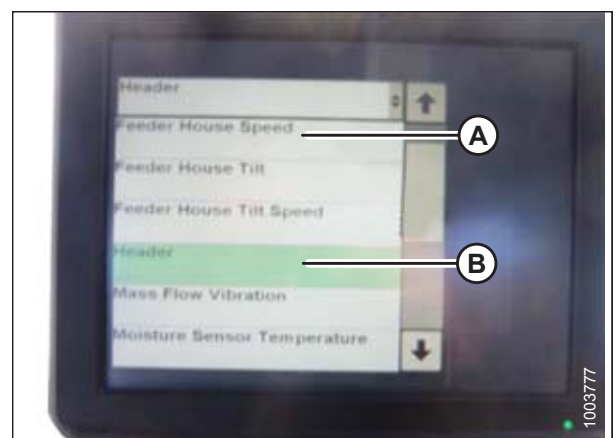


Figure 3.348: John Deere Combine Display

OPERATION

- Press icon (A) with either FEEDER HOUSE SPEED or HEADER selected and the icon will turn green.

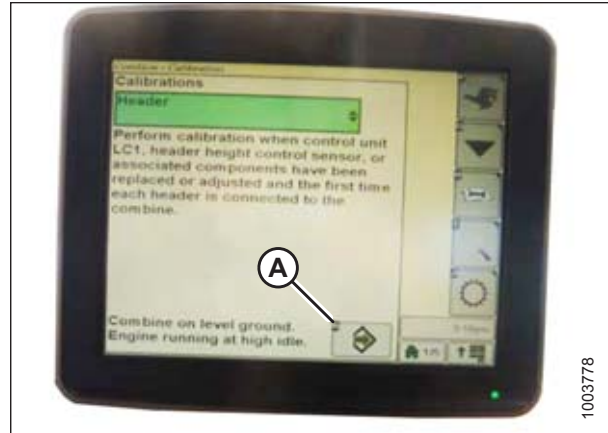


Figure 3.349: John Deere Combine Display

- Click button (A) and instructions will appear on screen to guide you through the remaining calibration steps.

NOTE:

If an error code appears during calibration, the sensor is out of voltage range and will require adjustment. Refer to [Checking Voltage Range from the Combine Cab \(John Deere S and T Series\)](#), page 220.



Figure 3.350: John Deere Combine Display

Setting the Sensitivity of the Auto Header Height Control (John Deere S and T Series)

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

OPERATION

1. Press button (A) twice and the current sensitivity setting will appear on the monitor.



Figure 3.351: John Deere Combine Command Center

2. Press the – or + icon (A) to adjust rates.

NOTE:

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.



Figure 3.352: John Deere Combine Display

Adjusting the Manual Header Raise/Lower Rate (John Deere S and T Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

The indicator (A) should be at position 0 (B) with the header 152 mm (6 in.) off the ground. If not, the float sensor output voltage should be checked. Refer to Step 4, page 143. When the header is on the ground, the indicator should be at position 1 (C) for low ground pressure, and at position 4 (D) for high ground pressure. Crop and soil conditions determine the amount of float to use. The ideal setting is as light as possible without header bouncing or missing crop. Operating with heavy settings prematurely wears the cutterbar wearplates.

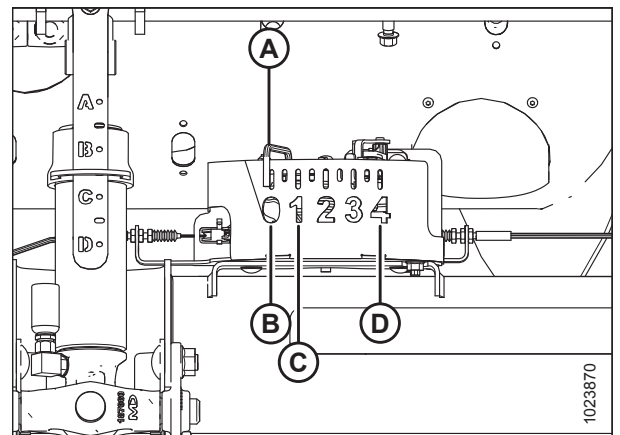


Figure 3.353: Float Indicator Box

OPERATION

1. Press button (A) and the current sensitivity setting will appear on the monitor.



Figure 3.354: John Deere Combine Command Center

2. Press the – or + icon (A) to adjust rates.

NOTE:

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.

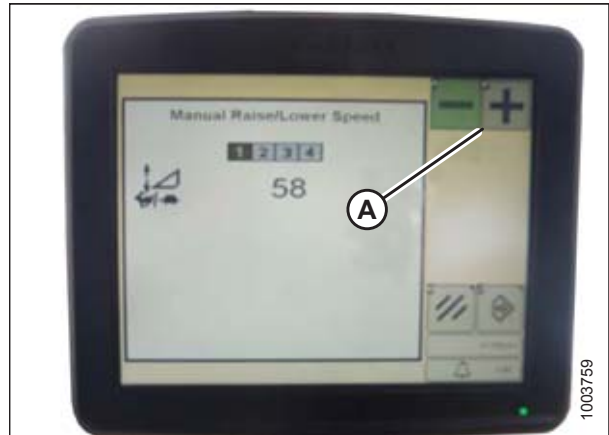


Figure 3.355: John Deere Combine Display

Setting Preset Cutting Height (John Deere S Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

The indicator (A) should be at position 0 (B) with the header (152 mm [6 in.]) off the ground. If not, the float sensor output voltage should be checked. Refer to Step 4, page 143. When the header is on the ground, the indicator should be at position 1 (C) for low ground pressure, and at position 4 (D) for high ground pressure. Crop and soil conditions determine the amount of float to use. The ideal setting is as light as possible without header bouncing or missing crop. Operating with heavy settings prematurely wears the cutterbar wearplates.

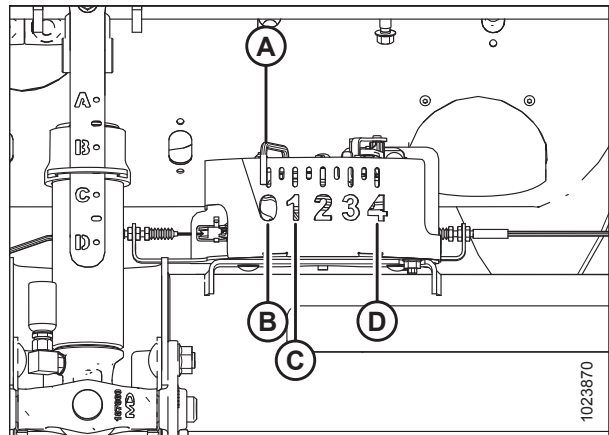


Figure 3.356: Float Indicator Box

OPERATION

1. Press the COMBINE – HEADER SETUP icon (A) on the main screen. The COMBINE – HEADER SETUP screen appears. This screen is used to set various header settings such as reel speed, header width, and height of feeder house for acre counter engagement.



Figure 3.357: Combine Display

2. Select the COMBINE – HEADER SETUP AHC icon (A). The COMBINE – HEADER SETUP AHC screen appears.



Figure 3.358: Combine Display

3. Select AUTO HEIGHT SENSING (A), RETURN TO CUT (B), and REEL POSITION (C) icons.

NOTE:

If REEL POSITION icon (C) cannot be selected (no check mark), the reel height sensor requires calibration. Refer to *Calibrating Reel Height Sensor (John Deere S and T Series)*, page 234.

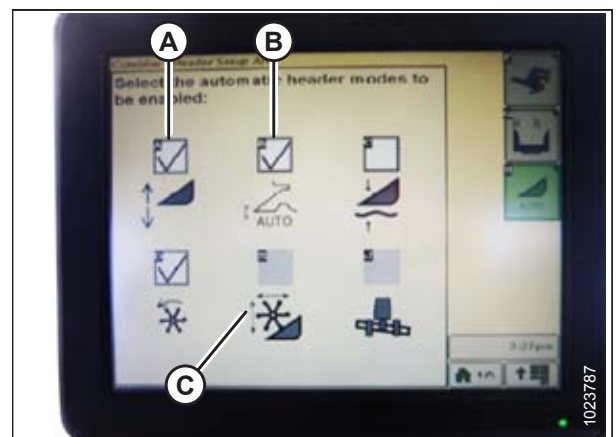


Figure 3.359: Combine Display

OPERATION

4. Engage the header.
5. Move header to desired position and use knob (A) to fine tune position.
6. Move reel to desired position.



Figure 3.360: Combine Control Console

7. Press and hold preset switch 2 (B) until 1 reel height icon flashes on monitor.
8. Repeat previous three steps for preset switch 3 (C).
9. Select an appropriate ground pressure setting. Use preset button 2 (B) on the control handle for a low ground pressure setting in muddy or soft soil conditions, and preset 3 (C) for a high ground pressure setting in firm soil conditions and a higher ground speed.

NOTE:

Preset button 1 (A) is reserved for header lift on the headland and is not used for cutting on ground.



Figure 3.361: Control Handle Buttons

NOTE:

When the AHHC is engaged, the AHHC icon (A) appears on the monitor and the number indicating which button was pressed (B) is displayed on the screen.

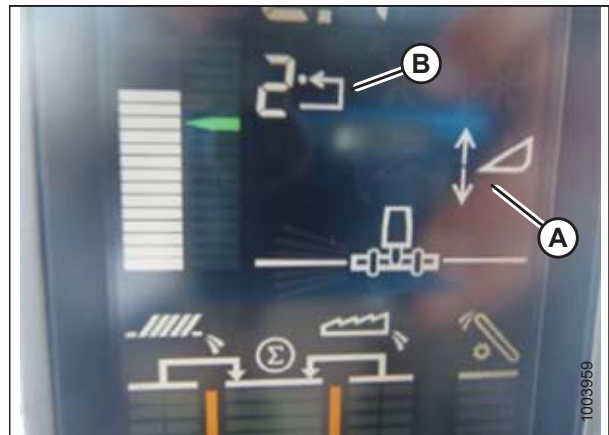


Figure 3.362: Combine Display

OPERATION

Calibrating Feeder House Fore-Aft Tilt Range (John Deere S and T Series)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to [3.7.4 Header Angle, page 94](#).

This procedure applies only to model year 2015 and later John Deere S and T Series combines.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

The feeder house fore/aft tilt is controlled by buttons (C) and (D) at the back of the control handle.



Figure 3.363: John Deere Control Handle

NOTE:

The feeder house fore/aft tilt controls can be changed to work with buttons E and F by pressing the control handle icon (A) and then selecting FEEDER HOUSE FORE/AFT TILT from the drop-down menu (B).

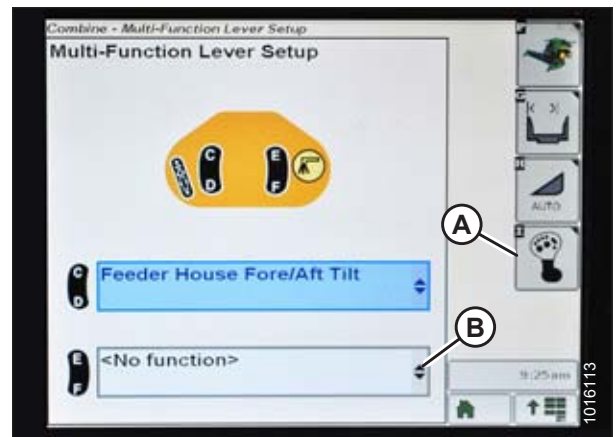


Figure 3.364: John Deere Combine Display

To calibrate the feeder house fore-aft tilt range, follow these steps:

1. Ensure center-link is set to **D**.
2. Rest header on down stops and unlock float.

OPERATION

- Press the DIAGNOSTIC icon (A) on the main screen of the monitor. The CALIBRATION screen displays.



Figure 3.365: John Deere Combine Display

- Select the CALIBRATIONS drop-down menu (A) to view the list of calibration options.

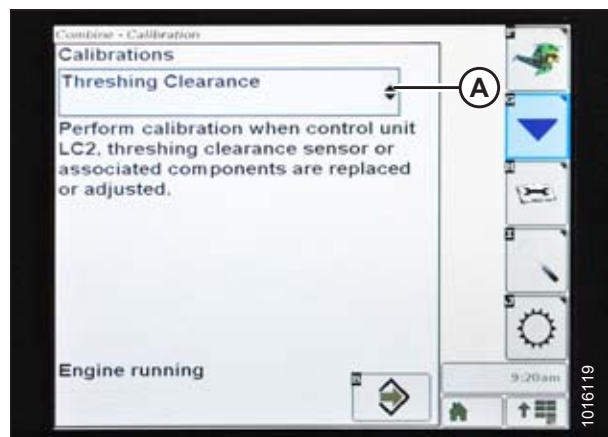


Figure 3.366: John Deere Combine Display

- Press the arrow (A) to cycle up through the calibration options and select FEEDER HOUSE FORE/AFT TILT RANGE.

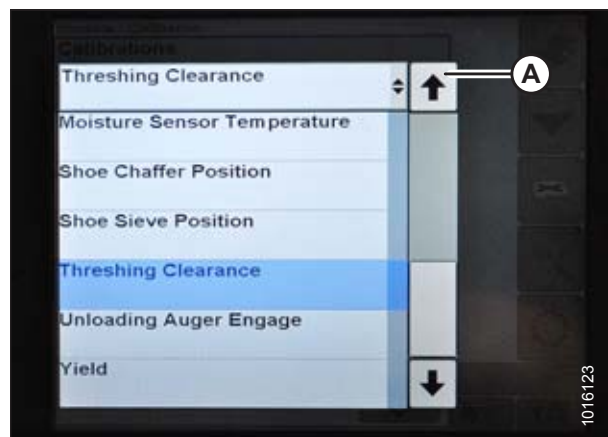


Figure 3.367: John Deere Combine Display

OPERATION

6. Press the ENTER icon (A).

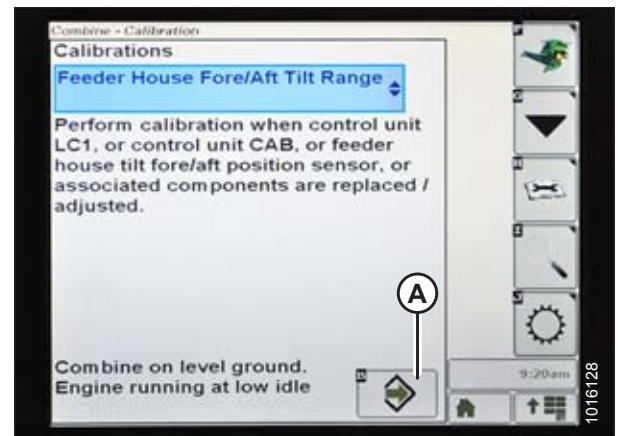


Figure 3.368: John Deere Combine Display

7. Follow the instructions that appear on the screen. As you proceed through the calibration process, the display will automatically update to show the next step.

NOTE:

If an error code appears during calibration, the sensor is out of voltage range and will require adjustment. Refer to [Checking Voltage Range from the Combine Cab \(John Deere S and T Series\)](#), page 220.

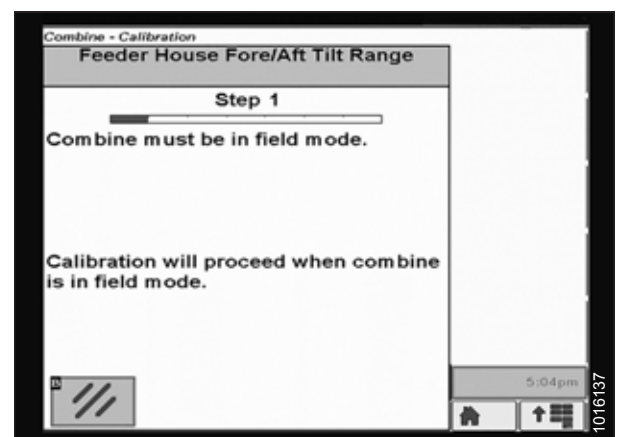


Figure 3.369: John Deere Combine Display

Checking Reel Height Sensor Voltages (John Deere S and T Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Press the CALIBRATION icon (A) on the main screen of the monitor. The CALIBRATION screen appears.



Figure 3.370: John Deere Combine Display

OPERATION

2. Press the DIAGNOSTIC READINGS icon (A) on the CALIBRATION screen. The DIAGNOSTIC READINGS screen appears. This screen provides access to calibrations, header options, and diagnostic information.

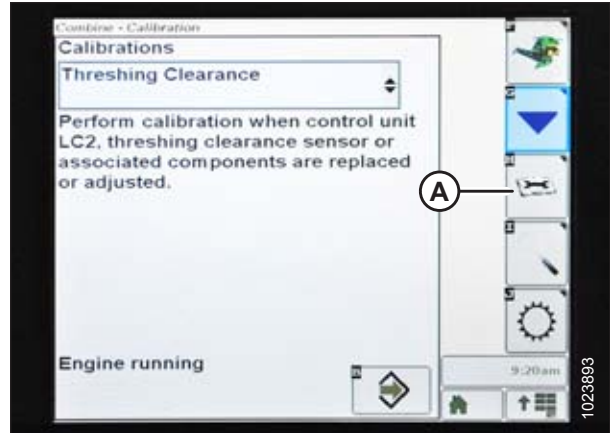


Figure 3.371: John Deere Combine Display

3. Select the drop-down menu (A) to view the list of calibration options.

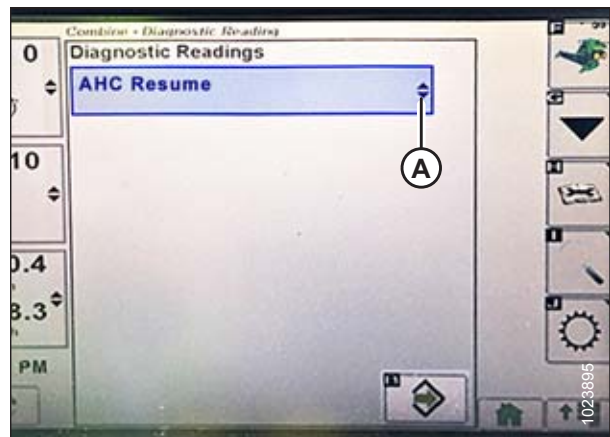


Figure 3.372: John Deere Combine Display

4. Scroll down and select REEL RESUME (A).

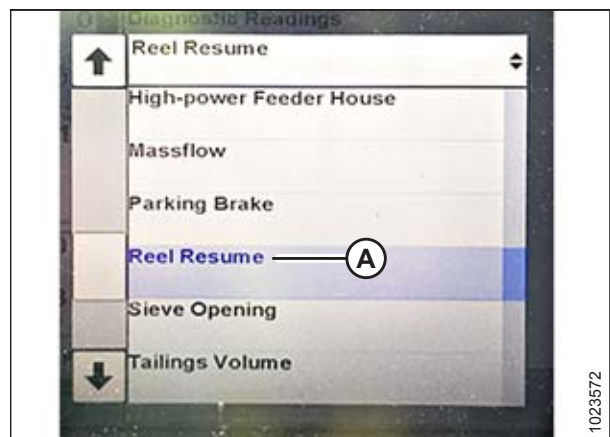


Figure 3.373: John Deere Combine Display

OPERATION

5. Press the ENTER icon (A). The REEL RESUME page displays.

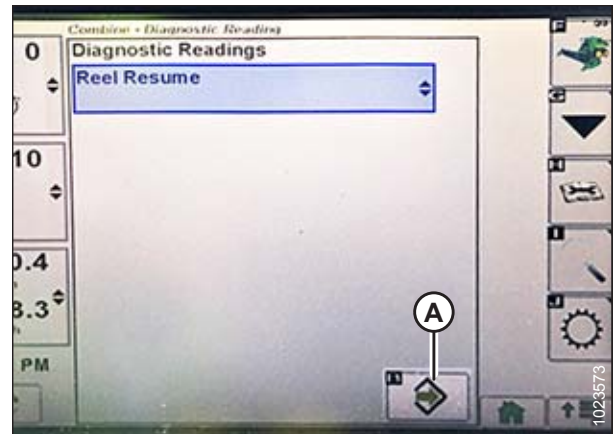


Figure 3.374: John Deere Combine Display

6. Press the NEXT PAGE icon (A) to cycle to page 3.
7. Lower the reel to view the low voltage (B). The voltage should be 0.5–0.9 V.

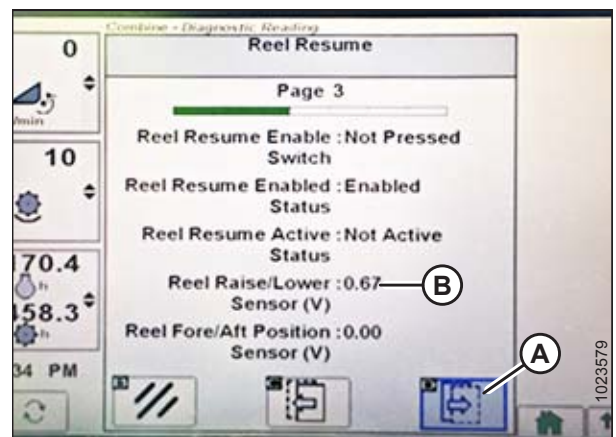


Figure 3.375: John Deere Combine Display

8. Raise the reel to view the high voltage (A). The voltage should be 4.1–4.5 V.
9. If either voltage is not within the correct range, refer to [Checking and Adjusting Reel Height Sensor, page 109](#).

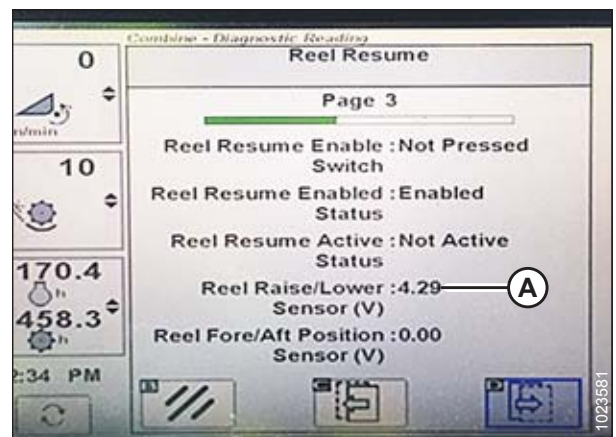


Figure 3.376: John Deere Combine Display

OPERATION

Calibrating Reel Height Sensor (John Deere S and T Series)

For best performance of the auto header height control (AHHC), perform this procedure with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to [3.7.4 Header Angle, page 94](#).

This procedure applies only to model year 2015 and later John Deere S and T Series combines.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

To calibrate reel height, follow these steps:

1. Ensure center-link is set to **D**.
2. Rest header on down stops and unlock float.
3. Press the DIAGNOSTIC icon (A) on the main screen of the monitor. The CALIBRATION screen displays.



Figure 3.377: John Deere Combine Display

4. Select the CALIBRATIONS drop-down menu (A) to view the list of calibration options.
5. Scroll through the list of options and select REEL POSITION.
6. Press the ENTER icon (B).

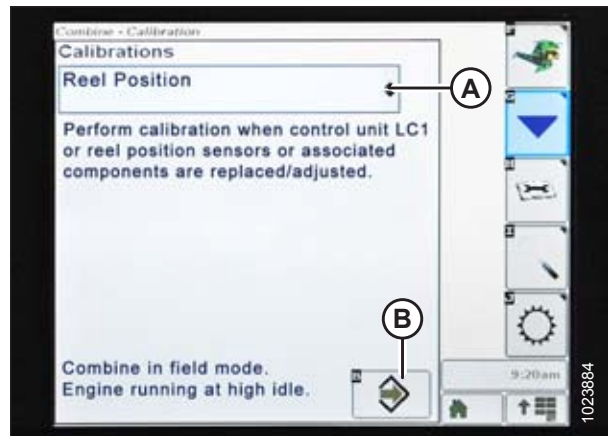


Figure 3.378: John Deere Combine Display

OPERATION

7. Follow the instructions that appear on the screen. As you proceed through the calibration process, the display will automatically update to show the next step. This calibration requires you to use the reel raise (A) and reel lower (B) switches on the control handle.



Figure 3.379: John Deere Control Handle

8. Press and hold REEL LOWER switch until reel is fully lowered. Continue holding REEL LOWER switch until prompted by the display.



Figure 3.380: John Deere Combine Display

9. Press and hold REEL RAISE switch until reel is fully raised. Continue holding REEL RAISE switch until prompted by the display.

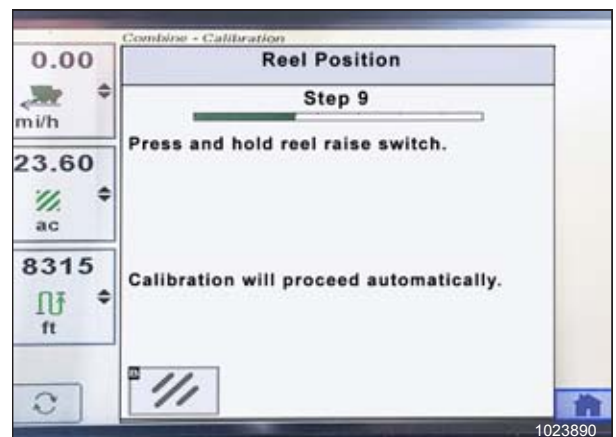


Figure 3.381: John Deere Combine Display

OPERATION

- When all steps have been completed, CALIBRATION COMPLETE message is displayed on the screen. Exit the CALIBRATION menu by pressing the ENTER icon.

NOTE:

If an error code appears during calibration, the sensor is out of voltage range and will require adjustment. Refer to *Checking Reel Height Sensor Voltages (John Deere S and T Series)*, page 231.

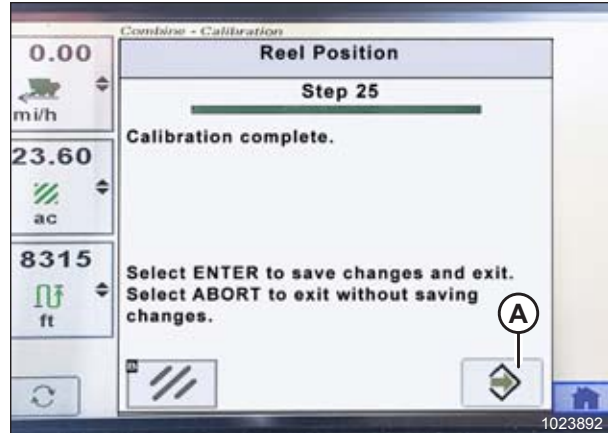


Figure 3.382: John Deere Combine Display

3.8.12 John Deere S7 Series Combines

Setting up Header (John Deere S7 Series)

NOTE:

Changes may have been made to combine controls or display since this document was published. Refer to combine operator's manual for updates.

- Press the header button (A) on the panel below the display. The HEADER page opens.



Figure 3.383: John Deere S7 Display

OPERATION

2. Select the HEADER TYPE field (A). The HEADER DETAILS window opens.



Figure 3.384: John Deere S7 Display – Header Page

3. Verify correct header width is displayed under WIDTH.
4. To change header width, select field (A). The WIDTH window opens.



Figure 3.385: John Deere S7 Display – Header Details Window

5. Use the on-screen keypad to enter the correct header width, and then press OK.



Figure 3.386: John Deere S7 Display – Setting Header Width

OPERATION

6. Press window close button (A) in top right corner of the window to return to the HEADER page.



Figure 3.387: John Deere S7 Display – Header Details Window

7. The raise/lower speed, tilt speed, height sensitivity, and tilt sensitivity can all be adjusted from this page. Select the option (A) you would like to adjust. This example shows the raise/lower speed adjustment.



Figure 3.388: John Deere S7 Display – Header Page

8. Use the + and – buttons (A) to adjust the setting.
9. Press window close button in top right corner of the window to return to the HEADER page.

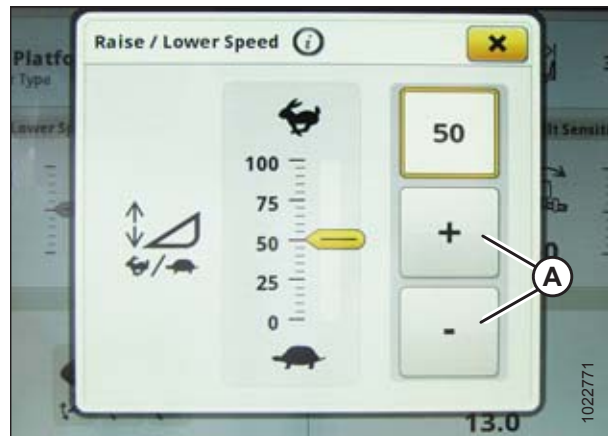


Figure 3.389: John Deere S7 Display – Raise/Lower Speed Adjustment

OPERATION

10. Select the AUTO CONTROL icons (A). The AUTO HEADER CONTROLS page opens.

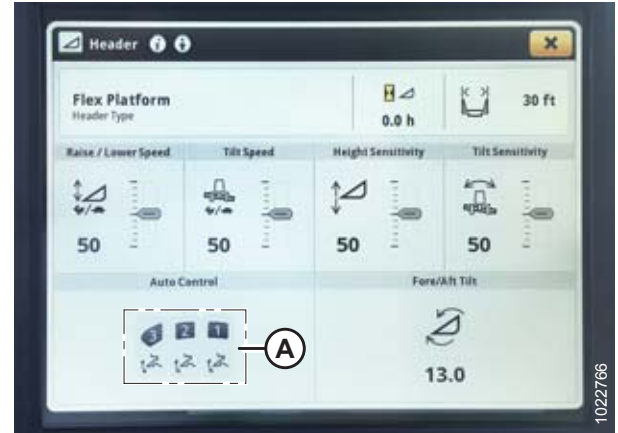


Figure 3.390: John Deere S7 Display – Header Page

11. If the header has not been calibrated yet, an error icon will appear on the HEIGHT SENSING button (A). Select button (A) to view error message.



Figure 3.391: John Deere S7 Display – Auto Header Controls

12. Read error message and then press OK.
13. Proceed to *Checking Voltage Range from the Combine Cab (John Deere S7 Series), page 240.*

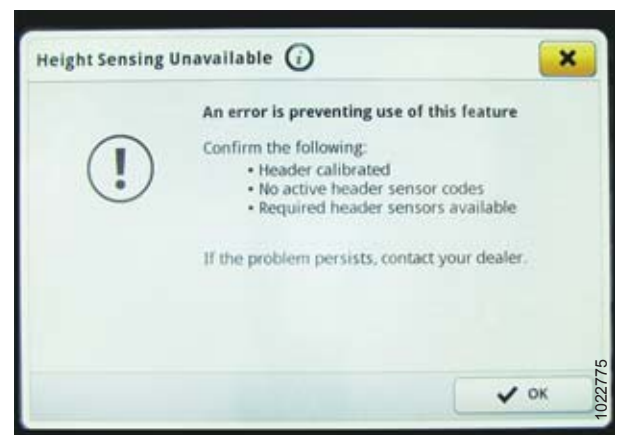


Figure 3.392: John Deere S7 Display – Height Sensing Error Message

OPERATION

Checking Voltage Range from the Combine Cab (John Deere S7 Series)

The auto header height sensor output must be within a specific range, or the feature will not work properly.

Combine	Low Voltage Limit	High Voltage Limit	Minimum Range
John Deere S7 Series	0.5 V	4.5 V	3.0 V

Check the sensor's output voltage range from combine cab according to instructions that follow.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

CAUTION

Check to be sure all bystanders have cleared the area.

1. Position header 150 mm (6 in.) above ground, and unlock float.
2. Ensure float lock linkage is on down stops at both locations. When linkage is on down stops, washer (A) and nut (B) cannot be moved.

NOTE:

If header is not on down stops during next two steps, voltage may go out of range during operation causing a malfunction of auto header height control (AHHC) system.

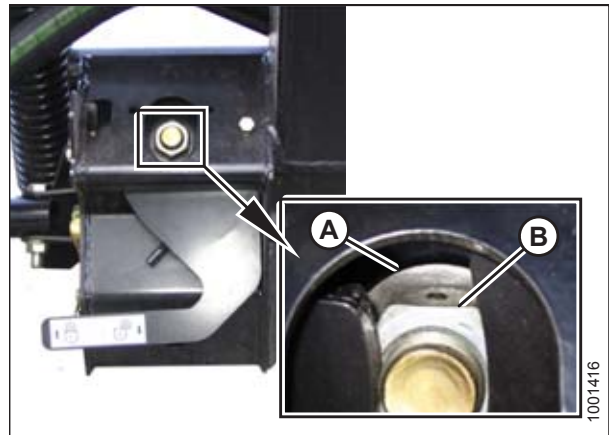


Figure 3.393: Float Lock

3. Adjust cable take-up bracket (B) (if necessary) until pointer (A) on float indicator is on 0.

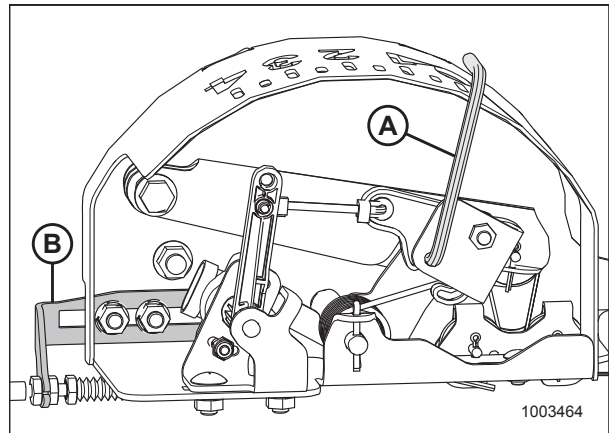


Figure 3.394: Float Indicator Box

OPERATION

4. On the HARVESTING page, select MENU icon (A) in the bottom right corner of the screen.



Figure 3.395: John Deere S7 Display – Harvesting Page

5. On the MENU page, select the SYSTEM tab (A). The MENU opens.
6. Select DIAGNOSTICS CENTER icon (B). The DIAGNOSTICS CENTER page opens.

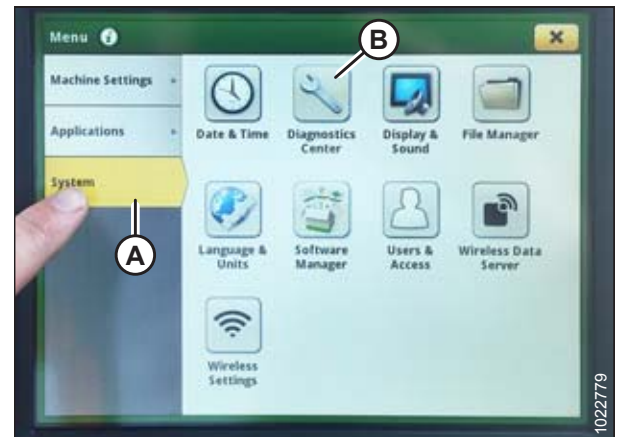


Figure 3.396: John Deere S7 Display – Menu

7. Select AHC - SENSING (A). The AHC - SENSING \DIAGNOSTICS page displays.

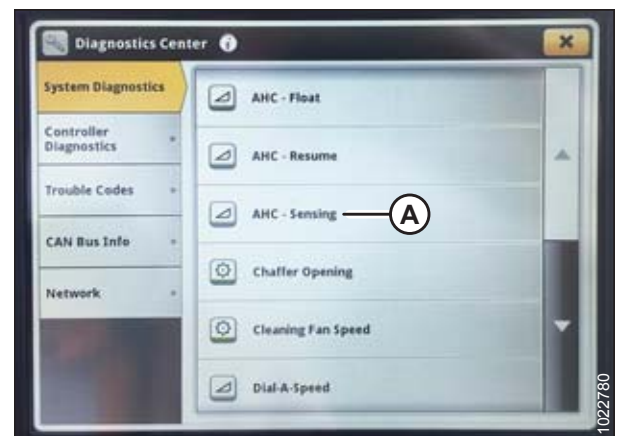


Figure 3.397: John Deere S7 Display – Diagnostics Center

OPERATION

- Select SENSOR tab (A) to view sensor voltages. The center header height sensor voltage (B) must be between 0.5 and 4.5 V, with at least 3 V of variation between 0 and 4 on the float indicator box.

NOTE:

If the optional Auto Lateral Tilt AHHC kit is installed, the left and right header height sensors must also be in the same 0.5–4.5 V range.

- If sensor voltage adjustment is required, refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).

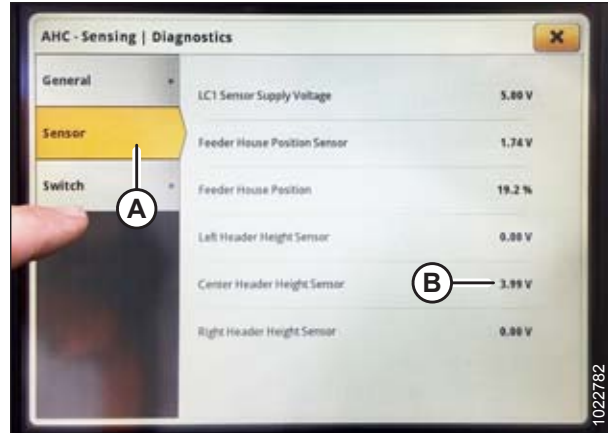


Figure 3.398: John Deere S7 Display – Checking Sensor Voltage

Calibrating Feeder House (John Deere S7 Series)

Feeder house calibration must be done before header calibration.

For best performance of auto header height control (AHHC), perform these procedures with center-link set to **D**. When setup and calibration are complete, adjust center-link back to desired header angle. For instructions, refer to [Adjusting Header Angle from Combine, page 96](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

- Ensure center-link is set to **D**.
- Rest header on down stops and unlock float.
- On the HARVESTING page, select the MENU icon (A) in the bottom right corner of screen. The MENU opens.



Figure 3.399: John Deere S7 Display – Harvesting Page

OPERATION

4. Select the MACHINE SETTINGS tab (A).
5. Select the CALIBRATIONS & PROCEDURES icon (B). The CALIBRATIONS & PROCEDURES page displays.



Figure 3.400: John Deere S7 Display – Machine Settings

6. Select HEADER tab (A).
7. Select FEEDER HOUSE RAISE SPEED CALIBRATION (B). The FH RAISE SPEED CALIBRATION page displays.

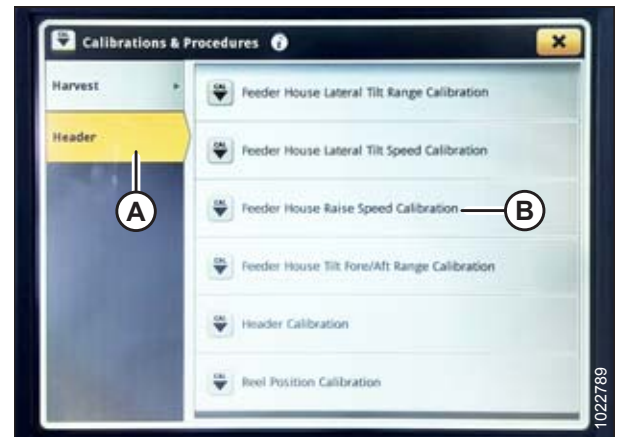


Figure 3.401: John Deere S7 Display – Calibrations and Procedures

8. Select CALIBRATE (A) at the bottom of the page. A calibration overview displays.

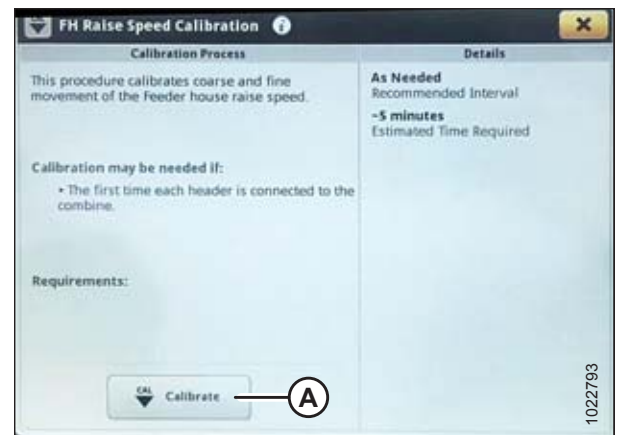


Figure 3.402: John Deere S7 Display – Feeder House Calibration

OPERATION

9. Read the calibration overview, and then press START.



Figure 3.403: John Deere S7 Display – Feeder House Calibration

10. Follow the instructions on the screen. As you proceed through the calibration process, the display will automatically update to show next step.

NOTE:

If an error code appears during calibration, the sensor is out of voltage range and will require adjustment. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).



Figure 3.404: John Deere S7 Display – Feeder House Calibration

11. When calibration is complete, select SAVE to confirm calibration.



Figure 3.405: John Deere S7 Display – Feeder House Calibration

OPERATION

Calibrating Header (John Deere S7 Series)

Feeder house calibration must be done before header calibration. If feeder house has not yet been calibrated, refer to [Calibrating Feeder House \(John Deere S7 Series\)](#), page 242.

For best performance of auto header height control (AHHC), perform these procedures with header at steepest angle. When setup and calibration are complete, adjust center-link back to desired header angle.

NOTE:

Changes may have been made to combine controls or display since this document was published. Refer to combine operator's manual for updates.

1. Ensure center-link is set to **D**.
2. Rest header on down stops and unlock float.
3. On the HARVESTING page, select the MENU icon (A) in the bottom right corner of screen. The MENU opens.



Figure 3.406: John Deere S7 Display – Harvesting Page

4. Select the MACHINE SETTINGS tab (A).
5. Select the CALIBRATIONS & PROCEDURES icon (B). The CALIBRATIONS & PROCEDURES page displays.



Figure 3.407: John Deere S7 Display – Machine Settings

OPERATION

6. Select HEADER tab (A).
7. Select HEADER CALIBRATION (B). The HEADER CALIBRATION page displays.

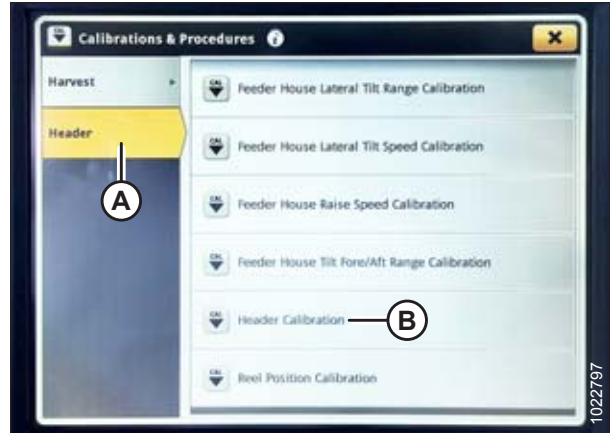


Figure 3.408: John Deere S7 Display – Calibrations and Procedures

8. Select CALIBRATE (A) at bottom of page. The calibration overview window opens.

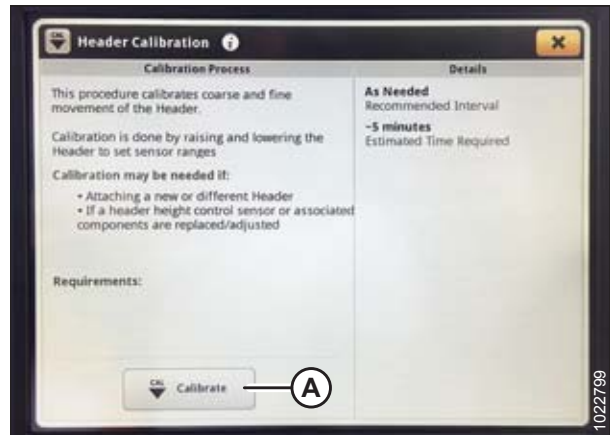


Figure 3.409: John Deere S7 Display – Header Calibration

9. Press button (A) on console to set engine to high idle.



Figure 3.410: John Deere S7 Console

OPERATION

10. Select START on calibration overview page.
11. Follow instructions that appear on combine display. As you proceed through calibration process, display will automatically update to show next step.

NOTE:

If an error code appears during calibration, sensor is out of voltage range and will require adjustment. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).



Figure 3.411: John Deere S7 Display – Header Calibration

12. When calibration is complete, select SAVE to confirm calibration.



Figure 3.412: John Deere S7 Display – Header Calibration

3.8.13 CLAAS 500 Series Combines

Calibrating the Auto Header Height Control (CLAAS 500 Series)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to **D**.

OPERATION

2. Use the < key (A) or > key (B) to select AUTO HEADER, and press the OK key (C). The E5 screen displays whether the automatic header height is on or off.

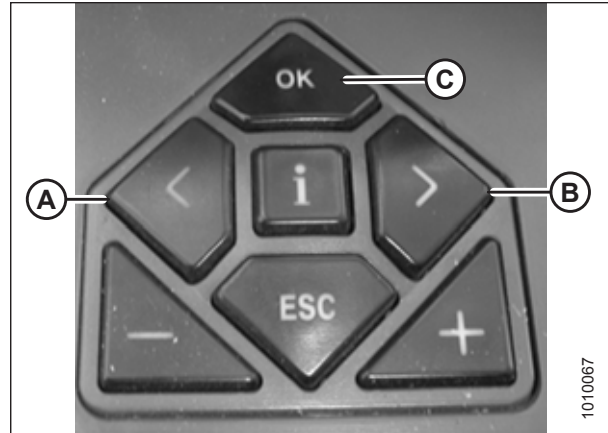


Figure 3.413: CLAAS Combine Controls

3. Use the – key (A) or the + key (B) to turn the AHHC on, and press the OK key (C).
4. Engage the threshing mechanism and the header.

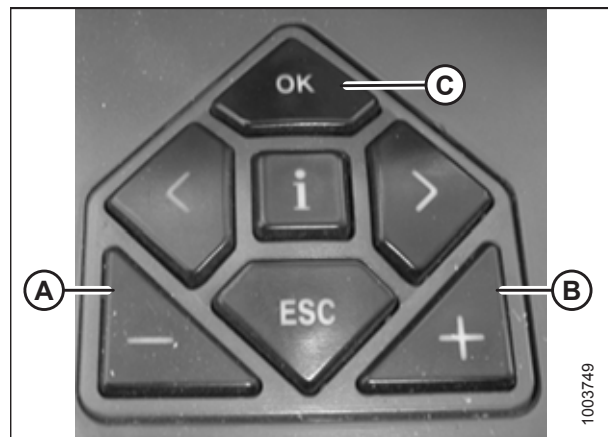


Figure 3.414: CLAAS Combine Controls

5. Use the < or > key to select CUTT. HEIGHT LIMITS, and press the combine controls OK key.
6. Follow the procedure displayed on the screen to program the upper and lower limits of the header into the CEBIS.

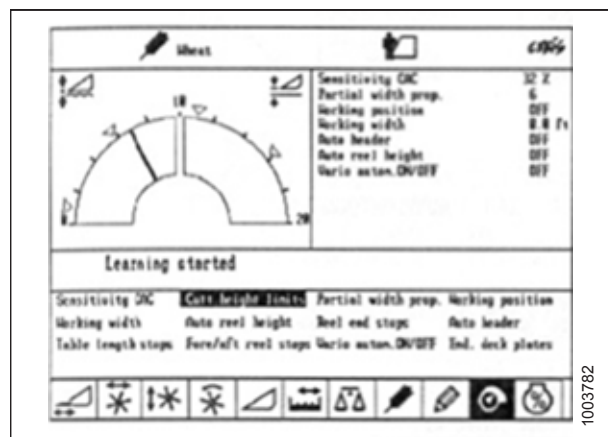


Figure 3.415: CLAAS Combine Display

OPERATION

- Use the < or > key to select SENSITIVITY CAC, and press the combine controls OK key.

NOTE:

Setting the sensitivity of the AHHC system impacts the reaction speed of the AHHC on the header.

- Use the – key or the + key to change the setting of the reaction speed, and press the combine controls OK key.

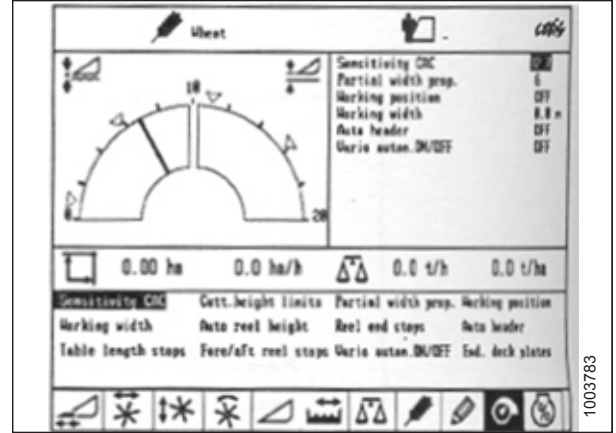


Figure 3.416: CLAAS Combine Display

- Use line (A) or value (B) to determine the sensitivity setting.

NOTE:

The setting can be adjusted from 0–100%. When sensitivity is adjusted to 0%, the signals from the sensing bands have no effect on the automatic cutting height adjustment. When sensitivity is adjusted to 100%, the signals from the sensing bands have maximum effect on the automatic cutting height adjustment. The recommended starting point is 50%.

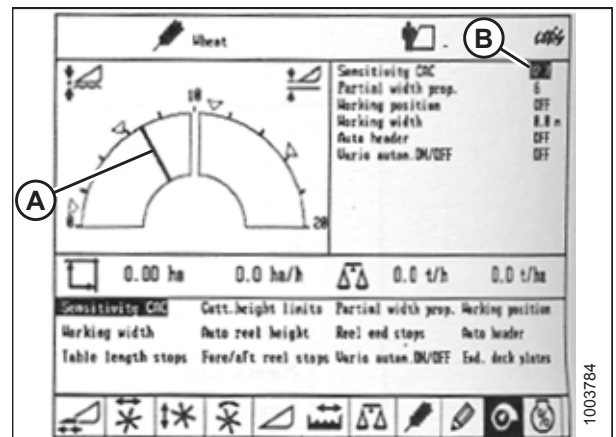


Figure 3.417: CLAAS Combine Display

Setting Cutting Height (CLAAS 500 Series)

Cutting heights can be programmed into the preset cutting height and auto contour systems. Use the preset cutting height system for cutting heights above 150 mm (6 in.), and use the auto contour system for cutting heights below 150 mm (6 in.).

Setting Preset Cutting Height (CLAAS 500 Series)



CAUTION

Check to be sure all bystanders have cleared the area.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

- Start the engine.
- Activate the machine enable switch.
- Engage the threshing mechanism.
- Engage the header.

OPERATION

5. Briefly press button (A) in order to activate the auto contour system, or briefly press button (B) in order to activate the preset cutting height system.

NOTE:

Button (A) is used only with auto header height control (AHHC) function. Button (B) is used only with the return to cut function.



Figure 3.418: Control handle Buttons

6. Use the < key (C) or > key (D) to select the CUTTING HEIGHT screen, and press the OK key (E).
7. Use the – key (A) or the + key (B) to set the desired cutting height. An arrow indicates the selected cutting height on the scale.

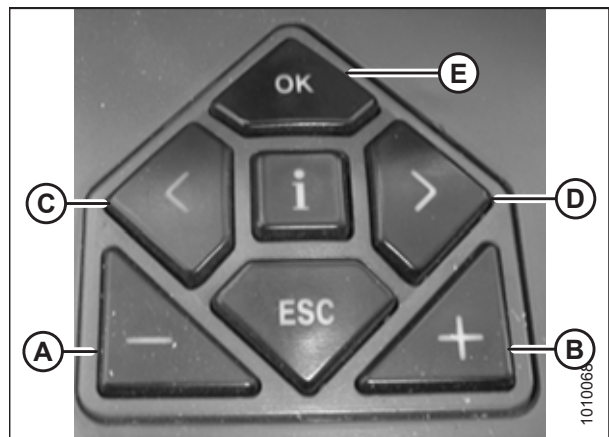


Figure 3.419: CLAAS Combine Controls

8. Briefly press button (A) or button (B) in order to select the set point.
9. Repeat Step 7, [page 250](#) for the set point.



Figure 3.420: Control Handle Buttons

Setting Cutting Height Manually (CLAAS 500 Series)

CAUTION

Check to be sure all bystanders have cleared the area.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Use button (A) to raise the header or button (B) to lower the header to the desired cutting height.
2. Press and hold button (C) for 3 seconds to store the cutting height into the CEBIS (an alarm will sound when the new setting has been stored).
3. Program a second set point, if desired, by using button (A) to raise the header or button (B) to lower the header to the desired cutting height, and briefly press button (C) to store the second set point into the CEBIS (an alarm will sound when the new setting has been stored).

NOTE:

For above the ground cutting, repeat Step 1, [page 251](#), and use button (D) instead of button (C) while repeating Step 2, [page 251](#).



Figure 3.421: Control Handle Buttons

Setting the Sensitivity of the Auto Header Height Control (CLAAS 500 Series)

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

NOTE:

The upper and lower limits of the header must be programmed into the CEBIS before adjusting the sensitivity of the AHHC system. The setting can be adjusted from 0–100%. When sensitivity is adjusted to 0%, the signals from the sensing bands have no effect on the automatic cutting height adjustment. When sensitivity is adjusted to 100%, the signals from the sensing bands have maximum effect on the automatic cutting height adjustment. The recommended starting point is 50%.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

OPERATION

1. Use the < key (C) or the > key (D) to select SENSITIVITY CAC, and press the OK key (E).
2. Use the – key (A) or the + key (B) to change the reaction speed setting, and press the OK key (E).

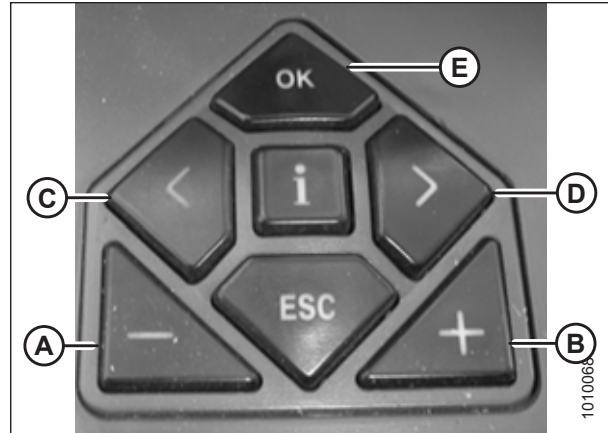


Figure 3.422: CLAAS Combine Controls

3. Use line (A) or value (B) to determine the sensitivity setting.


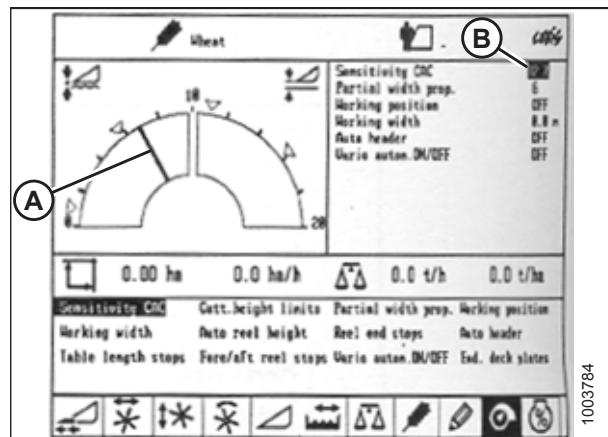


Figure 3.423: CLAAS Combine Display

OPERATION

Figure 3.424: Flow Chart for Setting the Sensitivity of the Float Optimizer

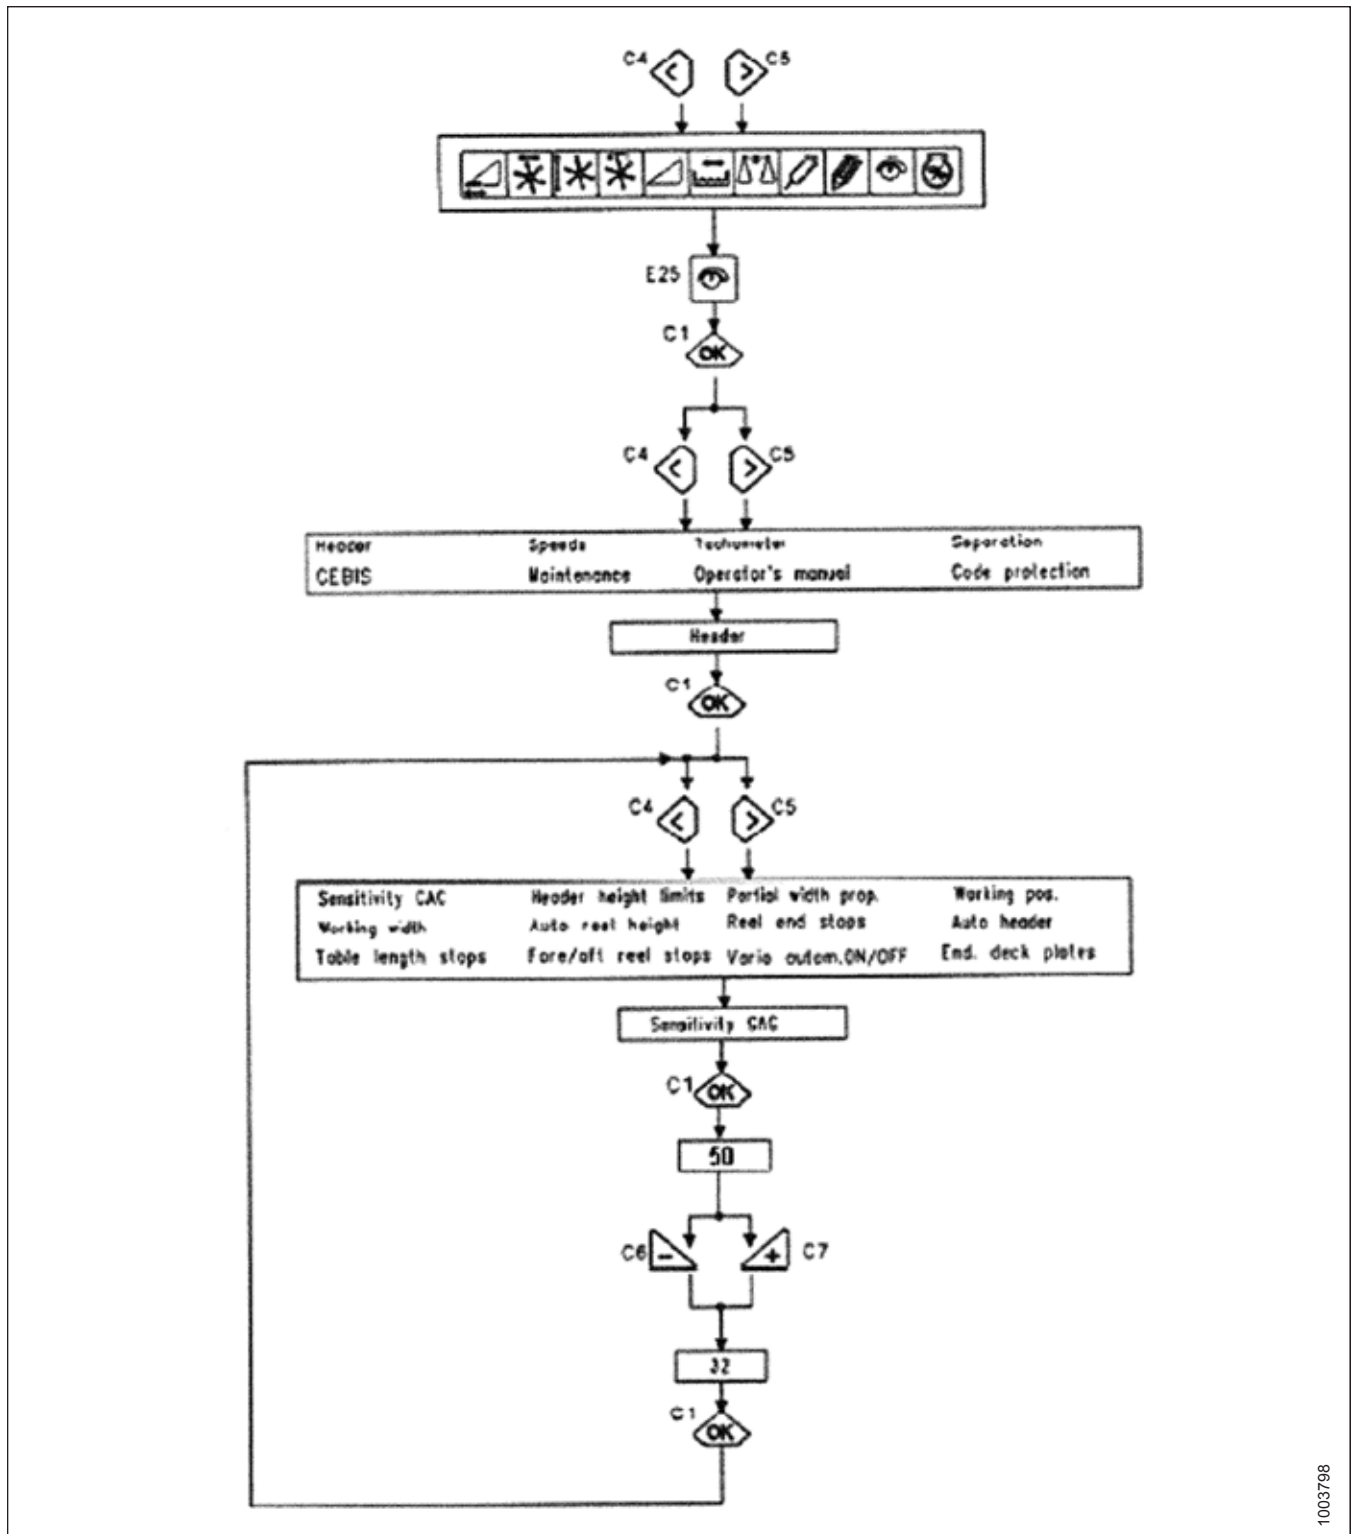

1003798

OPERATION

Adjusting Auto Reel Speed (CLAAS 500 Series)

The preset reel speed can be set when the automatic header functions are activated.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Use the < or > key to select REEL WINDOW. Window E15 will display the current advance or retard speed of the reel in relation to the ground speed.

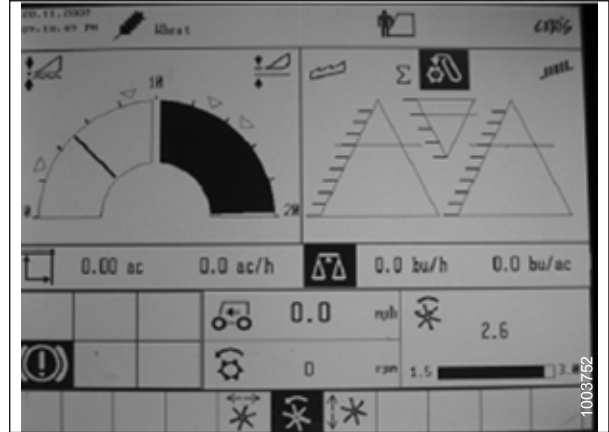


Figure 3.425: CLAAS Combine Display

2. Press the OK key (C) to open the REEL SPEED window.
3. Use the – key (A) or the + key (B) to set the reel speed in relation to the current ground speed. Window E15 will display the selected reel speed.

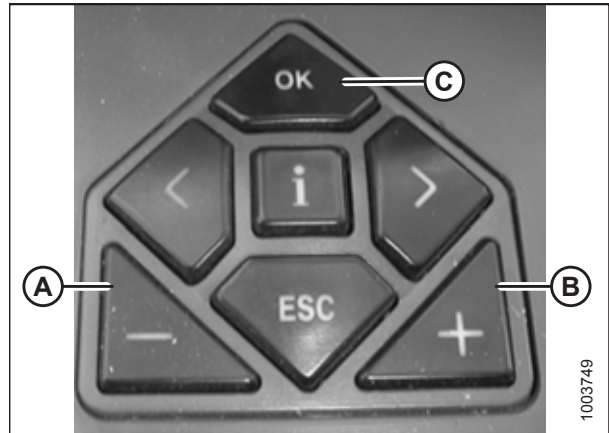


Figure 3.426: CLAAS Combine Controls

OPERATION

4. Manually adjust the reel speed by rotating the rotary switch to the reel position (A), and then use the – or + key to set the reel speed.



Figure 3.427: CLAAS Combine Rotary Switch

5. Press and hold button (A) or button (B) for 3 seconds to store the setting into the CEBIS (an alarm will sound when the new setting has been stored).

NOTE:

Whenever button (A) or button (B) is pressed for 3 seconds, the current positions for reel speed and cutting height are stored.



Figure 3.428: CLAAS Control Handle Buttons

OPERATION

6. Use the < or > key to select the REEL WINDOW. Window E15 will display the current advance or retard speed of the reel in relation to the ground speed.



Figure 3.429: CLAAS Combine Display

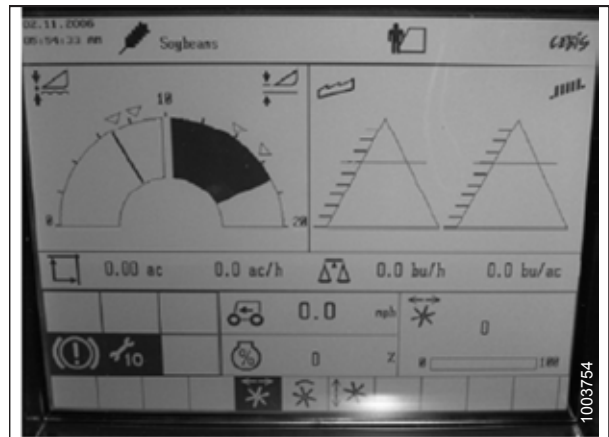


Figure 3.430: CLAAS Combine Display

7. Press the OK key (E), and use the < key (C) or the > key (D) to select the REEL FORE AND AFT window.
8. Use the – key (A) or the + key (B) to set the reel fore-aft position.

NOTE:

Control handle button (A) or button (B) also can be used to set the reel fore-aft position.

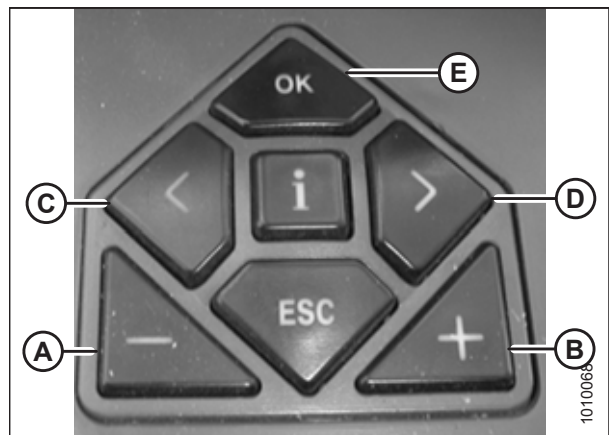


Figure 3.431: CLAAS Combine Controls

OPERATION

- Press and hold button (A) or button (B) for 3 seconds to store the setting into the CEBIS (an alarm will sound when the new setting has been stored).

NOTE:

Whenever button (A) or button (B) is pressed for 3 seconds, the current positions for reel speed and cutting height are stored.



Figure 3.432: CLAAS Control Handle Buttons

3.8.14 CLAAS 600 and 700 Series Combines

Calibrating the Auto Header Height Control (CLAAS 600 and 700 Series)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

- Ensure center-link is set to **D**.
- Ensure that the header float is unlocked (A).
- Use control knob (A) to highlight the AUTO CONTOUR icon (B) and press control knob (A) to select it.

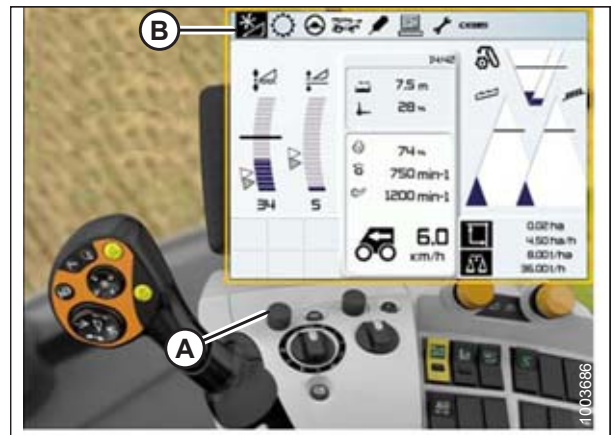


Figure 3.433: CLAAS Combine Display, Console, and Control Handle

OPERATION

4. Use control knob (A) to highlight the icon that resembles a header with up and down arrows (not shown), and press control knob (A) to select it. The highlighted header icon (B) will be displayed on the screen.



Figure 3.434: CLAAS Combine Display, Console, and Control Handle

5. Use control knob (A) to highlight the icon that resembles a header with up and down arrows (C), and press control knob (A) to select it.

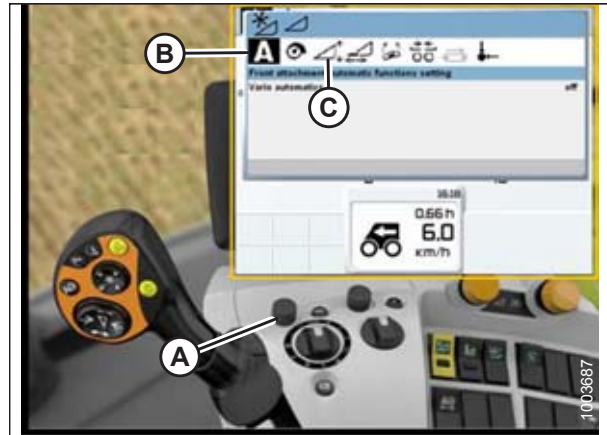


Figure 3.435: CLAAS Combine Display, Console, and Control Handle

6. Use control knob (A) to highlight the icon that resembles a screwdriver (B).
7. Engage the combine separator and feeder house.
8. Press control knob (A) and a progress bar chart will appear.



Figure 3.436: CLAAS Combine Display, Console, and Control Handle

OPERATION

9. Fully raise the feeder house. The progress bar chart will advance to 25% (A).
10. Fully lower the feeder house. The progress bar chart will advance to 50%.
11. Fully raise the feeder house. The progress bar chart will advance to 75%.
12. Fully lower the feeder house. The progress bar chart will advance to 100%.



Figure 3.437: CLAAS Combine Display, Console, and Control Handle

13. Ensure the progress bar chart displays 100% (A). The calibration procedure is now complete.

NOTE:

If the voltage is not within the range of 0.5–4.5 volts at any time throughout the calibration process, the monitor will indicate learning procedure not concluded.

NOTE:

If header float is set too light, an error message will appear. Back float off three full-turns per spring adjuster bolt to approximately 45–57 kg (100–125 lb.). Once float has been successfully calibrated, tighten adjuster bolts by three turns each.



Figure 3.438: CLAAS Combine Display, Console, and Control Handle

OPERATION

Setting Cutting Height (CLAAS 600 and 700 Series)

CAUTION

Check to be sure all bystanders have cleared the area.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Lower the header to desired cutting height or ground pressure setting. The float indicator box should be set to 1.5.
2. Hold the left side of the header raise and lower switch (A) until you hear a ping.

NOTE:

You can set two different cutting heights.



Figure 3.439: CLAAS Combine Display, Console, and Control Handle

Setting the Sensitivity of the Auto Header Height Control (CLAAS 600 and 700 Series)

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Use control knob (A) to highlight the HEADER/REEL icon (B), and press control knob (A) to select it. The HEADER/REEL dialog box opens.
2. Select HEADER icon.

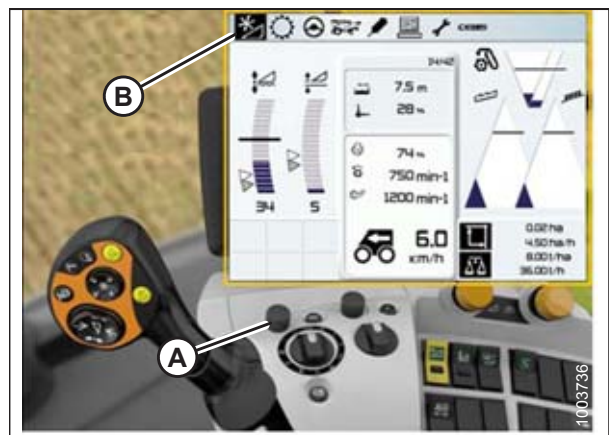


Figure 3.440: CLAAS Combine Display, Console, and Control Handle

OPERATION

3. Select the FRONT ATTACHMENT PARAMETER SETTINGS icon (A). A list of settings appears.
4. Select SENSITIVITY CAC (B) from the list.



Figure 3.441: CLAAS Combine Display, Console, and Control Handle

5. Select the SENSITIVITY CAC icon (A).

NOTE:

To set the sensitivity, you will have to change the CUTTING HEIGHT ADJUSTMENT (B) from the 0 default. The settings from 1–50 provide a faster response, whereas the settings from -1 to -50 provide a slower response. For best results, make adjustments in increments of five.

6. Increase the CUTTING HEIGHT ADJUSTMENT setting if the reaction time between the header and the float module is too slow while cutting on the ground, and decrease the CUTTING HEIGHT ADJUSTMENT setting if the reaction time between the header and the float module is too fast.
7. Increase the sensitivity if the header is lowered too slowly, and decrease the sensitivity if the header hits the ground too hard or is lowered too quickly.



Figure 3.442: CLAAS Combine Display

OPERATION

Adjusting Auto Reel Speed (CLAAS 600 and 700 Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Use control knob (A) to highlight the HEADER/REEL icon (B), and press control knob (A) to select it. The HEADER/REEL dialog box opens.

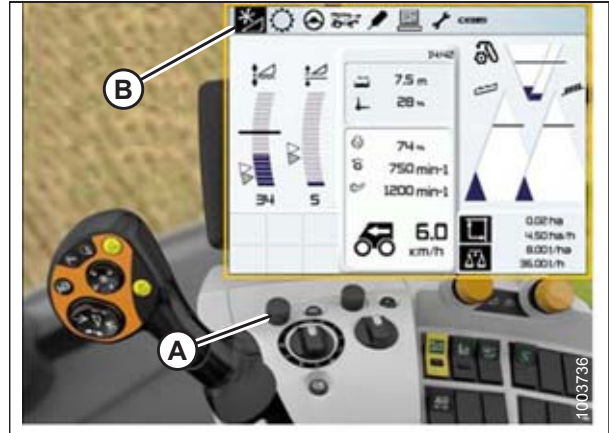


Figure 3.443: CLAAS Combine Display, Console, and Control Handle

2. Use control knob (A) to select REEL SPEED (B), and adjust the reel speed (if you are NOT using Auto Reel Speed). A graph displays in the dialog box.



Figure 3.444: CLAAS Combine Display, Console, and Control Handle

OPERATION

3. Select ACTUAL VALUE (A) from the AUTO REEL SPEED dialog box (if you are using Auto Reel Speed). The ACTUAL VALUE dialog box indicates the auto reel speed.



Figure 3.445: CLAAS Combine Display, Console, and Control Handle

4. Use control knob (A) to raise or lower the reel speed.

NOTE:

This option is only available at full throttle.



Figure 3.446: CLAAS Combine Display, Console, and Control Handle

3.8.15 New Holland Combines (CR/CX Series—Pre-2015 Model Year)

This section applies only to pre-2015 CR/CX models. For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\)](#), page 273.

Checking Voltage Range from the Combine Cab (New Holland)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\)](#), page 273.



CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.

OPERATION

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHC system.

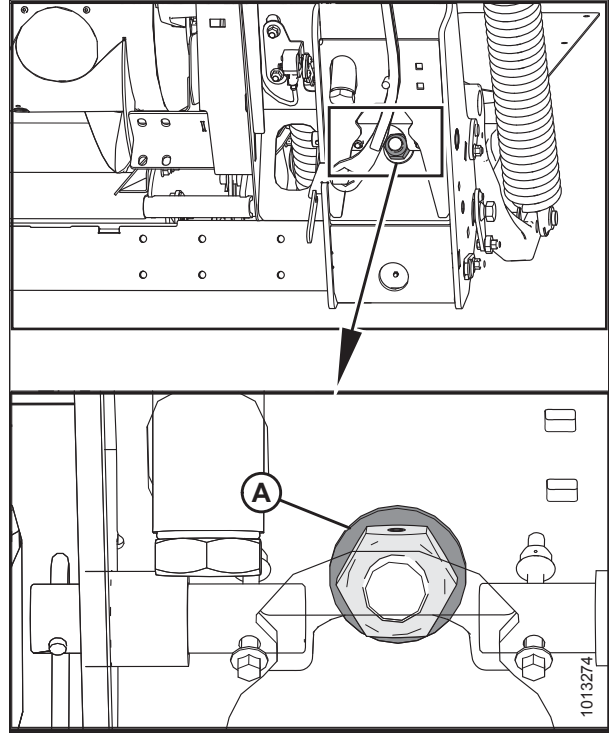


Figure 3.447: Float Lock

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on 0.

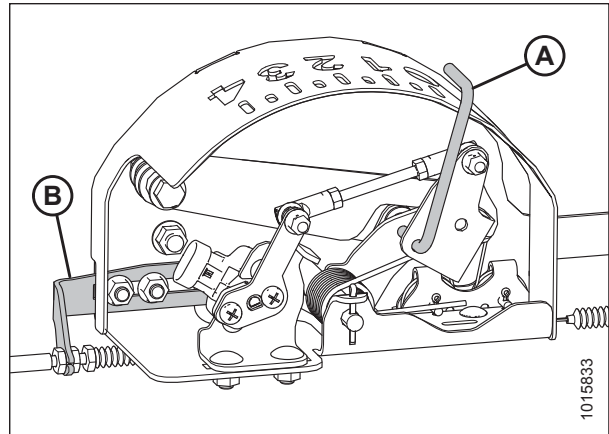


Figure 3.448: Float Indicator Box

OPERATION

4. Ensure header float is unlocked.
5. Select DIAGNOSTICS (A) on the main screen. The DIAGNOSTICS screen displays.
6. Select SETTINGS. The SETTINGS screen displays.

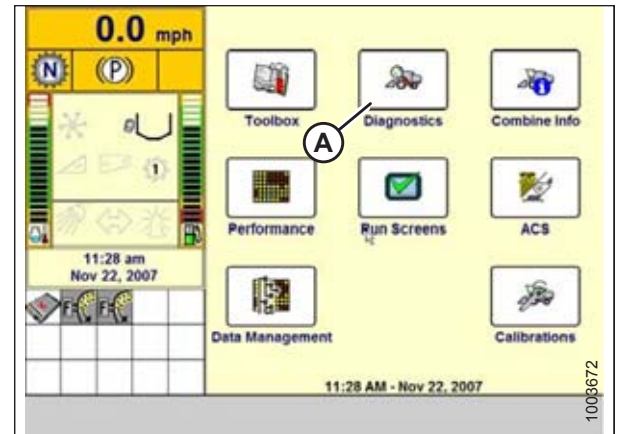


Figure 3.449: New Holland Combine Display

7. Select the GROUP drop-down arrow (A). The GROUP dialog box displays.

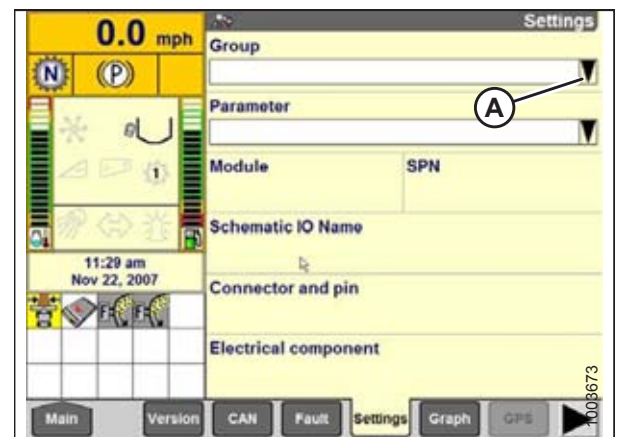


Figure 3.450: New Holland Combine Display

8. Select HEADER HEIGHT/TILT (A). The PARAMETER screen displays.

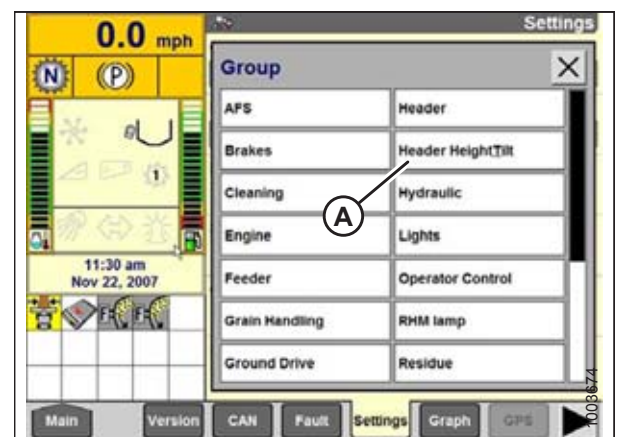


Figure 3.451: New Holland Combine Display

OPERATION

9. Select LEFT HEADER HEIGHT SEN (A), and then select GRAPH button (B). The exact voltage is displayed at the top of the screen.
10. Raise and lower the header to see the full range of voltage readings.
11. If the sensor voltage is not within the low and high limits, or if the range between the low and high limits is insufficient, adjust the voltage limits. Refer to [Adjusting Voltage Limits: One-Sensor System](#), page 146.

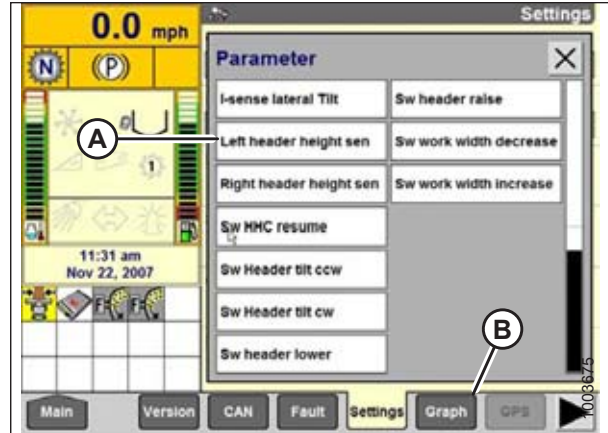


Figure 3.452: New Holland Combine Display

Setting up Auto Header Height Control (New Holland CR/CX Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\)](#), page 273.

1. Select HEADER LATERAL FLOAT on the combine display, and press ENTER.
2. Use the up and down navigation keys to move between options, and select INSTALLED.



Figure 3.453: New Holland Combine Display

OPERATION

3. Select HEADER AUTOFLOAT, and press ENTER.
4. Use the up and down navigation keys to move between options, and select INSTALLED.

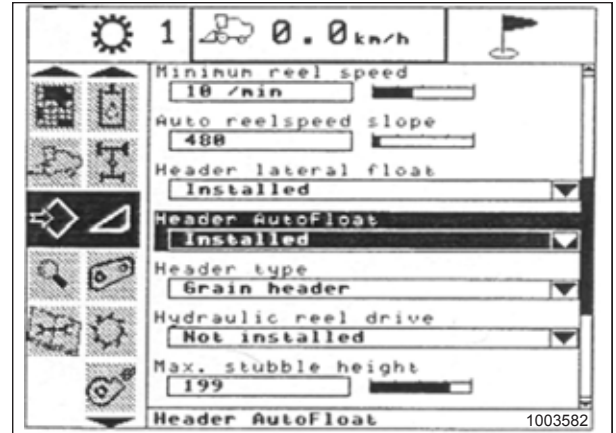


Figure 3.454: New Holland Combine Display

Calibrating the Auto Header Height Control (New Holland CR/CX Series)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\), page 273](#).



CAUTION

Check to be sure all bystanders have cleared the area.

Check the following conditions before starting the header calibration procedure:

- The header is attached to the combine.
- The combine is on level ground, with the header level to the ground.
- The header is on down stops, and the center-link is set to **D**.
- The engine is running.
- The combine is not moving.
- No faults have been received from the Header Height Controller (HHC) module.
- Header/feeder is disengaged.
- Lateral float buttons are **NOT** pressed.
- ESC key is **NOT** pressed.

To calibrate the AHHC, follow these steps:

1. Select CALIBRATION on the combine display, and press the RIGHT ARROW navigation key to enter the information box.

OPERATION

2. Select HEADER (A), and press ENTER. The CALIBRATION dialog box opens.

NOTE:

You can use the up and down navigation keys to move between options.



Figure 3.455: New Holland Combine Display

3. Follow the calibration steps in the order in which they appear in the dialog box. As you proceed through the calibration process, the display will automatically update to show the next step.

NOTE:

Pressing the ESC key during any of the steps or letting the system sit idle for more than 3 minutes will cause the calibration procedure to stop.

NOTE:

Refer to your combine operator's manual for an explanation of any error codes.



Figure 3.456: New Holland Combine Display

4. When all steps have been completed, CALIBRATION SUCCESSFUL message is displayed on the screen. Exit the CALIBRATION menu by pressing the ENTER or ESC key.

NOTE:

If float was set heavier to complete ground calibration procedure, adjust to recommended operating float after the calibration is complete.

5. If the unit does not function properly, conduct the maximum stubble height calibration.

Calibrating Maximum Stubble Height

This procedure describes how to calibrate the area counter to stop or start counting at the correct height. Program the header to a height that will never be reached while cutting. The area counter will stop counting when the header is above the programmed height, and will begin counting when the header is below the programmed height.

Select the height of the header that corresponds to the description above.

IMPORTANT:

- If the value is set too low, area may NOT be counted since the header is sometimes raised above this threshold although the combine is still cutting.
- If the value is set too high, the area counter will keep counting even when the header is raised (but below this threshold) and the combine is no longer cutting crop.

CAUTION

Check to be sure all bystanders have cleared the area.

1. Select the MAXIMUM STUBBLE HEIGHT calibration dialog box. As you proceed through the calibration process, the display will automatically update to show the next step.

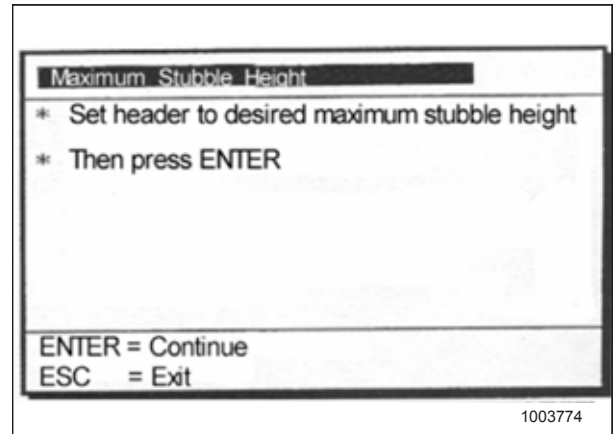


Figure 3.457: New Holland Calibration Dialog Box

2. Move header to the correct position using the header up or down control switch on the multifunction handle.
3. Press ENTER to continue. As you proceed through the calibration process, the display will automatically update to show the next step.
4. Press ENTER or ESC to close the calibration screen. The calibration is now complete.

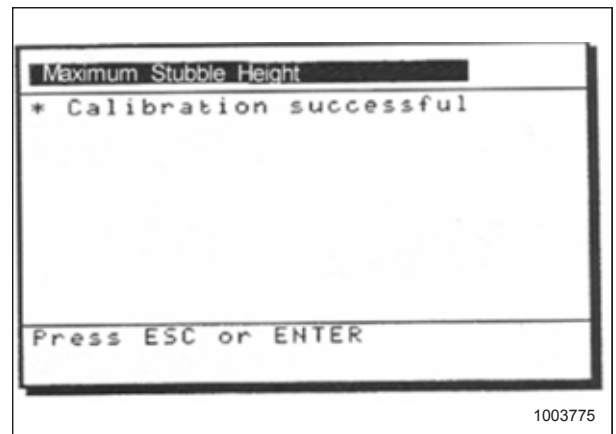


Figure 3.458: New Holland Calibration Dialog Box

Adjusting Header Raise Rate (New Holland CR/CX Series)

If necessary, the header raise rate (the first speed on the HEADER HEIGHT rocker switch of the multifunctional handle) can be adjusted.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\)](#), page 273.

OPERATION

1. Select HEADER RAISE RATE on the combine display.
2. Use the + or – buttons to change the setting.
3. Press ENTER to save the new setting.

NOTE:

The raise rate can be changed from 32–236 in steps of 34. The factory setting is 100.

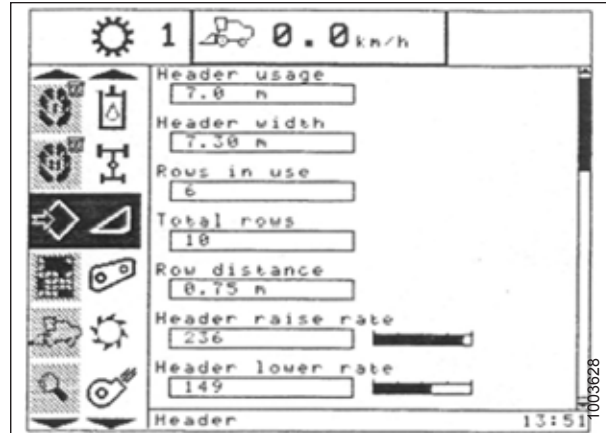


Figure 3.459: New Holland Combine Display

Setting the Header Lower Rate (New Holland CR/CX Series)

If necessary, the header lower rate (the automatic header height control button or second speed on the header height rocker switch of the multi-function handle) can be adjusted.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\)](#), page 273.

1. Select HEADER LOWER RATE on the combine display.
2. Use the + or – buttons to change the setting to 50.
3. Press ENTER to save the new setting.

NOTE:

The lower rate can be changed from 2–247 in steps of 7. It is factory-set to 100.

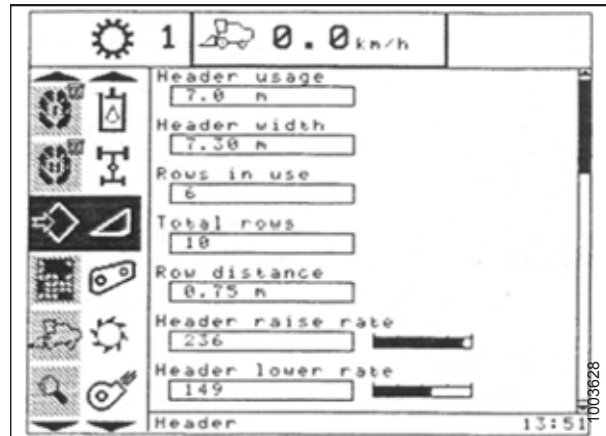


Figure 3.460: New Holland Combine Display

OPERATION

Setting the Sensitivity of the Auto Header Height Control (New Holland CR/CX Series)

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHHHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\)](#), page 273.



CAUTION

Check to be sure all bystanders have cleared the area.

1. Engage threshing and feeder house.
2. Select HEIGHT SENSITIVITY on the combine display screen.
3. Use the + or – buttons to change the setting to 200.
4. Press ENTER to save the new setting.

NOTE:

The sensitivity can be changed from 10–250 in steps of 10. It is factory-set to 100.

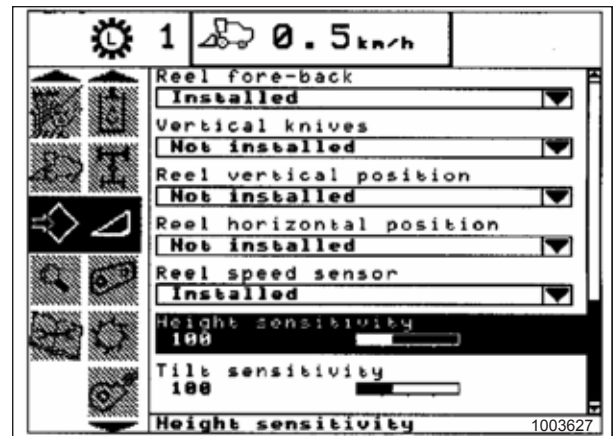


Figure 3.461: New Holland Combine Display

Setting Preset Cutting Height (New Holland CR/CX Series)

To set the preset cutting height, follow these steps:

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [3.8.16 New Holland Combines \(CR Series—Model Year 2015 and Later\)](#), page 273.

OPERATION

NOTE:

The indicator (A) should be at position 0 (B) with the header (152 mm [6 in.]) off the ground. If not, the float sensor output voltage should be checked. Refer to Step 4, page 143. When the header is on the ground, the indicator should be at position 1 (C) for low ground pressure, and at position 4 (D) for high ground pressure. Crop and soil conditions determine the amount of float to use. The ideal setting is as light as possible without header bouncing or missing crop. Operating with heavy settings prematurely wears the cutterbar wearplates.

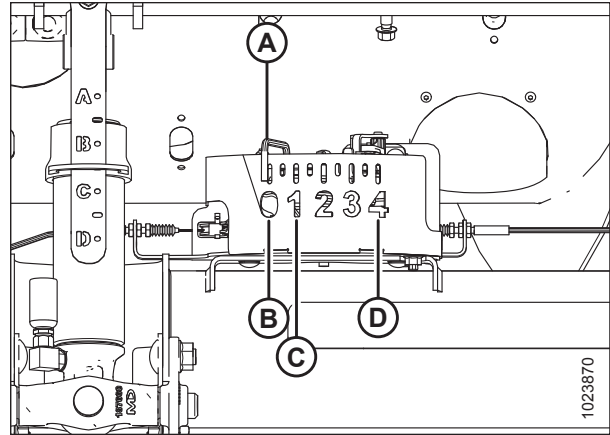


Figure 3.462: Float Indicator Box

1. Engage the threshing mechanism and the feeder with switches (A) and (B).
2. Set HEADER MEMORY rocker switch (D) in STUBBLE HEIGHT/AUTOFLOAT mode position (A) or (B).
3. Lower the header to the desired cutting height using the HEADER HEIGHT and HEADER LATERAL FLOAT momentary switch (C).
4. Lightly press AUTOMATIC HEADER HEIGHT CONTROL button (E) for a minimum of 2 seconds to store the height position. A beep will confirm the setting.

NOTE:

It is possible to store two different header height values by using HEADER MEMORY rocker switch (D) in STUBBLE HEIGHT/AUTOFLOAT mode position (A) or (B).

5. To change one of the memorized header height set points while the combine is in use, use the HEADER HEIGHT AND HEADER LATERAL FLOAT rocker switch (C) (slow up/down) to raise or lower header to the desired value. Lightly press the AUTOMATIC HEADER HEIGHT CONTROL button (E) for a minimum of 2 seconds to store the new height position. A beep will confirm setting.

NOTE:

Fully pressing AUTOMATIC HEADER HEIGHT CONTROL button (E), will disengage float mode.

NOTE:

It is not necessary to press rocker switch (D) again after changing header height set point.

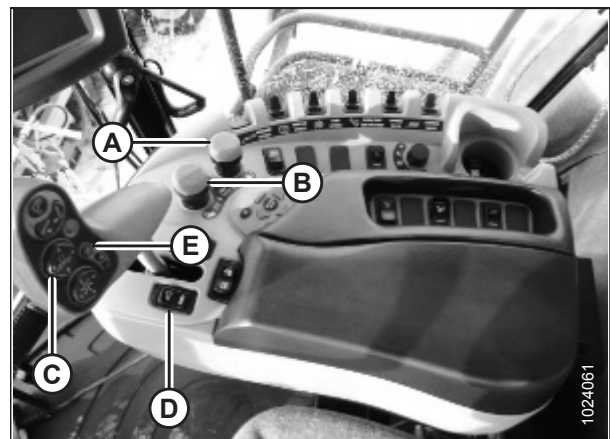


Figure 3.463: New Holland Combine Controls

3.8.16 New Holland Combines (CR Series—Model Year 2015 and Later)

This section applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90). For other pre-2015 New Holland combine models, refer to [3.8.15 New Holland Combines \(CR/CX Series—Pre-2015 Model Year\)](#), [page 263](#).

Checking Voltage Range from the Combine Cab (New Holland CR Series)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

This section applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90). For other pre-2015 New Holland combine models, refer to [3.8.15 New Holland Combines \(CR/CX Series—Pre-2015 Model Year\)](#), [page 263](#).

CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 150 mm (6 in.) above the ground, and unlock the float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the auto header height control (AHHC) system.

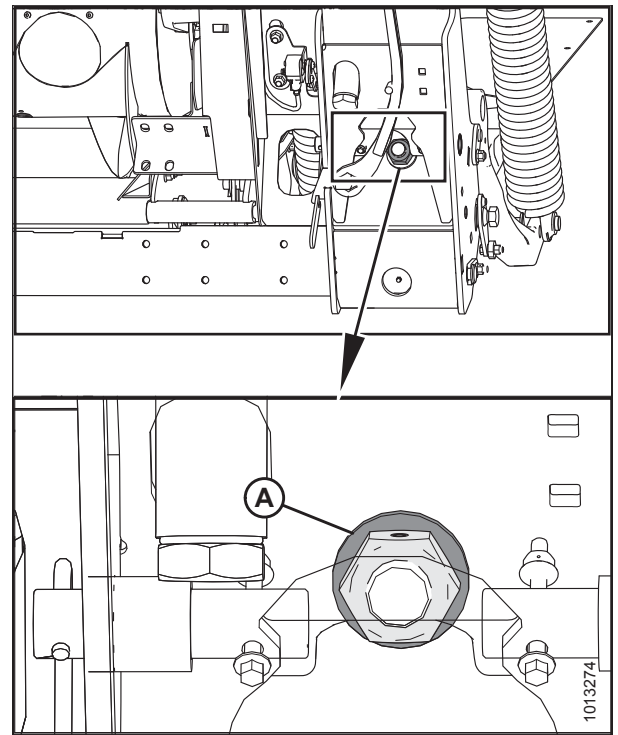


Figure 3.464: Float Lock

OPERATION

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on 0.
4. Ensure header float is unlocked.

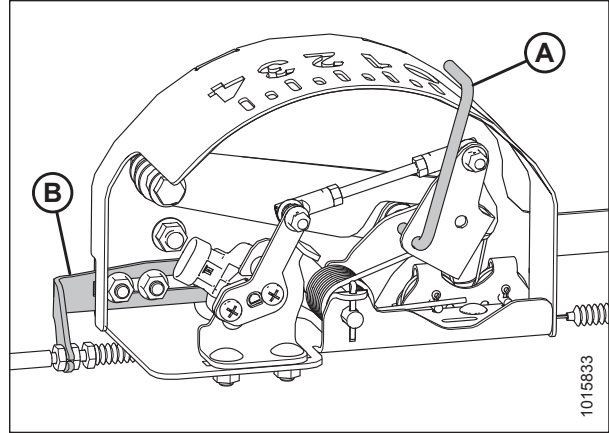


Figure 3.465: Float Indicator Box

5. Select DIAGNOSTICS (A) on the main screen. The DIAGNOSTICS screen displays.



Figure 3.466: New Holland Combine Display

6. Select SETTINGS (A). The SETTINGS screen displays.



Figure 3.467: New Holland Combine Display

OPERATION

7. Select HEADER HEIGHT/TILT (A) from the GROUP drop-down menu.
8. Select HEADER HEIGHT SENS. L (B) from the PARAMETER drop-down menu.



Figure 3.468: New Holland Combine Display

9. Select GRAPH (A). The exact voltage (B) is displayed at the top of the screen.
10. Raise and lower the header to see the full range of voltage readings.
11. If the sensor voltage is not within the low and high limits, or if the range between the low and high limits is insufficient, adjust the voltage limits. Refer to [Adjusting Voltage Limits: One-Sensor System, page 146](#).

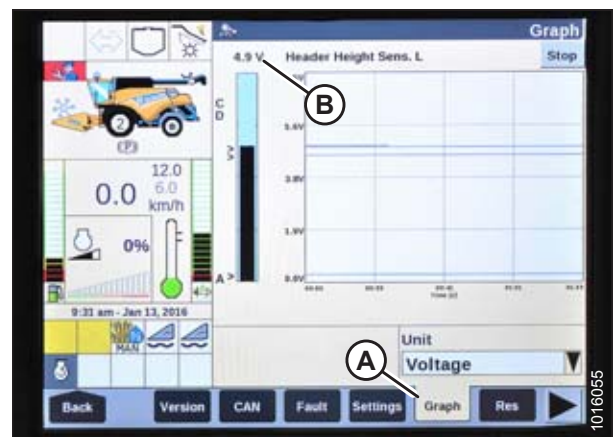


Figure 3.469: New Holland Combine Display

Setting up Auto Header Height Control (New Holland CR Series)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

This section applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90). For other pre-2015 New Holland combine models, refer to [3.8.15 New Holland Combines \(CR/CX Series—Pre-2015 Model Year\)](#), [page 263](#).

OPERATION

1. Ensure center-link is set to **D**.
2. Select TOOLBOX (A) on the main screen. The TOOLBOX screen displays.



Figure 3.470: New Holland Combine Display

3. Simultaneously press both the UNLOAD (A) and RESUME (B) buttons on the control handle.

NOTE:

Software in some New Holland combines may not allow you to change the header from FLEX to PLATFORM or the header type from DEFAULT to 80/90 at the main menu. This is now a dealer setting, and requires you to access the DEALER SETTING screen by pressing and holding both the UNLOAD and RESUME buttons on the control handle for approximately 10 seconds. The DEALER SETTING screen should appear and will allow you to change the header and header type settings.



Figure 3.471: New Holland Combine Controls

4. Select HEAD 1 (A). The HEADER SETUP 1 screen displays.
5. Select the CUTTING TYPE drop-down arrow (B) and change the CUTTING TYPE to PLATFORM (C).



Figure 3.472: New Holland Combine Display

OPERATION

6. Select the HEADER SUB TYPE drop-down arrow (A). The HEADER SUB TYPE dialog box displays.



Figure 3.473: New Holland Combine Display

7. Set HEADER SUB TYPE to 80/90 (A) for a New Holland combine.



Figure 3.474: New Holland Combine Display

8. Select HEAD 2 (A). The HEADER SETUP 2 screen displays.



Figure 3.475: New Holland Combine Display

OPERATION

9. Select the AUTOFLOAT drop-down arrow and set AUTOFLOAT to INSTALLED (A).
10. Select the AUTO HEADER LIFT drop-down arrow and set AUTO HEADER LIFT to INSTALLED (B).

NOTE:

With AUTO HEADER LIFT installed and AHHC engaged, the header will lift up automatically when you pull back on the control handle.

11. Set the values for MANUAL HHC RAISE RATE (C) and MANUAL HHC LOWER RATE (D) for best performance according to ground conditions.



Figure 3.476: New Holland Combine Display

12. Set the values for HHC HEIGHT SENSITIVITY (A) and HHC TILT SENSITIVITY (B) for best performance according to ground conditions.



Figure 3.477: New Holland Combine Display

13. From the REEL HEIGHT SENSOR menu, select YES.



Figure 3.478: New Holland Combine Display

OPERATION

Calibrating the Auto Header Height Control (New Holland CR Series)

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to **D**. When setup and calibration are complete, adjust the center-link back to desired header angle. For instructions, refer to [3.7.4 Header Angle, page 94](#).

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

NOTE:

This section applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90). For other pre-2015 New Holland combine models, refer to [3.8.15 New Holland Combines \(CR/CX Series—Pre-2015 Model Year\)](#), [page 263](#).



CAUTION

Check to be sure all bystanders have cleared the area.

Check the following conditions before starting the header calibration procedure:

- The header is attached to the combine.
- The combine is on level ground, with the header level to the ground.
- The header is on down stops, and the center-link is set to **D**.
- The engine is running.
- The combine is not moving.
- No faults have been received from the header height controller (HHC) module.
- Header/feeder is disengaged.
- Lateral float buttons are **NOT** pressed.
- ESC key is **NOT** pressed.

To calibrate the AHHC, follow these steps:

1. Select CALIBRATIONS (A) on the main screen. The CALIBRATION screen displays.



Figure 3.479: New Holland Combine Display

OPERATION

2. Select the CALIBRATION drop-down arrow (A).



Figure 3.480: New Holland Combine Display

3. Select HEADER (A) from the list of calibration options.



Figure 3.481: New Holland Combine Display

4. Follow the calibration steps in the order in which they appear on the screen. As you proceed through the calibration process, the display will automatically update to show the next step.

NOTE:

Pressing the ESC key during any of the steps or letting the system sit idle for more than 3 minutes will cause the calibration procedure to stop.

NOTE:

Refer to your combine operator's manual for an explanation of any error codes.



Figure 3.482: New Holland Combine Display

OPERATION

- When all steps have been completed, CALIBRATION COMPLETED message is displayed on the screen.

NOTE:

If float was set heavier to complete ground calibration procedure, adjust to recommended operating float after the calibration is complete.



Figure 3.483: New Holland Combine Display

Checking Reel Height Sensor Voltages (New Holland)

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

- On the main page of the combine display, select DIAGNOSTICS (A). The DIAGNOSTICS page opens.



Figure 3.484: New Holland Combine Display

- Select SETTINGS tab (A). The SETTINGS page opens.
- From the GROUP menu (B), select HEADER.
- From the PARAMETER menu (C), select REEL VERTICAL POSITION.

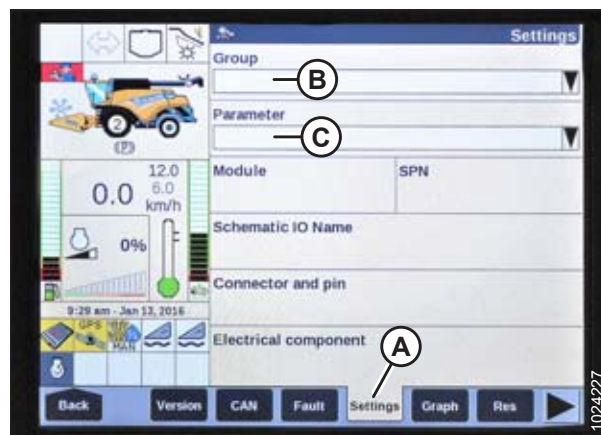


Figure 3.485: New Holland Combine Display

OPERATION

5. Select GRAPH tab (A). The REEL VERTICAL POSITION graph displays.
6. Lower the reel to view the high voltage (B). The voltage should be 4.1–4.5 V.
7. Raise the reel to view the low voltage (C). The voltage should be 0.5–0.9 V.
8. If either voltage is out of range, refer to [Checking and Adjusting Reel Height Sensor](#), page 109.

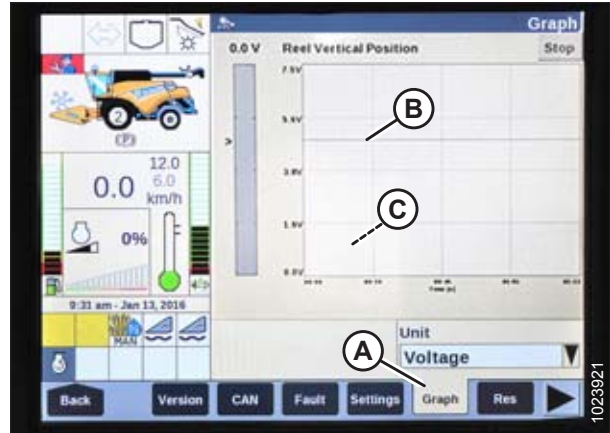


Figure 3.486: New Holland Combine Display

Setting Preset Cutting Height (New Holland CR Series – 2015 and Later)

NOTE:

This section applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90). For other pre-2015 New Holland combine models, refer to [3.8.15 New Holland Combines \(CR/CX Series—Pre-2015 Model Year\)](#), page 263.

The console has two buttons used for auto height presets. The toggle switch that was present on previous models is now configured as shown at right. MacDon headers only require the first two buttons (A) and (B). The third button (C) is not configured.

CAUTION

Check to be sure all bystanders have cleared the area.



Figure 3.487: New Holland Combine Controls

To set preset cutting height, follow these steps:

OPERATION

1. Engage separator and header.
2. Select preset button 1 (A). A yellow light on the button will illuminate.
3. Raise or lower the header to desired cutting height.



Figure 3.488: New Holland Combine Controls

4. Hold RESUME button (C) on multifunction handle to set the preset.

NOTE:

When setting presets, always set header position before setting reel position. If header and reel are set at the same time, the reel setting will not save.

5. Raise or lower the reel to desired position.
6. Hold RESUME button (C) on multifunction handle to set the preset.
7. Repeat Step 2, [page 283](#) to Step 6, [page 283](#), using preset button 2.



Figure 3.489: New Holland Combine Multifunction Handle

8. Lower header to the ground.
9. Select RUN SCREENS (A) on the main screen.

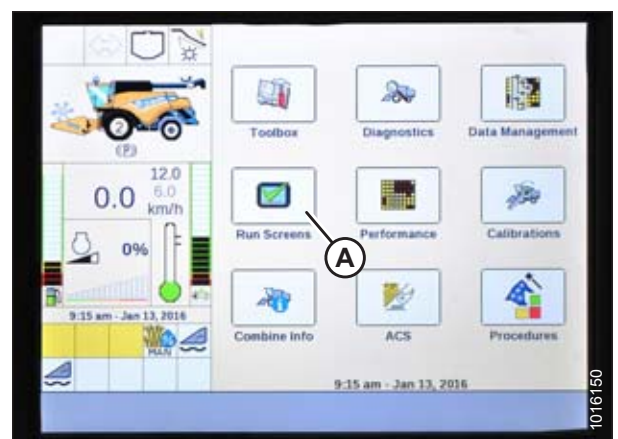


Figure 3.490: New Holland Combine Display

OPERATION

10. Select the RUN tab that shows MANUAL HEIGHT.

NOTE:

The MANUAL HEIGHT field may appear on any of the RUN tabs. When an auto height set point button is pressed, the display will change to AUTO HEIGHT (A).

11. Press one of the auto height preset buttons to select a preset cutting height.



Figure 3.491: New Holland Combine Display

Setting Maximum Work Height (New Holland CR Series)

NOTE:

This section applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90). For other pre-2015 New Holland combine models, refer to [3.8.15 New Holland Combines \(CR/CX Series—Pre-2015 Model Year\)](#), page 263.

1. Select TOOLBOX (A) on the main screen. The TOOLBOX screen displays.



Figure 3.492: New Holland Combine Display

OPERATION

2. Select FEEDER (A). The FEEDER SETUP screen displays.
3. Select the MAXIMUM WORK HEIGHT field (B).

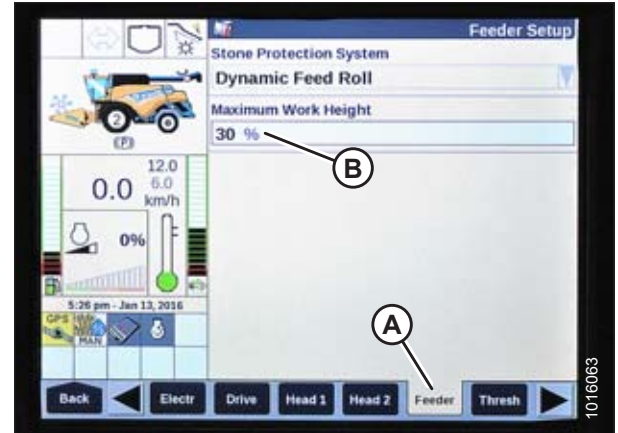


Figure 3.493: New Holland Combine Display

4. Set MAXIMUM WORK HEIGHT to desired value.
5. Press SET and then press ENTER.



Figure 3.494: New Holland Combine Display

OPERATION

Configuring Reel Fore-Aft, Header Tilt, and Header Type (New Holland CR Series)

This procedure applies only to 2016 New Holland CR models 6.90, 7.90, 8.90, and 9.90.

NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Simultaneously press the UNLOAD (A) and RESUME (B) buttons on the control handle.



Figure 3.495: New Holland Combine Controls

2. On the HEAD 1 screen, change the CUTTING TYPE from FLEX to PLATFORM as shown at location (A).



Figure 3.496: New Holland Combine Display

OPERATION

3. On the HEAD 2 screen, change HEADER SUB TYPE from DEFAULT to 80/90 as shown at location (A).



Figure 3.497: New Holland Combine Display

There are now two different buttons for ON GROUND presets. The toggle switch that was present on previous models is now configured as shown at right. MacDon headers only require the first two buttons (A) and (B). The third button down (C) is not configured.



Figure 3.498: New Holland Combine Controls

3.9 Leveling the Header

The float module is factory-set to provide the proper level for the header and should not normally require adjustment.

If the header is **NOT** level, perform the following checks prior to adjusting the leveling linkages:

- Check the combine tire pressures.
- Check that the combine feeder house is level. Refer to your combine operator's manual for instructions.
- Check that the top of the float module is level and parallel with the feeder house.

NOTE:

The float springs are **NOT** used to level the header.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Park the combine on level ground.
2. Set the header approximately 150 mm (6 in.) off the ground, and check that the float linkage is against the down stops. Note the high and low end of the header.
3. Shut down the engine and remove the key.
4. Check, and if necessary adjust the float. Refer to *Checking and Adjusting Header Float*, page 87.
5. Adjust the header level by making small adjustments (1/4–1/2 turn) to nut (A) on each float lock. Adjust each side equally but in opposite directions as follows:

NOTE:

Setscrew (B) does not require loosening for adjustments up to one-half turn of nut (A).

- a. On low side of header, turn nut (A) **clockwise** to raise header.
- b. On high side of header, turn nut (A) **counterclockwise** to lower header.

NOTE:

Adjustment of more than two turns in either direction may adversely affect header float.

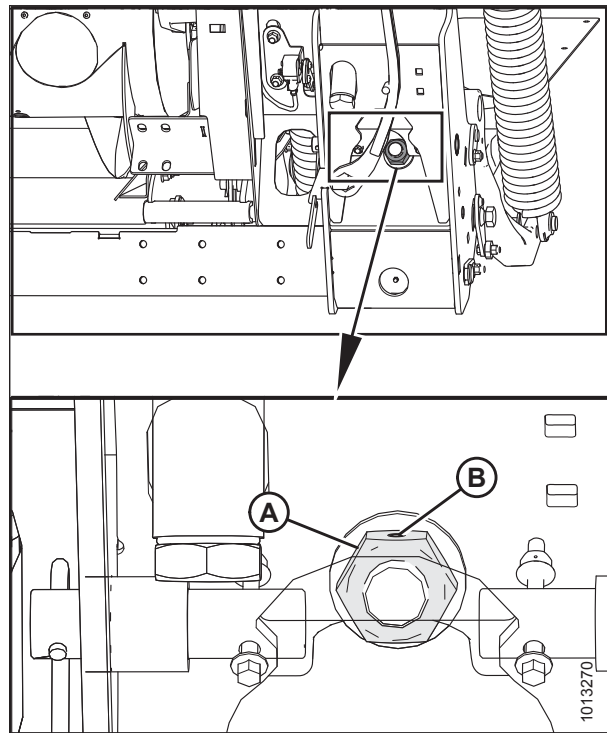


Figure 3.499: Float Lock

OPERATION

NOTE:

Ensure a minimum clearance of 2–3 mm (1/8 in.) (A) between the frame and the back of the bell crank lever.

NOTE:

Check the float after leveling header. Refer to [Checking and Adjusting Header Float, page 87](#).

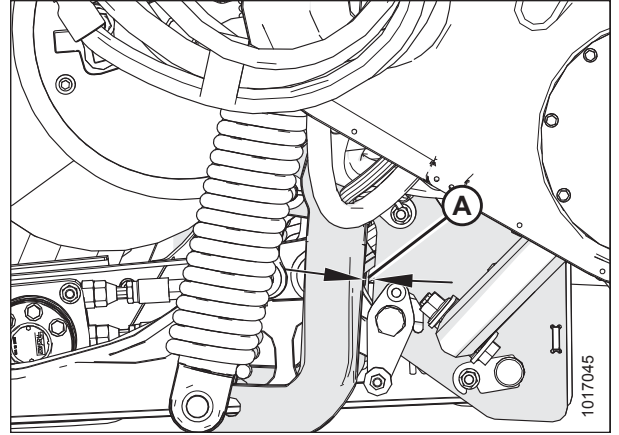


Figure 3.500: Bell Crank

3.10 Unplugging the Cutterbar

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

CAUTION

Wear heavy gloves when working around or handling knives.

CAUTION

Lowering rotating reel on a plugged cutterbar will damage the reel components.

To unplug cutterbar, reverse the combine feeder house. If still plugged, do the following:

1. Stop the forward movement of the machine and disengage the header drives.
2. Raise the header to prevent it from filling with dirt, and engage the header drive clutch.
3. Disengage the header drive clutch and fully raise the header if plug does **NOT** clear.
4. Shut off the engine, remove the key from the ignition, and engage the park brake.
5. Engage the header safety props.
6. Clean off the cutterbar by hand.

NOTE:

If cutterbar plugging persists, refer to [7 Troubleshooting, page 557](#).

3.11 Unplugging the Float Module

1. Stop the forward movement of the machine and disengage the header drives.
2. Raise the header slightly off the ground, and raise the reel.
3. Reverse the combine feed according to the manufacturers specifications (reverse feed varies among different combine models).
4. Engage the header drive.

3.12 Upper Cross Auger (UCA)

The UCA (A) improves delivery of very bulky crops across the header.

IMPORTANT:

If the UCA is installed, a case drain line must be installed on the right draper motor. See your MacDon Dealer for details.

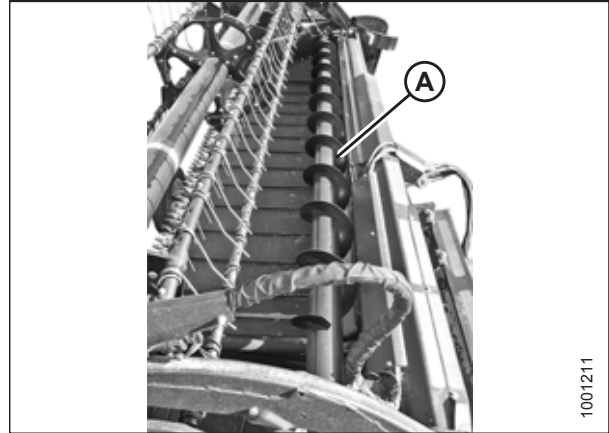


Figure 3.501: Upper Cross Auger

3.12.1 Removing UCA Flighting

A short section of flighting can be removed from the inboard ends of the UCA to accommodate crops that are prone to wrapping or if the flighting is damaged and needs to be replaced. Follow these steps to remove flighting:



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower header to ground and fully raise reel. Stop engine, and remove key from ignition.
2. Engage reel safety props.
3. Remove bolts (A) securing clamp sets (B) to flighting.
4. Remove bolts (C) in clamp sets (B) and remove clamps from auger tube.
5. Slightly twist flighting (D) away from auger tube and remove.

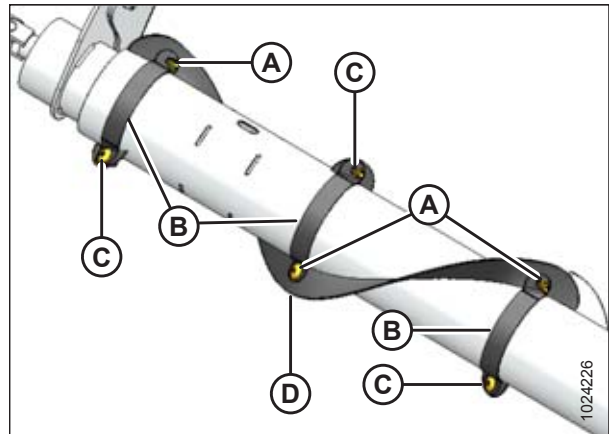


Figure 3.502: Right Auger, Left Auger Opposite

3.12.2 Installing UCA Flighting

A short section of removable flighting can be installed at the inboard ends of the UCA. This flighting can aid in feeding cut crop into the combine (especially when combining canola), but should not be installed when combining crops prone to wrapping on the auger. Follow these steps to install flighting:

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower header to ground and fully raise reel. Stop engine, and remove key from ignition.
2. Engage reel safety props.
3. Install flighting (A) onto auger tube. Twist flighting slightly to slide over auger tube.
4. Install clamp sets (B) on auger tube, and attach to flighting with 3/8 x 1 torx head machine screws (C) and smooth face lock nuts. Screw heads must face direction of rotation (X). Do **NOT** tighten screws (C) and lock nuts.

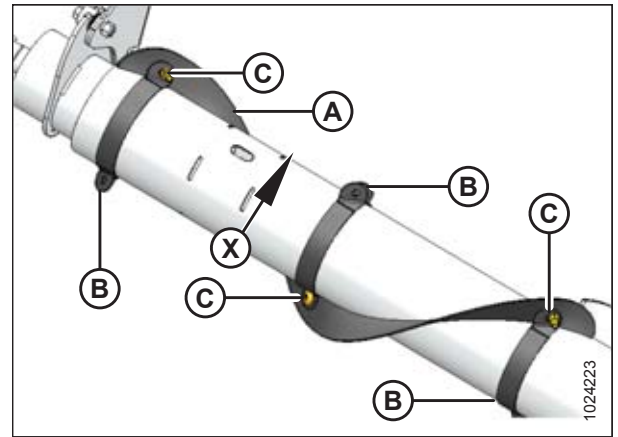


Figure 3.503: Right Auger, Left Auger Opposite

5. Position filler plates (A) between clamp (B) ends and install 3/8 x 1 torx head machine screws (C) and smooth face lock nuts. Screw heads must face direction of rotation (X). Do **NOT** tighten screws (C) and lock nuts.
6. Position end of flighting (D) against backside of existing flighting and temporarily clamp in position.
7. Tighten screws (C) and screws (E) installed in Step 4, [page 293](#).
8. Remove temporary clamping.

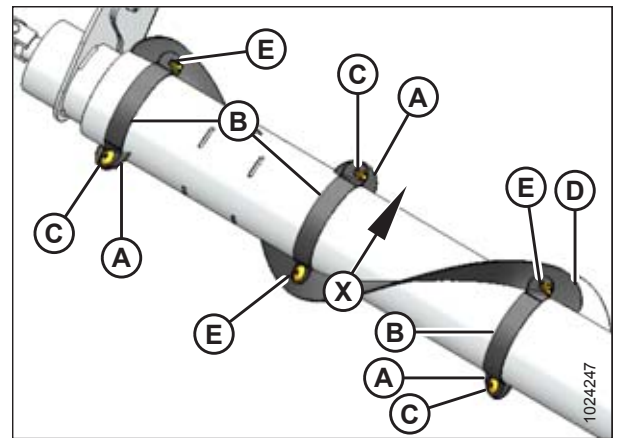


Figure 3.504: Right Auger, Left Auger Opposite

3.13 Transporting the Header

WARNING

Do NOT drive the combine with header attached on a road or highway at night, or in conditions which reduce visibility, such as fog or rain. The width of the header may not be apparent under these conditions.

3.13.1 Transporting Header on Combine

CAUTION

- Check local laws for width regulations and lighting or marking requirements before transporting on roads.
- Follow all recommended procedures in your combine operator's manual for transporting, towing, etc.
- Disengage header drive clutch when travelling to and from the field.
- Before driving combine on a roadway, be sure flashing amber lamps, red tail lamps, and head lamps are clean and working properly. Pivot amber lamps for best visibility by approaching traffic. Always use lamps when travelling on roads to provide adequate warning to other vehicles.
- Do NOT use field lamps on roads—they may confuse other drivers.
- Before driving on a roadway, clean slow moving vehicle signs and reflectors, adjust rear view mirrors, and clean windows.
- Lower the reel fully and raise the header unless transporting in hills.
- Maintain adequate visibility and be alert for roadside obstructions, oncoming traffic, and bridges.
- When travelling downhill, reduce speed and keep header at a minimum height to provide maximum stability if forward momentum is stopped for any reason. Raise header completely at bottom of grade to avoid contacting the ground.
- Travel at safe speeds to ensure complete machine control and stability at all times.

3.13.2 Towing

Headers with the Slow Speed Transport / Stabilizer Wheel option can be towed behind a properly configured MacDon windrower or an agricultural tractor. For instructions, refer to the combine operator's manual.

Attaching Header to Towing Vehicle

CAUTION

Adhere to the following slow speed transport instructions to prevent loss of control leading to bodily injury and/or machine damage:

- Weight of towing vehicle must exceed header weight to ensure adequate control and braking performance.
- Do NOT tow with any highway-capable vehicle. Use only an agricultural tractor, agricultural combine, or a properly configured MacDon windrower.
- Ensure reel is fully lowered and back on support arms to increase header stability during transport. For headers with hydraulic reel fore-aft, never connect the fore-aft couplers to each other or the circuit will be complete and the reel could creep forward during transport.
- Check that all pins are properly secured in transport position at wheel supports, cutterbar support, and hitch.
- Check tire condition and pressure prior to transporting.
- Connect hitch to towing vehicle using a proper hitch pin with a spring locking pin or other suitable fastener.
- Attach hitch safety chain to towing vehicle. Adjust safety chain length to provide only enough slack to permit turning.
- Connect header seven-pole plug wiring harness to mating receptacle on towing vehicle. (The seven-pole receptacle is available from your MacDon Dealer parts department.)
- Ensure lights are functioning properly and clean the slow moving vehicle sign and other reflectors. Use flashing warning lights unless prohibited by law.

Towing the Header

CAUTION

Adhere to the following slow speed transport instructions to prevent loss of control leading to bodily injury and/or machine damage:

- Do NOT exceed 32 km/h (20 mph). Reduce transport speed to less than 8 km/h (5 mph) for corners and slippery or rough conditions.
- Turn corners at only very low speeds (8 km/h [5 mph] or less). Header stability is reduced while cornering because front wheel moves to the left.
- Do NOT accelerate when making or coming out of a turn.
- Obey all highway traffic regulations in your area when transporting on public roads. Use flashing amber lights unless prohibited by law.

3.13.3 Converting from Transport to Field Position

Removing Tow-Bar

1. Block the tires to prevent the header from rolling, and unhook the header from the towing vehicle.
2. Disconnect the electrical connector (A) on the tow-bar.
3. Remove pin (B) from the tow-bar, and disassemble the outer section (C) from the inner section (D).

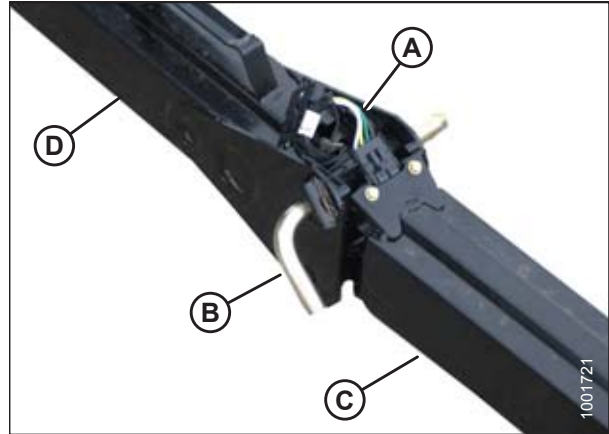


Figure 3.505: Tow-Bar Assembly

4. Disconnect the electrical connector (A) at the front wheel.

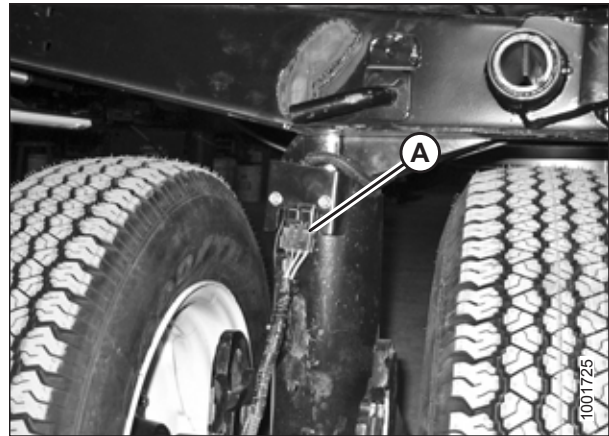


Figure 3.506: Wiring Connector

5. Remove clevis pin (A) and set aside for reinstallation.
6. Push latch (B) and lift the tow-bar (C) from the hook. Release latch.
7. Install clevis pin (A).

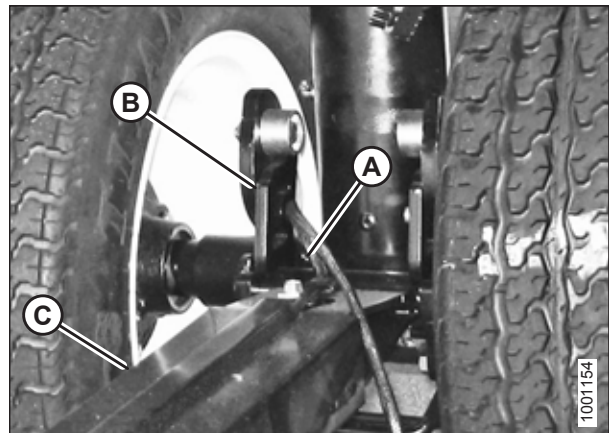


Figure 3.507: Tow-Bar Latch

OPERATION

Storing the Tow-Bar

1. Place the inner end of the outer half of the tow-bar into the cradle (A) on the left side of the header backtube.
2. Secure clevis/pintle end of the tow-bar in support (B) on the endsheet using hitch pin (C). Secure with lynch pin.
3. Install the rubber strap (D) on the cradle (A).

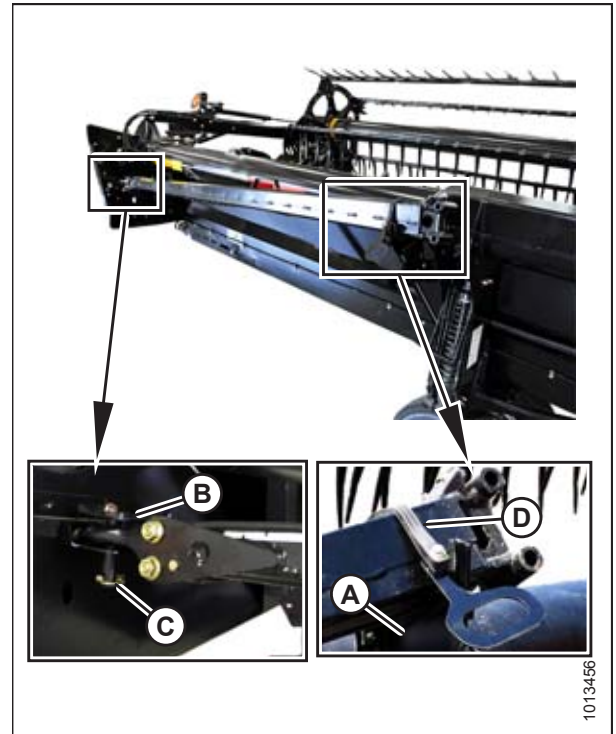


Figure 3.508: Tow-Bar Storage – Left Side

4. Place the inner end of the outer half of the tow-bar into the cradle (A) on the right side of the header backtube.
5. Secure the tube end of the tow-bar in support (B) on the endsheet using hitch pin (C). Secure with hairpin.
6. Install the rubber strap (D) on the cradle (A).

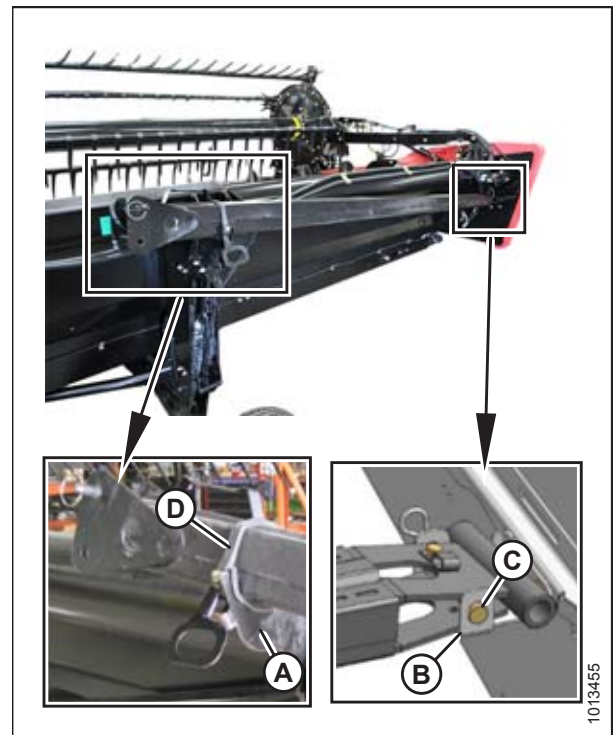


Figure 3.509: Tow-Bar Storage – Right Side

OPERATION

7. Place the inner end of the inner half of the tow-bar into the cradle (A) on the right side of the header backtube.
8. Secure the tube end of the tow-bar in support (B) on the endsheet using clevis pin (C). Secure with hairpin.
9. Install the rubber strap (D) on the cradle (A).

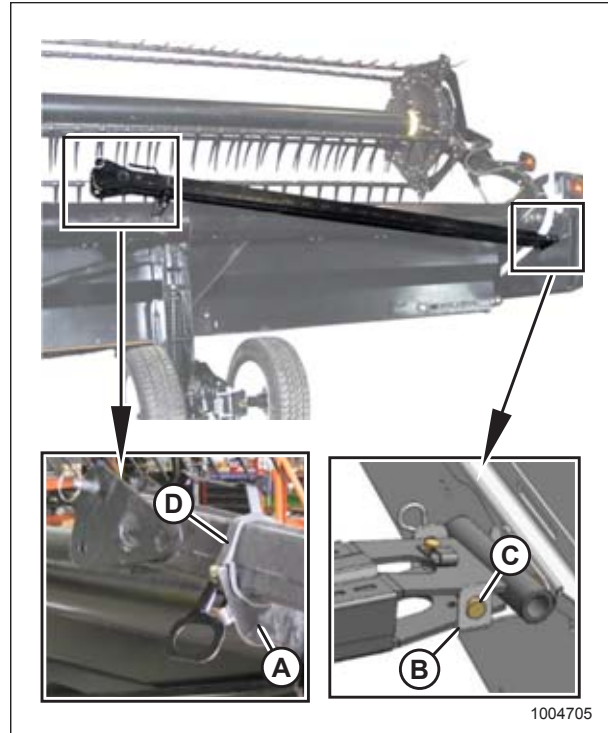


Figure 3.510: Tow-Bar Storage

10. Attach the header to the combine. Refer to the combine operator's manual for instructions.

IMPORTANT:

Carrying the tow-bar on the header will affect the main header float. Refer to the combine operator's manual for adjustment procedures.

11. Place the transport wheels into field position. Refer to the following:
 - [*Moving Front \(Left\) Wheels into Field Position, page 299*](#)
 - [*Moving Rear \(Right\) Wheels into Field Position, page 300*](#)

Moving Front (Left) Wheels into Field Position

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Raise the header fully and engage the header safety props.
2. Swivel the front wheel assembly (A) so the wheels are aligned with the lower frame.
3. Remove pin (B) and pull the wheel assembly towards the rear of header. Store the pin in hole (C) at the top of the leg.
4. Pull handle (D) upwards to release and lower the linkage into the vertical support.

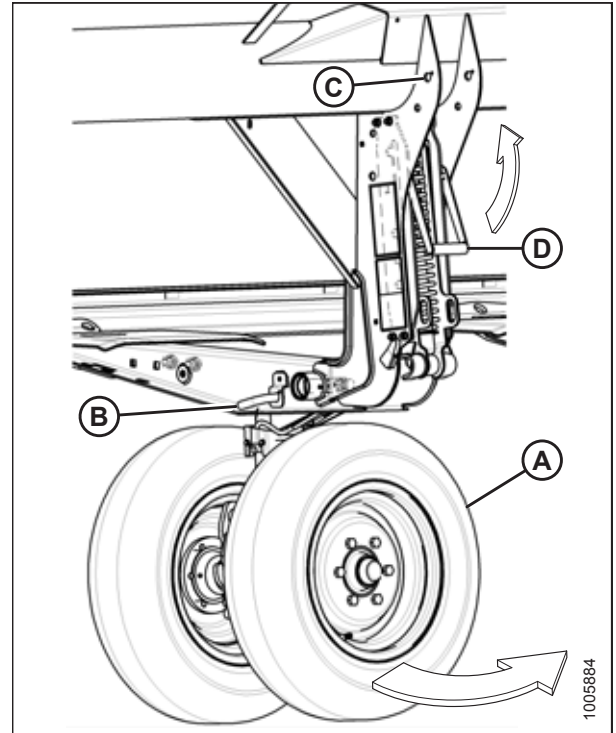


Figure 3.511: Front Wheels

5. Align lift hook (A) with lug (B) and lift the wheel assembly to engage the pin in the lift hook. Ensure latch (C) is engaged.
6. Install clevis pin (D) and secure to the center of the axle with hairpin.

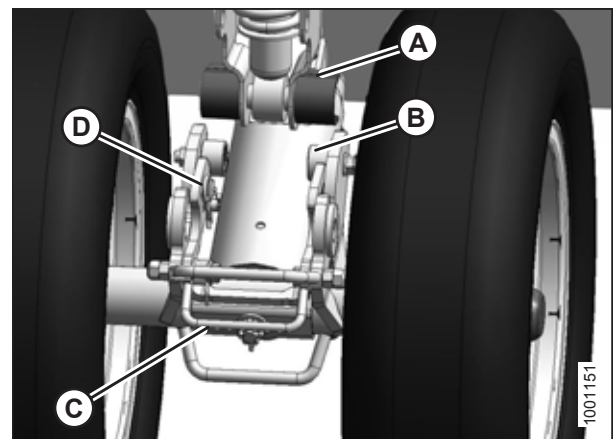


Figure 3.512: Front Wheels

OPERATION

7. Lift the wheel assembly to the desired height and slide the linkage (A) into the appropriate slot in the vertical support.
8. Push down on the handle (B) to lock.

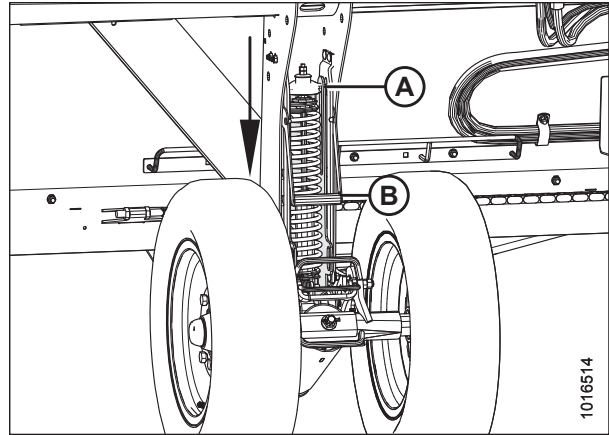


Figure 3.513: Front Wheels

Moving Rear (Right) Wheels into Field Position

1. Pull pin (A) on the left rear wheel. Swivel the wheel clockwise and lock with pin.

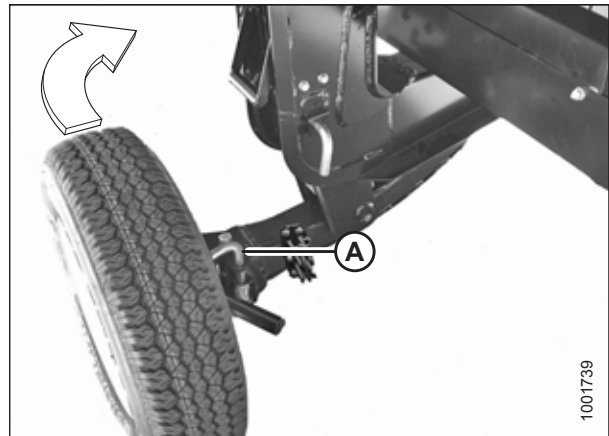


Figure 3.514: Rear Wheel – Left Side

2. Remove pin (A) and store at location (B).
3. Pull handle (C) upwards to release.
4. Lift the wheel to the desired height, and engage the support channel into slot (D) in the vertical support.
5. Push down on handle (C) to lock.

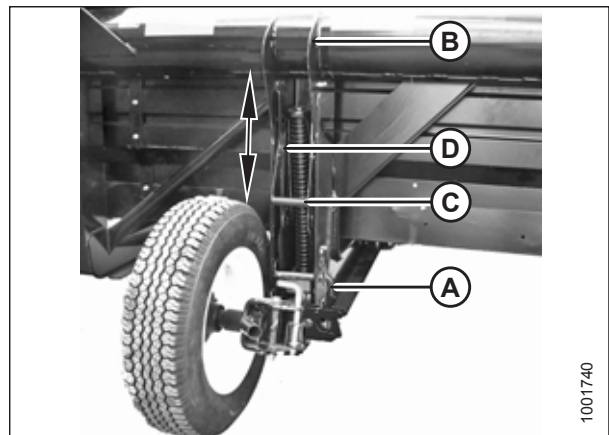


Figure 3.515: Rear Left Wheel

OPERATION

6. Pull the pin (A) on brace (B) on the right wheel in front of the cutterbar. Disengage the brace from the cutterbar, and lower the brace against the axle (C).
7. Remove pin (D), lower support (E) onto axle, and reinsert pin into support.
8. Swing the axle (C) clockwise towards the rear of the header.

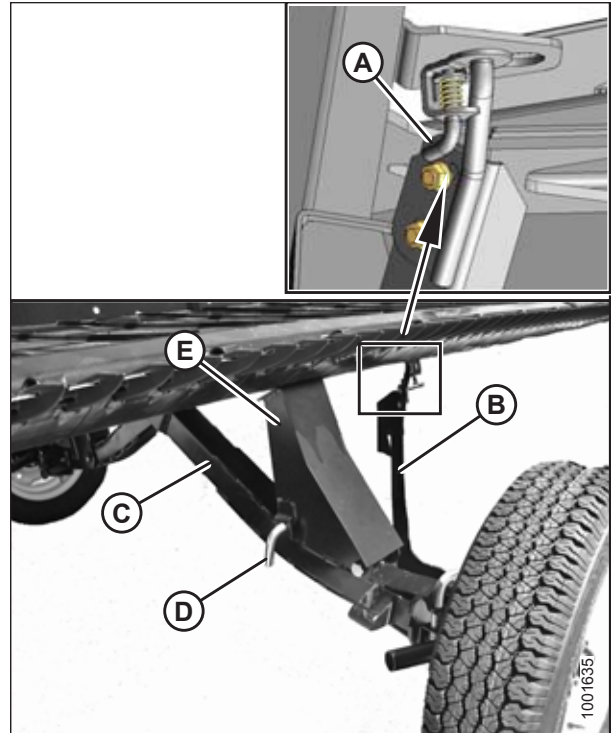


Figure 3.516: Rear Right Wheel

9. Pull pin (A) on right axle, swivel the wheel counterclockwise to position shown, and lock with pin (A).
10. Remove the hairpin (B) from the latch (C).
11. Lift the wheel, lift latch (C), and engage lug (D) onto the left axle. Ensure the latch closes.
12. Secure the latch with hairpin (B), ensuring the open end of the pin faces the rear of the combine.

NOTE:

The hairpin can become dislodged by crop if installed with the open end facing the cutterbar.

IMPORTANT:

Check that wheels are locked and that handle is in locked position.

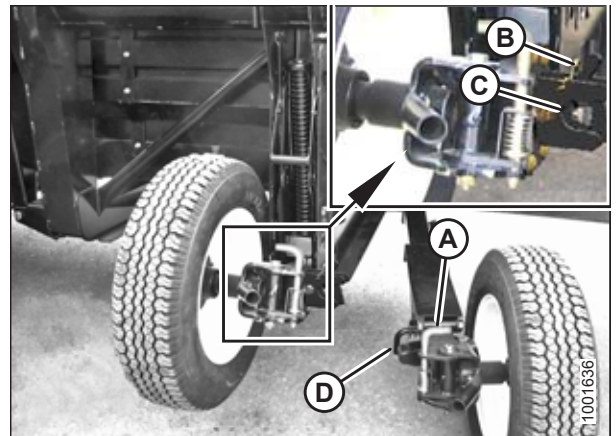


Figure 3.517: Rear Wheels

OPERATION

13. Complete the conversion by ensuring the left side (A) and right side (B) wheels are in the position shown.

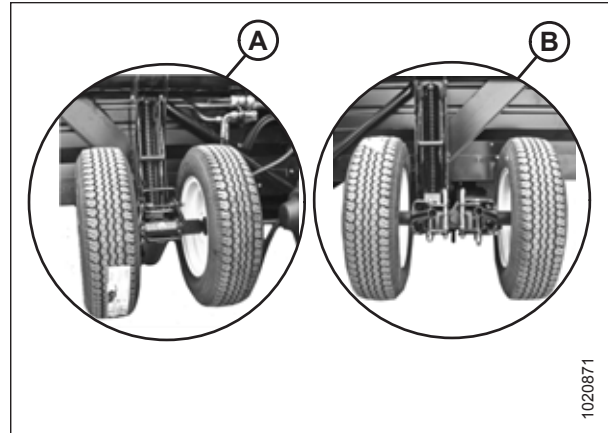


Figure 3.518: Field Position

3.13.4 Converting from Field to Transport Position

Moving Front (Left) Wheels into Transport Position

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

CAUTION

Stand clear of wheels and release linkage carefully as wheels will drop once the mechanism is released.

1. Pull the handle (B) upwards to release and raise the linkage (A) fully upwards into the vertical support.
2. Raise the header fully, stop the engine, and remove the key from ignition. Engage the header safety props.

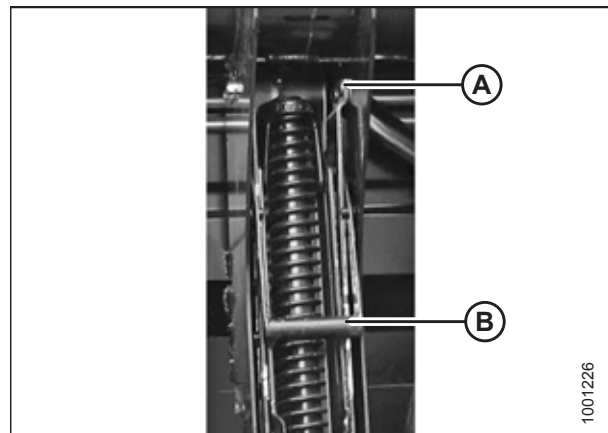


Figure 3.519: Suspension Linkage

OPERATION

3. Remove the hair pin and clevis pin (A).
4. Pull the latch handle (B) to release the suspension linkage (C), and pull the suspension linkage away from the spindle (D).
5. Lower the wheels slowly.

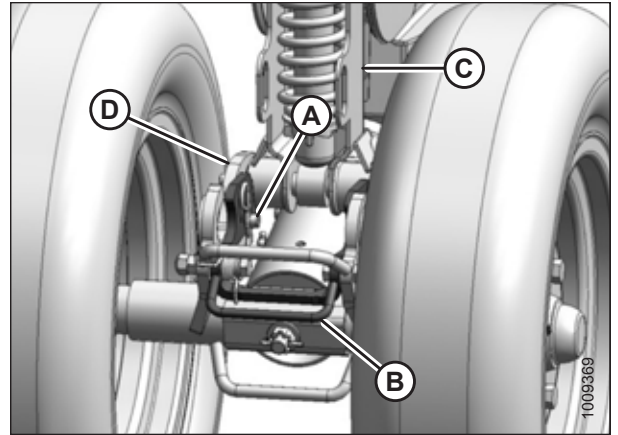


Figure 3.520: Left Front Wheels

6. Lower the handle (B) to lock.

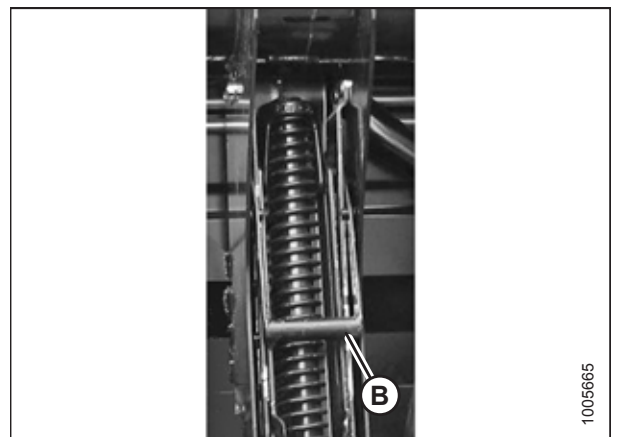


Figure 3.521: Suspension Linkage

OPERATION

7. Remove the pin (A) from storage at the top of the leg (B).
8. Move and swivel the wheels clockwise until the connector (C) is turned towards the front end of the header.
9. Insert pin (A) and turn to lock.
10. Lower the header until the left wheels are just touching the ground.

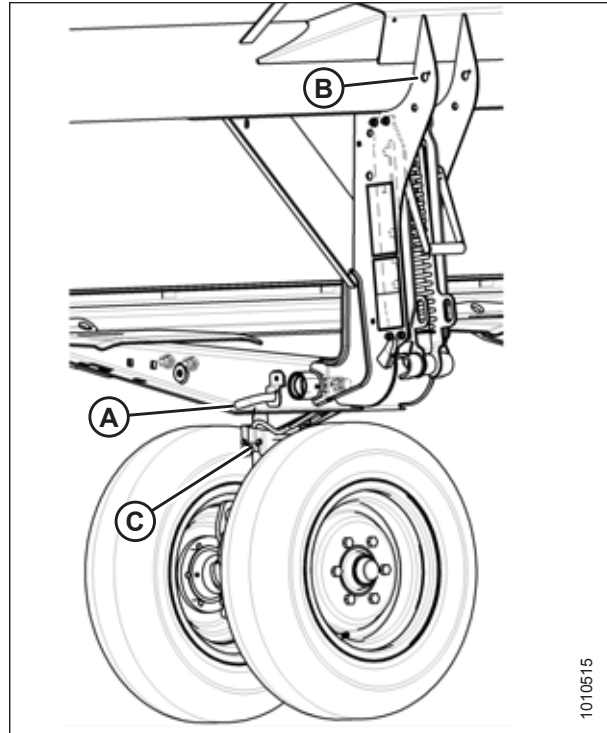


Figure 3.522: Left Front Wheels

Moving Rear (Right) Wheels into Transport Position

1. Remove the hairpin (A) from the latch (B).
2. Lift the latch (B), disengage the right axle (C), and lower to the ground.



CAUTION

Stand clear of wheels and release linkage carefully as wheels will drop once the mechanism is released.

3. Pull handle (D) carefully to release the spring and lower the wheel to the ground.
4. Lift the wheel and linkage with handle (E) and position the linkage in the bottom slot.
5. Lower the handle (C) to lock.

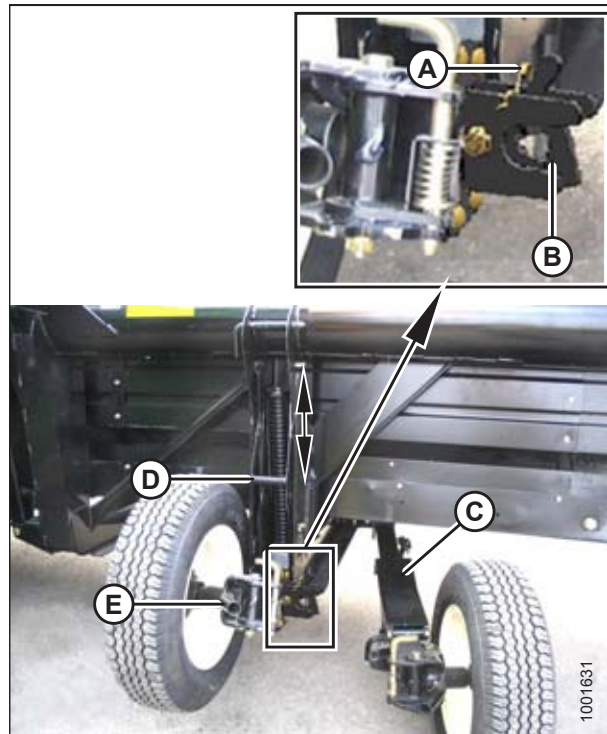


Figure 3.523: Rear Wheels

OPERATION

6. Remove the pin (A) and install at location (B) to secure the linkage. Turn the pin to lock.
7. Pull the pin (D), swivel the wheel (C) counterclockwise 90°, and release the pin to lock.

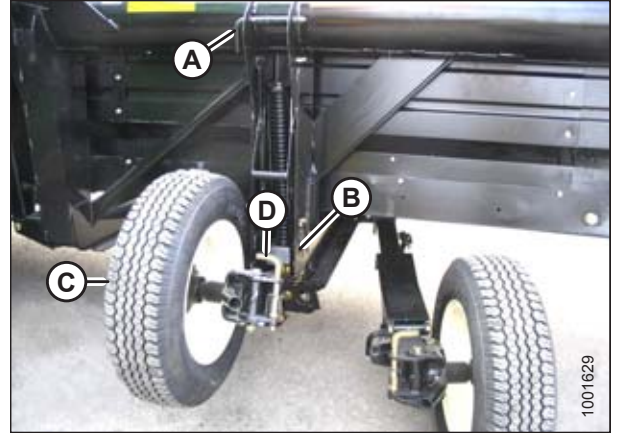


Figure 3.524: Rear Wheels

8. Ensure the left wheel is in the transport position as shown.



Figure 3.525: Left Wheel in Transport Position

9. Pull the pin (A) and swivel the right rear wheel (B) clockwise 90°.

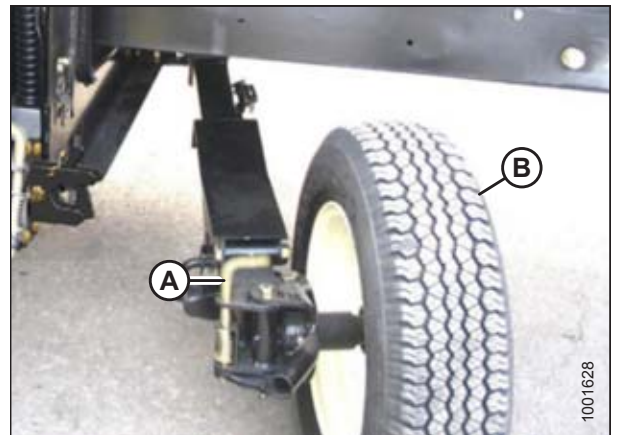


Figure 3.526: Right Rear Wheel

OPERATION

10. Lock the wheel (A) with pin (B). Move the right axle (C) to the front of the header.

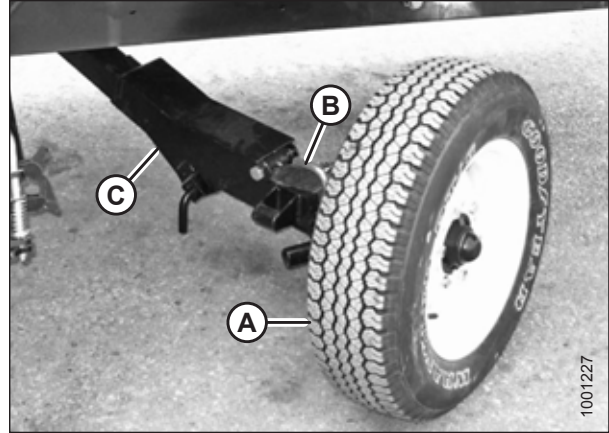


Figure 3.527: Right Rear Wheel

11. Remove the pin (A), raise support (B) to the position shown, and reinsert pin.

IMPORTANT:

Ensure the pin (A) engages the tube on the axle.

12. Swing the brace (C) into the position shown and insert the brace into the slot (D) behind the cutterbar. Position the brace so that pin (E) engages the hole in the bracket (F). The right wheel is now in transport position.
13. Disengage the header cylinder lift stops.
14. Detach the header's hydraulic and electrical connections from the combine. Refer to [4 Header Attachment/Detachment, page 311](#).
15. Start the combine and lower the header to the ground.

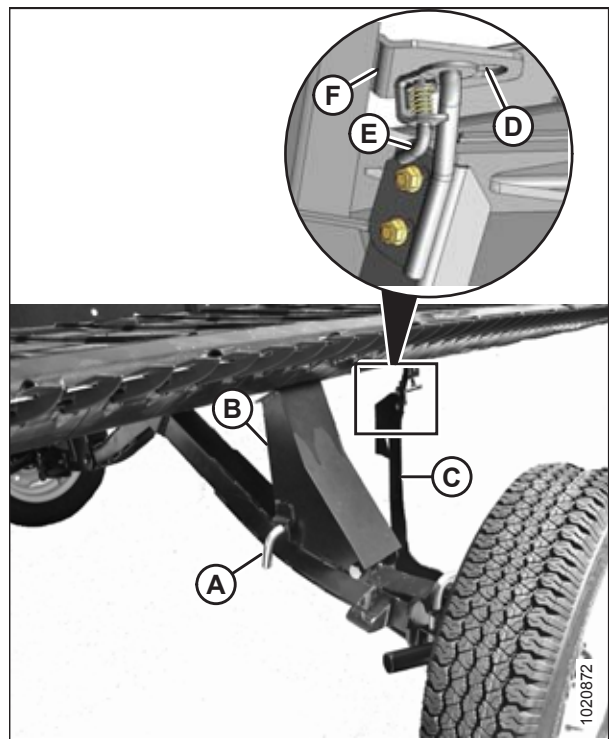


Figure 3.528: Right Rear Wheel Position

OPERATION

Attaching Tow-Bar

The tow-bar consists of two sections which make storage and handling easier.

1. Unhook the rubber strap (D) from the cradle (A) on the right side of the header.
2. Remove the clevis pin (C) and detach the tube end from the support (B).
3. Replace the clevis pin (C).
4. Lift the inner half of the tow-bar off the header and place it near the left side of the header.

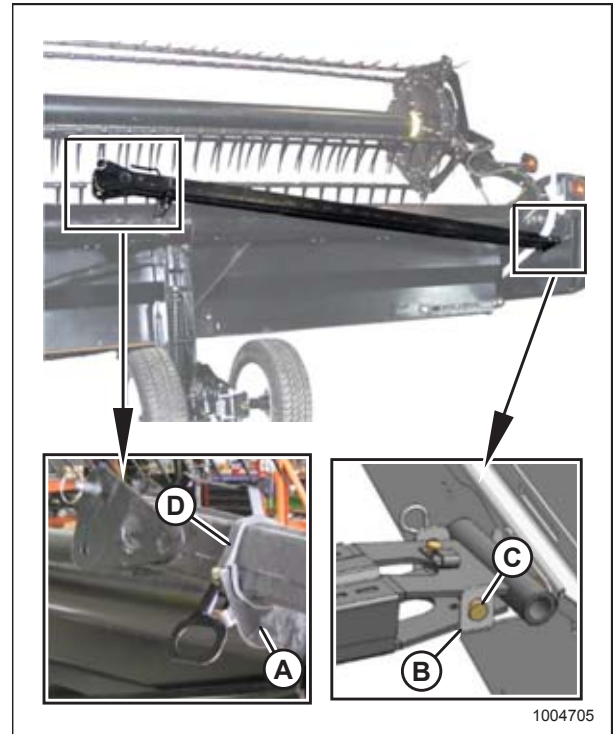


Figure 3.529: Tow-Bar Removal – Right Side

5. Unhook the rubber strap (D) from the cradle (A) on the left side of the header.
6. Remove the hitch pin (C) from the support (B), and remove the tow-bar.
7. Install the rubber strap (D) on the cradle (A).

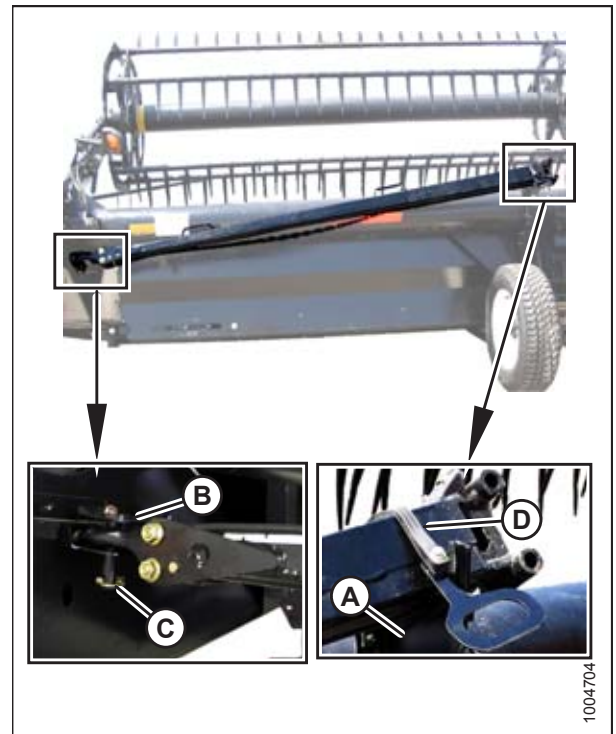


Figure 3.530: Tow-Bar Removal – Left Side

OPERATION

8. Connect the outer half (B) of the tow-bar to the inner half (A).

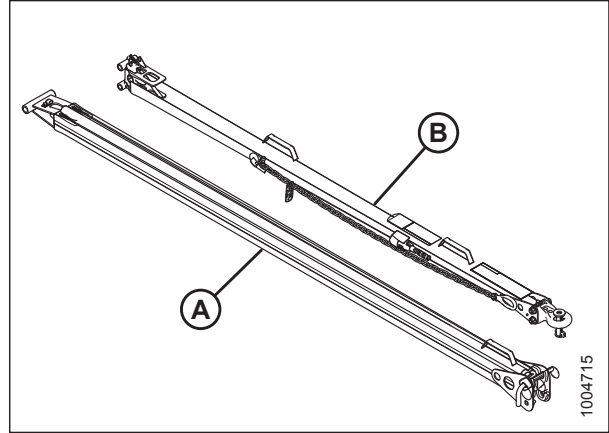


Figure 3.531: Tow-Bar Assembly

9. Lift the outer half (B) and insert it into the inner half (A).

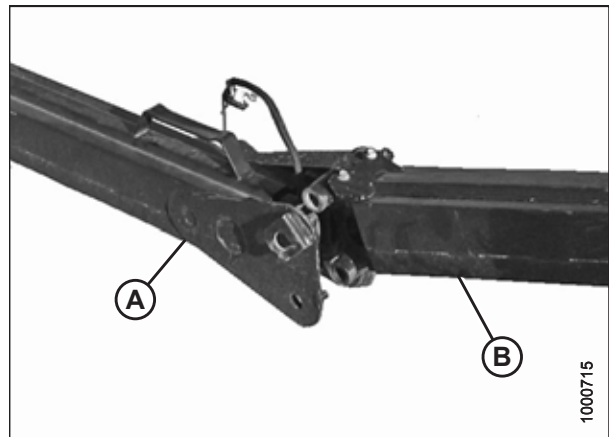


Figure 3.532: Tow-Bar Assembly

10. Secure the two halves together with the L-pin (A) and then turn to lock. Secure the L-pin with ring (B).
11. Connect the electrical harness to connector (C).

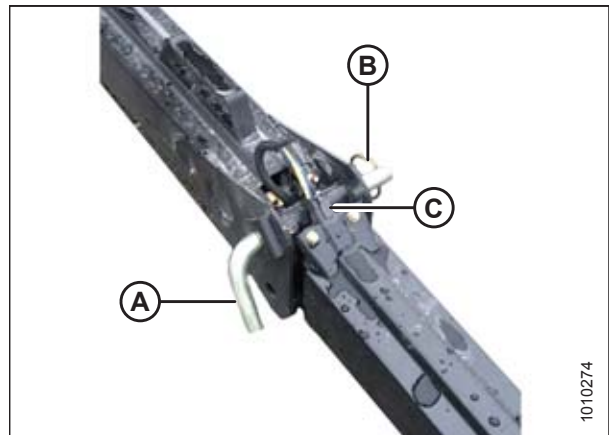


Figure 3.533: Tow-Bar Assembly

OPERATION

12. Position the tow-bar (A) onto the axle, and push against the latch (B) until the tow-bar pins drop into the hooks (C).
13. Check that latch (B) has engaged the tow-bar.
14. Install the clevis pin (D) and secure with hairpin.

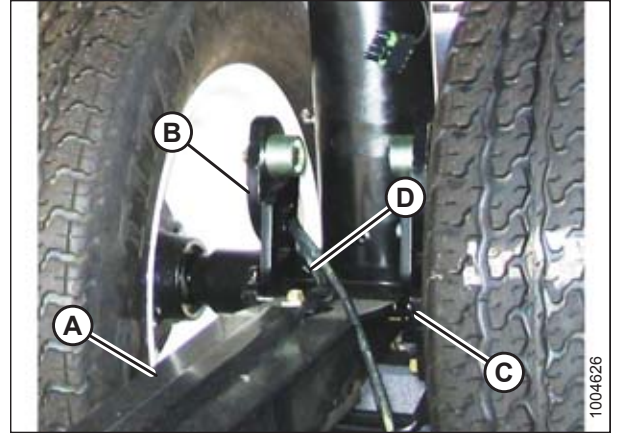


Figure 3.534: Attaching Tow-Bar

15. Connect the electrical harness (A) at the front wheel.

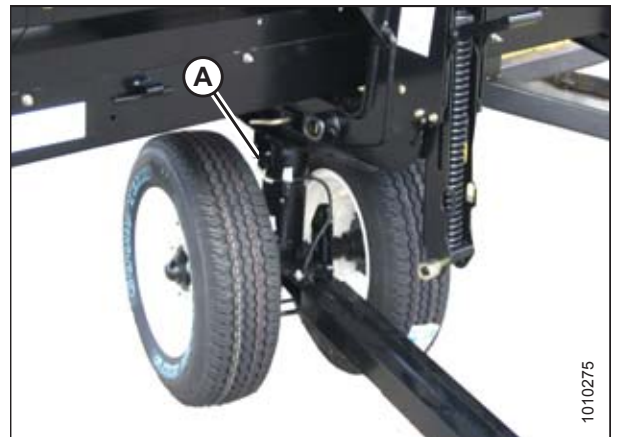


Figure 3.535: Harness Connection

3.14 Storing the Header

Perform the following procedures at the end of each operating season:

CAUTION

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.

CAUTION

Cover cutterbar and knife guards to prevent injury from accidental contact.

1. Clean the header thoroughly.
2. Store the machine in a dry, protected place if possible. If storing outside, always cover with a waterproof canvas or other protective material.

NOTE:

If storing the machine outside, remove the drapers and store them in a dark, dry place. If not removing the drapers, store the header with the cutterbar lowered so water and snow will not accumulate on the drapers. The weight of water and snow accumulation puts excessive stress on the drapers and header.

3. Lower the header onto blocks to keep the cutterbar off the ground.
4. Lower the reel completely. If stored outside, tie the reel to the frame to prevent rotation caused by the wind.
5. Repaint all worn or chipped painted surfaces to prevent rust.
6. Loosen the drive belts.
7. Lubricate the header thoroughly leaving excess grease on the fittings to keep moisture out of the bearings.
8. Apply grease to exposed threads, cylinder rods, and sliding surfaces of components.
9. Check for worn components and repair as necessary.
10. Check for broken components and order replacements from your Dealer. Immediate repair of these items will save time and effort at the beginning of next season.
11. Replace or tighten any missing or loose hardware. Refer to [8.1 Torque Specifications, page 569](#).

4 Header Attachment/Detachment

This chapter includes instructions for setting up, attaching, and detaching the header.

Combine	Refer to
Case IH 7010, 8010, 7120, 8120, 9120, 5130, 6130, 7130, 7230, 8230, 9230	4.2 Case IH Combines, page 312
Gleaner R and S Series, Challenger 660, 670, 680B, 540C, 560C, Massey Ferguson 9690, 9790, 9895, 9520, 9540, 9560	4.3 AGCO (Challenger, Gleaner, and Massey Ferguson) Combines, page 320
John Deere 60, 70, S, and T Series	4.4 John Deere Combines, page 328
CLAAS 500, 700 (R Series)	4.5 CLAAS Combines, page 335
New Holland CR, CX	4.6 New Holland Combines, page 343

NOTE:

Ensure the applicable functions (e.g., Automatic Header Height Control [AHHC], draper header option, hydraulic center-link option, hydraulic reel drive) are enabled on the combine and the combine computer. Failure to do so may result in improper header operation.

4.1 Float Module Setup

The following sections outline the recommended float module setup guidelines for your specific combine model and crop type; however, the recommendations cannot cover all conditions.

If feeding problems develop with the float module, refer to [7 Troubleshooting, page 557](#).

4.1.1 Using Auger Flighting

The auger flighting on the FM100 can be configured for specific combines and crop conditions. Refer to [3.7.1 Float Module Feed Auger Configurations, page 59](#) for combine/crop specific configurations.

4.1.2 Using Stripper Bars

Stripper bar kits may have been supplied with your header to improve feeding in certain crops such as rice. They are **NOT** recommended in cereal crops.

For servicing information, refer to [5.11 Float Module Stripper Bars and Feed Deflectors, page 472](#).

4.2 Case IH Combines

4.2.1 Attaching Header to Case IH Combine

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. On the combine, ensure the lock handle (A) is positioned so the hooks (B) can engage the float module.

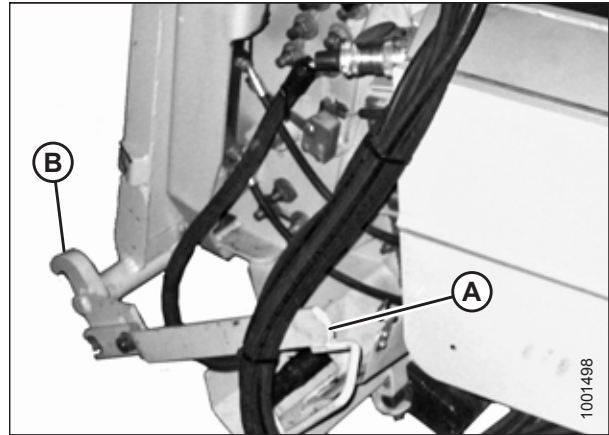


Figure 4.1: Feeder House Locks

CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

2. Start the engine and slowly drive the combine up to the header until the feeder house saddle (A) is directly under the float module top cross member (B).
3. Raise the feeder house slightly to lift the header, ensuring the feeder saddle is properly engaged in the float module frame.
4. Stop the engine and remove the key from the ignition.

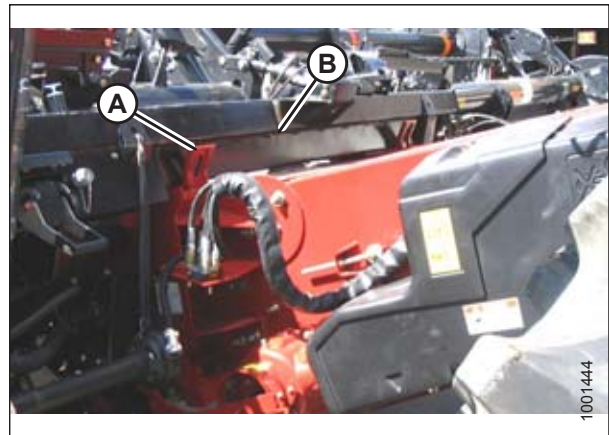


Figure 4.2: Combine and Float Module

HEADER ATTACHMENT/DETACHMENT

5. On the left side of the feeder house, lift lever (A) on the float module and push handle (B) on the combine to engage locks (C) on both sides of the feeder house.
6. Push down on the lever (A) so the slot in the lever engages the handle and locks the handle in place.
7. If lock (C) does not fully engage the pin on the float module, loosen bolts (D) and adjust lock. Retighten bolts.

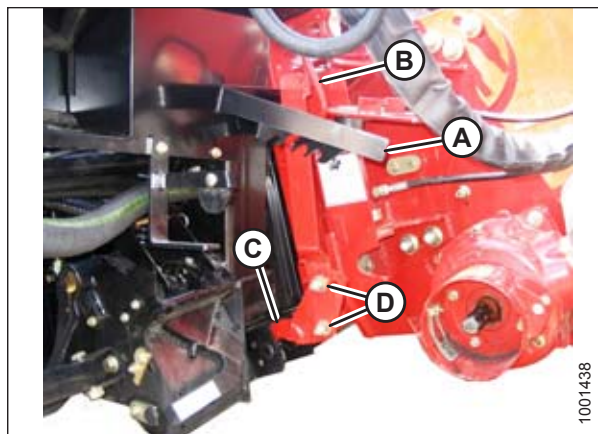


Figure 4.3: Combine and Float Module

8. Open the cover on the receptacle (A) located on the left side of the float module.
9. Press the lock button (B) and pull the handle (C) to the fully-open position.
10. Clean the receptacle mating surfaces.

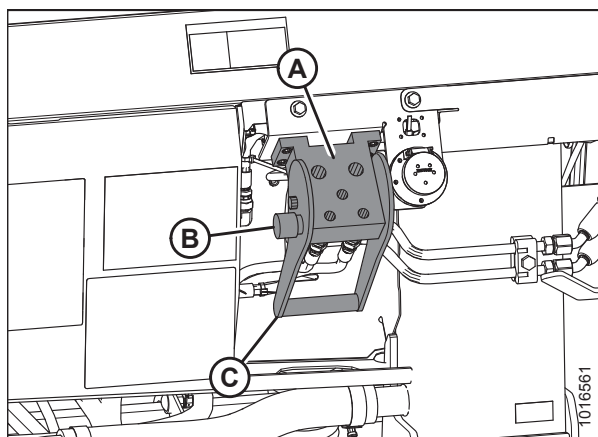


Figure 4.4: Float Module Receptacle

11. Remove the hydraulic quick coupler (A) from the combine, and clean the mating surfaces.



Figure 4.5: Combine Connectors

HEADER ATTACHMENT/DETACHMENT

12. Position the coupler onto the coupler receptacle (A) and push the handle (B) (not shown) to engage the multicoupler pins into the receptacle.
13. Push the handle (B) to the closed position until the lock button (C) snaps out.

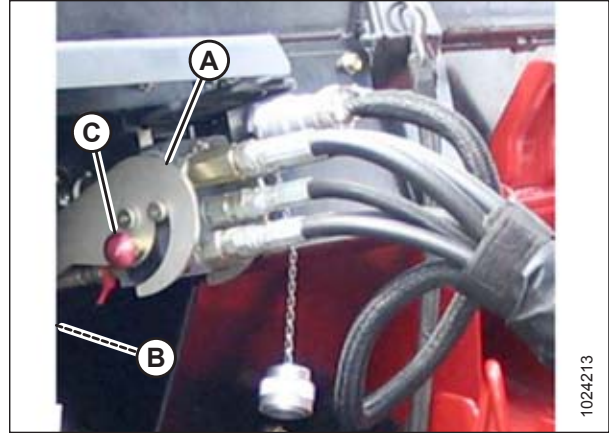


Figure 4.6: Hydraulic Connection

14. Remove the cover from the electrical receptacle (A). Ensure the receptacle is clean and has no signs of damage.

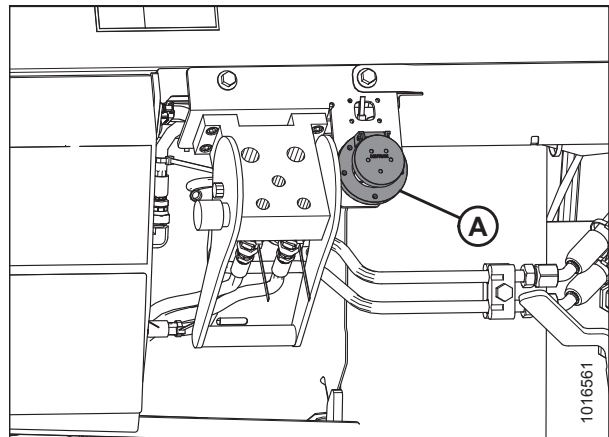


Figure 4.7: Electrical Receptacle

15. Remove the electrical connector (A) from the storage cup on the combine and route it to the float module receptacle.



Figure 4.8: Combine Connectors

HEADER ATTACHMENT/DETACHMENT

16. Align the lugs on the connector (A) with the slots in the receptacle (B), push the connector onto the receptacle, and turn the collar on the connector to lock it in place.

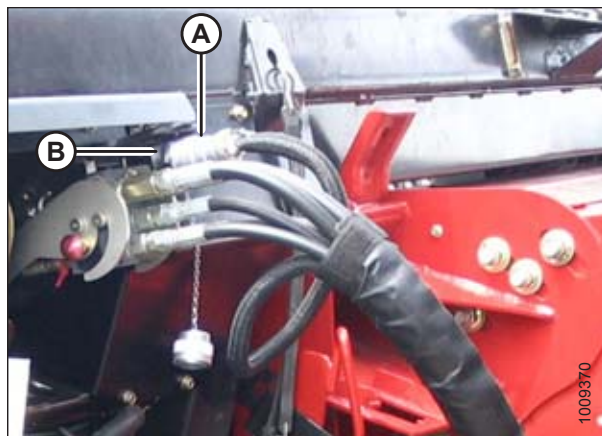


Figure 4.9: Electrical Connection

17. Detach safety chain (C) from support bracket (B).
18. Pull collar (D) back to release driveline (A) from support bracket. Remove the driveline from support bracket.

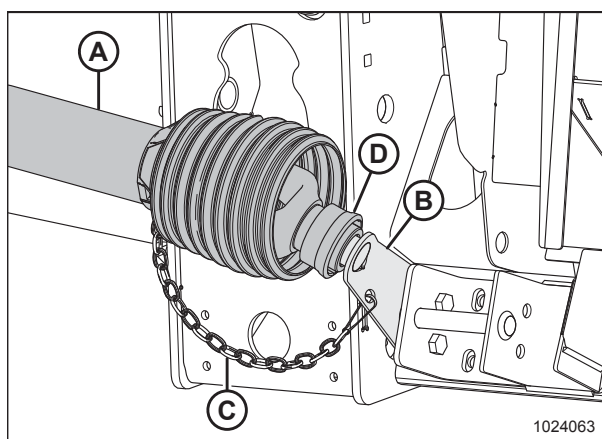


Figure 4.10: Driveline in Storage Position

19. Pull back the collar (A) on the end of the driveline, and push the driveline onto the combine output shaft (B) until the collar locks.

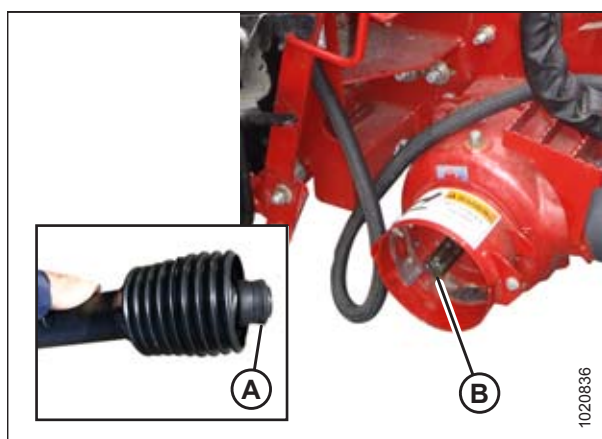


Figure 4.11: Combine Output Shaft

HEADER ATTACHMENT/DETACHMENT

20. Disengage the float locks by pulling each float lock handle (A) away from the float module and setting it in the unlocked position (B).

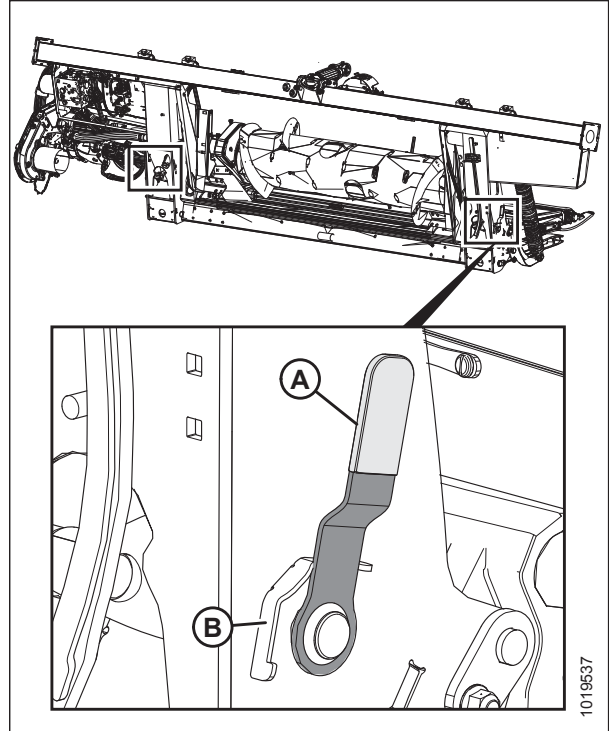


Figure 4.12: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

4.2.2 Detaching Header from Case IH Combine

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Choose a level area and position the header slightly above the ground.
2. Stop the engine and remove the key from the ignition.

IMPORTANT:

If slow speed transport wheels are installed, the header may be detached in either transport or field mode. If detaching with the wheels in field mode, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer / Slow Speed Transport Wheels, page 82](#).

IMPORTANT:

If stabilizer wheels are installed, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer Wheels, page 84](#).

3. Engage the float locks by pulling each float lock handle (A) away from the float module and setting it in the locked position (B).
4. Push back the collar (A) on the end of the driveline and pull the driveline out of the combine output shaft (B) until the collar disengages.

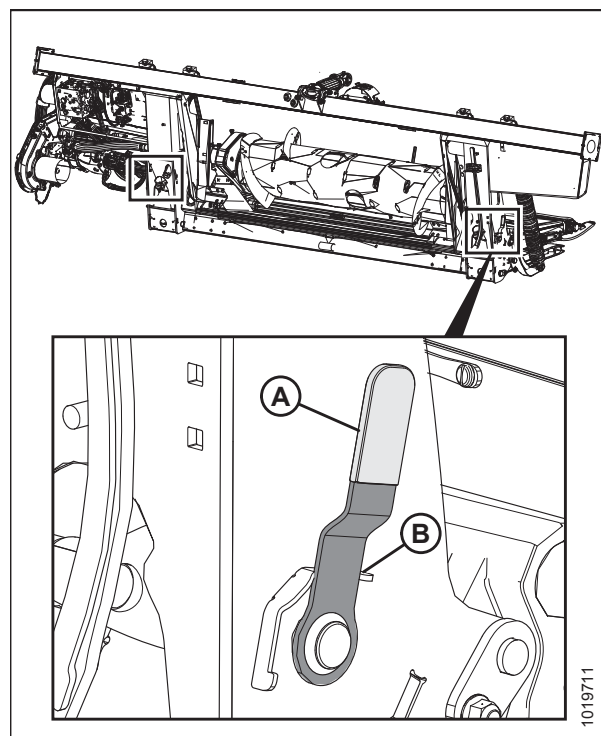


Figure 4.13: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

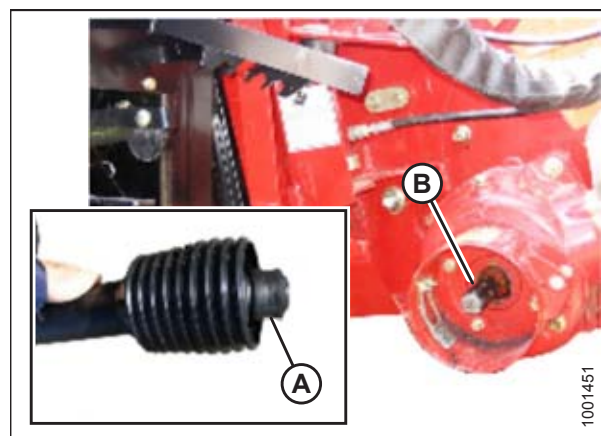


Figure 4.14: Driveline

HEADER ATTACHMENT/DETACHMENT

5. Store the driveline (A) on the driveline support bracket (B) by pulling back the collar (C) on the driveline and fitting it over the support bracket weldment (D). Release the collar so it securely locks into place over the weldment.
6. Attach safety chain (E) to support bracket (B).

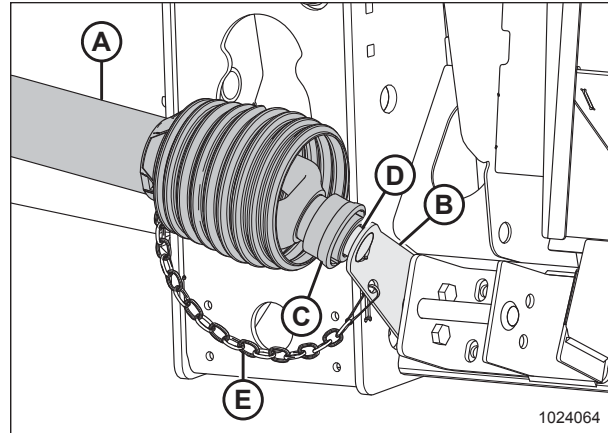


Figure 4.15: Driveline

7. Remove the electrical connector (A) and replace the cover (B).
8. Push in the lock button (C) and pull the handle (D) to release the multicoupler (E).

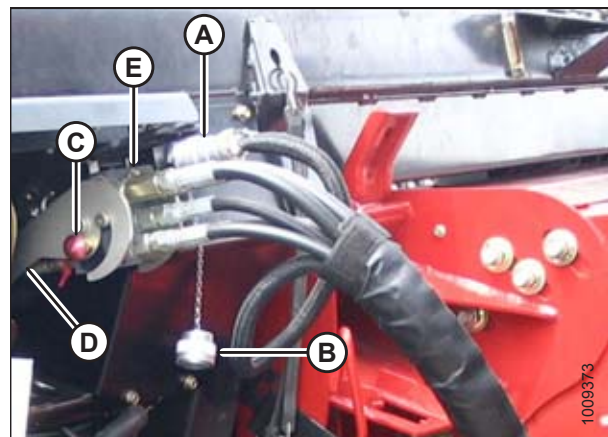


Figure 4.16: Multicoupler

9. Position the multicoupler (A) onto the storage plate (B) on the combine.
10. Place the electrical connector (C) in the storage cup (D).

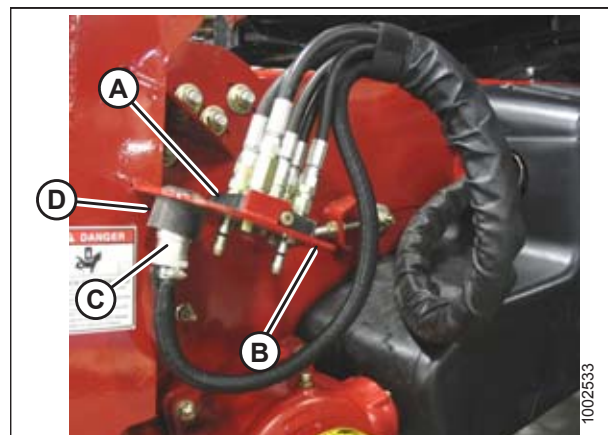


Figure 4.17: Multicoupler Storage

HEADER ATTACHMENT/DETACHMENT

11. Push the handle (A) on the float module receptacle to the closed position until the lock button (B) snaps out. Close the cover.

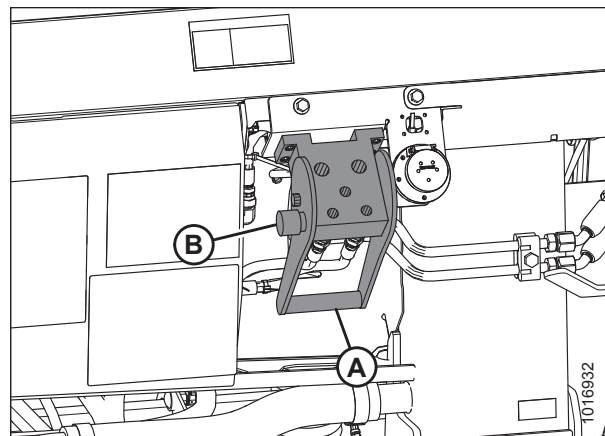


Figure 4.18: Float Module Receptacle

12. Lift the lever (A) and pull and lower the handle (B) to disengage the feeder house/float module lock (C).
13. Lower the feeder house until it disengages the float module support.
14. Back the combine away slowly from the float module.

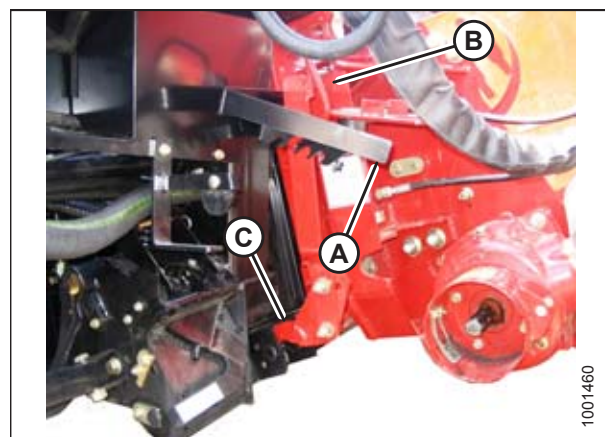


Figure 4.19: Feeder House Locks

4.3 AGCO (Challenger, Gleaner, and Massey Ferguson) Combines

4.3.1 Attaching Header to a Challenger, Gleaner, or Massey Ferguson Combine

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Use the lock handle (B) to retract the lugs (A) at the base of the feeder house.

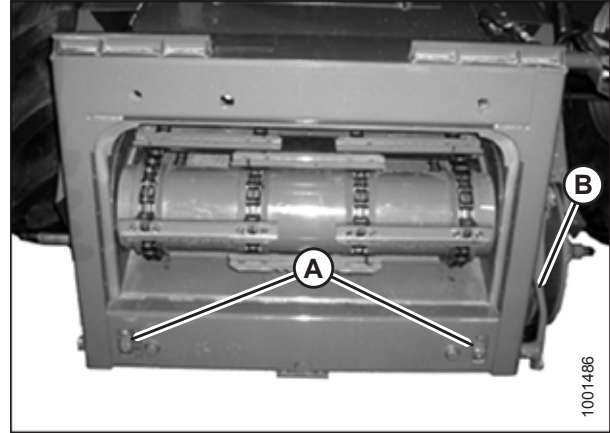


Figure 4.20: AGCO Group Feeder House

CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

2. Start the engine and slowly approach the header until the feeder house is directly under the float module top cross member (A) and the alignment pins (C) (refer to Figure 4.22, page 321) on the feeder house are aligned with the holes (B) in the float module frame.

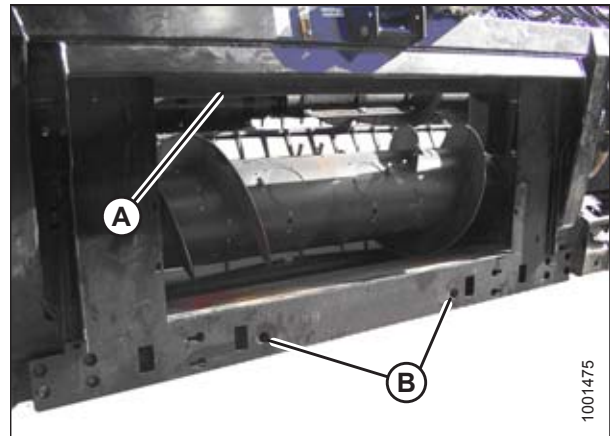


Figure 4.21: Float Module

HEADER ATTACHMENT/DETACHMENT

NOTE:

Your combine feeder house may not be exactly as shown.

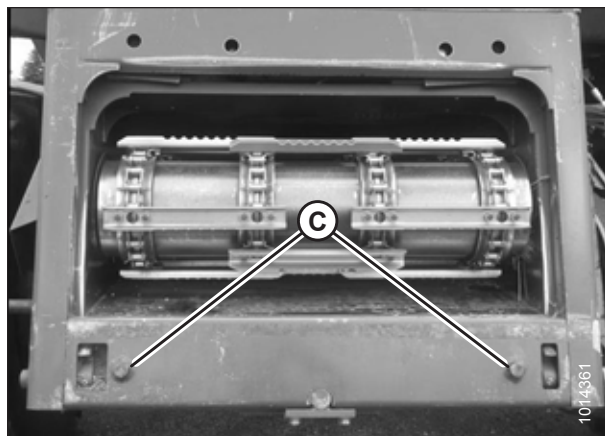


Figure 4.22: AGCO Group Alignment Pins

3. Raise the feeder house slightly to lift the header, ensuring the feeder house saddle (A) is properly engaged in the float module frame.
4. Stop the engine and remove the key from the ignition.



Figure 4.23: Feeder House and Float Module

5. Use the lock handle (B) to engage lugs (A) with the float module.

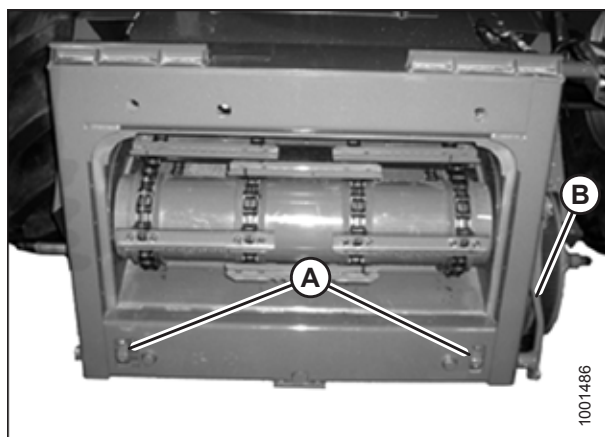


Figure 4.24: AGCO Group Feeder House



CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

HEADER ATTACHMENT/DETACHMENT

6. Start the engine and lower the header.
7. Stop the engine and remove the key from the ignition.

NOTE:

The FM100 Float Module is equipped with a multicoupler that connects to the combine. If your combine is equipped with individual connectors, a multicoupler kit (single-point connector) must be installed. Refer to Table 4.1, page 322 for a list of kits and installation instructions that are available through your combine Dealer.

Table 4.1 Multicoupler Kits

Combine	Kit Number
Challenger	71530662
Gleaner R/S Series	71414706
Massey Ferguson	71411594

8. Disengage the float locks by pulling each float lock handle (A) away from the float module and setting it in the unlocked position (B).

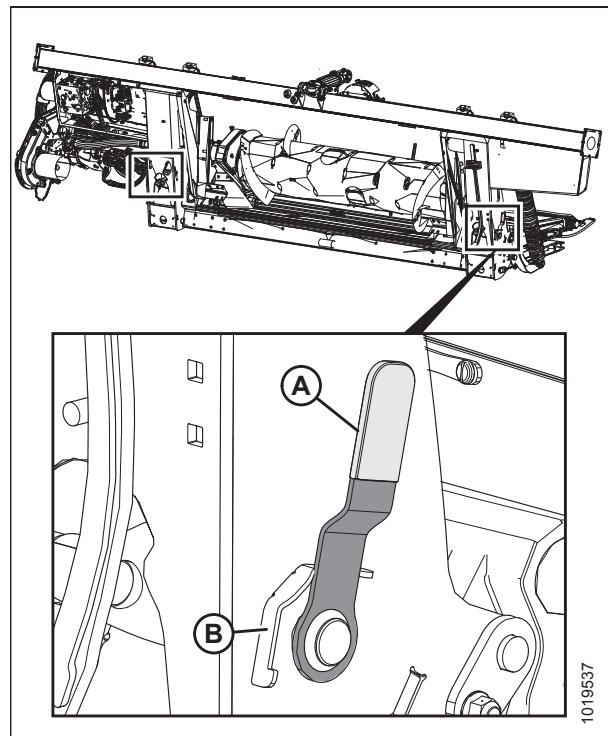


Figure 4.25: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

HEADER ATTACHMENT/DETACHMENT

9. Raise the handle (A) to release the multicoupler (B) from the float module.

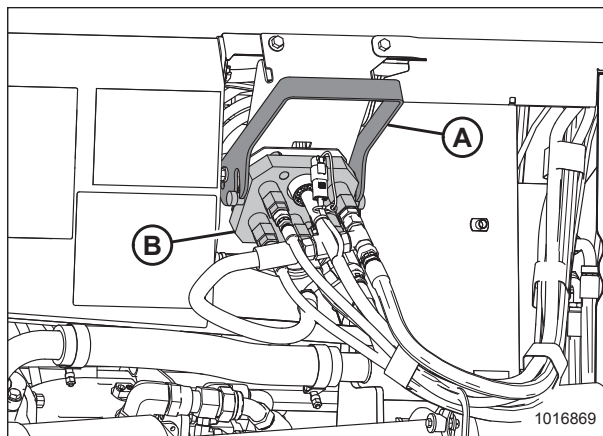


Figure 4.26: Float Module Multicoupler

10. Push the handle (A) on the combine to the fully-open position.
11. Clean the mating surfaces of the multicoupler (B) and receptacle if necessary.

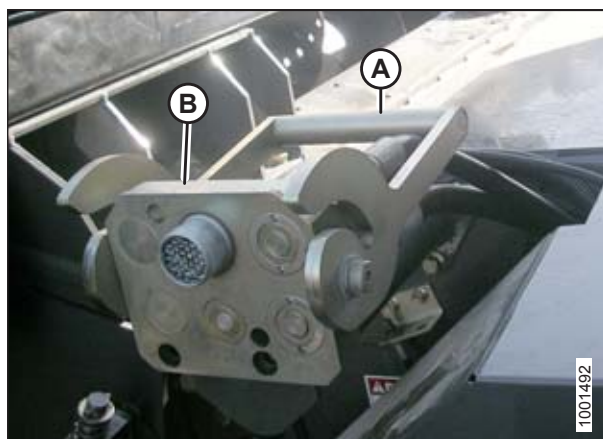


Figure 4.27: Combine Receptacle

12. Position the multicoupler (A) onto the combine receptacle, and pull the handle (B) to fully engage the multicoupler into the receptacle.
13. Connect the reel fore-aft/header tilt selector harness (C) to the combine harness (D).

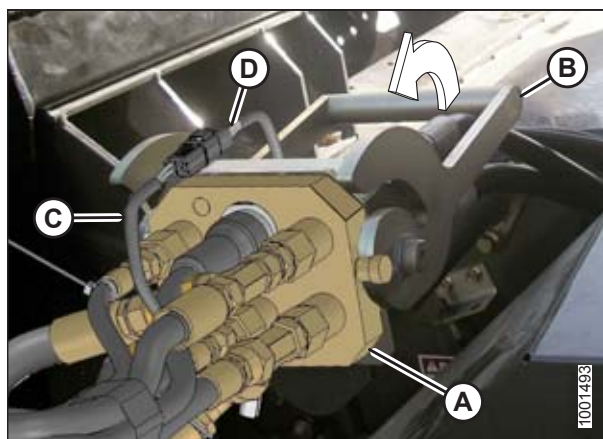


Figure 4.28: Multicoupler

HEADER ATTACHMENT/DETACHMENT

14. Detach safety chain (C) from support bracket (B).
15. Pull collar (D) back to release driveline (A) from support bracket. Remove the driveline from support bracket.

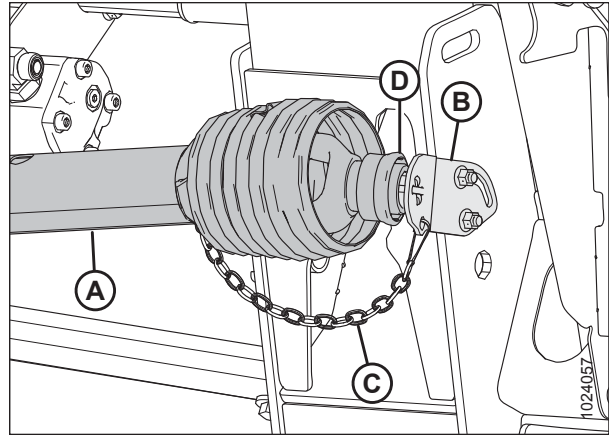


Figure 4.29: Driveline

16. Pull back the collar (A) on the end of the driveline, and push the driveline onto the combine output shaft (B) until the collar locks.

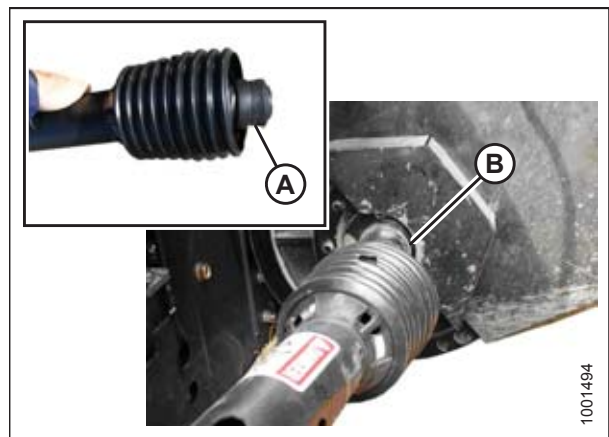


Figure 4.30: Driveline

4.3.2 Detaching Header from a Challenger, Gleaner, or Massey Ferguson Combine

⚠ DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Choose a level area and position the header slightly above the ground.
2. Stop the engine and remove the key from the ignition.

IMPORTANT:

If slow speed transport wheels are installed, the header may be detached in either transport or field mode. If detaching with the wheels in field mode, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer / Slow Speed Transport Wheels](#), page 82.

IMPORTANT:

If stabilizer wheels are installed, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer Wheels](#), page 84.

3. Engage the float locks by pulling each float lock handle (A) away from the float module and setting it in the locked position (B).
4. Disconnect the driveline (A) from the combine output shaft (B).

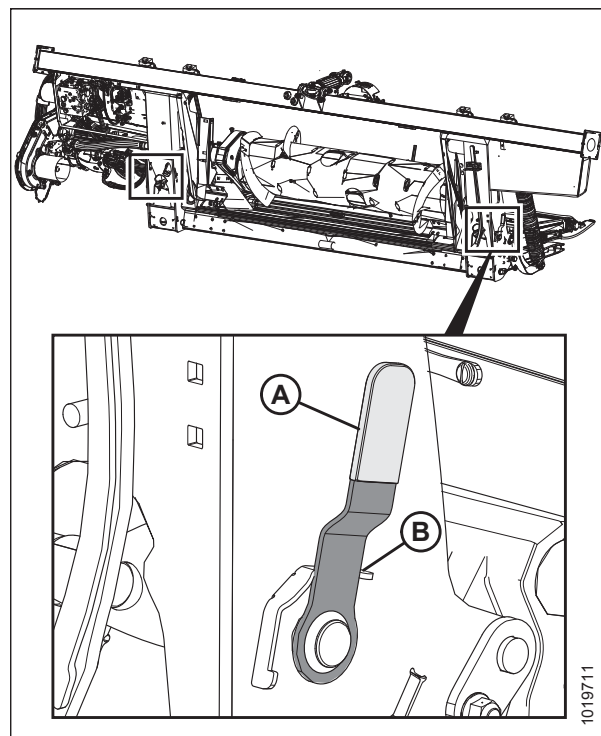


Figure 4.31: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)



Figure 4.32: Disconnect Driveline

HEADER ATTACHMENT/DETACHMENT

5. Store the driveline (A) on the driveline support bracket (B) by pulling back the collar (C) on the driveline and fitting it over the support bracket weldment (D). Release the collar so it securely locks into place over the weldment.

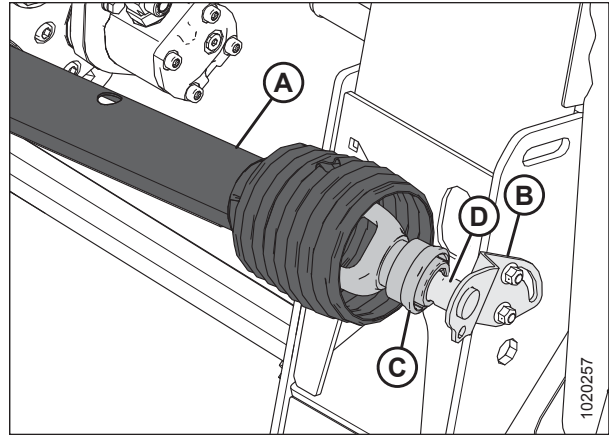


Figure 4.33: Driveline

6. Disconnect the harness at the connector (A).
7. Move the handle (B) on the combine multicoupler to the full open position to release the multicoupler (C) from the combine.

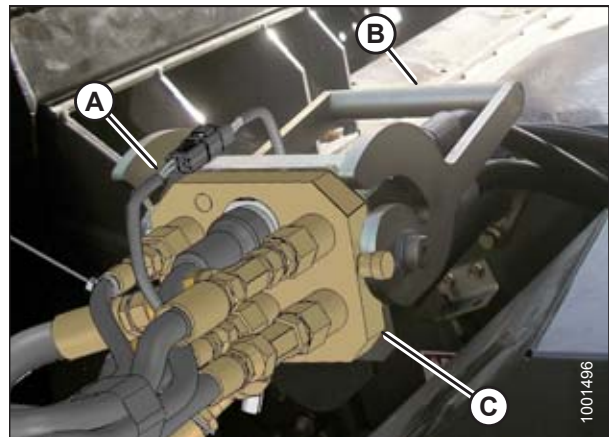


Figure 4.34: Multicoupler

8. Raise the handle (A) on the float module, and place the multicoupler (B) on the float module receptacle.
9. Lower the handle (A) to lock the multicoupler (B).

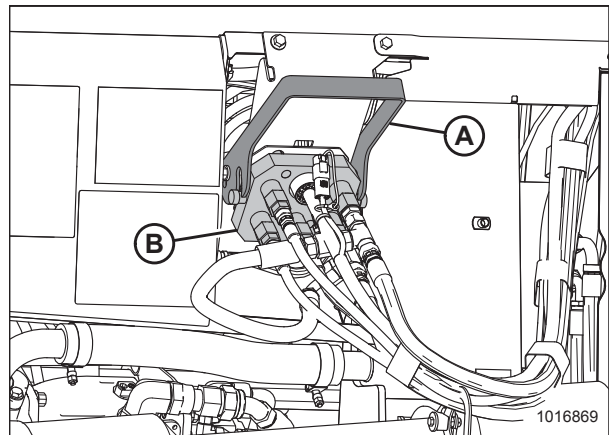


Figure 4.35: Float Module Multicoupler

HEADER ATTACHMENT/DETACHMENT

10. Use the lock handle (B) to retract the lugs (A) at the base of the feeder house.

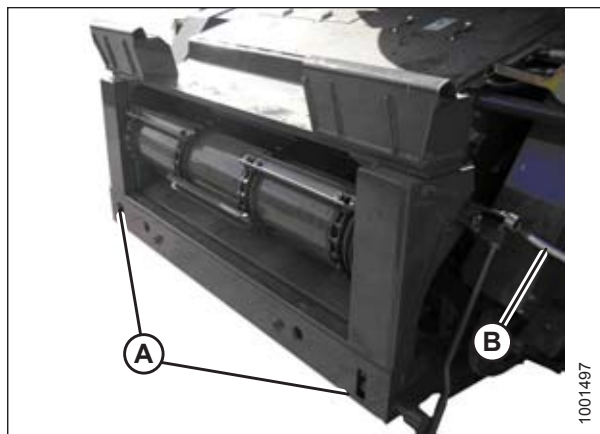


Figure 4.36: Challenger and Massey Ferguson

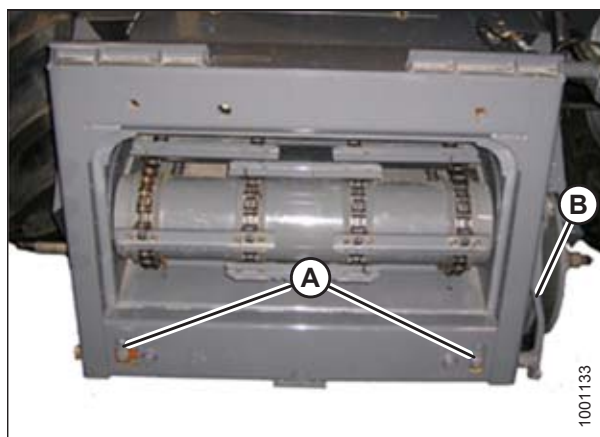


Figure 4.37: Gleaner R and S Series

11. Lower the feeder house until the saddle (A) disengages and clears the float module support (B).
12. Back the combine away slowly from the float module.

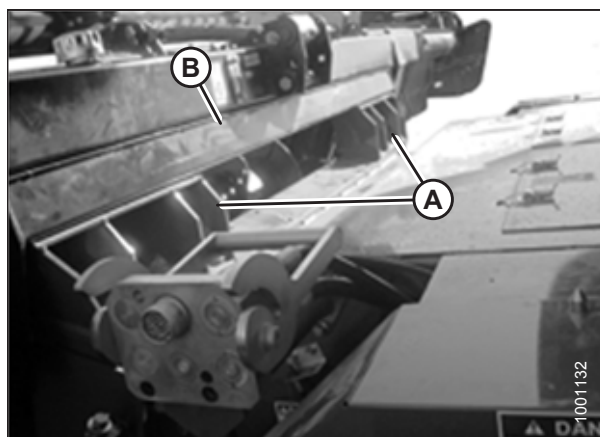


Figure 4.38: Float Module on Combine

4.4 John Deere Combines

The D1 Series Draper Header is compatible with John Deere 60, 70, S, and T Series combines.

4.4.1 Attaching Header to John Deere Combine

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Push the handle (A) on the combine multicoupler receptacle towards the feeder house to retract the pins (B) at the bottom corners of the feeder house. Clean the receptacle.

CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

2. Start the engine and slowly drive the combine up to the header until the feeder house saddle (C) is directly under the float module top cross member (D).
3. Raise the feeder house slightly to lift the header ensuring the feeder house saddle is properly engaged in the float module frame.
4. Stop the engine and remove the key from the ignition.
5. Pull the handle (A) on the float module to release the multicoupler (B) from the storage position. Remove the multicoupler, and push the handle back into the float module to store.

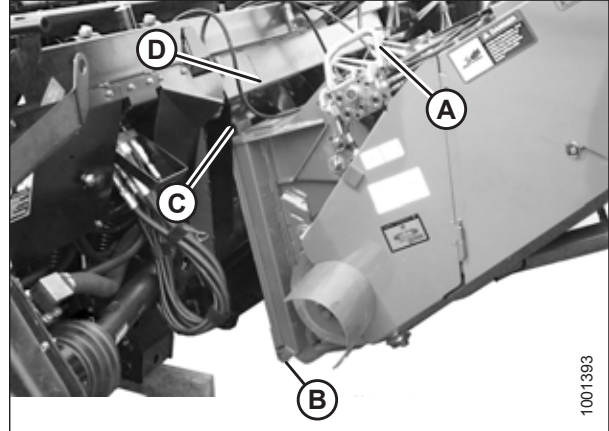


Figure 4.39: Combine and Float Module

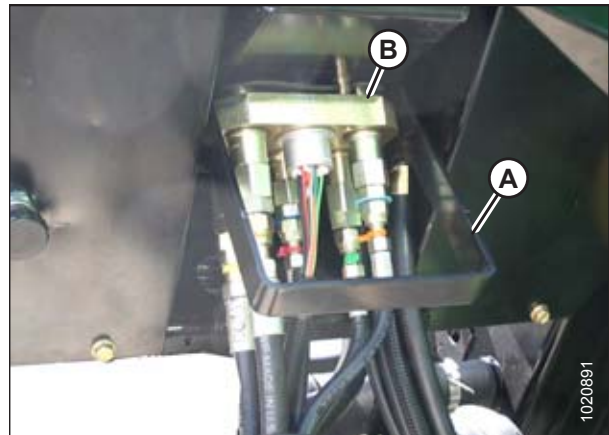


Figure 4.40: Multicoupler Storage

HEADER ATTACHMENT/DETACHMENT

6. Position the multicoupler (A) onto the receptacle, and pull the handle (B) to engage the lugs on the multicoupler into the handle.
7. Pull the handle (B) to a horizontal position and ensure the multicoupler (A) is fully engaged into the receptacle.

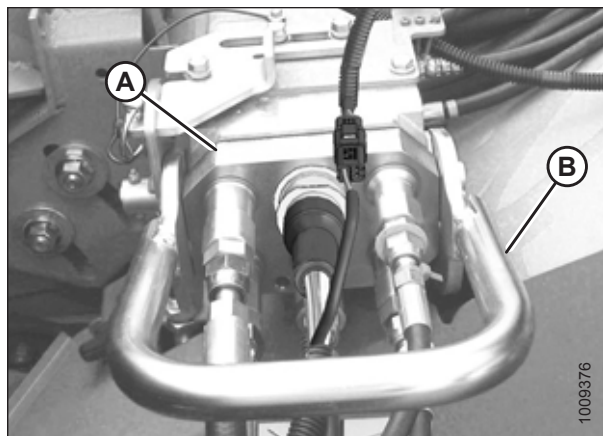


Figure 4.41: Multicoupler

8. Ensure that both feeder house pins (A) are fully engaged into the float module brackets.

NOTE:

If the pins (A) do not fully engage the float module brackets, loosen the bolts (B) and adjust the bracket as required.

9. Tighten bolts (B).

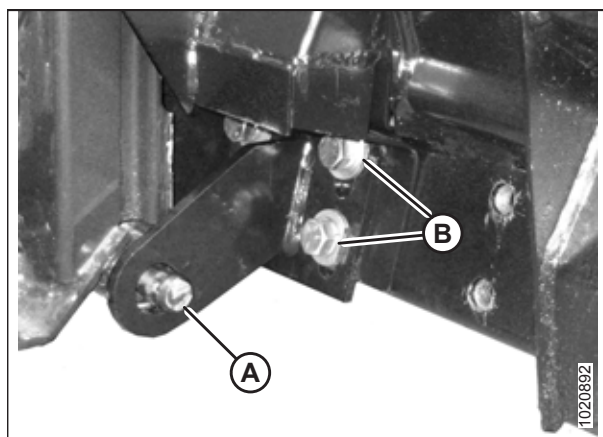


Figure 4.42: Feeder House Pin

10. Slide the latch (A) to lock the handle (B) in position and secure with the lynch pin (C).
11. If the float module is equipped with the reel fore-aft/header tilt selector, connect the harness (D) to the combine connector (E).

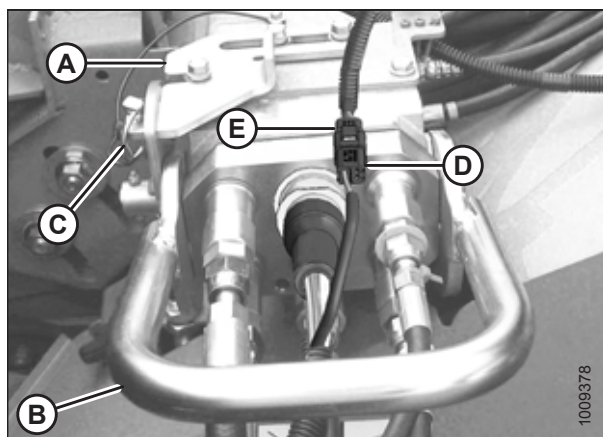


Figure 4.43: Multicoupler

HEADER ATTACHMENT/DETACHMENT

12. Detach safety chain (C) from support bracket (B)
13. Pull collar (D) back to release driveline (A) from support bracket. Remove the driveline from the support bracket.

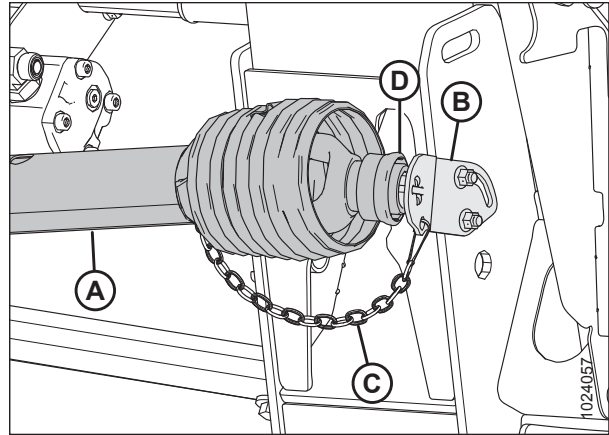


Figure 4.44: Driveline

14. Pull back the collar (A) on the end of the driveline, and push the driveline onto the combine output shaft (B) until the collar locks.

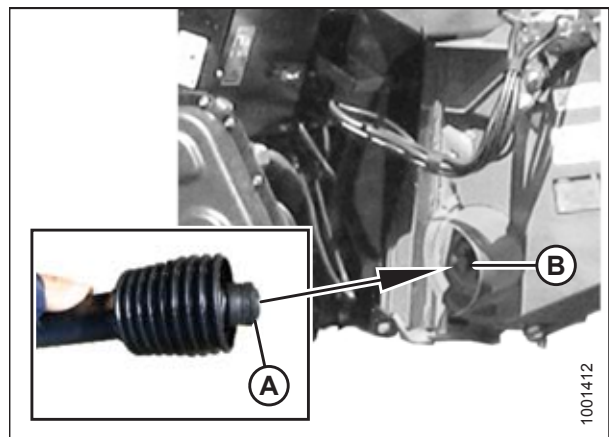


Figure 4.45: Driveline

HEADER ATTACHMENT/DETACHMENT

15. Disengage the float locks by pulling each float lock handle (A) away from the float module, and setting it in the unlocked position (B).

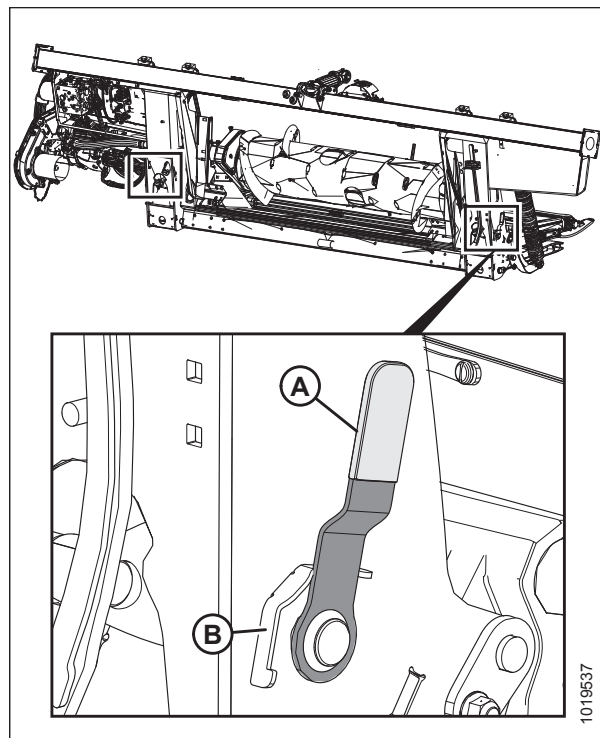


Figure 4.46: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

4.4.2 Detaching Header from John Deere Combine

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Choose a level area and position the header slightly above the ground.
2. Stop the engine and remove the key from the ignition.

IMPORTANT:

If slow speed transport wheels are installed, the header may be detached in either transport or field mode. If detaching with the wheels in field mode, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer / Slow Speed Transport Wheels, page 82](#).

IMPORTANT:

If stabilizer wheels are installed, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer Wheels, page 84](#).

3. Engage the float locks by pulling each float lock handle (A) away from the float module and setting it in the locked position (B).
4. Open the shield (A) on the combine, pull back the collar on the driveline (B), and pull the driveline off the combine output shaft.

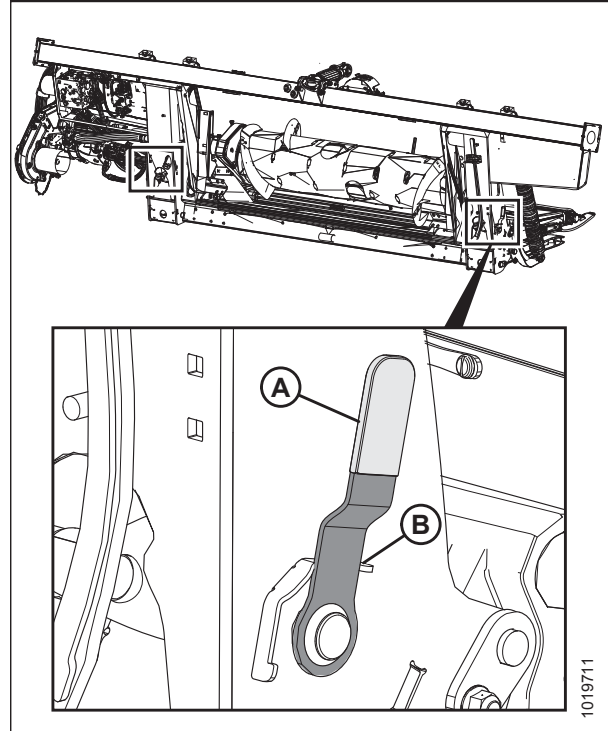


Figure 4.47: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

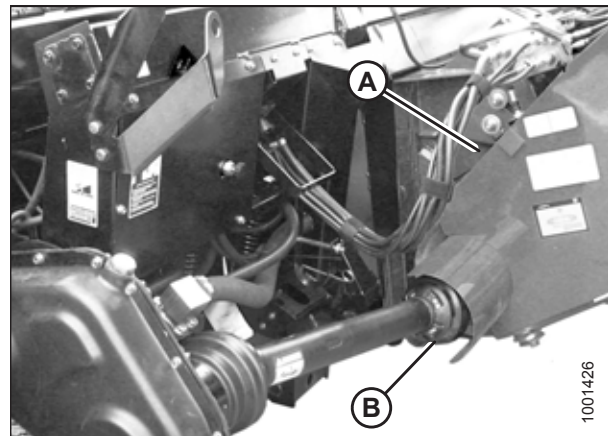


Figure 4.48: Driveline

HEADER ATTACHMENT/DETACHMENT

5. Store the driveline (A) on the driveline support bracket (B) by pulling back the collar (C) on the driveline and fitting it over the support bracket weldment (D). Release the collar so it securely locks into place over the weldment.

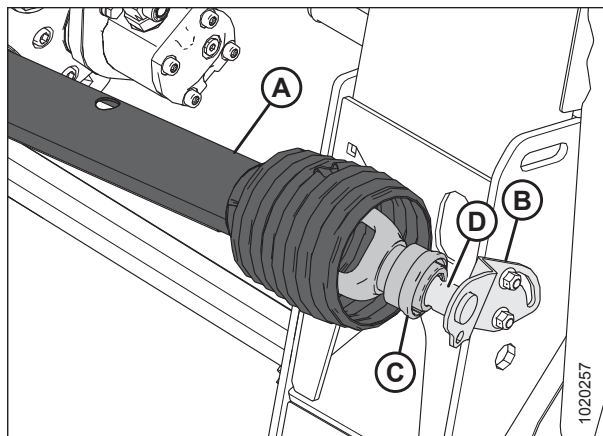


Figure 4.49: Driveline

6. Lift the handle (A) on the float module.

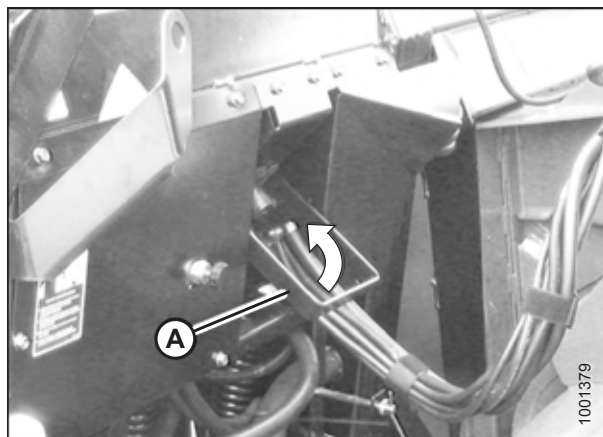


Figure 4.50: Multicoupler Storage

7. Disconnect the harness (A) from the combine connector.
8. Remove the lynch pin (B) and slide the lock (C) to release the handle (D).
9. Lift the handle (D) to full vertical position to release the multicoupler (E) from the combine.

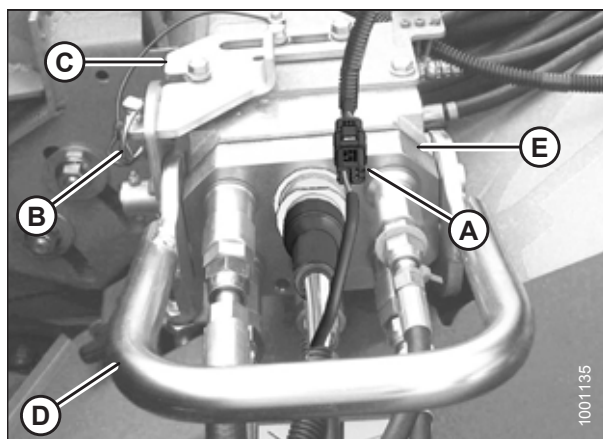


Figure 4.51: Multicoupler

HEADER ATTACHMENT/DETACHMENT

10. Position the multicoupler (A) on the float module receptacle and lower the handle (B) to lock the multicoupler.

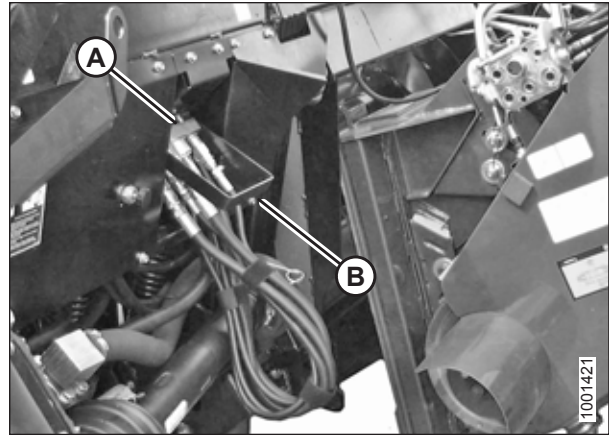


Figure 4.52: Multicoupler Storage

11. Push the handle (A) on the combine towards the feeder house to disengage the feeder house pin (B) from the float module.

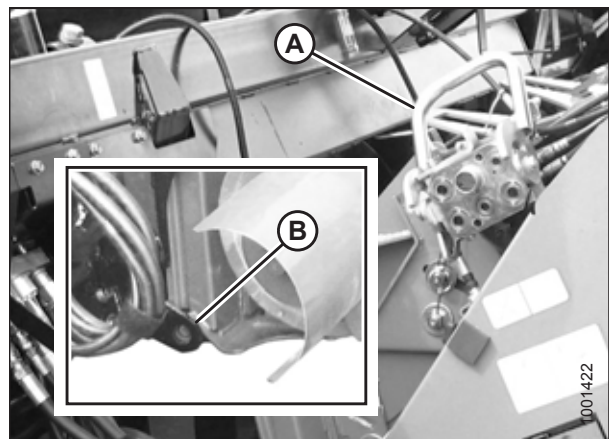


Figure 4.53: Feeder House Locks

12. Lower the feeder house until the saddle (A) disengages and clears the float module support (B).
13. Back the combine away slowly from the float module.

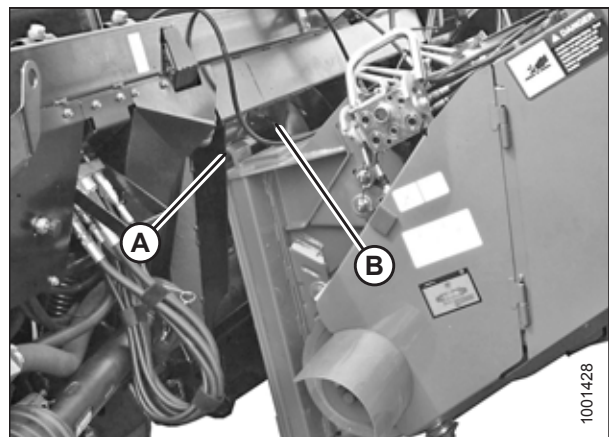


Figure 4.54: Header/Feeder House

4.5 CLAAS Combines

The D1 Series Draper Header is compatible with CLAAS 500, 600, and 700 Series combines.

4.5.1 Attaching Header to CLAAS Combine

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Move the handle (A) on the FM100 Float Module into the raised position, and ensure the pins (B) at the bottom corners of the float module are retracted.

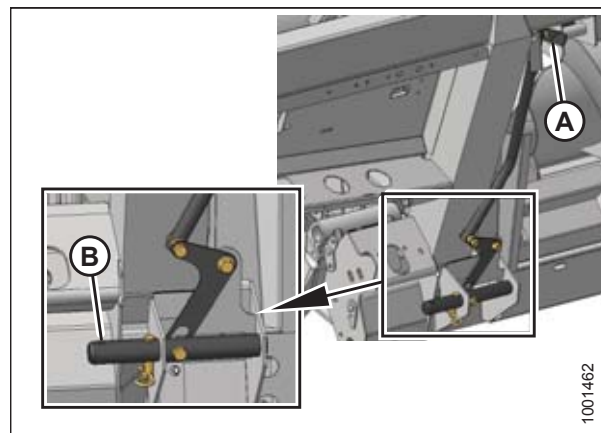


Figure 4.55: Pins Retracted

CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

2. Start the engine and slowly drive the combine up to the header until the feeder house saddle (A) is directly under the float module top cross member (B).
3. Raise the feeder house slightly to lift the header ensuring the feeder saddle is properly engaged in the float module frame.
4. Stop the engine and remove the key from the ignition.

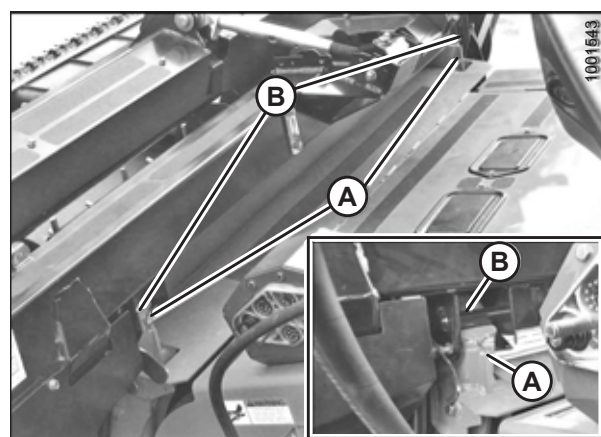


Figure 4.56: Header on Combine

HEADER ATTACHMENT/DETACHMENT

5. Remove the locking pin (B) from the float module pin (A).

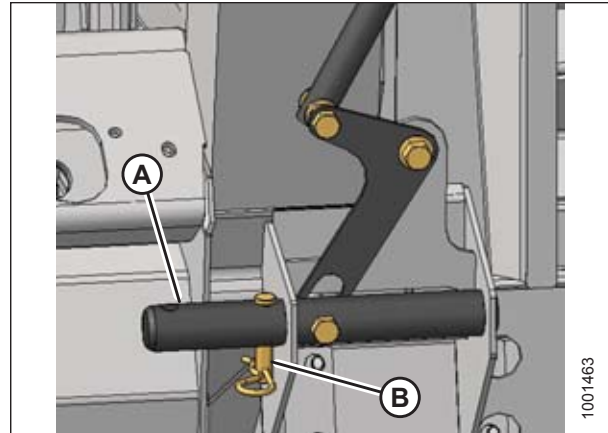


Figure 4.57: Locking Pins

6. Lower the handle (A) to engage the float module pins (B) into the feeder house. Reinsert the locking pin (C) and secure with the hairpin.
7. Stop the engine and remove the key from the ignition.

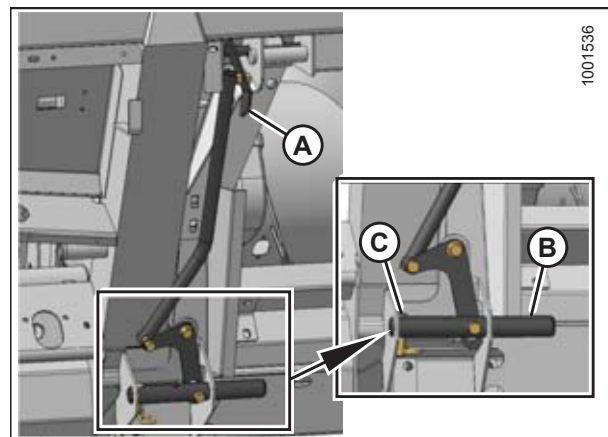


Figure 4.58: Engaging Pins

8. Unscrew the knob (A) on the combine coupler (B) to release the coupler from the combine receptacle and clean the coupler.

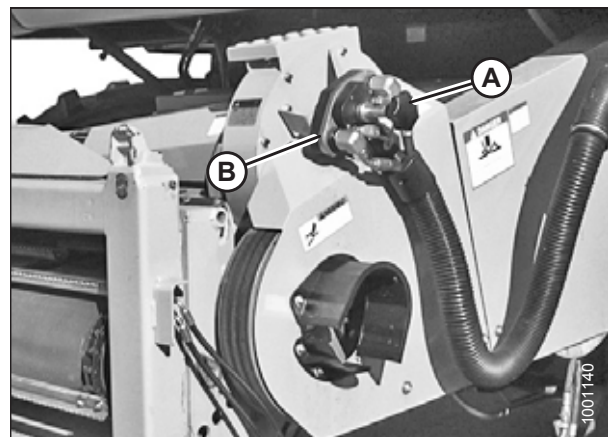


Figure 4.59: Combine Coupler

HEADER ATTACHMENT/DETACHMENT

9. Place the float module receptacle cover (A) onto the combine receptacle.

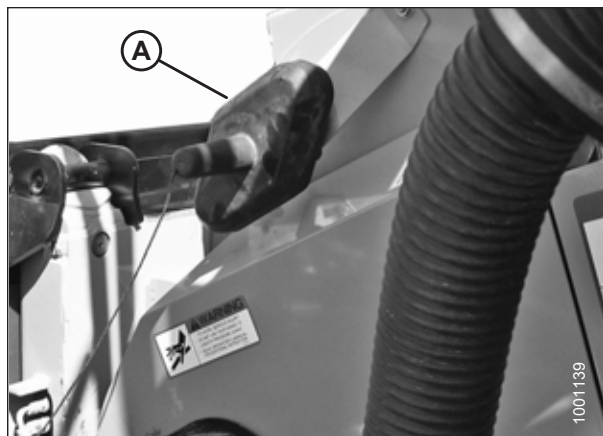


Figure 4.60: Receptacle Cover

10. Clean the mating surface of the coupler (A) and position onto the float module receptacle (B).
11. Turn the knob (C) to secure the coupler to the receptacle.

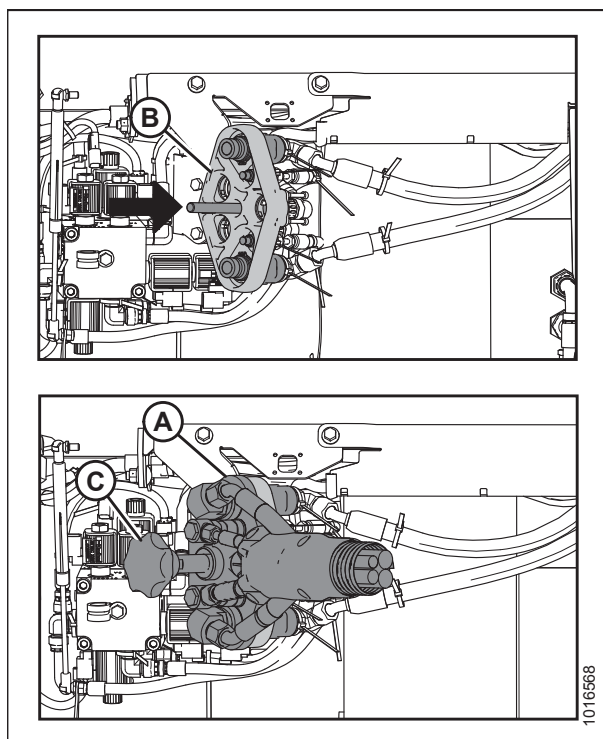


Figure 4.61: Coupler

HEADER ATTACHMENT/DETACHMENT

12. Detach safety chain (C) from support bracket (B).
13. Pull collar (D) back to release driveline (A) from support bracket. Remove the driveline from the support bracket.

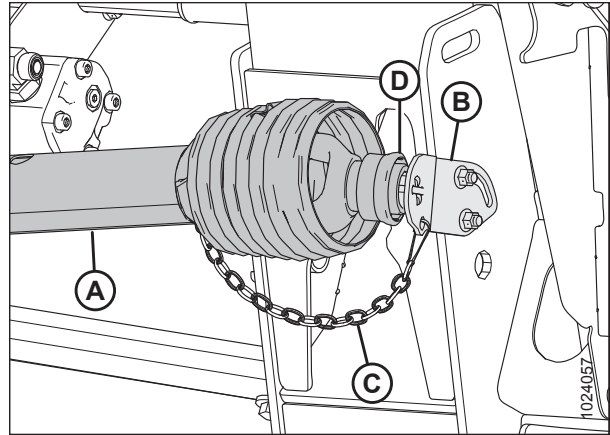


Figure 4.62: Driveline

14. Attach the driveline (A) to the combine output shaft.

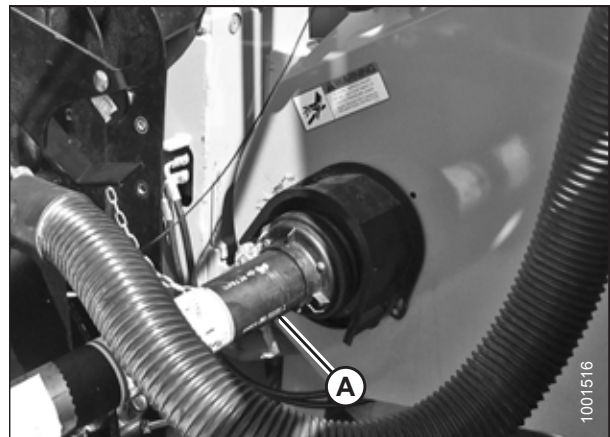


Figure 4.63: Driveline and Output Shaft

HEADER ATTACHMENT/DETACHMENT

15. Disengage both header float locks by pulling each float lock handle (A) away from the float module and setting it in the unlocked position (B).

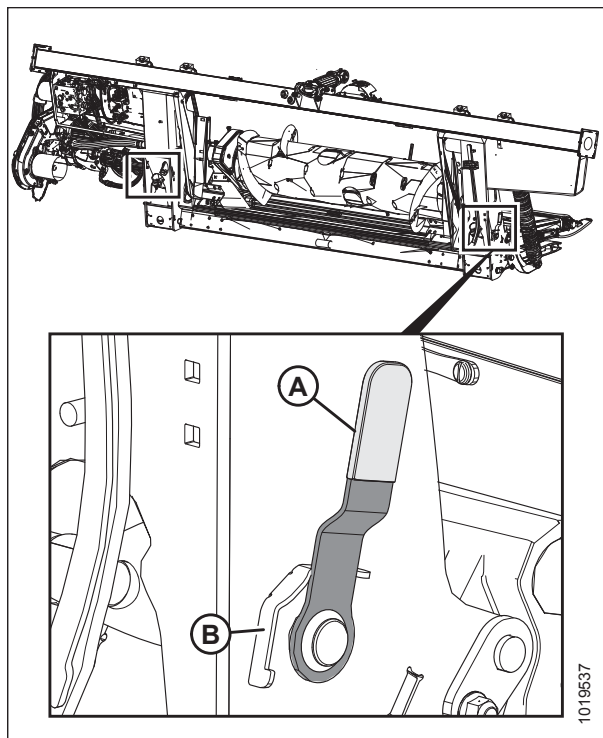


Figure 4.64: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

4.5.2 Detaching Header from CLAAS Combine

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Choose a level area and position the header slightly above the ground.
2. Stop the engine and remove the key from the ignition.

IMPORTANT:

If slow speed transport wheels are installed, the header may be detached in either transport or field mode. If detaching with the wheels in field mode, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer / Slow Speed Transport Wheels](#), page 82.

IMPORTANT:

If stabilizer wheels are installed, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer Wheels](#), page 84.

3. Engage the float locks by pulling each float lock handle (A) away from the float module and setting it in the locked position (B).
4. Disconnect the driveline (A) from the combine.

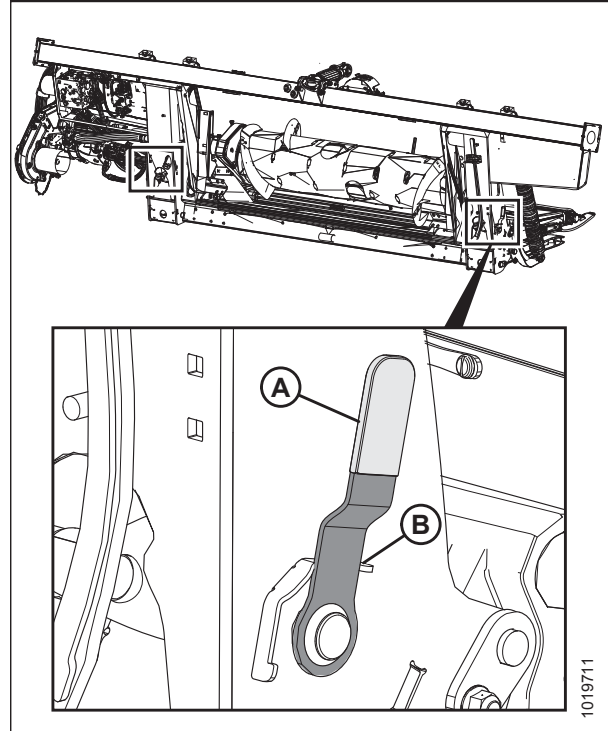


Figure 4.65: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

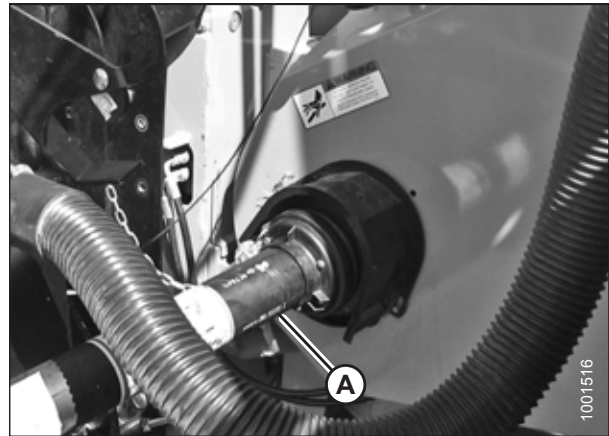


Figure 4.66: Driveline

HEADER ATTACHMENT/DETACHMENT

5. Store the driveline (A) on the driveline support bracket (B) by pulling back the collar (C) on the driveline and fitting it over the support bracket weldment (D). Release the collar so it securely locks into place over the weldment.

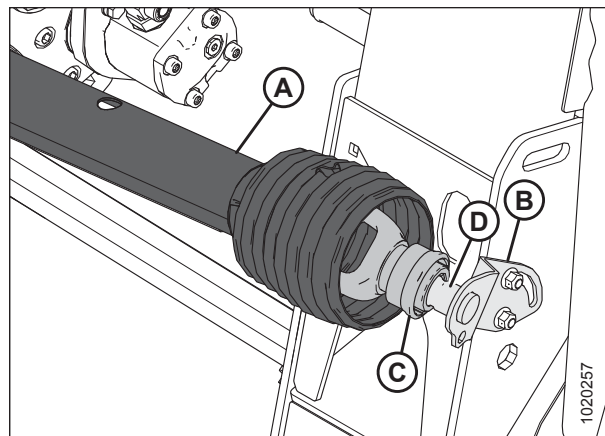


Figure 4.67: Driveline

6. Remove the cover (A) from the combine receptacle.

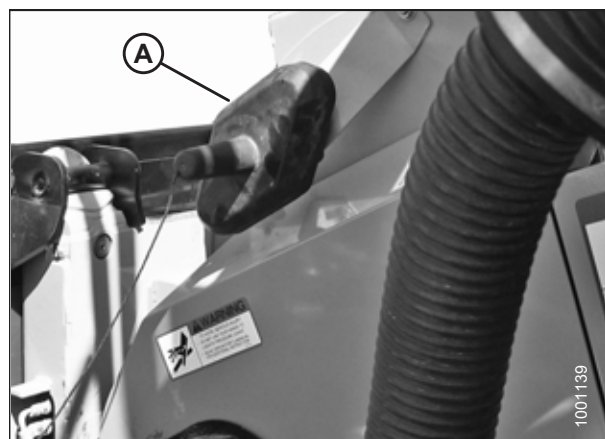


Figure 4.68: Cover

7. Position the coupler (A) onto the combine receptacle, and turn the knob (B) to secure the coupler to the receptacle.

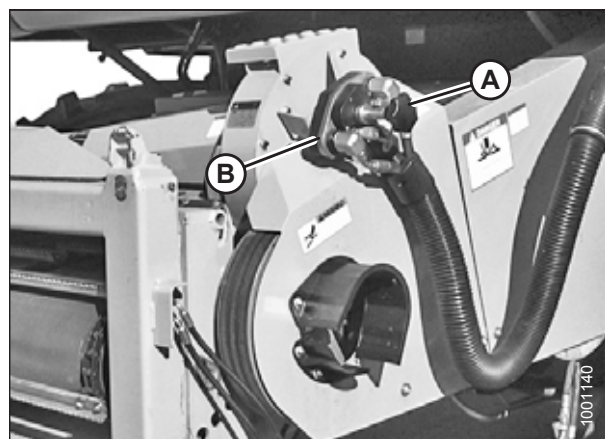


Figure 4.69: Combine Coupler

HEADER ATTACHMENT/DETACHMENT

8. Place the cover (A) on the float module receptacle.

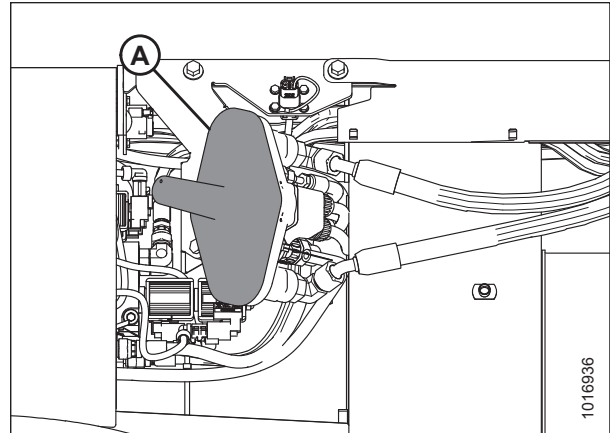


Figure 4.70: Float Module

9. Remove the locking pin (A) from the float module pin (B).
10. Raise the handle (C) to disengage the float module pins (B) from the feeder house.
11. Replace the locking pin (A) in the float module pin, and secure with the hairpin.

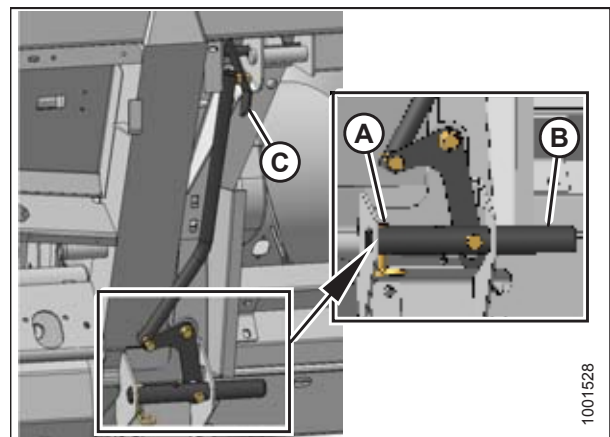


Figure 4.71: Feeder House Locks

12. Lower the feeder house until the feeder house posts (A) disengage the float module (B).
13. Back the combine away slowly from the float module.

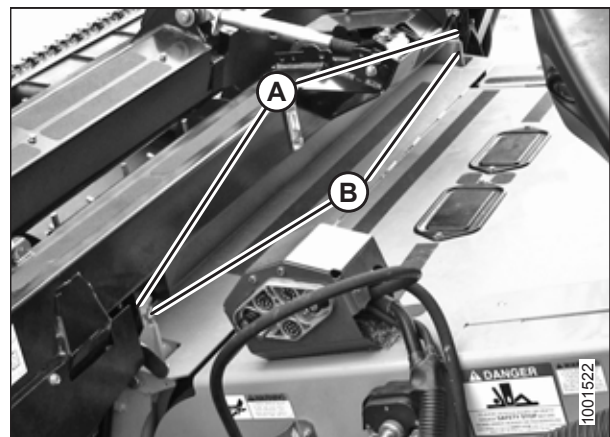


Figure 4.72: Header on Combine

4.6 New Holland Combines

The D1 Series Draper Header is compatible with the following New Holland combines:

Series	Combine Model
CR	920, 940, 960, 970, 980
	9020, 9040, 9060, 9065, 9070, 9080
	6090, 7090, 8080, 8090, 9090
	6.80, 6.90, 7.90, 8.90, 9.90, 10.90
CX	840, 860, 870, 880
	8070, 8080, 8090
	8080 Elevation, 8090 Elevation

4.6.1 Attaching Header to New Holland CR/CX Combine

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Ensure the handle (A) is positioned so the hooks (B) can engage the float module.

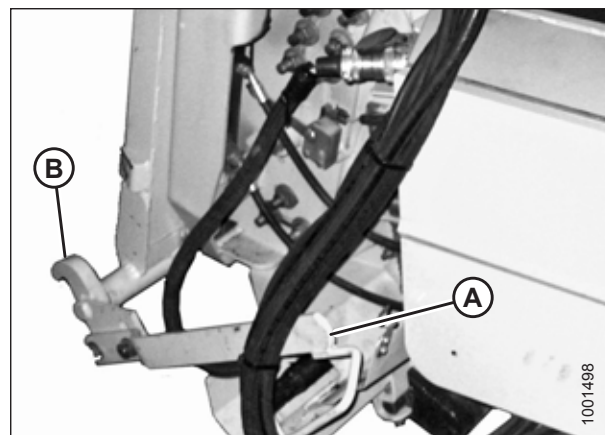


Figure 4.73: Feeder House Locks

HEADER ATTACHMENT/DETACHMENT

CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

2. Start the engine and slowly drive the combine up to the float module until the feeder house saddle (A) is directly under the float module top cross member (B).
3. Raise the feeder house slightly to lift the header, ensuring the feeder saddle is properly engaged in the float module frame.
4. Stop the engine and remove the key from the ignition.
5. Lift lever (A) on the float module on the left side of the feeder house, and push the handle (B) on the combine to engage the locks (C) on both sides of the feeder house.
6. Push down on the lever (A) so the slot in the lever engages the handle and locks the handle in place.
7. If the lock does not fully engage the pin (D) on the float module when the lever (A) and handle (B) are engaged, loosen bolts (E) and adjust the lock (C). Retighten bolts.
8. Open the cover on the receptacle (A) located on the left side of the float module.
9. Push in the lock button (B) and pull the handle (C) to the full open position.
10. Clean the receptacle mating surfaces.

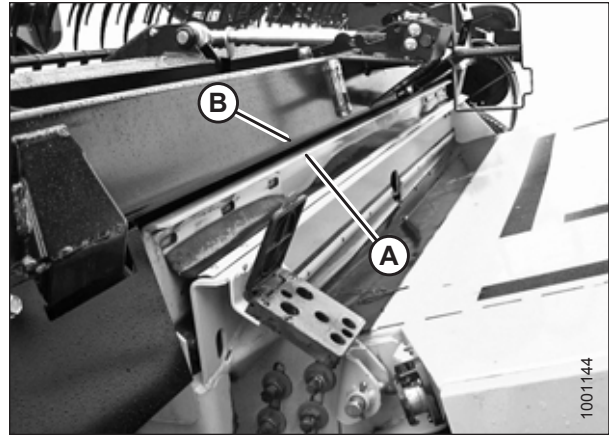


Figure 4.74: Header on Combine

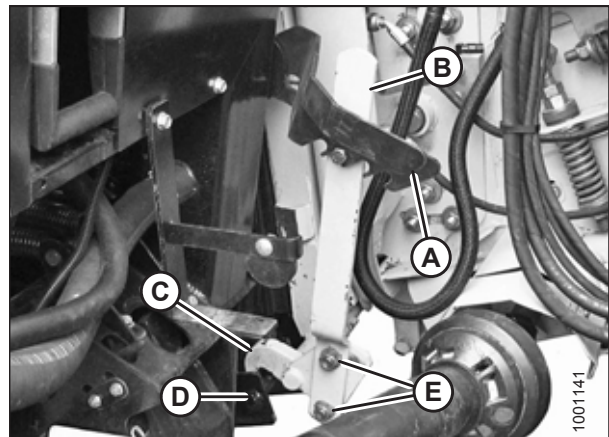


Figure 4.75: Feeder House Locks

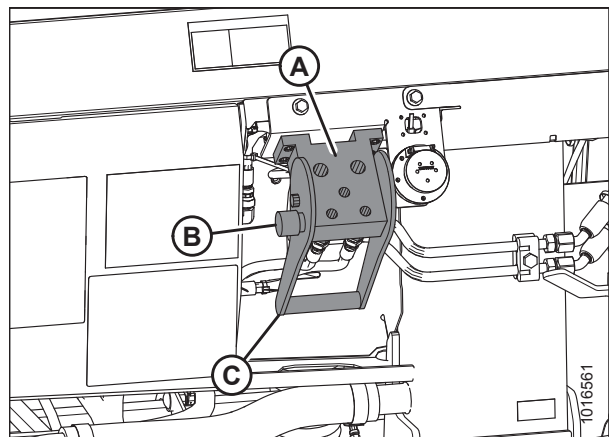


Figure 4.76: Float Module Receptacle

HEADER ATTACHMENT/DETACHMENT

11. Remove the hydraulic quick coupler (A) from the storage plate on the combine, and clean the mating surface of the coupler.

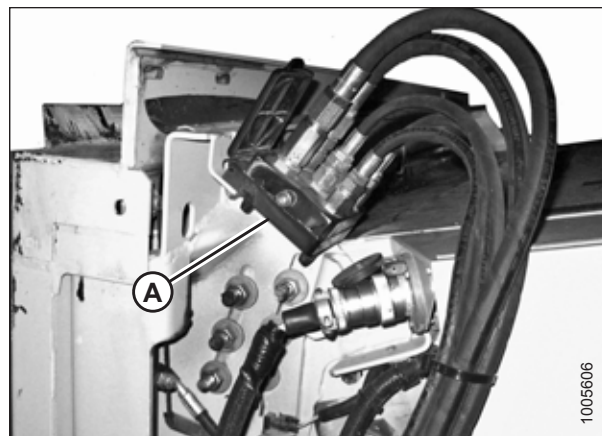


Figure 4.77: Combine Coupler

12. Position the coupler (A) onto the float module receptacle, and push the handle (B) to engage the pins into the receptacle.
13. Push the handle (B) to closed position until the lock button (C) snaps out.
14. Remove the cover on the float module electrical receptacle.
15. Remove the connector (D) from the combine.
16. Align the lugs on the connector (D) with the slots in the float module receptacle, and push the connector onto the receptacle. Turn the collar on the connector to lock it in place.

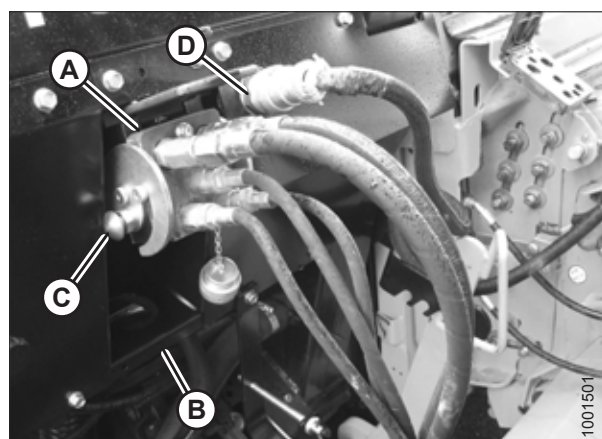


Figure 4.78: Connections

17. Detach safety chain (C) from support bracket (B).
18. Pull collar (D) back to release driveline (A) from support bracket. Remove the driveline from support bracket.

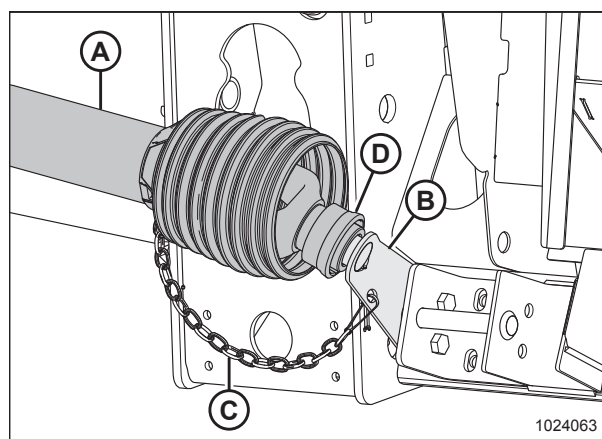


Figure 4.79: Driveline in Storage Position

HEADER ATTACHMENT/DETACHMENT

19. Pull back the collar on the end of the driveline, and push the driveline onto the combine output shaft (A) until the collar locks.

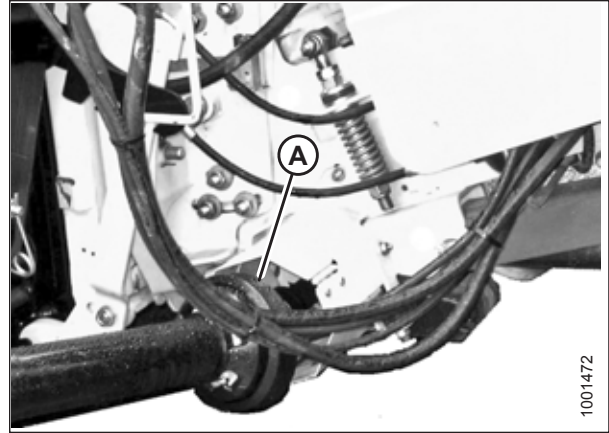


Figure 4.80: Driveline and Output Shaft

20. Disengage the float locks by pulling each float lock handle (A) away from the float module and setting it in the unlocked position (B).

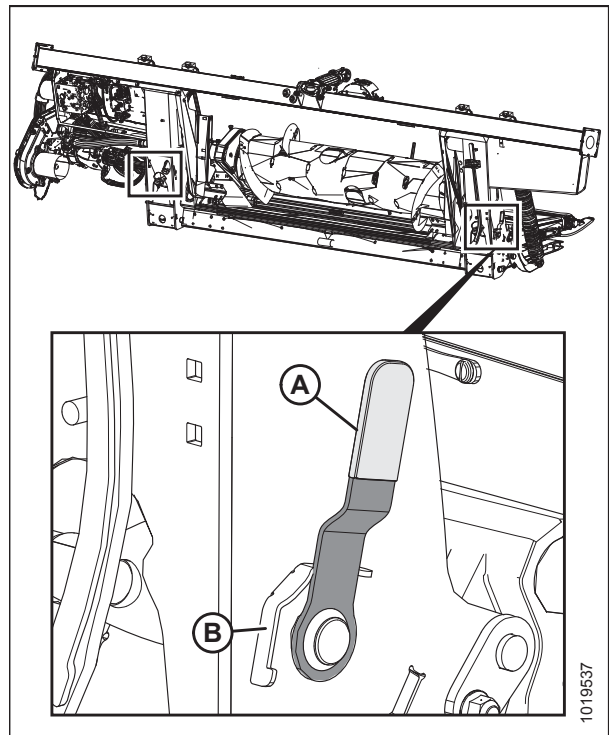


Figure 4.81: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

4.6.2 Detaching Header from New Holland CR/CX Combine

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Choose a level area and position the header slightly above the ground.
2. Stop the engine and remove the key from the ignition.

IMPORTANT:

If slow speed transport wheels are installed, the header may be detached in either transport or field mode. If detaching with the wheels in field mode, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer / Slow Speed Transport Wheels, page 82](#).

IMPORTANT:

If stabilizer wheels are installed, set the wheels to the storage or uppermost working position, otherwise the header may tilt forward, making reattachment difficult. Refer to [Adjusting Stabilizer Wheels, page 84](#).

3. Engage the float locks by pulling each float lock handle (A) away from the float module and setting it in the locked position (B).

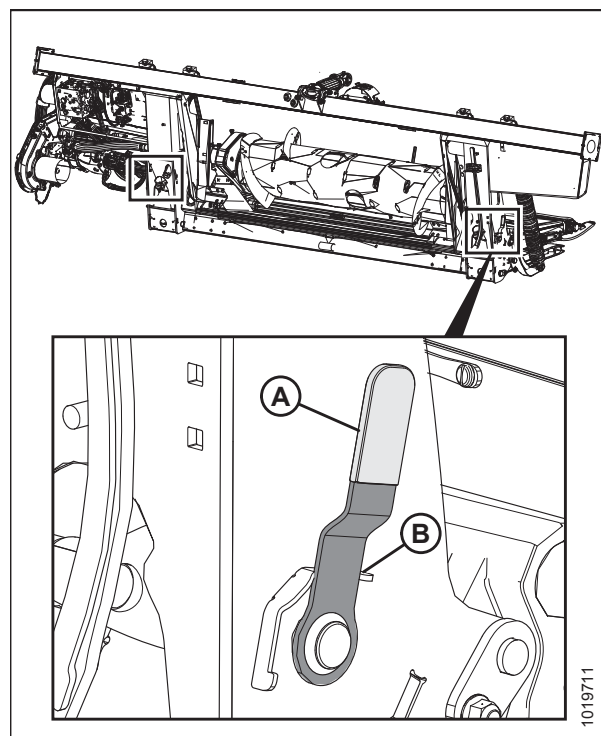


Figure 4.82: Float Lock Handle (Right Side Shown in Detail, Left Side Opposite)

4. Disconnect the driveline (A) from the combine.

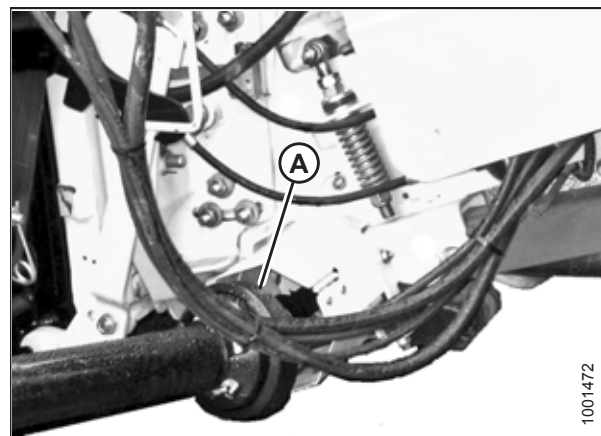


Figure 4.83: Driveline

HEADER ATTACHMENT/DETACHMENT

5. Store the driveline (A) on the driveline support bracket (B) by pulling back the collar (C) on the driveline and fitting it over the support bracket weldment (D). Release the collar so it securely locks into place over the weldment.
6. Attach safety chain (E) to support bracket (B).

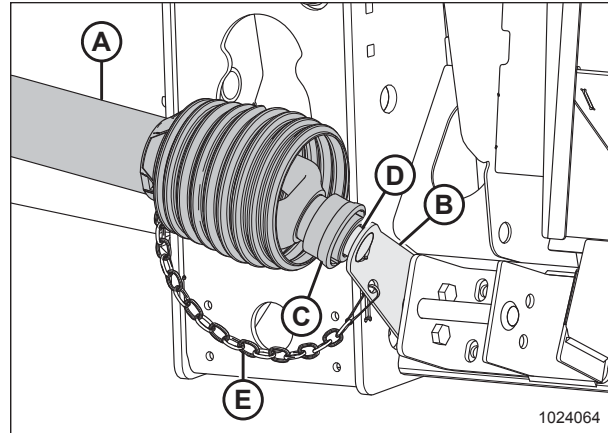


Figure 4.84: Driveline

7. Push in the lock button (B), and pull the handle (C) to release the multicoupler (A).

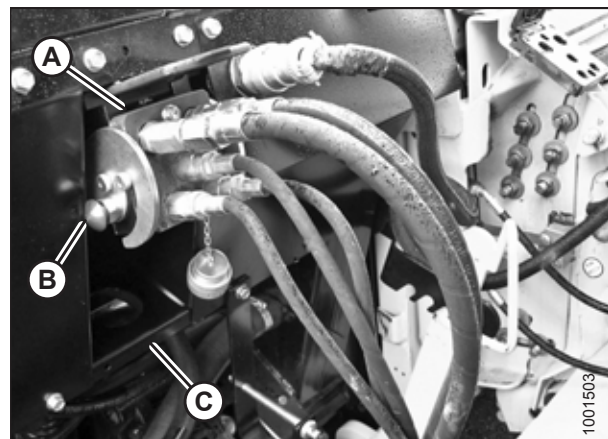


Figure 4.85: Float Module Connections

8. Push the handle (A) to the closed position until the lock button (B) snaps out. Close the cover.

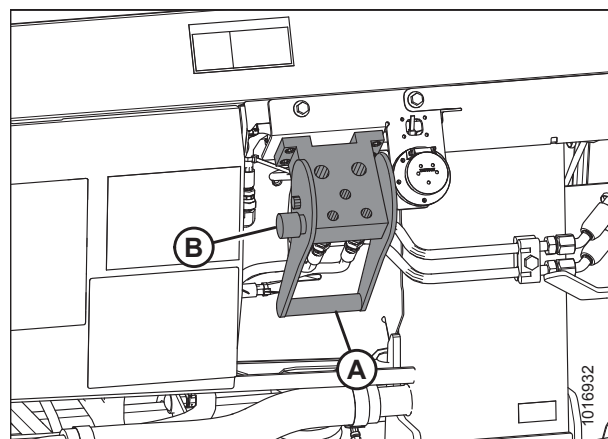


Figure 4.86: Float Module Receptacles

HEADER ATTACHMENT/DETACHMENT

9. Position the hydraulic quick coupler (A) onto the storage plate (B) on the combine.

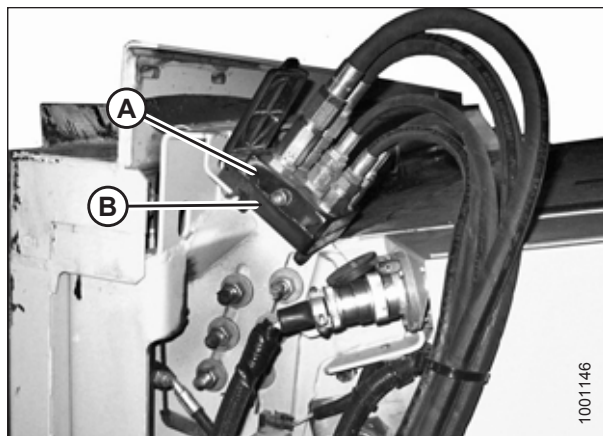


Figure 4.87: Combine Coupler

10. Remove the electrical connector (A) from the float module.

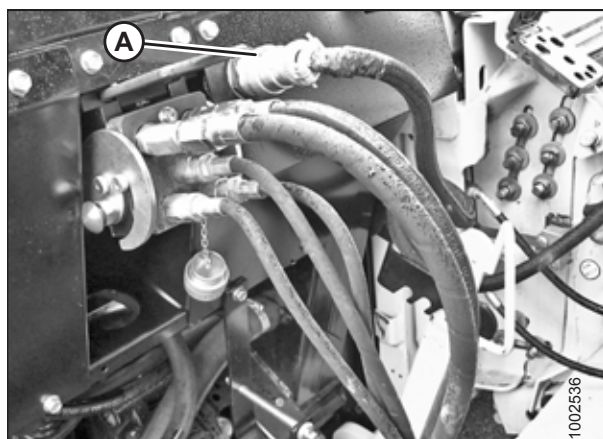


Figure 4.88: Float Module Connections

11. Connect the electrical connector to the combine at location (A).

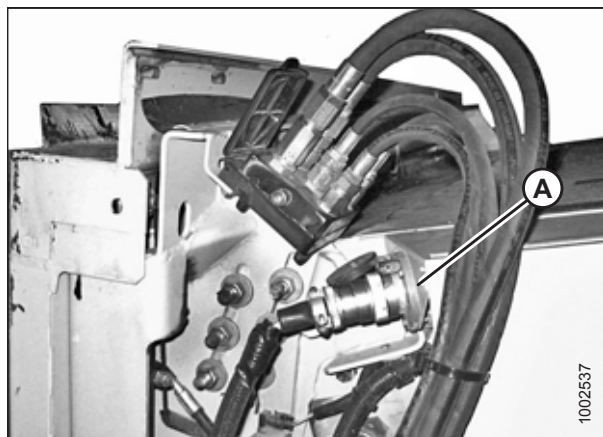


Figure 4.89: Combine Couplers

HEADER ATTACHMENT/DETACHMENT

12. Replace the cover (A) on the float module receptacle.

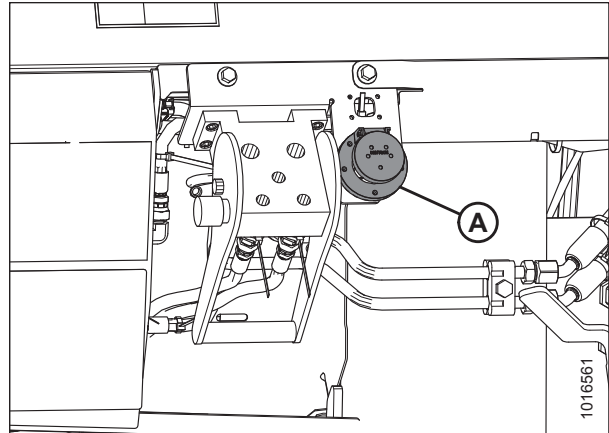


Figure 4.90: Float Module Receptacles

13. Lift the lever (A) and pull and lower the handle (B) to disengage the feeder house/float module lock (C).

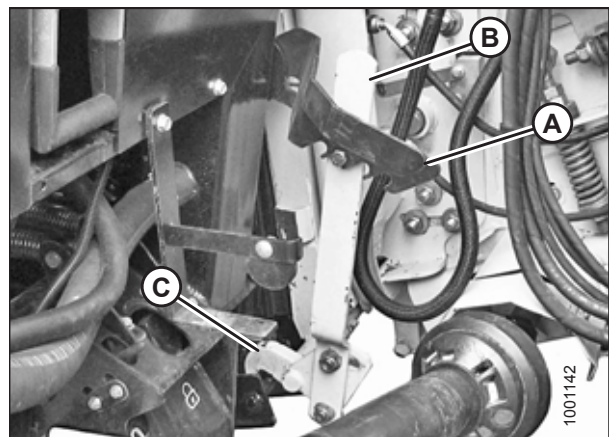


Figure 4.91: Feeder House Locks

14. Lower the feeder house (A) until the feeder house disengages the float module support (B).
15. Back the combine slowly away from the header.

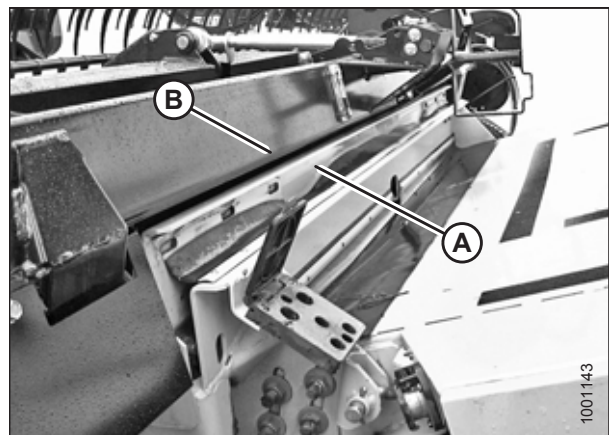


Figure 4.92: Header on Combine

4.6.3 CR Feeder Deflectors

For New Holland combines only: Short feeder deflectors have been factory-installed on the float module to improve feeding into the feeder house. Remove the feeder deflectors if necessary. Refer to [5.11.3 Replacing Feed Deflectors on New Holland CR Combines, page 473](#).

Long feeder kits are provided for narrow feeder house combines and can be installed to replace the short feeder deflectors.

Feeder House Size	Feeder Kit Size	MacDon Part Number
1250–1350 mm (49–65 in.)	Short: 200 mm (7-7/8 in.)	MD #213613, 213614
1100 mm (43-1/2 in.) and below	Long: 325 mm (12-13/16 in.)	MD #213592, 213593

HEADER ATTACHMENT/DETACHMENT

4.7 Attaching and Detaching Header from Float Module

Attaching/detaching procedures are the same for all makes and models of combines. Headers can be attached to the float module from either field or transport configurations.

The procedures in this manual require that the float module remains attached to the combine. Attach/detach the float module only if performing the following tasks:

- Detaching the header for use on a windrower
- Changing headers
- Performing certain maintenance tasks

4.7.1 Attaching Header to Float Module

D1 Series headers can be attached to the float module from either field or transport configuration.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

NOTE:

Stabilizer / slow speed transport wheels can be used to support the header. Refer to [Adjusting Stabilizer / Slow Speed Transport Wheels, page 82](#).

1. Prop up the hydraulic center-link (A) with a pin (or equivalent tool) at location (B) as shown.

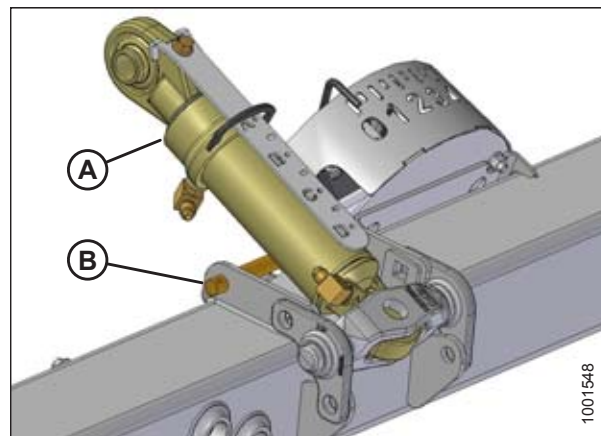


Figure 4.93: Center-Link

HEADER ATTACHMENT/DETACHMENT

2. Remove ring (A) from pin (B), and remove the pins from the header legs at the delivery opening.

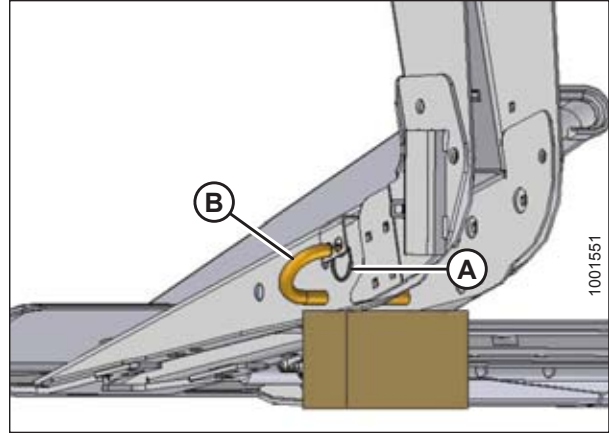


Figure 4.94: D1 Series Combine Header – Block under Leg

3. Ensure the latches (A) at the front corners of the float module are rotated towards the rear of the float module.

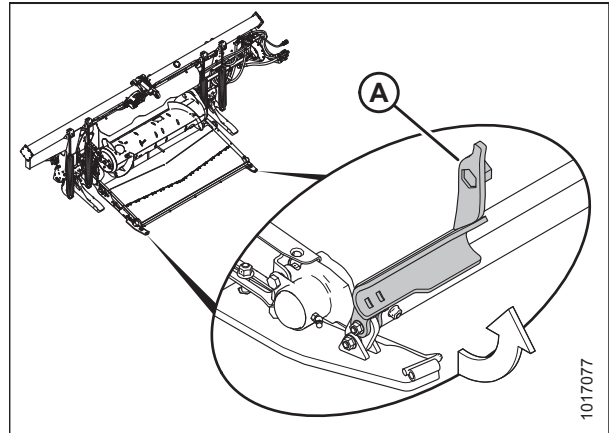


Figure 4.95: Latch

CAUTION

Be sure all bystanders are clear of machine before starting engine or engaging any header drives.

4. Start the engine, and lower the combine feeder house so the float module arms (A) are aligned with the header legs (B).
5. Drive slowly forward while maintaining alignment between the float module arms (A) and the header legs (B).
6. Keep the float module arms (A) just under the header legs (B) to ensure the float module legs seat properly in the header linkage supports at location (C).

IMPORTANT:

Keep the hydraulic hoses clear to prevent damaging them while driving into the header.

7. Drive slowly forward until the float module arms (A) contact the stops in the legs (C).

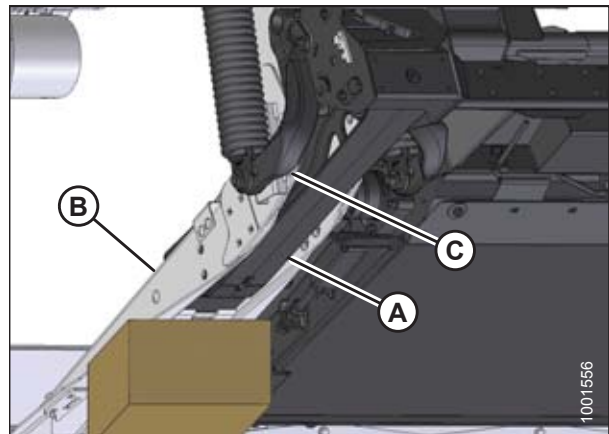


Figure 4.96: Float Module Underside

HEADER ATTACHMENT/DETACHMENT

8. Adjust the length of the center-link (A) using the header angle hydraulics to approximately align the center-link eye (B) with the hole in the header bracket.
9. Shut down the engine and remove the key from the ignition.

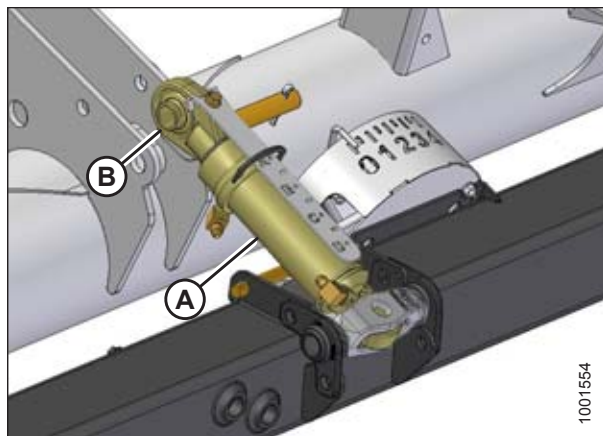


Figure 4.97: Center-Link

10. Connect the center-link as follows:
 - a. Pull pin (B) part way out of the bracket (C), and remove the prop from under the center-link (A).
 - b. Install the pin (B) through the center-link bracket (C), and secure with lynch pin.



CAUTION

Always connect center-link before fully raising header.

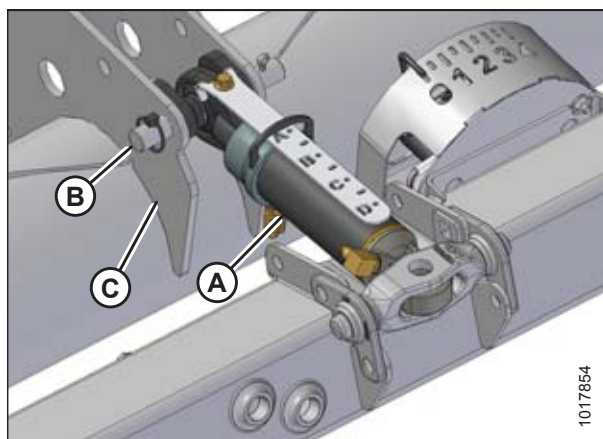


Figure 4.98: Center-Link



CAUTION

Be sure all bystanders are clear of machine before starting engine or engaging any header drives.

11. Start the engine and slowly raise the float module while making sure the float module legs engage the header legs.
12. Raise the header to its full height, stop the engine, and remove the key from the ignition.
13. Engage the safety props on the combine.

HEADER ATTACHMENT/DETACHMENT

14. Replace the pin (B) in the header legs and secure with ring (A).

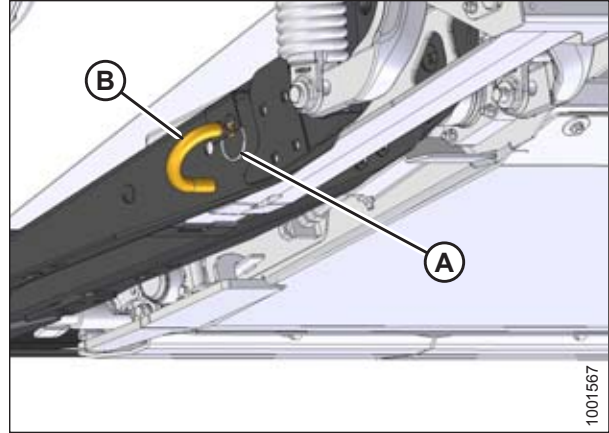


Figure 4.99: Header Leg

15. Match the colored cable ties and connect the reel hydraulics (A) at the right end of the float module.

NOTE:

If optional multicoupler is installed for reel hydraulics, raise handle on float module, and place coupler on float module receptacle. Lower handle to lock coupler.

CAUTION

Be sure all bystanders are clear of machine before starting engine or engaging any header drives.

16. Remove the lift cylinder locks, start the engine, and lower the header to the ground. Adjust the header angle to the steepest setting (longest center-link).
17. Raise the reel to its full height.
18. Shut down the engine and remove the key from the ignition.
19. Engage the reel safety props.

WARNING

Keep hands clear of the area between guards and knife at all times.

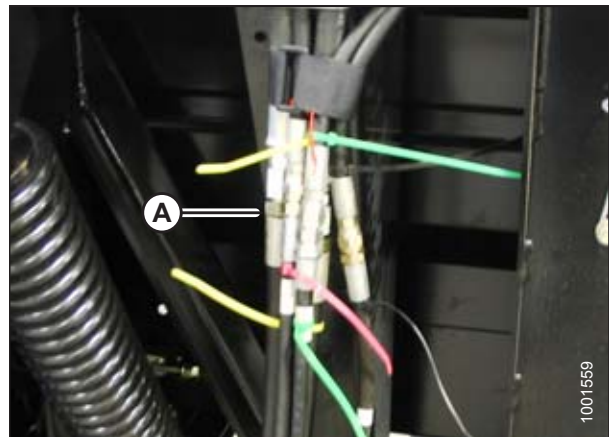


Figure 4.100: Reel Hydraulics

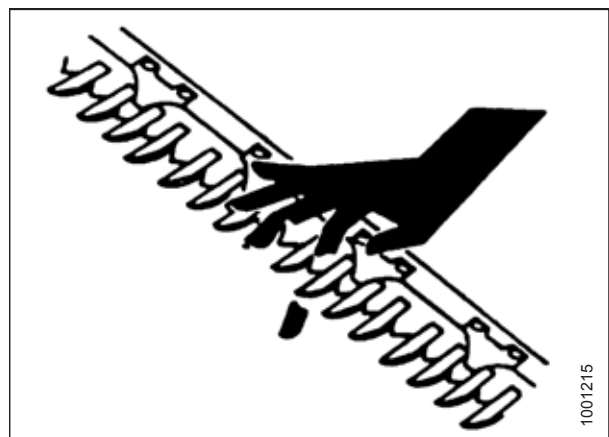


Figure 4.101: Cutterbar Hazard

HEADER ATTACHMENT/DETACHMENT

20. Remove screw (A) and remove nut and bolt (B) from both sides of the opening to allow the attachment of the float module deck.
21. Rotate the latch (C) forward and down to engage the transition pan tube.

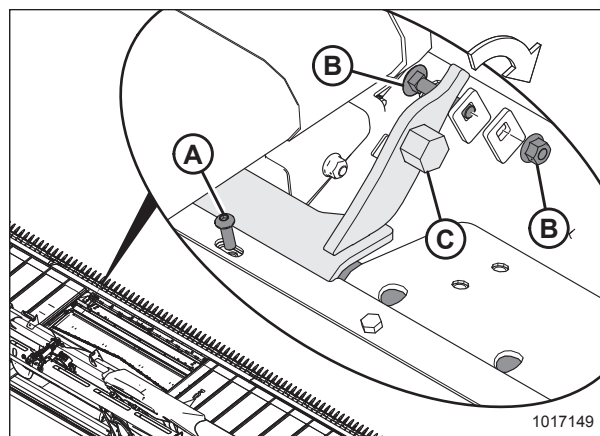


Figure 4.102: Float Module Latch

22. Use a 24 mm (15/16 in.) wrench on hex bolt (C) to rotate latch downwards and slightly raise the feed deck. Install nut and bolt (B) to lock the latch position.
23. Install screw (A).
24. Repeat for the opposite side of the feed draper deck.

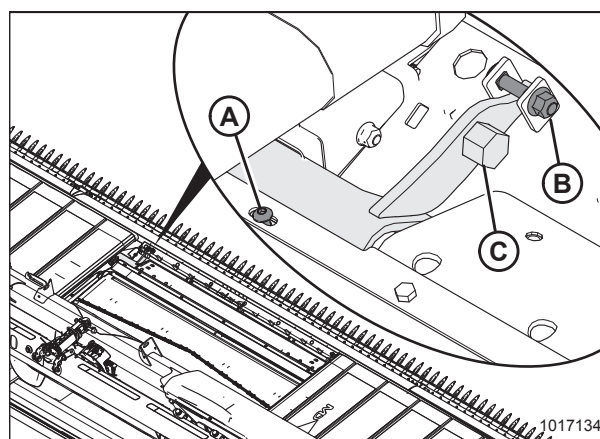


Figure 4.103: Float Module Latch

25. Install fillers (B) on the transition pan support angle (C) using two bolts (A).

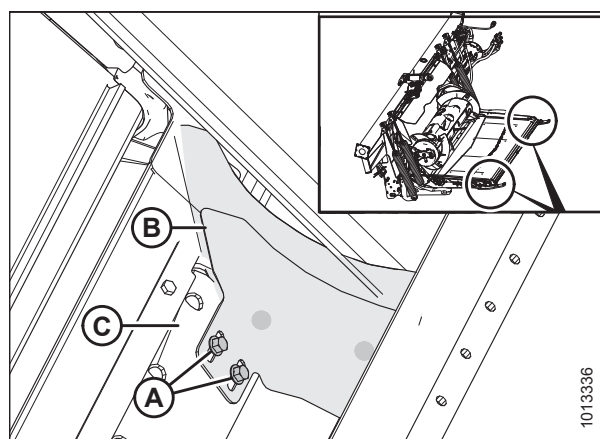


Figure 4.104: Fillers

HEADER ATTACHMENT/DETACHMENT

26. Match the colored cable ties, and connect the knife and draper drive hydraulics (A).

27. Attach the electrical connector (B) as follows:

- Remove the cover on the receptacle. Ensure it is clean and damage free.
- Align the lugs on the connector with the slots in the receptacle, push the connector onto the receptacle, and turn the collar on the connector to lock it in place.
- Attach the cover to the mating cover on the combine wiring harness.

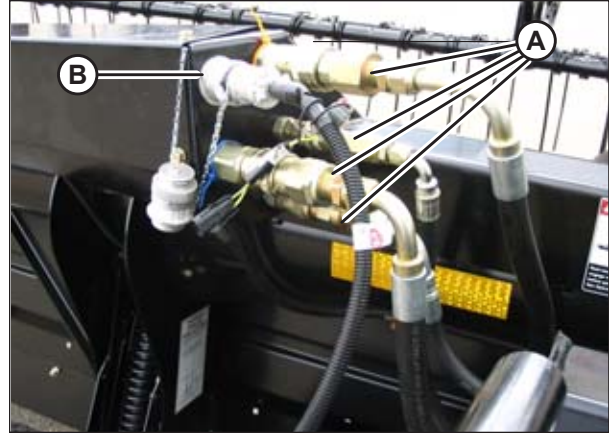


Figure 4.105: Header Connections

28. Connect the quick disconnects (if installed) as follows:

- Remove the covers (if installed) from the receptacles and hose ends.
- Check the connectors and clean if necessary.
- Push the hose connector (A) onto the mating receptacle (B) until the collar on the mating receptacle snaps into the lock position.

NOTE:

Ensure the hoses are clear of the driveline and adjacent structure.

NOTE:

It is not necessary to bleed the system by loosening fittings.

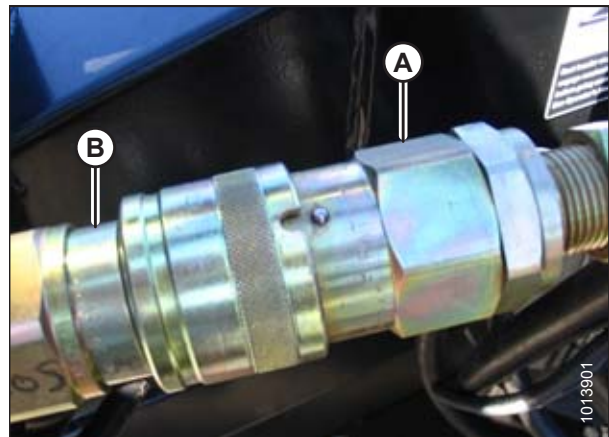


Figure 4.106: Quick Disconnect Coupling

29. Check the float and confirm the header is level. Refer to the following:

- [Checking and Adjusting Header Float, page 87](#)
- [3.9 Leveling the Header, page 288](#)



CAUTION

Be sure all bystanders are clear of machine before starting engine or engaging any header drives.

30. Start the combine and perform the following inspections:

- Raise and lower the reel to ensure the hoses are properly connected.
- Run the header to ensure the hoses are properly connected.

31. Check for leaks.

4.7.2 Detaching Header from Float Module



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

HEADER ATTACHMENT/DETACHMENT

WARNING

Keep hands clear of the area between guards and knife at all times.

CAUTION

Wear heavy gloves when working around or handling knives.

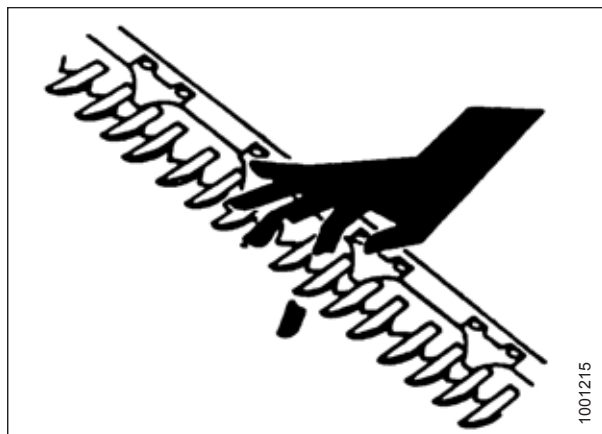


Figure 4.107: Cutterbar Hazard

1. Start the engine and the lower header.
2. Increase clearance under the float module feed draper by tilting the header and fully extending the cylinder (B) until indicator (A) is at position **D**.
3. Raise the reel to its full height.
4. Stop the engine and the remove key from the ignition.
5. Engage the reel safety props.

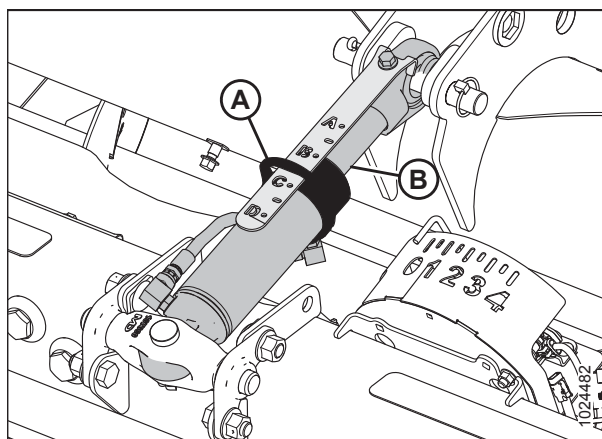


Figure 4.108: Center-Link

6. Move lever (A) to lock position to engage wing locks.

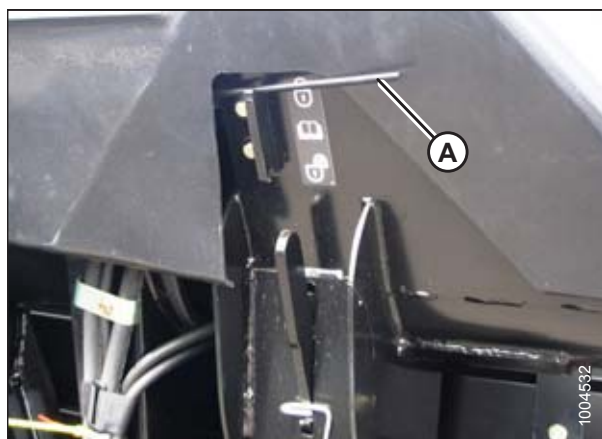


Figure 4.109: Wing Lock

HEADER ATTACHMENT/DETACHMENT

- Engage the float locks by pulling each float lock handle (A) away from the float module and setting it in the locked position (B).

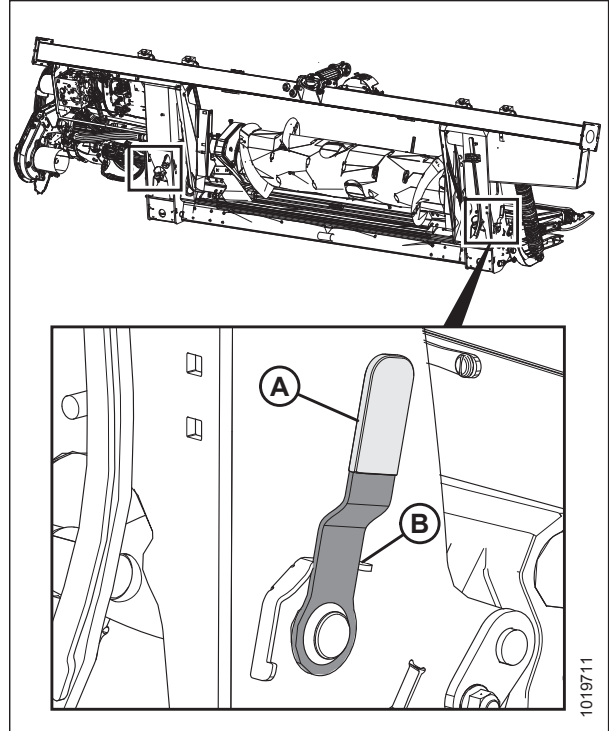


Figure 4.110: Float Lock

- Remove two bolts (A) and fillers (B) from the transition pan support angle (C). Repeat on opposite side.

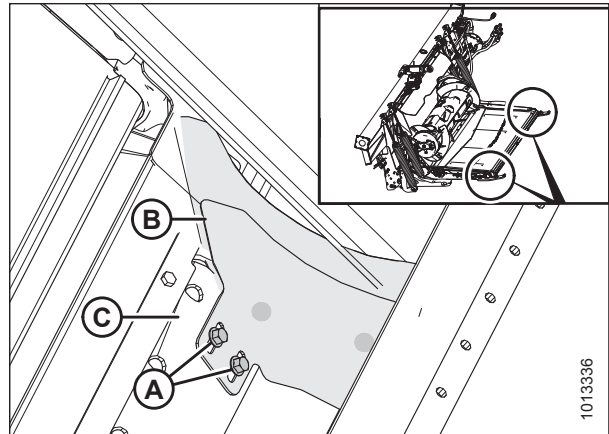


Figure 4.111: Fillers

HEADER ATTACHMENT/DETACHMENT

9. Remove screw (A).
10. Remove the 9/16 in. nut from bolt (B).
11. Use a 24 mm (15/16 in.) wrench on hex bolt (C) to rotate latch downwards and slightly raise the feed deck to remove bolt (B).
12. Rotate the latch (C) up and back to lower the float module deck and disengage the transition pan tube.
13. Reinstall screw (A).
14. Repeat for opposite side of the feed draper deck.



CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

15. Disengage the reel safety props, start the engine, lower the reel, and fully raise the header.
16. Stop the engine, remove the key from the ignition, and engage the combine safety props.
17. Remove the ring (A) from the pin (B), and remove the pins from the header legs at the delivery opening.

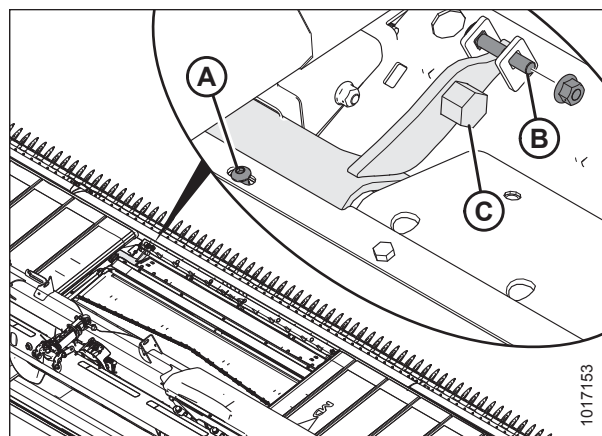


Figure 4.112: Float Module Latch

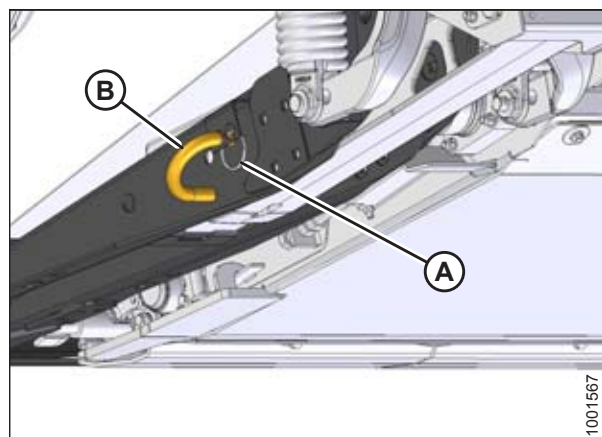


Figure 4.113: Header Leg

18. Place a 150 mm (6 in.) block under the jack stand (A) to assist with center-link disconnection.
19. Disengage the combine safety props, start the engine, and lower the header until the jack stand rests on the block or until the stabilizer wheels are the ground.

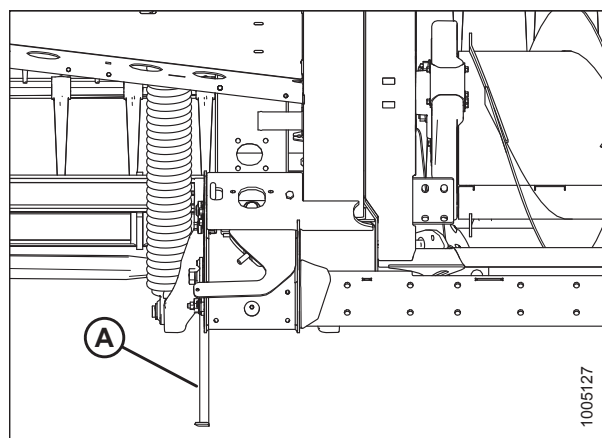


Figure 4.114: Jack Stand

HEADER ATTACHMENT/DETACHMENT

20. Disconnect the hydraulic center-link as follows:

- a. Remove the lynch pin and clevis pin (A), and lift the center-link (B) clear of the bracket.
- b. Replace the clevis pin (A) and secure with lynch pin.

NOTE:

It may be necessary to raise or lower the feeder house to adjust the length of the center-link and relieve excess load on the center-link.

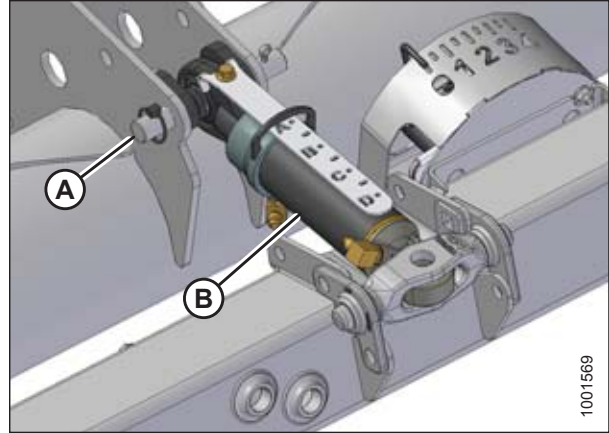


Figure 4.115: Hydraulic Center-Link

21. Disconnect the knife and draper drive hydraulic hoses (A). Immediately cap hoses to prevent oil loss.
22. Store and secure the hoses on the float module frame.
23. Disconnect the electrical connector (B) by turning the collar counterclockwise and pulling the connector to disengage.
24. Store and secure the hoses and electrical connector on the float module.

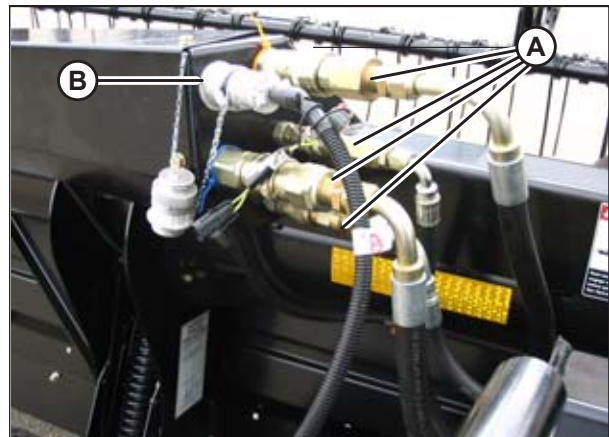


Figure 4.116: Header Connections

NOTE:

- If on the ground: Push reel fully forward to reduce oil loss.
- If on transport: Pull reel fully back.

25. Disconnect the quick disconnects (if installed) as follows:

- a. Line up the slot (A) in the collar with the pin (B) on the connector.
- b. Push the collar towards the pin, and pull the connector to disengage.
- c. Install plugs or caps on the hose ends (if equipped).

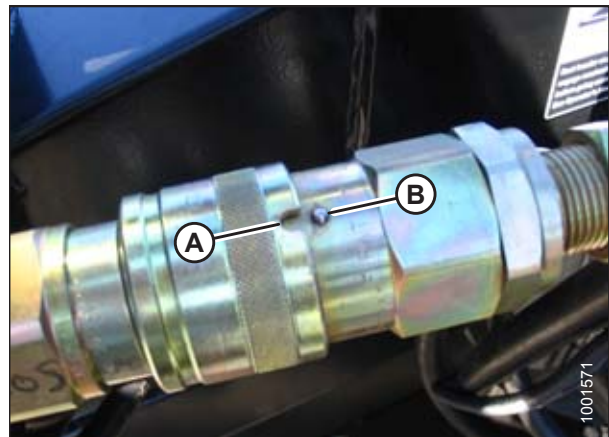


Figure 4.117: Quick Disconnect Coupling

HEADER ATTACHMENT/DETACHMENT

NOTE:

If colored plastic ties are missing, replace them before disconnecting hoses.

26. Disconnect the reel hydraulics (A). Immediately cap hoses to prevent oil loss.

NOTE:

If the optional multicoupler is installed for the reel hydraulics, press the button on the side, raise the handle on the float module, and remove the coupler.

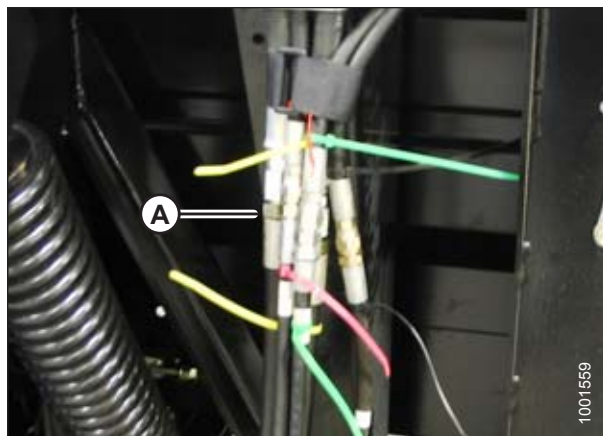


Figure 4.118: Reel Hydraulics

27. Store and secure the hoses and electrical connector on the float module at position (A) as shown.
28. Ensure the header is on the ground or is supported by the wheels in transport mode.



CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

29. Start the engine and slowly back away in a straight line from header.
30. Stop the engine and remove the key from the ignition.
31. Replace pins (B) in the header legs and secure with rings (A).

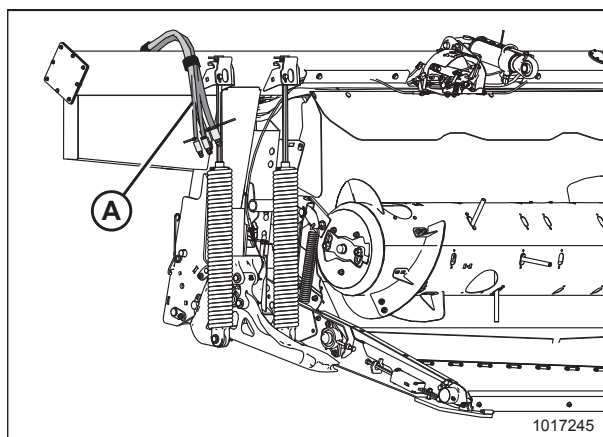


Figure 4.119: Hose Storage

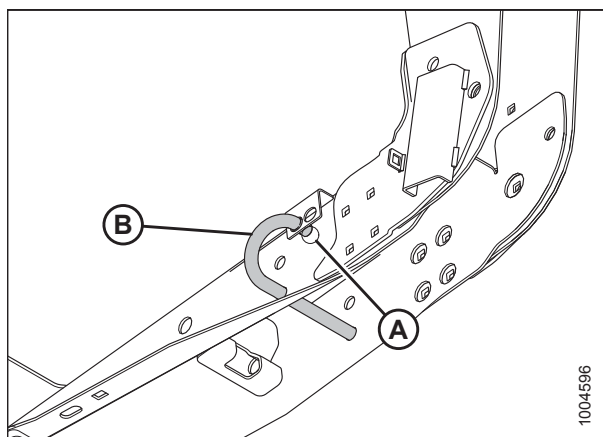


Figure 4.120: Header Leg

5 Maintenance and Servicing

The following instructions provide information about routine header service. Detailed maintenance and service information is available in the technical service manual that is available from your Dealer. A parts catalog is provided in the plastic manual case inside the left endshield of the header.

Log hours of operation and use the maintenance record provided (refer to [5.3.1 Maintenance Schedule/Record, page 367](#)) to keep track of your scheduled maintenance.

5.1 Preparing Machine for Servicing



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.



CAUTION

To avoid personal injury, follow all the safety precautions listed before servicing header or opening drive covers.

1. Lower the header fully. If it is necessary to service the header in the raised position, always engage the safety props.
2. Stop the engine and remove the key from the ignition.
3. Engage the park brake.
4. Wait for all moving parts to stop.

5.2 Maintenance Specifications

5.2.1 Installing a Sealed Bearing

1. Clean the shaft and apply a rust preventive coating.
2. Install the flange (A), bearing (B), second flange (C), and lock the collar (D).

NOTE:

The locking cam is only on one side of the bearing.

3. Install the flange bolts (E). Do **NOT** tighten.
4. Position the shaft correctly, and lock the lock collar with a punch. Lock the collar in the same direction the shaft rotates, and tighten the setscrew in the collar.
5. Tighten the flange bolts (E).
6. Loosen the flange bolts on the mating bearing (one turn) and then retighten. This will allow the bearing to properly line up.

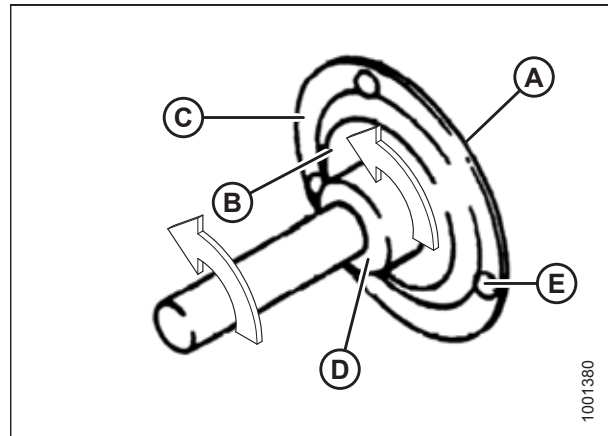


Figure 5.1: Sealed Bearing

5.3 Maintenance Requirements

Regular maintenance is the best insurance against early wear and untimely breakdowns. Following the maintenance schedule will increase your machine's life. Log hours of operation, use the maintenance record, and keep copies of your maintenance records (refer to [5.3.1 Maintenance Schedule/Record, page 367](#)).

Periodic maintenance requirements are organized according to service intervals. If a service interval specifies more than one timeframe, e.g., 100 hours or annually, service the machine at whichever interval is reached first.

IMPORTANT:

Recommended intervals are for average conditions. Service the machine more often if operating under adverse conditions (severe dust, extra heavy loads, etc.).




When servicing the machine, refer to the appropriate section in this Maintenance and Servicing chapter and use only specified fluids and lubricants. Refer to inside back cover for recommended fluids and lubricants.



CAUTION

Carefully follow safety messages. Refer to [5.1 Preparing Machine for Servicing, page 365](#) and [1 Safety, page 1](#).

5.3.1 Maintenance Schedule/Record

Action:		✓ – Check					💧 – Lubricate					▲ – Change				
	Hour meter reading															
	Service date															
	Serviced by															
First Use		Refer to 5.3.2 Break-In Inspection, page 370 .														
End of Season		Refer to 5.3.4 End-of-Season Service, page 371 .														
10 Hours or Daily (Whichever Occurs First)																
✓	Hydraulic hoses and lines; refer to 5.3.5 Checking Hydraulic Hoses and Lines, page 372	NOTE: MacDon recommends keeping a record of daily maintenance as evidence of a properly maintained machine; however, daily maintenance records are not required to meet normal warranty conditions.														
✓	Knife sections, guards, and hold-downs; refer to 5.8 Knife, page 417	NOTE: MacDon recommends keeping a record of daily maintenance as evidence of a properly maintained machine; however, daily maintenance records are not required to meet normal warranty conditions.														
✓	Tire pressure; refer to 5.15.3 Checking Tire Pressure, page 540	NOTE: MacDon recommends keeping a record of daily maintenance as evidence of a properly maintained machine; however, daily maintenance records are not required to meet normal warranty conditions.														
25 Hours																
✓	Hydraulic oil level at reservoir; refer to 5.4.1 Checking Oil Level in Hydraulic Reservoir, page 389	NOTE: MacDon recommends keeping a record of daily maintenance as evidence of a properly maintained machine; however, daily maintenance records are not required to meet normal warranty conditions.														

MAINTENANCE AND SERVICING

◆	Knifeheads; refer to <i>Every 25 Hours, page 373</i>	NOTE: MacDon recommends keeping a record of daily maintenance as evidence of a properly maintained machine; however, daily maintenance records are not required to meet normal warranty conditions.															
50 Hours or Annually																	
◆	Draper roller bearings; refer to <i>5.12.6 Header Draper Roller Maintenance, page 484</i>																
◆	Driveline and driveline universals; refer to <i>Every 50 Hours, page 374</i>																
◆	Upper cross auger center support and U-joint; refer to <i>Every 50 Hours, page 374</i>																
▲	Knife drive box lubricant (first 50 hours only); refer to <i>Changing Oil in Knife Drive Box, page 439</i>																
100 Hours or Annually (Whichever Occurs First)																	
✓	Auger to pan and feed draper clearance; refer to <i>5.7.1 Adjusting Auger to Pan Clearance, page 401</i>																
✓	Draper seal; refer to <i>5.12.5 Adjusting Deck Height, page 482</i>																
✓	Gearbox lubricant level; refer to <i>Checking Oil Level in Header Drive Gearbox, page 386</i>																
✓	Reel drive chain tension; refer to <i>5.14.2 Reel Drive Chain Tension, page 524</i>																
✓	Reel finger/cutterbar clearance; refer to <i>Adjusting Reel Clearance, page 497</i>																
✓	Knife drive belt tension; refer to <i>5.9.2 Knife Drive Belts, page 440</i>																
✓	Wheel bolt torque; refer to <i>5.15.1 Checking Wheel Bolt Torque, page 538</i>																
✓	Knife drive box lubricant level; refer to <i>Checking Knife Drive Box, page 431</i>																
✓	Knife drive box mounting bolts; refer to <i>Checking Mounting Bolts, page 432</i>																
◆	Auger drive chain; refer to <i>Every 100 Hours, page 376</i>																
◆	Float pivots; refer to <i>Every 100 Hours, page 376</i>																
◆	Float module auger pivots; refer to <i>Every 100 Hours, page 376</i>																
◆	Float spring tensioners; refer to <i>Every 100 Hours, page 376</i>																

MAINTENANCE AND SERVICING

●	Reel drive chain; refer to <i>Every 100 Hours, page 376</i>																		
●	Upper cross auger right bearing; refer to <i>Every 100 Hours, page 376</i>																		
250 Hours or Annually (Whichever Occurs First)																			
✓	Draper seal; refer to <i>5.12.5 Adjusting Deck Height, page 482</i>																		
●	Reel drive U-joint; refer to <i>Every 250 Hours, page 379</i>																		
●	Bell crank linkage; refer to <i>3.9 Leveling the Header, page 288</i>																		
●	Transport axle pivot bushings; refer to <i>Every 250 Hours, page 379</i>																		
▲	Hydraulic oil filter; refer to <i>5.4.4 Changing Oil Filter, page 392</i>																		
500 Hours or Annually (Whichever Occurs First)																			
✓	Draper seal; refer to <i>5.12.5 Adjusting Deck Height, page 482</i>																		
●	Reel shaft bearings; refer to <i>Every 500 Hours, page 380</i>																		
●	Stabilizer/slow speed transport wheel bearings; refer to <i>Every 500 Hours, page 380</i>																		
✓	Header drive gearbox chain tension; refer to <i>5.7.3 Adjusting Auger Drive Chain Tension, page 405</i>																		
1000 Hours or 3 Years (Whichever Occurs First)																			
▲	Knife drive box lubricant; refer to <i>Changing Oil in Knife Drive Box, page 439</i>																		
▲	Header drive gearbox lubricant; refer to <i>Changing Oil in Header Drive Gearbox, page 387</i>																		
▲	Hydraulic oil; refer to <i>5.4.3 Changing Oil in Hydraulic Reservoir, page 391</i>																		

5.3.2 Break-In Inspection

Break-in inspection involves checking belts, fluids, and performing general machine inspections for loose hardware or other areas of concern. Break-in inspections ensure that all components can operate for an extended period without requiring service or replacement. The break-in period is the first 50 hours of operation after the machine's initial start up.

Inspection Instance	Item	Refer to
5 Minutes	Check hydraulic oil level in reservoir (check after first run-up and after the hydraulic hoses have filled with oil).	5.4.1 Checking Oil Level in Hydraulic Reservoir, page 389
5 Hours	Check for loose hardware and tighten to required torque.	8.1 Torque Specifications, page 569
5 Hours	Check knife drive belts tension (check periodically for first 50 hours).	<ul style="list-style-type: none"> • Checking and Tensioning Non-Timed Knife Drive Belts, page 444 • Checking and Tensioning Timed Knife Drive Belts, page 449
10 Hours	Check auger drive chain tension.	5.7.2 Checking Auger Drive Chain Tension, page 404
10 Hours	Check knife drive box mounting bolts.	Checking Mounting Bolts, page 432
50 Hours	Change float module gearbox oil.	Changing Oil in Header Drive Gearbox, page 387
50 Hours	Change float module hydraulic oil filter.	5.4.4 Changing Oil Filter, page 392
50 Hours	Change knife drive box lubricant.	Changing Oil in Knife Drive Box, page 439
50 Hours	Check gearbox chain tension.	5.6.5 Adjusting Gearbox Drive Chain Tension, page 400
50 Hours	Check deck height adjustment.	5.12.5 Adjusting Deck Height, page 482

5.3.3 Preseason Servicing

Perform the following procedures at the beginning of each operating season:

CAUTION

- Review this manual to refresh your memory on the safety and operating recommendations.
- Review all the safety decals and other decals on the header and note the hazard areas.
- Be sure all the shields and guards are properly installed and secured. Never alter or remove safety equipment.
- Be sure you understand and have practiced safe use of all controls. Know the capacity and operating characteristics of the machine.
- Ensure you have a first aid kit and fire extinguisher. Know where they are and how to use them.

MAINTENANCE AND SERVICING

1. Lubricate the machine completely. Refer to [5.3.6 Lubrication and Servicing, page 372](#).
2. Adjust the tension on the drive belts. Refer to [Checking and Tensioning Non-Timed Knife Drive Belts, page 444](#) or [Checking and Tensioning Timed Knife Drive Belts, page 449](#).
3. Perform all annual maintenance tasks. Refer to [5.3.1 Maintenance Schedule/Record, page 367](#).

5.3.4 End-of-Season Service

Perform the following procedures at the end of each operating season:



CAUTION

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.



CAUTION

Cover cutterbar and knife guards to prevent injury from accidental contact.

1. Clean the header thoroughly.
2. Bring the machine for storage in a dry and protected place if possible. If storing outside, always cover the machine with a waterproof canvas or other protective material.

NOTE:

If storing the machine outside, remove the drapers and store them in a dark, dry place. If not removing the drapers, store the header with the cutterbar lowered so water and snow will not accumulate on the drapers. The weight of water and snow accumulation puts excessive stress on the drapers and header.

3. Lower the header onto blocks to keep the cutterbar off the ground.
4. Lower the reel completely. If stored outside, tie the reel to the frame to prevent rotation caused by the wind.
5. Repaint all worn or chipped painted surfaces to prevent rust.
6. Loosen the drive belts.
7. Lubricate the header thoroughly leaving excess grease on the fittings to keep moisture out of the bearings.
8. Apply grease to exposed threads, cylinder rods, and sliding surfaces of components.
9. Lubricate the knife. Refer to the inside back cover for recommended lubricants.
10. Check for worn components and repair as necessary.
11. Check for broken components and order replacements from your Dealer. Immediate repair of these items will save time and effort at the beginning of next season.
12. Replace or tighten any missing or loose hardware. Refer to [8.1 Torque Specifications, page 569](#).

5.3.5 Checking Hydraulic Hoses and Lines

Check hydraulic hoses and lines daily for signs of leaks.

WARNING

- Avoid high-pressure fluids. Escaping fluid can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic lines. Tighten all connections before applying pressure. Keep hands and body away from pin holes and nozzles which eject fluids under high pressure.
- If any fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury or gangrene may result.



Figure 5.2: Hydraulic Pressure Hazard

- Use a piece of cardboard or paper to search for leaks.

IMPORTANT:

Keep hydraulic coupler tips and connectors clean. Allowing dust, dirt, water, or foreign material to enter the system is the major cause of hydraulic system damage. Do **NOT** attempt to service hydraulic systems in the field. Precision fits require a perfectly clean connection during overhaul.

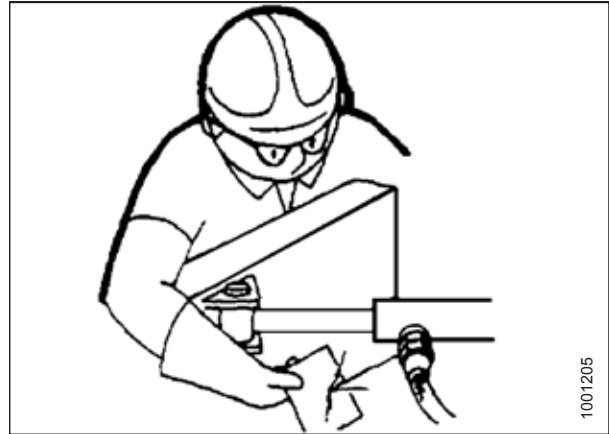


Figure 5.3: Testing for Hydraulic Leaks

5.3.6 Lubrication and Servicing

CAUTION

To avoid personal injury, before servicing header or opening drive covers, follow procedures in [5.1 Preparing Machine for Servicing, page 365](#).

Refer to inside back cover for recommended lubricants.

Log hours of operation and use the Maintenance Record provided to keep a record of scheduled maintenance. Refer to [5.3.1 Maintenance Schedule/Record, page 367](#).

Service Intervals

Every 10 Hours

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

MAINTENANCE AND SERVICING

Knife: Lubricate the knife every 10 hours or daily, except in sandy conditions.

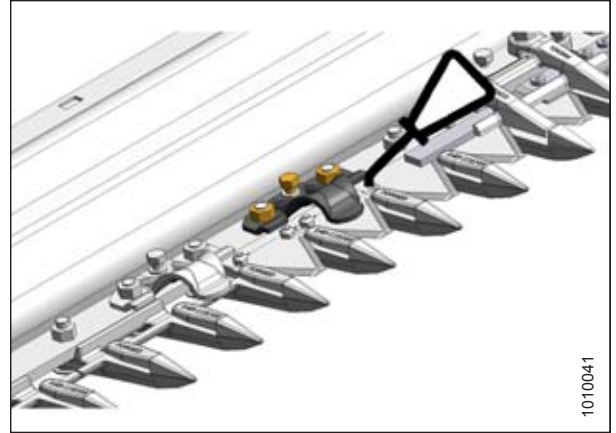


Figure 5.4: Lubricating Knife

Every 25 Hours

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

Knifehead: Lubricate the knifehead (A) every 25 hours. Check for signs of excessive heating on the first few guards after greasing. If required, relieve the pressure by pressing the check-ball in the grease fitting.

IMPORTANT:

Overgreasing the knifehead puts pressure on the knife causing it to rub against the guards, resulting in excessive wear from binding. Do **NOT** overgrease the knifehead. Apply only one to two pumps using a mechanical grease gun (do **NOT** use an electric grease gun). If more than six to eight pumps of the grease gun are required to fill the cavity, replace the seal in the knifehead. Refer to [5.8.3 Removing Knifehead Bearing](#), page 419.

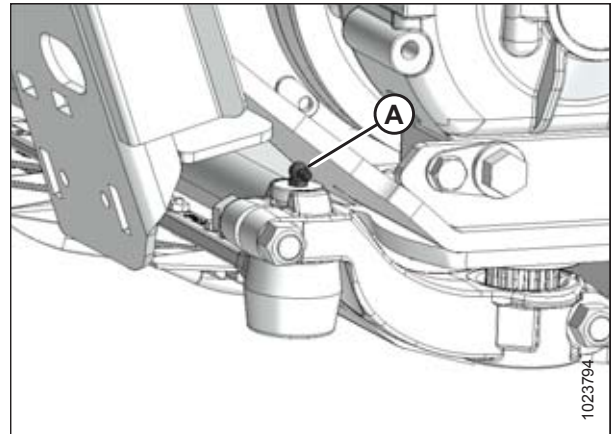



Figure 5.5: Every 25 Hours

MAINTENANCE AND SERVICING

Every 50 Hours

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

Figure 5.6: Every 50 Hours

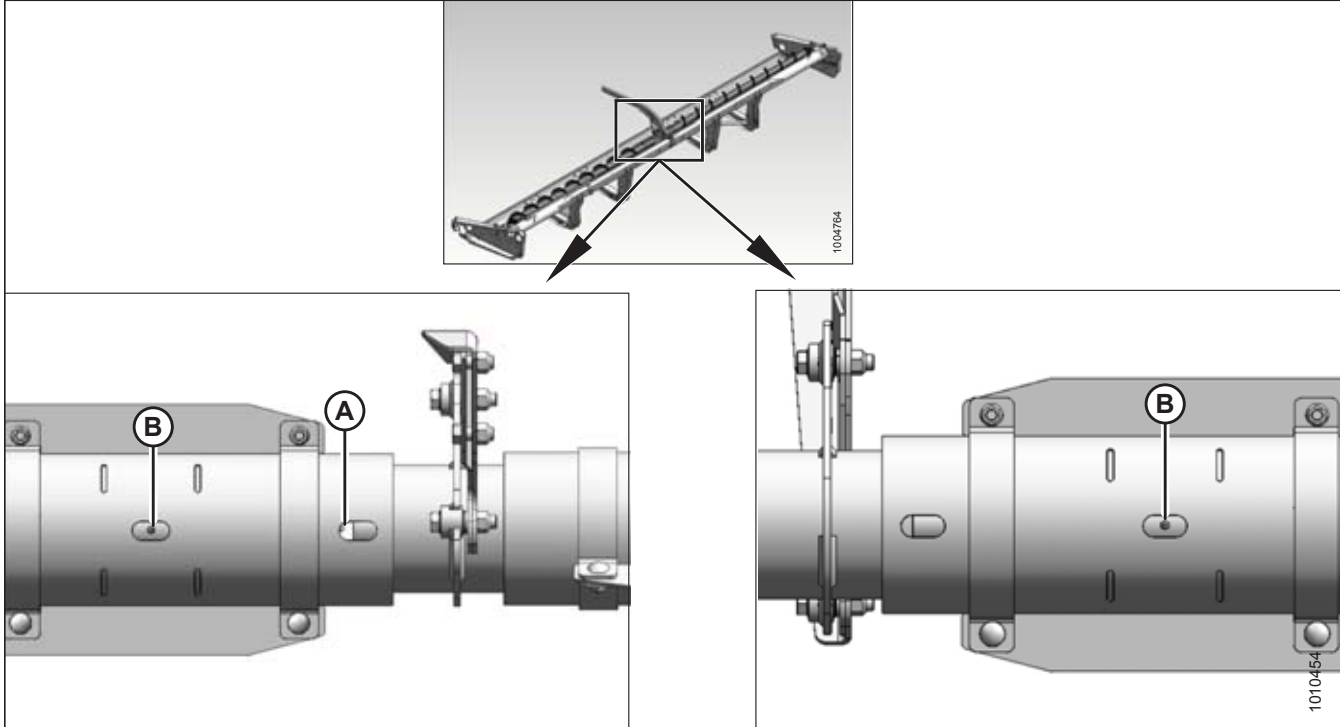


A - Upper Cross Auger U-joint⁵⁵

B - Upper Cross Auger Bearing (Two Places)⁵⁶

55. U-joint has an extended lubrication cross and bearing kit. Stop greasing when greasing becomes difficult or if U-joint stops taking grease. Overgreasing will damage U-joint. Six to eight pumps are sufficient at first grease (factory). Increase grease interval as U-joint wears and requires more than six pumps.

56. Use high temperature extreme pressure (EP2) performance grease with 1.5–5.0% max molybdenum disulphide (NLGI Grade 2) lithium base.

Figure 5.7: Every 50 Hours

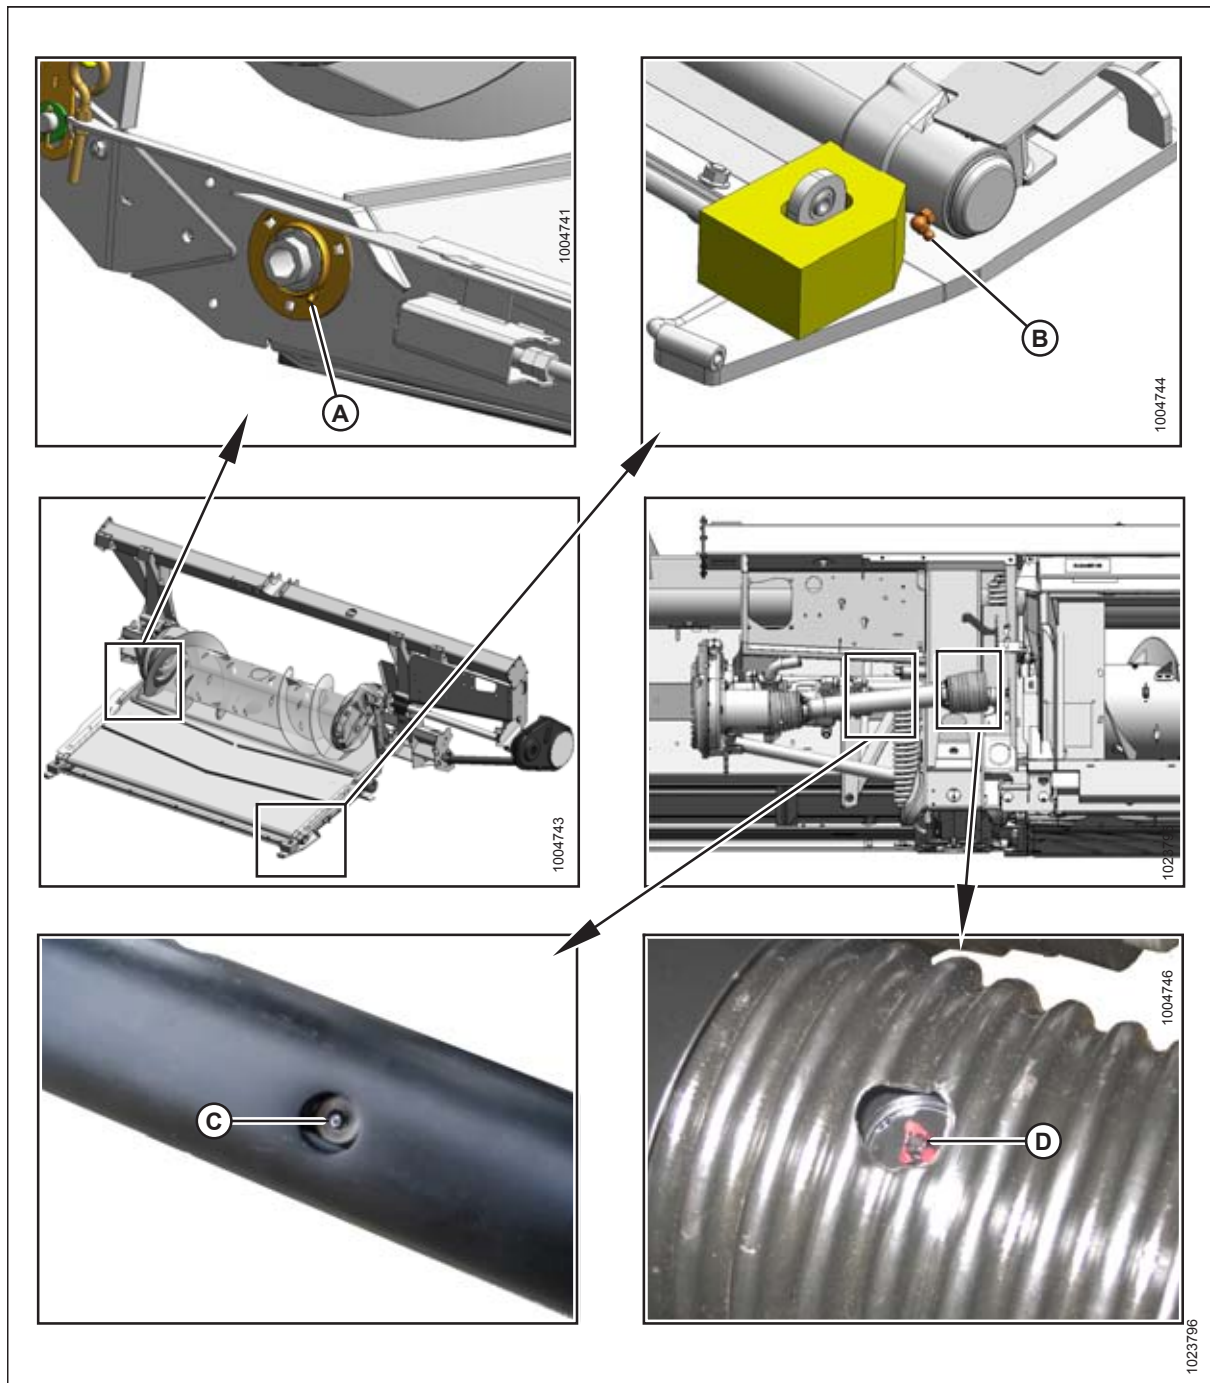

A - Drive Roller Bearing
C - Driveline Slip Joint⁵⁷

B - Idler Roller Bearing (Both Sides)
D - Driveline Universal (Two Places)





57. Use high temperature extreme pressure (EP2) performance grease with 10% max molybdenum disulphide (NLGI Grade 2) lithium base.

MAINTENANCE AND SERVICING

Every 100 Hours

Use high temperature extreme pressure (EP2) performance grease with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.




Figure 5.8: Every 100 Hours

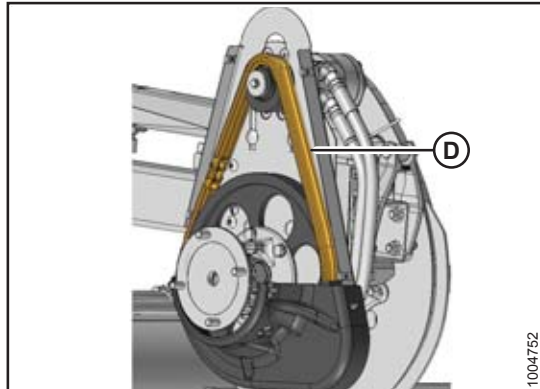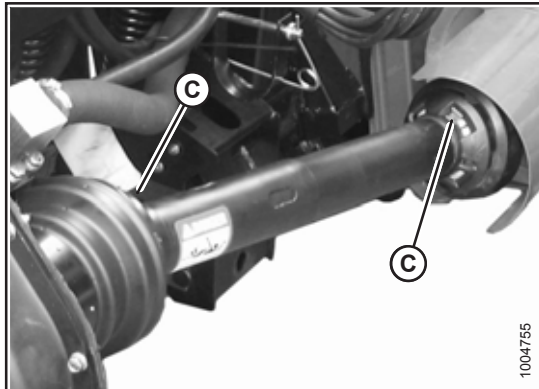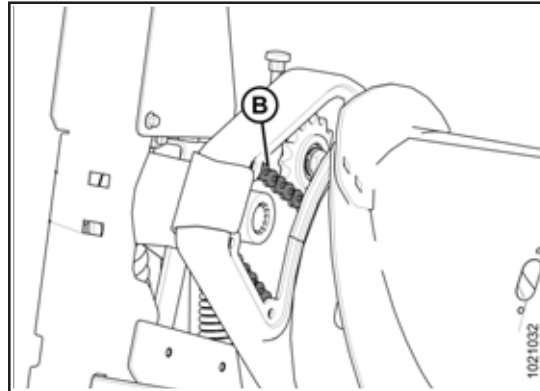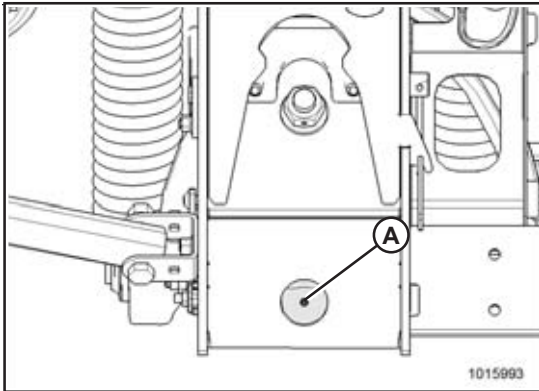

1021034


- A - Float Pivot – Right and Left
- B - Auger Drive Chain. Refer to [Lubricating Auger Drive Chain, page 385](#)
- C - Driveline Guard – Two Places
- D - Reel Drive Chain – One Place. Refer to [Lubricating Reel Drive Chain – Double Reel, page 382](#)

Figure 5.9: Every 100 Hours

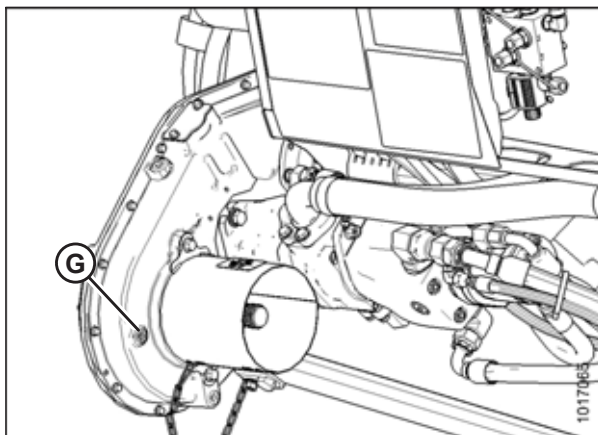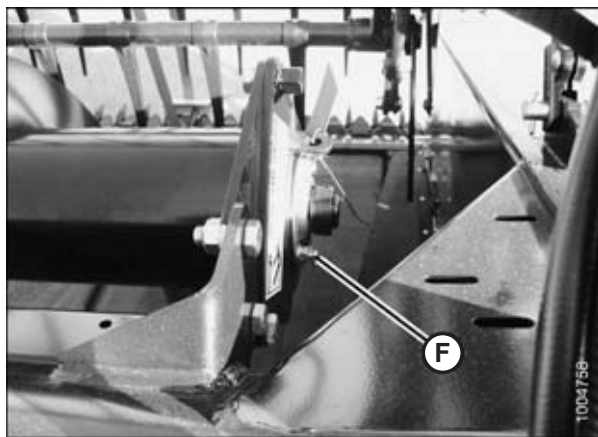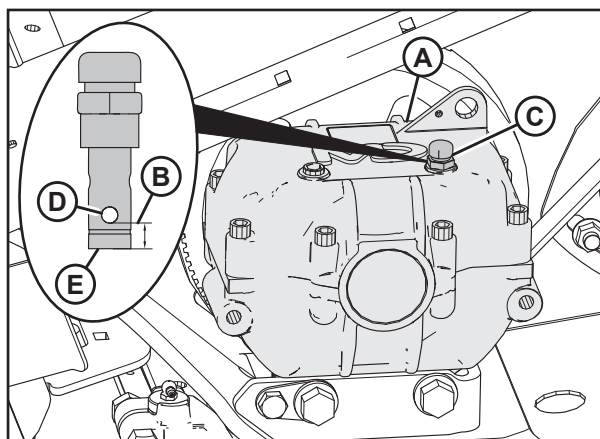

A - Knife Drive Box (Check Oil Level [B] on Dipstick [C]: Between Lowest Edge of Hole [D] and Bottom [E] of Dipstick)
 F - Upper Cross Auger Bearing (One Place)
 G - Main Drive Gearbox Oil Level. Refer to [Lubricating Header Drive Gearbox, page 386](#)

Figure 5.10: Every 100 Hours

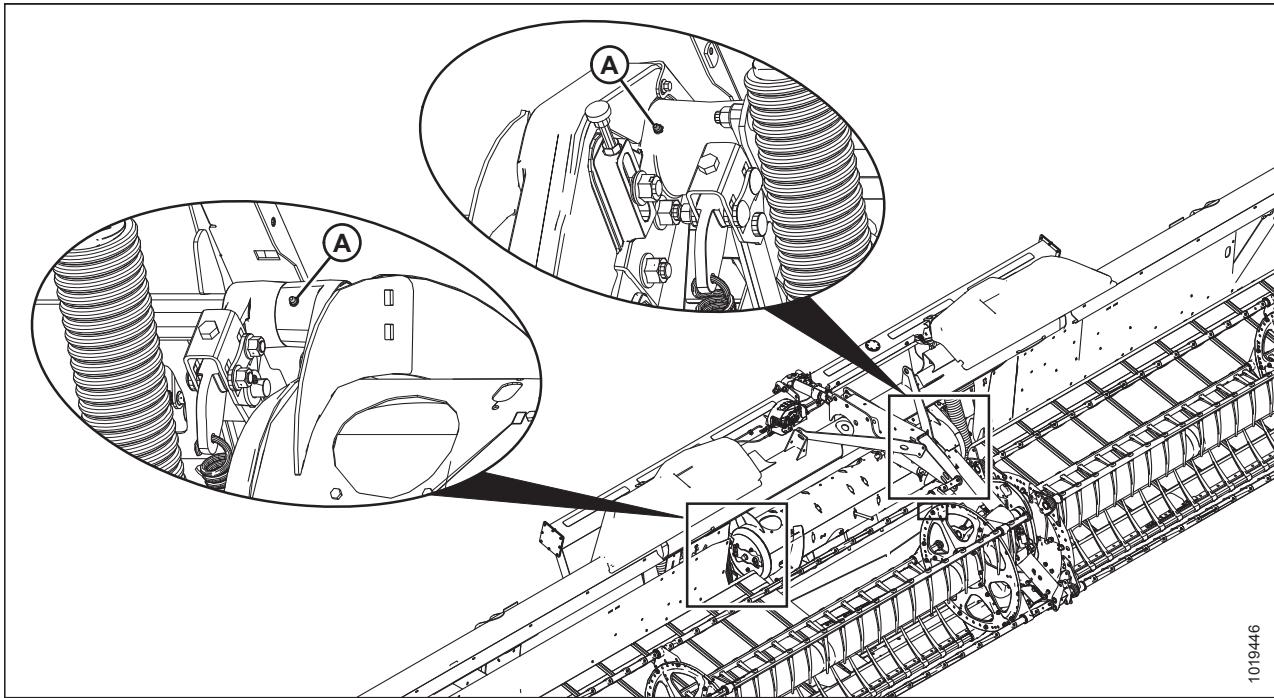


A - Auger Pivots

MAINTENANCE AND SERVICING

Every 250 Hours

Figure 5.11: Every 250 Hours

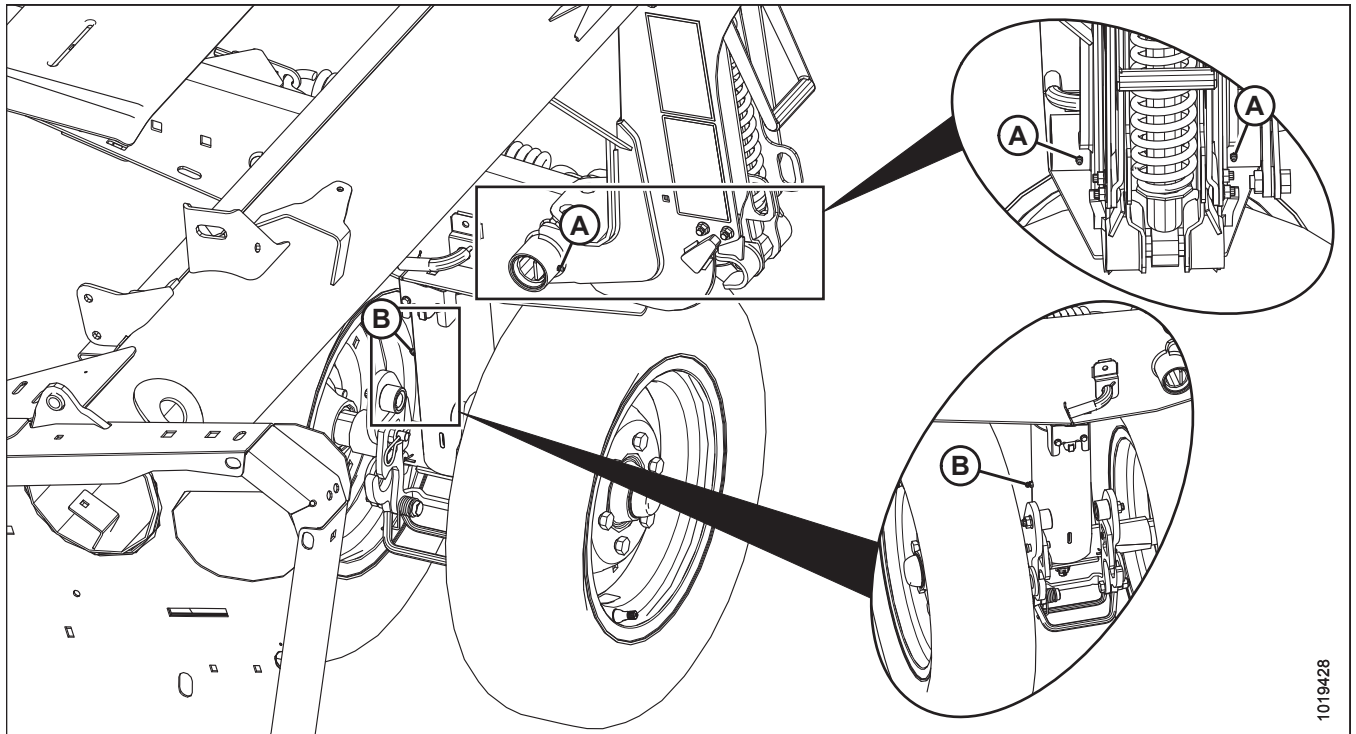

A - Frame/Wheel Pivot (Front and Rear) – Both Sides

B - Front Wheel Pivot (One Place)

Change oil filter (A) every 250 hours of operation. Refer to [5.4.4 Changing Oil Filter, page 392](#) for instructions.

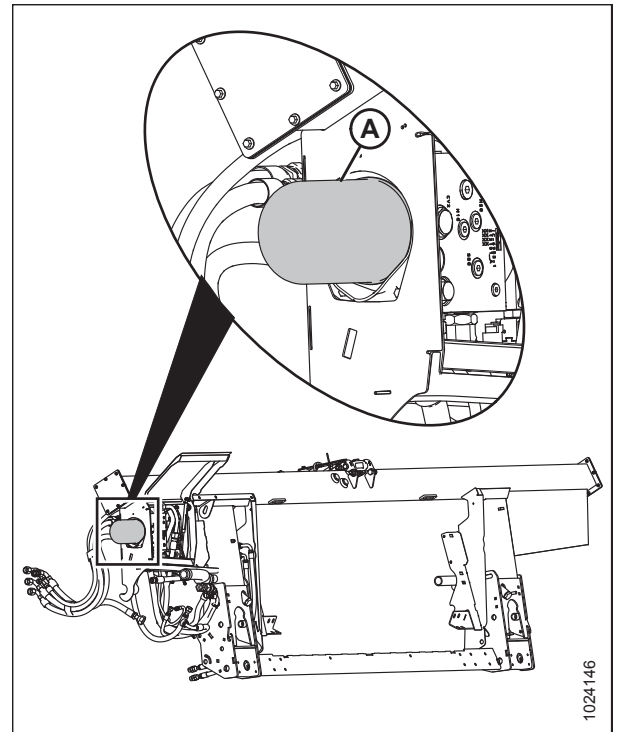



Figure 5.12: Every 250 Hours

MAINTENANCE AND SERVICING

Every 500 Hours

Use high temperature extreme pressure (EP2) performance with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

Figure 5.13: Every 500 Hours

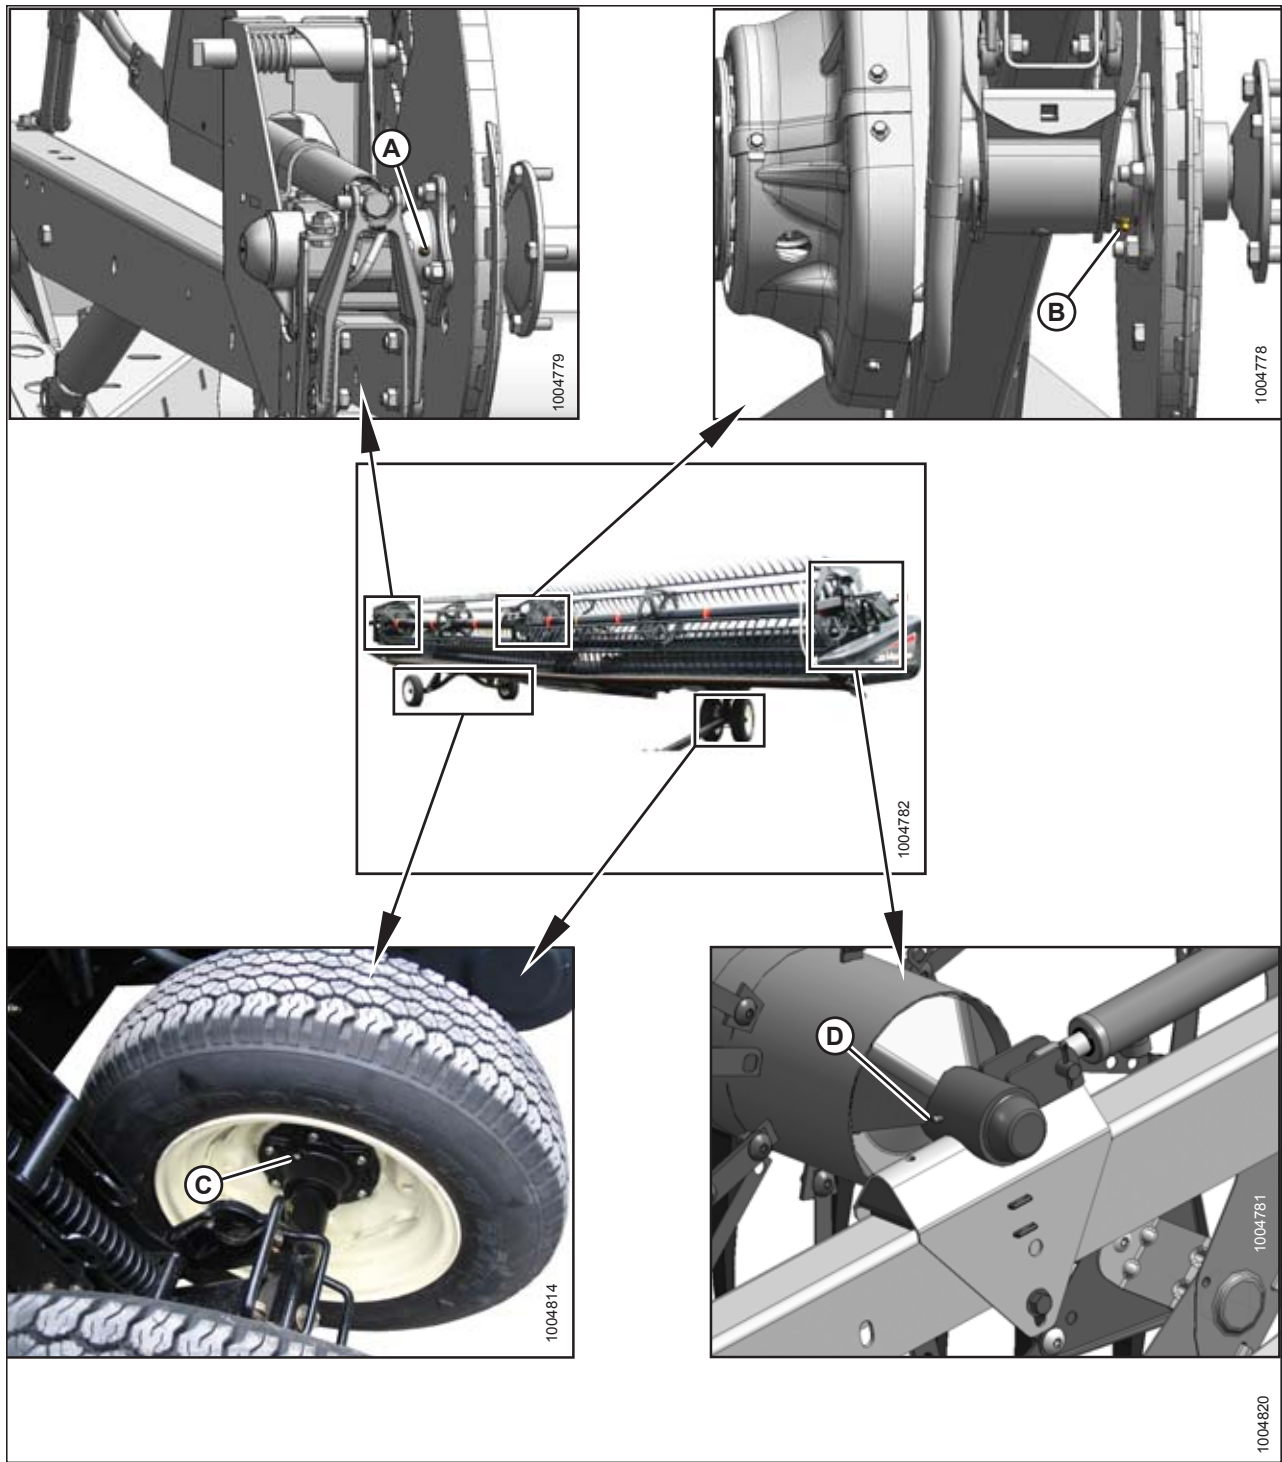

A - Reel Right Bearing (One Place)
C - Wheel Bearings (Four Places)

B - Reel Center Bearing (One Place)
D - Reel Left Bearing (One Place)

Greasing Procedure

Greasing points are identified on the machine by decals showing a grease gun and grease interval in hours of operation. Grease point layout decals are located on the header and on the right side of the float module.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

Refer to inside back cover for recommended lubricants.

Log hours of operation and use the Maintenance Record provided to keep a record of scheduled maintenance. Refer to [5.3.1 Maintenance Schedule/Record, page 367](#).

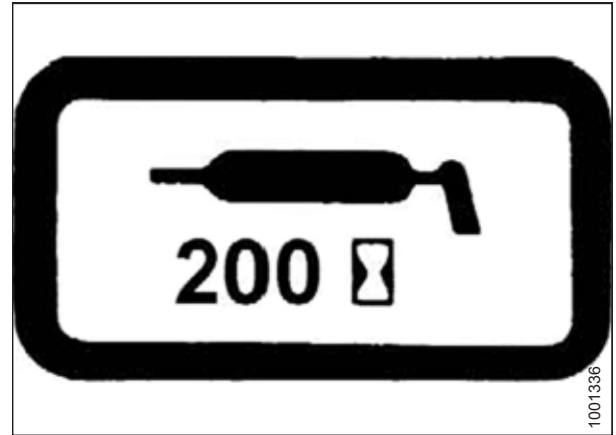


Figure 5.14: Greasing Interval Decal

1. Wipe grease fitting with a clean cloth before greasing to avoid injecting dirt and grit.

IMPORTANT:

Use clean, high-temperature, extreme-pressure grease only.

2. Inject grease through fitting with grease gun until grease overflows fitting (except where noted).
3. Leave excess grease on fitting to keep out dirt.
4. Replace any loose or broken fittings immediately.
5. Remove and thoroughly clean any fitting that will not take grease. Also clean lubricant passageway. Replace fitting if necessary.
6. Use clean, high-temperature, extreme-pressure grease only.

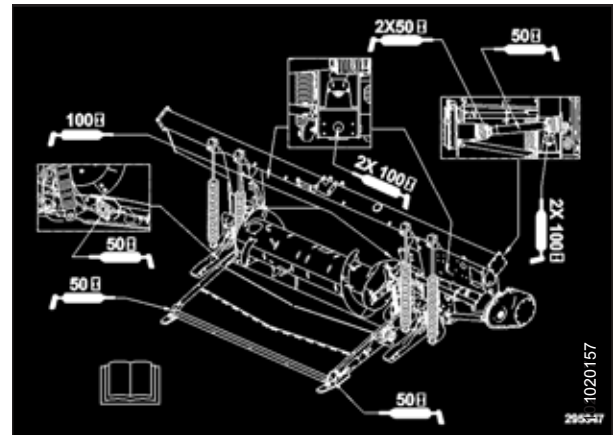


Figure 5.15: FM100 Grease Point Layout Decal

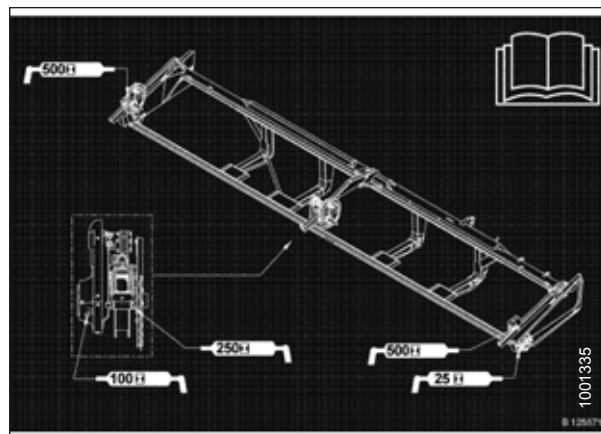


Figure 5.16: Single-Knife Header Grease Point Layout Decal

Lubricating Reel Drive Chain – Double Reel

⚠ DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove six bolts (A) securing the upper cover (B) to the reel drive and lower cover (C).

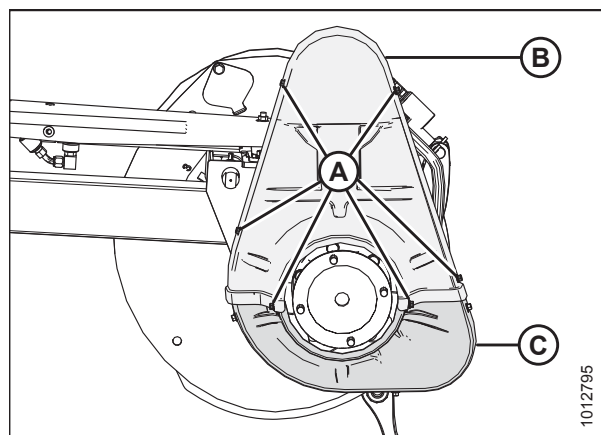


Figure 5.17: Drive Cover – Double Reel

MAINTENANCE AND SERVICING

3. Remove three bolts (A) and remove the lower cover (B) if necessary.

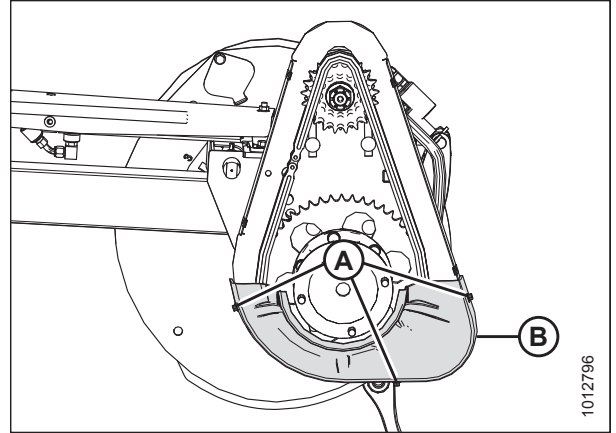


Figure 5.18: Lower Drive Cover (Upper Cover Removed)

4. Apply a liberal amount of grease to the chain (A).

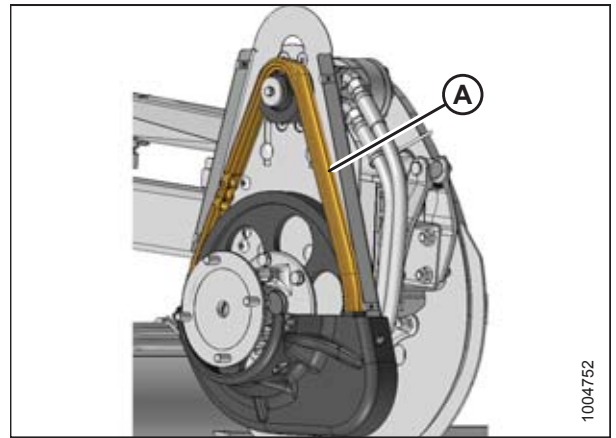


Figure 5.19: Drive Chain

5. Position the lower drive cover (B) onto the reel drive (if previously removed), and secure with three bolts (A).

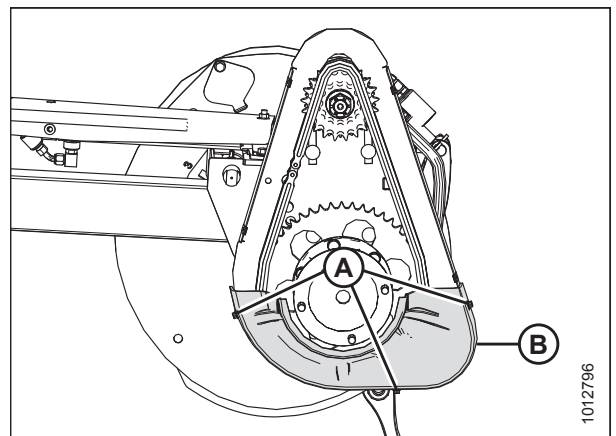


Figure 5.20: Lower Drive Cover – Double Reel

MAINTENANCE AND SERVICING

6. Position the upper drive cover (B) onto the reel drive and lower cover (C), and secure with six bolts (A).

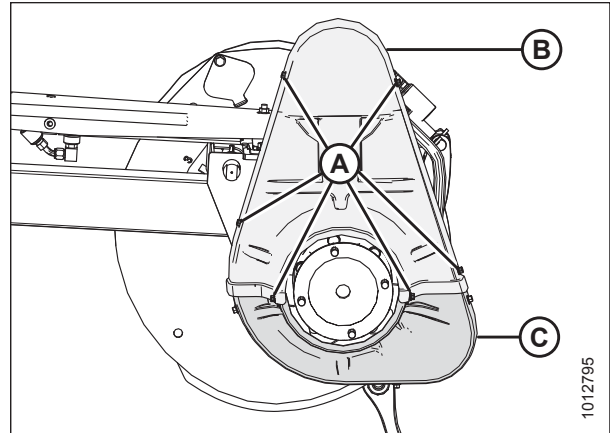


Figure 5.21: Drive Cover – Double Reel

Lubricating Auger Drive Chain

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

Lubricate the auger drive chain every 100 hours. The auger drive chain can be lubricated with the float module attached to the combine, but it is easier with the float module detached.

The auger drive cover consists of an upper and lower cover, and a metal inspection panel. Only the metal inspection panel needs to be removed to grease the chain.

1. Remove four bolts (A) and the metal inspection panel (B).

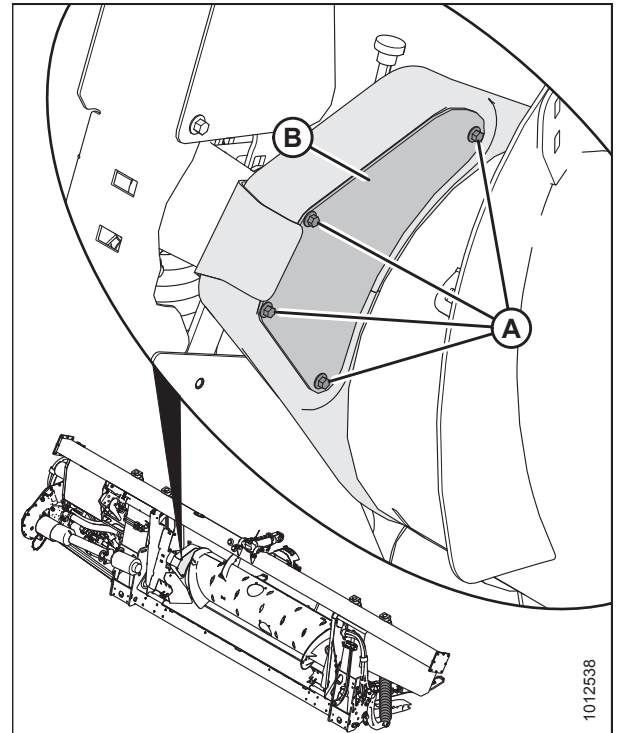


Figure 5.22: Auger Drive Inspection Panel

2. Apply a liberal amount of grease to the chain (A), drive sprocket (B), and idler sprocket (C).
3. Rotate the auger and apply grease to more areas of the chain, if necessary.

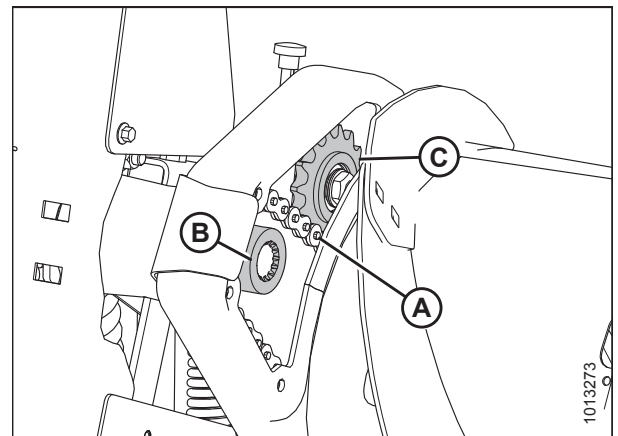


Figure 5.23: Auger Drive Chain

4. Reinstall metal inspection panel (B) and secure with four bolts (A).

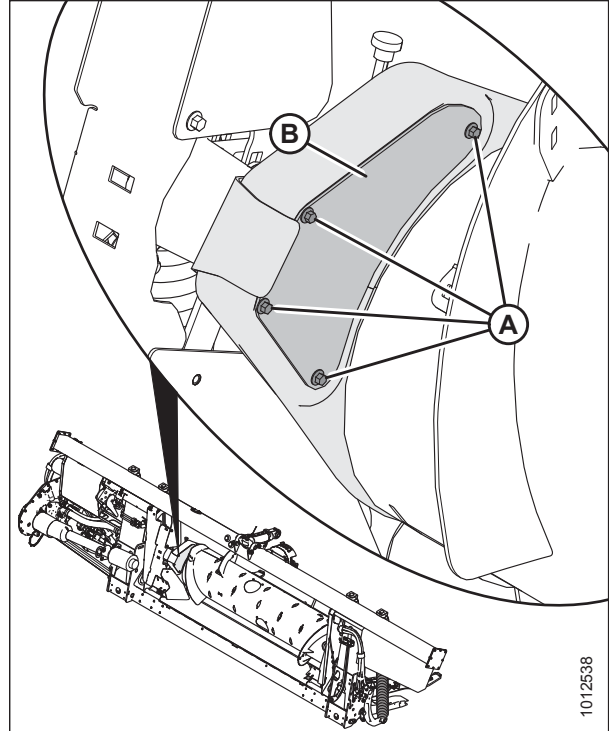


Figure 5.24: Auger Drive Inspection Panel

Lubricating Header Drive Gearbox

Checking Oil Level in Header Drive Gearbox

Check the header drive gearbox oil level every 100 hours.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower the header to the ground and ensure the gearbox is in working position.
2. Shut down the engine, and remove the key from the ignition.
3. Remove the oil level plug (A) and check that the oil level is up to the bottom of the hole.
4. Replace the oil level plug (A).
5. Add oil if required. Refer to [Adding Oil to Header Drive Gearbox, page 387](#).

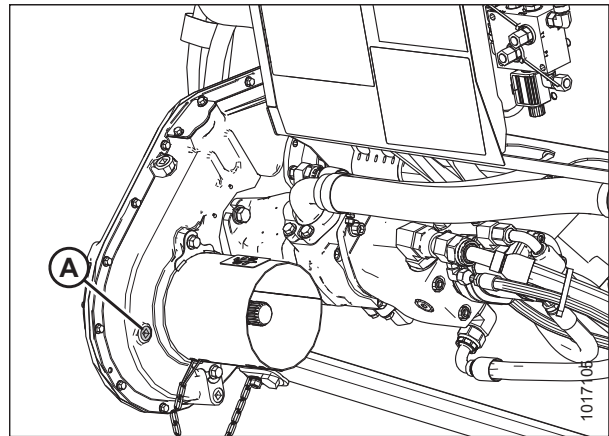


Figure 5.25: Header Drive Gearbox

Adding Oil to Header Drive Gearbox

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower the cutterbar to the ground, and ensure the gearbox is in working position.
2. Shut down the engine, and remove the key from the ignition.
3. Remove filler plug (B) and the oil level plug (A).
4. Add oil into the filler plug (B) until it runs out of the oil level plug hole (A). Refer to this book's inside back cover for recommended lubricants.
5. Replace the oil level plug (A) and the filler plug (B).

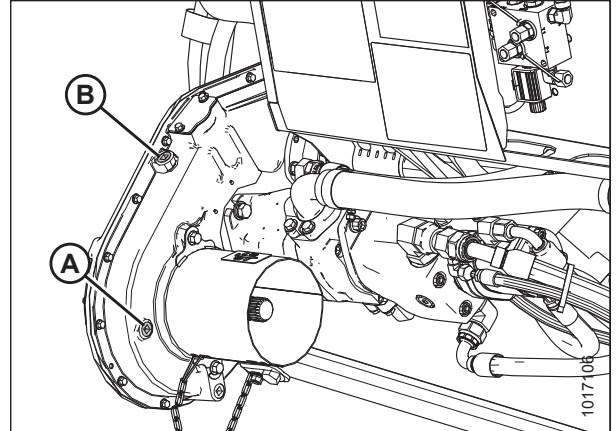


Figure 5.26: Header Drive Gearbox

Changing Oil in Header Drive Gearbox

Change the header drive gearbox oil after the first 50 hours of operation and every 1000 hours (or 3 years) thereafter.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Start engine.
2. Engage the header to warm up the oil.
3. Raise or lower the header to position the oil drain plug (A) at its lowest point.
4. Shut down the engine, and remove the key from the ignition.
5. Place a suitably sized container (approximately 4 liters [1 US gal]) underneath the gearbox drain to collect the oil.
6. Remove the oil drain plug (A) and the filler plug (C), and allow the oil to drain.
7. Replace the oil drain plug (A) and remove the oil level plug (B).

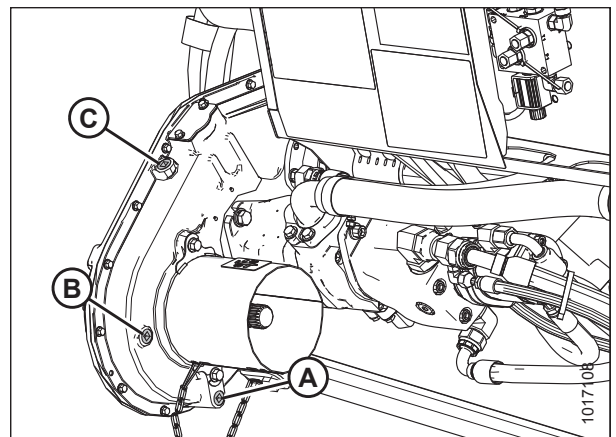


Figure 5.27: Header Drive Gearbox

MAINTENANCE AND SERVICING

8. Add oil into the filler plug (C) until it runs out of the oil level hole (B). Refer to this book's inside back cover for recommended lubricants.

NOTE:

The header drive gearbox holds approximately 2.5 liters (2.6 quarts) of oil.

9. Replace the oil level plug (B) and the filler plug (C).

5.4 Hydraulics

The FM100 Float Module's hydraulic system drives the float module feed draper, header drapers, and knife drives. The combine's hydraulic system drives the reel hydraulics.

The float module frame acts as an oil reservoir. Refer to inside back cover for oil requirements.

5.4.1 Checking Oil Level in Hydraulic Reservoir

Check the hydraulic oil level in the reservoir every 25 hours.

1. Check the oil level using the lower sight (A) and the upper sight (B) with the cutterbar just touching the ground and with center-link retracted.

NOTE:

Check the level when the oil is cold.

NOTE:

For extremely hilly terrain, a hillside extension kit can be installed. Refer to [6.1.1 Hillside Extension Kit, page 541](#).

2. Ensure the oil is at the appropriate level for the terrain as follows:
 - **Hilly terrain:** Maintain level so lower sight (A) is full, and upper sight (B) is up to one-half filled.
 - **Normal terrain:** Maintain level so lower sight (A) is full, and upper sight (B) is empty.

NOTE:

It may be necessary to slightly reduce the oil level when ambient temperatures are above 35°C (95°F) to prevent overflow at the breather when normal operating temperatures are reached.

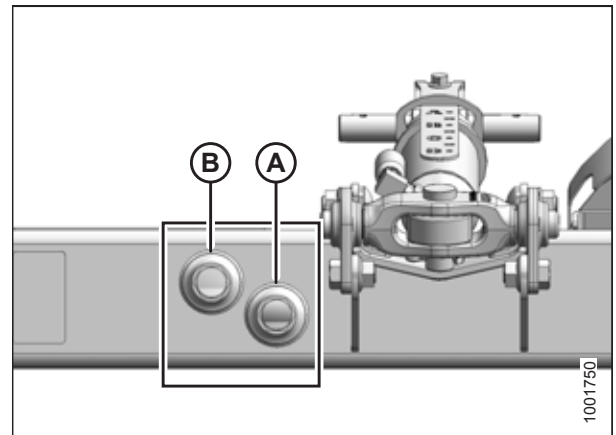


Figure 5.28: Oil Level Sight Glass

5.4.2 Adding Oil to Hydraulic Reservoir

Follow this procedure to top up the oil in the hydraulic reservoir. To change the hydraulic oil, refer to [5.4.3 Changing Oil in Hydraulic Reservoir, page 391](#).

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the combine, and remove the key from the ignition.
2. Clean any dirt or debris from the filler cap (A).
3. Loosen and remove the filler cap (A) by turning it counterclockwise.
4. Add warm oil (approximately 21°C [70°F]) and fill to the required level. Refer to this manual's inside back cover for oil type and specification.

IMPORTANT:

Warm oil will flow through the screen better than cold oil. Do **NOT** remove the screen.

5. Reinstall the filler cap (A).
6. Recheck oil level. Refer to [5.4.1 Checking Oil Level in Hydraulic Reservoir, page 389](#).

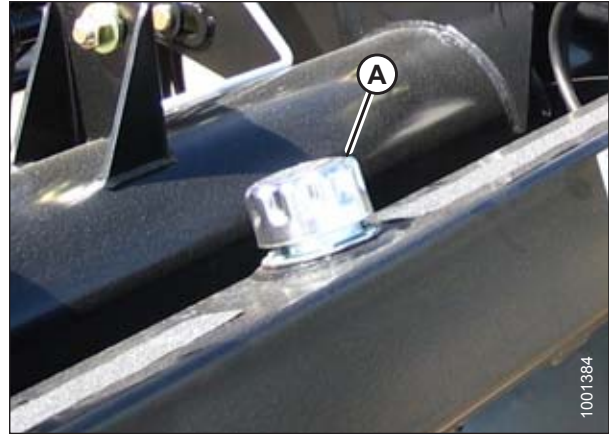


Figure 5.29: Oil Reservoir Filler Cap

5.4.3 Changing Oil in Hydraulic Reservoir

Change the hydraulic oil in the reservoir every 1000 hours or 3 years (whichever comes first).

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Start engine.
2. Engage the header to warm up the oil.
3. Shut down the combine, and remove the key from the ignition.
4. Place a suitably sized container (at least 40 liters [10 gallons]) under each of the two oil drain plugs (A) located at the back on each side of the frame.
5. Remove the oil drain plugs (A) with a 1-1/2 in. hex socket and allow the oil to drain.
6. Replace the oil drain plugs (A) when reservoir is empty.
7. Change the oil filter if required. Refer to [5.4.4 Changing Oil Filter, page 392](#).
8. Add approximately 75 liters (20 gallons) of oil to the reservoir. Refer to [5.4.2 Adding Oil to Hydraulic Reservoir, page 390](#).

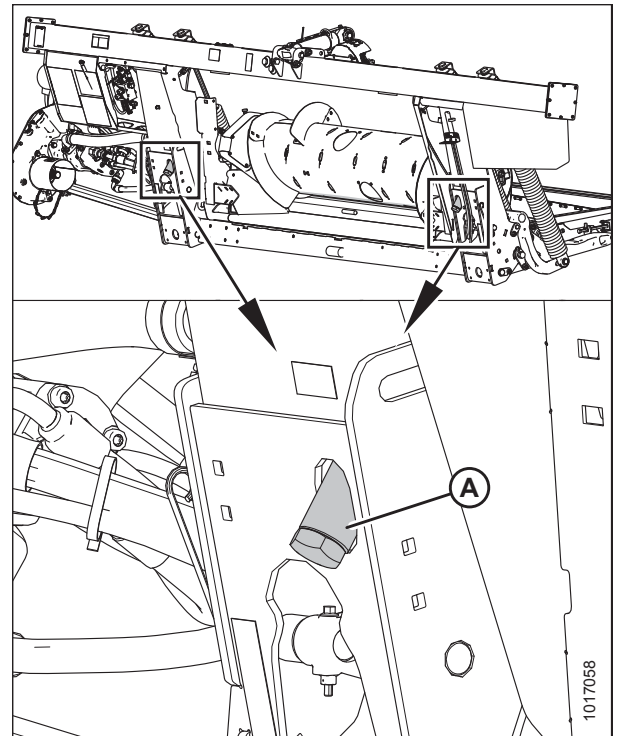


Figure 5.30: Reservoir Drain

5.4.4 Changing Oil Filter

Change the oil filter after the first 50 hours of operation and every 250 hours thereafter.

Obtain filter part (MD #202986) from your MacDon Dealer.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Clean around the mating surfaces of the filter (B) and manifold (A).
2. Place a suitably sized container (approximately 1 liter [0.26 gallons]) under the oil drain spout (C) to collect oil runoff.
3. Remove the spin-off filter (B) and clean the exposed filter port in the manifold (A).
4. Apply a thin film of clean oil to the O-ring provided with the new filter.
5. Turn the new filter into the manifold (A) until the O-ring contacts the mating surface. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the new filter. Overtightening can damage the O-ring and filter.

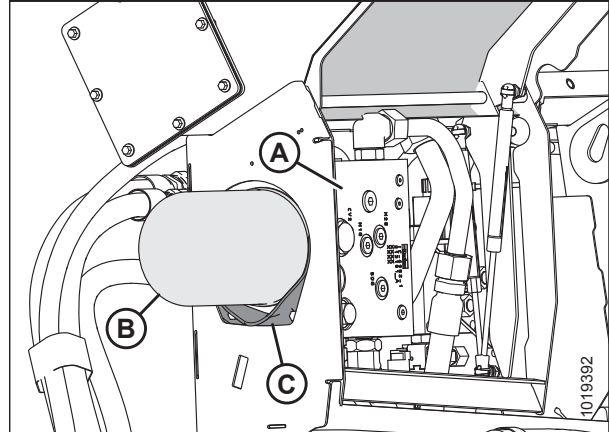


Figure 5.31: FM100 Hydraulics (Cover Opened to Show Manifold)

5.5 Electrical System

5.5.1 Replacing Light Bulbs

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Use a Phillips screwdriver to remove the screws (A) from the fixture, and remove the plastic lens. Retain screws (A).
2. Replace the bulb, and reinstall the plastic lens and screws.

NOTE:

Use bulb trade #1156 for amber transport lights and #1157 for red tail light (Slow Speed Transport option).

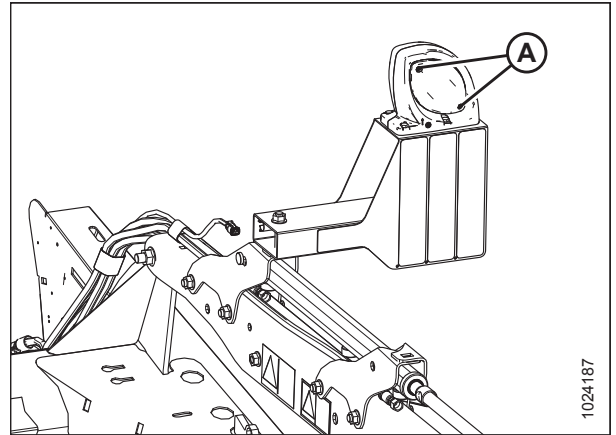


Figure 5.32: Left Transport Light (Export Shown)

5.6 Header Drive

The header drive consists of a driveline from the combine to the FM100 Float Module gearbox that drives the feed auger and hydraulic pumps. The pumps provides hydraulic power to the drapers, knives, and optional equipment.

5.6.1 Removing Driveline

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

NOTE:

The driveline normally remains attached to the float module and is stored on the support bracket provided when not in use.

1. If the float module is attached to the combine, remove the driveline from the combine by pulling the quick disconnect collar to release the driveline yoke at the combine shaft.
2. Remove the two nuts (A) securing the shield (B) to the gearbox.
3. Slide the shield (B) over the driveline shield to expose the quick disconnect on the gearbox. Do **NOT** disconnect the tether (C).
4. Pull the quick disconnect collar to release the driveline yoke, and pull the driveline off the gearbox shaft.
5. Slide the shield (B) off the driveline.

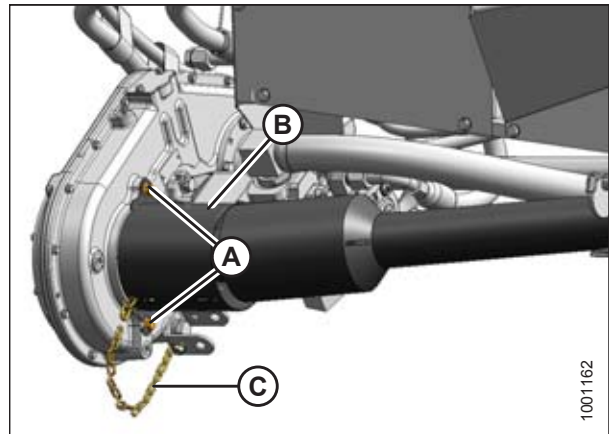


Figure 5.33: Float Module End of Driveline

6. Pull the driveline collar (A) away from the power take-off (PTO) support (B). Slide the yoke (C) off the support bracket (B), and release collar (A).

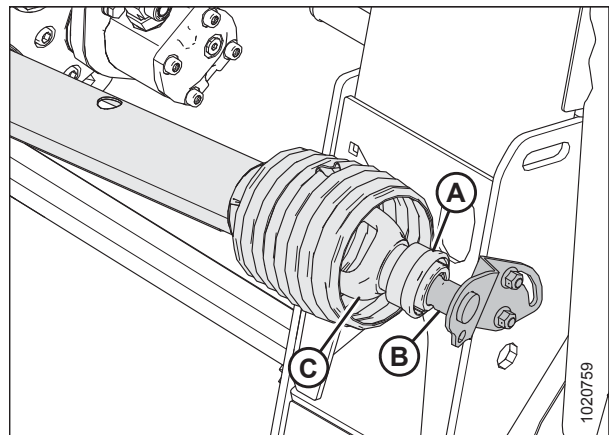


Figure 5.34: Combine End of Driveline

5.6.2 Installing Driveline

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

IMPORTANT:

If the combine output shaft splines match the float module input shaft splines, ensure the driveline is installed with the longer guard at the float module gearbox end.

IMPORTANT:

Ensure the driveline length corresponds with the length specifications for your specific equipment. Refer to [2.2 Specifications, page 23](#).

1. Position combine end of driveline (A) onto storage support (B). Pull back the collar (C) on the driveline and slide driveline onto support until it locks in place. Release collar (C).
2. For drivelines equipped with safety chains, attach chain (D) at combine end to driveline storage support (B).

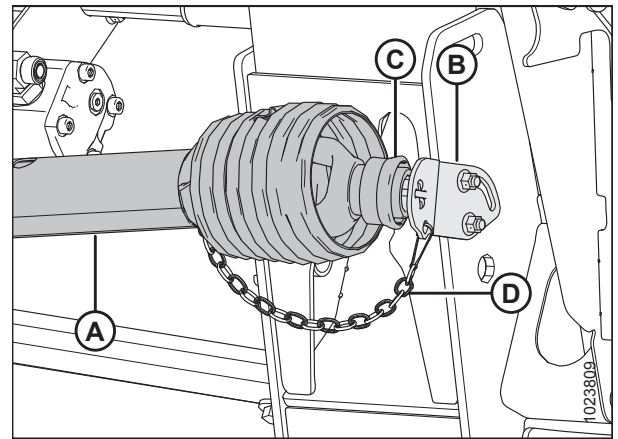


Figure 5.35: Combine End of Driveline

3. Slide the shield (A) over the driveline (B).
4. Position driveline quick disconnect onto float module gearbox shaft, pull back collar, and slide onto shaft until it locks in place. Release the collar.
5. Position the shield (A) on the gearbox and secure with bolts (C).
6. For drivelines equipped with safety chains, attach chain (D) at module end to chain (E) on shield.

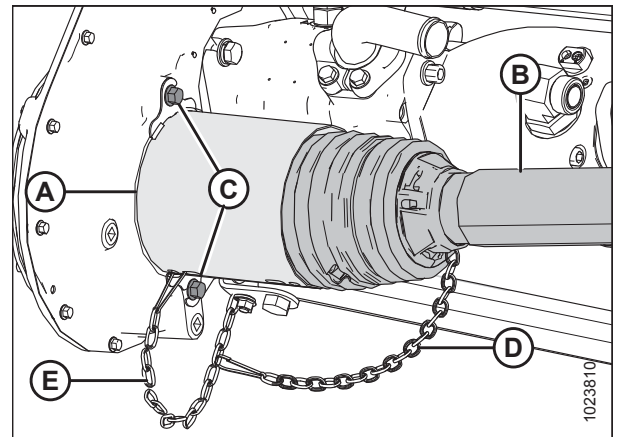


Figure 5.36: Float Module End of Driveline

5.6.3 Removing Driveline Guard

The main driveline guard must remain attached to the driveline during operation, but it can be removed for maintenance purposes.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

NOTE:

The driveline does **NOT** need to be removed from the float module in order to remove the driveline guard.

1. Shut down the combine, and remove the key from the ignition.
2. Pull the driveline collar (A) away from the power take-off (PTO) support (B). Slide the yoke (C) off the support bracket (B), and release collar (A).

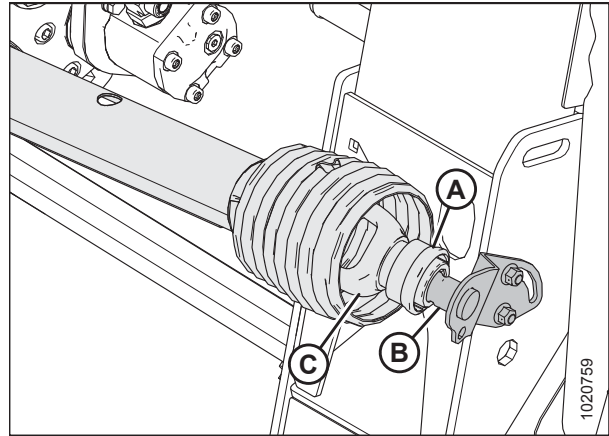


Figure 5.37: Combine End of Driveline

3. Lift the combine end of the driveline (A) from the hook, and extend the driveline until it separates. Hold the float module end of the driveline (B) to prevent it from dropping and hitting the ground.



Figure 5.38: Separated Driveline

MAINTENANCE AND SERVICING

4. Use a slotted screwdriver to release grease fitting/lock (A).



Figure 5.39: Driveline Guard

5. Rotate the driveline guard locking ring (A) counterclockwise using a screwdriver until the lugs (B) line up with the slots in the guard.
6. Pull the guard off the driveline.



Figure 5.40: Driveline Guard

5.6.4 Installing Driveline Guard

1. Slide the guard onto the driveline, and line up the slotted lug on the locking ring (A) with the arrow (B) on the guard.



Figure 5.41: Driveline Guard

2. Push the guard onto the ring until the locking ring is visible in the slots (A).



Figure 5.42: Driveline Guard

3. Use a slotted screwdriver to rotate ring (A) clockwise and lock ring in guard.



Figure 5.43: Driveline Guard

MAINTENANCE AND SERVICING

4. Push the grease fitting (A) back into the guard.



Figure 5.44: Driveline Guard

5. Assemble the driveline.

NOTE:

The splines are keyed to align the universals. Align weld (A) with the missing spline (B) when assembling.

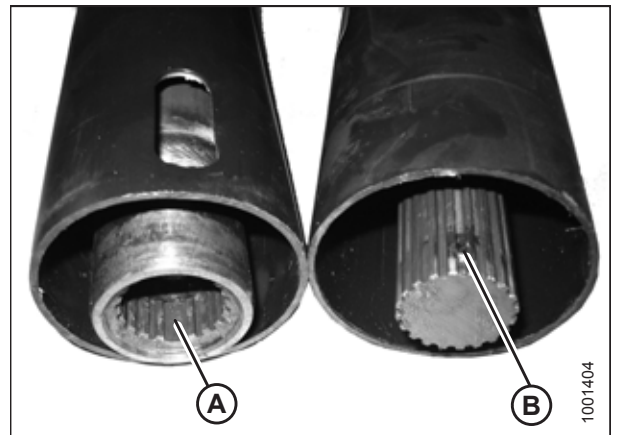


Figure 5.45: Driveline

6. Position the combine end of the driveline (A) on the power take-off (PTO) storage support (B). Pull back the collar (C) on the driveline and slide driveline onto the support until the driveline yoke (D) locks onto support. Release collar (C).

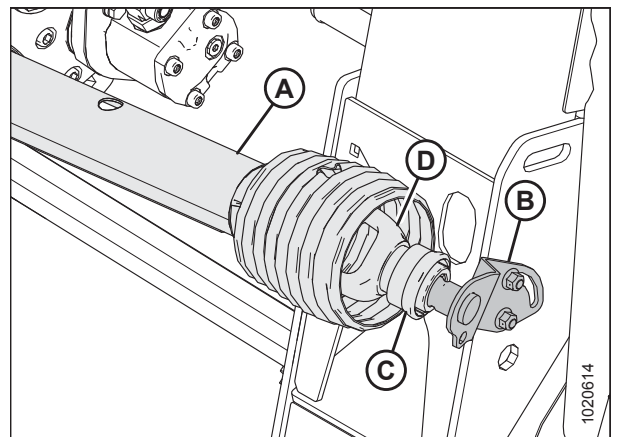


Figure 5.46: Combine End of Driveline

5.6.5 Adjusting Gearbox Drive Chain Tension

The gearbox drive chain tension is factory-set, but tension adjustments are required every 500 hours or annually (whichever comes first). The gearbox drive chain, located inside the gearbox, requires no other regular maintenance.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower the header.
2. Shut down the combine, and remove the key from the ignition.
3. Remove two bolts and the chain adjusting cover (A). Ensure there is no gasket (B) damage.
4. Remove the retainer plate (C).
5. Tighten bolt (D) to 6.8 Nm (60 lbf-in).
6. Refer to Table 5.1, page 400 and back off (loosen) bolt (D) based on your gearbox configuration.

NOTE:

For proper tensioning, the chain should have 10–14 mm (3/8–9/16 in.) of deflection at its midpoint.

7. Reinstall the retainer plate (C).
8. Reinstall the chain adjusting cover (A) and gasket (B). Torque hardware to 9.5 Nm (84 lbf-in).

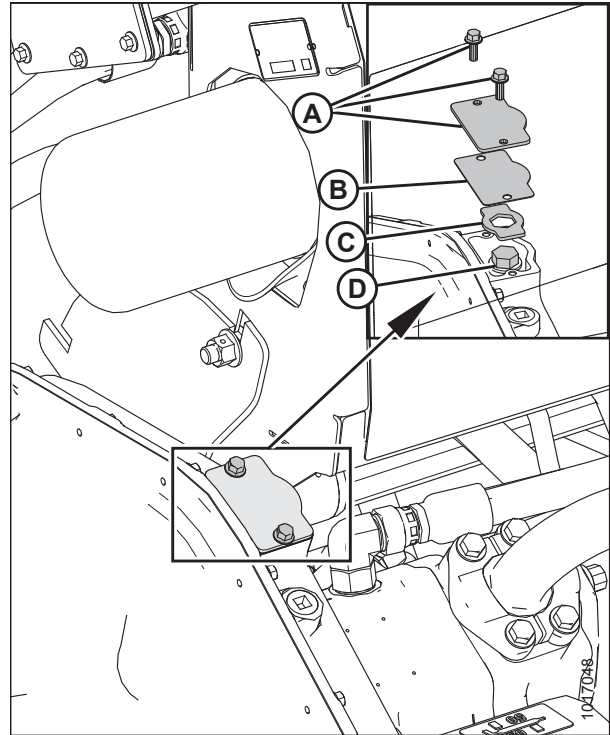


Figure 5.47: Chain Tensioner

Table 5.1 Adjusting Bolt Tightness on Configured Gearboxes

Gearbox Configuration	Gear Ratios	Back Off Amounts
CLAAS	22/38 sprocket ratio, 74 pitch chain	1 turn
Case, New Holland, and AGCO (Challenger, Gleaner, Massey Ferguson)	29/38 sprocket ratio, 78 pitch chain	1 turn
John Deere	37/38 sprocket ratio, 80 pitch chain	2-1/2 turn

5.7 Auger

The FM100 Float Module auger feeds the cut crop from the draper decks into the combine feeder house.

5.7.1 Adjusting Auger to Pan Clearance

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

IMPORTANT:

Maintain an appropriate distance between the auger and the auger pan. Too little clearance may result in the fingers or flighting contacting and damaging the feed draper or pan when operating the header at certain angles. Look for evidence of contact when greasing the float module.

1. Extend the center-link to the steepest header angle, and position the header 150–254 mm (6–10 in.) off the ground.
2. Shut down the combine, and remove the key from the ignition.
3. Ensure the float lock linkage is on the down stops (washer [A] cannot be moved) at both locations.

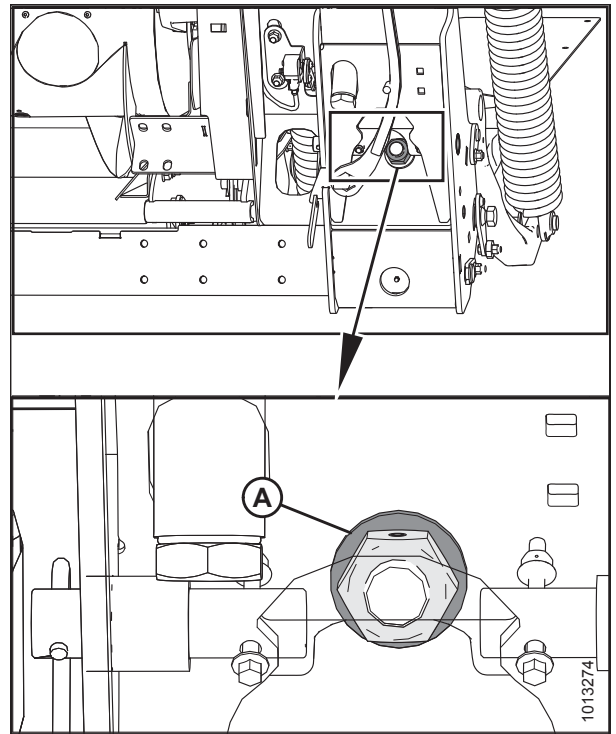


Figure 5.48: Float Lock

MAINTENANCE AND SERVICING

4. Before adjusting the auger to pan clearance, check the auger float position to determine how much clearance is required:
 - If the bolt head (A) is closest to the floating symbol (B), the auger is in the floating position.

CAUTION

Make sure the two bolts (A) are in the same location to prevent damage to the machine during operation.

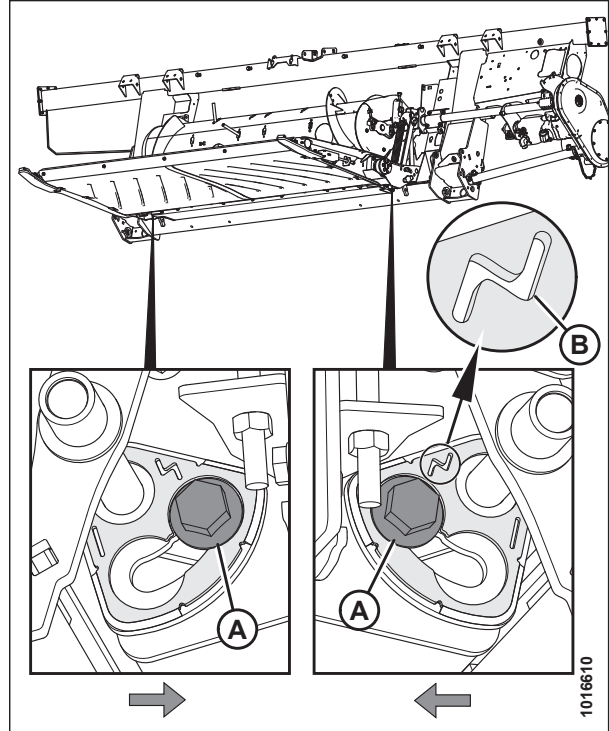


Figure 5.49: Floating Position

- If the bolt head (A) is closest to the fixed symbol (B), the auger is in the fixed position.

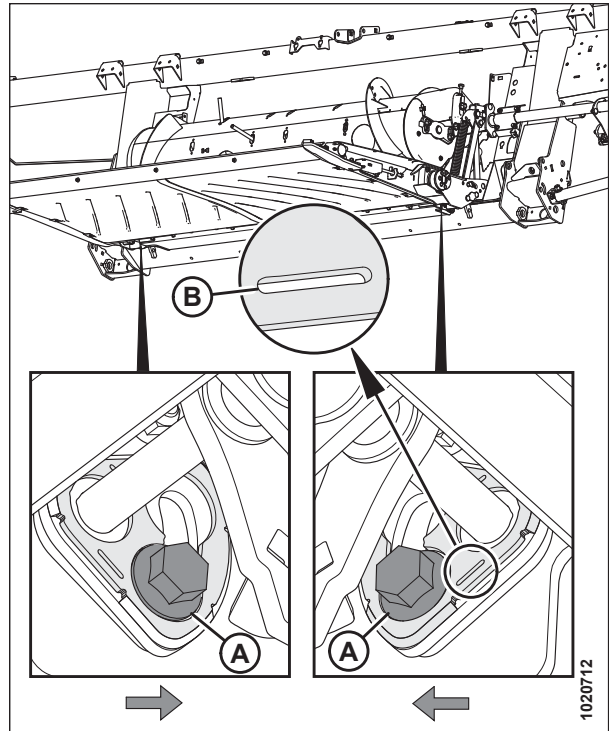


Figure 5.50: Fixed Position

MAINTENANCE AND SERVICING

5. Loosen two nuts (B).
6. Using the adjuster bolt (A), set clearance (C) to 22–26 mm (7/8–1.0 in.) if feed auger is in rigid position, and 11–15 mm (7/16–5/8 in.) if feed auger is in floating position. Turn bolt clockwise to increase clearance and counterclockwise to decrease clearance.

NOTE:

The clearance increases between 25–40 mm (1–1-1/2 in.) when the center-link is fully retracted.

7. Repeat Steps 5, [page 403](#) and 6, [page 403](#) for the opposite end of the auger.

IMPORTANT:

Adjusting one side of the auger can affect the other side so recheck both sides after final adjustment is made.

8. Tighten nuts (B) on both ends of the feed auger. Torque the nuts to 93–99 Nm (68–73 lbf·ft).

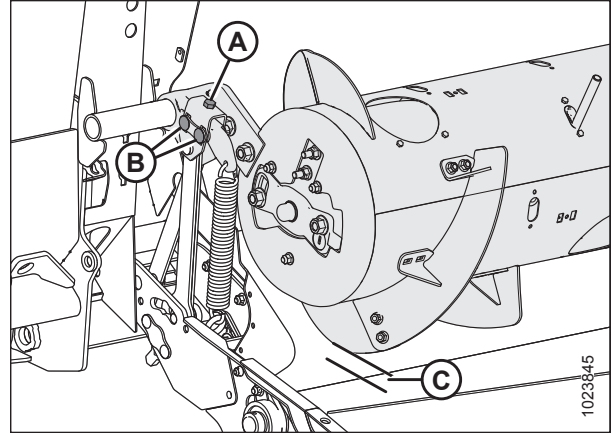


Figure 5.51: Auger Clearance

5.7.2 Checking Auger Drive Chain Tension

The auger is chain-driven by the float module drive system sprocket attached to the side of the auger.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower the header to the ground.
2. Raise the reel and engage the reel safety props. Refer to [Engaging Reel Safety Props, page 33](#).
3. Shut down the combine, and remove the key from the ignition.
4. Rotate the auger (A) by hand in reverse direction, until it cannot turn anymore.
5. Mark a line (B) across the drum and cover.

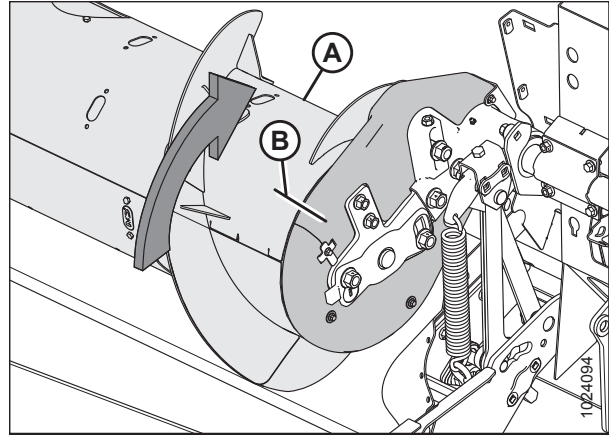


Figure 5.52: Auger Drive

6. Rotate the auger (A) by hand, in forward direction, until it cannot turn anymore.
7. Measure the distance between the two lines (B).

For a new chain:

- If the difference (B) is 1–4 mm (0.04–0.16 in.), no adjustment is required.
- If the difference (B) is greater than 4 mm (0.16 in.), the auger drive chain tension needs adjusting. Refer to [5.7.3 Adjusting Auger Drive Chain Tension, page 405](#).

For a used chain:

- If the difference (B) is 3–8 mm (0.12–0.31 in.), no adjustment is required.
- If the difference (B) is greater than 8 mm (0.31 in.), the auger drive chain tension needs adjusting. Refer to [5.7.3 Adjusting Auger Drive Chain Tension, page 405](#).
- If the difference (B) is less than 3 mm (0.12 in.), the auger drive chain needs adjusting. Refer to [5.7.3 Adjusting Auger Drive Chain Tension, page 405](#).

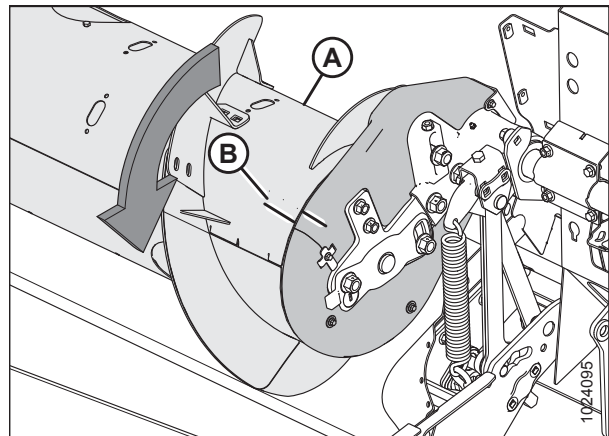


Figure 5.53: Auger Drive

5.7.3 Adjusting Auger Drive Chain Tension

The auger is chain-driven by the float module drive system sprocket attached to the side of the auger.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the combine, and remove the key from the ignition.
2. Detach the header from the combine. Refer to [4 Header Attachment/Detachment, page 311](#).
3. Loosen jam nut (B).
4. Loosen idler nut (A) slightly to allow idler to move by hand.
5. Rotate auger in reverse to take up slack in upper strand of chain.
6. Turn adjuster thumbscrew (C) clockwise to move the idler sprocket until it is finger tight only. Then back off 1-1/2 turns.

NOTE:

Do **NOT** overtighten.

7. Tighten thumbscrew jam nut (B).
8. Rotate auger forward to tighten top strand of chain and push idler against thumbscrew. Hold in place.
9. Tighten the idler nut (A) and torque to 258–271 Nm (190–200 lbf-ft).
10. Check chain tension. Refer to [5.7.2 Checking Auger Drive Chain Tension, page 404](#).

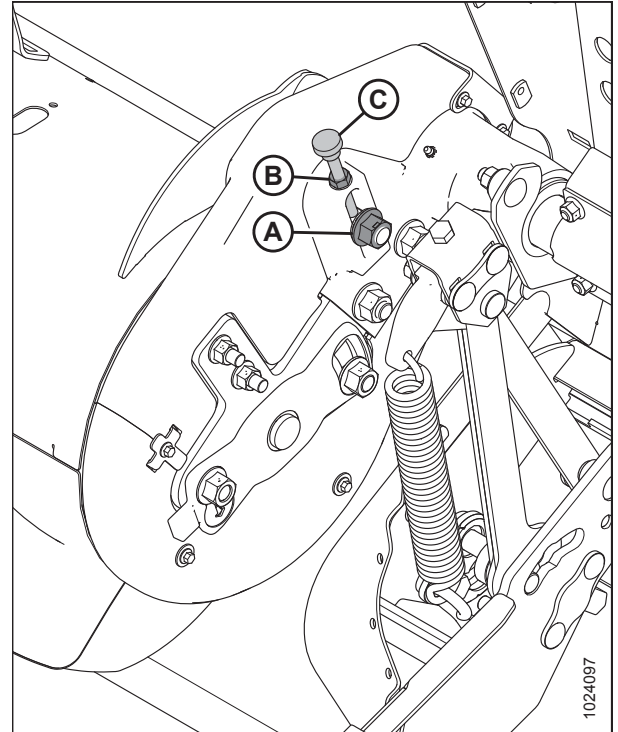


Figure 5.54: Auger Drive (Left and Right View)

5.7.4 Removing Auger Drive Chain

The chain tensioner can take up slack for only a single pitch. Replace the chain when the chain has worn or stretched beyond the limits of the tensioner.

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

NOTE:

Replace chain with endless chain (MD #220317).

1. Tilt header fully back to maximize space between auger and feed pan.
2. Detach header from combine. Refer to [4 Header Attachment/Detachment, page 311](#).

MAINTENANCE AND SERVICING

3. Remove the four bolts (A) and the inspection panel (B).
4. Remove the bolt and clamp (C) that holds the two covers (G) and (H) together.
5. Remove the two bolts and washers (D) that secure the bottom cover.
6. Remove the two bolts (E) and remove cover retainer (F).
7. Rotate top (G) and bottom (H) cover forward to remove.

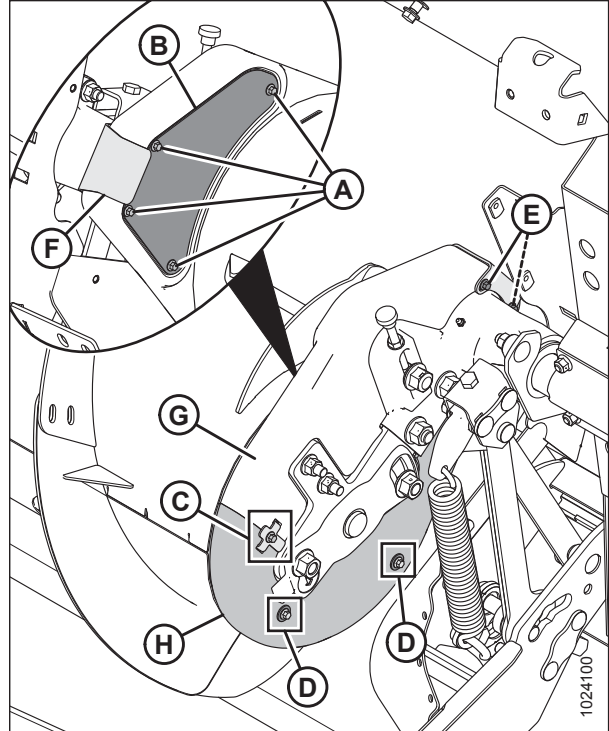


Figure 5.55: Auger Drive

8. Loosen jam nut (C) and turn thumbscrew (D) counterclockwise to release the bolt holding the sprocket (B) and to allow the sprocket to be raised up to release chain tension.

IMPORTANT:

Do **NOT** loosen the thin nut (E) on the inboard side of the idler sprocket spindle.

9. Loosen the idler sprocket nut (A), and raise the sprocket (B) to the uppermost position to release the tension on the chain. Tighten nut (A) to hold sprocket.
10. Remove screw (F) and washer (G).

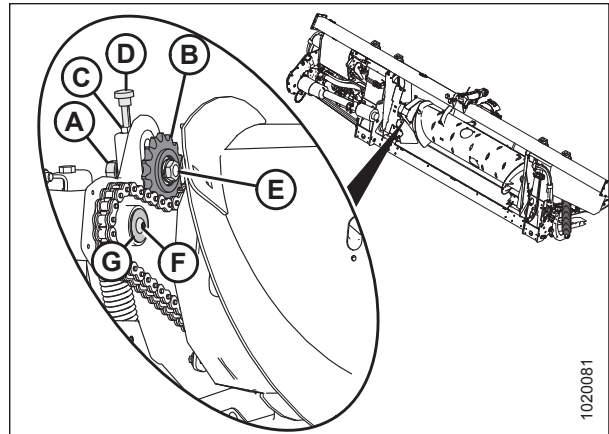


Figure 5.56: Auger Drive

MAINTENANCE AND SERVICING

11. Remove the two bolts and nuts (A), and separate the auger support arm from the casting.

NOTE:

A second person may be needed to lift or support the auger to remove the bolts.

NOTE:

The bolts on the left side of the auger are longer than the bolts on the right side.

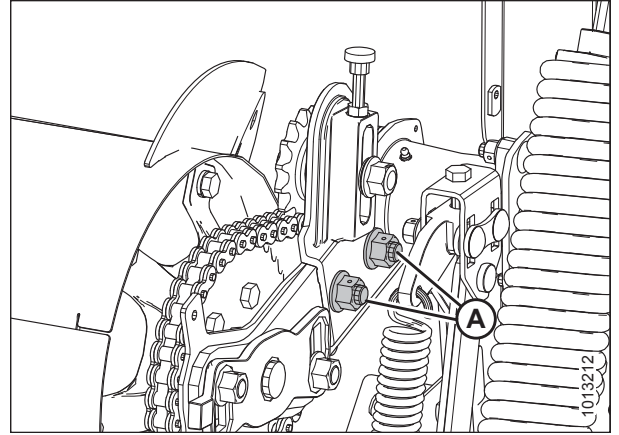


Figure 5.57: Auger Support Arm

12. Place a wooden block under the drive end of the auger (B) to prevent the auger from dropping and damaging the feed draper.
13. Use a pry bar (A) to slide the auger to the right.

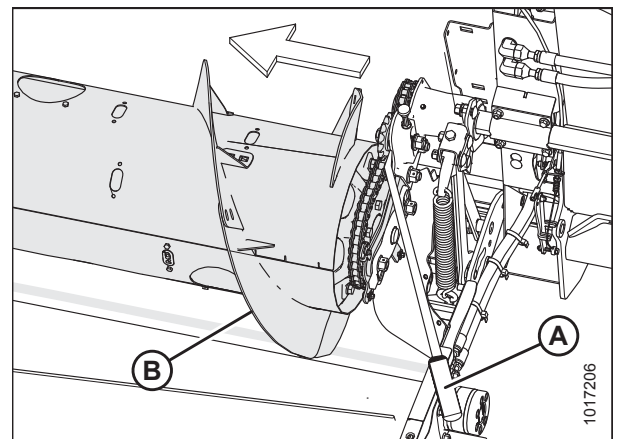


Figure 5.58: Auger Drive

14. Remove drive sprocket (A) and chain (B) from spline shaft.

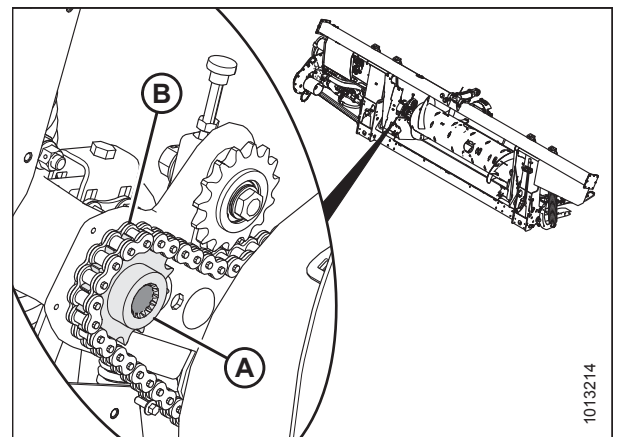


Figure 5.59: Auger Drive

MAINTENANCE AND SERVICING

15. Maneuver auger (A) sideways and forward so that endless chain (B) can be removed from auger.

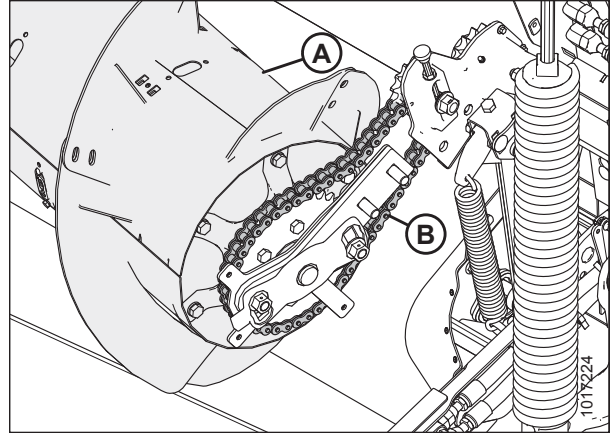


Figure 5.60: Auger Drive

5.7.5 Installing Auger Drive Chain

1. Place drive chain (B) over sprocket on drive side of auger (A).

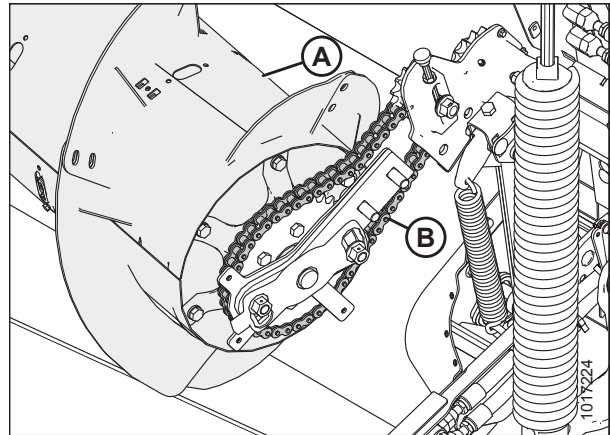


Figure 5.61: Auger Drive

2. Place the drive sprocket (A) into the chain (B) and align the sprocket onto the shaft.

NOTE:

The shoulder of the drive sprocket (A) faces the auger.

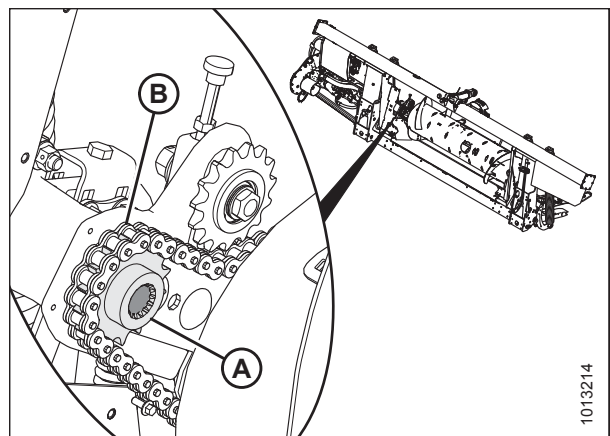


Figure 5.62: Auger Drive

MAINTENANCE AND SERVICING

3. Slide the drum assembly toward the casting and reinstall the two bolts and nuts (A).
4. Remove the block from under the auger.

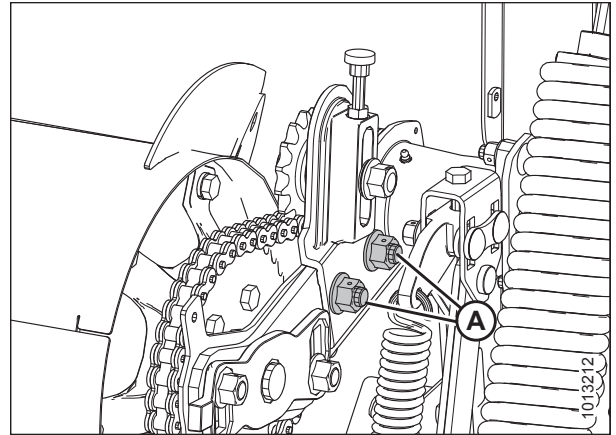


Figure 5.63: Auger Drive

5. Rotate the auger in reverse to take up the slack in the lower strand of the chain.

IMPORTANT:

Do **NOT** loosen the thin nut (C) on the inboard side of the idler sprocket spindle.

6. Turn the adjuster thumbscrew (D) clockwise to move the idler sprocket (B) until it is FINGER TIGHT ONLY.

NOTE:

Do **NOT** overtighten.

7. Tighten the idler nut (A) and torque to 258–271 Nm (190–200 lbf-ft).

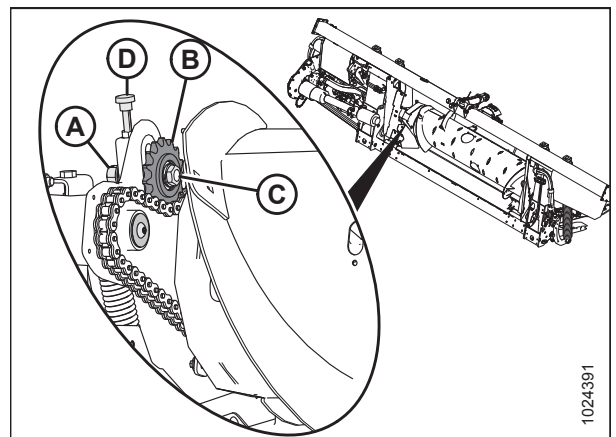


Figure 5.64: Auger Drive

8. Tighten the jam nut (A).
9. Apply medium strength thread locker to threads of screw (B).
10. Install washer (C) and secure it with screw (B).

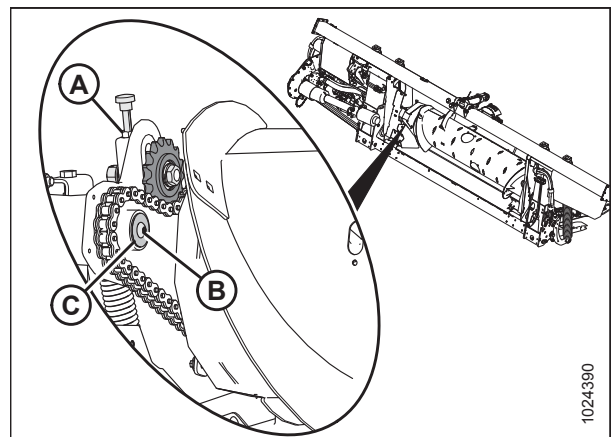


Figure 5.65: Auger Drive

MAINTENANCE AND SERVICING

11. Position bottom cover (H) and secure with two bolts (D).
12. Position top cover (G). Secure top and bottom cover with clamp and bolt (C).
13. Install inspection panel (B) and secure with four bolts (A). Tighten bolts (A) and torque to 2.7–4.1 Nm (24–36 lbf·in).
14. Install cover retainer (F) and secure with two bolts (E).

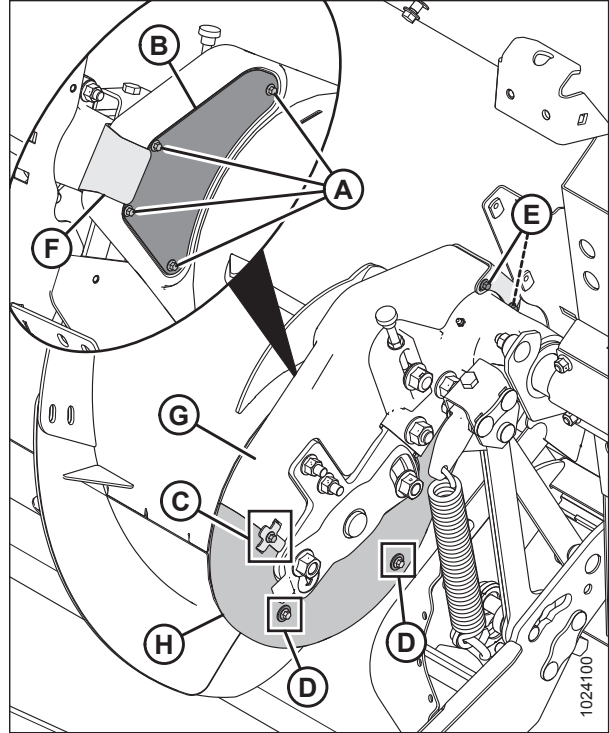


Figure 5.66: Auger Drive

5.7.6 Auger Fingers

The FM100 auger uses retracting tines to feed the crop into the combine feeder house. Some conditions may require the removal or installation of fingers for optimal crop feeding. Replace any worn or damaged fingers.

IMPORTANT:

Only install hollow fingers in a FM100. The use of solid fingers will cause severe damage to the machine.

Removing Feed Auger Fingers

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Raise the reel.
2. Shut down the combine, and remove the key from the ignition.
3. Engage the reel safety props.

MAINTENANCE AND SERVICING

4. Remove bolts (A) and remove the access cover (B) closest to the finger you are removing.

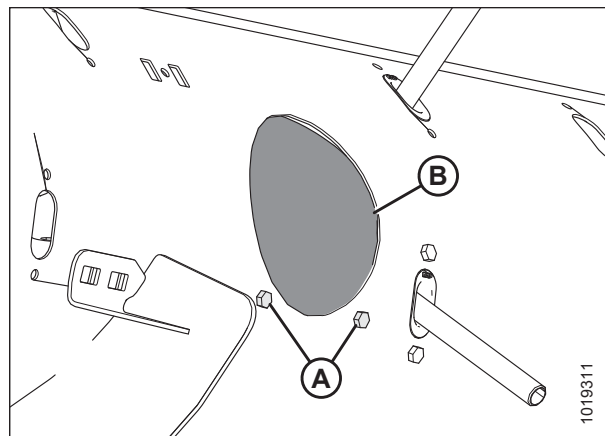


Figure 5.67: Auger Access Hole Cover

5. Remove hairpin (A), pull finger (B) out of finger holder (C) from inside the auger, and then remove the finger from the auger by pulling it out through plastic guide (D).

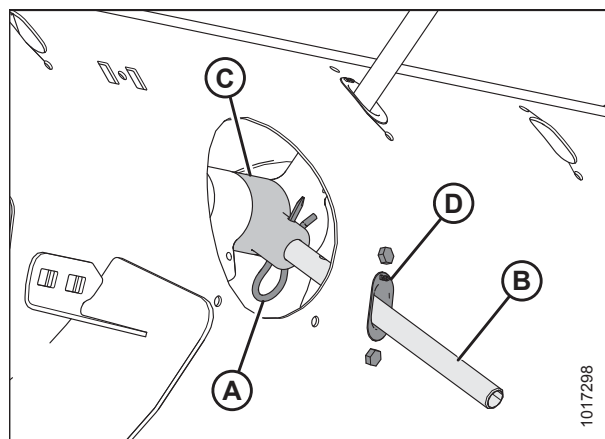


Figure 5.68: Auger Finger

6. Remove the bolts (A) and tee nuts securing the plastic guide (B) to the auger, and remove the guide from inside the auger.

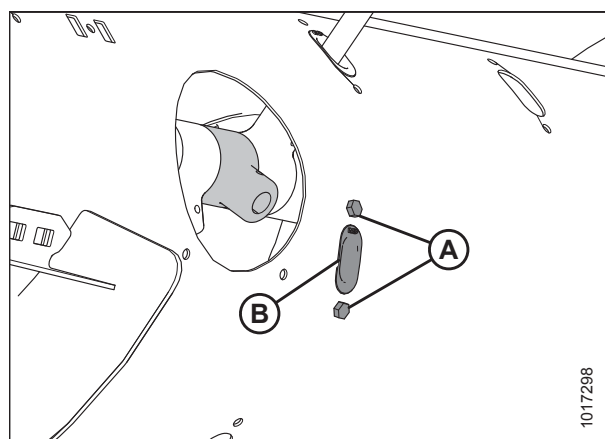


Figure 5.69: Auger Finger Hole

MAINTENANCE AND SERVICING

7. Coat bolts (B) with medium-strength threadlocker (Loctite® 243 or equivalent), and then position plug (A) into the hole from inside the auger, and secure with two bolts (B) and tee nuts. Torque to 8.5 Nm (75 lbf·in).

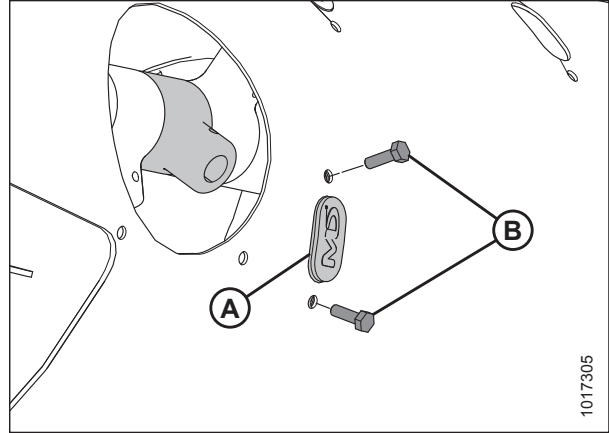


Figure 5.70: Plug

8. Coat bolts (A) with medium-strength threadlocker (Loctite® 243 or equivalent) and replace the access cover (B) using the bolts to secure the access cover in place. Torque bolts to 8.5 Nm (75 lbf·in).

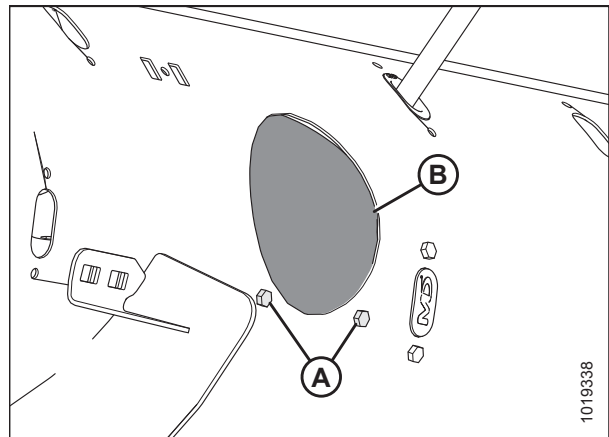


Figure 5.71: Auger Access Cover

Installing Feed Auger Fingers

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

NOTE:

Not all parts needed for this procedure are included in this kit, and depending on the original configuration of the feed auger, additional parts may need to be ordered. Refer to [3.7.1 Float Module Feed Auger Configurations, page 59](#) to see which parts are available.

1. Raise the reel.
2. Shut down the combine, and remove the ignition key.
3. Engage the reel safety props.

MAINTENANCE AND SERVICING

4. Remove bolts (A) and access cover (B) from the access cutout closest to the finger that needs to be installed or replaced.

If you are replacing an existing auger finger, refer to Step 5, [page 413](#), otherwise proceed to Step 7, [page 414](#) for installation instructions for new auger fingers.

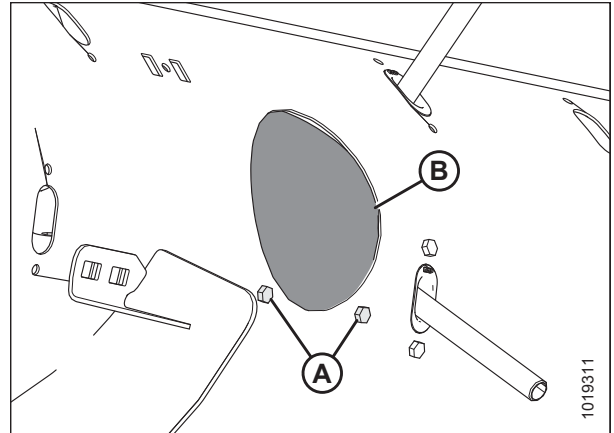


Figure 5.72: Auger Access Cover

Replacing an existing auger finger:

5. Remove the hairpin (A), pull the finger (B) out of the bushing (C) from inside the auger, and remove the finger from the auger by pulling it through the plastic guide (D).

NOTE:

Note the orientation of the hairpin (A). The round part should face the direction of auger rotation; the formed side (that is, the S-shaped side) must face the chain drive side of the auger.

If you are replacing the plastic finger guide before installing the auger finger, refer to Step 6, [page 413](#), otherwise refer to Step 9, [page 414](#).

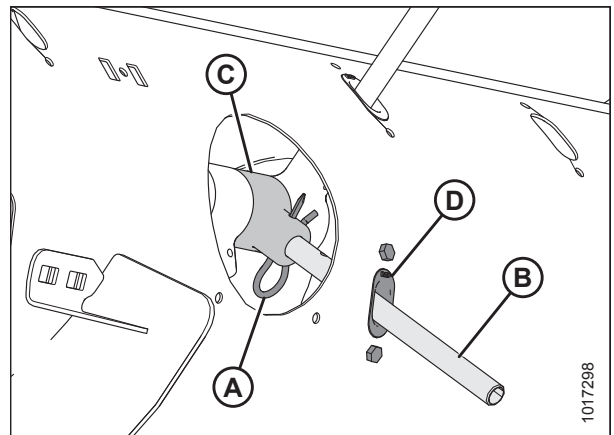


Figure 5.73: Auger Finger

6. Remove the bolts (A) securing the plastic finger guide (B) to the auger. Remove the guide (B) from inside the auger, and proceed to Step 8, [page 414](#).

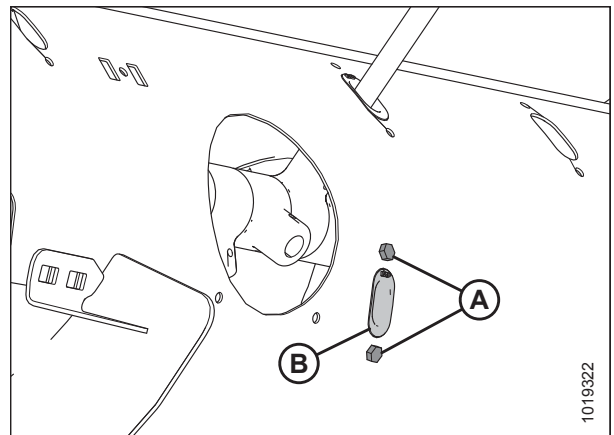


Figure 5.74: Auger Finger Hole

Installing a new auger finger:

7. Remove the two bolts (B), tee nuts, and plug (A).

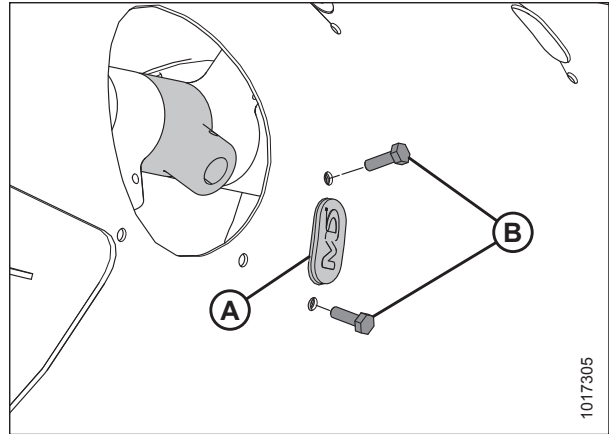


Figure 5.75: Auger Finger Hole

8. Coat bolts (A) with medium-strength threadlocker (Loctite® 243 or equivalent), and then insert the plastic finger guide (B) from inside the auger and secure it with bolts and tee nuts. Torque bolts to 8.5 Nm (75 lbf-in).

NOTE:

When installing additional fingers, ensure you install an equal number on each side of the auger.

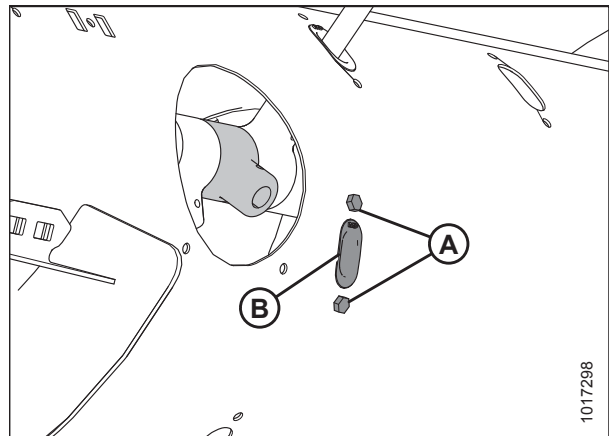


Figure 5.76: Auger Finger Hole

9. From inside the auger, insert the new auger finger (B) through the plastic guide (D).
10. Insert the finger (B) into finger holder (C) and secure with hairpin (A).

NOTE:

Note the orientation of the hairpin (A). The round part should face the direction of auger rotation; the formed side (that is, the S-shaped side) must face the chain drive side of the auger.

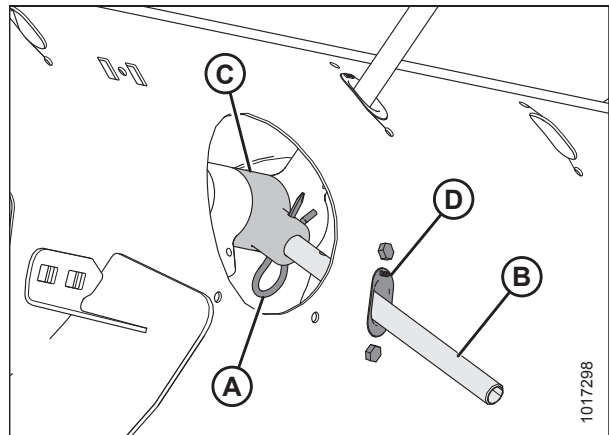


Figure 5.77: Auger Finger

MAINTENANCE AND SERVICING

11. Coat bolts (A) with medium-strength threadlocker (Loctite® 243 or equivalent), then replace the access cover (B) and secure with bolts. Torque to 8.5 Nm (75 lbf·in).

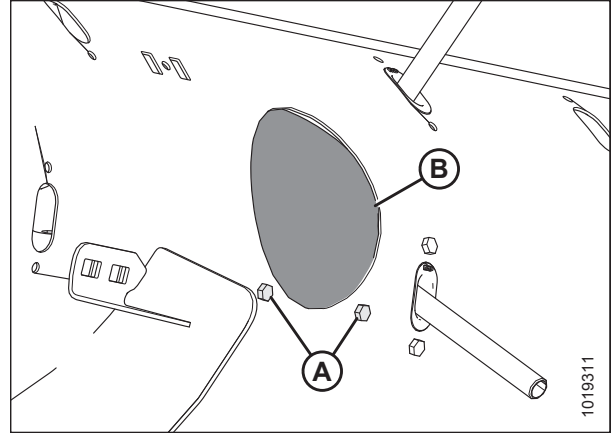


Figure 5.78: Auger Access Cover

Replacing Feed Auger Finger Guides

1. Remove finger (A). Refer to [Removing Feed Auger Fingers](#), page 410.
2. Remove the two bolts securing guide (B) to the feed auger.

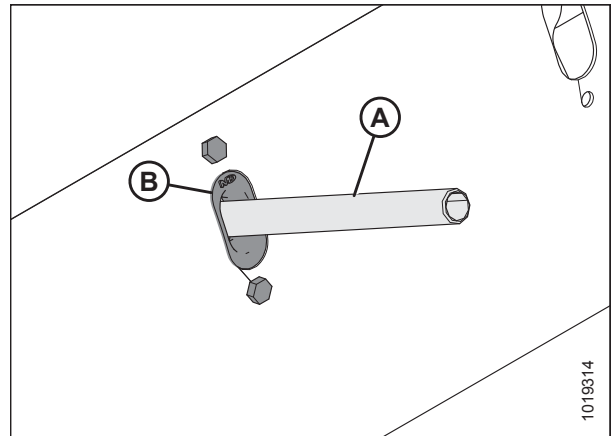


Figure 5.79: Auger Finger

3. From inside the auger, position the plastic guide (B) and secure with bolts (A).
4. Replace the finger. Refer to [Installing Feed Auger Fingers](#), page 412.

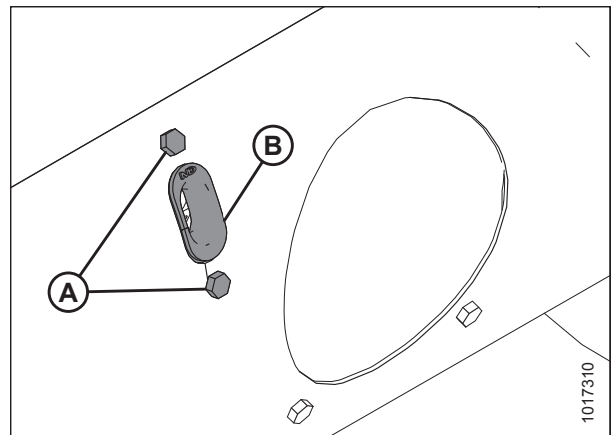


Figure 5.80: Auger Finger Guide

MAINTENANCE AND SERVICING

Using Auger Flighting

The auger flighting on the FM100 can be configured for specific combines and crop conditions. Refer to [3.7.1 Float Module Feed Auger Configurations, page 59](#) for combine/crop specific configurations.

Auger Finger Timing

The point at which the auger fingers begin to protrude from the auger and the point when they are fully retracted into the auger cannot be adjusted. For special market conditions, a kit will be available to accommodate adjusting the finger timing. Contact your Dealer for details.

5.8 Knife

WARNING

Keep hands clear of the area between guards and knife at all times.

CAUTION

Wear heavy gloves when working around or handling knives.

CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to [5.1 Preparing Machine for Servicing, page 365](#).

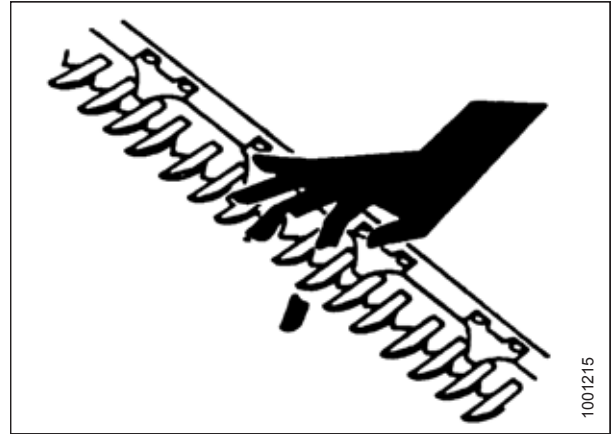


Figure 5.81: Cutterbar Hazard

5.8.1 Replacing Knife Section

Inspect the knife sections daily and ensure they are firmly bolted to the knife back and are not worn or damaged (worn and damaged sections leave behind uncut plants). Worn or damaged sections can be replaced without removing the knife from the cutterbar.

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

NOTE:

For dirty, sandy conditions, coarsely serrated knife sections last longer than finely serrated sections. Finely serrated sections perform best in thin-stemmed grasses and plants with fibrous stems.

MAINTENANCE AND SERVICING

1. Shut down the engine, and remove the key from the ignition.
2. Stroke the knife as required to center the knife section (A) between the guards (E).
3. Remove and retain nuts (B).
4. Remove bars (C) and lift the knife section (A) off the knife bar.
5. Remove the splice bar (D) if knife section is under the bar.
6. Clean dirt off the knife back, and position the new knife section onto the knife back.

IMPORTANT:

Do **NOT** mix finely and coarsely serrated knife sections on the same knife.

7. Reposition bars (C) and/or splice bars (D) and install nuts (B).

NOTE:

If replacing screws, ensure they are fully inserted. Do **NOT** use nuts to draw screws into the knife bar.

8. Torque nuts to 9.5 Nm (7 lbf-ft).

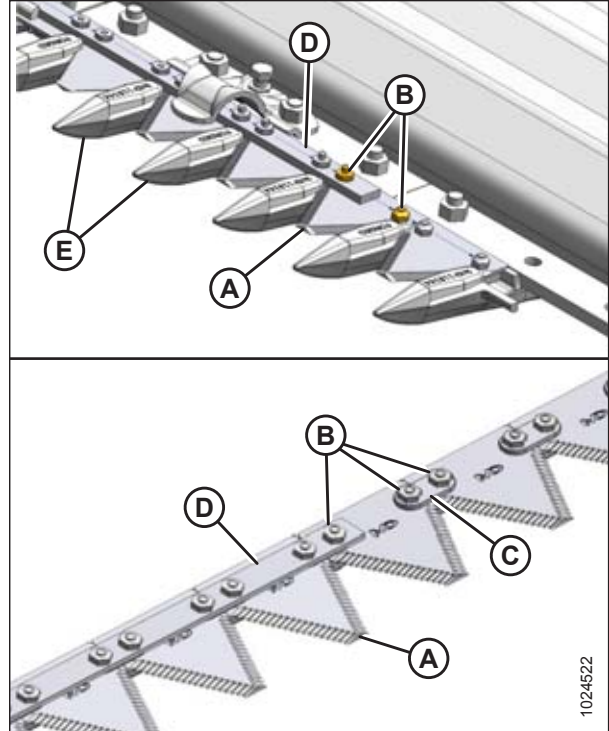


Figure 5.82: Cutterbar

5.8.2 Removing Knife

⚠ WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

⚠ WARNING

Stand to rear of knife during removal to reduce risk of injury from cutting edges. Wear heavy gloves when handling knife.

1. Shut down the engine, and remove the key from the ignition.
2. Manually stroke the knife to its outer limit.
3. Clean the area around the knifehead.
4. Remove the grease fitting (B) from the pin.
5. Remove bolt (A) and nut.
6. Use a screwdriver or chisel in slot (C) to release the load on the knifehead pin.
7. Use a screwdriver or chisel to pry the pin upwards in the pin groove until the pin is clear of the knifehead.

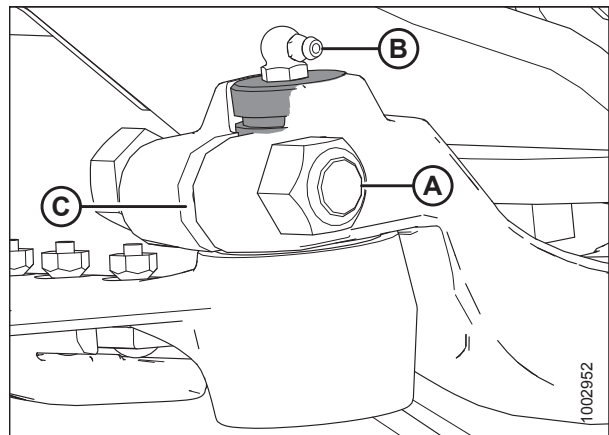


Figure 5.83: Knifehead

8. Push the knife assembly inboard until it is clear of the output arm.
9. Seal the knifehead bearing with plastic or tape unless it is being replaced.
10. Wrap a chain around the knifehead and pull out the knife.

5.8.3 Removing Knifehead Bearing

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

WARNING

Stand to rear of knife during removal to reduce risk of injury from cutting edges. Wear heavy gloves when handling knife.

IMPORTANT:

Repeat this procedure for each knife.

1. Shut down the engine, and remove the key from the ignition.
2. Remove the knife. Refer to [5.8.2 Removing Knife, page 418](#).

NOTE:

Because the bearing is being replaced, it is not necessary to wrap the knifehead to protect the bearing.

3. Use a flat-ended tool with the same approximate diameter as the pin (A). Tap the seal (B), bearing (C), plug (D), and O-ring (E) from the underside of the knifehead.

NOTE:

Seal (B) can be replaced without removing the bearing. When changing the seal, check the pin and needle bearing for wear and replace if necessary.

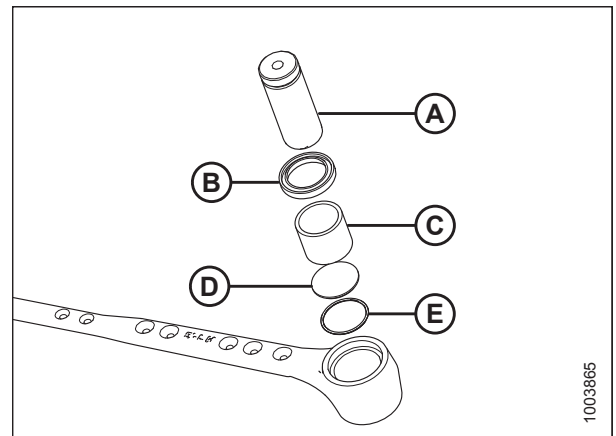


Figure 5.84: Knifehead Bearing Assembly

5.8.4 Installing Knifehead Bearing

1. Place O-ring (E) and plug (D) into knifehead.

IMPORTANT:

Install the bearing with the stamped end (the end with the identification markings) facing up.

2. Use a flat-ended tool (A) with the same approximate diameter as the bearing (C), and push the bearing into the knifehead until the top of the bearing is flush with the step in the knifehead.
3. Install seal (B) into knifehead with the lip facing outwards.

IMPORTANT:

To prevent premature knifehead or knife drive box failure, ensure there's a tight fit between the knifehead pin and the needle bearing, and also between the knifehead pin and the output arm.

4. Install the knife. Refer to [5.8.5 Installing Knife, page 420](#).

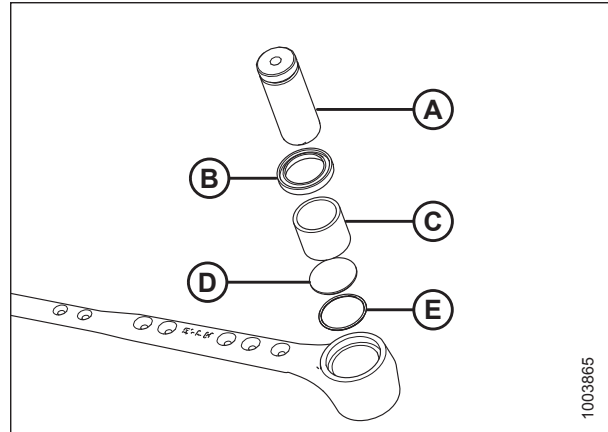


Figure 5.85: Knifehead Bearing Assembly

5.8.5 Installing Knife

⚠ WARNING

Stand to rear of knife during installation to reduce risk of injury from cutting edges. Wear heavy gloves when handling knife.

1. Slide the knife into place and align the knifehead with the output arm.

NOTE:

Remove the grease fitting from the knifehead pin for easier installation of knifehead pin.

2. Install the knifehead pin (A) through the output arm (C) and into the knifehead.
3. Set the groove (B) in the knifehead pin 1.5 mm (1/16 in.) above the output arm (C). Secure with 5/8 x 3 in. hex head bolt and nut (D), and torque to 217 Nm (160 lbf·ft).

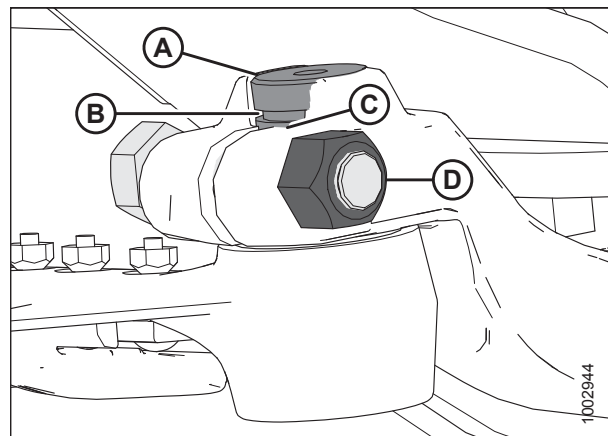


Figure 5.86: Knifehead

MAINTENANCE AND SERVICING

4. Install the grease fitting (A) into the knifehead pin, and turn the grease fitting for easy access.

IMPORTANT:

Slowly apply grease to the knifehead until slight downward movement of the knifehead is observed. Do **NOT** overgrease the knifehead. Overgreasing leads to knife misalignment causing excessive heating of guards and overloading of drive systems. If overgreasing occurs, remove the grease fitting to release pressure.

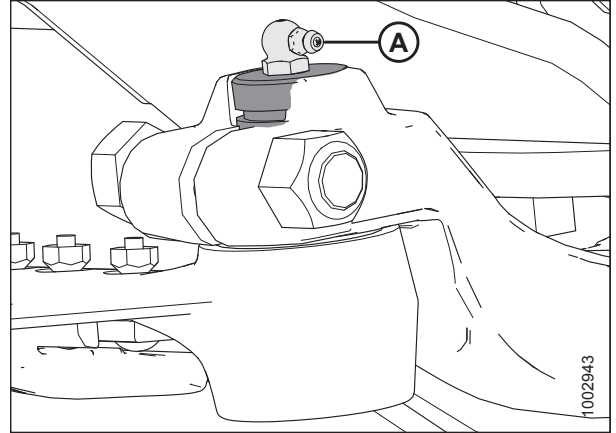


Figure 5.87: Knifehead

5.8.6 Spare Knife

A spare knife can be stored in the header frame tube (A) at the left end. Ensure the spare knife is secured in place.

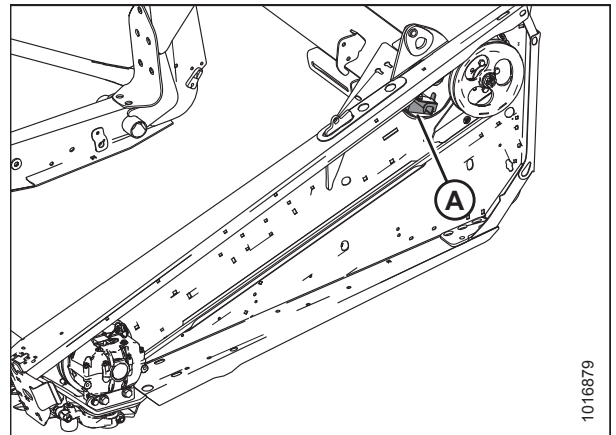


Figure 5.88: Spare Knife

5.8.7 Knife Guards

Perform **DAILY** inspections to ensure the knife guards are aligned and the knife sections are contacting the shear surfaces of the knife guards.

Adjusting Knife Guards

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

NOTE:

Use guard straightening tool (MD #140135) available from your MacDon Dealer.

1. Position the tool (A) as shown, and pull up to adjust the guard tips upwards.



Figure 5.89: Upward Adjustment

2. Position the tool (A) as shown, and push down to adjust the guard tips downwards.

NOTE:

If material is tough to cut, install stub guards with top guard and adjuster plate. A kit is available from your MacDon Dealer. Refer to [6.3.5 Stub Guard Conversion Kit](#), page 546.

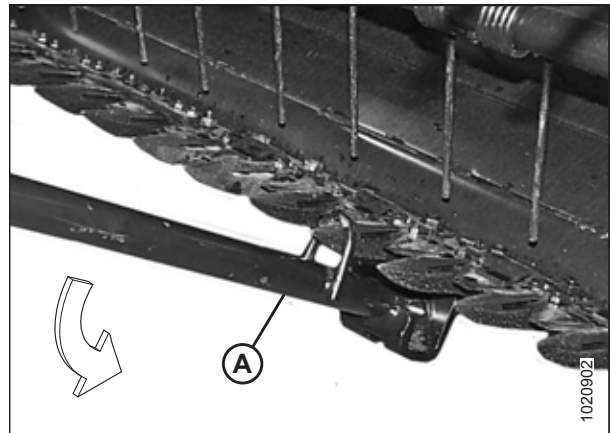


Figure 5.90: Downward Adjustment

Replacing Pointed Guards

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

Replacing standard and drive side guards

1. Shut down the combine, and remove the key from the ignition.
2. Stroke the knife manually until the knife sections are spaced midway between the guards.
3. Remove two nuts (B) and bolts attaching the guard (A) and hold-down (C) (if applicable) to the cutterbar.
4. Remove the guard (A), hold-down (C), and plastic wearplate (if installed).

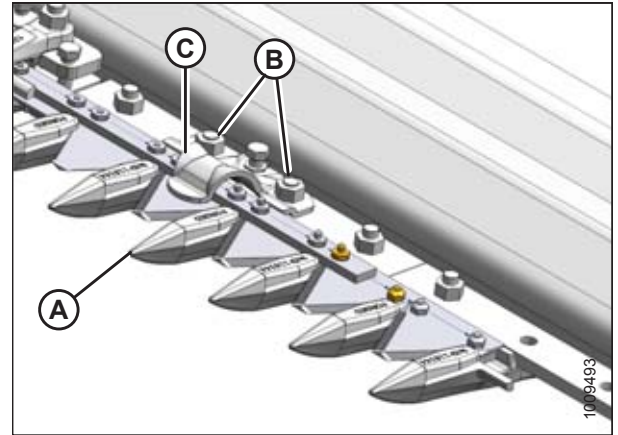


Figure 5.91: Pointed Guards

IMPORTANT:

The first four outboard guards (B) on the drive sides of the header do not have ledger plates. Ensure proper replacement guards are installed at these locations.

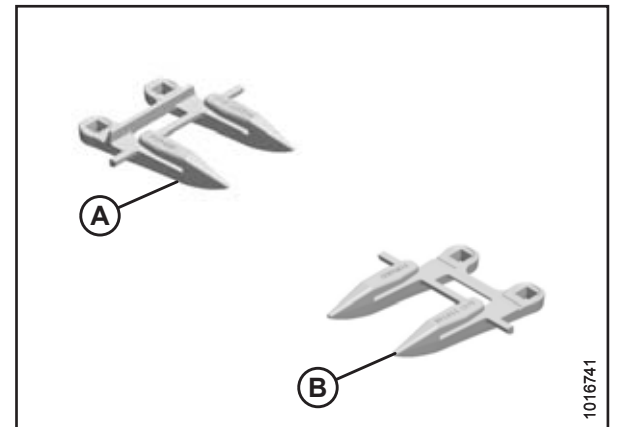


Figure 5.92: Pointed Guards

A - Standard

B - Drive Side

MAINTENANCE AND SERVICING

5. Position the new guard (A), hold-down (C), and plastic wearplate (if applicable) onto the cutterbar. Secure with two nuts (B) and bolts, but do **NOT** tighten.
6. Check and adjust the clearance between the hold-downs and the knife. Refer to [Checking Knife Hold-Downs, page 427](#).

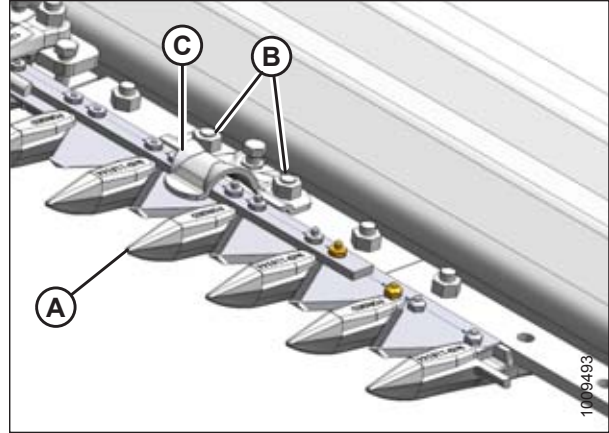


Figure 5.93: Pointed Guards

Replacing center guard

NOTE:

The guard at the center of a double-knife header (where the two knives overlap) requires a slightly different replacement procedure.

1. Shut down the combine, and remove the key from the ignition.
2. Remove the two nuts (B) and bolts attaching the guard (A) and top guide (C) to the cutterbar.
3. Remove the guard (A), plastic wearplate (if installed), top guide (C), and adjuster bar (D).

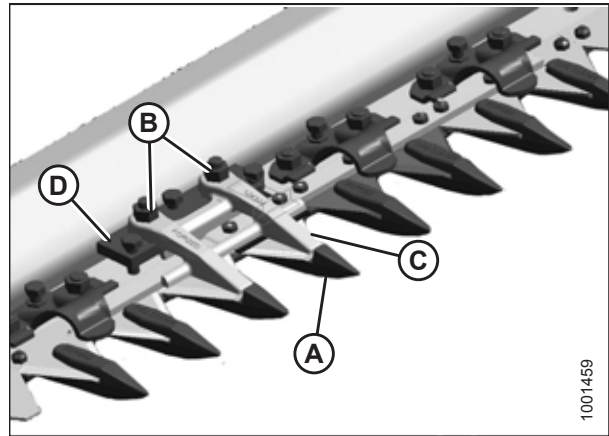


Figure 5.94: Center Guards

MAINTENANCE AND SERVICING

4. Position the plastic wearplate (if applicable), replacement center guard (A), adjuster bar, and top guide (B) onto the cutterbar. Install bolts, but do **NOT** tighten.

IMPORTANT:

Ensure the center guard (A) (right of the cutterbar split) has offset cutting surfaces.

NOTE:

The top guide (B) must accommodate the two overlapping knives at the center guard location. Ensure the proper replacement guard is installed at this location.

5. Check and adjust the clearance between the hold-down and knife. Refer to [Checking Knife Hold-Downs, page 427](#).

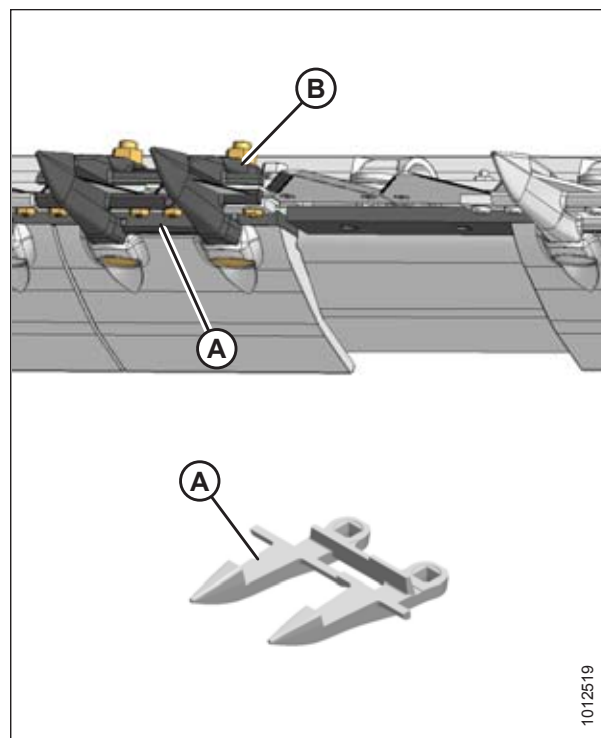


Figure 5.95: Center Guards

Replacing Stub Guards

Stub guards, complete with top guides and adjuster plates, are designed to cut tough crops and are factory-installed at the outer ends of specific headers

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

Replacing standard, drive side, and end guard

1. Shut down the engine, and remove the key from the ignition.
2. Stroke the knife manually until the knife sections are spaced midway between the guards.
3. Remove the two nuts (A) and bolts attaching the guard (B) and top guide (C) to the cutterbar.
4. Remove the guard (B), plastic wear plate (if installed), top guide (C), and adjuster bar (D).

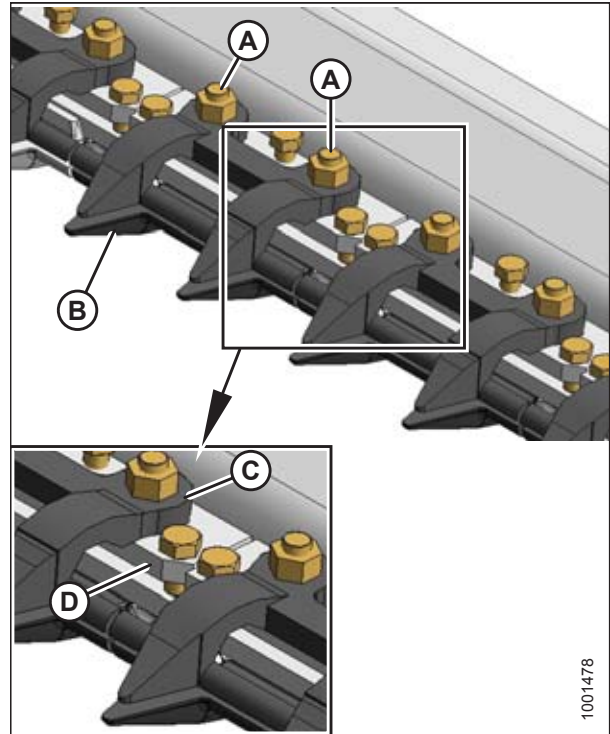


Figure 5.96: Stub Guards

IMPORTANT:

The first four outboard guards (B) on the drive sides of the header do not have ledger plates. Ensure the proper replacement guards are installed at these locations.

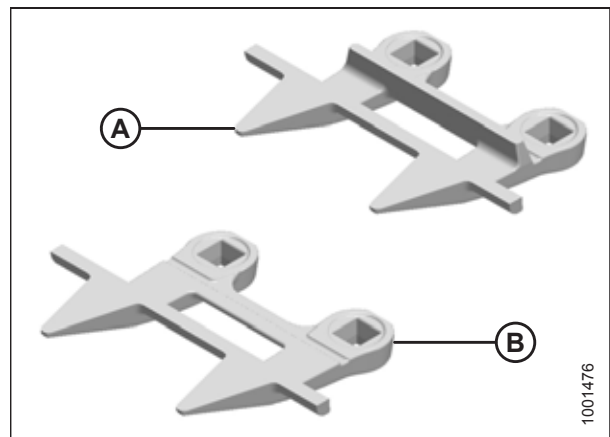


Figure 5.97: Stub Guards

A - Standard Guard

B - Drive Side Guard

MAINTENANCE AND SERVICING

5. Position the plastic wearplate (if applicable), replacement guard (B), adjuster bar (D), top guide (C), and install bolts and nuts (A). Do **NOT** tighten.
6. Check and adjust the clearance between the hold-downs and the knife. Refer to [Checking Knife Hold-Downs, page 427](#).

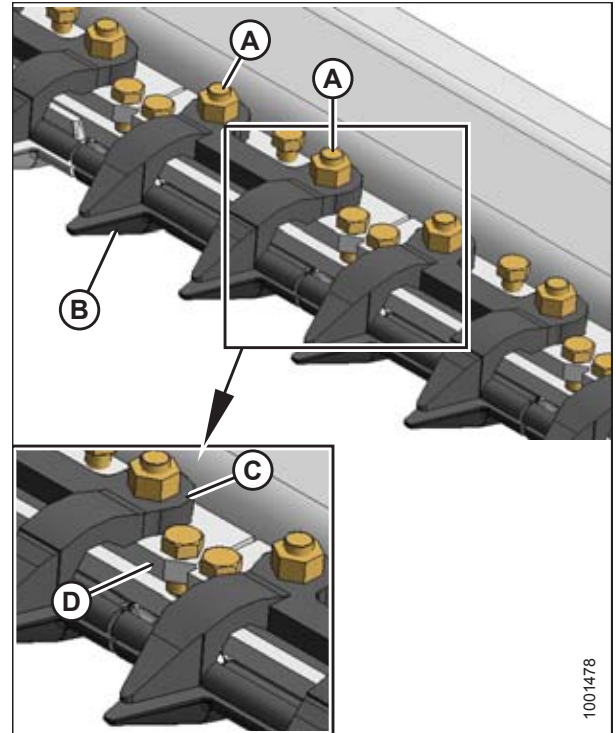


Figure 5.98: Stub Guards

Checking Knife Hold-Downs

Perform daily inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding. Use a feeler gauge to measure the clearance between the hold-downs and knife sections and refer to the following for adjustment procedures:

- [Adjusting Hold-Downs with Pointed Guards, page 428](#)
- [Adjusting Hold-Downs with Stub Guards, page 429](#)

NOTE:

Align guards prior to adjusting the hold-downs. Refer to [Adjusting Knife Guards, page 422](#).

Adjusting Hold-Downs with Pointed Guards

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the engine, and remove the key from the ignition.
2. Use a feeler gauge to measure the clearance between the normal guard hold-down (A) and the knife section. Ensure the clearance is 0.1–0.6 mm (0.004–0.024 in.).
3. To lower the front of the hold-down and decrease clearance, turn bolt (B) clockwise; to raise the front of the hold-down and increase clearance, turn bolt (B) counterclockwise.

NOTE:

For larger adjustments, it may be necessary to loosen nuts (C), turn adjuster bolt (B), and then retighten nuts.

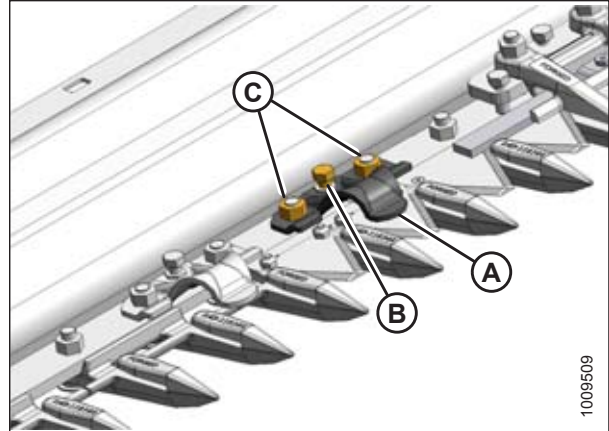


Figure 5.99: Normal Guard Hold-Down

4. Use a feeler gauge to measure the clearance between the center guard hold-down (A) and the knife section. Ensure the clearance is between the following measurements:
 - **At guide tip (B):** 0.1–0.4 mm (0.004–0.016 in.)
 - **At rear of guide (C):** 0.1–1.0 mm (0.004–0.040 in.)
5. Adjust the clearance as follows:
 - a. Tighten nuts (D) until finger tight.
 - b. Turn the three adjuster bolts (E) clockwise to raise the front of the hold-down and increase clearance, or counterclockwise to lower the front of the hold-down and decrease clearance.
 - c. Torque the nuts (D) to 72 Nm (53 lbf·ft) after all the adjustments are complete and the specified clearances are achieved.

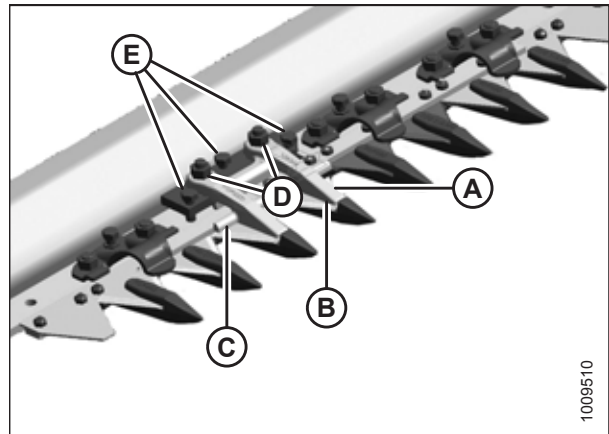


Figure 5.100: Center Guard Hold-Down

WARNING

Check to be sure all bystanders have cleared the area.

6. Complete the hold-down adjustments, run the header at low engine speed, and listen for noise caused by insufficient clearance.

NOTE:

Insufficient hold-down clearance will result in overheating of the knife and guards—readjust as necessary.

Adjusting Hold-Downs with Stub Guards

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the engine, and remove the key from the ignition.
2. Use a feeler gauge to measure the clearance between the stub guard hold-down (A) and the knife section. Ensure the clearance is between the following measurements:
 - **At guide tip (B):** 0.1–0.4 mm (0.004–0.016 in.)
 - **At rear of guide (C):** 0.1–1.0 mm (0.004–0.040 in.)
3. Adjust the clearance as follows:
 - a. Tighten nuts (D) until they are finger tight.
 - b. To lower the front of the hold-down and decrease clearance, turn the three adjuster bolts (E) clockwise; to raise the front of the hold-down and increase clearance, turn the adjuster bolts (E) counterclockwise.
 - c. Torque the nuts (D) to 72 Nm (53 lbf·ft) after all the adjustments are complete and the specified clearances are achieved.

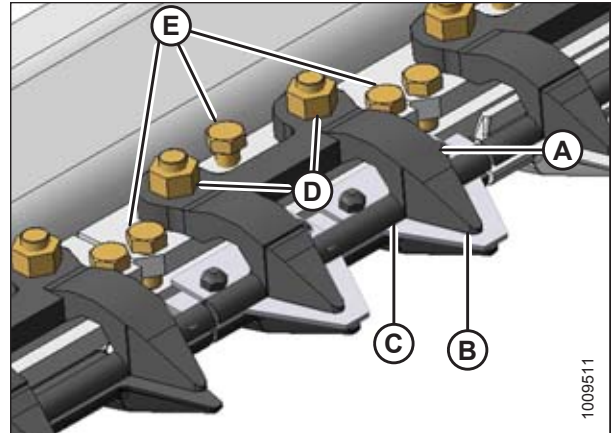


Figure 5.101: Stub Guards

WARNING

Check to be sure all bystanders have cleared the area.

4. Complete the hold-down adjustments, run the header at low engine speed, and listen for noise caused by insufficient clearance.

NOTE:

Insufficient hold-down clearance will result in overheating of the knife and guards—readjust as necessary.

5.8.8 Knifehead Shield

The knifehead shield attaches to the endsheet and reduces the knifehead opening to prevent cut crop from accumulating in the knifehead cut-out.

The shields and mounting hardware are available from your MacDon Dealer.

IMPORTANT:

Remove the shields when cutting with the cutterbar on the ground in muddy conditions. Mud may pack into the cavity behind the shield which could result in knife drive box failure.

Installing Knifehead Shield

The knifehead shield is supplied in flattened form, but it can be bent to suit installation on pointed or stub guard cutterbars. Knifehead shields differ slightly depending on header size and guard configuration, so ensure you are using the proper knifehead shield for your header. Refer to your parts catalog for proper replacement parts.

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

CAUTION

Wear heavy gloves when working around or handling knives.

1. Raise the reel to its full height, lower the header to the ground.
2. Shut down the engine, and remove the key from the ignition.
3. Engage the reel arm locks.
4. Place the knifehead shield (A) against the endsheet as shown. Align the shield so the cutout matches the profile of the knifehead and/or hold-downs.
5. Bend the knifehead shield (A) along the slit to conform to the endsheet.
6. Align the mounting holes and secure with two 3/8 x 1/2 in. Torx® head bolts (B).
7. Tighten the bolts (B) just enough to hold the knifehead shield (A) in place while allowing it to be adjusted as close to the knifehead as possible.
8. Rotate the knife drive box pulley manually to move the knife and check for areas of contact between the knifehead and knifehead shield (A). Adjust the shield to eliminate interference with the knife if necessary.
9. Tighten the bolts (B).

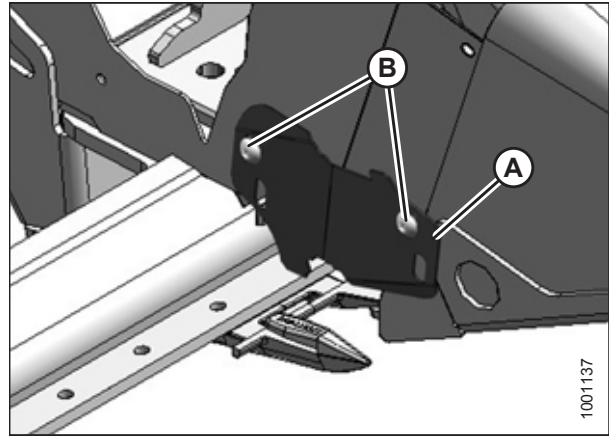


Figure 5.102: Knifehead Shield

5.9 Knife Drive System

5.9.1 Knife Drive Box

CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to [5.1 Preparing Machine for Servicing, page 365](#).

Double-knife headers have a knife drive box at each end. Knife drive boxes are belt driven by a hydraulic motor, and convert rotational motion into the reciprocating motion of the knife.

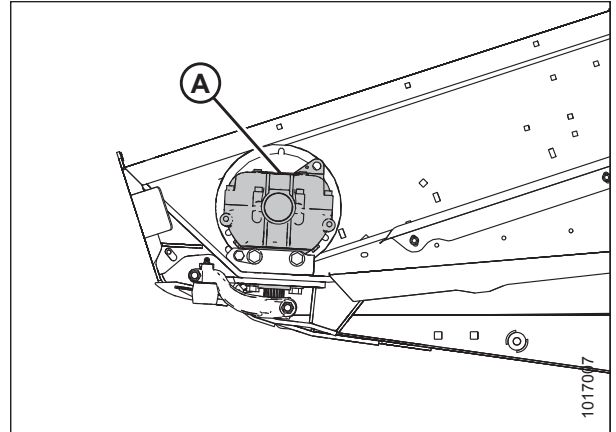


Figure 5.103: Left Side Knife Drive Box Shown – Right Side Similar

Checking Knife Drive Box

To access the knife drive box(es), endshield(s) must be fully opened. Single-knife headers have one knife-drive box and double-knife headers have two knife-drive boxes.

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Press down on the latch in the opening (A) on the inboard side of the endsheet.
2. Pull endshield open using handle depression (B).

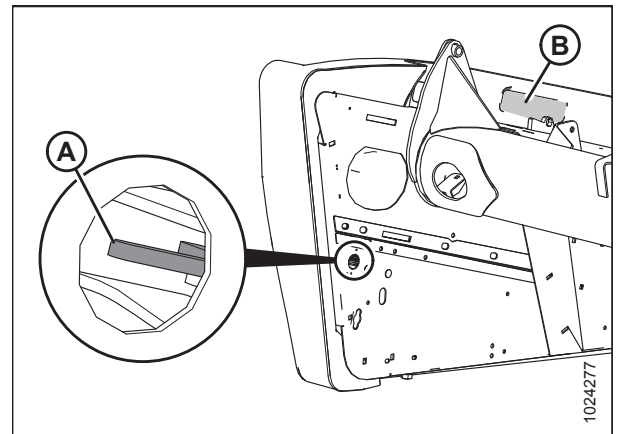


Figure 5.104: Endshield Latch Access

MAINTENANCE AND SERVICING

- Swivel the endshield toward the back of the header and use the safety latch (B) to secure the endshield support tube (A) to the endsheet.

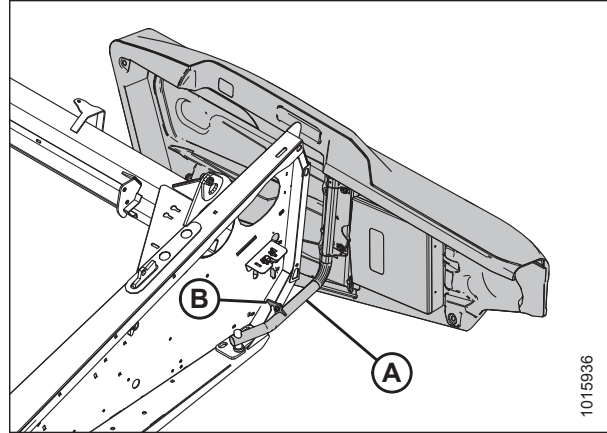


Figure 5.105: Left Endshield Support Tube

IMPORTANT:

The knife drive box breather is shipped in position (A) (forward) to prevent oil loss during transport. The breather **MUST** be repositioned to location (B) to prevent oil loss during normal operation. Failure to do so can result in damage to the knife drive box.

- Check position of plug (A) and breather (B) at knife drive box. Position **MUST** be as shown.
- Remove breather (B) and check oil level. The oil level should be between the bottom edge (C) of the lower hole (D) and the bottom (E) of the breather.

NOTE:

Check oil level with top of knife drive box horizontal and with the breather (B) screwed in.

- Reinstall breather and tighten.

Checking Mounting Bolts

Check the torque on the four knife drive box mounting bolts (A) and (B) after the first 10 hours operation and every 100 hours thereafter.

- Torque the side bolts (A) first, then torque the bottom bolts (B). Torque all bolts to 271 Nm (200 lbf·ft).

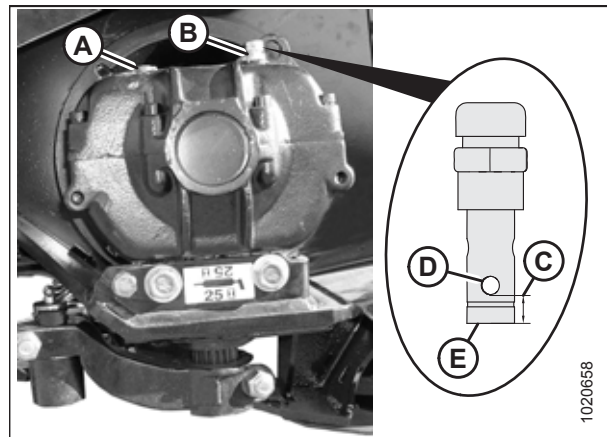


Figure 5.106: Knife Drive Box

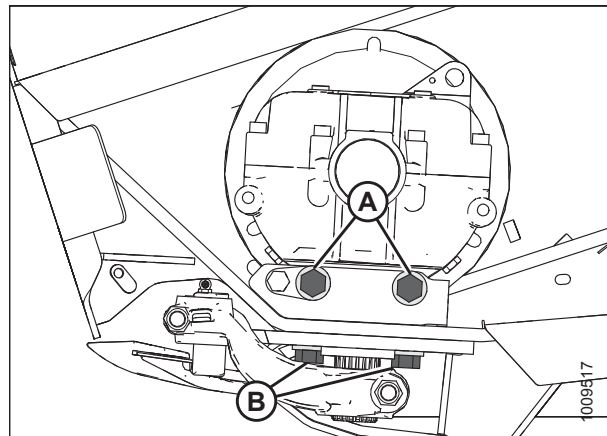


Figure 5.107: Knife Drive Box

Removing Knife Drive Box

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

For timed double-knife headers:

NOTE:

The procedure is the same for both ends of a timed double-knife header. Images shown are for the left end—the right end is opposite.

1. Shut down the combine, and remove the key from the ignition.
2. Open the endshield. Refer to [Opening Endshields, page 35](#).
3. Loosen the two nuts (A) on the idler bracket to relieve the belt tension.
4. Loosen the nut (B) on the idler pulley and slide the idler down to loosen the belt.
5. Proceed to Step 6, [page 434](#).

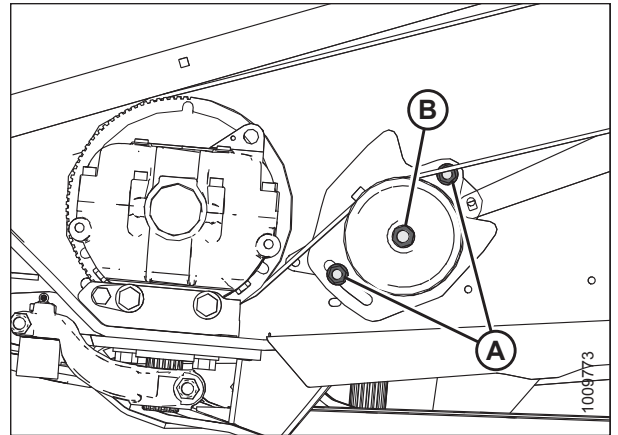


Figure 5.108: Timed Double-Knife Drive

For non-timed double-knife headers:

1. Shut down the combine, and remove the key from the ignition.
2. Open the endshield. Refer to [Opening Endshields, page 35](#).
3. Loosen the two bolts (A) securing the motor assembly to the header endsheet.
4. Loosen the belt tension by turning the tensioning bolt (B) counterclockwise.
5. Proceed to Step 6, [page 434](#).

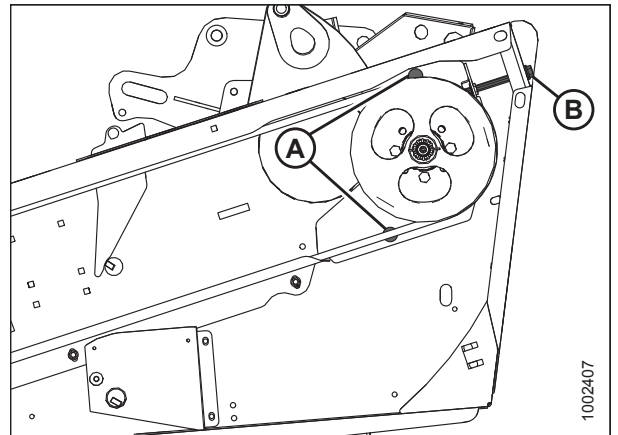


Figure 5.109: Non-Timed Double-Knife Drive

MAINTENANCE AND SERVICING

6. To provide clearance between the knife drive box pulley and the endsheet, open the access cover (A) on the endsheet behind the cutterbar.

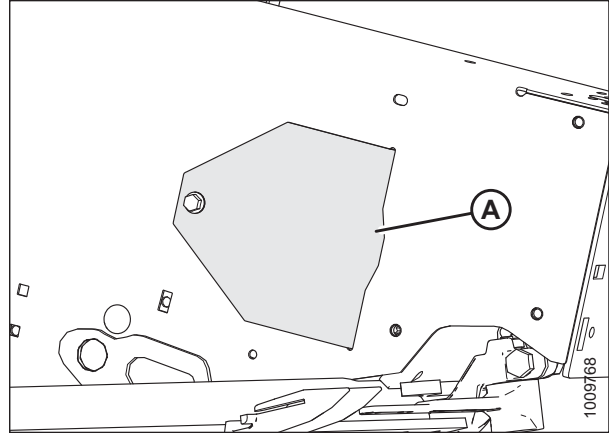


Figure 5.110: Access Cover

7. Remove the belt (A) from the drive pulley (B).
8. Slip the belt (A) over and behind the knife drive box pulley (C). Use the notch in the pulley to assist with belt removal.

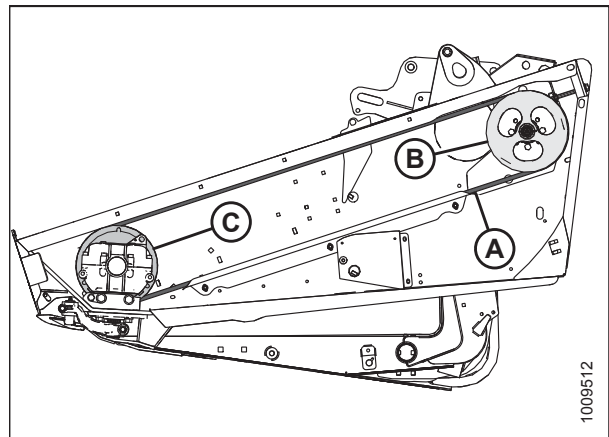


Figure 5.111: Knife Drive

9. Manually stroke the knife to its outer limit.
10. Clean the area around the knifehead.
11. Remove the grease fitting (B) from the pin.
12. Remove bolt (A) and nut.
13. Use a screwdriver or chisel in slot (C) to release the load on the knifehead pin.
14. Use a screwdriver or chisel to pry the pin upwards in the pin groove until the pin is clear of the knifehead.
15. Push the knife assembly inboard until it is clear of the output arm.
16. Seal the knifehead bearing with plastic or tape unless it is being replaced.

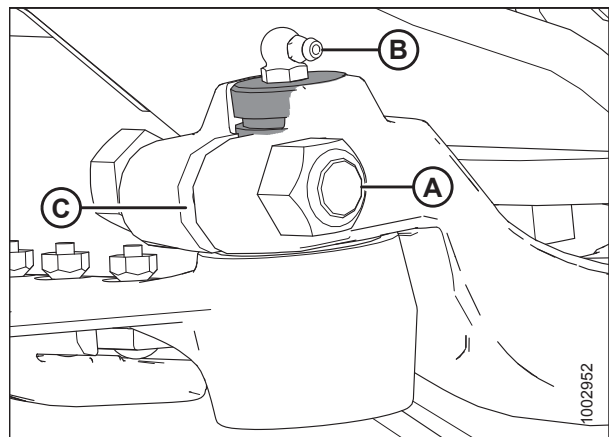


Figure 5.112: Knifehead

MAINTENANCE AND SERVICING

17. Remove the bolt (A) that clamps the knife drive arm (B) to the knife drive box output shaft.
18. Remove the knife drive arm (B) from the knife drive box output shaft.
19. Remove the four knife drive box mounting bolts (C) and (D).

NOTE:

Do **NOT** remove bolt (E); it is factory-set to properly position the knife drive box in the correct fore-aft position.



CAUTION

Knife drive box with pulley weighs over 35 kg (65 lb.) Use care when removing or installing. Lug (L) can be used for lifting.

20. Remove the knife drive box from the header and set aside.
21. Repeat procedure for the opposite end of the header.

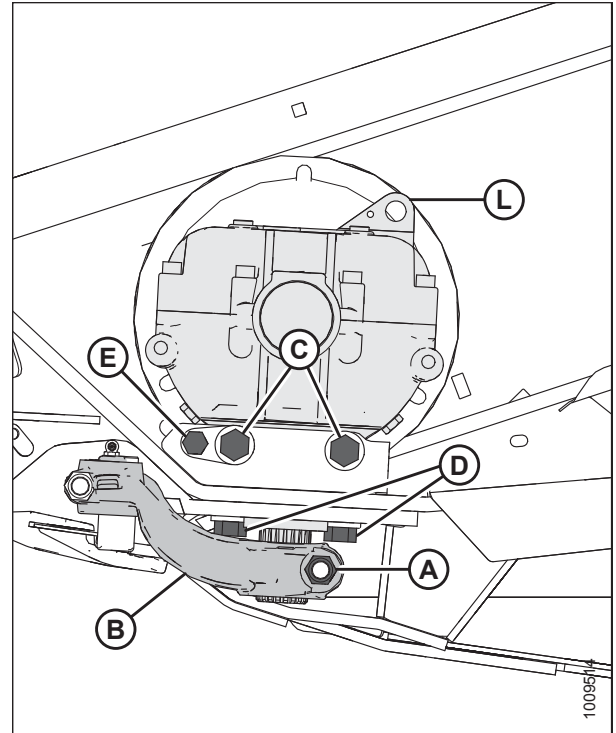


Figure 5.113: Knife Drive Box

Removing Knife Drive Box Pulley

Before removing the knife drive box pulley, remove the knife drive box from the header. Refer to [Removing Knife Drive Box, page 433](#).

1. Loosen and remove the knife drive box pulley clamping bolt (A) and nut (B).
2. Remove the knife drive box pulley (C) using a three-jaw puller.

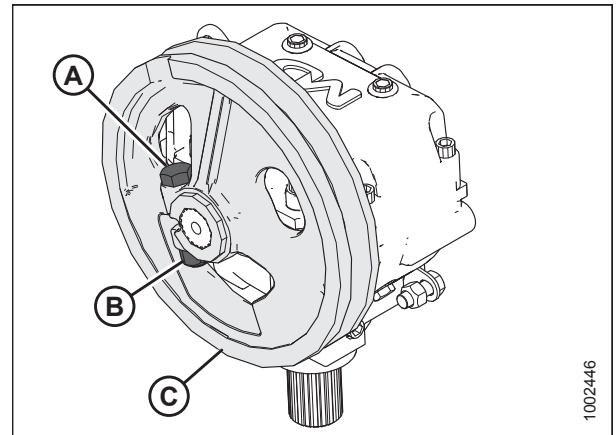


Figure 5.114: Knife Drive Box and Pulley

MAINTENANCE AND SERVICING

Installing Knife Drive Box Pulley

Before removing the knife drive box pulley, remove the knife drive box from the header. Refer to [Removing Knife Drive Box, page 433](#).

1. Ensure the splines and bores in the pulley and drive arm are free of paint, oil, and solvents.
2. Apply two bands (A) of adhesive (Loctite® 243 or equivalent) around the shaft as shown at right. Apply one band at the end of the spline and the second band in the middle.
3. Install the pulley (B) until flush with the end of the shaft.
4. Secure the pulley with 5/8 x 3 in. hex head bolt with distorted thread NC lock nut and torque to 217 Nm (160 lbf·ft).

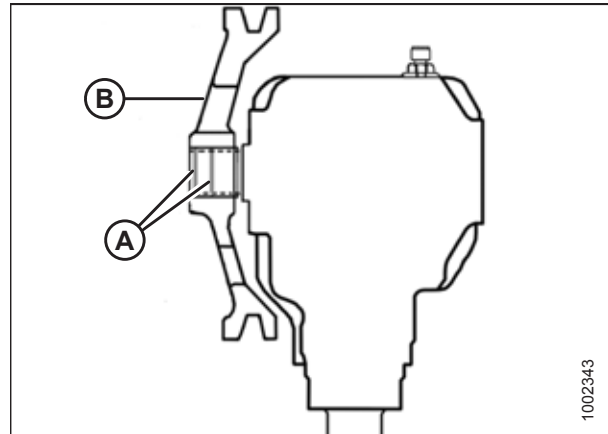


Figure 5.115: Knife Drive Box

Installing Knife Drive Box

NOTE:

If the pulley was removed from the knife drive box, refer to [Installing Knife Drive Box Pulley, page 436](#). If the pulley was **NOT** removed, proceed to Step 1, [page 437](#).



CAUTION

Knife drive box with pulley weighs over 35 kg (65 lb.) Use care when removing or installing. Lug (L) can be used for lifting.

MAINTENANCE AND SERVICING

1. Position the knife drive box onto the header mount and install the belt onto the pulley.
2. Secure the knife drive box to the frame using two $5/8 \times 1-3/4$ in. grade 8 hex head bolts (A) on the side and two $5/8 \times 2-1/4$ in. grade 8 hex head bolts (B) on the bottom.
3. Tighten the knife drive box side bolts (A) slightly, then tighten the bottom bolts (B) to ensure proper contact with the vertical and horizontal mounting surfaces. Do **NOT** torque the bolts at this time.

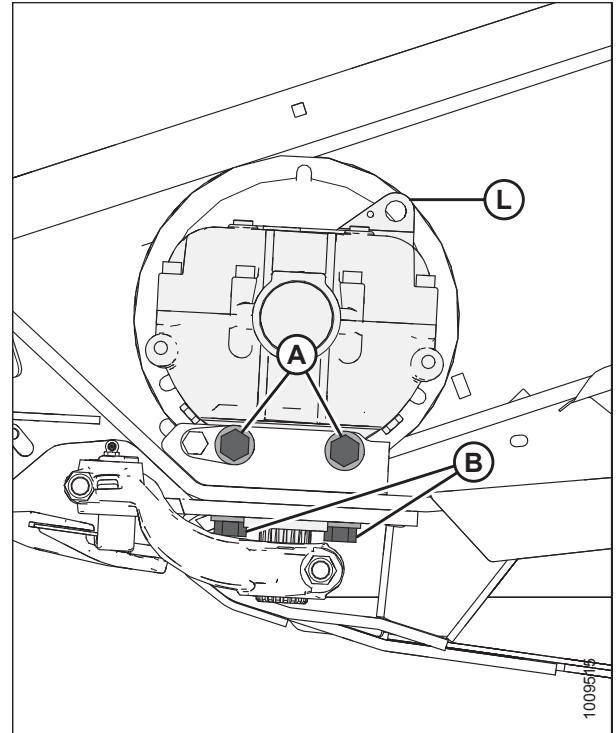


Figure 5.116: Knife Drive Box

4. Apply two bands (A) of adhesive (Loctite® 243 or equivalent) to the output shaft as shown. Apply one band at the end of the output shaft and the second band in the middle.
5. Slide the output arm (B) onto the output shaft. Rotate the pulley to ensure the splines are properly aligned and the drive arm clears the frame on the inboard stroke.

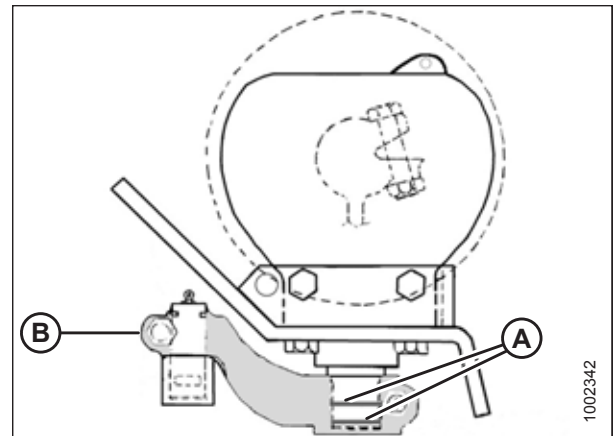


Figure 5.117: Knife Drive Box

MAINTENANCE AND SERVICING

6. Position the output arm (A) to the farthest outboard position. Move the output arm (A) up or down on the splined shaft until it is almost contacting the knifehead (B) (exact clearance [C] is set during the knifehead pin installation).

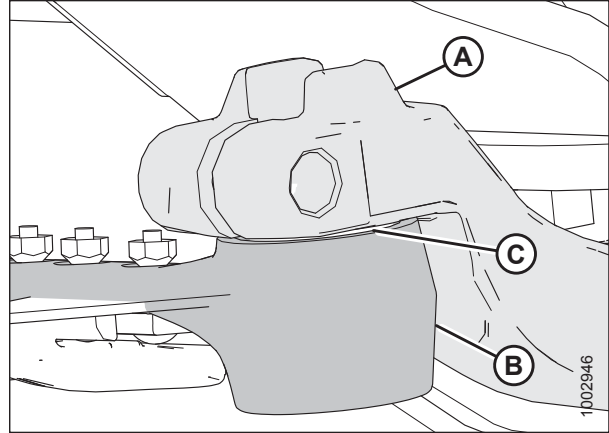


Figure 5.118: Knifehead

7. Torque the output arm bolt (A) to 217 Nm (160 lbf-ft).

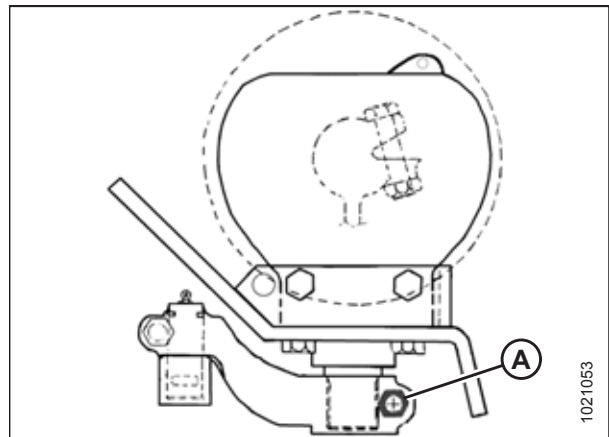


Figure 5.119: Knife Drive Box

8. Slide the knife into place and align the knifehead with the output arm.

NOTE:

Remove the grease fitting from the knifehead pin for easier installation of knifehead pin.

9. Install the knifehead pin (A) through the output arm (C) and into the knifehead.
10. Set the groove (B) in the knifehead pin 1.5 mm (1/16 in.) above the output arm (C). Secure with 5/8 x 3 in. hex head bolt and nut (D), and torque to 217 Nm (160 lbf-ft).

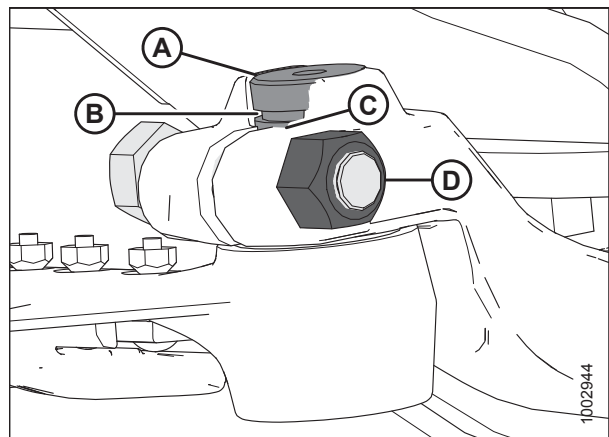


Figure 5.120: Knifehead

MAINTENANCE AND SERVICING

11. Install the grease fitting (A) into the knifehead pin, and turn the grease fitting for easy access.

IMPORTANT:

Slowly apply grease to the knifehead until slight downward movement of the knifehead is observed. Do **NOT** overgrease the knifehead. Overgreasing leads to knife misalignment causing excessive heating of guards and overloading of drive systems. If overgreasing occurs, remove the grease fitting to release pressure.

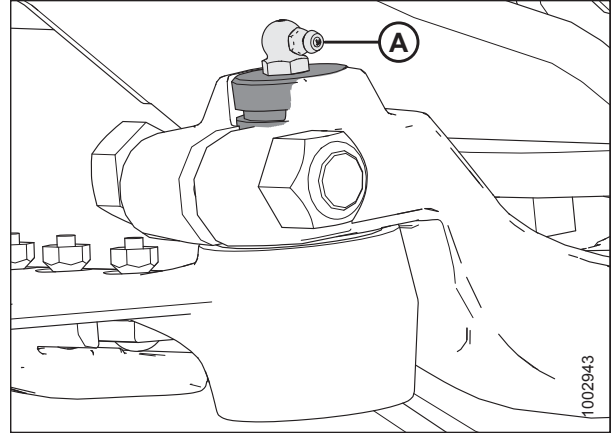


Figure 5.121: Knifehead

12. Tighten the knife drive box side bolts (A) first, then tighten the bottom bolts (B). Torque to 271 Nm (200 lbf·ft).
13. Move the output arm to the mid-stroke position, and ensure the knife bar doesn't contact the front of the first guard. If the knife drive box requires adjustment, contact your MacDon Dealer.
14. Install and tension the knife drive belts.
 - For non-timed belts, refer to [Checking and Tensioning Non-Timed Knife Drive Belts, page 444](#).
 - For timed belts, refer to [Checking and Tensioning Timed Knife Drive Belts, page 449](#).
 - For timed double-knife headers, also check the knife timing, refer to [Adjusting Double-Knife Timing, page 450](#).
15. Close the endshield. Refer to [Closing Endshields, page 36](#).

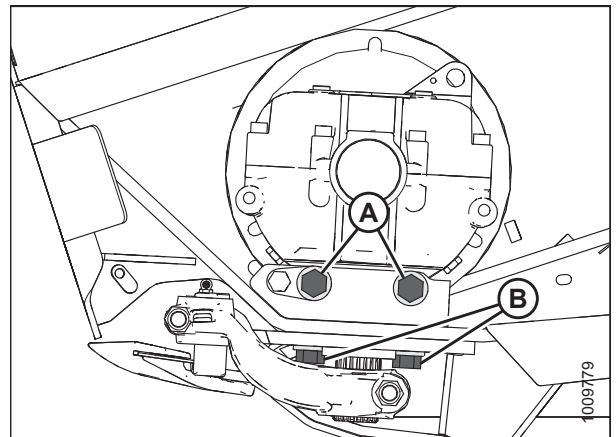


Figure 5.122: Knife Drive Box

Changing Oil in Knife Drive Box



WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

Change the knife drive box lubricant after the first 50 hours of operation and every 1000 hours (or 3 years) thereafter.

MAINTENANCE AND SERVICING

1. Shut down the combine, and remove the key from the ignition.
2. Raise the header and place a container large enough to hold approximately 2.2 liters (2.3 quarts) under the knife drive box to collect the oil.
3. Open the endshield. Refer to [Opening Endshields, page 35](#).
4. Remove the breather/dipstick (A) and the drain plug (B).
5. Allow the oil to drain from the knife drive box and into the container placed below it.
6. Reinstall the drain plug (B).
7. Add 2.2 liters (2.3 quarts) oil to the knife drive box. Refer to inside back cover for recommended fluids and lubricants.
8. Close the endshield. Refer to [Closing Endshields, page 36](#).

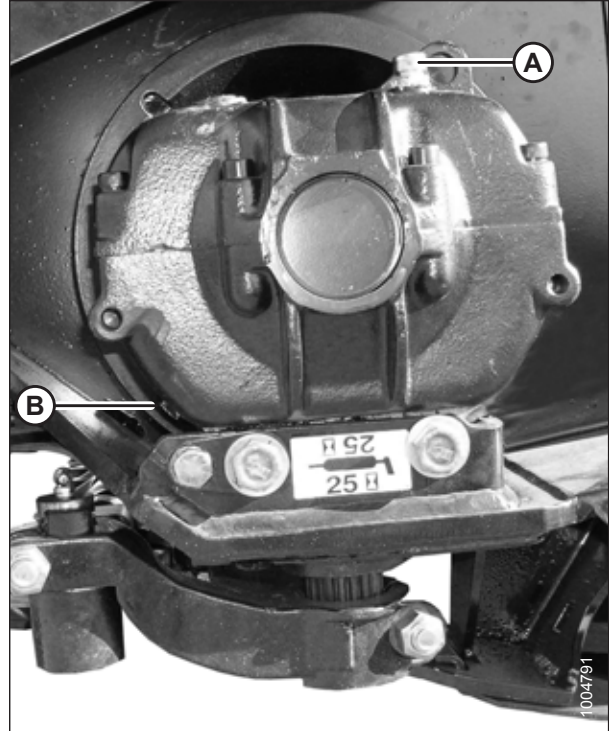


Figure 5.123: Knife Drive Box

5.9.2 Knife Drive Belts

Non-Timed Knife Drive Belts

The knife drive box is driven by a V-belt that is powered by a hydraulic motor on the header left endsheet. There is an identical drive system at the opposite end of 12.2 m and 13.7 m (40 ft. and 45 ft.) double-knife headers.

Removing Non-Timed Knife Drive Belt

The non-timed knife drive belt removal procedure is the same for both sides of a double-knife header.

! WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the combine, and remove the key from the ignition.
2. Open the endshield. Refer to [Opening Endshields, page 35](#).
3. Loosen the two bolts (A) securing the motor assembly to the header endsheet.
4. Loosen the belt tension by turning the tensioning bolt (B) counterclockwise.

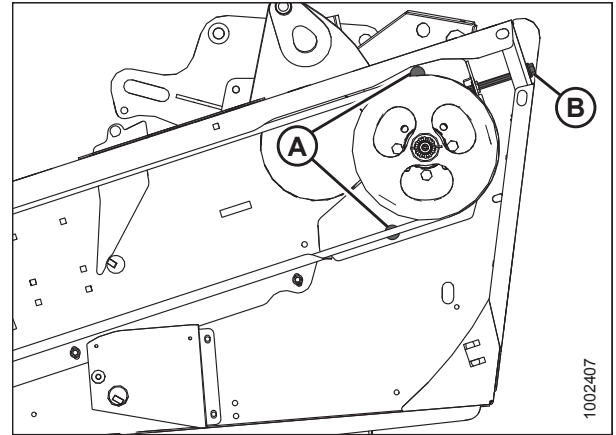


Figure 5.124: Non-Timed Double-Knife Drive

5. To provide clearance between the knife drive box pulley and the endsheet, open the access cover (A) on the endsheet behind the cutterbar.

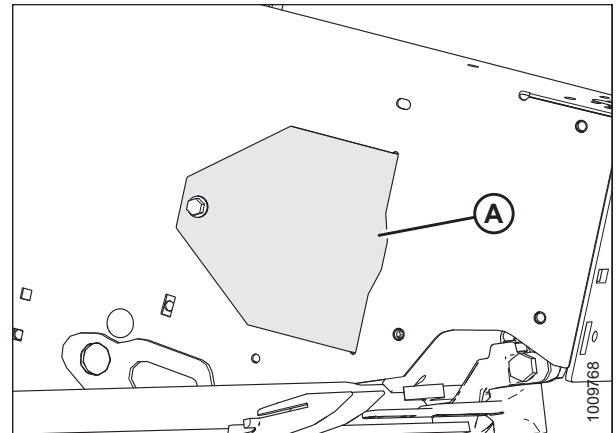


Figure 5.125: Access Cover

MAINTENANCE AND SERVICING

6. Remove the belt (A) from the drive pulley (B).
7. Slip the belt (A) over and behind the knife drive box pulley (C). Use the notch in the pulley to assist with belt removal.

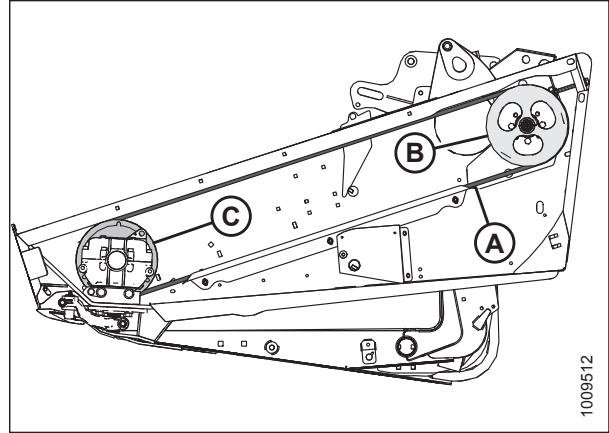


Figure 5.126: Knife Drive

Installing Non-Timed Knife Drive Belts

The procedure for installing non-timed knife drive belts is the same for both sides of the header.

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the combine, and remove the key from the ignition.
2. Route the knife drive belt (A) around the knife drive box pulley (C) and knife drive pulley (B). Use the notch in the pulley to assist with the belt installation.

NOTE:

Ensure the drive motor is fully forward, do **NOT** pry the belt over the pulley.

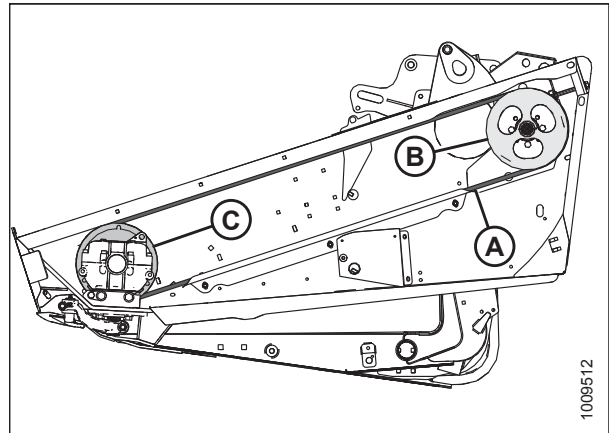


Figure 5.127: Knife Drive

MAINTENANCE AND SERVICING

3. Tension the knife drive belt. Refer to [Checking and Tensioning Non-Timed Knife Drive Belts](#), page 444.
4. Install the access cover (A) and secure with bolt.
5. Close the endshield. Refer to [Closing Endshields](#), page 36.

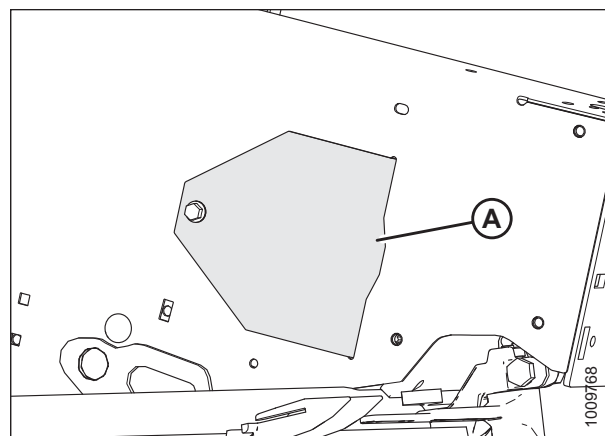


Figure 5.128: Access Cover

Checking and Tensioning Non-Timed Knife Drive Belts

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

IMPORTANT:

To prolong the belt and drive life, do **NOT** overtighten the belt.

1. Shut down the combine, and remove the key from the ignition.
2. Open the left endshield. Refer to [Opening Endshields, page 35](#).
3. Loosen the two bolts (A) securing the motor assembly to the header endsheet.
4. Check drive belt tension. A properly tensioned drive belt (C) should deflect 24–28 mm (15/16–1-1/8 in.) when 133 N (30 lbf) of force is applied at the midspan. If the belt needs to be tensioned, turn the adjuster bolt (B) clockwise to move the drive motor until proper tension is set.

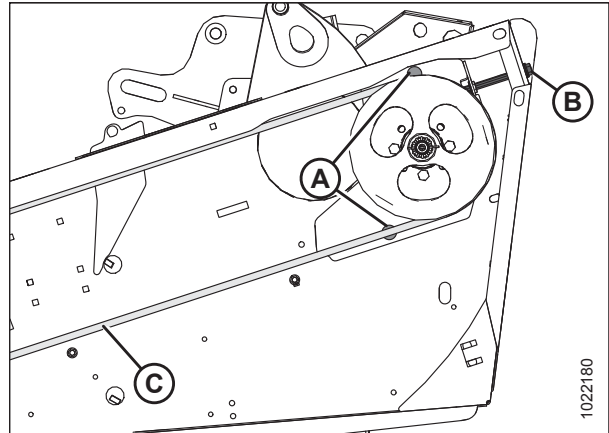


Figure 5.129: Non-Timed Double-Knife Drive (Belt Guide Removed for Clarity)

5. Ensure the clearance between the belt (A) and the belt guide (B) is 1 mm 1/16 in.
6. Loosen the three bolts (C), and adjust the position of the guide (B) as required.
7. Tighten the three bolts (C).
8. Close the endshield. Refer to [Closing Endshields, page 36](#).

NOTE:

Readjust the tension of a new belt after a short run-in period (about 5 hours).

9. **Double-knife headers only:** Repeat procedure on the other side of the header.

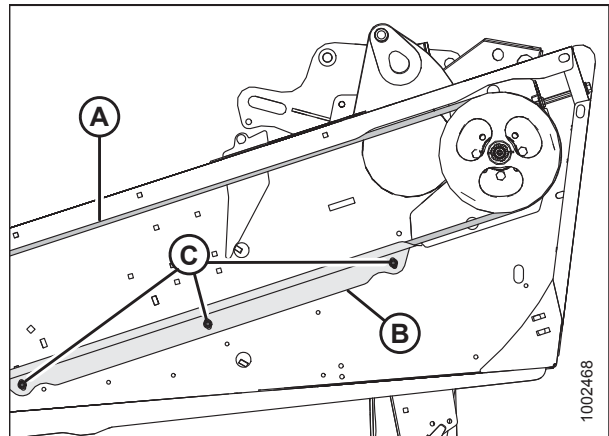


Figure 5.130: Knife Drive

Timed Double-Knife Drive Belts

Removing Timed Drive V-Belts

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the combine, and remove the key from the ignition.
2. Open the endshield. Refer to [Opening Endshields, page 35](#).
3. Loosen the two bolts (A) securing the motor assembly to the header endsheet.
4. Turn the adjuster bolt (B) counterclockwise to loosen and remove the two V-belts (C).

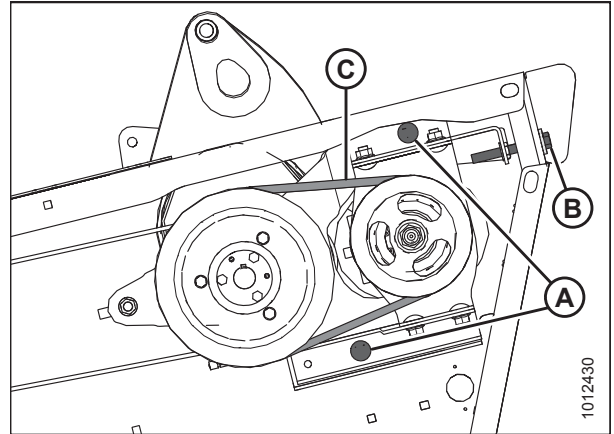


Figure 5.131: Knife Drive V-Belts

Installing Timed Drive V-Belts

NOTE:

Install new V-belts in matching pairs.

1. Shut down the combine, and remove the key from the ignition.
2. Install the V-belts (C) onto the pulleys.

NOTE:

Ensure the drive motor is fully forward, do **NOT** pry the belts over the pulley.

3. Turn the adjuster bolt (B) clockwise to tighten the V-belts. A properly tensioned V-belt should deflect 4 mm (5/32 in.) when 52–77 N (12–17 lbf) is applied at the midspan.

IMPORTANT:

To prolong the life of V-belts and drives. Do **NOT** overtighten the V-belts.

4. Tighten the two bolts (A) on the endsheet.
5. Close the endshield. Refer to [Closing Endshields, page 36](#).
6. Check the tension of the new V-belts after a short run-in period (about five hours).

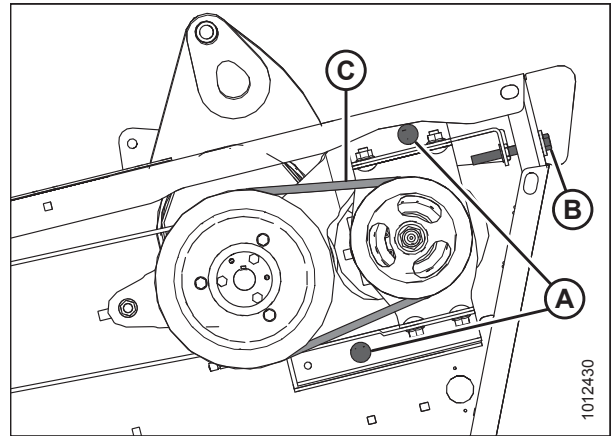


Figure 5.132: Knife Drive V-Belts

Removing Timed Knife Drive Belt

The timed knife drive belt removal procedure is the same for both sides of the header.

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the combine, and remove the key from the ignition.
2. Open the endshield. Refer to [Opening Endshields](#), [page 35](#).
3. Loosen two nuts (A) on the belt idler bracket to relieve the belt tension.
4. Loosen nut (B) on the idler pulley and slide the idler downwards to loosen the belt.

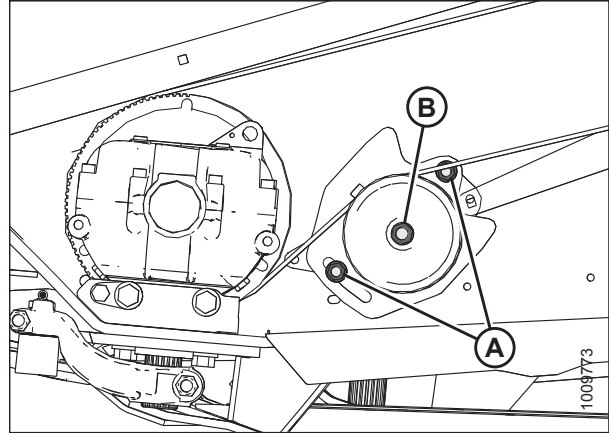


Figure 5.133: Knife Drive

NOTE:

The following two steps apply only to the left-side drive.

5. Loosen two bolts (A) on the endsheet.
6. Turn the adjuster bolt (B) counterclockwise to loosen and remove the two V-belts (C).

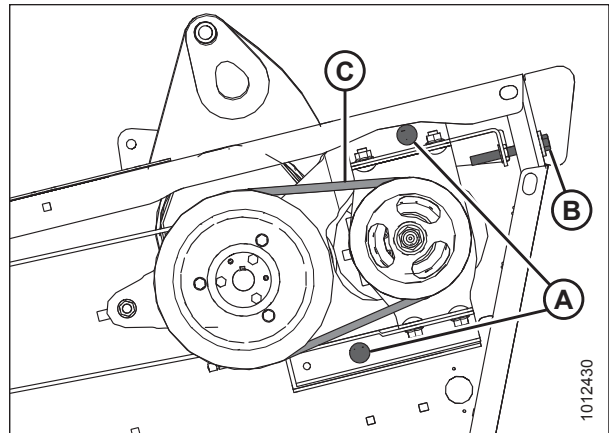


Figure 5.134: Knife Drive V-Belts

MAINTENANCE AND SERVICING

7. Open the access cover (A) on the endsheet behind the cutterbar to provide clearance between the knife drive box pulley and the endsheet.
8. Remove the knife drive belt.

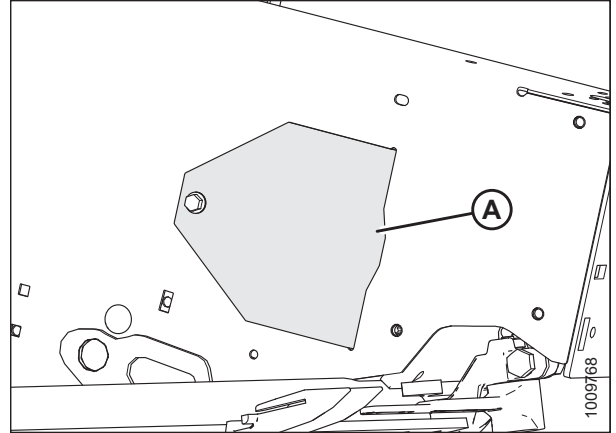


Figure 5.135: Access Cover

Installing Timed Knife Drive Belt

The procedure for installing timed knife drive belts is the same for both sides of the header.

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

If the belt is out of alignment, refer to [Adjusting Belt Tracking, page 454](#).

1. Shut down the combine, and remove the key from the ignition.
2. Route the knife drive belt (A) around the pulley (B) and the knife drive box pulley (C).

NOTE:

Ensure the drive motor is fully forward. Do **NOT** pry the belt over the pulley.

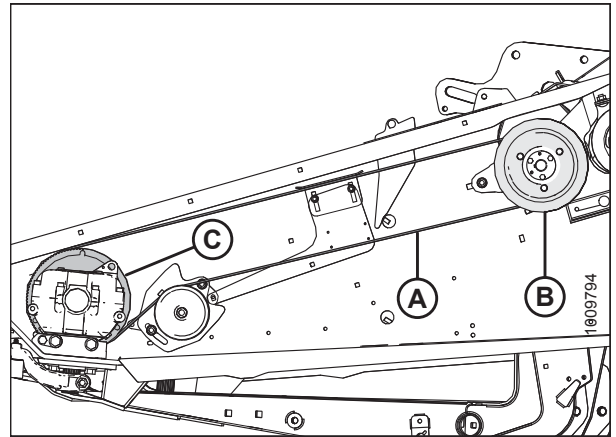


Figure 5.136: Left Side Shown – Right Side Similar

MAINTENANCE AND SERVICING

3. Install the V-belts (C) onto the pulleys.

NOTE:

Ensure the drive motor is fully forward, do **NOT** pry the belts over the pulley.

4. Turn the adjuster bolt (B) clockwise to tighten the V-belts. A properly tensioned V-belt should deflect 4 mm (5/32 in.) when 52–77 N (12–17 lbf) is applied at the midspan.

IMPORTANT:

To prolong the life of V-belts and drives. Do **NOT** overtighten the V-belts.

5. Tighten the two bolts (A) on the endsheet.
6. Ensure the knives are timed before tightening the belt. Refer to [Adjusting Double-Knife Timing, page 450](#).
7. Slide the idler pulley (A) into the slot on the support bracket (B) to take-up the slack in the timing belt.

NOTE:

Ensure the lower nut (C) is as high as possible in the support bracket (B) slot.

8. Tighten nut (D) to 212–234 Nm (157–173 lbf-ft).

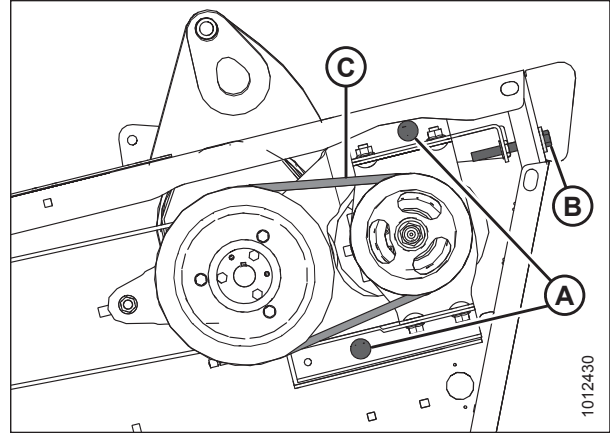


Figure 5.137: Knife Drive V-Belts

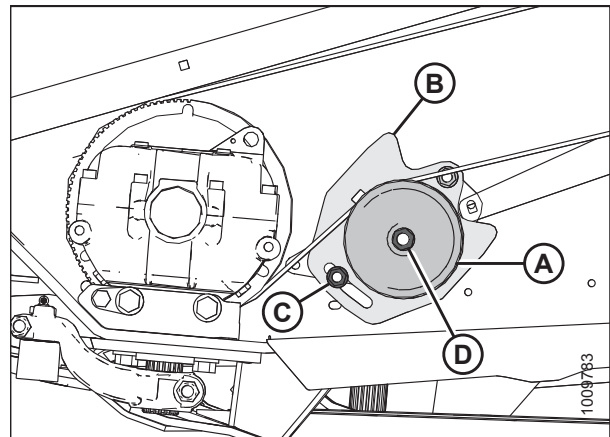


Figure 5.138: Knife Drive

9. Tension the knife drive belt. Refer to [Checking and Tensioning Timed Knife Drive Belts, page 449](#).
10. Install the access cover (A) and secure with bolt.
11. Close the endshield. Refer to .

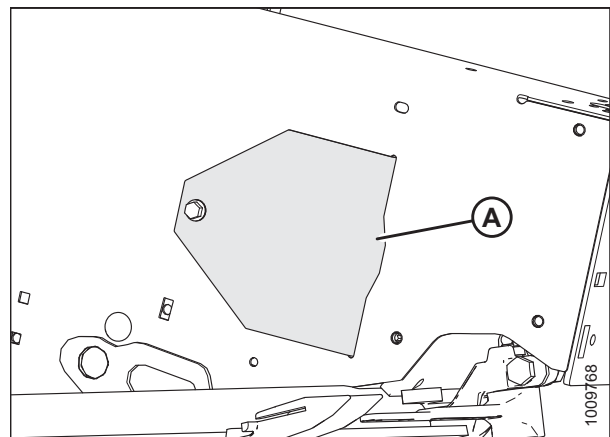


Figure 5.139: Access Cover

Checking and Tensioning Timed Knife Drive Belts

The procedure for tensioning timed knife drive belts is the same for both sides of the header. The illustrations shown are for the left side—the right side is opposite.

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

IMPORTANT:

To prolong belt and drive life, do **NOT** overtighten belt.

IMPORTANT:

Do **NOT** use the adjuster bolt at the drive pulley to adjust timing belt tension.

1. Shut down the combine, and remove the key from the ignition.
2. Open the endshield. Refer to [Opening Endshields](#), page 35.
3. Check drive belt tension. A properly tensioned belt should deflect 13 mm (1/2 in.) at the midpoint of the upper span when a force of 27 N (6 lbf) is applied.

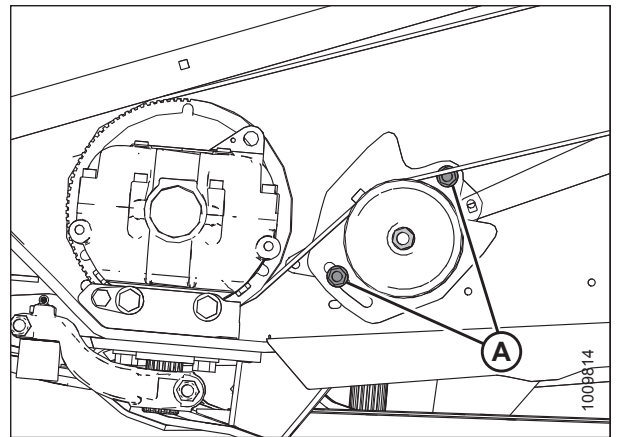


Figure 5.140: Knife Drive – Left Side

4. If the belt needs to be tensioned, loosen two nuts (A) on the knife drive belt idler bracket (B).
5. Position the pry bar (C) under the idler bracket, and push the bracket upwards until a force of 27 N (6 lbf) deflects the belt 13 mm (1/2 in.) at the midpoint of the upper span.

NOTE:

Protect the machine's paint by placing a piece of wood (D) under the pry bar (C).

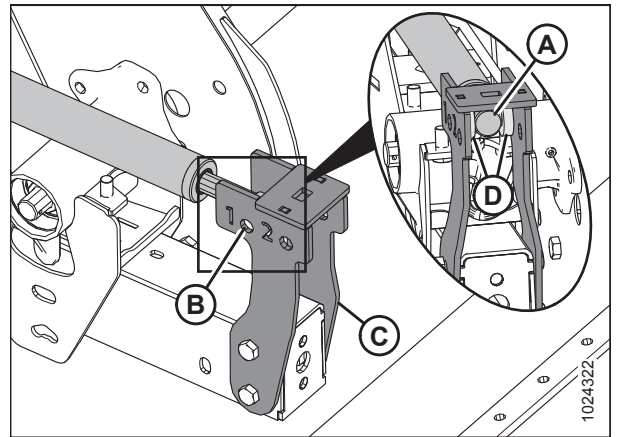


Figure 5.141: Knife Drive – Left Side

MAINTENANCE AND SERVICING

- After achieving the proper belt tension, tighten the nuts (C) to 73–80 Nm (54–59 lbf·ft).
- Remove the pry bar (A) and wood (B).

NOTE:

Readjust the tension of a new belt after a short run-in period (about five hours).

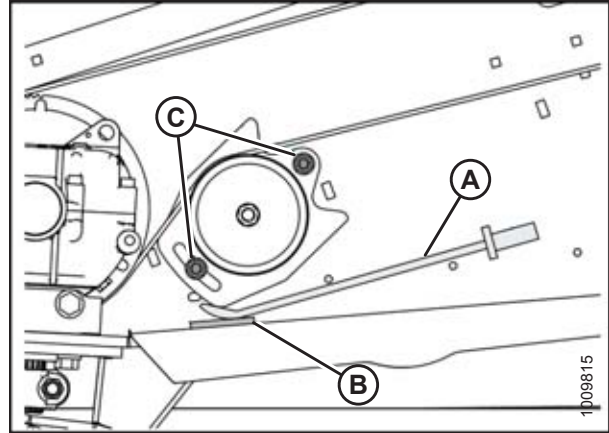


Figure 5.142: Knife Drive – Left Side

- Ensure the clearance (A) between the belt (B) and the guide (C) is 0.5–1.5 mm (1/32–1/16 in.).
- Loosen bolts (D) and adjust the guide if necessary. Tighten bolts.
- Close the endshield. Refer to [Closing Endshields, page 36](#).
- Repeat procedure for the opposite side of the header.

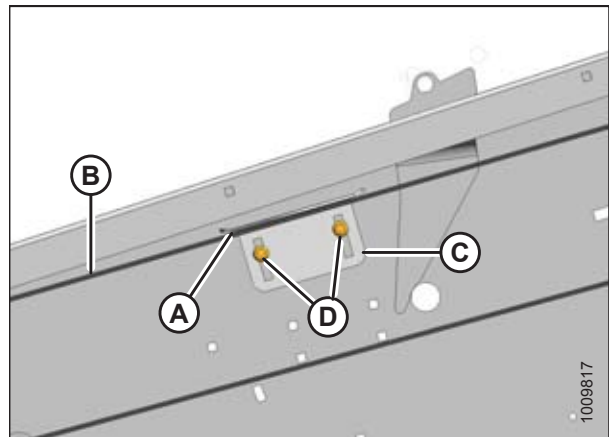


Figure 5.143: Belt Guide – Left Side

Adjusting Double-Knife Timing

Timed double-knife drive headers (35-foot and smaller) require the knives to be properly timed to move in opposite directions.



WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

- Shut down the combine, and remove the key from the ignition.
- Open both endshields. Refer to [Opening Endshields, page 35](#).
- Remove the right belt. Refer to [Removing Timed Knife Drive Belt, page 446](#).

MAINTENANCE AND SERVICING

4. Rotate the left knife drive box driven pulley clockwise until the left knife (A) is at the center of the inboard stroke (B) (moving towards the center of the header).

NOTE:

The center stroke is when the knife sections (C) are centered between the guard points.

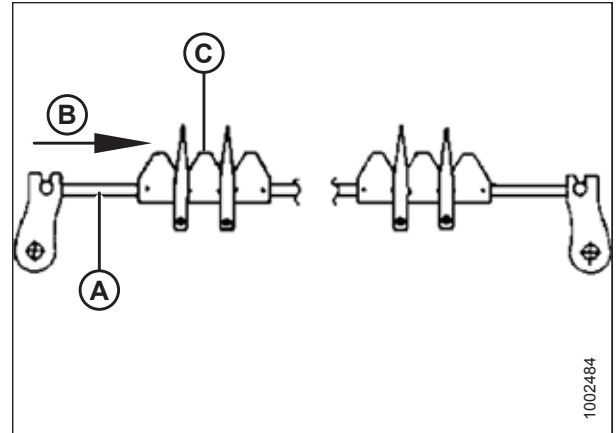


Figure 5.144: Adjusting Timing – Left Side

5. Rotate the right knife drive box pulley counterclockwise until the right knife (A) is at the center of the inboard stroke (B) (moving towards the center of the header).

NOTE:

The center stroke is when the knife sections (C) are centered between the guard points.

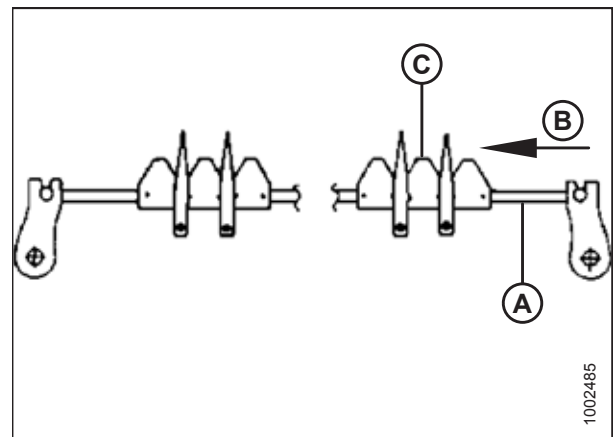


Figure 5.145: Adjusting Timing – Right Side

6. Install the right-side belt (A).

NOTE:

Ensure the knife drive box driver and driven pulleys do **NOT** rotate during belt installation.

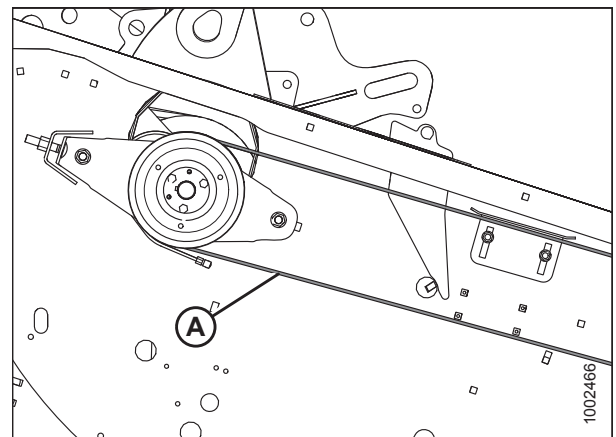


Figure 5.146: Knife Drive – Right Side

MAINTENANCE AND SERVICING

7. Slide the idler pulley (A) up by hand to remove most of the belt slack. Tighten the nut (B).
8. Rotate the idler pulley bracket (A) downwards, and slide the idler pulley up by hand to remove most of the belt slack. Tighten the nut (B).

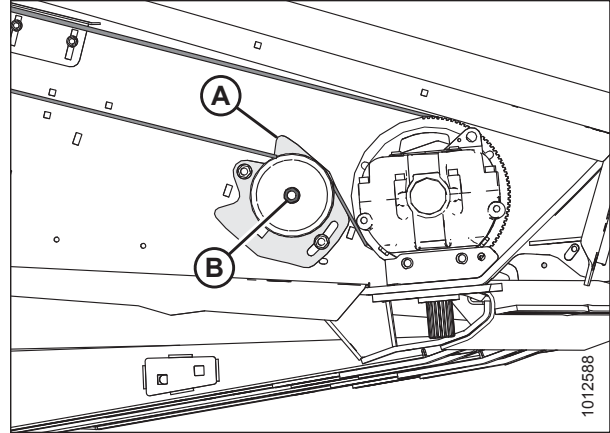


Figure 5.147: Knife Drive – Right Side

9. Position the pry bar (A) under the idler bracket (C), and push the bracket upwards until a force of 27 N (6 lbf) deflects the belt 13 mm (1/2 in.) at the mid-point of the upper span.

NOTE:

Protect the paint by placing a piece of wood (B) under the pry bar (A).

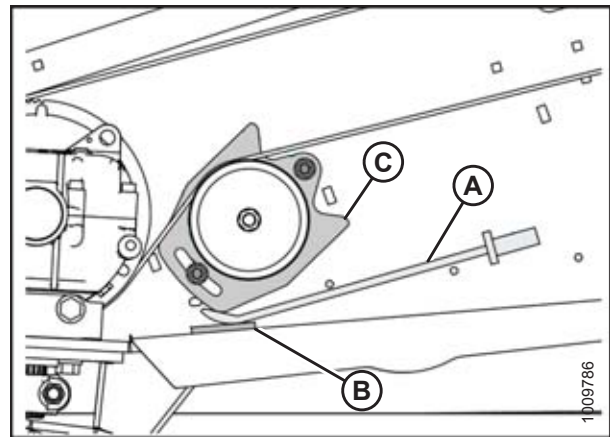


Figure 5.148: Left Side Shown – Right Side Opposite

10. Tighten the nuts (C) to 73–80 Nm (54–59 lbf-ft) after achieving the proper belt tension.
11. Ensure the timing belts are properly seated in the grooves on both driver and driven pulleys.
12. To check for the correct knife timing, rotate the drive slowly by hand, and observe where the knives overlap at the center of the header.

IMPORTANT:

The knives must begin moving at the exact same time, and must move in opposite directions.

13. If necessary, adjust the knife timing by loosening the right side drive belt (B) just enough to reposition it to the next cog(s), and proceed as follows:
 - a. If the right knife leads the left knife, rotate the right-side driven pulley (A) clockwise.
 - b. If the right knife lags the left knife, rotate the right-side driven pulley (A) counterclockwise.

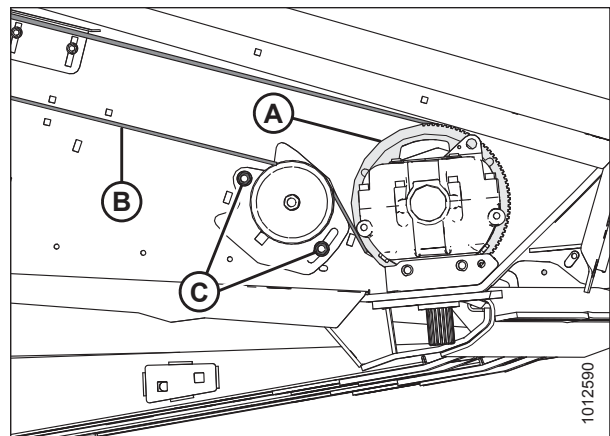


Figure 5.149: Knife Drive – Right Side

MAINTENANCE AND SERVICING

14. Ensure the drive pulleys do not rotate, and tension the right-side drive belts (refer to Steps [8, page 452](#) to [10, page 452](#)).

IMPORTANT:

Do **NOT** use the adjuster bolt at the drive pulley to adjust the timing belt tension.

15. Recheck the timing (refer to Step [12, page 452](#)) and readjust if necessary (refer to Step [13, page 452](#)).
16. Close both endshields. Refer to [Closing Endshields, page 36](#).

Adjusting Belt Tracking

The procedure for adjusting belt tracking is the same for both sides of timed knife headers.

IMPORTANT:

Belts that are not tracking properly are subject to premature failure; ensure the pulleys are aligned and parallel. Follow the belt tensioning procedures in this manual to prevent misalignment.

Cogged timing belts should be centered on the knife drive box pulley and positioned at least 2 mm (3/32 in.) from either edge of the pulley when the header is running (a gap should be visible between the belt and the edge of the pulley).

NOTE:

The belt should not make continuous contact with the flanges of the drive pulley, but occasional contact is acceptable.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Open both endshields. Refer to [Opening Endshields, page 35](#).



CAUTION

Exercise extreme care when operating the header with the endshields open.

2. Operate the header. Observe the belt tracking on both the drive pulley and the knife drive box pulley on both sides of the header. Stop the combine and remove the key from the ignition before making any adjustments.
3. If the belt is tracking towards the inboard side of the drive pulley, the likely cause is a toe-out problem (A) and (B). If the belt tends to move towards the low tension [inboard] side of the pulley, proceed to Step 6, [page 455](#).
4. If the belt is tracking towards the outboard side of the drive pulley, the likely cause is a toe-in problem (C) and (D). If the belt tends to move towards the high tension [outboard] side of the pulley, proceed to Step 6, [page 455](#).

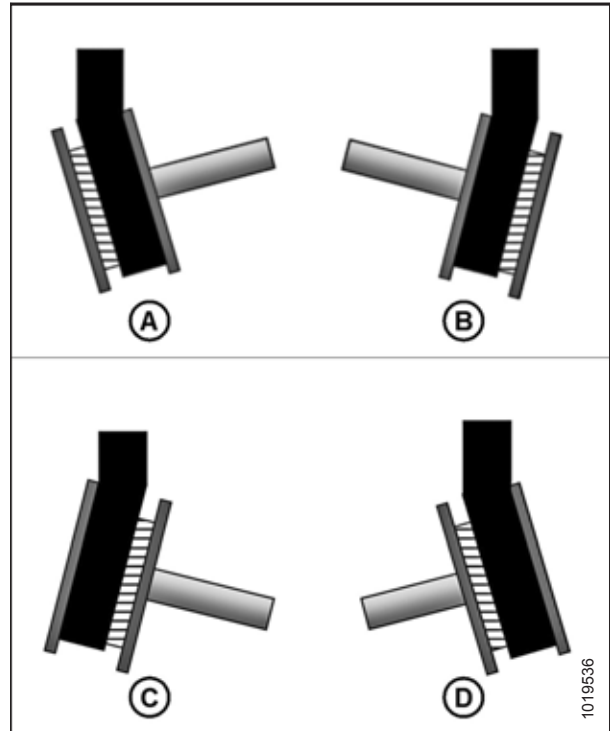


Figure 5.150: Knife Drive Pulley

MAINTENANCE AND SERVICING

5. If the belt (A) is tracking to one side of the knife drive box pulley (B), the likely cause is an out-of-position idler pulley (C). Proceed to Step 8, [page 456](#).

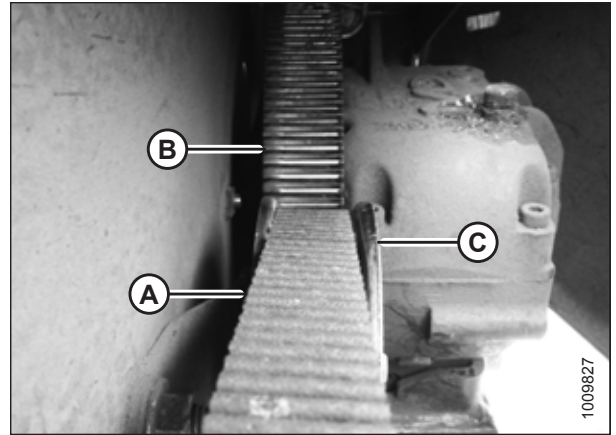


Figure 5.151: Knife Drive Belt

6. If there is a tracking problem on the drive pulley, adjust the position of the cross shaft support tube as follows:
 - a. Loosen nut (A) on the support assembly (B).
 - b. To correct a toe-out condition, slide the support assembly (B) rearwards in slot (C).
 - c. To correct a toe-in condition, slide the support assembly (B) forward.
 - d. Tighten nut (A).
 - e. Operate the header and check the belt tracking. Adjust the support assembly as required.
 - f. If belt tracking problems continue, proceed to Step 8, [page 456](#).

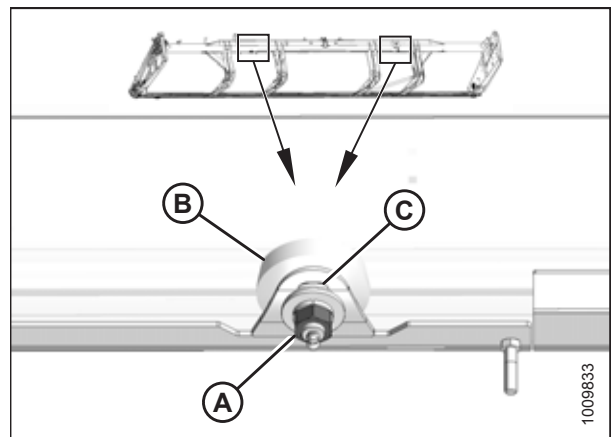


Figure 5.152: Cross-Shaft Support

7. Correct a tracking problem on the knife drive box pulley by adjusting the idler position as follows:
 - a. Loosen nuts (A) and (B), and move the bracket and idler until the belt is loose.
 - b. Remove the nut (B) securing the idler to the bracket, and remove the lock washer, idler pulley, and flat washer.
 - c. Install the idler pulley (C) using flat washer(s) as required to align the idler pulley with the knife drive box pulley.
 - d. Install the lock washer (D) and nut (B).
 - e. Tension the belt. Refer to [Checking and Tensioning Timed Knife Drive Belts, page 449](#).
 - f. Operate the header and check the belt tracking.

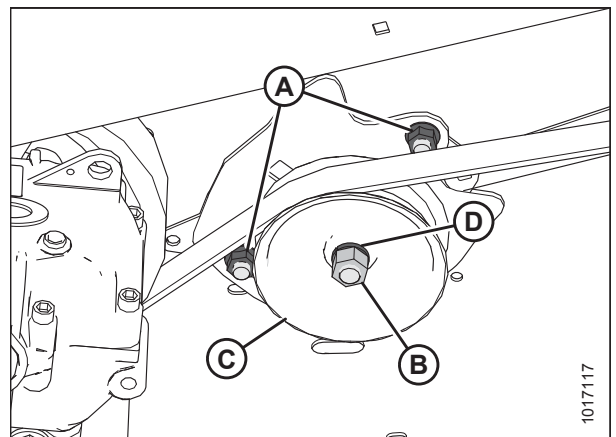


Figure 5.153: Knife Drive

MAINTENANCE AND SERVICING

8. If further adjustment is required to correct drive pulley tracking, proceed as follows:
 - a. Loosen nut (A) on the idler and nuts (B) on the idler bracket.
 - b. Loosen nuts (C) at the drive pulley location.
 - c. To correct toe-in problems, turn the adjuster bolt (D) clockwise to enable the belt to track inboard.
 - d. To correct toe-out problems, turn the adjuster bolt (D) counterclockwise to enable the belt to track outboard.
 - e. Tighten the nuts (C) at the drive pulley location.
 - f. Tension the belt. Refer to [Checking and Tensioning Timed Knife Drive Belts](#), page 449.
 - g. Operate the header, check the belt tracking, and readjust the drive pulley as necessary.

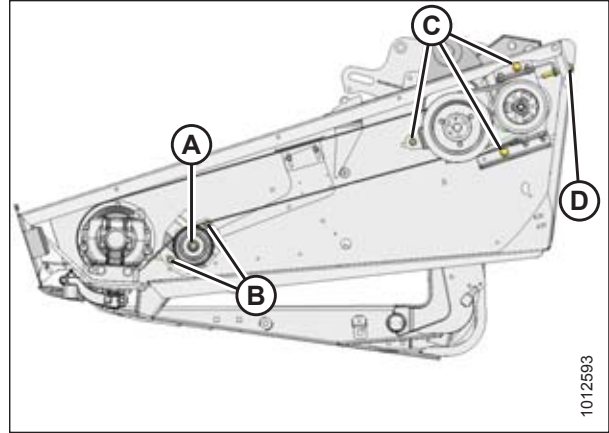


Figure 5.154: Knife Drive – Left Side

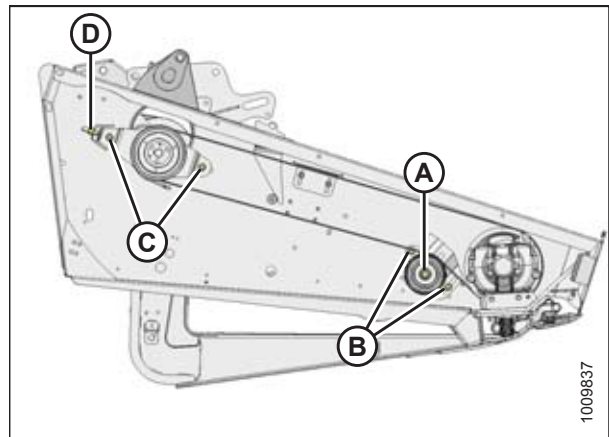


Figure 5.155: Knife Drive – Right Side

5.10 Feed Draper

The feed draper is located on the FM100 Float Module and conveys cut crop to the auger.

CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to .

5.10.1 Replacing Feed Draper

Replace draper if torn, cracked, or missing slats.

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Raise header and reel to full height, stop the engine, and remove key from the ignition.
2. Engage reel safety props and header safety props.
3. Loosen jam nut (A) and turn bolt (B) counterclockwise to release the draper tension. Repeat at the opposite side.

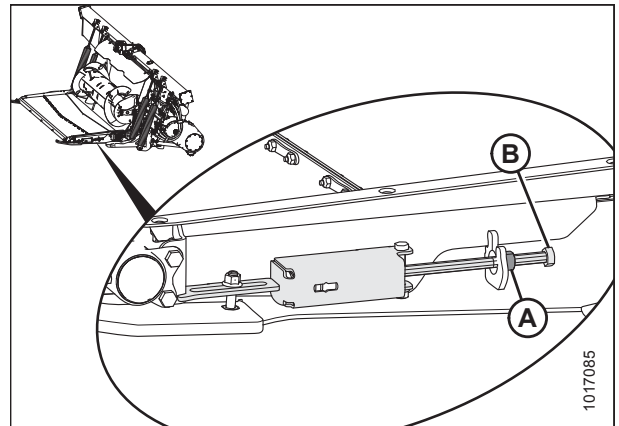


Figure 5.156: Feed Draper Tensioner

4. Unlatch the feed deck pan handle (A) from the pan handle latch supports (B) on either side of the feed deck. This will drop the door down and allow access to feed deck draper and rollers.

NOTE:

Some parts removed from illustration for clarity.

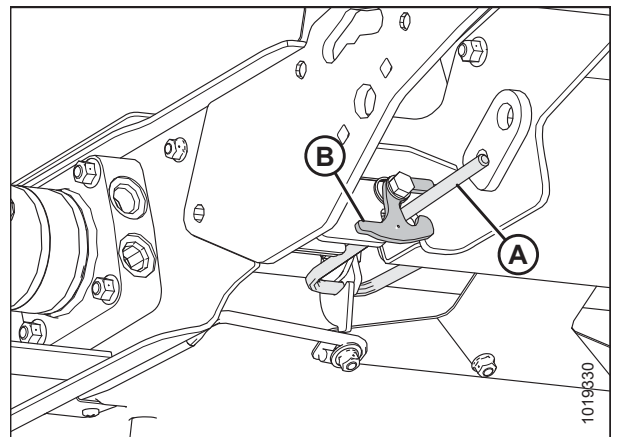


Figure 5.157: Feed Deck Pan Handle and Left Side Pan Handle Latch

MAINTENANCE AND SERVICING

5. Remove nuts and screws (A), and remove the draper connector straps (B).
6. Pull the draper from the deck.

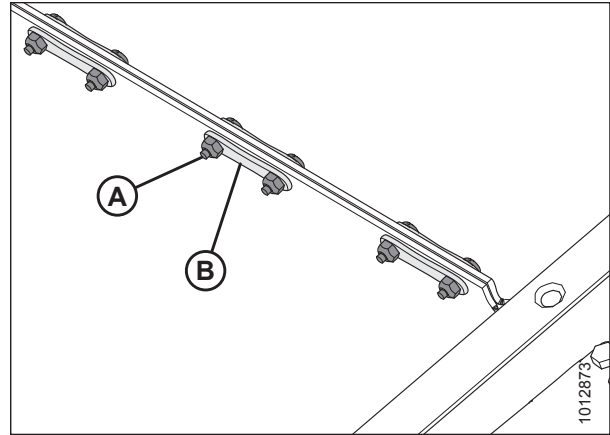


Figure 5.158: Draper Connector

7. Install new draper (A) over the drive roller (B). Make sure the draper guides fit into the drive roller grooves (C).
8. Pull draper along bottom of feed deck and over idler roller (D).

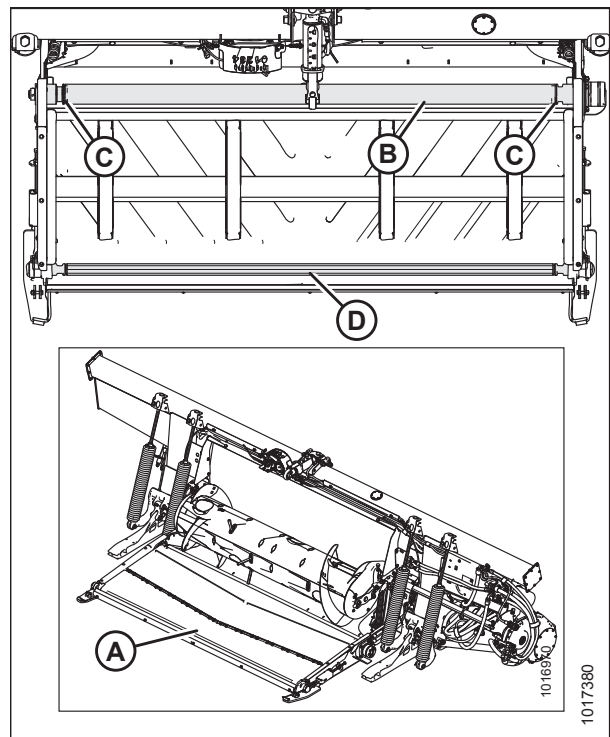


Figure 5.159: Float Module Feed Draper

MAINTENANCE AND SERVICING

9. Connect the draper joint with the connector straps (B) and secure with nuts and screws (A). Ensure the screw heads face towards the rear of the deck, and tighten only until the end of the screws are flush with the nuts.
10. Adjust the draper tension. Refer to [5.10.2 Adjusting Feed Draper Tension](#), page 459.

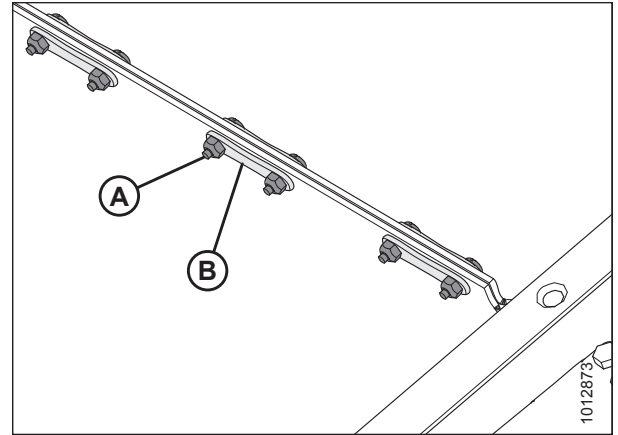


Figure 5.160: Draper Connector Straps

11. Close the feed deck by latching the pan handle latch supports (B) on either side of the feed deck to the feed deck pan handle (A).

NOTE:

Some parts removed from illustration for clarity.

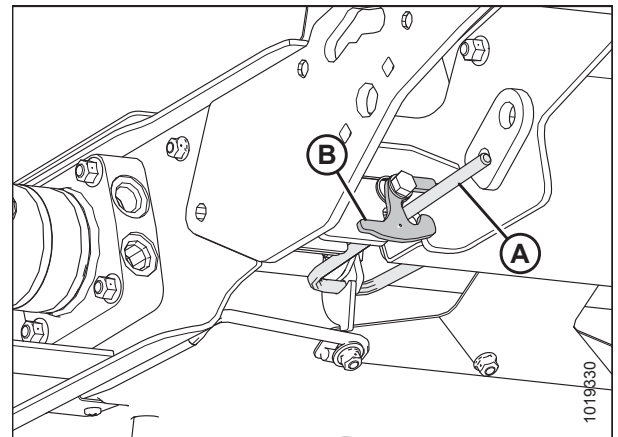


Figure 5.161: Feed Deck Pan Handle and Left Side Pan Handle Latch

5.10.2 Adjusting Feed Draper Tension

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Raise the header to its full height, stop the engine, and remove key from the ignition.
2. Engage the header safety props.
3. Ensure the draper guide (rubber track on the underside of the draper) is properly engaged in the groove on the drive roller and the idler roller is between the guides.

MAINTENANCE AND SERVICING

4. Loosen jam nut (A) and turn bolt (B) clockwise to increase draper tension or counterclockwise to decrease draper tension.
5. Adjust the draper tension until the white indicator (C) is centered within the indicator window on the spring box.

IMPORTANT:

Adjust both sides equally.

6. Tighten jam nut (A).

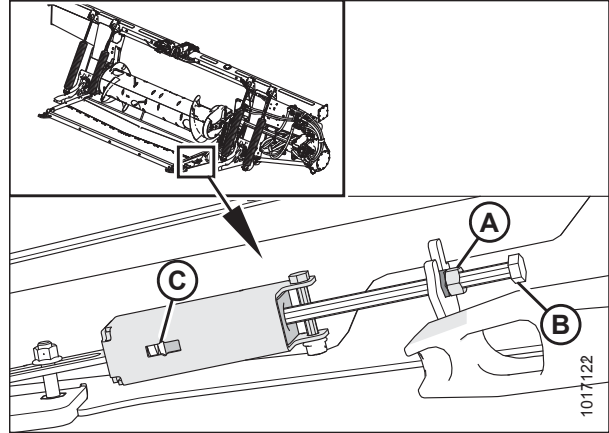


Figure 5.162: Tensioner

5.10.3 Feed Draper Drive Roller

This roller is powered and moves the draper on the float module, conveying crop to the auger.

Removing Feed Draper Drive Roller



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Raise the header and reel to full height, stop the engine, and remove the key from the ignition.
2. Engage reel safety props and header safety props.
3. Loosen jam nut (A) and turn bolt (B) counterclockwise to release the draper tension. Repeat at the opposite side.

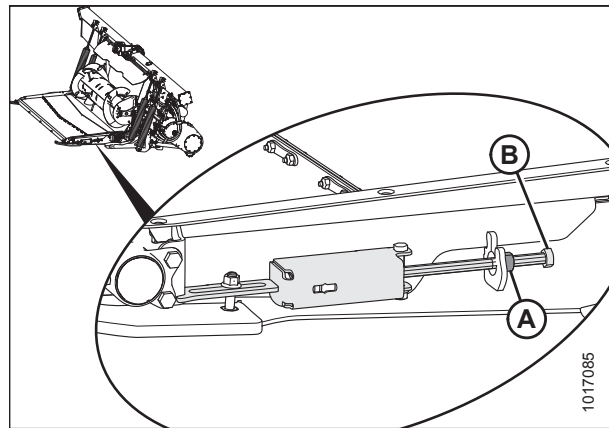


Figure 5.163: Feed Draper Tensioner

MAINTENANCE AND SERVICING

4. Remove nuts and screws (A), and remove the draper connector straps (B).
5. Pull the draper from the deck.

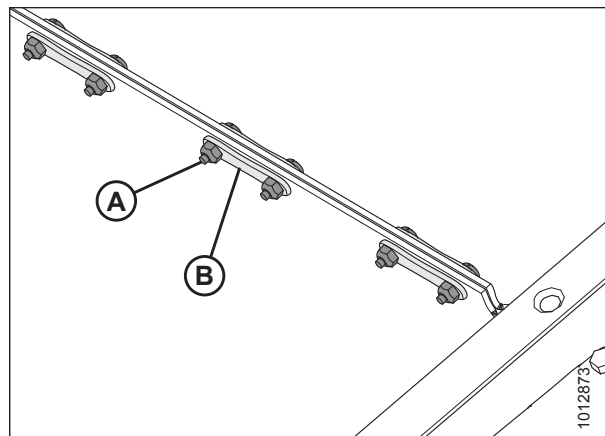


Figure 5.164: Draper Connector

6. Remove two bolts (B) from the drive roller cover (A).

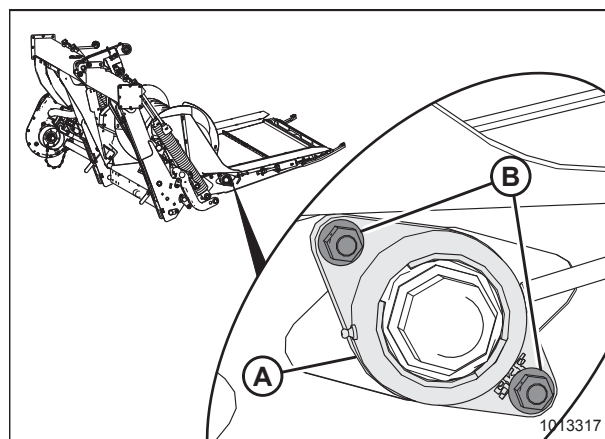


Figure 5.165: Drive Roller Bearing

7. Move the drive roller cover plate (A) to the left.

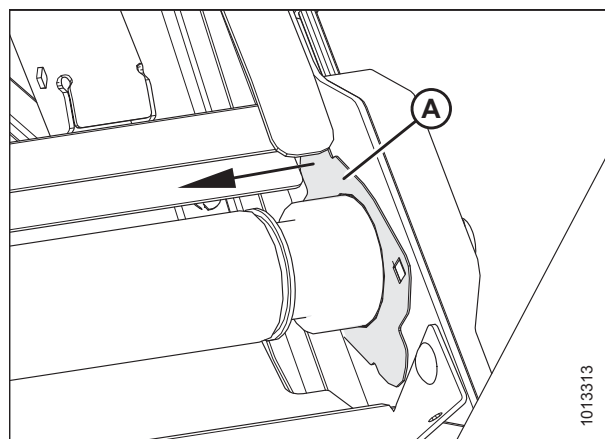


Figure 5.166: Drive Roller

MAINTENANCE AND SERVICING

- Slide drive roller (A) with bearing assembly (B) to the right until left end comes off of spline.

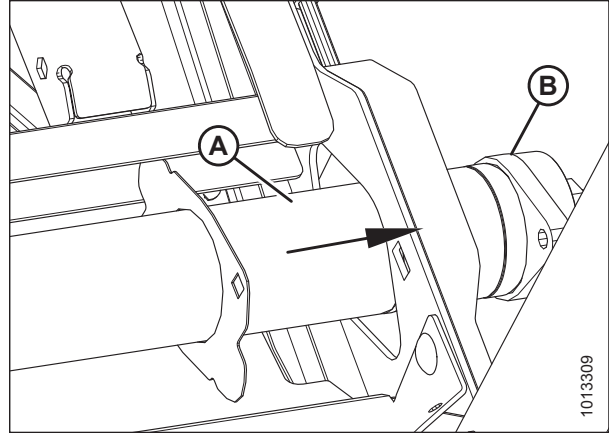


Figure 5.167: Drive Roller

- Lift left end out of the frame.
- Slide assembly (A) to the left, guiding bearing housing (B) through frame opening (C).
- Remove roller (A).

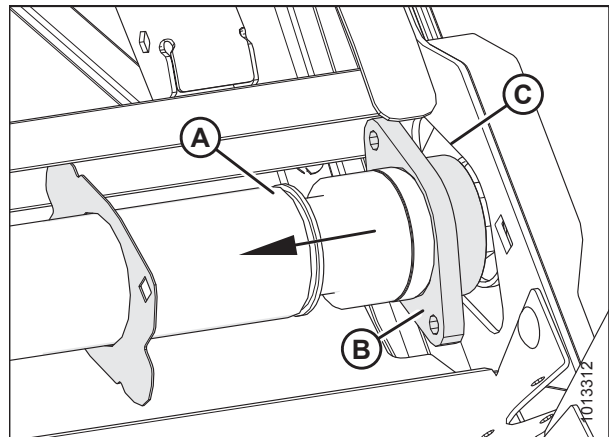


Figure 5.168: Drive Roller

Installing Feed Draper Drive Roller

- Apply grease to the spline.
- Slide drive roller cover plate (A) onto right end of roller (B).
- Guide bearing end (C) of drive roller through frame opening (D).

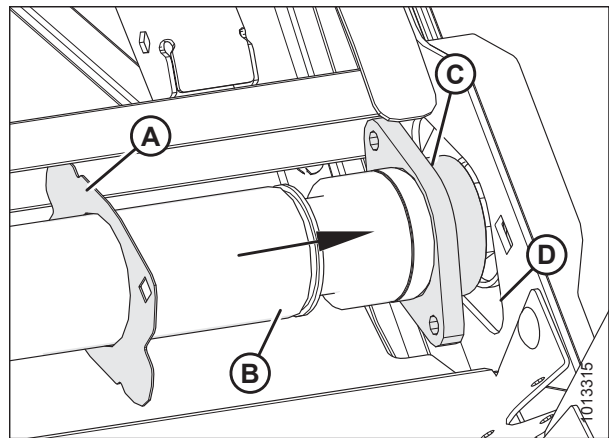


Figure 5.169: Drive Roller (Bearing End)

MAINTENANCE AND SERVICING

- Slide left end of drive roller (A) onto spline of motor (B).

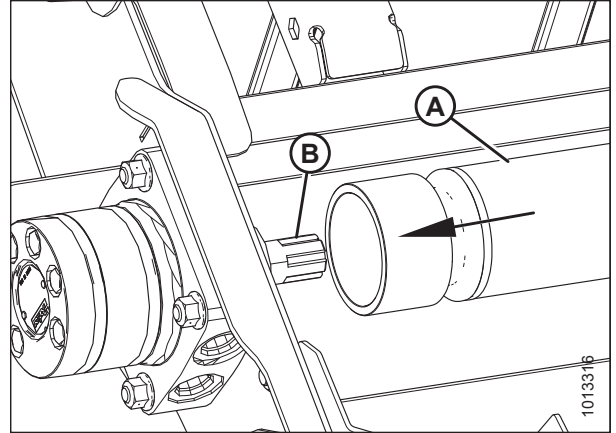


Figure 5.170: Motor

- Secure the bearing and housing (A) with the drive roller cover plate on the frame using two bolts (B).
- Install the feed deck draper. Refer to [5.10.1 Replacing Feed Draper, page 457](#).
- Tension the feed draper. Refer to [5.10.2 Adjusting Feed Draper Tension, page 459](#).

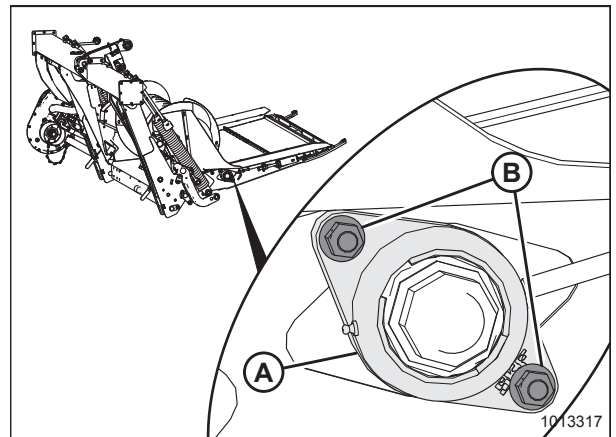


Figure 5.171: Drive Roller Bearing

Replacing Feed Draper Drive Roller Bearing

Removing Feed Draper Drive Roller Bearing



To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- Raise header and reel to full height, stop the engine, and remove key from the ignition.
- Engage reel safety props and header safety props.

MAINTENANCE AND SERVICING

3. Loosen jam nut (A) and turn bolt (B) counterclockwise to release the draper tension. Repeat at the opposite side.

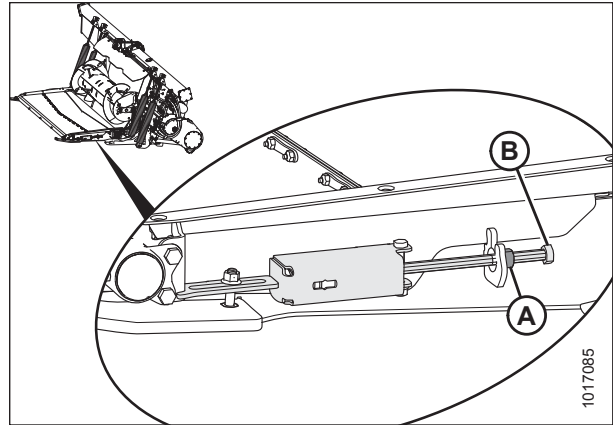


Figure 5.172: Feed Draper Tensioner

4. Loosen the setscrew (B) on the bearing lock (A).
5. Using a hammer and punch, tap the bearing lock (A) in the direction opposite to the auger rotation to release the lock.

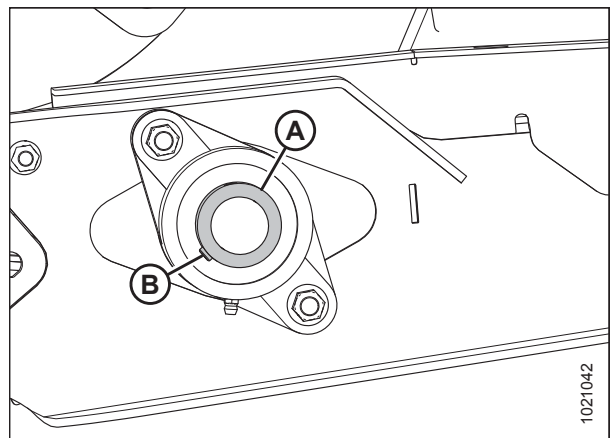


Figure 5.173: Feed Draper Drive Roller Bearing

6. Remove two nuts (A).

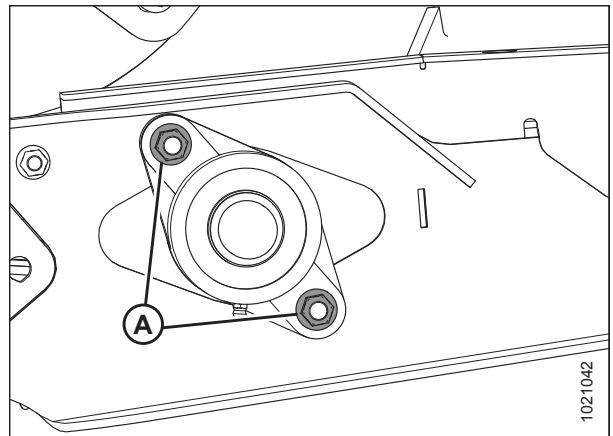


Figure 5.174: Feed Draper Drive Roller Bearing

MAINTENANCE AND SERVICING

7. Remove bearing housing (A).

NOTE:

If bearing is seized on shaft, it may be easier to remove the drive roller assembly. For instructions refer to [Removing Feed Draper Drive Roller, page 460](#).

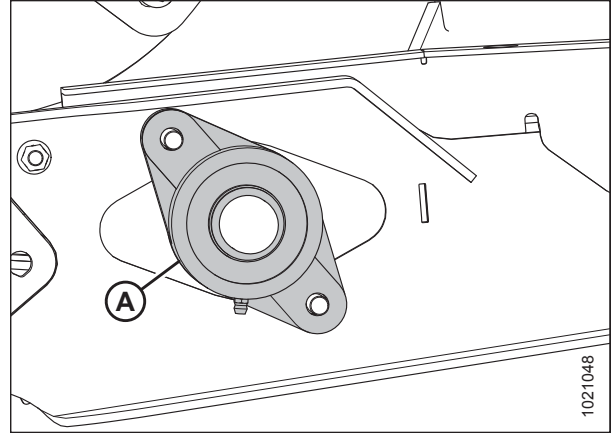


Figure 5.175: Feed Draper Drive Roller Bearing

Installing Feed Draper Drive Roller Bearing

1. Install the drive roller bearing housing (A) onto the shaft (B), and secure with two bolts and nuts (C).

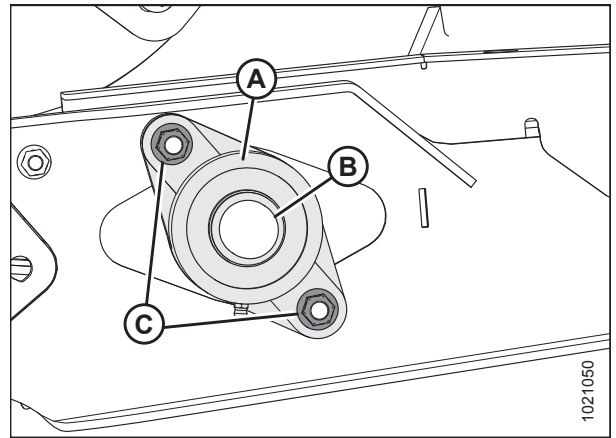


Figure 5.176: Feed Draper Drive Roller Bearing

2. Install bearing lock collar (A) onto the shaft.
3. Using a hammer and punch, tap the bearing lock in the direction of auger rotation to lock.
4. Tighten bearing lock setscrew (B).

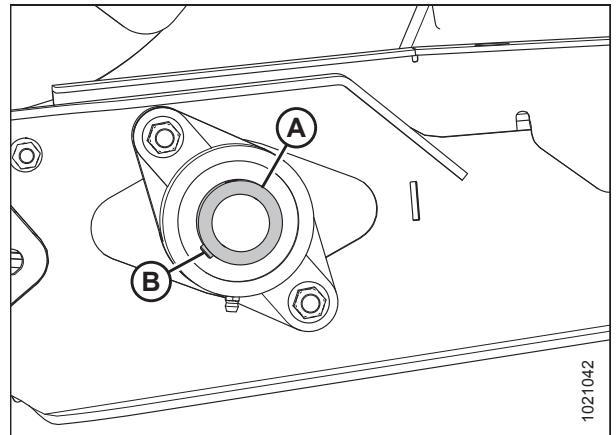


Figure 5.177: Feed Draper Drive Roller Bearing

5. Tension the feed draper. Refer to [5.10.2 Adjusting Feed Draper Tension, page 459](#).

5.10.4 Feed Draper Idler Roller

This roller is non-powered on the feed draper.

Removing Feed Draper Idler Roller

1. Engage the feeder house safety props.
2. Loosen jam nut (A) and turn bolt (B) counterclockwise to release the draper tension. Repeat at the opposite side.

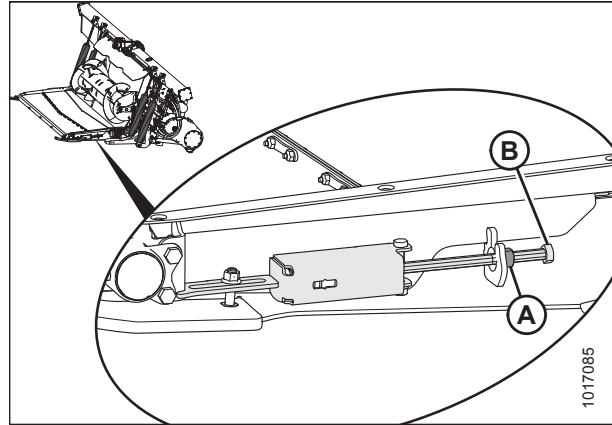


Figure 5.178: Feed Draper Tensioner

3. Remove nuts and screws (A), and remove the draper connector straps (B).
4. Open feed deck pan.

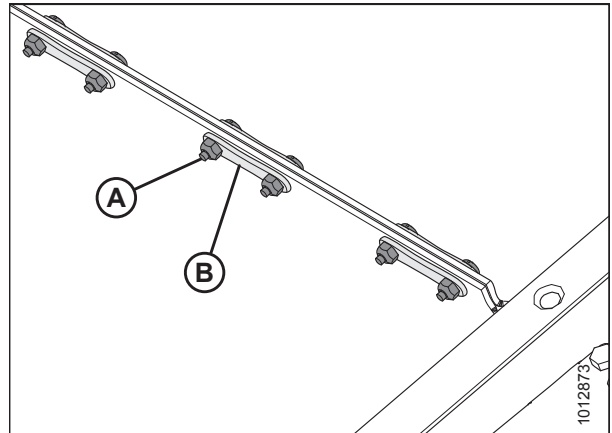


Figure 5.179: Draper Connector

5. Remove nut (D) to have better access to the other two nuts (C).
6. Remove two bolts (A) and nuts (C) from both ends of the idler roller.
7. Remove the idler roller assembly (B).

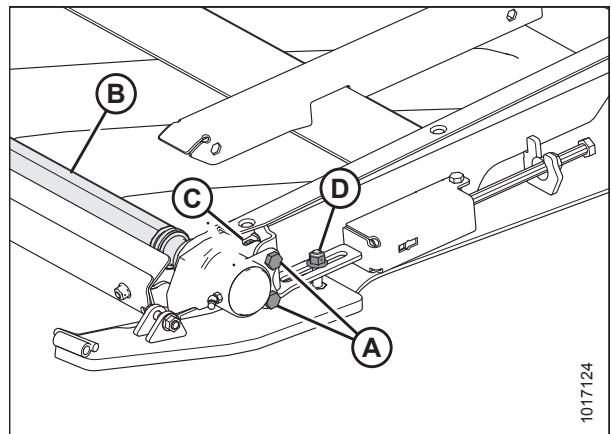


Figure 5.180: Idler Roller

Replacing Feed Draper Idler Roller Bearing

1. Remove the dust cap (A).

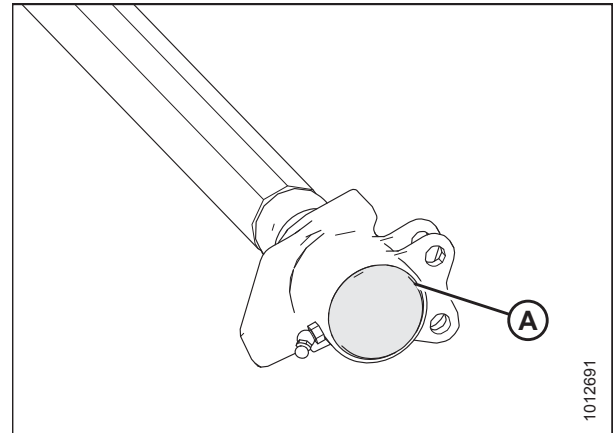


Figure 5.181: Idler Roller

2. Remove nut (A).
3. Use a hammer to tap the bearing assembly (B) until it slides off the shaft.

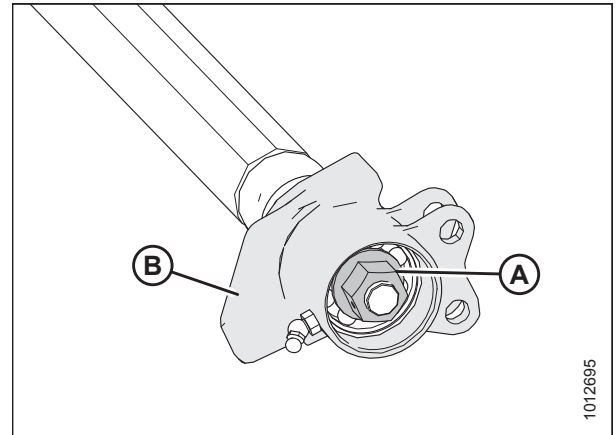


Figure 5.182: Idler Roller

4. Secure the housing (D) and remove the internal retaining ring (A), bearing (B), and two seals (C).
5. Apply oil to bore before assembly.
6. Install the seals (C) into the housing (D).

NOTE:

Ensure the flat side of the seal is facing inboard.

7. Install the bearing (B).
8. Install the retaining ring (A).
9. Brush shaft with oil. Carefully rotate the housing (D) with seals (C), bearing (B), and retaining ring (A) onto the shaft by hand to prevent seal damage.

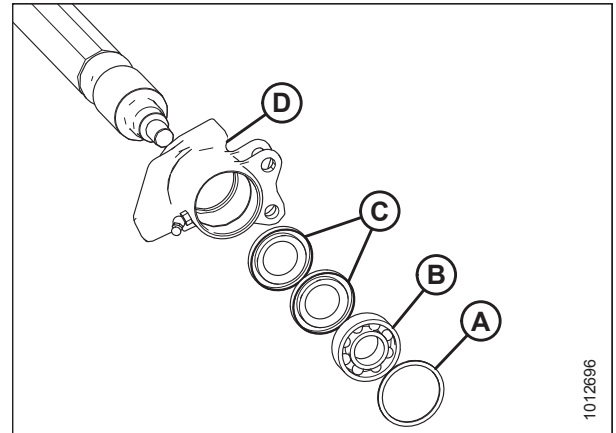


Figure 5.183: Bearing Assembly

MAINTENANCE AND SERVICING

10. Secure the bearing assembly to the shaft with nut (A).
11. Install the dust cap (B).
12. Pump grease into the bearing assembly.

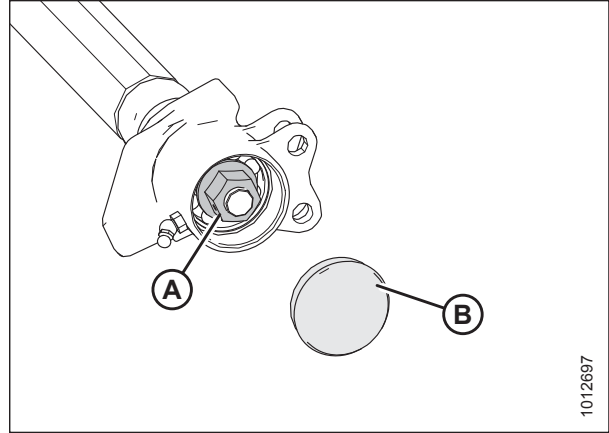


Figure 5.184: Idler Roller

Installing Feed Draper Idler Roller

1. Position the idler roller assembly (B) in the float module deck.
2. Install two bolts (A) and nuts (C) at both ends of the idler roller.

NOTE:

Do **NOT** overtighten the bolts (A).

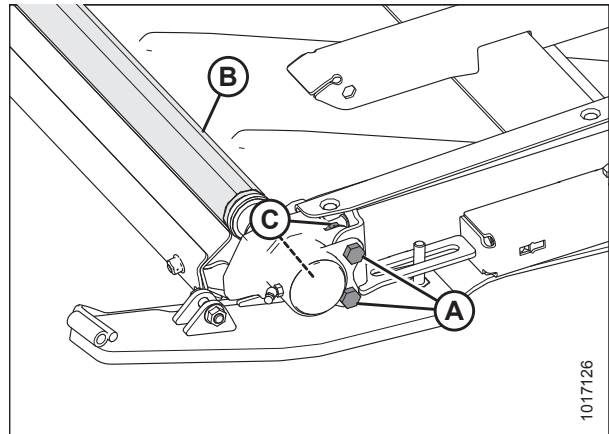


Figure 5.185: Idler Roller

3. Install nut (A).

IMPORTANT:

Maintain a 2–4 mm (1/16–3/16 in.) gap (C) between the plate (B) and nut (A) to allow the idler roller to float and to move when belt is tensioned or adjusted.

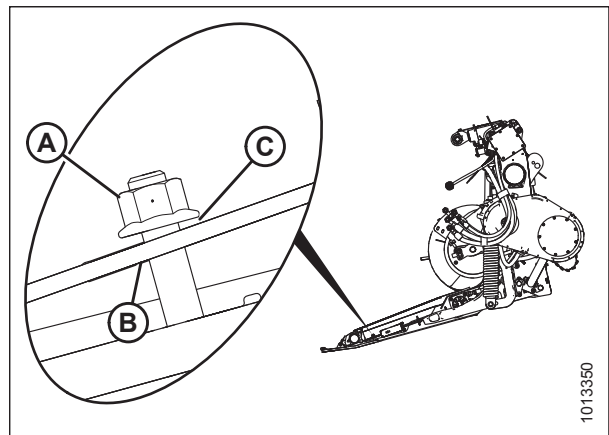


Figure 5.186: Idler Roller

MAINTENANCE AND SERVICING

4. Close the feed draper and secure with connector straps (B), screws (A), and nuts.
5. Tension the feed draper. Refer to [5.10.2 Adjusting Feed Draper Tension, page 459](#).

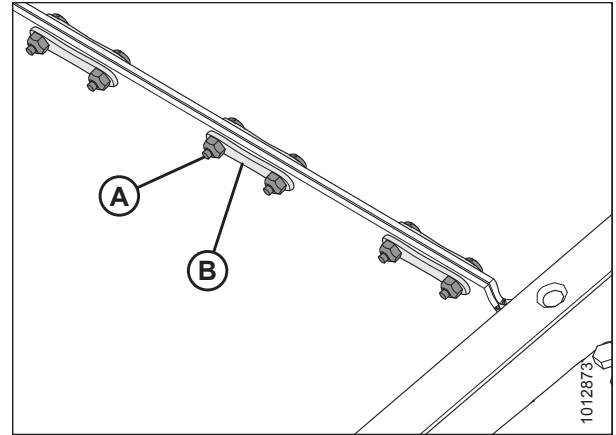


Figure 5.187: Draper Connector

5.10.5 Lowering Float Module Feed Deck Pan

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Start combine, raise header fully, and engage header lift cylinder locks.
2. Stop engine and remove key.
3. Rotate latches (A) to unlock handle (B).

NOTE:

Parts have been removed from illustration at right for clarity.

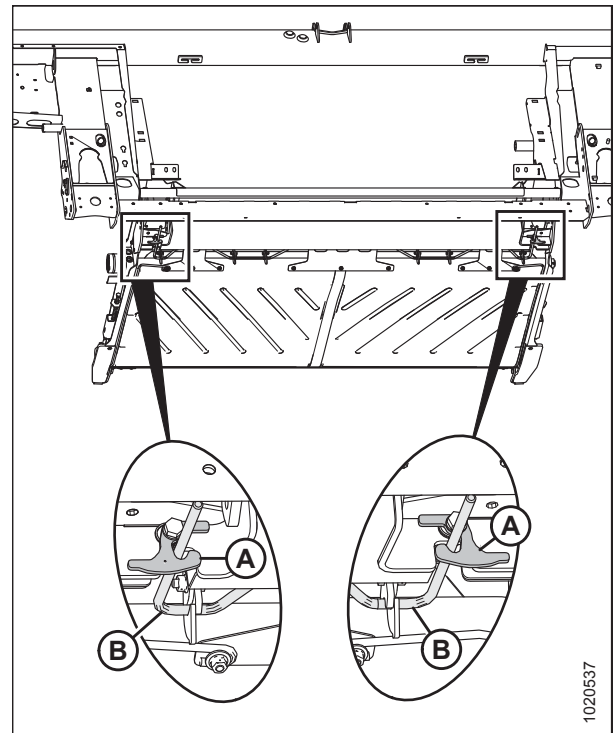


Figure 5.188: Feed Deck Pan (Rear View)

MAINTENANCE AND SERVICING

4. Hold pan (A) and rotate handles (B) downward to release pan.

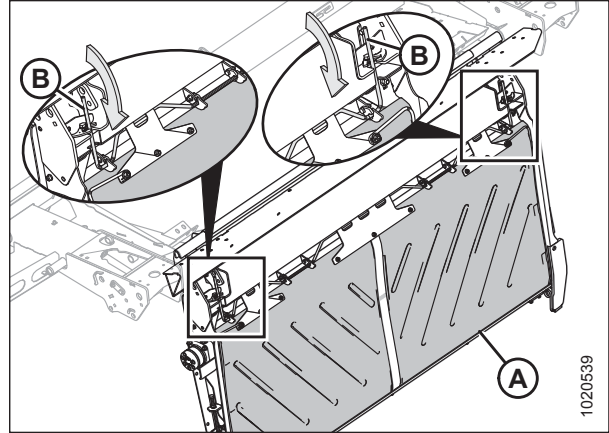


Figure 5.189: Underside of Feed Deck Pan

5. Lower plastic pan (A) and check for shipping materials/debris that may have fallen under float module draper.

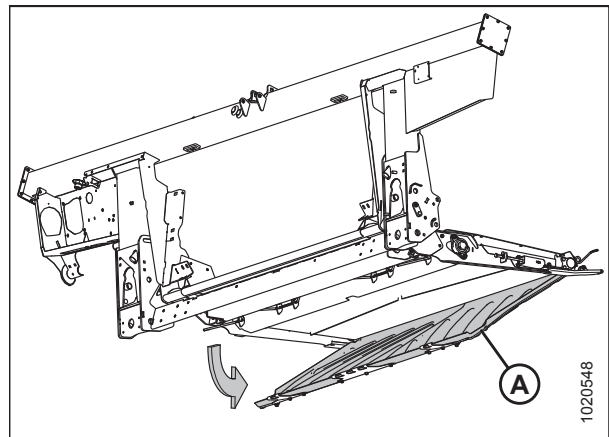


Figure 5.190: Feed Deck Pan (Rear View)

5.10.6 Raising Float Module Feed Deck Pan

1. Raise feed deck pan (A).
2. Engage lock handle (B) in feed deck pan hooks (C).
3. Rotate handles (B) upwards, bringing the feed deck pan (A) into locking position.

NOTE:

Ensure that all three deck pan hooks (C) are secured on the lock handle (B).

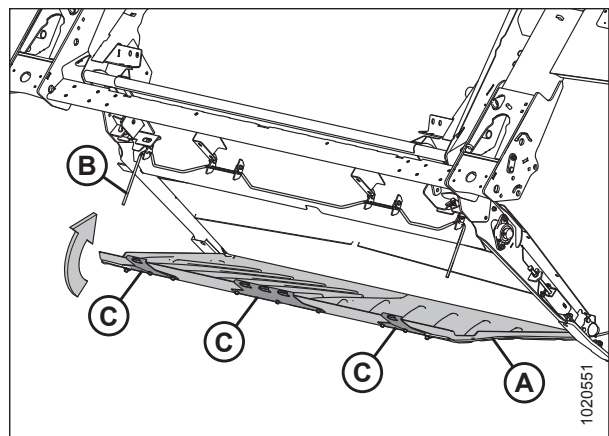


Figure 5.191: Underside of Feed Deck Pan (Rear View)

MAINTENANCE AND SERVICING

4. Hold feed deck pan (A) in place, and rotate latches (B) to lock handle (C) securely.

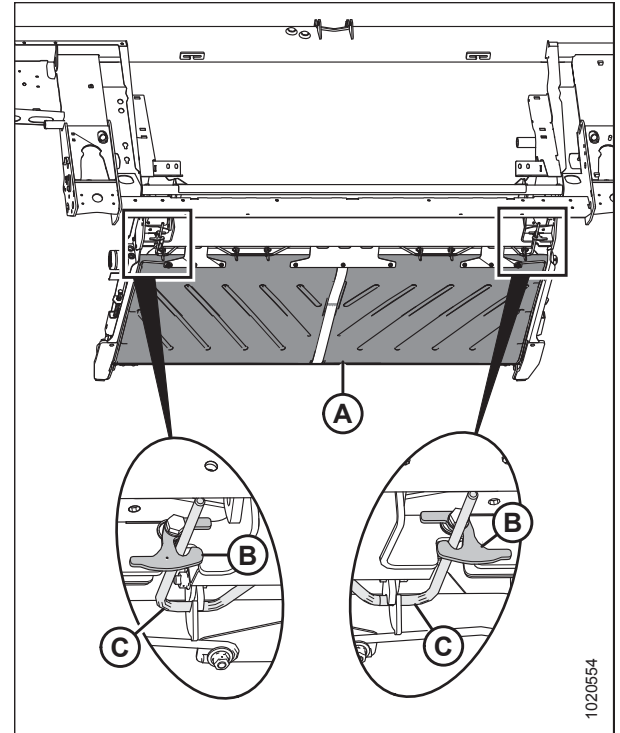


Figure 5.192: Feed Deck Pan (Rear View)

5.11 Float Module Stripper Bars and Feed Deflectors

5.11.1 Removing Stripper Bars

1. Detach the header from the combine. Refer to [4 Header Attachment/Detachment, page 311](#).
2. Remove the four bolts and nuts (A) securing the stripper bar (B) to the float module frame, and remove the stripper bar.
3. Repeat at the opposite side.

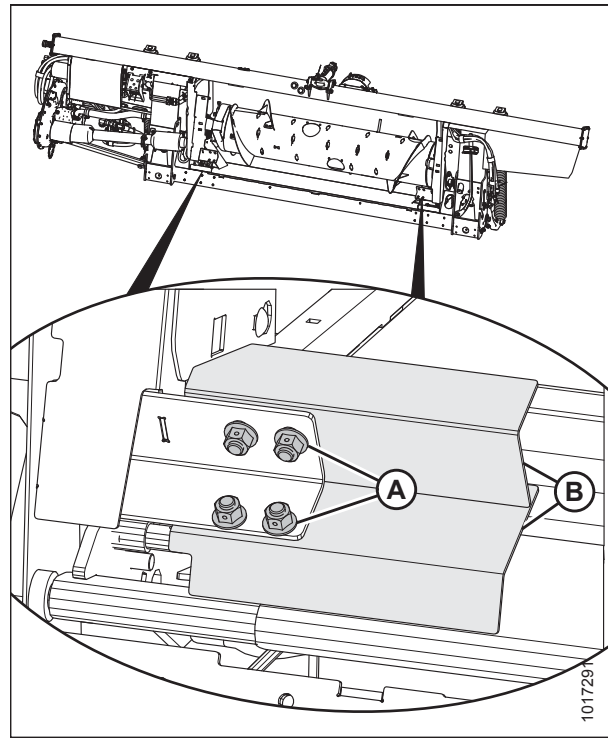


Figure 5.193: Stripper Bar

5.11.2 Installing Stripper Bars

1. Detach the header from the combine. Refer to [4 Header Attachment/Detachment, page 311](#).
2. Position the stripper bar (B) so the notch is at the corner of the frame.
3. Secure the stripper bar (B) to the float module with four bolts and nuts (A). Ensure the nuts are facing the combine.
4. Repeat at the opposite side.

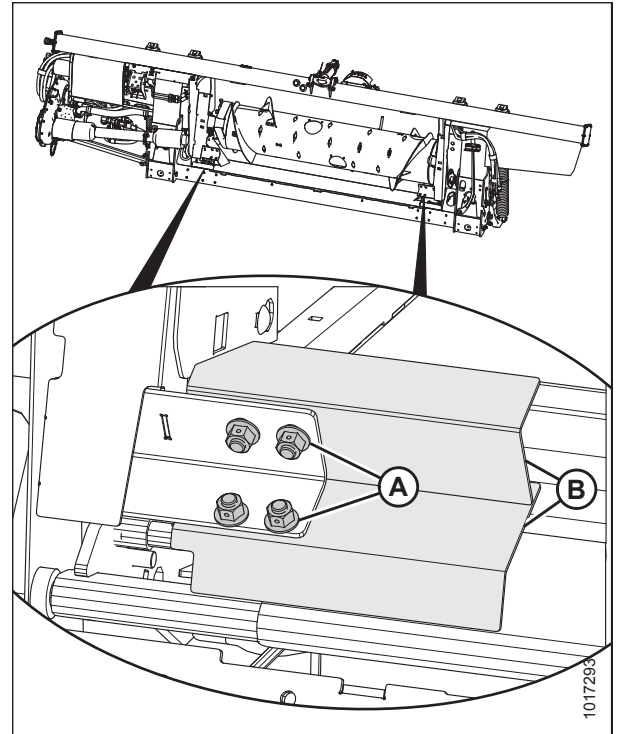


Figure 5.194: Stripper Bar

5.11.3 Replacing Feed Deflectors on New Holland CR Combines

1. Detach the header from the combine. Refer to [4 Header Attachment/Detachment, page 311](#).
2. Remove the two bolts and nuts (B) securing the feed deflector (A) to the float module frame, and remove the feed deflector.
3. Position the replacement feed deflector (A), and secure with bolts and nuts (B) (ensure the nuts are facing the combine). Do **NOT** tighten nuts.

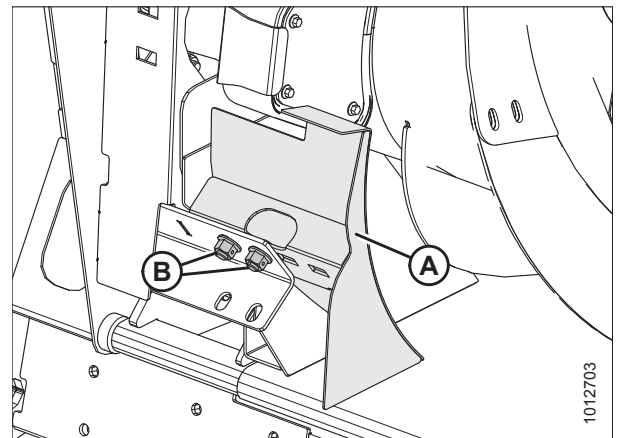


Figure 5.195: Feed Deflector

MAINTENANCE AND SERVICING

4. Adjust deflector (A) so that distance (C) between pan and deflector is 4–6 mm (5/32–1/4 in.).
5. Tighten nuts (B).
6. Repeat for opposite deflector.
7. Attach header onto the combine. Refer to [4 Header Attachment/Detachment, page 311](#).
8. After attaching header to combine, extend center-link fully, and check gap between deflector and pan. Maintain the 4–6 mm (5/32–1/4 in.) gap.

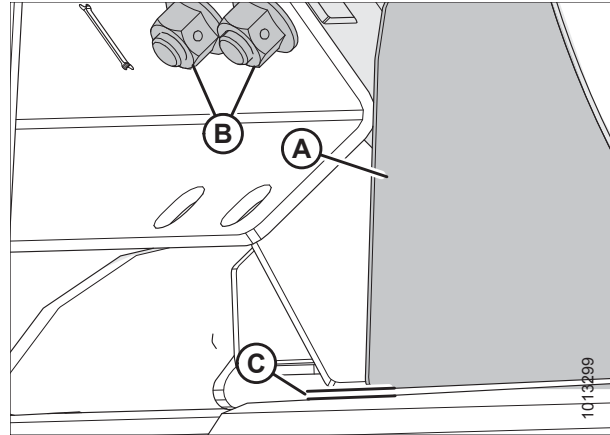


Figure 5.196: Pan and Deflector Distance

5.12 Header Drapers

There are two header drapers. They convey cut crop to the float module feed draper and auger. Replace the drapers if torn, cracked, or missing slats.

5.12.1 Removing Side Drapers

DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Raise the reel and engage the reel safety props.
2. Raise the header and engage the safety props.
3. Move the draper until the draper joint is in the work area.

NOTE:

The deck also can be shifted towards the center to provide an opening at the endsheet.

4. Shut down the combine, and remove the key from the ignition.
5. Release the tension on the draper. Refer to [5.12.3 Adjusting Draper Tension, page 478](#).
6. Remove the screws (A) and tube connectors (B) at the draper joint.
7. Pull the draper from deck.

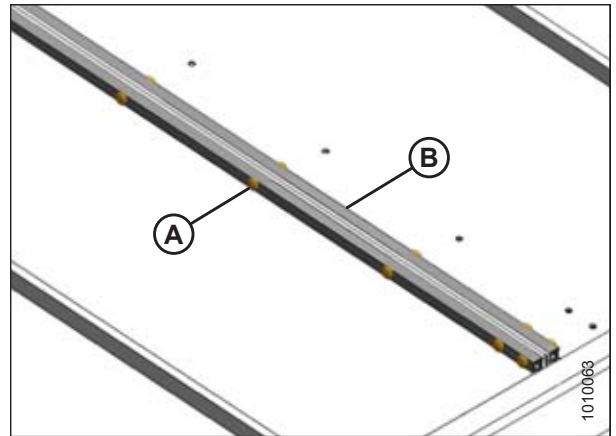


Figure 5.197: Draper Connector

5.12.2 Installing Side Drapers

WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

NOTE:

Check the deck height before installing the drapers. Refer to [5.12.5 Adjusting Deck Height, page 482](#).

1. Apply talc, baby powder, or talc/graphite lubricant mix to the draper surface that forms the seal with the cutterbar and to the underside of the draper guides.
2. Insert the draper into the deck at the outboard end under the rollers. Pull the draper into the deck while feeding it at the end.
3. Feed in the draper until it can be wrapped around the drive roller.
4. Insert the opposite end of the draper into the deck over the rollers. Pull the draper fully into the deck.
5. Loosen the mounting bolts (B) on the rear deck deflector (A) (this may help with draper installation).



Figure 5.198: Installing Draper

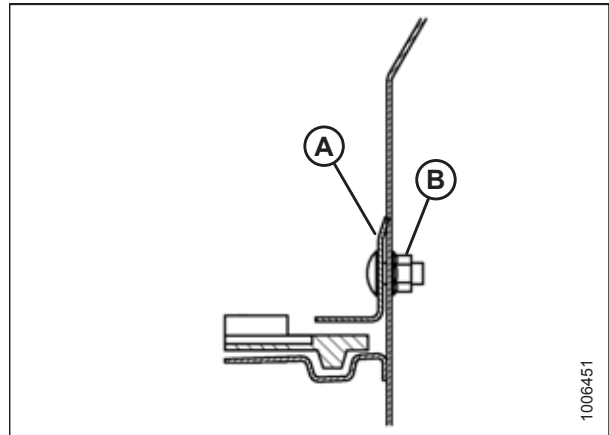


Figure 5.199: Draper Seal

MAINTENANCE AND SERVICING

6. Attach the ends of the draper with tube connectors (B), screws (A) (with the heads facing the center opening), and nuts.
7. Adjust the draper tension. Refer to [5.12.3 Adjusting Draper Tension, page 478](#).

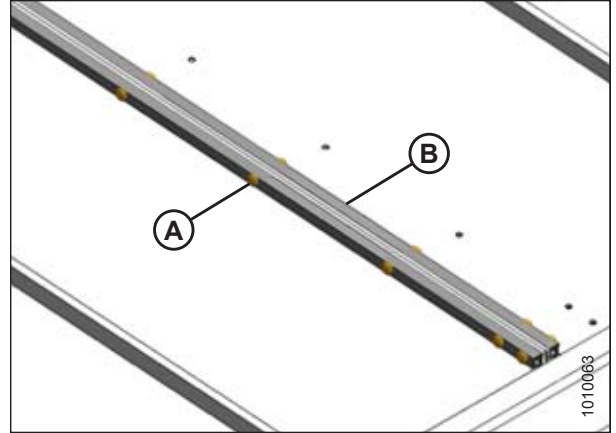


Figure 5.200: Draper Connector

8. Check clearance (A) between drapers (B) and cutterbar (C). It should be 0–3 mm (1/8 in.). Refer to [5.12.5 Adjusting Deck Height, page 482](#) to adjust if necessary.

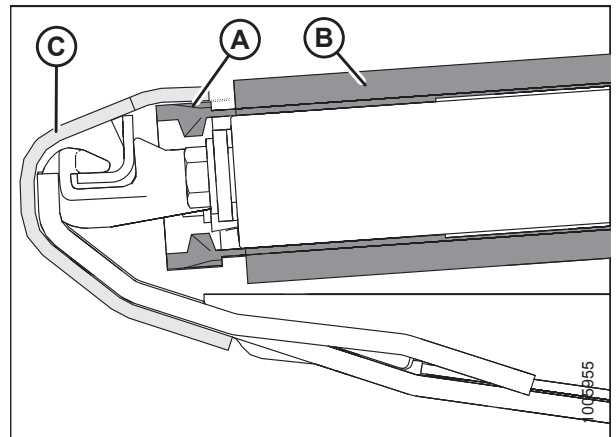


Figure 5.201: Draper Seal

9. If adjustment of the backsheet deflector (A) is required, loosen nut (D) and move the deflector until there is a 1–7 mm (1/32–5/16 in.) gap (C) between the draper (B) and the deflector.
10. Operate the drapers with the engine at idle so the talc or talc/graphite lubricant makes contact and adheres to the draper seal surfaces.

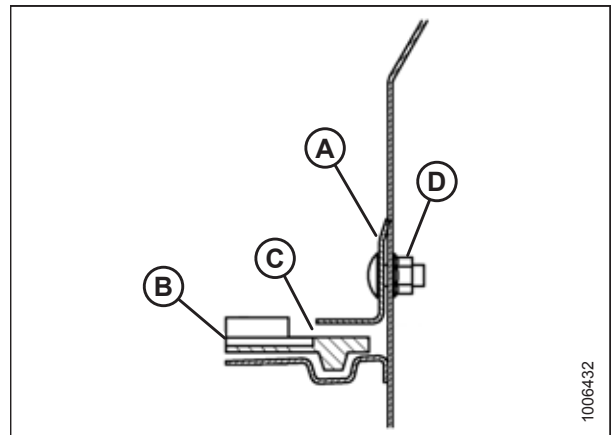


Figure 5.202: Draper Seal

5.12.3 Adjusting Draper Tension

⚠ WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

1. Ensure the white indicator bar (A) is at the halfway point in the window.

⚠ WARNING

Check to be sure all bystanders have cleared the area.

2. Start the engine and fully raise the header.
3. Shut down the combine, and remove the key from the ignition.
4. Engage the header safety props.

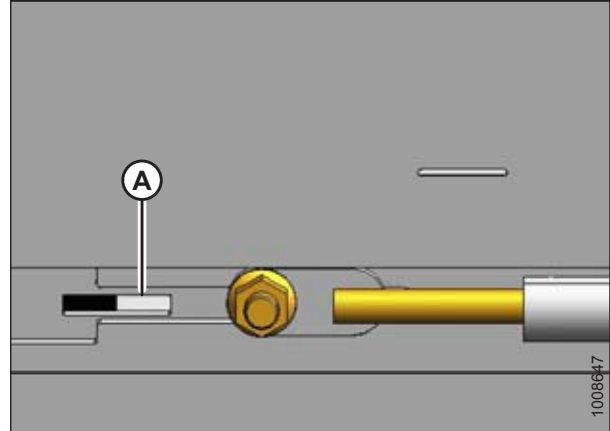


Figure 5.203: Left Tension Adjuster Shown – Right Opposite

5. Ensure the draper guide (the rubber track on the underside of the draper) is properly engaged in the groove (A) on the drive roller.

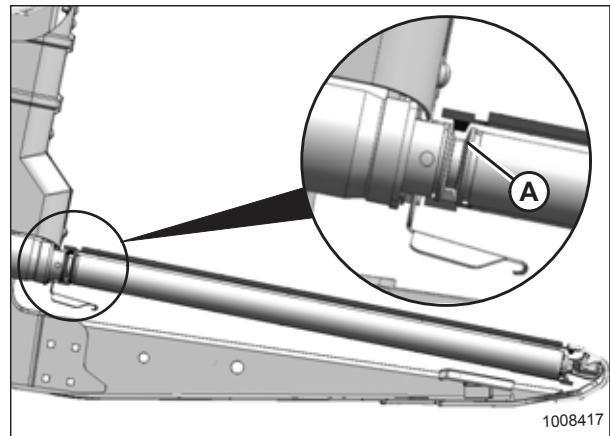


Figure 5.204: Drive Roller

MAINTENANCE AND SERVICING

6. Ensure the idler roller (A) is between the draper guides (B).

NOTE:

The drapers are tensioned at the factory and rarely need adjustment. If adjustment is required, tension the drapers just enough to prevent slipping and to keep the draper from sagging below the cutterbar.

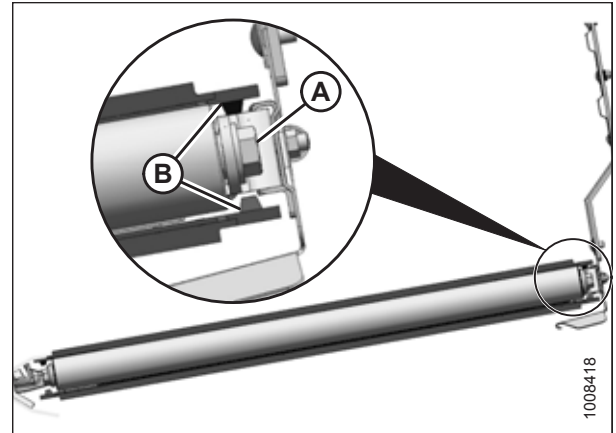


Figure 5.205: Idler Roller

IMPORTANT:

Do **NOT** adjust nut (C). This nut is used for draper alignment only.

7. To loosen the adjuster bolt (A), turn it counterclockwise. The white indicator bar (B) will move outboard in the direction of arrow (D) to indicate that the draper is loosening. Loosen until the white indicator bar is at the halfway point in the window.
8. To tighten the adjuster bolt (A), turn it clockwise. The white indicator bar (B) will move inboard in the direction of arrow (E) to indicate that the draper is tightening. Tighten until the white indicator bar is at the halfway point in the window.

IMPORTANT:

- To avoid premature failure of the draper, draper rollers, and/or tightener components, do not operate with the tension set so the white bar is not visible.
- To prevent scooping dirt, ensure the draper is tight enough that it does not sag below the point where the cutterbar contacts the ground.

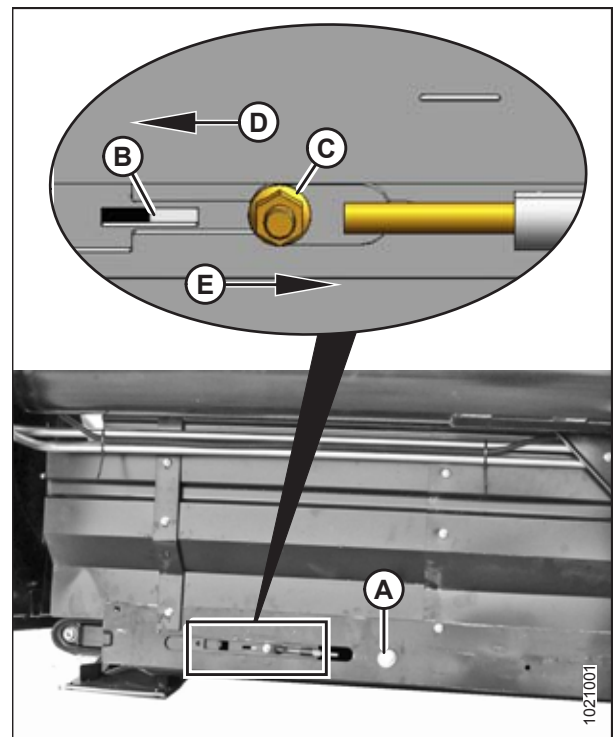


Figure 5.206: Left Tension Adjuster Shown – Right Opposite

5.12.4 Adjusting Header Draper Tracking


The draper tracking is adjusted by aligning the drive and idler draper rollers.

CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to [5.1 Preparing Machine for Servicing, page 365](#).

The images shown in the following procedure are applicable to the left draper deck. Use opposite views for the right draper deck.

Figure 5.207: Draper Tracking Adjustments

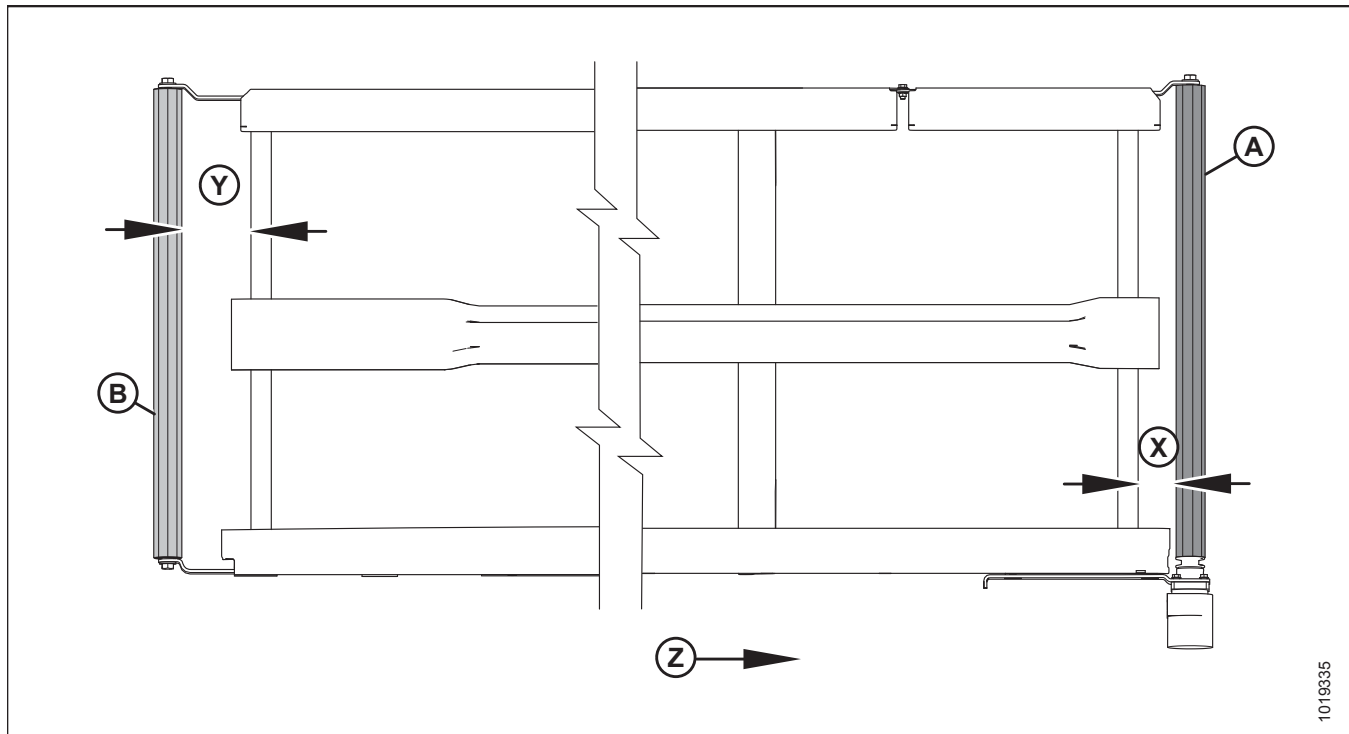

A - Drive Roller

B - Idler Roller

X - Drive Roller Adjust

Y - Idler Roller Adjust

Z - Draper Direction

1. Refer to the following table to determine which roller requires adjustment and which adjustments are necessary.

Table 5.2 Header Draper Tracking

Tracking	At Location	Adjustment	Method
Backward	Drive roller	Increase X	Tighten nut (E)
Forward	Drive roller	Decrease X	Loosen nut (E)
Backward	Idler roller	Increase Y	Tighten nut (H)
Forward	Idler roller	Decrease Y	Loosen nut (H)

MAINTENANCE AND SERVICING

2. Adjust drive roller (A) to change **X** as follows:

- a. Loosen nuts (C) and jam nut (D).
- b. Turn the adjuster nut (E).

NOTE:

Some parts removed from illustration for clarity.

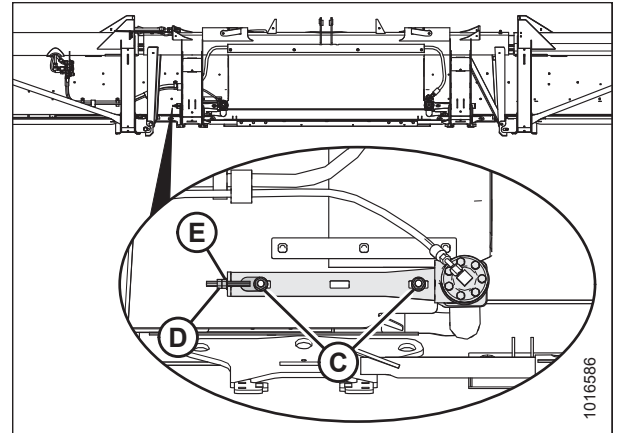


Figure 5.208: Left Deck Drive Roller (Left Shown – Right Opposite)

3. Adjust idler roller (B) to change **Y** as follows:

- a. Loosen nut (F) and jam nut (G).
- b. Turn the adjuster nut (H).

NOTE:

If the draper does not track at the idler roller end after the idler roller adjustment, the drive roller is likely not square to the deck. Adjust the drive roller, and then readjust the idler roller.

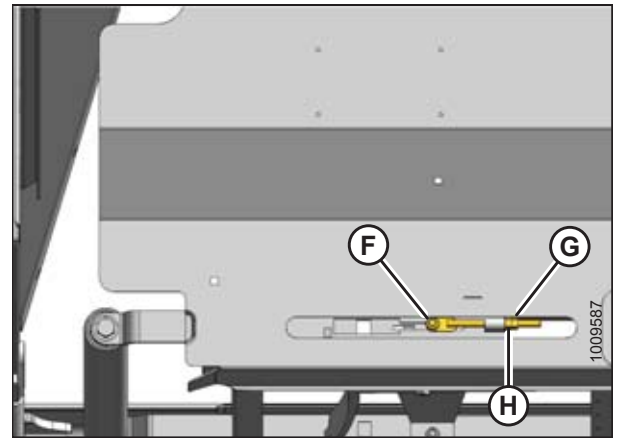


Figure 5.209: Left Deck Idler Roller (Left Shown – Right Opposite)

5.12.5 Adjusting Deck Height

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

IMPORTANT:

New factory installed drapers are pressure and heat checked at the factory. The gap between draper and cutterbar is set to 0–3 mm (0–1/8 in.). This is to prevent material from entering into the side drapers and stalling them. You may need to decrease the deck clearance to 0–1 mm (1/16 in.).

1. Shut down the combine, and remove key from ignition.
2. Check that clearance (A) between draper (B) and cutterbar (C) is 0–3 mm (0–1/8 in.).

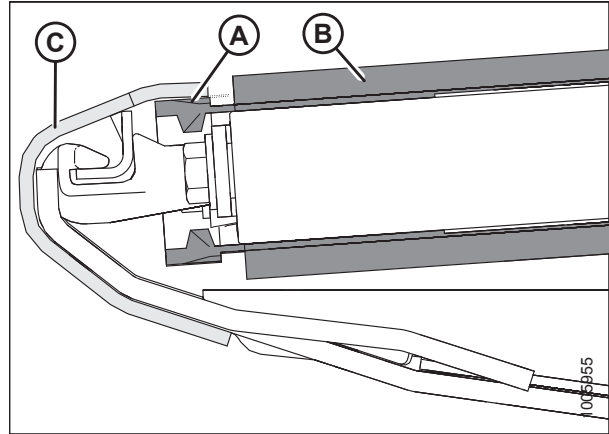


Figure 5.210: Draper Seal

3. Take measurement at deck supports (A) with the header in working position. Depending on the header size, there are between two and eight supports per deck.
4. Loosen the draper tension. Refer to [5.12.3 Adjusting Draper Tension, page 478](#).

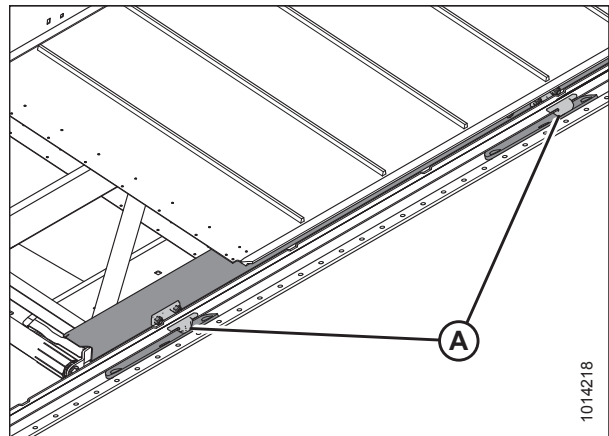


Figure 5.211: Draper Deck Supports

MAINTENANCE AND SERVICING

5. Lift the front edge of the draper (A) past cutterbar (B) to expose the deck support.
6. Measure and note the thickness of the draper belt.

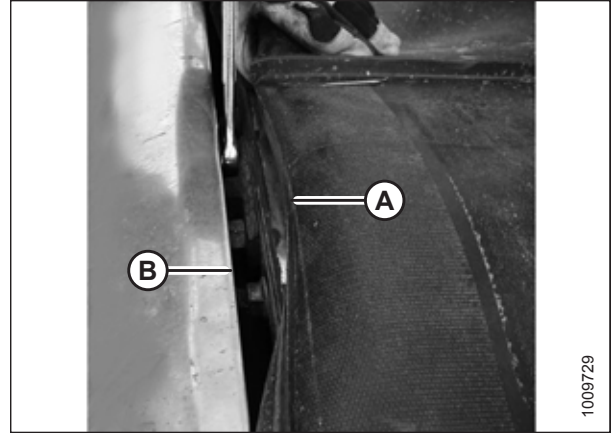


Figure 5.212: Deck Adjustment

7. Loosen the two lock nuts (A) on deck support (B) **one half-turn only**.

NOTE:

The number of deck supports (B) is determined by the header size: four on single-reel headers, and eight on double-reel headers.

8. Tap deck (C) to lower the deck relative to the deck supports. Tap deck support (B) using a punch to raise the deck relative to the deck supports.

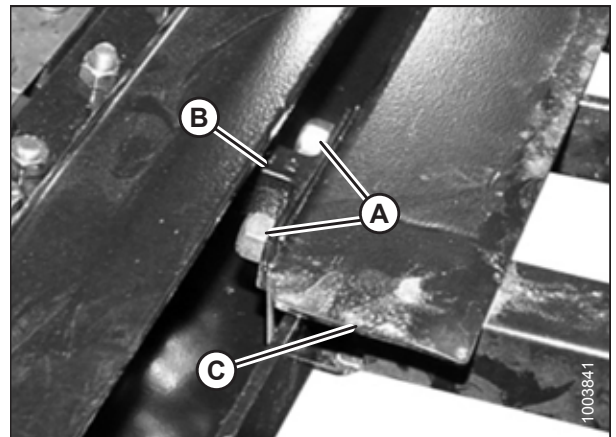


Figure 5.213: Deck Support

9. To create a seal, adjust deck (A) so that clearance (B) between cutterbar (C) and deck is 1 mm (1/16 in.) plus the draper thickness as measured in Step 6, [page 483](#).
10. Tighten deck support hardware (D).
11. Recheck gap (B). Refer to Step 9, [page 483](#).
12. Tension the draper. Refer to [5.12.3 Adjusting Draper Tension, page 478](#).

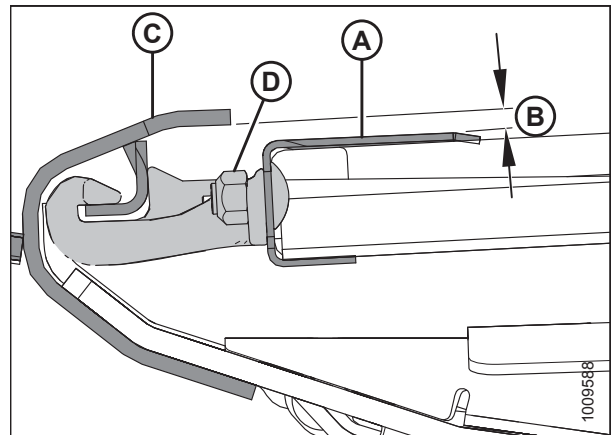


Figure 5.214: Deck Support

13. Adjust the backsheet deflector (A) (if required) by loosening nut (D) and moving the deflector until there is a 1–7 mm (1/32–5/16 in.) gap (C) between draper (B) and the deflector.

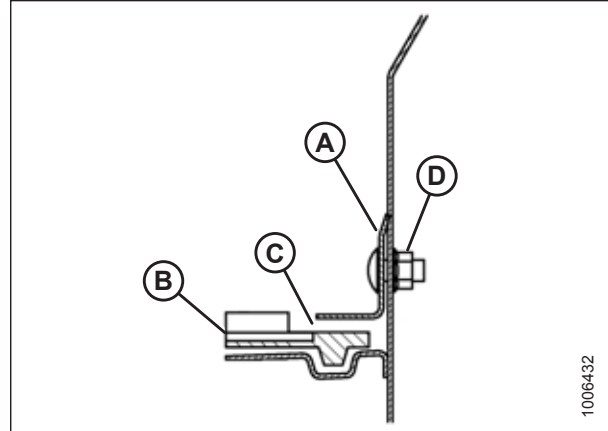


Figure 5.215: Backsheet Deflector

5.12.6 Header Draper Roller Maintenance

The draper rollers have non-greaseable bearings; however, the external seal should be checked every 200 hours (more frequently in sandy conditions) to achieve maximum bearing life.

Inspecting Draper Roller Bearing

Using an infrared thermometer, check for bad draper roller bearings as follows:

1. Engage the header and run the drapers for approximately three minutes.
2. Check the temperature of the draper roller bearings at each of the roller arms (A), (B), and (C) on each deck. Ensure the temperature does not exceed 44°C (80°F) above the ambient temperature.

Replace roller bearings that exceed maximum recommended temperature. Refer to

- [Replacing Header Draper Idler Roller Bearing, page 486](#), and
- [Replacing Header Draper Drive Roller Bearing, page 489](#).

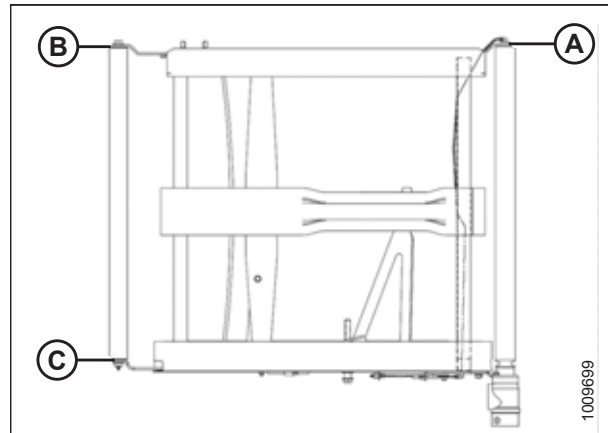


Figure 5.216: Roller Arms

Draper Deck Idler Roller

Removing Side Draper Deck Idler Roller



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

NOTE:

If the draper connector is not visible, engage the header until the connector is accessible (preferably close to the outboard end of the deck).

MAINTENANCE AND SERVICING

1. Start the engine, raise the header, and raise the reel.
2. Shut down the combine, and remove the key from the ignition.
3. Engage the reel safety props, and engage the header safety props.
4. Loosen the draper by turning adjuster bolt (A) counterclockwise.

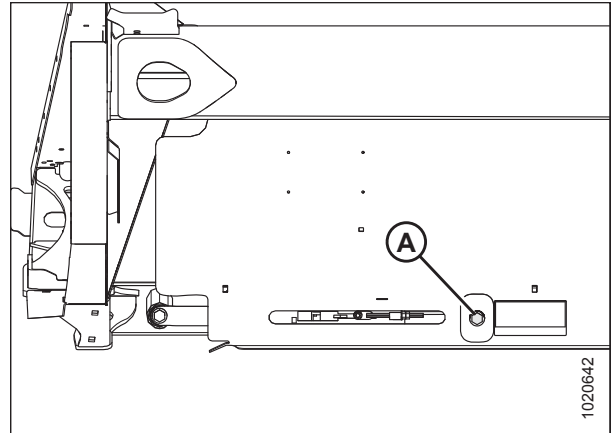


Figure 5.217: Tensioner

5. Remove the screws (A), tube connectors (B), and nuts from the draper joint to uncouple the draper.
6. Pull the draper off the idler roller.

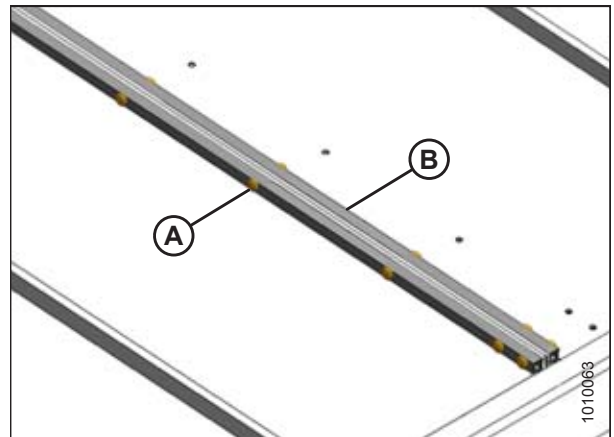


Figure 5.218: Draper Connector

7. Remove the bolts (A) and washer at both ends of the idler roller.

NOTE:

Remove the bolt at the back of the deck first. This will give you extra room to access the bolt under the cutterbar.

8. Spread the roller arms (B) and (C), and remove the idler roller.

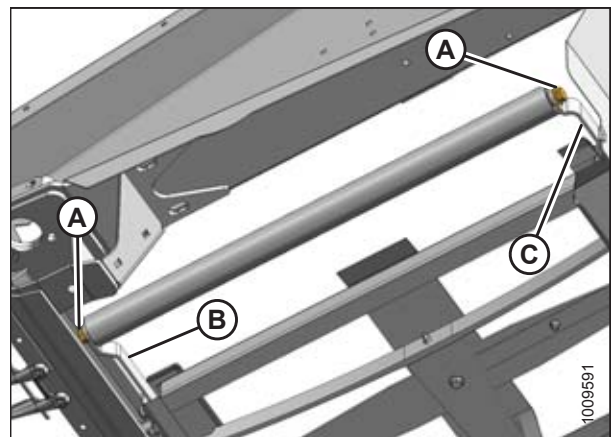


Figure 5.219: Idler Roller

Replacing Header Draper Idler Roller Bearing

1. Remove the draper idler roller assembly. Refer to *Removing Side Draper Deck Idler Roller*, page 484.
2. Remove the bearing assembly (A) and seal (B) from the roller tube (C) as follows:
 - a. Attach a slide hammer (D) to the threaded shaft (E) in the bearing assembly.
 - b. Tap out the bearing assembly (A) and seal (B).
3. Clean the inside of the roller tube (C), check the tube for signs of wear or damage, and replace if necessary.

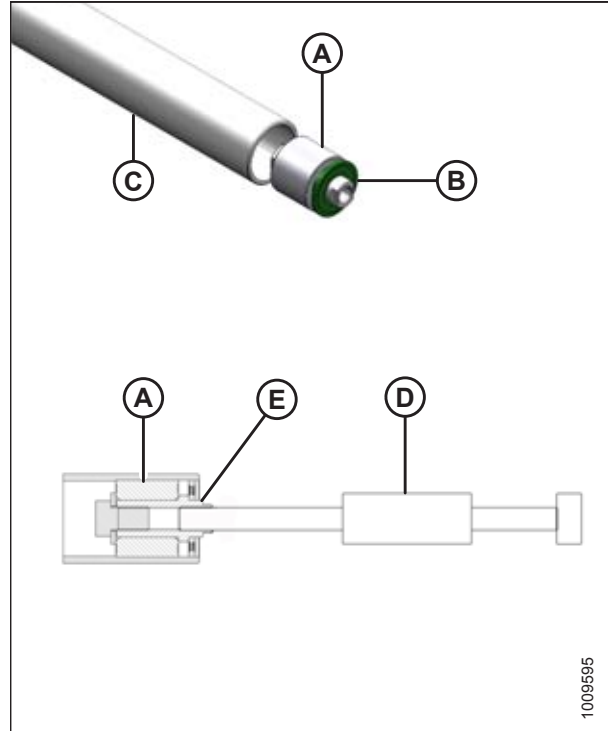


Figure 5.220: Idler Roller Bearing

4. Install the new bearing assembly (A) by pressing the outer race of the bearing into the tube until it is 14–15 mm (9/16–19/32 in.) (B) from the outside edge of the tube.
5. Apply grease in front of the bearing assembly (A). Refer to the inside back cover of this book for grease specifications.
6. Install a new seal (C) at the roller opening, and install a flat washer (1.0 in. I.D. x 2.0 in. O.D.) on the seal.
7. Tap the seal (C) into the roller opening with a suitably sized socket. Tap the washer and the bearing assembly (A) until the seal is 3–4 mm (1/8–3/16 in.) (D) from the outside edge of the tube.

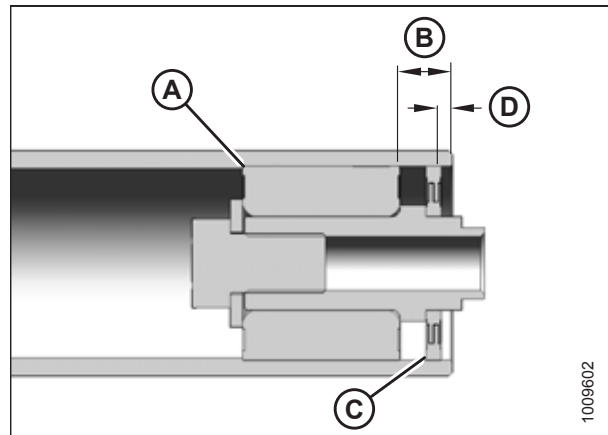


Figure 5.221: Idler Roller Bearing

Installing Header Draper Idler Roller

1. Position the stub shaft into the idler roller in the forward arm (B) on the deck.
2. Push on the roller to slightly deflect the forward arm so the stub shaft at the rear of the roller can be slipped into the rear arm (C).
3. Install bolts (A) with washers, and torque to 93 Nm (70 lbf·ft).
4. Wrap the draper over the idler roller, close the draper, and set the tension. Refer to [5.12.2 Installing Side Drapers](#), page 476.
5. Run the machine and verify the draper tracks correctly. Adjust the draper tracking if required. Refer to [5.12.4 Adjusting Header Draper Tracking](#), page 480.

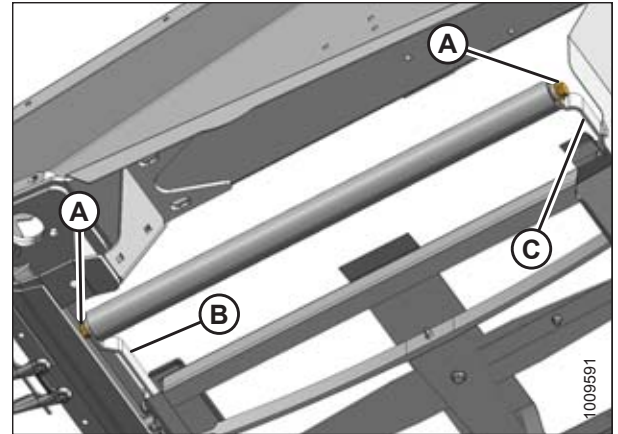


Figure 5.222: Idler Roller

Draper Deck Drive Roller

Removing Side Draper Drive Roller



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

NOTE:

If the draper connector is not visible, engage the header until the connector is accessible (preferably close to the outboard end of the deck).

1. Start the engine, raise the header, and raise the reel.
2. Shut down the combine, and remove the key from the ignition.
3. Loosen the draper by turning the adjuster bolt (A) counterclockwise.

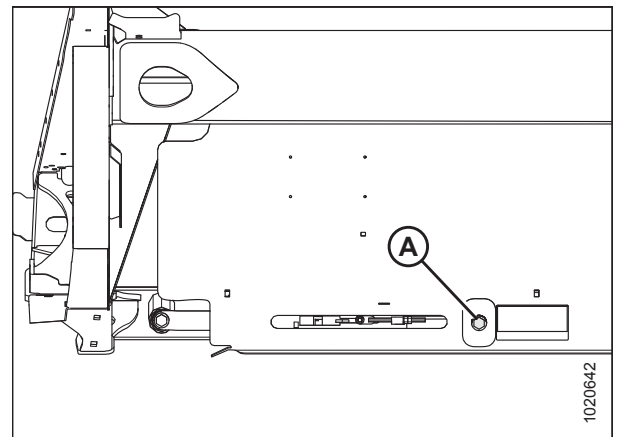


Figure 5.223: Tensioner

MAINTENANCE AND SERVICING

4. Remove the tube connectors (B), screws (A), and nuts from the draper joint to uncouple the draper.
5. Pull the draper off the drive roller.

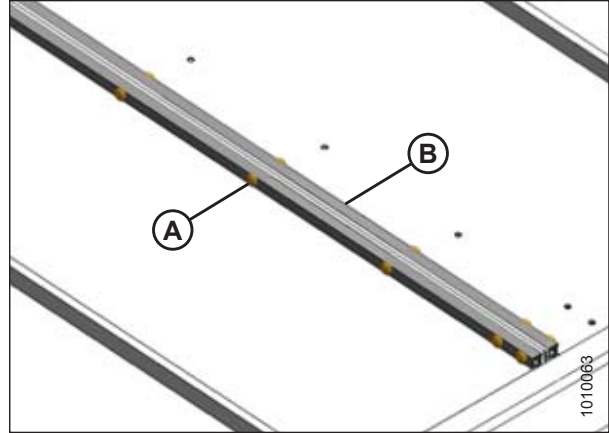


Figure 5.224: Draper Connector

6. Align the setscrews with the hole (A) in the guard. Remove the two setscrews holding the motor onto the drive roller.

NOTE:

The setscrews are 1/4 turn apart.

7. Remove the four bolts (B) securing the motor to the drive roller arm.

NOTE:

It may be necessary to remove the plastic shield (C) to gain access to the top bolt.

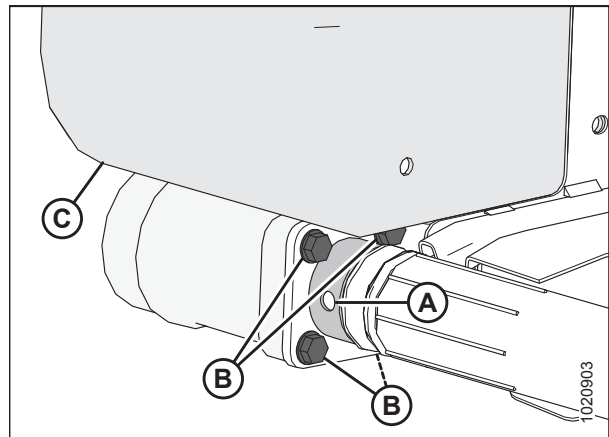


Figure 5.225: Drive Roller

8. Remove the bolt (A) securing the opposite end of the drive roller (B) to the support arm.
9. Remove the drive roller (B).

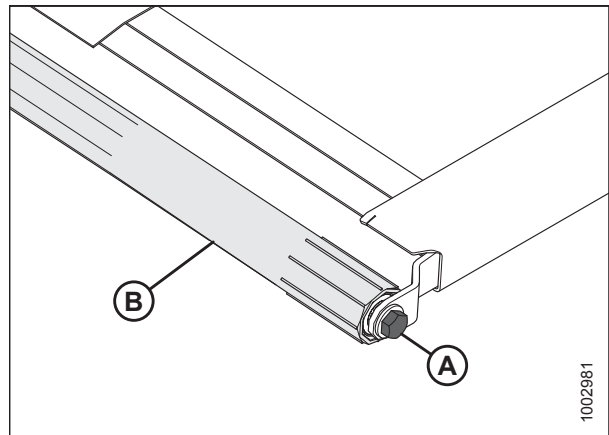


Figure 5.226: Drive Roller

Replacing Header Draper Drive Roller Bearing

1. Remove the draper idler roller assembly. Refer to [Removing Side Draper Drive Roller, page 487](#).
2. Remove the bearing assembly (A) and seal (B) from the roller tube (C) as follows:
 - a. Attach a slide hammer (D) to the threaded shaft (E) in the bearing assembly.
 - b. Tap out the bearing assembly (A) and seal (B).
3. Clean the inside of the roller tube (C), check the tube for signs of wear or damage, and replace if necessary.

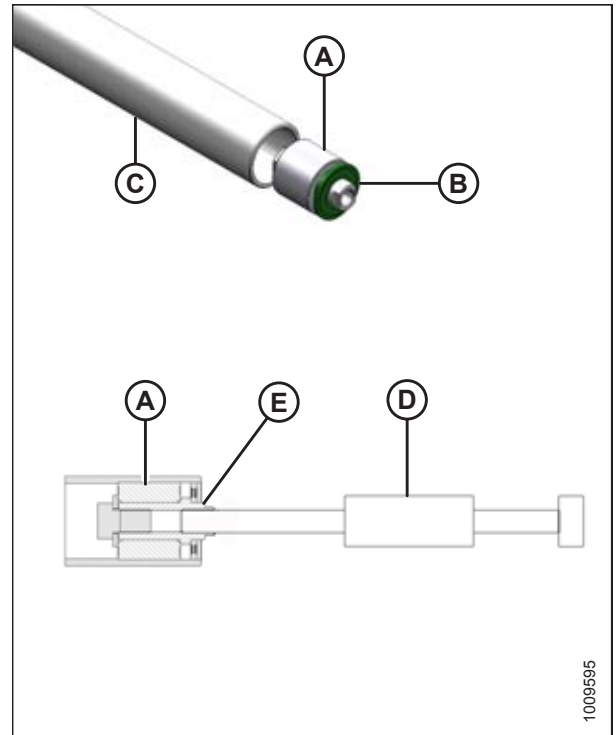


Figure 5.227: Idler Roller Bearing

4. Install the new bearing assembly (A) by pressing the outer race of the bearing into the tube until it is 14–15 mm (9/16–19/32 in.) (B) from the outside edge of the tube.
5. Apply grease in front of the bearing assembly (A). Refer to the inside back cover of this book for grease specifications.
6. Install a new seal (C) at the roller opening, and install a flat washer (1.0 in. I.D. x 2.0 in. O.D.) on the seal.
7. Tap the seal (C) into the roller opening with a suitably sized socket. Tap the washer and the bearing assembly (A) until the seal is 3–4 mm (1/8–3/16 in.) (D) from the outside edge of the tube.

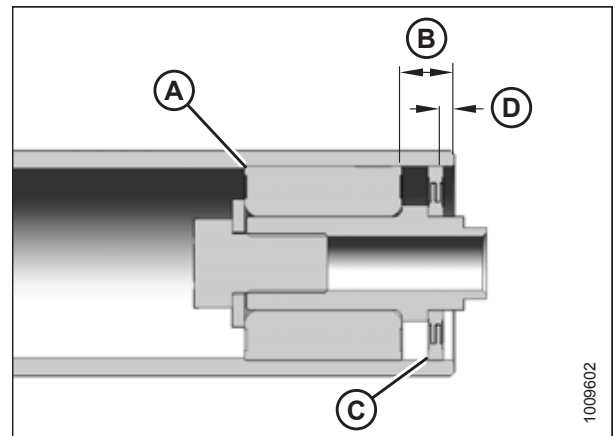


Figure 5.228: Idler Roller Bearing

Installing Side Draper Drive Roller

1. Position the drive roller (B) between the roller support arms.
2. Install the bolt (A) to secure the drive roller to the arm closest to the cutterbar. Torque bolt to 95 Nm (70 lbf·ft).
3. Grease the motor shaft and insert into the end of the drive roller (B).

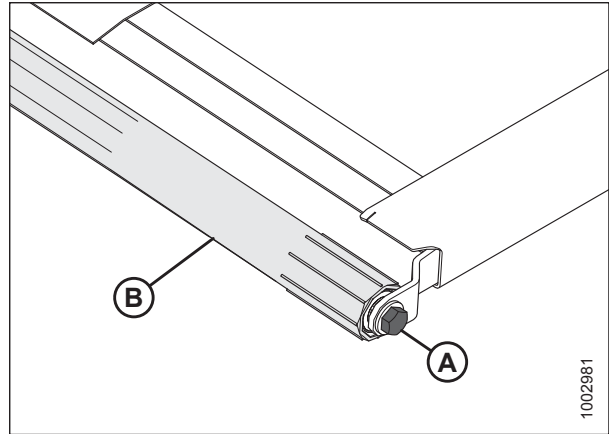


Figure 5.229: Drive Roller

4. Secure the motor to the roller support with four bolts (B). Torque to 27 Nm (20 lbf·ft).

NOTE:

Tighten any loosened bolts and reinstall the plastic shield (C) if previously removed.

5. Ensure the motor is all the way into the roller, and tighten the two setscrews (not shown) through the access hole (A).

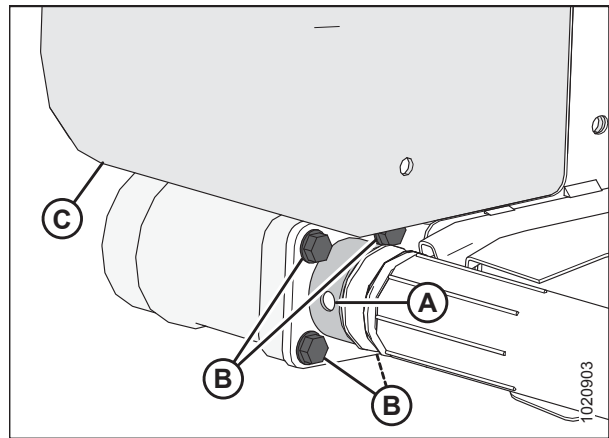


Figure 5.230: Drive Roller

6. Wrap the draper over the drive roller and attach the ends of the draper using the tube connectors (B), screws (A), and nuts.

NOTE:

The heads of the screws must face the center opening.

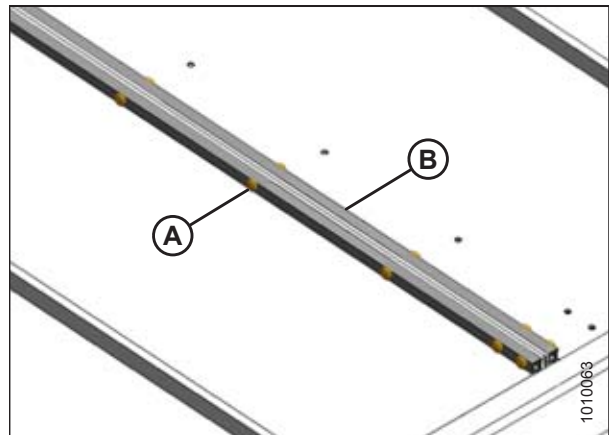


Figure 5.231: Draper Connector

MAINTENANCE AND SERVICING

7. Tension the draper. Locate adjuster bolt (A) and follow the directions on the decal (B) or refer to [5.12.3 Adjusting Draper Tension, page 478](#) for the proper draper tensioning.
8. Disengage the reel and header safety props.
9. Start the engine and lower the header and reel.
10. Run the machine to verify the draper tracks correctly. Refer to [5.12.4 Adjusting Header Draper Tracking, page 480](#) if further adjustment is necessary.

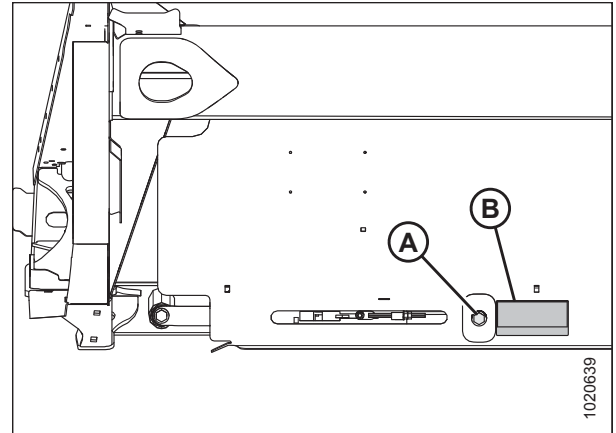


Figure 5.232: Draper Tensioner (Left Side Shown, Right Opposite)

5.12.7 Draper Deflectors

Removing Narrow Draper Deflectors

Narrow draper deflectors can replace wide deflectors if bunching occurs at the ends of the header when decks are set for center delivery.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Raise the reel to its full height and lower the header to the ground.
2. Shift the decks to create a work space at one end of the header if hydraulic deck shift is installed; otherwise, move the decks manually after shutting down the combine.
3. Stop the engine, remove the key, and engage the reel safety props.
4. Open the endshield. Refer to [Opening Endshields, page 35](#).
5. Remove two Torx® head screws (A) and lock nuts.
6. Remove three carriage bolts (B) and lock nuts and remove the aft deflector (C).

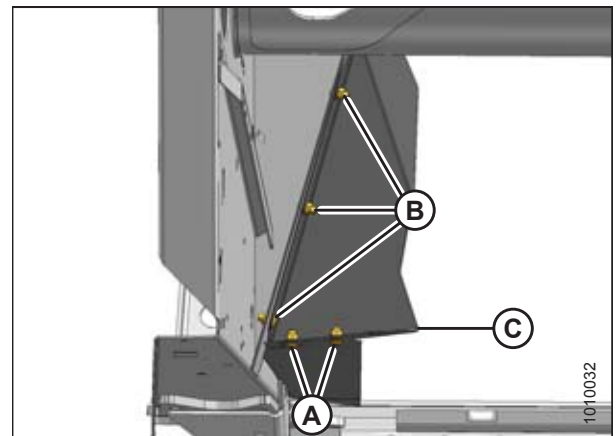


Figure 5.233: Aft Deflector

MAINTENANCE AND SERVICING

7. Remove four screws (A) and remove the deflector (B).
8. Repeat for the opposite end of the header.

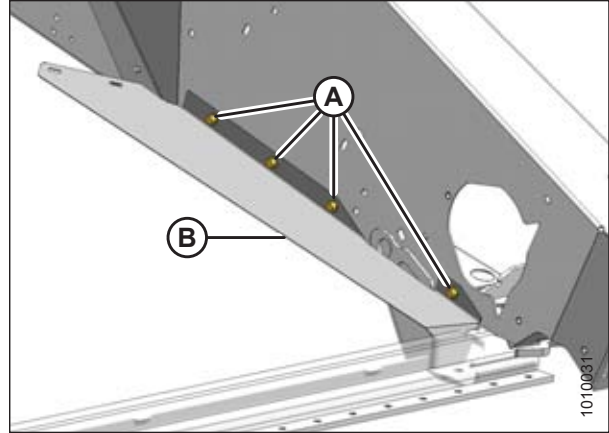


Figure 5.234: Forward Deflector

Installing Narrow Draper Deflectors

Narrow draper deflectors can replace wide deflectors if bunching occurs at the ends of the header when decks are set for center delivery.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Raise the reel to its full height and lower the header to the ground.
2. Shift the decks to create a work space at one end of the header if hydraulic deck shift is installed; otherwise, move the decks manually after shutting down the combine.
3. Stop the engine, remove the key, and engage the reel safety props.
4. Open the endshield. Refer to [Opening Endshields](#), [page 35](#).
5. Position the forward deflector (B) onto the endsheet and temporarily install forward and aft 3/8 x 5/8 in. self tapping screws (A).
6. Check the fit of the forward end of the deflector (B) on the cutterbar and ensure there is no gap between the deflector and cutterbar. Remove and bend the deflector as required to obtain the best fit.
7. Install two 3/8 x 5/8 in. self tapping screws (A) and tighten all four screws.

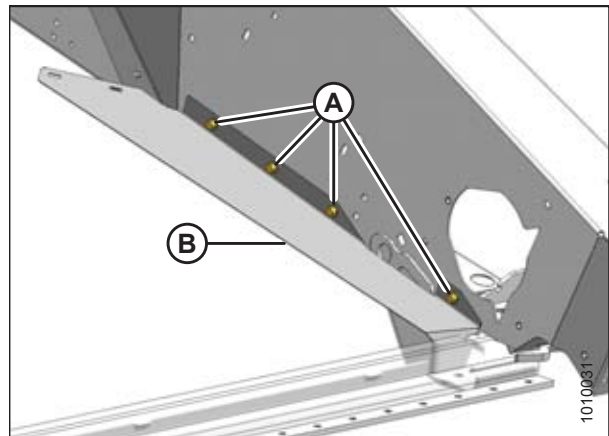


Figure 5.235: Forward Deflector

MAINTENANCE AND SERVICING

8. Position the aft deflector (C) as shown and install three 3/8 x 3/4 in. carriage bolts (B) and lock nuts.
9. Install two Torx® head screws (A) and lock nuts with the heads facing down.
10. Tighten all fasteners.
11. Repeat for the opposite end of the header.

NOTE:

Draper deflector may be damaged by reel tines if reel height is set incorrectly. Refer to [3.7.9 Reel Height](#), [page 109](#).

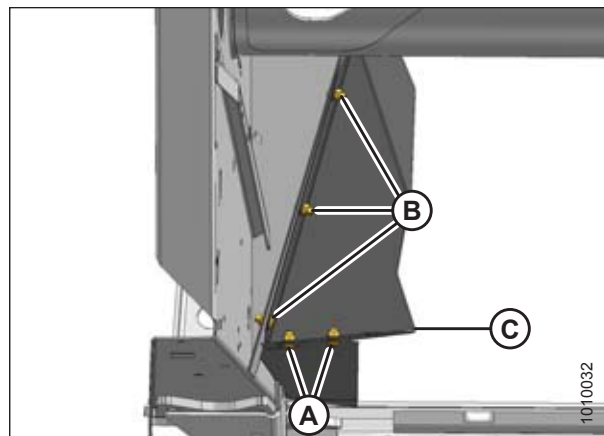


Figure 5.236: Aft Deflector

5.13 Reel

CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to [5.1 Preparing Machine for Servicing, page 365](#).

5.13.1 Reel Clearance to Cutterbar

The minimum clearance between the reel fingers and the cutterbar ensures that the reel fingers do not contact the cutterbar during operation. The clearance is set at the factory, but some adjustment may be necessary before operation.

The finger to guard/cutterbar clearances with reels fully lowered are shown in [Table 5.3, page 494](#).

Table 5.3 Finger to Guard/Cutterbar Clearance

Header Width	(X) 3 mm (+/- 1/8 in.) at Reel Ends	
	Single Reel	Double Reel
6.1 m (20 ft.)	20 mm (3/4 in.)	—
7.6 m (25 ft.)	25 mm (1 in.)	—
9.1 m (30 ft.)	45 mm (1-3/4 in.)	20 mm (3/4 in.)
10.7 m (35 ft.)	60 mm (2-3/8 in.)	20 mm (3/4 in.)
12.2 m (40 ft.)	—	20 mm (3/4 in.)
13.7 m (45 ft.)	—	20 mm (3/4 in.)

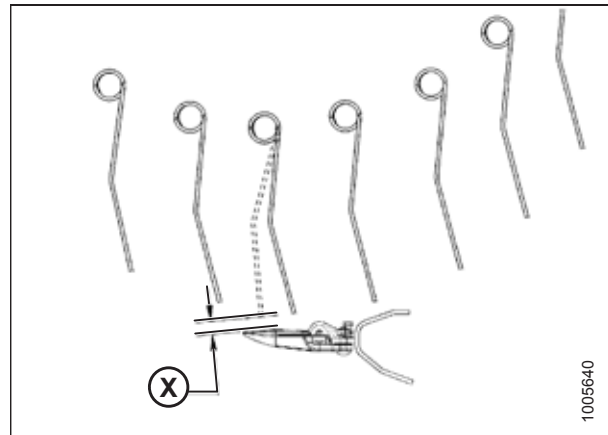


Figure 5.237: Finger Clearance

Measuring Reel Clearance

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Park the header on level ground.
2. Set the fore-aft position to the middle position (5) on the fore-aft position decal (A).
3. Lower the reel fully.
4. Shut down the engine, and remove the key from the ignition.

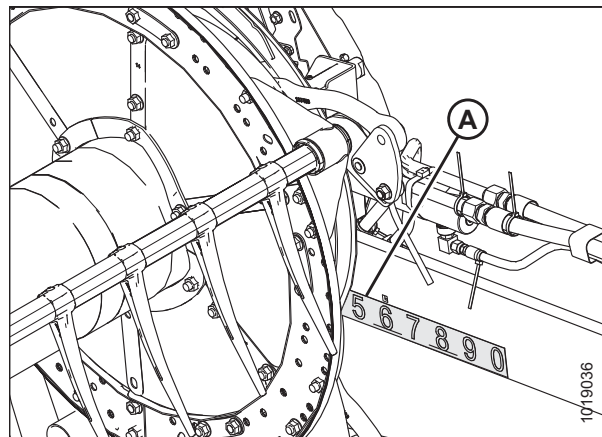


Figure 5.238: Fore-Aft Position

MAINTENANCE AND SERVICING

5. Measure the clearance (X) between points (B) and (C) at the ends of each reel (A). (Refer to Figure 5.240, page 496 and Figure 5.241, page 496 for measurement locations.)

NOTE:

The reel is factory-set to provide more clearance at the center of the reel than at the ends (frown) to compensate for reel flexing.

NOTE:

When measuring reel clearance at the center of a double reel header, measure the lowest reel.

6. Check all possible points of contact between points (B) and (C). Depending on the reel fore-aft position, minimum clearance can result at the guard tine, hold-down, or cutterbar.
7. Adjust the reel if necessary. Refer to *Adjusting Reel Clearance*, page 497.

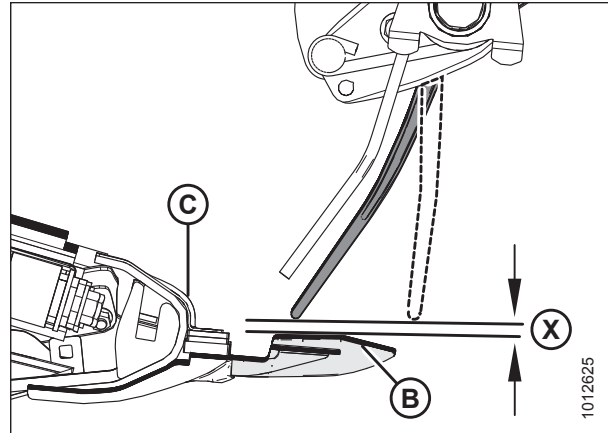


Figure 5.239: Clearance

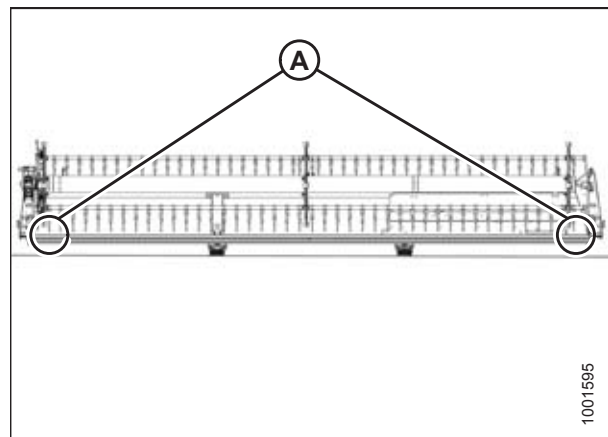


Figure 5.240: Single Reel Measurement Locations (Two Places)

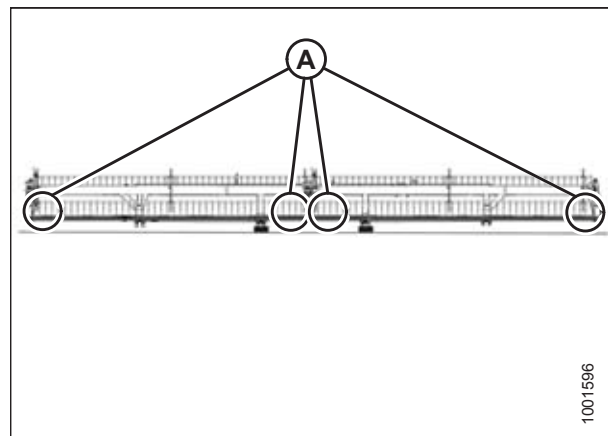


Figure 5.241: Double Reel Measurement Locations (Four Places)

Adjusting Reel Clearance

DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Adjust outboard reel arm lift cylinders to set clearance at outboard ends of reel as follows:
 - a. Loosen bolt (A).
 - b. Turn cylinder rod (B) out of clevis to raise reel and increase clearance to cutterbar, or turn cylinder rod into clevis to lower reel and decrease clearance.
 - c. Tighten bolt (A).
 - d. Repeat at opposite side.

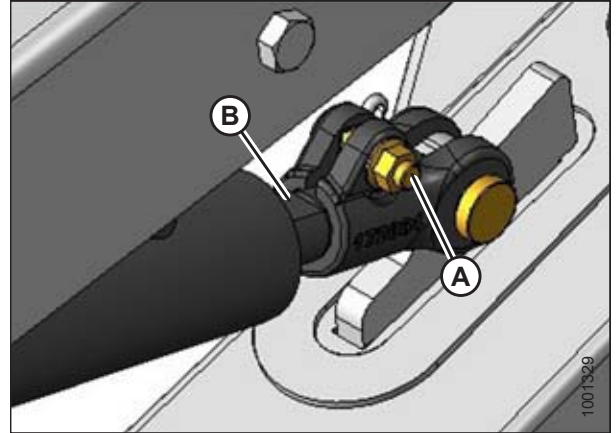


Figure 5.242: Outside Reel Arm

3. **Double Reel:** Adjust center arm lift cylinder stop (A) to change clearance at inboard ends of reels as follows:

NOTE:

Instructions apply to double-reel headers only and are performed from the underside of the arm.

- a. Loosen nut (B).
- b. Turn nut (C) counterclockwise to raise reel and increase clearance to cutterbar, or clockwise to lower reel and decrease clearance.
- c. Tighten nut (B).

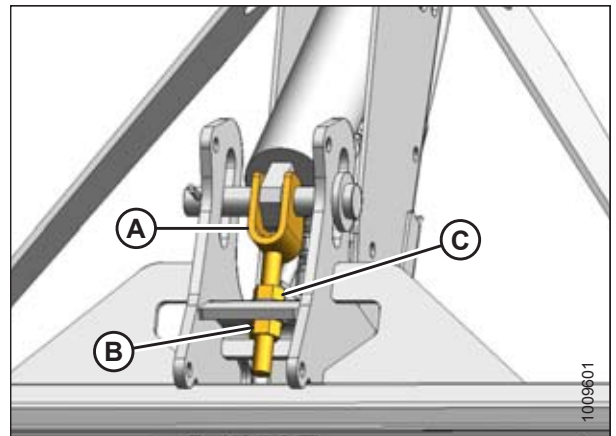


Figure 5.243: Underside of Center Arm

4. Check measurements and if necessary, repeat adjustment procedures.
5. Move reel back to ensure steel end fingers do not contact deflector shields.
6. If contact occurs, adjust reel upward to maintain clearance at all reel fore/aft positions. If contact can not be avoided after adjusting the reel, trim steel end fingers to obtain proper clearance.
7. Periodically check for evidence of contact, and adjust clearance as required.

5.13.2 Reel Frown

The reel is factory-set to frown (provide more clearance at the center of the reel than at the ends) to compensate for reel flexing.

Adjusting Reel Frown

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

Adjust the frown by repositioning the hardware connecting the reel tube arms to the reel discs.

NOTE:

Measure the frown profile before disassembling the reel for servicing so the profile can be maintained during reassembly.

1. Position the reel over the cutterbar (between 4 and 5 on the fore-aft position decal [A]) to provide adequate clearance at all reel fore-aft positions.
2. Record the measurement at each reel disc location for each reel tube.
3. Shut down the engine, and remove the key from the ignition.

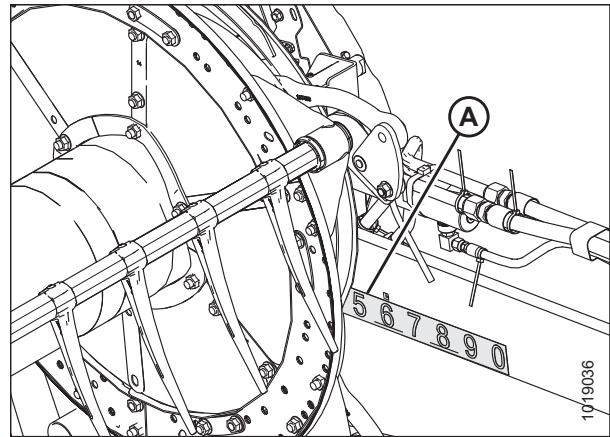


Figure 5.244: Fore-Aft Position Decal

4. Start with the reel disc closest to the center of the header and proceed outward towards the ends adjusting the header profile as follows:
 - a. Remove bolts (A).
 - b. Loosen the bolt (B) and adjust arm (C) until the desired measurement is obtained between the reel tube and cutterbar.

NOTE:

Allow the reel tubes to curve naturally and position the hardware accordingly.

- c. Reinstall the bolts (A) in the aligned holes and tighten.

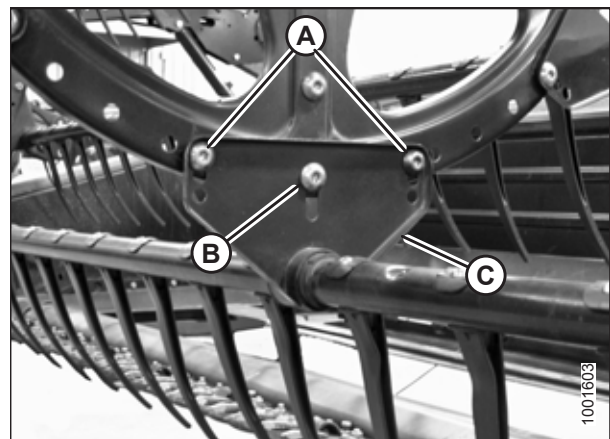


Figure 5.245: Reel Arm

5.13.3 Centering the Reel

To check and center the reel, follow these steps:

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

Centering Double Reel

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

To center the reel, follow these steps:

1. Raise the header enough to put 150 mm (6 in.) blocks under the outboard skid shoes. Lower the header slowly to force it into a full smile.
2. Shut down the engine, and remove the key from the ignition.
3. Loosen bolt (A) on each brace (B).
4. Move forward end of reel center support arm (C) laterally as required, to center both reels.
5. Tighten bolts (A) and torque to 359 Nm (265 lbf-ft).

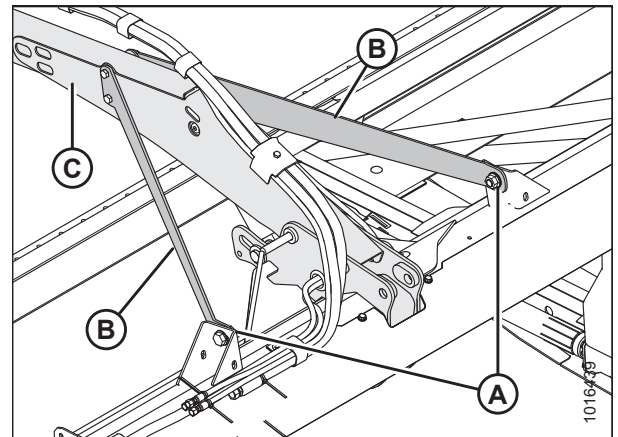


Figure 5.246: Reel Center Support Arm

Centering Single Reel

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Loosen bolt (A) on the brace (B) at both ends of the reel.
2. Move the forward end of the reel support arm (C) laterally as required, to center the reel.
3. Tighten bolts (A) and torque to 359 Nm (265 lbf·ft).

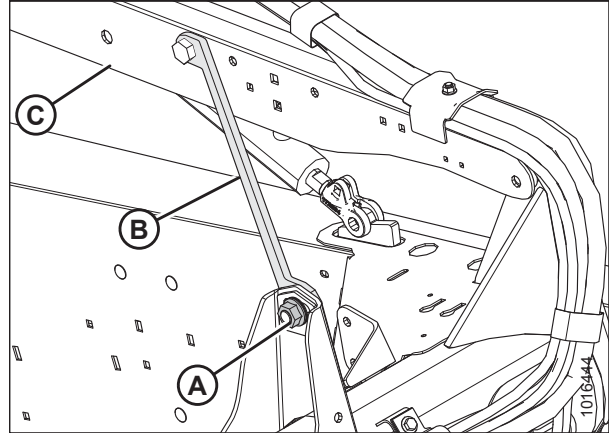


Figure 5.247: Reel Support Arm

5.13.4 Reel Fingers

IMPORTANT:

Keep the reel fingers in good condition and straighten or replace them as necessary.

Removing Steel Fingers

WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube and other components.

1. Lower the header, raise the reel, and engage the reel safety props.
2. Shut down the combine, and remove the key from the ignition.
3. Remove the tine tube bushings from the applicable tine tube at the center and left reel discs. Refer to [Removing Bushings from Five-, Six-, or Nine-Bat Reels, page 504](#).

MAINTENANCE AND SERVICING

4. Attach reel arms (B) (temporarily) to the reel disc at the original attachment locations (A).
5. Cut the damaged finger so it can be removed from the tine tube.
6. Remove bolts from the existing fingers and slide the fingers over to replace the finger that was cut off in Step 4, [page 501](#) (remove the reel arms [B] from the tine tubes as necessary).

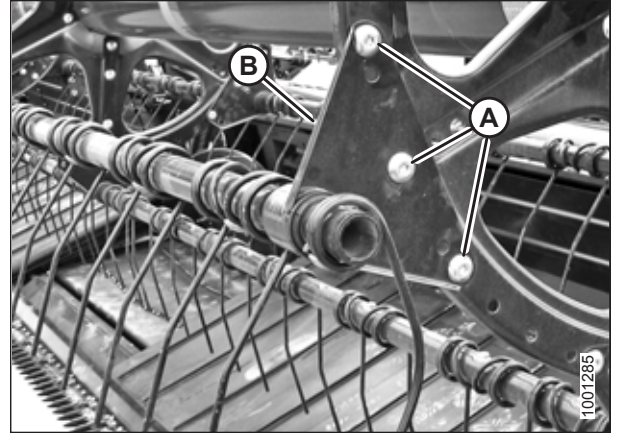


Figure 5.248: Reel Arm

Installing Steel Fingers

WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube and other components.

1. Remove the applicable finger. Refer to [Removing Steel Fingers, page 500](#).
2. Slide the new fingers and reel arm (A) onto the end of the tube.
3. Install the tine tube bushings. Refer to [Installing Bushings on Five-, Six-, or Nine-Bat Reels, page 509](#).
4. Attach the fingers to the tine bar with bolts and nuts (B).

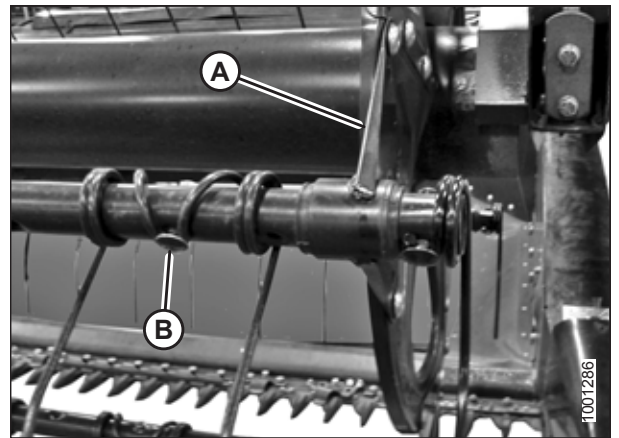


Figure 5.249: Tine Tube

Removing Plastic Fingers

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

1. Shut down the engine and remove key from the ignition.
2. Remove screw (A) using a Torx® Plus 27 IP socket wrench.

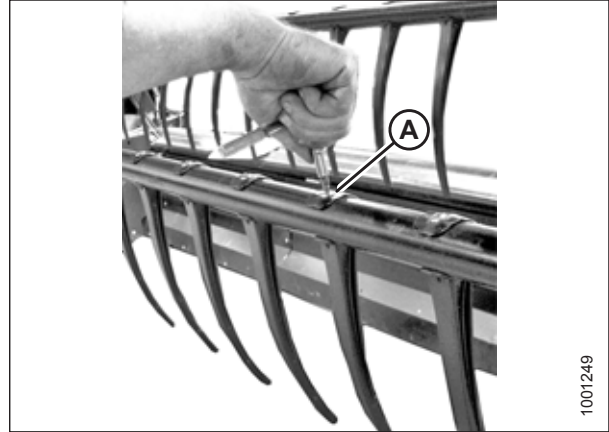


Figure 5.250: Removing Plastic Finger

3. Push the clip at the top of the finger back towards the reel tube and remove the finger from the tube.



Figure 5.251: Removing Plastic Finger

Installing Plastic Fingers

WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

1. Position the finger on the rear of the finger tube and engage the lug at the bottom of the finger in the lower hole in the finger tube.
2. Lift the top flange gently and rotate the finger until the lug in the top of the finger engages the upper hole in the finger tube.



Figure 5.252: Installing Plastic Finger

IMPORTANT:

Do **NOT** apply force to the finger prior to tightening the mounting screw. Applying force without tightening the mounting screw will break the finger or shear the locating pins.

3. Install the screw (A) using a Torx® Plus 27 IP socket wrench and torque to 8.5–9.0 Nm (75–80 lbf·in).

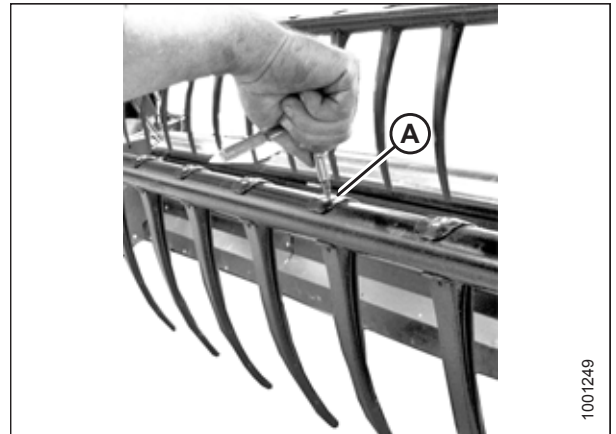


Figure 5.253: Installing Plastic Finger

5.13.5 Tine Tube Bushings

Removing Bushings from Five-, Six-, or Nine-Bat Reels

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube and other components.

1. Lower the header, raise the reel, and engage the reel safety props.
2. Shut down the engine, and remove the key from the ignition.

NOTE:

If replacing only the cam end bushing, refer to Step 8, [page 506](#).

Center disc and tail-end bushings

3. Remove the reel endshields and endshield support (C) from the tail end of the reel at the applicable tine tube location.

NOTE:

There are no endshields on the center disc.

4. Remove bolts (A) securing arm (B) to the disc.

IMPORTANT:

Note the hole locations in the arm and disc and ensure the bolts (A) are reinstalled at the original locations.

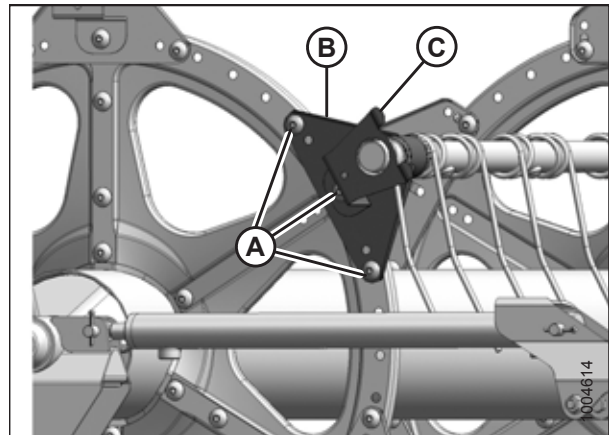


Figure 5.254: Tail End

MAINTENANCE AND SERVICING

5. Release the bushing clamps (A) using a small screwdriver to separate the serrations. Pull the clamp off the tine tube.

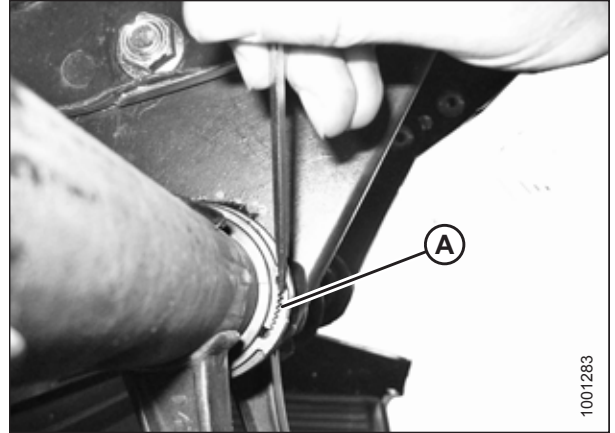


Figure 5.255: Bushing Clamp

6. Rotate the arm (A) until clear of the disc and slide the arm inboard off of bushing (B).
7. Remove the bushing halves (B). If required, remove the next tine or plastic finger so the arm can slide off the bushing. Refer to the following procedures as necessary:
 - [Removing Plastic Fingers, page 502](#)
 - [Removing Steel Fingers, page 500](#)

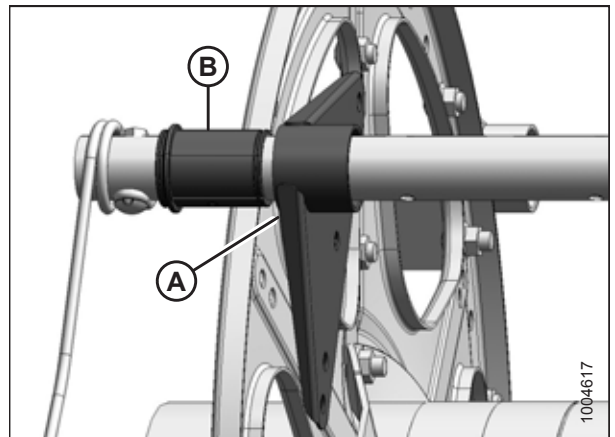


Figure 5.256: Bushing

Cam end bushings

8. Remove the endshields and endshield support (A) at the applicable tine tube location on the cam end.

NOTE:

Removing cam end bushings requires the tine tube be moved through the disc arms to expose the bushing.

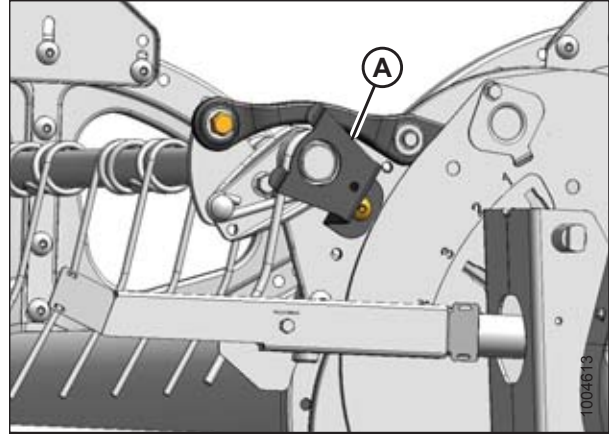


Figure 5.257: Cam End

9. Remove the reel endshields and endshield support (C) from the tail end of the reel at the applicable tine tube location.

NOTE:

There are no endshields on the center disc.

10. Remove the bolts (A) securing the arms (B) to the tail and center discs.

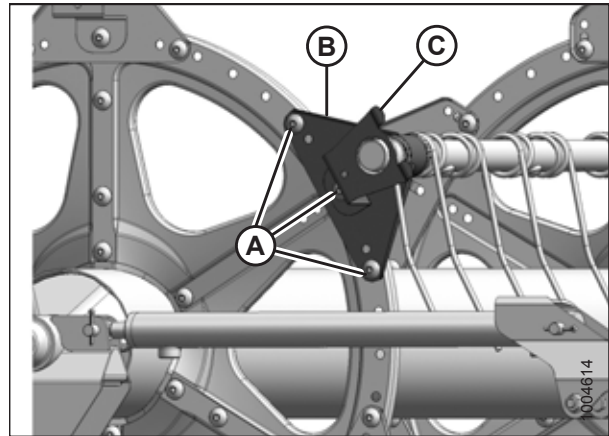


Figure 5.258: Tail End

11. Release the bushing clamps or disconnect the support channels from the tine tube support (if installed) depending on which tine tube is being moved. Three tine tubes (A) require channel disconnection and two tine tubes (B) require only bushing clamp removal.

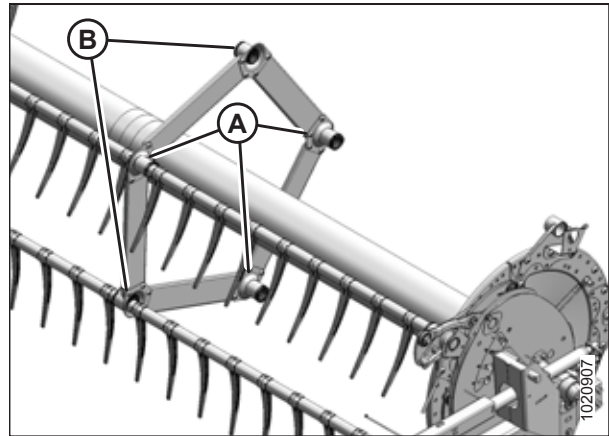


Figure 5.259: Tine Tube Supports

MAINTENANCE AND SERVICING

12. Remove bolt (A) from the cam linkage so the tine tube (B) is free to rotate.

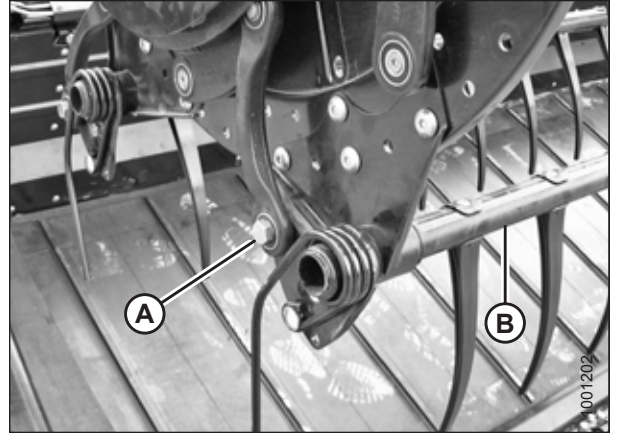


Figure 5.260: Cam End

13. Release the bushing clamps (A) at the cam disc using a small screwdriver to separate the serrations. Move the clamps off the bushings.

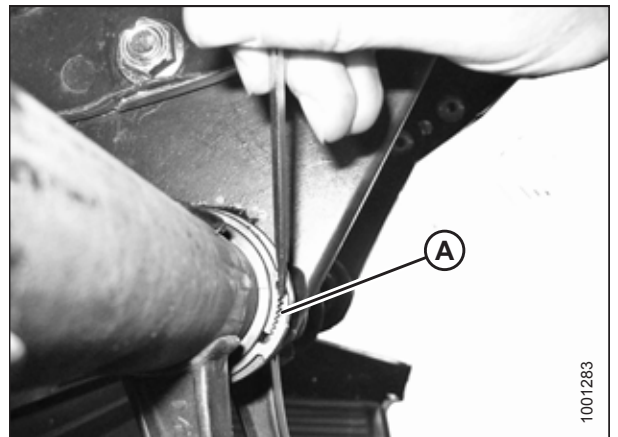


Figure 5.261: Bushing Clamp

14. Slide the tine tube (A) outboard to expose the bushing (B).
15. Remove the bushing halves (B). If required, remove the next tine or plastic finger so the arm can slide off the bushing. Refer to the following procedures if necessary:
 - [Removing Plastic Fingers, page 502](#)
 - [Removing Steel Fingers, page 500](#)

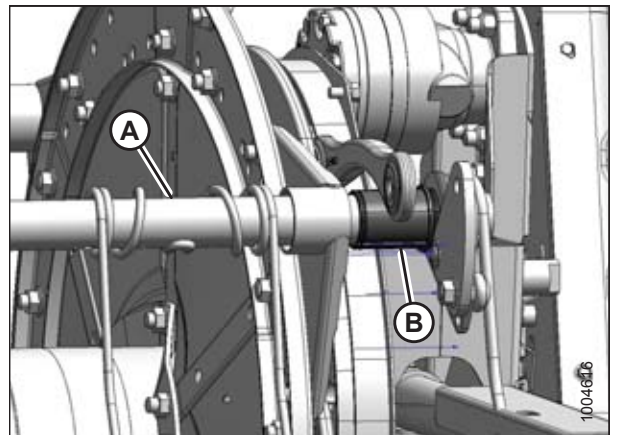


Figure 5.262: Cam End

Tine tube bushings (if installed)

MAINTENANCE AND SERVICING

16. Locate the support (A) that requires a new bushing.
17. Remove the four bolts (B) securing channels (C) to the support (A).
18. Remove screw (E) and remove the finger (D) if it is too close to the support to allow access to the bushing. Refer to [Removing Plastic Fingers, page 502](#).

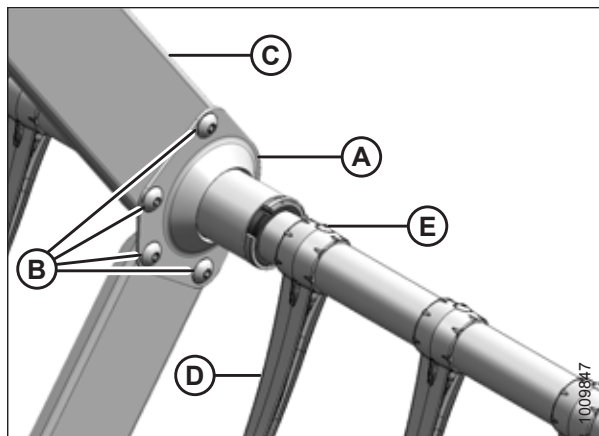


Figure 5.263: Tine Tube Support

19. Release the bushing clamps (A) using a small screwdriver to separate the serrations.

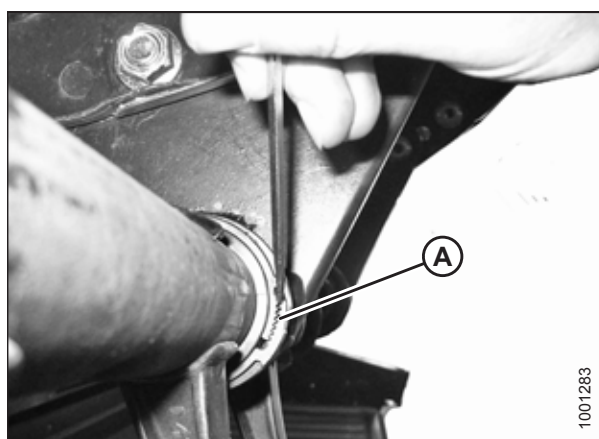


Figure 5.264: Bushing Clamp

20. Move the clamps (A) off the bushings.

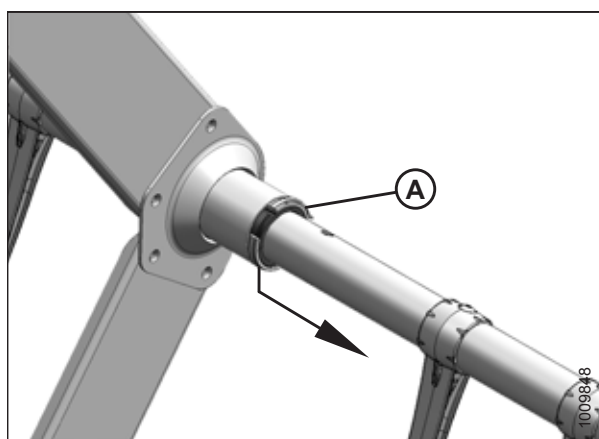


Figure 5.265: Bushing Clamp

MAINTENANCE AND SERVICING

21. On each reel, there are three right-facing supports. Slide the support (A) off the bushing halves (B).

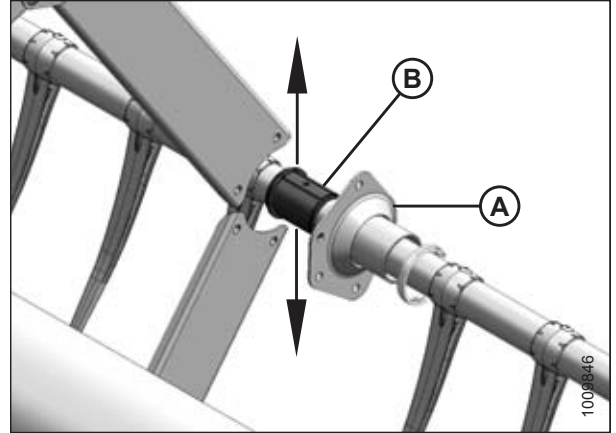


Figure 5.266: Support

22. On each reel, there are two left-facing supports (A). Rotate the supports until the flanges clear the channels before moving them off the bushing (B). Move the tine tube slightly away from the reel if necessary.
23. Remove the bushing halves (B) from the tine tubes.

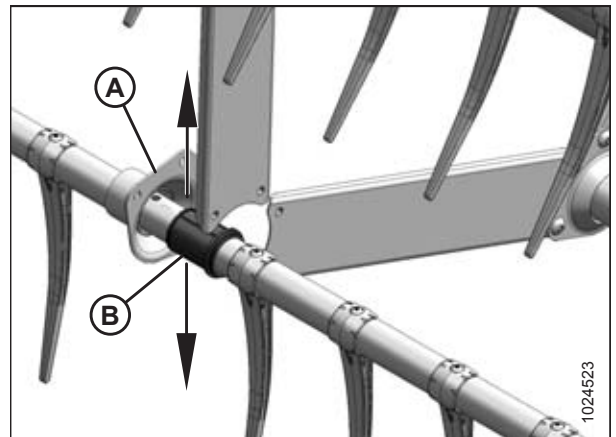


Figure 5.267: Opposite Support

Installing Bushings on Five-, Six-, or Nine-Bat Reels

WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

Ensure tine tube is supported at all times to prevent damage to the tube or other components.

NOTE:

Use a pair of modified channel lock pliers (A) to install bushing clamps (C). Secure pliers in a vise and grind a notch (B) into the end of each arm to fit the clamp as shown.

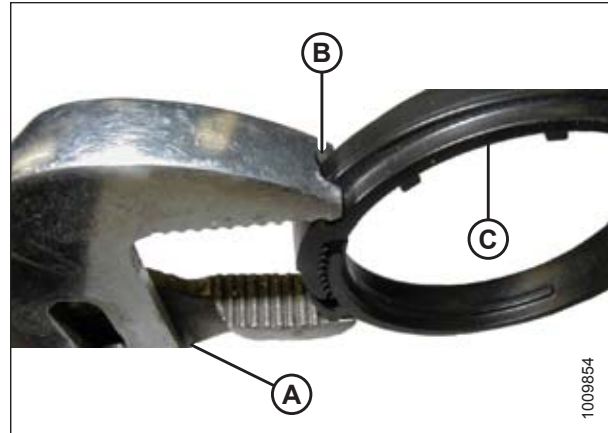


Figure 5.268: Modified Pliers

Cam end bushings

1. Position the bushing halves (B) on the tine tube (A) with the flangeless end adjacent to the reel arm, and position the lug in each bushing half into the hole in the tine tube.
2. Slide the tine tube (A) towards the tail end of the reel to insert the bushing (B) into the reel arm. If the tine tube supports are installed, ensure the bushings at those locations slide into the support.
3. Reinstall the previously removed fingers or tines. Refer to the following procedures as necessary:
 - [Removing Plastic Fingers, page 502](#)
 - [Removing Steel Fingers, page 500](#)

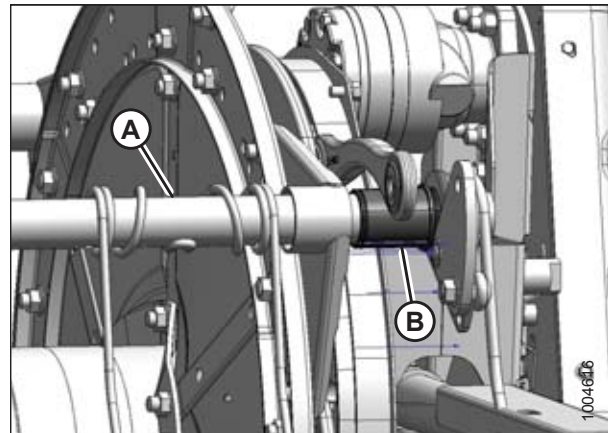


Figure 5.269: Cam End

4. Install the bushing clamp (A) onto the tine tube adjacent to the flangeless end of the bushing (B).
5. Position the clamp (A) on the bushing (B) so the edges of the clamp and bushing are flush when the clamp is fit into the groove on the bushing and the lock tabs are engaged.

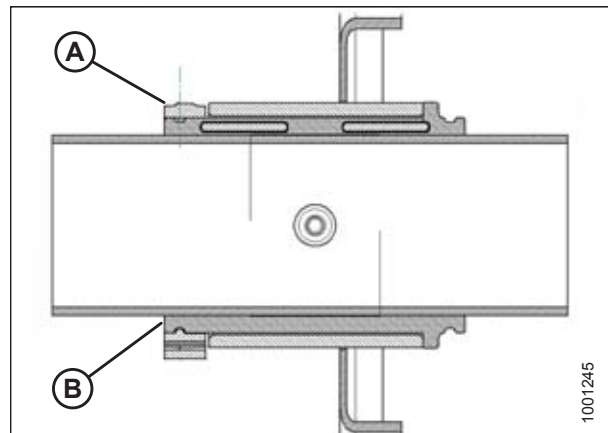


Figure 5.270: Bushing

MAINTENANCE AND SERVICING

6. Tighten the clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

Overtightening clamp may result in breakage.

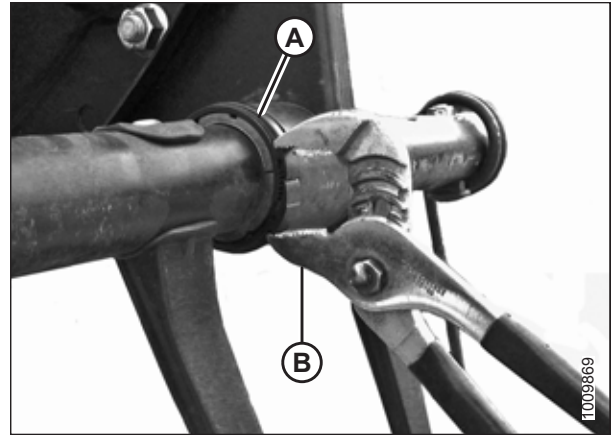


Figure 5.271: Installing Clamp

7. Line up the tine bar (B) with the cam arm and install bolt (A). Torque bolt to 165 Nm (120 lbf·ft).

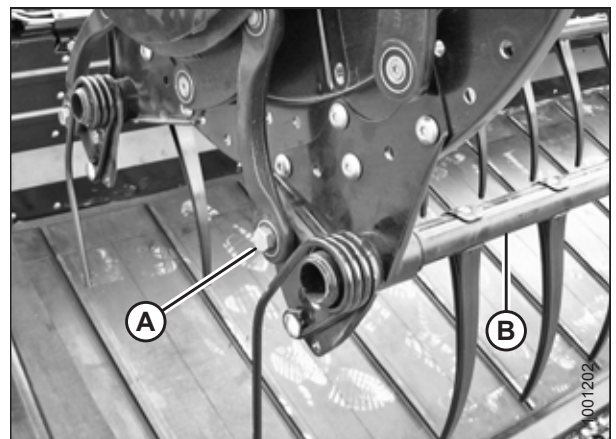


Figure 5.272: Cam End

8. Install the bolts (A) securing the arm (B) to the center disc.
9. Install the reel arm (B) and endshield support (C) to the tail end of the reel at the applicable tine tube location and secure with bolts (A).

NOTE:

There are no endshields on the center discs.

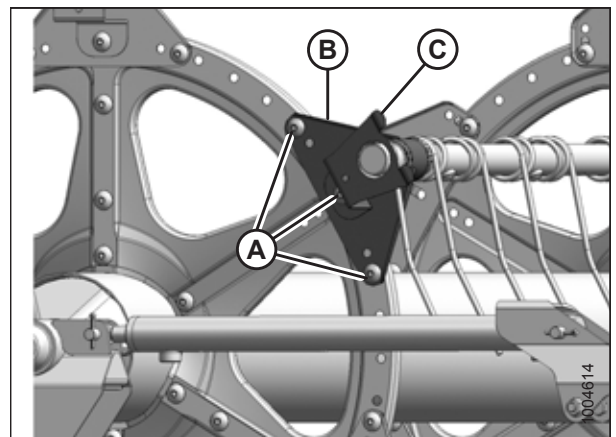


Figure 5.273: Tail End

MAINTENANCE AND SERVICING

10. Install the endshield support (A) at the applicable tine tube location at the cam end.
11. Reinstall the reel endshields. Refer to [Replacing Reel Endshields, page 518](#).

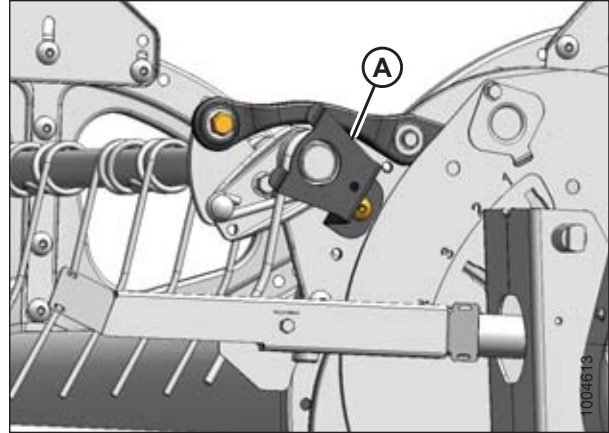


Figure 5.274: Cam End

Center disc and tail end bushings

12. Position the bushing halves (B) on the tine tube (A) with the flangeless end adjacent to the reel arm, and position the lug in each bushing half into the hole in the tine tube.
13. Slide the reel arm (A) onto the bushing (B) and position against the disc at the original location.
14. Reinstall the previously removed fingers or tines. Refer to the following procedures as necessary:

- [Removing Plastic Fingers, page 502](#)
- [Removing Steel Fingers, page 500](#)

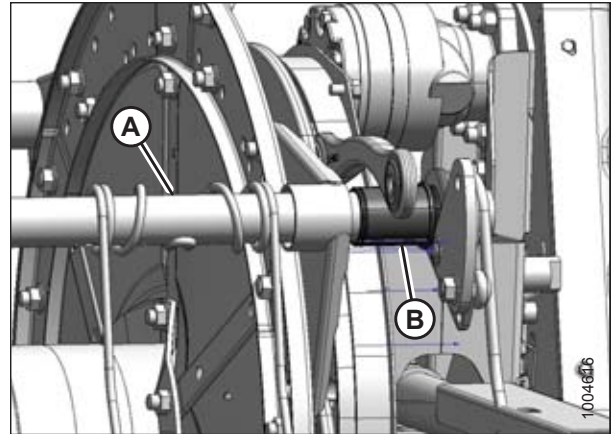


Figure 5.275: Cam End

15. Install the bushing clamp (A) onto the tine tube adjacent to the flangeless end of the bushing (B).
16. Position the clamp (A) on the bushing (B) so the edges of the clamp and bushing are flush when the clamp is fit into the groove on the bushing and the lock tabs are engaged.

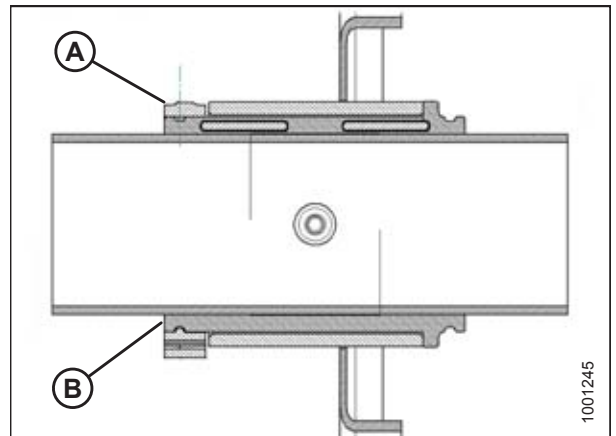


Figure 5.276: Bushing

17. Tighten the clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

Overtightening clamp may result in breakage.

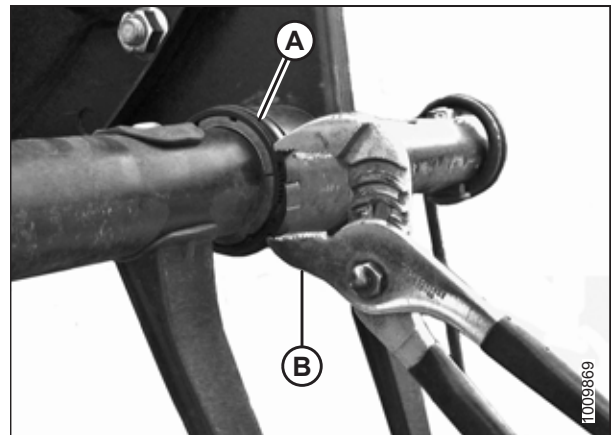


Figure 5.277: Installing Clamp

MAINTENANCE AND SERVICING

18. Install the bolts (A) securing the arm (B) to the center disc.
19. Install the reel arm (B) and endshield support (C) to the tail end of the reel at the applicable tine tube location and secure with bolts (A).

NOTE:

There are no endshields on the center discs.

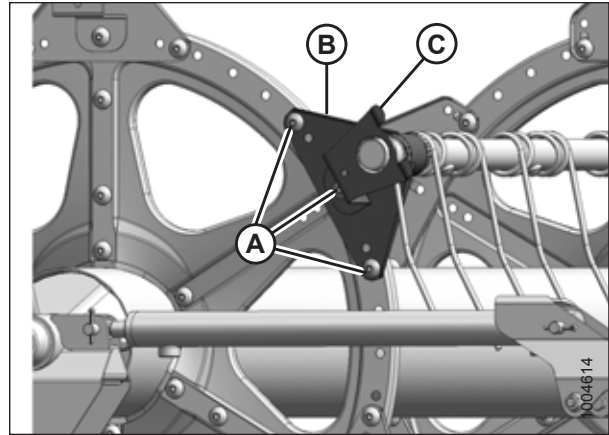


Figure 5.278: Tail End

Tine tube support (if installed) bushings

20. Position the bushing halves (B) on the tine tube (A) with the flangeless end adjacent to the reel arm, and position the lug in each bushing half into the hole in the tine tube.

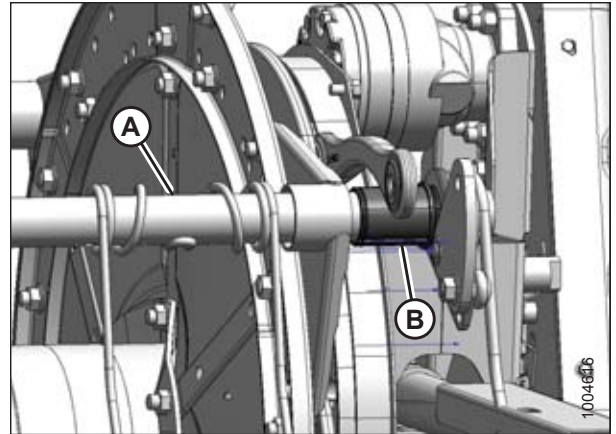


Figure 5.279: Cam End

21. On each reel, there are three right-facing supports. Slide the support (A) onto the bushing (B).

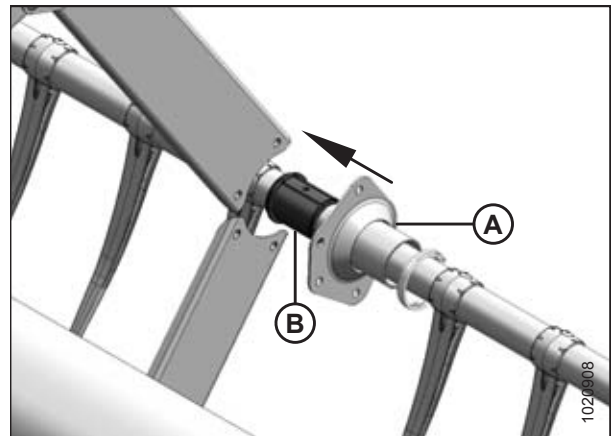


Figure 5.280: Support

22. On each reel, there are two left-facing supports. Rotate the support (A) until its flanges clear the channels (C) before moving the support onto the bushing (B).

NOTE:

If necessary, move the tine tube (D) slightly away from the reel to allow the support flange enough room to clear the channel.

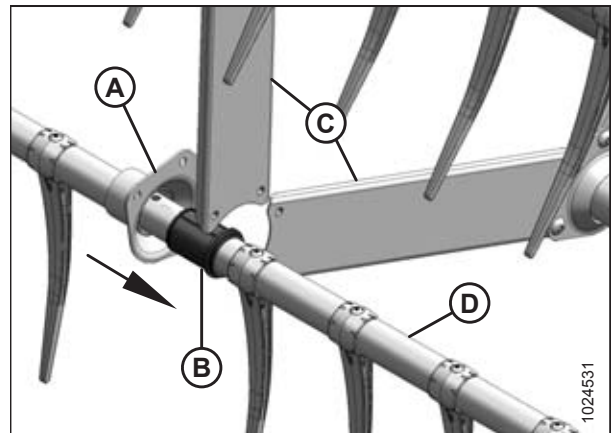


Figure 5.281: Opposite Support

MAINTENANCE AND SERVICING

23. Install the bushing clamp (A) onto the tine tube adjacent to the flangeless end of the bushing (B).
24. Position the clamp (A) on the bushing (B) so the edges of the clamp and bushing are flush when the clamp is fit into the groove on the bushing and the lock tabs are engaged.

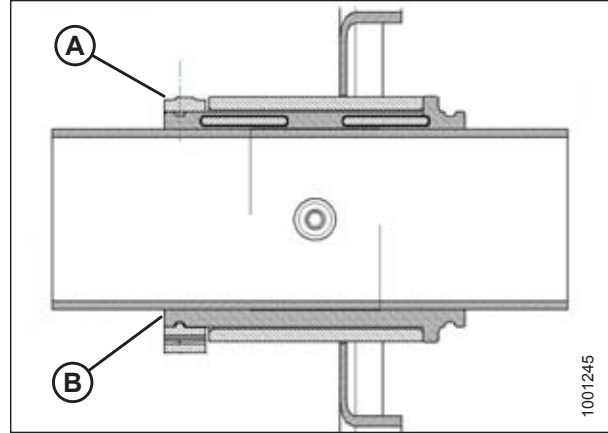


Figure 5.282: Bushing

25. Tighten the clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

Overtightening clamp may result in breakage.

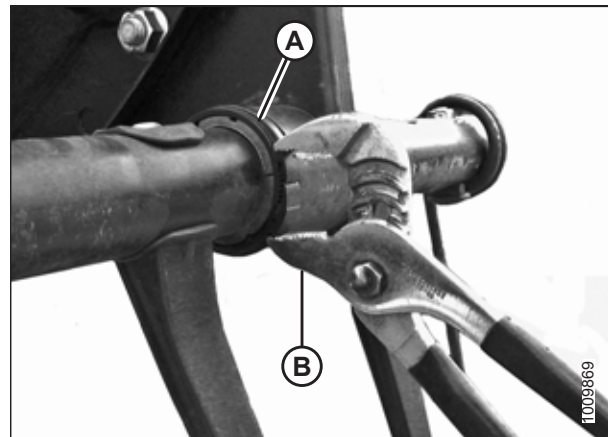


Figure 5.283: Installing Clamp

26. Reattach the channels (C) to the three right-facing supports (A) on each reel with screws (B) and nuts. Torque screws to 43 Nm (32 lbf-ft).
27. Using screws (E), reinstall any fingers (D) that were previously removed. Refer to [Installing Plastic Fingers](#), page 503.

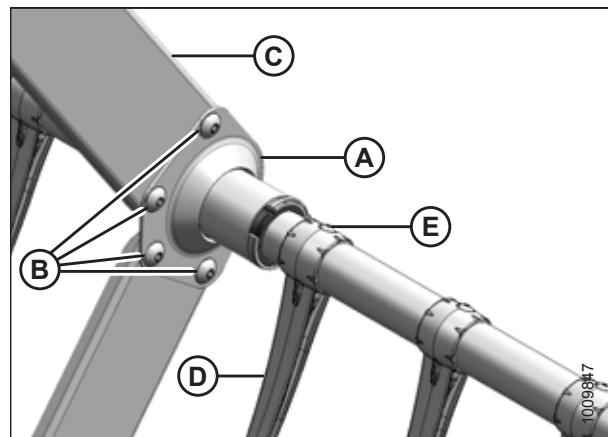


Figure 5.284: Support

MAINTENANCE AND SERVICING

28. Reattach the channels (C) to the two left-facing supports (A) on each reel with screws (B) and nuts. Torque screws to 43 Nm (32 lbf·ft).
29. Using screws (E), reinstall any fingers (D) that were previously removed. Refer to [Installing Plastic Fingers](#), page 503.

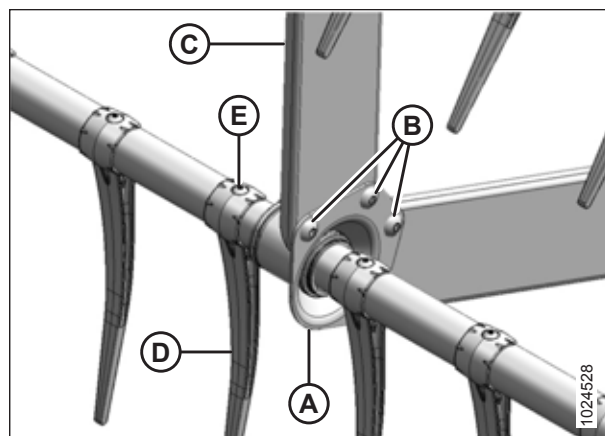


Figure 5.285: Opposite Support

5.13.6 Reel Endshields

Reel endshields and supports do not require regular maintenance, but they should be checked periodically for damage and loose or missing fasteners. Slightly dented or deformed endshields and supports are repairable, but it's necessary to replace severely damaged components.

You can attach reel endshields to either end of the reel.

Replacing Reel Endshields

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower the header and reel.
2. Shut down the engine, and remove the key from the ignition.
3. Rotate the reel manually until the reel endshield (A) requiring replacement is accessible.
4. Remove three bolts (B).

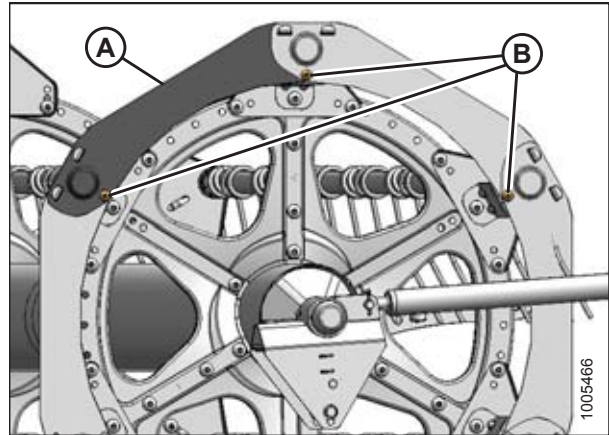


Figure 5.286: Reel Endshields

5. Lift end of reel endshield (A) off support (B).

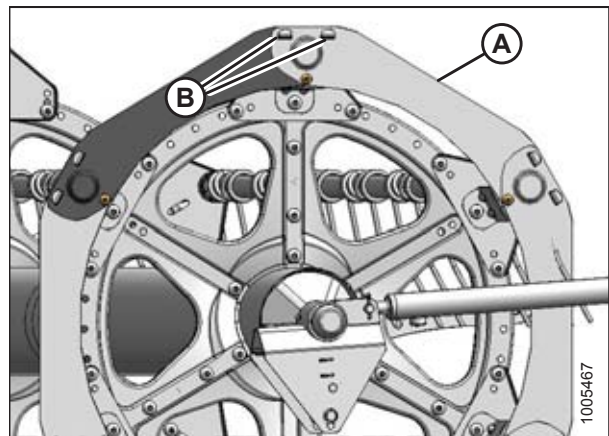


Figure 5.287: Reel Endshields

MAINTENANCE AND SERVICING

6. Remove the reel endshield from the supports.

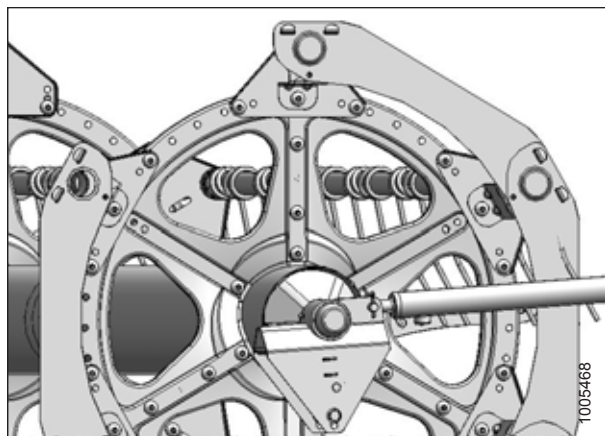


Figure 5.288: Reel Endshields

7. Remove the reel endshield (A) from support (B).
8. Install new reel endshield (C) onto support (B).
9. Reattach reel endshield (A) onto support (B) ensuring it is installed on top of the reel endshield (C).
10. Reinstall bolts (D).
11. Tighten all hardware.

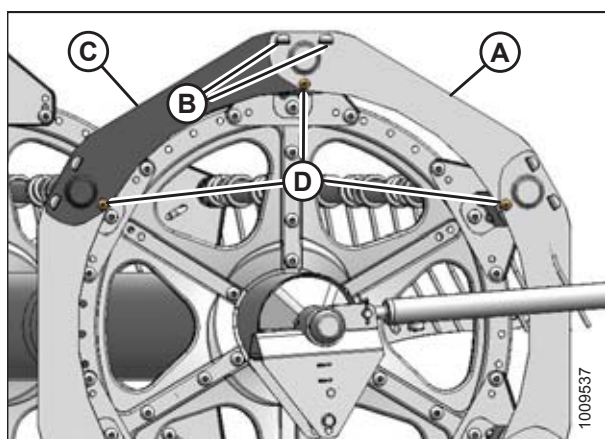


Figure 5.289: Reel Endshields

Replacing Reel Endshield Supports

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower the header and reel.
2. Shut down the engine, and remove the key from the ignition.
3. Rotate the reel manually until the reel endshield requiring replacement is accessible.
4. Remove bolt (B) from support (A).
5. Remove bolts (C) from support (A) and two adjacent supports.
6. Move the reel endshields (A) away from the tine tube and rotate the support (B) towards the reel to remove it.
7. Insert tabs of new support (B) into the slots in the reel endshields (A). Ensure the tabs engage both reel endshields.
8. Secure support (B) to the disc with bolt (C) and nut. Do **NOT** tighten.
9. Secure the reel endshields (A) to support (B) with bolt (C) and nut. Do **NOT** tighten.
10. Reattach the supports with bolts (C) and nuts.
11. Check the clearance between the tine tube and reel endshield support and adjust if necessary.
12. Torque nuts to 27 Nm (20 lbf·ft).

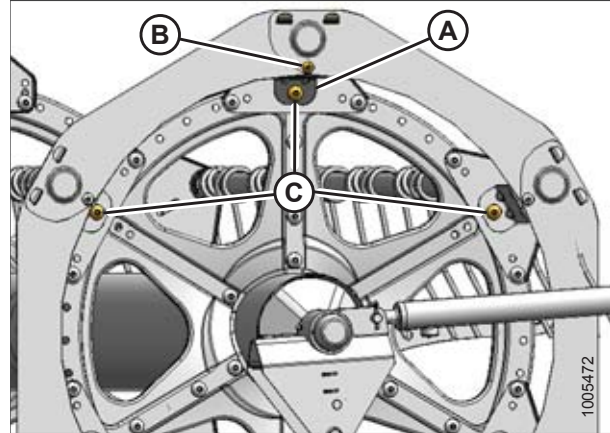


Figure 5.290: Reel Endshield Supports

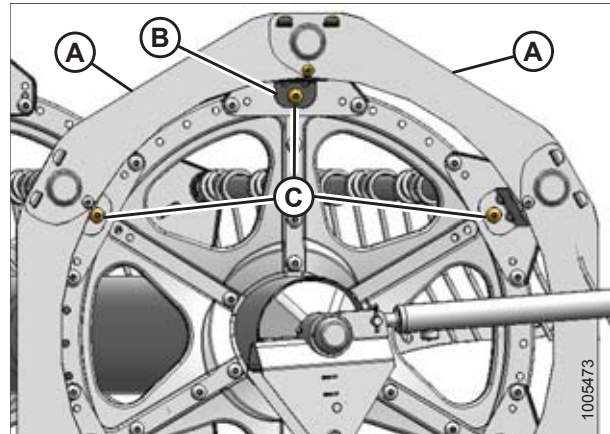


Figure 5.291: Reel Endshield Supports

5.14 Reel System

The hydraulically driven reel motor drives the chain case that is attached to the right end of the reel on a single-reel header, and between the reels on a double-reel header.

5.14.1 Reel Drive Cover

Removing Reel Drive Cover

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

Single-reel drive:

1. Shut down the engine, and remove the key from the ignition.
2. Remove four bolts (A) securing the cover (B) to the reel drive.

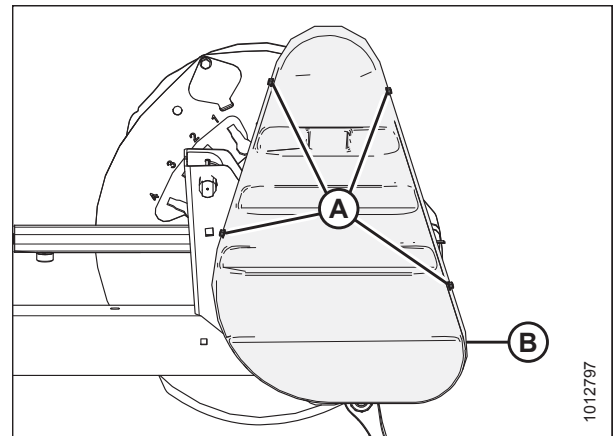


Figure 5.292: Drive Cover – Single Reel

Double-reel drive:

3. Shut down the engine, and remove the key from the ignition.
4. Remove six bolts (A) securing the upper cover (B) to the reel drive and lower cover (C).

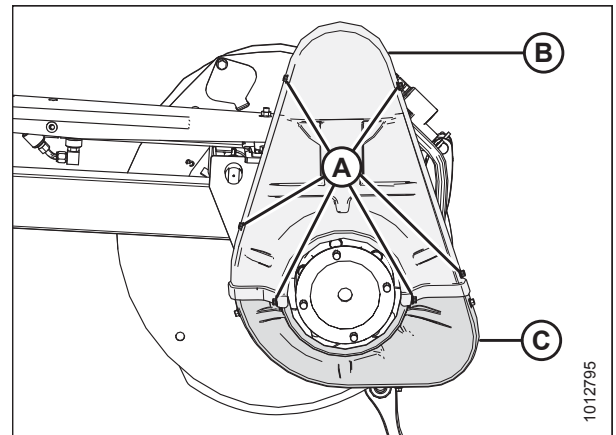


Figure 5.293: Drive Cover – Double Reel

MAINTENANCE AND SERVICING

5. Remove three bolts (A) and remove the lower cover (B) if necessary.

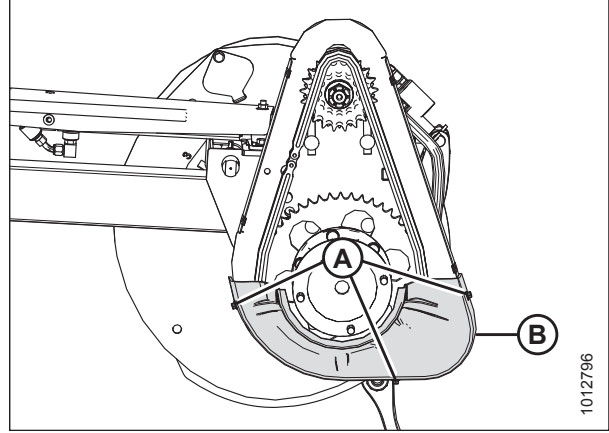


Figure 5.294: Lower Drive Cover (Upper Cover Removed)

Installing Reel Drive Cover

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

Single-reel drive:

1. Position the drive cover (B) onto the reel drive, and secure with four bolts (A).

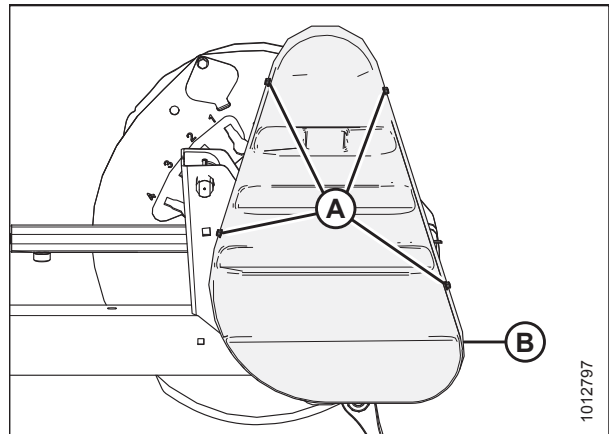


Figure 5.295: Drive Cover – Single Reel

MAINTENANCE AND SERVICING

Double-reel drive:

2. Position the lower drive cover (B) onto the reel drive (if previously removed), and secure with three bolts (A).

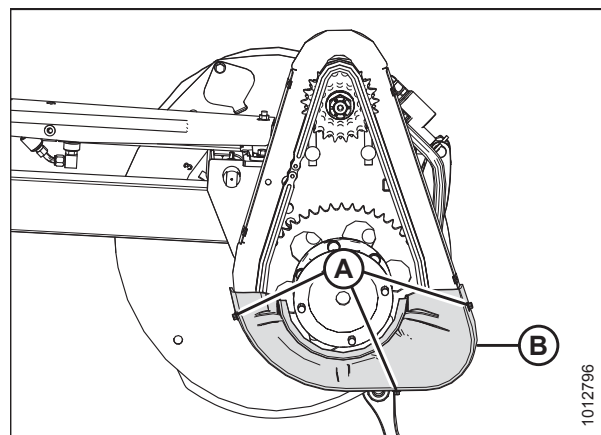


Figure 5.296: Lower Drive Cover – Double Reel

3. Position the upper drive cover (B) onto the reel drive and lower cover (C), and secure with six bolts (A).

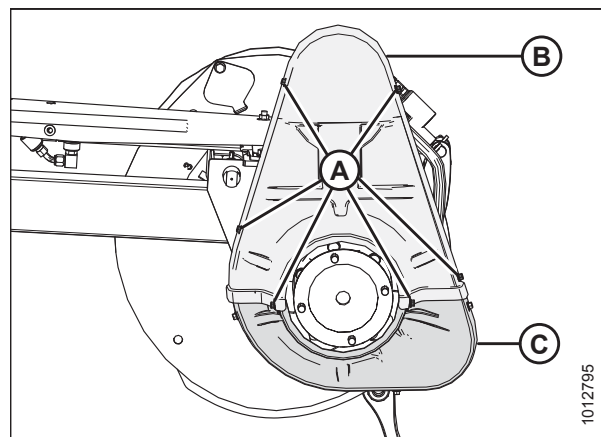


Figure 5.297: Drive Cover – Double Reel

5.14.2 Reel Drive Chain Tension

Loosening Reel Drive Chain

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove the drive cover. Refer to [Removing Reel Drive Cover, page 521](#).
3. Loosen six nuts (A). Slide the motor (B) and motor mount (C) down towards the reel shaft.

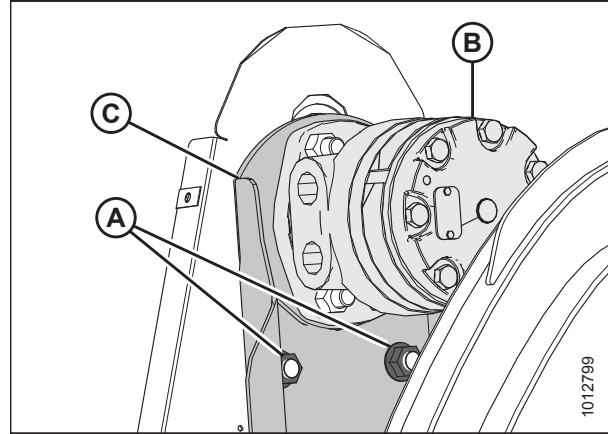


Figure 5.298: Single-Reel Drive

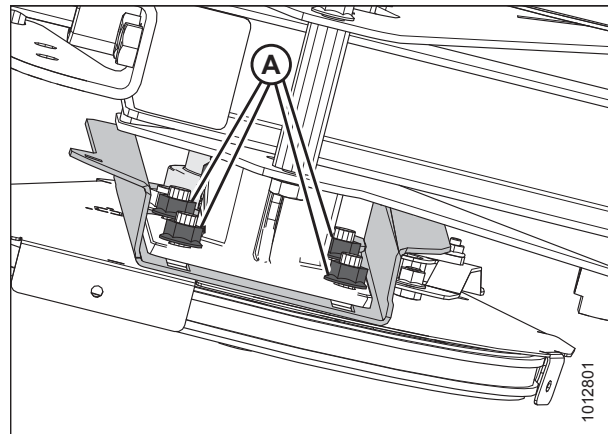


Figure 5.299: Single-Reel Drive – Viewed from Underside of Reel

Tightening Reel Drive Chain

⚠ DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Ensure the six bolts (A) securing the motor mount to the chain case are loose.

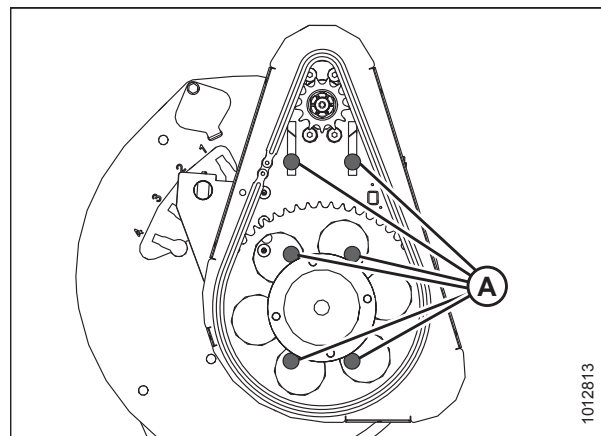


Figure 5.300: Single-Reel Drive Shown – Double Reel Similar

3. Slide the motor (A) and motor mount (B) upwards until the chain (C) is tight.

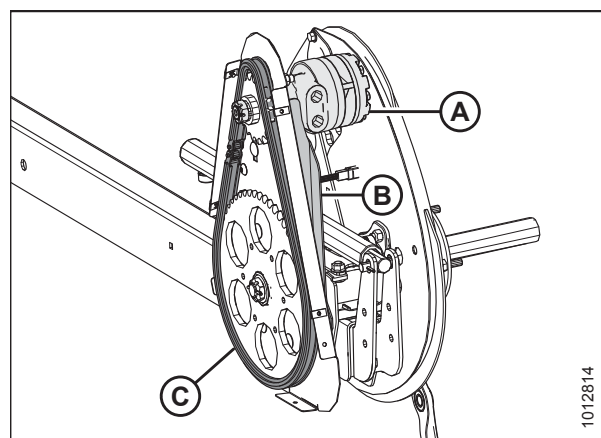


Figure 5.301: Single-Reel Drive Shown – Double Reel Similar

MAINTENANCE AND SERVICING

4. Tighten six nuts (A).
5. Ensure there is 3 mm (1/8 in.) of slack at the chain midspan. Adjust if necessary.
6. Torque nuts (A) to 73 Nm (54 lbf-ft).
7. Install the drive cover. Refer to [Installing Reel Drive Cover, page 522](#).

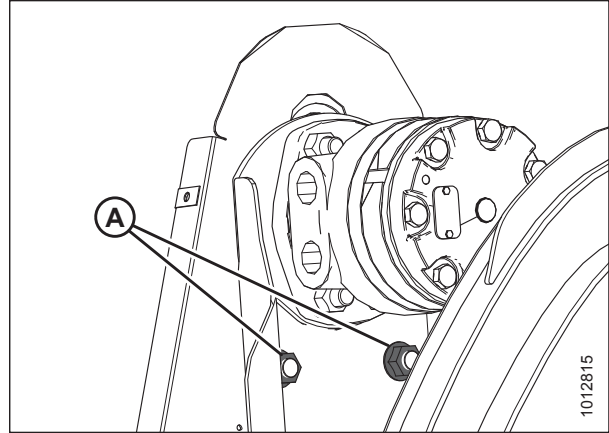


Figure 5.302: Single-Reel Drive Shown – Double Reel Similar

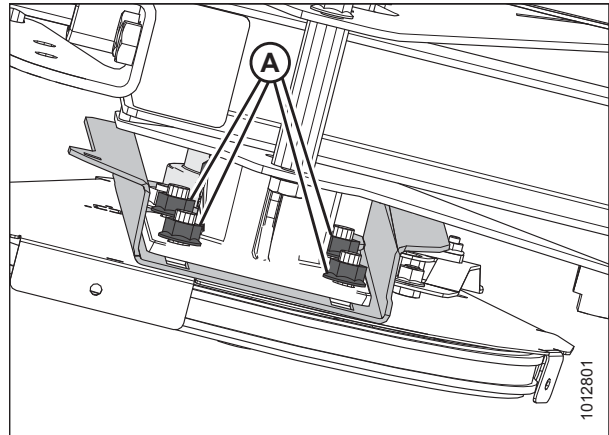


Figure 5.303: Single-Reel Drive – Viewed from Underside of Reel

5.14.3 Reel Drive Sprocket

For Case IH and New Holland combine models, configure the combine according to the reel sprocket size in order to optimize the auto reel to ground speed control. Refer to the combine service manual for more information.

Removing Reel Drive Sprocket



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Shut down the engine, and remove the key from the ignition.
2. Loosen the drive chain (A). Refer to [Loosening Reel Drive Chain, page 524](#).
3. Remove the drive chain (A) from the drive sprocket (B).

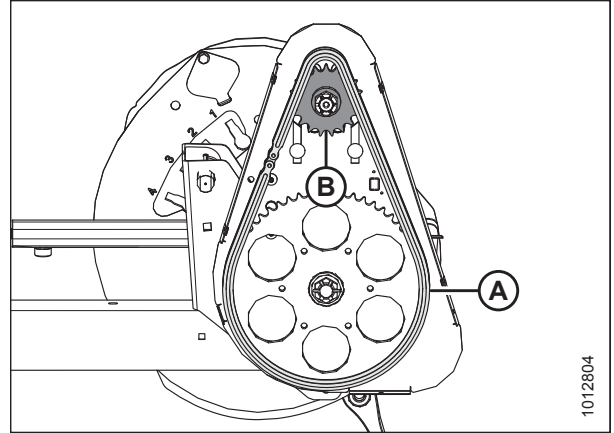


Figure 5.304: Reel Drive

4. Remove the cotter pin (A), slotted nut (B), and flat washer (C) from the motor shaft.
5. Remove the drive sprocket (D). Ensure the key remains in the shaft.

IMPORTANT:

To avoid damaging the motor, use a puller if the drive sprocket does not come off by hand. Do **NOT** use a pry bar and/or hammer to remove the drive sprocket (D).

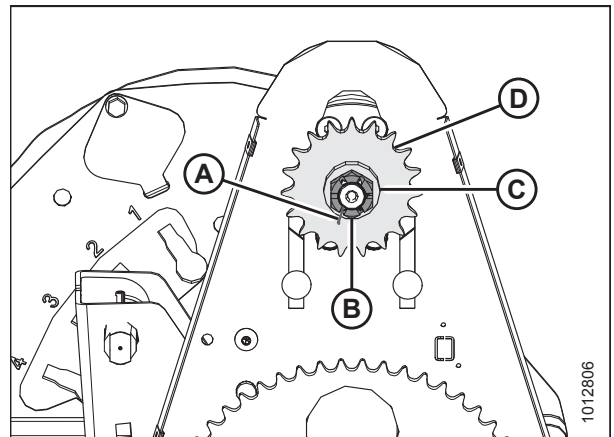


Figure 5.305: Reel Drive

Installing Reel Drive Sprocket



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Align the keyway in sprocket (D) with the key on the motor shaft, and slide the sprocket onto the shaft. Secure with flat washer (C) and slotted nut (B).
2. Torque slotted nut (B) to 54 Nm (40 lbf-ft).
3. Install cotter pin (A). If necessary, tighten the slotted nut (B) to the next slot to install the cotter pin.

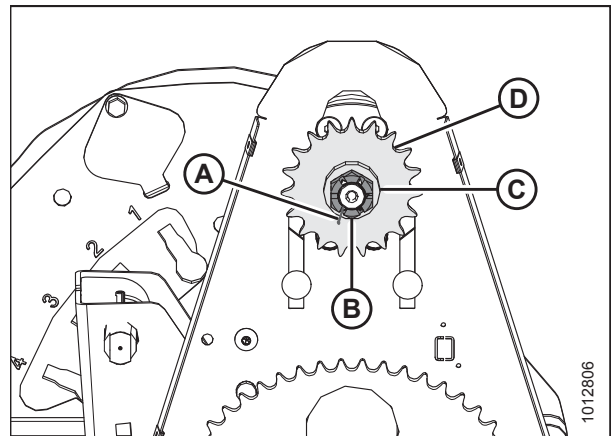


Figure 5.306: Reel Drive

4. Install the drive chain (A) onto the drive sprocket (B).
5. Tighten the drive chain. Refer to [Tightening Reel Drive Chain, page 525](#).

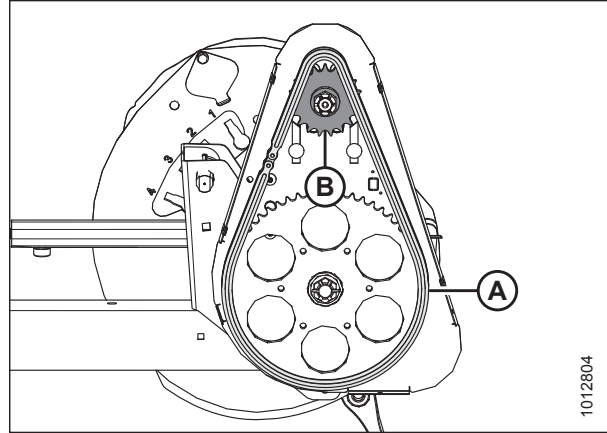


Figure 5.307: Reel Drive

5.14.4 Double-Reel U-Joint

The double-reel drive U-joint allows each reel to move independently from the other.

Lubricate the U-joint according to the specifications. Refer to [5.3.6 Lubrication and Servicing, page 372](#).

Replace the U-joint if severely worn or damaged. Refer to [Removing Double-Reel U-Joint, page 528](#).

Removing Double-Reel U-Joint



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove the drive cover. Refer to [Removing Reel Drive Cover, page 521](#).
3. Support the inboard end of the right reel with a front end loader and nylon slings (A) (or equivalent lifting device).

IMPORTANT:

Avoid damaging or denting the center tube by supporting the reel as close to the end disc as possible.

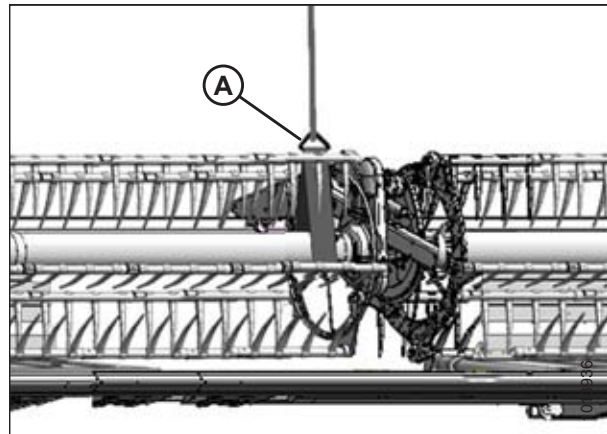


Figure 5.308: Supporting Reel

MAINTENANCE AND SERVICING

4. Remove the six bolts (A) attaching the U-joint flange (B) to the driven sprocket (C).
5. Remove the U-joint.

NOTE:

It may be necessary to move the right reel sideways for the U-joint to clear the tube.

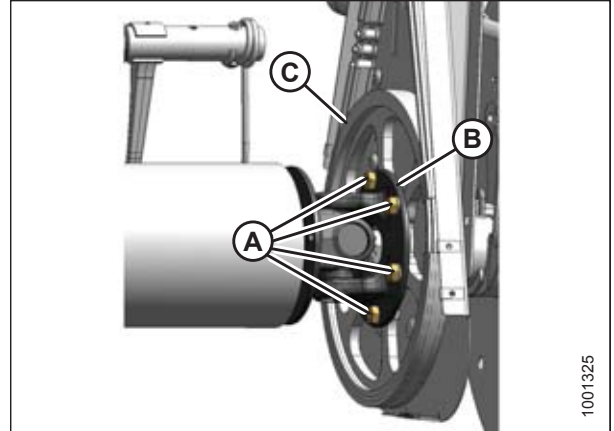


Figure 5.309: U-Joint

Installing Double-Reel U-Joint

NOTE:

It may be necessary to move the right reel sideways for the U-joint to clear the reel tube.

1. Position the U-joint flange (B) onto the driven sprocket (C) as shown. Install six bolts (A) and hand-tighten. Do **NOT** torque the bolts.

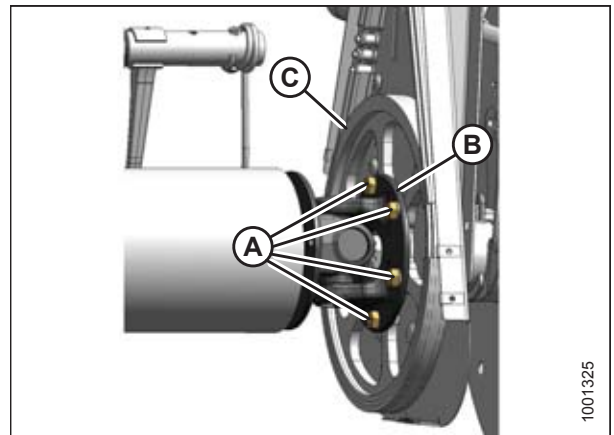


Figure 5.310: U-Joint

2. Position the right reel tube against the reel drive and engage the stub shaft into the U-joint pilot hole.
3. Rotate the reel until the holes in the end of the reel tube and U-joint flange (B) line up.
4. Apply medium-strength threadlocker (Loctite® 243 or equivalent) to four 1/2 in. bolts (A) and secure with lock washers.
5. Torque to 102–115 Nm (75–85 lbf-ft).

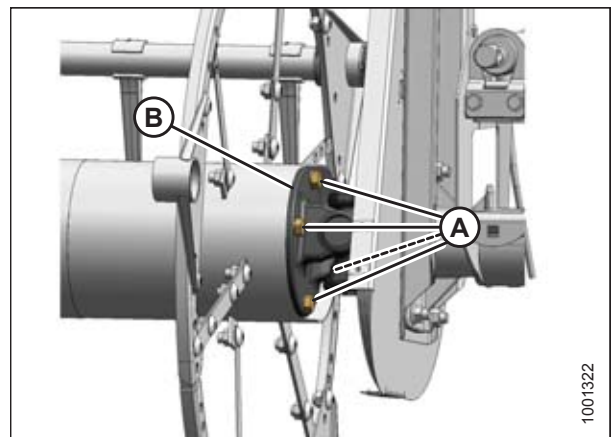


Figure 5.311: U-Joint

6. Remove the temporary reel support (A).
7. Install the drive cover. Refer to [Installing Reel Drive Cover, page 522](#).

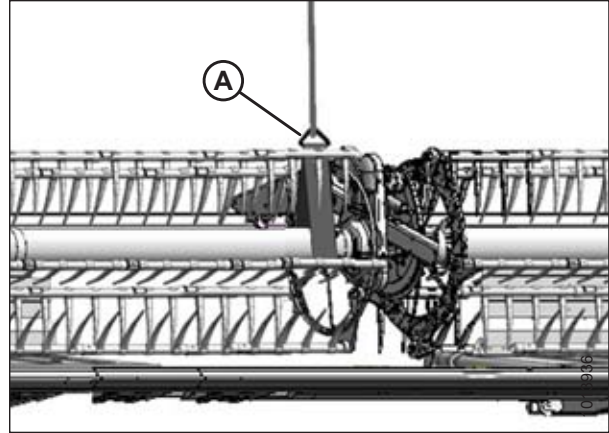


Figure 5.312: Supporting Reel

5.14.5 Reel Drive Motor

The reel drive motor does not require regular maintenance or servicing. If problems occur with the motor, remove it and have it serviced at your MacDon Dealer.

Removing Reel Drive Motor

! DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Loosen the drive chain. Refer to [Loosening Reel Drive Chain, page 524](#).
3. Remove the drive sprocket. Refer to [Removing Reel Drive Sprocket, page 526](#).
4. Mark the hydraulic lines (A) and their locations in the motor (B) to ensure correct reinstallation.
5. Disconnect the hydraulic lines (A) at the motor (B). Cap or plug open ports and lines.
6. Remove four nuts and bolts (C), and remove the motor (B). Retrieve the spacer (if installed) from between the motor (B) and the motor mount.
7. If motor is being replaced, remove hydraulic fittings from old motor and install in new motor using the same orientation. Refer to [8 Reference, page 569](#) for fitting installation guidelines.

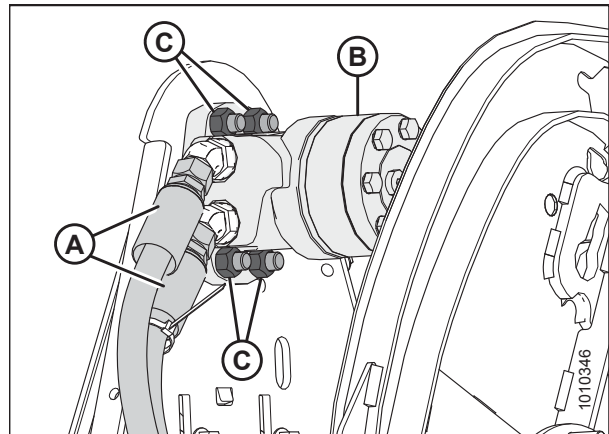


Figure 5.313: Reel Motor and Hoses

Installing Reel Drive Motor

1. Slide the motor mount (A) up or down so the motor mounting holes (B) are accessible through the openings in the chain case.

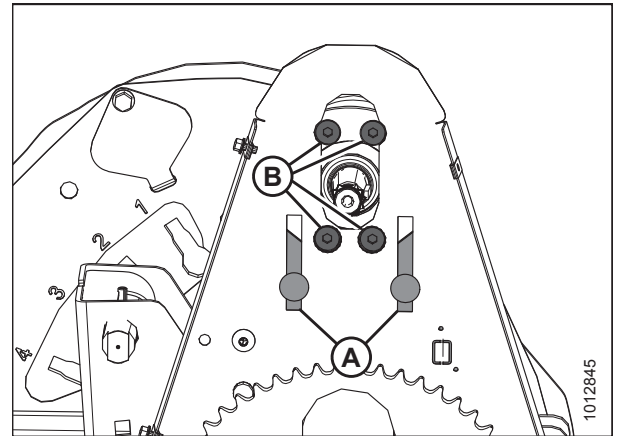


Figure 5.314: Reel Drive Motor Mounting Holes

2. Attach the motor (A) (and spacer if previously removed) to the motor mount (B) with four 1/2 x 1-3/4 in. countersunk bolts and nuts (C).
3. Torque nuts (C) to 73 Nm (54 lbf-ft).
4. If installing a new motor, install the hydraulic fittings (not shown) from the original motor and torque to 110–120 Nm (81–89 lbf-ft).

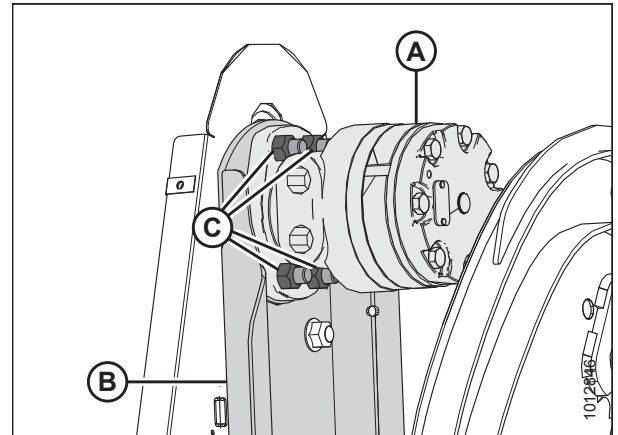


Figure 5.315: Reel Drive Motor

5. Remove the caps or plugs from the ports and lines and connect the hydraulic lines (A) to the hydraulic fittings (B) on the motor (C).

NOTE:

Ensure the hydraulic lines (A) are installed at their original locations.

6. Install the drive sprocket. Refer to [Installing Reel Drive Sprocket, page 527](#).
7. Tighten the drive chain. Refer to [Tightening Reel Drive Chain, page 525](#).

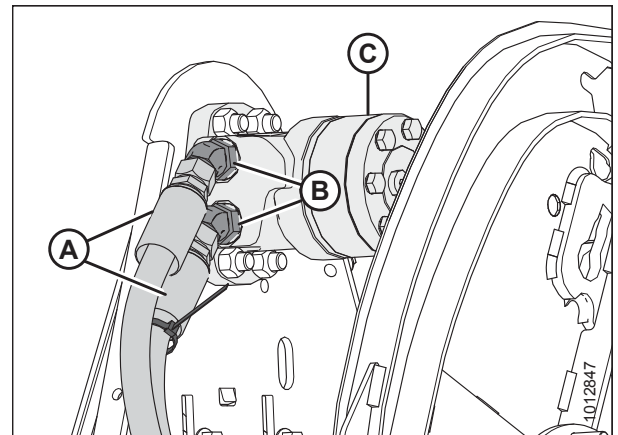


Figure 5.316: Reel Motor and Hoses

5.14.6 Replacing Drive Chain on Double Reel

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the engine, and remove the key from the ignition.
2. Loosen the drive chain. Refer to [Loosening Reel Drive Chain, page 524](#).
3. Support the inboard end of the right reel with a front end loader and nylon slings (A) (or equivalent lifting device).

IMPORTANT:

Avoid damaging or denting the center tube by supporting the reel as close to the end disc as possible.

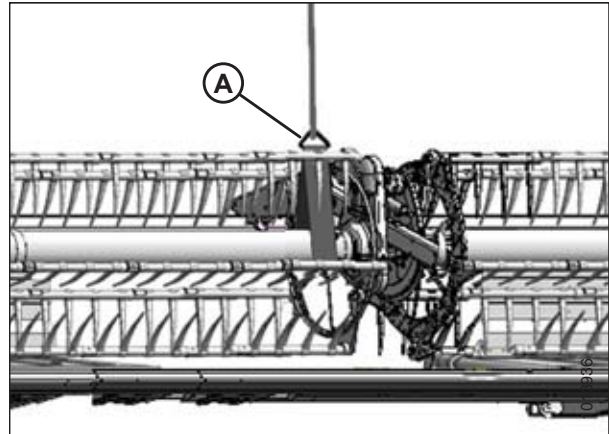


Figure 5.317: Supporting Reel

4. Remove the four bolts (A) securing the reel tube to the U-joint flange (B).

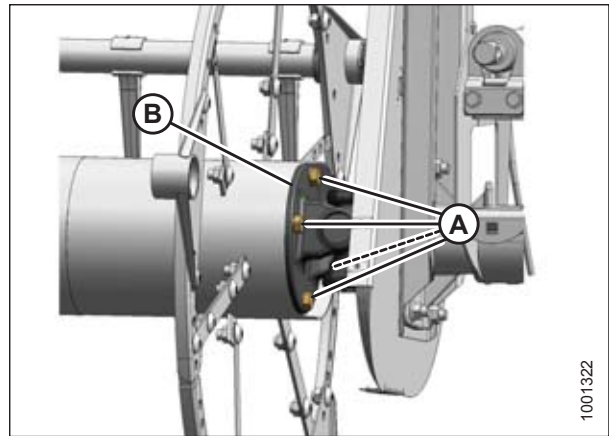


Figure 5.318: U-Joint

MAINTENANCE AND SERVICING

5. Move the right reel sideways to separate the reel tube (A) from the U-joint (B).
6. Remove the drive chain (C).
7. Route the new chain (C) over the U-joint (B) and position onto the sprockets.

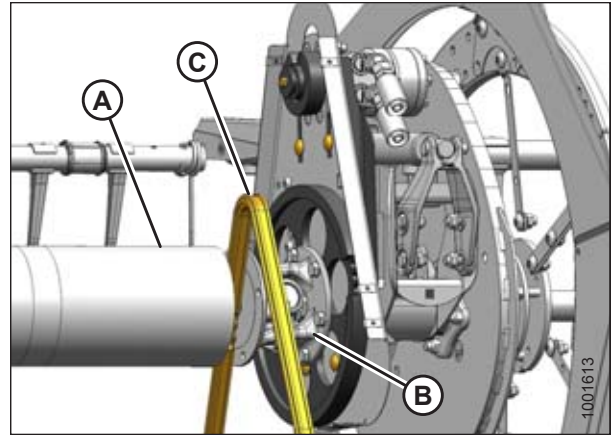


Figure 5.319: Replacing Chain

8. Position the right reel tube against the reel drive and engage the stub shaft into the U-joint pilot hole.
9. Rotate the reel until the holes in end of the reel tube and U-joint flange line up.
10. Apply Loctite® #243 (or equivalent) to four 1/2 in. bolts (A) and secure with lock washers.
11. Torque to 102–115 Nm (75–85 lbf-ft).

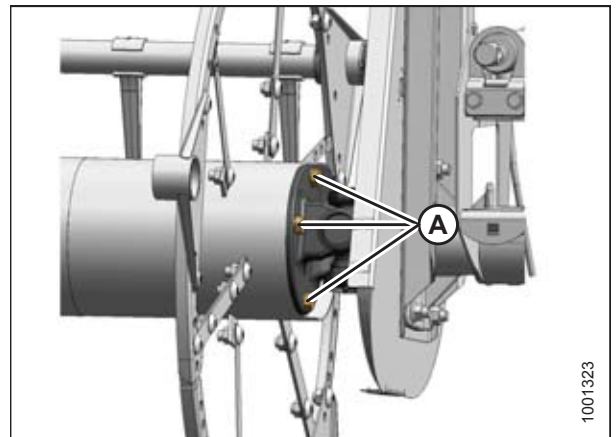


Figure 5.320: U-Joint

12. Remove the temporary reel support (A).

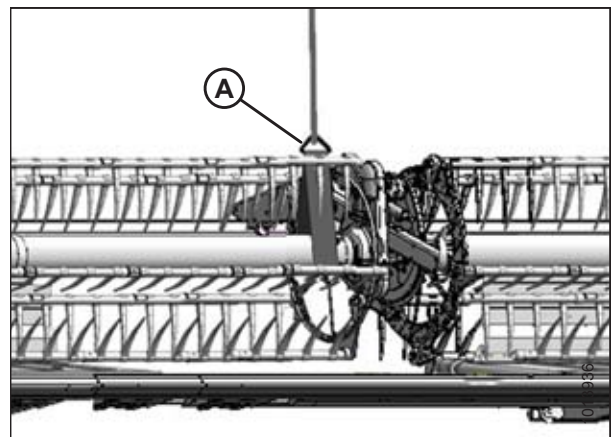


Figure 5.321: Supporting Reel

5.14.7 Replacing Drive Chain on Single Reel

1. Loosen the drive chain. Refer to [Loosening Reel Drive Chain, page 524](#).
2. Lift the chain (A) off the drive sprocket (B).
3. Lower the chain until free of the lower sprocket (C) and remove the chain from the drive.
4. Position the new chain (A) around the bottom teeth on the lower sprocket (C).
5. Lift the chain onto the drive sprocket (B) ensuring all the links are properly engaged in the teeth.
6. Tighten the drive chain. Refer to [Tightening Reel Drive Chain, page 525](#).

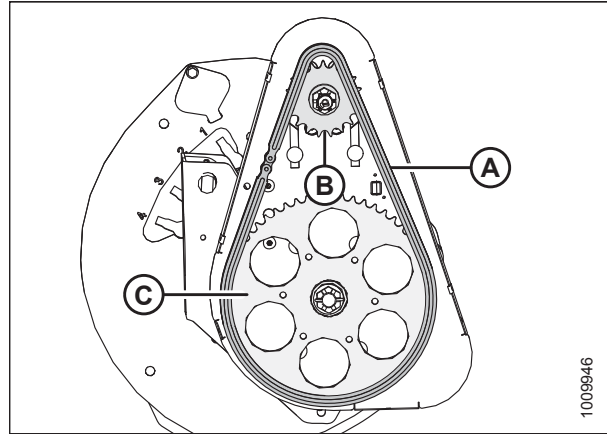


Figure 5.322: Reel Drive

5.14.8 Replacing Reel Speed Sensor

The reel speed sensors (and the procedures for replacing them) vary with the combine model.

Replacing AGCO (Challenger, Gleaner, and Massey Ferguson) Sensor



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove the drive cover. Refer to [Removing Reel Drive Cover, page 521](#).
3. Disconnect the electrical connector (A).

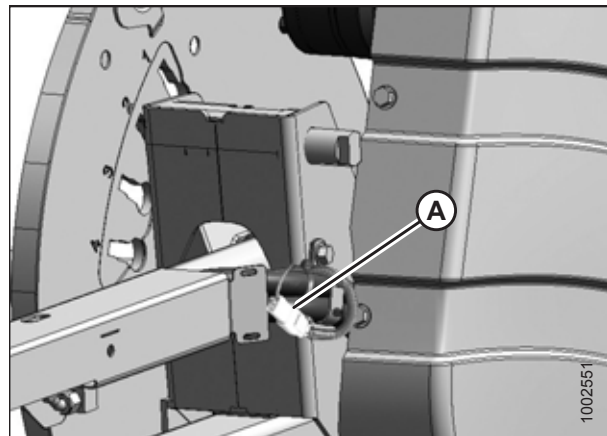


Figure 5.323: Electrical Harness

MAINTENANCE AND SERVICING

4. Cut the cable tie (A) securing the harness to the cover.
5. Remove two screws (B), sensor (C), and harness. If necessary, bend the cover (D) to remove the harness.
6. Feed the wire of the new sensor behind the cover (D) and through the chain case.
7. Locate the new sensor in support (E) and attach with two screws (B).
8. Adjust the gap between the sensor disc (F) and the sensor (C) to 5 mm (0.02 in.).

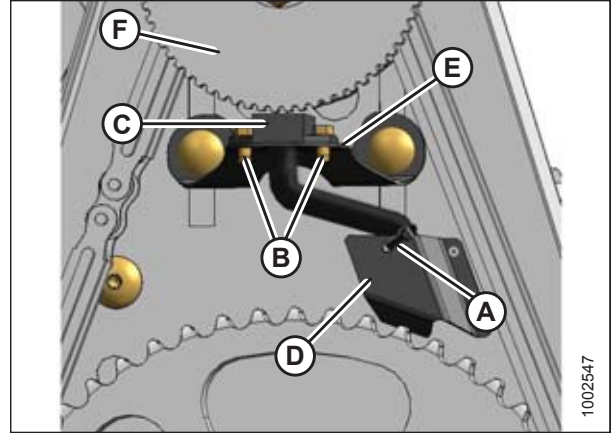


Figure 5.324: Speed Sensor

9. Connect the electrical harness (A).

IMPORTANT:

Ensure the sensor electrical harness does NOT contact the chain or sprocket.

10. Reinstall the drive cover. Refer to [Installing Reel Drive Cover, page 522](#).

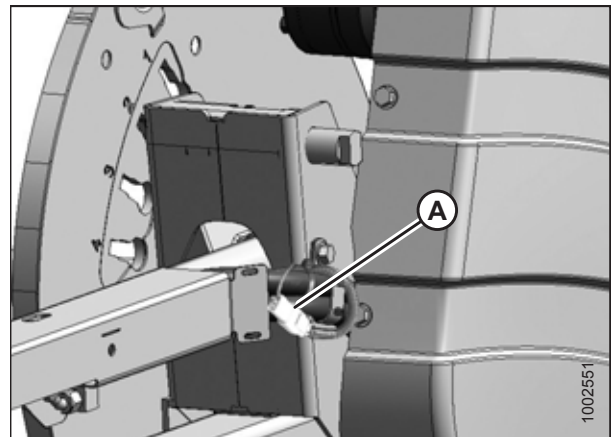


Figure 5.325: Electrical Harness

Replacing John Deere Reel Speed Sensor

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove the drive cover. Refer to [Removing Reel Drive Cover, page 521](#).
3. Disconnect the electrical connector (D).
4. Remove the top nut (C) and remove the sensor (B).
5. Remove the top nut from the new sensor and position the sensor into the support. Secure with top nut (C).
6. Adjust the gap between the sensor disc (A) and the sensor (B) to 3 mm (1/8 in.) using nut (C).
7. Connect to harness at (D).

IMPORTANT:

Ensure the sensor electrical harness does NOT contact the chain or sprocket.

8. Reinstall the drive cover. Refer to [Installing Reel Drive Cover, page 522](#).

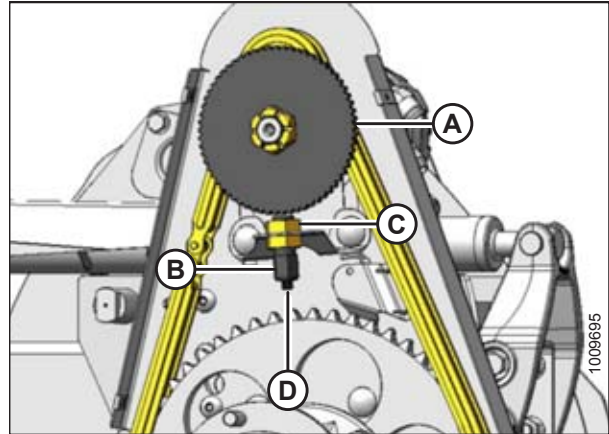


Figure 5.326: Speed Sensor

Replacing CLAAS 400 Series Reel Speed Sensor

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove the drive cover. Refer to [Removing Reel Drive Cover, page 521](#).
3. Disconnect the electrical connector (C).
4. Remove the top nuts (D) and remove the sensor (B).
5. Remove the top nut from the new sensor and position the sensor into the support. Secure with top nut (D).
6. Adjust the gap between the sensor disc (A) and the sensor (B) to 3 mm (1/8 in.) using nuts (D).
7. Connect to harness at (C).

IMPORTANT:

Ensure the sensor electrical harness does NOT contact the chain or sprocket.

8. Reinstall the drive cover. Refer to [Installing Reel Drive Cover, page 522](#).

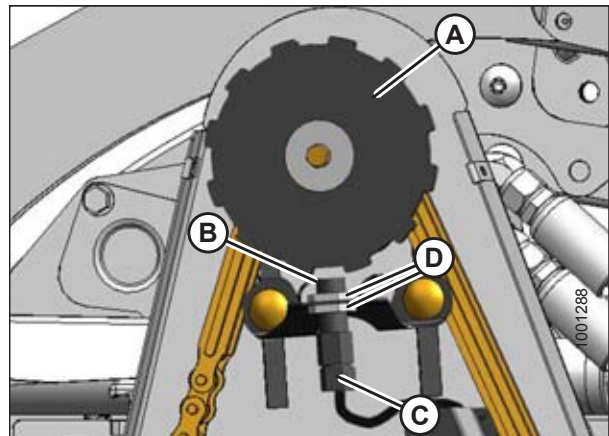


Figure 5.327: Speed Sensor

Replacing CLAAS 500/700 Series Reel Speed Sensor

DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Shut down the engine, and remove the key from the ignition.
2. Remove the drive cover. Refer to [Removing Reel Drive Cover, page 521](#).
3. Disconnect the sensor's (A) electrical connector located behind chain case.
4. Remove cable ties (B).
5. Remove shield (C) and rivets (D)
6. Remove nut (E) and remove the sensor (A).
7. Position the new sensor (A) into the support (F). Secure with nut (E).
8. Adjust speed sensor to achieve a gap of 1–3 mm (1/16–1/8 in.) from the sensor disc (G).
9. Route harness as shown and secure with shield (C) and rivets (D).
10. Secure harness to sensor support with cable ties (B) as shown.

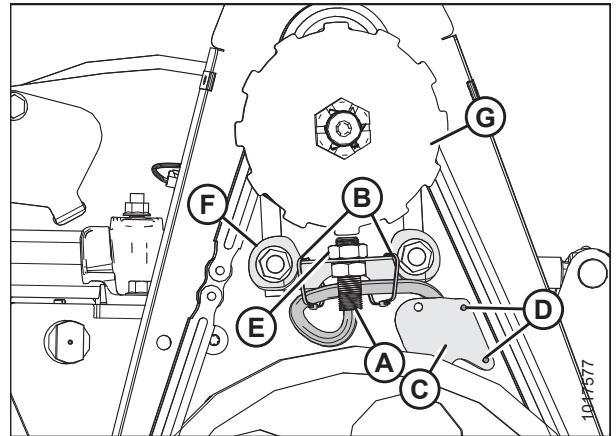


Figure 5.328: Speed Sensor

IMPORTANT:

Ensure the sensor electrical harness does **NOT** contact the chain or sprocket.

11. Reinstall the drive cover. Refer to [Installing Reel Drive Cover, page 522](#).

5.15 Transport System (Optional)

Refer to [6.4.4 Stabilizer / Slow Speed Transport Wheels, page 549](#) for more information.

5.15.1 Checking Wheel Bolt Torque

If a transport system is installed, adhere to the following procedure for torquing the wheel bolts:

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Turn off the engine and remove key.
2. Follow the bolt tightening sequence shown, and torque the wheel bolts to 110–120 Nm (80–90 lbf·ft).

IMPORTANT:

Whenever a wheel is removed and reinstalled, check the wheel bolt torque after one hour of operation and every 100 hours thereafter.

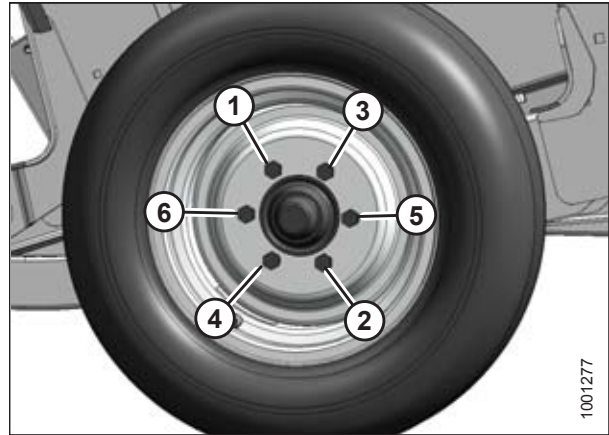


Figure 5.329: Bolt Tightening Sequence


5.15.2 Checking Axle Bolt Torque

If a transport system is installed, adhere to the following procedure for torquing the axle bolts:

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

Figure 5.330: Axle Bolts

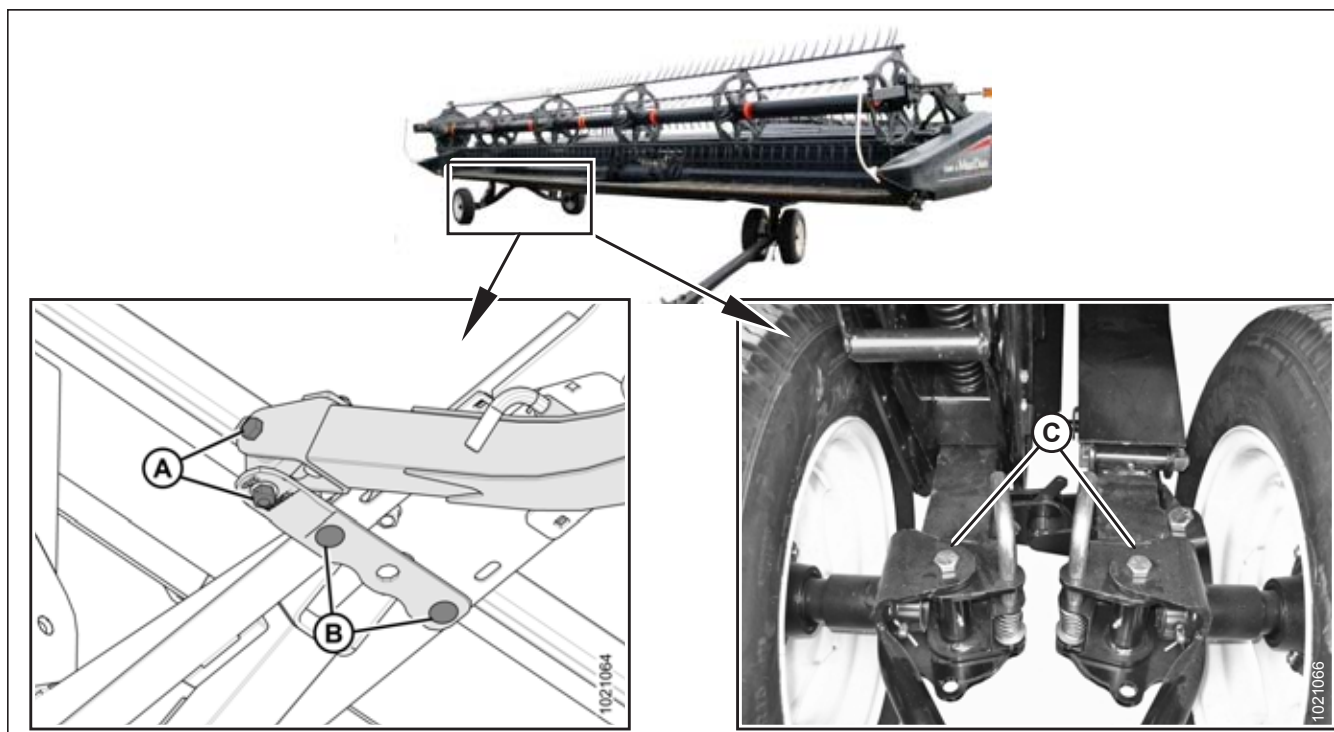

1. Check and tighten axle bolts **DAILY** until torque is maintained as follows:

- (A): 244 Nm (180 lbf·ft)
- (B): 203 Nm (150 lbf·ft)
- (C): 244 Nm (180 lbf·ft)

5.15.3 Checking Tire Pressure

Check the tire inflation pressure and inflate according to the information provided in Table 5.4, page 540.

Table 5.4 Tire Pressure

Size	Load Range	Pressure
ST205/75 R15	D	448 kPa (65 psi)
ST205/75 R15	E	552 kPa (80 psi)

WARNING

- Service tires safely.
- A tire can explode during inflation which could cause serious injury or death.
- Do NOT stand over tire. Use a clip-on chuck and extension hose.
- Do NOT exceed maximum inflation pressure indicated on tire label or sidewall.
- Replace tires that have defects.
- Replace wheel rims that are cracked, worn, or severely rusted.
- Never weld a wheel rim.
- Never use force on an inflated or partially inflated tire.
- Make sure the tire is correctly seated before inflating to operating pressure.
- If the tire is not correctly positioned on the rim or is overinflated, the tire bead can loosen on one side causing air to escape at high speed and with great force. An air leak of this nature can thrust the tire in any direction endangering anyone in the area.
- Make sure all the air is removed from the tire before removing the tire from the rim.
- Do NOT remove, install, or repair a tire on a rim unless you have the proper equipment and experience to perform the job.
- Take the tire and rim to a qualified tire repair shop.



Figure 5.331: Inflation Warning

6 Options and Attachments

The following options and attachments are available for use with your header. See your MacDon Dealer for availability and ordering information.

6.1 Float Module

6.1.1 Hillside Extension Kit

The Hillside Extension kit allows FM100 Float Modules to operate on steep hillsides while maintaining oil supply to the suction side of pump.

Installation instructions are included in the kit.

MD #B6057

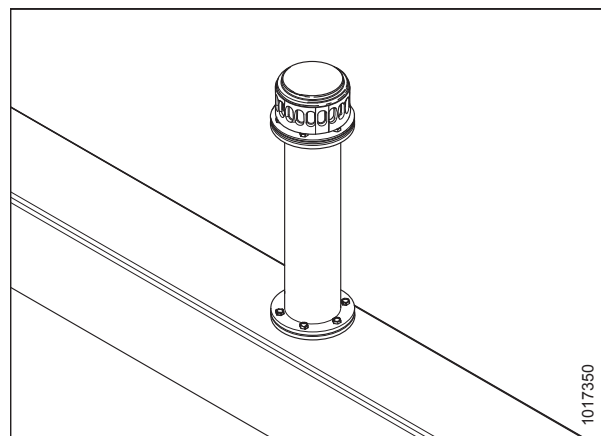


Figure 6.1: Hillside Extension Kit

6.2 Reel

6.2.1 Multi-Crop Rapid Reel Conversion Kit

For use on double-reel headers only, the multi-crop rapid reel conversion kit decreases the time required to change the fore-aft cylinder position on the reel support arm from the normal operating location to a farther aft location that minimizes crop disturbance. The kit also allows the reel fore-aft cylinders to be quickly moved to the normal operating location.

MD #B6590

NOTE:

The Multi-Crop Rapid Reel Conversion kit is not available for European-configured D1 Series headers.

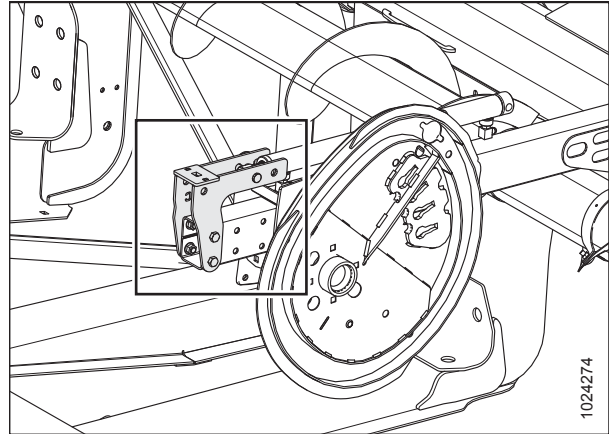


Figure 6.2: Center Arm – Left and Right Similar

6.2.2 Reel Arm Extension Kit (European-configured Headers Only)

This kit provides extensions for the outer reel support arms on a European-configured D1 Series header. These extensions provide the additional reel arm length required to properly install a vertical knife mount kit (MD #B5757, MD #B6572) onto the header. The Reel Arm Extension kit also includes reel fore-aft brackets allowing quick reel repositioning from the reel's most forward position to its most rearward position.

MD #B5691

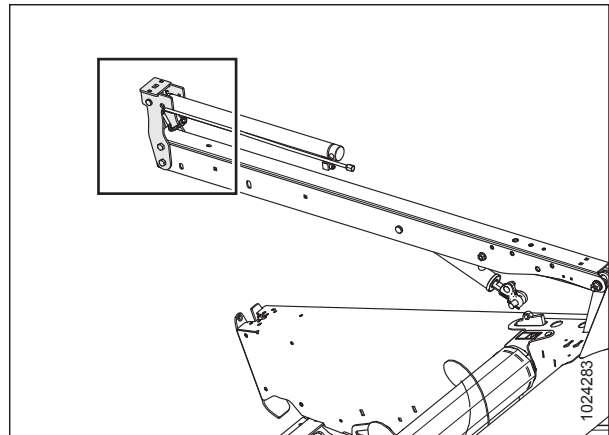


Figure 6.3: Right Arm – Center and Left Arms Similar (Parts Hidden for Clarity)

6.2.3 Lodged Crop Reel Finger Kit

The steel fingers (A) provided in the Lodged Crop Reel Finger kit attach to the ends of every other tine bar and help to clear material in heavy, hard-to-cut crops such as lodged rice.

Each kit contains three fingers for the cam end of the reel and three fingers for the tail end. Hardware and installation instructions are included in the kit.

MD #B4831

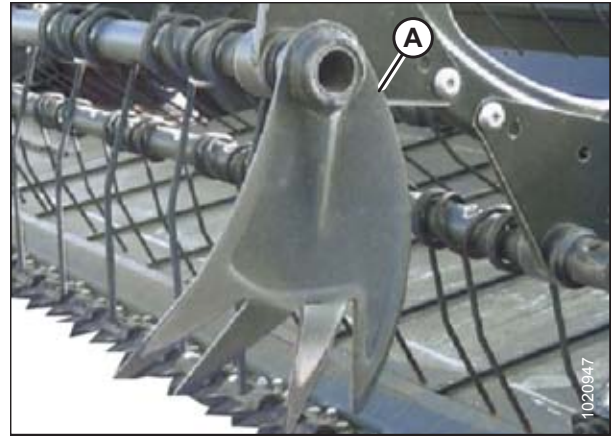


Figure 6.4: Lodged Crop Fingers

6.2.4 PR15 Tine Tube Reel Conversion Kit

This kit allows conversion from a five-bat reel to a six-bat reel.

Order the following bundles according to your header size and type:

- 9.1 m (30 ft.) – Plastic Fingers MD #B5278⁵⁸
- 10.6 m (35 ft.) – Plastic Fingers MD #B5674

NOTE:

You must also order additional endshields when converting the reel.

6.2.5 Reel Endshield Kit

The steel shields provided in the reel endshield kit attach to the ends of the reels and help to clear material in heavy, hard-to-cut crops. They are standard equipment on all headers (except nine-bat reels). Hardware and installation instructions are included in the kit.

See your MacDon Dealer for more information.

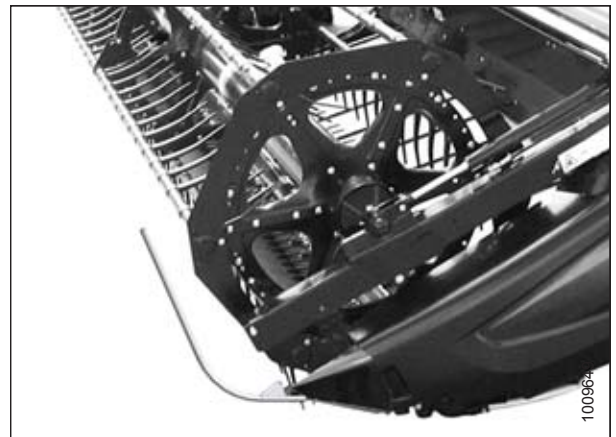


Figure 6.5: Reel Endshields

⁵⁸. Double-reel units only.

6.2.6 Tine Tube Reinforcing Kit

Tine tube reinforcing kits are available for five- and six-bat reels. They are designed to support high reel loads when cutting extremely heavy crops.

- Five-Bat Reels – MD #B5825
- Six-Bat Reels – MD #B5826

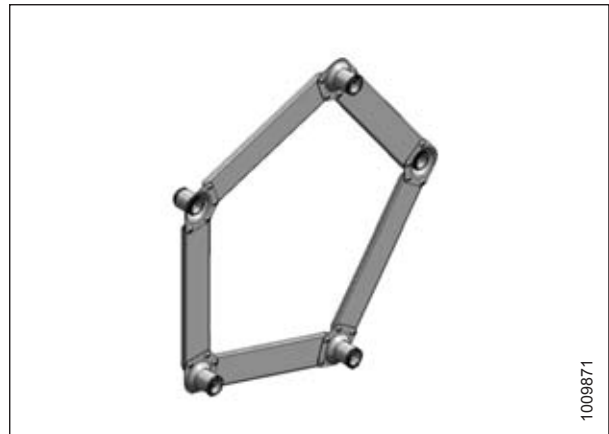


Figure 6.6: Five-Bat Reinforcing Kit Shown – Six-Bat Reinforcing Kit Similar

6.3 Cutterbar

6.3.1 Cutterbar Wearplate

Cutterbar wearplates are recommended for cutting on the ground when the soil is adhering to the steel.

Order one of the following bundles based on the header size:

- 4.6 m (15 ft.) – MD #B4864
- 6.1 m (20 ft.) – MD #B4865
- 7.6 m (25 ft.) – MD #B4838
- 9.1 m (30 ft.) – MD #B4839
- 10.6 m (35 ft.) – MD #B4840
- 12.2 m (40 ft.) – MD #B4841
- 13.7 m (45 ft.) – MD #B5114



Figure 6.7: Cutterbar Wearplates

6.3.2 Knifehead Shield

Knifehead shields attach to the endsheets and reduce the knifehead opening to prevent cut crop, particularly severely lodged crop, from accumulating over the knifehead and damaging the knife drive box and endsheet.

Order the following bundles according to your header size and guard type:

- Regular guards 9.1 m (30 ft.) and larger – MD #220101
- Stub guards 9.1 m (30 ft.) and larger – MD #220103

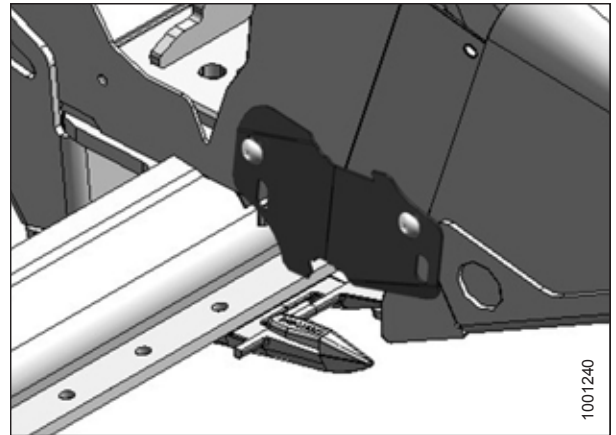


Figure 6.8: Knifehead Shield

6.3.3 Extended Center Filler

The Extended Center Filler kit (MD #B6450) includes a reinforced flap 3 mm (1/8 in.) thick that extends onto the feed draper of a MacDon FM100 Float Module to help reduce loss when cutting crops such as beans and peas. Installation instructions are included with the kit.

MD #B6450

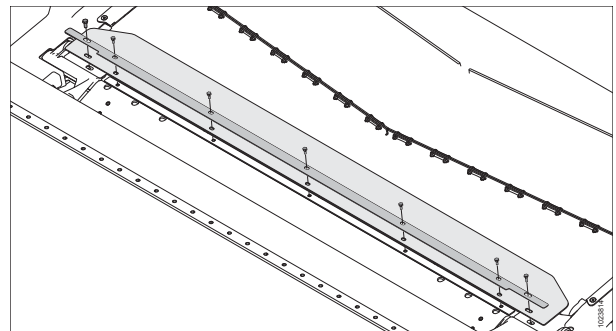


Figure 6.9: Extended Filler

6.3.4 Rock Retarder

The rock retarder (A) consists of a steel angle that is bolted to the cutterbar immediately aft of the knife, and helps prevent rocks and large debris from being swept onto the drapers with the crop. Installation instructions are included with the kit.

Order bundles by header size:

- 9.1–10.6 m (30–35 ft.) – MD #B5084
- 12.2–13.7 m (40–45 ft.) – MD #B5085

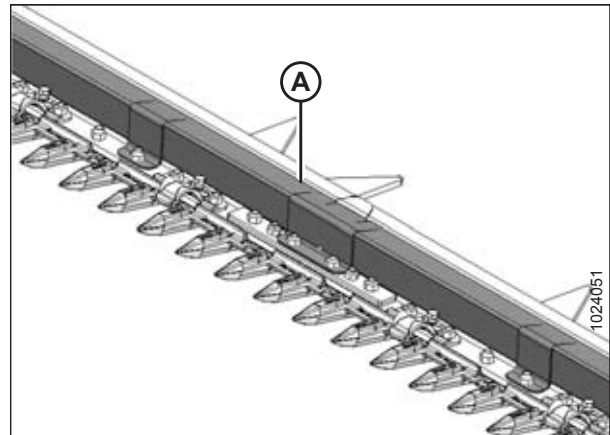


Figure 6.10: Rock Retarder

6.3.5 Stub Guard Conversion Kit

Stub guards, complete with top guides and adjuster shoes, are designed to cut tough crops.

Installation and adjustment instructions are included in the kit.

Order one of the following bundles according to your header size:

- 4.6 m (15 ft.) – MD #B4864
- 6.1 m (20 ft.) – MD #B4865
- 7.6 m (25 ft.) – MD #B4838
- 9.1 m (30 ft.) – MD #B4839
- 10.6 m (35 ft.) – MD #B4840

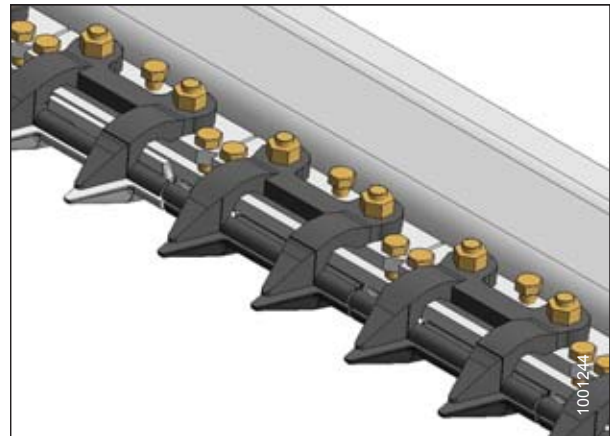


Figure 6.11: Stub Guards

6.3.6 Vertical Knife Mounts and Double Vertical Knife Hose Kits

Installation and adjustment instructions are included in the bundle.

Order the following vertical knife bundles according to the left or right side:

For non-European-configured D1 Series headers:

- Left Vertical Knife – MD #B5757
- Right Vertical Knife – MD #B6572

For European-configured D1 Series headers:

- Left Vertical Knife – MD #B6137⁵⁹
- Right Vertical Knife – MD #B6138⁶⁰

Order the following vertical knife hose kit bundles:

Single Reel

- Double Vertical Knife Hose, Rigid 4.6 m (15 ft.) Single Reel – MD #B6263
- Double Vertical Knife Hose, Rigid 6.1 m (20 ft.) Single Reel – MD #B6264
- Double Vertical Knife Hose, Rigid 7.6 m (25 ft.) Single Reel – MD #B6265
- Double Vertical Knife Hose, Rigid 9.1 m (30 ft.) Single Reel – MD #B6266
- Double Vertical Knife Hose, Rigid 10.6 m (35 ft.) Single Reel – MD #B6267

Double Reel

- Double Vertical Knife Hose, Rigid 9.1 m (30 ft.) Double Reel – MD #B6255
- Double Vertical Knife Hose, Rigid 10.6 m (35 ft.) Double Reel – MD #B6256
- Double Vertical Knife Hose, Rigid 12.2 m (40 ft.) Double Reel – MD #B6257
- Double Vertical Knife Hose, Rigid 13.7 m (45 ft.) Double Reel – MD #B6258

NOTE:

If mounting onto multiple non-European-configured headers, you will also require the Auxiliary Vertical Knife Plumbing kit MD #B5406.

59. The Left Vertical Knife Mount kit (MD #B6137) cannot be installed onto the header by itself and must be installed with the Right Vertical Knife Mount kit (MD #B6138).

60. The Right Vertical Knife Mount kit (MD #B6138) can be installed onto the header either by itself or with the Left Vertical Knife Mount kit (MD #B6137).

6.4 Header

6.4.1 Divider Latch Kit

Divider latch kits attach to the endsheets. They allow for quick removal and storage of endsheet divider cones and, if required, reduce the transport width of the header. Installation instructions are included in the kit.

MD #B6158

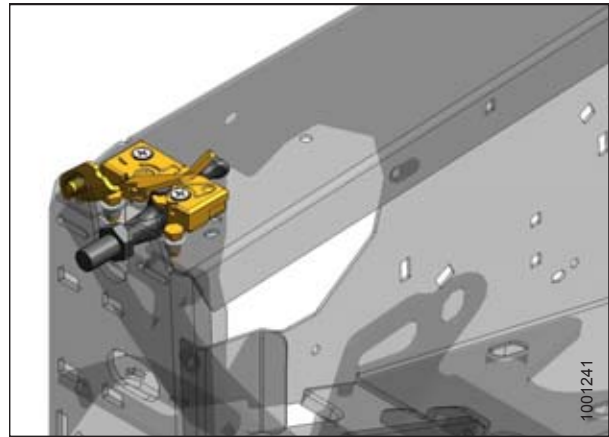


Figure 6.12: Divider Latch

6.4.2 Stabilizer Wheels

Stabilizer wheels help to stabilize the header in field conditions that would otherwise cause the header to bounce, resulting in uneven cutting heights. Installation and adjustment instructions are included in the kit.

MD #C1986

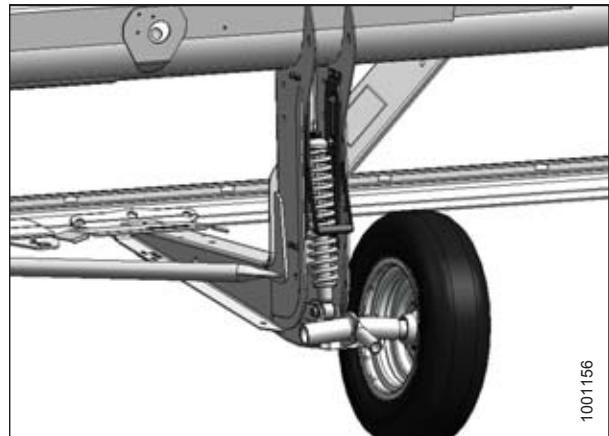


Figure 6.13: Stabilizer Wheel

6.4.3 Secondary Stabilizer Wheel

The secondary stabilizer wheel helps stabilize the header in field conditions that would otherwise cause the header to bounce and result in uneven cutting height. Installation and adjustment instructions are included with the kit.

Available as an attachment for use with 9.1 m, 10.6 m, 12.2 m, and 13.7 m (30 ft., 35 ft., 40 ft., and 45 ft.) headers.

MD #B6179⁶¹

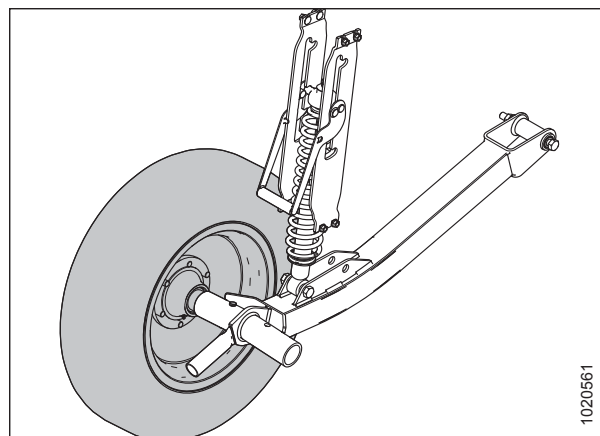


Figure 6.14: Secondary Stabilizer Wheel

6.4.4 Stabilizer / Slow Speed Transport Wheels

Stabilizer / slow speed transport wheels help to stabilize the header in field conditions that would otherwise cause the header to bounce, resulting in uneven cutting heights. This system is similar to the Stabilizer Wheel option. Refer to [6.4.2 Stabilizer Wheels, page 548](#).

Stabilizer / slow speed transport wheels are used to convert the header into transport mode for slow-speed towing behind a properly-configured combine (or agricultural tractor). A tow pole and installation instructions are included in the kit.

MD #C2007

61. Kit consists of one wheel assembly; two kits are required to upgrade both sides of the header.

6.4.5 Backsheet Extension Kit

The Backsheet Extension kit (A) helps retain small seeds in shatter prone crops such as canola. They are usually used with headers equipped with upper cross augers (UCA).

- MD #B6359 – Backsheet Extension Kit
- MD #B6379 – Backsheet Panel Extensions

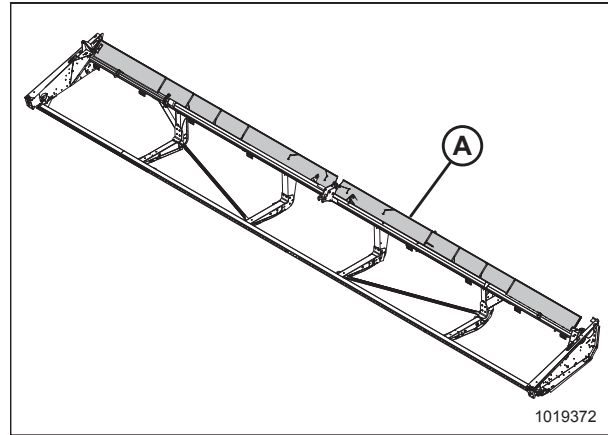


Figure 6.15: Backsheet Extensions

6.5 Crop Delivery

6.5.1 FM100 Dual Auto Header Height Control (AHHC) Sensor Kit

This kit adds two sensors to the float linkage, adding automatic lateral tilt compensation for the header. When installed, the combine will automatically tilt the feeder house from side to side to follow uneven terrain during operation.

Installation instructions are included in the kit.

MD #B6211

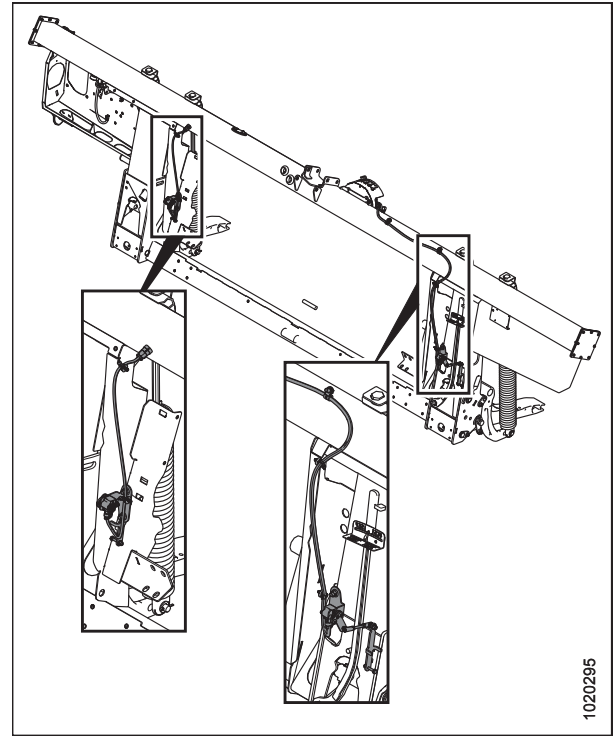


Figure 6.16: Dual AHHC Sensors

6.5.2 FM100 Feed Auger Flighting

Auger flighting (A) on the FM100 can be configured to specific combines and crop conditions. Refer to [3.7.1 Float Module Feed Auger Configurations, page 59](#) for combine/crop specific configurations.

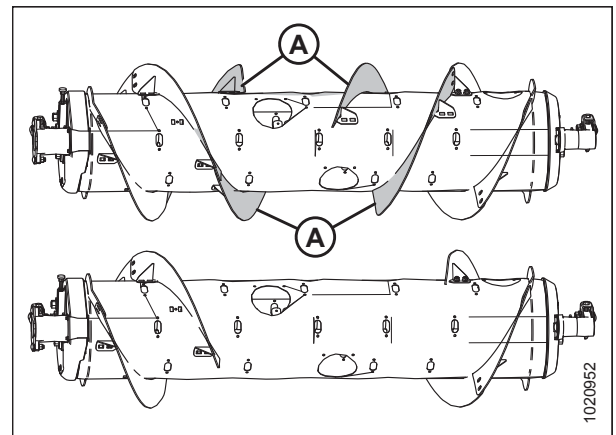


Figure 6.17: FM100 Feed Auger Flighting

6.5.3 In-Cab Draper Speed Control (ICDSC) Kit

Installing this kit allows Operators to adjust the side draper's speed from the combine's cab.

- MD #B6208 – Cab Draper Control, John Deere
- MD #B6385 – Cab Draper Control, Case New Holland
- MD #B6387 – Cab Draper Control, Generic

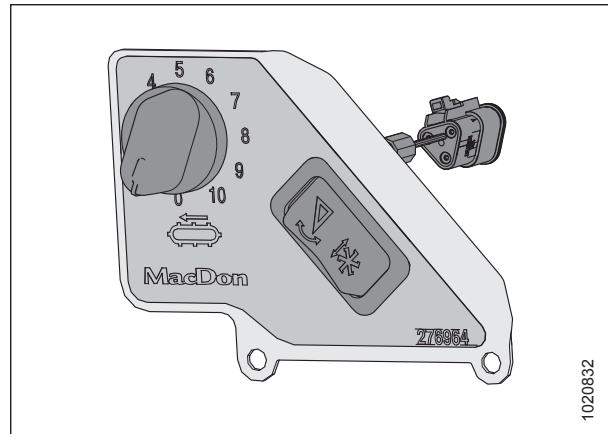


Figure 6.18: ICDSC Cab Control (John Deere Shown, Generic and Case New Holland Similar)

6.5.4 Draper Deflector (Narrow)

Narrow metal draper deflectors attach to the inboard side of the endsheets to prevent material from falling through the gap between the endsheet and the draper while minimizing reel carryover in bushy crops.

Refer to the header parts catalog for the necessary parts.

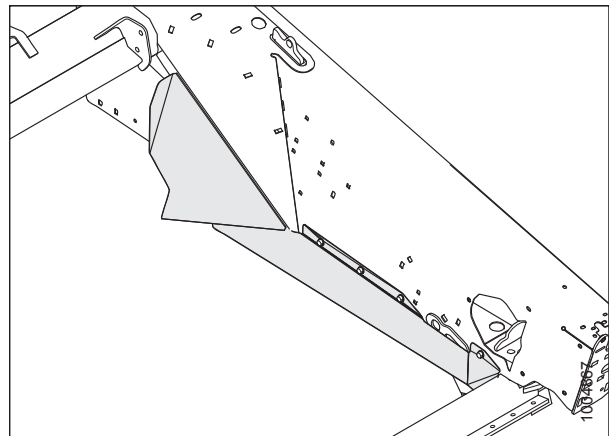


Figure 6.19: Draper Deflector (Narrow)

6.5.5 Draper Deflector (Wide)

Wide metal draper deflectors attach to the inboard side of the endsheets to prevent material from falling through the gap between the endsheet and the draper.

MD #B6551 - includes extra parts for various cutterbar layouts.

NOTE:

The wide draper deflector is not compatible with the upper cross auger option.

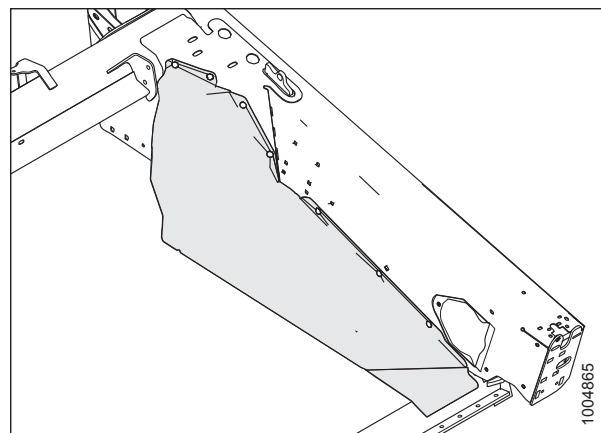


Figure 6.20: Draper Deflector (Wide)

6.5.6 Stripper Bars

Stripper bars improve feeding in certain crops such as rice. They are **NOT** recommended in cereal crops.

Select the stripper bar kit based on combine feeder house width. Refer to Table 6.1, page 553.

NOTE:

MD #B6043 is for John Deere S6X0 Series only.

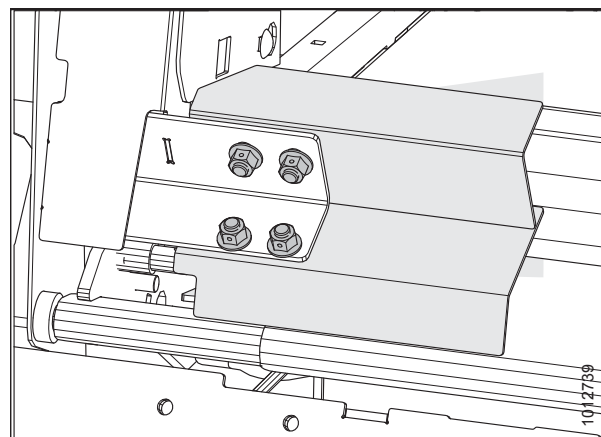


Figure 6.21: Stripper Bar

Table 6.1 Stripper Bar Configurations and Recommendations

Bundle (MD #)	Stripper Bar Length	Opening Width (Installed on FM100)	Recommended Feeder House Width
B6042	265 mm (10-1/2 in.)	1317 mm (52 in.)	1250–1350 mm (49–65 in.)
B6043	265 mm (10-1/2 in.) (with cutout)	1317 mm (52 in.)	For John Deere S6X0 Series only
B6044	325 mm (13 in.)	1197 mm (47 in.)	For specialty crops only
B6045	365 mm (14-1/2 in.)	1117 mm (44 in.)	1100 mm (43-1/2 in.) and below
B6046	403 mm (16 in.)	1041 mm (41 in.)	For specialty crops only
B6213	515 mm (20 in.)	817 mm (32 in.)	For specialty crops only

6.5.7 Auger Dent Repair Kit

This kit allows Operators to repair dents close to the finger/guide area that the feed auger may have sustained during regular use.

Attachment hardware and installation instructions are included in the kit.

MD #237563

Instruction MD #147606

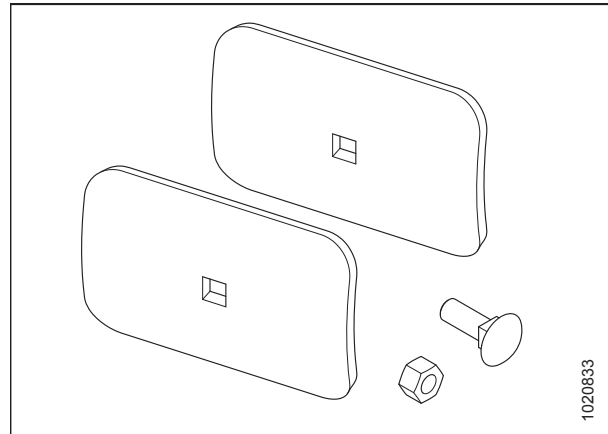


Figure 6.22: Auger Dent Repair Kit

6.5.8 Upper Cross Auger (UCA)

The upper cross auger (A) attaches in front of the backtube and improves crop feeding into the center of the header in heavy crop conditions. It is ideal for high-volume harvesting of forages, oats, canola, mustard and other tall, bushy, hard-to-feed crops.

Order from the following bundles according to your header size:

- 4.6 m (15 ft.) – MD #B6280
- 6.1 m (20 ft.) – MD #B6281
- 7.6 m (25 ft.) – MD #B6461
- 9.1 m (30 ft.) – MD #B6462
- 10.7 m (35 ft.) – MD #B6463
- 12.2 m (40 ft.) – MD #B6464
- 13.7 m (45 ft.)⁶² – MD #B6465

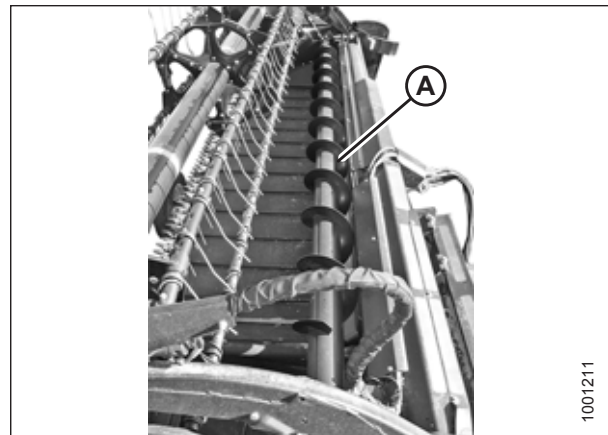


Figure 6.23: Upper Cross Auger

62. This is a 12.2 m (40 ft.) auger, and is backtube mounted. It does **NOT** span the full length of the header.

6.5.9 European Combine Upper Cross Auger (UCA)

The European Combine UCA (A) attaches in front of the backtube and improves crop feeding at the center of the header in heavy crop conditions.

This kit is ideal for high-volume harvesting of forages, oats, canola, rapeseed, mustard, and other tall, bushy, and hard-to-feed crops.

IMPORTANT:

This optional kit is **ONLY** available for European markets, and should **ONLY** be used on combines. Do **NOT** use the European Combine UCA on self-propelled windrowers, as damage will occur at higher operating speeds.

Order from the following bundles according to your header size:

- 7.6 m (25 ft.) – MD #B6584
- 9.1 m (30 ft.) – MD #B6585
- 10.7 m (35 ft.) – MD #B6586
- 12.2 m (40 ft.) – MD #B6587
- 13.7 m (45 ft.)⁶³ – MD #B6588

6.5.10 Rice Divider Rods

Rice divider rods attach to the left and right crop dividers and divide tall and tangled rice crops in a similar manner to standard crop divider rods performing in standing crops. Installation instructions are included in the kit.

MD #B5609

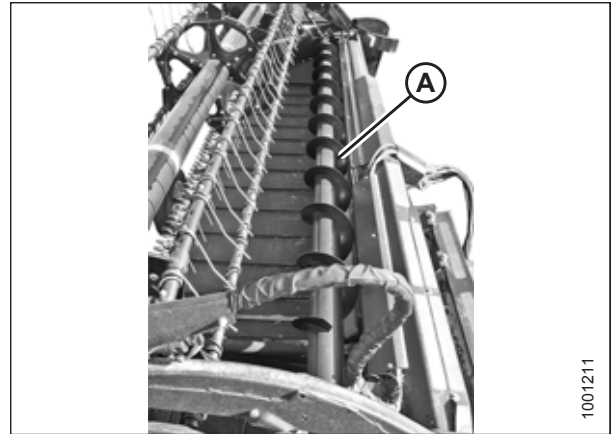


Figure 6.24: Upper Cross Auger



Figure 6.25: Rice Divider Rod

63. This is a 12.2 m (40 ft.) auger, and is backtube mounted. It does **NOT** span the full length of the header.

7 Troubleshooting

7.1 Crop Loss at Cutterbar

Symptom	Problem	Solution	Refer to
Does not pick up downed crop	Cutterbar too high	Lower cutterbar	<ul style="list-style-type: none"> Cutting off the Ground, page 81 Cutting on the Ground, page 85
Does not pick up downed crop	Header angle too low	Increase header angle	3.7.4 Header Angle, page 94
Does not pick up downed crop	Reel too high	Lower reel	3.7.9 Reel Height, page 109
Does not pick up downed crop	Reel too far back	Move reel forward	3.7.10 Reel Fore-Aft Position, page 114
Does not pick up downed crop	Ground speed too fast for reel speed	Increase reel speed or reduce ground speed	<ul style="list-style-type: none"> 3.7.5 Reel Speed, page 102 3.7.6 Ground Speed, page 103
Does not pick up downed crop	Reel fingers not lifting crop sufficiently	Increase finger pitch aggressiveness	3.7.11 Reel Tine Pitch, page 127
Does not pick up downed crop	Reel fingers not lifting crop sufficiently	Install lifter guards	See your MacDon Dealer
Heads shattering or breaking off	Reel speed too fast	Reduce reel speed	3.7.5 Reel Speed, page 102
Heads shattering or breaking off	Reel too low	Raise reel	3.7.9 Reel Height, page 109
Heads shattering or breaking off	Ground speed too fast	Reduce ground speed	3.7.6 Ground Speed, page 103
Heads shattering or breaking off	Crop too ripe	Operate at night when humidity is higher	—
Material accumulating in gap between cut-out in endsheet and knifehead	Crop heads leaning away from knifehead hole in endsheet	Add knifehead shields (except in damp or sticky soils)	5.8.8 Knifehead Shield, page 429
Strips of uncut material	Crowding uncut crop	Allow enough room for crop to be fed to cutterbar	—
Strips of uncut material	Broken knife sections	Replace broken sections	5.8.1 Replacing Knife Section, page 417

TROUBLESHOOTING

Symptom	Problem	Solution	Refer to
Excessive bouncing at normal field speed	Float set too light	Adjust header float	3.7.3 Header Float, page 87
Divider rod running down standing crop	Divider rods too long	Remove divider rod	3.7.12 Crop Dividers, page 130
Crop not being cut at ends	Reel not frowning or not centered in header	Adjust reel horizontal position or reel frown	<ul style="list-style-type: none"> 3.7.10 Reel Fore-Aft Position, page 114 5.13.2 Reel Frown, page 498
Crop not being cut at ends	Knife hold-downs not adjusted properly	Adjust hold-downs so knife works freely but still keep sections from lifting off guards	<ul style="list-style-type: none"> Adjusting Hold-Downs with Pointed Guards, page 428 Adjusting Hold-Downs with Stub Guards, page 429
Crop not being cut at ends	Knife sections or guards are worn or broken	Replace all worn and broken cutting parts	5.8 Knife, page 417
Crop not being cut at ends	Header is not level	Level header	3.9 Leveling the Header, page 288
Crop not being cut at ends	Reel fingers not lifting crop properly ahead of knife	Adjust reel position and/or finger pitch	<ul style="list-style-type: none"> 3.7.10 Reel Fore-Aft Position, page 114 3.7.11 Reel Tine Pitch, page 127
Crop not being cut at ends	Divider runs down thick crop at ends preventing proper feeding due to material bridging the cutter guards	Replace 3–4 end guards with stub guards	<ul style="list-style-type: none"> 5.8.7 Knife Guards, page 422 6.3.5 Stub Guard Conversion Kit, page 546 See your MacDon Dealer
Bushy or tangled crop flows over divider rod, builds up on endsheets	Divider rods providing insufficient separation	Install long divider rods	3.7.12 Crop Dividers, page 130
Cut grain falling ahead of cutterbar	Ground speed too slow	Increase ground speed	3.7.6 Ground Speed, page 103
Cut grain falling ahead of cutterbar	Reel speed too slow	Increase reel speed	3.7.5 Reel Speed, page 102
Cut grain falling ahead of cutterbar	Reel too high	Lower reel	3.7.9 Reel Height, page 109

TROUBLESHOOTING

Symptom	Problem	Solution	Refer to
Cut grain falling ahead of cutterbar	Cutterbar too high	Lower cutterbar	<ul style="list-style-type: none"> <i>Cutting off the Ground, page 81</i> <i>Cutting on the Ground, page 85</i>
Cut grain falling ahead of cutterbar	Reel too far forward	Move reel back on arms	<i>3.7.10 Reel Fore-Aft Position, page 114</i>
Cut grain falling ahead of cutterbar	Cutting at speeds over 10 km/h (6 mph) with 10-tooth reel drive sprocket	Replace with 19-tooth reel drive sprocket	<i>5.14.3 Reel Drive Sprocket, page 526</i>
Cut grain falling ahead of cutterbar	Worn or broken knife components	Replace components	<i>5.8 Knife, page 417</i>

7.2 Cutting Action and Knife Components

Symptom	Problem	Solution	Refer to
Ragged or uneven cutting of crop	Knife hold-downs not adjusted properly	Adjust hold-downs	<ul style="list-style-type: none"> • Adjusting Hold-Downs with Pointed Guards, page 428 • Adjusting Hold-Downs with Stub Guards, page 429
Ragged or uneven cutting of crop	Knife sections or guards are worn or broken	Replace all worn and broken cutting parts	5.8 Knife, page 417
Ragged or uneven cutting of crop	Knife is not operating at recommended speed	Check engine speed of combine	Refer to the combine operator's manual
Ragged or uneven cutting of crop	Ground speed too fast for reel speed	Reduce ground speed or increase reel speed	<ul style="list-style-type: none"> • 3.7.5 Reel Speed, page 102 • 3.7.6 Ground Speed, page 103
Ragged or uneven cutting of crop	Reel fingers not lifting crop properly ahead of knife	Adjust reel position/ finger pitch	<ul style="list-style-type: none"> • 3.7.10 Reel Fore-Aft Position, page 114 • 3.7.11 Reel Tine Pitch, page 127
Ragged or uneven cutting of crop	Cutterbar too high	Lower cutting height	Cutting off the Ground, page 81 or Cutting on the Ground, page 85
Ragged or uneven cutting of crop	Header angle too flat	Steepen header angle	3.7.4 Header Angle, page 94
Ragged or uneven cutting of crop	Bent knife causing binding of cutting parts	Straighten bent knife and align guards	5.8.7 Knife Guards, page 422
Ragged or uneven cutting of crop	Cutting edge of guards not close enough or parallel to knife sections	Align guards	5.8.7 Knife Guards, page 422
Ragged or uneven cutting of crop	Tangled/tough-to-cut crop	Install stub guards	<ul style="list-style-type: none"> • See your MacDon Dealer • Adjusting Hold-Downs with Pointed Guards, page 428 or Adjusting Hold-Downs with Stub Guards, page 429 • 6.3.5 Stub Guard Conversion Kit, page 546
Ragged or uneven cutting of crop	Reel too far back	Move reel forward	3.7.10 Reel Fore-Aft Position, page 114

TROUBLESHOOTING

Symptom	Problem	Solution	Refer to
Ragged or uneven cutting of crop	Loose knife drive belt	Adjust drive belt tension	<i>Checking and Tensioning Non-Timed Knife Drive Belts, page 444</i>
Knife plugging	Reel too high or too far forward	Lower reel or move reel rearward	<ul style="list-style-type: none"> • <i>3.7.9 Reel Height, page 109</i> • <i>3.7.10 Reel Fore-Aft Position, page 114</i>
Knife plugging	Ground speed too slow	Increase ground speed	<i>3.7.6 Ground Speed, page 103</i>
Knife plugging	Loose knife drive belt	Adjust drive belt tension	<i>Checking and Tensioning Non-Timed Knife Drive Belts, page 444</i>
Knife plugging	Improper knife hold-down adjustment	Adjust hold-down	<ul style="list-style-type: none"> • <i>Adjusting Hold-Downs with Pointed Guards, page 428</i> • <i>Adjusting Hold-Downs with Stub Guards, page 429</i>
Knife plugging	Dull or broken knife section	Replace knife section	<i>5.8.1 Replacing Knife Section, page 417</i>
Knife plugging	Bent or broken guards	Align or replace guards	<i>5.8.7 Knife Guards, page 422</i>
Knife plugging	Reel fingers not lifting crop properly ahead of knife	Adjust reel position/ finger pitch	<ul style="list-style-type: none"> • <i>3.7.10 Reel Fore-Aft Position, page 114</i> • <i>3.7.11 Reel Tine Pitch, page 127</i>
Knife plugging	Steel pick-up fingers contacting knife	Increase reel clearance to cutterbar or adjust "frown"	<ul style="list-style-type: none"> • <i>5.13.1 Reel Clearance to Cutterbar, page 494</i> • <i>5.13.2 Reel Frown, page 498</i>
Knife plugging	Float too heavy	Adjust springs for lighter float	<i>3.7.3 Header Float, page 87</i>
Knife plugging	Mud or dirt build-up on cutterbar	Raise cutterbar by lowering skid shoes	<i>Cutting on the Ground, page 85</i>
Knife plugging	Mud or dirt build-up on cutterbar	Install cut-out sections	<i>Installing Knifehead Shield, page 430</i>
Knife plugging	Mud or dirt build-up on cutterbar	Flatten header angle	<i>3.7.4 Header Angle, page 94</i>

TROUBLESHOOTING

Symptom	Problem	Solution	Refer to
Knife plugging	Knife is not operating at recommended speed	Check engine speed of combine or header knife speed	<ul style="list-style-type: none"> Refer to combine operator's manual Checking Knife Speed, page 108
Excessive header vibration	Knife on double-knife drive not timed ⁶⁴	Adjust knife timing ⁶⁴	Adjusting Double-Knife Timing, page 450
Excessive header vibration	Knife hold-downs not adjusted properly	Adjust hold-downs	<ul style="list-style-type: none"> Adjusting Hold-Downs with Pointed Guards, page 428 Adjusting Hold-Downs with Stub Guards, page 429
Excessive header vibration	Knife not operating at recommended speed	Check engine speed of combine	Refer to combine operator's manual
Excessive header vibration	Excessive knife wear	Replace knife	<ul style="list-style-type: none"> 5.8.2 Removing Knife, page 418 5.8.5 Installing Knife, page 420
Excessive header vibration	Loose or worn knifehead pin or drive arm	Tighten or replace parts	5.8.1 Replacing Knife Section, page 417
Excessive vibration of float module and header	Incorrect knife speed	Adjust knife speed	Checking Knife Speed, page 108
Excessive vibration of float module and header	Driveline U-joints worn	Replace U-joints	See your MacDon Dealer
Excessive vibration of float module and header	Bent cutterbar	Straighten cutterbar	See your MacDon Dealer
Excessive breakage of knife sections or guards	Knife hold-downs not adjusted properly	Adjust hold-downs	<ul style="list-style-type: none"> Adjusting Hold-Downs with Pointed Guards, page 428 Adjusting Hold-Downs with Stub Guards, page 429
Excessive breakage of knife sections or guards	Cutterbar operating too low in stony conditions	Raise cutterbar using skid shoes	Cutting on the Ground, page 85

64. Applies to timed double-knife drive headers only.

TROUBLESHOOTING

Symptom	Problem	Solution	Refer to
Excessive breakage of knife sections or guards	Float is set too heavy	Adjust float springs for lighter float	3.7.3 Header Float, page 87
Excessive breakage of knife sections or guards	Bent or broken guard	Straighten or replace guard	5.8.7 Knife Guards, page 422
Excessive breakage of knife sections or guards	Header angle too steep	Flatten header angle	3.7.4 Header Angle, page 94
Knife back breakage	Bent or broken guard	Straighten or replace guard	5.8.7 Knife Guards, page 422
Knife back breakage	Worn knifehead pin	Replace knifehead pin	<ul style="list-style-type: none"> • 5.8.3 Removing Knifehead Bearing, page 419 • 5.8.4 Installing Knifehead Bearing, page 420
Knife back breakage	Dull knife	Replace knife	<ul style="list-style-type: none"> • 5.8.2 Removing Knife, page 418 • 5.8.5 Installing Knife, page 420

7.3 Reel Delivery

Symptom	Problem	Solution	Refer to
Reel not releasing material in normal standing crop	Reel speed too fast	Reduce reel speed	3.7.5 Reel Speed, page 102
Reel not releasing material in normal standing crop	Reel too low	Raise reel	3.7.9 Reel Height, page 109
Reel not releasing material in normal standing crop	Reel tines too aggressive	Reduce cam setting	3.7.11 Reel Tine Pitch, page 127
Reel not releasing material in normal standing crop	Reel too far back	Move reel forward	3.7.10 Reel Fore-Aft Position, page 114
Reel not releasing material in lodged and standing crop (reel fully lowered)	Reel tines too aggressive for standing crop	Reduce cam setting (one or two)	3.7.11 Reel Tine Pitch, page 127
Wrapping on reel end	Reel tines too aggressive	Reduce cam setting	3.7.11 Reel Tine Pitch, page 127
Wrapping on reel end	Reel too low	Raise reel	3.7.9 Reel Height, page 109
Wrapping on reel end	Reel speed too fast	Reduce reel speed	3.7.5 Reel Speed, page 102
Wrapping on reel end	Crop conditions	Install optional endshields	See your MacDon dealer
Wrapping on reel end	Reel not centered in header	Center reel in header	5.13.3 Centering the Reel, page 499
Reel releases crop too quickly	Reel tines not aggressive enough	Increase cam setting	3.7.11 Reel Tine Pitch, page 127
Reel releases crop too quickly	Reel too far forward	Move reel back	3.7.10 Reel Fore-Aft Position, page 114
Reel will not lift	Reel lift couplers are incompatible or defective	Change quick coupler	See your MacDon Dealer
Reel will not turn	Quick couplers not properly connected	Connect couplers	Refer to the combine operator's manual.
Reel will not turn	Reel drive chain disconnected or broken	Connect/replace chain	<ul style="list-style-type: none"> 5.14.6 Replacing Drive Chain on Double Reel, page 532 5.14.7 Replacing Drive Chain on Single Reel, page 534

TROUBLESHOOTING

Symptom	Problem	Solution	Refer to
Reel motion uneven under no load	Excessive slack in reel drive chain	Tighten chain	<i>Tightening Reel Drive Chain, page 525</i>
Reel motion is uneven or stalls in heavy crops	Reel speed too fast	Reduce reel speed	<i>3.7.5 Reel Speed, page 102</i>
Reel motion is uneven or stalls in heavy crops	Reel fingers not aggressive enough	Move to a more aggressive finger pitch notch	<i>3.7.11 Reel Tine Pitch, page 127</i>
Reel motion is uneven or stalls in heavy crops	Reel too low	Raise reel	<i>3.7.9 Reel Height, page 109</i>
Reel motion is uneven or stalls in heavy crops	Relief valve on combine (not on combine float module) has low relief pressure setting	Increase relief pressure to manufacturer's recommendations	Refer to the combine operator's manual.
Reel motion is uneven or stalls in heavy crops	Low oil reservoir level on combine NOTE: Sometimes there is more than one reservoir	Fill to proper level	Refer to the combine operator's manual.
Reel motion is uneven or stalls in heavy crops	Relief valve malfunction	Replace relief valve	Refer to the combine operator's manual.
Reel motion is uneven or stalls in heavy crops	Cutting tough crops with standard torque (19-tooth) reel drive sprocket	Replace with high torque (10-tooth or 14-tooth) reel drive sprocket	<i>5.14.3 Reel Drive Sprocket, page 526</i>
Plastic fingers cut at tip	Insufficient reel to cutterbar clearance	Increase clearance	<i>5.13.1 Reel Clearance to Cutterbar, page 494</i>
Plastic fingers bent rearward at tip	Reel digging into ground with reel speed slower than ground speed	Raise header	<ul style="list-style-type: none"> <i>Cutting off the Ground, page 81</i> <i>Cutting on the Ground, page 85</i>
Plastic fingers bent rearward at tip	Reel digging into ground with reel speed slower than ground speed	Decrease header tilt	<i>3.7.4 Header Angle, page 94</i>
Plastic fingers bent rearward at tip	Reel digging into ground with reel speed slower than ground speed	Move reel aft	<i>3.7.10 Reel Fore-Aft Position, page 114</i>
Plastic fingers bent forward at tip	Reel digging into ground with reel speed faster than ground speed	Raise header	<ul style="list-style-type: none"> <i>Cutting off the Ground, page 81</i> <i>Cutting on the Ground, page 85</i>
Plastic fingers bent forward at tip	Reel digging into ground with reel speed faster than ground speed	Decrease header tilt	<i>3.7.4 Header Angle, page 94</i>

TROUBLESHOOTING

Symptom	Problem	Solution	Refer to
Plastic fingers bent forward at tip	Reel digging into ground with reel speed faster than ground speed	Move reel aft	<i>3.7.10 Reel Fore-Aft Position, page 114</i>
Plastic fingers bent close to tine tube	Excessive plugging at cutterbar with wads of crop accumulating at cutterbar while maintaining reel operation	Correct plugging/cutting issues	<i>3.10 Unplugging the Cutterbar, page 290</i>
Plastic fingers bent close to tine tube	Excessive plugging at cutterbar with wads of crop accumulating at cutterbar while maintaining reel operation	Stop reel before plugging becomes excessive	<i>3.10 Unplugging the Cutterbar, page 290</i>

7.4 Header and Drapers

Symptom	Problem	Solution	Refer to
Header lift insufficient	Low relief pressure	Increase relief pressure	See your MacDon Dealer
Insufficient side draper speed	Speed control set too low	Increase speed control setting	3.7.7 Draper Speed, page 104
Insufficient side draper speed	Combine header drive too slow	Adjust to correct speed for model	Refer to the combine operator's manual
Insufficient feed draper speed	Relief pressure too low	Test side draper hydraulic system	See your MacDon Dealer
Insufficient feed draper speed	Combine header drive too slow	Adjust to correct speed for model	Refer to the combine operator's manual
Feed draper will not move	Drapers are loose	Tighten drapers	5.10.2 Adjusting Feed Draper Tension, page 459
Feed draper will not move	Drive or idler roller wrapped with material	Loosen draper and clean rollers	5.10.2 Adjusting Feed Draper Tension, page 459
Feed draper will not move	Slat or connector bar jammed by frame or material	Loosen draper and clear obstruction	5.10.2 Adjusting Feed Draper Tension, page 459
Feed draper will not move	Roller bearing seized	Replace roller bearing	5.12.6 Header Draper Roller Maintenance, page 484
Feed draper will not move	Low hydraulic oil	Fill combine hydraulic oil reservoir to full level	Refer to the combine operator's manual
Draper stalling	Material not feeding evenly off knife	Lower reel	3.7.9 Reel Height, page 109
Draper stalling	Material not feeding evenly off knife	Install stub guards	<ul style="list-style-type: none"> 5.8.7 Knife Guards, page 422 6.3.5 Stub Guard Conversion Kit, page 546 See your MacDon Dealer
Hesitation in flow of bulky crop	Header angle too low	Increase header angle	3.7.4 Header Angle, page 94
Hesitation in flow of bulky crop	Material overload on drapers	Increase side draper speed	3.7.7 Draper Speed, page 104
Hesitation in flow of bulky crop	Material overload on drapers	Install upper cross auger	Refer to 6.5.8 Upper Cross Auger (UCA), page 554
Hesitation in flow of bulky crop	Material overload on drapers	Add flighting extensions	See your MacDon Dealer
Drapers back-feed	Drapers running too slow in heavy crop	Increase draper speed	3.7.7 Draper Speed, page 104

TROUBLESHOOTING

Symptom	Problem	Solution	Refer to
Crop is thrown across opening and under opposite side draper	Drapers running too fast in light crop	Reduce draper speed	<i>3.7.7 Draper Speed, page 104</i>
Material accumulates inside or under front edge of draper	Deck height improperly adjusted	Adjust deck height	<i>5.12.5 Adjusting Deck Height, page 482</i>
Material accumulating on end deflectors and releasing in bunches	End deflectors too wide	For headers with manual deck shift only, trim deflector or replace with narrow deflector (MD #172381)	<i>3.10 Unplugging the Cutterbar, page 290</i>

8 Reference

8.1 Torque Specifications

The following tables provide correct torque values for various bolts, cap screws, and hydraulic fittings.

- Tighten all bolts to torque values specified in charts (unless otherwise noted throughout this manual).
- Replace hardware with same strength and grade of bolt.
- Use torque value tables as a guide and periodically check tightness of bolts.
- Understand torque categories for bolts and cap screws by using their identifying head markings.

Jam nuts

When applying torque to finished jam nuts, multiply the torque applied to regular nuts by $f=0.65$.

Self-tapping screws

Standard torque is to be used (not to be used on critical or structurally important joints).

8.1.1 Metric Bolt Specifications

Table 8.1 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
	Min.	Max.	Min.	Max.
3-0.5	1.4	1.6	*13	*14
3.5-0.6	2.2	2.5	*20	*22
4-0.7	3.3	3.7	*29	*32
5-0.8	6.7	7.4	*59	*66
6-1.0	11.4	12.6	*101	*112
8-1.25	28	30	20	23
10-1.5	55	60	40	45
12-1.75	95	105	70	78
14-2.0	152	168	113	124
16-2.0	236	261	175	193
20-2.5	460	509	341	377
24-3.0	796	879	589	651

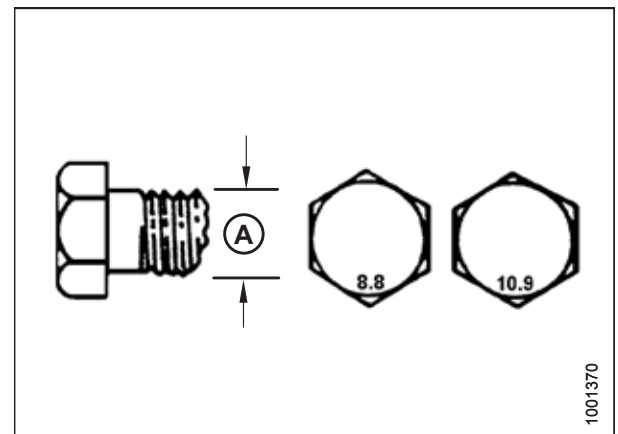


Figure 8.1: Bolt Grades

REFERENCE

Table 8.2 Metric Class 8.8 Bolts and Class 9 Distorted Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
	Min.	Max.	Min.	Max.
3-0.5	1	1.1	*9	*10
3.5-0.6	1.5	1.7	*14	*15
4-0.7	2.3	2.5	*20	*22
5-0.8	4.5	5	*40	*45
6-1.0	7.7	8.6	*69	*76
8-1.25	18.8	20.8	*167	*185
10-1.5	37	41	28	30
12-1.75	65	72	48	53
14-2.0	104	115	77	85
16-2.0	161	178	119	132
20-2.5	314	347	233	257
24-3.0	543	600	402	444

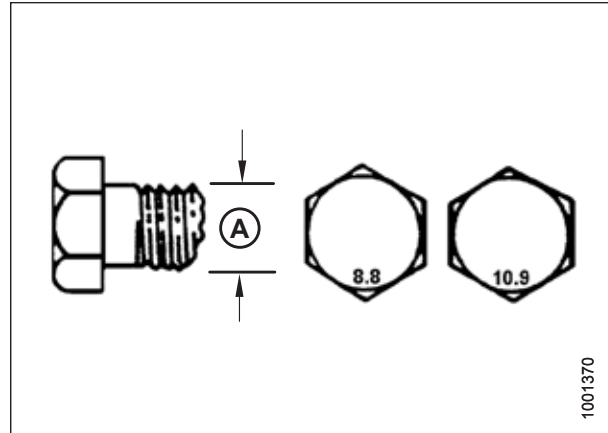


Figure 8.2: Bolt Grades

Table 8.3 Metric Class 10.9 Bolts and Class 10 Free Spinning Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
	Min.	Max.	Min.	Max.
3-0.5	1.8	2	*18	*19
3.5-0.6	2.8	3.1	*27	*30
4-0.7	4.2	4.6	*41	*45
5-0.8	8.4	9.3	*82	*91
6-1.0	14.3	15.8	*140	*154
8-1.25	38	42	28	31
10-1.5	75	83	56	62
12-1.75	132	145	97	108
14-2.0	210	232	156	172
16-2.0	326	360	242	267
20-2.5	637	704	472	521
24-3.0	1101	1217	815	901

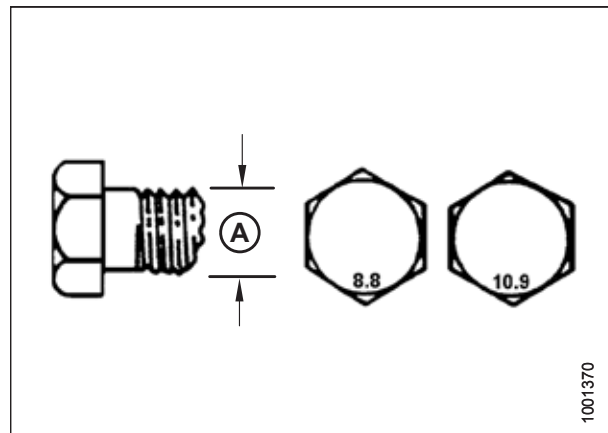


Figure 8.3: Bolt Grades

REFERENCE

Table 8.4 Metric Class 10.9 Bolts and Class 10 Distorted Thread Nut

Nominal Size (A)	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
	Min.	Max.	Min.	Max.
3-0.5	1.3	1.5	*12	*13
3.5-0.6	2.1	2.3	*19	*21
4-0.7	3.1	3.4	*28	*31
5-0.8	6.3	7	*56	*62
6-1.0	10.7	11.8	*95	*105
8-1.25	26	29	19	21
10-1.5	51	57	38	42
12-1.75	90	99	66	73
14-2.0	143	158	106	117
16-2.0	222	246	165	182
20-2.5	434	480	322	356
24-3.0	750	829	556	614

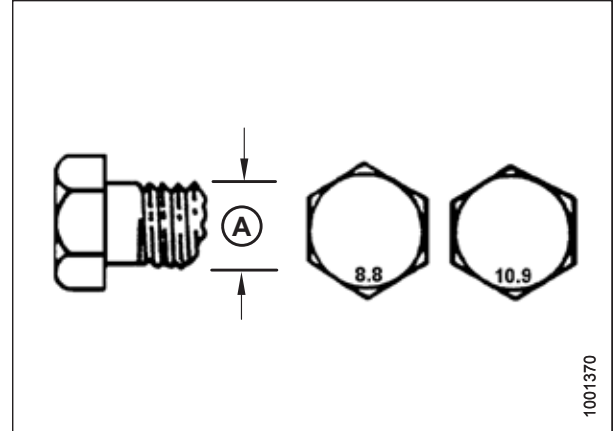


Figure 8.4: Bolt Grades

8.1.2 Metric Bolt Specifications Bolting into Cast Aluminum

Table 8.5 Metric Bolt Bolting into Cast Aluminum

Nominal Size (A)	Bolt Torque			
	8.8 (Cast Aluminum)		10.9 (Cast Aluminum)	
	Nm	lbf·ft	Nm	lbf·ft
M3	—	—	—	1
M4	—	—	4	2.6
M5	—	—	8	5.5
M6	9	6	12	9
M8	20	14	28	20
M10	40	28	55	40
M12	70	52	100	73
M14	—	—	—	—
M16	—	—	—	—

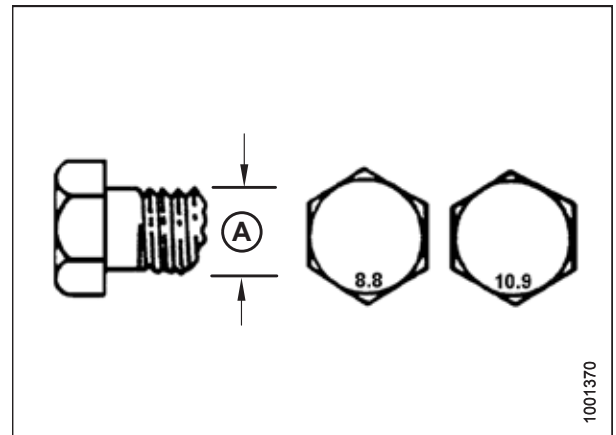


Figure 8.5: Bolt Grades

8.1.3 Flare-Type Hydraulic Fittings

1. Check flare (A) and flare seat (B) for defects that might cause leakage.
2. Align tube (C) with fitting (D) and thread nut (E) onto fitting without lubrication until contact has been made between flared surfaces.
3. Torque fitting nut (E) to specified number of flats from finger tight (FFFT) or to a given torque value in Table 8.6, page 572.
4. Use two wrenches to prevent fitting (D) from rotating. Place one wrench on fitting body (D), and tighten nut (E) with other wrench to torque shown.
5. Assess final condition of connection.

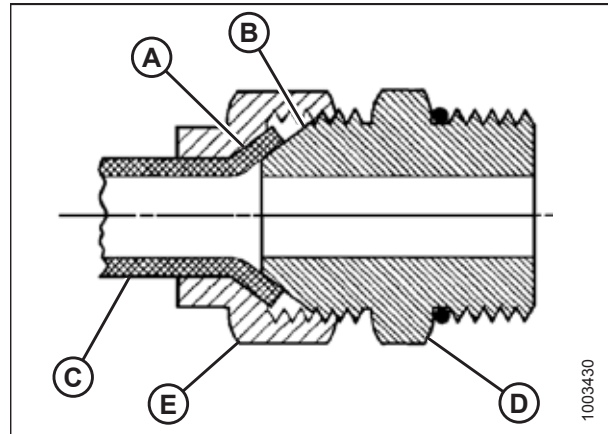


Figure 8.6: Hydraulic Fitting

Table 8.6 Flare-Type Hydraulic Tube Fittings

SAE Dash Size	Thread Size (in.)	Torque Value ⁶⁵		Flats from Finger Tight (FFFT)	
		Nm	lbf·ft	Tube	Swivel Nut or Hose
-2	5/16–24	4–5	3–4	—	—
-3	3/8–24	7–8	5–6	—	—
-4	7/16–20	18–19	13–14	2-1/2	2
-5	1/2–20	19–21	14–15	2	2
-6	9/16–18	30–33	22–24	2	1-1/2
-8	3/4–16	57–63	42–46	2	1-1/2
-10	7/8–14	81–89	60–66	1-1/2	1-1/2
-12	1-1/16–12	113–124	83–91	1-1/2	1-1/4
-14	1-3/16–12	136–149	100–110	1-1/2	1-1/4
-16	1-5/16–12	160–176	118–130	1-1/2	1
-20	1-5/8–12	228–250	168–184	1	1
-24	1-7/8–12	264–291	195–215	1	1
-32	2-1/2–12	359–395	265–291	1	1
-40	3–12	—	—	1	1

65. Torque values shown are based on lubricated connections as in reassembly.

8.1.4 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Back off lock nut (C) as far as possible. Ensure that washer (D) is loose and is pushed toward lock nut (C) as far as possible.
3. Check that O-ring (A) is **NOT** on threads and adjust if necessary.
4. Apply hydraulic system oil to O-ring (A).

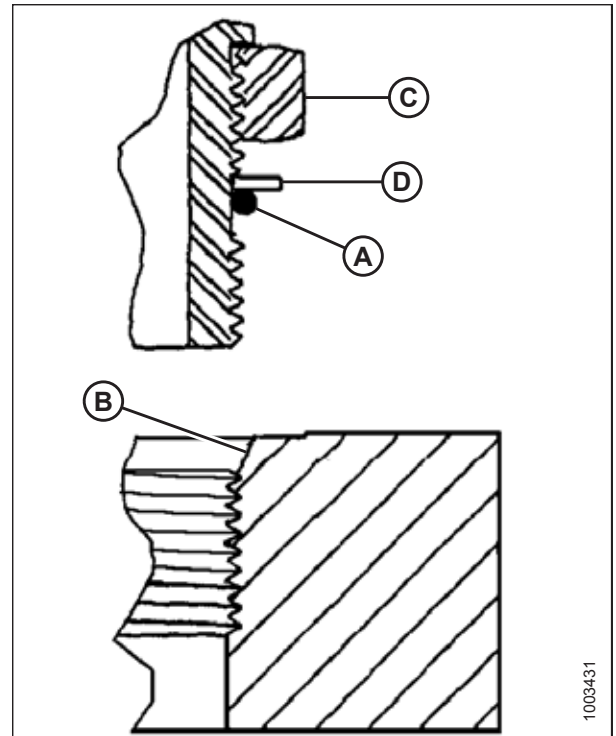


Figure 8.7: Hydraulic Fitting

5. Install fitting (B) into port until back up washer (D) and O-ring (A) contact part face (E).
6. Position angle fittings by unscrewing no more than one turn.
7. Turn lock nut (C) down to washer (D) and tighten to torque shown. Use two wrenches, one on fitting (B) and other on lock nut (C).
8. Check final condition of fitting.

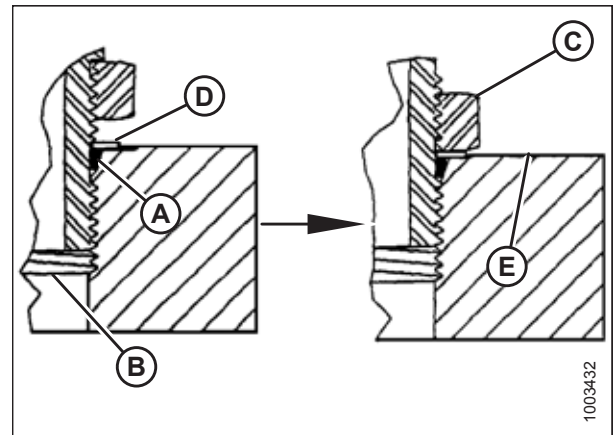


Figure 8.8: Hydraulic Fitting

REFERENCE

Table 8.7 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ⁶⁶	
		Nm	lbf·ft (*lbf·in)
-2	5/16–24	6–7	*53–62
-3	3/8–24	12–13	*106–115
-4	7/16–20	19–21	14–15
-5	1/2–20	21–33	15–24
-6	9/16–18	26–29	19–21
-8	3/4–16	46–50	34–37
-10	7/8–14	75–82	55–60
-12	1-1/16–12	120–132	88–97
-14	1-3/8–12	153–168	113–124
-16	1-5/16–12	176–193	130–142
-20	1-5/8–12	221–243	163–179
-24	1-7/8–12	270–298	199–220
-32	2-1/2–12	332–365	245–269

66. Torque values shown are based on lubricated connections as in reassembly.

8.1.5 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Check that O-ring (A) is **NOT** on threads and adjust if necessary.
3. Apply hydraulic system oil to O-ring.
4. Install fitting (C) into port until fitting is hand-tight.
5. Torque fitting (C) according to values in Table 8.8, [page 575](#).
6. Check final condition of fitting.

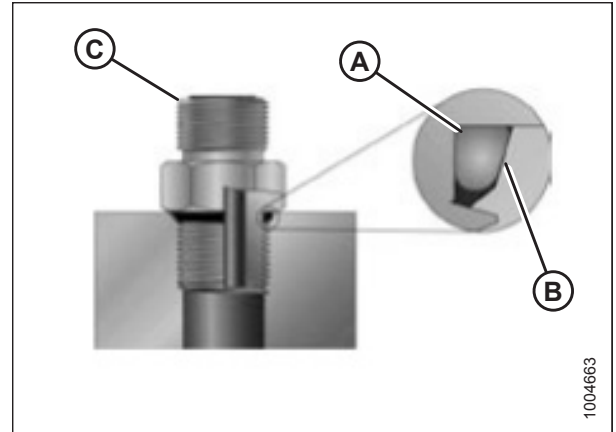


Figure 8.9: Hydraulic Fitting

Table 8.8 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ⁶⁷	
		Nm	lbf·ft (*lbf·in)
-2	5/16–24	6–7	*53–62
-3	3/8–24	12–13	*106–115
-4	7/16–20	19–21	14–15
-5	1/2–20	21–33	15–24
-6	9/16–18	26–29	19–21
-8	3/4–16	46–50	34–37
-10	7/8–14	75–82	55–60
-12	1-1/16–12	120–132	88–97
-14	1-3/8–12	153–168	113–124
-16	1-5/16–12	176–193	130–142
-20	1-5/8–12	221–243	163–179
-24	1-7/8–12	270–298	199–220
-32	2-1/2–12	332–365	245–269

67. Torque values shown are based on lubricated connections as in reassembly.

8.1.6 O-Ring Face Seal (ORFS) Hydraulic Fittings

1. Check components to ensure that sealing surfaces and fitting threads are free of burrs, nicks, scratches, or any foreign material.



Figure 8.10: Hydraulic Fitting

2. Apply hydraulic system oil to O-ring (B).
3. Align tube or hose assembly so that flat face of sleeve (A) or (C) comes in full contact with O-ring (B).
4. Thread tube or hose nut (D) until hand-tight. The nut should turn freely until it is bottomed out.
5. Torque fittings according to values in Table 8.9, page 576.

NOTE:

If applicable, hold hex on fitting body (E) to prevent rotation of fitting body and hose when tightening fitting nut (D).

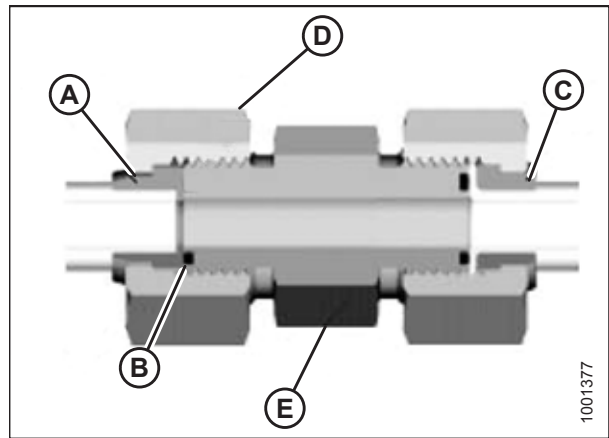


Figure 8.11: Hydraulic Fitting

6. Use three wrenches when assembling unions or joining two hoses together.
7. Check final condition of fitting.

Table 8.9 O-Ring Face Seal (ORFS) Hydraulic Fittings

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ⁶⁸	
			Nm	lbf·ft
-3	Note ⁶⁹	3/16	—	—
-4	9/16	1/4	25–28	18–21
-5	Note ⁶⁹	5/16	—	—
-6	11/16	3/8	40–44	29–32
-8	13/16	1/2	55–61	41–45
-10	1	5/8	80–88	59–65
-12	1-3/16	3/4	115–127	85–94

68. Torque values and angles shown are based on lubricated connection as in reassembly.

69. O-ring face seal type end not defined for this tube size.

REFERENCE

Table 8.9 O-Ring Face Seal (ORFS) Hydraulic Fittings (continued)

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ⁷⁰	
			Nm	lbf·ft
-14	Note ⁶⁹	7/8	—	—
-16	1-7/16	1	150–165	111–122
-20	1-11/16	1-1/4	205–226	151–167
-24	1–2	1-1/2	315–347	232–256
-32	2-1/2	2	510–561	376–414

8.1.7 Tapered Pipe Thread Fittings

Assemble pipe fittings as follows:

1. Check components to ensure that fitting and port threads are free of burrs, nicks and scratches, or any form of contamination.
2. Apply pipe thread sealant (paste type) to external pipe threads.
3. Thread fitting into port until hand-tight.
4. Torque connector to appropriate torque angle. The Turns From Finger Tight (T.F.F.T.) values are shown in Table 8.10, page 577. Make sure that tube end of a shaped connector (typically 45° or 90°) is aligned to receive incoming tube or hose assembly. Always finish alignment of fitting in tightening direction. Never back off (loosen) pipe threaded connectors to achieve alignment.
5. Clean all residue and any excess thread conditioner with appropriate cleaner.
6. Assess final condition of fitting. Pay special attention to possibility of cracks to port opening.
7. Mark final position of fitting. If a fitting leaks, disassemble fitting and check for damage.

NOTE:

Overtorque failure of fittings may not be evident until fittings are disassembled.

Table 8.10 Hydraulic Fitting Pipe Thread

Tapered Pipe Thread Size	Recommended T.F.F.T.	Recommended F.F.F.T.
1/8–27	2–3	12–18
1/4–18	2–3	12–18
3/8–18	2–3	12–18
1/2–14	2–3	12–18
3/4–14	1.5–2.5	12–18
1–11 1/2	1.5–2.5	9–15
1 1/4–11 1/2	1.5–2.5	9–15
1 1/2–11 1/2	1.5–2.5	9–15
2–11 1/2	1.5–2.5	9–15

70. Torque values and angles shown are based on lubricated connection as in reassembly.

8.2 Conversion Chart

Table 8.11 Conversion Chart

Quantity	SI Units (Metric)		Factor	US Customary Units (Standard)	
	Unit Name	Abbreviation		Unit Name	Abbreviation
Area	hectare	ha	$\times 2.4710 =$	acre	acres
Flow	liters per minute	L/min	$\times 0.2642 =$	US gallons per minute	gpm
Force	Newton	N	$\times 0.2248 =$	pound force	lbf
Length	millimeter	mm	$\times 0.0394 =$	inch	in.
Length	meter	m	$\times 3.2808 =$	foot	ft.
Power	kilowatt	kW	$\times 1.341 =$	horsepower	hp
Pressure	kilopascal	kPa	$\times 0.145 =$	pounds per square inch	psi
Pressure	megapascal	MPa	$\times 145.038 =$	pounds per square inch	psi
Pressure	bar (Non-SI)	bar	$\times 14.5038 =$	pounds per square inch	psi
Torque	Newton meter	Nm	$\times 0.7376 =$	pound feet or foot pounds	lbf·ft
Torque	Newton meter	Nm	$\times 8.8507 =$	pound inches or inch pounds	lbf·in
Temperature	degrees Celsius	°C	$(^{\circ}\text{C} \times 1.8) + 32 =$	degrees Fahrenheit	°F
Velocity	meters per minute	m/min	$\times 3.2808 =$	feet per minute	ft/min
Velocity	meters per second	m/s	$\times 3.2808 =$	feet per second	ft/s
Velocity	kilometers per hour	km/h	$\times 0.6214 =$	miles per hour	mph
Volume	liter	L	$\times 0.2642 =$	US gallon	US gal
Volume	milliliter	ml	$\times 0.0338 =$	ounce	oz.
Volume	cubic centimeter	cm ³ or cc	$\times 0.061 =$	cubic inch	in. ³
Weight	kilogram	kg	$\times 2.2046 =$	pound	lb.

8.3 Unloading and Assembly

Refer to the instructions for your specific header for unloading, assembly, and setup procedures that are included with your shipment.

Shipping Destination	Header Description	MacDon Instruction Part Number
North America	D1 Series Draper Header and FM100 Combine Float Module	MD #214410
Export (anywhere other than North America)	D1 Series Draper Header and FM100 Combine Float Module	MD #214411

Index

A

- AGCO combines
 - attaching header to combine 320
 - replacing reel speed sensors 534
- AHHC
 - definitions 21
 - See also auto header height control
- API
 - definitions 21
- APT
 - definitions 21
- ASTM
 - definitions 21
- augers 401
 - auger dent repair kit 554
 - auger position 137
 - auger to pan clearance 401
 - drive chains 404
 - See also chains
 - adjusting chain tension 405
 - checking chain tension 404
 - installing 408
 - lubricating 385
 - removing 405
- feed auger configurations 59
 - converting from
 - medium to narrow 66
 - medium to ultra narrow 74
 - medium to wide 69
 - narrow to medium 61
 - narrow to ultra narrow 78
 - narrow to wide 71
 - ultra narrow to medium 61
 - ultra narrow to narrow 68
 - ultra narrow to wide 71
 - wide to medium 64
 - wide to narrow 66
 - wide to ultra narrow 74
 - modifying wide configuration 73
- fingers 410
 - installing 412
 - removing 410
 - replacing auger finger guides 415
- flighting 311, 416
 - optional FM100 feed auger flighting 551
- tension springs
 - checking and adjusting 55
- tines, See fingers
- auto header height control (AHHC), See specific combine section
 - Case IH 2300 combines
 - calibrating
 - maximum stubble height 268
 - how AHHC works 139
 - sensor operation 140
 - sensor output voltage
 - checking voltage range manually 142
 - combine output voltage requirements 141
 - Case IH 2500 combines
 - calibrating
 - maximum stubble height 268
 - how AHHC works 139
 - sensor operation 140
 - sensor output voltage
 - checking voltage range manually 142
 - combine output voltage requirements 141
 - Case IH 5088/6088/7088 combines 150
 - adjusting
 - sensitivity 151
 - calibrating
 - AHHC 150
 - maximum stubble height 268
 - how AHHC works 139
 - sensor operation 140
 - sensor output voltage
 - checking voltage range manually 142
 - combine output voltage requirements 141
 - Case IH 5130/6130/7130 combines 153
 - adjusting
 - preset cutting height 157
 - calibrating
 - AHHC 157
 - maximum stubble height 268
 - checking voltage range manually 142
 - how AHHC works 139
 - sensor operation 140
 - sensor output voltage 142
 - checking voltage range from the cab 154
 - combine output voltage requirements 141
 - setting up header on combine display 153
 - Case IH 5140/6140/7140 combines 153
 - adjusting
 - preset cutting height 157
 - sensor output voltage
 - checking voltage range from the cab 154
 - setting up header on combine display 153
 - Case IH 7010 combines 160
 - adjusting
 - preset cutting height 173
 - calibrating
 - AHHC 166
 - maximum stubble height 268

INDEX

how AHHC works	139	calibrating the AHHC	169
sensor operation.....	140	Challenger 6 series combines	174
sensor output voltage		adjusting	
checking voltage range from the cab	164	header height.....	179
checking voltage range manually	142	raise/lower rate	179
combine output voltage requirements.....	141	sensitivity.....	180
Case IH 7120/8120/9120 combines.....	160	calibrating	
adjusting		AHHC.....	177
preset cutting height	173	maximum stubble height	268
calibrating		engaging AHHC	176
AHHC.....	166	how AHHC works	139
maximum stubble height	268	sensor operation.....	140
how AHHC works	139	sensor output voltage	
sensor operation.....	140	checking voltage range from the cab	174
sensor output voltage		checking voltage range manually	142
checking voltage range from the cab	164	combine output voltage requirements.....	141
checking voltage range manually	142	Challenger 7 series combines	174
combine output voltage requirements.....	141	calibrating	
Case IH 7230/8230/9230 combines.....	160	maximum stubble height	268
adjusting		how AHHC works	139
preset cutting height	173	sensor operation.....	140
calibrating		sensor output voltage	
AHHC.....	166	checking voltage range from the cab	174
maximum stubble height	268	checking voltage range manually	142
how AHHC works	139	combine output voltage requirements.....	141
sensor operation.....	140	CLAAS 500 series combines.....	247
sensor output voltage		adjusting	
checking voltage range from the cab	164	auto reel speed	254
checking voltage range manually	142	cutting height	249
combine output voltage requirements.....	141	cutting height manually	251
Case IH 7240/8240/9240 combines		preset cutting height	249
adjusting		sensitivity.....	251
preset cutting height	173	calibrating	
calibrating		AHHC.....	247
AHHC.....	166	maximum stubble height	268
sensor output voltage		how AHHC works	139
checking voltage range from the cab	164	sensor operation.....	140
Case IH 8010 combines	160	sensor output voltage	
adjusting		checking voltage range manually	142
preset cutting height	173	CLAAS 600 series combines.....	257
calibrating		adjusting	
AHHC.....	166	auto reel speed	262
maximum stubble height	268	cutting height	260
header controls		sensitivity.....	260
setting without a shift button on GSL	163	calibrating	
how AHHC works	139	AHHC.....	257
sensor operation.....	140	CLAAS 700 series combines.....	257
sensor output voltage		adjusting	
checking voltage range from the cab	164	auto reel speed	262
checking voltage range manually	142, 160	cutting height	260
combine output voltage requirements.....	141	sensitivity.....	260
Case IH combines		calibrating	
checking reel height sensor voltage.....	171	AHHC.....	257
Case IH combines with version 28.00 software		maximum stubble height	268

INDEX

how AHHC works	139	sensor output voltage	
sensor operation.....	140	checking voltage range manually	142
sensor output voltage		combine output voltage requirements.....	141
checking voltage range manually	142	John Deere 60 series combines	205
Gleaner R62/R72 series combines		adjusting	
calibrating		drop rate valve threshold.....	212
maximum stubble height	268	sensing grain header height	210
combine output voltage requirements	141	sensitivity.....	211
how AHHC works	139	calibrating	
sensor operation.....	140	AHHC.....	208
sensor output voltage		maximum stubble height	268
checking voltage range manually	142	how AHHC works	139
Gleaner R65/R66/R75/R76 series combines		sensor operation.....	140
sensor output voltage		sensor output voltage	
checking voltage range from the cab	181	checking voltage range from the cab	205
Gleaner R65/R75 series combines	181	checking voltage range manually	142
adjusting		combine output voltage requirements.....	141
ground pressure	187	turning the accumulator off	209
raise/lower rate	187	John Deere 70 series combines	213
sensitivity.....	188	adjusting	
calibrating		raise/lower rate manually	219
AHHC.....	185	sensitivity.....	218
maximum stubble height	268	calibrating	
engaging AHHC	183	AHHC.....	216
how AHHC works	139	feeder house speed.....	216
sensor operation.....	140	maximum stubble height	268
sensor output voltage		how AHHC works	139
checking voltage range manually	142	sensor operation.....	140
combine output voltage requirements.....	141	sensor output voltage	
troubleshooting alarms and faults.....	189	checking voltage range from the cab	213
turning the accumulator off	186	checking voltage range manually	142
Gleaner S series combines	181	combine output voltage requirements.....	141
Gleaner S series combines (pre-2016)		John Deere S series combines.....	220
adjusting		adjusting	
ground pressure	187	preset cutting height	226
raise/lower rate	187	raise/lower rate manually	225
sensitivity.....	188	sensitivity.....	224
calibrating		calibrating	
AHHC.....	185	AHHC.....	222
engaging AHHC	183	feeder house fore-aft tilt	229
sensor output voltage		maximum stubble height	268
checking voltage range from the cab	181	reel height.....	234
troubleshooting alarms and faults.....	189	checking reel height sensor voltage.....	231
turning the accumulator off	186	how AHHC works	139
Gleaner S9 series combines	191	sensor operation.....	140
calibrating the header.....	199	sensor output voltage	
operating.....	203	checking voltage range from the cab	220
refining header group settings.....	204	checking voltage range manually	142
setting automatic header controls.....	197	combine output voltage requirements.....	141
setting reel settings.....	196	John Deere S7 series combines	236
setting up the header	191	calibrating	
John Deere 50 series combines		feeder house.....	242
calibrating		header.....	245
maximum stubble height	268	sensor output voltage	

INDEX

checking voltage range from cab	240
setting up header	236
John Deere T series combines	220
adjusting	
raise/lower rate manually	225
sensitivity	224
calibrating	
AHC	222
feeder house fore-aft tilt	229
reel height	234
checking reel height sensor voltage	231
sensor output voltage	
checking voltage range from the cab	220
combine output voltage requirements	141
New Holland 2015 CR series combines	273
calibrating AHC	279
engaging AHC	275
sensor output voltage	
checking voltage range from the cab	273
setting preset cutting height	282
New Holland combines	
10 V adapter (MD #B6421)	141
checking reel height sensor voltage	281
New Holland CR series combines	
setting maximum work height	284
New Holland CR/CX series combines	263
adjusting	
header lower rate	270
header raise rate	269
preset cutting height	271
sensitivity	271
calibrating	
AHC	267
maximum stubble height	268
configuring	
header tilt	286
header type	286
reel fore-aft	286
engaging AHC	266
how AHC works	139
sensor operation	140
sensor output voltage	
checking voltage range from the cab	263
checking voltage range manually	142
combine output voltage requirements	141
sensor	
replacing	149
sensor output voltage	
adjusting voltage limits	
one sensor system	146
two sensor system	147
axle bolts	539

B

bearings	
feed draper	
drive roller bearing	
installing	465
removing	463
replacing	463
idler roller bearing	
replacing	467
header draper	
inspecting draper roller bearing	484
replacing drive roller bearing	489
idler roller bearings	
replacing	486
knifehead bearings	
installing	420
removing	419
belts	
adjusting belt tracking	454
knife drive belts	440
non-timed	440
installing	442
removing	441
tensioning	444
tensioning timed knife drive belts	449
timed V-belts	
installing	445
removing	445
timed, double knife	445
installing	447
removing	446
bolts	
definitions	21
break-in inspections	370
break-in periods	40
bulbs	
replacing light bulbs	393

C

cams	
adjusting reel cam	130
Case IH combines	
attaching combine to header	312
auger configurations	59, 61
detaching combine from header	317
center-links	21
definitions	21
centering the reel	
double reel	499
single reel	500
CGVW	
definitions	21

INDEX

chains		FM100 float module	29
auger drive chain		conversion chart.....	578
adjusting chain tension.....	405	CR feeder deflectors.....	351
checking auger drive chain tension	404	crop delivery	
installing	408	options	551
lubricating	385	crop divider rods.....	135
removing.....	405	installing.....	136
gearbox drive chain		removing	135
adjusting chain tension.....	400	crop dividers	130
reel drive chain		installing on header with latch option	132
adjusting chain tension.....	524	installing on header without latch option	133
loosening	524	removing from header with latch option.....	130
replacing on double-reel drive	532	removing from header without latch option	131
replacing on single-reel drive	534	cutterbars	
tightening	525	options	545
Challenger combines		extended center filler.....	545
attaching header to combine	320	knifehead shield	545
auger configurations.....	59, 61	wearplates	545
detaching combine from header	325	unplugging	290
replacing reel speed sensors	534	cutting	
CLAAS combines		height.....	81
attaching combine to header	335	off the ground	81
auger configurations.....	59, 61	adjusting stabilizer wheels	84
detaching combine from header	340	adjusting stabilizer/slow speed transport	
reel speed sensors		wheels	82
replacing on CLAAS 400	536	on the ground	85
replacing on CLAAS 500/700.....	537		
combines		D	
attaching header to combine		daily start-up checks.....	39
AGCO.....	320	definition of terms	21
Case IH	312	divider latch kits.....	548
Challenger	320	divider rods	135
CLAAS	335	installing.....	136
Gleaner.....	320	removing	135
John Deere	328	DK	
Massey Ferguson	320	definitions.....	21
New Holland.....	343	double reels	
New Holland CR/CX	343	centering the reel	499
attaching/detaching float module	353	DR	
attaching/detaching header.....	311	definitions.....	21
detaching combine from header		draper decks	
Case IH	317	adjusting deck height.....	482
Challenger	325	drive rollers.....	487
CLAAS	340	idler rollers.....	484
Gleaner.....	325	draper deflectors	491–492
John Deere	332	narrow.....	552
Massey Ferguson	325	replacing	491
New Holland CR/CX	347	wide	553
transporting header	294	draper drive systems	
on combine	294	header draper	
towing the header	295	adjusting draper speed.....	105
attaching to towing vehicle	295	adjusting draper tension	478
component identification	28		
D1 Series Combine Header	28		

INDEX

adjusting draper tracking	480
maintaining draper rollers	484
draper roller bearings	
inspecting	484
drapers	
adjusting	
draper tension	478
draper tracking	480
draper rollers	
maintaining	484
drive roller	
draper deck drive roller	487
float module	457
adjusting draper tension	459
replacing feed draper	457
idler rollers	
draper deck idler roller	484
installing	487
side draper decks	
drive rollers	
installing	490
removing	487
idler rollers	
removing	484
side drapers	
installing	476
removing	475
speed	104
drive roller bearings	
feed draper drive roller	
installing	465
removing	463
replacing	463
replacing drive roller bearing	489
drive rollers	
draper deck drive roller	487
feed draper drive roller	460
installing	462
removing	460
drivelines	
adjusting tension on gearbox drive chain	400
driveline guards	
installing	398
removing	396
installing driveline	395
removing driveline	394
drives	
header drive	394

E

electrical system	
light bulbs	

replacing	393
maintaining electrical system	393
sensors	
ahhc sensors	140
reel height sensor	
replacing	111
reel speed sensor	
replacing on AGCO	534
replacing on CLAAS 400	536
replacing on CLAAS 500/700	537
replacing on John Deere	536
endshields	35
checking and adjusting	38
closing	36
installing	37
opening	35
removing	37

F

feed auger configurations	59
feed deck pan	
lowering feed deck pan	469
raising feed deck pan	470
feed deflectors	351
float module	472
installing on New Holland CR combines	473
feed drapers	457
adjusting draper tension	459
adjusting speed	106
drive roller bearing	
installing	465
removing	463
replacing	463
drive rollers	460
installing feed draper drive roller	462
removing feed draper drive roller	460
idler roller	466
installing	468
removing	466
idler roller bearing	
replacing	467
replacing feed draper	457
FFFT	
definitions	21
finger tight	
definitions	21
fingers	
auger fingers	410
installing	412
removing	410
replacing auger finger guides	415
plastic reel fingers	

INDEX

installing	503	FM100 float modules	
removing	502	component identification	29
steel reel fingers		frown	
installing	501	adjusting reel frown	498
removing	500		
flighting	311, 416	G	
installing	293	gearboxes	
removing	292	adjusting drive chain tension	400
float	87	header drive	
header float		adding oil	387
checking and adjusting	87	changing oil	387
header float locks	93	checking oil level	386
float module	541	lubricating	386
float modules		Gleaner combines	
attaching float module to header	353	attaching header to combine	320
attaching/detaching	353	auger configurations	59, 61
augers	401	detaching combine from header	325
auger fingers	410	replacing reel speed sensors	534
installing	412	glossary	21
removing	410	greasing	
replacing auger finger guides	415	every 10 hours	372
auger to pan clearance	401	every 100 hours	376
optional FM100 feed auger flighting	551	every 25 hours	373
detaching from combine and header	358	every 250 hours	379
feed auger configurations	59	every 50 hours	374
feed deck pan		every 500 hours	380
lowering	469	greasing procedure	381
raising	470	maintenance schedule/records	367
feed deflectors	351, 472	ground speeds	103
replacing on New Holland CR combines	473	GSL	
feed draper	457	definitions	21
adjusting draper tension	459	guards	422
drive roller	460	See also hold-downs	
installing feed draper drive roller	462	knife guards	422
removing feed draper drive roller	460	adjusting knife guards	422
drive roller bearing		replacing pointed guards	423
installing	465	replacing stub guards	426
removing	463	stub guard conversion kit	546
replacing	463	GVW	
idler roller	466	definitions	21
installing	468		
removing	466	H	
idler roller bearing		header angles	
replacing	467	adjustment range	94
replacing feed draper	457	header draper decks	
flighting	311, 416	installing idler rollers	487
setup	311	replacing drive roller bearing	489
stripper bars	472	header drapers, See drapers	
installing	473	adjusting draper speed	105
kits	311	idler roller bearings	
removing	472	replacing	486
unplugging	291		
FM100 dual AHHC sensor	551		
FM100 feed auger flighting	551		

INDEX

inspecting draper roller bearing	484
maintaining draper rollers	484
header drives	394
driveline guards	
installing	398
removing	396
gearbox drive chain	400
installing driveline	395
removing driveline	394
header safety props	33
headers	
attaching float module	353
attachments	43
checking and adjusting	87
controls	42
definitions	21
detaching from combine and float module	358
float	87
float locks	93
header angle	
adjusting from combine	96
leveling	288
operating variables	58
optimizing for straight combining canola	54
options	548
recommended settings	43
setup	43
storing the header	310
towing the header	295
attaching to towing vehicle	295
transporting header	294
on combine	294
towing the header	295
attaching to towing vehicle	295
unloading and assembly	579
hex keys	
definitions	21
hold-downs	
adjusting hold-downs with pointed guards	428
adjusting hold-downs with stub guards	429
checking hold-downs	427
hoses and lines	
hydraulic	372
hydraulics	
adding reservoir oil	390
changing oil filter	392
changing reservoir oil	391
fittings	
flare-type	572
O-ring boss (ORB) adjustable	573
O-ring boss (ORB) non-adjustable	575
O-ring face seal (ORFS)	576
tapered pipe thread fittings	577
hoses and lines	372

hydraulic safety	6
reservoir	389
checking oil level in reservoir	389

I

idler roller bearings	
feed draper idler roller	
replacing idler roller bearing	467
header draper idler roller	
replacing idler roller bearing	486
idler rollers	
draper deck idler roller	484
installing	487
feed draper idler roller	466
installing	468
removing	466
inspections	
break-in inspections	370
maintenance schedule/records	367
introduction	v

J

John Deere combines	
attaching combine to header	328
auger configurations	59, 61
detaching combine from header	332
replacing reel speed sensors	536

K

knife drive belts, See belts	
knife drive boxes	
changing oil	439
checking box	431
checking mounting bolts	432
installing box	436
installing pulley	436
removing box	433
removing pulley	435
knife drive system	431
knife drives	
adjusting double knife timing	450
belts, See belts	
hold-downs	
adjusting hold-downs with pointed guards	428
adjusting hold-downs with stub guards	429
checking knife hold-downs	427
knife drive belts, See belts	
knife speed	
checking knife speed	108
knife speed values	107

INDEX

knife guards	422
<i>See also</i> hold-downs	
adjusting guards	422
checking guards	422
replacing pointed guards	423
replacing stub guards	426
knifehead bearings	
installing	420
removing	419
knifehead shields	429, 545
installing	430
knives	417
installing knife	420
knife sections	
replacing	417
removing knife	418
spare knife location	421
troubleshooting	560

L

lodged crop reel finger kits	543
lubrication and servicing	372
auger drive chains	385
greasing procedure	381
header drive gearbox	
changing oil	387
checking oil level	386
lubricating gearbox	386
reel drive chain	
double reel	382

M

maintenance and servicing	365
electrical	393
lubrication	372
maintenance specifications	366
preparing for servicing	365
preseason servicing	370
requirements	367
safety	5
schedule	367
service intervals	372
storage	310
maintenance requirements	
servicing	
break-in inspections	370
end of season servicing	371
maintenance schedule/records	367
Massey Ferguson combines	
attaching header to combine	320
auger configurations	59, 61

detaching combine from header	325
replacing reel speed sensors	534
metric bolts	
torque specifications	569
model numbers	
records	xi
motors	
reel drive motors	530
installing	531
removing	530
multi-crop rapid reel conversion kits	120, 542

N

New Holland combines	
10 V adapter (MD #6421)	141
attaching combine to header	343
auger configurations	59, 61
New Holland CR/CX combines	
attaching combine to header	343
detaching combine from header	347
New Holland feeder deflector	351
NPT	
definitions	21

O

oils	
header drive gearbox	
adding oil	387
knife drive box	
changing	439
operating variables	
headers	58
operations	31
operator responsibilities	31
optimizing headers	
straight combining canola	54
options	541
augers	
auger dent repair kit	554
auger drive sprockets	
adjusting auger drive chain tension	405
crop delivery	551
auger dent repair kit	554
draper deflector (narrow)	552
draper deflectors (wide)	553
FM100 dual AHHC sensor kit	551
FM100 feed auger flighting	551
stripper bars	553
upper cross auger (UCA)	292, 554
European combine upper cross auger	555
cutterbars	545

INDEX

P

repositioning cylinders	
double reel.....	117, 123
single reel.....	115
with multi-crop rapid reel option kit.....	120
frown.....	498
adjusting reel frown.....	498
options.....	542
recommended setting.....	56
reel cam	
adjusting reel cam.....	130
settings and guidelines.....	127
reel clearance.....	494
adjusting.....	497
measuring.....	495
reel drive chains	
adjusting chain tension.....	524
loosening.....	524
replacing on double-reel drive.....	532
replacing on single-reel drive.....	534
tightening.....	525
reel drive motors.....	530
installing.....	531
removing.....	530
reel drives	
covers.....	521
installing.....	522
removing.....	521
double-reel U-joint.....	528
installing.....	529
removing.....	528
drive sprockets.....	526
installing.....	527
optional for special conditions.....	103
removing.....	526
reel endshields.....	518
replacing endshield supports.....	520
replacing endshields.....	518
reel fingers.....	500
installing plastic fingers.....	503
installing steel fingers.....	501
removing plastic fingers.....	502
removing steel fingers.....	500
reel height.....	109
reel height sensor.....	109
replacing sensor.....	111
reel safety props.....	33
disengaging.....	34
engaging.....	33
reel speed.....	102
reel system.....	521
reel tine pitch.....	127
replacing reel speed sensors.....	534
AGCO combines.....	534
CLAAS 400.....	536

INDEX

CLAAS 500/700	537
John Deere combines	536
tine tube bushings	504
installing on 5-, 6- or 9-bat reels	509
removing from 5-, 6-, or 9-bat reels	504
preseason servicing.....	370
product overview	21

R

recommended fluids and lubricants.....	595
recommended settings	
header	43
reel	56
reel arm extension kit.....	542
reel clearance	
adjusting	497
measuring	495
reel drive chains	
loosening	524
replacing on double-reel drive	532
replacing on single-reel drive	534
tightening	525
reel drive motors	530
installing.....	531
removing	530
reel drives	
double-reel U-joint.....	528
installing	529
removing.....	528
reel endshields.....	518
kit	543
replacing endshield supports	520
replacing endshields	518
reel fingers.....	500
plastic	
installing	503
removing.....	502
steel	
installing	501
removing.....	500
reel fore-aft positions	114
adjusting	115
reel frown.....	498
adjusting	498
reel safety props.....	33
disengaging.....	34
engaging	33
reel speeds	102
reel system	521
recommended reel settings.....	56
reels	
centering the reel	499

double reel	499
single reel	500
references	
unloading and assembly	579
rice divider rods.....	136, 555
rock retarder kits	546
RoHS	
definitions.....	21
rpm	
definitions.....	21

S

SAE	
definitions.....	21
safety	1
daily start-up checks.....	39
general safety	3
header safety props	33
hydraulic safety.....	6
maintenance safety	5
operational safety.....	32
reel safety props	33
safety alert symbols	1
safety sign decals	7
installing decals	7
interpreting decals	15
locations	8
signal words	2
screws	
definitions.....	21
sealed bearings	
installing.....	366
sensors	
ahhc sensors	140
reel height sensor	
checking and adjusting.....	109
replacing.....	111
reel speed sensor	
replacing on AGCO.....	534
replacing on CLAAS 400 series	536
replacing on CLAAS 500/700 series	537
replacing on John Deere	536
serial numbers	
locations.....	xi
records.....	xi
service intervals	
lubrication.....	372
servicing, See maintenance and servicing	
setting up the header	579
shutting down procedures	41
skid shoes, See cutting on the ground	
adjusting inner skid shoes.....	85

INDEX

adjusting outer skid shoes	86
spare knives	421
specifications	
product specifications	23
torque specifications	569
speeds	
draper speed	104
feed draper speed	106
ground speed	103
header draper speed	
adjusting speed	105
knife speed	
checking knife speed	108
knife speed data	107
reel speed	102
spm	
definitions	21
sprockets	521–522, 526
adjusting reel drive chain	524
installing reel drive sprocket	527
loosening reel drive chain	524
optional reel drive sprocket	103
removing reel drive sprocket	526
tightening reel drive chain	525
SR	
definitions	21
stabilizer wheels	548
adjusting	84
secondary stabilizer wheel	549
stabilizer/slow speed transport wheels	549
adjusting	82
start-up	
daily checks	39
storing the header	310
straight combining canola	
optimizing headers	54
stripper bars	311, 553
float module	472
installing	473
removing	472
stub guard conversion kits	546

T

TFFT	
definitions	21
tine tubes	
bushings	
installing on 5-, 6- or 9-bat reels	509
removing from 5-, 6-, or 9-bat reels	504
reel conversion kits	543
tine tube reinforcing kit	544
tire inflation/pressures	540

torque	
definitions	21
torque angles	
definitions	21
torque specifications	569
axle bolts	539
flare-type hydraulic fittings	572
metric bolt specifications	569
bolting into cast aluminum	571
O-ring boss (ORB) hydraulic fittings	
(adjutable)	573
O-ring boss (ORB) hydraulic fittings (non-	
adjustable)	575
O-ring face seal (ORFS) fittings	576
tapered pipe thread fittings	577
torque tensions	
definitions	21
tow-bars	
attaching	307
removing	296
storing	297
towing the header	295
attaching to towing vehicle	295
converting from field to transport	302
moving wheels	
front (left) wheels to transport position	302
rear (right) wheels to transport position	304
converting from transport to field	296
moving wheels	
front (left) wheels to field position	299
rear (right) wheels to field position	300
removing tow-bar	296
storing tow-bar	297
transport systems	538
axle bolt torques	539
converting from field to transport	302
moving wheels	
front (left) wheels to transport position	302
rear (right) wheels to transport position	304
converting from transport to field	296
moving wheels	
front (left) wheels to field position	299
rear (right) wheels to field position	300
removing tow-bar	296
storing tow-bar	297
tire inflation/pressures	540
tow-bar, See tow-bars	
transporting header	294
on combine	294
towing the header	295
attaching to towing vehicle	295
wheel bolt torques	538
troubleshooting	557
crop loss at cutterbar	557

INDEX

cutting action and knife components	560
header and drapers	567
reel delivery	564
trucks	
definitions	21

U

U-joints	
reel drives	
double reel U-joint	528
installing	529
removing	528
unloading and assembly	579
unplugging	
cutterbar	290
float module	291
upper cross augers	
installing flighting	293
removing flighting	292
upper cross augers (option)	292, 554
European combine upper cross auger (UCA)	555

V

Versatile combines	
auger configurations	59, 61
vertical knife	
options	
double vertical knife hose kits	547
vertical knife mounts	547

W

washers	
definitions	21
wheels and tires	
tires	
tire inflation/pressures	540
wheel bolt torques	538
wheels	
secondary stabilizer wheel (option)	549
stabilizer wheels (option)	548
stabilizer/slow speed transport wheels (option)	549

Recommended Fluids and Lubricants

Ensure your machine operates at top efficiency by using clean fluids and lubricants only.

- Use clean containers to handle all fluids and lubricants.
- Store fluids and lubricants in an area protected from dust, moisture, and other contaminants.

Lubricant	Specification	Description	Use	Capacities
Grease	SAE multi-purpose	High temperature extreme pressure (EP) performance grease with 1% max. Molybdenum Disulphide (NLGI Grade 2) lithium base	As required unless otherwise specified	—
Grease	SAE multi-purpose	High temperature extreme pressure (EP) performance grease with 10% max. Molybdenum Disulphide (NLGI Grade 2) lithium base	Driveline slip-joints	—
Gear Lubricant	SAE 85W-140	API service class GL-5	Knife drive box	2.2 liters (2.3 quarts)
Gear Lubricant	SAE 85W-140	API service class GL-5	Main drive gearbox	2.5 liters (2.6 quarts)
Hydraulic Oil	Single grade trans-hydraulic oil. Recommended brands: <ul style="list-style-type: none"> • Petro-Canada Duratran • John Deere Hy-Gard J20C • Case Hy-Tran Ultraction • AGCO Power Fluid 821 XL 	Lubricant trans / hydraulic oil	Header drive systems reservoir	75 liters (20 US gallons)

MacDon Industries Ltd.

680 Moray Street
Winnipeg, Manitoba
Canada R3J 3S3
t. (204) 885-5590
f. (204) 832-7749

MacDon, Inc.

10708 N. Pomona Avenue
Kansas City, Missouri
United States 64153-1924
t. (816) 891-7313
f. (816) 891-7323

MacDon Australia Pty. Ltd.

A.C.N. 079 393 721
P.O. Box 243, Suite 3, 143 Main Street
Greensborough, Victoria, Australia 3088
t. 03 9432 9982
f. 03 9432 9972

MacDon Brasil Agribusiness Ltda.

Rua Grã Nicco, 113, sala 202, B. 02
Mossunguê, Curitiba, Paraná
CEP 81200-200 Brasil
t. +55 (41) 2101-1713
f. +55 (41) 2101-1699

LLC MacDon Russia Ltd.

123317 Moscow, Russia
10 Presnenskaya nab. Block C
Floor 5, Office No. 534, Regus Business Centre
t. +7 495 775 6971
f. +7 495 967 7600

CUSTOMERS

MacDon.com

DEALERS

Portal.MacDon.com

Trademarks of products are the marks of their respective manufacturers and/or distributors.

Printed in Canada