


D1 Series Draper Header for M Series Windrowers

IMPORTANT: PAGE 31 HAS BEEN UPDATED SINCE THIS MANUAL WAS PUBLISHED.

Operator's Manual
215018 Revision A
Original Instruction

D1 Series Draper Header for M Series Windrowers

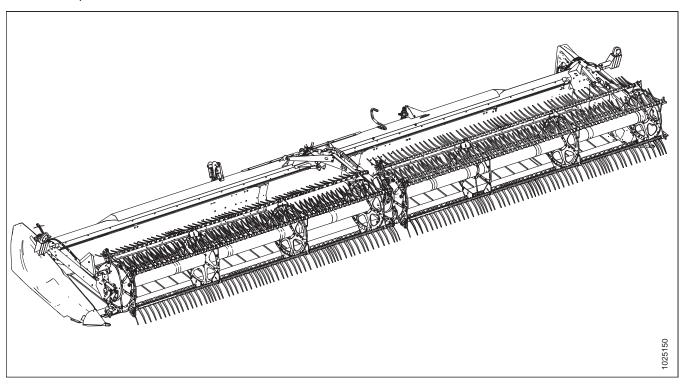

Published: September 2019

© 2019 MacDon Industries, Ltd.

The information in this publication is based on the information available and in effect at the time of printing. MacDon Industries, Ltd. makes no representation or warranty of any kind, whether expressed or implied, with respect to the information in this publication. MacDon Industries, Ltd. reserves the right to make changes at any time without notice.

Declaration of Conformity



EC Declaration of Conformity

[1] MacDon

MacDon Industries Ltd. 680 Moray Street, Winnipeg, Manitoba, Canada R3J 3S3 [4] As per Shipping Document

[5] May 9, 2019

[2] Windrower Draper Header

·

Christoph Martens Product Integrity

[3] MacDon D1 Series

Declare, that the product:

Machine Type: [2]

Name & Model: [3]

Serial Number(s): [4]

fulfils all the relevant provisions of the Directive 2006/42/EC.

Harmonized standards used, as referred to in Article 7(2):

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Place and date of declaration: [5]

Identity and signature of the person empowered to draw up the declaration: [6]

Name and address of the person authorized to

Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Germany) bvonriedesel@macdon.com

екларираме, че следният продукт:

Тип машина: [2]

Наименование и модел: [3]

Сериен номер(а) [4]

отговаря на всички приложими разпоредби на директива 2006/42/EO.

Използвани са следните хармонизирани стандарти според чл. 7(2):

EN ISO 4254-1:2013 EN ISO 4254-7:2009 Място и дата на декларацията: [5]

Име и подпис на лицето, упълномощено да

Име и адрес на лицето, упълномощено да състави техническия файл:

Бенедикт фон Рийдезел Управител, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Германия) bvonriedesel@macdon.com

Prohlašujeme, že produkt:

Typ zařízení: [2]

Název a model: [3] Sériové(á) číslo)a): [4]

splňuje všechna relevantní ustanovení směrnice 2006/42/EC.

Byly použity harmonizované standardy, jak je uvedeno v článku 7(2):

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Místo a datum prohlášení: [5]

Identita a podpis osoby oprávněné k vydání prohlášení: [6]

Jméno a adresa osoby oprávněné k vyplnění techni ckého souboru:

Benedikt von Riedesel generální ředitel, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Německo) bvonriedesel@macdon.com DA

·// [=]

erklærer, at prduktet

muskineype [2]

Navn og model: [3]

Serienummer (-numre): [4]

Opfylder alle bestemmelser i direktiv 2006/42/EF.

Anvendte harmoniserede standarder, som henvist til i paragraf 7(2):

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Sted og dato for erklæringen: [5]

ldentitet på og underskrift fra den person, som er bemyndiget til at udarbejde erklæringen: [6]

Navn og adresse på den person, som er bemyndiget til at udarbejde den tekniske fil:

Benedikt von Riedesel Direktør, MacDon Europe GmbH Hagenauer Straße 59 D-65203 Wiesbaden (Tyskland) bvonriedesel@macdon.com

DE

Wir, [1

Erklären hiermit, dass das Produkt:

Maschinentyp: [2]

Name & Modell: [3]

Seriennummer (n): [4]

alle relevanten Vorschriften der Richtlinie 2006/42/EG erfüllt.

Harmonisierte Standards wurden, wie in folgenden

EN ISO 4254-1:2013 EN ISO 4254-7:2009 Ort und Datum der Erklärung: [5]

Name und Unterschrift der Person, die dazu befugt ist, die Erklärung auszustellen: [6]

Name und Anschrift der Person, die dazu berechtigt

Benedikt von Riedesel General Manager, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden bvonriedesel@macdon.com E:

sotros [1]

declaramos que el producto:

Tipo de máquina: [2]

Nombre y modelo: [3]

Números de serie: [4]

cumple con todas las disposiciones pertinentes de la directriz 2006/42/EC.

Se utilizaron normas armonizadas, según lo dispuesto

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Lugar y fecha de la declaración: [5]

Identidad y firma de la persona facultada para draw redactar la declaración: [6]

Nombre y dirección de la persona autorizada para elaborar el expediente técnico:

Benedikt von Riedesel Gerente general - MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Alemania) bvonriedesel@macdon.com ET

deklareerime, et toode

Seadme tüüp: [2]

Nimi ja mudel: [3]

Seerianumbrid: [4]

vastab kõigile direktiivi 2006/42/EÜ asjakohastele

Kasutatud on järgnevaid harmoniseeritud standardeid, millele on viidatud ka punktis 7(2):

BEN ISO 4254-1:2013

EN ISO 4254-7:2009 Deklaratsiooni koht ja kuupäev: [5]

Deklaratsiooni koostamiseks volitatud isiku nimi ja allkiri: [6]

Tehnilise dokumendi koostamiseks volitatud isiku nimi ja aadress:

Benedikt von Riedesel Peadirektor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Saksamaa) bvonriedesel@macdon.com FR

Déclarons que le produit :

Type de machine : [2]

Nom et modèle : [3]

Numéro(s) de série : [4]

Est conforme à toutes les dispositions pertinentes de la directive 2006/42/EC.

Utilisation des normes harmonisées, comme indiqué dans l'Article 7(2):

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Lieu et date de la déclaration : [5]

Identité et signature de la personne ayant reçu le pouvoir de rédiger cette déclaration : [6]

Nom et adresse de la personne autorisée à constituer le dossier technique :

Benedikt von Riedesel Directeur général, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Allemagne)

bvonriedesel@macdon.cor

The Harvesting Specialists

MacDon

030195

EC Declaration of Conformity

Noi. [1] Dichiariamo che il prodotto: Tipo di macchina: [2] Nome e modello: [3] Numero(i) di serie: [4] soddisfa tutte le disposizioni rilevanti della direttiva 2006/42/CE.

Utilizzo degli standard armonizzati, come indicato nell'Articolo 7(2):

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Luogo e data della dichiarazione: [5] Nome e firma della persona autorizzata a redigere la dichiarazione: [6]

Nome e persona autorizzata a compilare il file

Benedikt von Riedesel eneral Manager, MacDon Europe GmbH Hagenauer Straße 59

65203 Wiesbaden (Germania) bvonriedesel@macdon.com

Ezennel kijelentjük, hogy a következő termék: Gép típusa: [2]

Név és modell: [3] Szériaszám(ok): [4]

teljesíti a következő irányelv összes vonatkozó előírásait: 2006/42/EK.

Az alábbi harmonizált szabványok kerültek alkalmazásra a 7(2) cikkely szerint:

FN ISO 4254-1:2013 EN ISO 4254-7:2009

A nyilatkozattétel ideje és helye: [5]

Azon személy kiléte és aláírása, aki jogosult a nyilatkozat elkészítésére: [6]

Azon személy neve és aláírása, aki felhatalmazott a műszaki dokumentáció összeállítására

Benedikt von Riedesel Vezérigazgató, MacDon Europe GmbH Hagenauer Straße 59

65203 Wiesbaden (Németország) ovonriedesel@macdon.com

Pareiškiame, kad šis produktas:

Mašinos tipas: [2]

Pavadinimas ir modelis: [3]

Serijos numeris (-jai): [4]

atitinka taikomus reikalavimus pagal Direktyvą 2006/42/EB.

Naudojami harmonizuoti standartai, kai nurodoma

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Deklaracijos vieta ir data: [5]

Asmens tapatybės duomenys ir parašas asmens. igalioto sudaryti šią deklaraciją: [6]

Vardas ir pavardė asmens, kuris įgaliotas sudaryti šį techninį failą:

Benedikt von Riedesel Generalinis direktorius, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Vokietija)

bvonriedesel@macdon.con

Deklarējam, ka produkts: Mašīnas tips: [2]

Nosaukums un modelis: [3] Sērijas numurs("i)· [4]

Atbilst visām būtiskajām Direktīvas 2006/42/EK

Piemēroti šādi saskaņotie standarti , kā minēts

EN ISO 4254-1:2013

EN ISO 4254-7:2009

Deklarācijas parakstīšanas vieta un datums: [5] Tās personas vārds, uzvārds un paraksts, kas ir pilnvarota sagatavot šo deklarāciju: [6]

Tās personas vārds, uzvārds un adrese, kas ir pilnvarota sastādīt tehnisko dokumentāciju:

Benedikts fon Rīdīzels Generaldirektors, MacDon Europe GmbH

Hagenauer Straße 59 65203 Wiesbaden (Vācija) bvonriedesel@macdon.com

Wij, [1] Verklaren dat het product:

Machinetype: [2] Naam en model: [3]

Serienummer(s): [4]

voldoet aan alle relevante bepalingen van de Richtlijn 2006/42/EC.

Geharmoniseerde normen toegepast, zoals vermeld

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Plaats en datum van verklaring: [5]

Naam en handtekening van de bevoegde persoon om de verklaring op te stellen: [6]

Naam en adres van de geautoriseerde persoon on

Benedikt von Riedesel Algemeen directeur, MacDon Europe GmbH

Hagenauer Straße 59 65203 Wiesbaden (Duitsland) bvonriedesel@macdon.com

My niżej podpisani, [1] Oświadczamy, że produkt:

Typ urządzenia: [2]

Nazwa i model: [3]

Numer serviny/numery servine: [4] spełnia wszystkie odpowiednie przepisy dyrektywy 2006/42/WE.

Zastosowaliśmy następujące (zharmonizowane) normy zgodnie z artykułem 7(2):

EN ISO 4254-1:2013

EN ISO 4254-7:2009 Data i miejsce oświadczenia: [5]

lmię i nazwisko oraz podpis osoby upoważnionej do przygotowania deklaracji: [6]

Imie i nazwisko oraz adres osoby upov

Benedikt von Riedesel Dyrektor generalny, MacDon Europe GmbH

Hagenauer Straße 59 65203 Wiesbaden (Niemcy) bvonriedesel@macdon.com

Nós, [1] Declaramos, que o produto:

Tipo de máquina: [2] Nome e Modelo: [3]

cumpre todas as disposições relevantes da Directiva 2006/42/CE.

Normas harmonizadas aplicadas, conforme referido no Artigo 7(2):

FN ISO 4254-1-2013 EN ISO 4254-7:2009

Local e data da declaração: [5]

Identidade e assinatura da po elaborar a declaração: [6]

Nome e endereço da pessoa autorizada a compilar o ficheiro técnico: Benedikt von Riedesel

Gerente Geral, MacDon Europa Ltda. Hagenauer Straße 59 65203 Wiesbaden (Alemanha) bvonriedesel@macdon.com

Noi, [1] Declarăm, că următorul produs:

Tipul maşinii: [2]

Denumirea si modelul: [3] Număr (numere) serie: [4]

corespunde tuturor dispozițiilor esențiale ale

Au fost aplicate următoarele standarde armonizate conform articolului 7(2):

EN ISO 4254-1:2013

EN ISO 4254-7:2009

Data și locul declarației: [5]

Identitatea și semnătura persoanei împuternicite entru întocmirea declarației: [6]

Numele si semnătura nersoanei au

Benedikt von Riedesel Manager General, MacDon Europe GmbH

Hagenauer Straße 59 bvonriedesel@macdon.com

Iziavljujemo da projzvod

Tip mašine: [2]

Naziv i model: [3]

Serijski broj(evi): [4]

Ispunjava sve relevantne odredbe direktive 2006/42/EC. Korišæeni su usklađeni standardi kao što je navedeno

u èlanu 7(2): EN ISO 4254-1:2013

Datum i mesto izdavanja deklaracije: [5]

Identitet i potpis lica ovlašæenog za sastavljanje deklaracije: [6]

Ime i adresa osobe ovlašæene za sastavljanje tehnièke datoteke:

Benedikt von Riedesel Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemačka) bvonriedesel@macdon.com

Intygar att produkten

Namn och modell: [3]

Serienummer: [4]

uppfyller alla relevanta villkor i direktivet 2006/42/EG.

Harmonierade standarder används, såsom anges i

EN ISO 4254-1:2013

EN ISO 4254-7:2009 Plats och datum för intyget: [5]

Identitet och signatur för person med befogenhet att upprätta intyget: [6]

Namn och adress för person behörig att upprätta

Benedikt von Riedesel Administrativ chef, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Tyskland) bvonriedesel@macdon.cor

izjavljamo, da izdelek:

Ime in model: [3]

Serijska/-e številka/-e: [4] ustreza vsem zadevnim določbam Direktive

2006/42/ES.

Uporabljeni usklajeni standardi, kot je navedeno v členu 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009

Kraj in datum izjave: [5] Istovetnost in podpis osebe, opolnomočene za pripravo iziave: [6]

lme in naslov osebe, pooblaščene za pripravo

Generalni direktor, MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemčija) bvonriedesel@macdon.cc

týmto prehlasujeme, že tento výrobok:

Názov a model: [3]

Výrobné číslo: [4]

spĺňa príslušné ustanovenia a základné požiadavky smernice č. 2006/42/ES.

Použité harmonizované normy, ktoré sa uvádzajú v Článku č. 7(2):

EN ISO 4254-1:2013 EN ISO 4254-7:2009

Miesto a dátum prehlásenia: [5] Meno a podpis osoby oprávnenej vypracovať toto

Meno a adresa osoby oprávnenej zostaviť technický

Benedikt von Riedesel Generálny riaditeľ MacDon Europe GmbH Hagenauer Straße 59 65203 Wiesbaden (Nemecko)

bvonriedesel@macdon.com

Introduction

This instructional manual contains information on the D1 Series Draper Header for M Series Self-Propelled Windrowers. It is designed to serve a dual function in your grain, hay, and specialty crop harvesting operation. Teamed with your self-propelled windrower power unit and optional hay conditioner, D1 Series Draper Headers will cut and lay crop into uniform, fluffy windrows.

The D1 Series Draper Header is specially designed as a straight cut header and is equipped to work well in all straight cut conditions—whether cutting on or above the ground.

Carefully read all the material provided before attempting to use the machine.

Use this manual as your first source of information about the machine. If you follow the instructions provided, your header will work well for many years.

MacDon provides warranty for Customers who operate and maintain their equipment as described in this manual. A copy of the MacDon Industries Limited Warranty Policy, which explains this warranty, should have been provided to you by your Dealer. Damage resulting from any of the following conditions will void the warranty:

- Accident
- Misuse
- Abuse
- · Improper maintenance or neglect
- · Abnormal or extraordinary use of the machine
- Failure to use the machine, equipment, component, or part in accordance with the manufacturer's instructions

The following conventions are used in this document:


- Right and left are determined from the operator's position. The front of the header faces the crop; the back of the header attaches to the windrower.
- Unless otherwise noted, use the standard torque values provided in Chapter 8.2 Torque Specifications, page 270.

The Table of Contents and Index will guide you to specific areas of this manual. Study the Table of Contents to familiarize yourself with how the information is organized.

Keep this manual handy for frequent reference and to pass on to new Operators or Owners. A manual storage case (A) is located inside the header left endshield.

Call your MacDon Dealer if you need assistance, information, or additional copies of this manual.

This document is available in English, Chinese, and Russian.

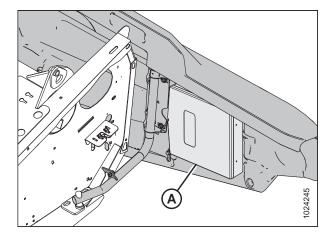

Manual Storage Location

NOTE:

Keep your MacDon publications up-to-date. The most current version can be downloaded from our website (www.macdon.com) or from our Dealer-only site (https://portal.macdon.com) (login required).

Summary of Changes

This list covers changes made since the last revision (214767 Rev. A).

Section	Summary of Change	Internal Use Only
Inside Front Cover	Added disclaimer statement	Tech Pubs
Declaration of Conformity, page i	Updated Declaration of Conformity	Tech Pubs
Introduction, page iii	Added Chinese and Russian to available languages statement	Tech Pubs
1 Safety, page 1	Added Welding Precaution section	Engineering
1.8 Safety Decal Locations, page 9	Updated model numbers in figure titles	Tech Pubs
1.9 Understanding Safety Signs, page 17	Updated descriptions and added MD #113482	Tech Pubs
Repositioning Fore-Aft Cylinders on Single Reel, page 60 Repositioning Fore-Aft Cylinders on Double Reel, page 62	Created illustrations 1030728 and 1030732 to show new light assembly design	ECN 57670 ECN 58057
Storing Tow-Bar, page 97	Added illustration	Engineering
Moving Rear (Right) Wheels into Transport Position, page 104	Corrected figure titles	Product Support
5.4.1 Replacing Light Bulbs, page 135	Updated illustration	Engineering
Replacing Draper Drive Roller Bearing, page 191	Corrected figure titles	Product Support
5.8.2 Reel Frown, page 202	Corrected section description	Product Support
Adjusting Reel Frown, page 202	Added information to figure title	Product Support
6.3.5 Backsheet Extension Kit, page 248	Added D145 option	Engineering
6.4.2 EasyGuard Kit, page 250	Added new product name	ECN 57677

Model and Serial Number

Record the model number, serial number, and model year of the header and Slow Speed Transport / Stabilizer Wheel option (if installed) on the lines below.

NOTE:

Right and left designations are determined from the operator's position, facing forward.

D1 Draper Header	
Header Model:	
Serial Number:	
Year:	
The serial number the left endsheet.	plate (A) is located on the upper corner on

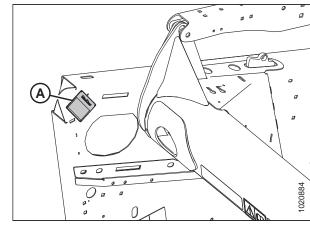


Figure 1: Header Serial Number Plate Location

Slow Speed Transport / Stabilizer Wheel Option Serial Number: Year: The serial number plate (A) is located on the right axle assembly.

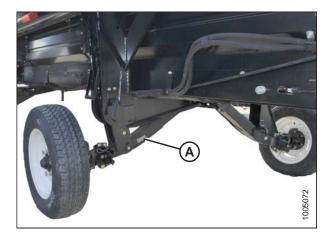


Figure 2: Slow Speed Transport / Stabilizer Wheel

Declaration of Conformity	i
Introduction	iii
Summary of Changes	iv
Model and Serial Number	v
Chapter 1: Safety	1
1.1 Safety Alert Symbols	1
1.2 Signal Words	2
1.3 General Safety	3
1.4 Maintenance Safety	5
1.5 Hydraulic Safety	6
1.6 Welding Precaution	7
1.7 Safety Signs	8
1.7.1 Installing Safety Decals	8
1.8 Safety Decal Locations	9
1.9 Understanding Safety Signs	17
Chapter 2: Product Overview	23
2.1 Definitions	23
2.2 Specifications	25
2.3 Component Identification	28
Chapter 3: Operation	29
3.1 Owner/Operator Responsibilities	29
3.2 Operational Safety	30
3.2.1 Header Safety Props	30
3.2.2 Reel Safety Props	
Engaging Reel Safety Props	
3.2.3 Endshields	
Opening Endshields	32
Closing Endshields	
Removing Endshields Installing Endshields	
Checking and Adjusting Endshields	
3.2.4 Daily Start-Up Check	37
3.3 Break-In Period	38
3.4 Shutting down the Machine	39
3.5 Cab Controls	40
3.6 Header Setup	41
3.6.1 Header Attachments	41
3.6.2 Header Settings	
3.6.3 Reel Settings	47

3.7 Handan On anaton Wasiaklas	4.0
3.7 Header Operating Variables	
3.7.1 Cutting Height	
3.7.2 Cutting off the Ground	
Adjusting Stabilizer/Slow Speed Transport Wheels	
3.7.3 Cutting on the Ground	
Adjusting Inner Skid Shoes	
Adjusting Outer Skid Shoes	
3.7.4 Header Float	54
3.7.5 Header Angle	54
Controlling Header Angle	54
3.7.6 Reel Speed	55
Optional Reel Drive Sprockets	55
3.7.7 Ground Speed	55
3.7.8 Draper Speed	56
3.7.9 Knife Speed	
Checking Knife Speed	57
3.7.10 Reel Height	
3.7.11 Reel Fore-Aft Position	
Adjusting Reel Fore-Aft Position	
Repositioning Fore-Aft Cylinders on Single Reel	
Repositioning Fore-Aft Cylinders with Multi-Crop Rapid Reel Conversion Option	
3.7.12 Reel Tine Pitch	
Reel Cam Settings	
Adjusting Reel Cam	70
3.7.13 Crop Dividers	
Removing Crop Dividers with Latch Option from Header	
Removing Crop Dividers without Latch Option from Header Installing Crop Dividers with Latch Option onto Header	
Installing Crop Dividers with Latch Option onto Header	
3.7.14 Crop Divider Rods	
Removing Crop Divider Rods	
Rice Divider Rods	76
3.8 Delivery Opening	77
3.8.1 Adjusting Delivery Opening on Header with Manual Deck Shift	77
3.8.2 Adjusting Delivery Opening on Header with Hydraulic Deck Shift	
3.8.3 Adjusting Hydraulic Deck Shift Chain Tension	
3.9 Double Windrowing	
3.9.1 Shifting Decks Hydraulically	
3.9.2 Shifting Decks Manually	
3.9.3 Using Double Windrow Attachment (DWA)	
3.10 Windrow Types	
3.11 Haying Tips	87
3.11.1 Curing	87
3.11.2 Topsoil Moisture	87
3.11.3 Weather and Topography	87

3.	.11.4 Windrow Configuration	88
3.	.11.5 Driving on Windrow	88
3.	.11.6 Raking and Tedding	88
3.	.11.7 Chemical Drying Agents	88
3.12 Le	eveling Header	89
3.13 ∪	Jnplugging Cutterbar	90
3.14 ∪	Jpper Cross Auger (UCA)	91
3.	.14.1 Removing Beater Bars	91
3.	.14.2 Installing Beater Bars	92
3.15 ⊤	Fransporting the Header	94
3.	.15.1 Transporting Header on Windrower	94
3.	.15.2 Towing	
	Attaching Header to Towing Vehicle	
2	Towing the Header	
3.	.15.3 Converting from Transport to Field Position	
	Storing Tow-Bar	
	Moving Front (Left) Wheels into Field Position	
	Moving Rear (Right) Wheels into Field Position	
3.	.15.4 Converting from Field to Transport Position	
	Moving Front (Left) Wheels into Transport Position	
	Moving Rear (Right) Wheels into Transport Position	
2 16 9	Storing the Header	
3.10	otornig the rieduci	110
Chapter 4	4: Header Attachment/Detachment	111
4.1 Att	ttaching Header to Windrower	111
4.2 De	etaching Header from Windrower	
-		
-	5: Maintenance and Servicing	
5.1 Pre	reparing Machine for Servicing	117
5.2 Ma	aintenance Specifications	
5.	.2.1 Installing a Roller Chain	
5.	.2.2 Installing a Sealed Bearing	
5.3 Ma	aintenance Requirements	
5.	.3.1 Maintenance Schedule/Record	
5.	.3.2 Break-In Inspection	
5.	.3.3 Preseason/Annual Service	121
5.	.3.4 End-of-Season Service	
5.	.3.5 Checking Hydraulic Hoses and Lines	
5.	.3.6 Lubrication and Servicing	
	Service Intervals	
	Greasing Procedure	
	Lubricating Reel Drive Chain – Single Reel	
E A FI-	ectrical System	
J.4 EIE	eenieai jysteiii	

	5.4.1 Replacing Light Bulbs	135
5.5	Knife	136
	5.5.1 Replacing Knife Section	136
	5.5.2 Removing Knife	
	5.5.3 Removing Knifehead Bearing.	
	5.5.4 Installing Knifehead Bearing	
	5.5.5 Installing Knife	
	5.5.6 Spare Knife	
	5.5.7 Knife Guards	
	Adjusting Knife Guards	
	Replacing Stub Guards	
	Checking Knife Hold-Downs	
	Adjusting Pointed Guard Hold-Downs	
	Adjusting Stub Guard Hold-Downs	150
	5.5.8 Knifehead Shield	151
	Installing Knifehead Shield	151
5.6	Knife Drive	153
	5.6.1 Knife Drive Box	153
	Checking Mounting Bolts	
	Removing Knife Drive Box	154
	Removing Knife Drive Box Pulley	
	Installing Knife Drive Box Pulley	
	Installing Knife Drive Box.	
	Changing Oil in Knife Drive Box	
	5.6.2 Knife Drive Belts	
	Timed Double-Knife Drive Belts	
57 1	Drapers	
	5.7.1 Removing Side Drapers	
	5.7.2 Installing Side Drapers	
	5.7.3 Adjusting Draper Tension	
	5.7.4 Adjusting Side Draper Tracking	
	5.7.5 Adjusting Deck Height	183
	5.7.6 Side Draper Roller Maintenance	
	Inspecting Draper Roller Bearing	
	Removing Draper Idler Roller	
	Replacing Draper Idler Roller Bearing Installing Draper Idler Roller	
	Removing Draper Deck Drive Roller	
	Replacing Draper Drive Roller Bearing	
	Installing Draper Deck Drive Roller	
	5.7.7 Replacing Draper Deflectors	193
	Removing Wide Draper Deflectors	
	Installing Wide Draper Deflectors	
	Removing Narrow Draper Deflectors	
	Installing Narrow Draper Deflectors	197
5.8	Reel	198
	5.8.1 Reel Clearance to Cutterbar	198

	Measuring Reel Clearance	
	Adjusting Reel Clearance	201
	5.8.2 Reel Frown	
	Adjusting Reel Frown	
	5.8.3 Centering Reel	
	Centering Reel on Double Reel Header	
	Centering Reel on a Single Reel Header	
	5.8.4 Reel Tines	
	Installing Steel Tines	
	Removing Plastic Fingers	
	Installing Plastic Fingers	
	5.8.5 Tine Tube Bushings	209
	Removing Bushings from Five-, Six-, or Nine-Bat Reels	209
	Installing Bushings on Five-, Six-, or Nine-Bat Reels	214
	5.8.6 Reel Endshields	
	Replacing Reel Endshields	
	Replacing Reel Endshield Supports	
5.	S.9 PR15 Pick-Up Reel	224
	5.9.1 Replacing Reel Drive Cover	
	Removing Reel Drive Cover	
	Installing Reel Drive Cover	
	5.9.2 Adjusting Reel Drive Chain Tension	
	Loosening Reel Drive Chain	
	5.9.3 Replacing Reel Drive Sprocket	
	Removing Reel Drive Sprocket	
	Installing Reel Drive Sprocket	
	5.9.4 Replacing Double-Reel U-Joint	
	Removing Double-Reel U-Joint	
	Installing Double-Reel U-Joint	232
	5.9.5 Replacing Reel Drive Motor	233
	Removing Reel Drive Motor	
	Installing Reel Drive Motor	
	5.9.6 Replacing Drive Chain on Double Reel	
	5.9.7 Replacing Drive Chain on Single Reel	236
5.	5.10 Transport System (Optional)	237
	5.10.1 Checking Wheel Bolt Torque	237
	5.10.2 Checking Axle Bolt Torque	237
	5.10.3 Checking Tire Pressure	238
Chap	oter 6: Options and Attachments	239
6.	i. 1 Reel	239
	6.1.1 Multi-Crop Rapid Reel Conversion Kit	239
	6.1.2 Reel Arm Extension Kit – North American-Configured Headers Only	239
	6.1.3 Lodged Crop Reel Finger Kit	240
	6.1.4 PR15 Tine Tube Reel Conversion Kit	
	6.1.5 Reel Endshield Kit	

6.1.6 Tine Tube Reinforcing Kit	242
6.2 Cutterbar	243
6.2.1 Cutterbar Wearplate	243
6.2.2 Knife Cutout Cover	243
6.2.3 Rock Retarder	244
6.2.4 Stub Guard Conversion Kit	244
6.2.5 Vertical Knife Mounts	244
6.2.6 Vertical Knife Plumbing Kits	
6.3 Header	246
6.3.1 Divider Quick Latch Kit	246
6.3.2 Stabilizer Wheels	246
6.3.3 Secondary Stabilizer Wheel	247
6.3.4 Stabilizer Wheels and Slow Speed Transport Package	247
6.3.5 Backsheet Extension Kit	
6.3.6 Skid Shoe Kits	
6.3.7 Steel Skid Shoes	
6.4 Crop Delivery	
6.4.1 Wide Draper Deflector	
6.4.2 EasyGuard Kit	
6.4.3 Upper Cross Auger	
6.4.4 Rice Divider Rods	
6.4.5 Double Draper Drive Kit	
6.4.6 Double Windrow Attachment (DWA)	
6.4.7 Draper Extension Kit	
6.4.8 Swath Forming Rods (Center Delivery)	
6.4.9 HC10 Hay Conditioner	
6.4.10 Hydraulic Deck Shift Package	
Chapter 7: Troubleshooting	255
7.1 Crop Loss at Cutterbar	255
7.2 Cutting Action and Knife Components	
7.3 Reel Delivery	
·	
7.4 Header and Drapers	
7.5 Cutting Edible Beans	
7.6 Windrow Formation	
Chapter 8: Reference	269
8.1 Conversion Chart	
8.2 Torque Specifications	
8.2.1 Metric Bolt Specifications	
8.2.2 Metric Bolt Specifications Bolting into Cast Aluminum	
8.2.3 O-Ring Boss Hydraulic Fittings – Adjustable	
8.2.4 O-Ring Boss Hydraulic Fittings – Non-Adjustable	

Index	27
8.3 Unloading and Assembly	278
8.2.6 Tapered Pipe Thread Fittings	27
8.2.5 O-Ring Face Seal Hydraulic Fittings	276

Chapter 1: Safety

1.1 Safety Alert Symbols

This safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

- ATTENTION!
- BECOME ALERT!
- YOUR SAFETY IS INVOLVED!

Carefully read and follow the safety message accompanying this symbol.

Why is safety important to you?

- Accidents disable and kill
- Accidents cost
- · Accidents can be avoided



Figure 1.1: Safety Symbol

1.2 Signal Words

Three signal words, **DANGER**, **WARNING**, and **CAUTION**, are used to alert you to hazardous situations. Two signal words, **IMPORTANT** and **NOTE**, identify non-safety related information. Signal words are selected using the following guidelines:



DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.



CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

IMPORTANT:

Indicates a situation that, if not avoided, could result in a malfunction or damage to the machine.

NOTE:

Provides additional information or advice.

General Safety 1.3



CAUTION

The following general farm safety precautions should be part of your operating procedure for all types of machinery.

Protect yourself.

- When assembling, operating, and servicing machinery, wear all protective clothing and personal safety devices that could be necessary for the job at hand. Do NOT take chances. You may need the following:
 - Hard hat
 - Protective footwear with slip-resistant soles
 - Protective glasses or goggles
 - Heavy gloves
 - Wet weather gear
 - Respirator or filter mask
- Be aware that exposure to loud noises can cause hearing impairment or loss. Wear suitable hearing protection devices such as earmuffs or earplugs to help protect against loud noises.

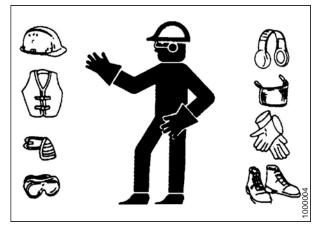


Figure 1.2: Safety Equipment



Figure 1.3: Safety Equipment

- Provide a first aid kit in case of emergencies.
- Keep a properly maintained fire extinguisher on the machine. Be familiar with its proper use.
- Keep young children away from machinery at all times.
- Be aware that accidents often happen when the Operator is tired or in a hurry. Take time to consider safest way. **NEVER** ignore warning signs of fatigue.

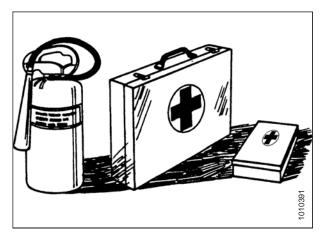


Figure 1.4: Safety Equipment

- Wear close-fitting clothing and cover long hair. NEVER wear dangling items such as scarves or bracelets.
- Keep all shields in place. NEVER alter or remove safety equipment. Make sure driveline guards can rotate independently of shaft and can telescope freely.
- Use only service and repair parts made or approved by equipment manufacturer. Substituted parts may not meet strength, design, or safety requirements.



Figure 1.5: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts.
 NEVER attempt to clear obstructions or objects from a machine while the engine is running.
- Do NOT modify the machine. Unauthorized modifications may impair machine function and/or safety. It may also shorten the machine's life.
- To avoid injury or death from unexpected startup of the machine, ALWAYS stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

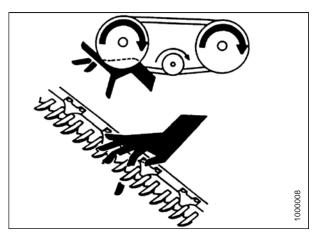


Figure 1.6: Safety around Equipment

- Keep service area clean and dry. Wet and/or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
- Keep work area well lit.
- Keep machinery clean. Straw and chaff on a hot engine are fire hazards. Do NOT allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before storage.
- NEVER use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover sharp or extending components to prevent injury from accidental contact.

 


Figure 1.7: Safety around Equipment

1.4 Maintenance Safety

To ensure your safety while maintaining machine:

- Review the operator's manual and all safety items before operation and/or maintenance of the machine.
- Place all controls in Neutral, stop the engine, set the park brake, remove the ignition key, and wait for all moving parts to stop before servicing, adjusting, and/or repairing.
- Follow good shop practices:
 - Keep service areas clean and dry
 - Be sure electrical outlets and tools are properly grounded
 - Keep work area well lit



- Make sure all components are tight and that steel lines, hoses, and couplings are in good condition before applying pressure to hydraulic systems.
- Keep hands, feet, clothing, and hair away from all moving and/or rotating parts.
- Clear the area of bystanders, especially children, when carrying out any maintenance, repairs, or adjustments.
- Install transport lock or place safety stands under the frame before working under the machine.
- If more than one person is servicing the machine at the same time, be aware that rotating a driveline or other mechanically-driven component by hand (for example, accessing a lubricant fitting) will cause drive components in other areas (belts, pulleys, and knives) to move. Stay clear of driven components at all times.
- Wear protective gear when working on the machine.
- Wear heavy gloves when working on knife components.



Figure 1.8: Safety around Equipment

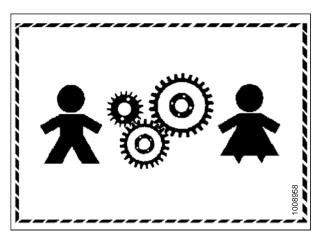


Figure 1.9: Equipment NOT Safe for Children

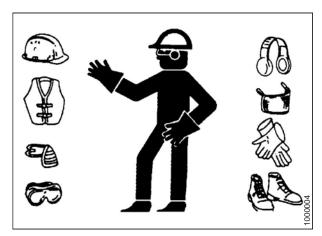



Figure 1.10: Safety Equipment

1.5 Hydraulic Safety

- Always place all hydraulic controls in Neutral before leaving the operator's seat.
- Make sure that all components in the hydraulic system are kept clean and in good condition.
- Replace any worn, cut, abraded, flattened, or crimped hoses and steel lines.
- Do NOT attempt any makeshift repairs to hydraulic lines, fittings, or hoses by using tapes, clamps, cements, or welding. The hydraulic system operates under extremely highpressure. Makeshift repairs will fail suddenly and create hazardous and unsafe conditions.
- Wear proper hand and eye protection when searching for high-pressure hydraulic leaks. Use a piece of cardboard as a backstop instead of hands to isolate and identify a leak.
- If injured by a concentrated high-pressure stream of hydraulic fluid, seek medical attention immediately. Serious infection or toxic reaction can develop from hydraulic fluid piercing the skin.

 

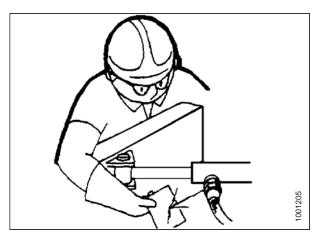


Figure 1.11: Testing for Hydraulic Leaks



Figure 1.12: Hydraulic Pressure Hazard

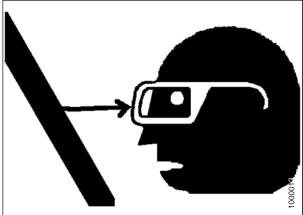


Figure 1.13: Safety around Equipment

Welding Precaution 1.6

Welding should never be attempted on the header while it is connected to a windrower.



WARNING

Severe damage to sensitive, expensive electronics can result from welding on the header while it is connected to the windrower. It can be impossible to know what effect high current could have with regard to future malfunctions or shorter lifespan. It is very important that welding on the header is not attempted while the header is connected to the windrower.

If an Operator needs to do any welding on the header, it should first be disconnected and removed from the windrower.

If it is unfeasible to disconnect the header from the windrower before attempting welding, contact your MacDon Dealer for welding precautions detailing all electrical components that must be disconnected first for safe welding.

1.7 Safety Signs

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or illegible.
- If the original part on which a safety sign was installed is replaced, be sure the repair part displays the current safety sign.
- Replacement safety signs are available from your MacDon Dealer Parts Department.

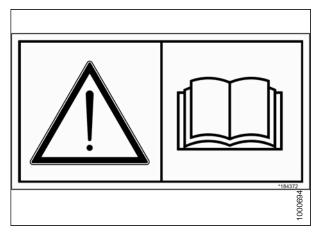



Figure 1.14: Operator's Manual Decal

1.7.1 Installing Safety Decals

- 1. Clean and dry the installation area.
- 2. Decide exactly where you are going to place the decal.
- 3. Remove the smaller portion of the split backing paper.
- 4. Place the decal in position and slowly peel back the remaining paper, smoothing the decal as it is applied.
- 5. Prick small air pockets with a pin and smooth out.


1.8 Safety Decal Locations

Figure 1.15: Upper Cross Auger (Optional)

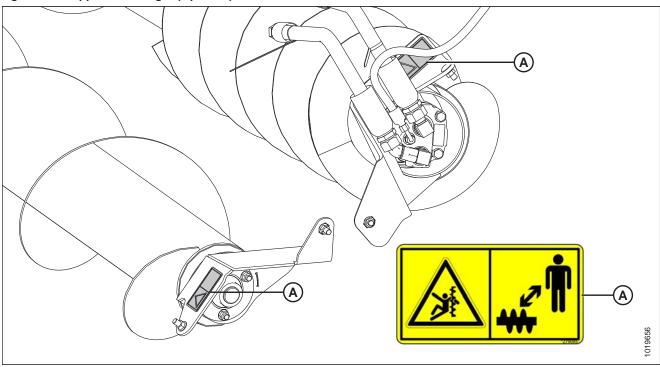


A - MD #279085

Figure 1.16: Slow Speed Transport (Optional)

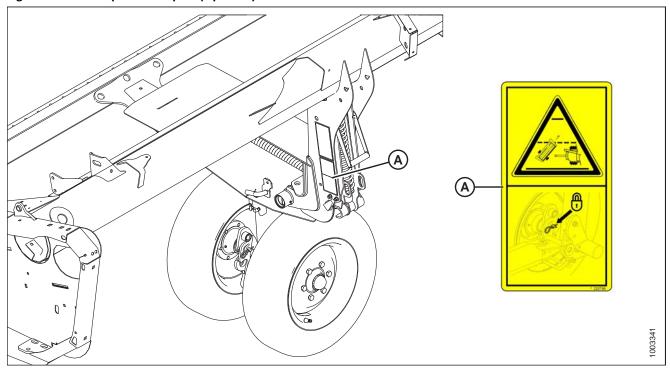


A - MD #220799

Figure 1.17: Slow Speed Transport Tow-Bar (Optional)

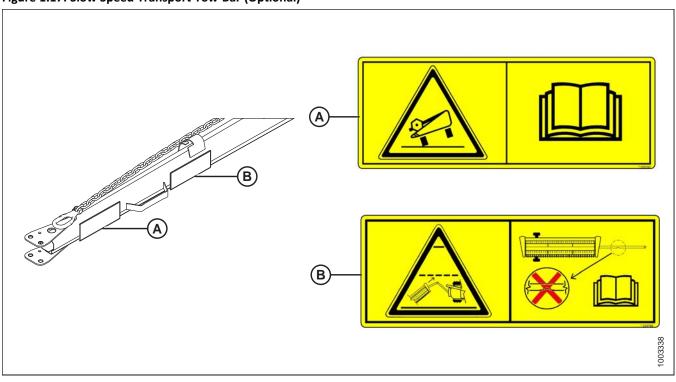


A - MD #220797 B - MD #220798

Figure 1.18: Vertical Knife (Optional)

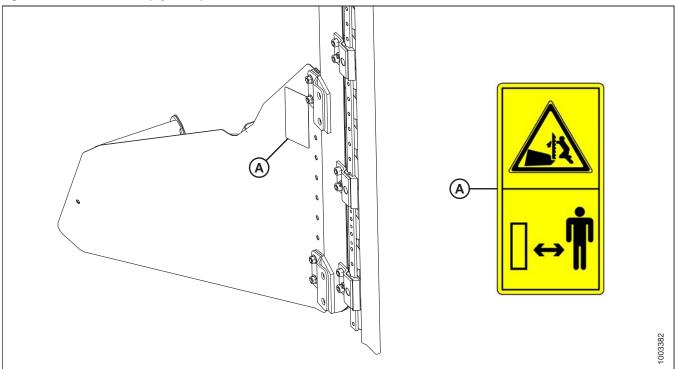

A - MD #174684


Figure 1.19: Endsheets, Reel Arms, and Backsheet

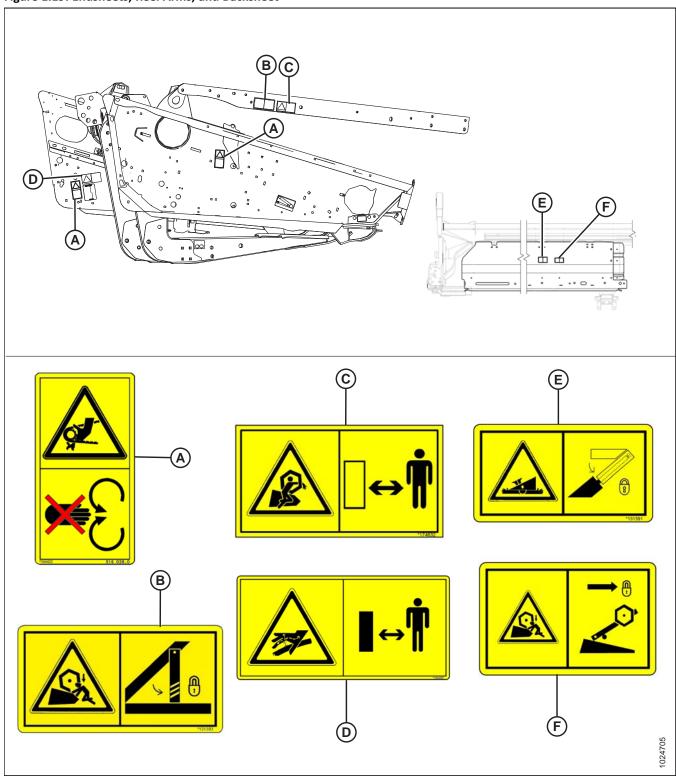

- A MD #184422 (Four Places on DK; Two Places on SK)
- C MD #174632 (Two Places)
- E MD #131391 (Two Places)


- B MD #131393 (Four Places on Single Reel)
- D MD #166466 (Two Places)
- F MD #131392 (Two Places on Double Reel Only)

Figure 1.20: Backtube – D115 Draper Header

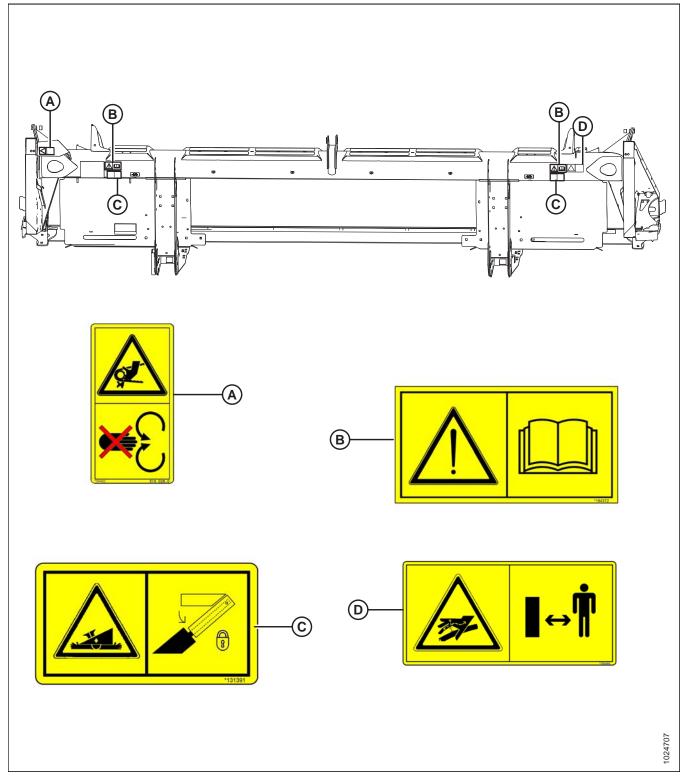


A - MD #184422 B - MD #184372 C - MD #131391 D - MD #166466

Figure 1.21: Backtube – D120 Draper Header

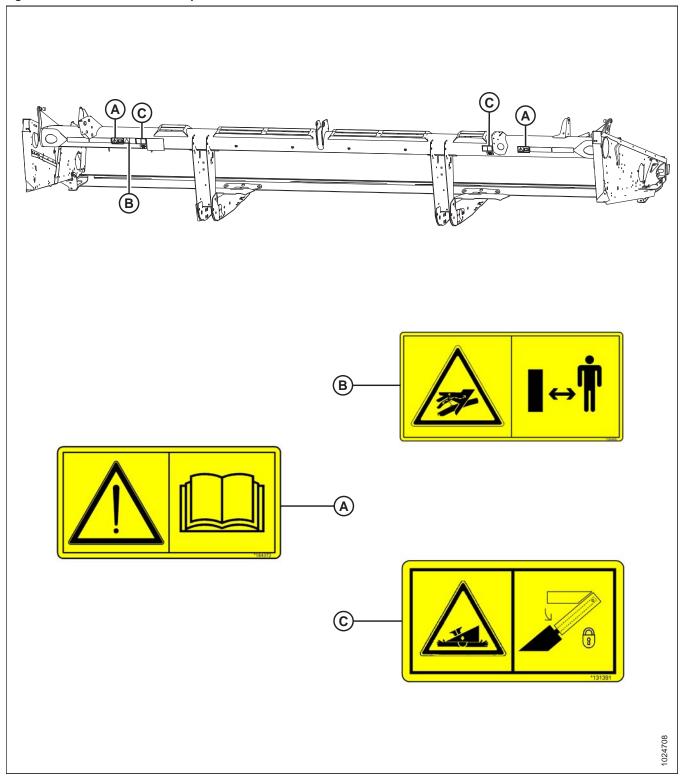


A - MD #184372 B - MD #166466 C - MD #131391

Figure 1.22: Backtube – D125 Draper Header

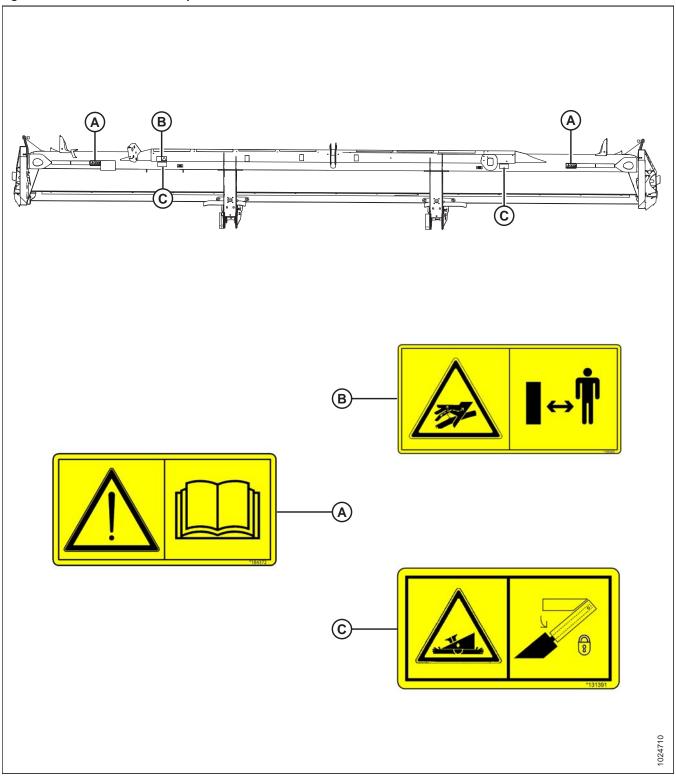


A - MD #184372 B - MD #166466 C - MD #131391

Figure 1.23: Backtube – D130 and D135 Draper Headers

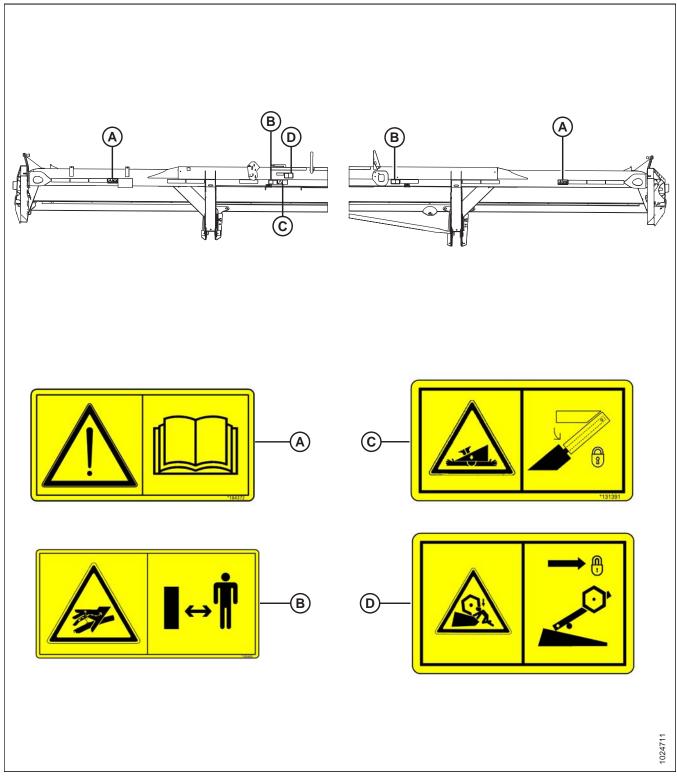

A - MD #184372 B - MD #131391 C - MD #166466 D - MD #131392

Figure 1.24: Backtube – D140 Draper Header

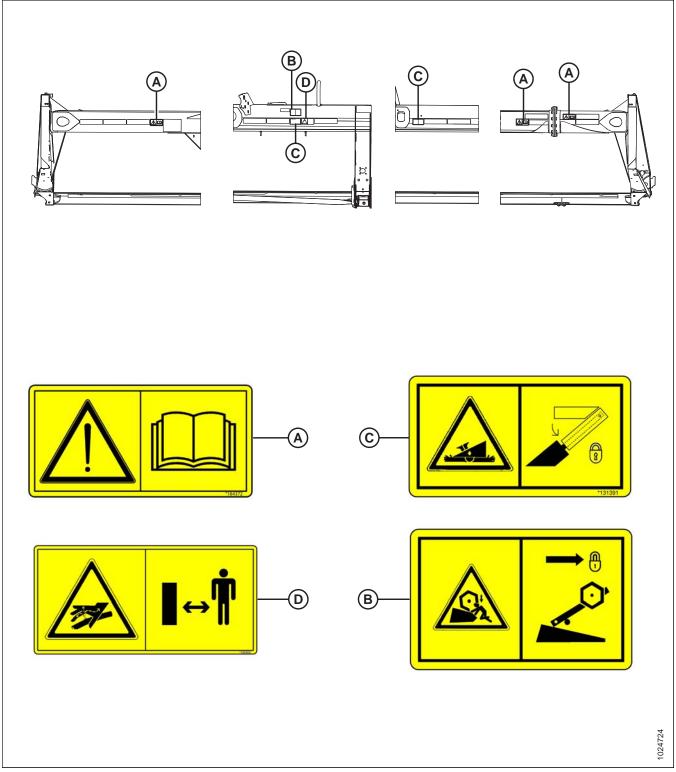

A - MD #184372 B - MD #131392 C - MD #131391 D - MD #166466

1.9 Understanding Safety Signs

MD #113482

General hazard pertaining to machine operation and servicing

DANGER

To prevent injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do **NOT** allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of machine before starting engine and during operation.
- Keep riders off the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage header drive, put transmission in Neutral, and wait for all movement to stop before leaving operator's position.
- Stop the engine and remove the key from the ignition before servicing, adjusting, lubricating, cleaning, or unplugging machine.
- Engage safety locks to prevent lowering of raised unit before servicing in the raised position.
- Use slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

MD #131391

Header crushing hazard

DANGER

To prevent injury or death from fall of a raised header:

- Fully raise header, stop the engine, remove the key, and engage mechanical safety locks on combine or windrower before going under header
- Alternatively, rest header on ground, stop the engine, and remove the key before servicing

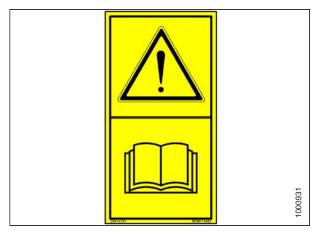


Figure 1.25: MD #113482

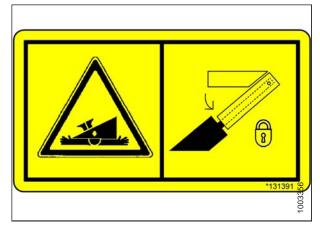


Figure 1.26: MD #131391

MD #131392

Reel crushing hazard

WARNING

 To prevent injury from fall of raised reel; fully raise reel, stop the engine, remove the key, and engage mechanical safety lock on each reel support arm before working on or under reel.

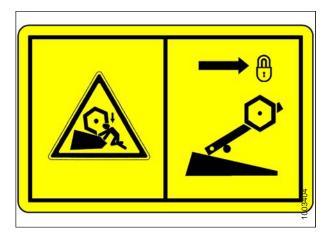


Figure 1.27: MD #131392

MD #131393

Reel crushing hazard

WARNING

To prevent injury from fall of raised reel; fully raise reel, stop
the engine, remove the key, and engage mechanical safety
lock on each reel support arm before working on or
under reel.



Figure 1.28: MD #131393

MD #166466

High-pressure oil hazard

WARNING

To prevent serious injury, gangrene, or death:

- Do NOT go near leaks.
- Do **NOT** use finger or skin to check for leaks.
- Lower load or relieve hydraulic pressure before loosening fittings.
- High-pressure oil can easily punctures skin, and can cause serious injury, gangrene, or death.
- If injured, seek emergency medical help. Immediate surgery is required to remove oil.

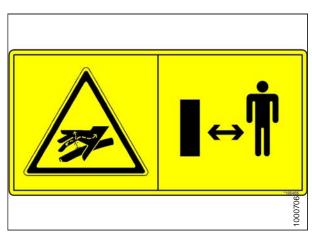


Figure 1.29: MD #166466

MD #174632

Reel entanglement hazard

DANGER

To prevent injury from entanglement with rotating reel:

• Stand clear of header while machine is running.

To prevent injury from sharp cutting knife:

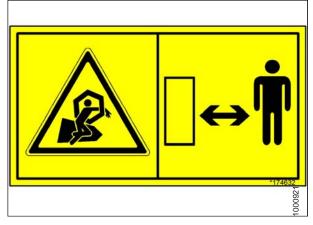


Figure 1.30: MD #174632





Figure 1.31: MD #174684





MD #184372

MD #174684

WARNING

Knife cutting hazard

rotating knife.

General hazard pertaining to machine operation and servicing

Wear heavy canvas or leather gloves when working

Be sure no one is near the vertical knife when removing or

DANGER

To prevent injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do **NOT** allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of machine before starting engine and during operation.
- Keep riders off the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage header drive, put transmission in Neutral, and wait for all movement to stop before leaving operator's position.

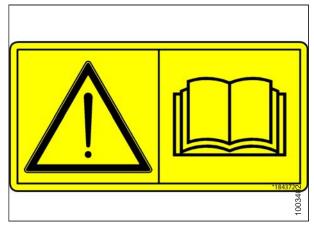


Figure 1.32: MD #184372

- Stop the engine and remove the key from the ignition before servicing, adjusting, lubricating, cleaning, or unplugging machine.
- Engage safety locks to prevent lowering of raised unit before servicing in the raised position.
- Use slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

MD #184422

Hand and arm entanglement hazard

WARNING

To prevent injury:

- Stop engine and remove key before opening shield.
- Do NOT operate without shields in place.



Figure 1.33: MD #184422

MD #220797

Transport tipping hazard

DANGER

To prevent serious injury or death from transport tipping:

 Read the operator's manual for more information on potential tipping or rollover of header while transporting.

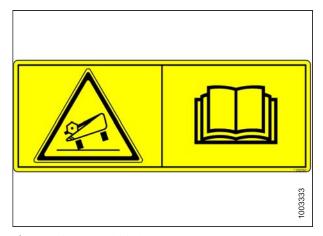


Figure 1.34: MD #220797

200337

Figure 1.35: MD #220798

MD #220798

Loss of control hazard.

DANGER

To prevent serious injury or death from loss of control:

- Do NOT tow the header with a dented or otherwise damaged tow pole.
- Consult the operator's manual for more information.

MD #220799

Loss of control hazard

WARNING

To prevent serious injury or death from loss of control:

• Ensure tow-bar lock mechanism is locked.

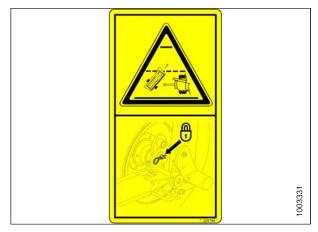


Figure 1.36: MD #220799

MD #279085

Auger entanglement hazard

DANGER

To prevent injury from rotating auger:

- Stand clear of auger while machine is running.
- Stop engine and remove key before servicing auger.
- Do **NOT** reach into moving parts while machine is running.



Figure 1.37: MD #279085

Chapter 2: Product Overview

2.1 Definitions

The following terms and acronyms may be used in this manual:

Term	Definition
API	American Petroleum Institute
ASTM	American Society of Testing and Materials
Bolt	A headed and externally threaded fastener that is designed to be paired with a nut
Cab-forward	Windrower operation with Operator and cab facing in direction of travel
CDM	Cab display module on a windrower
Center-link	A hydraulic cylinder link between header and machine used to change header angle
CGVW	Combined gross vehicle weight
D1 SP Series Header	MacDon D115, D120, D125, D130, D135, and D140 SP rigid draper headers
DDD	Double-draper drive
DK	Double knife
DKD	Double-knife drive
DR	Double reel
DWA	Double Windrow Attachment
Engine-forward	Windrower operation with Operator and engine facing in direction of travel
Export header	Header configuration typical outside North America
FFFT	Flats from finger tight
Finger tight	Finger tight is a reference position where sealing surfaces or components are making contact with each other, and fitting has been tightened to a point where fitting is no longer loose
GVW	Gross vehicle weight
Hard joint	A joint made with use of a fastener where joining materials are highly incompressible
Header	A machine that cuts and lays crop into a windrow and is attached to a windrower
Hex key	A tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in head (internal-wrenching hexagon drive); also known as an Allen key and various other synonyms
HDS	Hydraulic deck shift
hp	Horsepower
ISC	Intermediate Speed Control
IIC	Joint Industrial Council: A standards body that developed standard sizing and shape for original 37° flared fitting
Knife	A cutting device which uses a reciprocating cutter (also called a sickle)
M Series windrower	MacDon M100, M105, M150, M155, M155 <i>E4</i> , M200, and M205 windrowers
MDS	Mechanical deck shift

Term	Definition
n/a	Not applicable
North American header	Header configuration typical in North America
NPT	National Pipe Thread: A style of fitting used for low-pressure port openings. Threads on NPT fittings are uniquely tapered for an interference fit
Nut	An internally threaded fastener that is designed to be paired with a bolt
ORB	O-ring boss: A style of fitting commonly used in port openings on manifolds, pumps, and motors
ORFS	O-ring face seal: A style of fitting commonly used for connecting hoses and tubes. This style of fitting is also commonly called ORS, which stands for O-ring seal
rpm	Revolutions per minute
SAE	Society of Automotive Engineers
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread into a mating part
SDD	Single-draper drive
Self-Propelled (SP) Windrower	Self-propelled machine consisting of a power unit with a header
SK	Single knife
SKD	Single-knife drive
Soft joint	A joint made with use of a fastener where joining materials are compressible or experience relaxation over a period of time
spm	Strokes per minute
SR	Single reel
Tension	Axial load placed on a bolt or screw, usually measured in Newtons (N) or pounds (lb.)
TFFT	Turns from finger tight
Timed knife drive	Synchronized motion applied at cutterbar to two separately driven knives from a single hydraulic motor
Torque	The product of a force X lever arm length, usually measured in Newton-meters (Nm) or foot-pounds (lbf-ft)
Torque angle	A tightening procedure where fitting is assembled to a precondition (finger tight) and then nut is turned farther a number of degrees to achieve its final position
Torque-tension	The relationship between assembly torque applied to a piece of hardware and axial load it induces in bolt or screw
UCA	Upper cross auger
Untimed knife drive	Unsynchronized motion applied at cutterbar to two separately driven knives from a single hydraulic motor or two hydraulic motors
Washer	A thin cylinder with a hole or slot located in the center that is to be used as a spacer, load distribution element, or locking mechanism
Windrower	Power unit for a header

2.2 Specifications

The following symbol and letters are used in Table 2.1, page 25 and Table 2.2, page 27:

S: standard / O_F: optional (factory installed) / O_D: optional (dealer installed) / -: not available

Table 2.1 Header Specifications

Table 2.1 Header Specification				
Cutterbar				
Effective cutting width (dista	nce between crop divider points)			
4.6 m (15 ft.) header			4572 mm (180 in.)	S
6.1 m (20 ft.) header			6096 mm (240 in.)	S
7.6 m (25 ft.) header			7620 mm (300 in.)	S
9.1 m (30 ft.) header			9144 mm (360 in.)	S
10.7 m (35 ft.) header			10,668 mm (420 in.)	S
12.2 m (40 ft.) header			12,192 mm (480 in.)	S
Cutterbar lift range at guard t	ip (center-link fully retracted)		1265 mm (49.8 in.)	S
Knife				
Single-knife drive (all sizes): C	ne hydraulic motor with V-belt to one h	eavy duty	MD knife drive box	O _F
Double-knife drive 4.6–10.7 n MD knife drive boxes	n [15–35 ft.] (timed): One hydraulic mot	or with two	o V-belts to two heavy duty	O _F
Double-knife drive 12.2 m [40 drive boxes	ft.] (untimed): Two hydraulic motors w	ith V-belts	to two heavy duty MD knife	O _F
Knife stroke			76 mm (3 in.)	S
Single-knife speed ¹	6.1–7.6 m (20–25 ft.) headers	120	00–1400 (strokes/min.)	S
Single-knife speed ¹	9.1 m (30 ft.) header	120	00–1400 (strokes/min.)	S
Single-knife speed ¹	10.7 m (35 ft.) header	115	50–1300 (strokes/min.)	S
Single-knife speed ¹	12.2 m (40 ft.) header	115	50–1220 (strokes/min.)	S
Double-knife speed ¹	6.1–7.6 m (20–25 ft.) headers	140	00–1700 (strokes/min.)	S
Double-knife speed ¹	9.1 (30 ft.) header	120	00–1500 (strokes/min.)	S
Double-knife speed ¹	10.7 m (35 ft.) header	120	00–1400 (strokes/min.)	S
Double-knife speed1	12.2 m (40 ft.) header	120	00–1400 (strokes/min.)	S
Knife Sections				
Over-serrated, solid, bolted, 3	3.5 serrations per cm (9 serrations per in	ch)		O _F
Over-serrated, solid, bolted, 5	5.6 serrations per cm (14 serrations per i	nch)		O _F
Knife overlap at center (doub	le-knife headers)		3 mm (1/8 in.)	S

^{1.} Under normal cutting conditions, set knife speed at the knife drive pulley between 600 and 640 rpm (1200 and 1280 spm). If set to low side of chart, you could experience knife stalling.

Table 2.1 Header Specifications (continued)

Guards and Hold-Downs			
Guard: pointed, forged, double heat treated (DH Hold-down: Sheet metal, adjustment bolt	Γ)		O _F
Guard: pointed, forged, case hardened (CH) Hold-down: Sheet metal, adjustment bolt			O_F
Guard: stub, forged bottom, forged top, adjustme	ent plate		O _F
Guard: stub, forged bottom, sheet metal top, adj	ustment bolt		O _F
Guard: 4 point, no choke design (2 long points w	ith tangs, 2 short points witho	ut tangs)	O _F
Guard Angle (Cutterbar on Ground)			
Center-link retracted	4.6–7.5 m (15–25 ft.) headers	7.5°	S
Center-link retracted	9.1–12.2 m (30–40 ft.) headers	2.5°	S
Center-link extended	4.6–7.5 m (15–25 ft.) headers	17°	S
Center-link extended	9.1–12.2 m (30–40 ft.) headers	12°	S
Draper (Conveyor) and Decks			
Draper width		1057 mm (41 19/32 in.)	S
Draper drive		Hydraulic	S
Draper speed		225 m/min. (0-742 fpm)	S
PR15 Pick-Up Reel			S
Quantity of tine tubes		5, 6, or 9	_
Center tube diameter: All reel sizes except 10.7 n	n (35 ft.) single reel	203 mm (8 in.)	_
Center tube diameter: 10.7 m (35 ft.) single reel		254 mm (10 in.)	_
Finger tip radius	Factory assembled	800 mm (31-1/2 in.)	_
Finger tip radius	Adjustment range	766–800 mm (30 3/16 – 31 1/2 in.)	-
Effective reel diameter (via cam profile)		1650 mm (65 in.)	1
Finger length		290 mm (11 in.)	_
Finger spacing (staggered on alternate bats)		150 mm (6 in.)	S
Reel drive		Hydraulic	S
Reel speed (adjustable from cab using ground spe	eed index)	0–85 rpm	S

Table 2.2 Header Attachments


Upper Cross Auger			O _D
Outside diameter		305 mm (12 in.)	
Tube diameter	All sizes except 7.6 m (25 ft.) header	152 mm (6 in.)	
Tube diameter	7.6 m (25 ft.) header	178 mm (7 in.)	
Stabilizer Wheel / Slow Speed Transport			O _D
Wheels		38 cm (15 in.)	
Tires		P205/75 R-15	

Table 2.3 Header Weight

_		
Estimated weight range for base (variances are due to different pa	header without performance optio ockage configurations)	ns
4.6 m (15 ft.) header		1395–1483 kg (3075–3270 lb.)
6.1 m (20 ft.) header		1517–1624 kg (3345–3580 lb.)
7.6 m (25 ft.) header	North America frame	1696–1875 kg (3740–4130 lb.)
7.6 m (25 ft.) header	Export frame	1676 kg (3695 lb.)
9.1 m (30 ft.) header	North America frame	2003–2341 kg (4415–5160 lb.)
9.1 m (30 ft.) header	Export frame	2157 kg (4755 lb.)
10.7 m (35 ft.) header	North America frame	2209–2626 kg (4870–5790 lb.)
10.7 m (35 ft.) header	Export frame	2379 kg (5245 lb.)
12.2 m (40 ft.) header	North America frame	2540-2617 kg (5600-5770 lb.)
12.2 m (40 ft.) header	Export frame	2640 kg (5820 lb.)

2.3 Component Identification

Figure 2.1: D1 SP Windrower Header Components

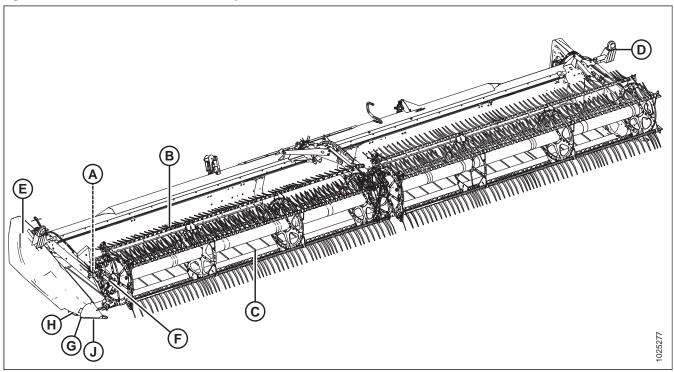

- A Reel Cam
- D Transport Light
- G Knife Drive Box

- B Pick-Up Reel Tines E - Endshield
- H Skid Shoe

- C Drapers
- F Reel Fore-Aft Cylinder
- J Crop Divider

Chapter 3: Operation

Owner/Operator Responsibilities

CAUTION

- · It is your responsibility to read and understand this manual completely before operating the header. Contact your MacDon Dealer if an instruction is not clear to you.
- Follow all safety messages in the manual and on safety decals on the machine.
- Remember that YOU are the key to safety. Good safety practices protect you and the people around you.
- Before allowing anyone to operate the header, for however short a time or distance, make sure they have been instructed in its safe and proper use.
- Review the manual and all safety related items with all Operators annually.
- Be alert for other Operators not using recommended procedures or not following safety precautions. Correct these mistakes immediately, before an accident occurs.
- Do NOT modify the machine. Unauthorized modifications may impair the function and/or safety of the machine and also may reduce the length of service you receive from your machine.
- The safety information given in this manual does not replace safety codes, insurance needs, or laws governing your area. Be sure your machine meets the standards set by these regulations.

3.2 Operational Safety



CAUTION

Adhere to the following safety precautions:

- Follow all safety and operational instructions provided in your operator's manuals. If you do not have a windrower manual, get one from your Dealer and read it thoroughly.
- Never attempt to start the engine or operate the machine except from the windrower seat.
- Check the operation of all controls in a safe, clear area before starting work.
- Do NOT allow riders on the windrower.

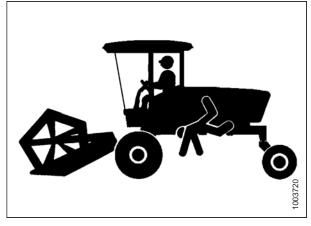


Figure 3.1: No Riders



CAUTION

- Never start or move the machine until you are sure all bystanders have cleared the area.
- Avoid travelling over loose fill, rocks, ditches, or holes.
- Drive slowly through gates and doorways.
- When working on inclines, travel uphill or downhill whenever possible. Be sure to keep transmission in gear when travelling downhill.
- Never attempt to get on or off a moving machine.
- . Do NOT leave operator's station while the engine is running.
- To avoid bodily injury or death from unexpected startup of a machine, always stop the engine and remove the key before adjusting or removing plugged material from the machine.

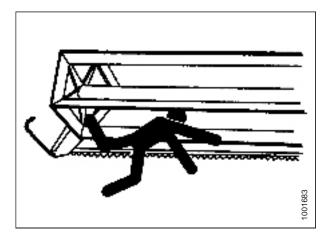


Figure 3.2: Bystander Hazard

- Check for excessive vibration and unusual noises. If there is any indication of trouble, shut down and inspect the machine. Follow proper shutdown procedure. For instructions, refer to 3.4 Shutting down the Machine, page 39.
- Operate only in daylight or good artificial light.

3.2.1 Header Safety Props

The header safety props, located on the header lift cylinders, prevent the lift cylinders from unexpectedly retracting and lowering the header. Refer to your windrower operator's manual for instructions.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

3.2.2 Reel Safety Props

The reel safety props, located on the reel support arms, prevent the reel from unexpectedly lowering.



WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

To prevent damage to the reel support arms, do NOT transport the header with the reel safety props engaged.

Engaging Reel Safety Props



WARNING

To prevent bodily injury from the fall of a raised reel, always engage the reel safety props before going under the raised reel for any reason.

- Raise the reel fully.
- 2. Shut down the engine, and remove the key from the ignition.
- Move reel safety props (A) to the engaged position (as shown). The prop MUST be placed on the top surface of raised lug (B), making contact with the cylinder mount, to ensure positive engagement.

NOTE:

Keep pivot bolt (C) sufficiently tight so that the prop remains in the stored position when not in use, but can still be engaged using hand force.

4. Repeat the previous step on the opposite side of the header.

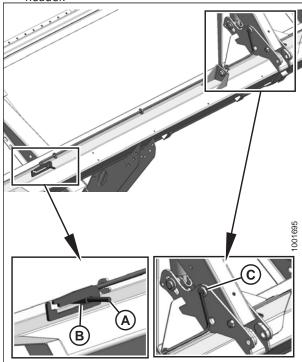


Figure 3.4: Reel Safety Prop - Center Arm

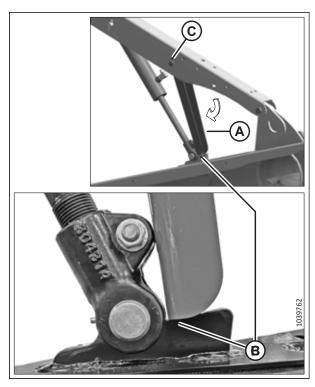


Figure 3.3: Engaged Reel Safety Prop - Left Shown

THE CONTENT ON THIS PAGE HAS CHANGED SINCE THIS MANUAL (215018 REVISION A) WAS PUBLISHED.

- 3. Use handle (A) to move lock rod to inboard position (B) which engages pin (C) under prop.
- 4. Lower reel until safety props contact the outer arm cylinder mounts and the center arm pins.

Disengaging Reel Safety Props

- 1. Raise the reel to maximum height.
- 2. Move reel safety props (A) back inside the reel arms.

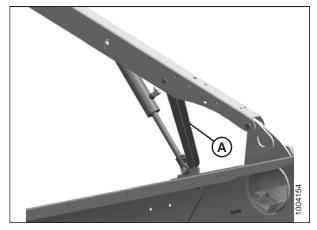


Figure 3.5: Reel Safety Prop - Left Outer Arm

3. Use handle (B) to move lock rod (A) to the outboard position.

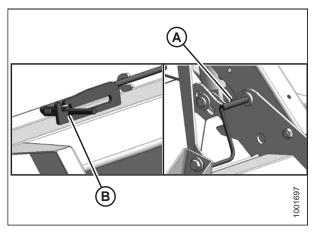


Figure 3.6: Reel Safety Prop - Center Arm

3.2.3 Endshields

A hinged, polyethylene endshield is fitted on each end of the header.

Opening Endshields

- 1. Push release lever (A) located on the backside of the endshield to unlock the shield.
- 2. Pull endshield open using handle depression (B).

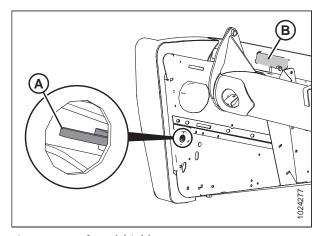


Figure 3.7: Left Endshield

3. Pull endshield at handle depression (A). Endshield is retained by hinge tab (B) and will open in direction (C).

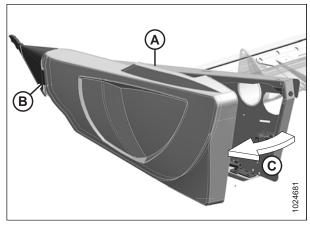


Figure 3.8: Left Endshield

- 4. If additional clearance is required, pull the endshield free of hinge tab (A) and swing shield toward the rear of the header.
- 5. Engage safety latch (B) on hinge arm to secure the shield in fully open position.

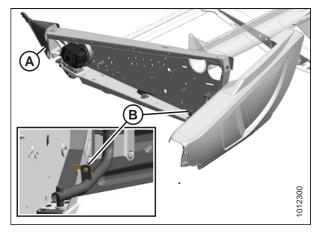


Figure 3.9: Left Endshield

Closing Endshields

- 1. Disengage lock (B) to allow endshield to move.
- 2. Insert front of endshield behind hinge tab (A) and into divider cone.

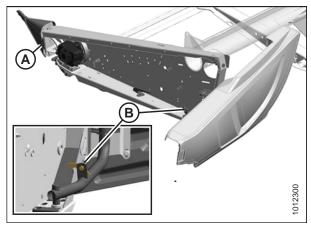


Figure 3.10: Left Endshield

- 3. Swing endshield in direction (A) into closed position. Engage lock with a firm push.
- 4. Check that endshield is locked.

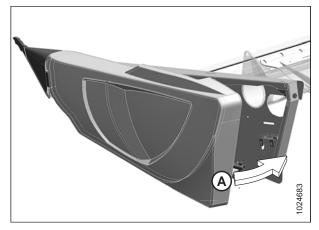


Figure 3.11: Left Endshield

Removing Endshields

- 1. Fully open the endshield. For instructions, refer to *Opening Endshields*, page 32.
- 2. Engage lock (A) to prevent endshield movement.
- 3. Remove self-tapping screw (B).
- 4. Slide endshield upwards and remove from hinge arm (C).
- 5. Place endshield away from work area.

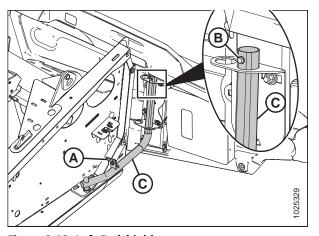


Figure 3.12: Left Endshield

Installing Endshields

 Guide endshield onto hinge arm (C) and slowly slide it downwards.

NOTE:

Ensure hinge arm (C) is installed in the outboard hole on the hinge bracket, as shown in illustration at right.

- 2. Install self-tapping screw (B).
- 3. Disengage lock (A) to allow endshield movement.
- 4. Close the endshield. For instructions, refer to *Closing Endshields, page 33*.

NOTE:

Endshields may expand or contract when subjected to large temperature changes. Top pin and lower latch bracket positions can be adjusted to compensate for dimensional changes. For instructions, refer to *Checking and Adjusting Endshields, page 35*.

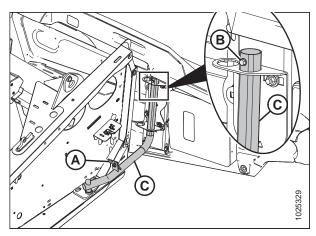


Figure 3.13: Left Endshield

Checking and Adjusting Endshields

Endshields are subject to expansion or contraction caused by large temperature variations. The position of the top pin and lower latch can be adjusted to compensate for dimensional changes.

Checking the endshield:

1. Check gap (X) between front end of the shields and the header frame and compare to the values in Table 3.1, page 35.

Table 3.1 Endshield Gap at Various Temperatures

Temperature in °C (°F)	Gap (X) mm (in.)
7 (45)	13–18 (1/2–23/32)
18 (65)	10–15 (3/8–19/32)
29 (85)	7–12 (9/32–15/32)
41 (105)	4–9 (5/32–11/32)

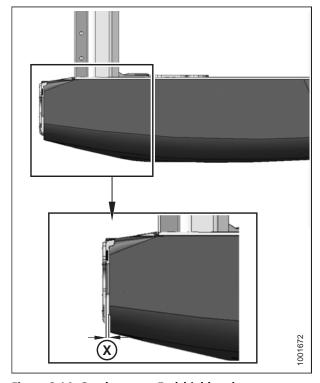


Figure 3.14: Gap between Endshield and Header Frame

Adjusting the endshield gap:

1. Loosen four bolts (A) on support tube bracket (B).

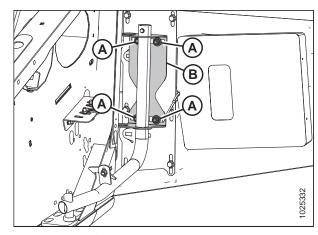


Figure 3.15: Left Endshield Support Tube

- 2. Loosen three bolts (A) on latch assembly (B).
- 3. Adjust latch assembly (B) to achieve the desired gap between the front end of the shield and the header frame. Refer to Table 3.1, page 35 for the recommended endshield gap at various temperatures.
- 4. Tighten three bolts (A) on the latch assembly to 27 Nm (20 lbf·ft).

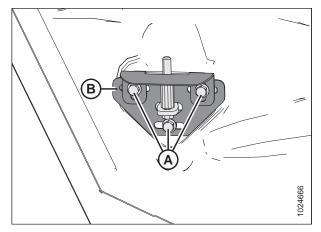


Figure 3.16: Left Endshield Latch Assembly

- 5. Tighten four bolts (A) on support tube bracket (B) to 31 Nm (23 lbf·ft).
- 6. Close endshield.

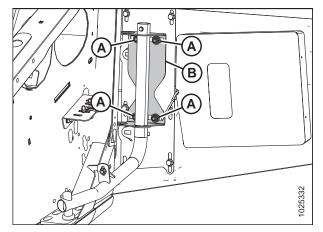


Figure 3.17: Left Endshield Support Tube

3.2.4 Daily Start-Up Check



CAUTION

- Clear the area of other persons, pets, etc. Keep children away from machinery. Walk around the machine to be sure no one is under, on, or close to it.
- Wear close-fitting clothing and protective shoes with slipresistant soles.
- Remove foreign objects from the machine and surrounding area.
- Carry with you any protective clothing and personal safety devices that could be necessary through the day. Do NOT take chances. You may need a hard hat, protective glasses or goggles, heavy gloves, a respirator or filter mask, or wet weather gear.

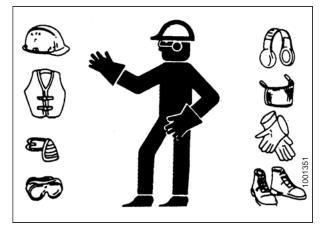


Figure 3.18: Safety Devices

 Protect against noise. Wear a suitable hearing protective device such as ear muffs or ear plugs to protect against objectionable or uncomfortably loud noises.

Complete the following tasks each day before start-up:

1. Check the machine for leaks and any parts that are missing, broken, or not working correctly.

NOTE:

Use proper procedure when searching for pressurized fluid leaks. For instructions, refer to 5.3.5 Checking Hydraulic Hoses and Lines, page 123.

- 2. Clean all lights and reflective surfaces on the machine.
- 3. Perform all daily maintenance. For instructions, refer to 5.3.1 Maintenance Schedule/Record, page 120.

Break-In Period 3.3



CAUTION

Before investigating an unusual sound or attempting to correct a problem, shut off engine and remove key.

NOTE:

Until you become familiar with the sound and feel of your new header, be extra attentive.

After attaching the header to the windrower for the first time, follow these steps:

Operate the machine with the reels, drapers, and knives running slowly for five minutes. Watch and listen FROM THE **OPERATOR'S SEAT** for binding or interfering parts.

Reels and side drapers will not operate until oil flow fills the lines.

Refer to 5.3.2 Break-In Inspection, page 121 and perform all the specified tasks.

Shutting down the Machine 3.4



A DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

To shut down, and before leaving the windrower seat for any reason, follow these steps:

- 1. Park on level ground whenever possible.
- 2. Lower the header fully.
- 3. Place all controls in NEUTRAL or PARK.
- 4. Disengage the header drive.
- 5. Lower and fully retract the reel.
- 6. Stop the engine and remove the key from the ignition.
- 7. Wait for all movement to stop.

Cab Controls 3.5



CAUTION

Be sure all bystanders are clear of machine before starting engine or engaging any header drives.

Refer to your windrower operator's manual for identification of the following in-cab controls:

- Header engage/disengage
- Header height
- Header angle
- Ground speed
- Knife speed
- Draper speed
- Reel speed
- Reel height
- Reel fore-aft position

3.6 Header Setup

3.6.1 Header Attachments

Several attachments to improve the performance of your D1 Series Draper Header are available as options that can be installed by your MacDon Dealer. Refer to 6 Options and Attachments, page 239 for descriptions of available items.

3.6.2 Header Settings

The following table is a guideline for setting up the D1 Series SP Draper Header. Settings other than those suggested can be made to suit various crops and conditions not covered here.

Table 3.2 Recommended Header Settings

Crop Condition	Divider Rods	Header Angle ²	Knife Speed³	Reel Tine Pitch ⁴	Reel Speed % ⁵	Reel Fore-Aft ⁶	Skid Shoe Position 7	Stabilizer Wheels ⁸	Upper Cross Auger	Float N (lbf) ⁹
Crop Type: Cereals	ereals									
Stubble Heig	Stubble Height: <102 mm (<4 in.)	(<4 in.)								
Light	On	0–3	Medium	2	10–15	6 or 7	Up or center	Variable	Not required	311 (70)
Normal	On	0–3	High	2	10	6 or 7	Up or center	Variable	Not required	311 (70)
Неаvy	On	4-7	High	2	10	6 or 7	Up or center	Variable	Not required	311 (70)
Lodged	On	4–7	High	3	5–10	4 or 5	Up or center	Variable	Not required	311 (70)
Crop Type: Cereals	ereals									
Stubble Heig	Stubble Height: 102–203 mm (4–8 in.)	mm (4–8 in.)								
Light	On	0–3	Medium	2	10–15	6 or 7	Center or down	Variable	Not required	311 (70)
Normal	On	0–3	High	2	10	6 or 7	Center or down	Variable	Not required	311 (70)
Неаvy	On	4–7	High	2	10	6 or 7	Down	Variable	Not required	311 (70)
Lodged	On	4–7	High	3	5–10	4 or 5	Down	Variable	Not required	311 (70)

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. For instructions, refer to Controlling Header Angle, page 54.

Refer to 3.7.9 Knife Speed, page 57.

Refer to Reel Cam Settings, page 68.

Percentage above ground speed. Refer to 3.7.6 Reel Speed, page 55.

Refer to 3.7.11 Reel Fore-Aft Position, page 58.

Skid shoe position is used in combination with header angle to determine the cutting height when cutting on or very close to the ground. Refer to 3.7.1 Cutting Height, page 49. 7. 6. 6. 7.

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain, and to minimize bouncing. ∞ *6*

Force required to lift header at ends. Refer to your windrower operator's manual for adjustment procedures.

Recommended Header Settings (continued) Table 3.2

Crop Condition	Divider Rods	Header Angle ¹⁰	Knife Speed 11	Reel Tine Pitch ¹²	Reel Speed %13	Reel Fore-Aft ¹⁴	Skid Shoe Position ¹⁵	Stabilizer Wheels ¹⁶	Upper Cross Auger	Float N (lbf) ¹⁷
Crop Type: Cereals	ereals									
Stubble Heig	Stubble Height: >203 mm (>8 in.)	(>8 in.)								
Light	uО	0–3	Medium	2	10–15	6 or 7	Not applicable	Storage	Not required	667 (150)
Normal	uО	0–3	High	2	10	6 or 7	Not applicable	Storage	Not required	667 (150)
Неаvy	uО	4–7	High	2	10	6 or 7	Not applicable	Storage	Not required	667 (150)
Lodged	On	4–7	High	3	5–10	4 or 5	Not applicable	Storage	Not required	667 (150)
Crop Type: Canola	anola									
Stubble Heig	Stubble Height: 102–203 mm (4–8 in.)	mm (4–8 in.)								
Light	uO	8–10	Low	2	5–10	6 or 7	Variable	Variable	Not required	311–445 (70–100)
Normal	On	8–10	Medium	1	10	6 or 7	Center or down	Variable	Not required	311–445 (70–100)
Неаvу	uO	8–10	Medium	1	10	3 or 4	Variable	Variable	Recommended	311–445 (70–100)
Lodged	On	8–10	Medium	2	5–10	3 or 4	Center or down	Variable	Recommended	311–445 (70–100)

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. For instructions, refer to Controlling Header Angle, page 54. 10.

Refer to 3.7.9 Knife Speed, page 57.

Refer to Reel Cam Settings, page 68. 12.

Percentage above ground speed. Refer to 3.7.6 Reel Speed, page 55. 13.

Refer to 3.7.11 Reel Fore-Aft Position, page 58.

Skid shoe position is used in combination with header angle to determine the cutting height when cutting on or very close to the ground. Refer to 3.7.1 Cutting Height, page 49. 14. 15.

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain, and to minimize bouncing. 16. 17.

Force required to lift header at ends. Refer to your windrower operator's manual for adjustment procedures.

Recommended Header Settings (continued) Table 3.2

Crop Condition	Divider Rods	Header Angle ¹⁸	Knife Speed ¹⁹	Reel Tine Pitch ²⁰	Reel Speed % ²¹	Reel Fore-Aft ²²	Skid Shoe Position ²³	Stabilizer Wheels ²⁴	Upper Cross Auger	Float N (Ibf) ²⁵
Crop Type: Canola	anola									
Stubble Heig	Stubble Height: >203 mm (>8 in.)	(>8 in.)								
Light	uO	8–10	Low	4	5–10	6 or 7	Not applicable	Storage	Recommended	667 (150)
Normal	uO	8–10	Medium	2	10	6 or 7	Not applicable	Storage	Recommended	667 (150)
Неаvy	uO	8–10	Medium	3	10	3 or 4	Not applicable	Storage	Recommended	667 (150)
Lodged	uO	8–10	Medium	3	5–10	3 or 4	Not applicable	Storage	Recommended	667 (150)
Crop Type: Flax	lax									
Stubble Heig	Stubble Height: 51–153 mm (2–6 in.)	ım (2–6 in.)								
Light	On	4–7	High	2	5–10	6 or 7	Center or down	Variable	Not required	311–445 (70–100)
Normal	On	0–3	High	2	10	6 or 7	Center or down	Variable	Not required	311–445 (70–100)
Неаvу	On	4–7	High	2	10	6 or 7	Center or down	Variable	Not required	311–445 (70–100)
Lodged	On	8–10	High	2	10	6 or 7	Center or down	Variable	Not required	311–445 (70–100)

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. For instructions, refer to Controlling Header Angle, page 54. 18.

Refer to 3.7.9 Knife Speed, page 57.

Refer to Reel Cam Settings, page 68.

Percentage above ground speed. Refer to 3.7.6 Reel Speed, page 55.

Refer to 3.7.11 Reel Fore-Aft Position, page 58.

Skid shoe position is used in combination with header angle to determine the cutting height when cutting on or very close to the ground. Refer to 3.7.1 Cutting Height, page 49. 19. 20. 21. 22. 23.

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain, and to minimize bouncing. 24. 25.

Force required to lift header at ends. Refer to your windrower operator's manual for adjustment procedures.

Recommended Header Settings (continued) Table 3.2

Crop Condition	Divider Rods	Header Angle ²⁶	Knife Speed ²⁷	Reel Tine Pitch ²⁸	Reel Speed % ²⁹	Reel Fore-Aft ³⁰	Skid Shoe Position ³¹	Stabilizer Wheels ³²	Upper Cross Auger	Float N (Ibf) ³³
Crop Type: Edible beans	dible beans					•				
Stubble Height: On ground	ht: On groun	pı								
Light	Off	8–10	Medium	2	5–10	3 or 4	Up or center	Storage	Not required	445 (100)
Normal	Off	8–10	Medium	2	5–10	3 or 4	Up or center	Storage	Not required	445 (100)
Неаvy	Off	8–10	Medium	2	5–10	3 or 4	Up or center	Storage	Not required	445 (100)
Lodged	Off	8–10	Medium	3	5–10	3 or 4	Up or center	Storage	Not required	445 (100)
Crop Type: Grass	rass									
Stubble Height: On ground	ht: On groun	pı								
Light	On	Variable	High	2	10	6 or 7	Up or center	Storage	Not required	311–445 (70–100)
Normal	On	Variable	High	2	10	6 or 7	Up or center	Storage	Not required	311–445 (70–100)
Неаvу	On	Variable	High	2	10	6 or 7	Up or center	Storage	Not required	311–445 (70–100)
Lodged	On	Variable	High	2	10–15	6 or 7	Up or center	Storage	Not required	311–445 (70–100)

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. For instructions, refer to Controlling Header Angle, page 54. 26.

Refer to 3.7.9 Knife Speed, page 57.

Refer to Reel Cam Settings, page 68.

Percentage above ground speed. Refer to 3.7.6 Reel Speed, page 55.

Refer to 3.7.11 Reel Fore-Aft Position, page 58.

Skid shoe position is used in combination with header angle to determine the cutting height when cutting on or very close to the ground. Refer to 3.7.1 Cutting Height, page 49. 27. 28. 29. 30.

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain, and to minimize bouncing.

Force required to lift header at ends. Refer to your windrower operator's manual for adjustment procedures. 32. 33.

Recommended Header Settings (continued) Table 3.2

Float N (lbf) ⁴¹			311–445 (70–100)	311–445 (70–100)	311–445 (70–100)	311–445
Upper Cross Auger			Not required	Not required	Not required	Not required
Stabilizer Wheels ⁴⁰			Storage	Storage	Storage	Storage
Skid Shoe Position ³⁹			Up or center	Up or center	Up or center	Un or center
Reel Fore-Aft ³⁸	•		6 or 7	6 or 7	6 or 7	6 or 7
Reel Speed % ³⁷			10	10	10	10–15
Reel Tine Pitch ³⁶			3	2	2	8
Knife Speed ³⁵			High	High	High	High
Header Angle ³⁴		ъ	Variable	Variable	Variable	Variable
Divider Rods	Ifalfa	Stubble Height: On ground	On	On	On	On
Crop Condition	Crop Type: Alfalfa	Stubble Heig	Light	Normal	Неаvу	heabol

Set header angle as shallow as possible (setting A) with center-link and skid shoes while maintaining cutting height. For instructions, refer to Controlling Refer to 3.7.9 Knife Speed, page 57. Header Angle, page 54. 34.

Refer to Reel Cam Settings, page 68.

Percentage above ground speed. Refer to 3.7.6 Reel Speed, page 55.

Refer to 3.7.11 Reel Fore-Aft Position, page 58.

Skid shoe position is used in combination with header angle to determine the cutting height when cutting on or very close to the ground. Refer to 3.7.1 Cutting Height, page 49. 35. 36. 37. 38.

Stabilizer wheels are used to limit the side-to-side movement when cutting off the ground in rolling terrain, and to minimize bouncing. 40.

Force required to lift header at ends. Refer to your windrower operator's manual for adjustment procedures.

3.6.3 Reel Settings

The following chart illustrates the reel profile at each cam setting and the reel location relative to the ground at different positions on the reel arm. Refer to 3.6.2 Header Settings, page 41 for applicability of each finger pattern and reel position.

NOTE:

The Recommended Reel Settings chart is also applicable for steel reel tines.

Table 3.3 Recommended Reel Settings

Cam Setting Number (Finger Speed Gain)	Reel Position Number	Reel Finger Pattern
1 (0)	6 or 7	1001819
2 (20%)	3 or 4	1,001820

Table 3.3 Recommended Reel Settings (continued)

Cam Setting Number (Finger Speed Gain)	Reel Position Number	Reel Finger Pattern		
3 (30%)	6 or 7	1001821		
4 (35%)	2 or 3	1001822		

NOTE:

- Adjust the reel forward to position the fingers closer to the ground, while tilting the header back. Fingers/tines will dig into the ground at extreme reel-forward positions, so adjust skid shoes or header angle to compensate.
- Adjust the reel aft in thinner crops to prevent plugging on the cutterbar.
- Increase the header angle to position the reel closer to the ground, or decrease angle to position the reel farther from the ground.
- Raise header, increase header angle, and position reel fully forward in lodged crop for maximum stubble height.
- Minimum crop carrying capacity (minimum area of exposed draper between the reel and the header backsheet) occurs with the reel in the farthest aft position.
- Maximum crop carrying capacity (maximum area of exposed draper between the reel and the header backsheet) occurs with the reel in the farthest forward position.
- The finger tip speed at the cutterbar is higher than the reel speed at higher cam settings due to the nature of the cam action. For instructions, refer to Table 3.3, page 47.

3.7 Header Operating Variables

Satisfactory function of the header in all situations requires making proper adjustments to suit various crops and conditions.

Correct operation reduces crop loss and increases productivity. Proper adjustments and timely maintenance will increase the length of service you receive from your machine.

The variables listed in Table 3.4, page 49 (and detailed on the following pages) will affect the header performance.

You will quickly become adept at adjusting the machine to achieve the results you desire. Most of the adjustments have been preset at the factory, but the settings can be changed to suit crop conditions.

Table 3.4 Operating Variables

Variable	Refer to		
Cutting Height	3.7.1 Cutting Height, page 49		
Header Float	3.7.4 Header Float, page 54		
Header Angle	3.7.5 Header Angle, page 54		
Reel Speed	3.7.6 Reel Speed, page 55		
Ground Speed	3.7.7 Ground Speed, page 55		
Reel Height	3.7.10 Reel Height, page 58		
Reel Fore-Aft Position	3.7.11 Reel Fore-Aft Position, page 58		
Reel Tine Pitch	3.7.12 Reel Tine Pitch, page 67		
Crop Divider Rods	3.7.14 Crop Divider Rods, page 75		

3.7.1 Cutting Height

The D1 Series Draper Header is capable of cutting the crop to a desired stubble height or cutting as close as possible to the ground. Cutting height will vary depending on the type of crop, crop conditions, etc.

3.7.2 Cutting off the Ground

The stabilizer wheel system is designed to minimize bouncing at the header ends and float the header to achieve an even cutting height when cutting above ground level in cereal crops. The system produces even stubble height and greatly reduces operator fatigue.

Cutting height is controlled using a combination of the windrower header height control and a stabilizer wheel system (or stabilizer/slow speed transport wheel system).

The stabilizer wheel system (or stabilizer/slow speed transport wheel system) is available only for 9.1–12.2 m (30–40 ft.) headers.

Adjusting Stabilizer/Slow Speed Transport Wheels

A properly adjusted header will achieve a balance between the amount of header weight carried by the float and the amount carried by the stabilizer/slow speed transport wheels.




DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Raise the header so the stabilizer wheels are off the ground. Shut down engine and remove key.
- 2. Check that the float is working properly. Refer to your windrower operator's manual for instructions.

- Remove hairpin (A) from the latch on the right wheel assembly.
- 4. Disengage latch (B), lift the wheel out of the hook, and place wheel on the ground as shown. (This reduces weight of assembly and makes adjusting the wheel position easier.)
- 5. Lift the left wheel slightly to support weight, and pull handle (C) upwards to release the lock.
- 6. Lift the left wheel to the desired height and engage the support channel in slot (D) in the upper support.
- 7. Push down on handle (C) to lock.
- 8. Lift the right wheel back into the field position and ensure latch (B) is engaged.
- 9. Secure the latch with hairpin (A).
- 10. Support the wheel weight by lifting slightly with one hand, and pull up on handle (A) to release the lock.
- 11. Lift the wheels to the desired height, and engage the support channel into slot (B) in the upper support.
- 12. Push down on handle (A) to lock.

 

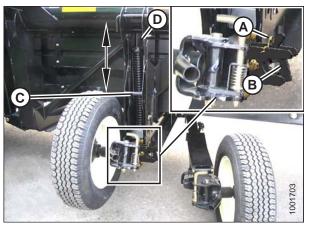


Figure 3.19: Right Wheel

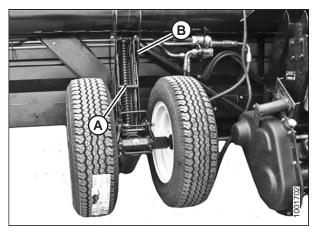


Figure 3.20: Left Wheel

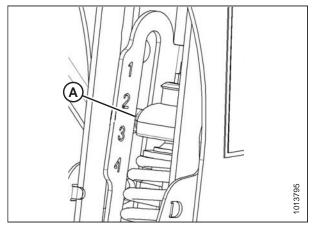


Figure 3.21: Load Indicator

IMPORTANT:

Continuous operation with excessive spring compression (that is, load indicator reading greater than 4 or a compressed length [A] less than 295 mm [11 5/8 in.]) can result in damage to the suspension system.

- 14. Adjust the header angle to the desired working angle with the machine's header angle controls. If header angle is not critical, set it to mid-position.
- 15. Use the windrower cab display module (CDM) controls to automatically maintain cutting height. Refer to your windrower operator's manual for details.

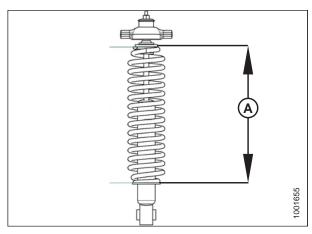


Figure 3.22: Spring Compression

Adjusting Stabilizer Wheels

A properly adjusted header will achieve a balance between the amount of header weight carried by the float and the amount carried by the stabilizer wheels.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.



CAUTION

Handle may be under tension—especially when the wheels are on the ground. Raise the header until the wheels are off the ground before making adjustments.

- 1. Raise the header until the stabilizer wheels are off the ground. Shut down engine and remove the key.
- 2. Check that the float is working properly. Refer to your windrower operator's manual for instructions.
- 3. Support the wheel weight by lifting slightly with one hand on handle (B), and pull up on handle (A) to release the lock.
- 4. Lift the wheel using handle (B), and engage the support channel into center slot (C) in the upper support.
- 5. Push handle (A) down to lock.

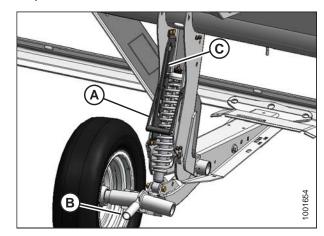


Figure 3.23: Stabilizer Wheel

6. Lower the header to the desired cutting height and check load indicator (A).

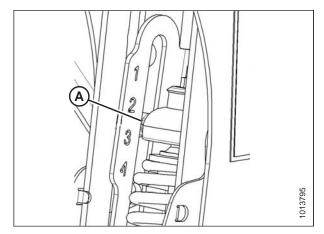


Figure 3.24: Load Indicator

IMPORTANT:

Continuous operation with excessive spring compression (that is, load indicator reading greater than 4 or a compressed length (A) less than 295 mm [11 5/8 in.]) can result in damage to the suspension system.

7. Adjust the header angle to the desired working angle with the windrower's header angle controls. If header angle is not critical, set it to mid-position.

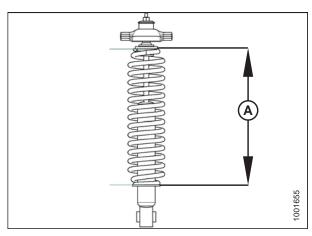


Figure 3.25: Spring Compression

3.7.3 Cutting on the Ground

Cutting on the ground is performed with the header fully lowered and the cutterbar on the ground. The orientation of the knife and knife guards relative to the ground (header angle) is controlled by the skid shoes and the center-link—it is **NOT** controlled by the header lift cylinders. The skid shoes and center-link allow you to adjust to field conditions and maximize the amount of material cut while reducing damage to the knife caused by stones and debris.

The header float system floats the header over the surface to compensate for ridges, trenches, and other variations in ground contour to prevent the cutterbar from pushing into the ground or leaving uncut crop.

Refer to the following for additional information:

- Adjusting Inner Skid Shoes, page 53
- Adjusting Outer Skid Shoes, page 53
- 3.7.5 Header Angle, page 54
- 3.7.4 Header Float, page 54

Adjusting Inner Skid Shoes



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Raise header to full height, engage safety props, shut off engine, and remove key.
- 2. Raise the stabilizer wheels or slow speed transport wheels fully (if installed). For instructions, refer to the following:
 - Adjusting Stabilizer Wheels, page 51
 - Adjusting Stabilizer/Slow Speed Transport Wheels, page 49
- 3. Remove lynch pin (A) from each skid shoe.
- 4. Hold shoe (B) and remove pin (C) by disengaging from the frame and pulling away from the shoe.
- 5. Raise or lower skid shoe (B) to achieve the desired position using the holes in support (D) as a guide.
- 6. Install pin (C), engage in frame, and secure with lynch pin (A).
- 7. Check that all skid shoes are equally adjusted.
- 8. Adjust the header angle to the desired working position using the machine's header angle controls. If the header angle is not critical, set it to the mid-position.
- 9. Check the header float as described in your windrower operator's manual.

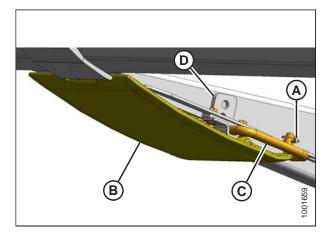


Figure 3.26: Inner Skid Shoe

Adjusting Outer Skid Shoes



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Raise the header to its full height, engage the safety props, shut off the engine, and remove the key from the ignition.
- 2. Raise the stabilizer wheels or slow speed transport wheels fully (if installed). For instructions, refer to the following:
 - Adjusting Stabilizer Wheels, page 51
 - Adjusting Stabilizer/Slow Speed Transport Wheels, page 49

- 3. Remove lynch pin (A) from each skid shoe (B).
- 4. Hold shoe (B) and remove adjustment pin (C) by disengaging from the frame and pulling away from the shoe.
- 5. Raise or lower skid shoe (B) to achieve the desired position using the holes in the support as a guide.
- 6. Reinstall pin (C), engage in frame, and secure with lynch pin (A).
- 7. Check that all skid shoes are equally adjusted.
- Check the header float as described in your windrower operator's manual.

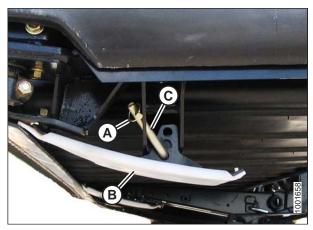


Figure 3.27: Outer Skid Shoe

3.7.4 Header Float

D1 Series Draper Headers are designed to ride on the skid shoes when cutting on the ground. The windrower float system reduces the ground pressure so that the header floats over obstacles and follows ground contours instead of being supported by the windrower lift cylinders. Refer to your windrower operator's manual for details about header float adjustments.

3.7.5 Header Angle

Header angle can be adjusted to accommodate different crop conditions and/or soil types.

Header angle (A) controls the distance (B) between the knife and the ground and is a critical component for effective cutting on the ground. Adjusting the center-link determines the position of the knife and guards and pivots the header at the point of skid shoe/ground contact (C).

Header angle (A) is equal to guard angle (D) which is the angle between the upper surface of the guards and the ground.

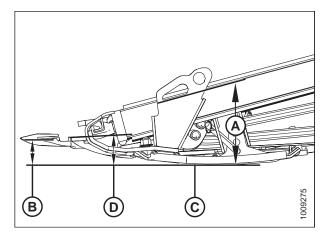


Figure 3.28: Header Angle

Controlling Header Angle

Header angle varies by adjusting the length of the top center-link (mechanical or hydraulic) between the windrower and the header.

Refer to your windrower operator's manual for adjustment details.

3.7.6 Reel Speed

Reel speed is one of the factors that determines how crop is moved from the cutterbar onto the drapers.

The reel performs best when it appears to be driven by the ground. It should move the cut crop evenly through the cutterbar and onto the drapers without bunching and with minimal disturbance.

In standing crop, reel speed should be slightly higher than, or equal to, ground speed.

In flattened crop or crop that is leaning away from the cutterbar, the reel speed needs to be higher than the ground speed. To achieve this, either increase the reel speed or decrease the ground speed.

Excessive shattering of grain heads or crop loss over the header backtube may indicate that the reel speed is too high. Excessive reel speed also increases reel component wear and overloads the reel drive.

Slower reel speeds can be used with nine-bat reels, which is beneficial in shatter-prone crops.

NOTE:

Nine-bat reels are available on 4.6–7.6 m (15–25 ft.) headers from the factory. A conversion kit to change from a six-bat reel to a nine-bat reel is available for these headers.

Refer to 3.6.2 Header Settings, page 41 for recommended reel speeds in specific crops and crop conditions.

The reel speed is adjustable using the controls in the windrower cab. Refer to your windrower operator's manual for adjustment details.

Optional Reel Drive Sprockets

Optional reel drive sprockets for use in special crop conditions are available as an alternative to the factory-installed sprocket.

The header is factory-equipped with a 19-tooth reel drive sprocket that is suitable for most crops. Other sprockets are available that provide more torque to the reel in heavy cutting conditions, or higher reel speeds in light crops when operating at increased ground speeds.

For installation details, refer to 5.9.3 Replacing Reel Drive Sprocket, page 229.

3.7.7 Ground Speed

Operating at the proper ground speed will result in cleanly cut crops and evenly distributed material in uniform windrows.

Refer to 3.10 Windrow Types, page 85 for effects of ground speed on windrow formation.


Reduce ground speed in difficult cutting conditions to reduce loads on cutting components and drives.

Use lower ground speeds in very light crops (e.g., short soybeans) to allow the reel to pull in short plants. Start at 4.8–5.8 km/h (3.0–3.5 mph) and adjust as required.

Higher ground speeds may require heavier float settings to prevent excessive bouncing which causes uneven cutting and possible damage to cutting components. If ground speed is increased, draper and reel speeds should be increased to handle the extra material.

Figure 3.29, page 56 illustrates the relationship between ground speed and area cut for the various sized headers.

Figure 3.29: Ground Speed vs Acres

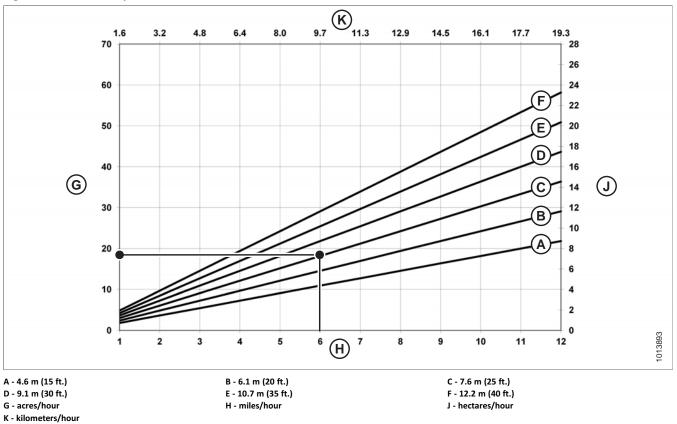

Example: A 7.6 m (25 ft.) header operating at a ground speed of 9.7 km/h (6 mph) would produce a cut area of approximately 7.3 hectares (18 acres) in one hour.

3.7.8 Draper Speed

Correct draper speed is important for achieving a good flow of cut crop away from the cutterbar.

The draper speed is controlled with the windrower cab display module (CDM). Refer to your windrower operator's manual for instructions.

Adjust draper speed to optimize crop feeding for a well formed windrow. Excessive draper speed will reduce draper life.

3.7.9 Knife Speed

The header knife drive is driven by the windrower hydraulic pump and is controlled with the windrower cab display module (CDM). The default speed is 1200 strokes per minute (spm). Refer to your windrower operator's manual for more information.

Table 3.5 Knife Speed Guidelines

	Recommended Knife Speed Range (spm)		
Header Size	Single Knife	Double Knife	
4.6 m (15 ft.)	_	1500–1900	
6.1 – 7.6 m (20–25 ft.)	1200–1400	1400–1700	
9.1 m (30 ft.)	1200–1400	1200–1600	
10.7 m (35 ft.)	1150–1300	1200–1400	
12.2 m (40 ft.)	1150–1220	1200–1400	

Checking Knife Speed



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Stop the windrower engine and remove the key from the ignition.
- 2. Open left endshield (A).



WARNING

Check to be sure all bystanders have cleared the area.

3. Start the windrower engine, engage the header drive, and run the windrower at operating rpm.

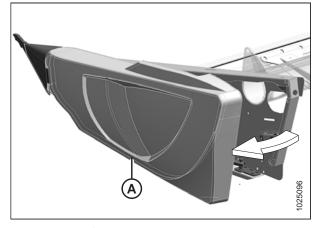


Figure 3.30: Left Endshield

- 4. Measure rpm of knife drive box pulley (A) with a hand-held tachometer.
- 5. Shut down the windrower.
- 6. Compare pulley rpm measurement with the rpm values in the knife speed chart. For instructions, refer to 3.7.9 Knife Speed, page 57.
- 7. Contact your MacDon Dealer if the pulley rpm measurement exceeds the specified rpm range for your header.

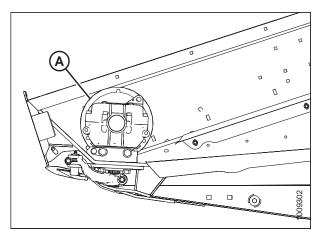


Figure 3.31: Knife Drive Pulley

3.7.10 Reel Height

The crop type and condition determines the operating height of the reel.

Set the reel height to carry material past the knife and onto the drapers with minimal disturbance and damage to the cut crop. For instructions, refer to 3.7.11 Reel Fore-Aft Position, page 58.

The reel height is controlled using switches in the windrower cab.

The following conditions might result if the reel is set too low:

- Crop loss over the header backtube
- Crop disturbance on the drapers caused by the reel fingers
- Crop being pushed down by the tine tubes

The following conditions might result if the reel is set too high:

- Cutterbar plugging
- Crop lodging and being left uncut
- · Grain stalks dropping ahead of cutterbar

Refer to 3.6.2 Header Settings, page 41 for recommended reel height in specific crops and crop conditions.

IMPORTANT:

Maintain reel clearance to prevent fingers contacting the knife or the ground. For instructions, refer to 5.8.1 Reel Clearance to Cutterbar, page 198.

3.7.11 Reel Fore-Aft Position

Reel fore-aft position is a critical factor for achieving the best results in adverse conditions. The reel position is factory-set for normal conditions, but it can be adjusted forward or backward as required using the controls inside the cab.

The reel can be moved approximately 227 mm (9 in.) farther aft by repositioning the fore-aft cylinders on the reel arms to accommodate certain crop conditions.

For double-reel header instructions, refer to Repositioning Fore-Aft Cylinders on Double Reel, page 62.

For single-reel header instructions, refer to Repositioning Fore-Aft Cylinders on Single Reel, page 60.

Decal (A) is attached to the right reel support arm for identifying reel position. The aft edge of cam disc (B) is the reel fore-aft position marker.

For straight standing crop, center the reel over the cutterbar (4–5 on decal).

For crops that are down, tangled, or leaning, it may be necessary to move the reel ahead of the cutterbar (lower number on decal).

IMPORTANT:

Adjust to a steeper header angle if experiencing difficulty picking up flattened crop. Refer to *Controlling Header Angle, page 54* for adjustment instructions. Adjust reel position only if header angle adjustments are not satisfactory.

Refer to 3.6.2 Header Settings, page 41 for recommended reel positions in specific crops and crop conditions.

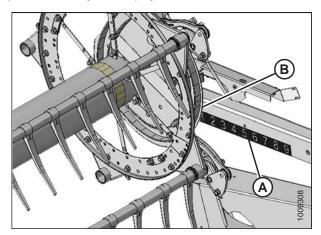


Figure 3.32: Fore-Aft Decal

NOTE:

In crops that are difficult to pick up such as rice, or severely lodged crops that require full forward positioning of the reel, set the reel tine pitch to provide proper placement of the crop onto the drapers. Refer to 3.7.12 Reel Tine Pitch, page 67 for adjustment details.

Adjusting Reel Fore-Aft Position

- 1. Select FORE-AFT mode on the selector switch in the cab.
- 2. Operate the hydraulics to move the reel to the desired position while using decal (A) as a reference.
- 3. Check the reel clearance to cutterbar after making changes to the cam setting. Refer to the following for measurement and adjustment procedures:
 - 5.8.1 Reel Clearance to Cutterbar, page 198
 - 5.8.2 Reel Frown, page 202

IMPORTANT:

Operating with the reel too far forward can result in the fingers contacting the ground. When operating with the reel in this position, lower the skid shoes or adjust the header angle as required to prevent damaging the fingers.

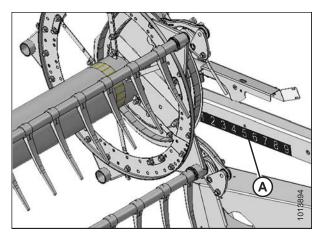


Figure 3.33: Fore-Aft Decal

Repositioning Fore-Aft Cylinders on Single Reel

The reel can be moved approximately 227 mm (9 in.) farther aft by repositioning the fore-aft cylinders on the reel arms.



DANGER

To avoid injury or death from unexpected start-up of machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Reposition the right reel arm cylinder as follows:

NOTE:

Reel components not shown in illustrations for improved clarity.

- 1. Position reel fully aft with support arms horizontal.
- 2. Stop the engine and remove the key from the ignition.
- 3. Remove four nuts and bolts (A) securing cylinder bracket (B) to reel arm (C). Retain hardware.

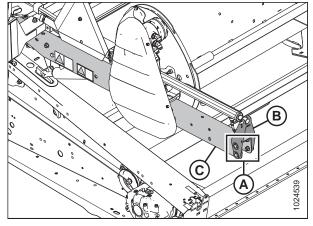


Figure 3.34: Right Reel Arm Cylinder in Forward Position

- Push/pull the reel until bracket (B) lines up with the aft set of holes in the reel arm (C).
- 5. Reinstall the four nuts and bolts (A) and secure the cylinder bracket (B) to the reel arm at the new position.

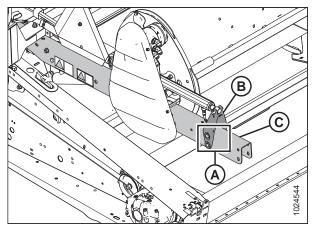


Figure 3.35: Right Reel Arm Cylinder in Aft Position

Reposition the left reel arm cylinder as follows:

NOTE:

Reel components not shown in illustrations for improved clarity.

- 1. Remove pin (A) securing cylinder (B) to bracket/light assembly (C).
- 2. Remove nuts and bolts (D) securing bracket/light assembly (C) to the reel arm, and remove the bracket/light assembly.
- 3. If necessary, remove the cable tie securing the harness to bracket/light assembly (C) or reel arm.
- 4. Swivel the light to the working position as shown.

- Reposition bracket/light assembly (C) on the reel arm as shown, and secure with four nuts and bolts (D).
 Tighten hardware.
- 6. Push the reel back and attach cylinder (B) to bracket/light assembly (C) with pin (A). Secure pin with cotter pin.
- 7. Secure the light harness to bracket/light assembly (C) using a cable tie.
- 8. Check the reel clearance to the backsheet, upper cross auger (if installed), and reel braces.
- 9. Adjust the reel tine pitch if necessary. For instructions, refer to 3.7.12 Reel Tine Pitch, page 67.

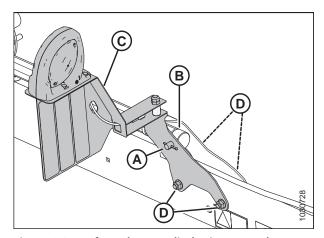


Figure 3.36: Left Reel Arm Cylinder in Forward Position

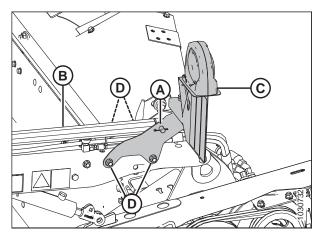


Figure 3.37: Left Reel Arm Cylinder in Aft Position

Repositioning Fore-Aft Cylinders on Double Reel

The reel can be moved approximately 227 mm (9 in.) farther aft by repositioning the fore-aft cylinders on the reel arms.



DANGER

To avoid injury or death from unexpected start-up of machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Reposition the center reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustrations for improved clarity.

- 1. Position reel fully aft with support arms horizontal.
- 2. Stop engine and remove key.
- 3. Remove four nuts and bolts (A) securing cylinder bracket (B) to reel arm (C). Retain hardware.

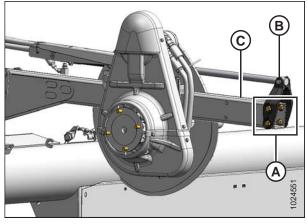


Figure 3.38: Center Arm - Forward Position

- 4. Push/pull reel until bracket (B) lines up with the aft set of holes in reel arm (C).
- 5. Reinstall four nuts and bolts (A) to secure bracket (B) to reel arm at new position.

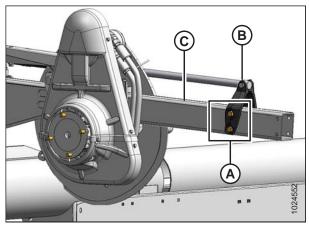


Figure 3.39: Center Arm - Aft Position

Reposition the right reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustrations for improved clarity.

1. Remove four bolts (A) securing cylinder bracket (B) to the reel arm (C).

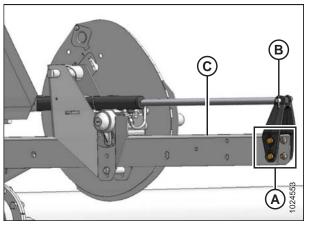


Figure 3.40: Right Reel Arm Cylinder in Forward Position

- 2. Push reel back until bracket (B) lines up with the aft set of holes in reel arm (C).
- 3. Reinstall the four bolts (A) to secure bracket to reel arm at new position.

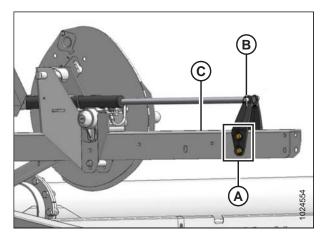


Figure 3.41: Right Reel Arm Cylinder in Aft Position

Reposition the left reel arm cylinder as follows:

NOTE:

Some reel components are not shown in illustrations for improved clarity.

- 1. Remove pin (A) securing cylinder (B) to bracket/light assembly (C).
- Remove four nuts and bolts (D) securing bracket/light assembly (C) to reel arm and remove bracket/light assembly. Retain hardware.
- Remove cable tie (not shown) securing harness to bracket/ light assembly (C) or to reel arm (if necessary).
- 4. Swivel light to working position as shown.

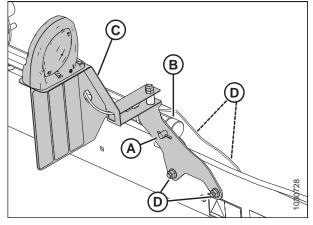


Figure 3.42: Left Reel Arm Cylinder in Forward Position

- Reposition bracket/light assembly (C) onto reel arm as shown, and secure using four nuts and bolts (D). Tighten hardware.
- 6. Push reel back and reinstall cylinder (B) onto bracket/light assembly (C) using pin (A). Secure pin with cotter pin.
- 7. Secure light harness to bracket/light assembly (C) or to reel arm using plastic cable tie (not shown).
- 8. Check reel clearance to backsheet, upper cross auger (if installed), and reel braces.
- 9. Adjust reel tine pitch (if required). For adjustment procedures, refer to 3.7.12 Reel Tine Pitch, page 67.

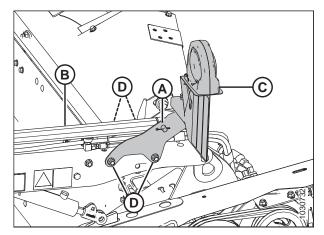


Figure 3.43: Left Reel Arm Cylinder in Aft Position

Repositioning Fore-Aft Cylinders with Multi-Crop Rapid Reel Conversion Option

The reel can be moved approximately 227 mm (9 in.) farther aft by repositioning the fore-aft cylinders on the reel arms. The Multi-Crop Rapid Reel Conversion option is applicable to **double-reel headers only**.



DANGER

To avoid injury or death from unexpected start-up of machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Reposition the left reel arm cylinder as follows:

NOTE:

Some reel components not shown in illustrations for improved clarity.

- 1. Position reel fully aft with support arms horizontal.
- 2. Shut down the engine, and remove the key from the ignition.
- 3. Remove ring (A) and clevis pin (B) from inboard side of bracket (C). Retain ring and clevis pin.
- 4. Push the reel back until cylinder barrel (D) lines up with reel position 2 hole on bracket.
- 5. Reinstall clevis pin (B) at the new position and secure with ring (A).

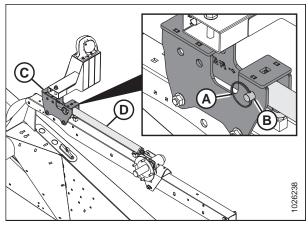


Figure 3.44: Left Reel Arm in Forward Position

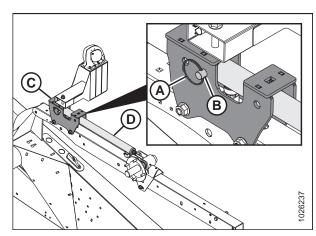


Figure 3.45: Left Reel Arm in Aft Position

Reposition the center reel arm cylinder as follows:

NOTE:

Some reel components not shown in illustrations for improved clarity.

1. Remove ring (A), clevis pin (B), and washers (C) from bracket (D). Retain ring, clevis pin, and washers.

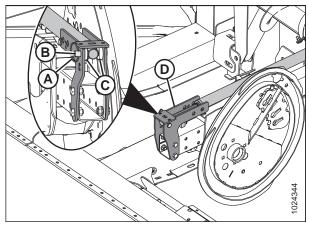


Figure 3.46: Center Reel Arm in Forward Position

- 2. Push the reel back until the end of cylinder (E) lines up with reel position 2 hole on bracket (D). Position washers (C) on both sides of the cylinder end inside the bracket.
- 3. Reinstall clevis pin (B) at the new position and secure with ring (A).

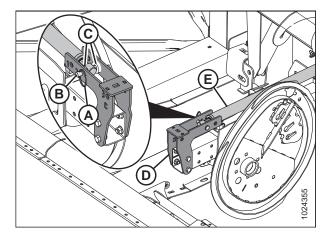


Figure 3.47: Center Reel Arm in Aft Position

Reposition the right reel arm cylinder as follows:

NOTE:

Some reel components not shown in illustrations for improved clarity.

- 1. Remove ring (A), clevis pin (B), and washers (C) from bracket (D). Retain ring, clevis pin, and washers.
- 2. Push the reel back until end of cylinder (E) lines up with reel position 2 hole on bracket (D).

NOTE:

Washers inside center arm support bracket not shown in illustration at right.

3. Reinstall clevis pin (B) at the new position and secure with ring (A).

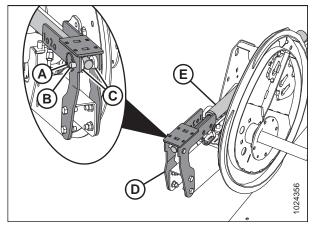


Figure 3.48: Right Reel Arm in Forward Position

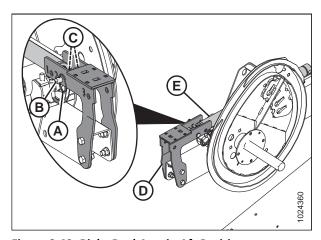


Figure 3.49: Right Reel Arm in Aft Position

3.7.12 Reel Tine Pitch

The pick-up reel is designed to pick up flattened and severely lodged crops. It is not always necessary to increase the tine pitch (select a higher cam setting) to pick up lodged crops, because the cam setting is mainly used to determine how the crop is delivered onto the drapers.

Finger positioning, relative to the ground (tine pitch), is not significantly affected by the cam setting. For example, with the cam position range at 33°, the corresponding finger pitch range is only 5° at the lowest point of the reel's rotation.

For the best results, use the minimum cam setting that delivers the crop past the rear edge of the cutterbar and onto the drapers. For instructions, refer to 3.6.2 Header Settings, page 41.

Reel Cam Settings

The following outlines the function of each cam setting and provides set-up guidelines for various crop conditions. The setting numbers are visible above the slots on the cam disc. If adjustments are necessary, refer to *Adjusting Reel Cam, page* 70

Cam Position 1, Reel Position 6 or 7 delivers the most even crop flow onto the drapers without fluffing up or disturbing the material.

- This setting will release crop close to the cutterbar and works best if the cutterbar is on the ground.
- Some crops will not be delivered past the cutterbar when the cutterbar is raised off the ground and the reel is pushed forward; therefore, set the initial reel speed approximately equal to the ground speed.

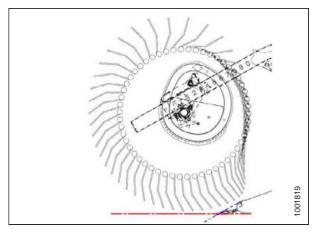


Figure 3.50: Finger Profile - Cam Position 1

Cam Position 2, Reel Position 3 or 4 is the recommended starting position for most crops and conditions.

- If the crop is stalling on the cutterbar when the reel is in the forward position, increase the cam setting to push the crop past the rear edge of the cutterbar.
- If the crop is getting fluffed or if there is a disruption to the flow across the drapers, decrease the cam setting.
- This setting generates a fingertip speed that is approximately 20% faster than the reel speed.

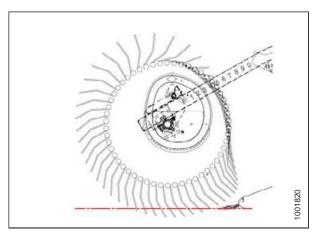


Figure 3.51: Finger Profile – Cam Position 2

Cam Position 3, Reel Position 6 or 7 is mainly used to leave long stubble.

- This position allows the reel to reach forward and lift the crop across the knife and onto the drapers.
- This setting generates a fingertip speed that is approximately 30% faster than the reel speed.

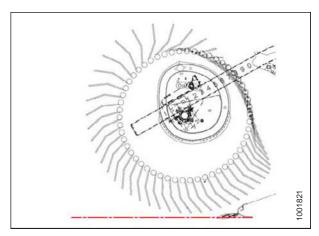


Figure 3.52: Finger Profile - Cam Position 3

Cam Position 4, Reel Position 2 or 3 is used with the reel fully forward to leave the maximum amount of stubble in lodged crops.

- This position allows the reel to reach forward and lift the crop across the knife and onto the drapers.
- This setting generates a fingertip speed that is approximately 35% faster than the reel speed.

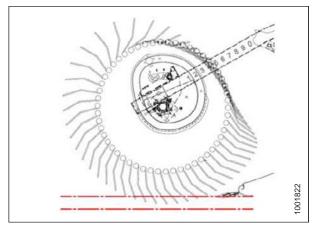


Figure 3.53: Finger Profile - Cam Position 4

Cam Position 4, Header Angle At Maximum, and Reel Fully Forward provides the maximum amount of reel reach below the cutterbar to pick up lodged crops.

- This position leaves a significant amount of stubble when cutting height is set to approximately 203 mm (8 in.). In damp materials such as rice, it's possible to double the ground speed because of the reduction of cut material.
- This setting generates a fingertip speed that is approximately 35% faster than the reel speed.

NOTE:

Higher cam settings with the reel fore-aft position set between 4–5 sharply decreases the draper capacity because the reel disrupts the crop flow across the drapers and the fingers engage **F** the crop that is moving on the drapers. High cam settings are recommended only with the reel at, or close to, full forward settings.

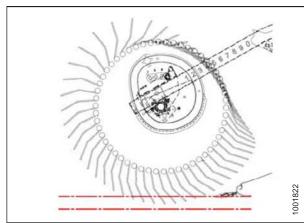


Figure 3.54: Finger Profile – Cam Position 4

IMPORTANT:

The reel to cutterbar clearance should always be checked following adjustments to reel tine pitch and reel fore-aft position. For instructions, refer to 5.8.1 Reel Clearance to Cutterbar, page 198.

Refer to 3.6.2 Header Settings, page 41 for recommended reel tine pitch in specific crops and crop conditions.

Adjusting Reel Cam



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Turn latch pin (A) counterclockwise using a 3/4 in. wrench to release the cam disc.
- Use the wrench on bolt (B) to rotate the cam disc and align latch pin (A) with the desired cam disc hole position (C) (1 to 4).

NOTE:

Bolt (B) is positioned through the cam disc (transparent view shown in illustration for improved clarity).

- 3. Turn latch pin (A) clockwise to engage and lock the cam disc.
- 4. Repeat Steps 1, page 70 to 3, page 70 for the opposite reel.

IMPORTANT:

Ensure the cam is secured into position before operating the machine.

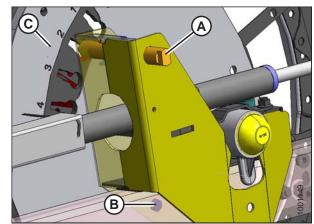


Figure 3.55: Cam Disc Positions

3.7.13 Crop Dividers

Crop dividers are used to help divide the crop when harvesting. They are removable to allow installation of vertical knives and to decrease transport width.

Crop dividers are bolted to the header by default, but a latch option is also available.

Removing Crop Dividers with Latch Option from Header



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Lower reel, raise header, stop engine, remove key, and engage header safety props. For instructions, refer to your windrower operator's manual.
- 2. Open endshields. For instructions, refer to Opening Endshields, page 32.
- 3. Lift safety lever (A).
- 4. Hold onto crop divider (B), push lever (C) to open latch, and lower crop divider.

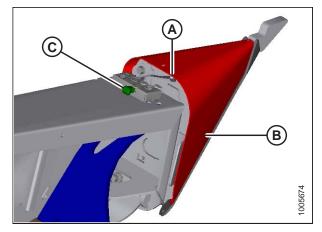


Figure 3.56: Crop Divider

- 5. Lift crop divider off endsheet and store as follows:
 - a. Insert pin on crop divider into hole in endsheet at location (A) shown.
 - b. Lift crop divider and position lugs (B) on crop divider into bracket on endsheet. Ensure lugs engage bracket.
- 6. Close endshields. For instructions, refer to *Closing Endshields, page 33*.

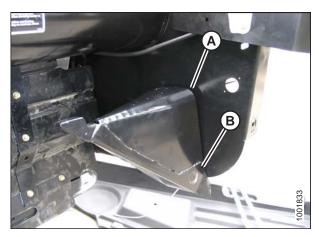


Figure 3.57: Stored Crop Divider

Removing Crop Dividers without Latch Option from Header



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- Lower reel, raise header, stop engine, remove key, and engage safety props. For instructions, refer to your windrower operator's manual.
- 2. Open endshields. For instructions, refer to Opening Endshields, page 32.
- 3. Remove bolt (A), lock washer, and flat washer.
- 4. Lower crop divider (B) and then lift to remove from endsheet.
- 5. Close endshields. For instructions, refer to *Closing Endshields, page 33*.

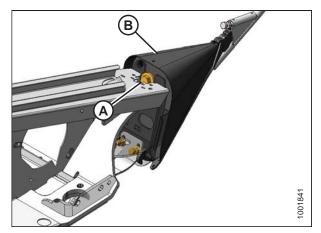


Figure 3.58: Crop Divider

Installing Crop Dividers with Latch Option onto Header



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Lower reel, raise header, stop engine, remove key, and engage safety props. For instructions, refer to your windrower operator's manual.
- 2. Open endshields. For instructions, refer to Opening Endshields, page 32.
- 3. Remove crop divider from storage location by lifting crop divider to disengage lugs (A) at lower end and then lowering it slightly to disengage pin (B) from endsheet.

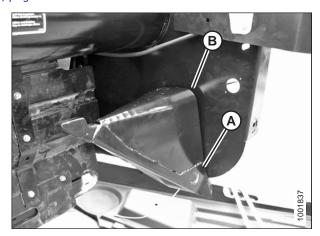


Figure 3.59: Stored Crop Divider

- 4. Position crop divider as shown by inserting lugs (A) into holes in endsheet.
- 5. Lift forward end of crop divider until pin (B) at top of crop divider engages and closes latch (C).
- 6. Push safety lever (D) downward to lock pin into latch (C).

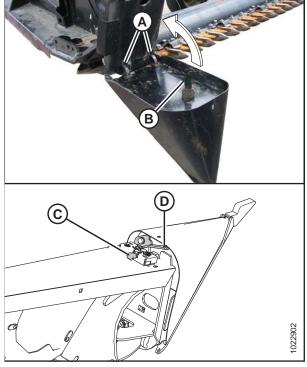


Figure 3.60: Crop Divider

- 7. Pull at the tip of the crop divider and ensure there is no lateral movement. If necessary, adjust bolts (A) to tighten crop divider and eliminate lateral movement.
- 8. Close endshields. For instructions, refer to *Closing Endshields, page 33*.

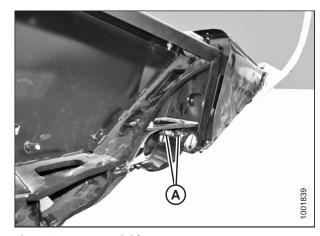


Figure 3.61: Crop Divider

Installing Crop Dividers without Latch Option onto Header



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Lower reel, raise header, stop engine, remove key, and engage safety props. For instructions, refer to your windrower operator's manual.
- 2. Open endshields. For instructions, refer to *Opening Endshields, page 32*.

3. Remove crop divider from storage location by lifting crop divider to disengage lugs (A) at lower end and then lowering it slightly to disengage pin (B) from endsheet.

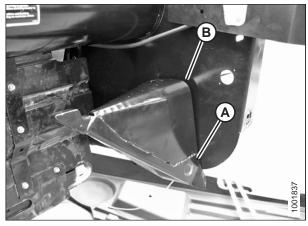


Figure 3.62: Stored Crop Divider

4. Position crop divider as shown by inserting lugs (A) into holes in endsheet.

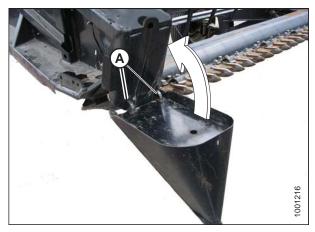


Figure 3.63: Crop Divider

- 5. Lift forward end of crop divider and install bolt (A) and special stepped washer (B) (step towards divider). Tighten bolt.
- 6. Pull at the tip of the crop divider and ensure there is no lateral movement. If necessary, adjust bolts (C) to tighten crop divider and eliminate lateral movement.
- 7. Close endshields. For instructions, refer to *Closing Endshields, page 33*.

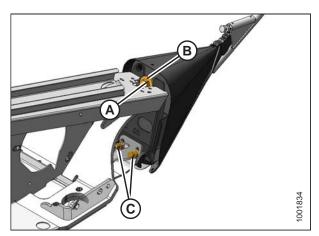


Figure 3.64: Crop Divider

3.7.14 Crop Divider Rods

Crop divider rods can be used in conjunction with crop dividers. The removable crop divider rods are most useful when crop is down, but in standing crops using only crop dividers is recommended.

Table 3.6 Crop Divider Rods Recommended Use

With Divi	Without Divider Rods	
Alfalfa	Lodged cereal	Edible beans
Canola	Peas	Milo
Flax	Soybeans	Rice
Grass seed	Sudan grass	Soybeans
Lentils	Winter forage	Standing cereal

Removing Crop Divider Rods

1. Loosen bolt (A) and remove crop divider rod (B) from both sides of header.

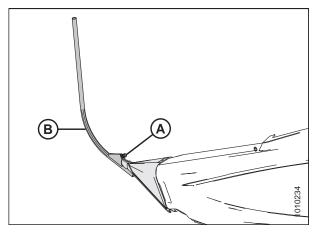


Figure 3.65: Crop Divider Rod

2. Store both crop divider rods (A) inboard on the right endsheet.

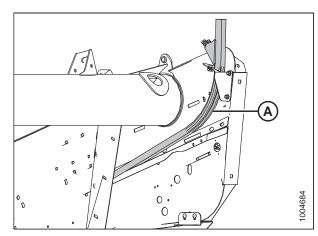


Figure 3.66: Right Endsheet

Rice Divider Rods

Optional rice divider rods provide improved performance in tall and tangled rice crops. For instructions, refer to 6.4.4 Rice Divider Rods, page 251.

The installation and removal procedures are the same as for standard crop divider rods.

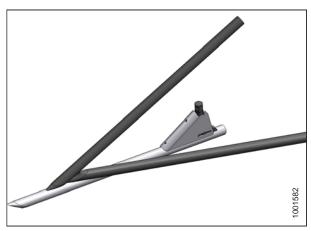


Figure 3.67: Divider Rod for Rice

3.8 Delivery Opening

The width and location of the delivery opening can be changed. This affects the width and configuration of the windrow.

The decision to widen or narrow the center delivery opening, or to double windrow, should be based on the following factors:

- Windrower pick-up capability
- Type and yield of crop
- · Weather conditions (rain, humidity, wind)
- · Drying time available

The procedure for adjusting the delivery opening varies depending on whether the optional hydraulic deck shift has been installed.

Refer to 3.10 Windrow Types, page 85 for the strengths and weaknesses of the various windrow configurations with respect to these factors.

Also refer to 3.9 Double Windrowing, page 81.

3.8.1 Adjusting Delivery Opening on Header with Manual Deck Shift

Both decks can be positioned to vary the delivery opening as follows:

- 4.6 m (15 ft.) headers: 154 to 177 cm (60 5/8 to 69 11/16 in.)
- 6.1-12.2 m (20-40 ft.) headers: 172 to 195 cm (67 1/8 to 76 11/16 in.)
- 1. Loosen bolts (A) on both decks.
- 2. Slide decks to the desired opening width. Retighten bolts (A).



Figure 3.68: Manual Deck Shift

3.8.2 Adjusting Delivery Opening on Header with Hydraulic Deck Shift

The delivery opening can be changed by moving the inboard deck shift stops.

- 1. Remove bolts (A).
- 2. Slide stop (B) outboard to decrease the maximum opening size, or inboard to increase the maximum opening.



CAUTION

Adjust the outboard stops to prevent the decks from contacting each other.

3. Reinstall bolts (A) and tighten.

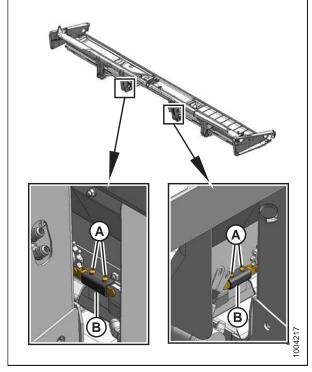


Figure 3.69: Hydraulic Deck Shift

3.8.3 Adjusting Hydraulic Deck Shift Chain Tension

The hydraulic deck shift (HDS) chain's midpoint should be 25–50 mm (1–2 in.) lower than either end of the chain.

1. Locate chain adjustment bolt (A).

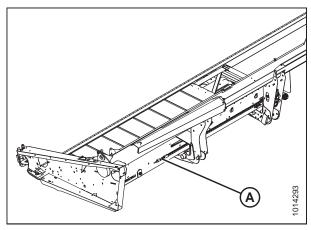


Figure 3.70: Chain Adjustment Bolt – Left Shown, Right Similar

- 2. Loosen jam nuts (B) and (C).
- 3. Turn nut (A) to adjust chain tension.


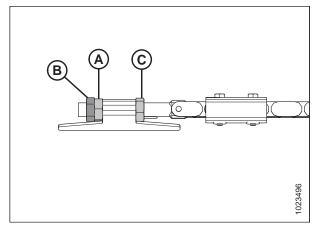


Figure 3.71: Chain Adjustment Bolt – Left Shown, Right Similar

Figure 3.72: HDS Chain – Left Shown, Right Similar

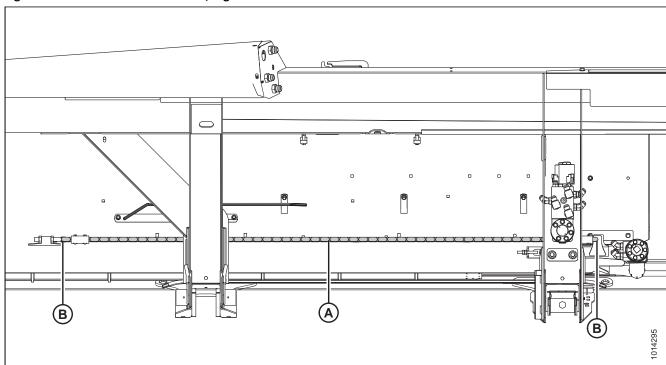

4. Measure to ensure chain midpoint (A) is 25–50 mm (1–2 in.) lower than the chain ends (B).

- 5. Tighten jam nut (C).
- 6. Lock nut (B) against nut (A).

NOTE:

If there is less than 5 mm (3/16 in.) of thread visible beside jam nut (C), then remove nut (C).

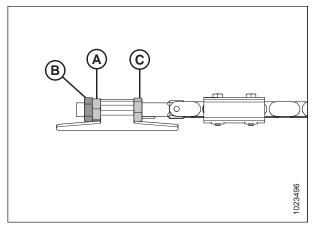


Figure 3.73: Chain Adjustment Bolt – Left Shown, Right Similar

3.9 Double Windrowing

Double windrowing is laying two swaths side-by-side. Larger capacity combines or forage harvesters can then pick up twice as much material in a single pass, saving time and fuel.

Double windrowing is performed with the D1 Series Draper Headers by two methods: deck shifting or using the Double Windrow Attachment (DWA).

Deck shifting is used for crops that don't require conditioning, such as grains, canola, and beans. For instructions, refer to:

- 3.9.1 Shifting Decks Hydraulically, page 81
- 3.9.2 Shifting Decks Manually, page 82

Forage crops such as alfalfa, hay, and some grasses are cut and then fed into the HC10 Hay Conditioner. The DWA system allows double windrowing with conditioner-equipped windrowers up to 9.1 m (30 ft.). For instructions, refer to 3.9.3 Using Double Windrow Attachment (DWA), page 84.

3.9.1 Shifting Decks Hydraulically

The hydraulic deck shift feature allows you to select center, left, or right delivery from the windrower cab. It is only available on 7.6–10.7 m (25–35 ft.) headers.

Refer to your windrower operator's manual for identification and operation of the deck shift control.

To lay a double windrow, do the following:

NOTE:

9.1 m (30 ft.) headers equipped with transport or stabilizer system require that the wheels be in the raised position to avoid interfering with the windrow.

- 1. Position the decks at the left end of header to deliver crop from right end (A) for the first round.
- 2. To deliver crop from the left end (B) of the header, use the deck shift control in the windrower to shift the decks to the right end of the header.
- 3. Complete the second round to lay a double windrow.
- 4. Repeat above steps to lay additional double windrow.

NOTE:

The end delivery opening is designed to give adequate clearance between the first windrow and the standing crop, and optimum space between the two windrows.

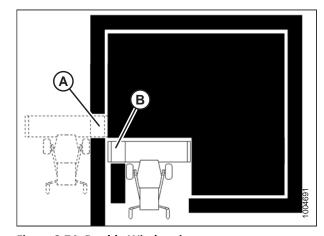


Figure 3.74: Double Windrowing

3.9.2 Shifting Decks Manually

Both decks can be moved manually to deliver the crop from the center or right/left end on 7.6 to 12.2 m (25 to 40 ft.) headers.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

To deliver crop from the right end, move the decks to the left end of the header as follows:

- 1. Loosen bolt (A) on the right deck.
- 2. Slide deck to close off the center opening. Tighten bolt (A).

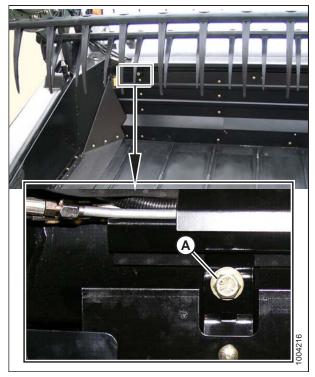


Figure 3.75: Right Deck Shown

3. Reverse draper drive motor hoses (A) on the moved deck so that the draper turns the same direction as the unmoved deck.

NOTE:

Loosen clamp on plastic sleeve at drive motor so that hoses (A) can be reversed. Tighten clamp.

NOTE:

To deliver crop from the left end, move the decks to the right end of the header following the steps above.

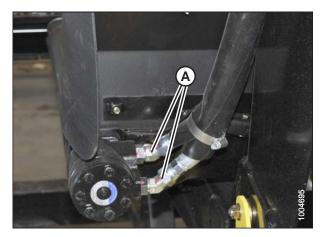


Figure 3.76: Right Deck Motor

To lay a double windrow, do the following:

NOTE:

9.1 m (30 ft.) headers equipped with transport or stabilizer system require that the wheels be in the raised position to avoid interfering with the windrow.

- 1. Position decks at the left end of header to deliver crop from right end (A).
- 2. Complete one round or one length of the field.
- 3. Complete the second round or length in the opposite direction to lay a double windrow.
- 4. Repeat above steps to lay additional double windrow.

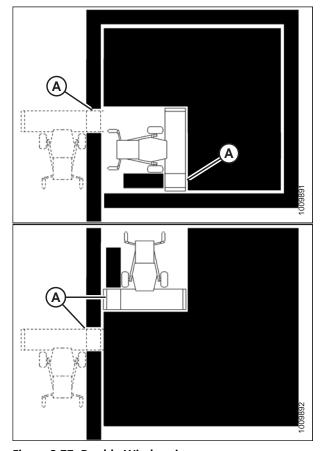


Figure 3.77: Double Windrowing

3.9.3 Using Double Windrow Attachment (DWA)

NOTE:

The DWA system shuts off the draper automatically when it is raised and allows the crop to be deposited between the tractor wheels as it would be without the side delivery system.

The double windrow attachment (DWA) allows double windrowing of cut and conditioned forage type crops. The conditioned crop is deposited onto the side delivery system draper (A) and delivered to the side of the windrower when required. Draper speed and deck position are controlled with switches in the windrower cab.

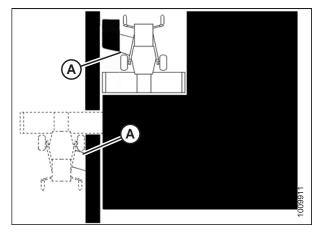


Figure 3.78: Double Windrowing

To lay a double windrow, do the following:

- 1. Complete one round or one length of the field.
- 2. Complete the second round or length in the opposite direction to lay a double windrow.
- 3. Repeat above steps to lay additional double windrow.

3.10 Windrow Types

There are three basic criteria by which the quality of a windrow is measured:

- Weight Distribution: Heads and stalks distributed evenly across full width of windrow
- Good Curing: A loose, open windrow for better drying
- Good Weatherability: A well-formed windrow that supports heads off the ground and holds together in extreme weather conditions

Table 3.7 Windrow Descriptions

Windrow Type	Description	Weight Distribution	Curing	Weatherability	Machine Setting Guidelines
Herringbone	The most desirable form of windrow, stalks are crossed and interwoven. Heads are distributed across full width of windrow. This windrow can be formed by center delivery only.	Good	Good	Excellent	 Reel and ground speed approximately equal Medium draper speed Center delivery
Fantail	The stalks are crossed in the center and the heads are in line along outside edges. This windrow can be formed by center delivery only.	Fair	Fair	Fair	Low draper speedLow header angleCenter delivery
Dovetail	The stalks are lined along outside edges of windrow and heads are crossed in center. This windrow can be formed by center delivery only.	Poor	Fair	Poor	High draper speedHigh header angleCenter delivery
Parallel	The stalks are parallel to windrow and heads evenly distributed across width of windrow. This windrow can be formed by center delivery or end delivery.	Good	Good	Good	 Medium draper speed Medium header angle Center or end delivery

Table 3.7 Windrow Descriptions (continued)

Windrow Type	Description	Weight Distribution	Curing	Weatherability	Machine Setting Guidelines
45° Diagonal	The stalks are lined along one edge and heads are along opposite edge, 45° to windrow perpendicular. This windrow can be formed by end delivery or by center delivery, if the crop is leaning to one side.	Poor	Fair	Poor	 Low reel speed Less aggressive tine pitch End delivery or center delivery if crop is leaning
75° Diagonal	The stalks are closer to parallel than the 45° windrow. Stalk tips are lined along one edge with heads opposite, 75° to windrow perpendicular. This windrow can be formed by end delivery or by center delivery, if the crop is leaning to one side.	Fair	Good	Fair	 Low reel speed Less aggressive tine pitch End delivery or center delivery if crop is leaning

3.11 Haying Tips

The following information may be useful when using the D1 Series Draper Header in hay crops.

3.11.1 **Curing**

A quick cure will maintain top quality because:

- 5% of the protein is lost for each day hay lies on the ground.
- The sooner the cut hay is off the ground, the earlier the start for new growth.

Leaving the windrow as wide and thin as possible makes for the quickest curing. The cured hay should be baled as soon as possible.

3.11.2 Topsoil Moisture

On wet soil, the general rule of wide and thin does **NOT** apply. A narrower windrow will dry faster than hay left flat on wet ground.

When the ground is wetter than the hay, moisture from the soil is absorbed by the hay above it. Determine topsoil moisture level before cutting. Use a moisture tester or estimate level using the table below.

Level	% Moisture	Condition
Wet	Over 45%	Soil is muddy
Damp	25–45%	Shows footprints
Dry	Under 25%	Surface is dusty

If ground is wet due to irrigation, wait until soil moisture drops below 45%.

If ground is wet due to frequent rains, cut when weather allows and let the forage lie on wet ground until it dries to the moisture level of the ground. The cut hay will dry no more until the ground under it dries, so consider moving the windrow to drier ground.

3.11.3 Weather and Topography

Cut as much hay as possible by midday, when drying conditions are best.

Fields sloping south get up to 100% more exposure to the sun's heat than the north sloping fields. If hay is baled and chopped, consider baling the south-facing fields and chopping fields facing north.

When relative humidity is high, the evaporation rate is low and hay dries slower.

If there is no wind, saturated air becomes trapped around the windrow. Raking or tedding will expose the hay to fresher, less saturated air.

Cutting hay perpendicular to the direction of the prevailing wind is also recommended.

3.11.4 Windrow Configuration

The following windrow characteristics are desirable:

Table 3.8 Windrow Characteristics

Configuration	Advantage
High and fluffy	Movement of air through the windrow is more important to the curing process than is direct sunlight.
Consistent formation, not bunchy	Permits an even flow of material into the baler, chopper, etc. and allows for more even drying.
Even distribution of material across windrow	Results in even and consistent bales to minimize handling and stacking problems.
Properly conditioned	Prevents excessive leaf damage.

Refer to 3.7 Header Operating Variables, page 49 for instructions on adjusting the header.

3.11.5 Driving on Windrow

Driving on previously cut windrows can lengthen drying time by a full day in hay that will not be raked. If practical, set forming shields for a narrower windrow that can be straddled.

NOTE:

Driving on the windrow in high-yielding crops may be unavoidable if a full width windrow is necessary.

3.11.6 Raking and Tedding

Raking or tedding speeds up drying; however, benefits must be evaluated against additional leaf loss.

There is little or no advantage to raking or tedding if the ground beneath the windrow is dry. Large windrows on damp or wet ground should be turned over when they reach 40–50% moisture.

To avoid excessive yield losses, hay should not be raked or tedded when moisture is less than 25%.

3.11.7 Chemical Drying Agents

Hay drying agents work by removing wax from legume surfaces, so that water can escape and evaporate faster. However, treated hay lying on wet ground will also absorb moisture faster. Costs and benefits relative to your area should be carefully considered before using a drying agent.

3.12 Leveling Header

The windrower linkages are factory-set to provide the proper level for the header and should not normally require adjustment.

- 1. If header is not level, check pressure of windrower's tires to ensure they are properly inflated. For instructions, refer to your windrower's operator's manual.
- 2. If header is still not level, adjust windrower linkages as required. For instructions, refer to appropriate section in windrower's operator's manual.

NOTE:

The float springs are **NOT** used to level the header.

3.13 Unplugging Cutterbar

To remove plugged material from the cutterbar, follow these steps:

- 1. Stop forward movement of machine and disengage header drives.
- 2. Raise header to prevent it from filling with dirt, and engage header drive clutch.
- 3. If plug does NOT clear, disengage header drive clutch and raise header fully.



CAUTION

Lowering rotating reel on a plugged cutterbar will damage the reel components.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

- 4. Shut off engine and remove key.
- 5. Engage header safety props.



CAUTION

Wear heavy gloves when working around or handling knives.

6. Clean off cutterbar by hand.

NOTE:

If cutterbar plugging persists, refer to 7 Troubleshooting, page 255.

3.14 Upper Cross Auger (UCA)

The UCA (A) improves delivery of very bulky crops across the header and onto the windrow.

Beater bars assist in delivering material through the header opening, but the beater bars are removable if wrapping occurs.

IMPORTANT:

The UCA drive motor must be equipped with a case drain kit when used on single draper drive headers. See your MacDon Dealer for details.

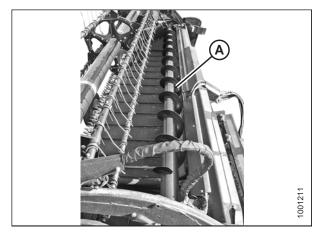


Figure 3.79: Upper Cross Auger

3.14.1 Removing Beater Bars



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Lower the header to the ground, stop the engine, and remove the key from the ignition.
- 2. Remove bolts (A) securing beater bars (B) and clamps (C) to the auger tubes, and remove the beater bars and clamps.

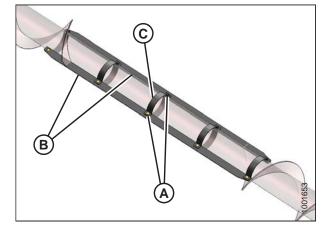


Figure 3.80: Beater Bars

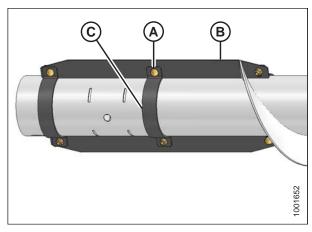


Figure 3.81: Beater Bars

3.14.2 Installing Beater Bars



WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before adjusting machine.

- 1. Lower the header to the ground, stop the engine, and remove the key from the ignition.
- 2. Position one beater bar (B) and one clamp set (C) onto the auger tube and loosely secure with carriage bolt (A) and nut. Bolt head **MUST** face the direction of auger rotation.
- Position the remaining clamp sets (C) onto the auger tube and loosely attach to beater bar (B) with carriage bolts (A) and nuts. Bolt heads MUST face the direction of auger rotation.
- 4. Position second beater bar (B) in clamp sets (C) and secure with carriage bolts (A) and nuts.

NOTE:

To reduce the chance of wrapping, offset the beater bars by 90°.

5. Tighten bolts.

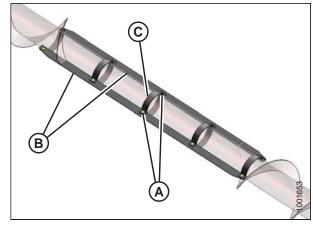


Figure 3.82: Beater Bars

OPERATION

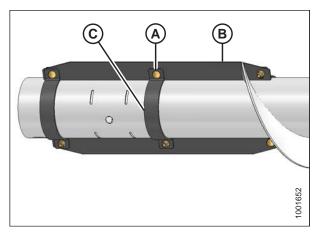


Figure 3.83: Beater Bars

3.15 Transporting the Header



WARNING

Do NOT drive the windrower with header attached on a road or highway at night, or in conditions which reduce visibility, such as fog or rain. The width of the header may not be apparent under these conditions.

3.15.1 Transporting Header on Windrower



CAUTION

- Check local laws for width regulations and lighting or marking requirements before transporting on roads.
- Follow all recommended procedures in your windrower operator's manual for transporting, towing, etc.
- . Disengage header drive clutch when travelling to and from the field.
- Before driving windrower on a roadway, be sure flashing amber lamps, red tail lamps, and head lamps are clean and
 working properly. Pivot amber lamps for best visibility by approaching traffic. Always use these lamps on roads to
 provide adequate warning to other vehicles.
- Do NOT use field lamps on roads; they may confuse other drivers.
- Before driving on a roadway, clean slow moving vehicle emblem and reflectors. Adjust rear view mirror and clean windows.
- Lower the reel fully and raise header unless transporting in hills.
- Maintain adequate visibility and be alert for roadside obstructions, oncoming traffic, and bridges.
- When travelling downhill, reduce speed and keep header at a minimum height. This provides maximum stability if forward motion is stopped for any reason. Raise header completely at bottom of grade to avoid contacting ground.
- Travel speed should be such that complete control and machine stability are maintained at all times.

3.15.2 Towing

Headers with the Slow Speed Transport/Stabilizer Wheel option can be towed behind a properly configured MacDon windrower or an agricultural tractor. Refer to the towing vehicles operator's manual for instructions.

Attaching Header to Towing Vehicle



CAUTION

Adhere to the following slow speed transport instructions to prevent loss of control leading to bodily injury and/or machine damage:

- Weight of towing vehicle must exceed header weight to ensure adequate control and braking performance.
- Do NOT tow with any highway-capable vehicle. Use only an agricultural tractor, agricultural combine, or a properly configured MacDon windrower.
- Ensure reel is fully lowered and back on support arms to increase header stability during transport. For headers with hydraulic reel fore-aft, never connect the fore-aft couplers to each other or the circuit will be complete and the reel could creep forward during transport.
- Check that all pins are properly secured in transport position at wheel supports, cutterbar support, and hitch.
- Check tire condition and pressure prior to transporting.
- Connect hitch to towing vehicle using a proper hitch pin with a spring locking pin or other suitable fastener.
- Attach hitch safety chain to towing vehicle. Adjust safety chain length to provide only enough slack to permit turning.
- Connect header seven-pole plug wiring harness to mating receptacle on towing vehicle. (The seven-pole receptacle is available from your MacDon Dealer Parts Department).
- Ensure lights are functioning properly and clean the slow moving vehicle sign and other reflectors. Use flashing warning lights unless prohibited by law.
- Do NOT exceed 32 km/h (20 mph) when towing a header using the Slow Speed Transport option. Reduce speed to less than 8 km/h (5 mph) for corners and slippery or rough conditions.

Towing the Header



CAUTION

Adhere to the following slow speed transport instructions to prevent loss of control leading to bodily injury and/or machine damage:

- Do NOT exceed 32 km/h (20 mph). Reduce transport speed to less than 8 km/h (5 mph) for corners and slippery or rough conditions.
- Turn corners at only very low speeds 8 km/h (5 mph) or less. Header stability is reduced while cornering.
- Do NOT accelerate when making or coming out of a turn.
- Obey all highway traffic regulations in your area when transporting on public roads. Use flashing amber lights unless prohibited by law.

3.15.3 Converting from Transport to Field Position

Removing Tow-Bar

- Block the tires to prevent the header from rolling, and unhook the header from the towing vehicle.
- 2. Disconnect electrical connector (A) on the tow-bar.
- 3. Remove pin (B) from the tow-bar, and detach outer section (C) from inner section (D).

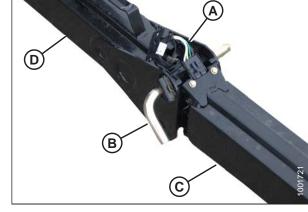


Figure 3.84: Tow-Bar Assembly

4. Disconnect electrical connector (A) at the front wheel.

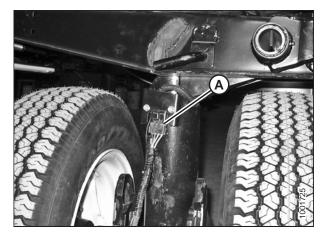


Figure 3.85: Wiring Connector

- Remove clevis pin (A) and set aside for reinstallation.
- 6. Push latch (B) and lift tow-bar (C) from the hook. Release latch.
- 7. Install clevis pin (A).

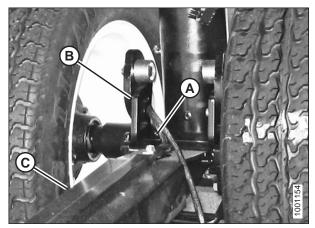


Figure 3.86: Tow-Bar Latch

OPERATION

Storing Tow-Bar

The tow-bar consists of two sections, an inner half (A) and an outer half (B), to make storage and handling easier.

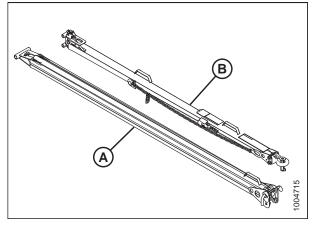


Figure 3.87: Tow-Bar Assembly

- 1. Place the inner end of the outer half of the tow-bar into cradle (A) on the left side of the header backtube.
- 2. Secure clevis/pintle end of the tow-bar in support (B) on the endsheet using hitch pin (C). Secure with lynch pin.
- 3. Install rubber strap (D) on cradle (A).



Figure 3.88: Tow-Bar Storage – Left Side

OPERATION

- 4. Place the inner end of the outer half of the tow-bar into cradle (A) on the right side of the header backtube.
- 5. Secure the tube end of the tow-bar in support (B) on the endsheet using hitch pin (C). Secure with hairpin.
- 6. Install rubber strap (D) on cradle (A).
- 7. Attach the header to the windrower. Refer to the windrower operator's manual for instructions.

IMPORTANT:

Carrying the tow-bar on the header will affect the main header float. Refer to your windrower operator's manual for adjustment procedures.

- 8. Place the transport wheels into field position. For instructions, refer to the following:
 - Moving Front (Left) Wheels into Field Position, page 99
 - Moving Rear (Right) Wheels into Field Position, page 100

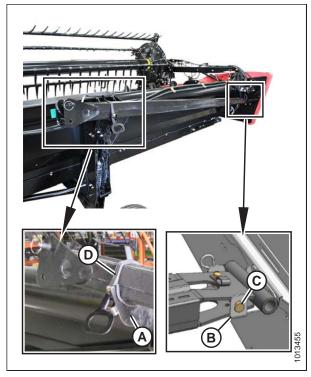


Figure 3.89: Tow-Bar Storage - Right Side

Moving Front (Left) Wheels into Field Position



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Raise the header fully and engage the header safety props.
- 2. Swivel front wheel assembly (A) so the wheels are aligned with the lower frame.
- 3. Remove pin (B) and pull the wheel assembly toward the rear of header. Store the pin in hole (C) at the top of the leg.
- 4. Pull handle (D) upward to release and lower the linkage into the vertical support.

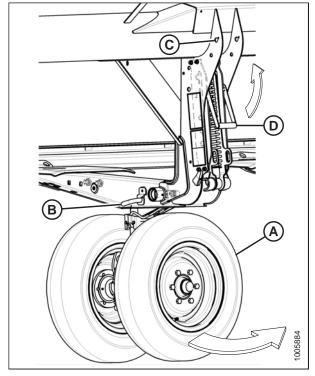


Figure 3.90: Front (Left) Wheels

- 5. Align lift hook (A) with lug (B) and lift the wheel assembly to engage the pin in the lift hook. Ensure latch (C) is engaged.
- 6. Install clevis pin (D) and secure to the center of the axle with hairpin.

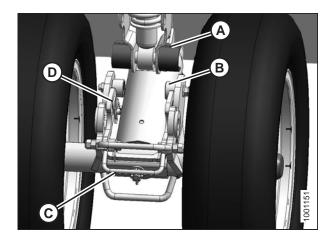


Figure 3.91: Front (Left) Wheels

- 7. Lift the wheel assembly to the desired height and slide linkage (A) into the appropriate slot in the vertical support.
- 8. Push handle (B) down to lock.



Figure 3.92: Front (Left) Wheels

Moving Rear (Right) Wheels into Field Position

1. Pull pin (A) on the left rear wheel. Swivel the wheel clockwise and lock with pin.

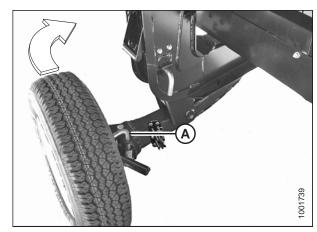


Figure 3.93: Rear Wheel - Right Side

- 2. Remove pin (A) and store at location (B).
- 3. Pull handle (C) upward to release.
- 4. Lift the wheel to the desired height, and engage the support channel into slot (D) in the vertical support.
- 5. Push handle (C) down to lock.

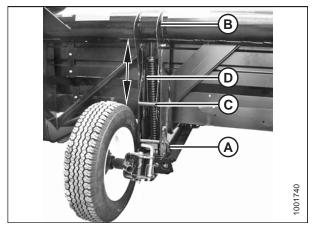


Figure 3.94: Rear Wheel - Right Side

- 6. Pull pin (A) on brace (B) on the left wheel in front of the cutterbar. Disengage the brace from the cutterbar, and lower the brace against axle (C).
- 7. Remove pin (D), lower support (E) onto axle, and reinsert pin into support.
- 8. Swing axle (C) clockwise towards the rear of the header.

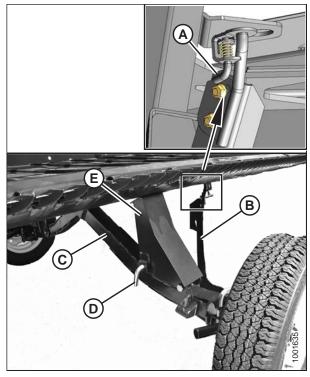


Figure 3.95: Right Rear Axle

- 9. Pull pin (A) on right wheel, swivel the wheel counterclockwise to position shown, and lock with pin (A).
- 10. Remove hairpin (B) from latch (C).
- 11. Lift the wheel, lift latch (C), and engage lug (D) onto the left axle. Ensure the latch closes.
- 12. Secure the latch with hairpin (B), ensuring the open end of the pin faces the rear of the windrower.

NOTE:

The hairpin can become dislodged by crop if installed with the open end facing the cutterbar.

IMPORTANT:

Check that wheels are locked and that handle is in locked position.

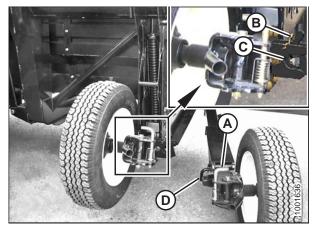


Figure 3.96: Rear Axles

13. Complete the conversion by ensuring left (A) and right (B) wheels are in the position shown.

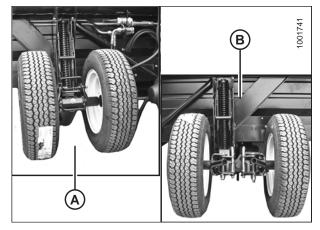


Figure 3.97: Field Position

3.15.4 Converting from Field to Transport Position

Moving Front (Left) Wheels into Transport Position



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.



CAUTION

Stand clear of wheels and release linkage carefully as wheels will drop once the mechanism is released.

- 1. Pull handle (B) upward to release and raise linkage (A) fully upward into the vertical support.
- 2. Raise the header fully, stop the engine, and remove the key from ignition. Engage the header safety props.

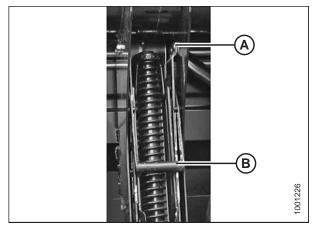


Figure 3.98: Raising Linkage

OPERATION

- 3. Remove the hairpin and clevis pin (A).
- 4. Pull latch handle (B) to release suspension linkage (C), and pull the suspension linkage away from spindle (D).
- 5. Lower the wheels slowly.

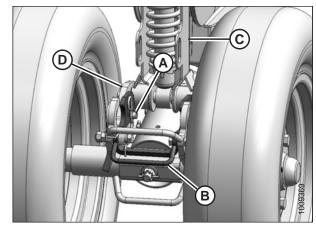


Figure 3.99: Left Front Wheels

6. Lower handle (B) to lock.

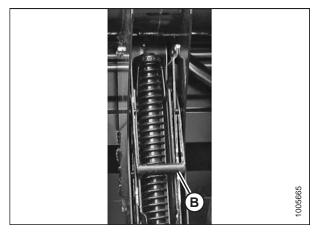


Figure 3.100: Locking Linkage

- 7. Remove pin (A) from storage at the top of leg (B).
- 8. Move and swivel the wheels clockwise until connector (C) is turned towards the front end of the header.
- 9. Insert pin (A) and turn to lock.
- 10. Lower the header until the left wheels are just touching the ground.

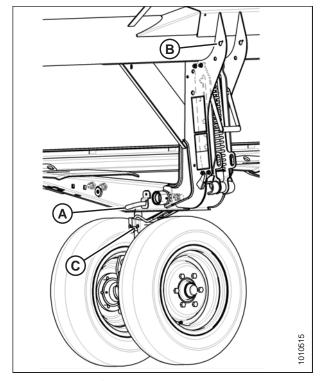


Figure 3.101: Left Front Wheels

Moving Rear (Right) Wheels into Transport Position

- 1. Remove hairpin (A) from latch (B).
- 2. Lift latch (B), disengage right axle (C), and lower to the ground.



CAUTION

Stand clear of wheels and release linkage carefully as wheels will drop once the mechanism is released.

- 3. Pull handle (D) carefully to release the spring and lower the wheel to the ground.
- 4. Lift the wheel and linkage with handle (E) and position the linkage in the bottom slot.
- Lower handle (C) to lock.

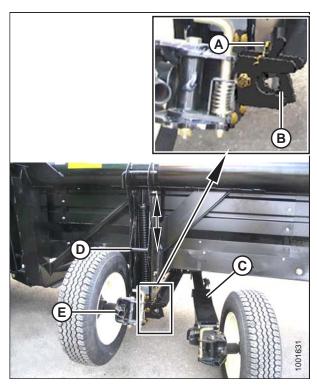


Figure 3.102: Separating Axles

- 6. Remove pin (A) and install at location (B) to secure the linkage. Turn the pin to lock.
- 7. Pull pin (D), swivel wheel (C) counterclockwise 90°, and release the pin to lock.

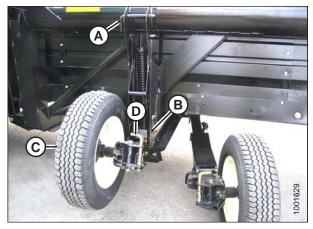


Figure 3.103: Wheel Position

8. Ensure the left wheel is in the transport position as shown.



Figure 3.104: Left Wheel in Transport Position

9. Pull pin (A) and swivel right rear wheel (B) clockwise 90°.

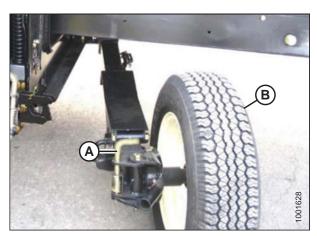


Figure 3.105: Right Rear Wheel

10. Lock wheel (A) with pin (B). Move right axle (C) to the front of the header.

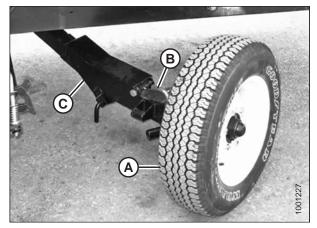


Figure 3.106: Right Rear Wheel

11. Remove pin (A), raise support (B) to the position shown, and reinsert pin.

IMPORTANT:

Ensure pin (A) engages the tube on the axle.

- 12. Swing brace (C) into the position shown and insert the brace into slot (D) behind the cutterbar. Position the brace so that pin (E) engages the hole in bracket (F). The right wheel is now in transport position.
- 13. Disengage safety props.
- 14. Detach the header's hydraulic and electrical connections from the windrower. For instructions, refer to 4 Header Attachment/Detachment, page 111.
- 15. Start the windrower and lower the header to the ground.

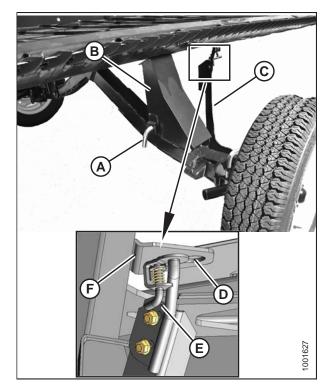


Figure 3.107: Right Rear Wheel Position

OPERATION

Attaching Tow-Bar

The tow-bar consists of two sections, which make storage and handling easier.

- 1. Unhook rubber strap (D) from cradle (A) on the right side of the header.
- 2. Remove clevis pin (C) and detach the tube end from support (B).
- 3. Replace clevis pin (C).
- 4. Lift the inner half of the tow-bar off the header and place it near the left side of the header.

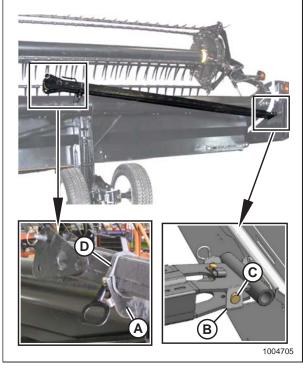


Figure 3.108: Tow-Bar Removal – Right Side

- 5. Unhook rubber strap (D) from cradle (A) on the left side of the header.
- 6. Remove hitch pin (C) from support (B), and remove the tow-bar.
- 7. Install rubber strap (D) on cradle (A).

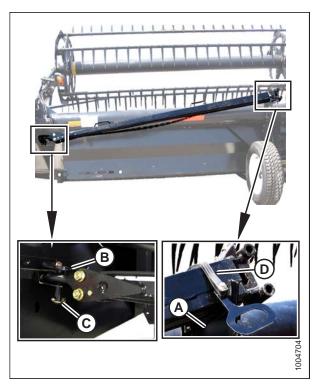


Figure 3.109: Tow-Bar Removal – Left Side

8. Connect outer half (B) of the tow-bar to inner half (A).

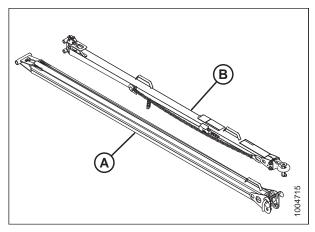


Figure 3.110: Tow-Bar Assembly

9. Lift outer half (B) and insert it into inner half (A).

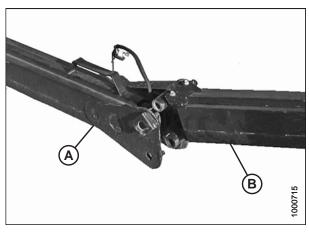


Figure 3.111: Tow-Bar Assembly

- 10. Secure the two halves together with L-pin (A) and then turn to lock. Secure the L-pin with ring (B).
- 11. Connect the electrical harness to connector (C).

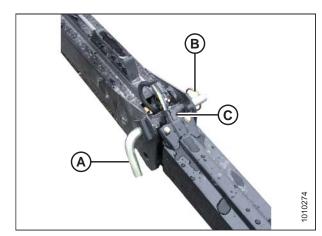


Figure 3.112: Tow-Bar Assembly

OPERATION

- 12. Position tow-bar (A) onto the axle, and push against latch (B) until the tow-bar pins drop into hooks (C).
- 13. Check that latch (B) has engaged the tow-bar.
- 14. Install clevis pin (D) and secure with hairpin.



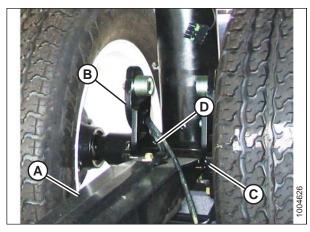


Figure 3.113: Attaching Tow-Bar



Figure 3.114: Harness Connection

3.16 Storing the Header

Perform the following procedures at the end of each operating season:



CAUTION

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.



CAUTION

Cover cutterbar and knife guards to prevent injury from accidental contact.

- 1. Clean the header thoroughly.
- 2. Store the machine in a dry, protected place if possible. If storing outside, always cover with a waterproof canvas or other protective material.

NOTE:

If storing the machine outside, remove the drapers and store them in a dark, dry place. If not removing the drapers, store the header with the cutterbar lowered so water and snow will not accumulate on the drapers. The weight of water and snow accumulation puts excessive stress on the drapers and header.

- 3. Lower the header onto blocks to keep the cutterbar off the ground.
- 4. Lower the reel completely. If stored outside, tie the reel to the frame to prevent rotation caused by the wind.
- 5. Repaint all worn or chipped painted surfaces to prevent rust.
- 6. Loosen the drive belts.
- 7. Lubricate the header thoroughly leaving excess grease on the fittings to keep moisture out of the bearings.
- 8. Apply grease to exposed threads, cylinder rods, and sliding surfaces of components.
- 9. Check for worn components and repair as necessary.
- 10. Check for broken components and order replacements from your Dealer. Immediate repair of these items will save time and effort at the beginning of next season.
- 11. Replace or tighten any missing or loose hardware. For instructions, refer to 8.2 Torque Specifications, page 270.

Chapter 4: Header Attachment/Detachment

This chapter includes instructions for setting up, attaching, and detaching the header.

4.1 Attaching Header to Windrower

Refer to your windrower operator's manual for instructions for mechanically attaching the header to the self-propelled windrower.

Refer to the following procedures for electrical and hydraulic connections.

Header drive hydraulic hoses and electrical harness are located on the left cab-forward side of the windrower. The reel drive and control hoses are located on the right cab-forward side.

To attach the header to a windrower, follow these steps:

1. Before connecting header drive hydraulics (A) and electrical harness (B) to header, check connectors and clean if required.



Figure 4.1: Header Drive Hoses

- Disengage and rotate lever (A) counterclockwise to fully up position.
- 3. Remove cap (B) securing electrical connector to frame.
- 4. Move hose bundle (C) from windrower hose support and route to header.

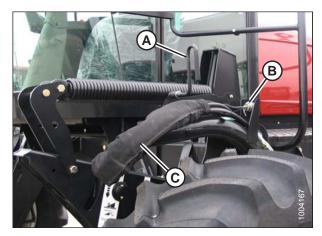


Figure 4.2: Header Drive Hoses

HEADER ATTACHMENT/DETACHMENT

- 5. Push hose connectors onto mating receptacle until collar on receptacle snaps into locked position.
- 6. Remove cover on electrical connector (A).
- 7. Push electrical connector onto receptacle and turn collar on connector to lock it in.
- 8. Attach cover to mating cover on tractor wiring.

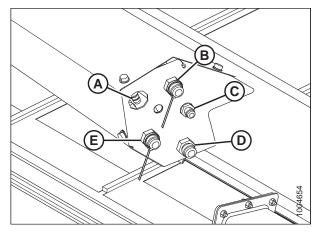


Figure 4.3: Header Receptacles

- A Electrical Connector
- B Knife Drive
- C Case Drain (Double Knife)
- D Draper Drive

- E Return
- 9. Lower lever (A) and engage in down position.



Figure 4.4: Hose Storage

10. Before connecting reel hydraulics, check connectors and clean if required.

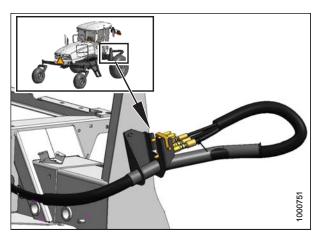


Figure 4.5: Reel Hose Storage

HEADER ATTACHMENT/DETACHMENT

- 11. Open cover on header receptacle (A).
- 12. Push in lock button (B) and pull handle (C) to half-open position.

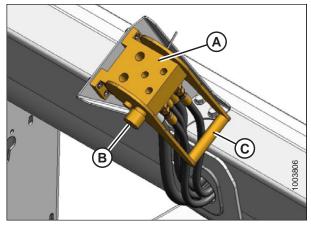


Figure 4.6: Reel Hydraulics Receptacle

- 13. Remove hose bundle with multicoupler (C) from windrower, place multicoupler onto header receptacle and push handle (B) to engage connector pins.
- 14. Push handle away from hoses until lock button (A) snaps out.
- 15. Raise and lower header and reel a few times to allow trapped air to pass back to the reservoir.

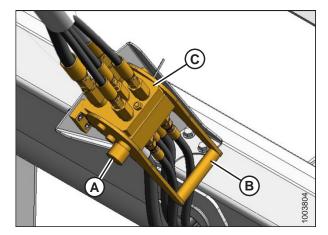


Figure 4.7: Reel Hose Connection

4.2 Detaching Header from Windrower

To detach the header from the windrower, follow these steps:

1. Fully lower the reel.

To disconnect the reel hydraulics:

- 2. Push in lock button (A) and pull handle (B) to disengage multicoupler (C) from header receptacle.
- Route hose bundle back onto windrower and store multicoupler (C) on hose support.

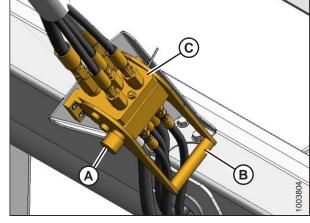


Figure 4.8: Reel Hydraulics

4. Close cover on header receptacle (A).

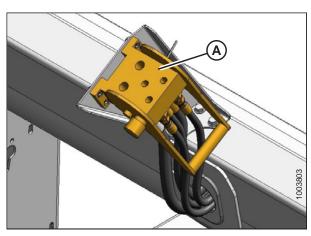


Figure 4.9: Closed Receptacle Cover

HEADER ATTACHMENT/DETACHMENT

To disconnect the header drive hydraulics:

- 5. Disengage and rotate lever (A) counterclockwise to fully up position.
- 6. Disconnect electrical connector from header.

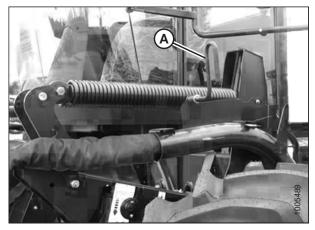


Figure 4.10: Header Drive Hydraulics

- 7. To disconnect hoses from header, line up slot (A) in collar with pin (B) on connector.
- 8. Push collar toward pin and pull connector to disengage.
- 9. Install caps on connectors and hose ends (if equipped).

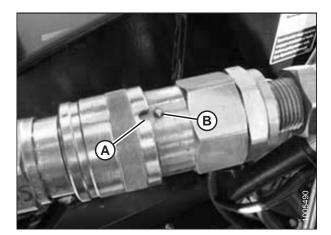


Figure 4.11: Quick Disconnect

To store hose bundle on windrower support:

- 10. Route hose bundle (A) back onto hose support on windrower.
- 11. Rotate lever (B) and lock in down position.
- 12. Install cap (C) on electrical connector.
- 13. Detach header from windrower. For instructions, refer to the windrower operator's manual.

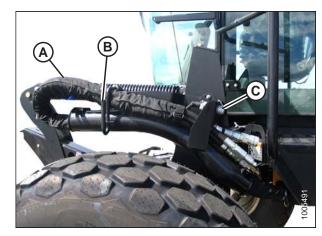


Figure 4.12: Hose Storage

Chapter 5: Maintenance and Servicing

The following instructions provide information about routine header service. Detailed maintenance and service information is contained in the technical service manual available from your MacDon Dealer. A parts catalog is provided in the plastic manual case inside the left endshield.

Log hours of operation and use the maintenance record provided (refer to 5.3.1 Maintenance Schedule/Record, page 120) to keep track of your scheduled maintenance.

5.1 Preparing Machine for Servicing



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.



CAUTION

To avoid personal injury, follow all the safety precautions listed before servicing header or opening drive covers.

- 1. Lower the header fully. If it is necessary to service the header in the raised position, always engage the safety props.
- 2. Stop the engine and remove the key from the ignition.
- 3. Engage the park brake.
- 4. Wait for all moving parts to stop.

5.2 Maintenance Specifications

5.2.1 Installing a Roller Chain

To install a roller chain, follow these steps:



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Locate ends of chain on sprocket.
- 2. Install pin connector (A) into chain, preferably from the sprocket backside.
- 3. Install connector (B) onto pins.
- 4. Install spring clip (C) onto front pin (D) with closed end of clip in direction of sprocket rotation.
- 5. Locate one leg of clip in groove of aft pin (E).
- Press other leg of spring clip over face of aft pin (E) until it slips into groove. Do **NOT** press clip lengthwise from closed end.
- 7. Ensure clip is seated in grooves of pins.

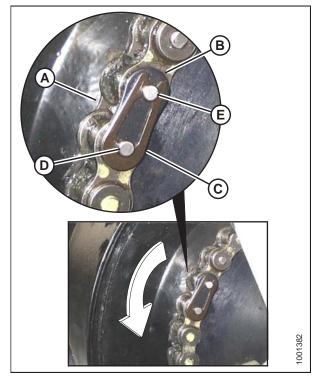


Figure 5.1: Chain Link Connector

5.2.2 Installing a Sealed Bearing

- 1. Clean the shaft and apply a rust preventive coating.
- Install flangette (A), bearing (B), second flangette (C), and lock collar (D).

NOTE:

The locking cam is on only one side of the bearing.

- 3. Install and tighten flangette bolts (E).
- 4. Position the shaft correctly, and lock the lock collar with a punch. Lock the collar in the same direction the shaft rotates, and tighten the set screw in the collar.
- 5. Loosen the flangette bolts on the mating bearing one turn and then retighten. This will allow the bearing to properly line up.

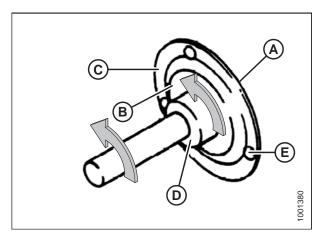


Figure 5.2: Sealed Bearing

5.3 **Maintenance Requirements**

Periodic maintenance requirements are organized according to service intervals.

Regular maintenance is the best insurance against early wear and untimely breakdowns. Following the maintenance schedule will increase your machine's life.

When servicing the machine, refer to the appropriate section in this chapter and use only the fluids and lubricants specified in Recommended Fluids and Lubricants on the inside back cover.

Log hours of operation, use the maintenance record, and keep copies of your maintenance records (refer to 5.3.1 Maintenance Schedule/Record, page 120).

If a service interval specifies more than one timeframe, e.g., "100 hours or annually", service the machine at whichever interval is reached first.

IMPORTANT:

Recommended intervals are for average conditions. Service the machine more often if operating under adverse conditions (severe dust, extra heavy loads, etc.).



CAUTION

Carefully follow safety messages. Refer to 5.1 Preparing Machine for Servicing, page 117 and 1 Safety, page 1.

5.3.1 Maintenance Schedule/Record

Copy this page to continue record.

	Maintenance Action:		✓ - Check							♦ - Lubricate							▲ - Change							
Но	Hour Meter Reading																							
Da	ite																							
Se	rviced by																							
Fir	st Use, refer to 5	.3.2 Break-In	Ins	pect	ion,	pa	ge 1	21																
En	End of Season, refer to 5.3.4 End-of-Season Service, page 122																							
10	Hours or Daily ⁴²																							
✓	Hydraulic hoses	and lines ⁴³																						
✓	Knife sections, g hold-downs ⁴³	uards, and																						
✓	Tire pressure ⁴³																							
•	Knife (except in sandy conditions) ⁴³																							
25	Hours																							
•	Knifehead(s) ⁴³																							
50	Hours																							
✓	Draper roller bea	arings																						
•	Knife drive box o	oil - first 50																						
10	0 Hours or Annua	ally ⁴²																						
✓	Draper seal																							
✓	Reel drive chain	tension																						
✓	Reel tine/cutters clearance	bar																						
✓	Knife drive belt t	tension																						
✓	Wheel bolt torque																							
✓	Knife drive box lubricant level																							
✓	Knife drive box mounting bolts																							
•	Reel drive chain																							
•	Upper cross auger right bearing																							

^{42.} Whichever occurs first.

^{43.} A record of daily maintenance is not required, but is at the Owner's/Operator's discretion.

	Maintenance Record	Action:	✓ - Check					♦ - Lubricate								▲ - Change							
25	0 Hours or Annua	ally ⁴²																					
✓	Draper seal																						
•	Upper cross aug support and U-jo																						
•	♦ Reel drive U-joint																						
•	Transport axle pivot bushings																						
50	0 Hours or Annua	ally ⁴²	-			•	•		•			•											
✓	Draper seal																						
٠	Reel shaft beari	ngs	П																				
٠	Stabilizer/slow s transport wheel																						
10	00 Hours or 3 Ye	ars ⁴²						-		•			•	-			-		-				
A	Knife drive box l	ubricant																					

5.3.2 Break-In Inspection

Break-in inspections involve checking belts, fluids, and performing general machine inspections for loose hardware or other areas of concern. Break-in inspections ensure that all components can operate for an extended period without requiring service or replacement.

Inspection Interval	ltem	Refer To
5 hours	Check for loose hardware. Tighten to required torque.	8.2 Torque Specifications, page 270
5 hours	Check knife drive belts tension. Periodically check for first 50 hours.	 Tensioning Timed Knife Drive Belts, page 168 Tensioning Untimed Knife Drive Belts, page 163
10 hours	Check knife drive box mounting bolts.	Checking Mounting Bolts, page 153
50 hours	Change knife drive box lubricant.	Changing Oil in Knife Drive Box, page 160

5.3.3 Preseason/Annual Service

Perform the following procedures at the beginning of each operating season:



CAUTION

- Review this manual to refresh your memory on the safety and operating recommendations.
- Review all the safety decals and other decals on the header and note the hazard areas.
- Be sure all the shields and guards are properly installed and secured. Never alter or remove safety equipment.
- Be sure you understand and have practiced safe use of all controls. Know the capacity and operating characteristics
 of the machine.
- Check the first aid kit and fire extinguisher. Know where they are and how to use them.

- 1. Lubricate the machine completely. For instructions, refer to Service Intervals, page 124.
- Adjust the tension on the drive belts depending on your equipment. For instructions, refer to Tensioning Untimed Knife
 Drive Belts, page 163.
- 3. Perform all the annual maintenance. For instructions, refer to 5.3.1 Maintenance Schedule/Record, page 120.

5.3.4 End-of-Season Service

Perform the following procedures at the end of each operating season:



CAUTION

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.



CAUTION

Cover cutterbar and knife guards to prevent injury from accidental contact.

- 1. Clean the header thoroughly.
- 2. Store the machine in a dry, protected place if possible. If storing outside, always cover with a waterproof canvas or other protective material.

NOTE:

If storing the machine outside, remove the drapers and store them in a dark, dry place. If not removing the drapers, store the header with the cutterbar lowered so water and snow will not accumulate on the drapers. The weight of water and snow accumulation puts excessive stress on the drapers and header.

- 3. Lower the header onto blocks to keep the cutterbar off the ground.
- 4. Lower the reel completely. If stored outside, tie the reel to the frame to prevent rotation caused by the wind.
- 5. Repaint all worn or chipped painted surfaces to prevent rust.
- Loosen the drive belts.
- 7. Lubricate the header thoroughly leaving excess grease on the fittings to keep moisture out of the bearings.
- 8. Apply grease to exposed threads, cylinder rods, and sliding surfaces of components.
- 9. Check for worn components and repair as necessary.
- 10. Check for broken components and order replacements from your Dealer. Immediate repair of these items will save time and effort at the beginning of next season.
- 11. Replace or tighten any missing or loose hardware. For instructions, refer to 5.2 Maintenance Specifications, page 118.

5.3.5 Checking Hydraulic Hoses and Lines

Check hydraulic hoses and lines daily for signs of leaks.



WARNING

- Avoid high-pressure fluids. Escaping fluid can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure.
- If any fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury or gangrene may result.



Figure 5.3: Hydraulic Pressure Hazard

• Use a piece of cardboard or paper to search for leaks.

IMPORTANT:

Keep hydraulic coupler tips and connectors clean. Allowing dust, dirt, water, or foreign material to enter the system is the major cause of hydraulic system damage. Do **NOT** attempt to service hydraulic systems in the field. Precision fits require a perfectly clean connection during overhaul.

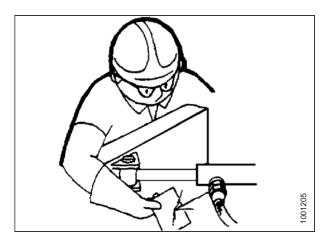


Figure 5.4: Testing for Hydraulic Leaks

5.3.6 Lubrication and Servicing



CAUTION

To avoid personal injury, before servicing header or opening drive covers, follow procedures in 5.1 Preparing Machine for Servicing, page 117.

Refer to the inside back cover for recommended lubricants.

Log hours of operation and use the Maintenance Record provided to keep a record of scheduled maintenance. For instructions, refer to 5.3.1 Maintenance Schedule/Record, page 120.

Service Intervals

Refer to the illustrations on the following pages to identify the various locations that require lubrication and servicing. Illustrations are organized by the frequency of service.

IMPORTANT:

Unless otherwise specified, use high temperature extreme pressure (EP2) performance with 1% maximum molybdenum disulphide (NLGI grade 2) lithium base.

Knife (except in sandy conditions):

Lubricate every 10 hours or daily.

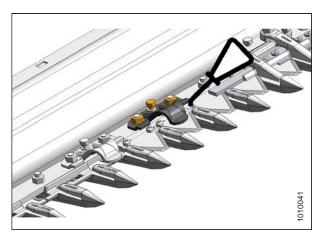


Figure 5.5: Every 10 Hours or Daily

Knifehead:

Lubricate every 25 hours.

NOTE:

To prevent binding and/or excessive wear caused by knife pressure on the guards, do **NOT** overgrease knifehead (A). Apply only one to two pumps using a mechanical grease gun (do **NOT** use an electric grease gun). If more than six to eight pumps of the grease gun are required to fill the cavity, replace the seal in the knifehead. For instructions, refer to 5.5.3 Removing Knifehead Bearing, page 138.

NOTE:

Check for signs of excessive heating on first few guards after greasing. If required, relieve pressure by pressing check-ball in grease fitting.

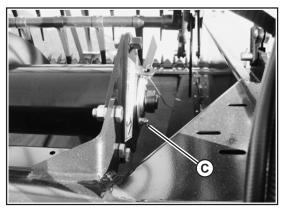



Figure 5.6: Every 25 Hours


A - Knifehead (Single Knife [1 Place]; Double Knife [2 Places])

Figure 5.7: Every 100 Hours





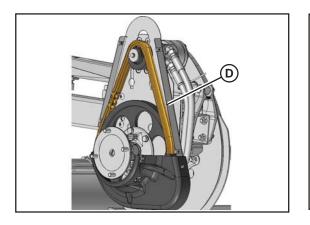


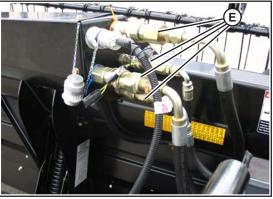

005340

- A Knife Drive Box (Check Oil Level Between Lower Hole and End of Dipstick [B])
- D Reel Drive Chain (1 Place) (Double Reel Shown Single Reel Similar)
- C Upper Cross Auger Bearing (1 Place)
- E Hydraulic Couplers (Use WD40® or Equivalent)

Figure 5.8: Every 250 Hours

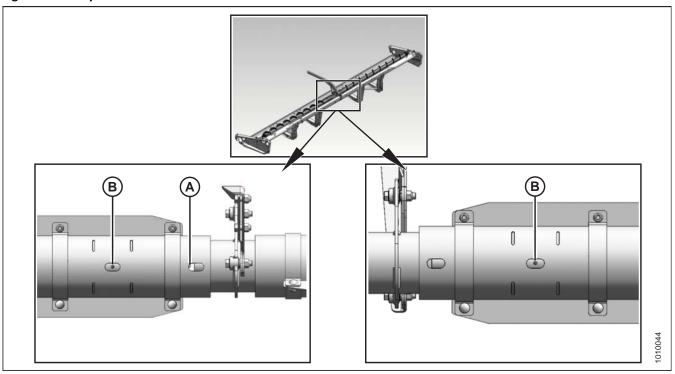


A - Upper Cross Auger U-joint⁴⁴

B - Upper Cross Auger Bearing (2 Places)

215018 127 Revision A

^{44.} U-joint has an extended lubrication cross and bearing kit. Stop greasing when greasing becomes difficult or if U-joint stops taking grease. Overgreasing will damage U-joint. Six to eight pumps are sufficient at first grease (factory). Decrease grease interval as U-joint wears and requires more than six pumps.

Figure 5.9: Every 250 Hours (Continued)

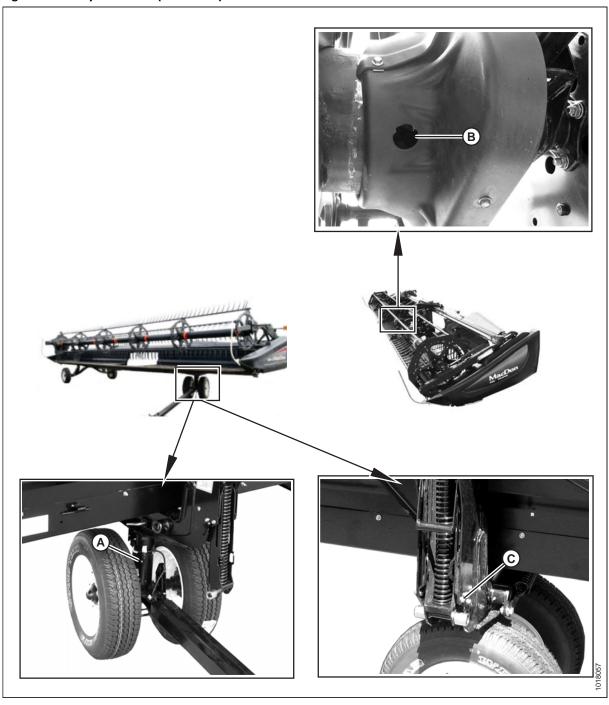


A - Front Wheel Pivot (1 Place)

C - Frame/Wheel Pivot (1 Place) - Both Sides

B - Double Reel U-Joint (1 Place)⁴⁵

^{45.} U-joint has an extended lubrication cross and bearing kit. Stop greasing when greasing becomes difficult or if U-joint stops taking grease. Overgreasing will damage U-joint. Six to eight pumps are sufficient at first grease (factory). Decrease grease interval as U-joint wears and requires more than six pumps.

Figure 5.10: Every 500 Hours

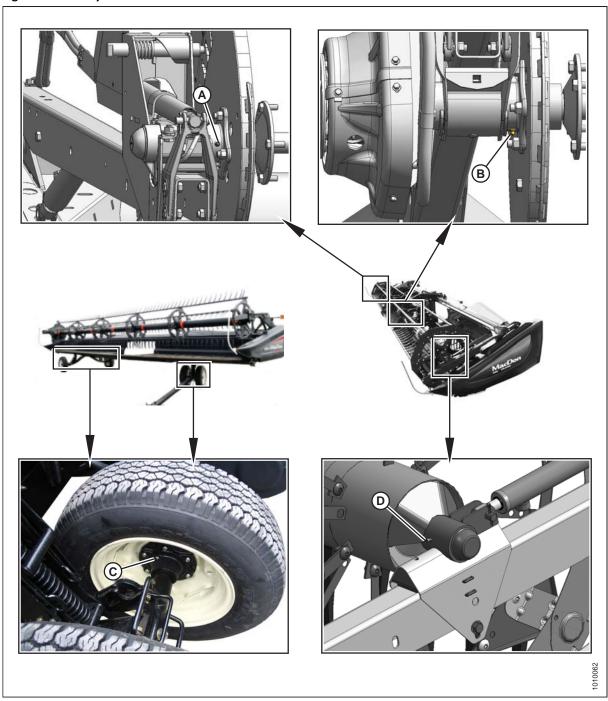

- A Reel Right Bearing (1 Place) C Wheel Bearings (4 Places)

- B Reel Center Bearing (1 Place)
- D Reel Left Bearing (1 Place)

Greasing Procedure

Greasing points are marked on machine by decals showing a grease gun and grease interval in hours of operation. Master grease point location decals are provided on header.



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

Refer to the inside back cover for recommended lubricants.

Log hours of operation and use the Maintenance Record provided to keep a record of scheduled maintenance. Refer to 5.3.1 Maintenance Schedule/Record, page 120.

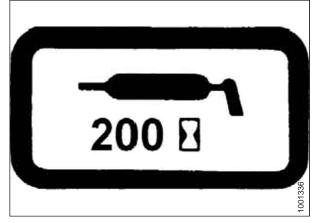


Figure 5.11: Greasing Interval Decal

- 1. Wipe grease fitting with a clean cloth before greasing to avoid injecting dirt and grit.
- Inject grease through fitting with grease gun until grease overflows fitting (except where noted).
- 3. Leave excess grease on fitting to keep out dirt.
- 4. Replace any loose or broken fittings immediately.
- Remove and thoroughly clean any fitting that will not take grease. Also clean lubricant passageway. Replace fitting if necessary.
- 6. Use high temperature, extreme pressure (EP2) performance with 1% max molybdenum disulphide (NLGI Grade 2) lithium base unless otherwise specified.

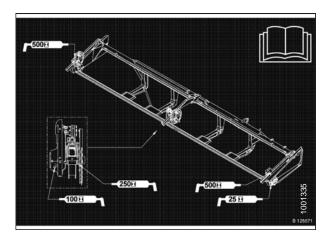


Figure 5.12: Single-Knife Header Master Grease Point Decal

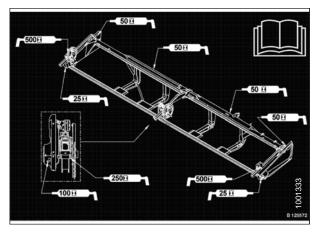


Figure 5.13: Double-Knife Header Master Grease Point Decal

Lubricating Reel Drive Chain - Single Reel



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Stop the engine and remove the key from the ignition.
- 2. Remove four bolts (A) securing cover (B) to the reel drive.

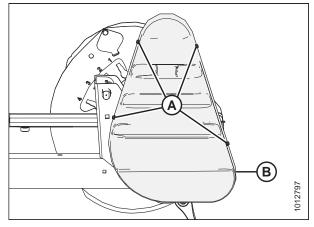


Figure 5.14: Drive Cover - Single Reel

3. Apply a liberal amount of grease to chain (A).

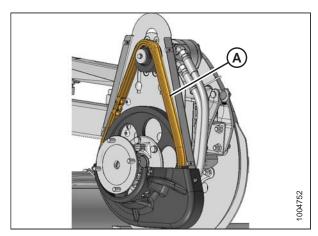


Figure 5.15: Drive Chain

4. Position drive cover (B) onto the reel drive and secure with four bolts (A).

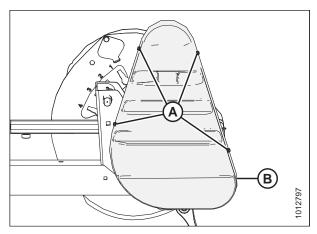


Figure 5.16: Drive Cover – Single Reel

Lubricating Reel Drive Chain - Double Reel



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Stop the engine and remove the key from the ignition.
- 2. Remove six bolts (A) securing upper cover (B) to the reel drive and lower cover (C).

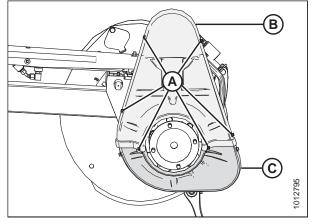


Figure 5.17: Drive Cover - Double Reel

3. Remove three bolts (A) and remove lower cover (B) if necessary.

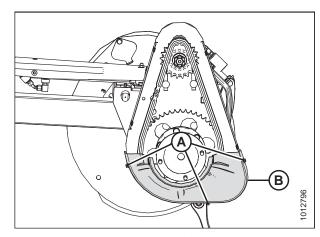


Figure 5.18: Drive Cover - Double Reel

4. Apply a liberal amount of grease to chain (A).

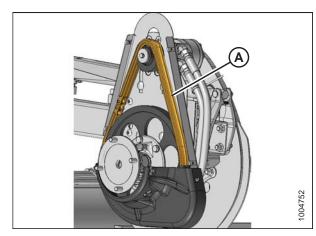


Figure 5.19: Drive Chain

5. Position lower drive cover (B) onto the reel drive (if previously removed) and secure with three bolts (A).

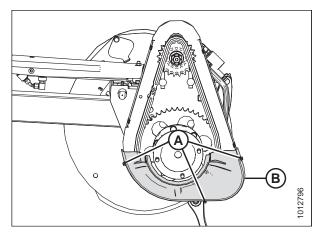


Figure 5.20: Drive Cover - Double Reel

6. Position upper drive cover (B) onto the reel drive and lower cover (C), and secure with six bolts (A).

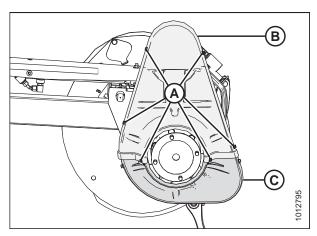


Figure 5.21: Drive Cover - Double Reel

5.4 Electrical System

Use electrical tape and wire clips as required to prevent wires from dragging or rubbing.

Keep lights clean and replace defective bulbs.

5.4.1 Replacing Light Bulbs



WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Use a Phillips screwdriver to remove screws (A) from the fixture, and remove the plastic lens. Retain screws (A).
- 3. Replace the bulb, and reinstall the plastic lens and screws.

NOTE:

Use trade #1156 bulb for amber transport lights and #1157 for the red tail light (Slow Speed Transport option).

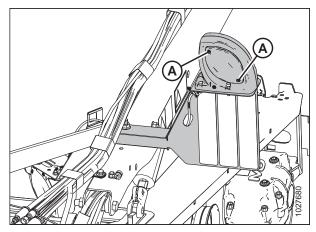


Figure 5.22: Left Transport Light

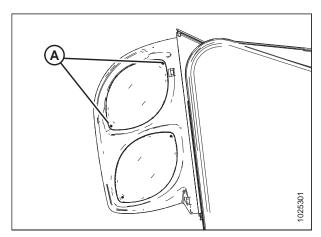


Figure 5.23: Optional Slow Speed Transport – Red and Amber Lights

5.5 Knife



WARNING

Keep hands clear of the area between guards and knife at all times.



CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to 5.1 Preparing Machine for Servicing, page 117.



CAUTION

Wear heavy gloves when working around or handling knives.

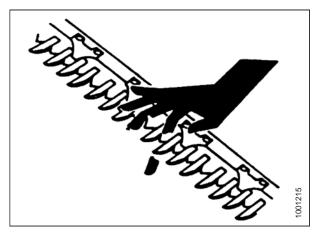


Figure 5.24: Cutterbar Hazard

5.5.1 Replacing Knife Section

Inspect the knife sections daily and ensure they are firmly bolted to the knife back and are not worn or damaged (worn or damaged sections leave behind uncut plants). Worn or damaged sections can be replaced without removing the knife from the cutterbar.

NOTE:

Coarse serrated knife sections last longer than fine serrated sections in dirty or sandy conditions. Fine serrated knife sections perform better in fine-stemmed grasses and plants that contain more fibrous stems.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Stroke the knife as required to center knife section (A) between the guards.
- 3. Remove nuts (B).
- 4. Remove bars and lift the knife section off the knife bar.
- 5. Remove splice bar (C) if knife section is under the bar.
- 6. Clean any dirt off the knife back and position the new knife section onto the knife.

IMPORTANT:

Do **NOT** mix fine and coarse sections on the same knife.

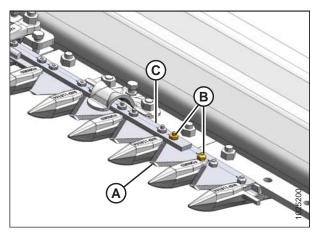


Figure 5.25: Knife Bar

7. Reposition bars (C) and/or (D) on knife (A) and install lock nuts (B).

NOTE:

If replacing screws, ensure they are fully inserted. Do **NOT** use nuts to draw screws into the knife bar.

8. Torque nuts to 9.5 Nm (7 lbf·ft).

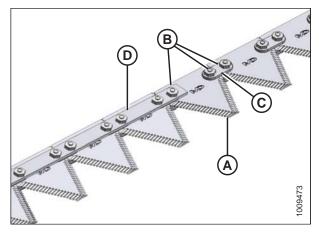


Figure 5.26: Knife Bar

5.5.2 Removing Knife



WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.



WARNING

Stand to rear of knife during removal to reduce risk of injury from cutting edges. Wear heavy gloves when handling knife.

- 1. Stop engine and remove the key from ignition.
- 2. Stroke the knife manually to its outer limit.
- 3. Clean the area around the knifehead.
- 4. Remove bolt (A).
- 5. Remove grease fitting (B) from the pin.
- 6. Use a screwdriver or chisel in slot (C) to release the load on the knifehead pin.
- 7. Use a screwdriver or chisel to pry the pin upwards in the pin groove until the pin is clear of the knifehead.
- 8. Push the knife assembly inboard until it is clear of the output arm.
- 9. Seal the knifehead bearing with plastic or tape unless it is being replaced.
- 10. Wrap a chain around the knifehead and pull out the knife.

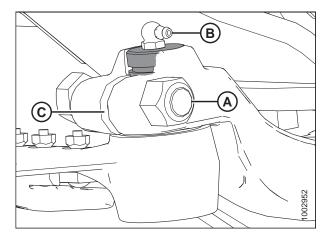


Figure 5.27: Knifehead

5.5.3 Removing Knifehead Bearing



WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.



WARNING

Stand to rear of knife during removal to reduce risk of injury from cutting edges. Wear heavy gloves when handling knife.

IMPORTANT:

Repeat this procedure for each knife.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Remove the knife. For instructions, refer to 5.5.2 Removing Knife, page 137.

NOTE:

Because the bearing is being replaced, it is not necessary to wrap the knifehead to protect the bearing.

3. Use a flat-ended tool with the same approximate diameter as pin (A), and tap seal (B), bearing (C), plug (D), and O-ring (E) from the underside of the knifehead.

NOTE:

Seal (B) can be replaced without removing the bearing. When changing the seal, check the pin and needle bearing for wear and replace if necessary.

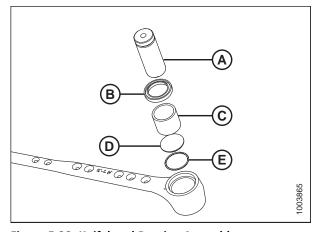


Figure 5.28: Knifehead Bearing Assembly

5.5.4 Installing Knifehead Bearing

1. Place O-ring (E) and plug (D) into knifehead.

IMPORTANT:

Install the bearing with the stamped end (the end with the identification markings) facing up.

NOTE:

It may be necessary to temporarily remove the grease fitting from the knifehead during installation of the knifehead pin. This will allow any trapped air to escape and knifehead pin will seat correctly.

- Use a flat-ended tool with the same approximate diameter as bearing (C), and push the bearing into the knifehead until the top of the bearing is flush with the step in the knifehead.
- 3. Install seal (B) into knifehead with the lip facing outwards.

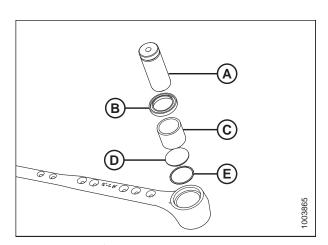


Figure 5.29: Knifehead Bearing Assembly

IMPORTANT:

To prevent premature knifehead or knife drive box failure, ensure there's a tight fit between knifehead pin (A) and the needle bearing, and also between the knifehead pin and the output arm.

4. Install the knife. For instructions, refer to 5.5.5 Installing Knife, page 139.

5.5.5 Installing Knife



WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.



WARNING

Stand to rear of knife during installation to reduce risk of injury from cutting edges. Wear heavy gloves when handling knife.

- 1. Stop engine, and remove the key from ignition.
- 2. Slide the knife into place and align the knifehead with the output arm.
- 3. For ease of removing or installing knifehead pin, remove grease fitting from pin.
- 4. Install knifehead pin (A) through the output arm and into the knifehead. Tap knifehead pin (A) down, and make sure the pin is seated at the bottom of the knifehead.
- 5. Set groove (B) in the knifehead pin 1.5 mm (1/16 in.) above output arm (C). Secure with 5/8 in. x 3 in. hex head bolt and nut (D), and torque to 217 Nm (160 lbf·ft).
- 6. Using a feeler gauge, check that the gap at location (E) is 0.25 mm (0.01 in.).
- 7. Install grease fitting (A) into the knifehead pin, and turn the grease fitting for easy access.

IMPORTANT:

Grease knifehead just enough to start a slight downward movement. Overgreasing will lead to knife misalignment which causes guards to overheat and drive systems to overload.

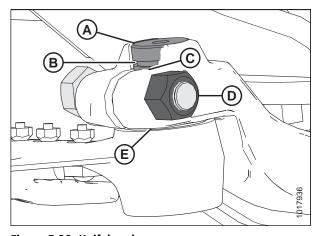


Figure 5.30: Knifehead

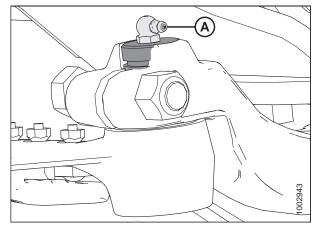


Figure 5.31: Knifehead

5.5.6 Spare Knife

A spare knife can be stored in header frame tube (A) at the left end of the header. Ensure the spare knife is secured in place.



Figure 5.32: Spare Knife

5.5.7 Knife Guards

Perform **DAILY** inspections to ensure the knife guards are aligned and the knife sections are contacting the shear surfaces of the knife guards.

Adjusting Knife Guards



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

NOTE:

Use guard straightening tool (MD #140135) available from your MacDon Dealer.

- 1. Stop engine, and remove the key from ignition.
- 2. Position the tool as shown, and pull up to adjust the guard tips upwards.



Figure 5.33: Upward Adjustment

3. Position the tool as shown, and push down to adjust the guard tips downwards.

NOTE:

If crop is difficult to cut, install stub guards with top guards and adjuster plates. A kit is available from your MacDon Dealer. For information, refer to 6.2.4 Stub Guard Conversion Kit, page 244.

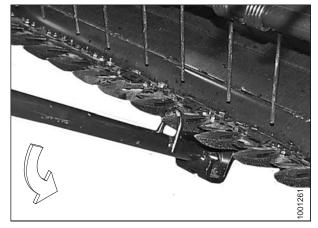


Figure 5.34: Downward Adjustment

Replacing Pointed Guards

Normal, drive side, and end guard replacement:



WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Stroke the knife manually until the knife sections are spaced midway between the guards.
- 3. Remove two nuts (B) and bolts attaching guard (A) and hold-down (C) (if applicable) to the cutterbar.
- 4. Remove guard (A), hold-down (C) (if applicable), and plastic wearplate (if installed).

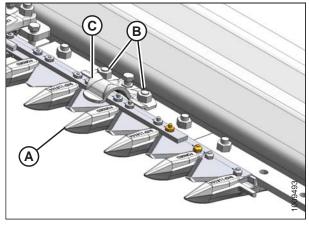


Figure 5.35: Pointed Guards

IMPORTANT:

The first four outboard guards (B) on the drive sides of the header do **NOT** have ledger plates. Ensure proper replacement guards are installed at these locations.

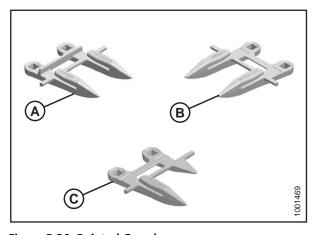


Figure 5.36: Pointed Guards
A - Normal B - Drive Side

C - Half Guard (End)

- 5. Position new guard (A), hold-down (C) (if applicable), and plastic wearplate (if applicable) onto the cutterbar. Secure with two nuts (B) and bolts, but do **NOT** tighten.
- 6. Check and adjust the clearance between the hold-downs and the knife. For instructions, refer to *Checking Knife Hold-Downs, page 148*.

NOTE:

The guard at the center of a double-knife header (where the two knives overlap) requires a different replacement procedure. For instructions, refer to Steps 7, page 143 through 11, page 144.

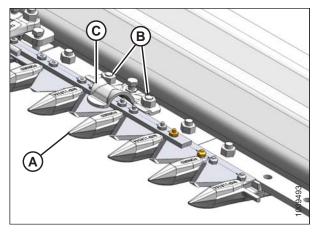


Figure 5.37: Pointed Guards

Center guard replacement:



WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Remove two nuts (B) and bolts attaching guard (A) and hold-down (C) to the cutterbar.
- 3. Remove guard (A), plastic wearplate (if installed), hold-down (C), and adjuster bar (D).

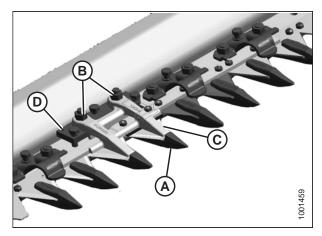


Figure 5.38: Center Guards

4. Position the plastic wearplate (if applicable), replacement center guard (A), adjuster bar, and hold-down (B) onto the cutterbar. Install bolts, but do **NOT** tighten.

IMPORTANT:

Ensure center guard (A) (right of the cutterbar split) has offset cutting surfaces.

IMPORTANT:

Hold-down (B) must accommodate the two overlapping knives at the center guard location. Ensure the proper replacement guard is installed at this location.

5. Check and adjust the clearance between the hold-down and knife. For instructions, refer to *Checking Knife Hold-Downs, page 148*.

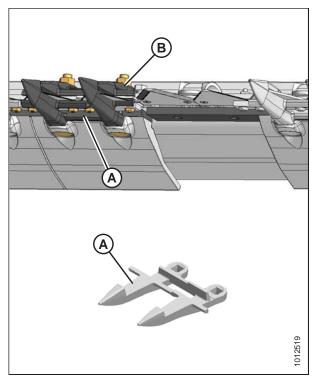


Figure 5.39: Center Guards

Replacing Stub Guards

Stub guards, complete with hold-downs and adjuster plates, are designed to cut tough crops. Stub guards are available for 4.6–10.7 m (15–35 ft.) headers only.

Normal, drive side, and end guard replacement:



WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

- Shut down the windrower, and remove the key from the ignition.
- 2. Stroke the knife manually until the knife sections are spaced midway between the guards.
- 3. Remove two nuts (A) and bolts attaching guard (B) and hold-down (C) to the cutterbar.
- 4. Remove guard (B), plastic wearplate (if installed), hold-down (C), and adjuster bar (D).

IMPORTANT:

Note the position of the miter on adjuster bar (D), and reinstall the adjuster bar in the same position. Miters should **NOT** be adjacent to each other.

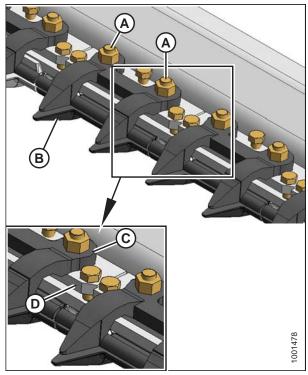


Figure 5.40: Stub Guards

IMPORTANT:

The first four outboard guards (B) on the drive sides of the header do **NOT** have ledger plates. Ensure the proper replacement guards are installed at these locations.

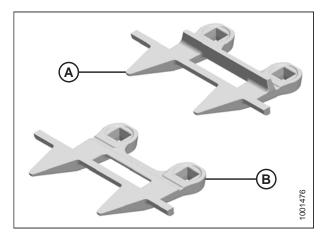


Figure 5.41: Stub Guards
A - Normal Guard B - Drive Side Guard

- 5. Position the plastic wearplate (if applicable), replacement guard (B), adjuster bar (D), hold-down (C), and install bolts and nuts (A). Do **NOT** tighten.
- 6. Check and adjust the clearance between the hold-downs and the knife. For instructions, refer to *Checking Knife Hold-Downs, page 148*.

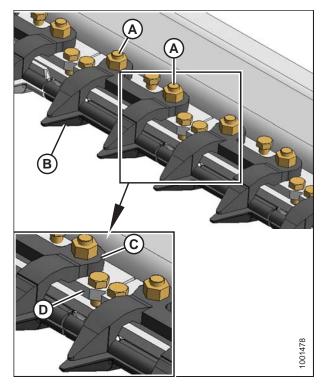


Figure 5.42: Stub Guards

Center guard replacement:

NOTE:

The guard at the center of a double-knife header (where the two knives overlap) requires a slightly different replacement procedure.



WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

- 7. Shut down the windrower, and remove the key from the ignition.
- 8. Remove two nuts (A) and bolts attaching guard (B), hold-down (C), and adjuster bar (D) to the cutterbar.
- 9. Remove guard (B), plastic wearplate (if installed), hold-down (C), and adjuster bar (D).
- 10. Position the plastic wearplate (if applicable), replacement guard (B), adjuster bar (D), and hold-down (C) onto the cutterbar. Install bolts, but do **NOT** tighten.

IMPORTANT:

Ensure center guard (B) (right of the cutterbar split) has offset cutting surfaces.

IMPORTANT:

Hold-down (C) must accommodate the two overlapping knives at the center guard location. Ensure the proper replacement guard is installed at this location.

 Check and adjust the clearance between the hold-down and the knife. For instructions, refer to Checking Knife Hold-Downs, page 148.

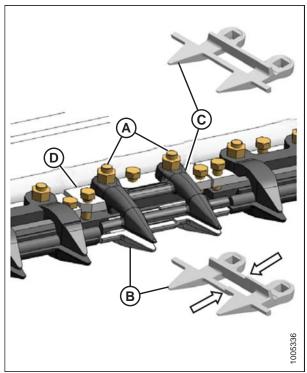


Figure 5.43: Center Guards

Checking Knife Hold-Downs



WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

Perform daily inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding.

NOTE:

Align guards prior to checking and adjusting the hold-downs. For instructions, refer to Adjusting Knife Guards, page 141.

Measure the clearance between the hold-downs and knife sections as follows:

Normal knife guard hold-down:

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Manually stroke knife to center the sections in guards.
- 3. Measure the clearance between normal guard hold-down (A) and knife section (B) with a feeler gauge. Push the section down against the bottom of the guard. The clearance should be 0.1–0.6 mm (0.004–0.024 in.).

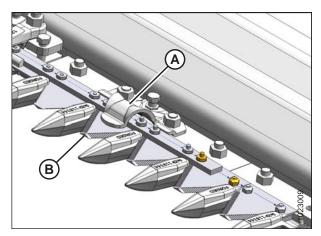


Figure 5.44: Normal Guard Hold-Down

Double knife center guard hold-down:

- 4. Measure the clearance between the center guard holddown (A) and the knife section with a feeler gauge. Push the section down against the bottom of the guard. The clearances should be:
 - At Hold-Down Tip (B): 0.1–0.4 mm (0.004–0.016 in.)
 - At Rear of Hold-Down (C): 0.1–1.0 mm (0.004–0.040 in.)
- 5. If necessary, refer to the following for adjustment procedures:
 - Adjusting Pointed Guard Hold-Downs, page 149
 - Adjusting Stub Guard Hold-Downs, page 150

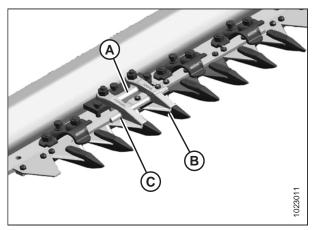


Figure 5.45: Double Knife Center Guard Hold-Down

Adjusting Pointed Guard Hold-Downs

This procedure is applicable to formed sheet metal hold-downs. Do **NOT** use this procedure for the hold-down at center guard position where knives overlap on double-knife headers. For center guard, refer to *Adjusting Stub Guard Hold-Downs*, page 150.



WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before adjusting machine.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Decrease clearance by turning bolt (B) clockwise to lower front of hold-down (A).
- 3. Increase clearance by turning bolt (B) counterclockwise to raise front of hold-down.

NOTE:

For larger adjustments, it may be necessary to loosen nuts (C), turn adjuster bolt (B), and then retighten nuts.

4. Check clearance again and adjust as required.

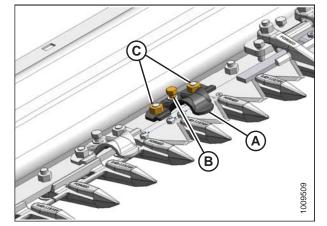


Figure 5.46: Cutterbar



WARNING

Check to be sure all bystanders have cleared the area.

5. Complete hold-down adjustments, run header at low engine speed, and listen for noise caused by insufficient clearance.

NOTE:

Insufficient hold-down clearance will result in overheating of knife and guards—adjust as necessary.

Adjusting Stub Guard Hold-Downs



WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before adjusting machine.

1. Shut down the engine, and remove the key from the ignition.

Forged hold-down:

- 2. Manually stroke knife to center section(s) (A) under hold-down (B) as shown.
- 3. Loosen nuts (C) and back off bolts (D) clear of cutterbar.
- 4. Position a C-clamp or equivalent on trash bar at location (F), and lightly clamp hold-down (B) to guard (E).
- Turn bolts (D) until they contact cutterbar, then tighten ONE turn.
- 6. Remove clamp.
- 7. Tighten nuts (C) and torque to 45 Nm (35 lbf·ft).
- 8. Check that specified clearances are achieved. For instructions, refer to *Checking Knife Hold-Downs, page 148*.

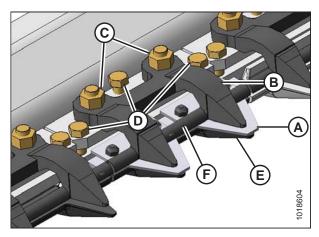


Figure 5.47: Normal Stub Guard Forged Hold-Down

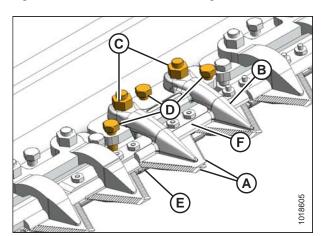


Figure 5.48: Double-Knife Center Stub Guard

Sheet metal hold-down:

- Manually stroke knife to center section (A) under holddown (B) as shown.
- 10. Decrease clearance by turning bolt (C) clockwise to lower front of hold-down. Clearance should be 0.1–0.6 mm (0.004–0.024 in.).
- 11. Increase clearance by turning bolt (C) counterclockwise to raise front of hold-down.

NOTE:

For larger adjustments, it may be necessary to loosen nuts (D), turn adjuster bolt (C), and then retighten nuts.

12. Torque nuts (D) to 88 Nm (65 lbf·ft) after all adjustments are complete and specified clearances are achieved. For instructions, refer to *Checking Knife Hold-Downs, page 148*.

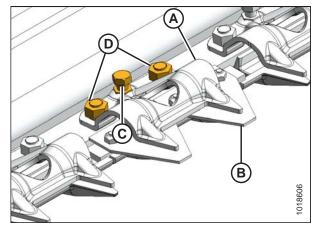


Figure 5.49: Stub Guard Sheet Metal Hold-Down



WARNING

Check to be sure all bystanders have cleared the area.

13. Complete hold-down adjustments, run header at low engine speed, and listen for noise caused by insufficient clearance.

IMPORTANT:

Insufficient hold-down clearance will result in overheating of knife and guards—readjust as necessary.

5.5.8 Knifehead Shield

The knifehead shield attaches to the endsheet and reduces the knifehead opening to prevent cut crop from accumulating in the knifehead cutout.

The shields and mounting hardware are available from your MacDon Dealer.

IMPORTANT:

Remove the shields when cutting with the cutterbar on the ground in muddy conditions. Mud may pack into the cavity behind the shield which could result in knife drive box failure.

Installing Knifehead Shield

The knifehead shield is supplied in flattened form, but it can be bent to suit installation on pointed or stub guard cutterbars. Knifehead shields differ slightly depending on header size and guard configuration, so ensure you are using the proper knifehead shield for your header. Refer to your parts catalog for proper replacement parts.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.



CAUTION

Wear heavy gloves when working around or handling knives.

- 1. Raise the reel to its full height, lower the header to the ground, shut down the engine, and remove the key from the ignition.
- 2. Engage the reel safety props.
- 3. Place knifehead shield (A) against the endsheet as shown. Align the shield so the cutout matches the profile of the knifehead and/or hold-downs.
- Bend knifehead shield (A) along the slit to conform to the endsheet.
- 5. Align the mounting holes and secure with two 3/8 in. x 1/2 in. Torx® head bolts (B).
- 6. Tighten bolts (B) just enough to hold knifehead shield (A) in place while allowing it to be adjusted as close to the knifehead as possible.
- 7. Manually rotate the knife drive box pulley to move the knife and check for areas of contact between the knifehead and knifehead shield (A). Adjust the shield to eliminate interference with the knife if necessary.
- 8. Tighten bolts (B).

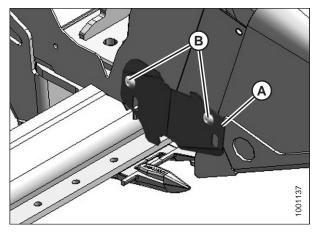


Figure 5.50: Knifehead Shield

5.6 Knife Drive

5.6.1 Knife Drive Box

Knife drive boxes convert rotational motion into the reciprocating motion of the knife, and are belt driven by a hydraulic motor. There is one knife drive box on single-reel headers and two knife drive boxes on double-reel headers.



CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to 5.1 Preparing Machine for Servicing, page 117.

Checking Mounting Bolts

Check the torque on the four knife drive box mounting bolts after the first 10 hours of operation and every 100 hours thereafter.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

1. Torque side bolts (A) first, then torque bottom bolts (B). Torque all bolts to 271 Nm (200 lbf·ft).

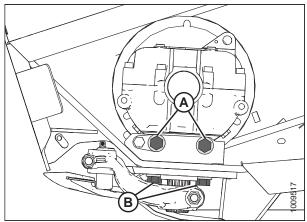


Figure 5.51: Knife Drive Box

Removing Knife Drive Box



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

Timed double-knife headers:

NOTE:

The procedure is the same for both ends of a timed double-knife header. Images shown are for the left end—the right end is opposite.

- Shut down the windrower, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to *Opening Endshields*, page 32.
- 3. Loosen two nuts (A) on the belt idler bracket to relieve the belt tension.
- 4. Loosen nut (B) on the idler pulley and slide the idler down to loosen the belt.
- 5. Proceed to Step 10, page 155.

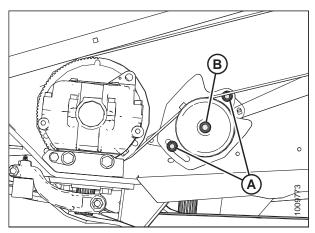


Figure 5.52: Timed Double-Knife Drive

Single and untimed double-knife headers:

- 6. Shut down the windrower, and remove the key from the ignition.
- 7. Open the endshield. For instructions, refer to *Opening Endshields, page 32*.
- 8. Loosen two bolts (A) securing the motor assembly to the header endsheet.
- Loosen the belt tension by turning tensioning bolt (B) counterclockwise.

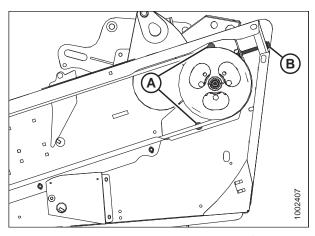


Figure 5.53: Single and Untimed Double-Knife Drive

10. Open access cover (A) on the endsheet behind the cutterbar to provide clearance between the knife drive box pulley and the endsheet.

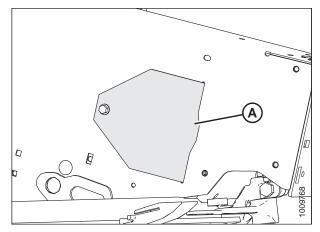


Figure 5.54: Access Cover

- 11. Remove belt (A) from drive pulley (B).
- 12. Slip belt (A) over and behind knife drive box pulley (C). Use the notch in the pulley to assist with belt removal.

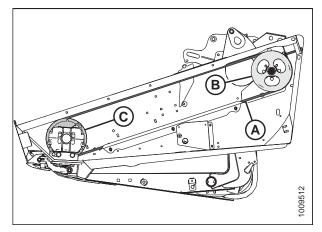


Figure 5.55: Knife Drive

- 13. Stroke the knife manually to its outer limit.
- 14. Remove bolt (A).
- 15. Remove grease fitting (B) from the pin.
- 16. Use a screwdriver or chisel in slot (C) to release the load on the knifehead pin.
- 17. Use a screwdriver or chisel to pry the pin upwards in the pin groove until the pin is clear of the knifehead.
- 18. Push the knife assembly inboard until it is clear of the output arm.
- 19. Seal the knifehead bearing with plastic or tape unless it is being replaced.

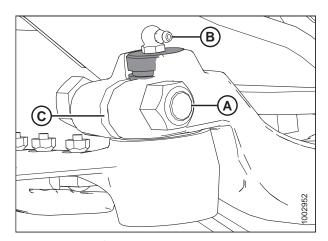


Figure 5.56: Knifehead

- 20. Remove bolt (A) that clamps knife drive arm (B) to the knife drive box output shaft.
- 21. Remove knife drive arm (B) from the knife drive box output shaft.
- 22. Remove four knife drive box mounting bolts (C) and (D).

NOTE:

Bolt (E) is factory set; do **NOT** remove. It is used to secure the knife drive box in the proper fore-aft position.



CAUTION

The knife drive box and pulley weigh over 35 kg (65 lb.) Use care when removing or installing. Lug (L) can be used for lifting.

- 23. Remove the knife drive box and place it on a bench for disassembly.
- 24. Repeat procedure for the opposite end of the header.

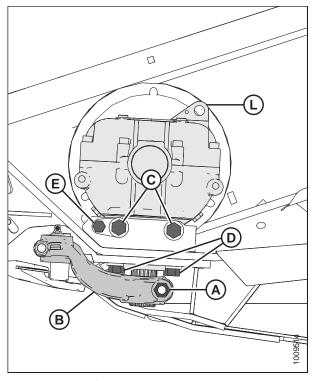


Figure 5.57: Knife Drive Box

Removing Knife Drive Box Pulley

- 1. Loosen and remove knife drive box pulley clamping bolt (A) and nut (B).
- 2. Remove knife drive box pulley (C) using a three-jaw puller.

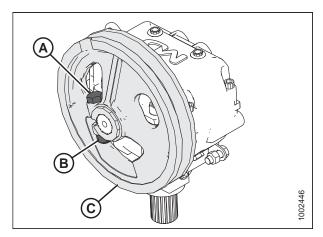


Figure 5.58: Knife Drive Box and Pulley

Installing Knife Drive Box Pulley

- 1. Ensure the splines and bores in the pulley and drive arm are free of paint, oil, and solvents.
- Apply two bands (A) of medium-strength threadlocker (Loctite[®] 243 or equivalent) around the shaft as shown. Apply one band at the end of the spline and the second band at the approximate midpoint location.
- 3. Install pulley (B) until flush with the end of the shaft.
- 4. Secure the pulley with 5/8 in. x 3 in. hex head bolt with distorted thread NC lock nut and torque to 217 Nm (160 lbf·ft).

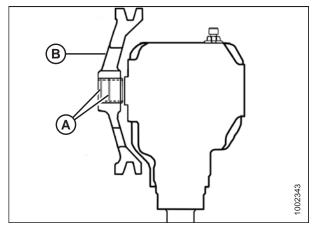


Figure 5.59: Knife Drive Box

Installing Knife Drive Box

The procedure for installing knife drive boxes is the same for single- and double-knife headers.

NOTE:

If the pulley was removed from the knife drive box, refer to *Installing Knife Drive Box Pulley, page 157*. If the pulley was not removed, proceed to Step 1, page 157.



CAUTION

The knife drive box and pulley weigh over 35 kg (65 lb.) Use care when removing or installing. Lug (L) can be used for lifting.

- 1. Position the knife drive box onto the header mount and install the belt onto the pulley.
- 2. Secure the knife drive box to the frame using two 5/8 in. x 1-3/4 in. grade 8 hex head bolts (A) on the side and two 5/8 in. x 2-1/4 in. grade 8 hex head bolts (B) on the bottom.
- Tighten knife drive box side bolts (A) slightly, then tighten bottom bolts (B) to ensure proper contact with the vertical and horizontal mounting surfaces. Do NOT torque the bolts at this time.


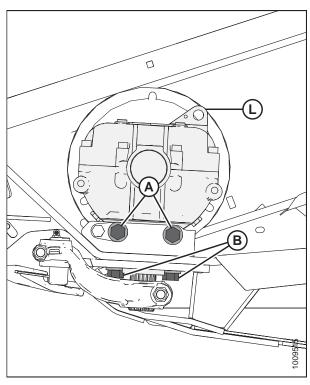


Figure 5.60: Knife Drive Box

- 4. Apply two bands (A) of medium-strength threadlocker (Loctite® 243 or equivalent) to the output shaft as shown. Apply one band at the end of the output shaft and the second band at the approximate midpoint location.
- 5. Slide output arm (B) onto the output shaft. Rotate the pulley to ensure the splines are properly aligned and the drive arm clears the frame on the inboard stroke.

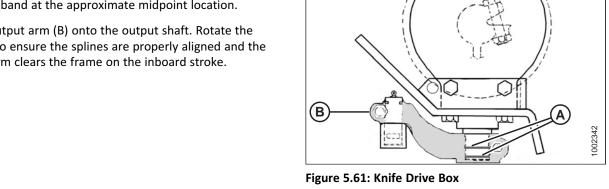

6. Position output arm (A) to the farthest outboard position. Move output arm (A) up or down on the splined shaft until it is almost contacting knifehead (B) (exact clearance [C] is set during the knifehead pin installation).

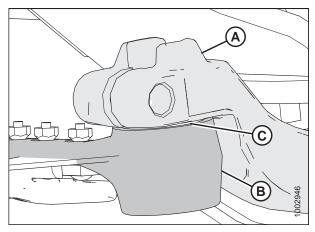


Figure 5.62: Knifehead

7. Torque output arm bolt (A) to 217 Nm (160 lbf·ft).


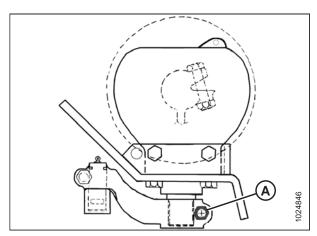


Figure 5.63: Knife Drive Box

- 8. Slide the knife into place and align the knifehead with the output arm.
- 9. For ease of removing or installing knifehead pin, remove grease fitting from pin.
- 10. Install knifehead pin (A) through the output arm and into the knifehead. Tap knifehead pin (A) down, and make sure the pin is seated at the bottom of the knifehead.
- 11. Using a feeler gauge, check that the gap at location (E) is 0.25 mm (0.01 in.).
- 12. Set groove (B) in the knifehead pin 1.5 mm (1/16 in.) above output arm (C). Secure with 5/8 in. x 3 in. hex head bolt and nut (D), and torque to 217 Nm (160 lbf·ft).
- 13. Install grease fitting (A) into the knifehead pin, and turn the grease fitting for easy access.

IMPORTANT:

 Grease knifehead just enough to start a slight downward movement. Overgreasing will lead to knife misalignment which causes guards to overheat and drive systems to overload.



- 15. Move the output arm to the midstroke position, and ensure the knife bar doesn't contact the front of the first guard. If the knife drive box requires adjustment, contact your MacDon Dealer.
- 16. Install and tension the knife drive belts. Refer to the following topics depending on your header:
 - For untimed belts, refer to Tensioning Untimed Knife Drive Belts, page 163
 - For timed belts, refer to *Tensioning Timed Knife Drive Belts, page 168*
 - For timed double-knife headers, also check the knife timing. For instructions, refer to *Adjusting Double-Knife Timing*, page 170
- 17. Close the endshield. For instructions, refer to *Closing Endshields, page 33*.

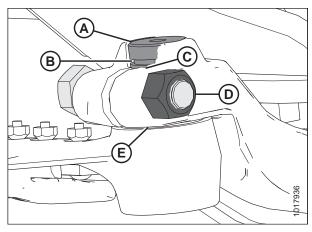


Figure 5.64: Knifehead

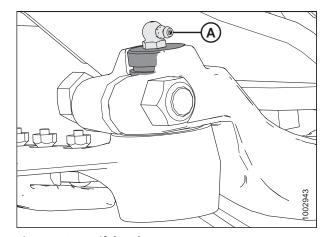


Figure 5.65: Knifehead

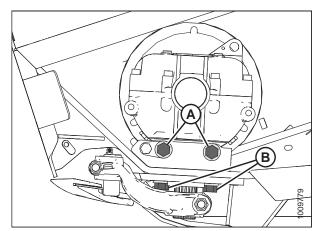


Figure 5.66: Knife Drive Box

Changing Oil in Knife Drive Box

Change the knife drive box lubricant after the first 50 hours of operation and every 1000 hours (or 3 years) thereafter.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Raise the header to allow a suitably sized container to fit under the knife box drain and collect the oil.
- 3. Open the endshield. For instructions, refer to *Opening Endshields, page 32*.
- 4. Remove breather/dipstick (A) and drain plug (B).
- 5. Allow the oil to drain.
- 6. Reinstall drain plug (B).
- 7. Add oil to the knife drive box. Refer to the inside back cover for specifications.
- 8. Close the endshield. For instructions, refer to *Closing Endshields, page 33*.

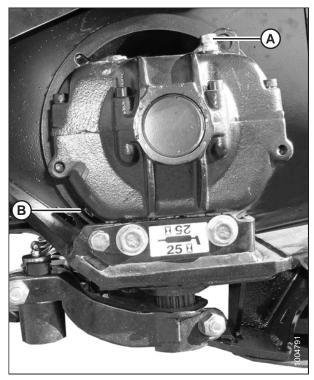


Figure 5.67: Knife Drive Box

5.6.2 Knife Drive Belts

Untimed Knife Drive Belts

The knife drive box is driven by a V-belt that is powered by a hydraulic motor on the header endsheets.

Removing Untimed Knife Drive Belts

The untimed knife drive belt removal procedure is the same for both sides of a double-knife header.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to *Opening Endshields, page 32*.
- 3. Loosen two bolts (A) securing the motor assembly to the header endsheet.
- 4. Loosen the belt tension by turning tensioning bolt (B) counterclockwise.

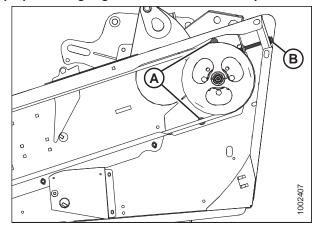


Figure 5.68: Single and Untimed Double-Knife Drive

5. Open access cover (A) on the endsheet behind the cutterbar to provide clearance between the knife drive box pulley and the endsheet.

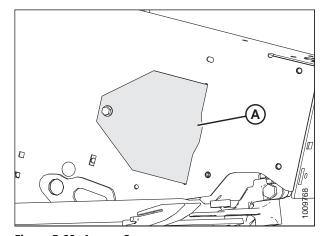


Figure 5.69: Access Cover

- 6. Remove belt (A) from drive pulley (B).
- 7. Slip belt (A) over and behind knife drive box pulley (C). Use the notch in the pulley to assist with belt removal.

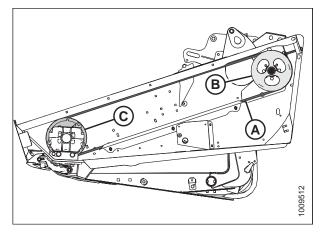


Figure 5.70: Knife Drive

Installing Untimed Knife Drive Belts

The procedure for installing untimed knife drive belts is the same for both sides of the header.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Route knife drive belt (A) around knife drive box pulley (C) and knife drive pulley (B). Use the notch in the pulley to assist with the belt installation.

NOTE:

Ensure the drive motor is fully forward, do **NOT** pry the belt over the pulley.

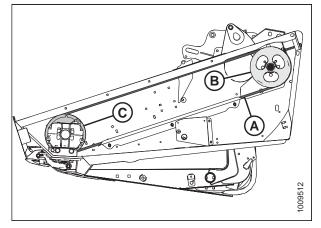


Figure 5.71: Knife Drive

- 3. Tension the knife drive belt. For instructions, refer to *Tensioning Untimed Knife Drive Belts, page 163*.
- 4. Install access cover (A) and secure with bolt.
- 5. Close the endshield.

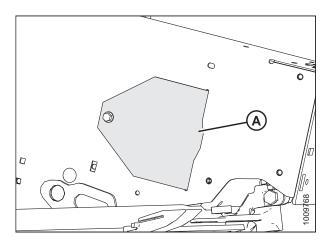


Figure 5.72: Access Cover

Tensioning Untimed Knife Drive Belts

The procedure for tensioning untimed knife drive belts is the same for single- and double-knife headers.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

IMPORTANT:

To prolong belt and drive life, do **NOT** overtighten the belt.

- 1. Shut down machine, and remove key from the ignition.
- 2. Open the endshield. For instructions, refer to *Opening Endshields*, page 32.
- 3. Loosen two bolts (A) securing the motor assembly to the header endsheet.
- 4. Turn adjuster bolt (B) clockwise to move drive motor until a force of 89 N (20 lbf) deflects belt (C) 20–25 mm (3/4–1 in.) at midspan.

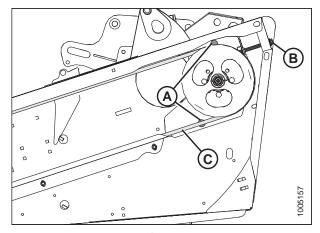


Figure 5.73: Untimed Knife Drive

- 5. Ensure clearance between belt (A) and belt guide (B) is 1 mm (1/32 in.).
- 6. Loosen three bolts (C), and adjust position of guide (B) as required.
- 7. Tighten three bolts (C).
- 8. Close endshield. For instructions, refer to *Closing Endshields*, page 33.

NOTE:

Readjust tension of a new belt after a short run-in period (about five hours).

9. Repeat above steps for opposite end on double-knife headers.

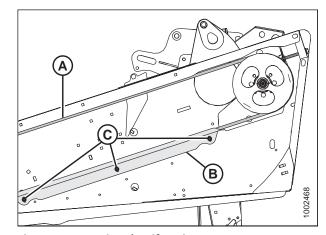


Figure 5.74: Untimed Knife Drive

Timed Double-Knife Drive Belts

Removing Timed Drive V-Belts



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to Opening Endshields, page 32.
- 3. Loosen two bolts (A) securing the motor assembly to the header endsheet.
- 4. Turn the adjuster bolt (B) counterclockwise to loosen and remove two V-belts (C).

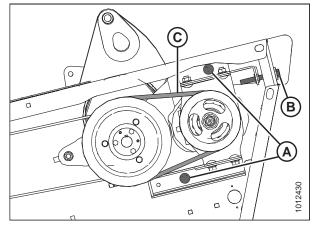


Figure 5.75: Knife Drive V-Belts

Installing Timed Drive V-Belts



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

NOTE:

Install new V-belts in matching pairs.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Install V-belts (C) onto the pulleys.

NOTE:

Ensure the drive motor is fully forward, do **NOT** pry the belts over the pulley.

3. Turn adjuster bolt (B) clockwise to tighten the V-belts. A properly tensioned V-belt should deflect 4 mm (5/32 in.) when 52–77 N (12–17 lbf) is applied at the midspan.

IMPORTANT:

To prolong the life of V-belts and drives, do **NOT** overtighten the V-belts.

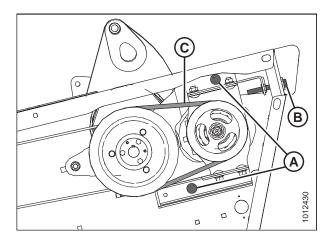


Figure 5.76: Knife Drive V-Belts

- 4. Tighten two bolts (A) on the endsheet.
- 5. Close the endshield. For instructions, refer to *Closing Endshields, page 33*.
- 6. Check the tension of the new V-belts after a short run-in period (about five hours).

Removing Timed Knife Drive Belt

The timed knife drive belt removal procedure is the same for both sides of the header.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Open the endshield. For instructions, refer to *Opening Endshields, page 32*.
- 3. Loosen two nuts (A) on the belt idler bracket to relieve the belt tension.
- Loosen nut (B) on the idler pulley and slide the idler downwards to loosen the belt.

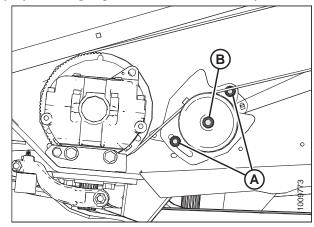


Figure 5.77: Knife Drive

NOTE:

The following two steps apply only to the left drive.

- 5. Loosen two bolts (A) on the endsheet.
- 6. Turn adjuster bolt (B) counterclockwise to loosen and remove two V-belts (C).

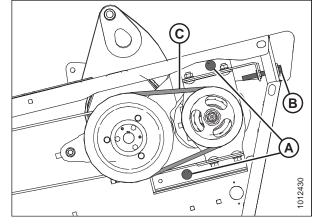


Figure 5.78: Knife Drive V-Belts

- 7. Open access cover (A) on the endsheet behind the cutterbar to provide clearance between the knife drive box pulley and the endsheet.
- 8. Remove the knife drive belt.

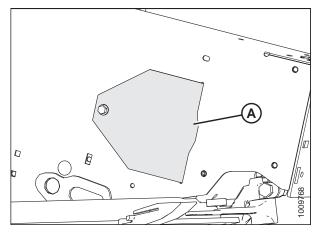


Figure 5.79: Access Cover

Installing Timed Knife Drive Belts

The procedure for installing timed knife drive belts is the same for both sides of the header.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

If the belt is out of alignment, refer to Checking Knife Drive Belt Tracking, page 173.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Route knife drive belt (A) around pulley (B) and knife drive box pulley (C).

NOTE:

Ensure the drive motor is fully forward, do **NOT** pry the belt over the pulley.

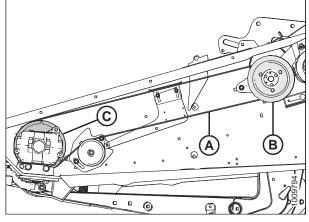


Figure 5.80: Left Side Shown - Right Side Similar

- 3. Install V-belt (C) onto the pulleys.
- 4. Turn adjuster bolt (B) clockwise to tighten the V-belts. A properly tensioned V-belt should deflect 4 mm (5/32 in.) when 52–77 N (12–17 lbf) is applied at the midspan.

IMPORTANT:

To prolong the life of V-belts and drives, do **NOT** overtighten the V-belts.

5. Tighten two bolts (A) on the endsheet.

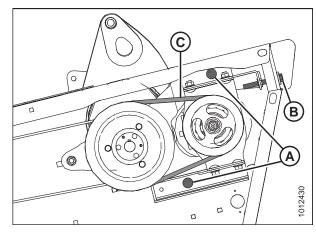


Figure 5.81: Knife Drive V-Belts

- 6. Ensure the knives are timed before tightening the belt. For instructions, refer to *Adjusting Double-Knife Timing*, page 170.
- 7. Slide idler pulley (A) into the slot on support bracket (B) to take-up the slack in the timing belt.

NOTE:

Ensure lower nut (C) is as high as possible in the support bracket (B) slot.

8. Tighten nut (D) to 212-234 Nm (157-173 lbf·ft).

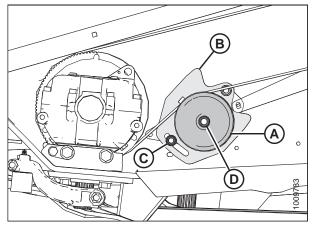


Figure 5.82: Knife Drive

- 9. Tension the knife drive belt. For instructions, refer to *Tensioning Timed Knife Drive Belts, page 168*.
- 10. Install access cover (A) and secure with bolt.
- 11. Close the endshield.

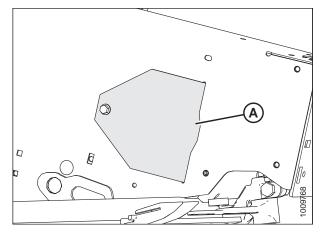


Figure 5.83: Access Cover

Tensioning Timed Knife Drive Belts

The procedure for tensioning timed knife drive belts is the same for both sides of the header. The illustrations shown are for the left side—the right side is opposite.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

IMPORTANT:

To prolong belt and drive life, do **NOT** overtighten belt.

IMPORTANT:

Do **NOT** use adjuster bolt at drive pulley to adjust timing belt tension.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Open endshield. For instructions, refer to *Opening Endshields, page 32*.
- 3. Loosen two nuts (A) on knife drive belt idler bracket.


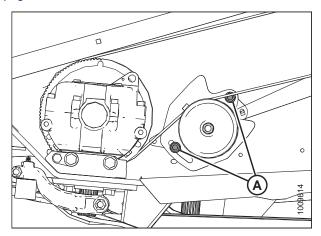


Figure 5.84: Left Knife Drive

4. Position pry bar (A) under idler bracket (C), and push bracket upwards until a force of 27 N (6 lbf) deflects belt 13 mm (1/2 in.) at midpoint of upper span.

NOTE:

 
Protect paint by placing a piece of wood (B) under pry bar (A).





NOTE:

 Readjust tension of a new belt after a short run-in period (about five hours).



- 8. Loosen bolts (D) and adjust guide if necessary. Tighten bolts.
- 9. Repeat procedure for opposite side of header.
- 10. Close endshield. For instructions, refer to *Closing Endshields, page 33*.

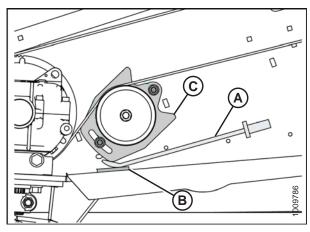


Figure 5.85: Left Knife Drive

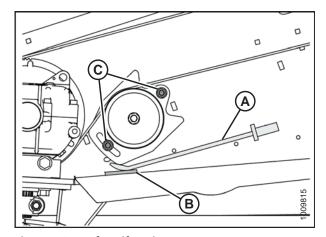


Figure 5.86: Left Knife Drive

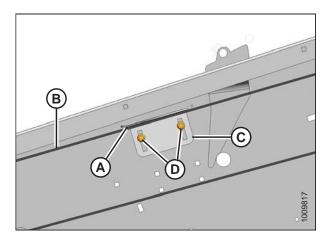


Figure 5.87: Left Belt Guide

Adjusting Double-Knife Timing

Timed double-knife drive headers (10.7 m [35 ft.] and smaller) require the knives to be properly timed to move in opposite directions.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Open both endshields. For instructions, refer to Opening Endshields, page 32.
- 3. Remove the right knife drive belt. For instructions, refer to Removing Timed Knife Drive Belt, page 165.
- 4. Rotate the left knife drive box driven pulley clockwise until left knife (A) is at the center of inboard stroke (B) (moving towards the center of the header).

NOTE:

The center stroke is when knife sections (C) are centered between the guard points.

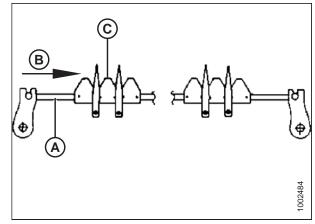


Figure 5.88: Adjusting Timing – Left Side

5. Rotate the right knife drive box pulley counterclockwise until right knife (A) is at the center of inboard stroke (B) (moving towards the center of the header).

NOTE:

The center stroke is when knife sections (C) are centered between the guard points.

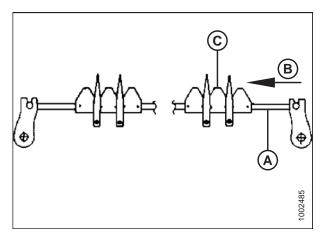


Figure 5.89: Adjusting Timing - Right Side

6. Install right knife drive belt (A).

NOTE:

Ensure the knife drive box driver and driven pulleys do **NOT** rotate during belt installation.

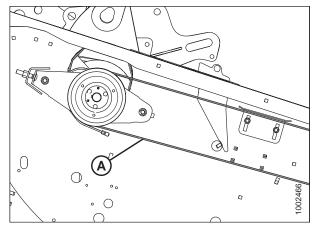


Figure 5.90: Right Knife Drive

7. Rotate idler pulley bracket (A) downward, and slide the idler pulley up by hand to remove most of the belt slack. Tighten nut (B).

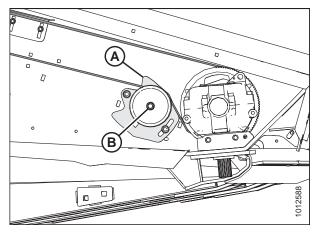


Figure 5.91: Right Knife Drive

8. Position pry bar (A) under idler bracket (C), and push the bracket upward until a force of 27 N (6 lbf) deflects the belt 13 mm (1/2 in.) at the midpoint of the upper span.

NOTE:

Protect the paint by placing a piece of wood (B) under pry bar (A).

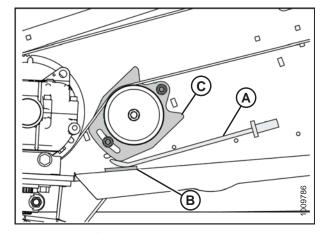


Figure 5.92: Left Shown – Right Opposite

- 9. When the belt has the proper belt tension, tighten nuts (C) to 73–80 Nm (54–59 lbf·ft).
- 10. Ensure the timing belts are properly seated in the grooves on both driver and driven pulleys.
- 11. Rotate the drive slowly by hand and observe where the knives overlap at the center of the header to check for the correct knife timing.

IMPORTANT:

The knives must begin moving at the exact same time and must move in opposite directions.

- 12. Adjust the knife timing, if necessary, by loosening the right drive belt (B) just enough to reposition it to the next cog(s) and proceed as follows:
 - a. If the right knife leads the left knife, rotate the right driven pulley (A) clockwise.
 - b. If the right knife lags the left knife, rotate the right driven pulley (A) counterclockwise.

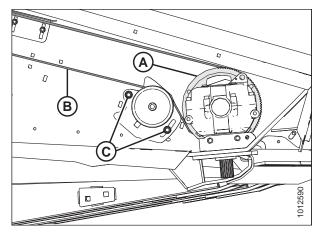


Figure 5.93: Right Knife Drive

13. Ensure the drive pulleys don't rotate, and tension the right drive belts (refer to Step 7, page 171 to Step 9, page 172).

IMPORTANT:

Do **NOT** use the adjuster bolt at the drive pulley to adjust the timing belt tension.

- 14. Recheck the timing (refer to Step 11, page 172) and readjust if necessary (refer to Step 12, page 172).
- 15. Close both endshields. For instructions, refer to *Closing Endshields, page 33*.

Checking Knife Drive Belt Tracking

The following procedure is applicable to the left knife drive and the right knife drive on timed drive headers.

IMPORTANT:

A belt that is not tracking properly is subject to premature failure. Ensure the pulleys are aligned and parallel. Follow the belt tensioning procedures in this manual to avoid misalignment.

The cogged timing belt should be centered on the knife drive box pulley and at least 2 mm (0.08 in.) from either edge when the header is running. The belt should avoid continual contact with the drive pulley flanges. Occasional contact is acceptable. A gap should be visible between the belt and the pulley flanges.

1. Open the endshields.



CAUTION

Exercise extreme care when operating the header with the endshields open.

- Operate the header and observe how the belt is tracking on both the drive pulley and the knife drive box pulley on both sides of the header. Shut down the windrower and remove key from ignition before making any adjustments.
- 3. If the belt is tracking toward the inboard side of the drive pulley, the likely cause is a toe-out problem (belt tends to move toward the low tension side of the pulley [inboard]). For instructions, refer to Adjusting Drive Belt Tracking (Drive Pulley), page 174.
- 4. If the belt is tracking toward the outboard side of the drive pulley, the likely cause is a toe-in problem (belt tends to move toward the low tension side of the pulley [outboard]). For instructions, refer to Adjusting Drive Belt Tracking (Drive Pulley), page 174.

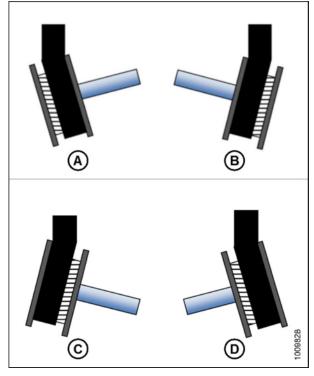


Figure 5.94: Knife Drive Pulley

A - Toe-Out: Left Side C - Toe-In: Left Side B - Toe-Out: Right Side D - Toe-In: Right Side

 If belt (A) is tracking to one side of knife drive box pulley (B), the likely cause is an out of position idler pulley (C). For instructions, refer to Adjusting Drive Belt Tracking (Knife Drive Box Pulley), page 175.

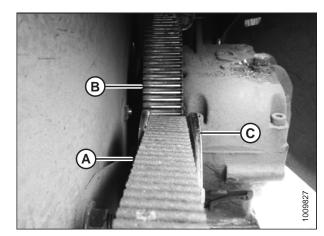


Figure 5.95: Knife Drive Belt

Adjusting Drive Belt Tracking (Drive Pulley)

The following procedure is applicable to the left knife drive and the right knife drive on timed drive headers.

Before adjusting the drive belt tracking, verify the pulley that needs to be adjusted. For instructions, refer to *Checking Knife Drive Belt Tracking, page 173*.

IMPORTANT:

A belt that is not tracking properly is subject to premature failure. Ensure the pulleys are aligned and parallel. Follow the belt tensioning procedures in this manual to avoid misalignment.

The cogged timing belt should be centered on the knife drive box pulley and at least 2 mm (0.08 in.) from either edge when the header is running. The belt should also avoid constant contact with the flanges on the drive pulley, but occasional contact is acceptable. A gap should be visible between the belt and pulley flanges.



CAUTION

Exercise extreme care when operating the header with the endshields open.

- 1. Open the endshields. For instructions, refer to Opening Endshields, page 32.
- 2. Loosen nut (A) on support assembly (B).
- 3. Slide support (B) rearward in slot (C) to correct toe-out condition, or forward to correct toe-in condition.
- 4. Tighten nut (A).
- 5. Operate the header and check the tracking. For instructions, refer to *Checking Knife Drive Belt Tracking, page 173*. Adjust the support assembly as required.
- 6. If the belt tracking problem continues, proceed to Step 7, page 174.

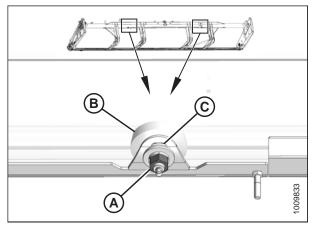


Figure 5.96: Cross-Shaft Support

- 7. Loosen nut (A) on idler and nuts (B) on idler bracket.
- 8. Loosen nuts (C) at drive pulley location.
- To correct a toe-in problem, turn adjuster bolt (D) clockwise to allow the belt to track inboard.
- 10. To correct a toe-out problem, turn adjuster bolt (D) counterclockwise to allow the belt to track outboard.
- 11. Tighten nuts (C) at drive pulley location.
- 12. Tension the belt. For instructions, refer to *Tensioning Timed Knife Drive Belts, page 168*.
- 13. Operate the header and check the tracking. For instructions, refer to *Checking Knife Drive Belt Tracking, page 173*. Adjust the drive pulley if required as per the above steps.

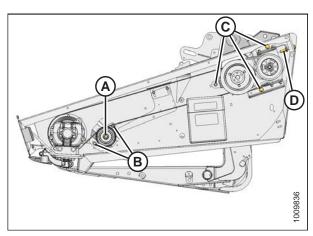


Figure 5.97: Knife Drive - Left Side

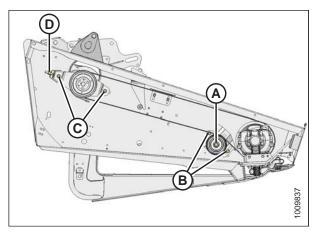


Figure 5.98: Knife Drive - Right Side

Adjusting Drive Belt Tracking (Knife Drive Box Pulley)

The following procedure is applicable to the left knife drive and the right knife drive on timed drive headers.

The cogged timing belt should be centered on the knife drive box pulley and at least 2 mm (0.08 in.) from either edge when the header is running. The belt should also avoid constant contact with the flanges on the drive pulley but occasional contact is acceptable. A gap should be visible between the belt and the pulley flanges. Before adjusting the drive belt tracking, verify the pulley that needs to be adjusted. For instructions, refer to *Checking Knife Drive Belt Tracking*, page 173.

IMPORTANT:

A belt that is not tracking properly is subject to premature failure. Ensure the pulleys are aligned and parallel. Follow the belt tensioning procedures in this manual to avoid misalignment.

1. Open the endshields. For instructions, refer to *Opening Endshields, page 32*.



CAUTION

Exercise extreme care when operating the header with the endshields open.

2. Loosen nuts (A) and (B) and move bracket and idler until belt is loose.

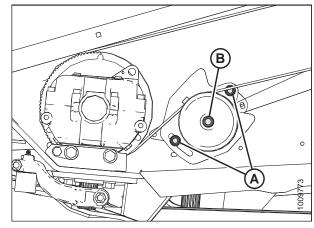


Figure 5.99: Knife Drive

- 3. Remove nut (A) securing idler to bracket, and remove lock washer (D), idler pulley, and flat washer (C).
- 4. Install idler pulley (B), ensuring it lines up with the knife drive box pulley, using flat washer(s) (C) as required.
- 5. Reinstall lock washer (D) and nut (A).
- 6. Tension the belt. For instructions, refer to *Tensioning Timed Knife Drive Belts, page 168*.
- 7. Operate the header and check the tracking. For instructions, refer to *Checking Knife Drive Belt Tracking, page 173*.

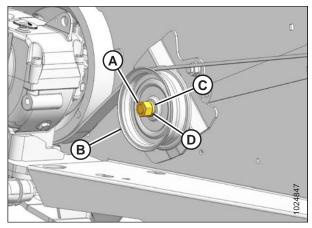


Figure 5.100: Knife Drive

5.7 Drapers

Two side drapers convey cut crop to center opening. Replace side drapers if torn, cracked, or missing slats.

5.7.1 Removing Side Drapers



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Raise the reel and engage the reel safety props.
- 2. Raise the header and engage the header safety props.
- 3. Move the draper until the draper joint is in the work area.

NOTE:

The deck can also be shifted towards the center to provide an opening at the endsheet.

- 4. Stop the engine and remove the key from the ignition.
- 5. Release the tension on the draper. For instructions, refer to 5.7.3 Adjusting Draper Tension, page 180.
- 6. Remove screws (A) and tube connectors (B) at the draper joint.
- 7. Pull the draper from the deck.

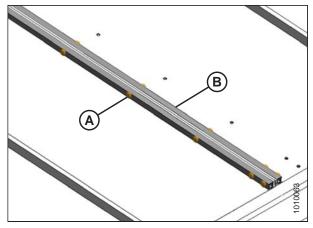


Figure 5.101: Draper Joint

5.7.2 Installing Side Drapers



WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

NOTE:

Check the deck height before installing the drapers. For instructions, refer to 5.7.5 Adjusting Deck Height, page 183.

- 1. Apply talc, baby powder, or talc/graphite lubricant mix to the draper surface that forms the seal with the cutterbar and to the underside of the draper guides.
- 2. Insert the draper into the deck at the outboard end under the rollers. Pull the draper into the deck while feeding it at the end.
- Feed in the draper until it can be wrapped around the drive roller.
- 4. Insert the opposite end of the draper into the deck over the rollers. Pull the draper fully into the deck.





Figure 5.102: Installing Draper

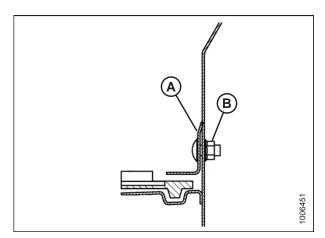


Figure 5.103: Draper Seal

- 6. Attach the ends of the draper with tube connectors (B), screws (A) (with the heads facing the center opening), and nuts.
- 7. Adjust the draper tension. For instructions, refer to 5.7.3 Adjusting Draper Tension, page 180.

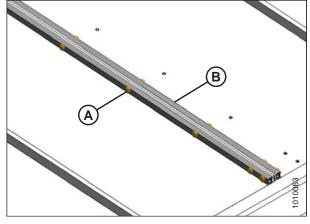


Figure 5.104: Draper Joint

- 8. Check the draper seal between the drapers and the cutterbar. Ensure there is a 1–2 mm (0.04–0.08 in.) gap (A) between cutterbar (C) and draper (B).
- 9. Refer to 5.7.5 Adjusting Deck Height, page 183 to achieve the proper gap.

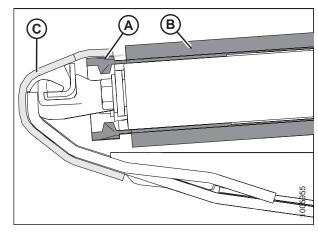


Figure 5.105: Draper Seal

- 10. Adjust backsheet deflector (A) (if required) by loosening nut (D) and moving the deflector until there is a 1–7 mm (3/64–9/32) gap (C) between the draper (B) and the deflector.
- 11. Operate the drapers with the engine at idle so the talc or talc/graphite lubricant makes contact and adheres to the draper seal surfaces.

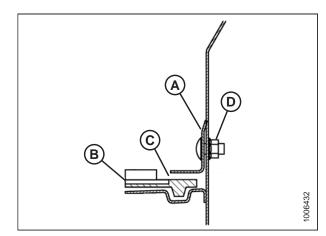


Figure 5.106: Draper Seal

5.7.3 Adjusting Draper Tension



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

NOTE:

The drapers are tensioned at the factory and rarely need adjustment. If adjustment is required, tension the drapers just enough to prevent slipping and to keep the draper from sagging below the cutterbar.

1. Ensure white indicator bar (A) is at the halfway point in the window.



WARNING

Check to be sure all bystanders have cleared the area.

- 2. Start the engine and raise the header.
- 3. Stop the engine, remove the key from the ignition, and engage the header safety props.

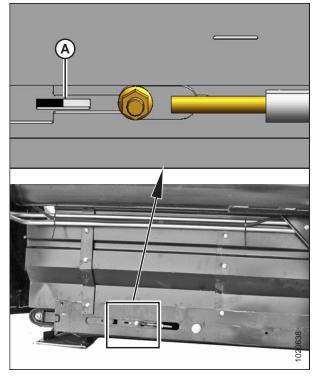


Figure 5.107: Left Adjuster Shown - Right Opposite

4. Ensure the draper guide (the rubber track on the underside of the draper) is properly engaged in groove (A) on the drive roller.

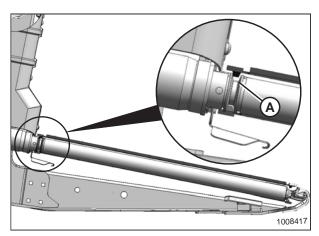


Figure 5.108: Drive Roller

5. Ensure idler roller (A) is between draper guides (B).

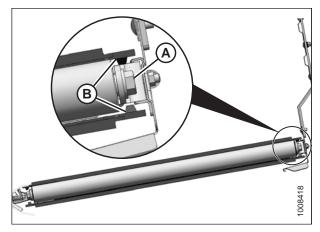


Figure 5.109: Idler Roller

IMPORTANT:

Do **NOT** adjust nut (C). This nut is used for draper alignment only.

- 6. Turn adjuster bolt (A) counterclockwise to loosen. White indicator bar (B) will move outboard in the direction of arrow (D) to indicate that the draper is loosening. Loosen until the white indicator bar is at the halfway point in the window.
- 7. Turn adjuster bolt (A) clockwise to tighten. White indicator bar (B) will move inboard in the direction of arrow (E) to indicate that the draper is tightening. Tighten until the white indicator bar is at the halfway point, on the right side of the window.

IMPORTANT:

- To avoid premature failure of the draper, draper rollers, and/or tightener components, do NOT operate with the tension set so the white bar is not visible.
- To prevent scooping dirt, ensure the draper is tight enough that it does not sag below the point where the cutterbar contacts the ground.

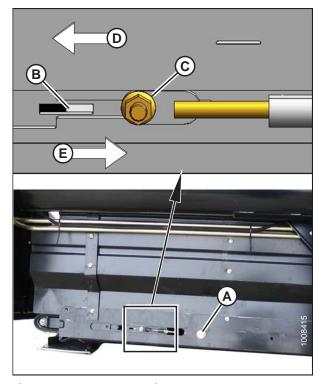


Figure 5.110: Draper Tensioner

5.7.4 Adjusting Side Draper Tracking



CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to 5.1 Preparing Machine for Servicing, page 117.

Each draper deck has a fixed drive roller (A) and a spring-loaded idler roller (B) that can be aligned using the adjuster rods so the draper tracks properly on the rollers.

Table 5.1 Side Draper Tracking

Tracking	Location	Adjustment	Method
Backward	Drive roller	Increase (X)	Tighten nut
Forward	Drive roller	Decrease (X)	Loosen nut
Backward	Idler roller	Increase (Y)	Tighten nut
Forward	Idler roller	Decrease (Y)	Loosen nut

 Refer to Table 5.1, page 182 to determine which roller requires adjustment and which adjustments are necessary.

NOTE:

To change the distance (X), adjust the back end of the roller using the adjuster mechanism at the inboard end of the deck.

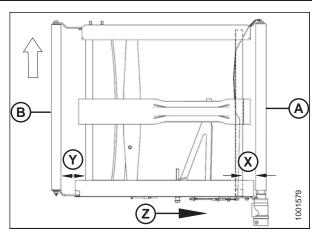


Figure 5.111: Draper Tracking Adjustments

- A Drive Roller
- B Idler Roller
- X Drive Roller Adjust

Z - Draper Rotation Direction

Y - Idler Roller Adjust

- 2. Adjust the drive roller distance (X) as follows:
 - a. Loosen nuts (A) and jam nut (B).
 - b. Turn adjuster nut (C).

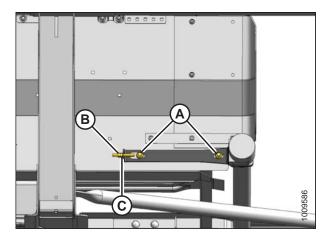


Figure 5.112: Left Drive Roller

- 3. Adjust the idler roller distance (Y) as follows:
 - a. Loosen nut (A) and jam nut (B).
 - b. Turn adjuster nut (C).

NOTE:

If the draper does not track at the idler roller end after the idler roller adjustment, the drive roller is likely not square to the deck. Adjust the drive roller, and then readjust the idler roller.

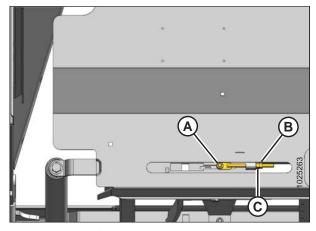


Figure 5.113: Left Idler Roller

5.7.5 Adjusting Deck Height



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

IMPORTANT:

New factory-installed drapers are pressure and heat checked at the factory. The gap between draper and cutterbar is set to 1-3 mm (1/16-1/8 in.). This is to prevent material from entering into the side drapers and stalling them. You may need to decrease the deck clearance to 1 mm (1/16 in.).

- 1. Shut down the engine, and remove the key from the ignition.
- 2. Check that clearance (A) between draper (B) and cutterbar (C) is 1–3 mm (1/16–1/8 in.).

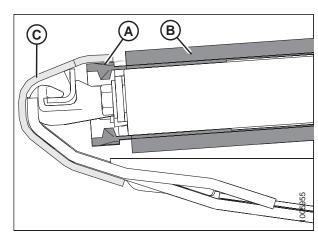


Figure 5.114: Draper Seal

- 3. Take measurement at deck supports (A) with the header in working position. For instructions, refer to Step *2*, *page* 183.
- 4. Loosen the draper tension. For instructions, refer to 5.7.3 Adjusting Draper Tension, page 180.

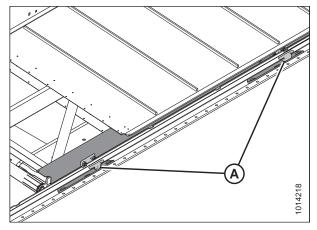


Figure 5.115: Draper Deck Supports

- 5. Lift the front edge of draper (A) past cutterbar (B) to expose the deck support.
- 6. Measure and note the thickness of the draper belt.

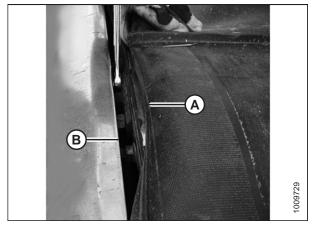


Figure 5.116: Deck Adjustment

7. Loosen two lock nuts (A) on deck support (B) **ONE HALF-TURN ONLY**.

NOTE:

The number of deck supports (B) is determined by the header reels: four on single-reel headers, and eight on double-reel headers.

8. Tap deck (C) with a hammer to lower the deck relative to the deck supports. Tap deck support (B) using a punch to raise the deck relative to the deck supports.

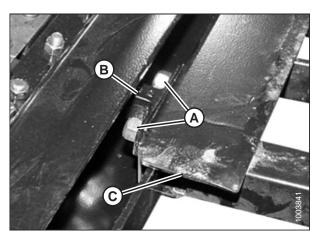


Figure 5.117: Deck Support

- 9. Locate a gauge that is the same thickness as the draper belt, plus 1 mm. Slide the thickness gauge along deck (A) under the cutterbar in order to properly set the gap.
- 10. To create a seal, adjust deck (A) so that clearance (B) between cutterbar (C) and deck is the same thickness as the draper belt plus 1 mm (1/16 in.).

NOTE:

When checking clearance at either roller, measure from the roller tube **NOT** the deck.

- 11. Tighten deck support hardware (D).
- 12. Recheck gap (B) with thickness gauge. For instructions, refer to Step *9*, page 185.
- 13. Tension the draper. For instructions, refer to *5.7.3 Adjusting Draper Tension, page 180*.
- 14. If required, adjust backsheet deflector (A) by loosening nut (D) and moving the deflector until there is a 1–7 mm (1/32–5/16 in.) gap (C) between draper (B) and the deflector.

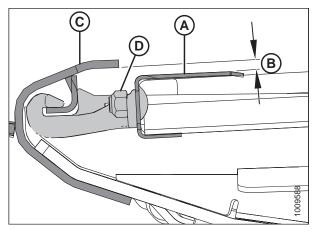


Figure 5.118: Deck Support

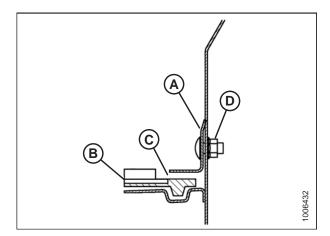


Figure 5.119: Backsheet Deflector

5.7.6 Side Draper Roller Maintenance

The draper rollers have non-greaseable bearings; however, the external seal should be checked every 200 hours (more frequently in sandy conditions) to achieve maximum bearing life.

Inspecting Draper Roller Bearing

Check for bad draper roller bearings using an infrared thermometer as follows:

- 1. Engage the header and run the drapers for approximately 3 minutes.
- Check the temperature of the draper roller bearings at each of roller arms (A), (B), and (C) on each deck. Ensure the temperature does NOT exceed 44°C (80°F) above the ambient temperature.

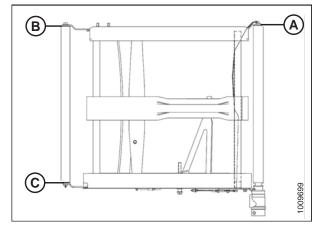


Figure 5.120: Roller Arms

Removing Draper Idler Roller



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

NOTE:

If the draper joint is not visible, engage the header until the connector is accessible (preferably close to the outboard end of the deck).

- 1. Start the engine, raise the header, and raise the reel.
- 2. Stop the engine, and remove the key from the ignition.
- 3. Engage the reel safety props, and engage the header safety props.
- 4. Loosen the draper by turning adjuster bolt (A) counterclockwise.

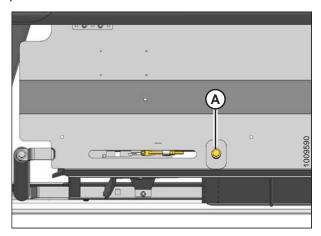


Figure 5.121: Tensioner

- 5. Remove screws (A), tube connectors (B), and nuts from the draper joint to uncouple the draper.
- 6. Pull the draper off the idler roller.

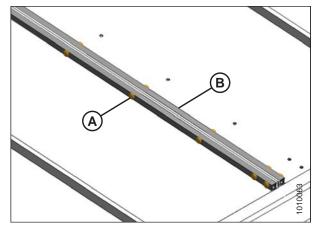


Figure 5.122: Draper Joint

- 7. Remove bolts (A) and washer at the ends of the idler roller.
- 8. Spread roller arms (B) and (C) and remove the idler roller.

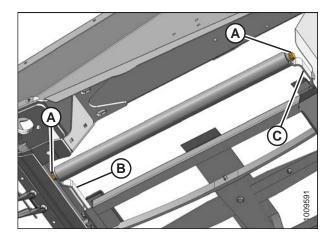


Figure 5.123: Idler Roller

Replacing Draper Idler Roller Bearing

- 1. Remove the draper idler roller assembly. For instructions, refer to Removing Draper Idler Roller, page 186.
- Remove bearing assembly (A) and seal (B) from roller tube (C) as follows:
 - Attach slide hammer (D) to threaded shaft (E) in the bearing assembly.
 - b. Tap out bearing assembly (A) and seal (B).
- 3. Clean the inside of roller tube (C), check the tube for signs of wear or damage, and replace if necessary.

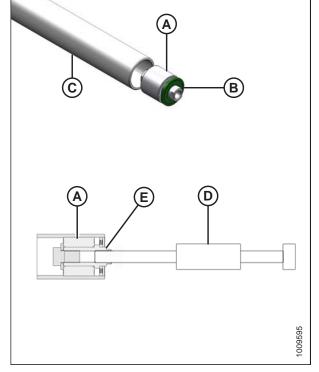


Figure 5.124: Idler Roller Bearing

- 4. Install new bearing assembly (A) by pressing the outer race of the bearing into the tube until it is 14–15 mm (0.55–0.2 in.) (B) from the outside edge of the tube.
- Add approximately 8 cc or two pumps of grease in front of bearing assembly (A). Refer to the inside back cover for specifications.
- 6. Install new seal (C) at the roller opening.
- 7. Tap seal (C) into the roller opening with a suitably sized socket until the gap (D) between the seal and the outside edge of the tube is 3–4 mm (0.12–0.16 in.).

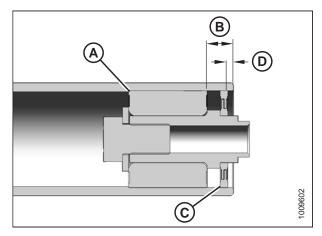


Figure 5.125: Idler Roller Bearing

Installing Draper Idler Roller

- 1. Position the stub shaft into the idler roller in forward arm (B) on the deck.
- 2. Push on the roller to slightly deflect the forward arm so the stub shaft at the rear of the roller can be slipped into rear arm (C).
- 3. Install bolts (A) with washers, and torque to 93 Nm (70 lbf·ft).
- 4. Wrap the draper over the idler roller, close the draper, and set the tension. For instructions, refer to 5.7.2 Installing Side Drapers, page 178.
- Run the machine and verify the draper tracks correctly.
 Adjust the draper tracking if required. For instructions, refer to 5.7.4 Adjusting Side Draper Tracking, page 182.

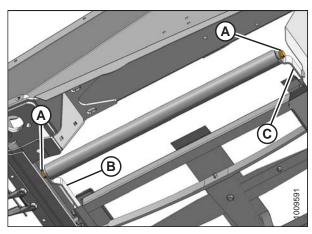


Figure 5.126: Idler Roller

Removing Draper Deck Drive Roller



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

NOTE:

If the draper joint is not visible, engage the header until the connector is accessible (preferably close to the outboard end of the deck).

- 1. Start the engine, raise the header, and raise the reel.
- 2. Engage the header and reel safety props.
- 3. Stop the engine, and remove the key from the ignition.
- Loosen the draper by turning adjuster bolt (A) counterclockwise.

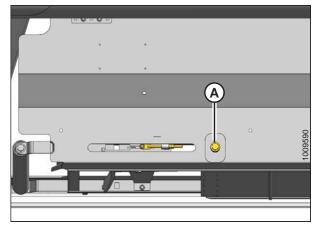


Figure 5.127: Tensioner

- 5. Remove connectors (B), screws (A), and nuts from the draper joint to uncouple the draper.
- 6. Pull the draper off the drive roller.

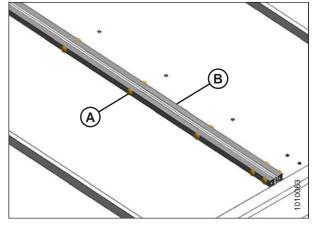


Figure 5.128: Draper Joint

7. Align the set screws with hole (A) in the guard. Remove the two setscrews holding the motor onto the drive roller.


NOTE:


The set screws are 1/4 turn apart.

8. Remove the four bolts (B) securing the motor to the drive roller arm.

NOTE:

It may be necessary to remove plastic shield (C) to gain access to the top bolt.

 

 

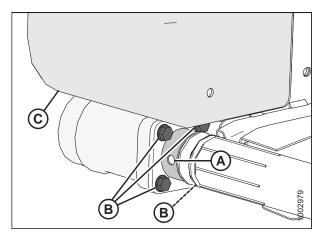


Figure 5.129: Drive Roller

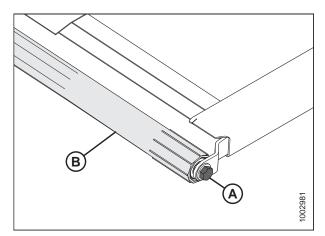


Figure 5.130: Drive Roller

Replacing Draper Drive Roller Bearing

- 1. Remove the draper drive roller assembly. For instructions, refer to Removing Draper Deck Drive Roller, page 189.
- Remove bearing assembly (A) and seal (B) from roller tube (C) as follows:
 - a. Attach slide hammer (D) to threaded shaft (E) in the bearing assembly.
 - b. Tap out bearing assembly (A) and seal (B).
- 3. Clean the inside of roller tube (C), check the tube for signs of wear or damage, and replace if necessary.

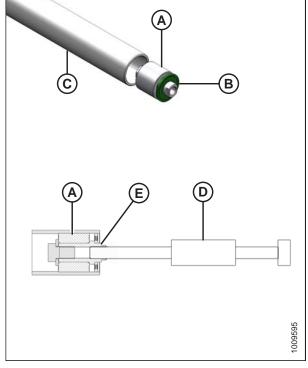


Figure 5.131: Drive Roller Bearing

- 4. Install new bearing assembly (A) by pressing the outer race of the bearing into the tube until it is 14–15 mm (0.55–0.2 in.) (B) from the outside edge of the tube.
- 5. Add approximately 8 cc or two pumps of grease in front of bearing assembly (A). Refer to the inside back cover for specifications.
- 6. Install new seal (C) at the roller opening.
- 7. Tap seal (C) into the roller opening with a suitably sized socket until gap (D) between the seal and the outside edge of the tube is 3–4 mm (0.12–0.16 in.).

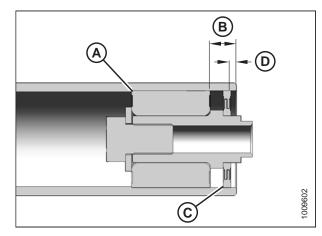


Figure 5.132: Drive Roller Bearing

Installing Draper Deck Drive Roller

- 1. Position drive roller (B) between the roller support arms.
- 2. Attach roller (B) to arm at forward end of deck with bolt (A). Support the other end of the roller and torque bolt (A) to 95 Nm (70 lbf·ft).
- 3. Grease the motor shaft and insert into the end of drive roller (B).

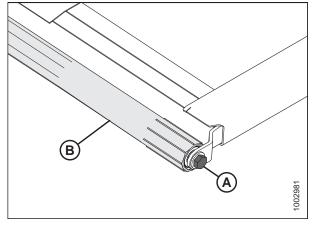


Figure 5.133: Drive Roller

- Secure the motor to the roller support with four bolts (B).
 Torque to 27 Nm (20 lbf·ft).
- 5. Tighten any loosened bolts and reinstall plastic shield (C) if previously removed.
- 6. Ensure the motor is all the way into the roller, and tighten the two set screws (not shown) through access hole (A).

NOTE:

The setscrews are 1/4 turn apart.

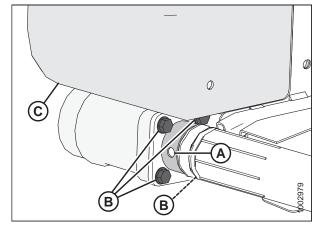


Figure 5.134: Drive Roller

7. Wrap the draper over the drive roller and attach the ends of the draper together using tube connectors (B), screws (A), and nuts.

NOTE:

The heads of the screws must face the center opening.

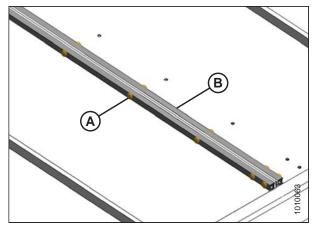


Figure 5.135: Draper Joint

- 8. Tension the draper. Locate adjuster bolt (A) and follow the directions on the decal for the proper draper tensioning or refer to 5.7.3 Adjusting Draper Tension, page 180.
- 9. Disengage the reel and header safety props.
- 10. Start the engine and lower the header and reel.
- 11. Run the machine to verify the draper tracks correctly. If adjustment is necessary, refer to 5.7.4 Adjusting Side Draper Tracking, page 182.

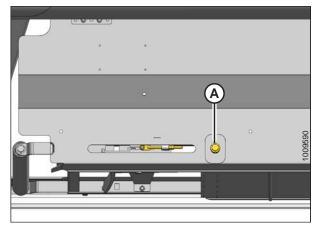


Figure 5.136: Draper Tensioner

5.7.7 Replacing Draper Deflectors

Removing Wide Draper Deflectors



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Raise reel fully and lower header to ground.
- 2. Shift decks to create work space at one end of header if hydraulic deck shift is installed; otherwise, move decks manually after shutting down the windrower.
- 3. Stop engine, remove key, and engage reel safety props.
- 4. Open endshield. For instructions, refer to Opening Endshields, page 32.
- 5. Loosen nuts (A) on cutterbar until retainer (B) is loose.

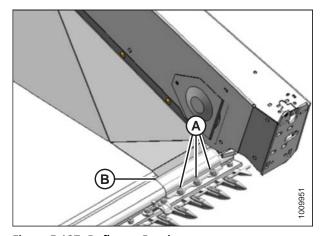


Figure 5.137: Deflector Retainer

- Remove fasteners securing deflector to endsheet. Nuts (A) are accessible from the side of the endshield, and nuts (B) on the uppermost fasteners are accessible from behind deflector (C).
- 7. Remove deflector (C).

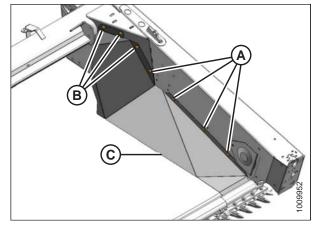


Figure 5.138: Wide Deflector

- Remove bolts (A) and (D), and remove deflector support (B).
- Reinstall bolt (D) (if not reinstalling support [B]) to secure belt guide (C) to opposite side of endsheet. Otherwise, position support (B) as shown, and secure with bolt (D).
- 10. Repeat for opposite end of header.

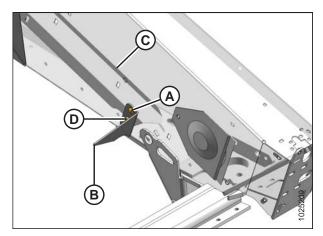


Figure 5.139: Deflector Support

Installing Wide Draper Deflectors

- 1. Raise reel fully and lower header to ground.
- 2. Shift decks to allow work space at one end of header if hydraulic deck shift installed, otherwise move decks manually after shutting down windrower.
- 3. Stop engine, remove key, and engage reel safety props.
- 4. Open endshield. For instructions, refer to *Opening Endshields, page 32*.
- 5. Loosen bolts (A) on cutterbar until retainer (B) is loose.
- 6. Remove existing bolt that secures belt guide (C) on opposite side of endsheet.
- 7. Position support (D) as shown, and reinstall bolt (E) with nut on far side.
- Install a second 3/8 in. x 3/4 carriage bolt (F) and lock nut. Do NOT tighten bolts.


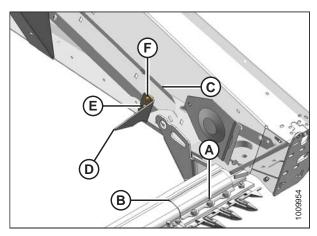


Figure 5.140: Deflector Support

 - 9. Position deflector (A) as shown and adjust forward edge for best fit on cutterbar. Slide deflector under retainer (B).
- 10. Loosely install seven 3/8 in. x 3/4 carriage bolts (C) with lock nuts to attach deflector to endsheet. Bolt heads face inboard.
- 11. Adjust position of deflector to obtain best fit at cutterbar and aft edge. Tighten bolts (C) as required to maintain best fit.
- 12. Tighten bolts (D) on retainer (B). Torque to 88 Nm (65 lbf·ft).



- 14. Repeat above steps for opposite end.
- 15. Close endshield. For instructions, refer to *Closing Endshields, page 33*.
- 16. After setting the recommended reel clearance to cutterbar and while reel is still fully lowered, move reel back to ensure steel end fingers do NOT contact the deflector shields.

NOTE:

If contact is detected, adjust reel upward until contact with deflector shields is avoided at all reel fore/aft positions. Alternatively, with the reel fully lowered, trim the steel end fingers until contact with deflector shields is avoided at all reel fore/aft positions. Periodically monitor to ensure contact is avoided and repeat adjustment procedure if necessary.

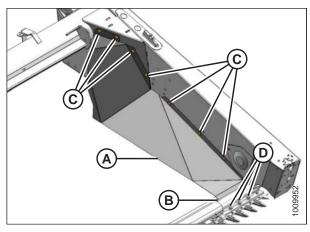


Figure 5.141: Wide Deflector

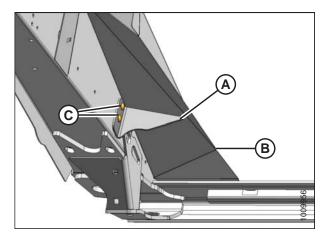


Figure 5.142: Deflector Support

Removing Narrow Draper Deflectors



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Raise the reel to its full height and lower the header to the ground.
- 2. Shift the decks to create a work space at one end of the header if hydraulic deck shift is installed; otherwise, move the decks manually after shutting down the windrower.
- 3. Stop the engine, remove the key, and engage the reel safety props.

- 4. Open the endshield. For instructions, refer to *Opening Endshields, page 32*.
- 5. Remove two Torx® head screws (A) and lock nuts.
- 6. Remove three carriage bolts (B) and lock nuts and remove aft deflector (C).

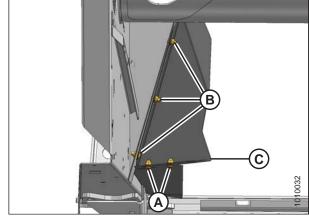


Figure 5.143: Aft Deflector

- 7. Remove four screws (A) and remove deflector (B).
- 8. Repeat for the opposite end of the header.

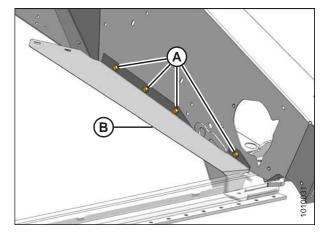


Figure 5.144: Forward Deflector

Installing Narrow Draper Deflectors



DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

- 1. Raise the reel to its full height and lower the header to the ground.
- 2. Shift the decks to create a work space at one end of the header if hydraulic deck shift is installed; otherwise, move the decks manually after shutting down the windrower.
- 3. Stop the engine, remove the key, and engage the reel safety props.
- 4. Open the endshield. For instructions, refer to *Opening Endshields, page 32*.
- 5. Position forward deflector (B) onto the endsheet and temporarily install forward and aft 3/8 in. x 5/8 in. self-tapping screws (A).
- Check the fit of the forward end of deflector (B) on the cutterbar and ensure there is no gap between the deflector and cutterbar. Remove and bend the deflector as required to obtain the best fit.
- 7. Install two 3/8 in. x 5/8 in. self-tapping screws (C), then tighten all four screws (A) and (C).

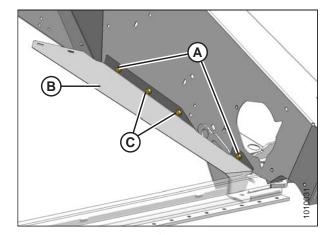


Figure 5.145: Forward Deflector

- 8. Position aft deflector (C) as shown and install three 3/8 in. x 3/4 in. carriage bolts (B) and lock nuts.
- 9. Install two Torx® head screws (A) and lock nuts with the heads facing down.
- 10. Tighten all fasteners.
- 11. Repeat for the opposite end of the header.

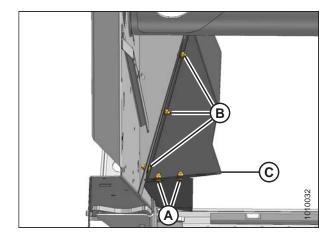


Figure 5.146: Aft Deflector

5.8 Reel



CAUTION

To avoid personal injury, before servicing machine or opening drive covers, refer to 5.1 Preparing Machine for Servicing, page 117.

5.8.1 Reel Clearance to Cutterbar

The minimum clearance between reel fingers and cutterbar ensures that reel fingers do not contact cutterbar during operation. The clearance is set at the factory, but some adjustment may be necessary before operation or if there is evidence of contact during operation.

The finger to guard/cutterbar clearances with reel fully lowered are shown in Table 5.2, page 198.

Table 5.2 Finger to Guard/Cutterbar Clearance

	(X) +/- 3 mm (1/	8 in.) at Reel Ends	
Header Width	Single Reel	Double Reel	
4.6 m (15 ft.)	20 mm (3/4 in.)	ı	
6.1 m (20 ft.)	20 mm (3/4 in.)	ı	
7.6 m (25 ft.)	25 mm (1 in.)	1	
9.1 m (30 ft.)	45 mm (1-3/4 in.)	20 mm (3/4 in.)	
10.7 m (35 ft.)	60 mm (2-3/8 in.)	20 mm (3/4 in.)	
12.2 m (40 ft.)	_	20 mm (3/4 in.)	

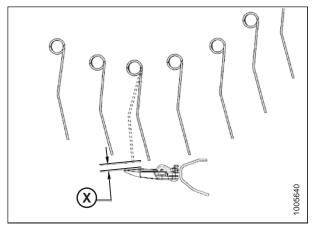


Figure 5.147: Finger Clearance

Measuring Reel Clearance



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Park machine on level ground.
- 2. Set fore-aft position to middle position 5 on fore-aft position indicator decal (A).
- 3. Lower reel fully.
- 4. Shut down engine and remove key from ignition.

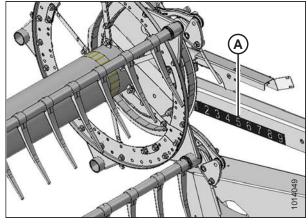


Figure 5.148: Fore-Aft Position

5. Measure clearance at ends of each reel at locations (A).

NOTE:

The reel is factory-set to provide more clearance at center of reel than at ends to compensate for reel flexing.

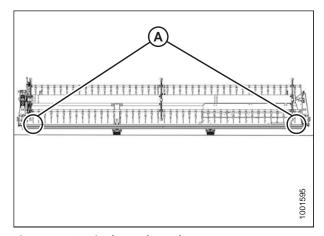


Figure 5.149: Single-Reel Header

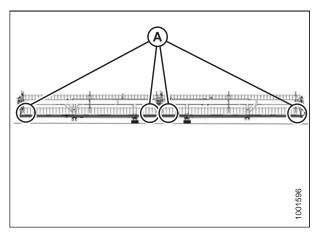


Figure 5.150: Double-Reel Header

- 6. Check finger clearance (X) when positioned between locations (A) and (B). Depending on reel fore-aft position, minimum clearance can result at guard tine, hold-down, or cutterbar. For finger clearance measurements, refer to Table 5.2, page 198.
- 7. Adjust reel if necessary. For instructions, refer to *Adjusting Reel Clearance, page 201*.

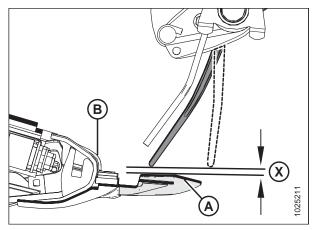


Figure 5.151: Reel Clearance

Adjusting Reel Clearance

Perform this procedure with reel at midpoint of fore-aft range and fully lowered.



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Adjust outboard reel arm lift cylinders to set clearance as follows:
 - a. Loosen bolt (A).
 - b. Turn cylinder rod (B) out of clevis to raise reel and increase clearance to cutterbar, or turn cylinder rod into clevis to lower reel and decrease clearance.
 - c. Tighten bolt (A).
 - d. Repeat at opposite side.

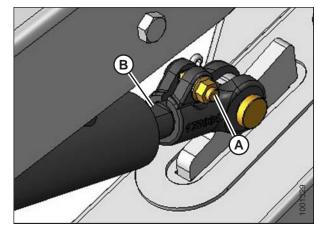


Figure 5.152: Reel Outboard Arm

2. **Double Reel:** Adjust center arm lift cylinder link (A) to set clearance at center of reel as follows:

NOTE:

This adjustment is most easily performed from underside of arm.

- a. Loosen nut (B).
- Turn nut (C) counterclockwise to raise reel and increase clearance to cutterbar, or clockwise to lower reel and decrease clearance.
- c. Tighten nut (B).

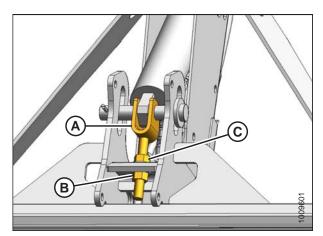


Figure 5.153: Double Reel Center Arm

- 3. Move reel back to ensure steel end fingers do not contact deflector shields.
- 4. If contact is evident, adjust reel upward to maintain clearance at all reel fore/aft positions. Alternatively, trim steel end fingers to obtain proper clearance.
- 5. Periodically check for evidence of contact, and adjust clearance as required.

5.8.2 Reel Frown

The reel is factory-set in a frown shape (more clearance at the center of the reel than at the ends) to compensate for reel flexing.

Adjusting Reel Frown

Adjust the reel frown by repositioning the reel tine tubes attached to the reel discs.

NOTE:

Measure the frown profile before disassembling the reel for servicing so the profile can be maintained during reassembly.

- 1. Position the reel all the way down and over the cutterbar (between position 4 and 5 on the fore-aft decal [A]).
- Record the measurement at each reel disc location for each reel tine tube.

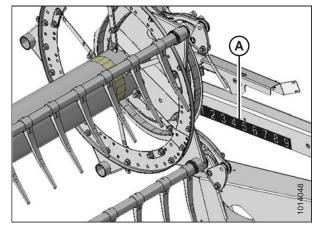


Figure 5.154: Fore-Aft Position Decal

- 3. Start with the reel disc closest to the center of the header and proceed outward towards the ends, adjusting the header profile as follows:
 - a. Remove bolts (A).
 - b. Loosen bolt (B) and adjust arm (C) until the desired measurement is obtained between the reel tine tube and cutterbar.

NOTE:

Allow the reel tine tubes to curve naturally and position the hardware accordingly.

c. Reinstall bolts (A) in the aligned holes and tighten.

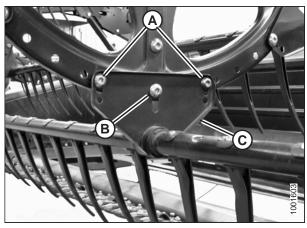


Figure 5.155: Center Reel Arm

5.8.3 Centering Reel

The reel should be centered between the header endsheets. To center the reel, refer to the procedure that applies to your reel type:

- Centering Reel on Double Reel Header, page 203
- Centering Reel on a Single Reel Header, page 204

Centering Reel on Double Reel Header



WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.



CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

- 1. Start the engine.
- 2. Raise the header enough to put 150 mm (6 in.) blocks under the outboard skid shoes. Lower the header onto the blocks, the ends of the header will be higher than the center section, causing the header to smile.
- 3. Shut down the engine, and remove the key from the ignition.
- 4. Loosen bolt (A) on each brace (B).
- 5. Move the forward end of reel center support arm (C) laterally as required to center both reels.
- 6. Tighten bolts (A) and torque to 382 Nm (282 lbf·ft).

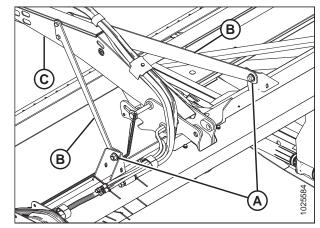


Figure 5.156: Reel Center Support Arm

 Measure clearance at locations (A) between reel and both endsheets. The clearances should be the same if the reel is centered.

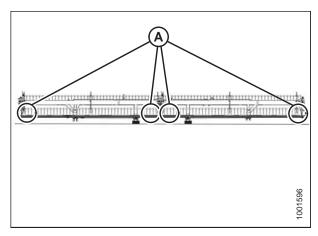


Figure 5.157: Measurement Locations

Centering Reel on a Single Reel Header



WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before adjusting machine.

- 1. Loosen bolt (A) on brace (B) at both ends of the reel.
- 2. Move the forward end of reel support arm (C) laterally as required to center the reel.
- 3. Tighten bolt (A) and torque to 359 Nm (265 lbf·ft). Repeat at opposite side.

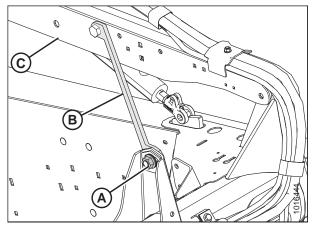


Figure 5.158: Reel Support Arm

5.8.4 Reel Tines

IMPORTANT:

Keep reel tines in good condition. Straighten or replace as required.

Removing Steel Tines



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.



WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube and other components.

- 1. Lower the header, raise the reel, and engage the reel safety props.
- 2. Shut down the engine and remove the key from the ignition.
- 3. Remove the tine tube bushings from the applicable tine tube at the center and left reel discs. For instructions, refer to *Removing Bushings from Five-, Six-, or Nine-Bat Reels, page 209*.
- 4. Attach reel arms (B) (temporarily) to the reel disc at the original attachment locations (A).
- 5. Cut the damaged tine so it can be removed from the tine tube.
- 6. Remove bolts from the existing tines and slide the tines over to replace the tine that was cut off in Step *5, page 205* (remove reel arms [B] from the tine tubes as necessary).

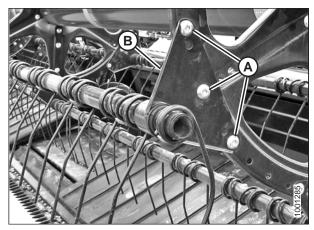


Figure 5.159: Reel Arm

Installing Steel Tines



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.



WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube and other components.

- 1. Remove the applicable tine. For instructions, refer to *Removing Steel Tines, page 204*.
- Slide the new tines and reel arm (A) onto the end of the tube.
- 3. Install the tine tube bushings. For instructions, refer to *Installing Bushings on Five-, Six-, or Nine-Bat Reels, page* 214.
- 4. Attach the tines to the reel tine bar with bolts and nuts (B).

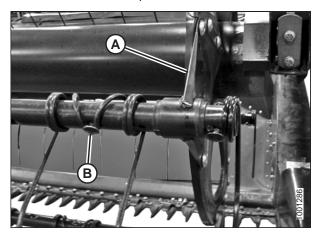


Figure 5.160: Reel Tine Tube

Removing Plastic Fingers



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.



WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

1. Remove screw (A) using a Torx® Plus 27 IP socket wrench.

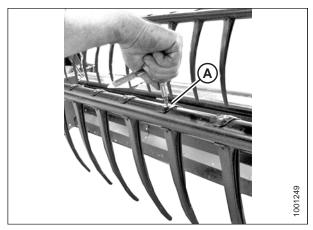


Figure 5.161: Removing Plastic Fingers

2. Push the top of finger off the reel tine tube while slightly pulling on tine under the tube. Finger can then be removed.

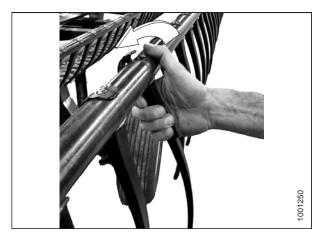


Figure 5.162: Removing Plastic Fingers

Installing Plastic Fingers



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.



WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason

- Position the finger on the rear of the finger tube and engage the lug at the bottom of the finger in the lower hole in the finger tube.
- Lift the top flange gently and rotate the finger until the lug in the top of the finger engages the upper hole in the finger tube.

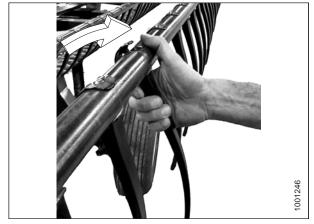


Figure 5.163: Installing Finger

IMPORTANT:

Do **NOT** apply force to the finger prior to tightening the mounting screw. Applying force without tightening the mounting screw will break the finger or shear the locating pins.

3. Install screw (A) using a Torx® Plus 27 IP socket wrench and torque to 8.5–9.0 Nm (75–80 lbf·in).

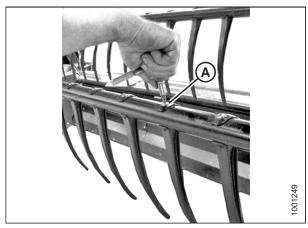


Figure 5.164: Installing Finger

5.8.5 Tine Tube Bushings

Removing Bushings from Five-, Six-, or Nine-Bat Reels



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.



WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

Ensure the tine tube is supported at all times to prevent damage to the tube and other components.

- 1. Lower the header, raise the reel, and engage the reel safety props.
- 2. Shut down the engine, and remove the key from the ignition.

NOTE:

If replacing only the cam end bushing, refer to Step 8, page 210.

Removing center disc and tail-end bushings:

3. Remove the reel endshields and endshield support (C) from the tail end of the reel at the applicable tine tube location.

NOTE:

There are no endshields on the center disc.

4. Remove bolts (A) securing arm (B) to the disc.

IMPORTANT:

Note the hole locations in the arm and disc and ensure bolts (A) are reinstalled at the original locations.

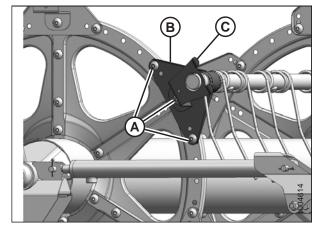


Figure 5.165: Tail End

5. Release bushing clamps (A) using a small screwdriver to separate the serrations. Pull the clamp off the tine tube.

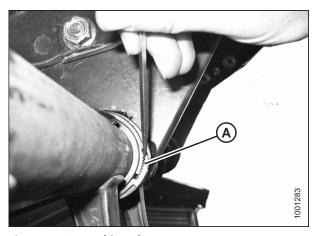


Figure 5.166: Bushing Clamp

- 6. Rotate arm (A) until clear of the disc and slide the arm inboard off of bushing (B).
- 7. Remove bushing halves (B). If required, remove the next tine or plastic finger so the arm can slide off the bushing. Refer to the following procedures as necessary:
 - Removing Plastic Fingers, page 206
 - Removing Steel Tines, page 204

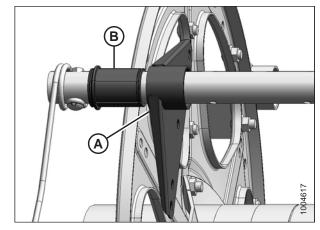


Figure 5.167: Bushing

Removing cam end bushings:

8. Remove the endshields and endshield support (A) at the applicable tine tube location on the cam end.

NOTE:

Removing cam end bushings requires the tine tube be moved through the disc arms to expose the bushing.

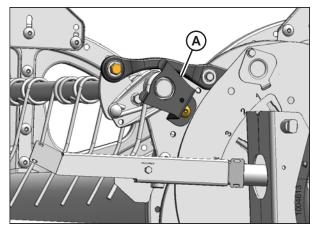


Figure 5.168: Cam End

- 9. Remove the reel endshields and endshield support (C) from the tail end of the reel at the applicable tine tube location.
- 10. Remove bolts (A) securing arms (B) to the tail and center discs.

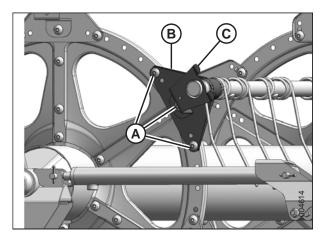


Figure 5.169: Tail End

11. Release the bushing clamps or disconnect the support channels from the tine tube support (if installed) depending on which tine tube is being moved. Three tine tubes (A) require channel disconnection and two tine tubes (B) require only bushing clamp removal.

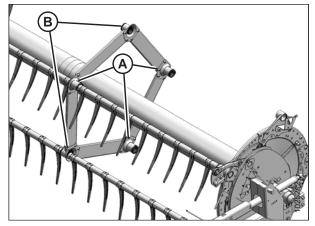


Figure 5.170: Tine Tube Supports

12. Remove bolt (A) from the cam linkage so the tine tube (B) is free to rotate.

NOTE:

Be sure to not lose shim, and mark shim location for reassembly.

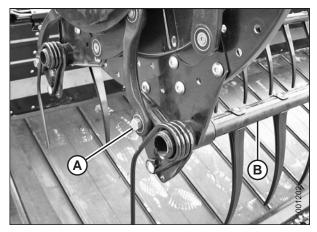


Figure 5.171: Cam End

13. Release bushing clamps (A) at the cam disc using a small screwdriver to separate the serrations. Move the clamps off the bushings.

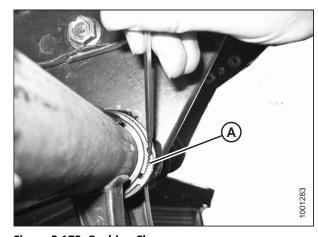


Figure 5.172: Bushing Clamp

- 14. Slide tine tube (A) outboard to expose bushing (B).
- 15. Remove bushing halves (B). If required, remove the next tine or plastic finger so the arm can slide off the bushing. Refer to the following procedures if necessary:
 - Removing Plastic Fingers, page 206
 - Removing Steel Tines, page 204

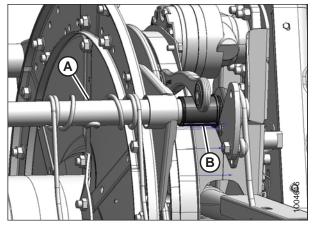


Figure 5.173: Cam End

Removing tine tube support bushings (if installed):

- 16. Locate support (A) that requires a new bushing.
- 17. Remove four bolts (B) securing channels (C) to support (A).
- 18. If finger (D) is too close to the support to allow access to the bushing, remove screw (E) and remove finger (D). For instructions, refer to *Removing Plastic Fingers*, page 206.

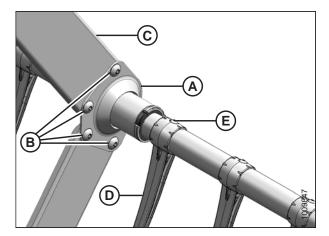


Figure 5.174: Tine Tube Support

19. Release bushing clamps (A) using a small screwdriver to separate the serrations.

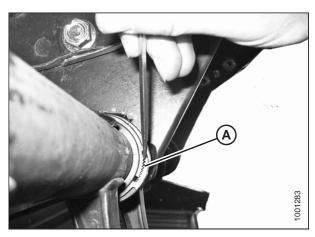


Figure 5.175: Bushing Clamp

20. Move clamps (A) off the bushings.

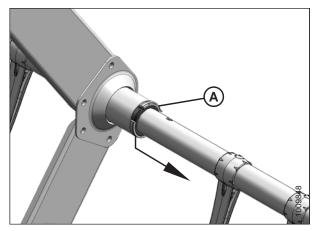


Figure 5.176: Bushing Clamp

21. Slide support (A) off bushing halves (B).

NOTE:

Two tine tubes have opposite-facing supports. Rotate the supports until the flanges clear the channels before moving them off bushing (B). Move the tine tube outward slightly if necessary.

22. Remove bushing halves (B).

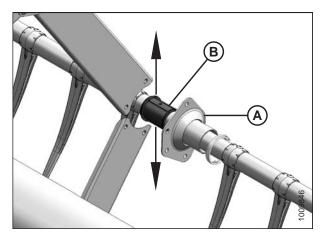


Figure 5.177: Support

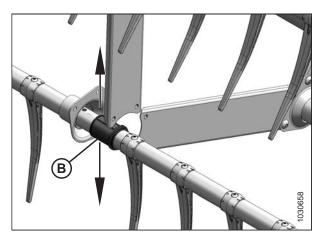


Figure 5.178: Opposite Support

Installing Bushings on Five-, Six-, or Nine-Bat Reels



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.



WARNING

To avoid bodily injury from fall of raised reel, always engage reel safety props before going under raised reel for any reason.

IMPORTANT:

Ensure tine tube is supported at all times to prevent damage to the tube or other components.

NOTE:

Use a pair of modified channel lock pliers (A) to install bushing clamps (C). Secure pliers in a vise and grind a notch (B) into the end of each arm to fit the clamp as shown.

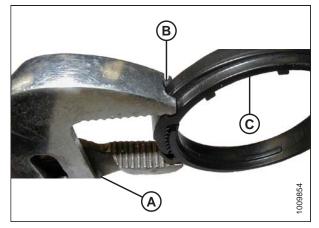


Figure 5.179: Modified Pliers

Installing cam end bushings:

- 1. Position bushing halves (B) on the tine tube with the flangeless end adjacent to the reel arm, and position the lug in each bushing half into the hole in tine tube (A).
- 2. Slide tine tube (A) towards the tail end of the reel to insert bushing (B) into the reel arm.

NOTE:

If the tine tube supports are installed, ensure the bushings at those locations slide into the support.

- 3. Reinstall the previously removed fingers or tines. Refer to the following procedures as necessary:
 - Removing Plastic Fingers, page 206
 - Removing Steel Tines, page 204
- 4. Install bushing clamp (A) onto the tine tube adjacent to the flangeless end of bushing (B).
- 5. Position clamp (A) on bushing (B) so the edges of the clamp and bushing are flush when the clamp is fit into the groove on the bushing and the lock tabs are engaged.

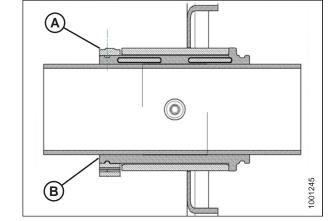


Figure 5.181: Bushing


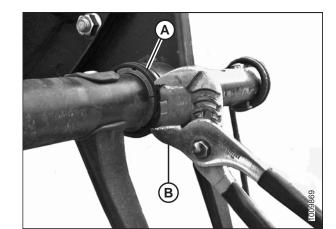


Figure 5.182: Clamp on Bushing

6. Tighten clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

Overtightening may break the clamp.

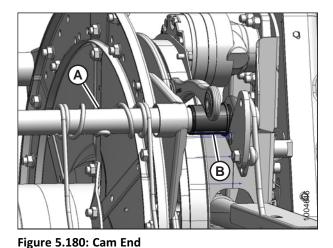

rigare 3.100. cam End

7. Line up tine bar (B) with the cam arm and install bolt (A). Apply medium-strength threadlocker (Loctite® 243 or equivalent) to bolt, and torque to 165 Nm (120 lbf·ft).

NOTE:

Make sure shim is between cam arm and reel bat.

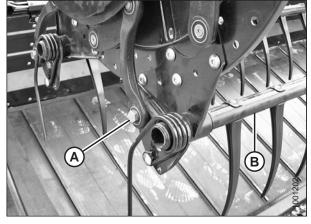


Figure 5.183: Cam End

- 8. Install bolts (A) securing arm (B) to the center disc.
- 9. Install reel arm (B) and endshield support (C) to the tail end of the reel at the applicable tine tube location and secure with bolts (A).

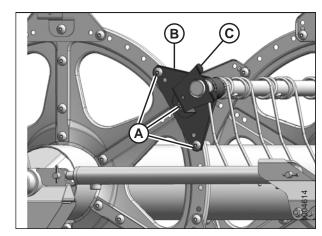


Figure 5.184: Tail End

- 10. Install endshield support (A) at the applicable tine tube location at the cam end.
- 11. Reinstall the reel endshields. For instructions, refer to *5.8.6 Reel Endshields, page 221*.

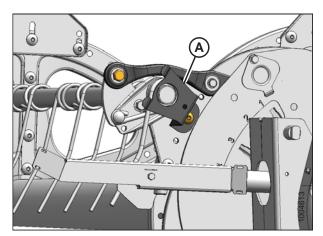




Figure 5.185: Cam End

Installing center disc and tail-end bushings:

- 12. Position bushing halves (B) on the tine tube with the flangeless end adjacent to the reel arm, and position the lug in each bushing half into the hole in tine tube (A).
- 13. Slide the reel arm (A) onto the bushing (B) and position against the disc at the original location.
- 14. Reinstall the previously removed fingers or tines. Refer to the following procedures as necessary:
 - Removing Plastic Fingers, page 206
 - Removing Steel Tines, page 204

 

 

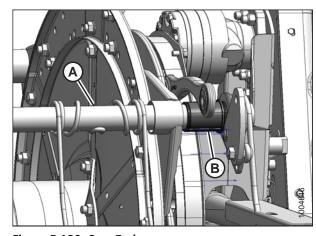


Figure 5.186: Cam End

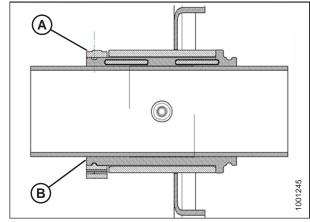


Figure 5.187: Bushing

17. Tighten clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

Overtightening may break the clamp.

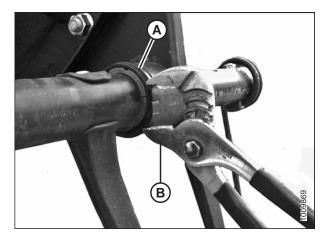


Figure 5.188: Clamp on Bushing

- 18. Install bolts (A) securing arm (B) to the center disc.
- 19. Install reel arm (B) and endshield support (C) to the tail end of the reel at the applicable tine tube location and secure with bolts (A).

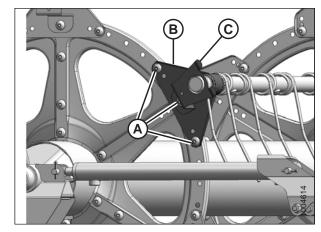


Figure 5.189: Tail End

Installing tine tube support (if installed) bushings:

20. Position bushing halves (B) on the tine tube with the flangeless end adjacent to the reel arm, and position the lug in each bushing half into the hole in tine tube (A).

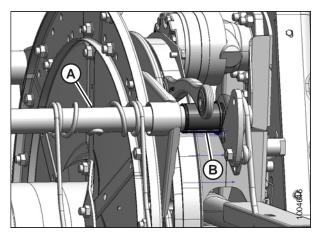


Figure 5.190: Cam End

21. Slide support (A) onto bushing (B).

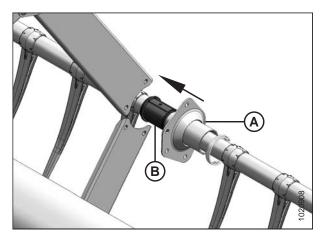


Figure 5.191: Support

22. For the opposite tine tube, rotate support (A) or slightly move the tine tube until it clears channels (C).

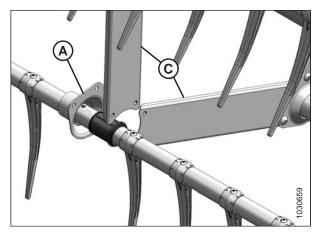


Figure 5.192: Opposite Support

- 23. Install bushing clamp (A) onto the tine tube adjacent to the flangeless end of bushing (B).
- 24. Position clamp (A) on bushing (B) so the edges of the clamp and bushing are flush when the clamp is fit into the groove on the bushing and the lock tabs are engaged.

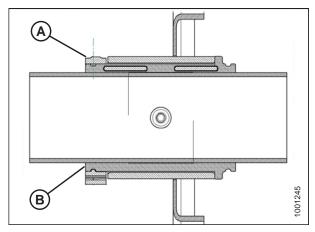


Figure 5.193: Bushing

25. Tighten clamp (A) using modified channel lock pliers (B) until finger pressure will **NOT** move the clamp.

IMPORTANT:

Overtightening may break the clamp.

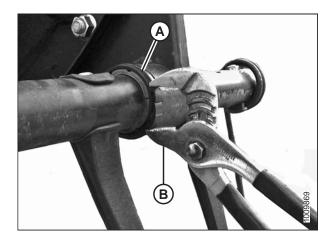


Figure 5.194: Clamp on Bushing

- 26. Reattach channels (C) to support (A) with screws (B) and nuts. Torque screws to 43 Nm (32 lbf·ft).
- 27. Reinstall any fingers (D) that were previously removed using screws (E). For instructions, refer to *Installing Plastic Fingers*, page 208.

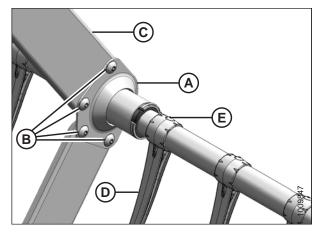


Figure 5.195: Tine Tube Support

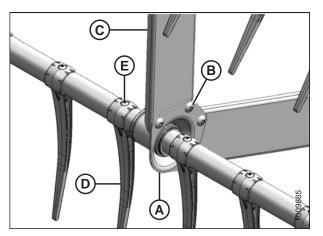


Figure 5.196: Opposite Support

5.8.6 Reel Endshields

Reel endshields and supports do not require regular maintenance, but they should be checked periodically for damage and loose or missing fasteners. Slightly dented or deformed endshields and supports are repairable, but severely damaged components must be replaced.

You can attach reel endshields to either end of the reel.

Replacing Reel Endshields



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Lower the header and reel, shut down the engine, and remove the key from the ignition.
- 2. Rotate the reel manually until reel endshield support (A) requiring replacement is accessible.
- 3. Remove three bolts (B).

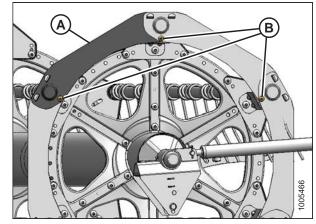


Figure 5.197: Reel Endshields

4. Lift end of reel endshield (A) off support (B).

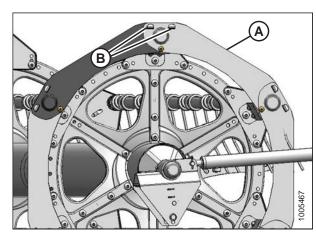


Figure 5.198: Reel Endshields

5. Remove the reel endshield from the supports.

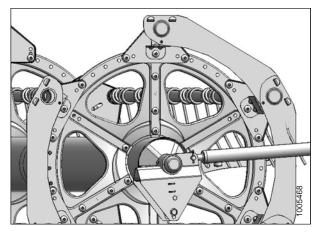


Figure 5.199: Reel Endshields

- 6. Remove reel endshield (A) from support (B).
- 7. Install new reel endshield (C) onto support (B).
- 8. Reattach reel endshield (A) onto support (B), ensuring it is installed on top of reel endshield (C).
- 9. Reinstall bolts (D).
- 10. Tighten all hardware.

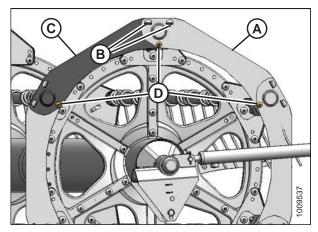


Figure 5.200: Reel Endshields

Replacing Reel Endshield Supports



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Lower the header and reel, shut down the engine, and remove the key from the ignition.
- 2. Rotate the reel manually until reel endshield (A) requiring replacement is accessible.
- 3. Remove bolt (B) from support (A).
- 4. Remove bolts (C) from support (A) and two adjacent supports.

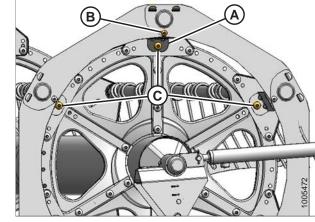


Figure 5.201: Reel Endshield Supports

- 5. Move reel endshields (A) away from the tine tube and rotate support (B) towards the reel to remove it.
- 6. Insert tabs of new support (B) into the slots in reel endshields (A). Ensure the tabs engage both reel endshields.
- 7. Secure support (B) to the disc with bolt (C) and nut. Do **NOT** tighten.
- 8. Secure reel endshields (A) to support (B) with bolt (C) and nut. Do **NOT** tighten.
- 9. Reattach the supports with bolts (C) and nuts.
- 10. Check the clearance between the tine tube and reel endshield support and adjust if necessary.
- 11. Torque nuts to 27 Nm (20 lbf·ft).

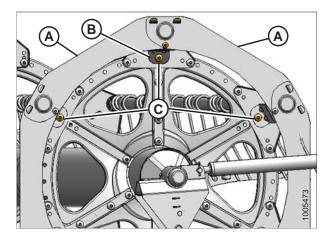


Figure 5.202: Reel Endshield Supports

5.9 PR15 Pick-Up Reel

All 7.6 m (25 ft.) and smaller headers have single reels, 9.1–10.7 m (30–35 ft.) headers are available in single-reel and double-reel versions. All headers larger than 10.7 m (35 ft.) are only available in double-reel configurations. Single reels are driven from the right arm and double reels are driven from the center arm.

5.9.1 Replacing Reel Drive Cover

Removing Reel Drive Cover



DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

Single-reel drive:

- 1. Stop the engine and remove the key from the ignition.
- 2. Remove four bolts (A) securing cover (B) to the reel drive.

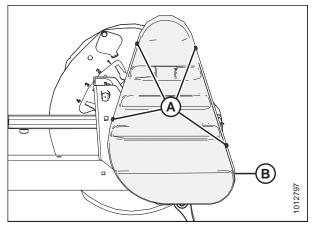


Figure 5.203: Drive Cover - Single Reel

Double-Reel Drive:

- 3. Stop the engine and remove the key from the ignition.
- 4. Remove six bolts (A) securing upper cover (B) to the reel drive and lower cover (C).

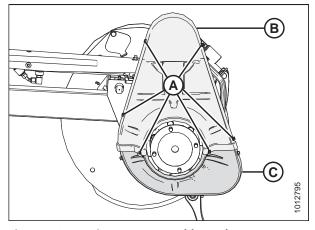


Figure 5.204: Drive Cover - Double Reel

5. Remove three bolts (A) and remove lower cover (B) if necessary.

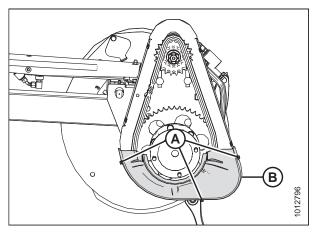


Figure 5.205: Drive Cover - Double Reel

Installing Reel Drive Cover

Single-Reel Drive:

1. Position drive cover (B) onto the reel drive and secure with four bolts (A).

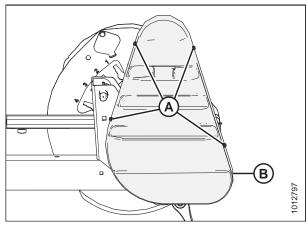


Figure 5.206: Drive Cover - Single Reel

Double-Reel Drive:

Position lower drive cover (B) onto the reel drive (if previously removed) and secure with three bolts (A).

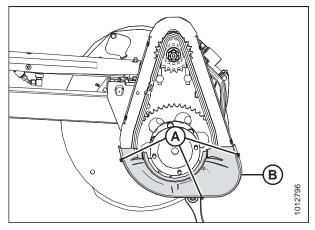


Figure 5.207: Drive Cover - Double Reel

3. Position upper drive cover (B) onto the reel drive and lower cover (C), and secure with six bolts (A).

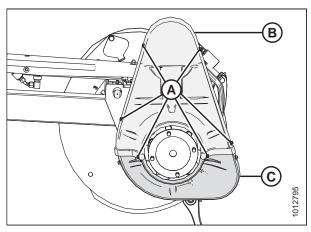


Figure 5.208: Drive Cover - Double Reel

5.9.2 Adjusting Reel Drive Chain Tension

Loosening Reel Drive Chain



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Remove the drive cover. For instructions, refer to Removing Reel Drive Cover, page 224.

3. Loosen six nuts (A). Slide motor (B) and motor mount (C) down towards the reel shaft.

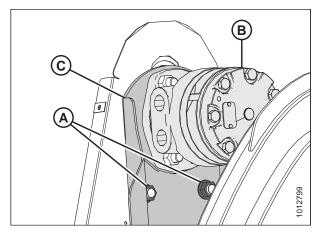


Figure 5.209: Single-Reel Drive Shown – Double-Reel Drive Similar

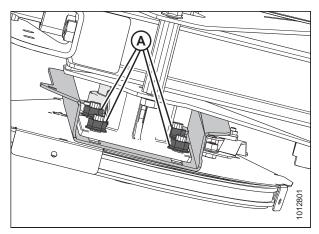


Figure 5.210: Single-Reel Drive – Viewed from Underside of Reel

Tightening Reel Drive Chain



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Shut down the windrower, and remove the key from the ignition.

2. Ensure six bolts (A) securing the motor mount to the chain case are loose.

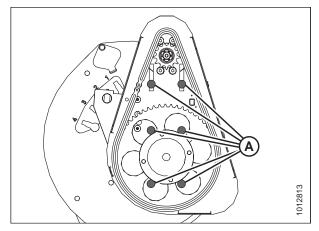


Figure 5.211: Single-Reel Drive Shown – Double Reel Similar

3. Slide motor (A) and motor mount (B) upwards until chain (C) is tight.

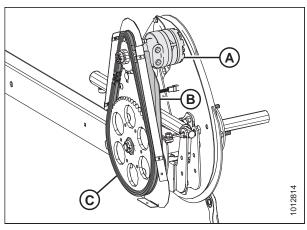


Figure 5.212: Single-Reel Drive Shown – Double Reel Similar

- 4. Ensure there is 3 mm (0.12 in.) of slack at the chain midspan. Adjust if necessary.
- 5. Torque nuts (A) to 73 Nm (54 lbf·ft).
- 6. Install the drive cover. For instructions, refer to *Installing Reel Drive Cover, page 225*.

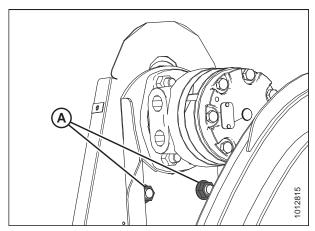


Figure 5.213: Single-Reel Drive Shown – Double Reel Similar

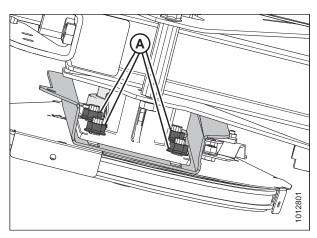


Figure 5.214: Single-Reel Drive – Viewed from Underside of Reel

5.9.3 Replacing Reel Drive Sprocket

Removing Reel Drive Sprocket



DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Loosen the drive chain. For instructions, refer to Loosening Reel Drive Chain, page 226.
- 3. Remove drive chain (A) from drive sprocket (B).

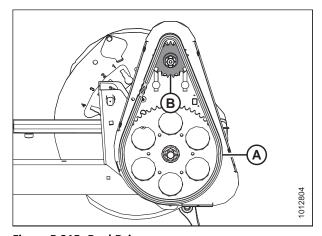


Figure 5.215: Reel Drive

- 4. Remove cotter pin (A), slotted nut (B), and flat washer (C) from the motor shaft.
- 5. Remove drive sprocket (D). Ensure the key remains in the shaft.

IMPORTANT:

To avoid damaging the motor, use a puller if the drive sprocket does not come off by hand. Do **NOT** use a pry bar and/or hammer to remove drive sprocket (D).

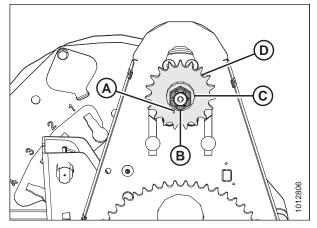


Figure 5.216: Reel Drive

Installing Reel Drive Sprocket

- 1. Align the keyway in sprocket (D) with the key on the motor shaft, and slide the sprocket onto the shaft. Secure with flat washer (C) and slotted nut (B).
- 2. Torque slotted nut (B) to 54 Nm (40 lbf·ft).
- 3. Install cotter pin (A). If necessary, tighten slotted nut (B) to the next slot to install the cotter pin.

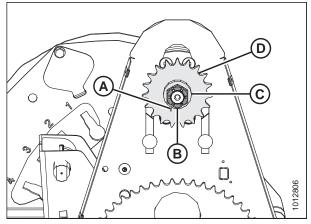


Figure 5.217: Reel Drive

- 4. Install drive chain (A) onto drive sprocket (B).
- 5. Tighten the drive chain. For instructions, refer to *Tightening Reel Drive Chain, page 227*.

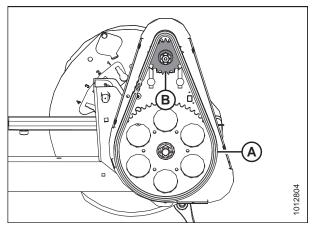


Figure 5.218: Reel Drive

5.9.4 Replacing Double-Reel U-Joint

The double-reel drive U-joint allows each reel to move independently from the other.

Lubricate the U-joint according to specifications. For instructions, refer to 5.3.6 Lubrication and Servicing, page 124.

Replace the U-joint if severely worn or damaged. For instructions, refer to Removing Double-Reel U-Joint, page 231.

Removing Double-Reel U-Joint

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Remove the drive cover. For instructions, refer to Removing Reel Drive Cover, page 224.
- 3. Support the inboard end of the right reel with a front end loader and nylon slings (A) (or equivalent lifting device).

IMPORTANT:

Avoid damaging or denting the center tube by supporting the reel as close to the cam end disc as possible.

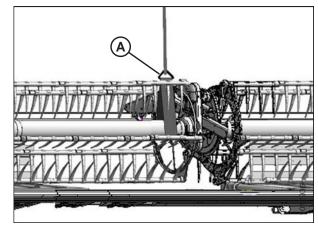


Figure 5.219: Supporting Reel

- 4. Remove six bolts (A) attaching U-joint flange (B) to driven sprocket (C).
- 5. Remove the U-joint.

NOTE:

It may be necessary to move the right reel sideways for the U-joint to clear the tube.

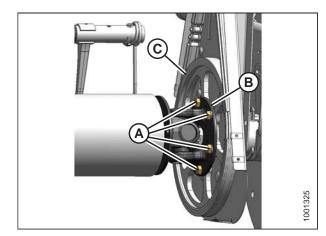


Figure 5.220: U-Joint

Installing Double-Reel U-Joint

NOTE:

It may be necessary to move the right reel sideways for the U-joint to clear the reel tube.

1. Position U-joint flange (B) onto the driven sprocket (C) as shown. Install six bolts (A) and hand-tighten. Do **NOT** torque the bolts.

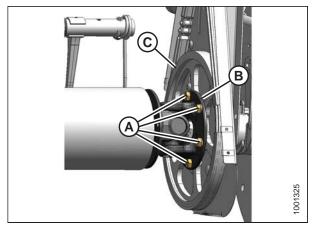


Figure 5.221: U-Joint

- 2. Position the right reel tube against the reel drive and engage the stub shaft into the U-joint pilot hole.
- 3. Rotate the reel until the holes in the end of the reel tube and U-joint flange (B) line up.
- 4. Apply medium-strength threadlocker (Loctite® 243 or equivalent) to four 1/2 in. bolts (A) and secure with lock washers.
- 5. Torque to 102-115 Nm (75-85 lbf·ft).

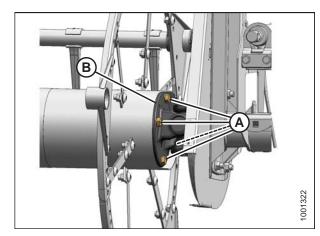


Figure 5.222: U-Joint

- 6. Remove temporary reel support (A).
- 7. Install the drive cover. For instructions, refer to *Installing Reel Drive Cover, page 225*.

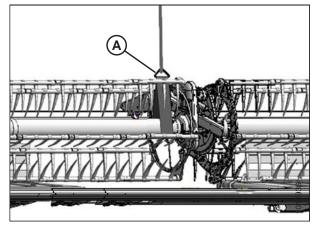


Figure 5.223: Supporting Reel

5.9.5 Replacing Reel Drive Motor

The reel drive motor does not require regular maintenance or servicing. If problems occur with the motor, remove it and have it serviced at your MacDon Dealer.

Removing Reel Drive Motor

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Loosen the drive chain. For instructions, refer to Loosening Reel Drive Chain, page 226.
- 3. Remove the drive sprocket. For instructions, refer to Removing Reel Drive Sprocket, page 229.
- 4. Disconnect hydraulic lines (A) at motor (B). Cap or plug open ports and lines.

NOTE:

Mark hydraulic lines (A) and their locations in motor (B) to ensure correct reinstallation.

5. Remove four nuts and bolts (C) and remove motor (B). Retrieve the spacer (not shown) from between motor (B) and the motor mount (if installed).

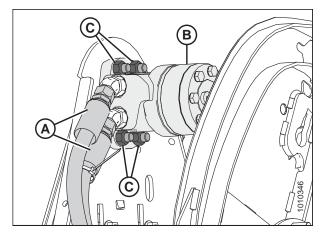


Figure 5.224: Reel Motor and Hoses

Installing Reel Drive Motor

1. Slide motor mount (A) up or down so motor mounting holes (B) are accessible through the openings in the chain case.

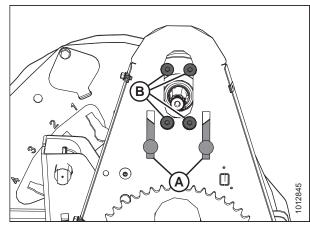


Figure 5.225: Reel Drive Motor Mounting Holes

- 2. Attach motor (A) (and spacer if previously removed) to motor mount (B) with four 1/2 in. x 1-3/4 in. countersunk bolts and nuts (C).
- 3. Torque nuts (C) to 73 Nm (54 lbf·ft).
- 4. If installing a new motor, install the hydraulic fittings (not shown) and torque to 110–120 Nm (81–89 lbf·ft).

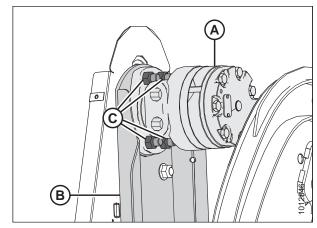


Figure 5.226: Reel Drive Motor

Remove the caps or plugs from the ports and lines and connect hydraulic lines (A) to hydraulic fittings (B) on motor (C).

NOTE:

Ensure hydraulic lines (A) are installed at their original locations.

- 6. Install the drive sprocket. For instructions, refer to *Installing Reel Drive Sprocket*, page 230.
- 7. Tighten the drive chain. For instructions, refer to *Tightening Reel Drive Chain, page 227*.

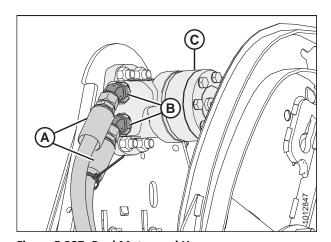


Figure 5.227: Reel Motor and Hoses

5.9.6 Replacing Drive Chain on Double Reel



DANGER


To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

- 1. Shut down the windrower, and remove the key from the ignition.
- 2. Loosen the drive chain. For instructions, refer to Loosening Reel Drive Chain, page 226.

3. Support the inboard end of the right reel with a front end loader and nylon slings (A) (or equivalent lifting device).

IMPORTANT:

Support the reel as close to the end disc as possible to avoid damaging or denting the center tube.

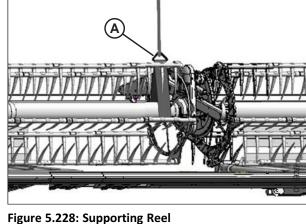

4. Remove four bolts (A) securing the reel tube to U-joint flange (B).

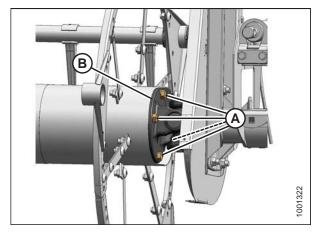


Figure 5.229: U-Joint

- 5. Move the right reel sideways to separate reel tube (A) from U-joint (B).
- 6. Remove drive chain (C).
- 7. Route new chain (C) over U-joint (B) and position onto the sprockets.

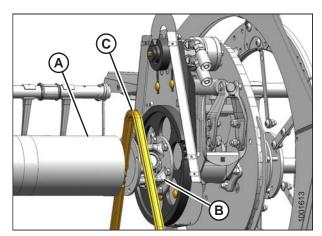


Figure 5.230: Replacing Chain

- 8. Position right reel tube (A) against the reel drive and engage the stub shaft into the U-joint pilot hole.
- Rotate the reel until the holes in end of the reel tube and U-joint flange line up.
- 10. Apply medium-strength threadlocker (Loctite® 243 or equivalent) to four 1/2 in. bolts (A) and secure with lock washers.
- 11. Torque to 102-115 Nm (75-85 lbf·ft).



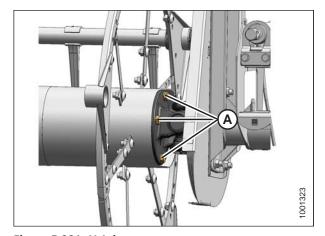


Figure 5.231: U-Joint

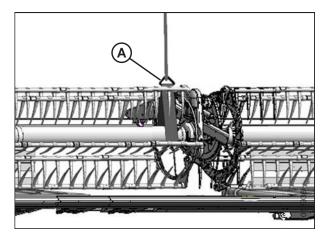


Figure 5.232: Supporting Reel

5.9.7 Replacing Drive Chain on Single Reel

- 1. Loosen the drive chain. For instructions, refer to Loosening Reel Drive Chain, page 226.
- 2. Lift chain (A) off the drive sprocket (B).
- 3. Lower the chain until free of lower sprocket (C) and remove the chain from the drive.
- 4. Position new chain (A) around the bottom teeth on lower sprocket (C).
- 5. Lift the chain onto drive sprocket (B) ensuring all the links are properly engaged in the teeth.
- 6. Tighten the drive chain. For instructions, refer to *Tightening* Reel Drive Chain, page 227.

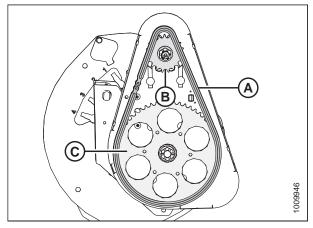


Figure 5.233: Reel Drive

5.10 Transport System (Optional)

Refer to 6.3.4 Stabilizer Wheels and Slow Speed Transport Package, page 247 for more information.

5.10.1 Checking Wheel Bolt Torque

If a transport system is installed, follow these steps to torque the wheel bolts:

1. Torque wheel bolts to 120 Nm (90 lbf·ft) using sequence shown at right.

IMPORTANT:

Whenever a wheel is removed and reinstalled, check the wheel bolt torque after one hour of operation and every 100 hours thereafter.


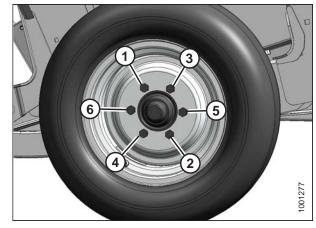


Figure 5.234: Bolt Tightening Sequence

5.10.2 Checking Axle Bolt Torque

If a transport system is installed, torque axle bolts as follows:

Figure 5.235: Axle Bolts

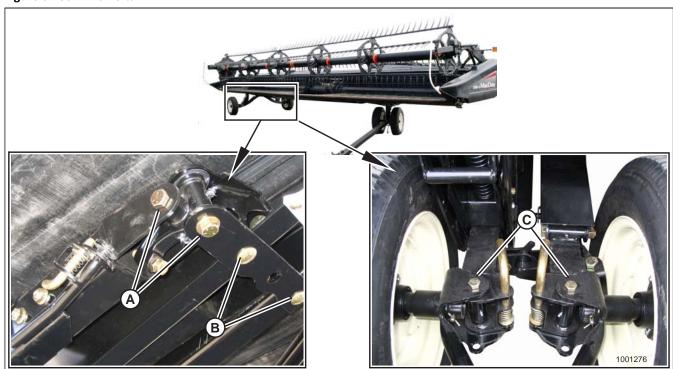

1. Check and tighten axle bolts **DAILY** until torque is maintained as follows:

MAINTENANCE AND SERVICING

- (A): 244 Nm (180 lbf·ft)
- (B): 203 Nm (150 lbf·ft)
- (C): 244 Nm (180 lbf·ft)

5.10.3 Checking Tire Pressure

Check the tire inflation pressure and inflate according to the information provided in Table 5.3, page 238.

Table 5.3 Tire Pressure for ST205/75 R15

Load Range	Pressure
D	448 kPa (65 psi)
E	552 kPa (80 psi)

A

WARNING

- Service tires safely.
- A tire can explode during inflation which could cause serious injury or death.
- Do NOT stand over tire. Use a clip-on chuck and extension hose.
- Do NOT exceed maximum inflation pressure indicated on tire label or sidewall.
- Replace tires that have defects.
- Replace wheel rims that are cracked, worn, or severely rusted.
- Never weld a wheel rim.
- Never use force on an inflated or partially inflated tire.
- Make sure the tire is correctly seated before inflating to operating pressure.
- If the tire is not correctly positioned on the rim or is overinflated, the tire bead can loosen on one side causing air to escape at high speed and with great force. An air leak of this nature can thrust the tire in any direction, endangering anyone in the area.
- Make sure all the air is removed from the tire before removing the tire from the rim.
- Do NOT remove, install, or repair a tire on a rim unless you have the proper equipment and experience to perform the job.
- Take the tire and rim to a qualified tire repair shop.



Figure 5.236: Inflation Warning

Chapter 6: Options and Attachments

The following options and attachments are available for use with your header. See your MacDon Dealer for availability and ordering information.

6.1 Reel

6.1.1 Multi-Crop Rapid Reel Conversion Kit

For use on double-reel headers only, the Multi-Crop Rapid Reel Conversion kit decreases the time required to change the foreaft cylinder position on the reel support arm from the normal operating location to a farther aft location that minimizes crop disturbance. The kit also allows the reel fore-aft cylinders to be quickly moved to the normal operating location.

MD #B6590

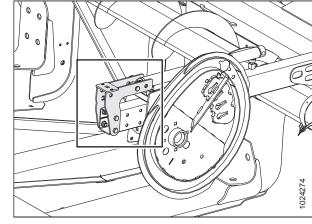


Figure 6.1: Center Arm - Left and Right Similar

6.1.2 Reel Arm Extension Kit - North American-Configured Headers Only

This kit provides extensions for the outer reel support arms on a North American-configured D1 Series header. These extensions provide the additional reel arm length required to properly install a Vertical Knife Mount kit (MD #B6608, MD #B6609) onto the header. The Reel Arm Extension kit also includes reel fore-aft brackets allowing quick reel repositioning from the reel's most forward position to its most rearward position.

NOTE:

Parts removed from illustration for clarity.

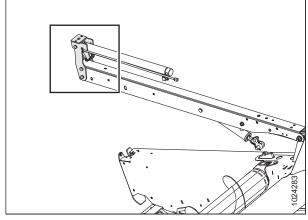


Figure 6.2: Right Arm - Center and Left Arms Similar

OPTIONS AND ATTACHMENTS

6.1.3 Lodged Crop Reel Finger Kit

The steel fingers (A) provided in the Lodged Crop Reel Finger kit attach to the ends of every other tine bar and help to clear material in heavy, hard-to-cut crops such as lodged rice.

Each kit contains three fingers for the cam end of the reel and three fingers for the tail end. Hardware and installation instructions are included in the kit.

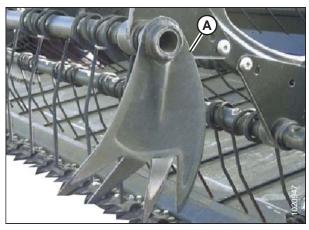


Figure 6.3: Lodged Crop Fingers

6.1.4 PR15 Tine Tube Reel Conversion Kit

These kits allow conversion from a six-bat reel to a nine-bat reel.

Order the following bundles according to your header size and type:

Steel and Plastic Fingers

- D115 Steel Fingers MD #B6514
- D115 Plastic Fingers MD #B6516
- D120 Steel Fingers MD #B6515
- D120 Plastic Fingers MD #B6517
- D125 Steel Fingers MD #B5656
- D125 Plastic Fingers MD #B5937
- D130 Steel Fingers MD #B5657
- D130 Plastic Fingers MD #B6029

NOTE:

You must also order additional reel endshields when converting the reel.

6.1.5 Reel Endshield Kit

The steel shields provided in the reel endshield kit attach to the ends of the reels and help to clear material in heavy, hard-to-cut crops. They are standard equipment on all headers (except those with nine-bat reels). Hardware and installation instructions are included in the kit.

See your MacDon Dealer for more information.

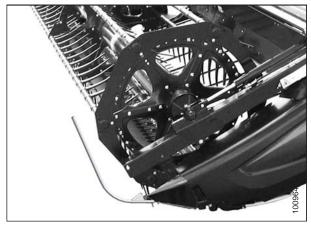


Figure 6.4: Reel Endshields

OPTIONS AND ATTACHMENTS

6.1.6 Tine Tube Reinforcing Kit

Tine tube reinforcing kits are available for five- and six-bat reels. They are designed to support high reel loads when cutting extremely heavy crops. Installation instructions are provided in the kit.

- Five-Bat Reels MD #B5825
- Six-Bat Reels MD #B5826

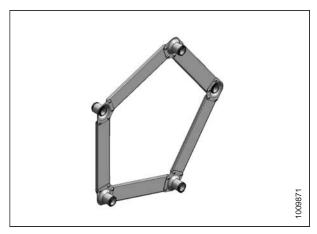


Figure 6.5: Five-Bat Reinforcing Kit Shown – Six-Bat Reinforcing Kit Similar

6.2 Cutterbar

6.2.1 Cutterbar Wearplate

Cutterbar wearplates are recommended for cutting on the ground when the soil is adhering to the steel.

Order one of the following bundles based on header size:

- D115 MD #B4864
- D120 MD #B4865
- D125 MD #B4838
- D130 MD #B4839
- D135 MD #B4840
- D140 MD #B4841
- D145 MD #B5114



Figure 6.6: Cutterbar Wearplates

6.2.2 Knife Cutout Cover

Knife cutout covers attach to the endsheets and prevent cut crop, particularly severely lodged crop, from passing through the knifehead opening and accumulating in the knife drive box and endsheet.

Order the following kits according to your header size:

- D120-D125 MD #220102 (stub guards)
- D130-D140 MD #220103 (stub guards)

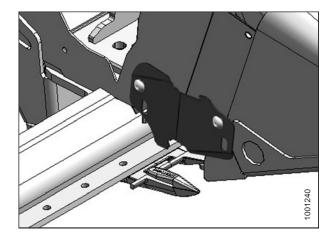


Figure 6.7: Knife Cutout Cover

6.2.3 Rock Retarder

The rock retarder (A) consists of a steel angle that is bolted to the cutterbar immediately aft of the knife, and helps prevent rocks and large debris from being swept onto the drapers with the crop. Installation instructions are included with the kit.

Order bundles by header size:

- 9.1–10.7 m (30–35 ft.) MD #B5084
- 12.2 m (40 ft.) MD #B5085

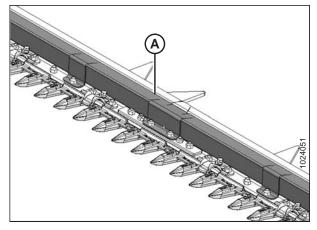


Figure 6.8: Rock Retarder

6.2.4 Stub Guard Conversion Kit

Stub guards, complete with top guides and adjuster shoes, are designed to cut tough crops.

Installation and adjustment instructions are included in the kits.

Order one of the following bundles according to your header size:

- 4.6 m (15 ft.) MD #B5009
- 6.1 m (20 ft.) MD #B5010
- 7.6 m (25 ft.) MD #B5011
- 9.1 m (30 ft.) MD #B5012
- 10.7 m (35 ft.) MD #B5013

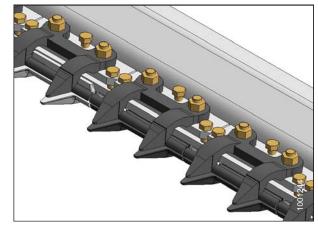


Figure 6.9: Stub Guards

6.2.5 Vertical Knife Mounts

The vertical knife mounts allow the installation of vertically oriented knives onto both ends of the header.

The vertical knives themselves are not sold by MacDon and must be purchased from a separate supplier.

Installation and adjustment instructions are included in the kits.

Order mount kits based on whether they will be installed on the left or right side of the header:

NOTE:

While the Right Vertical Knife Mount kit can be installed independently of the Left Vertical Knife Mount kit, the Left Vertical Knife Mount kit **must** be installed with the Right Vertical Knife Mount kit.

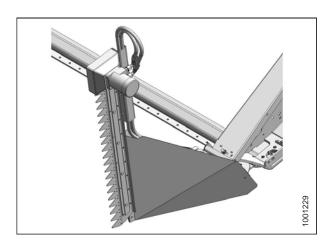


Figure 6.10: Vertical Knife Mount

OPTIONS AND ATTACHMENTS

- Left MD #B6608 (includes hardware and some plumbing. This mount requires installation of MD #B6609)
- Right MD #B6609 (includes flow control, template, hardware, and some plumbing. This mount can be installed individually or with MD #B6608)

6.2.6 Vertical Knife Plumbing Kits

Order one of the following bundles according to your header type:

- D115 MD #B6263
- D120 MD #B6264
- D125 MD #B6265
- D130 single reel MD #B6266
- D130 double reel MD #B6255
- D135 single reel MD #B6267
- D135 double reel MD #B6256
- D140 MD #B6257
- D145 MD #B6258

6.3 Header

6.3.1 Divider Quick Latch Kit

Divider Quick Latch kits attach to the endsheets. They allow for quick removal and storage of endsheet divider cones and, if required, reduce the transport width of the header. Installation instructions are included in the kit.

MD #B6158

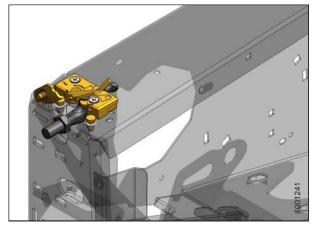


Figure 6.11: Divider Latch

6.3.2 Stabilizer Wheels

Stabilizer wheels help stabilize the header in field conditions that would otherwise cause the header to bounce, resulting in uneven cutting heights. Installation and adjustment instructions are included in the kit.

Available as an attachment for use with 9.1-12.2~m (30–40 ft.) headers.

MD #C1986

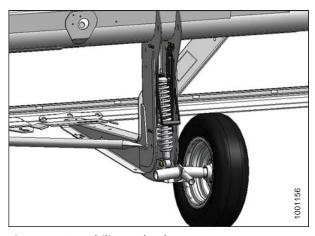


Figure 6.12: Stabilizer Wheel

6.3.3 Secondary Stabilizer Wheel

The secondary stabilizer wheel is added to existing stabilizer wheels to help stabilize the header in field conditions that would otherwise cause the header to bounce and result in uneven cutting height. Installation and adjustment instructions are included with the kit.

Available as an attachment for use with 9.1 m–12.2 m (30–40 ft.) headers.

MD #B617946

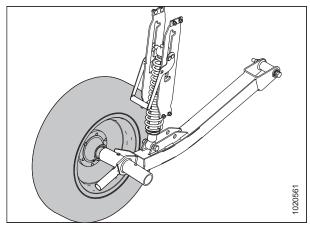


Figure 6.13: Secondary Stabilizer Wheel

6.3.4 Stabilizer Wheels and Slow Speed Transport Package

The Stabilizer Wheels and Slow Speed Transport Package help to stabilize the header in field conditions that would otherwise cause the header to bounce, resulting in uneven cutting heights. This system is similar to the Stabilizer Wheel (MD #C1986) option. For instructions, refer to 6.3.2 Stabilizer Wheels, page 246.

The Stabilizer Wheels and Slow Speed Transport Package are also used to convert the header into transport mode for slow-speed towing behind a properly-configured windrower (or agricultural tractor). A tow pole and installation instructions are included in the kit.

This option is available for use with 9.1-12.2 m (30-40 ft.) headers.

MD #C2007

MD #C2008



Figure 6.14: Stabilizer Wheels and Slow Speed Transport

215018 247 Revision A

^{46.} Kit consists of one wheel assembly; two kits are required to upgrade both sides of the header.

OPTIONS AND ATTACHMENTS

6.3.5 Backsheet Extension Kit

The Backsheet Extension kit (A) helps retain small seeds in shatter prone crops such as canola. They are usually used with headers equipped with upper cross augers (UCA).

Order the following bundles according to your D1 Series Header size:

- D130 MD #B6359
- D135 MD #C2042
- D140 MD #C2043
- D145 MD #C2044

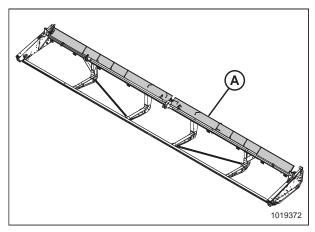


Figure 6.15: D1 Series Backsheet Extensions

6.3.6 Skid Shoe Kits

Skid Shoe kits provide improved performance when cutting low to the ground.

Installation instructions are included in the kits.

- MD #B5615 Inboard Skid Shoes
- MD #B4963 Outboard Skid Shoes

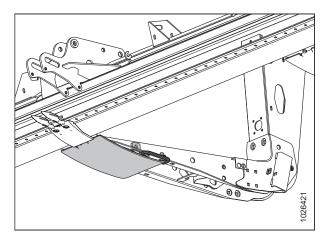


Figure 6.16: Center Skid Shoe – Inboard Shown, Outboard Similar

OPTIONS AND ATTACHMENTS

6.3.7 Steel Skid Shoes

IMPORTANT:

Not recommended for wet mud or conditions prone to sparking. Steel skid shoes offer extra abrasion resistance.

Installation instructions are included with kit.

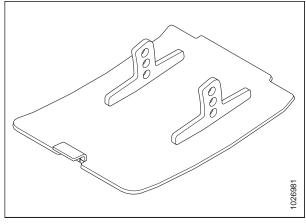


Figure 6.17: Steel Skid Shoe

6.4 Crop Delivery

6.4.1 Wide Draper Deflector

Wide metal draper deflectors attach to the inboard side of the endsheets to prevent material from falling through the gap between the endsheet and the draper.

Installation instructions are included with the kit.

MD #B6551

IMPORTANT:

The wide draper deflector is **NOT** compatible with the Lodged Crop Reel Finger (MD #B4831) option.

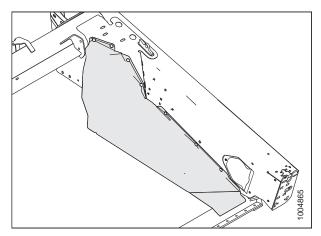


Figure 6.18: Wide Draper Deflector

6.4.2 EasyGuard Kit

The EasyGuard kit offers additional wear protection for the draper. It may prove useful in situations where conditions are dry or consistently hot.

Installation instructions are included with the kit.

MD #294859 for LEGG drapers

MD #294858 for WCCO drapers

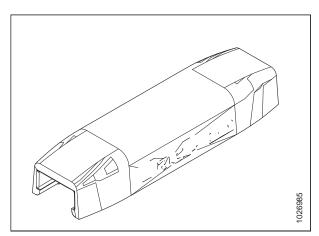


Figure 6.19: EasyGuard Clip

6.4.3 Upper Cross Auger

The upper cross auger (A) attaches in front of the backtube and improves crop feeding into the center of the header in heavy crop conditions. It is ideal for high-volume harvesting of forages, oats, canola, mustard, and other tall, bushy, hard-to-feed crops.

Order from the following list of kits according to your header model:

- D115 MD #B6280
- D120 MD #B6281
- D125 MD #B6461
- D130 MD #B6462
- D135 MD #B6463
- D140 MD #B6464

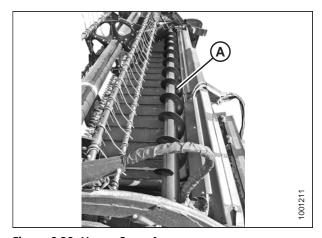


Figure 6.20: Upper Cross Auger

6.4.4 Rice Divider Rods

Rice divider rods attach to the left and right crop dividers and divide tall and tangled rice crops in a similar manner to standard crop divider rods performing in standing crops.

Installation instructions are included in the kit.

MD #B5609



Figure 6.21: Rice Divider Rod

6.4.5 Double Draper Drive Kit

The Double Draper Drive (DDD) kit provides power to four draper rollers instead of the usual two in order to minimize draper slipping when using the side delivery feature in heavy forage crops.

Installation instructions are included in the kit.

NOTE:

The draper slip sensor is disabled with the installation of this kit.

Available for 10.7–12.2 m (30–40 ft.) headers.

6.4.6 Double Windrow Attachment (DWA)

The DWA lays up to 14.6 m (48 ft.) of crop in a single windrow which is ideal for large forage harvesters. It is designed to mount only on SP windrowers equipped with an HC10 Conditioner.

MD #C1987

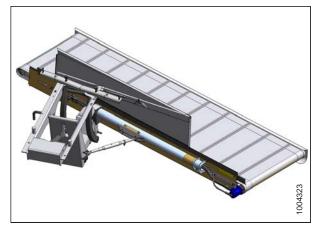


Figure 6.22: Double Windrow Attachment

6.4.7 Draper Extension Kit

The draper extension kit increases the inboard length of each deck up to 500 mm (20 in.) which narrows the header opening and decreases windrow width when cutting light/thin crops.

The kit includes roller support extensions, a draper repair kit, all necessary hardware, and installation instructions.

MD #B5407

6.4.8 Swath Forming Rods (Center Delivery)

Swath forming rods form windrows so the heads are in the center and protected from shatter. Swath forming rods are mainly used for grass seed cutting applications.

Installation and adjustment instructions are included with the kit.

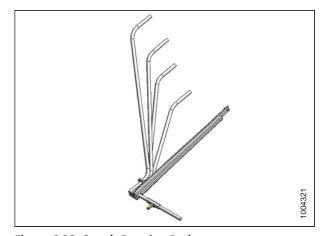


Figure 6.23: Swath Forming Rods

OPTIONS AND ATTACHMENTS

6.4.9 HC10 Hay Conditioner

The HC10 Hay Conditioner lays uniform, fluffy windrows. Conditioning or crimping the cut hay allows the release of moisture, resulting in faster drying times and earlier processing.

A parts list and installation and operating instructions are included with the kit.

MD #C1982

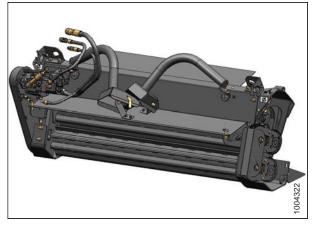


Figure 6.24: Hay Conditioner

6.4.10 Hydraulic Deck Shift Package

This system allows Operators to shift the decks using the in-cab console when double-swathing.

Installation and adjustment instructions are included with the kit.

Available on 7.6-12.2 m (25-40 ft.) headers.

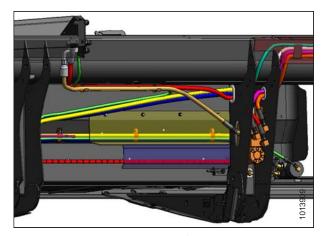


Figure 6.25: Hydraulic Deck Shift

Chapter 7: Troubleshooting

7.1 Crop Loss at Cutterbar

Problem	Solution	Refer to	
Symptom: Does Not Pick Up Down Crop	Symptom: Does Not Pick Up Down Crop		
Cutterbar too high	Lower cutterbar	3.7.1 Cutting Height, page 49	
Header angle too low	Increase header angle	Controlling Header Angle, page 54	
Reel too high	Lower reel	3.7.10 Reel Height, page 58	
Reel too far back	Move reel forward	3.7.11 Reel Fore-Aft Position, page 58	
Ground speed too fast for reel speed	Reduce ground speed or increase reel speed	3.7.6 Reel Speed, page 553.7.7 Ground Speed, page 55	
Reel fingers not lifting crop sufficiently	Increase finger pitch aggressiveness	3.7.12 Reel Tine Pitch, page 67	
Reel fingers not lifting crop sufficiently	Install lifter guards	See your MacDon Dealer	
Symptom: Heads Shattering or Breaking	Symptom: Heads Shattering or Breaking Off		
Reel speed too fast	Reduce reel speed	3.7.6 Reel Speed, page 55	
Reel too low	Raise reel	3.7.10 Reel Height, page 58	
Ground speed too fast	Reduce ground speed	3.7.7 Ground Speed, page 55	
Crop too ripe	Operate at night when humidity is higher	_	
Symptom: Cut Grain Falling Ahead of Cutterbar			
Ground speed too slow	Increase ground speed	3.7.7 Ground Speed, page 55	
Reel speed too slow	Increase reel speed	3.7.6 Reel Speed, page 55	
Reel too high	Lower reel	3.7.10 Reel Height, page 58	
Cutterbar too high	Lower cutterbar	3.7.1 Cutting Height, page 49	
Reel too far forward	Move reel back on arms	3.7.11 Reel Fore-Aft Position, page 58	
Cutting at speeds over 10 km/h (6 mph) with high torque (10-tooth) reel drive sprocket	Replace with standard torque (19-tooth) reel drive sprocket	 5.9.3 Replacing Reel Drive Sprocket, page 229 See your MacDon Dealer 	
Worn or broken knife components	Replace components	5.5 Knife, page 136	

Problem	Solution	Refer to	
Symptom: Strips of Uncut Material			
Crowding uncut crop	Allow enough room for crop to be fed to cutterbar	_	
Broken knife sections	Replace broken sections	5.5.1 Replacing Knife Section, page 136	
Symptom: Excessive Bouncing at Norma	al Field Speed		
Float set too light	Adjust header float	3.7.4 Header Float, page 54	
Symptom: Divider Rod Running Down S	Standing Crop		
Divider rods too long	Remove divider rod	3.7.14 Crop Divider Rods, page 75	
Symptom: Bushy or Tangled Crop Flows	over Divider Rod, Builds Up on Endshee	ets	
Divider rods providing insufficient separation	Install long divider rods	3.7.14 Crop Divider Rods, page 75	
Symptom: Crop Not Being Cut at Ends			
Reel not frowning or not centered in header	Adjust reel frown or reel horizontal position	 3.7.11 Reel Fore-Aft Position, page 58 5.8.2 Reel Frown, page 202 	
Knife hold-downs not adjusted properly	Adjust hold-downs so knife works freely, but still keep sections from lifting off guards	 Adjusting Pointed Guard Hold- Downs, page 149 Adjusting Stub Guard Hold-Downs, page 150 	
Knife sections or guards are worn or broken	Replace all worn and broken cutting parts	5.5 Knife, page 136	
Header is not level	Level header	3.12 Leveling Header, page 89	
Reel fingers not lifting crop properly ahead of knife	Adjust reel position / finger pitch	 3.7.11 Reel Fore-Aft Position, page 58 3.7.12 Reel Tine Pitch, page 67 	
Divider runs down thick crop at ends, preventing proper feeding due to material bridging the cutter guards	Replace three or four end guards with stub guards	 5.5.7 Knife Guards, page 141 6.2.4 Stub Guard Conversion Kit, page 244 See your MacDon Dealer 	
Symptom: Material Accumulating in Gap between Cutout in Endsheet and Knifehead			
Crop heads leaning away from knifehead hole in endsheet	Add knifehead shield(s), except in damp/sticky soils	5.5.8 Knifehead Shield, page 151	

7.2 Cutting Action and Knife Components

Problem	Solution	Refer to	
Symptom: Ragged or Uneven Cutting o	Symptom: Ragged or Uneven Cutting of Crop		
Knife hold-downs not adjusted properly	Adjust hold-downs	Checking Knife Hold-Downs, page 148	
Knife sections or guards are worn or broken	Replace all worn and broken cutting parts	5.5 Knife, page 136	
Knife is not operating at recommended speed	Check engine speed of windrower	Refer to your windrower operator's manual	
Ground speed too fast for reel speed	Reduce ground speed or increase reel speed	3.7.7 Ground Speed, page 553.7.6 Reel Speed, page 55	
Reel fingers not lifting crop properly ahead of knife	Adjust reel position / finger pitch	 3.7.11 Reel Fore-Aft Position, page 58 3.7.12 Reel Tine Pitch, page 67 	
Cutterbar too high	Lower cutting height	3.7.1 Cutting Height, page 49	
Header angle too flat	Steepen header angle	Controlling Header Angle, page 54	
Bent knife, causing binding of cutting parts	Straighten a bent knife. Align guards	5.5.7 Knife Guards, page 141	
Cutting edge of guards not close enough, or parallel to knife sections	Align guards	5.5.7 Knife Guards, page 141	
Tangled / tough to cut crop	Install stub guards	 5.5.7 Knife Guards, page 141 6.2.4 Stub Guard Conversion Kit, page 244 See your MacDon Dealer 	
Reel too far back	Move reel forward	3.7.11 Reel Fore-Aft Position, page 58	
Loose knife drive belt	Adjust drive belt tension	 Tensioning Untimed Knife Drive Belts, page 163 Tensioning Timed Knife Drive Belts, page 168 	

Problem	Solution	Refer to	
Symptom: Knife Plugging			
Reel too high or too far forward	Lower reel or move reel rearward	 3.7.10 Reel Height, page 58 3.7.11 Reel Fore-Aft Position, page 58 	
Ground speed too slow	Increase ground speed	3.7.6 Reel Speed, page 55	
Loose knife drive belt	Adjust drive belt tension	 Tensioning Untimed Knife Drive Belts, page 163 Tensioning Timed Knife Drive Belts, page 168 	
Improper knife hold-down adjustment	Adjust hold-down	Checking Knife Hold-Downs, page 148	
Dull or broken knife sections	Replace knife section	5.5.1 Replacing Knife Section, page 136	
Bent or broken guards	Align or replace guards	5.5.7 Knife Guards, page 141	
Reel fingers not lifting crop properly ahead of knife	Adjust reel position / finger pitch	 3.7.11 Reel Fore-Aft Position, page 58 3.7.12 Reel Tine Pitch, page 67 	
Steel pick-up fingers contacting knife	Increase reel clearance to cutterbar, or adjust frown	 5.8.1 Reel Clearance to Cutterbar, page 198 5.8.2 Reel Frown, page 202 	
Float too heavy	Adjust springs for lighter float	3.7.4 Header Float, page 54	
Mud or dirt build up on cutterbar	Raise cutterbar by lowering skid shoes	3.7.3 Cutting on the Ground, page 52	
Mud or dirt build up on cutterbar	Install cut-out sections	See your MacDon Dealer	
Mud or dirt build up on cutterbar	Flatten header angle	Controlling Header Angle, page 54	
Knife is not operating at recommended speed	Check engine speed of windrower	Refer to your windrower's operator's manual	

Problem	Solution	Refer to
Symptom: Excessive Header Vibration		
Knife hold-downs not adjusted properly	Adjust hold-downs	Checking Knife Hold-Downs, page 148
Knives on double-knife drive not timed	Adjust knife timing	Adjusting Double-Knife Timing, page 170
Knife not operating at recommended speed	Check engine speed of windrower	Refer to your windrower's operator's manual
Excessive knife wear	Replace knife	5.5.2 Removing Knife, page 1375.5.5 Installing Knife, page 139
Loose or worn knifehead pin or drive arm	Tighten or replace parts	 5.5.3 Removing Knifehead Bearing, page 138 5.6.1 Knife Drive Box, page 153
Bent cutterbar	Straighten cutterbar	
Bent cutterbar Straighten cutterbar See your MacDon Dealer Symptom: Knife Back Breakage		
Bent or broken guard	Straighten or replace guard	5.5.7 Knife Guards, page 141
Worn knifehead pin	Replace knifehead pin	5.5.3 Removing Knifehead Bearing, page 138
Dull knife	Replace knife	 5.5.2 Removing Knife, page 137 5.5.5 Installing Knife, page 139
Symptom: Excessive Breakage of Knife	Sections or Guards	
Knife hold-downs not adjusted properly	Adjust hold-downs	Checking Knife Hold-Downs, page 148
Cutterbar operating too low in stony conditions	Raise cutterbar, using skid shoes	3.7.3 Cutting on the Ground, page 52
Float is set too heavy	Adjust for lighter float	3.7.4 Header Float, page 54
Bent or broken guard	Straighten or replace	5.5.7 Knife Guards, page 141
Header angle too steep	Flatten header angle	Controlling Header Angle, page 54

7.3 Reel Delivery

Problem	Solution	Refer to	
Symptom: Reel Not Releasing Material in Normal Standing Crop			
Reel speed too fast	Reduce reel speed	3.7.6 Reel Speed, page 55	
Reel too low	Raise reel	3.7.10 Reel Height, page 58	
Reel tines too aggressive	Reduce cam setting	3.7.12 Reel Tine Pitch, page 67	
Reel too far back	Move reel forward	3.7.11 Reel Fore-Aft Position, page 58	
Symptom: Reel Not Releasing Material	in Lodged and Standing Crop (Reel Fully	Lowered)	
Reel tines too aggressive for standing crop	Reduce cam setting (1 or 2)	3.7.12 Reel Tine Pitch, page 67	
Symptom: Wrapping on Reel End			
Reel tines too aggressive	Reduce cam setting	3.7.12 Reel Tine Pitch, page 67	
Reel too low	Raise reel	3.7.10 Reel Height, page 58	
Reel speed too fast	Reduce reel speed	3.7.6 Reel Speed, page 55	
Crop conditions	Install optional endshields	See your MacDon Dealer	
Reel not centered in header	Center reel in header	5.8.3 Centering Reel, page 203	
Symptom: Reel Releases Crop too Quickly			
Reel tines not aggressive enough	Increase cam setting	3.7.12 Reel Tine Pitch, page 67	
Reel too far forward	Move reel back	3.7.11 Reel Fore-Aft Position, page 58	
Symptom: Reel Will Not Lift			
Reel lift couplers are incompatible or defective	Change quick coupler	_	
Symptom: Reel Will Not Turn			
Control set at 0	Activate reel speed control	3.7.6 Reel Speed, page 55	
Quick couplers not properly connected	Connect couplers	4.1 Attaching Header to Windrower, page 111	
Reel drive chain disconnected	Connect chain	5.9.7 Replacing Drive Chain on Single Reel, page 236	
Symptom: Reel Motion Uneven under no Load			
Excessive slack in reel drive chain	Tighten chain	5.9.2 Adjusting Reel Drive Chain Tension, page 226	

Problem	Solution	Refer to	
Symptom: Reel Motion is Uneven or Stalls in Heavy Crops			
Reel speed too fast	Reduce reel speed	3.7.6 Reel Speed, page 55	
Reel fingers not aggressive enough	Move to a more aggressive finger pitch notch	3.7.12 Reel Tine Pitch, page 67	
Reel too low	Raise reel	3.7.10 Reel Height, page 58	
Relief valve on windrower has low relief pressure setting	Increase relief pressure to manufacturer's recommendations	Refer to the windrower operator's manual	
Low oil reservoir level on windrower (sometimes more than one reservoir)	Fill to proper level	Refer to the windrower operator's manual	
Relief valve malfunction	Replace relief valve	Refer to the windrower operator's manual	
Cutting tough crops with standard torque (19-tooth) reel drive sprocket	Replace with high torque (10-tooth) or 14-tooth reel drive sprocket	Optional Reel Drive Sprockets, page 55	
Symptom: Plastic Fingers Cut at Tip			
Insufficient reel to cutterbar clearance	Increase clearance	5.8.1 Reel Clearance to Cutterbar, page 198	
Symptom: Plastic Fingers Bent Rearwar	d at Tip		
Reel digging into ground with reel speed slower than ground speed	Raise header	3.7.1 Cutting Height, page 49	
Reel digging into ground with reel speed slower than ground speed	Decrease header tilt	Controlling Header Angle, page 54	
Reel digging into ground with reel speed slower than ground speed	Move reel aft	3.7.11 Reel Fore-Aft Position, page 58	
Symptom: Plastic Fingers Bent Forward at Tip (Opposite of Above)			
Reel digging into ground with reel speed faster than ground speed	Raise header	3.7.1 Cutting Height, page 49	
Reel digging into ground with reel speed faster than ground speed	Decrease header tilt	Controlling Header Angle, page 54	
Reel digging into ground with reel speed faster than ground speed	Move reel aft	3.7.11 Reel Fore-Aft Position, page 58	
Symptom: Plastic Fingers Bent Close to Tine Tube			
Excessive plugging at cutterbar with wads of crop accumulating at cutterbar while maintaining reel operation	Correct plugging/cutting issues	3.13 Unplugging Cutterbar, page 90	
Excessive plugging at cutterbar with wads of crop accumulating at cutterbar while maintaining reel operation	Stop reel before plugging becomes excessive	-	

7.4 Header and Drapers

Problem	Solution	Refer to	
Symptom: Insufficient Header Lift			
Low relief pressure	Increase relief pressure	See your MacDon Dealer	
Symptom: Insufficient Draper Speed			
Speed control set too low	Increase control setting	3.7.8 Draper Speed, page 56	
Relief pressure too low	Increase relief pressure to recommended setting	See your MacDon Dealer	
Windrower header drive too slow	Adjust to correct speed for windrower model	Refer to windrower operator's manual	
Worn out gear pump	Replace pump	See your MacDon Dealer	
Pressure compensator (V7) set too low	Adjust to increase setting	Refer to windrower operator's manual	
Symptom: Draper Will Not Move			
Drapers are loose	Tighten drapers	5.7.3 Adjusting Draper Tension, page 180	
Drive or idler roller wrapped with material	Loosen draper and clean rollers	5.7.3 Adjusting Draper Tension, page 180	
Slat or connector bar jammed by frame or material	Loosen draper and clear obstruction	5.7.3 Adjusting Draper Tension, page 180	
Roller bearing seized	Replace bearing	5.7.6 Side Draper Roller Maintenance, page 186	
Low hydraulic oil	Fill windrower reservoir to full level	See your MacDon Dealer	
Incorrect relief setting at flow control valve	Adjust relief setting	See your MacDon Dealer	
Symptom: Draper Stalling			
Material not feeding evenly off knife	Lower reel	3.7.10 Reel Height, page 58	
Material not feeding evenly off knife	Install stub guards	 6.2.4 Stub Guard Conversion Kit, page 244 5.5.7 Knife Guards, page 141 See your MacDon Dealer 	
Symptom: Hesitation in Flow of Bulky Crop			
Header angle too low	Increase header angle	Controlling Header Angle, page 54	
Material overload on drapers	Increase side draper speed	3.7.8 Draper Speed, page 56	
Material overload on drapers	Install upper cross auger	6.4.3 Upper Cross Auger, page 251	
Material overload on drapers	Add flighting extensions	See your MacDon Dealer	
Symptom: Drapers Back Feed			
Drapers running too slow in heavy crop	Increase draper speed	3.7.8 Draper Speed, page 56	

Problem	Solution	Refer to		
Symptom: Crop is Thrown Across Open	Symptom: Crop is Thrown Across Opening and under Opposite Side Draper			
Drapers running too fast in light crop	Reduce draper speed 3.7.8 Draper Speed, page 56			
Symptom: Material Accumulates inside	Symptom: Material Accumulates inside or under Front Edge of Draper			
Deck height improperly adjusted	Adjust deck height 5.7.5 Adjusting Deck Height, page			
Symptom: Material Wrapping at Upper Cross Auger Beater Bars				
Crop conditions do not require beater bars	Remove beater bars	3.14.1 Removing Beater Bars, page 91		
Symptom: Material Accumulating on End Deflectors and Releasing in Bunches				
End deflectors too wide	For headers with manual deck shift only, trim deflector or replace with narrow deflector (MD #172381)	3.13 Unplugging Cutterbar, page 90		

7.5 Cutting Edible Beans

Problem	Solution	Refer to		
Symptom: Plants Being Stripped and Co	Symptom: Plants Being Stripped and Complete or Partial Plants Left Behind			
Header off ground	Lower header to ground and run on skid shoes and/or cutterbar	3.7.3 Cutting on the Ground, page 52		
	Set float as follows:			
Float set too light—rides on high spots and does not lower soon enough	• Dry ground: 445-667 N (100–150 lbf)	3.7.4 Header Float, page 54		
	• Wet ground: 222–445 N (50–100 lbf)			
Reel too high	Fully retract reel cylinders	3.7.10 Reel Height, page 58		
Reel too high with cylinders fully retracted	Adjust reel height	3.7.10 Reel Height, page 58		
Finger pitch not aggressive enough	Adjust finger pitch	3.7.12 Reel Tine Pitch, page 67		
Reel too far aft	Move reel forward until the fingertips skim the soil surface with header on the ground and the center-link properly adjusted	3.7.11 Reel Fore-Aft Position, page 58		
Header angle too shallow	Lengthen center-link	Controlling Header Angle, page 54		
Header angle too shallow	If cutting on ground, header angle can be increased by fully retracting lift cylinders	Controlling Header Angle, page 54		
Reel too slow	Adjust reel speed to be marginally faster than ground speed	3.7.6 Reel Speed, page 55		
Ground speed too fast	Lower ground speed	3.7.6 Reel Speed, page 55		
Skid shoes too low	Raise skid shoes to highest setting	3.7.3 Cutting on the Ground, page 52		
Dirt packs on bottom of cutterbar and raises cutterbar off the ground	Install plastic wear strips on bottom of cutterbar and skid shoes	See your MacDon Dealer		
Dirt packing on bottom of cutterbar with plastic wear strips on cutterbar and raises cutterbar off the ground	Ground too wet. Allow soil to dry	_		
Dirt packing on bottom of cutterbar with plastic wear strips on cutterbar and raises cutterbar off the ground	Manually clean the bottom of cutterbar when accumulation gets unacceptable	_		
Plastic wear strip for cutterbar has been installed over top of steel wearplates	Remove steel cutterbar wearplates when installing the plastic wear strips for cutterbar	_		
Header not level	Level header	3.12 Leveling Header, page 89		
Worn/damaged knife sections	Replace sections or complete knife	5.5 Knife, page 136		
Parts of vines get caught in pointed guard tip. (Occurs more in row-cropped beans that are hilled from cultivating)	Install stub guard kit	6.2.4 Stub Guard Conversion Kit, page 244		

Problem	Solution	Refer to					
Symptom: Excessive Losses at Dividers							
Divider rod running down crop and shattering pods	Remove divider rod	3.7.14 Crop Divider Rods, page 75					
Vines and plants build up on endsheet	Install divider rod	3.7.14 Crop Divider Rods, page 75					
Plant Vines Pinched between Top of Dr	Plant Vines Pinched between Top of Draper and Cutterbar						
Cutterbar has filled up with trash with draper to cutterbar gap properly adjusted	Raise header fully at each end of field, or as required and shift decks back and forth to help clean out cutterbar	_					
Shifting of decks with header raised does not clean out cutterbar debris	Manually remove debris from cutterbar cavity to prevent damage to drapers	_					
Symptom: Crop Accumulating at Guard	s and Not Moving Rearward onto Draper	rs					
Reel finger pitch not aggressive enough	Increase finger aggressiveness (cam position)	3.7.12 Reel Tine Pitch, page 67					
Reel too high	Lower reel	3.7.10 Reel Height, page 58					
Minimum reel clearance to cutterbar setting too high	Readjust reel minimum height with cylinders fully retracted	Adjusting Reel Clearance, page 201					
Reel too far forward	Reposition reel	3.7.11 Reel Fore-Aft Position, page 58					
Symptom: Reel Shattering Pods	_						
Reel too far forward	Reposition reel	3.7.11 Reel Fore-Aft Position, page 58					
Reel speed too high	Reduce reel speed	3.7.6 Reel Speed, page 55					
Bean pods are too dry	Cut at night with heavy dew once pods have softened	_					
Reel finger pitch too retarded	Increase finger aggressiveness (cam position)	3.7.12 Reel Tine Pitch, page 67					
Symptom: Cutterbar Guards Breaking							
Float insufficient	Increase float	3.7.4 Header Float, page 54					
Excessive number of rocks in field	Consider installing optional stub guards Note: Experiment with a few guards on a section of cutterbar to compare the performance of the two different styles of guards	 5.5.7 Knife Guards, page 141 6.2.4 Stub Guard Conversion Kit, page 244 					
Symptom: Cutterbar Pushing Too Much Trash and Dirt							
Header too heavy	Readjust float to make header lighter	3.7.4 Header Float, page 54					
Header angle too steep	Decrease header angle with lift cylinders	3.7.5 Header Angle, page 54					
Header angle too steep	Shorten the center-link	3.7.5 Header Angle, page 54					
Regular guards push dirt and plug up with trash or plug up with trash and then push dirt	Install stub guard kit	6.2.4 Stub Guard Conversion Kit, page 244					

Problem	Solution	Refer to			
Insufficient support for header	Install center skid shoes on header	3.7.3 Cutting on the Ground, page 52			
Symptom: Cutterbar Fills Up with Dirt					
Excessive gap between top of front of draper and cutterbar	Adjust front deck supports to obtain proper clearance between cutterbar and draper	5.7.5 Adjusting Deck Height, page 183			
Excessive gap between top of front of draper and cutterbar	Raise header fully at each end of field or as required and shift decks back and forth to help clean out cutterbar	_			
Symptom: Reel Carries Over Odd Plants	s in Same Location				
Reel steel fingers bent and hook plants from crop flow on drapers	Straighten steel fingers	_			
Dirt accumulation on end of fingers prevent plants dropping off fingers onto drapers	Raise reel	3.7.10 Reel Height, page 58			
Dirt accumulation on end of fingers prevent plants dropping off fingers onto drapers	Adjust reel fore and aft location to move fingers out of the ground	3.7.11 Reel Fore-Aft Position, page 58			
Dirt accumulation on end of fingers prevent plants dropping off fingers onto drapers	Adjust reel fore and aft location to move fingers out of the ground	3.7.11 Reel Fore-Aft Position, page 58			
Symptom: Cutterbar Pushing Too Much Dirt in Certain Locations for Length of Field					
Tire tracks or row crop ridges	Cut at angle to ridges or crop rows to allow knife and guards to clean out better	_			
Rolling land along length of field	Cut at 90° angle to undulations, provided knife floats across without digging in	_			

Problem	Solution	Refer to			
Symptom: Reel Carries Over Excessive Amounts of Plants or Wads					
Excessive accumulation of crop on drapers (up to height of reel center tube) Increase draper speed 3.7.8 Draper Speed, page 56					
Finger pitch too retarded	Increase finger aggressiveness (cam position)	3.7.12 Reel Tine Pitch, page 67			
Symptom: Reel Wraps Up with Crop					
Reel too low	Raise reel	3.7.10 Reel Height, page 58			
Symptom: Reel Ends Wrap Up with Crop					
Uncut crop interfering on reel ends Add reel endshields Refer to the header parts catalog					

7.6 Windrow Formation

Problem	Solution	Refer to
Symptom: Heads on Ground and Scatte	ered	
Draper speed too slow	Increase draper speed	3.7.8 Draper Speed, page 56
Draper angle too flat	Increase header angle	Controlling Header Angle, page 54
Ground speed too slow	Increase ground speed	3.7.6 Reel Speed, page 55
Crop too ripe	Cut material before too mature	_
Symptom: Hollow in Center		
Draper speed too slow	Increase draper speed	3.7.8 Draper Speed, page 56
Delivery opening too wide	Decrease delivery opening width	3.8 Delivery Opening, page 77
Symptom: All Heads in Center		
Draper speed too fast or header angle	Reduce draper speed and/or decrease	• 3.7.8 Draper Speed, page 56
too steep	header angle	• 3.7.5 Header Angle, page 54
Ground speed too fast	Reduce ground speed	3.7.6 Reel Speed, page 55
Crop too green	Allow to mature	_
Symptom: All Heads To One Side		
Crop leaning to one side and reel	Increase reel speed to orient crop	• 3.7.6 Reel Speed, page 55
too slow	parallel to draper slats and/or increase finger pitch aggressiveness	• 3.7.12 Reel Tine Pitch, page 67
Symptom: Uneven Windrow (Any Crop	Condition)	
Reel too low	Raise reel	3.7.10 Reel Height, page 58
Ground speed too fast for drapers,	Reduce ground speed or increase	• 3.7.6 Reel Speed, page 55
causing heads to fan out and crop to leave drapers unevenly		• 3.7.8 Draper Speed, page 56
Reel speed too fast	Reduce reel speed	3.7.6 Reel Speed, page 55

Chapter 8: Reference

8.1 Conversion Chart

Table 8.1 Conversion Chart

Quantity	SI Units (Metric)		Factor	US Customary Units (Standard)	
	Unit Name	Abbreviation		Unit Name	Abbreviation
Area	hectare	ha	x 2.4710 =	acre	acres
Flow	liters per minute	L/min	x 0.2642 =	US gallons per minute	gpm
Force	Newton	N	x 0.2248 =	pound force	lbf
Length	millimeter	mm	x 0.0394 =	inch	in.
Length	meter	m	x 3.2808 =	foot	ft.
Power	kilowatt	kW	x 1.341 =	horsepower	hp
Pressure	kilopascal	kPa	x 0.145 =	pounds per square inch	psi
Pressure	megapascal	MPa	x 145.038 =	pounds per square inch	psi
Pressure	bar (Non-SI)	bar	x 14.5038 =	pounds per square inch	psi
Torque	Newton meter	Nm	x 0.7376 =	pound feet or foot pounds	lbf·ft
Torque	Newton meter	Nm	x 8.8507 =	pound inches or inch pounds	lbf·in
Temperature	degrees Celsius	°C	(°C x 1.8) + 32 =	degrees Fahrenheit	°F
Velocity	meters per minute	m/min	x 3.2808 =	feet per minute	ft/min
Velocity	meters per second	m/s	x 3.2808 =	feet per second	ft/s
Velocity	kilometers per hour	km/h	x 0.6214 =	miles per hour	mph
Volume	liter	L	x 0.2642 =	US gallon	US gal
Volume	milliliter	mL	x 0.0338 =	ounce	oz.
Volume	cubic centimeter	cm³ or cc	x 0.061 =	cubic inch	in. ³
Weight	kilogram	kg	x 2.2046 =	pound	lb.

8.2 Torque Specifications

The following tables provide correct torque values for various bolts, cap screws, and hydraulic fittings.

- Tighten all bolts to torque values specified in charts (unless otherwise noted throughout this manual).
- Replace hardware with same strength and grade of bolt.
- Use torque value tables as a guide and periodically check tightness of bolts.
- · Understand torque categories for bolts and cap screws by using their identifying head markings.

Jam nuts

When applying torque to finished jam nuts, multiply the torque applied to regular nuts by f=0.65.

Self-tapping screws

Standard torque is to be used (NOT to be used on critical or structurally important joints).

8.2.1 Metric Bolt Specifications

Table 8.2 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut

Nominal	Torque (Nm)		Torque (lbf·ft) (*lbf·in)	
Size (A)	Min.	Max.	Min.	Max.
3-0.5	1.4	1.6	*13	*14
3.5-0.6	2.2	2.5	*20	*22
4-0.7	3.3	3.7	*29	*32
5-0.8	6.7	7.4	*59	*66
6-1.0	11.4	12.6	*101	*112
8-1.25	28	30	20	23
10-1.5	55	60	40	45
12-1.75	95	105	70	78
14-2.0	152	168	113	124
16-2.0	236	261	175	193
20-2.5	460	509	341	377
24-3.0	796	879	589	651


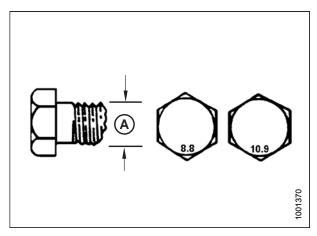


Figure 8.1: Bolt Grades

Table 8.3 Metric Class 8.8 Bolts and Class 9 Distorted Thread Nut

Nominal	Torque (Nm)		Torque (lbf	·ft) (*lbf·in)
Size (A)	Min.	Max.	Min.	Max.
3-0.5	1	1.1	*9	*10
3.5-0.6	1.5	1.7	*14	*15
4-0.7	2.3	2.5	*20	*22
5-0.8	4.5	5	*40	*45
6-1.0	7.7	8.6	*69	*76
8-1.25	18.8	20.8	*167	*185
10-1.5	37	41	28	30
12-1.75	65	72	48	53
14-2.0	104	115	77	85
16-2.0	161	178	119	132
20-2.5	314	347	233	257
24-3.0	543	600	402	444

 

Nominal Torqu		e (Nm)	Torque (lbf	·ft) (*lbf·in)
Size (A)	Min.	Max.	Min.	Max.
3-0.5	1.8	2	*18	*19
3.5-0.6	2.8	3.1	*27	*30
4-0.7	4.2	4.6	*41	*45
5-0.8	8.4	9.3	*82	*91
6-1.0	14.3	15.8	*140	*154
8-1.25	38	42	28	31
10-1.5	75	83	56	62
12-1.75	132	145	97	108
14-2.0	210	232	156	172
16-2.0	326	360	242	267
20-2.5	637	704	472	521
24-3.0	1101	1217	815	901

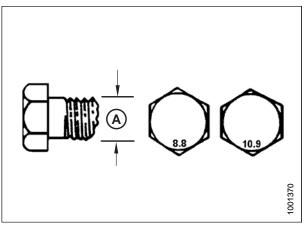


Figure 8.2: Bolt Grades

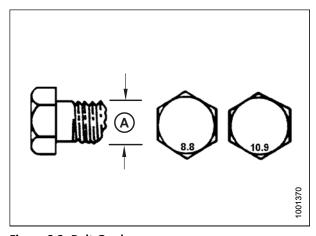


Figure 8.3: Bolt Grades

Table 8.5 Metric Class 10.9 Bolts and Class 10 Distorted Thread Nut

Nominal	Nominal Torque (Nm)		nal Torque (Nm)	e (Nm)	Torque (lbf	·ft) (*lbf·in)
Size (A)	Min.	Max.	Min.	Max.		
3-0.5	1.3	1.5	*12	*13		
3.5-0.6	2.1	2.3	*19	*21		
4-0.7	3.1	3.4	*28	*31		
5-0.8	6.3	7	*56	*62		
6-1.0	10.7	11.8	*95	*105		
8-1.25	26	29	19	21		
10-1.5	51	57	38	42		
12-1.75	90	99	66	73		
14-2.0	143	158	106	117		
16-2.0	222	246	165	182		
20-2.5	434	480	322	356		
24-3.0	750	829	556	614		

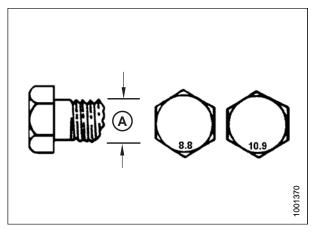


Figure 8.4: Bolt Grades

8.2.2 Metric Bolt Specifications Bolting into Cast Aluminum

Table 8.6 Metric Bolt Bolting into Cast Aluminum

	Bolt Torque			
Nominal Size (A)	8.8 (Cast Aluminum)		10 (Cast Alu	
	Nm	lbf∙ft	Nm	lbf∙ft
M3	-	-	-	1
M4	1	1	4	2.6
M5	ı	1	8	5.5
M6	9	6	12	9
M8	20	14	28	20
M10	40	28	55	40
M12	70	52	100	73
M14	_	_	_	_
M16	_	_	_	_

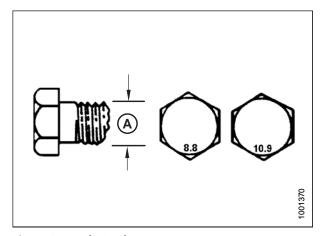


Figure 8.5: Bolt Grades

8.2.3 O-Ring Boss Hydraulic Fittings – Adjustable

- 1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
- 2. Back off lock nut (C) as far as possible. Ensure that washer (D) is loose and is pushed toward lock nut (C) as far as possible.
- 3. Check that O-ring (A) is **NOT** on threads and adjust if necessary.
- 4. Apply hydraulic system oil to O-ring (A).

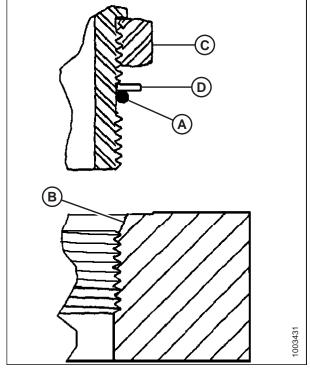


Figure 8.6: Hydraulic Fitting

- 5. Install fitting (B) into port until backup washer (D) and O-ring (A) contact part face (E).
- 6. Position angle fittings by unscrewing no more than one turn.
- 7. Turn lock nut (C) down to washer (D) and tighten to torque shown. Use two wrenches, one on fitting (B) and other on lock nut (C).
- 8. Check final condition of fitting.

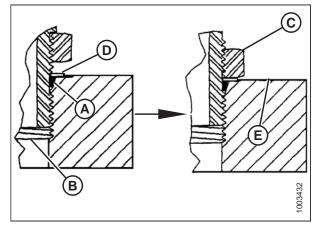


Figure 8.7: Hydraulic Fitting

REFERENCE

Table 8.7 O-Ring Boss (ORB) Hydraulic Fittings – Adjustable

SAE Dash Size	- La: (:)	Torque	Value ⁴⁷
	Thread Size (in.)	Nm	lbf·ft (*lbf·in)
-2	5/16–24	6–7	*53–62
-3	3/8–24	12–13	*106–115
-4	7/16–20	19–21	14–15
-5	1/2–20	21–33	15–24
-6	9/16–18	26–29	19–21
-8	3/4–16	46–50	34–37
-10	7/8–14	75–82	55–60
-12	1 1/16–12	120–132	88–97
-14	1 3/8–12	153–168	113–124
-16	1 5/16–12	176–193	130–142
-20	1 5/8–12	221–243	163–179
-24	1 7/8–12	270–298	199–220
-32	2 1/2–12	332–365	245–269

215018 274 Revision A

^{47.} Torque values shown are based on lubricated connections as in reassembly.

8.2.4 O-Ring Boss Hydraulic Fittings – Non-Adjustable

- 1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
- 2. Check that O-ring (A) is **NOT** on threads and adjust if necessary.
- 3. Apply hydraulic system oil to O-ring.
- 4. Install fitting (C) into port until fitting is hand-tight.
- 5. Torque fitting (C) according to values in Table 8.8, page 275.
- 6. Check final condition of fitting.

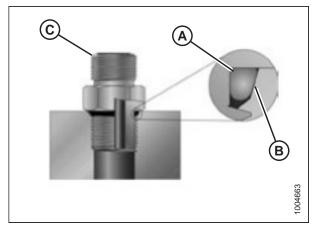


Figure 8.8: Hydraulic Fitting

Table 8.8 O-Ring Boss (ORB) Hydraulic Fittings - Non-Adjustable

645 D. J. C.	-1 10 (1)	Torque Value ⁴⁸	
SAE Dash Size	Thread Size (in.)	Nm	lbf·ft (*lbf·in)
-2	5/16–24	6–7	*53–62
-3	3/8–24	12–13	*106–115
-4	7/16–20	19–21	14–15
-5	1/2–20	21–33	15–24
-6	9/16–18	26–29	19–21
-8	3/4–16	46–50	34–37
-10	7/8–14	75–82	55–60
-12	1 1/16–12	120–132	88–97
-14	1 3/8–12	153–168	113–124
-16	1 5/16–12	176–193	130–142
-20	1 5/8–12	221–243	163–179
-24	1 7/8–12	270–298	199–220
-32	2 1/2–12	332–365	245–269

215018 275 Revision A

^{48.} Torque values shown are based on lubricated connections as in reassembly.

8.2.5 O-Ring Face Seal Hydraulic Fittings

 Check components to ensure that sealing surfaces and fitting threads are free of burrs, nicks, scratches, or any foreign material.

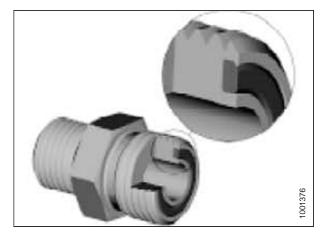


Figure 8.9: Hydraulic Fitting

- 2. Apply hydraulic system oil to O-ring (B).
- 3. Align tube or hose assembly so that flat face of sleeve (A) or (C) comes in full contact with O-ring (B).
- 4. Thread tube or hose nut (D) until hand-tight. The nut should turn freely until it is bottomed out.
- 5. Torque fittings according to values in Table 8.9, page 276.

NOTE:

If applicable, hold hex on fitting body (E) to prevent rotation of fitting body and hose when tightening fitting nut (D).

- 6. Use three wrenches when assembling unions or joining two hoses together.
- Figure 8.10: Hydraulic Fitting

7. Check final condition of fitting.

Table 8.9 O-Ring Face Seal (ORFS) Hydraulic Fittings

SAE Dash Size	Thursd Cine (in)	Thread Size (in.) Tube O.D. (in.)	Torque Value ⁴⁹		
SAE Dash Size	inread Size (in.)		Nm	lbf∙ft	
-3	Note ⁵⁰	3/16	_	_	
-4	9/16	1/4	25–28	18–21	
-5	Note ⁵⁰	5/16	_	_	
-6	11/16	3/8	40–44	29–32	
-8	13/16	1/2	55–61	41–45	
-10	1	5/8	80–88	59–65	
-12	1 3/16	3/4	115–127	85–94	
-14	Note ⁵⁰	7/8	_	_	

^{49.} Torque values and angles shown are based on lubricated connection as in reassembly.

^{50.} O-ring face seal type end not defined for this tube size.

Table 8.9 O-Ring Face Seal (ORFS) Hydraulic Fittings (continued)

SAE Dash Size	Thread Size /in)	Tube O.D. (in.)	Torque Value ⁵¹		
SAE Dash Size	Thread Size (in.)		Nm	lbf∙ft	
-16	1 7/16	1	150–165	111–122	
-20	1 11/16	1 1/4	205–226	151–167	
-24	1–2	1 1/2	315–347	232–256	
-32	2 1/2	2	510–561	376–414	

8.2.6 Tapered Pipe Thread Fittings

Assemble pipe fittings as follows:

- 1. Check components to ensure that fitting and port threads are free of burrs, nicks, scratches, or any form of contamination.
- 2. Apply pipe thread sealant (paste type) to external pipe threads.
- 3. Thread fitting into port until hand-tight.
- 4. Torque connector to appropriate torque angle. The turns from finger tight (TFFT) and flats from finger tight (FFFT) values are shown in Table 8.10, page 277. Make sure that tube end of a shaped connector (typically 45° or 90°) is aligned to receive incoming tube or hose assembly. Always finish alignment of fitting in tightening direction. Never back off (loosen) pipe threaded connectors to achieve alignment.
- 5. Clean all residue and any excess thread conditioner with appropriate cleaner.
- 6. Assess final condition of fitting. Pay special attention to possibility of cracks to port opening.
- 7. Mark final position of fitting. If a fitting leaks, disassemble fitting and check for damage.

NOTE:

Overtorque failure of fittings may not be evident until fittings are disassembled.

Table 8.10 Hydraulic Fitting Pipe Thread

Tapered Pipe Thread Size	Recommended TFFT	Recommended FFFT
1/8–27	2–3	12–18
1/4–18	2–3	12–18
3/8–18	2–3	12–18
1/2–14	2–3	12–18
3/4–14	1.5–2.5	12–18
1–11 1/2	1.5–2.5	9–15
1 1/4–11 1/2	1.5–2.5	9–15
1 1/2–11 1/2	1.5–2.5	9–15
2–11 1/2	1.5–2.5	9–15

^{51.} Torque values and angles shown are based on lubricated connection as in reassembly.

REFERENCE

8.3 Unloading and Assembly

Refer to the instructions for your specific header for unloading, assembly, and setup procedures that are included with your shipment. The instruction part numbers are shown in the following table:

Shipping Destination	Header Description	MacDon Instruction Part Number
North America	D1 Series Draper Header for M Series Windrowers	MD #214769
Export (anywhere other than North America)	D1 Series Draper Header for M Series Windrowers	MD #214770

Index

A	options
API	crop divider rods75
definition	removing
ASTM	crop dividers71
definition	installing on header with latch option72
attaching to windrower	installing on header without latch option73
axle bolts	removing from header with latch option71
dale poils	removing from header without latch option
В	cutting height49
5	cutting off the ground49
bearings	cutting on the ground52
draper drive roller191–192	options
draper idler rollers 188	knife cutout cover
beater bars	wearplates243
installing92	unplugging90
removing91	cutting off the ground
belts	adjusting stabilizer wheels51
knife drive belts 161	adjusting stabilizer/slow speed transport wheels 49
adjusting belt tracking (drive pulley) 174	cutting on the ground52
timed drive belts 174	
10.7 m (35 ft.) and smaller DK 164	_
adjusting drive belt tracking (box pulley) 175	D
checking belt tracking	daily start-up checks
installing belt	daily start-up criecks
installing timed v-belt 165	
removing belt 165	decks
removing timed v-belt	shifting hydraulically
tensioning belt168	shifting manually82
untimed drive belts	side drapers
installing belt 162	adjusting deck height
removing belt 161	definition of terms
tensioning belt	delivery openings
bolts	changing on header with hydraulic deck shift
definition23	changing on header with manual deck shift
break-in inspections	hydraulic deck shift chain tension
break-in periods	detaching from windrower
F	divider latch kits
	divider rods
C	removing
	DK
cams	definition
adjusting70	double draper drives
center-links	double reels
definition23	centering the reel
centering the reel	double windrow attachment 84, 252
double reel 203	DR
single reel 204	definition
CGVW	draper deflectors
definition23	narrow
component identification28	installing 197
conversion chart	removing
crop delivery	wide 250

installing	194	fingers	
removing	193	installing plastic fingers	208
draper extension kits	252	removing plastic fingers	206
drapers			
adjusting			
tension	180	G	
tracking	182		
draper roller bearings		glossary	23
inspecting	186	greasing	
drive roller bearing		See also lubrication and servicing	
replacing	192	greasing procedure	
drive roller bearings		ground speeds	55
replacing	191	guards	
idler roller bearings		knife guards	
replacing	188	replacing pointed guards	
idler rollers		replacing stub guards	
installing	189	stub guard conversion kit	244
removing		GVW	
side draper roller	100	definition	23
installing	102		
removing			
		Н	
side drapers		la con a canaditai a cana	252
installing		hay conditioners	
maintaining rollers		haying tips	8/
speed	. 56	header settings	
drive rollers		header angle	- 4
side draper drive roller	400	controlling	
installing		header float	
removing	189	levelling	
drives		recommended settings	41
knife drive153, See knife dr	ives	headers	
		attachments	
_		definition	23
E		header angle	
electrical system		adjustment range	
maintenance	135	options	246
replacing light bulbs		safety props	30
end of season service		setup	41
endshields		transporting	
adjusting		towing the header	95
		hex keys	
checking		definition	23
closing		hold-downs	
installing		checking hold-downs	148
opening		pointed guard	
removing	. 34	adjusting hold-downs	149
engine-forward		stub guard	
definition	. 23	adjusting hold-downs	150
		hydraulic deck shifts	
=		package	
F		hydraulics	233
FFFT		checking	122
definition	23	fittings	123
	. 23	9	פדנ
finger tight	าว	O-ring boss (ORB) adjustable	
definition	. 23	O-ring boss (ORB) non-adjustable	2/5

O-ring face seal (ORFS)	checking hold-downs148
tapered pipe thread fittings 277	stub guard
hoses and lines	adjusting hold-downs 150
hydraulic safety6	installing knife 139
	knife sections
_	replacing 130
	knife speed
idler rollers	checking knife speed5
	knifehead bearings
drapers	installing 138
installing	removing 138
removing	knifehead shields 153
replacing bearing	installing 153
inspections break-in	removing knife 133
introductioniii	spare knife location 140
introduction iii	speed5
K	1
knife drive belts	_
timed drive belts	lift cylinders
10.7 m (35 ft.) and smaller DK	safety props 30
adjusting belt tracking (drive pulley)	light bulbs
checking belt tracking (unive pulley)	replacing
installing belt	lodged crop reel finger kits240
installing timed v-belt	lubrication and servicing124
removing belt	reel drive chain
removing timed v-belt	double reel 133
tensioning belt	single reel133
untimed belts	
untimed drive belts	
	M
installing belt	M. Carias Windrawar
removing belt	M Series Windrower
tensioning belt	definition
knife drive boxes	maintenance and servicing
changing oil	electrical system
installing box	end of season service
knife drive box pulley	fluids and lubricants
adjusting drive belt tracking	installing a sealed bearing
installing pulley	maintenance specifications
removing pulley	preparing machine for servicing
mounting bolts	preseason/annual service
removing box	requirements
knife drives	safety
knives	schedule/record
knife guards	service intervals
adjusting 141	storage110
checking	manual deck shifts82
replacing pointed guards	metric bolts
replacing stub guards	torque specifications
knifehead shields 151	model numbers
installing 151	records
knives	motors
adjusting double-knife timing	reel drive
hold-downs	installing 233

removing	233	reel drive sprocket	55
replacing	233	reels	239
mounting bolts		lodged crop reel finger kits	240
knife drive box	153	multi-crop rapid reel conversion kit	
multi-crop rapid reel conversion kits	65, 239	reel arm extension kit	
	•	North American-configured headers	239
		reel endshield kit	
N		tine tube reinforcing kit	
		rice divider rods	
NPT		transport systems	
definition	23	upper cross auger	
		ORB	
•		definition	23
0		owner responsibilities	
oils			
knife drive box			
changing oil	160	Р	
recommended fluids and lubricants			
operating variables		PR15 pick-up reels	
operations		adjusting cam	
operator responsibilities		centering	
options		single reel	204
crop delivery		centering the reel	
		double reel	203
double draper drive (DDD) kitdouble windrow attachment (DWA)		double-reel drive	
•		U-joint	
draper deflector (wide)		installing double-reel U-joint	232
draper extension kit		removing double-reel U-joint	231
HC10 hay conditioner		endshield	221
swath forming rods (center delivery)		replacing endshield support	223
upper cross auger (UCA)		replacing reel endshield	221
cutterbars		fore-aft position	
cutterbar wearplates		adjusting	
knife cutout cover		repositioning cylinders	
rock retarder kit		double reel	62
stub guard conversion kit		single reel	
vertical knife mount kit		with multi-crop rapid reel option kit	
vertical knife plumbing kit	245	frown	
header	246	adjusting	
backsheet extension kit	248	height	
divider latch kits	246	options	
rice divider rods	251	plastic fingers	233
skid shoes	248	installing	208
wheels		removing	
secondary stabilizer wheel	247	reel clearance	
stabilizer wheels	246		
stabilizer wheels and slow speed transpo	rt	adjusting	
package	247	measuring	199
hydraulic deck shift package		reel drive	
knifehead shields		cover	
PR15 pick-up reels		installing	
reel endshield kit	241	removing	
tine tube reel conversion kits		replacing	224
reel arms	∠-₹⊥	drive chain	
reel arm extension kit		adjusting tension	
North American-configured headers	220	loosening	
North American-comigured headers	233	lubricating double reel	133

lubricating single reel 131	centering the reel	
replacing chain on double-reel drive 234	double reel	203
replacing chain on single-reel drive 236	reel drive	
tightening 227	replacing double-reel U-joint	231
motors	reference	
installing233	torque specifications	270
removing 233	references	
replacing 233	unloading and assembly	278
replacing sprocket	rice divider rods	
speed55	rock retarder kits	-
sprocket	roller chains	
installing 230	installing	118
optional 55	rpm	
removing 229	definition	23
reel safety props31		
disengaging32		
engaging31	S	
reel setting68	_	
reel tine	SAE	
reel tine pitch	definition	23
settings	safety	
recommended reel settings	daily start-up checks	37
steel tines	decal locations	9
	general safety	3
installing	header safety props	30
removing	hydraulic safety	.
tine tube bushings	maintenance safety	
installing on 5-, 6- or 9-bat reels	operational	30
removing from 5-, 6-, or 9-bat reels	reel safety props	
preseason/annual service	disengaging	
product overview23	engaging	
pulleys	safety alert symbols	
adjusting drive belt tracking (drive pulley) 174	safety sign decals	
knife drive box pulley	installing decals	
installing pulley 157	interpreting decals	
removing pulley156	signal words	
	screws	
B	definition	2:
R	SDD	
recommended fluids and lubricants	definition	2:
reel arm extension kit	sealed bearings	20
North American-configured headers	installing	119
reel drives	serial numbers	110
double-reel drive	locations	
U-joint		
	recordsservice intervals	
removing double-reel U-joint231–232		124
repairing reel drive	servicing, See maintenance and servicing	27/
reel drive cover	setting up the header	2/8
installing reel drive cover	settings	
removing reel drive cover	attachments	
reel endshields	reel	
kit	shutdown procedures	39
reels	side drapers	
See also PR15 pick-up reels	draper roller maintenance	
centering	removing side drapers	
single reel 204	skid shoes	52

See also cutting on the ground	definition	23
adjusting inner skid shoes53	torque specifications	270
adjusting outer skid shoes53	axle bolts	
slow speed transport package247	metric bolt specifications	270
soft joints	bolting into cast aluminum	
definition23	O-ring boss (ORB) hydraulic fittings – adjustable	
spare knives	O-ring boss (ORB) hydraulic fittings – non-	
specifications	adjustable	275
fluids and lubricants	O-ring face seal (ORFS) fittings	
maintenance	tapered pipe thread fittings	
product specifications	torque-tension	2,,
torque specifications	definition	23
speed	tow-bars	23
draper speed	attaching	107
ground speed55	removing	
=	•	
knife speed57	storing	
spm 22	towing the header	
definition23	attaching header to towing vehicle	
sprockets	converting from field to transport	
adjusting reel drive chain tension	converting from transport to field	
installing230	moving front (left) wheels to field position	
removing 229	moving front (left) wheels to transport position	
replacing reel drive sprocket 229	moving rear (right) wheels to field position	
stabilizer wheels246–247	moving rear (right) wheels to transport position	104
adjusting51	tow-bar	96
secondary stabilizer wheel247	transport systems	
stabilizer/slow speed transport wheels	axle bolt torque	237
adjusting49	tire inflation/pressures	238
start-up	transporting header	94
daily checks37	wheel bolt torque	237
steel tines	transporting on windrower	94
installing206	troubleshooting	255
removing	crop loss at cutterbar	255
stub guard conversion kits	cutting action and knife components	
swath forming rods	cutting edible beans	
center delivery (option)252	header and drapers	
	reel delivery	
	windrow formation	
T	trucks	
	definition	23
TFFT		
definition23		
tine tubes	U	
reel conversion kits		
tine tube reinforcing kit	U-joints	
tines	reel drive	
reel tine pitch67	installing double-reel U-joint	
reel tines	removing double-reel U-joint	
steel tines	replacing	231
installing 206	UCA	
removing 204	definition	23
tine tube bushings209	unloading and assembly	278
tire inflation/pressures	upper cross augers	91
torque	installing beater bars	92
definition23	removing beater bars	91
torque angles	upper cross augers (option)	251

1	,
١	/

vertical knife	
plumbing kit	245
vertical knife mount kit	244
W	
washers	
definition	23
wheels and tires	
stabilizer wheels (option)	246
stabilizer wheels and slow speed transport pack	age
(option)	247
tire inflation/pressures	238
wheel bolt torques	237
wheels	
secondary stabilizer wheel (option)	247
windrowers	
attaching to header	111
controls	40
definition	23
detaching from header	114
transporting header	94
windrows	
chemical drying agents	88
configuration	88
curing	87
delivery opening	77
double windrowing	81
driving on	
haying tips	87
raking and tedding	88
topsoil moisture	87
types	85
weather and tonography	87

Recommended Fluids and Lubricants

Ensure your machine operates at top efficiency by using clean fluids and lubricants only.

- Use clean containers to handle all fluids and lubricants.
- Store fluids and lubricants in an area protected from dust, moisture, and other contaminants.

Lubricant	Specification	Description	Use	Capacities
Grease	SAE multi- purpose	High temperature extreme pressure (EP2) performance with 1% max. Molybdenum disulphide (NLGI grade 2) Lithium base	As required unless otherwise specified	-
Gear lubricant	SAE 85W-140	API service class GL-5	Knife drive box	2.2 liters (2.3 quarts)
Gear lubricant	SAE 85W-140	API service class GL-5	Main drive gearbox	2.5 liters (2.6 quarts)



MacDon Industries Ltd.

680 Moray Street Winnipeg, Manitoba Canada R3J 3S3 t. (204) 885-5590 f. (204) 832-7749

MacDon, Inc.

10708 N. Pomona Avenue Kansas City, Missouri United States 64153-1924 t. (816) 891-7313 f. (816) 891-7323

MacDon Australia Pty. Ltd.

A.C.N. 079 393 721 P.O. Box 103 Somerton, Victoria, Australia Australia 3061 t.+61 3 8301 1911 f.+61 3 8301 1912

MacDon Brasil Agribusiness Ltda.

Rua Grã Nicco, 113, sala 404, B. 04 Mossunguê, Curitiba, Paraná CEP 81200-200 Brasil t. +55 (41) 2101-1713 f. +55 (41) 2101-1699

LLC MacDon Russia Ltd.

123317 Moscow, Russia 10 Presnenskaya nab, Block C Floor 5, Office No. 534, Regus Business Centre t. +7 495 775 6971 f. +7 495 967 7600

MacDon Europe GmbH

Hagenauer Strasse 59 65203 Wiesbaden Germany

CUSTOMERS **MacDon.com**

DEALERS

Portal.MacDon.com

Trademarks of products are the marks of their respective manufacturers and/or distributors.

Printed in Canada