



**MacDon®**

# **FD1-Series FlexDraper® Combine Header with FM100 Float Module**

**Unloading and Assembly Instructions (North America)**

147833 Revision A


2016 Model Year

Original Instruction

*Featuring MacDon FLEX-FLOAT Technology™*

*The harvesting specialists.*

## FD1-Series FlexDraper® Header for Combines

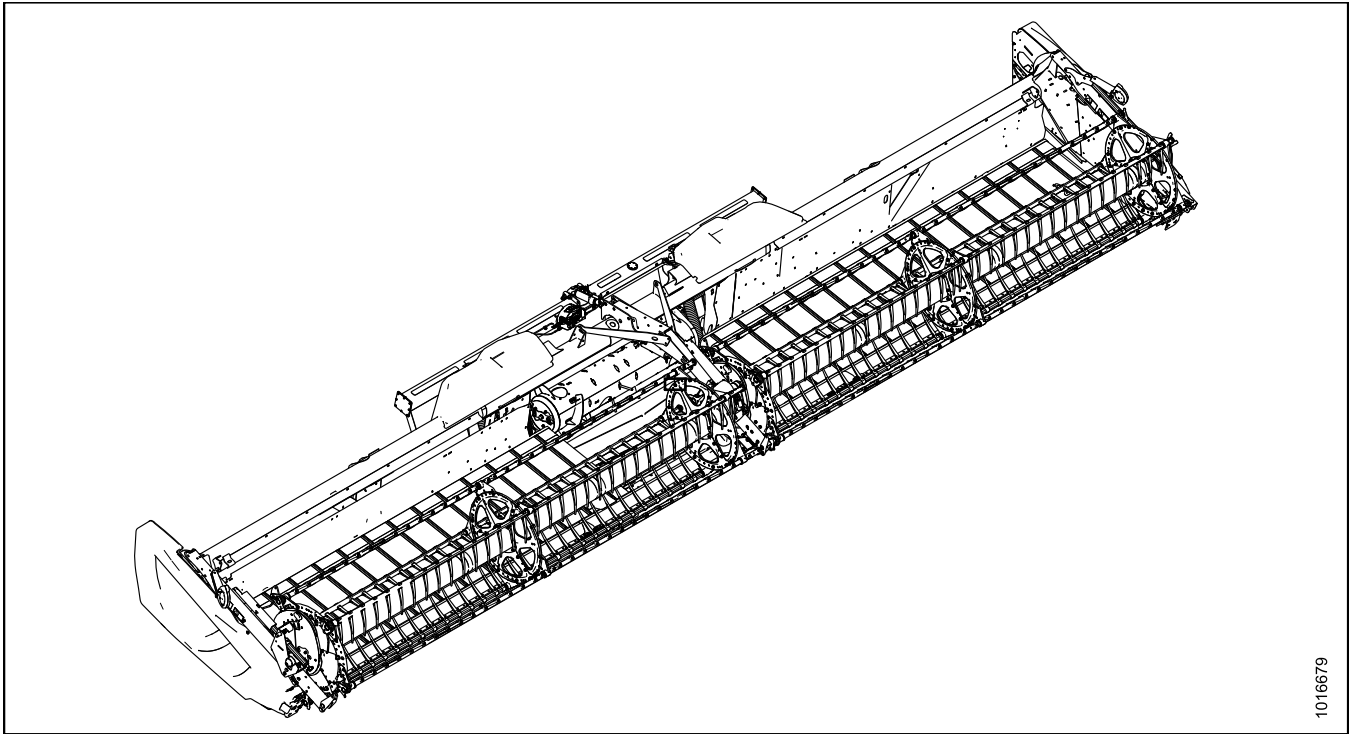

1016679

Published: March 2016



# Introduction

This instruction manual describes the unloading, setup, and predelivery requirements for the MacDon FD1-Series FlexDraper® Combine Header with FM100 Float Module.

To ensure the best performance of this product and the safety of your customers, carefully follow the unload and assembly procedure from the beginning through to completion.

**Carefully read all the material provided before attempting to unload, assemble, or use the machine.**

Retain this instruction for future reference.



## TABLE OF CONTENTS

Introduction .....	i
<b>1 Safety .....</b>	<b>1</b>
1.1 Signal Words.....	1
1.2 General Safety .....	2
1.3 Battery Safety.....	4
1.4 Safety Signs.....	5
<b>2 Unloading Header and Float Module .....</b>	<b>7</b>
2.1 Unloading Header and Float Module from Trailer .....	7
2.2 Lowering Header .....	9
2.3 Removing Shipping Stands .....	12
<b>3 Assembling Header and Float Module.....</b>	<b>17</b>
3.1 Attaching Reel Lift Cylinders.....	17
3.2 Attaching Reel Height Sensor.....	25
3.3 Setting up Float Module .....	26
3.3.1 Installing Filler Cap.....	26
3.3.2 Removing Auger Flighting Extensions.....	28
3.3.3 Removing Stripper Bars.....	29
3.3.4 Replacing CR Feeder Deflectors .....	29
<b>4 Attaching Header to Combine .....</b>	<b>31</b>
4.1 Challenger, Gleaner, and Massey Ferguson Combines .....	31
4.1.1 Installing Reel Fore-Aft/Header Tilt Selector Switch and Harness .....	31
4.1.2 Attaching Header to a Challenger, Gleaner, or Massey Ferguson Combine .....	34
4.2 Case IH Combines.....	39
4.2.1 Attaching Header to Case IH Combine .....	39
4.3 John Deere Combines .....	45
4.3.1 Installing Reel Fore-Aft/Header Tilt Switch: S and T Series Combines .....	45
4.3.2 Installing Reel Fore-Aft/Header Tilt Switch: 60 and 70 Series Combines .....	49
4.3.3 Attaching Header to John Deere Combine .....	53
4.4 Lexion Combines.....	57
4.4.1 Installing Reel Fore-Aft/Header Tilt Selector Switch and Harness: 500 Series .....	57
4.4.2 Installing Reel Fore-Aft/Header Tilt Selector Switch and Harness: 700 Series .....	64
4.4.3 Attaching Header to Lexion Combine.....	67
4.5 New Holland Combines.....	74
4.5.1 Attaching Header to New Holland CR/CX Combine .....	74
<b>5 Completing the Header Assembly.....</b>	<b>79</b>
5.1 Attaching Cam Arms .....	79
5.2 Repositioning Gearbox.....	81
5.3 Removing Shipping Supports .....	83
5.4 Positioning Transport Lights .....	84
5.5 Crop Dividers .....	85
5.5.1 Removing Crop Dividers from Storage.....	85
5.5.2 Opening Endshields .....	85
5.5.3 Installing Crop Divider without Latch Option .....	86
5.5.4 Installing Crop Divider with Latch Option .....	88
5.5.5 Closing Endshields.....	89
5.5.6 Installing Crop Divider Rods.....	89
5.6 Installing Options .....	90
<b>6 Performing Predelivery Checks.....</b>	<b>91</b>
6.1 Checking Tire Pressure: Transport and Stabilizer Wheels .....	91
6.2 Checking Wheel Bolt Torque.....	92
6.3 Checking Knife Drive Box.....	93
6.4 Checking Oil Level in Header Drive Gearbox .....	95

## TABLE OF CONTENTS

6.5	Checking Oil Level in Hydraulic Reservoir .....	96
6.6	Checking and Adjusting Knife Drive Belt Tension .....	97
6.7	Checking Knife Hold-Downs .....	98
6.7.1	Adjusting Hold-Downs with Pointed Guards .....	98
6.7.2	Adjusting Hold-Downs with Stub Guards .....	99
6.8	Centering the Reel .....	101
6.9	Checking and Adjusting Header Float .....	102
6.10	Checking and Adjusting Header Wing Balance .....	108
6.10.1	Checking Wing Balance .....	108
6.10.2	Adjusting Wing Balance .....	113
6.11	Measuring and Adjusting Reel Clearance to Cutterbar .....	116
6.11.1	Measuring Reel Clearance .....	116
6.11.2	Adjusting Reel Clearance .....	118
6.12	Adjusting Auger to Pan Clearance .....	120
6.13	Adjusting Draper Tension .....	123
6.14	Checking and Adjusting Draper Seal .....	125
6.15	Lubricating the Header .....	127
6.15.1	Greasing Procedure .....	127
6.15.2	Lubrication Points .....	129
6.16	Checking and Adjusting Endshields .....	136
6.17	Checking Manuals .....	139
<b>7</b>	<b>Setting up Auto Header Height Control .....</b>	<b>141</b>
7.1	Auto Header Height Control (AHHC) .....	141
7.1.1	Sensor Output Voltage Range – Combine Requirements .....	143
	Manually Checking Voltage Range (One-Sensor System) .....	143
	Manually Checking Voltage Range (Two-Sensor System) .....	146
	Adjusting Voltage Limits (One-Sensor System) .....	148
	Adjusting Voltage Limits (Two-Sensor System) .....	149
7.1.2	Case IH 2500 and 5088/6088/7088 Combines .....	151
	Calibrating the Auto Header Height Control (Case IH 2500 and 5088/6088/7088) .....	151
	Setting the Sensitivity of the Auto Header Height (Case IH 2500 and 5088/6088/7088) .....	152
7.1.3	Case IH 5130/6130/7130, 7010/8010, 7120/8120/9120, and 7230/8230/9230 Combines .....	153
	Checking Voltage Range from the Combine Cab (Case 8010) .....	153
	Checking Voltage Range from the Combine Cab (Case IH 5130/6130/7130, 7010/8010; 7120/8120/9120; 7230/8230/9230) .....	156
	Calibrating the Auto Header Height Control (Case IH 5130/6130/7130, 7010/8010; 7120/8120/9120; 7230/8230/9230) .....	159
	Calibrating the Auto Header Height Control (Case Combines with Version 28.00 or Higher Software) .....	161
	Setting Preset Cutting Height (Case 7010/8010, 7120/8120/9120, 7230/8230/9230) .....	163
7.1.4	Challenger and Massey Ferguson Combines .....	165
	Checking Voltage Range from the Combine Cab (Challenger and Massey Ferguson) .....	165
	Engaging the Auto Header Height Control (Challenger and Massey Ferguson) .....	167
	Calibrating the Auto Header Height Control (Challenger and Massey Ferguson) .....	167
	Adjusting the Header Height (Challenger and Massey Ferguson) .....	169
	Adjusting the Header Raise/Lower Rate (Challenger and Massey Ferguson) .....	170
	Setting the Sensitivity of the Auto Header Height Control (Challenger and Massey Ferguson) .....	171
7.1.5	Gleaner R65/R66/R75/R76 and S Series Combines .....	173
	Checking Voltage Range from the Combine Cab (Gleaner R65/R66/R75/R76 and S Series) .....	173

## TABLE OF CONTENTS

	Engaging the Auto Header Height Control (Gleaner R65/R66/R75/R76 and S Series).....	174
	Calibrating the Auto Header Height Control (Gleaner R65/R66/R75/R76 and S Series).....	176
	Turning off the Accumulator (Gleaner R65/R66/R75/R76 and S Series).....	177
	Adjusting the Header Raise/Lower Rate (Gleaner R65/R66/R75/R76 and S Series) .....	177
	Adjusting Ground Pressure (Gleaner R65/R66/R75/R76 and S Series) .....	178
	Adjusting the Sensitivity of the Auto Header Height Control (Gleaner R65/R66/R75/R76 and S Series).....	179
	Troubleshooting Alarms and Diagnostic Faults (Gleaner R65/R66/R75/R76 and S Series).....	180
7.1.6	John Deere 60 Series Combines.....	183
	Checking Voltage Range from the Combine Cab (John Deere 60 Series) .....	183
	Calibrating the Auto Header Height Control (John Deere 60 Series).....	185
	Turning the Accumulator Off (John Deere 60 Series).....	186
	Setting the Sensing Grain Header Height to 50 (John Deere 60 Series).....	187
	Setting the Sensitivity of the Auto Header Height Control (John Deere 60 Series) .....	188
	Adjusting the Threshold for the Drop Rate Valve (John Deere 60 Series).....	189
7.1.7	John Deere 70 Series Combines.....	191
	Checking Voltage Range from the Combine Cab (John Deere 70 Series) .....	191
	Calibrating Feeder House Speed (John Deere 70 Series).....	194
	Calibrating the Auto Header Height Control (John Deere 70 Series).....	194
	Setting the Sensitivity of the Auto Header Height Control (John Deere 70 Series) .....	195
	Adjusting the Manual Header Raise/Lower Rate (John Deere 70 Series).....	196
7.1.8	John Deere S and T Series Combines.....	198
	Checking Voltage Range from the Combine Cab (John Deere S and T Series) .....	198
	Calibrating the Auto Header Height Control (John Deere S and T Series).....	201
	Setting the Sensitivity of the Auto Header Height Control (John Deere S and T Series).....	202
	Adjusting the Manual Header Raise/Lower Rate (John Deere S and T Series).....	203
	Calibrating Feeder House Fore/Aft Tilt Range (John Deere S and T Series).....	205
7.1.9	Lexion 500 Series Combines .....	208
	Calibrating the Auto Header Height Control (Lexion 500 Series) .....	208
	Setting Cutting Height (Lexion 500 Series) .....	210
	Setting the Sensitivity of the Auto Header Height Control (Lexion 500 Series).....	212
	Adjusting Auto Reel Speed (Lexion 500 Series).....	214
7.1.10	Lexion 600 and 700 Series Combines.....	217
	Calibrating the Auto Header Height Control (Lexion 600 and 700 Series) .....	217
	Setting Cutting Height (Lexion 600 and 700 Series) .....	219
	Setting the Sensitivity of the Auto Header Height Control (Lexion 600 and 700 Series) .....	219
	Adjusting Auto Reel Speed (Lexion 600 and 700 Series).....	221
7.1.11	New Holland Combines .....	223
	Checking Voltage Range from the Combine Cab (New Holland) .....	223
	Engaging the Auto Header Height Control (New Holland CR/CX Series) .....	225
	Calibrating the Auto Header Height Control (New Holland CR/CX Series).....	226
	Adjusting Header Raise Rate (New Holland CR/CX Series).....	228
	Setting the Header Lower Rate to 50 (New Holland CR/CX Series).....	229
	Setting the Sensitivity of the Auto Header Height Control to 200 (New Holland CR/CX Series).....	229
7.1.12	New Holland Combines (CR Series—Model Year 2015 and Later).....	233
	Checking Voltage Range from the Combine Cab (New Holland CR Series) .....	233
	Engaging the Auto Header Height Control (New Holland CR Series).....	236
	Calibrating the Auto Header Height Control (New Holland CR Series) .....	239

## TABLE OF CONTENTS

---

Setting Auto Height (New Holland CR Series).....	241
Setting Maximum Work Height (New Holland CR Series).....	242
7.1.13 Sensor Operation .....	243
<b>8 Setting up Reel Height Sensor .....</b>	<b>245</b>
8.1 Manually Checking Voltage Range.....	245
8.2 Adjusting Reel Height Sensor .....	246
<b>9 Running up Header .....</b>	<b>249</b>
9.1 Performing Post Run-Up Adjustments .....	251
9.1.1 Adjusting Knife.....	251
9.1.2 Adjusting Knife Speed .....	253
<b>10 Reference .....</b>	<b>255</b>
10.1 Torque Specifications .....	255
10.1.1 Metric Bolt Specifications .....	255
10.1.2 Metric Bolt Specifications Bolting into Cast Aluminum .....	258
10.1.3 Flare-Type Hydraulic Fittings.....	258
10.1.4 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable).....	260
10.1.5 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable) .....	262
10.1.6 O-Ring Face Seal (ORFS) Hydraulic Fittings.....	263
10.2 Lifting Equipment Requirements .....	265
10.3 Conversion Chart.....	266
10.4 Definitions .....	267
Predelivery Checklist .....	269

# 1 Safety

## 1.1 Signal Words

Three signal words, *DANGER*, *WARNING*, and *CAUTION*, are used to alert you to hazardous situations. The appropriate signal word for each situation has been selected using the following guidelines:



### **DANGER**

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



### **WARNING**

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.



### **CAUTION**

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

## 1.2 General Safety

### CAUTION

The following are general farm safety precautions that should be part of your operating procedure for all types of machinery.

Protect yourself.

- When assembling, operating, and servicing machinery, wear all the protective clothing and personal safety devices that **could** be necessary for the job at hand. Don't take chances. You may need the following:
  - Hard hat
  - Protective footwear with slip resistant soles
  - Protective glasses or goggles
  - Heavy gloves
  - Wet weather gear
  - Respirator or filter mask
- Be aware that exposure to loud noises can cause hearing impairment or loss. Wear suitable hearing protection devices such as ear muffs or ear plugs to help protect against objectionable or loud noises.

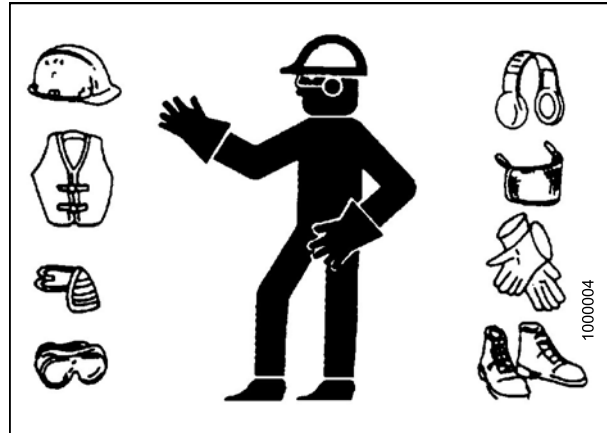


Figure 1.1: Safety Equipment



Figure 1.2: Safety Equipment

- Provide a first aid kit for use in case of emergencies.
- Keep a fire extinguisher on the machine. Be sure the fire extinguisher is properly maintained. Be familiar with its proper use.
- Keep young children away from the machinery at all times.
- Be aware that accidents often happen when the Operator is tired or in a hurry. Take the time to consider the safest way. Never ignore the warning signs of fatigue.

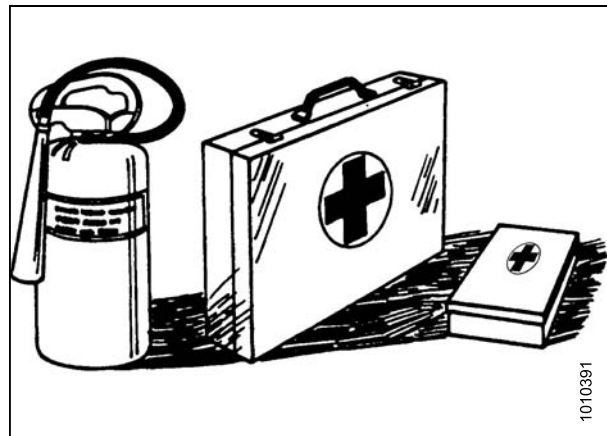


Figure 1.3: Safety Equipment



## SAFETY

- Wear close-fitting clothing and cover long hair. Never wear dangling items such as scarves or bracelets.
- Keep all shields in place. Never alter or remove safety equipment. Make sure driveline guards can rotate independently of the shaft and can telescope freely.
- Use only service and repair parts made or approved by the equipment manufacturer. Substituted parts may not meet strength, design, or safety requirements.



Figure 1.4: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. Never attempt to clear obstructions or objects from a machine while the engine is running.
- Do **NOT** modify the machine. Non-authorized modifications may impair machine function and/or safety. It may also shorten the machine's life.
- To avoid bodily injury or death from unexpected startup of machine, always shut down the engine and remove the key from ignition before leaving operator's seat for any reason.

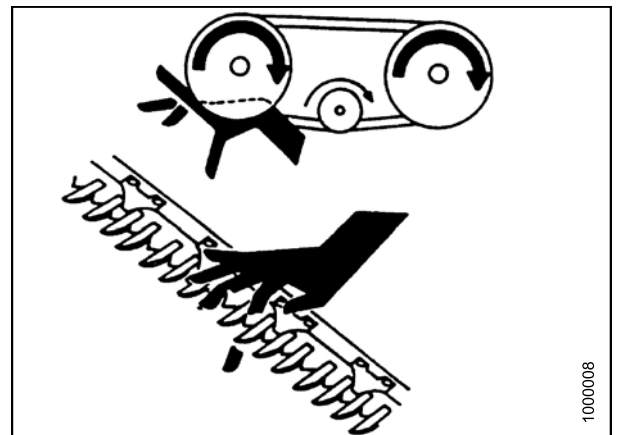


Figure 1.5: Safety around Equipment

- Keep the service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
- Keep work area well lit.
- Keep machinery clean. Straw and chaff on a hot engine is a fire hazard. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before storage.
- Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover sharp or extending components to prevent injury from accidental contact.



Figure 1.6: Safety around Equipment

## 1.3 Battery Safety

### WARNING

- Keep all sparks and flames away from the batteries, as a gas given off by electrolyte is explosive.
- Ventilate when charging in enclosed space.



Figure 1.7: Safety around Batteries

### WARNING

- Wear safety glasses when working near batteries.
- Do NOT tip batteries more than 45° to avoid electrolyte loss.
- Battery electrolyte causes severe burns. Avoid contact with skin, eyes, or clothing.
- Electrolyte splashed into the eyes is extremely dangerous. Should this occur, force the eye open, and flood with cool, clean water for five minutes. Call a doctor immediately.
- If electrolyte is spilled or splashed on clothing or the body, neutralize it immediately with a solution of baking soda and water, then rinse with clear water.

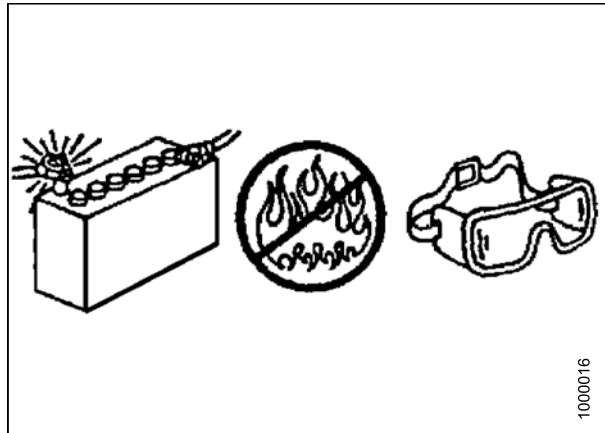


Figure 1.8: Safety around Batteries

### WARNING

- To avoid injury from spark or short circuit, disconnect battery ground cable before servicing and part of electrical system.
- Do NOT operate the engine with alternator or battery disconnected. With battery cables disconnected and engine running, a high voltage can be built up if terminals touch the frame. Anyone touching the frame under these conditions would be severely shocked.
- When working around storage batteries, remember that all of the exposed metal parts are live. Never lay a metal object across the terminals because a spark or short circuit will result.
- Keep batteries out of reach of children.

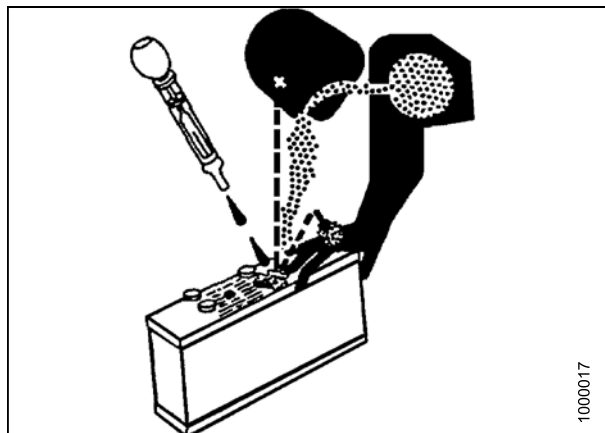


Figure 1.9: Safety around Batteries

## 1.4 Safety Signs

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or become illegible.
- If original parts on which a safety sign was installed are replaced, be sure the repair part also bears the current safety sign.
- Safety signs are available from MacDon Parts.

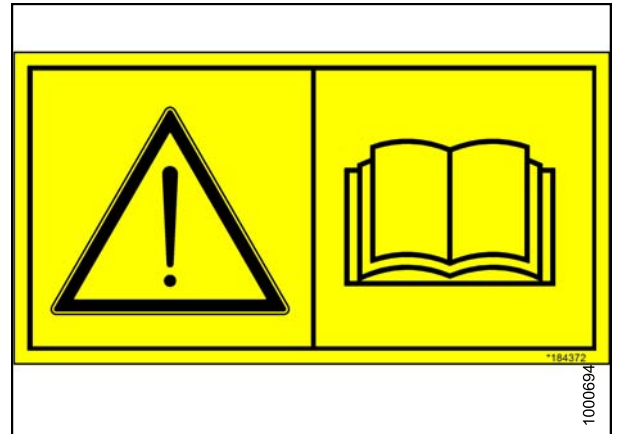


Figure 1.10: Operator's Manual Decal



## 2 Unloading Header and Float Module

Perform all procedures in this chapter in the order in which they are listed.

### 2.1 Unloading Header and Float Module from Trailer

The following procedure assumes that two headers were shipped on the trailer.

#### CAUTION

To avoid injury to bystanders from being struck by machinery, do not allow people to stand in unloading area.

#### CAUTION

Equipment used for unloading must meet or exceed the requirements specified below. Using inadequate equipment may result in chain breakage, vehicle tipping, or machine damage.

#### IMPORTANT:

Forklifts are normally rated with the load centered 24 in. (610 mm) from the back end of forks. To obtain forklift capacity for a load centered at 48 in. (1220 mm), check with your forklift distributor.

Table 2.1 Lifting Vehicle

Minimum Lifting Capacity	9000 lb. (4082 kg) load center (A) at 48 in. (1220 mm) (B) from back of forks
Minimum Fork Length (C)	78 in. (1981 mm)

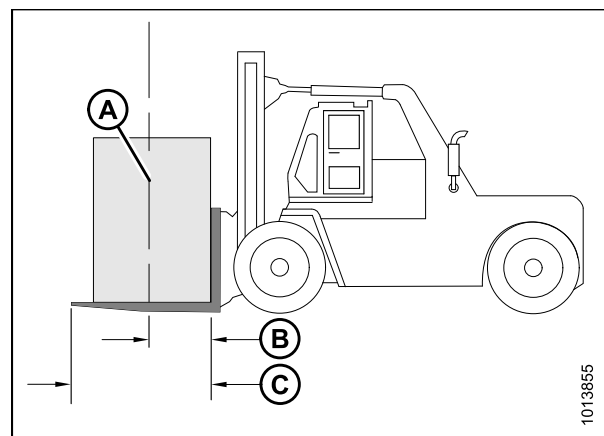


Figure 2.1: Minimum Lifting Capacity

A - Center of Gravity of the Load  
B - Load Center 48 in. (1220 mm) from Back of Forks  
C - Minimum Fork Length 78 in. (1981 mm)

To unload headers and float modules from a trailer, follow these steps:

1. Move trailer into position and block trailer wheels.
2. Lower trailer storage stands.

## UNLOADING HEADER AND FLOAT MODULE

3. Approach one of the headers and line up forks (A) with fork slider channels (B) under the float module frame.
4. Slide forks (A) underneath fork slider channels (B) as far as possible without contacting the shipping support of the opposite header.

### IMPORTANT:

Avoid lifting the second header and ensure the forks do not interfere with the shipping frame. If the forks contact the second header, damage to the headers may occur.

5. Remove hauler's tie-down straps, chains, and wooden blocks.
6. Slowly raise header off trailer deck.



### WARNING

**Be sure forks are secure before moving away from load. Stand clear when lifting.**

7. Back up until unit clears trailer and slowly lower to 6 in. (150 mm) from ground.
8. Take header to the storage or setup area. Ensure ground is flat and free of rocks or debris that could damage the header.
9. Repeat above steps for second header.
10. Check for shipping damage and missing parts.

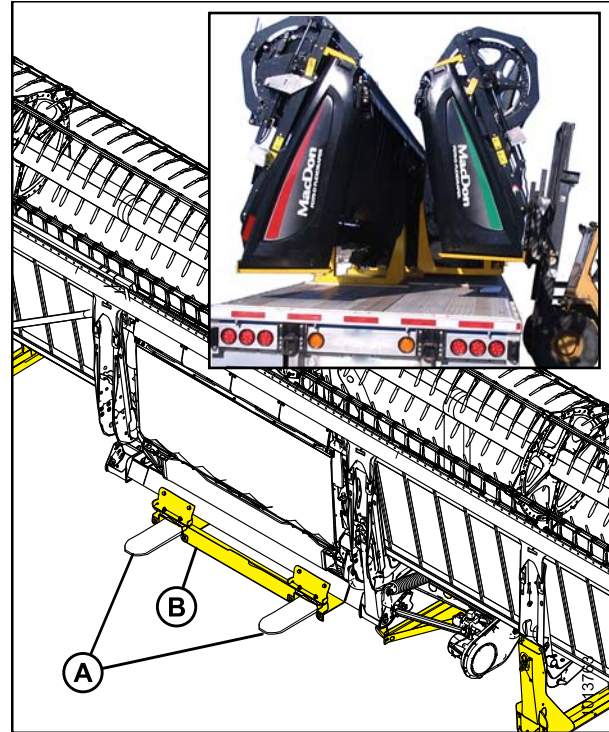


Figure 2.2: Header Shipping Supports

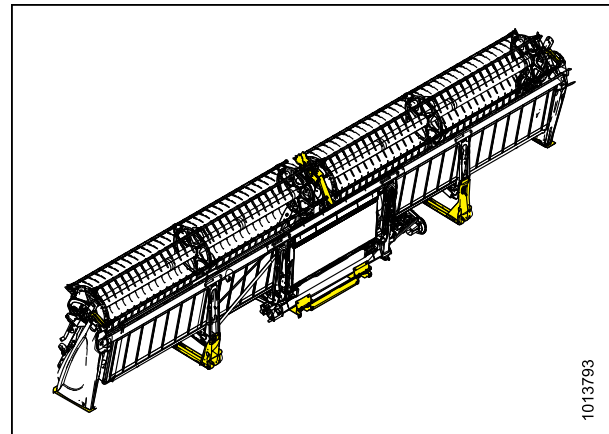


Figure 2.3: Header Lowered onto Level Ground

## 2.2 Lowering Header

1. Approach the underside of the header with the lifting vehicle.

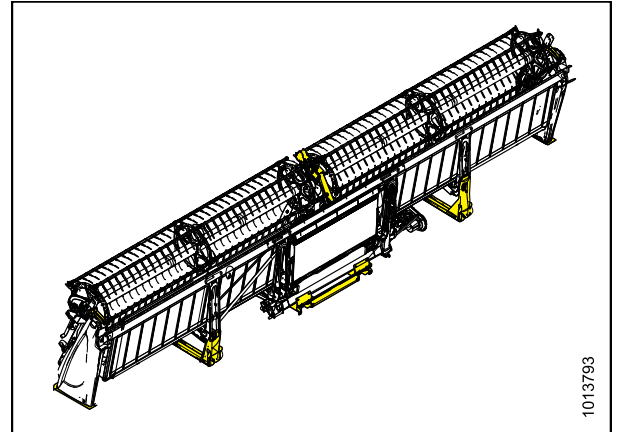


Figure 2.4: Underside of Header

2. Attach chain to shipping support (A) at center reel arm.

**IMPORTANT:**

Do NOT attempt to lift at cutterbar when unloading from trailer. This procedure is ONLY for laying the machine over into working position.



**CAUTION**

Stand clear of header when lowering. Machine may swing.

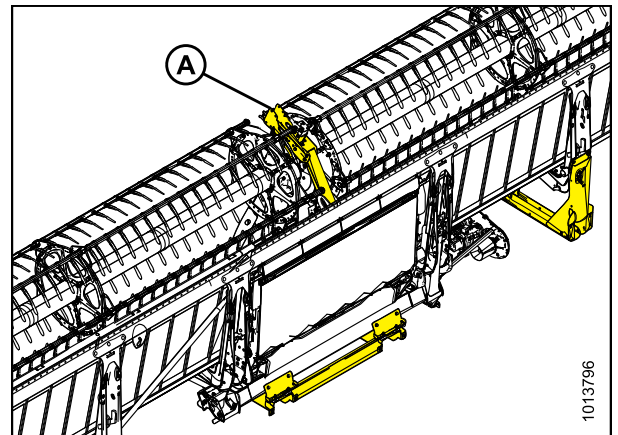


Figure 2.5: Shipping Support

## UNLOADING HEADER AND FLOAT MODULE

3. Back up SLOWLY while lowering forks until header rests on the ground.

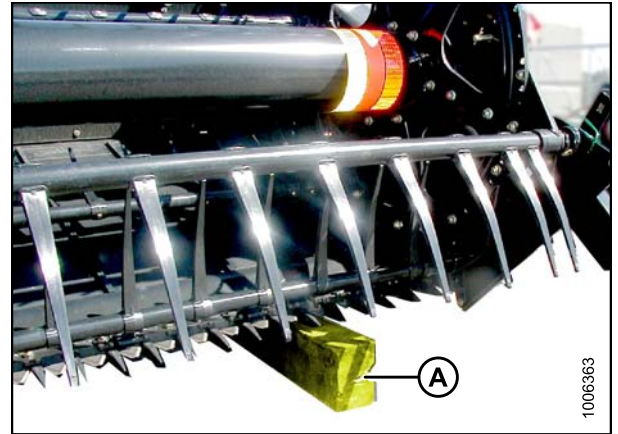


Figure 2.6: Lowering the Header



## UNLOADING HEADER AND FLOAT MODULE

4. Place 6 inch (150 mm) blocks (A) under each end and at the center of cutterbar, then lower header onto blocks.
5. Remove chain.



**Figure 2.7: Blocks at Each End of Cutterbar**

## 2.3 Removing Shipping Stands

**NOTE:**

Unless otherwise specified, discard stands, shipping material, and hardware. The removable stands are painted yellow.

1. Remove the two bolts (A) securing the right fork channel (B) to the shipping stand (C).

**NOTE:**

To access the bolts at the lower stand support, the header must be supported on 6 in. (150 mm) blocks, as directed in Step 4, page 11.

2. Remove two bolts (D) securing the right fork channel (B) to the lower brace (E).
3. Repeat the steps above for the left side.

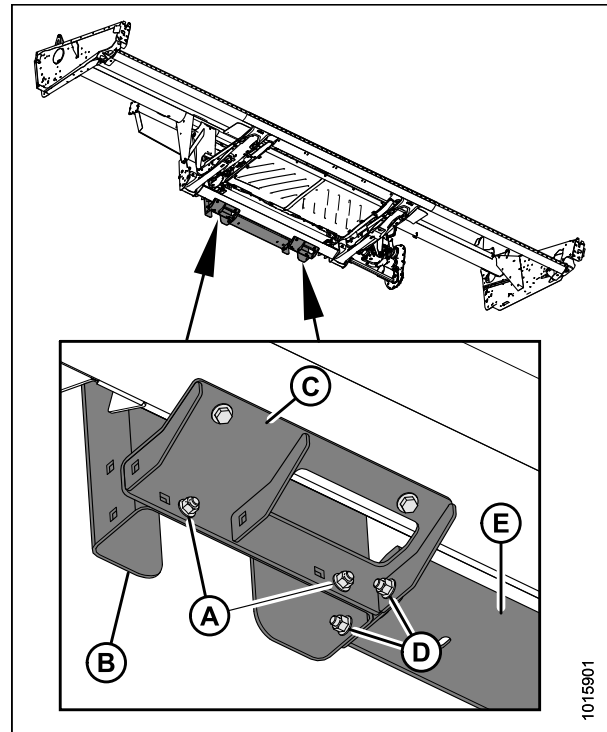


Figure 2.8: Shipping Stands and Lower Brace

4. Remove the lower brace (A).


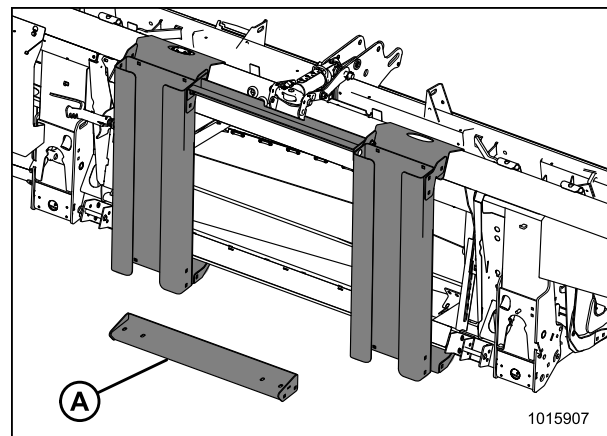


Figure 2.9: Lower Brace Removal


## UNLOADING HEADER AND FLOAT MODULE

5. From the upper brace, remove the two bolts (A). Repeat for the opposite side.

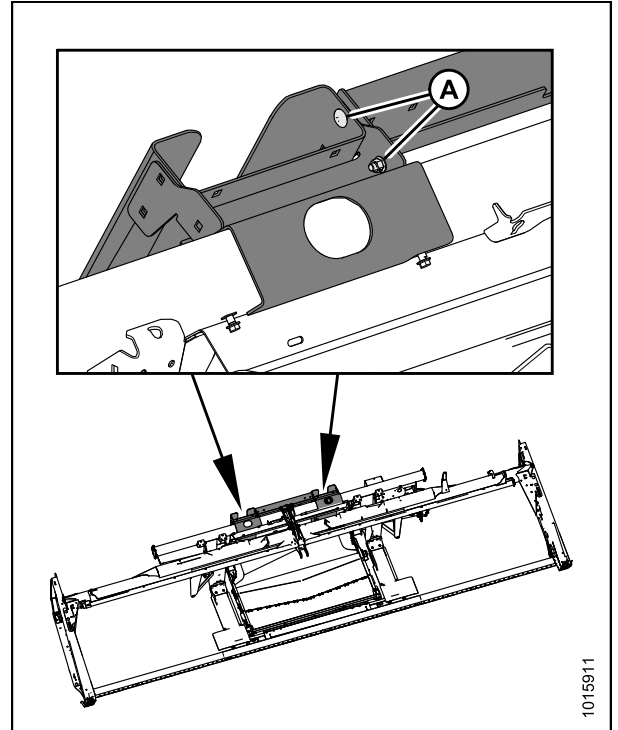

**Figure 2.10: Stand Supports and Upper Brace**


6. Remove the right and left fork channels (A).
7. Remove the upper brace (B).

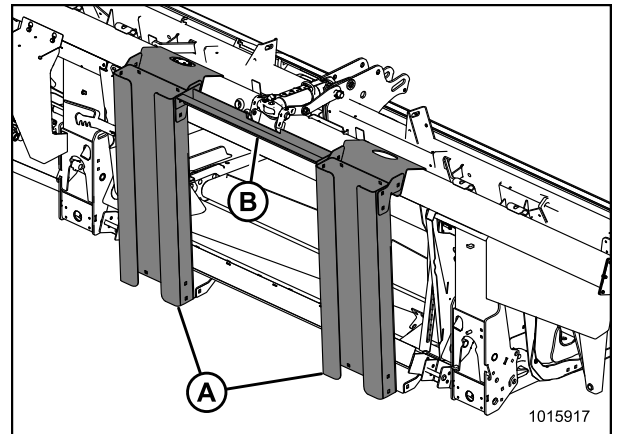

**Figure 2.11: Upper Brace and Stand Support Removal**


## UNLOADING HEADER AND FLOAT MODULE

8. Remove four bolts (A) and remove shipping stands (B) from the bottom of the float module.

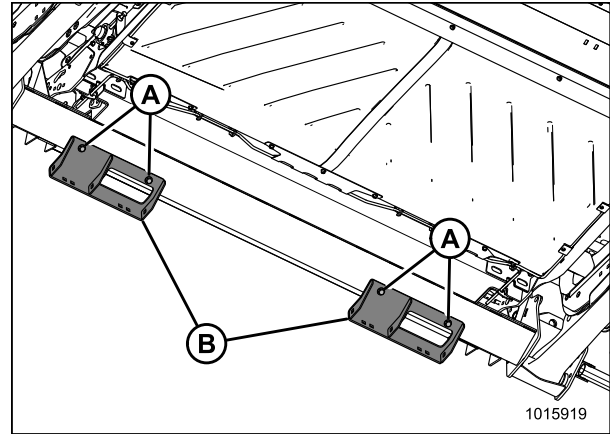

**Figure 2.12: View from Below the Header**


9. Remove the two bolts (A) securing the coupler cover (B) to the float module.
10. Remove the coupler cover.

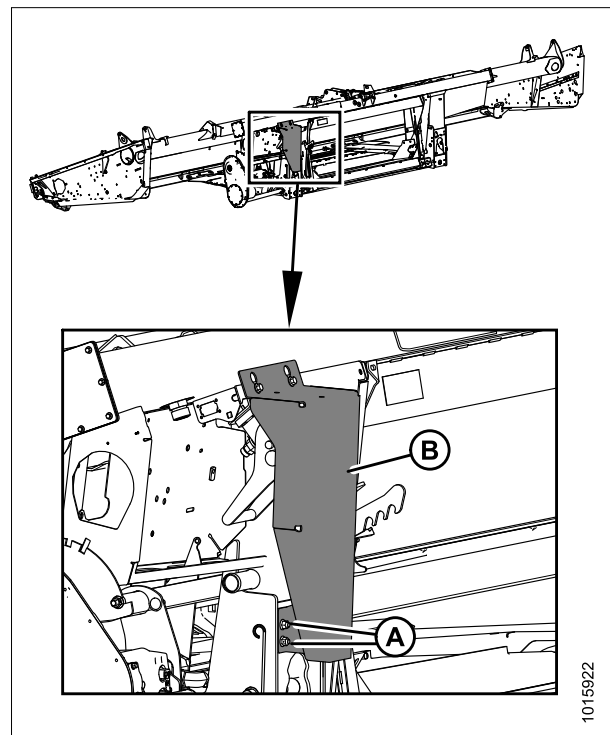

**Figure 2.13: Coupler Cover**


## UNLOADING HEADER AND FLOAT MODULE

11. Remove the four bolts (A) from the shipping stands at both outboard header legs. Remove stands.

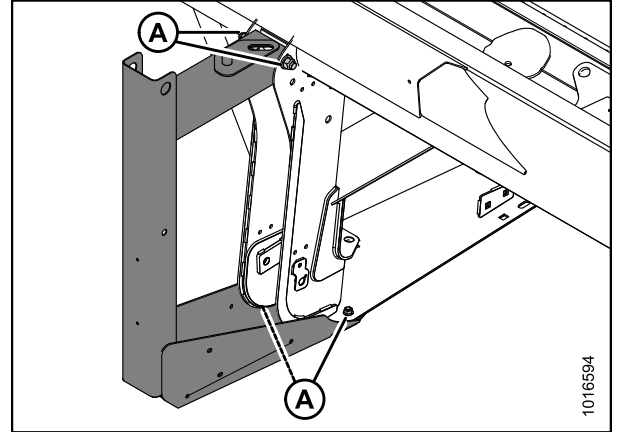


**Figure 2.14: Shipping Stands at Outboard Header Legs (Right Side Shown)**

12. Remove reel anti-rotation strap (A) between reel and endsheet.

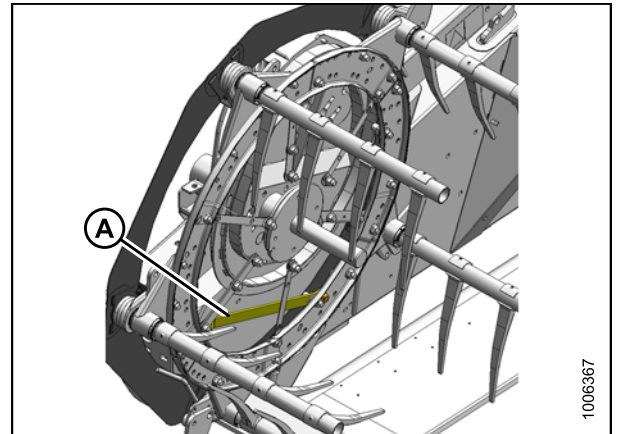

**Figure 2.15: Reel Anti-Rotation Strap**

13. Loosen three bolts (A) in each endshield guard (B) and remove guards. Hardware can be removed when header endshields are opened.

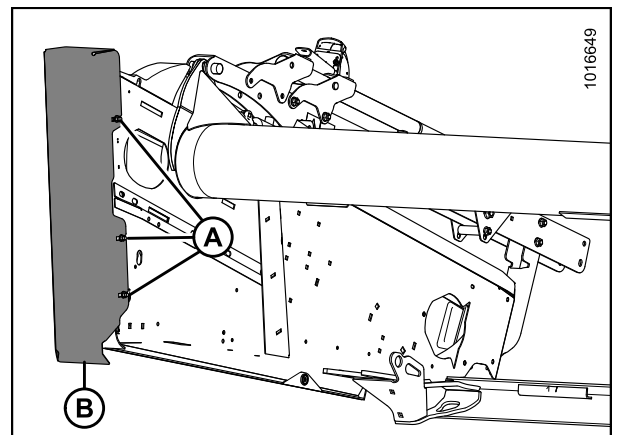

**Figure 2.16: Endshield Guards**




### 3 Assembling Header and Float Module

Perform all the procedures in this chapter in the order in which they are listed.

#### 3.1 Attaching Reel Lift Cylinders

##### CAUTION


Bolts (A) (with tags) on reel arms keep the reel from sliding forward. Ensure fore-aft cylinders are attached before removing bolts.

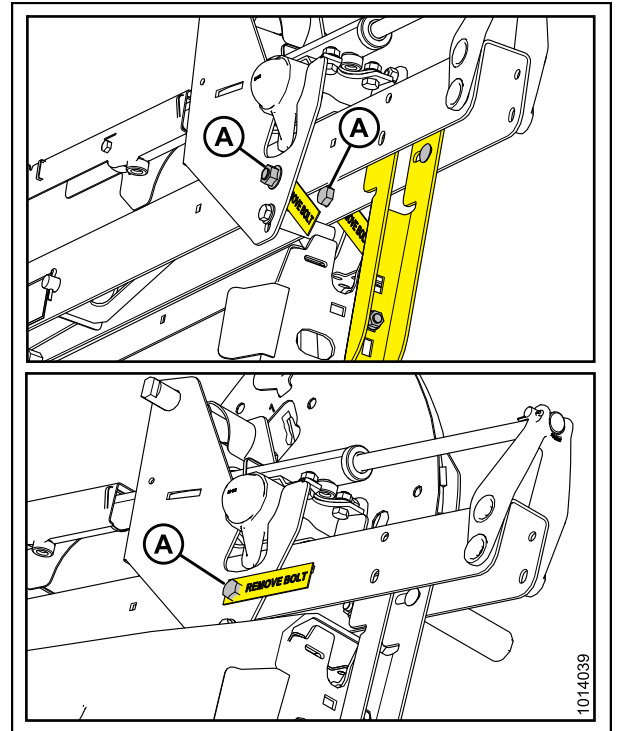

**Figure 3.1: Right Reel Arm (Parts Removed for Clarity)**

Top Image - Single Reel


Bottom Image - Double Reel

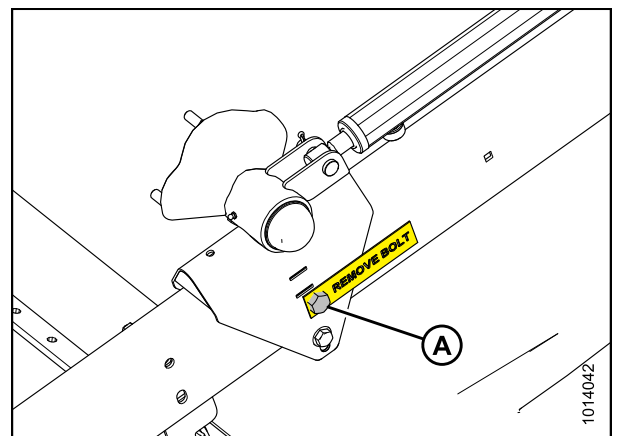

**Figure 3.2: Left Reel Arm**


## ASSEMBLING HEADER AND FLOAT MODULE

1. Remove two top bolts (A) on outboard reel arm supports. Repeat for opposite side.

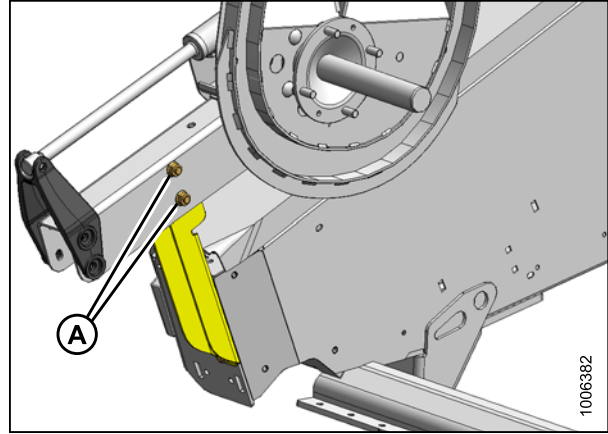


**Figure 3.3: Outboard Reel Arm Support**

2. Remove two top bolts (A) on center reel arm to allow the center reel arm to move.

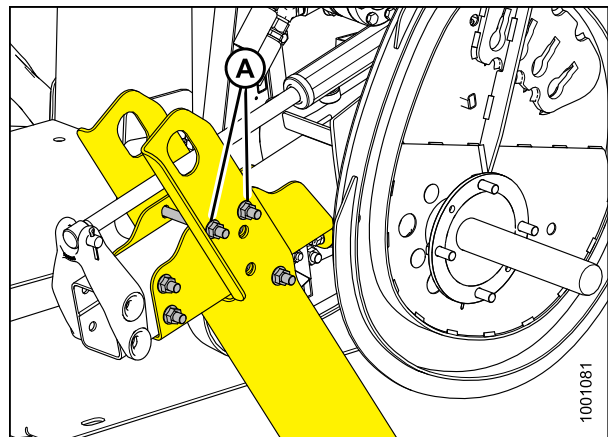

**Figure 3.4: Center Reel Arm**

3. Position sling (A) around the reel tube (B) close to the outboard end of reel and attach sling to a forklift (or equivalent).
4. Remove shipping wire/banding from the reel lift cylinder.

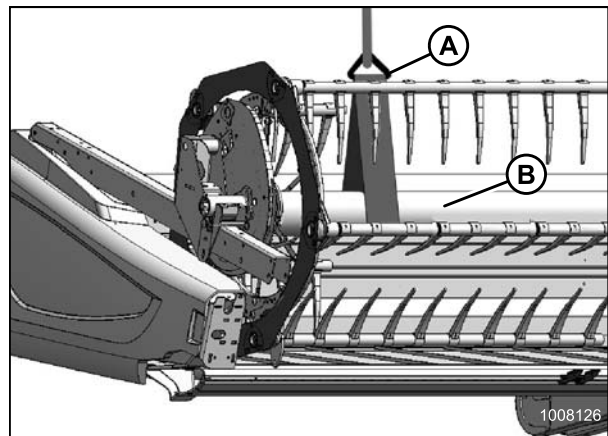

**Figure 3.5: Reel Tube**



## ASSEMBLING HEADER AND FLOAT MODULE

5. Lift reel and remove pins from the endsheet and the reel arm.
6. Align the reel lift cylinder mounting holes until they line up with the lug on the endsheet and the hole in the reel arm.
7. Secure cylinder to endsheet and reel arm with pins as shown.
  - Insert cotter pin (A) **OUTBOARD** at reel arm
  - Insert cotter pin (B) **INBOARD** at endsheet

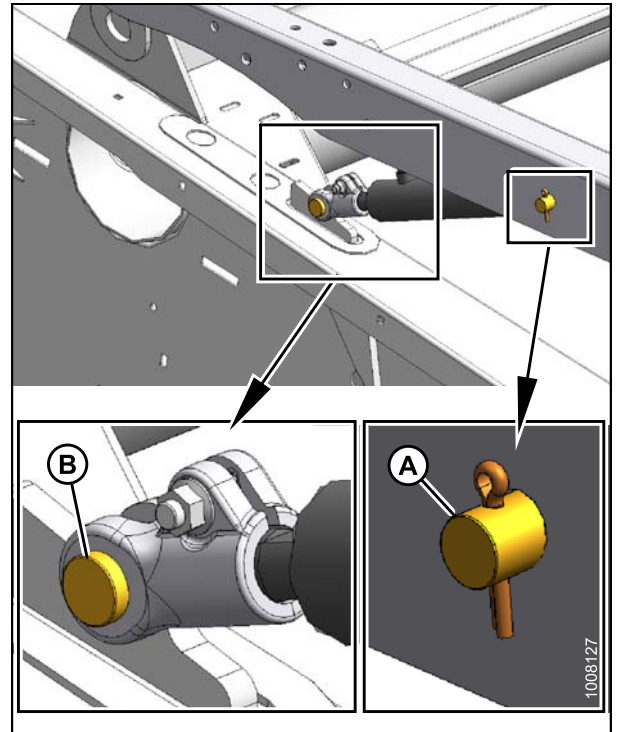


Figure 3.6: Right-Hand Shown

8. At outer arm, move reel safety props (A) to engaged position (B).


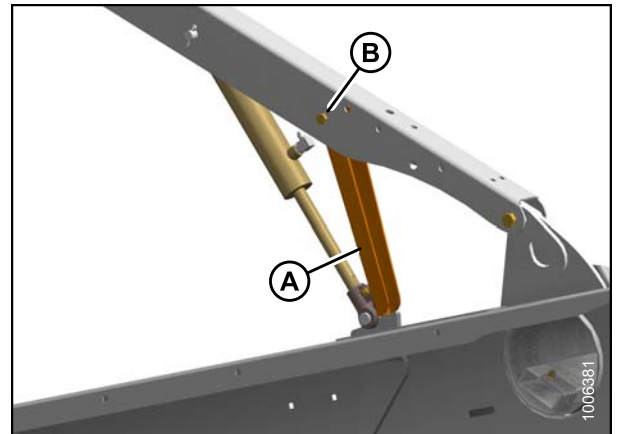


Figure 3.7: Reel Safety Props


## ASSEMBLING HEADER AND FLOAT MODULE

9. Position sling (A) around the reel tube near the reel center support arm.
10. Remove shipping wire and banding from center reel lift cylinder and remove socket head bolt and nut from cylinder rod.

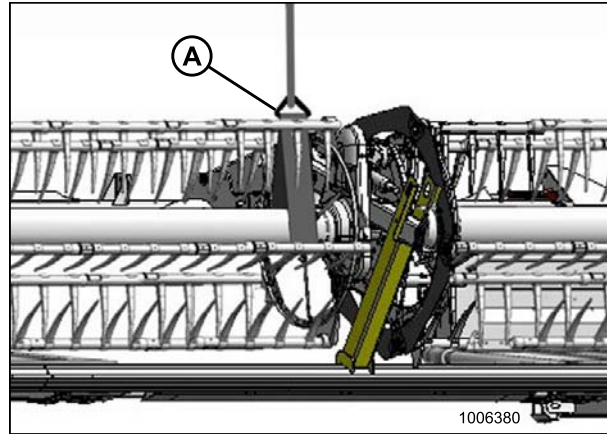

**Figure 3.8: Lifting the Reel**


11. Lift reel so that hole in center lift cylinder rod lines up with mounting hole in reel arm.
12. Attach rod end of cylinder to reel arm with socket head bolt and nut (A). Access hardware through holes in reel arm braces.
13. Torque bolt and nut (A) to 40–45 ft·lbf (54–61 N·m).

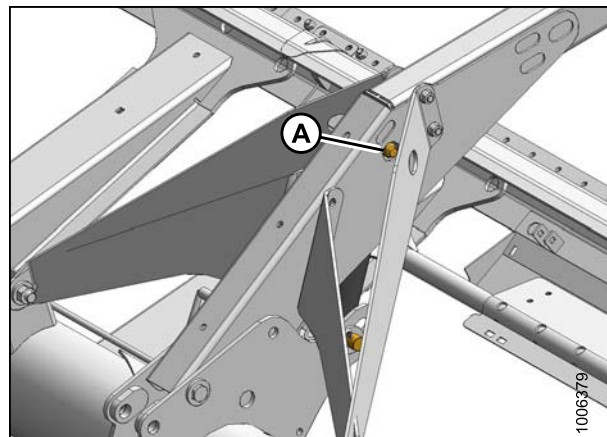

**Figure 3.9: Reel Arm Braces**


## ASSEMBLING HEADER AND FLOAT MODULE

14. Use handle (A) to move lock rod to inboard position (B), engaging pin (C) into lock in arm.
15. Lower reel until props contact cylinder mounts on outer reel arms and pin at center arm.
16. Remove pin at barrel end of cylinder.
17. Adjust reel height so pin can be installed at barrel end of cylinder and mounting structure.

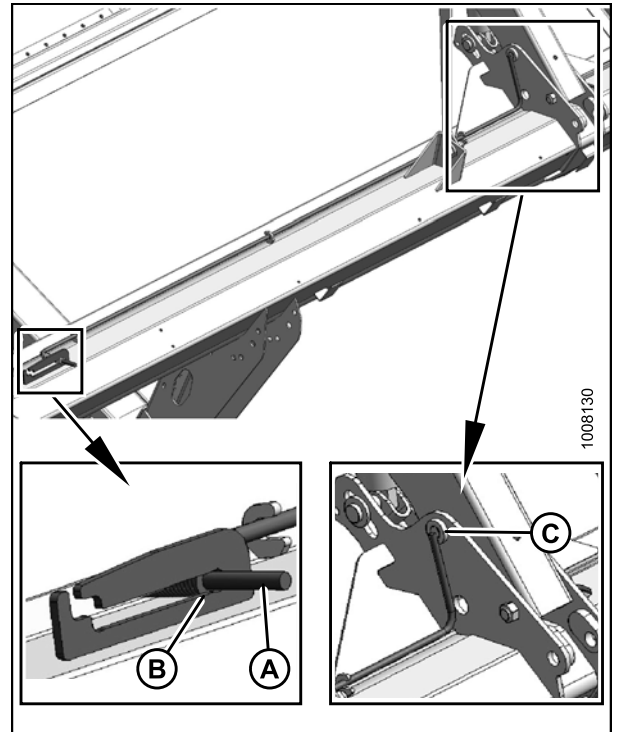

**Figure 3.10: Lock Rod**

18. Reposition the sling (A) around the reel tube near the opposite outboard reel arm.
19. Remove shipping wire and banding from the reel lift cylinder.

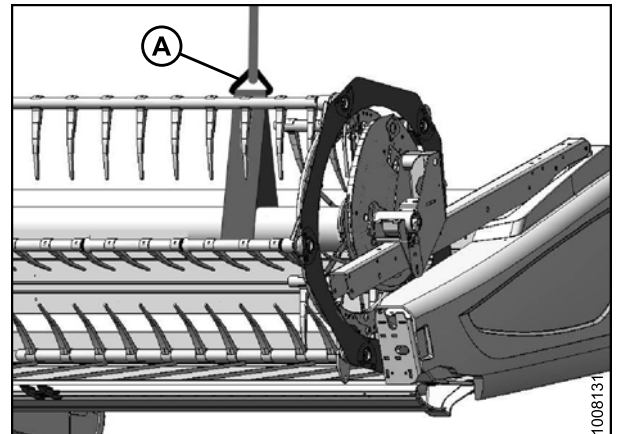

**Figure 3.11: Outboard Reel Arm**

## ASSEMBLING HEADER AND FLOAT MODULE

20. Lift reel and remove pins from the endsheet and the reel arm.
21. Align the reel lift cylinder mounting holes until they line up with the lug on the endsheet and the hole in the reel arm.
22. Secure cylinder to endsheet and reel arm with pins as shown.
  - Insert cotter pin (A) **OUTBOARD** at reel arm
  - Insert cotter pin (B) **INBOARD** at endsheet

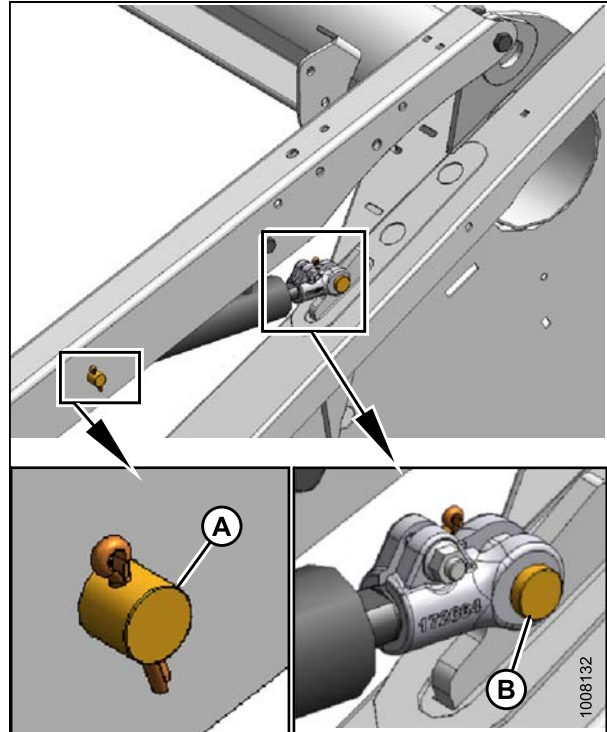


Figure 3.12: Cylinder and Endsheet

23. Move the reel safety props (A) to engaged position (B).


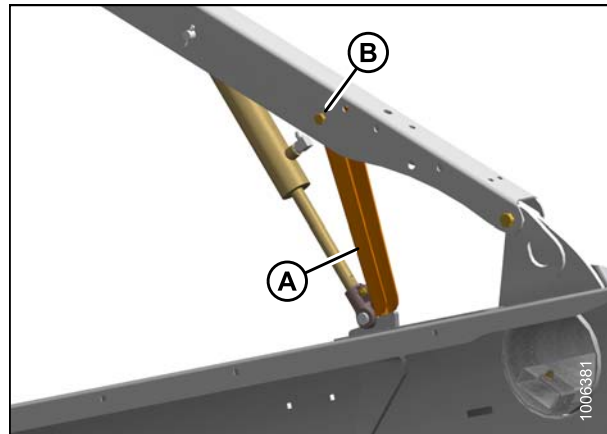


Figure 3.13: Reel Safety Prop


## ASSEMBLING HEADER AND FLOAT MODULE

24. **Double reel only:** Remove the remaining bolt (A), disengage center reel arm shipping support (B) from cutterbar, and remove shipping support.

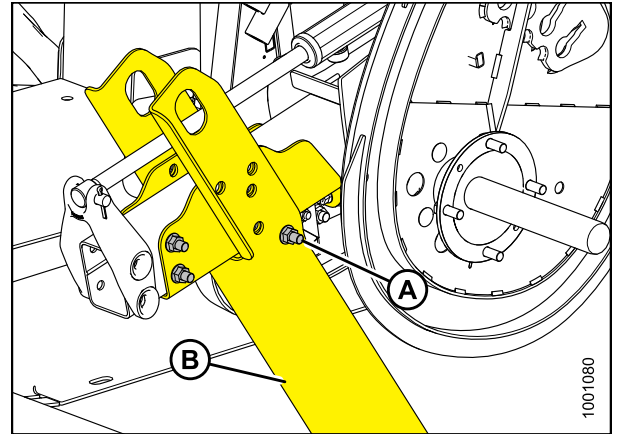

**Figure 3.14: Center Reel Arm Shipping Support**


25. Remove bolts (A) from reel arm support at endsheet and remove support. Repeat at other side.

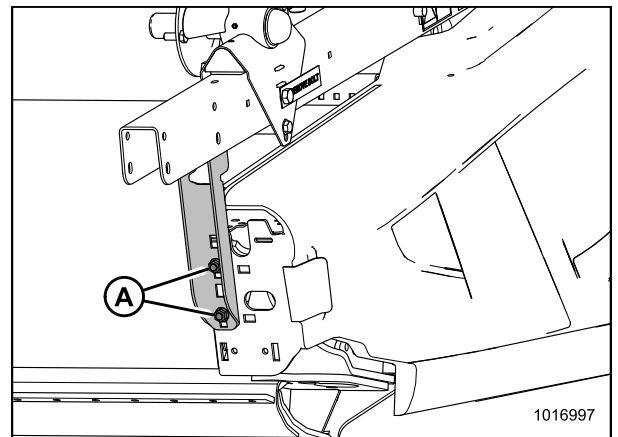

**Figure 3.15: Outboard Reel Arm Supports**

## ASSEMBLING HEADER AND FLOAT MODULE


26. Remove brace bolts and tags (A) locking the reel fore-aft position at outer reel arms.

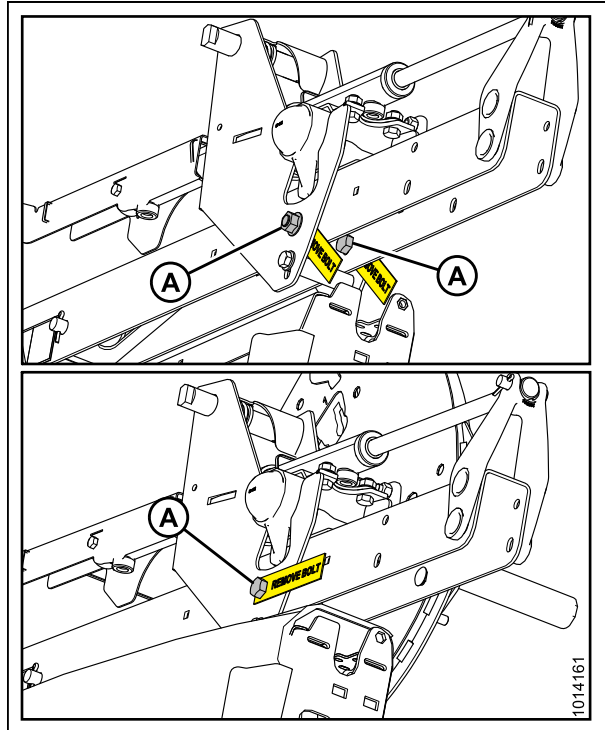

**Figure 3.16: Right Reel Arm**

Top Image - Single Reel

Bottom Image - Double Reel

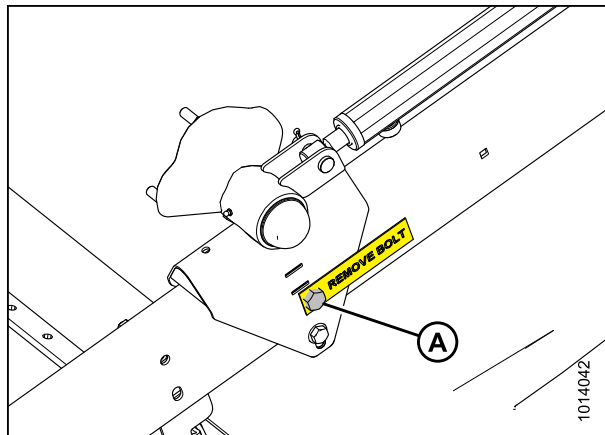

**Figure 3.17: Left Reel Arm**

## 3.2 Attaching Reel Height Sensor

The reel height sensor linkage was disconnected prior to shipping. Reconnect the sensor using the following procedure:

1. Remove the shipping wire.
2. Attach the ball joint (A) to the sensor plate (B).
3. Secure the ball joint in place using the provided flange nut.

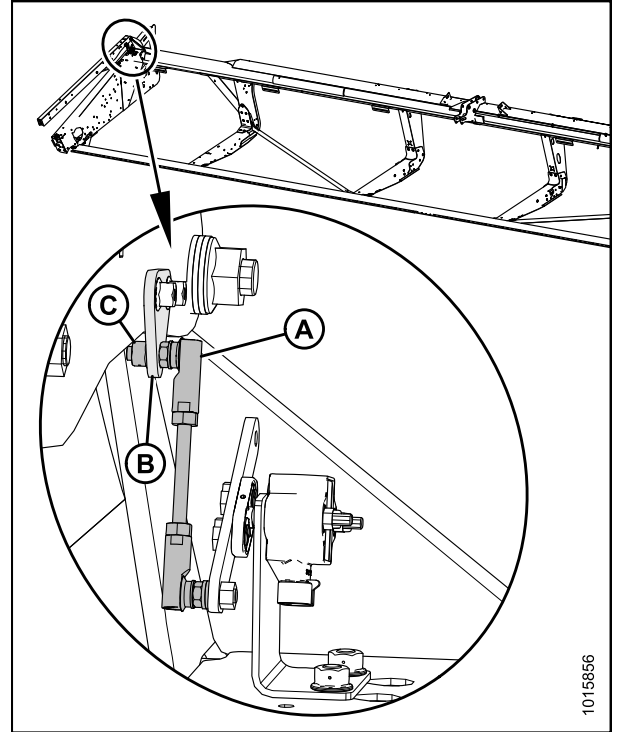


Figure 3.18: Reel Height Sensor

### 3.3 Setting up Float Module

Complete the following procedures in the order in which they are listed:

- [3.3.1 Installing Filler Cap, page 26](#)
- [3.3.2 Removing Auger Flighting Extensions, page 28](#)
- [3.3.3 Removing Stripper Bars, page 29](#)
- [3.3.4 Replacing CR Feeder Deflectors, page 29](#)

#### 3.3.1 Installing Filler Cap

1. Remove filler cap from bag (A).

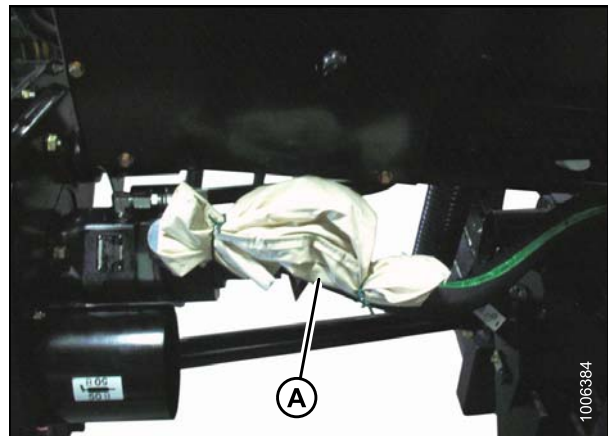


Figure 3.19: Hardware Bag

#### CAUTION

Fluid may be under pressure. Allow pressure to equalize by loosening screws and lifting the shipping cover slightly.

2. Remove yellow shipping cover (A) from float module frame. Discard cover. Keep screws.



Figure 3.20: Yellow Shipping Cover



## ASSEMBLING HEADER AND FLOAT MODULE

3. Remove top gasket (A) for use in the next step.

**NOTE:**

There are two gaskets—one on either side of the filler strainer flange.

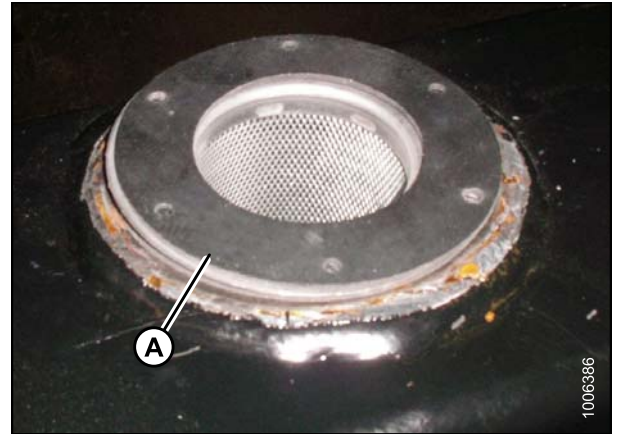


Figure 3.21: Top Gasket

4. Place gasket (A) (removed from the top of the filler strainer) onto the filler cap neck (B) and align holes.
5. Install #10-32 screws on filler cap neck (B) pressing screws through the gasket (A).
6. Apply Loctite® #565 (or equivalent) to screws.

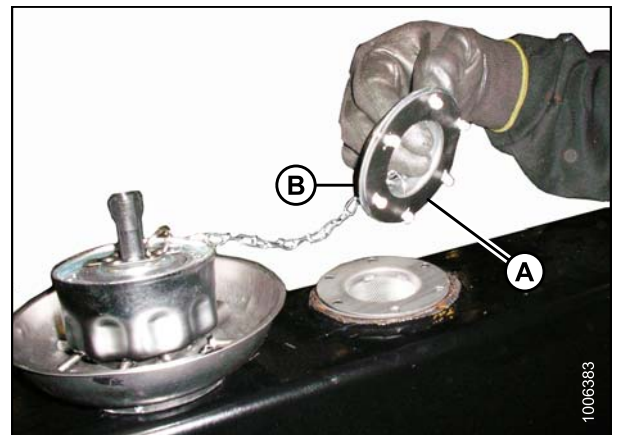


Figure 3.22: Filler Cap Neck

7. Place filler cap neck (A) (complete with screws) over opening and ensure the machine screws are aligned with the threaded holes.
8. Carefully thread in the machine screws using a cross pattern (as shown) in order to prevent cross threading of tapped holes.
9. Repeat pattern to gradually tighten screws to 31 in·lbf (3.5 N·m).

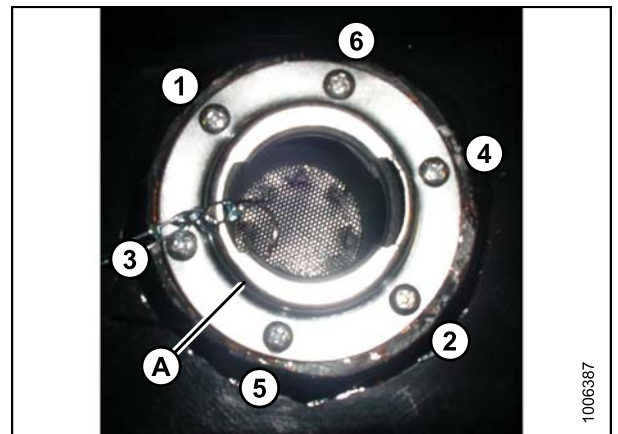


Figure 3.23: Screw Hole Locations

## ASSEMBLING HEADER AND FLOAT MODULE

10. Install filler cap (A).

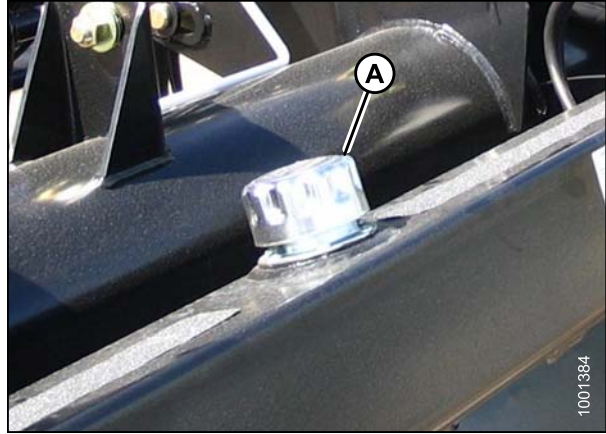


Figure 3.24: Filler Cap

### 3.3.2 Removing Auger Flighting Extensions

Flighting extension kits may have been supplied with your header to improve feeding in certain crops such as rice. They are **NOT** recommended for cereal crops. If necessary, remove auger flighting extensions as follows:

**NOTE:**

Do not use flighting extensions on New Holland CR960, 9060, 970, 9070, and 9080 combines.

1. Remove access cover (A).
2. Remove six bolts, washers, and nuts that secure flighting extension (B) to auger, and remove extension.
3. Repeat for other flighting extensions.
4. Reinstall access cover (A).

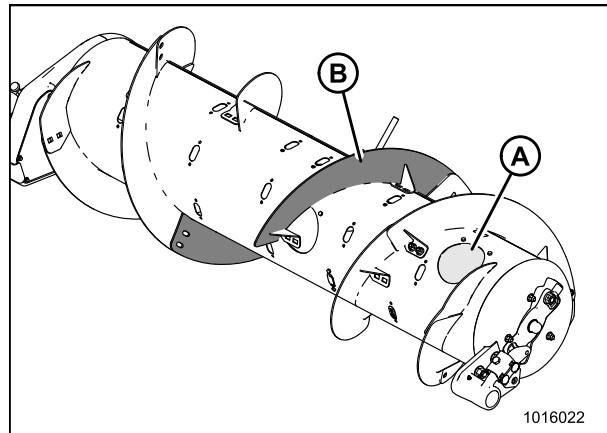


Figure 3.25: Auger Flighting Extension

## 3.3.3 Removing Stripper Bars

Stripper bar kits may have been supplied with your header to improve feeding in certain crops such as rice. They are **NOT** recommended for cereal crops.

### NOTE:

New Holland CR960, 9060, 970, 9070, and 9080 combines are not equipped with stripper bars. The following procedure does NOT apply to those models.

If necessary, remove auger stripper bars as follows:

1. Remove four bolts (A) and nuts securing bars (B) to float module frame, and remove bars.
2. Repeat for opposite set of stripper bars.

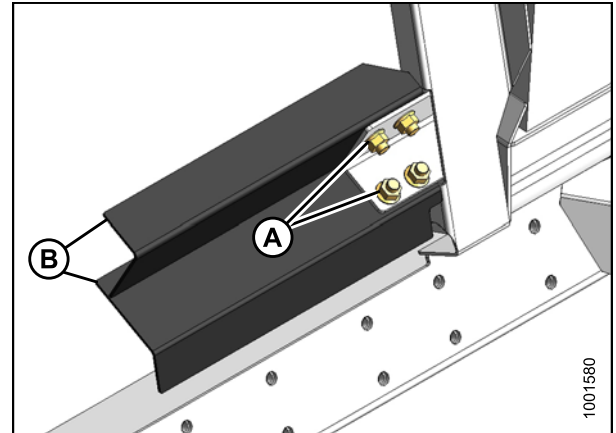


Figure 3.26: Auger Stripper Bar

## 3.3.4 Replacing CR Feeder Deflectors

If the header is configured for a New Holland CR 960, 9070, or 9080 combine, the float module has a factory installed feeder deflector kit to improve feeding into the feeder house. The kit can be replaced if necessary.



### DANGER

**To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.**

The FD1-Series/FM100 combine completion package for the New Holland models includes both a short feeder kit (installed at the factory) and a long feeder kit for narrow feeder house combines. Refer to Table [3.1 FM100 Feeder Kits for CR Model Combines, page 29](#).

Table 3.1 FM100 Feeder Kits for CR Model Combines

Combine Model	Feeder House Size	Feeder Kit Size
CR970, 9070, 9080	Wide	Short: 200 mm
CR960, 9060, 940, 9040	Narrow	Long: 325 mm

## ASSEMBLING HEADER AND FLOAT MODULE

If required, replace the feeder deflectors as follows:

1. Determine the position of existing deflector (A) by measuring the gap (X) between the deflector's forward edge and the pan. Record this measurement.

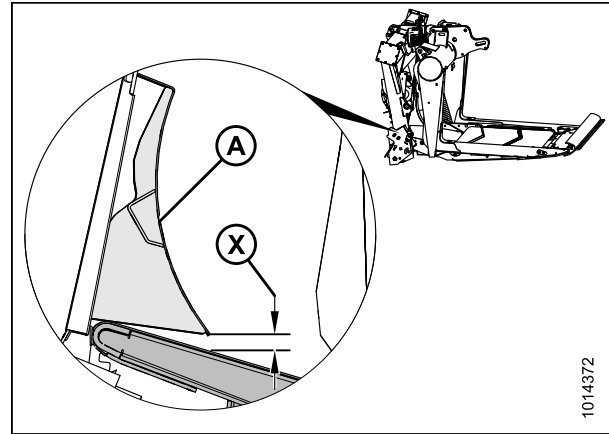


Figure 3.27: Side View of Deflector

2. Remove the two bolts and nuts (B) securing the deflector (A) to the float module frame and remove deflector.
3. Position the replacement deflector and reinstall bolts and nuts (B). Do not tighten bolts.

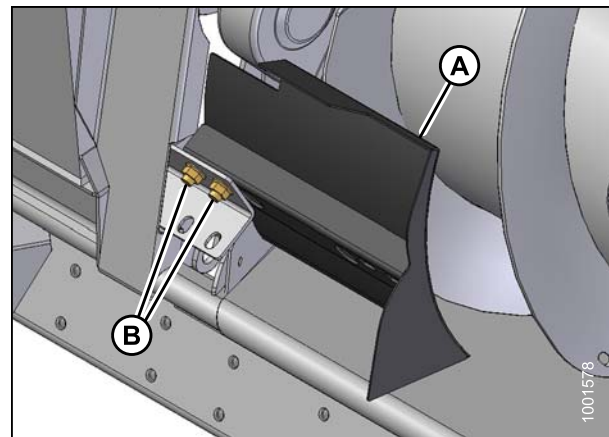


Figure 3.28: Replacement Deflector: Left-Hand Shown – Right-Hand Opposite

4. Set the gap (X) to the dimension recorded in Step 1., [page 30](#) and tighten the nuts.
5. Repeat for the opposite deflector.

### CAUTION

**Never start or move the machine until you are sure all bystanders have cleared the area.**

6. Attach the header to a combine and fully extend center-link.
7. Turn off the combine and remove the key from the ignition.
8. Recheck the gap (X) between the deflector (A) and the pan.

### NOTE:

The minimum gap, when attached to the combine, should be 6/8–1 in. (19–25 mm).

9. If necessary, detach header from the combine and adjust the deflector to achieve the minimum gap.

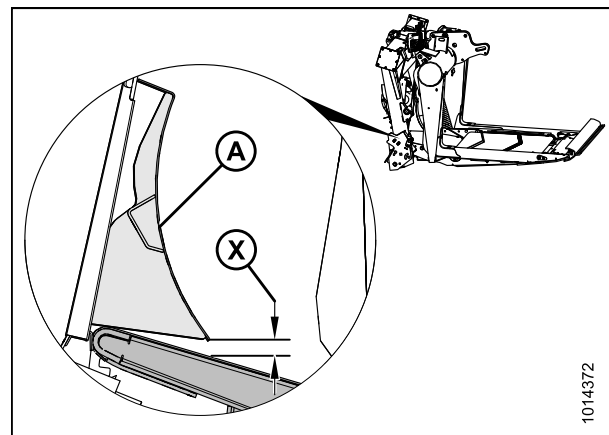


Figure 3.29: Side View of Deflector

## 4 Attaching Header to Combine

The procedures for attaching the header to a combine vary depending on the combine model. Refer to the following table for the appropriate procedure:

**Table 4.1 Combine Model Header Attachment Procedures**

Combine	Refer to
AGCO Gleaner R and S Series; Challenger 660, 670, 680B, 540C, and 560C; Massey 9690, 9790, 9895, 9520, 9540, and 9560	<a href="#">4.1 Challenger, Gleaner, and Massey Ferguson Combines, page 31</a>
Case IH 7010, 8010, 7120, 8120, 9120, 5088, 6088, 7088, 5130, 6130, 7130, 7230, 8230, and 9230	<a href="#">4.2 Case IH Combines, page 39</a>
John Deere 60, 70, S, and T Series	<a href="#">4.3 John Deere Combines, page 45</a>
Lexion 500, 600, and 700 (R Series)	<a href="#">4.4 Lexion Combines, page 57</a>
New Holland CR and CX	<a href="#">4.5 New Holland Combines, page 74</a>

### IMPORTANT:

Ensure applicable functions (Automatic Header Height Control [AHHC], Draper Header Option, Hydraulic Center-Link Option, Hydraulic Reel Drive, etc.) are enabled on the combine and in the combine computer. Failure to do so may result in improper header operation.

## 4.1 Challenger, Gleaner, and Massey Ferguson Combines

### 4.1.1 Installing Reel Fore-Aft/Header Tilt Selector Switch and Harness

Gleaner combines prior to 2014 are not equipped to have hydraulic reel fore-aft and header tilt options. The following additional items are required and not supplied by MacDon:

- Valve (A) (AGCO #71389745)
- Hoses
- Electrical components
- Couplers


### NOTE:

Model year 2014 and later Gleaner combines will have the above parts factory-installed.

To enable the reel fore-aft and header tilt options, install the switch and harness as follows:

### IMPORTANT:

To prevent possible damage to electronic components, disconnect the positive cable from the combine battery before connecting harness to combine connectors.

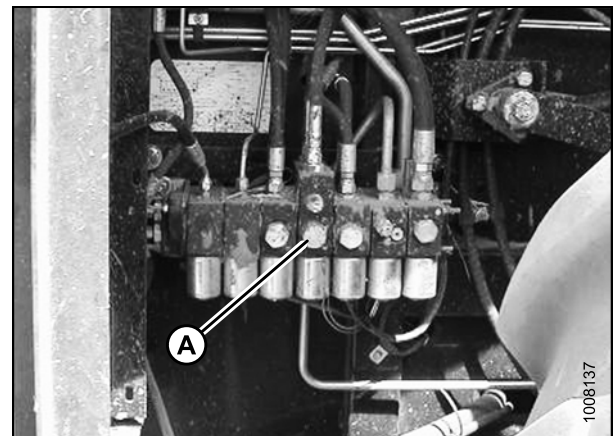

**Figure 4.1: Converted Gleaner R72 Shown**

## ATTACHING HEADER TO COMBINE

1. Before attaching any cable ties, route switch harness (A) from the front of the feeder house to the power connection point in the cab. Ensure the harness is long enough to reach the wiring at the selector valve with the header tilted forward, and that the feeder house can be fully lowered with adequate slack in the harness.

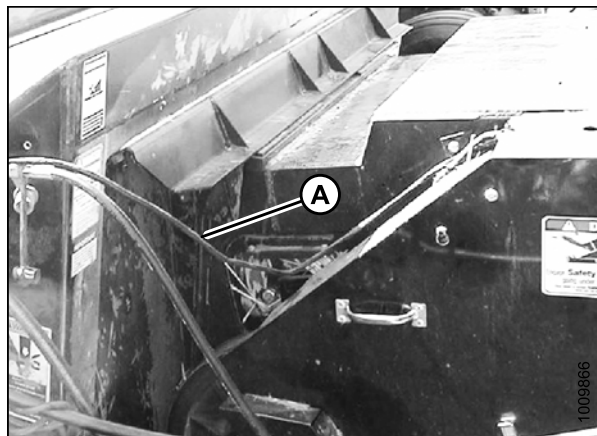


Figure 4.2: Switch Harness Routing

2. Use the cable ties provided to fasten the switch harness (A) to the main harness on the left side of the feeder house and under the cab floor at (B).

### IMPORTANT:

To prevent damage to harness, fully lower feeder house and ensure there is adequate slack before attaching a cable ties (B) to the harness.

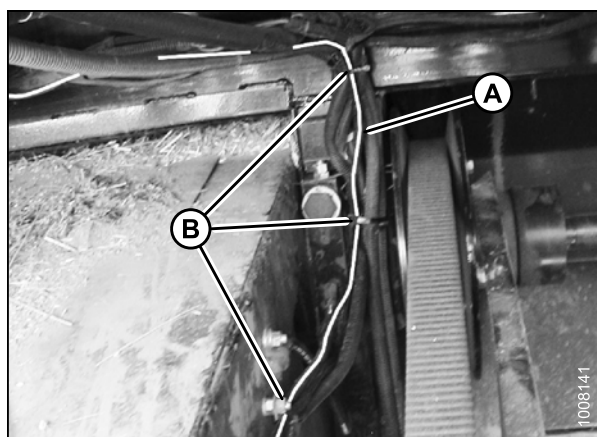


Figure 4.3: Left-Hand Side of Feeder House

3. Route the switch harness (A) at the rear of the feeder house up to the underside of the cab floor at (B).
4. Use the cable ties provided to fasten the switch harness (A) to the main harness under cab floor at (B).

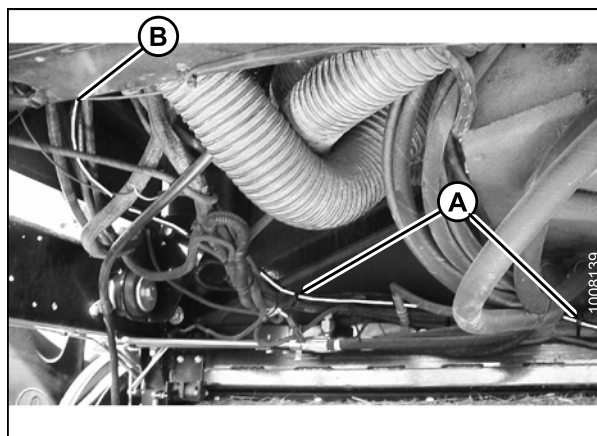


Figure 4.4: Harness under Right-Hand Side of Cab Floor



## ATTACHING HEADER TO COMBINE

5. Route the switch harness (A) under the cab, through cab floor, and into console (B) at the foam seal (C).

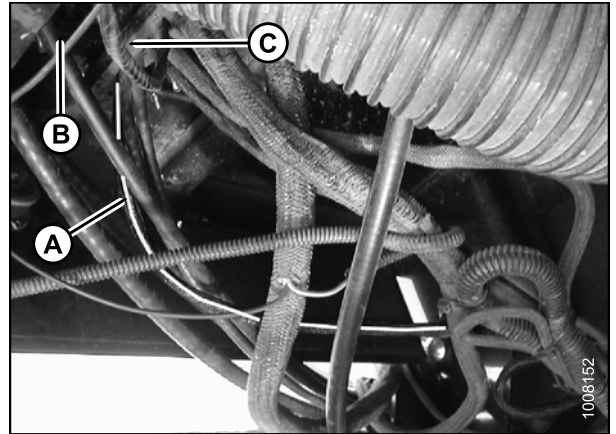


Figure 4.5: Harness through Cab Floor

6. Remove the console cover (A) as shown.
7. Connect the switch harness to the power supply inside the console at (B).
  - The red wire from the inline fuse goes to the switched power supply (B).
  - The double black wire goes to ground.

### **IMPORTANT:**

Connecting the switch harness to an unswitched power supply or cigarette lighter will supply constant power to the header tilt side of the solenoid valve and drain the combine battery during extended shutdown periods.

8. Route switch harness through grommet (C), and replace cover (A).

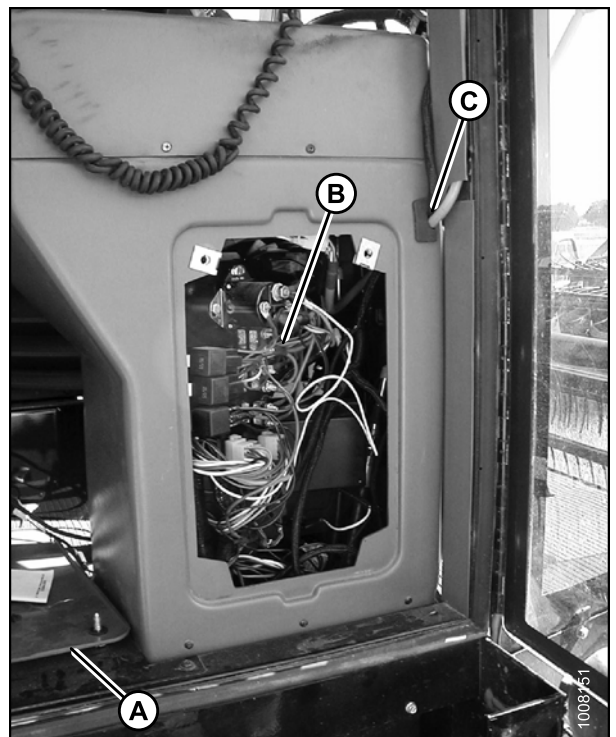


Figure 4.6: Switched Power Supply

## ATTACHING HEADER TO COMBINE

9. Mount switch plate onto console (A) in a comfortable position.
10. Connect harness to switch with red wire to center terminal (B), and white wire to either outer terminal (C).
11. Reconnect the battery cable.
12. Operate the switch to select either REEL FORE-AFT or HEADER TILT function.

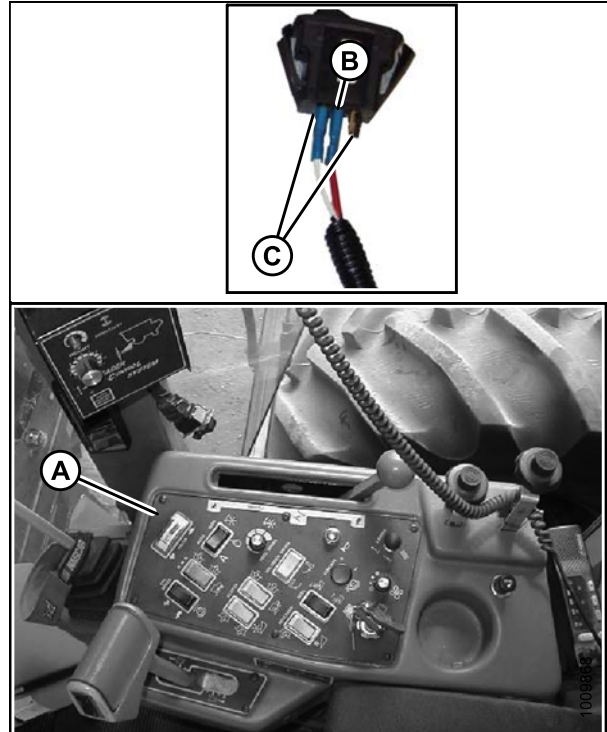


Figure 4.7: Switch and Console

### 4.1.2 Attaching Header to a Challenger, Gleaner, or Massey Ferguson Combine

#### DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Use the lock handle (B) to retract the lugs (A) at the base of the feeder house.

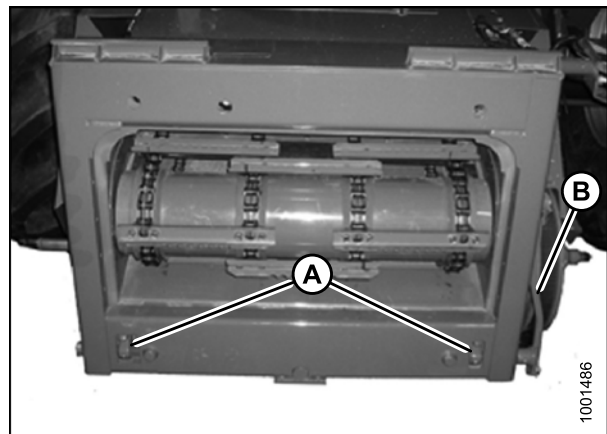


Figure 4.8: AGCO Group Feeder House



## ATTACHING HEADER TO COMBINE

### CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

2. Start the engine and slowly approach the header until the feeder house is directly under the float module top cross member (A) and the alignment pins (C) on the feeder house (shown in the image below) are aligned with the holes (B) in the float module frame.

### NOTE:

Your combine feeder house may not be exactly as shown.

3. Raise the feeder house slightly to lift the header, ensuring the feeder house saddle (A) is properly engaged in the float module frame.
4. Stop the engine and remove the key from the ignition.

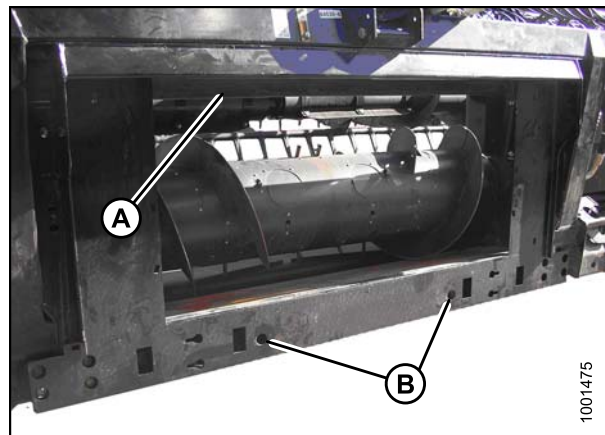


Figure 4.9: Float Module

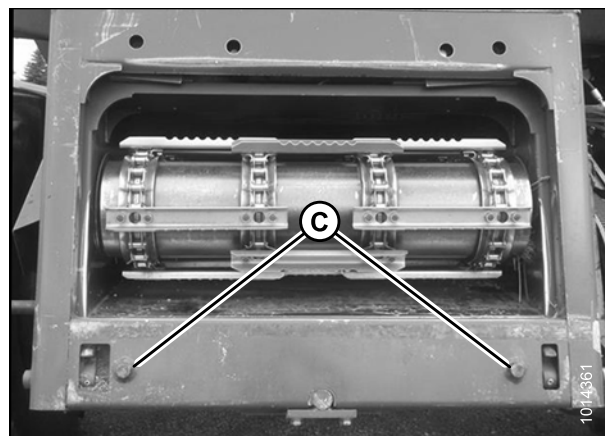


Figure 4.10: AGCO Group Alignment Pins



Figure 4.11: Feeder House and Float Module

## ATTACHING HEADER TO COMBINE

5. Use the lock handle (B) to engage lugs (A) with the float module.

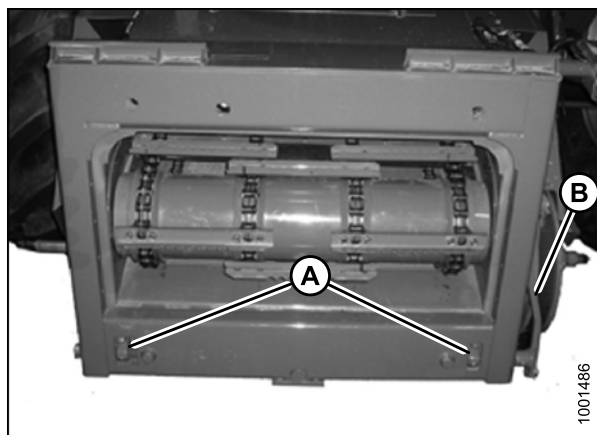


Figure 4.12: AGCO Group Feeder House

### CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

6. Start the engine and lower the header.
7. Stop the engine and remove the key from the ignition.

#### NOTE:

The FM100 float module is equipped with a multicoupler that connects to the combine. If your combine is equipped with individual connectors, a multicoupler kit (single-point connector) must be installed. Refer to Table 4.2 *Multicoupler Kits*, page 36 for a list of kits and installation instructions that are available through your combine Dealer.

Table 4.2 Multicoupler Kits

Combine	Kit Number
Challenger	71530662
Gleaner R/S Series	71414706
Massey Ferguson	71411594

8. Raise the handle (A) to release the multicoupler (B) from the float module.


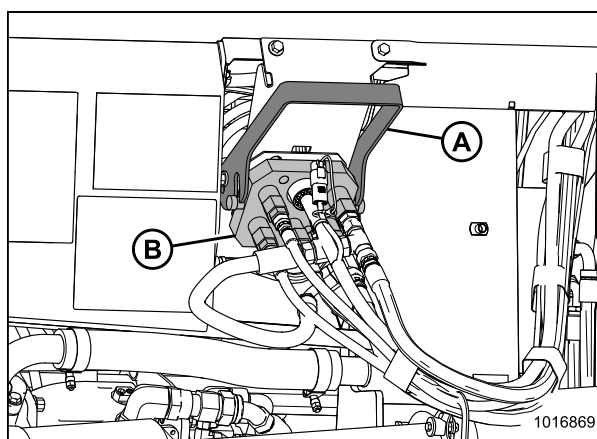


Figure 4.13: Float Module Multicoupler


## ATTACHING HEADER TO COMBINE

9. Push the handle (A) on the combine to the fully open position.
10. Clean the mating surfaces of the multicoupler (B) and receptacle if necessary.

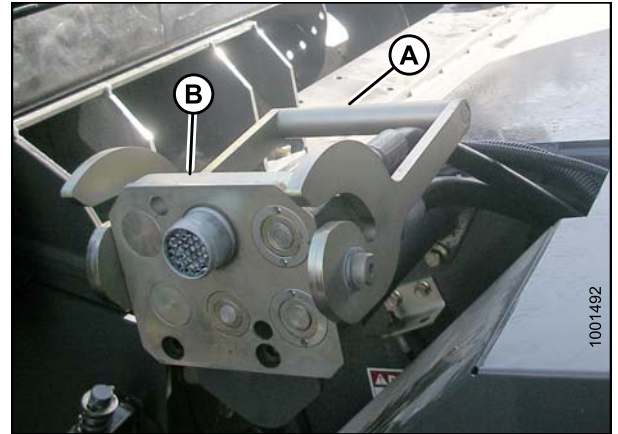


**Figure 4.14: Combine Receptacle**

11. Position the multicoupler (A) onto the combine receptacle, and pull the handle (B) to fully engage the multicoupler into the receptacle.
12. Connect the reel fore-aft/header tilt selector harness (C) to the combine harness (D).

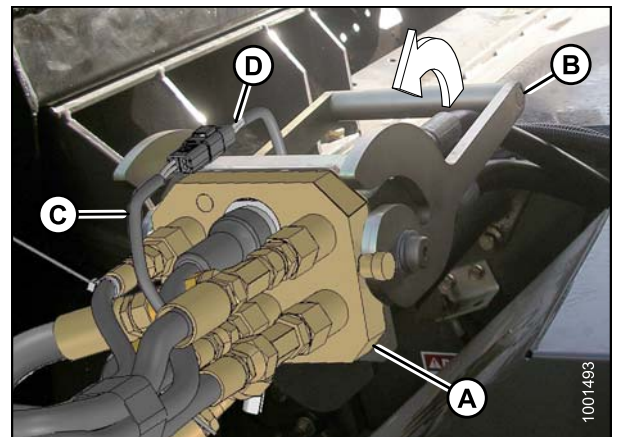

**Figure 4.15: Multicoupler**


13. Remove the bolt (A) and strap (B) and remove the driveline from the support bracket (C).

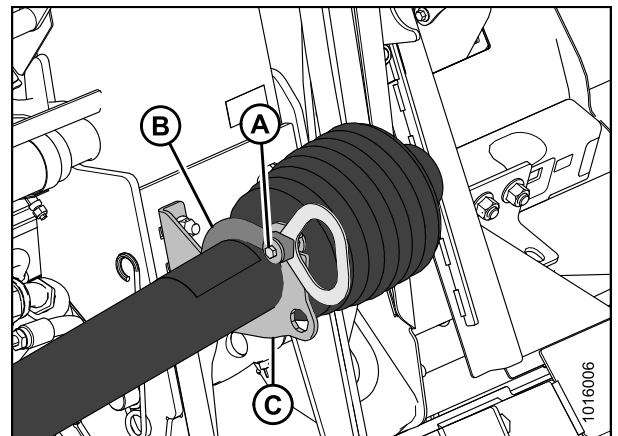

**Figure 4.16: Driveline**

## ATTACHING HEADER TO COMBINE

14. Pull back the collar (A) on the end of the driveline, and push the driveline onto the combine output shaft (B) until the collar locks.

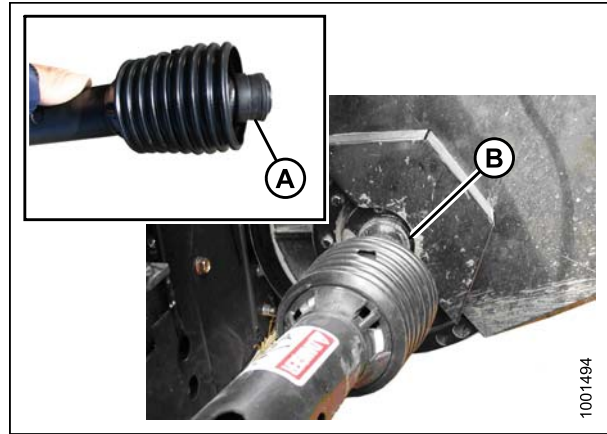

**Figure 4.17: Driveline**

15. Proceed to [5.1 Attaching Cam Arms, page 79](#).

## 4.2 Case IH Combines

### 4.2.1 Attaching Header to Case IH Combine

#### DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. On the upper left-hand side of the combine float module, remove nut (A) and flip lever (B) horizontally.

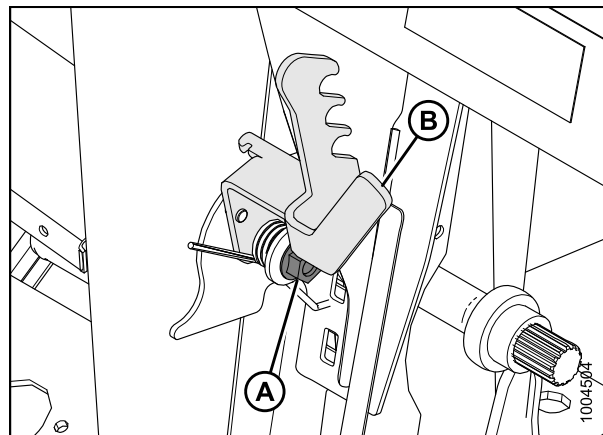


Figure 4.18: Combine Float Module Upper Left-Hand Side

2. Position lever (A) onto stud (B).


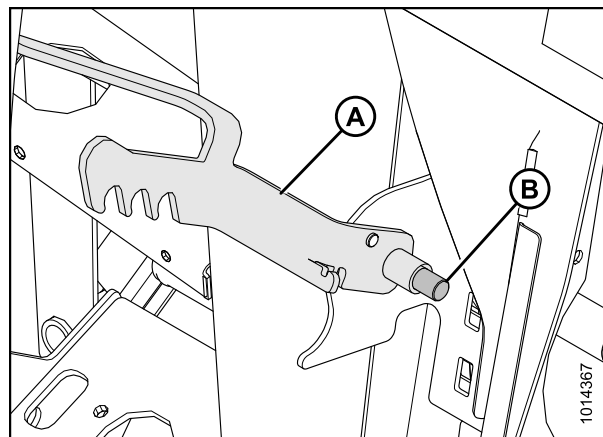


Figure 4.19: Combine Float Module Upper Left-Hand Side


## ATTACHING HEADER TO COMBINE

- Place spring arm (C) into hook on lever (B) to preload it, and tighten nut (A) with washer onto the combine float module.

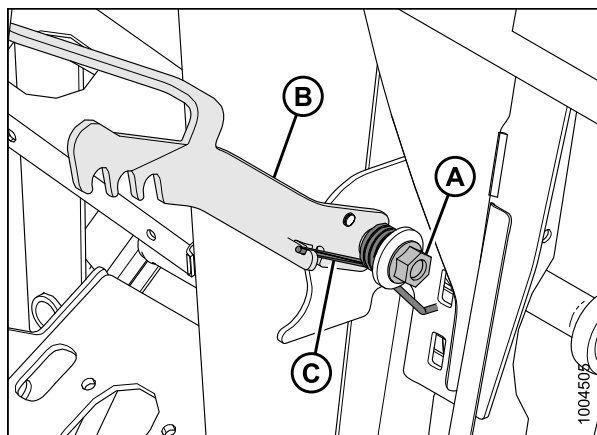

**Figure 4.20: Combine Float Module Left-Hand Side**

- On the combine, ensure the lock handle (A) is positioned so the hooks (B) can engage the float module.

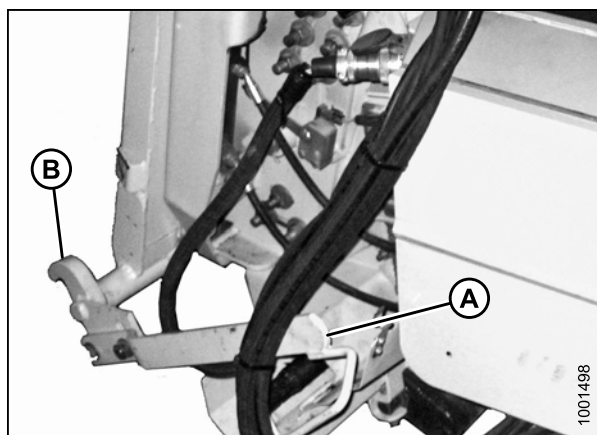


**Figure 4.21: Feeder House Locks**

### CAUTION

**Never start or move the machine until you are sure all bystanders have cleared the area.**

- Start the engine and slowly drive the combine up to the header until the feeder house saddle (A) is directly under the float module top cross member (B).
- Raise the feeder house slightly to lift the header, ensuring the feeder saddle is properly engaged in the float module frame.
- Stop the engine and remove the key from the ignition.

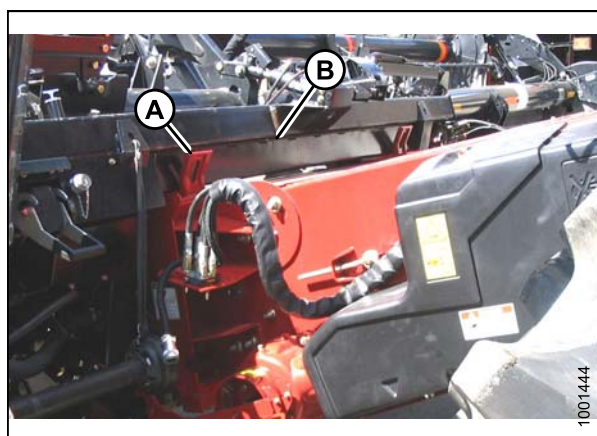


**Figure 4.22: Combine and Float Module**




## ATTACHING HEADER TO COMBINE

8. On the left side of the feeder house, lift lever (A) on the float module and push handle (B) on the combine to engage locks (C) on both sides of the feeder house.
9. Push down on the lever (A) so the slot in the lever engages the handle and locks the handle in place.
10. If lock (C) does not fully engage the pin on the float module, loosen bolts (D) and adjust lock. Retighten bolts.

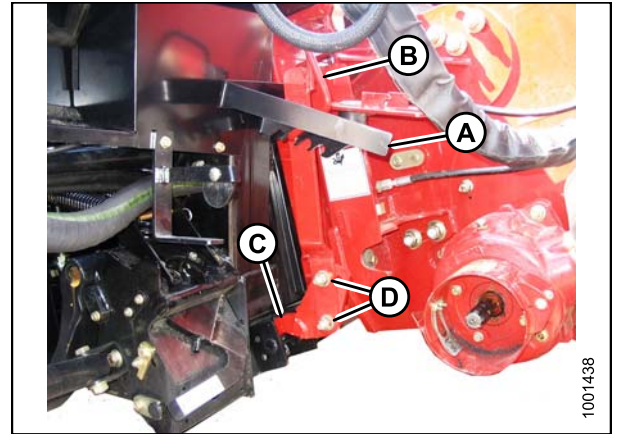

**Figure 4.23: Combine and Float Module**

11. Open the cover on the receptacle (A) located on the left side of the float module.
12. Press the lock button (B) and pull the handle (C) to the fully open position.
13. Clean the receptacle mating surfaces.

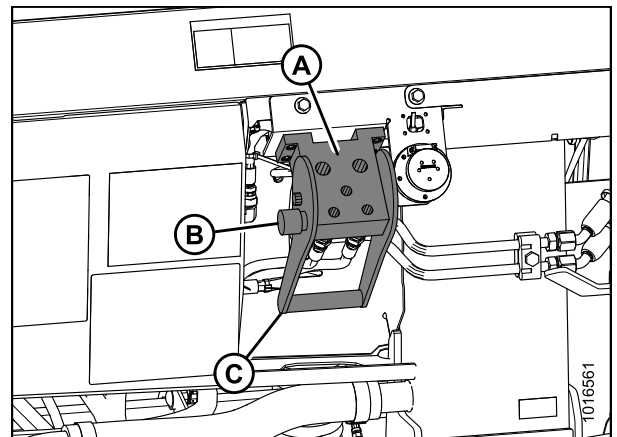

**Figure 4.24: Float Module Receptacle**


14. Remove the hydraulic quick coupler (A) from the combine and clean the mating surfaces.



**Figure 4.25: Combine Connectors**


## ATTACHING HEADER TO COMBINE

15. Position the coupler onto the coupler receptacle (A) and push the handle (B) (not shown) to engage the multicoupler pins into the receptacle.
16. Push the handle (B) to the closed position until the lock button (C) snaps out.

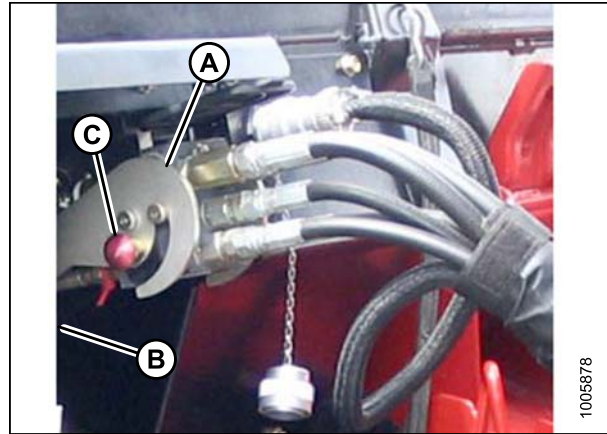

**Figure 4.26: Hydraulic Connection**

17. Remove the cover from the electrical receptacle (A). Ensure the receptacle is clean and has no signs of damage.

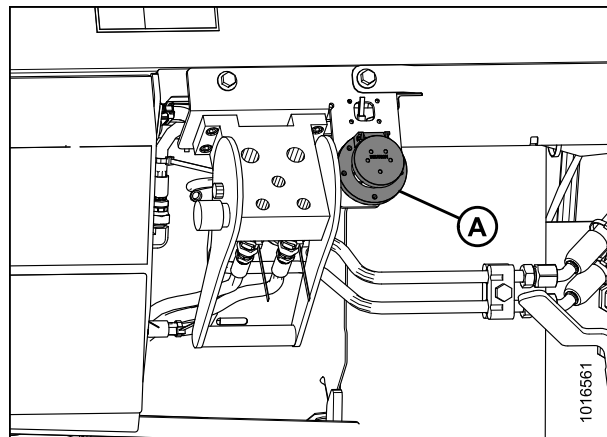

**Figure 4.27: Electrical Receptacle**

18. Remove the electrical connector (A) from the storage cup on the combine and route it to the float module receptacle.




**Figure 4.28: Combine Connectors**




## ATTACHING HEADER TO COMBINE

19. Align the lugs on the connector (A) with the slots in the receptacle (B), push the connector onto the receptacle, and turn the collar on the connector to lock it in place.

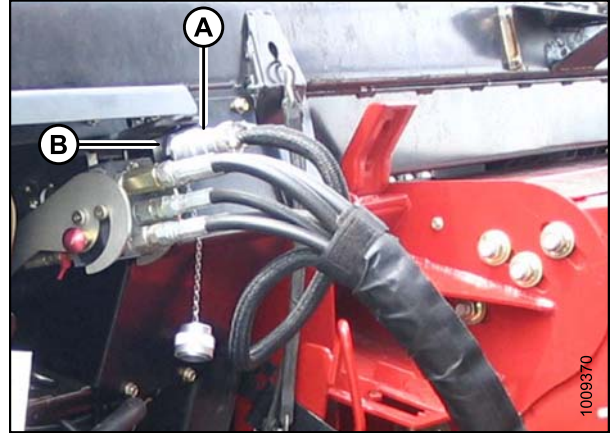


**Figure 4.29: Electrical Connection**

20. Remove the bolt (A) and strap (B) and remove the driveline from the support bracket (C).

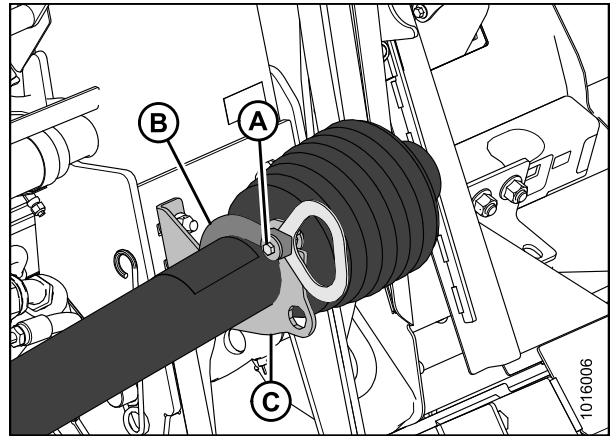

**Figure 4.30: Float Module Driveline Storage Hook**


21. Pull back the collar (A) on the end of the driveline and push the driveline onto the combine output shaft (B) until the collar locks.

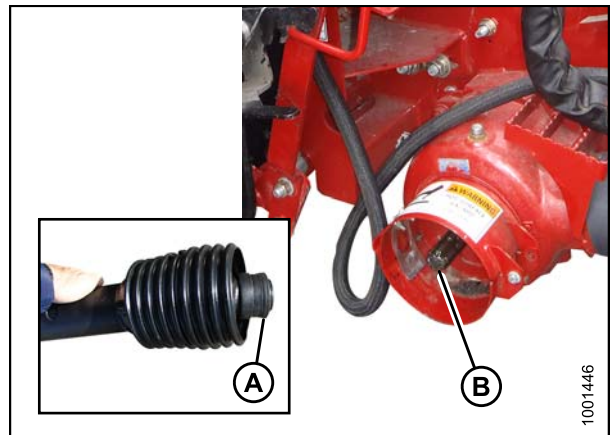

**Figure 4.31: Combine Output Shaft**

## ATTACHING HEADER TO COMBINE

22. Disengage both header float locks by pushing down float lock handle (A) and placing it under the hook (UNLOCK).

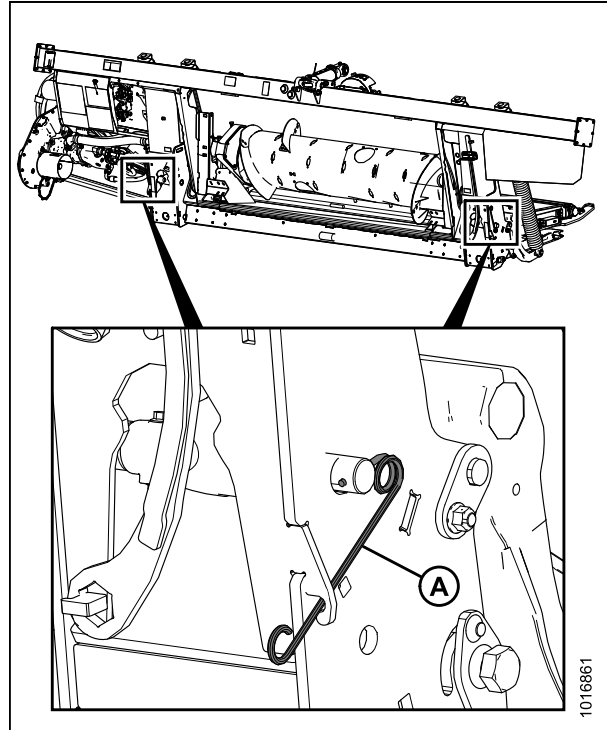

**Figure 4.32: Float Lock in UNLOCK Position**

23. Proceed to [5.1 Attaching Cam Arms, page 79](#).

## 4.3 John Deere Combines

The FD1-Series FlexDraper® header is compatible with John Deere 60, 70, S, and T Series combines.

### 4.3.1 Installing Reel Fore-Aft/Header Tilt Switch: S and T Series Combines

The reel fore-aft/header tilt switch allows the combine Operator to select either reel FORE-AFT or HEADER TILT mode.

#### WARNING

**To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.**

This procedure is applicable to John Deere S and T Series combines only. For John Deere 60 or 70 Series combines, refer to [4.3.2 Installing Reel Fore-Aft/Header Tilt Switch: 60 and 70 Series Combines, page 49](#).

#### IMPORTANT:

To prevent damage to electronic components, disconnect the positive cable from the combine battery and turn the battery disconnect switch to the OFF position before connecting the reel fore-aft/header tilt harness to the combine's auxiliary power connectors.

Prepare the combine cab for switch and harness installation as follows:

1. Open storage compartment on the console.
2. Remove the two screws (A) attaching compartment cover (B) to console and remove cover.
3. Lift floor mat (A) at forward right corner to access knockout (B).
4. Remove the knockout (B).

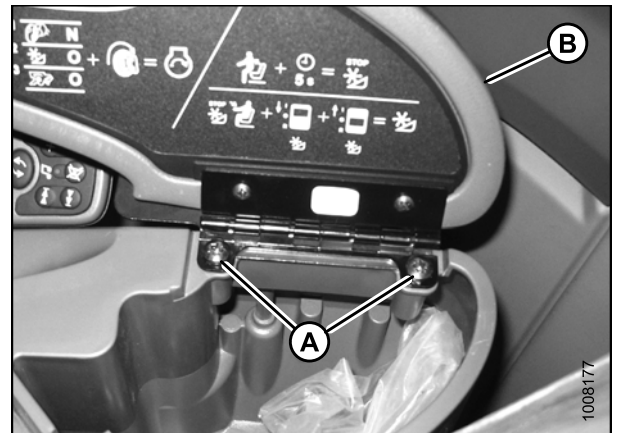


Figure 4.33: Storage Compartment and Cover


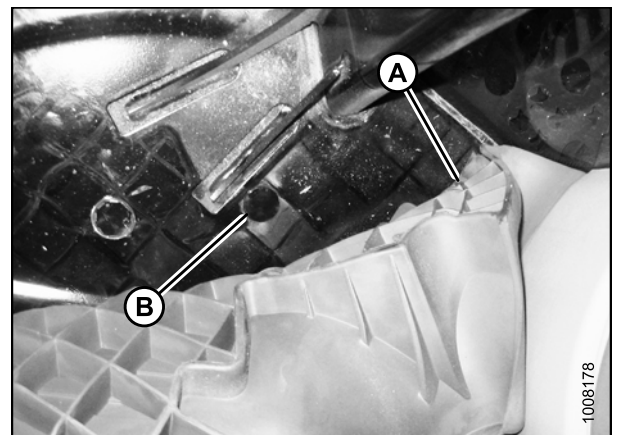


Figure 4.34: Floor Mat at Forward Right Corner and Knockout


## ATTACHING HEADER TO COMBINE

5. Retrieve switch (A), harness (B), and support (C) provided with kit.
6. Install switch (A) into support (C) from the top. Ensure lugs on underside of support have secured the switch.

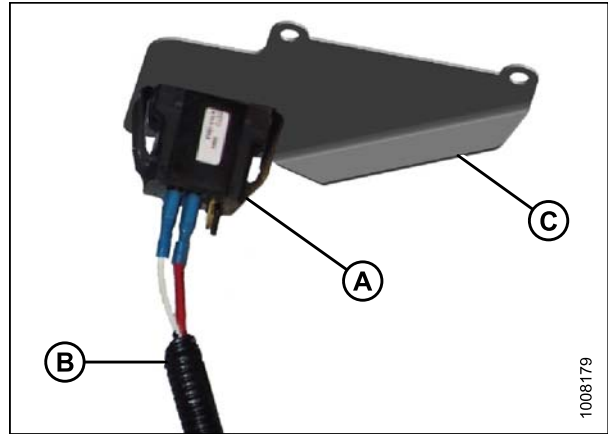

**Figure 4.35: Switch and Harness**


7. Connect the switch end of harness (A) to switch (B) with one of the wires to center terminal and the other wire to either outer terminal. The color of the wires does not matter; ensure one wire terminates at the center terminal.

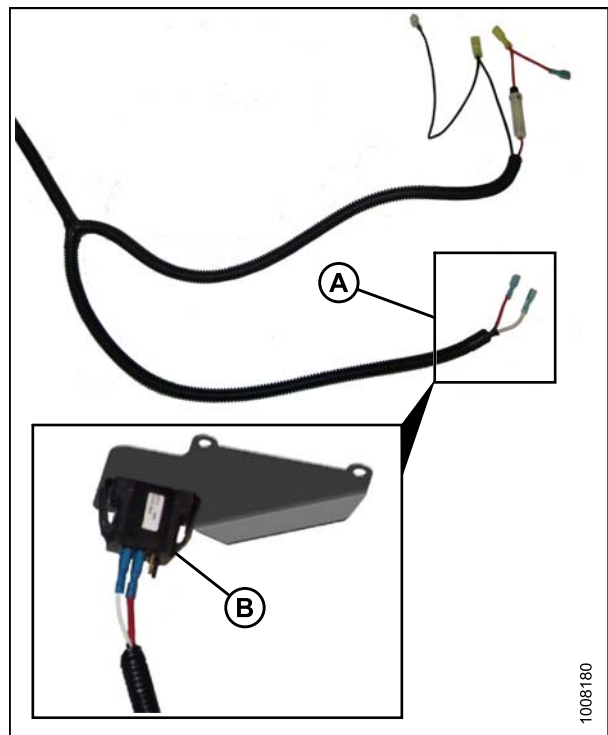

**Figure 4.36: Switch End of Harness and Switch**


## ATTACHING HEADER TO COMBINE

8. Position support (C) onto console and align the holes in support with holes in the console.
9. Reinstall cover (B) with existing screws (A).

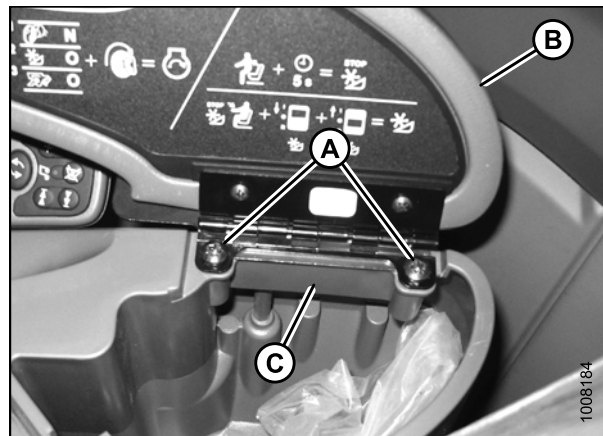


**Figure 4.37: Support Position on Console**

10. Close cover and ensure that switch (A) and support (B) are secure.

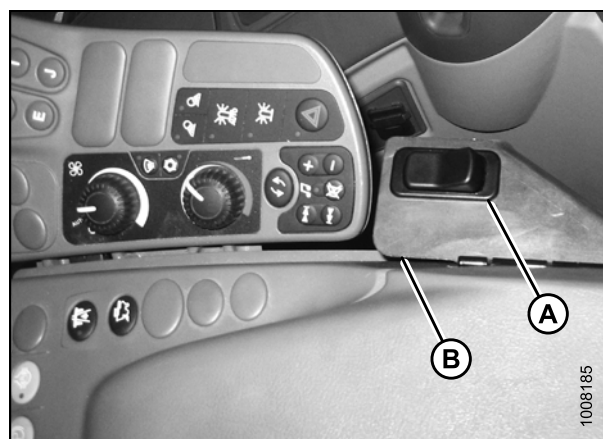

**Figure 4.38: Secured Switch**

11. Connect the feed end of harness (A) to the auxiliary power outlet strip on the right side of the cab floor.

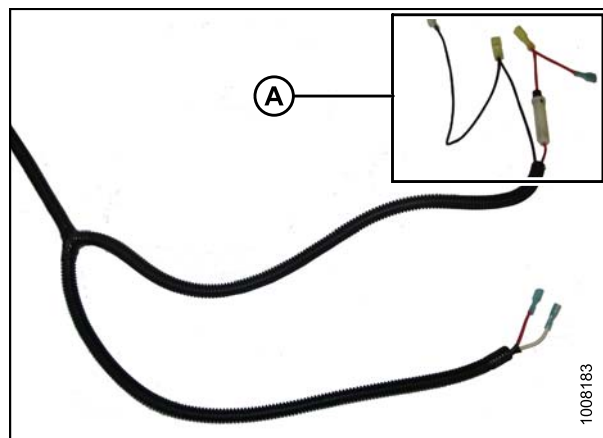

**Figure 4.39: Feed End of Harness**

## ATTACHING HEADER TO COMBINE

12. Connect the harness end to one of the auxiliary power supply points (D).
13. Connect the wire (from the in-line fuse) to the switched power supply (C).
14. Connect the other wire to ground (B).

**IMPORTANT:**

Connecting the switch harness to an unswitched power supply or cigarette lighter will supply constant power to the header tilt side of the solenoid valve and drain the combine battery during extended shutdown periods.

15. Tape unused wire jumpers to harness.

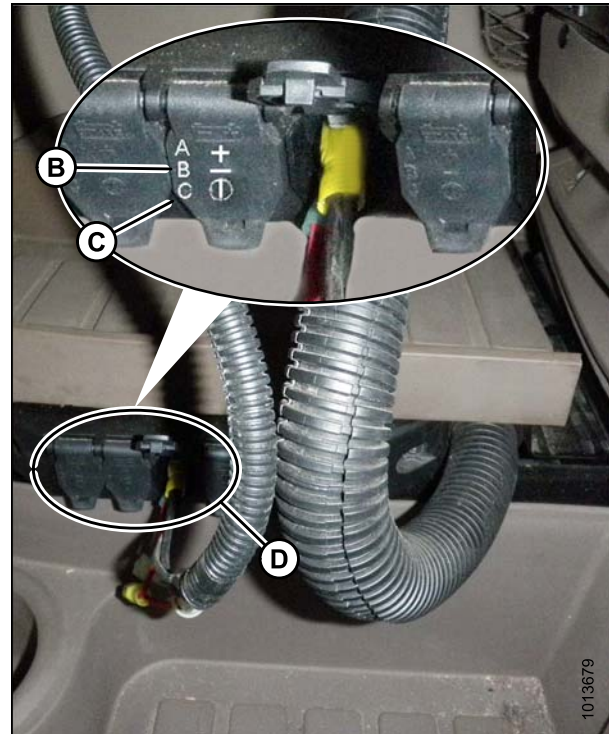


Figure 4.40: Combine Auxiliary Power Supply

16. Route plug end of harness (A) through hole (B) in cab floor, and feed the entire length outside the cab. Leave some slack in the cab to allow for console adjustment.
17. Replace floor mat.

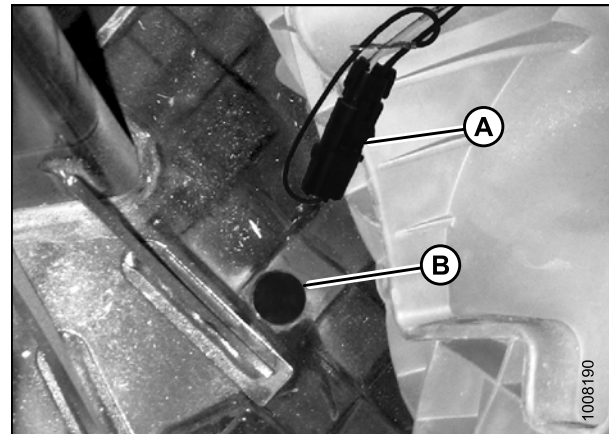


Figure 4.41: Plug End of Harness



## ATTACHING HEADER TO COMBINE

18. Route harness (A) under the cab (along the existing hoses) to the left side of the feeder house, under hose shield (C), and to the multicoupler (B).
19. Secure the harness to hoses with cable ties as required.

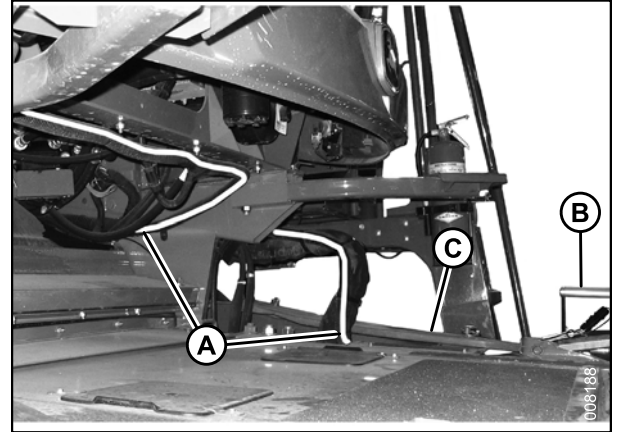


Figure 4.42: Harness and Feeder House Multicoupler

### 4.3.2 Installing Reel Fore-Aft/Header Tilt Switch: 60 and 70 Series Combines

The reel fore-aft/header tilt switch allows the combine Operator to select either reel FORE-AFT or HEADER TILT mode.

#### WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

This procedure applies to John Deere 60 and 70 Series combines. For John Deere S and T Series combines, refer to [4.3.1 Installing Reel Fore-Aft/Header Tilt Switch: S and T Series Combines, page 45](#).

#### IMPORTANT:

To prevent damage to electronic components, disconnect the positive cable from the combine battery and turn the battery disconnect switch to the OFF position before connecting the reel fore-aft/header tilt harness to the combine's auxiliary power connectors.

1. To ensure the switch harness will attach to selector valve wiring harness (with header tilted forward) and that the feeder house can be fully lowered with adequate slack in the harness, lay the switch harness along the route from front of the feeder house to the auxiliary power supply in the cab.
2. Route the switch harness (A) through an existing grommet (B) on the combine's electrical plate (located at the rear of the right-hand side window).

#### NOTE:

To simplify feeding the harness through the grommet, wrap the switch and power plugs with electrical tape.

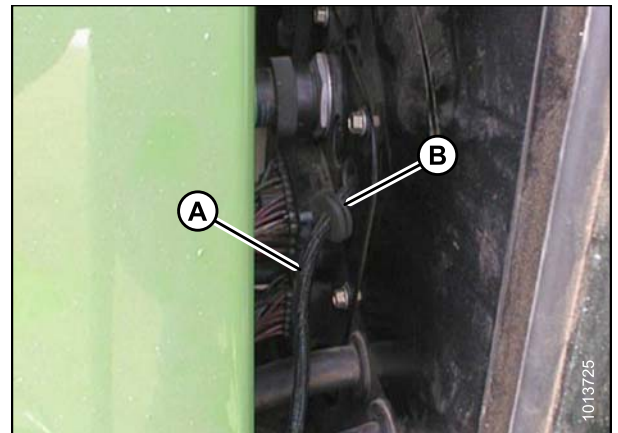


Figure 4.43: Switch Harness Routing

## ATTACHING HEADER TO COMBINE

3. Retrieve switch (A) and support (C) provided with kit.
4. Install switch (A) into support (C) from the top. Ensure lugs on underside of support have secured the switch.

**NOTE:**

Image at right shows switch (A) connected to the harness (B).

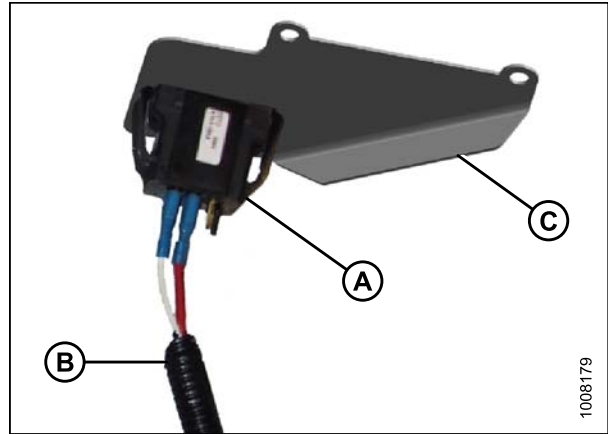


Figure 4.44: Switch and Harness

5. Mount switch plate (A) between the armrest cover hinge and the armrest using existing screws (B).

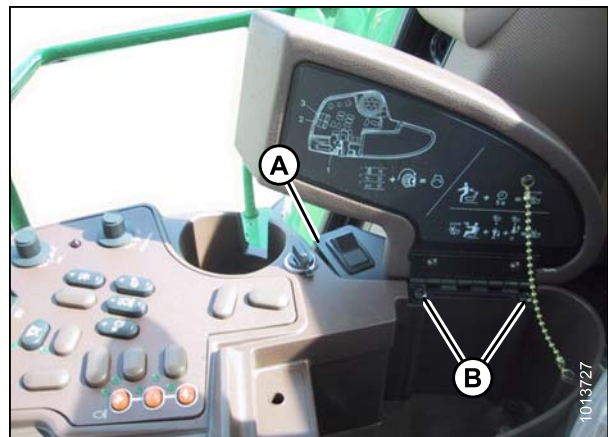


Figure 4.45: Switch Plate Mounting



## ATTACHING HEADER TO COMBINE

6. Connect the switch end of harness (A) to switch (B) with one of the wires to center terminal and the other wire to either outer terminal.

**NOTE:**

The color of the wires does not matter; ensure one wire terminates at the center terminal.

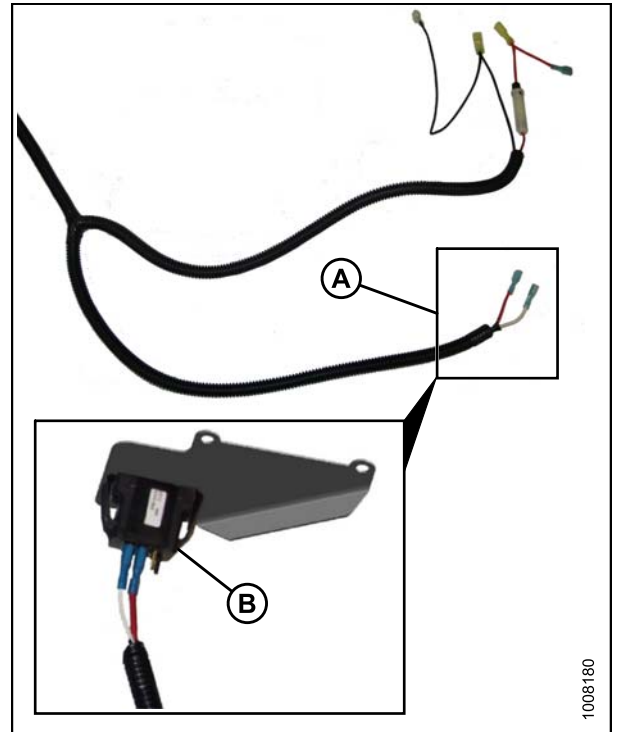


Figure 4.46: Switch End of Harness and Switch

7. Connect the switch harness to the auxiliary power supply (D). Connect the wire with the in-line fuse to the switched power supply (C) and the second wire to the ground (B).

**IMPORTANT:**

Connecting the switch harness to an unswitched power supply or cigarette lighter will supply constant power to the header tilt side of the solenoid valve and drain the combine battery during extended shutdown periods.

8. Tape the unused wire jumpers to the harness.

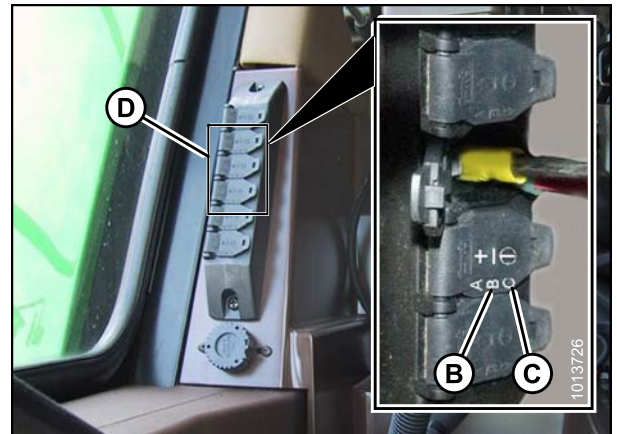



Figure 4.47: Auxiliary Power Supply

## ATTACHING HEADER TO COMBINE

9. Route the switch harness (A) across the underside of the cab, alongside an existing harness, to the left side of the feeder house.

**IMPORTANT:**

To prevent damage to harness, ensure adequate slack by lowering the feeder house fully before securing harness with cable ties.

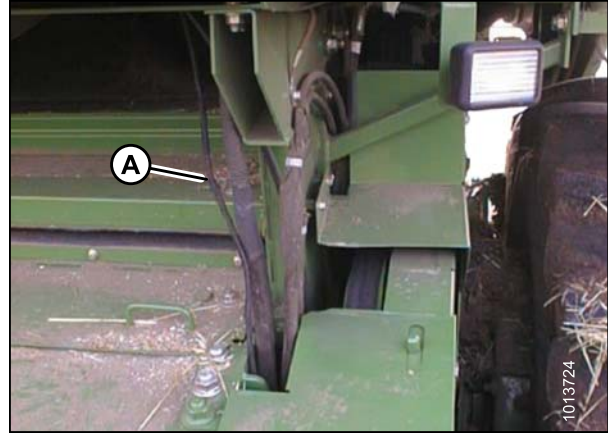


**Figure 4.48: Switch Harness Routing**

10. Secure the switch harness (A) at the rear of the feeder house with cable tie.



**Figure 4.49: Switch Harness Routing**

11. Route the switch harness (A) through the welded hose guide on feeder house.

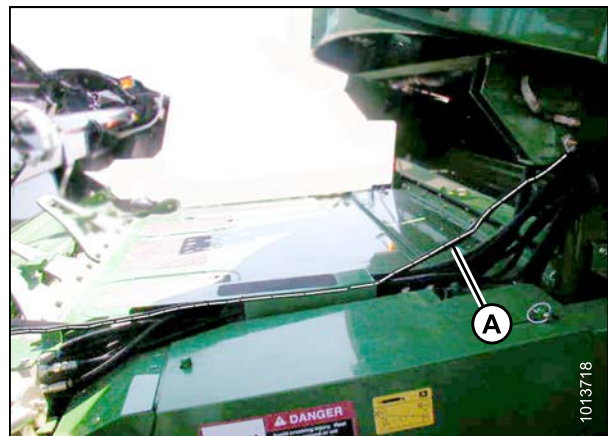

**Figure 4.50: 60/70 Series Harness Routing**

## ATTACHING HEADER TO COMBINE

12. Secure the switch harness (A) at multicoupler with a cable tie. Leave 40 in. (100 cm) extending past location (B).

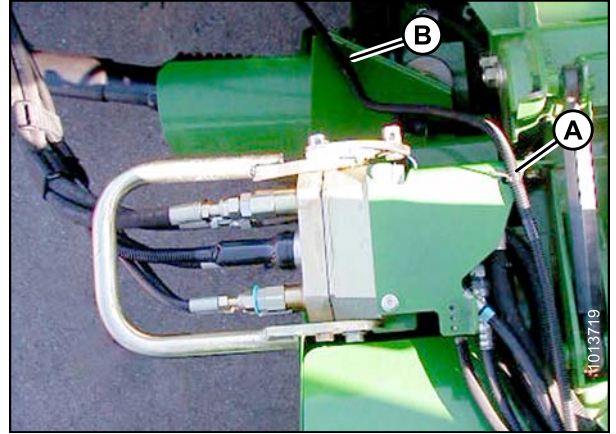


Figure 4.51: Switch Harness Routing

### 4.3.3 Attaching Header to John Deere Combine

#### DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Push the handle (A) on the combine multicoupler receptacle towards the feeder house to retract the pins (B) at the bottom corners of the feeder house. Clean the receptacle.

#### CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

2. Start the engine and slowly drive the combine up to the header until the feeder house saddle (C) is directly under the float module top cross member (D).
3. Raise the feeder house slightly to lift the header ensuring the feeder house saddle is properly engaged in the float module frame.
4. Stop the engine and remove the key from the ignition.

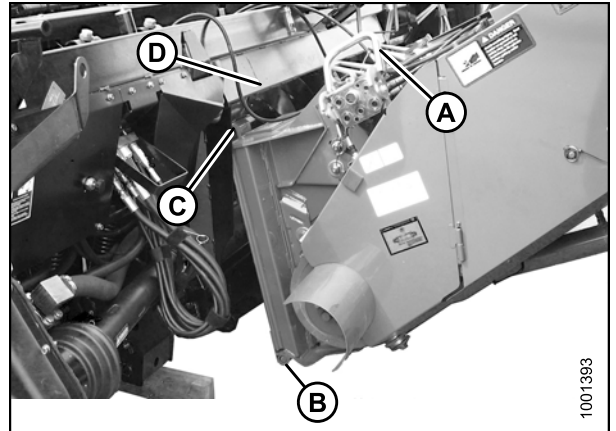


Figure 4.52: Combine and Float Module

## ATTACHING HEADER TO COMBINE

5. Pull the handle (A) on the float module to release the multicoupler (B) from the storage position. Remove the multicoupler, and push the handle back into the float module to store.

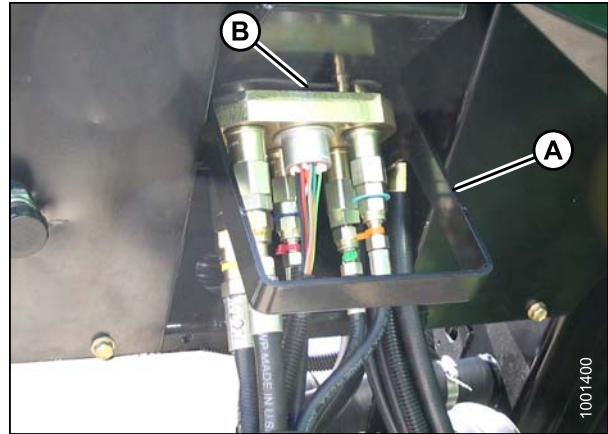


Figure 4.53: Multicoupler Storage

6. Position the multicoupler (A) onto the receptacle, and pull the handle (B) to engage the lugs on the multicoupler into the handle.
7. Pull the handle (B) to a horizontal position and ensure the multicoupler (A) is fully engaged into the receptacle.

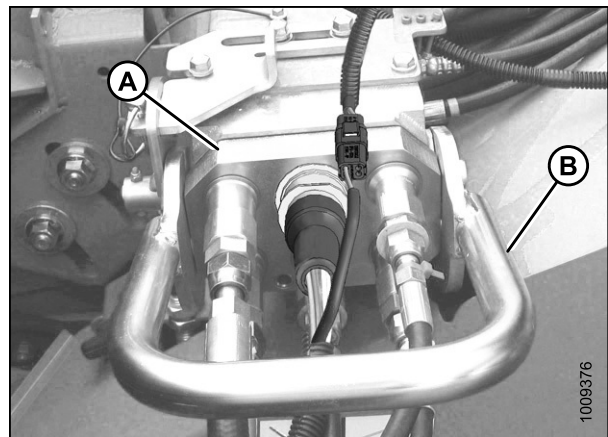


Figure 4.54: Multicoupler

8. Ensure that both feeder house pins (C) are fully engaged into the float module brackets.

**NOTE:**

If the pins (C) do not fully engage the float module brackets, loosen the bolts (D) and adjust the bracket as required.

9. Tighten bolts (D).


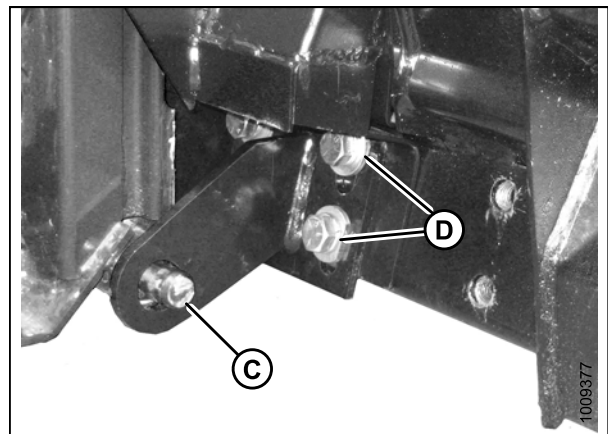


Figure 4.55: Feeder House Pin




## ATTACHING HEADER TO COMBINE

10. Slide the latch (A) to lock the handle (B) in position and secure with the lynch pin (C).
11. Connect the harness (D) to the combine connector (E) (only if the float module is equipped with the reel fore-aft/header tilt selector).

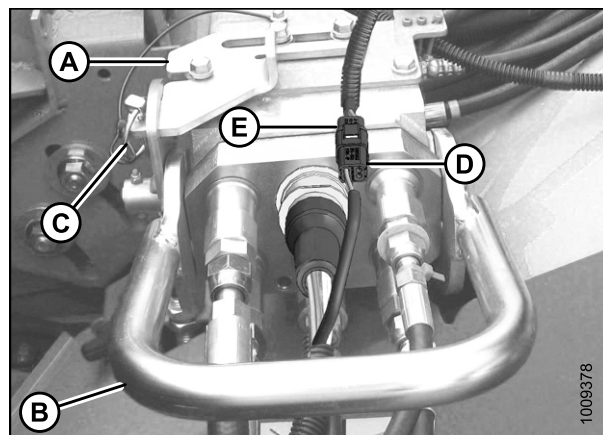


**Figure 4.56: Multicoupler**

12. Remove the bolt (A) and strap (B) and remove the driveline from the support bracket (C).

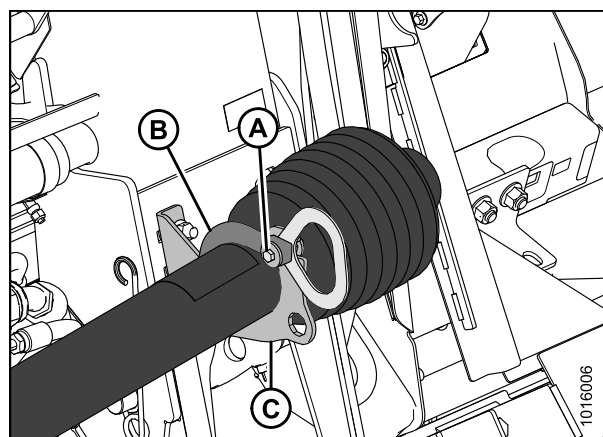

**Figure 4.57: Driveline**


13. Pull back the collar (A) on the end of the driveline, and push the driveline onto the combine output shaft (B) until the collar locks.

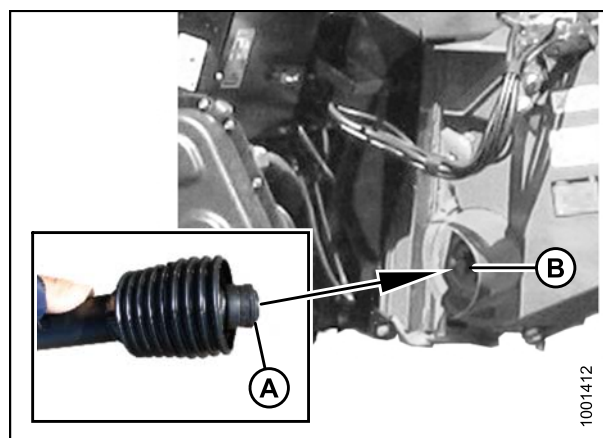

**Figure 4.58: Driveline**

## ATTACHING HEADER TO COMBINE

14. Disengage both header float locks by pushing down float lock handle (A) and placing it under the hook (UNLOCK).

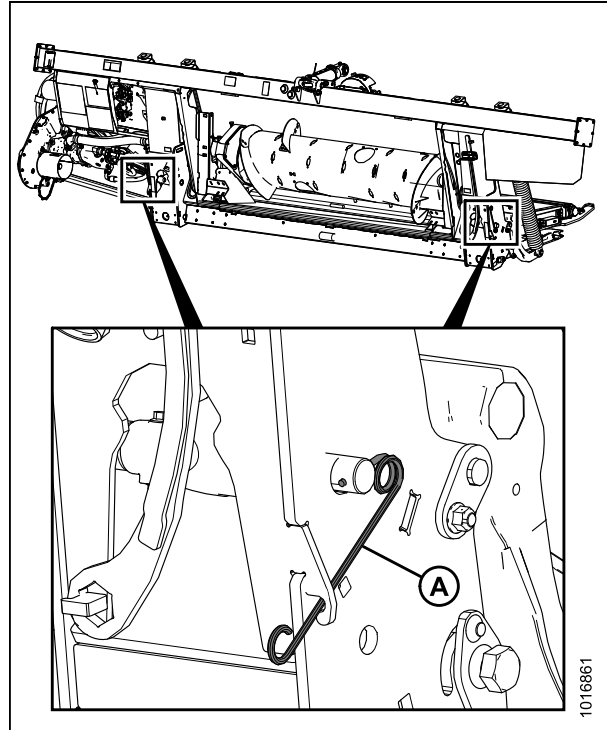

**Figure 4.59: Float Lock in UNLOCK Position**

15. Proceed to [5.1 Attaching Cam Arms, page 79](#).

## 4.4 Lexion Combines

The FD1-Series FlexDraper® header is compatible with Lexion 500, 600, and 700 Series combines.

### 4.4.1 Installing Reel Fore-Aft/Header Tilt Selector Switch and Harness: 500 Series

1. Remove storage tray (A) from console.



Figure 4.60: Console Tray

2. Remove 13 mm hex nut (A) and washer from under combine monitor at front of console as shown.

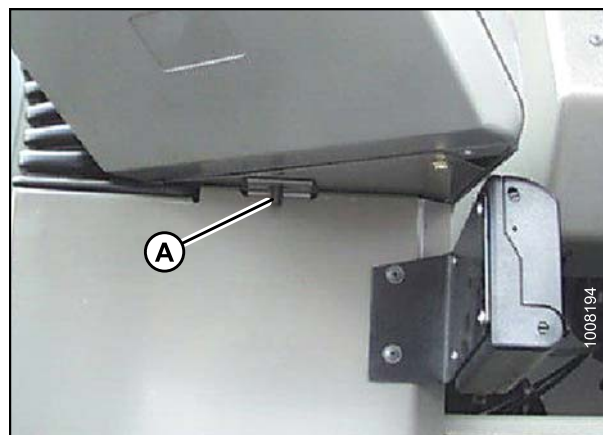


Figure 4.61: Combine Monitor

## ATTACHING HEADER TO COMBINE

3. Tilt console (A) back.

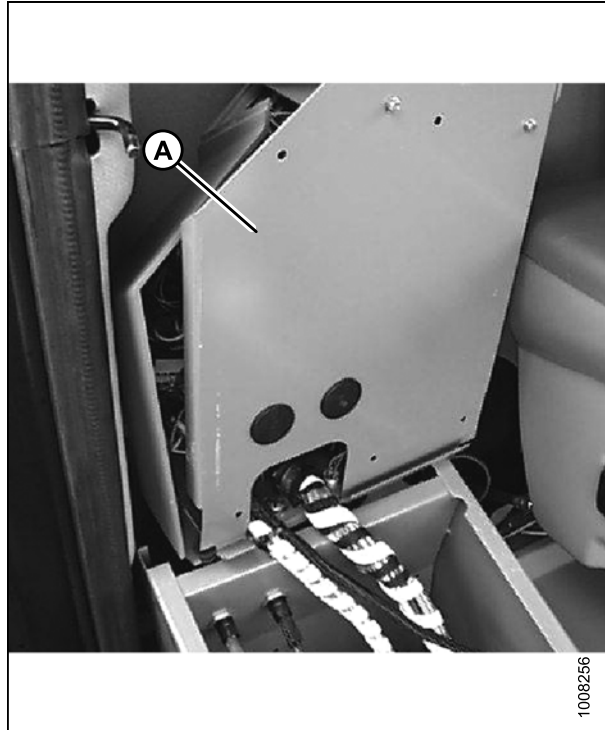


Figure 4.62: Tilted Console

4. Remove plug (A) from cab floor under console. Install adapter connector through hole and route harness through hole.
5. Cut a slit in the rubber floor plug (A) and slide plug over wiring harness.

**NOTE:**

Maintain some wire slack to prevent damage to harness.


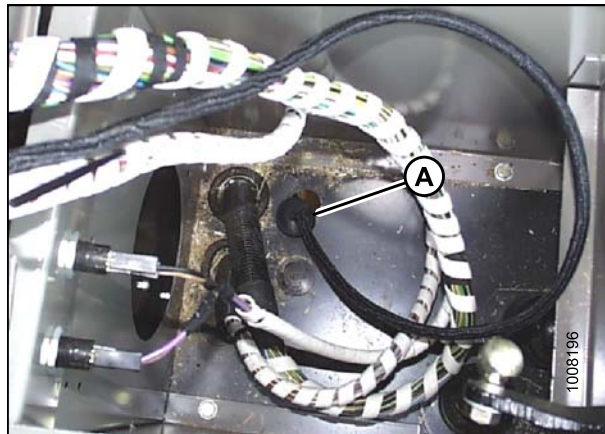


Figure 4.63: Harness through Hole in Floor




## ATTACHING HEADER TO COMBINE

6. Remove five screws (A) to access wiring connections underneath console.

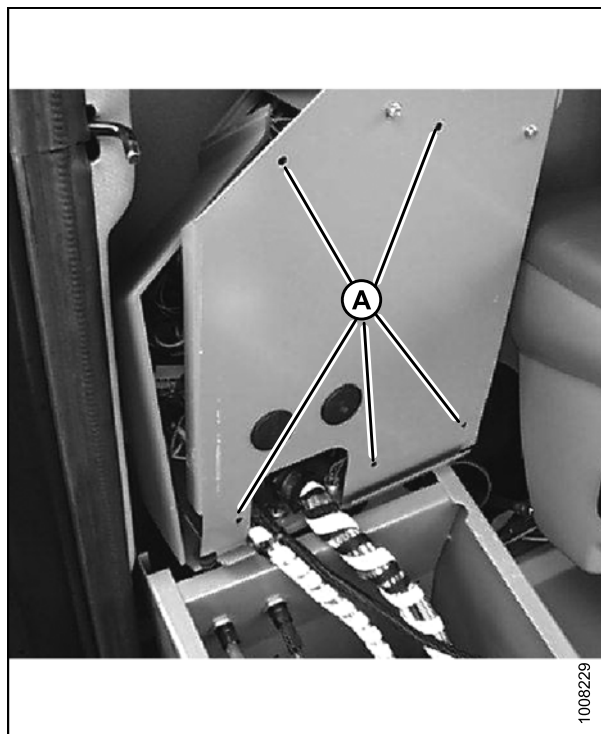

**Figure 4.64: Five Screws in Console**


7. Remove switch plug from top side of console at location shown (A) and push switch connector through the backside of console.

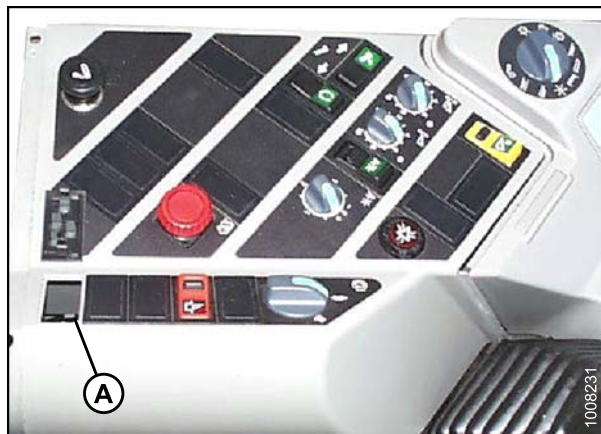

**Figure 4.65: Switch Plug in Console**


## ATTACHING HEADER TO COMBINE

8. Connect switch (A) to the switch harness. Connect the red wire to the center terminal, and the white wire to either outer terminal.

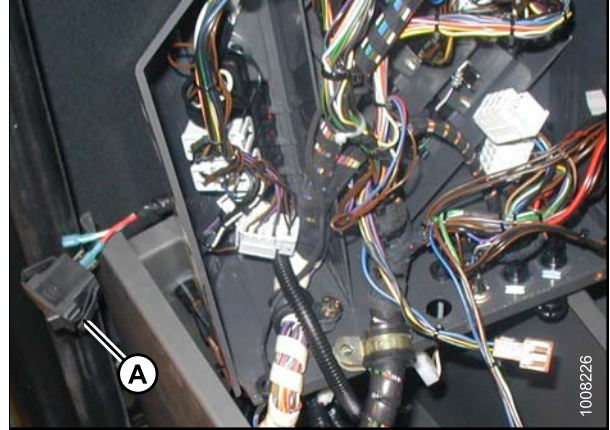


**Figure 4.66: Back of Console (Rocker Switch [A] Shown before Placement)**

9. Snap switch (A) into place.

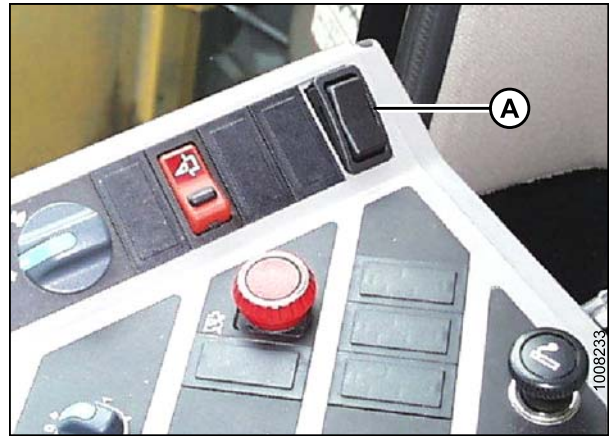

**Figure 4.67: Rocker Switch in Place**


10. Attach switch harness to existing wires (A) using a cable tie.

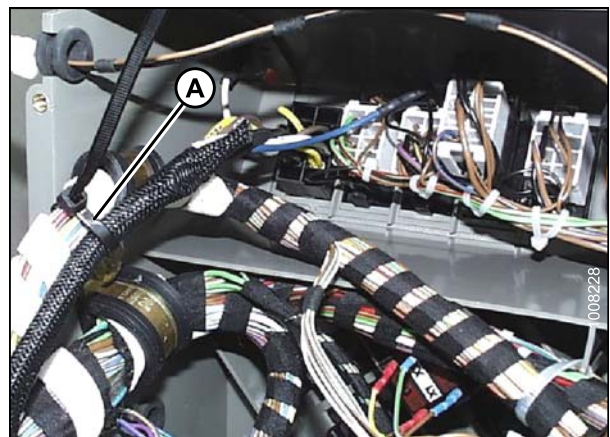

**Figure 4.68: Cable Ties, Harness, and Existing Wires**

## ATTACHING HEADER TO COMBINE


11. Reinstall plug (A) in floor.
12. Return switch console to its original position and tilt console back. Replace the five screws that were removed in Step 6., [page 59](#).

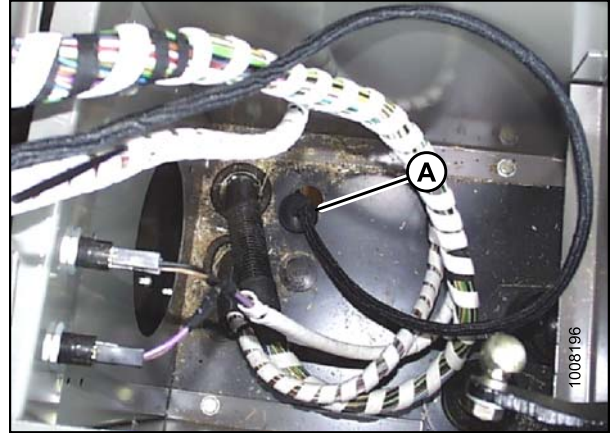

**Figure 4.69: Plug in Floor**

### 13. For two-connector hookups:

- a. Remove the brown wire (A) from the power source under the console and replace it with the black wire (B).
- b. Remove the black wire from the power source and replace it with the red wire (C).
- c. Attach the brown wire (removed from the power source) to the other red wire coming from the harness.
- d. Attach the black wire (removed from the power source) to the other black wire coming from the harness.

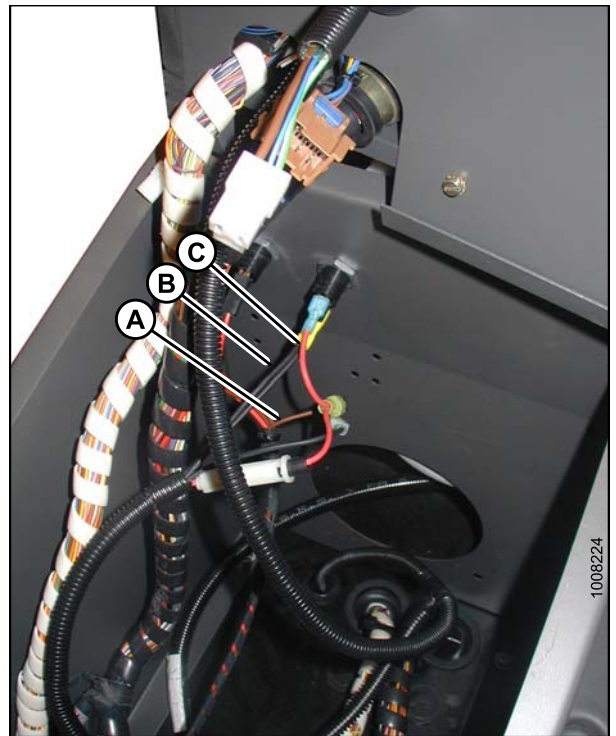

**Figure 4.70: Two-Connector Hookup: Switch Harness Installed**


## ATTACHING HEADER TO COMBINE

### 14. For single-connector hookups:

**NOTE:**

Remove the insulation from the male blades on the wire harness to allow the blades to attach to plug (A).


- Remove the white plug (A) with the brown and black wire from the power source under the console.
- Replace the white plug with the black wire (B) from the switch harness on the top terminal and the red wire (C) on the bottom terminal.
- Attach the remaining wires coming from harness to the white plug (D). Ensure the wires are attached black to black, and brown to red.

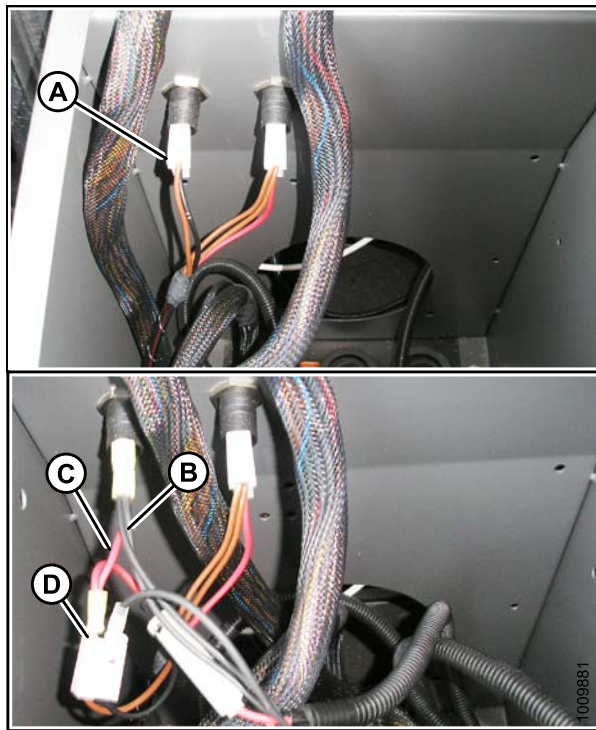

**Figure 4.71: Single Connector Hookup**

Top - Before Connecting the Switch Harness  
Bottom - After Connecting the Switch Harness

- Return console to its original position and install the washer and 13 mm hex nut (A) removed in Step 2., [page 57](#).

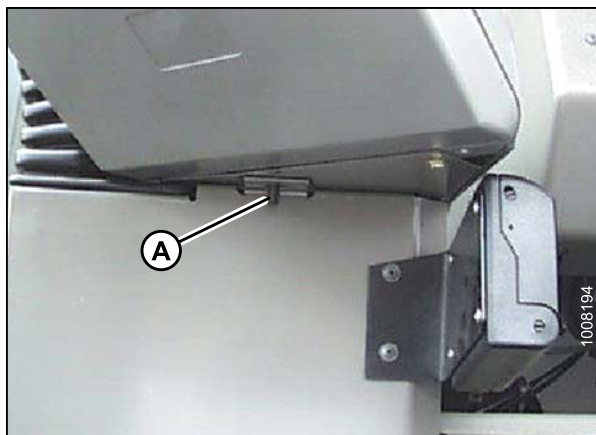


**Figure 4.72: Combine Monitor in Original Position**




## ATTACHING HEADER TO COMBINE

16. Route wiring harness (A) underneath cab floor. Place harness in steel tray (B) along underside of cab floor to prevent it from being damaged.

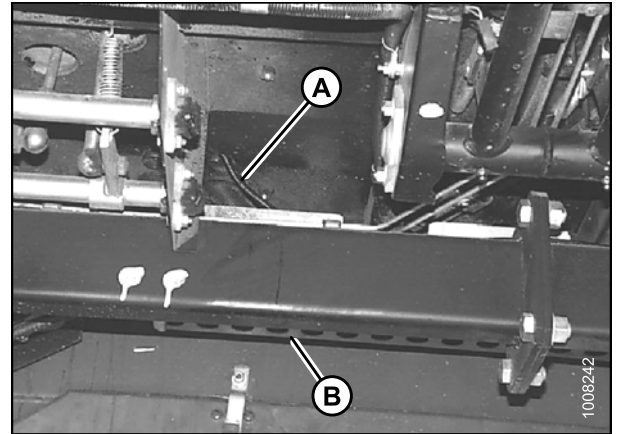

**Figure 4.73: Harness underneath Cab Floor**

17. Route wiring harness from the left corner of steel tray to conduit (A), between cab floor and frame as shown at (B), and along conduit (A) to the multicoupler.

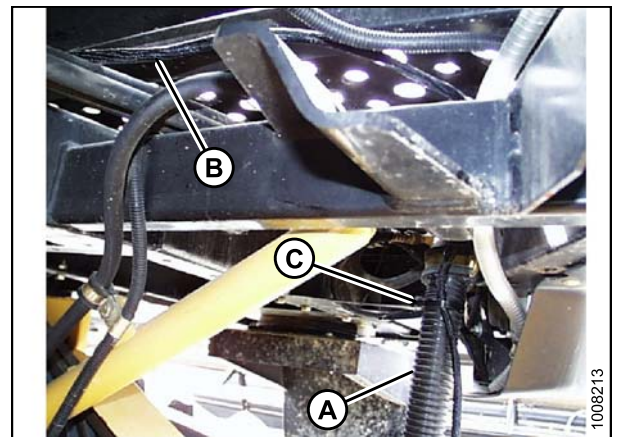


**Figure 4.74: Harness between Steel Tray and Conduit**

A - Conduit  
C - Cable Tie

B - Routing Location

18. Secure wiring harness to conduit (B) (starting from the multicoupler end) using cable ties at location (A).

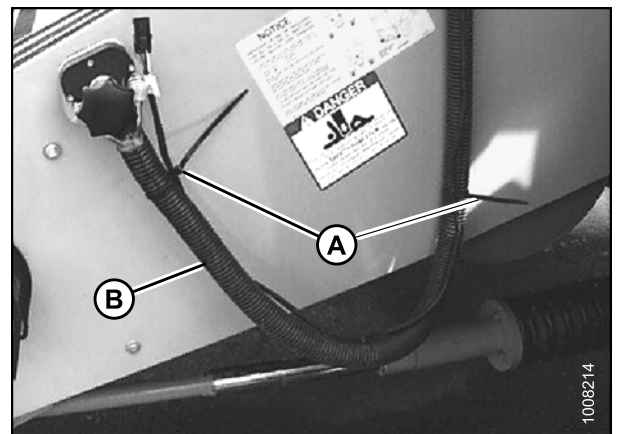

**Figure 4.75: Cable Ties, Harness, and Conduit**

## 4.4.2 Installing Reel Fore-Aft/Header Tilt Selector Switch and Harness: 700 Series

1. Remove two screws (A) from panel, and remove panel to access compartment.
2. Pull up on tab (B) to unlatch console.
3. Rotate the console upwards to expose the underside and make it easier to insert the tilt selector switch harness.

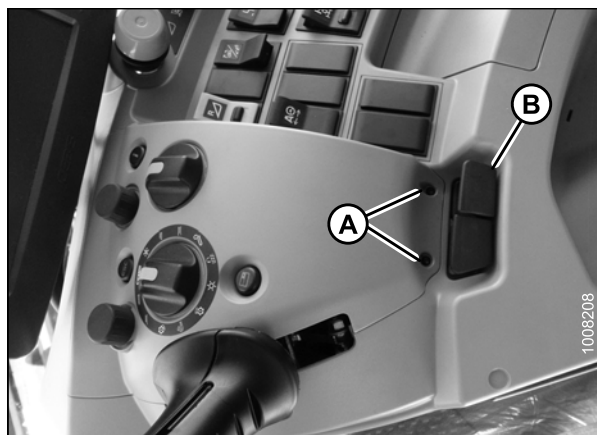


Figure 4.76: Console in Cab

4. Insert wire through bottom of console alongside wire (A) that goes to the CEBIS monitor.

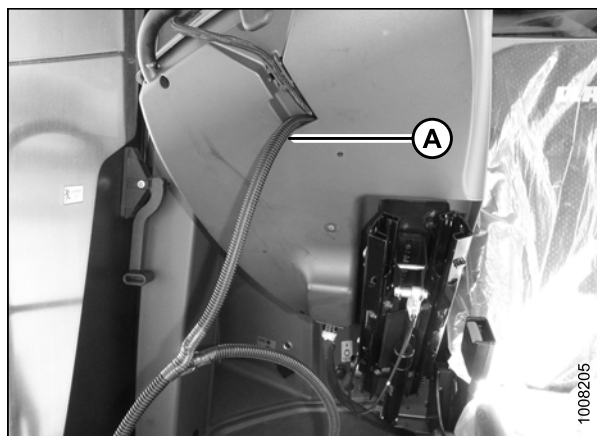


Figure 4.77: Bottom of Console

5. Remove blank cap from operator's panel at (A).
6. Run wire from the panel that was previously removed through the opening and connect the switch (not shown) to harness (B). The red wire is connected to center terminal, and the white wire is connected to either outer terminal.
7. Snap switch into place.

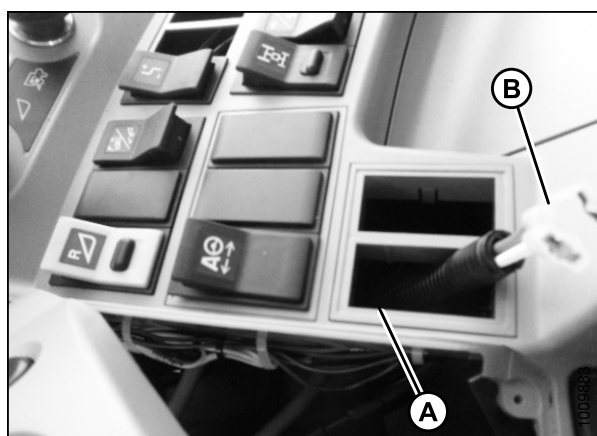


Figure 4.78: Switch and Console

## ATTACHING HEADER TO COMBINE

8. Secure switch (A) into console and screw down the operator's panel.
9. Pull back the slack on the switch harness and use cable ties to secure it to the existing wire harness running to the CEBIS monitor (refer to Step 4., page 64).

**NOTE:**

If autosteer is installed, select the blank plug next to (A).

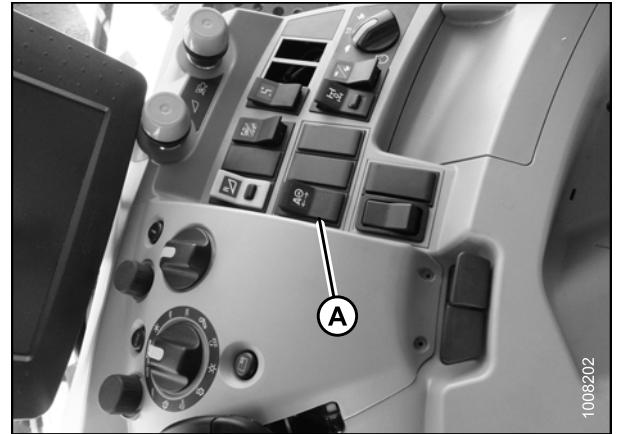


Figure 4.79: Switch in Console

10. Locate terminal compartment (A) on the floor at the right-hand side of the cab, and remove lid to access the 12 volt switched power.

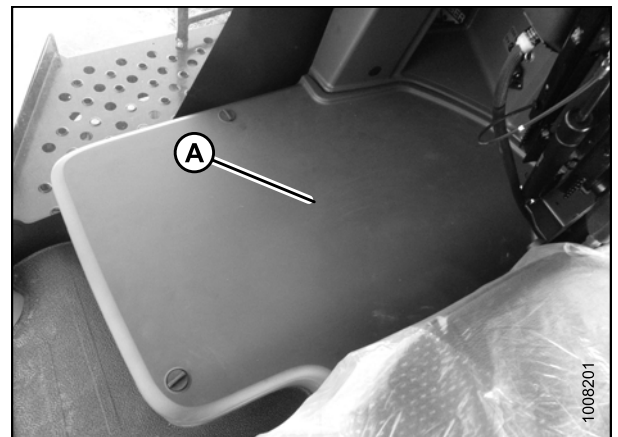


Figure 4.80: Lid of Terminal Compartment

11. Locate the single-wire harness (A) that provides switch power.
  - a. Remove the insulation from the two male blades on the switch harness.
  - b. Connect the red wire in plug (B) to the brown wire in plug (C).
  - c. Connect the black wire in plug (C) to the black wire in plug (A).


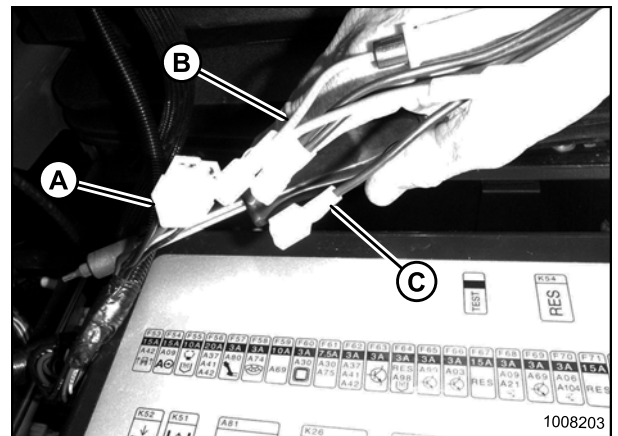


Figure 4.81: Wire Harness


## ATTACHING HEADER TO COMBINE

12. Make an exit hole for the switch harness in one of the blank covers to the left side of the box at (A).
13. Route the two-prong wire (black/white connector) of the switch harness through the hole.

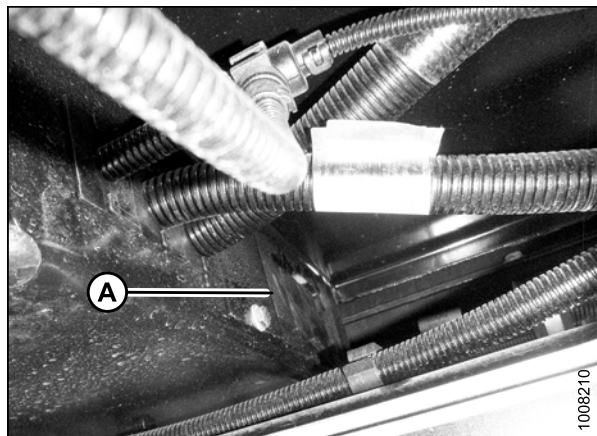


**Figure 4.82: Exit Hole and Switch Harness**

14. Route switch harness (A) under the cab floor alongside the existing harnesses. Do NOT secure harness with cable ties until routing is complete.

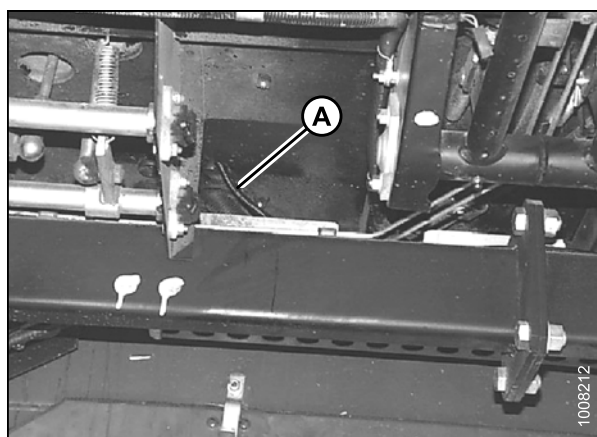

**Figure 4.83: Harness under Cab Floor (500 Series Lexion Shown)**

15. Route the wiring harness from bottom left corner of cab to the conduit (A), between cab floor and frame as shown at (B), and along conduit (A) to multicoupler.

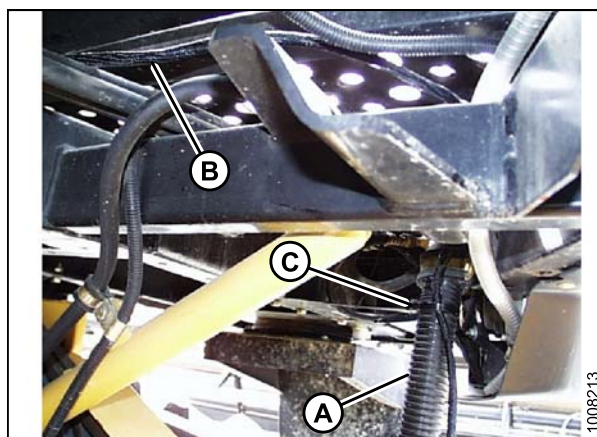

**Figure 4.84: Harness through Conduit (500 Series Lexion Shown)**


A - Conduit  
C - Cable Tie

B - Routing Location




## ATTACHING HEADER TO COMBINE

16. Secure wiring harness to conduit (B) (starting from the multicoupler end) using cable ties at location (A).

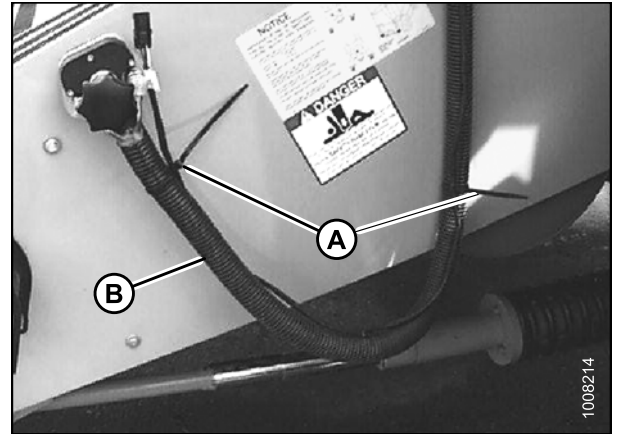

**Figure 4.85: Cable Ties, Harness, and Conduit (500 Series Lexion Shown)**

17. Push excess harness back into terminal box once harness is secured with cable ties, and use cable ties to attach MacDon harness to existing harness (A) running to the console. This will prevent the harness from getting tangled when seat or console are moved.

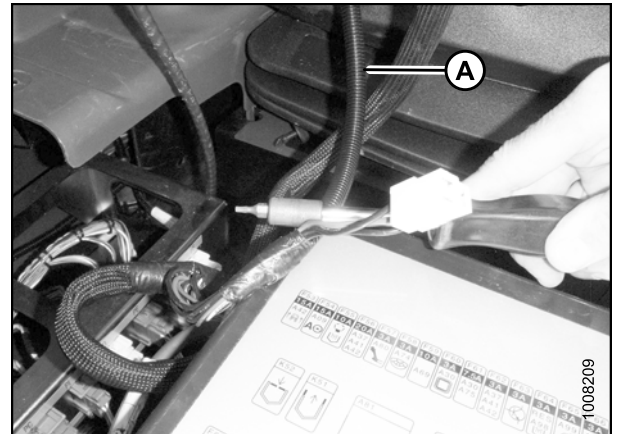

**Figure 4.86: Existing Harness and MacDon Harness**

### 4.4.3 Attaching Header to Lexion Combine

#### **DANGER**

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

## ATTACHING HEADER TO COMBINE

1. Move the handle (A) on the FM100 float module into the raised position, and ensure the pins (B) at the bottom corners of the float module are retracted.

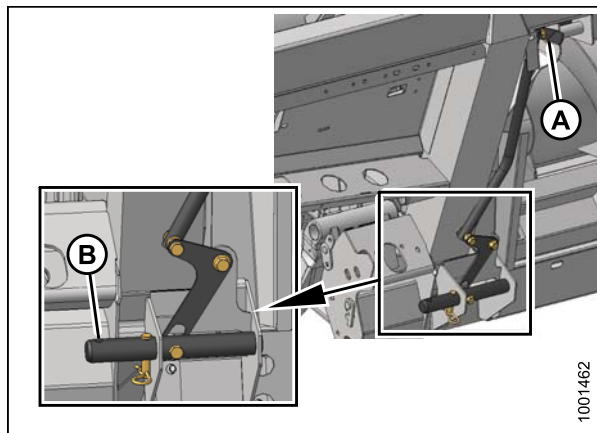


Figure 4.87: Pins Retracted

### CAUTION

**Never start or move the machine until you are sure all bystanders have cleared the area.**

2. Start the engine and slowly drive the combine up to the header until the feeder house saddle (A) is directly under the float module top cross member (B).
3. Raise the feeder house slightly to lift the header ensuring the feeder saddle is properly engaged in the float module frame.
4. Stop the engine and remove the key from the ignition.
5. Remove the locking pin (B) from the float module pin (A).

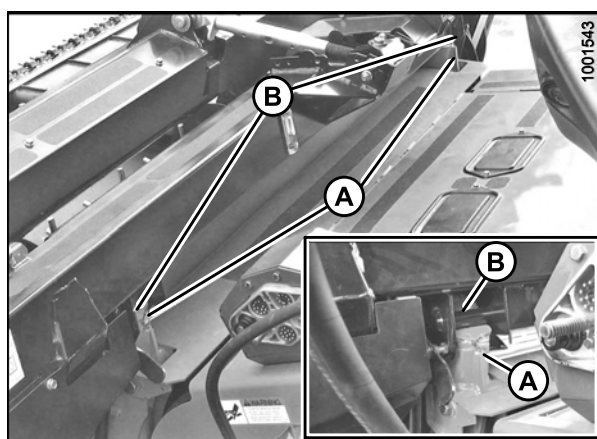


Figure 4.88: Header on Combine

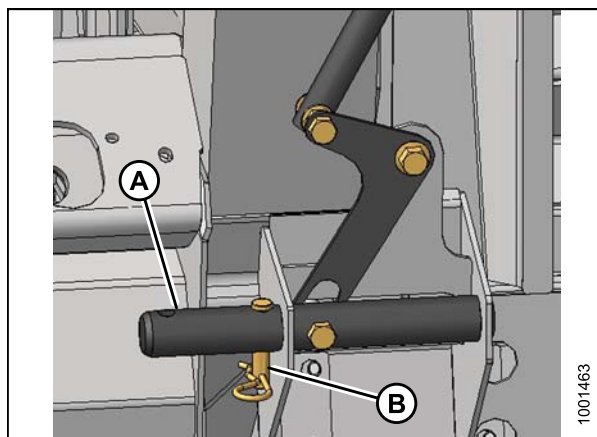


Figure 4.89: Locking Pins

## ATTACHING HEADER TO COMBINE


6. Lower the handle (A) to engage the float module pins (B) into the feeder house. Reinsert the locking pin (C) and secure with the hairpin.
7. Remove the blocks from under the cutterbar.



### CAUTION


**Never start or move the machine until you are sure all bystanders have cleared the area.**

8. Start the engine and lower the header.
9. Stop the engine and remove the key from the ignition.

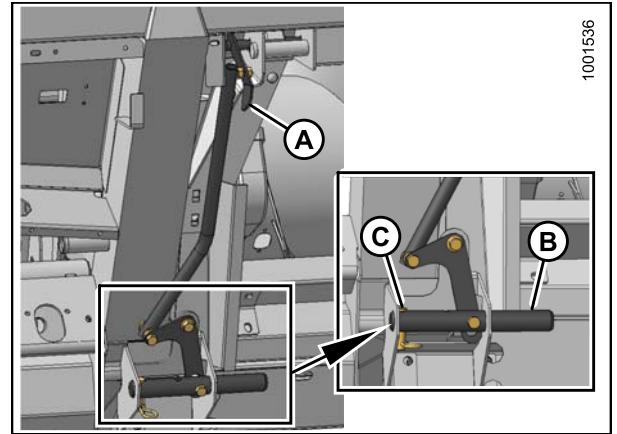

**Figure 4.90: Engaging Pins**


10. Unscrew the knob (A) on the combine coupler (B) to release the coupler from the combine receptacle and clean the coupler.

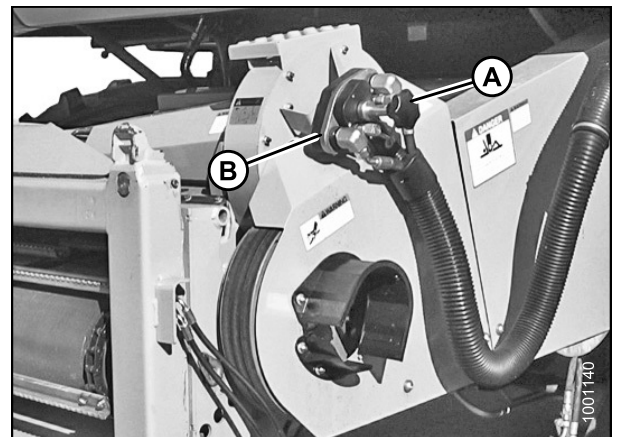

**Figure 4.91: Combine Coupler**


## ATTACHING HEADER TO COMBINE

11. Remove float module receptacle cover (A).

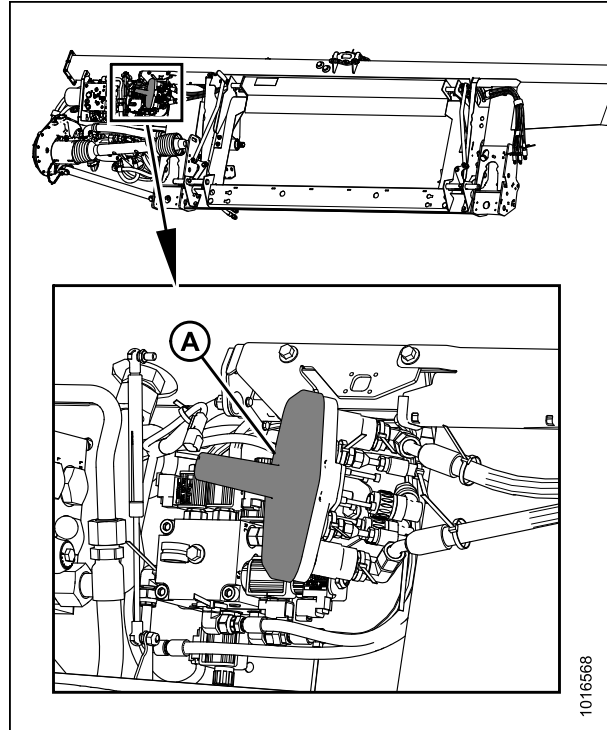

**Figure 4.92: Receptacle Cover**


12. Place the float module receptacle cover (A) onto the combine receptacle.

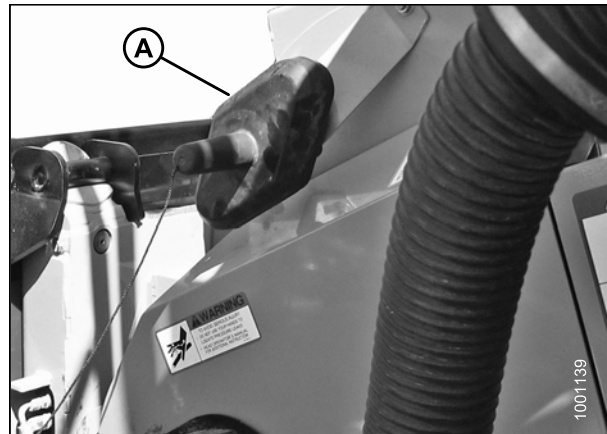

**Figure 4.93: Receptacle Cover**


## ATTACHING HEADER TO COMBINE

13. Clean the mating surface of the coupler (A) and position onto the float module receptacle (B).
14. Turn the knob (C) to secure the coupler to the receptacle.
15. Connect the combine harness to the reel fore-aft/header tilt selector receptacle.

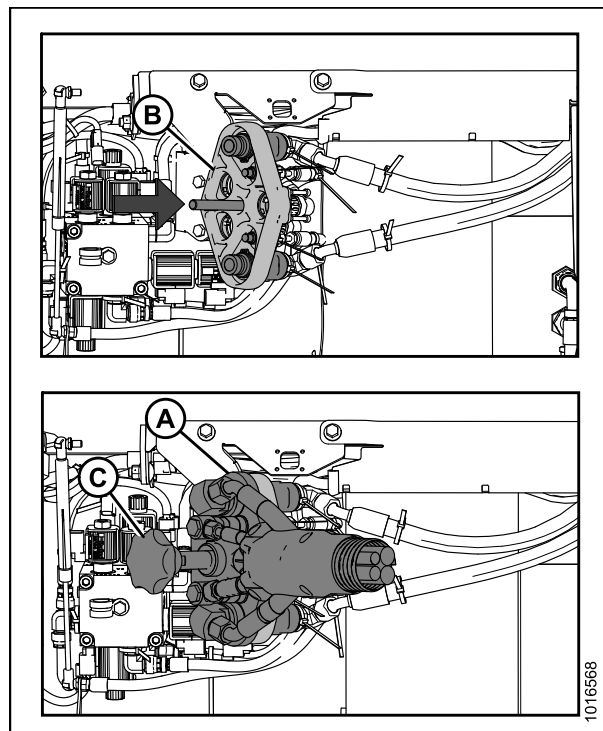

**Figure 4.94: Coupler**


16. Connect the combine harness to the reel fore-aft/header tilt receptacle (A).

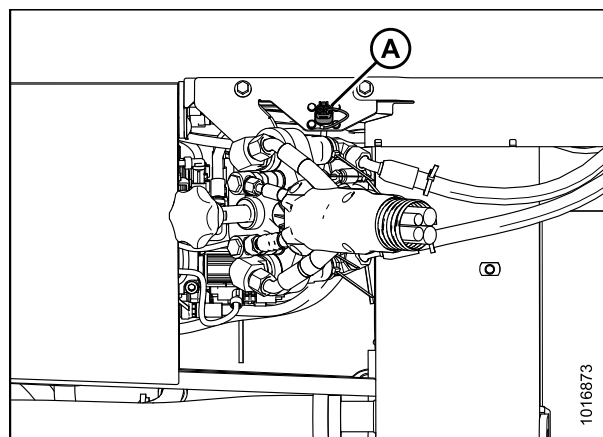

**Figure 4.95: Coupler**


## ATTACHING HEADER TO COMBINE

17. Remove the bolt (A) and strap (B) and remove the driveline from the support bracket (C).

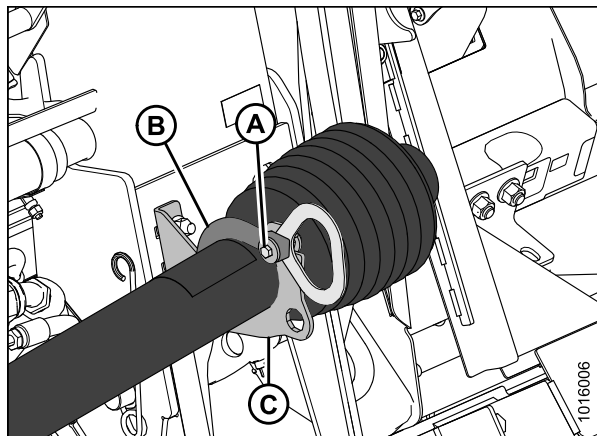

**Figure 4.96: Driveline**


18. Attach the driveline (A) to the combine output shaft.

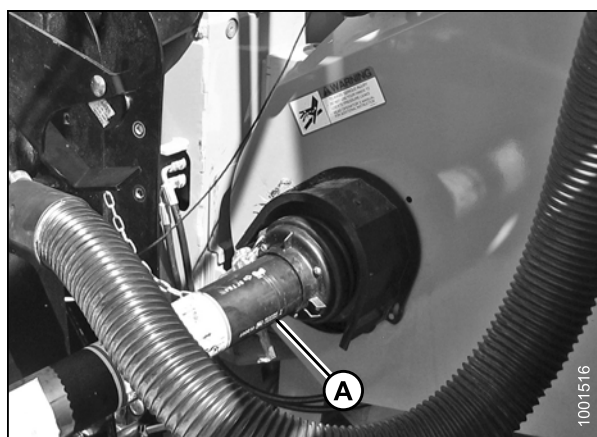

**Figure 4.97: Driveline and Output Shaft**

## ATTACHING HEADER TO COMBINE

19. Disengage both header float locks by pushing down float lock handle (A) and placing it under the hook (UNLOCK).

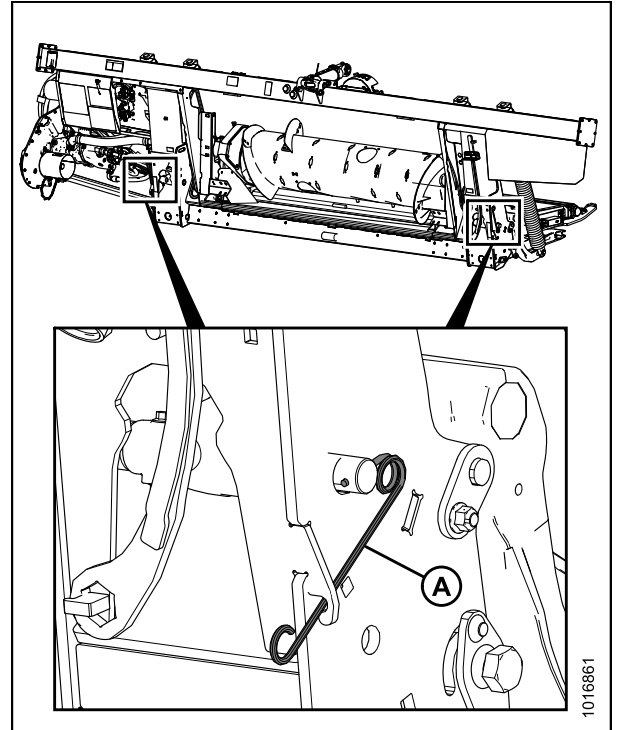

**Figure 4.98: Float Lock in UNLOCK Position**

20. Proceed to [5.1 Attaching Cam Arms, page 79](#).


## 4.5 New Holland Combines

### 4.5.1 Attaching Header to New Holland CR/CX Combine

#### DANGER


To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. On the upper left-hand side of the combine float module, remove nut (A) and flip lever (B) horizontally.

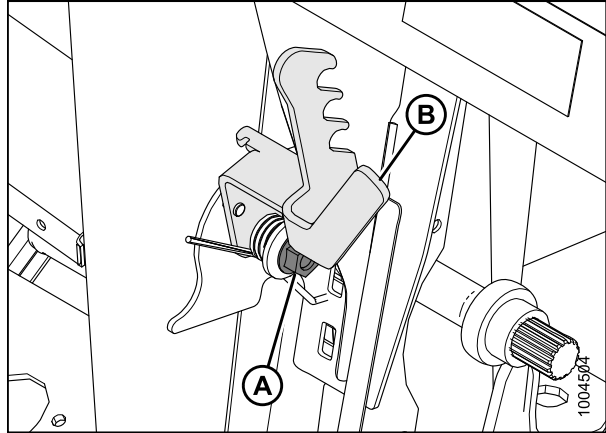

**Figure 4.99: Combine Float Module Upper Left-Hand Side**

2. Position lever (A) onto stud (B).

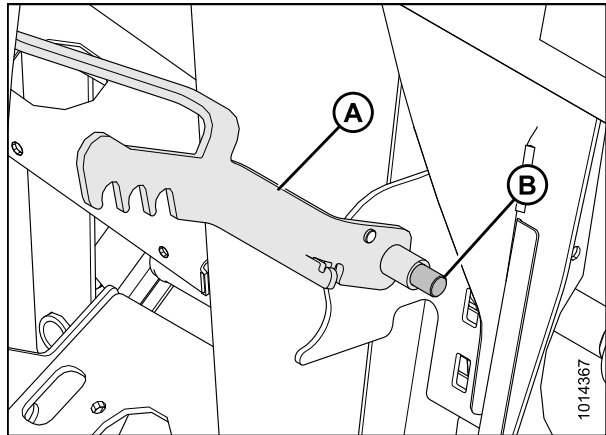


**Figure 4.100: Combine Float Module Upper Left-Hand Side**




## ATTACHING HEADER TO COMBINE

3. Place spring arm (C) into hook on lever (B) to preload it, and tighten nut (A) with washer onto the combine float module.

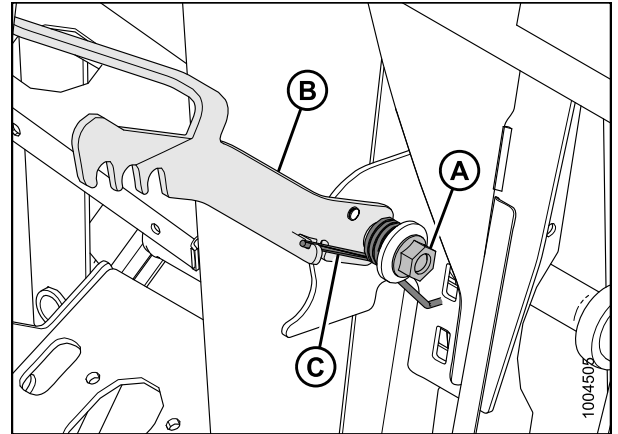

**Figure 4.101: Combine Float Module Upper Left-Hand Side**

4. Ensure the handle (A) is positioned so the hooks (B) can engage the float module.

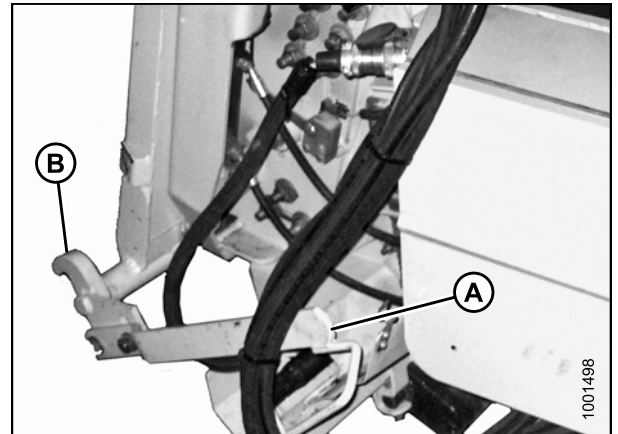


**Figure 4.102: Feeder House Locks**



### CAUTION

**Never start or move the machine until you are sure all bystanders have cleared the area.**


5. Start the engine and slowly drive the combine up to the float module until the feeder house saddle (A) is directly under the float module top cross member (B).
6. Raise the feeder house slightly to lift the header ensuring the feeder saddle is properly engaged in the float module frame.
7. Stop the engine and remove the key from the ignition.

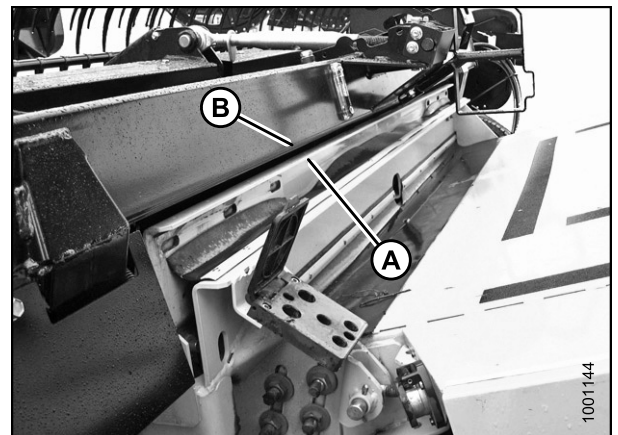

**Figure 4.103: Header on Combine**


## ATTACHING HEADER TO COMBINE

8. Lift lever (A) on the float module on the left side of the feeder house, and push the handle (B) on the combine to engage the locks (C) on both sides of the feeder house.
9. Push down on the lever (A) so the slot in the lever engages the handle and locks the handle in place.
10. Loosen bolts (E) and adjust the lock (C) if lock does not fully engage the pin on the float module when the lever (A) and handle (B) are engaged. Retighten bolts.

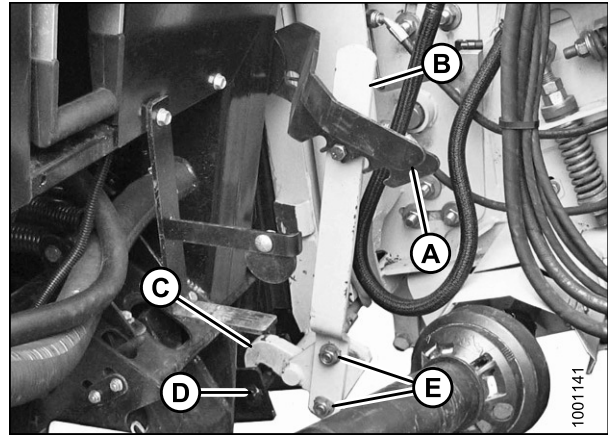


**Figure 4.104: Feeder House Locks**

11. Open the cover on the receptacle (A) located on the left side of the float module.
12. Push in the lock button (B) and pull the handle (C) to the full open position.
13. Clean the receptacle mating surfaces.

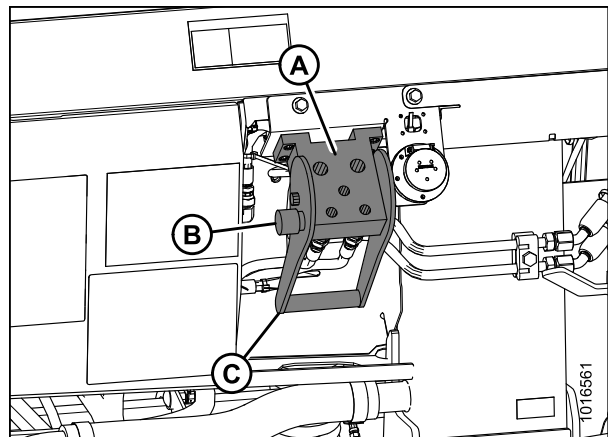

**Figure 4.105: Float Module Receptacle**


14. Remove the hydraulic quick coupler (A) from the storage plate on the combine, and clean the mating surface of the coupler.

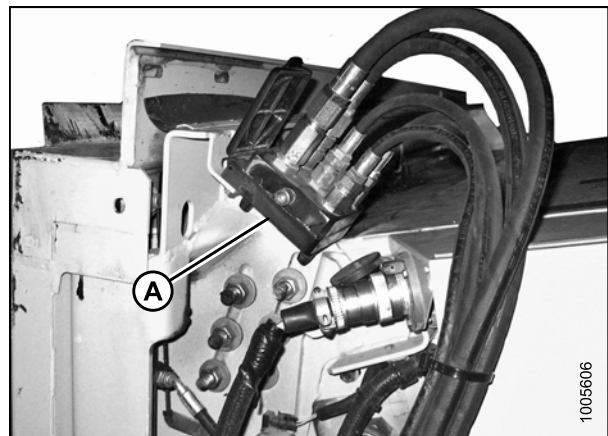


**Figure 4.106: Combine Coupler**

## ATTACHING HEADER TO COMBINE

15. Position the coupler (A) onto the float module receptacle, and push the handle (B) to engage the pins into the receptacle.
16. Push the handle (B) to closed position until the lock button (C) snaps out.
17. Remove the cover on the float module electrical receptacle.
18. Remove the connector (D) from the combine.
19. Align the lugs on the connector (D) with the slots in the float module receptacle, and push the connector onto the receptacle. Turn the collar on the connector to lock it in place.
20. Remove the bolt (A) and strap (B) and remove the driveline from the support bracket (C).

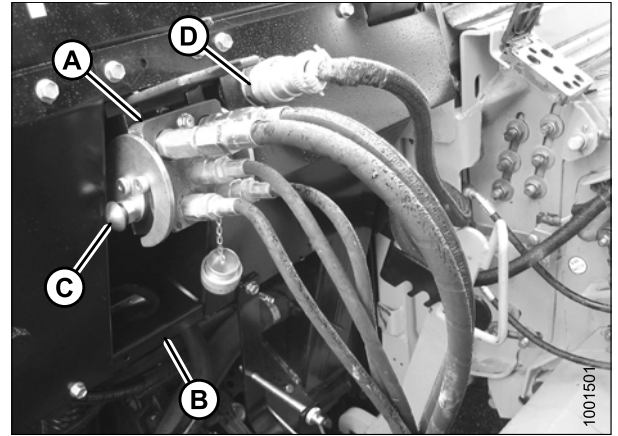


**Figure 4.107: Connections**

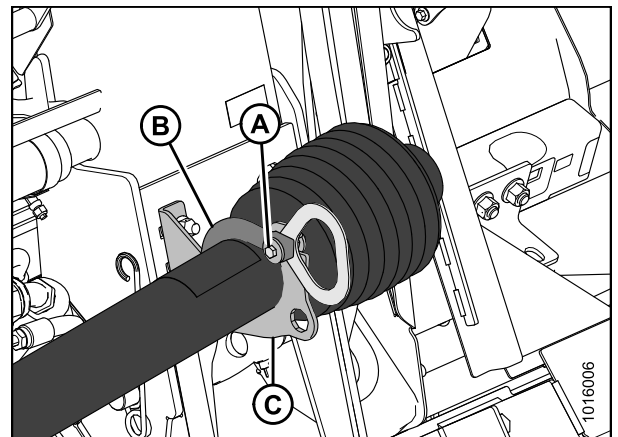

**Figure 4.108: Driveline**


21. Pull back the collar on the end of the driveline, and push the driveline onto the combine output shaft (A) until the collar locks.

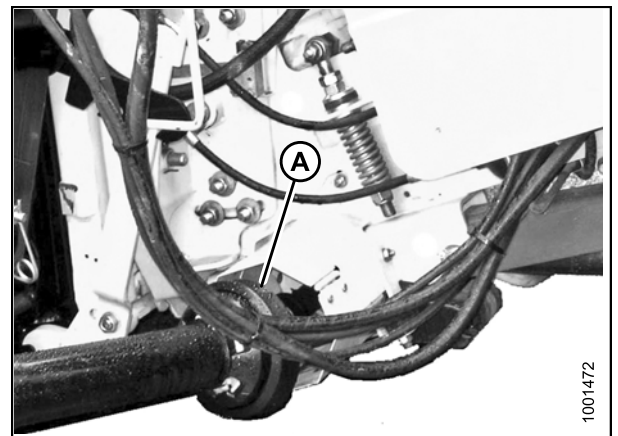

**Figure 4.109: Driveline and Output Shaft**

## ATTACHING HEADER TO COMBINE

22. Disengage both header float locks by pushing down float lock handle (A) and placing it under the hook (UNLOCK).

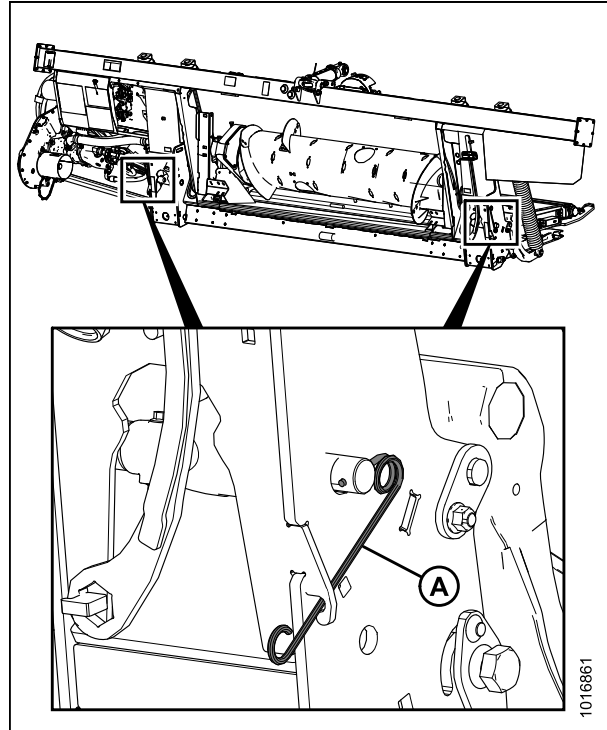

**Figure 4.110: Float Lock in UNLOCK Position**


23. Proceed to [5.1 Attaching Cam Arms, page 79](#).

## 5 Completing the Header Assembly

### 5.1 Attaching Cam Arms


To attach the reel cam arms, follow these steps:

1. Rotate the reel manually until the tine bars with disconnected cam links are accessible.
2. Remove shipping wire (A) (if not already removed).

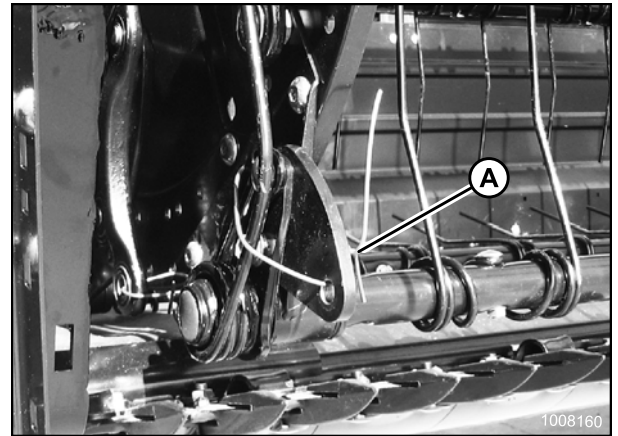

**Figure 5.1: Disconnected Cam Links and Shipping Wire**

3. Remove bag of hardware (A) from tine bar. It contains hardware for cam links and endshields.

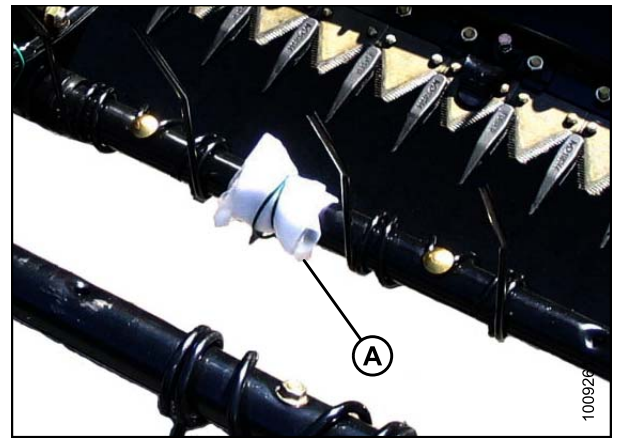


**Figure 5.2: Hardware Bag Right-Hand Reel**

4. Rotate tine bar crank (A) and position link (B) so attachment holes in bar crank are aligned with hole in link.
5. Install bolt (C) in link and position shim (D) on bolt so that shim is between link and tine bar crank.

**NOTE:**

Bolts are pre-coated with Loctite®, so no further locking method is required.

6. Realign link (B) and tine bar crank (A) and thread in bolt (C).
7. Repeat for remaining tine bars and torque bolts to 120 ft-lbf (165 N·m).

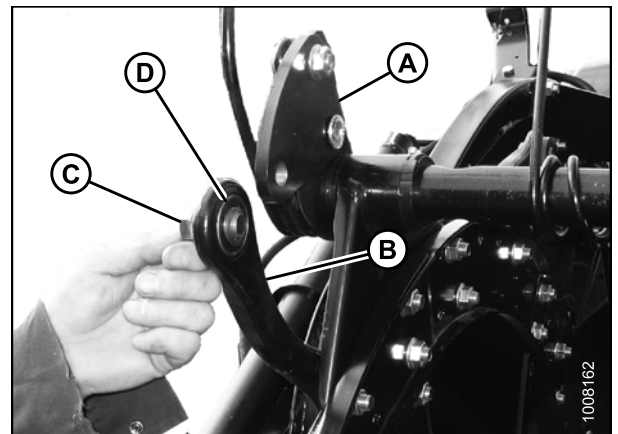

**Figure 5.3: Bar Crank Attachment Holes and Link Alignment**

## COMPLETING THE HEADER ASSEMBLY

8. Position reel pitch at position 4 to access bolt after rotating the reel. Reposition reel to position 2 when done.

**NOTE:**

This procedure is done only on the right-hand reel.



**Figure 5.4: Right-Hand Reel with Cam Arms Attached**

## 5.2 Repositioning Gearbox

To reposition the gearbox, follow these steps:

1. Remove shipping wire and wrapping on brace (A). Swing brace clear of gearbox.
2. Loosen nut (A) and move bolt out of shipping position slot.
3. Rotate gearbox and insert bolt into working position slot (A). Tighten nut.

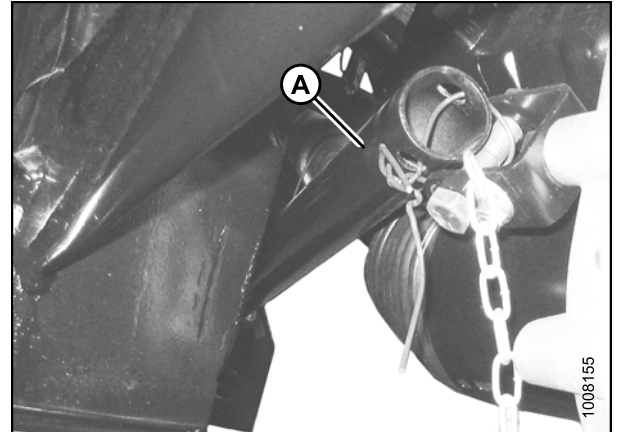


Figure 5.5: Shipping Wire and Brace

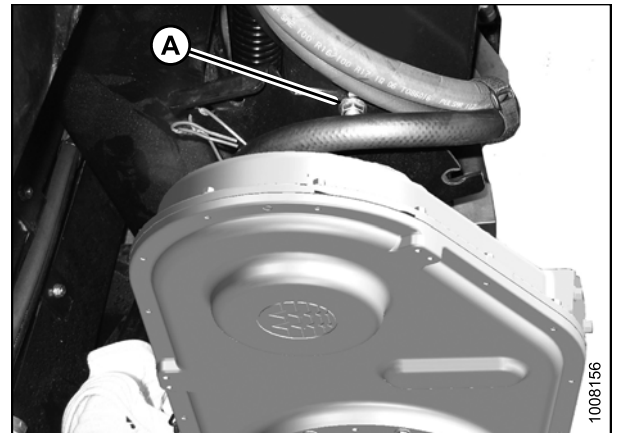


Figure 5.6: Shipping Position


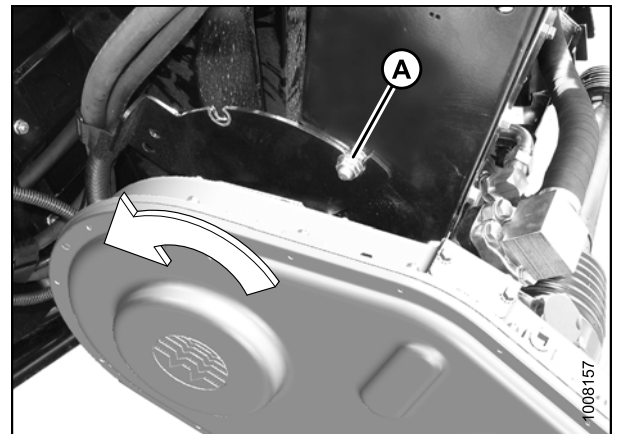


Figure 5.7: Working Position

## COMPLETING THE HEADER ASSEMBLY

4. Remove bolt and nut from bracket on gearbox.
5. Position brace (A) inside bracket, and reinstall bolt (B) and nut.

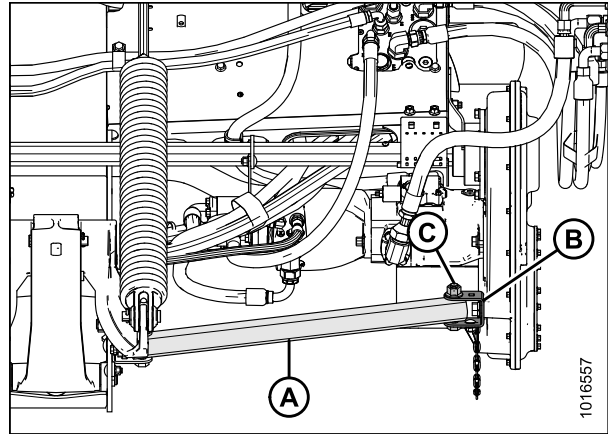

**Figure 5.8: Brace Position**



## 5.3 Removing Shipping Supports

The removable supports are painted yellow. Refer to illustrations and remove the remaining supports as follows:

**NOTE:**

Unless otherwise specified, discard supports as well as all shipping material and hardware.

1. Remove two bolts (A) and remove strap (B) from both sides of center frame.

**NOTE:**

If strap is difficult to remove, lift on one end of header to release the load on the strap so that bolts can be removed.

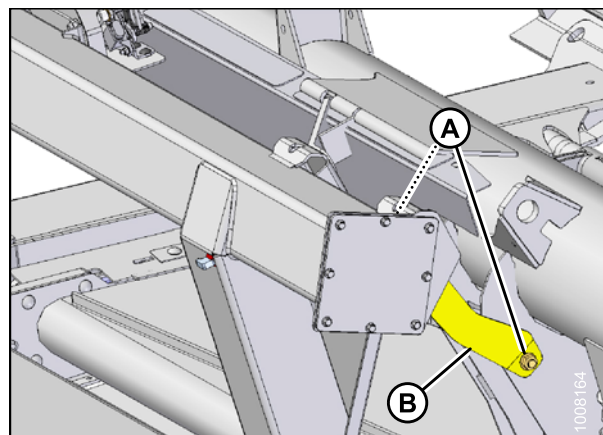


Figure 5.9: Strap on Center Frame

2. Remove lynch pin (A), nut and bolt (B), and remove shipping brace (C).
3. Reinstall lynch pin (A).


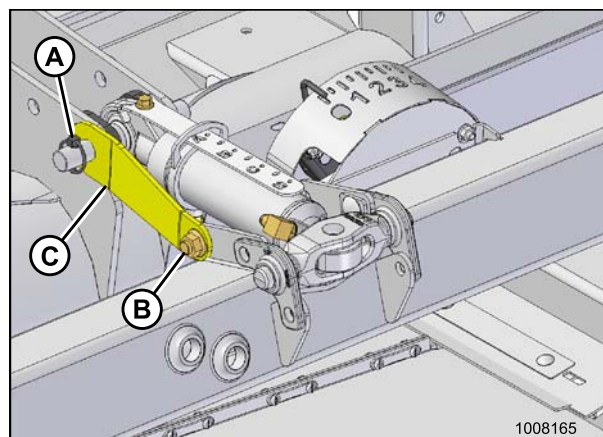


Figure 5.10: Lynch Pin, Hardware, and Shipping Brace

## 5.4 Positioning Transport Lights

Transport lights are located on each of the outboard reel arms.

1. Position lights (A) perpendicular to header.

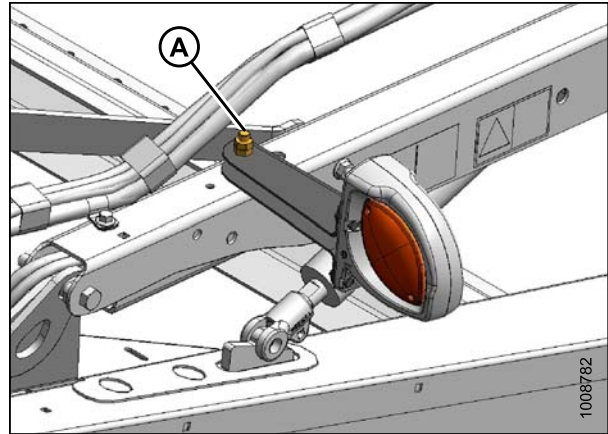

**Figure 5.11: Transport Light Perpendicular to Header**

## 5.5 Crop Dividers

Crop dividers are used to help divide the crop when harvesting. They are removable to allow installation of vertical knives and to decrease transport width.

### 5.5.1 Removing Crop Dividers from Storage

Crop dividers are shipped attached to the inboard side of the endsheets. To remove the crop dividers, follow these steps:

1. Support the crop divider and remove the shipping wire at the front end (A).
2. Remove bolt (B).
3. Remove the bolt with washer (C) and retain for installation.

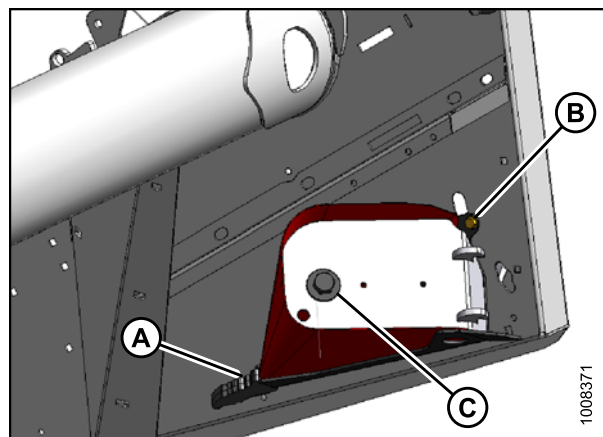


Figure 5.12: Crop Divider Stored on Endsheets

### 5.5.2 Opening Endshields

1. Push release lever (A) located on the backside of the endshield to unlock the shield.
2. Pull endshield open using handle depression (B).

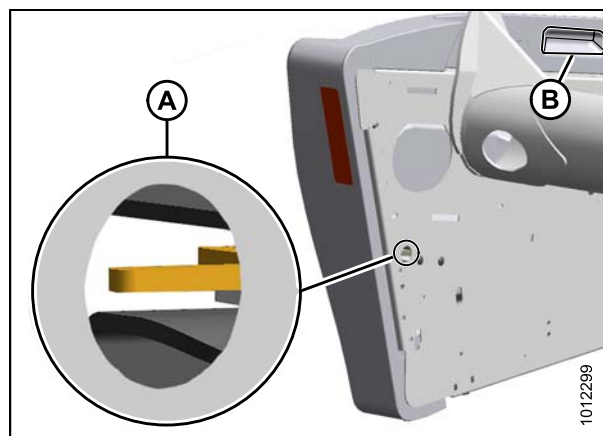


Figure 5.13: Left Endshield

## COMPLETING THE HEADER ASSEMBLY

3. Pull endshield at handle depression (A). Endshield is retained by a hinge tab (B) and will open in direction (C).

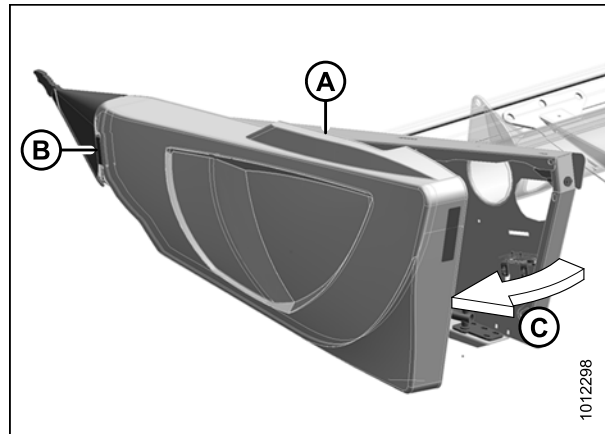


Figure 5.14: Left Endshield

4. Pull the endshield free of hinge tab (A) if additional clearance is required, and swing shield towards the rear of the header.
5. Engage safety catch (B) on hinge arm to secure the shield in fully open position.

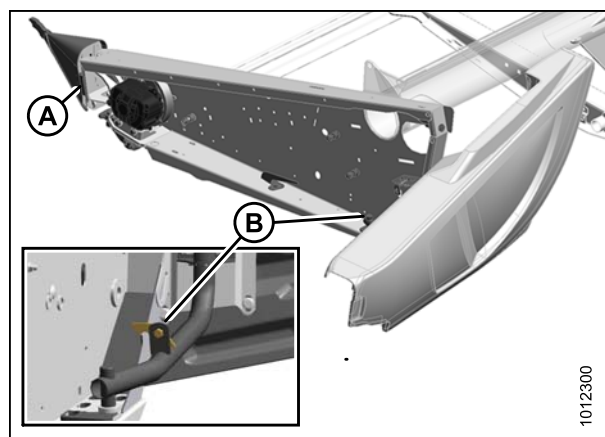


Figure 5.15: Left Endshield

### 5.5.3 Installing Crop Divider without Latch Option

#### NOTE:

If the crop divider latch option was ordered with the header, proceed to [5.5.4 Installing Crop Divider with Latch Option, page 88](#). Otherwise, complete the following procedure:

1. Position crop divider as shown by inserting lugs (A) into the holes (B) in endsheet.


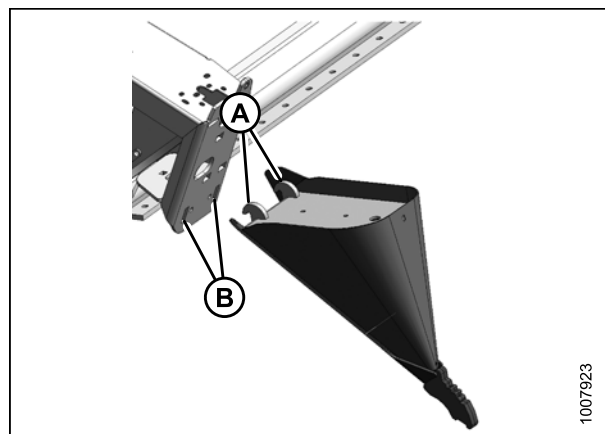


Figure 5.16: Crop Divider Lugs and Endsheets Slots


## COMPLETING THE HEADER ASSEMBLY

2. Lift the forward end of the crop divider and install bolt (B) and special stepped washer (A) (step towards divider). Tighten bolt.

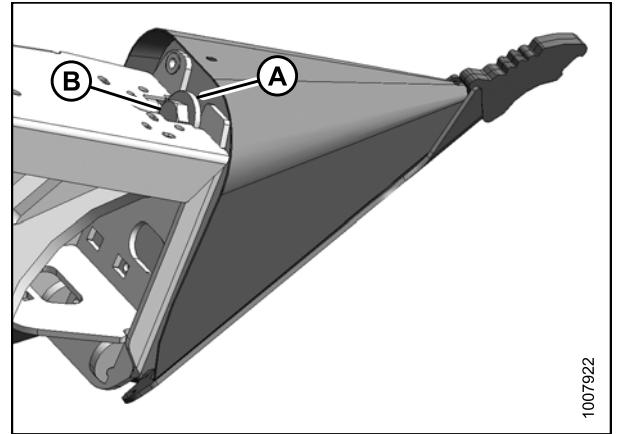

**Figure 5.17: Installation Hardware**

3. Check that divider does NOT move laterally. Adjust bolts (A) as required to tighten divider and remove lateral play when pulling at divider tip.

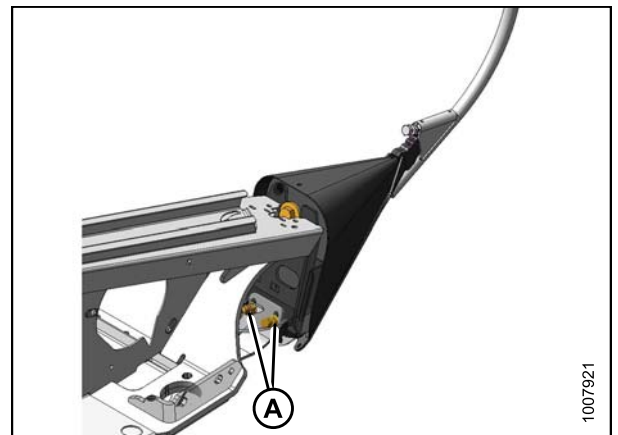

**Figure 5.18: Adjustment Hardware**

## 5.5.4 Installing Crop Divider with Latch Option

1. Position the crop divider as shown by inserting the lugs (A) into holes in the endsheet.
2. Lift the forward end of the divider until the pin (B) engages and closes the latch (C).
3. Push the safety lever (D) down to lock the pin in latch.

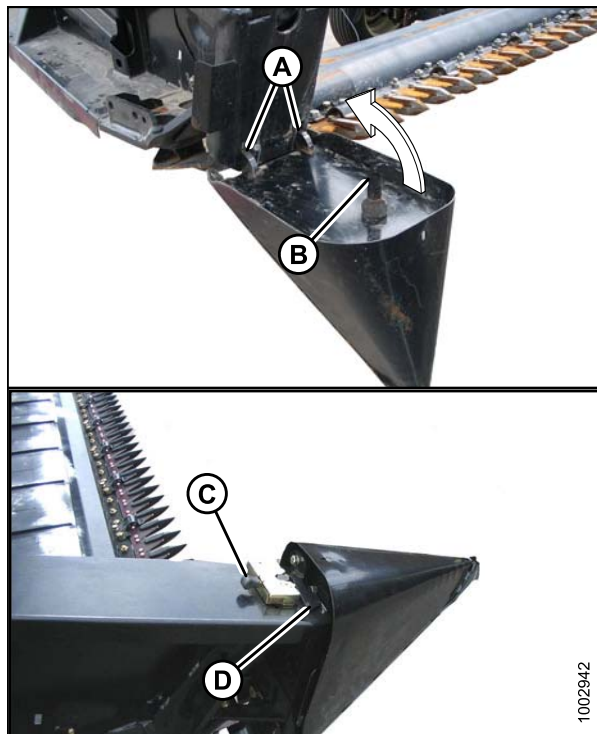


Figure 5.19: Crop Divider Lugs and Endsheets Slots

4. Adjust bolts (A) to tighten divider and remove lateral play when pulling at divider tip.

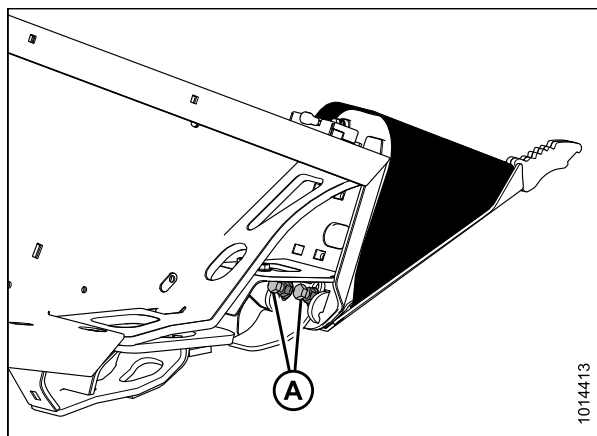


Figure 5.20: Adjustment Hardware

## 5.5.5 Closing Endshields

1. Disengage lock (B) to allow endshield to move.
2. Insert front of endshield behind hinge tab (A) and into divider cone.

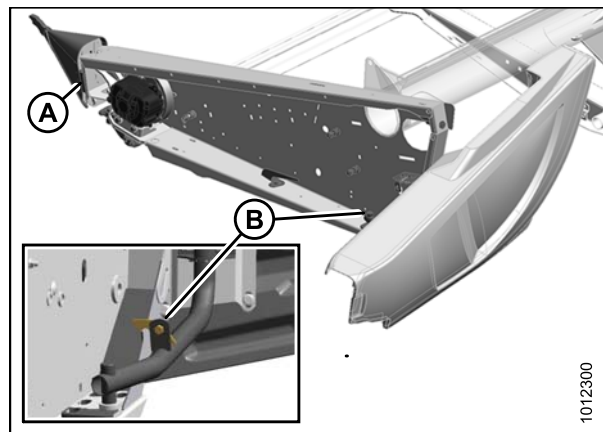


Figure 5.21: Left Endshield

3. Swing endshield in direction (A) into closed position. Engage lock with a firm push.
4. Verify that endshield is locked.

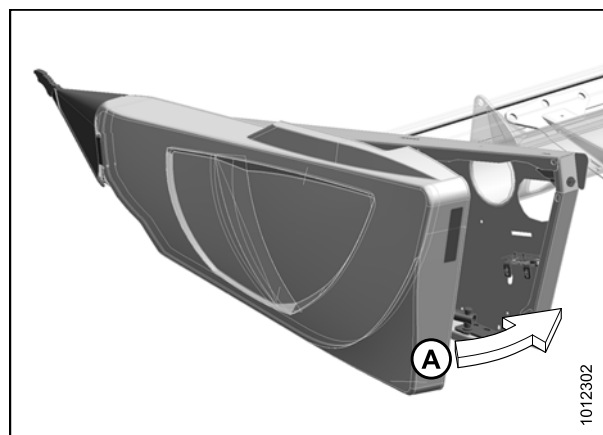


Figure 5.22: Left Endshield

## 5.5.6 Installing Crop Divider Rods

1. Remove divider rods from shipping location on header endsheet.
2. Position crop divider rod (B) on tip of crop divider as shown and tighten bolt (A).
3. Repeat procedure at opposite end of header.

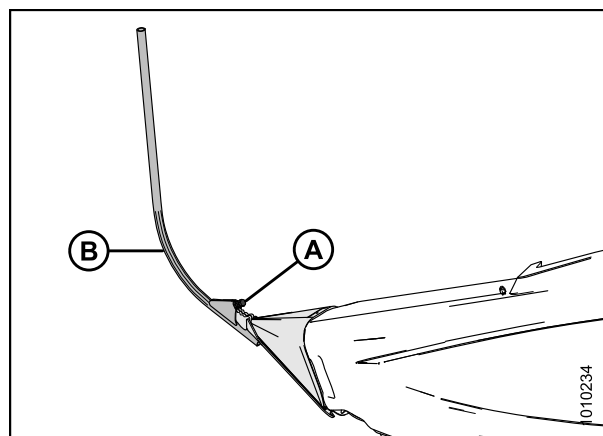


Figure 5.23: Divider Rod on Crop Divider

## 5.6 Installing Options

1. Retrieve the kits supplied as options with the header and install them according to the instructions supplied with each kit.
2. Proceed to [6 Performing Predelivery Checks, page 91](#).



## 6 Performing Predelivery Checks

This machine has been set at the factory and should not require further adjustments; however, the following checks will ensure your machine provides maximum performance. If adjustments are necessary, follow the procedures in this chapter.

### **WARNING**

**To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.**

#### **IMPORTANT:**

To avoid machine damage, check that no shipping dunnage has fallen into the machine.

1. Perform the final checks as listed on the **Predelivery Checklist** (yellow sheet attached to this instruction – [Predelivery Checklist, page 269](#)) to ensure the machine is field-ready. Refer to the following pages for detailed instructions as indicated on the Checklist. The completed Checklist should be retained either by the Operator or the Dealer.

### 6.1 Checking Tire Pressure: Transport and Stabilizer Wheels

Check tire inflation pressure. If necessary, inflate tires according to the following table:

**Table 6.1 Tire Inflation Pressure**

Size	Load Range	Pressure
ST205/75 R15	D	65 psi (448 kPa)
	E	80 psi (552 kPa)

#### **IMPORTANT:**

Do **NOT** exceed maximum pressure specified on tire sidewall.

## 6.2 Checking Wheel Bolt Torque

Perform the following procedure to ensure that transport and stabilizer wheel bolts are correctly torqued:

1. Check wheel bolt torque is 80–90 ft-lbf (110–120 N·m).  
Refer to bolt tightening sequence illustration at right.

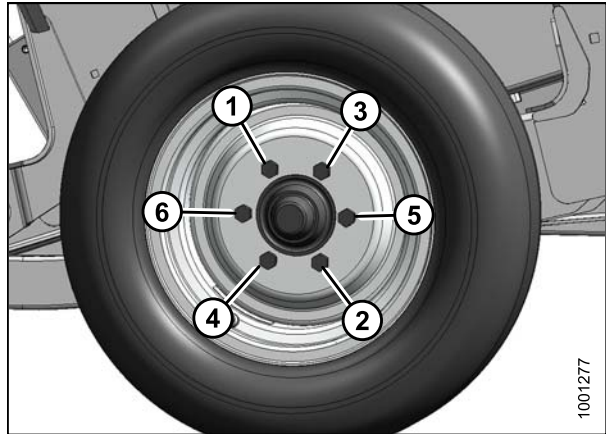


Figure 6.1: Bolt Tightening Sequence

## 6.3 Checking Knife Drive Box

To access the knife drive box(es), endshield(s) must be fully opened.

1. Press down the latch in the opening (A) on the inboard side of the endsheet.
2. Pull endshield open using handle depression (B).

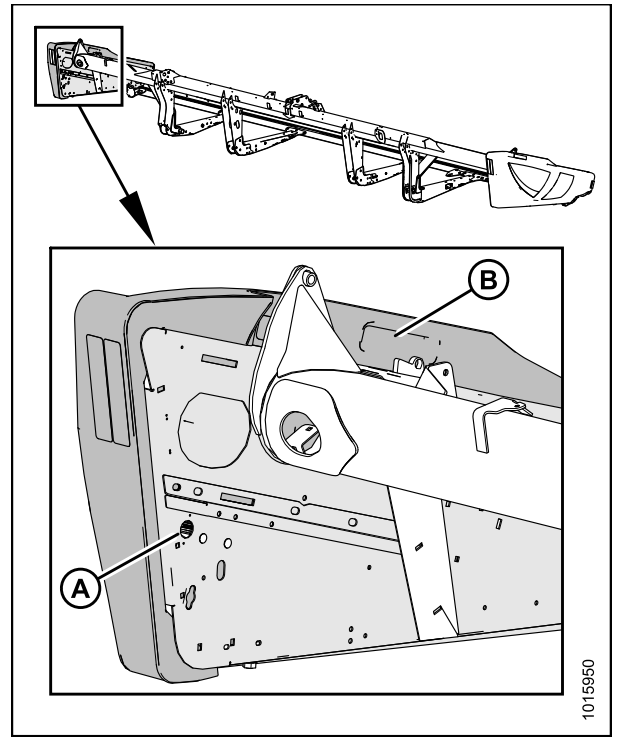


Figure 6.2: Endshield Latch Access

3. Swivel the endshield toward the back of the header and use the safety latch (B) to secure the endshield support tube (A) to the endsheet.

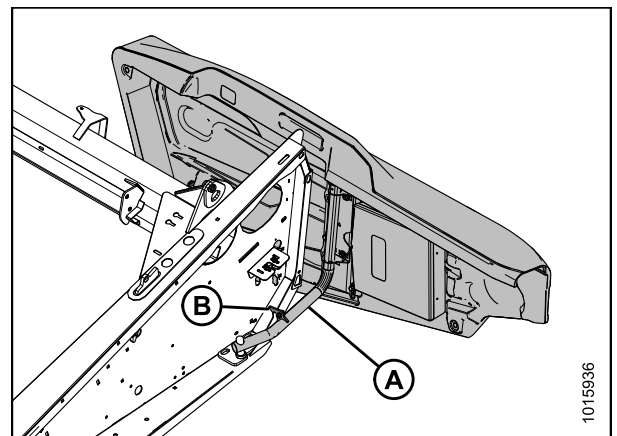


Figure 6.3: Left-Hand Endshield Support Tube

## PERFORMING PREDELIVERY CHECKS

### IMPORTANT:

The knife drive box breather is shipped in position (A) (forward) to prevent oil loss during transport. The breather plug **MUST** be repositioned to location (B) to prevent oil loss during normal operation. Failure to do so can result in damage to the knife drive box.

4. Check position of plug (A) and breather (B) at knife drive box. Position **MUST** be as shown.
5. Check oil level. It should be between the lower hole (C) on the dipstick and the bottom end of the dipstick.

### NOTE:

Check oil level with top of knife drive box horizontal.

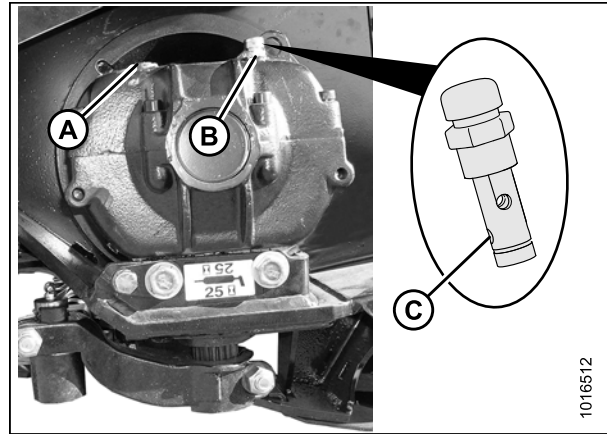


Figure 6.4: Knife Drive Box

## 6.4 Checking Oil Level in Header Drive Gearbox

### DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Lower the cutterbar to the ground and ensure the gearbox is in working position.
2. Shut down the combine and remove the key from the ignition.
3. Remove the oil level plug (A) and check that the oil level is up to the bottom of the hole.
4. Replace the oil level plug (A).

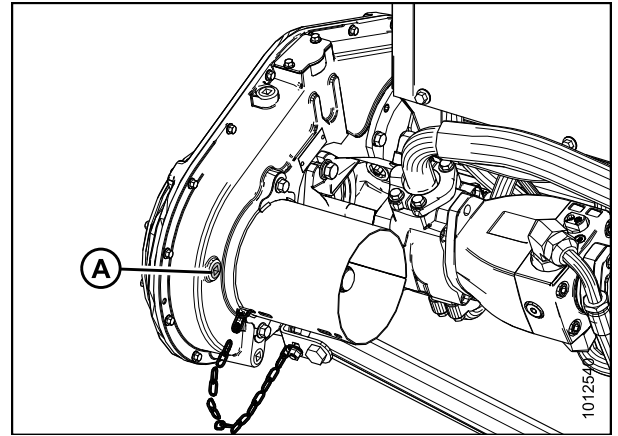


Figure 6.5: Header Drive Gearbox

## 6.5 Checking Oil Level in Hydraulic Reservoir

1. Check the oil level using the lower sight (A) and the upper sight (B) with the cutterbar just touching the ground.

**NOTE:**

Check the level when the oil is cold and with center-link retracted.

2. Ensure the oil is at the appropriate level for the terrain as follows:
  - **Hilly terrain (C):** Maintain level so lower sight (A) is full, and upper sight (B) is up to one-half filled.
  - **Normal terrain (D):** Maintain level so lower sight (A) is full, and upper sight (B) is empty.
  - **Level ground (E):** For slopes of 6° or less, oil level may be kept slightly lower if desired. Maintain level so lower sight (A) is one-half filled or slightly higher.
3. Maintain level for normal terrain (D) so lower sight (A) is full, and upper sight (B) is empty.

**NOTE:**

It may be necessary to slightly reduce the oil level when ambient temperatures are above 95°F (35°C) to prevent overflow at the breather when normal operating temperatures are reached.

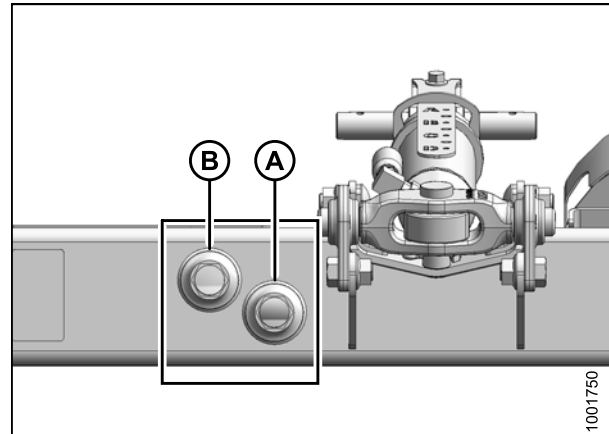


Figure 6.6: Oil Level Sight Glass

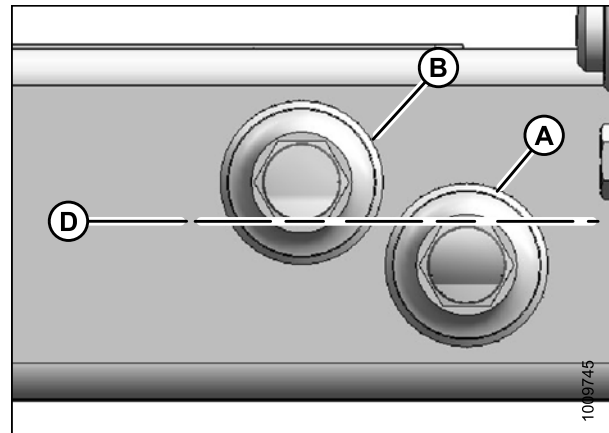


Figure 6.7: Oil Level Sight Glass

## 6.6 Checking and Adjusting Knife Drive Belt Tension

**IMPORTANT:**


To prolong belt and drive life, do **NOT** over-tighten belt.

1. Open endshield(s).

**NOTE:**

The knife drive is identical on both sides of the header.

2. Loosen the two bolts (A) that secure the motor assembly to header endsheet.
3. Turn adjuster bolt (B) clockwise to move the drive motor until a force of 20 lbf (90 N) deflects belt (C) 3/4 in. (18 mm) at mid-span.

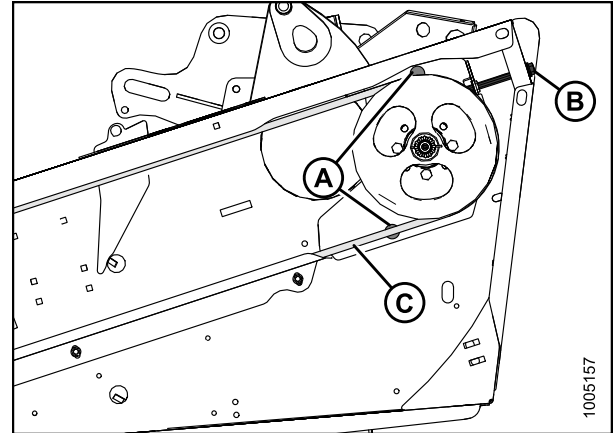


**Figure 6.8: Left-Hand Shown – Right-Hand Opposite for Double-Knife Headers**

4. Ensure that clearance between belt (A) and belt guide (B) is 1/32 in. (1 mm).
5. Loosen three bolts (C), and adjust position of guide (B) as required.
6. Tighten bolts (C).
7. Close endshield(s).

**NOTE:**

Readjust the tension of a new belt after a five hour run-in period.

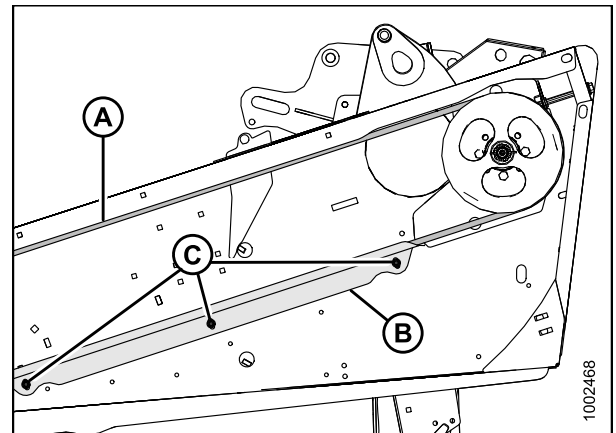

**Figure 6.9: Knife Drive**

## 6.7 Checking Knife Hold-Downs

Perform daily inspections to ensure the knife hold-downs are preventing the knife sections from lifting off the guards while permitting the knife to slide without binding. Use a feeler gauge to measure the clearance between the hold-downs and knife sections and refer to the following for adjustment procedures:

- [6.7.1 Adjusting Hold-Downs with Pointed Guards, page 98](#)
- [6.7.2 Adjusting Hold-Downs with Stub Guards, page 99](#)

### 6.7.1 Adjusting Hold-Downs with Pointed Guards

#### WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the combine, and remove the key from the ignition.
2. Use a feeler gauge to measure the clearance between the normal guard hold-down (A) and the knife section. Ensure the clearance is between 0.004–0.024 in. (0.1–0.6 mm).
3. Adjust by turning bolt (B) clockwise to lower the front of the hold-down and decrease clearance, or counterclockwise to raise the front of the hold-down and increase clearance.

#### NOTE:

For larger adjustments, it may be necessary to loosen nuts (C), turn adjuster bolt (B), and then retighten nuts.

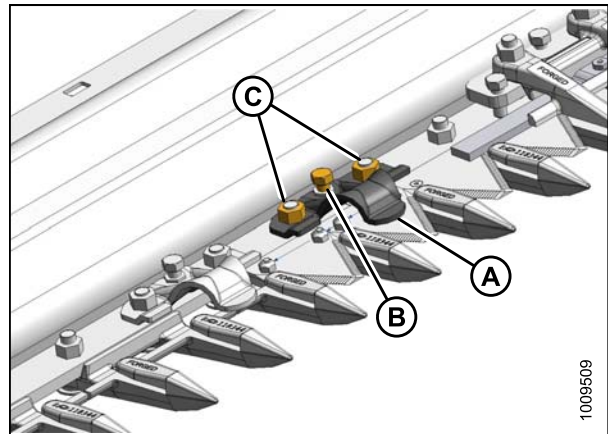


Figure 6.10: Normal Guard Hold-Down

4. Use a feeler gauge to measure the clearance between the center guard hold-down (A) and the knife section. Ensure the clearance is between the following measurements:
  - **At guide tip (B):** 0.004–0.016 in. (0.1–0.4 mm)
  - **At rear of guide (C):** 0.004–0.040 in. (0.1–1.0 mm)
5. Adjust the clearance as follows:
  - a. Tighten nuts (D) until they are finger tight.
  - b. Turn the three adjuster bolts (E) clockwise to raise the front of the hold-down and increase clearance, or counterclockwise to lower the front of the hold-down and decrease clearance.
  - c. Torque the nuts (D) to 53 ft·lbf (72 N·m) after all the adjustments are complete and the specified clearances are achieved.

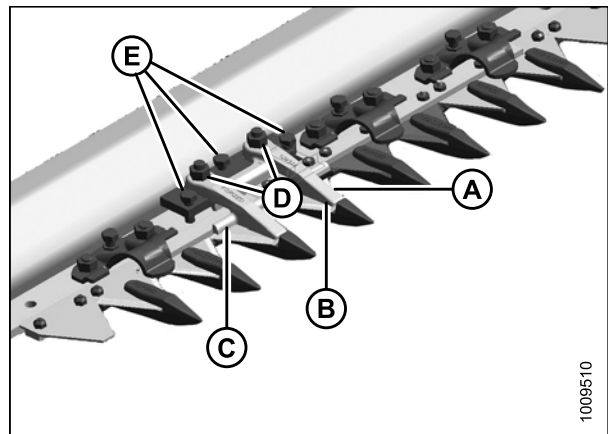


Figure 6.11: Center Guard Hold-Down



## **WARNING**

Check to be sure all bystanders have cleared the area.

6. Complete the hold-down adjustments, run the header at low engine speed, and listen for noise caused by insufficient clearance.

### **NOTE:**

Insufficient hold-down clearance will result in overheating of the knife and guards—readjust as necessary.

## 6.7.2 Adjusting Hold-Downs with Stub Guards

### **WARNING**

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

1. Shut down the combine, and remove the key from the ignition.
2. Use a feeler gauge to measure the clearance between the stub guard hold-down (A) and the knife section. Ensure the clearance is between the following measurements:

- **At guide tip (B):** 0.004–0.016 in. (0.1–0.4 mm)
- **At rear of guide (C):** 0.004–0.040 in. (0.1–1.0 mm)

3. Adjust the clearance as follows:
  - a. Tighten nuts (D) until they are finger tight.
  - b. Turn the three adjuster bolts (E) clockwise to lower the front of the hold-down and decrease clearance, or counterclockwise to raise the front of the hold-down and increase clearance
  - c. Torque the nuts (D) to 53 ft·lbf (72 N·m) after all the adjustments are complete and the specified clearances are achieved.

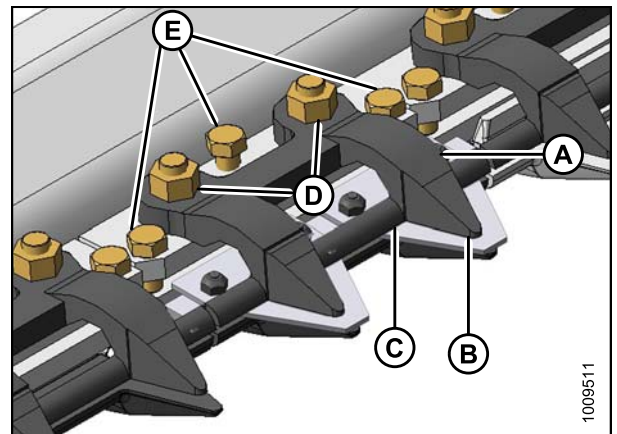


Figure 6.12: Stub Guards

### **WARNING**

**Check to be sure all bystanders have cleared the area.**

4. Complete the hold-down adjustments, run the header at low engine speed, and listen for noise caused by insufficient clearance.

**NOTE:**

Insufficient hold-down clearance will result in overheating of the knife and guards—readjust as necessary.

## 6.8 Centering the Reel

To check and center the reel, follow these steps:

### DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

### CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

1. Start engine and raise header.
2. Stop engine and remove key from ignition.
3. Engage header lift cylinder stops.
4. Place two 6 inch (150 mm) blocks (B) at ends of the cutterbar.
5. Disengage float locks and header lift cylinder locks.
6. Start combine and lower header fully—allowing header to flex into a full smile.
7. Stop engine and remove key from ignition.
8. Measure the clearance (A) between reels and endsheets at both ends of the header. The clearances will be the same when the reels are centered.
9. If the reel is not centered, follow these steps:
  - a. Loosen bolt (A) on each brace (B).
  - b. Move the forward end of center support arm (C) laterally as required to center both reels.
  - c. Tighten bolts (A) and torque to 265 ft·lbf (359 N·m).

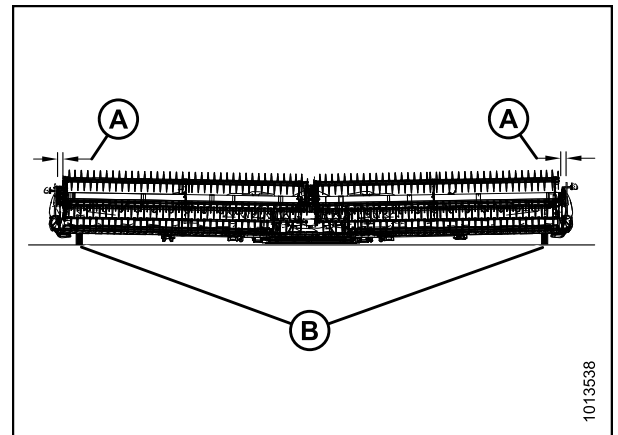


Figure 6.13: Header on Blocks

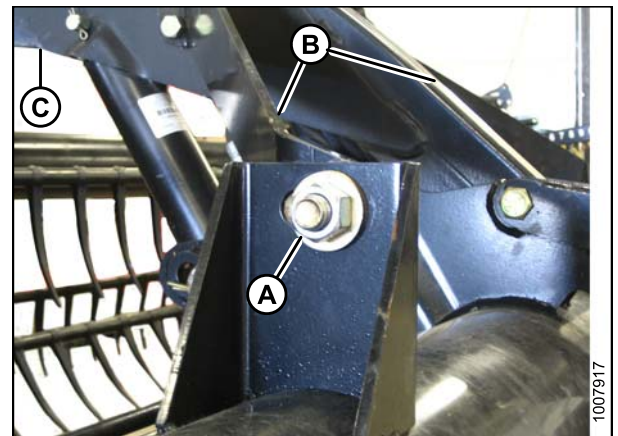


Figure 6.14: Clearance between Reels and Endsheets

## 6.9 Checking and Adjusting Header Float

The header is equipped with a suspension system that floats the header over the ground to compensate for ridges, trenches, and other variations in ground contour. If the header float is not set properly, it may cause the cutterbar to push into the ground or leave uncut crop. This procedure describes how to check header float and adjust to the factory-recommended settings.

### DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Level the header and float module. If the header and float module are not level, perform the following checks before adjusting the float:

#### IMPORTANT:

Do **NOT** use the float module float springs to level the header.

- Park the combine on a level surface.
  - Check that the combine feeder house is level Refer to your combine operator's manual for instructions.
  - Check that the top of the float module is level with the combine axle.
  - Ensure the combine tires are inflated equally.
2. Adjust header so that the cutterbar is 6–10 in. (150–254 mm) off the ground.
  3. Adjust the center-link to between B and C on the indicator (A).
  4. Adjust the reel fore-aft position to between 5 and 6 on the position indicator decal (A) located on the right side reel arm.
  5. Lower the reel fully.
  6. Stop the engine and remove key from the ignition.

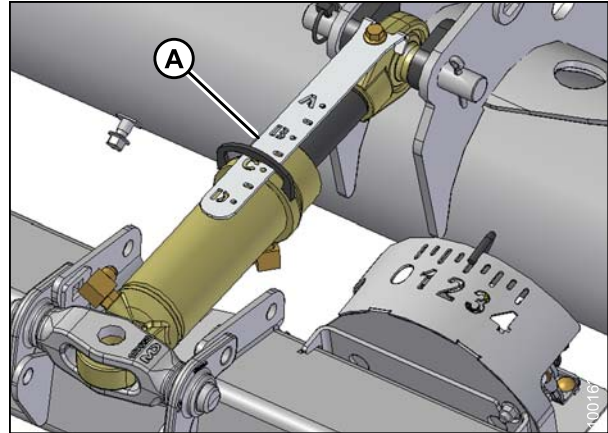


Figure 6.15: Center-Link


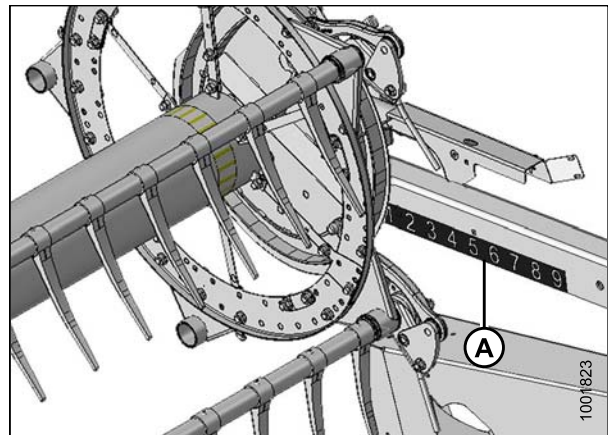


Figure 6.16: Fore-Aft Position


## PERFORMING PREDELIVERY CHECKS

7. Place wing lock spring handles (A) in the LOCKED (upper) position.

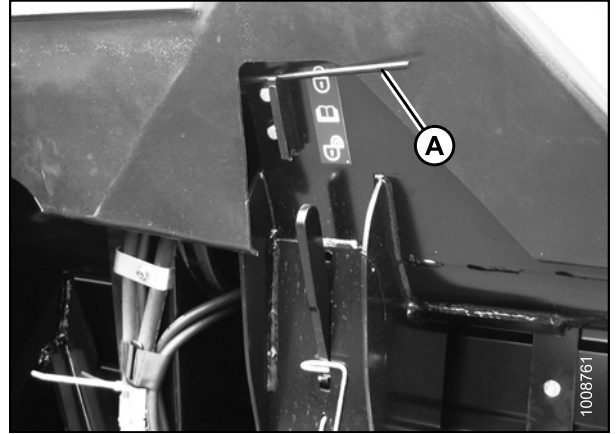

**Figure 6.17: Wing Lock Spring Handle in Lock Position**


8. Disengage both header float locks by pushing down float lock handle (A) and placing it under the hook (UNLOCK).

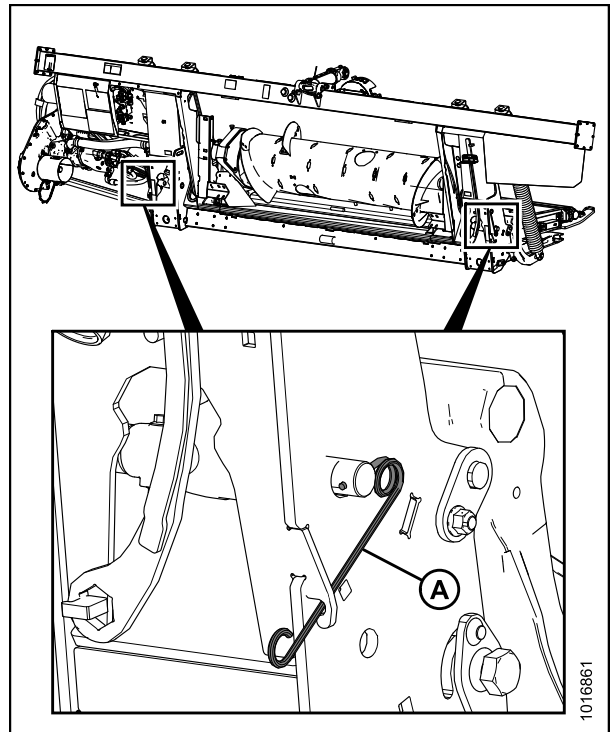

**Figure 6.18: Header Float Lock**


## PERFORMING PREDELIVERY CHECKS

9. Place stabilizer wheels and slow speed transport wheels (if equipped) in storage position as follows:
  - a. Support the wheel weight by lifting slightly with one hand, and pull up on handle (A) to release the lock.
  - b. Lift the wheels to the desired height, and engage the support channel into the slot (B) in the upper support.
  - c. Push down on the handle (A) to lock.

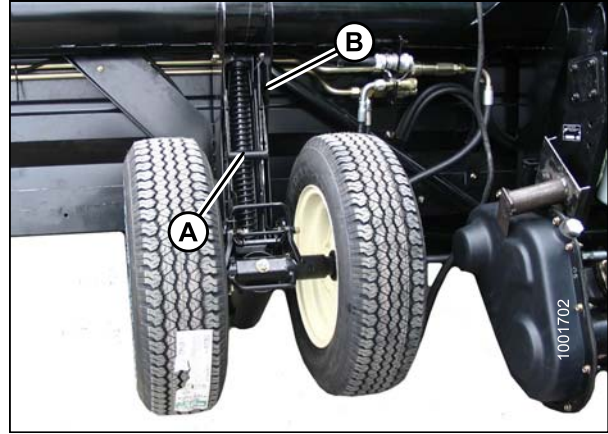

**Figure 6.19: Left Wheel**


10. Remove the supplied torque wrench (A) from its storage position at the right-hand side of the float module frame. Pull in the direction shown to disengage the wrench from the hook.

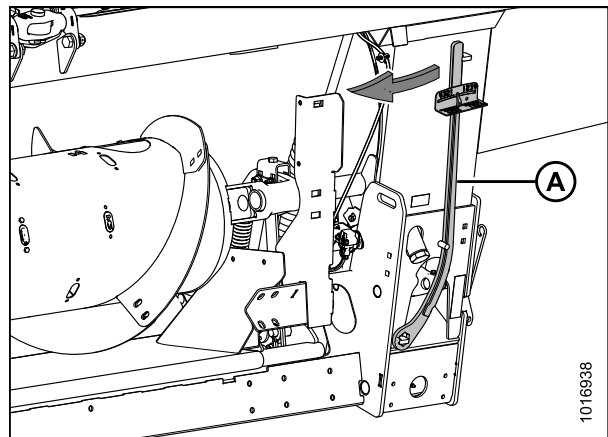


**Figure 6.20: Torque Wrench Storage Location**

## PERFORMING PREDELIVERY CHECKS

11. Place the supplied torque wrench (A) onto the float lock (B). Note the position of the wrench for checking left or right side.
12. Push down on wrench to rotate bell crank (C) forward.

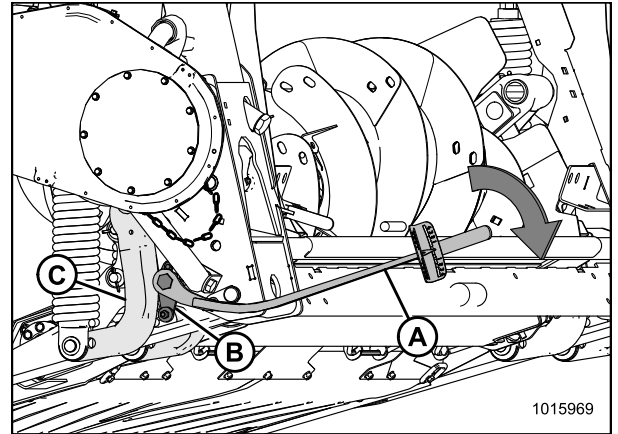


**Figure 6.21: Left Side**

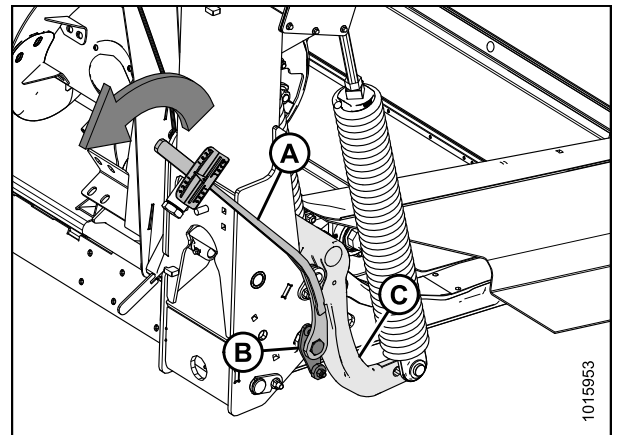

**Figure 6.22: Right Side**

13. Push down on the wrench until indicator (A) reaches a maximum reading and then begins to decrease. Note the maximum reading and repeat at opposite side.

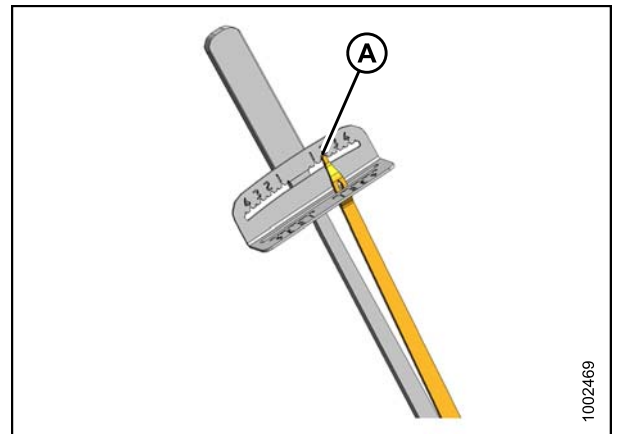

**Figure 6.23: Indicator**



## PERFORMING PREDELIVERY CHECKS


14. Use the following table as a guide for float settings:

- If reading on the wrench is high, the header is heavy
- If reading on the wrench is low, the header is light

**Table 6.2 Float Settings**

Header Size (feet)	Torque Settings	
	Cutting on the Ground	Cutting off the Ground
30 and 35	1-1/2 to 2	2 to 2-1/2
40 and 45	2 to 2-1/2	2-1/2 to 3

15. Before adjusting the float spring adjustment bolts (A), remove the spring locks by removing bolts (B).
16. To increase float (decrease header weight), turn left side adjustment bolts (A) clockwise. Repeat at opposite side.
17. To decrease float (increase header weight), turn left side adjustment bolts (A) counterclockwise. Repeat at opposite side.

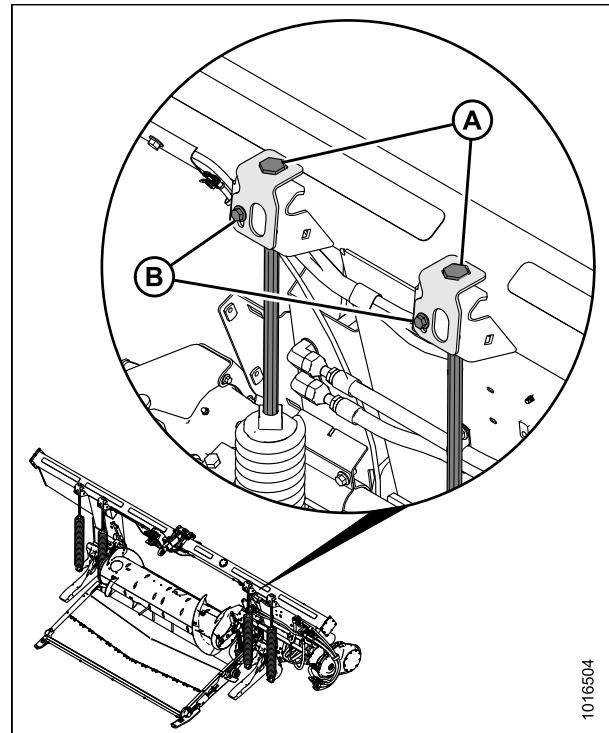

**Figure 6.24: Float Adjustment (Left Side Shown)**

18. Use the following guidelines when adjusting float:

- Adjust the float so the wrench readings are equal on both sides of the header.
- **For 40- and 45-foot double-knife headers:** adjust the float so the wrench readings are equal at both sides, and then loosen both right side spring bolts two turns.
- Turn each bolt pair equal amounts. Refer to Step [13, page 105](#), and repeat torque wrench reading procedure.
- Set header float as light as possible without causing excessive bouncing to prevent knife component breakage, soil scooping, or soil build-up at the cutterbar in wet conditions.
- Use a slower ground speed with a light float setting, if necessary, to avoid excessive bouncing and leaving a ragged cut.
- Use the stabilizer wheels in conjunction with header float to minimize bouncing at the header ends and to control cut height when cutting off the ground.

### NOTE:

If adequate header float cannot be achieved using all of the available adjustments, an optional heavy duty spring is available.



## PERFORMING PREDELIVERY CHECKS

19. Proceed to [6.10 Checking and Adjusting Header Wing Balance, page 108](#).

## 6.10 Checking and Adjusting Header Wing Balance

### IMPORTANT:

Before proceeding, the header float must be set properly. Refer to [6.9 Checking and Adjusting Header Float, page 102](#).

The header wing balance allows the wings (A) to react to changing ground conditions. If set too light, the wings will bounce or not follow ground contours, leaving uncut crop. If set too heavy, the end of the header will dig into the ground. After the header float has been set, the wings must be balanced for the header to follow the ground contours properly.

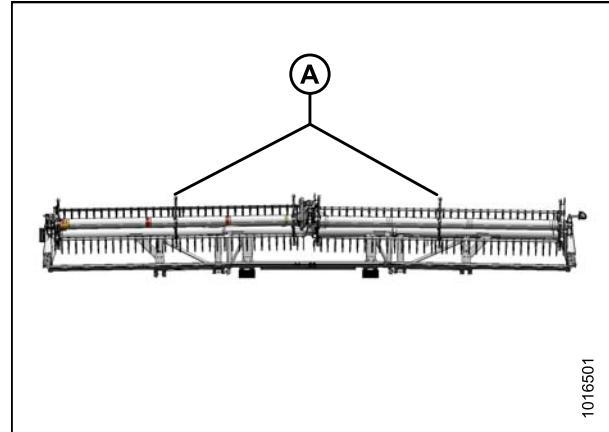


Figure 6.25: Flex Header Wings

### 6.10.1 Checking Wing Balance

This procedure describes how to check the balance of each wing.

### IMPORTANT:

To ensure correct wing balance readings, make sure the header float is set properly before proceeding. Refer to [6.9 Checking and Adjusting Header Float, page 102](#).



### WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

If a header wing has a tendency to be in a smile (A) or a frown (B) position, wing balance may require adjusting. Perform the following steps to verify if the wings are not balanced and the degree of imbalance:

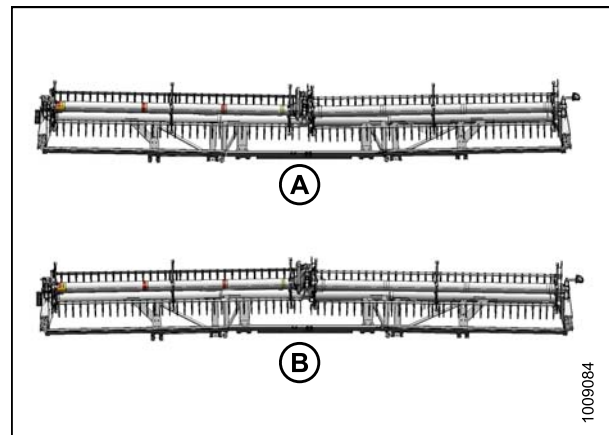


Figure 6.26: Wing Imbalance

## PERFORMING PREDELIVERY CHECKS

1. Adjust the header center-link to approximately halfway between **B** and **C** on indicator (A).
2. Park combine on level ground and raise header until cutterbar is 6–10 in. (152–254 mm) off the ground.
3. Stop engine and remove key.
4. If installed, move transport/stabilizer wheels so that they are supported by header. Refer to instructions provided with the transport/stabilizer system.
5. Remove linkage cover (A) by removing bolt (B) and rotating cover upward until inboard end can be lifted off.

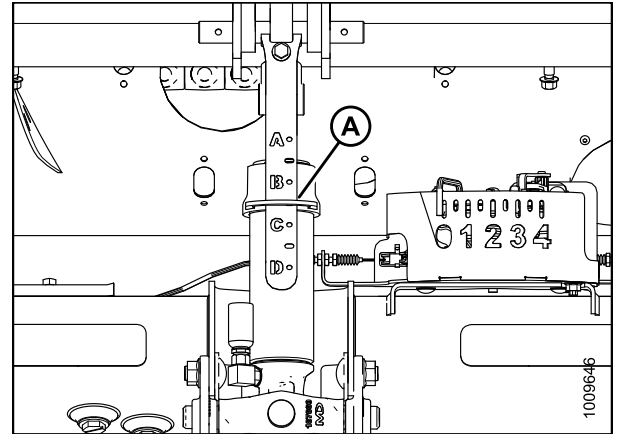


Figure 6.27: Center-Link

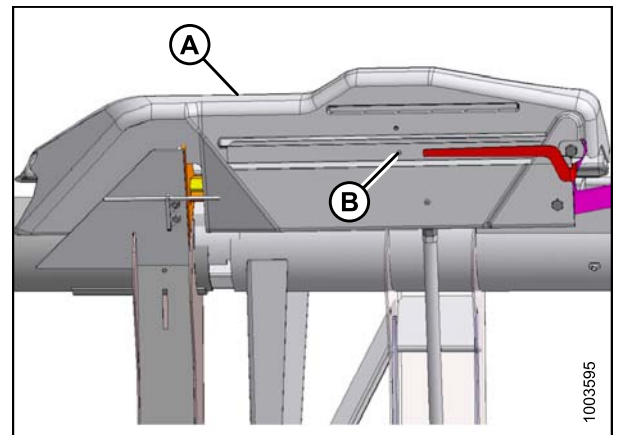


Figure 6.28: Linkage Cover

### NOTE:

Refer to the decal (A) inside each linkage cover.


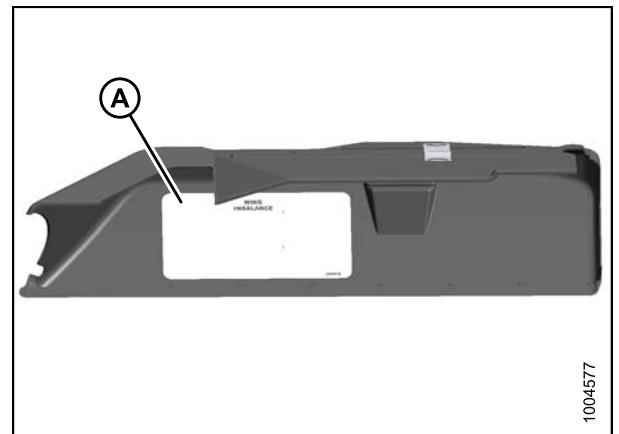


Figure 6.29: Linkage Cover


## PERFORMING PREDELIVERY CHECKS

6. Unlock the wings by moving spring handles (A) to lower (UNLOCK) position.

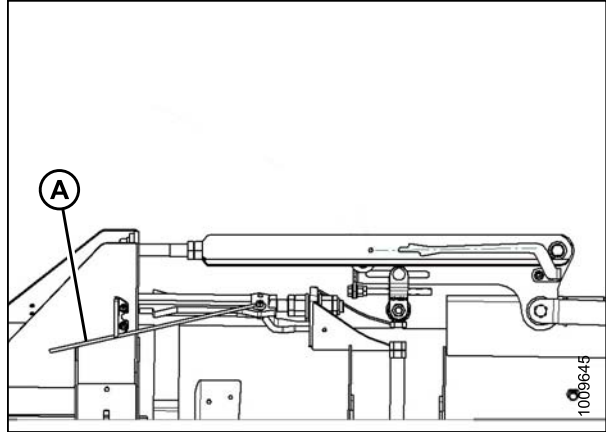


**Figure 6.30: Wing Lock in UNLOCK Position**

7. Retrieve wrench (A) from right-hand float module leg.

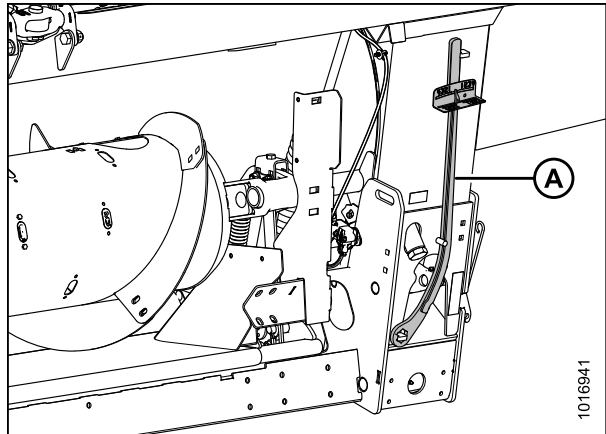

**Figure 6.31: Torque Wrench**

8. Place torque wrench (A) onto bolt (B).

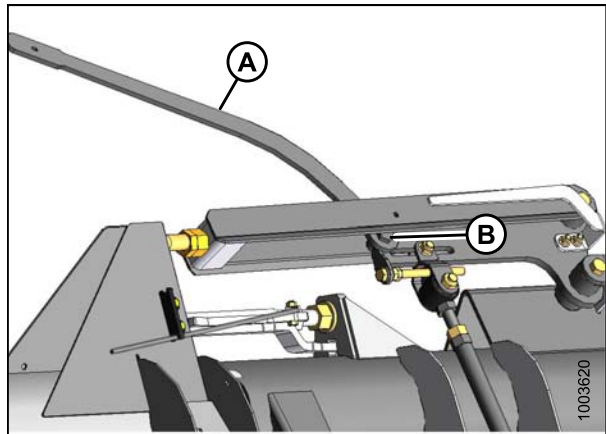

**Figure 6.32: Balance Linkage**

## PERFORMING PREDELIVERY CHECKS

9. Check that pointer (D) is properly positioned as follows:
  - a. Use wrench (A) to move bell crank (B) so that lower edge of bell crank is parallel to top-link (C).
  - b. Check that pointer (D) is lined up with the top-link (C). Bend pointer if necessary.

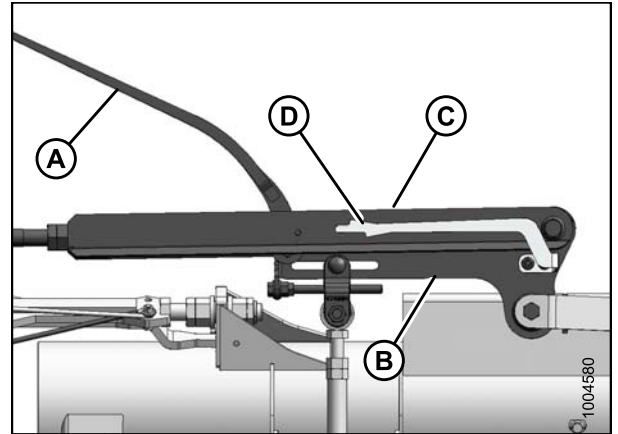


Figure 6.33: Balance Linkage

10. Move wing upward with torque wrench (A) until pointer lower alignment tab (C) lines up with upper edge of top-link (B). Observe indicator reading (A) on wrench and record it.

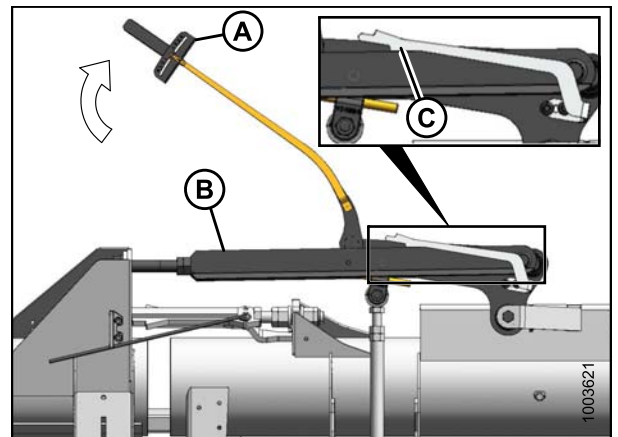


Figure 6.34: Balance Linkage

11. Move wing downward with torque wrench (A) until pointer upper alignment tab (C) lines up with the lower edge of the top-link (B). Observe indicator reading (A) on the wrench and record it.
  - If the difference between the readings is 1 or less, the wing is balanced and no further adjustment is required. Follow the steps below to reinstall the linkage cover.
  - If the difference between the readings is more than 1, the wing is not balanced. Refer to [6.10.2 Adjusting Wing Balance, page 113](#).


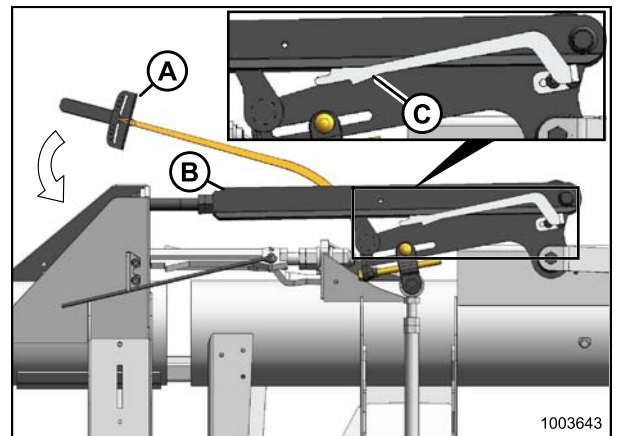


Figure 6.35: Balance Linkage


## PERFORMING PREDELIVERY CHECKS

- If the indicator range is as shown at right, the wing is too light.

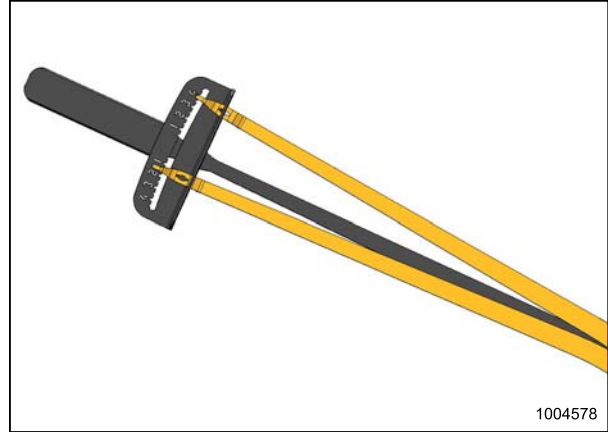


**Figure 6.36: Wrench Indicator**

- If the indicator range is as shown at right, the wing is too heavy.

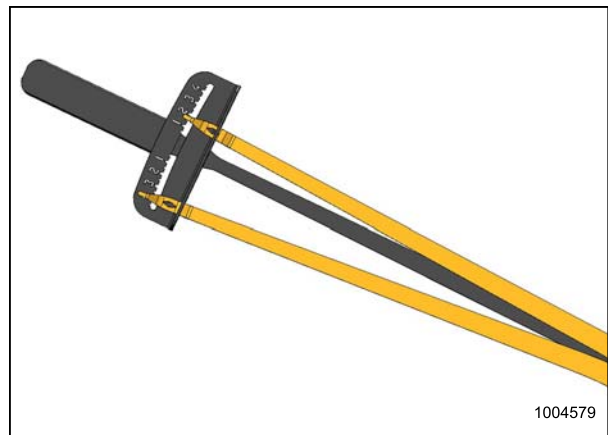

**Figure 6.37: Wrench Indicator**

12. If no adjustment is required, place wrench (A) back onto the right-hand float module leg.

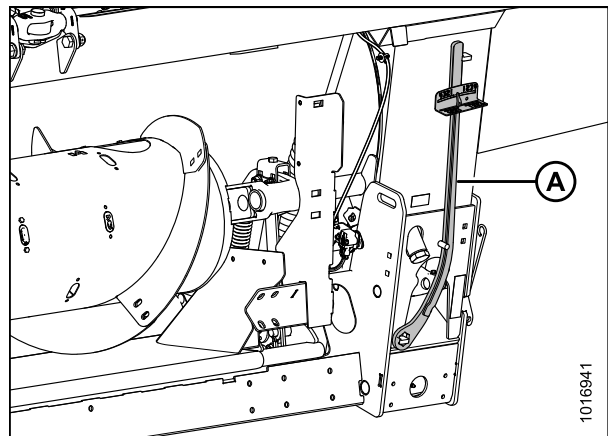

**Figure 6.38: Torque Wrench**

## PERFORMING PREDELIVERY CHECKS

13. If no adjustment is required, reinstall linkage cover (A) and secure it with bolt (B). If adjustment is required, refer to [6.10.2 Adjusting Wing Balance, page 113](#).

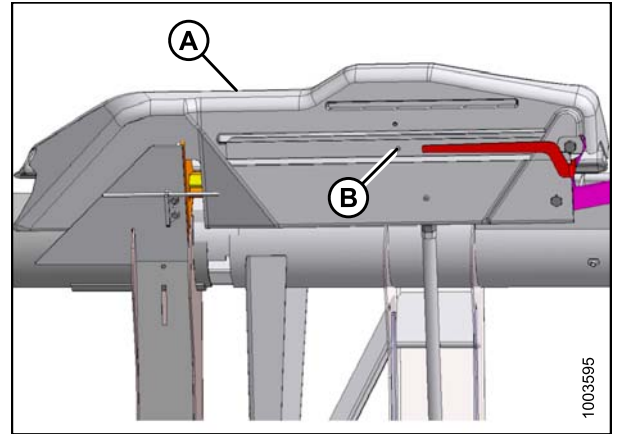


Figure 6.39: Linkage Cover

### 6.10.2 Adjusting Wing Balance

#### WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.

This procedure describes how to adjust the balance of each wing. Before proceeding, refer to [6.10.1 Checking Wing Balance, page 108](#) to determine if adjustments are necessary.

#### IMPORTANT:

To ensure correct wing balance readings, make sure the header float is set properly before proceeding. Refer to [6.9 Checking and Adjusting Header Float, page 102](#). The float module must be sitting level before performing any adjustments.

1. Place torque wrench (A) on bolt (B).

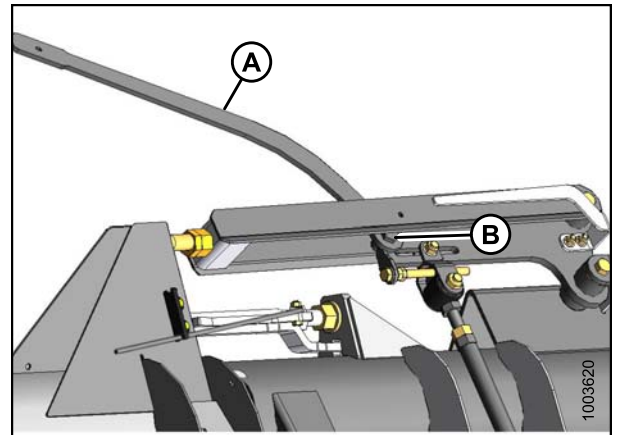


Figure 6.40: Balance Linkage (Left Side)

## PERFORMING PREDELIVERY CHECKS

- Loosen the clevis bolt (A) for the wing requiring adjustment as determined by the wing balance check.

**NOTE:**

Do **NOT** loosen any other hardware.

- Adjust bolt (B) and set dimension (C), refer to Table 6.3 *Wing Balance Chart, page 114*.

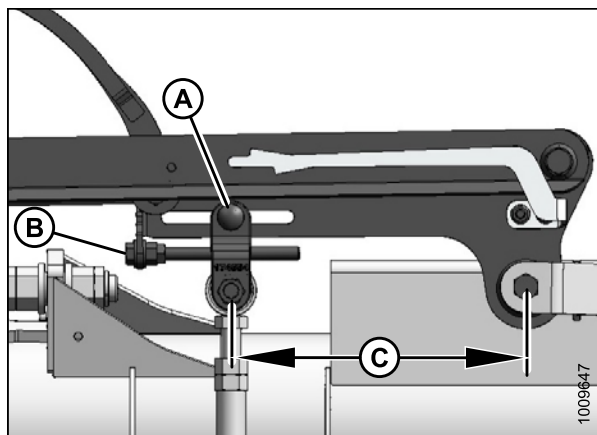


Figure 6.41: Balance Linkage (Left Side)

Table 6.3 Wing Balance Chart

Header Configuration	Wing Dimension (C) <sup>1</sup>	
	Left Wing in. (mm)	Right Wing in. (mm)
30-foot	11-13/32 (290)	11-1/4 (285)
35-foot	11-13/16 (300)	11-13/16 (300)
40-foot single-knife drive (SKD)	12 (305)	12-19/32 (320)
40-foot double-knife drive (DKD)	12 (305)	12-3/16 (310)
40-foot double-knife drive (DKD) split frame	12 (305)	12-3/16 (310)
45-foot double-knife drive (DKD) split frame	12-3/16 (310)	12-3/16 (310)

- Recheck the wing balance. Refer to [6.10.1 Checking Wing Balance, page 108](#).
- If necessary, perform the following adjustments:
  - If the wing is too heavy, turn adjuster bolt (B) to move clevis (C) outboard (D).
  - If the wing is too light, turn adjuster bolt (B) to move clevis (C) inboard (E).
- Adjust clevis (C) position if necessary until indicator readings are within one increment.
- Tighten clevis bolt (A).

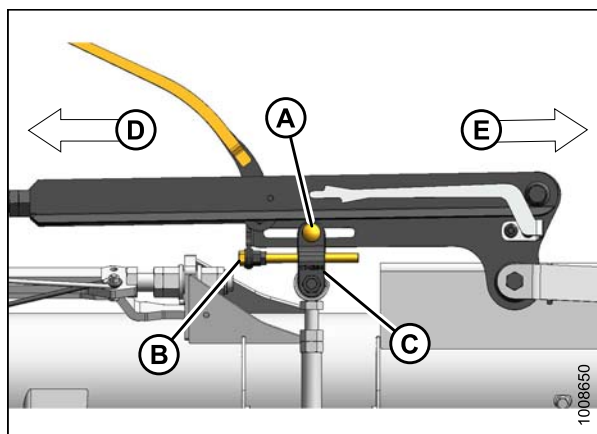


Figure 6.42: Balance Linkage (Left Side)

1. These dimensions are initial settings. Further adjustment will be required if any optional kits have been installed.



## PERFORMING PREDELIVERY CHECKS

8. Move handle to the upper LOCK position.
9. If lock does not engage, move the wing up and down with torque wrench until it locks. When locked, there will be some movement in the linkage.
10. If the cutterbar is not straight when wings are in lock mode, then further adjustments are required.

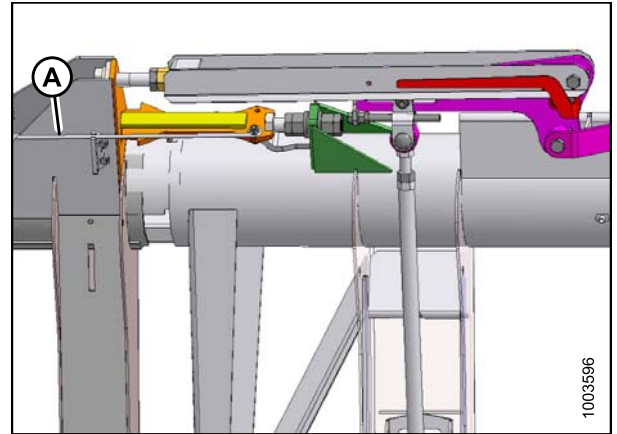


Figure 6.43: Wing Lock in Lock Position

11. Replace torque wrench (A) onto the float module frame.

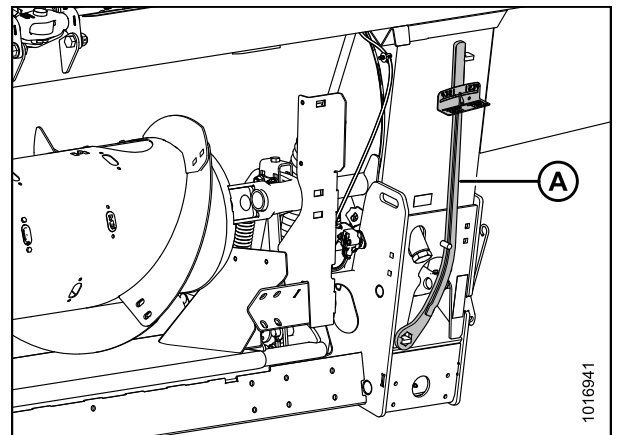


Figure 6.44: Torque Wrench

12. Reinstall linkage cover (A) and secure it with bolt (B).

**NOTE:**

Adjustment to the main float may be required to maintain good wing balance when operating in the field. Refer to Step 16, [page 106](#).

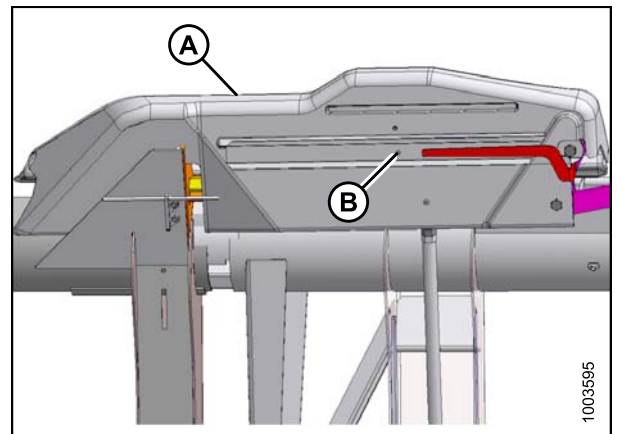


Figure 6.45: Linkage Cover

## 6.11 Measuring and Adjusting Reel Clearance to Cutterbar

The minimum clearance between the reel fingers and the cutterbar ensures that the reel fingers do not contact the cutterbar during operation. The clearance is adjusted at the factory, but some adjustment may be necessary before operation.

The finger to guard/cutterbar clearances with reels fully lowered are shown in Table 6.4 *Finger to Guard/Cutterbar Clearance*, page 116.

### IMPORTANT:

Measurements must be taken at **both ends of each reel** and at the **cutterbar flex locations** with the header in full-frown mode.

**Table 6.4 Finger to Guard/Cutterbar Clearance**

Header Width	(X) +/- 1/8 in. (3 mm) at Reel Ends and Flex Locations
30 ft.	3/4 in. (20 mm)
35 ft.	
40 ft.	
45 ft.	

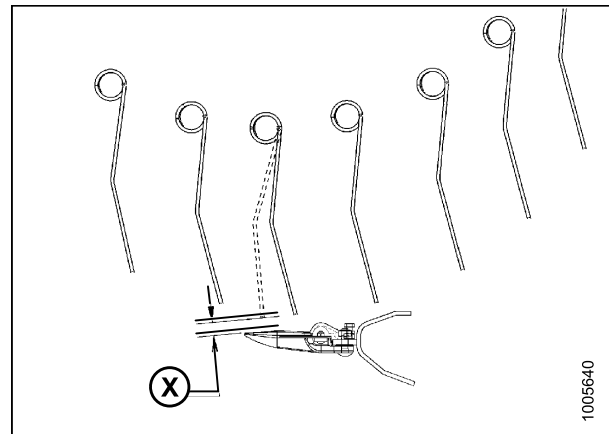


Figure 6.46: Finger Clearance

### 6.11.1 Measuring Reel Clearance



### DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Park the header on level ground.
2. Move spring handles (A) down to (UNLOCK) position.


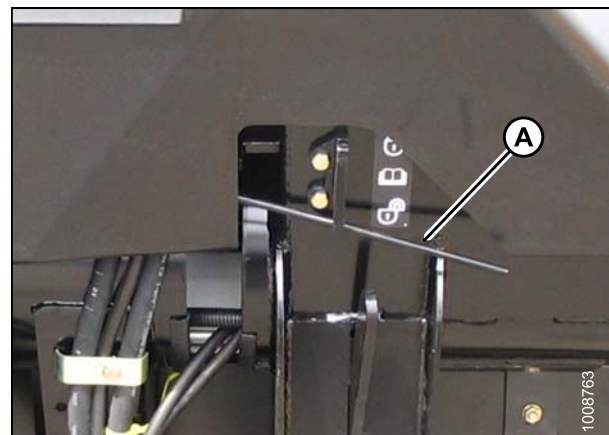


Figure 6.47: Wing Lock in Unlocked Position


## PERFORMING PREDELIVERY CHECKS

3. Raise header and place two 6 in. (150 mm) blocks (A) under the cutterbar, just inboard of the wing flex points.
4. Lower header fully, allowing it to flex into full frown mode.

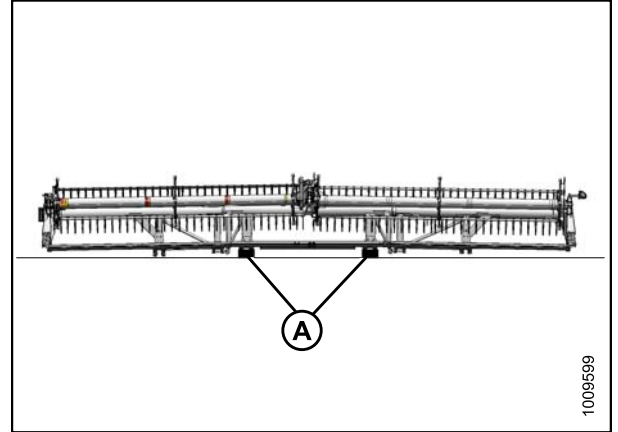

**Figure 6.48: FlexDraper® Block Locations**

5. Set the fore-aft position to the middle position (5) on the fore-aft position decal (A).
6. Lower the reel fully.
7. Shut down the engine and remove key from the ignition.

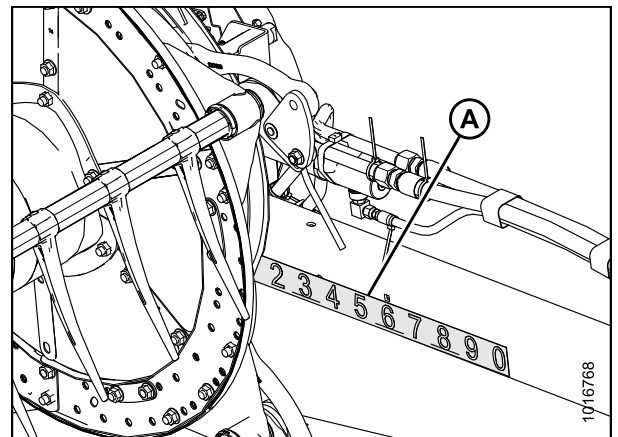

**Figure 6.49: Fore-Aft Position**

## PERFORMING PREDELIVERY CHECKS

8. Measure the clearance (X) between points (B) and (C) at the ends of each reel (A) and at the flex locations (B).

### NOTE:

The reel is factory-set to provide more clearance at the center of the reel than at the ends (frown) to compensate for reel flexing.

9. Check all possible points of contact between points (B) and (C). Depending on the reel fore-aft position, minimum clearance can result at the guard tine, hold-down, or cutterbar.
10. Adjust the reel if necessary. Refer to [6.11.2 Adjusting Reel Clearance, page 118](#).

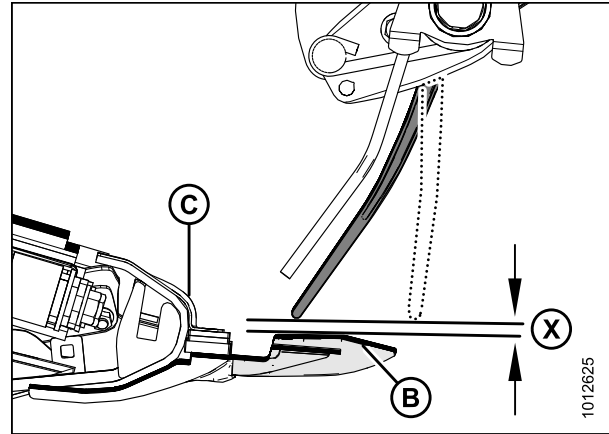


Figure 6.50: Reel Clearance

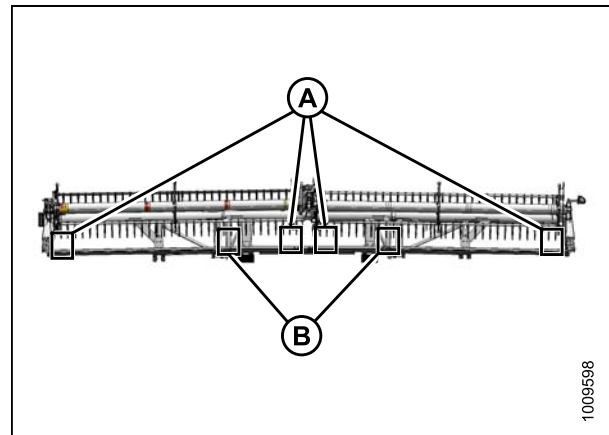


Figure 6.51: Measurement Locations

## 6.11.2 Adjusting Reel Clearance

### DANGER

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under header for any reason.

1. Adjust outboard reel arm lift cylinders to set clearance at outboard ends of reel as follows:
  - a. Loosen bolt (A).
  - b. Turn cylinder rod (B) out of clevis to raise reel and increase clearance to cutterbar, or turn cylinder rod into clevis to lower reel and decrease clearance.
  - c. Tighten bolt (A).
  - d. Repeat at opposite side.

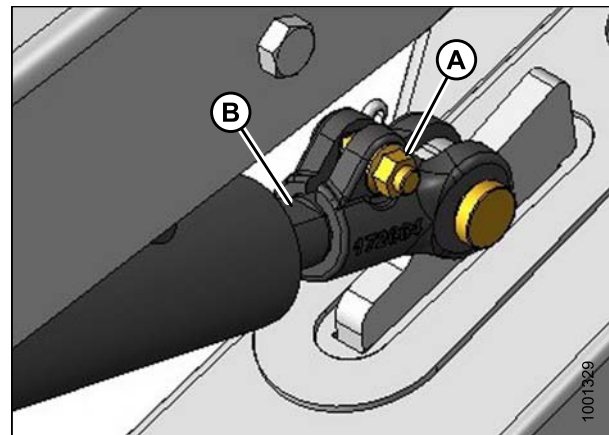


Figure 6.52: Outside Reel Arm

## PERFORMING PREDELIVERY CHECKS

2. Adjust center arm lift cylinder stop (A) to change clearance at inboard ends of reels and clearance at flex points as follows:
  - a. Loosen nut (B).
  - b. Turn nut (C) counterclockwise to raise reel and increase clearance to cutterbar, or clockwise to lower reel and decrease clearance.
  - c. Tighten nut (B).

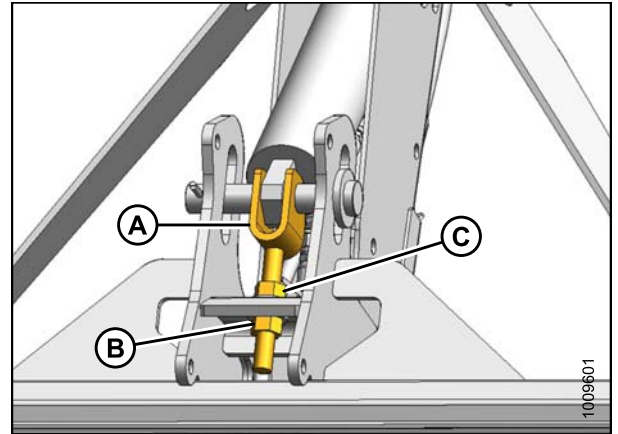


Figure 6.53: Looking up at Arm Underside

## 6.12 Adjusting Auger to Pan Clearance

### DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

#### IMPORTANT:

Maintain an appropriate distance between the auger and the auger pan. Too little clearance may result in the tines or flanging contacting and damaging the feed draper or pan when operating the header at certain angles. Look for evidence of contact when greasing the float module.

1. Extend the center-link to the steepest header angle, and position the header 6–10 in. (150–254 mm) off the ground.
2. Lock header wings.
3. Shut down the combine and remove the key from the ignition.
4. Ensure the float lock linkage is on the down stops (washer [A] cannot be moved) at both locations.

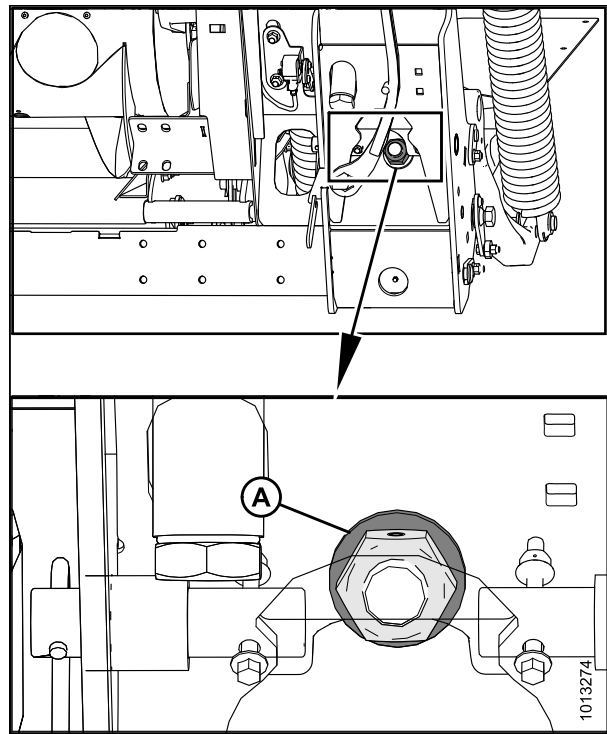


Figure 6.54: Float Lock

## PERFORMING PREDELIVERY CHECKS

5. Before adjusting the auger to pan clearance, check the auger float position to determine how much clearance is required:
  - If the bolt head (A) is closest to the floating symbol (B), the auger is in the floating position.

### CAUTION

Make sure the two bolts (A) are in the same location to prevent damage to the machine during operation.

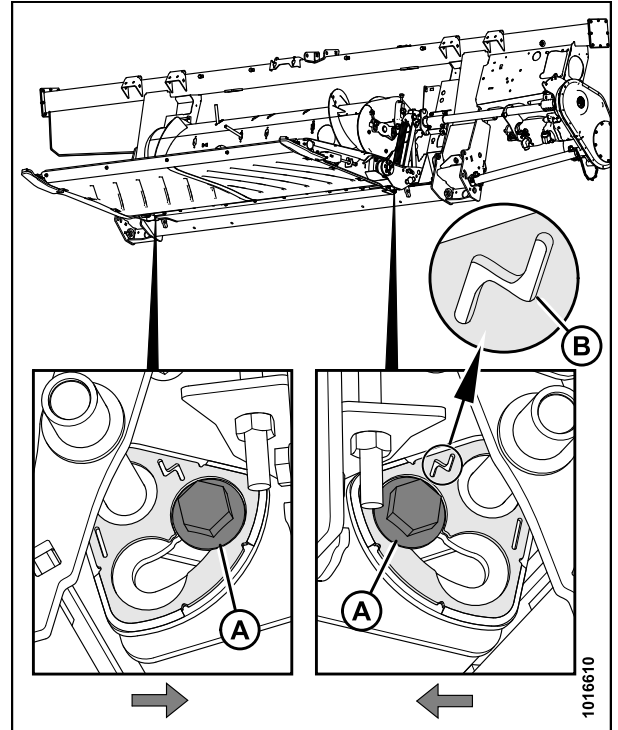


Figure 6.55: Floating Position

- If the bolt head (A) is closest to the rigid symbol (B), the auger is in the rigid position.

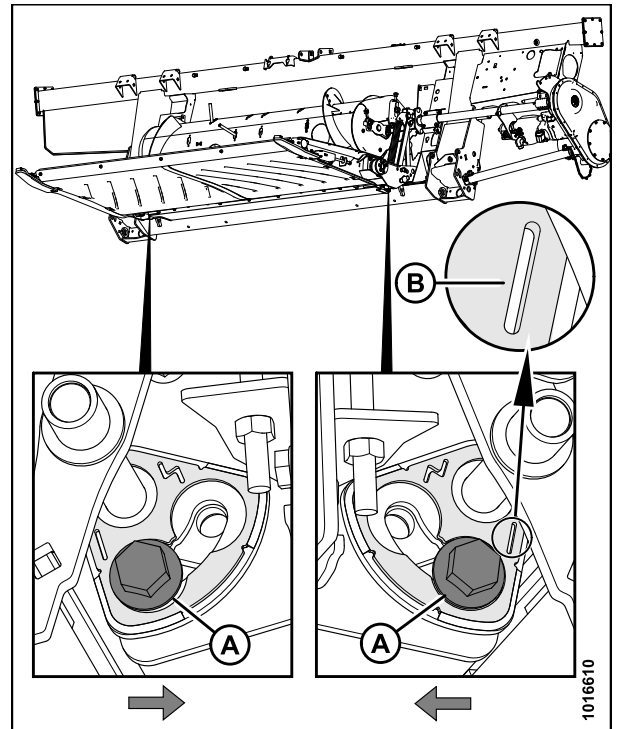


Figure 6.56: Rigid Position

## PERFORMING PREDELIVERY CHECKS

6. Loosen two nuts (B).
7. Using the adjuster bolt (A), set clearance (C) to  $\frac{13}{16}$  to  $1\frac{1}{16}$  in. (20.5 to 26.5 mm) if feed auger is in rigid position, and  $\frac{3}{8}$  to  $\frac{5}{8}$  in. (9 to 15 mm) if feed auger is in floating position. Turn bolt clockwise to increase clearance and counterclockwise to decrease clearance.

**NOTE:**


The clearance increases between 1 and  $1\frac{1}{2}$  in. (25–40 mm) when the center-link is fully retracted.

8. Repeat Step 6, [page 122](#) and Step 7, [page 122](#) for the opposite end of the auger.

**IMPORTANT:**

Adjusting one side of the auger can affect the other side so recheck both sides after final adjustment is made.

9. Tighten nuts (B) on both ends of the feed auger. Torque the nuts to 68–73 ft·lbf (93–99 N·m).

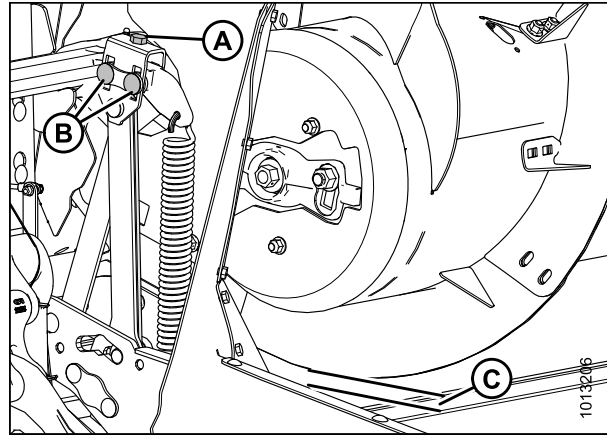

**Figure 6.57: Auger Clearance**



## 6.13 Adjusting Draper Tension

### WARNING

To avoid bodily injury or death from unexpected start-up or fall of raised machine, always stop engine, remove key, and engage safety props before going under machine for any reason.

#### NOTE:


If adjustment is required, tension the drapers just enough to prevent slipping and to keep the draper from sagging below the cutterbar.

1. Ensure the white indicator bar (A) is at the halfway point in the window.


### WARNING

**Check to be sure all bystanders have cleared the area.**

2. Start the engine and raise the header.
3. Stop the engine, remove the key from the ignition, and engage the header safety props.
4. Ensure the draper guide (the rubber track on the underside of the draper) is properly engaged in the groove (A) on the drive roller.

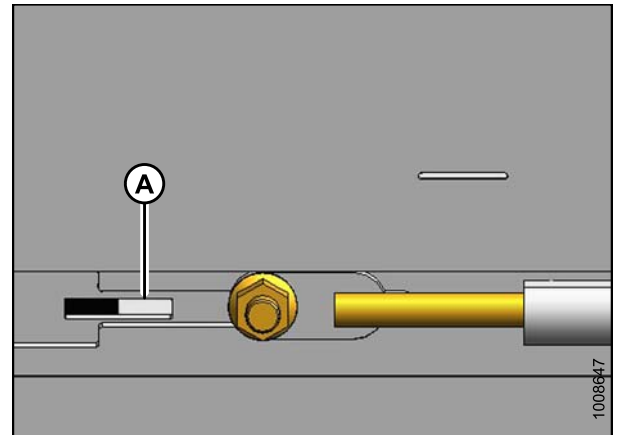

**Figure 6.58: Left-Hand Tension Adjuster Shown – Right-Hand Opposite**

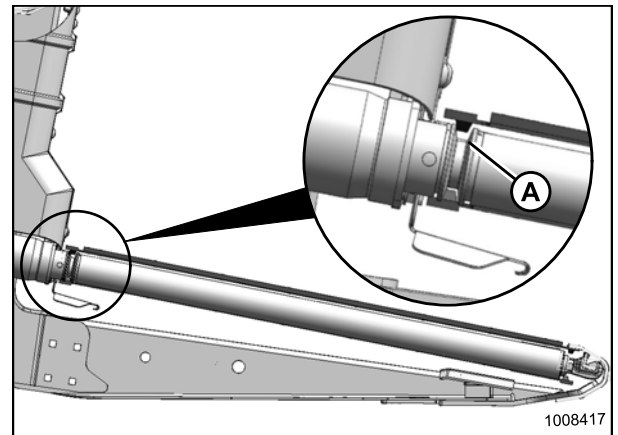

**Figure 6.59: Drive Roller**

## PERFORMING PREDELIVERY CHECKS

5. Ensure the idler roller (A) is between the draper guides (B).

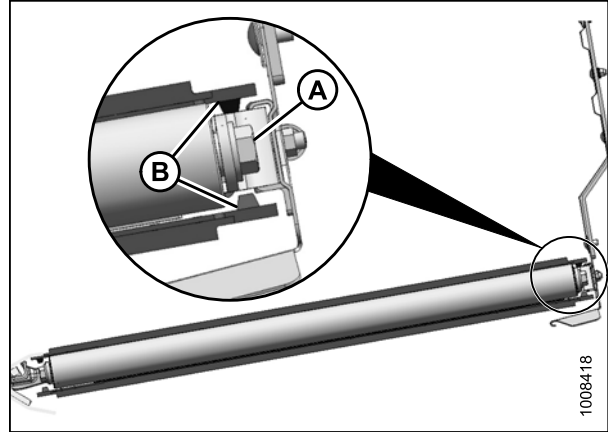


Figure 6.60: Idler Roller

### IMPORTANT:

Do **NOT** adjust nut (C). This nut is used for draper alignment only.

6. Turn the adjuster bolt (A) counterclockwise to loosen. The white indicator bar (B) will move outboard in the direction of arrow (D) to indicate that the draper is loosening. Loosen until the white indicator bar is at the halfway point in the window.
7. Turn the adjuster bolt (A) clockwise to tighten. The white indicator bar (B) will move inboard in the direction of arrow (E) to indicate that the draper is tightening. Tighten until the white indicator bar is at the halfway point in the window.

### IMPORTANT:

- To avoid premature failure of the draper, draper rollers, and/or tightener components, do not operate with the tension set so the white bar is not visible.
- To prevent scooping dirt, ensure the draper is tight enough that it does not sag below the point where the cutterbar contacts the ground.

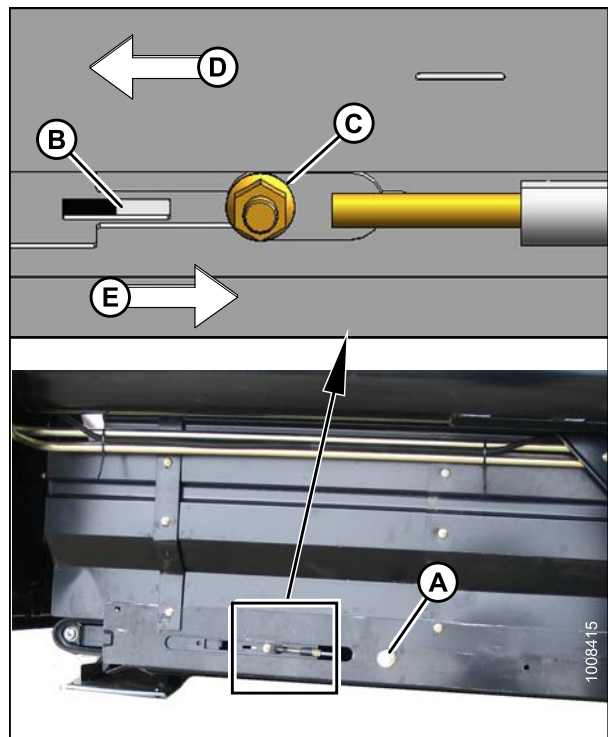


Figure 6.61: Left-Hand Tension Adjuster  
Shown – Right-Hand Opposite

## 6.14 Checking and Adjusting Draper Seal

Maintain the deck height such that the draper runs just below the cutterbar.

### IMPORTANT:

With a new header or newly installed draper, set the gap between the draper (A) and cutterbar (B) to 1/8 in. (3 mm). To prevent material from entering the drapers and cutterbar, you may need to decrease the deck clearance to 0–1/32 in. (0–1 mm) after an initial break-in period of approximately 50 hours.

1. Check deck height. Draper (A) should run just below cutterbar (B) with a gap of 1/8 in. (3 mm) between the top of deck front track and cutterbar. If deck height is acceptable, skip the remaining steps and proceed to [6.15 Lubricating the Header, page 127](#).

If deck height is **NOT** acceptable, adjust seal as described in the following steps:

### NOTE:

Take measurement at deck supports (A) with the header in working position and decks slid fully forward. There are between two and eight supports per deck depending on header size.

2. Loosen tension on drapers. For instructions, refer to [6.13 Adjusting Draper Tension, page 123](#).

3. Lift draper (A) up at front edge past cutterbar (B).

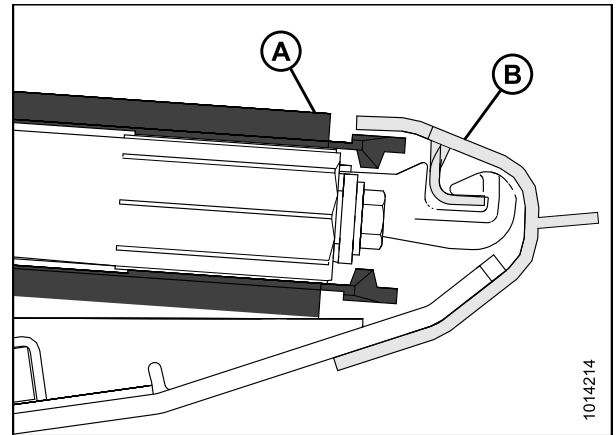


Figure 6.62: Draper/Cutterbar Gap

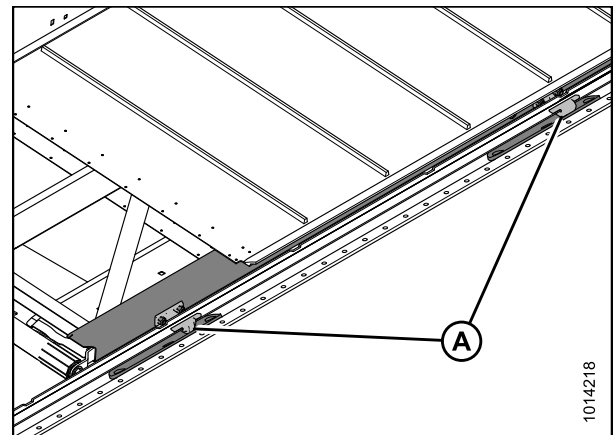


Figure 6.63: Draper Deck Supports


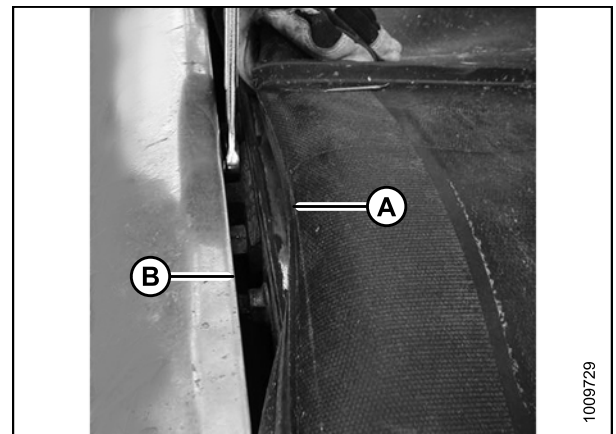


Figure 6.64: Lifting Draper at Cutterbar

## PERFORMING PREDELIVERY CHECKS

4. Loosen two lock nuts (A) only one-half-turn on deck support (B).
5. Tap deck (C) to lower deck relative to supports and achieve the recommended setting. Tap support (B) using a punch to raise deck relative to supports.
6. Tighten deck support hardware (A).
7. Tension drapers. Refer to [6.13 Adjusting Draper Tension, page 123](#).

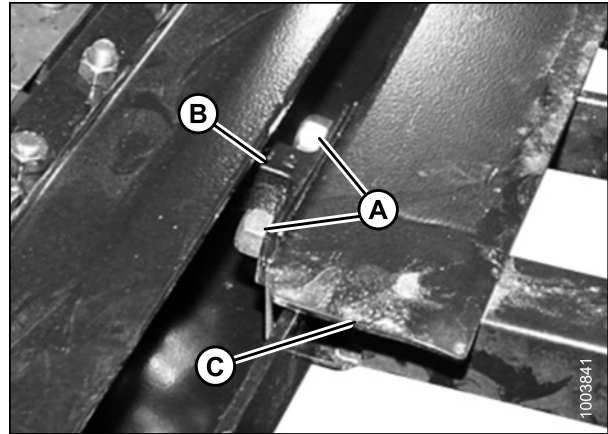

**Figure 6.65: Draper Deck Supports (Draper Removed)**

## 6.15 Lubricating the Header

Table 6.5 Recommended Lubricant

Specification	Description	Use
SAE multipurpose	High temperature, extreme pressure (EP2) performance with 1% max molybdenum disulphide (NLGI Grade 2) lithium base	As required unless otherwise specified
	High temperature, extreme pressure (EP) performance with 10% max molybdenum disulphide (NLGI Grade 2) lithium base	Driveline slip-joints

### 6.15.1 Greasing Procedure

Greasing points are marked on the machine by decals showing a grease gun and grease interval in hours of operation. Master grease point location decals are provided on the header and the float module back frame.

#### DANGER

**To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.**

1. Wipe grease fitting with a clean cloth before greasing to avoid injecting dirt and grit.
2. Inject grease through fitting with grease gun until grease overflows fitting (except where noted).
3. Leave excess grease on fitting to keep out dirt.
4. Replace any loose or broken fittings immediately.
5. Remove and thoroughly clean any fitting that will not take grease. Also clean lubricant passageway. Replace fitting if necessary.
6. Use clean, high-temperature, extreme-pressure grease only.


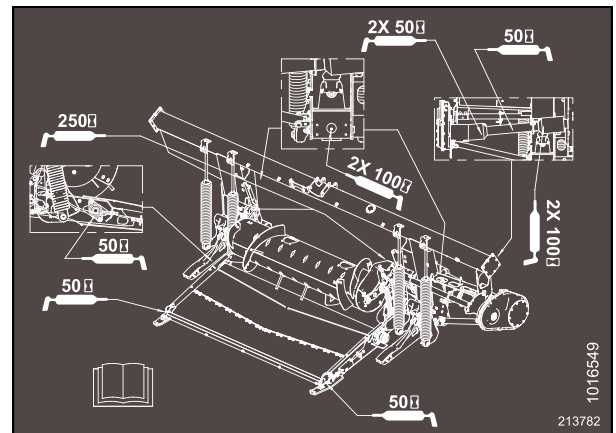


Figure 6.66: FM100 Master Grease Point Decal

## PERFORMING PREDELIVERY CHECKS

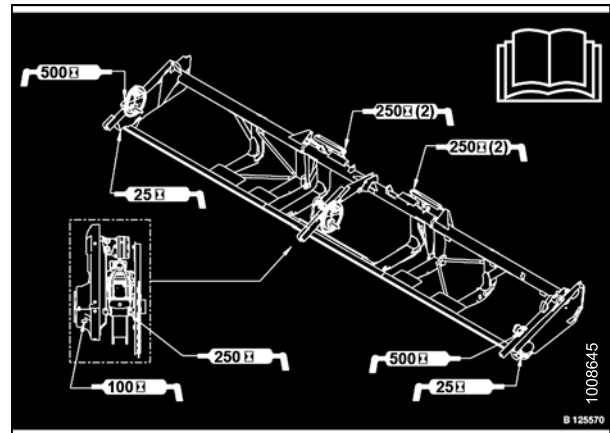

**Figure 6.67: FD1-Series Master Grease Point Decal**


## 6.15.2 Lubrication Points

### Knifehead

#### IMPORTANT:

Overgreasing can cause the knife to bend and make contact with the guards closest to the knifehead. Check for signs of excessive heating on first few guards after greasing. If required, relieve some pressure by removing the grease fitting.

- To prevent binding and/or excessive wear caused by knife pressing on guards, do **NOT** over grease the knifehead (A).
- Apply only 1–2 pumps of grease with a grease gun, or just until the knifehead starts to move away from the arm. Do **NOT** use an electric grease gun.
- If more than 6–8 pumps of the grease gun are required to fill the cavity, replace the seal in the knifehead.
- Check for signs of excessive heating on first few guards after greasing. If required, relieve pressure by pressing check-ball in grease fitting.

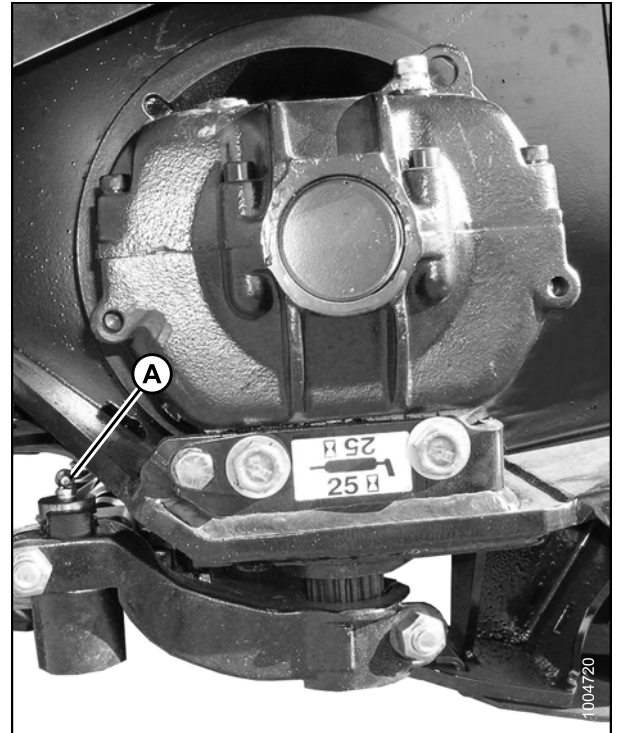


**Figure 6.68: Knifehead**

(Single Knife – One Place)  
(Double Knife – Two Places)

#### NOTE:

Use High Temperature Extreme Pressure (EP2) Performance with 1% Max Molybdenum Disulphide (NLGI Grade 2) Lithium Base grease unless otherwise specified.

## PERFORMING PREDELIVERY CHECKS

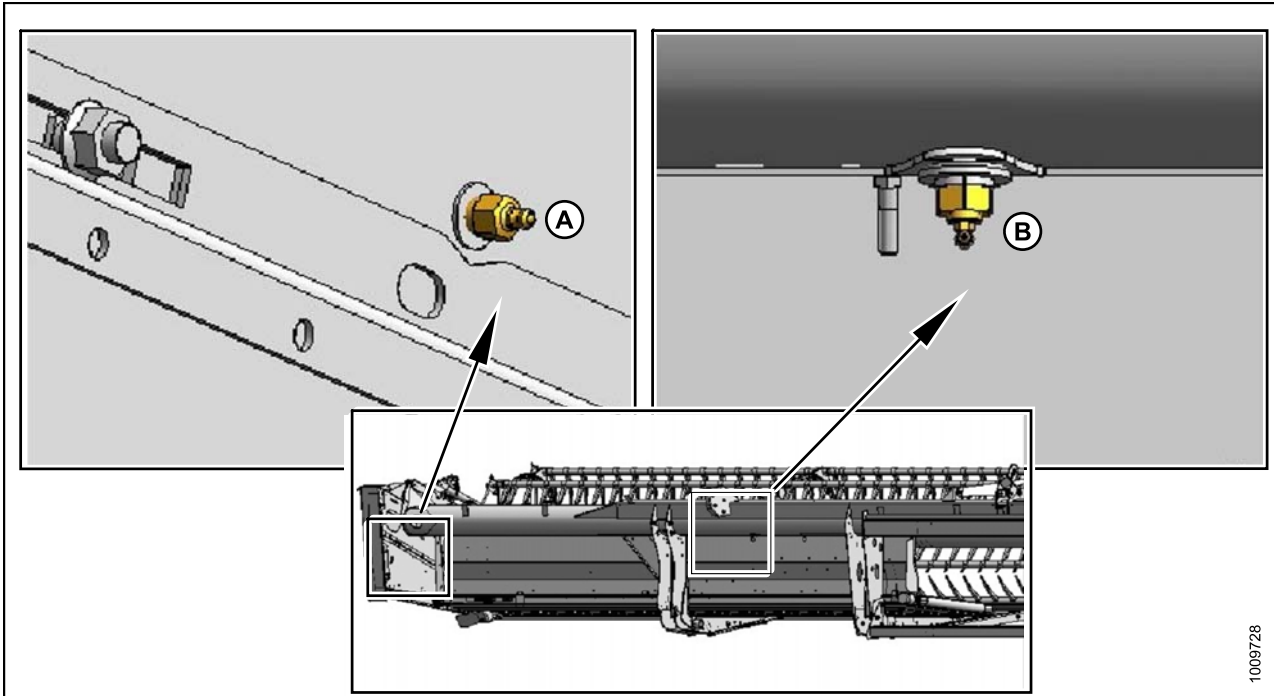


**Figure 6.69: Knife Drive Bearing and Drive Shaft (Double-Knife Timed Drive Only)**

A - Knife Drive Bearing - Double-Knife Drive - (Both Sides)      B - Knife Drive Shaft - Double-Knife Timed Drive (Both Sides) (15 pumps Minimum)



## PERFORMING PREDELIVERY CHECKS

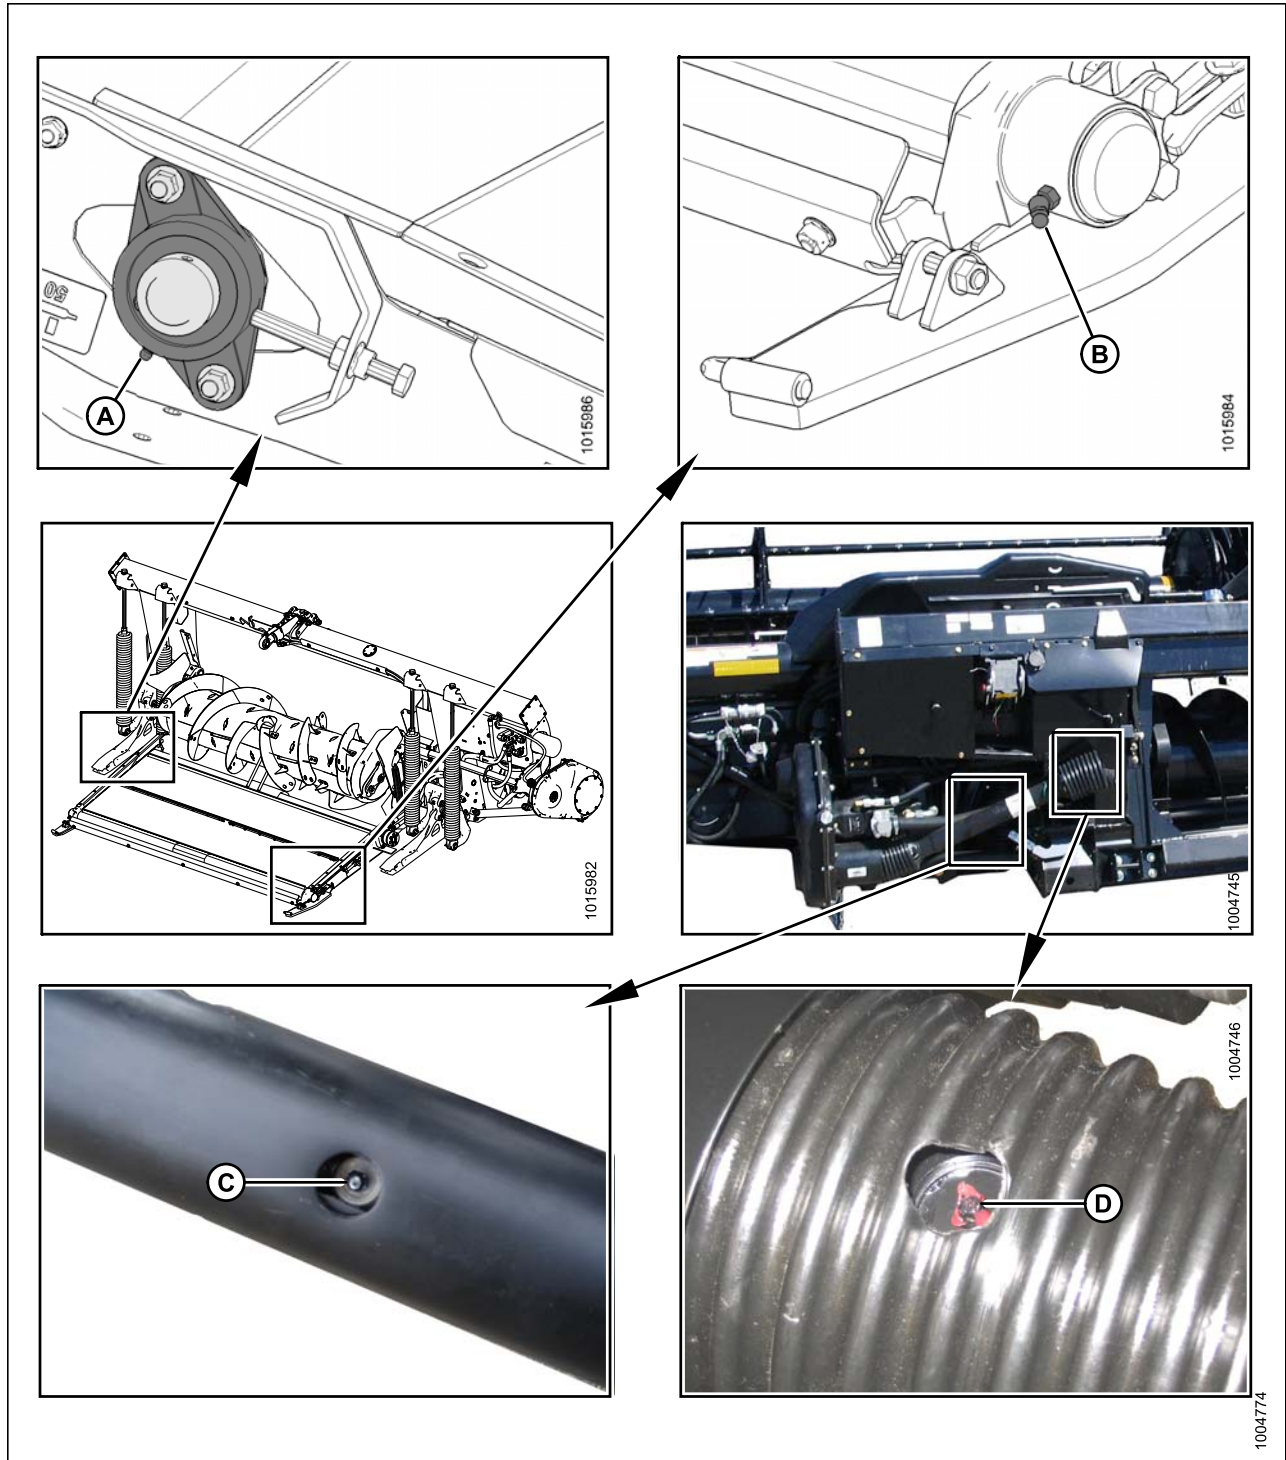

**Figure 6.70: Drive Roller Bearing, Idler Roller, Slip Joint, and Driveline Universal**

A - Drive Roller Bearing


B - Idler Roller - Both Sides

C - Driveline Slip Joint<sup>2</sup>

D - Driveline Universal (Two Places)

2. 10% moly grease is recommended for the driveline slip joint.

## PERFORMING PREDELIVERY CHECKS

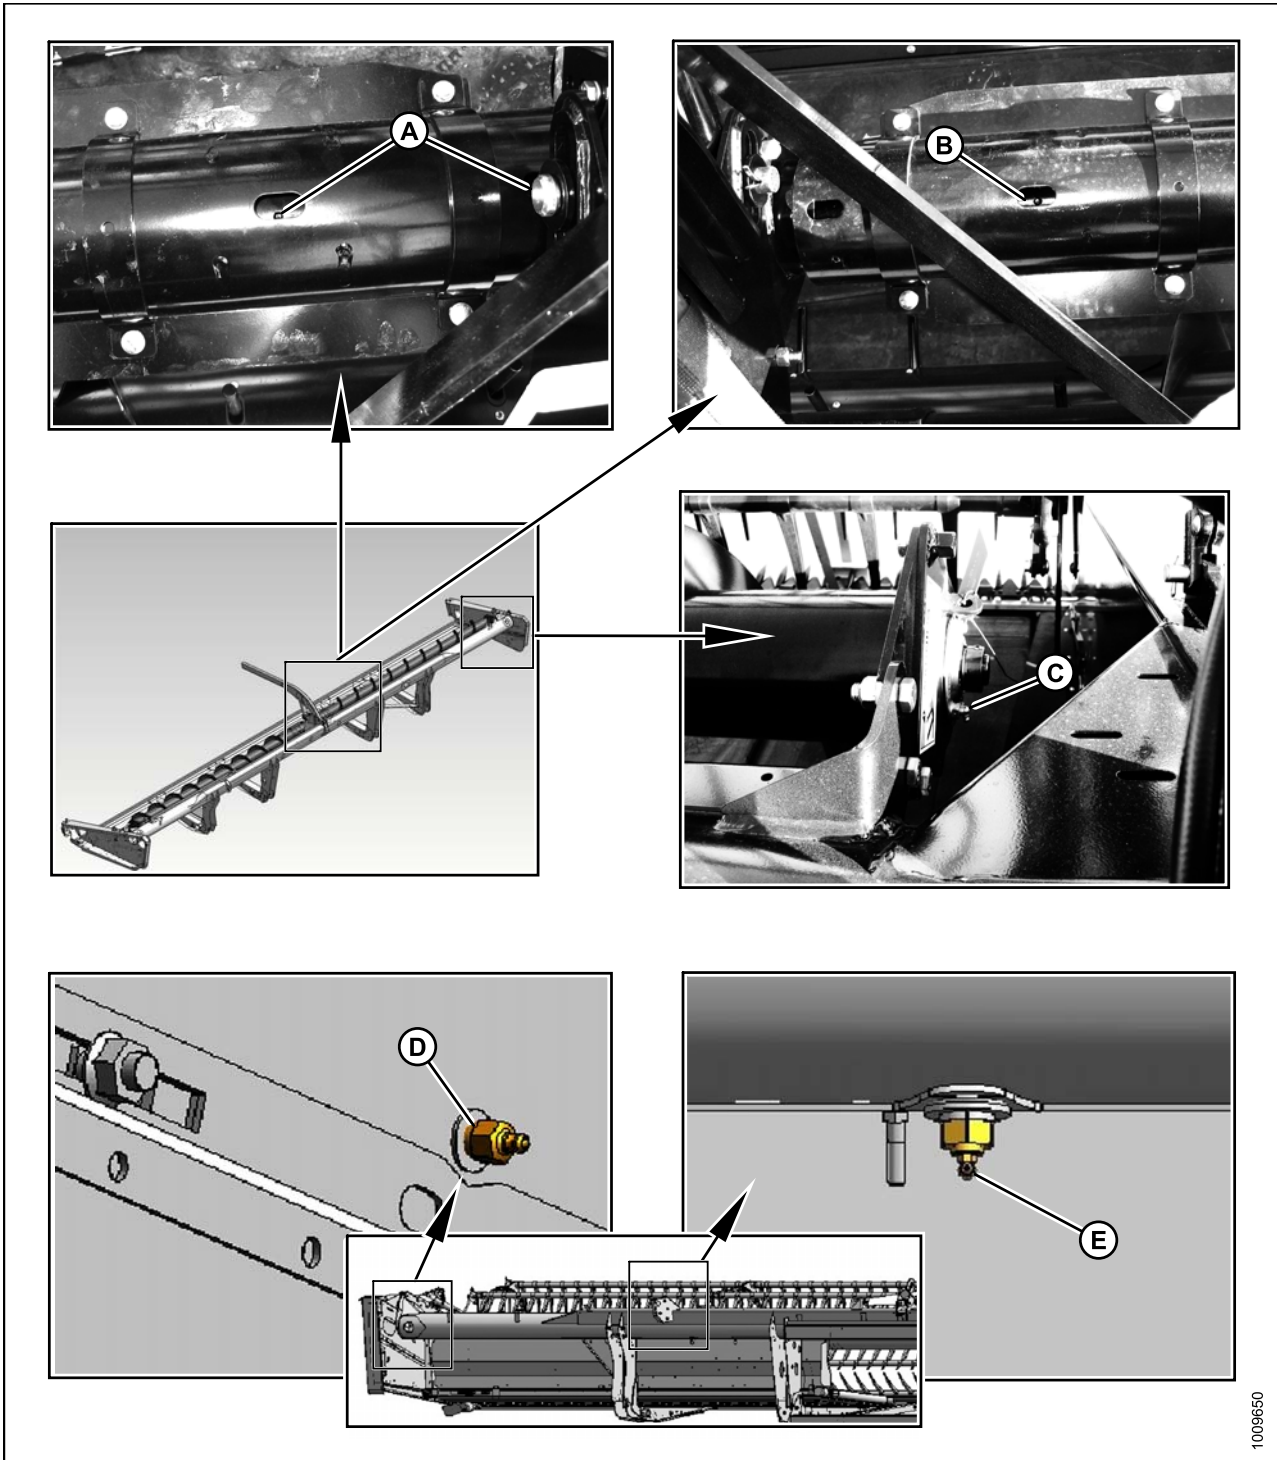

**Figure 6.71: Upper Cross Auger and Knife Drive (Double-Knife Timed Drive)**

A - Upper Cross Auger U-Joint and Bearing


B - Upper Cross Auger Bearing (One Place)

C - Upper Cross Auger (One Place)

D - Knife Drive Bearing - Double-Knife Timed Drive (Both Sides)

E - Knife Drive Shaft - Double-Knife Timed Drive (Both Sides) 15 Pumps  
Minimum

## PERFORMING PREDELIVERY CHECKS

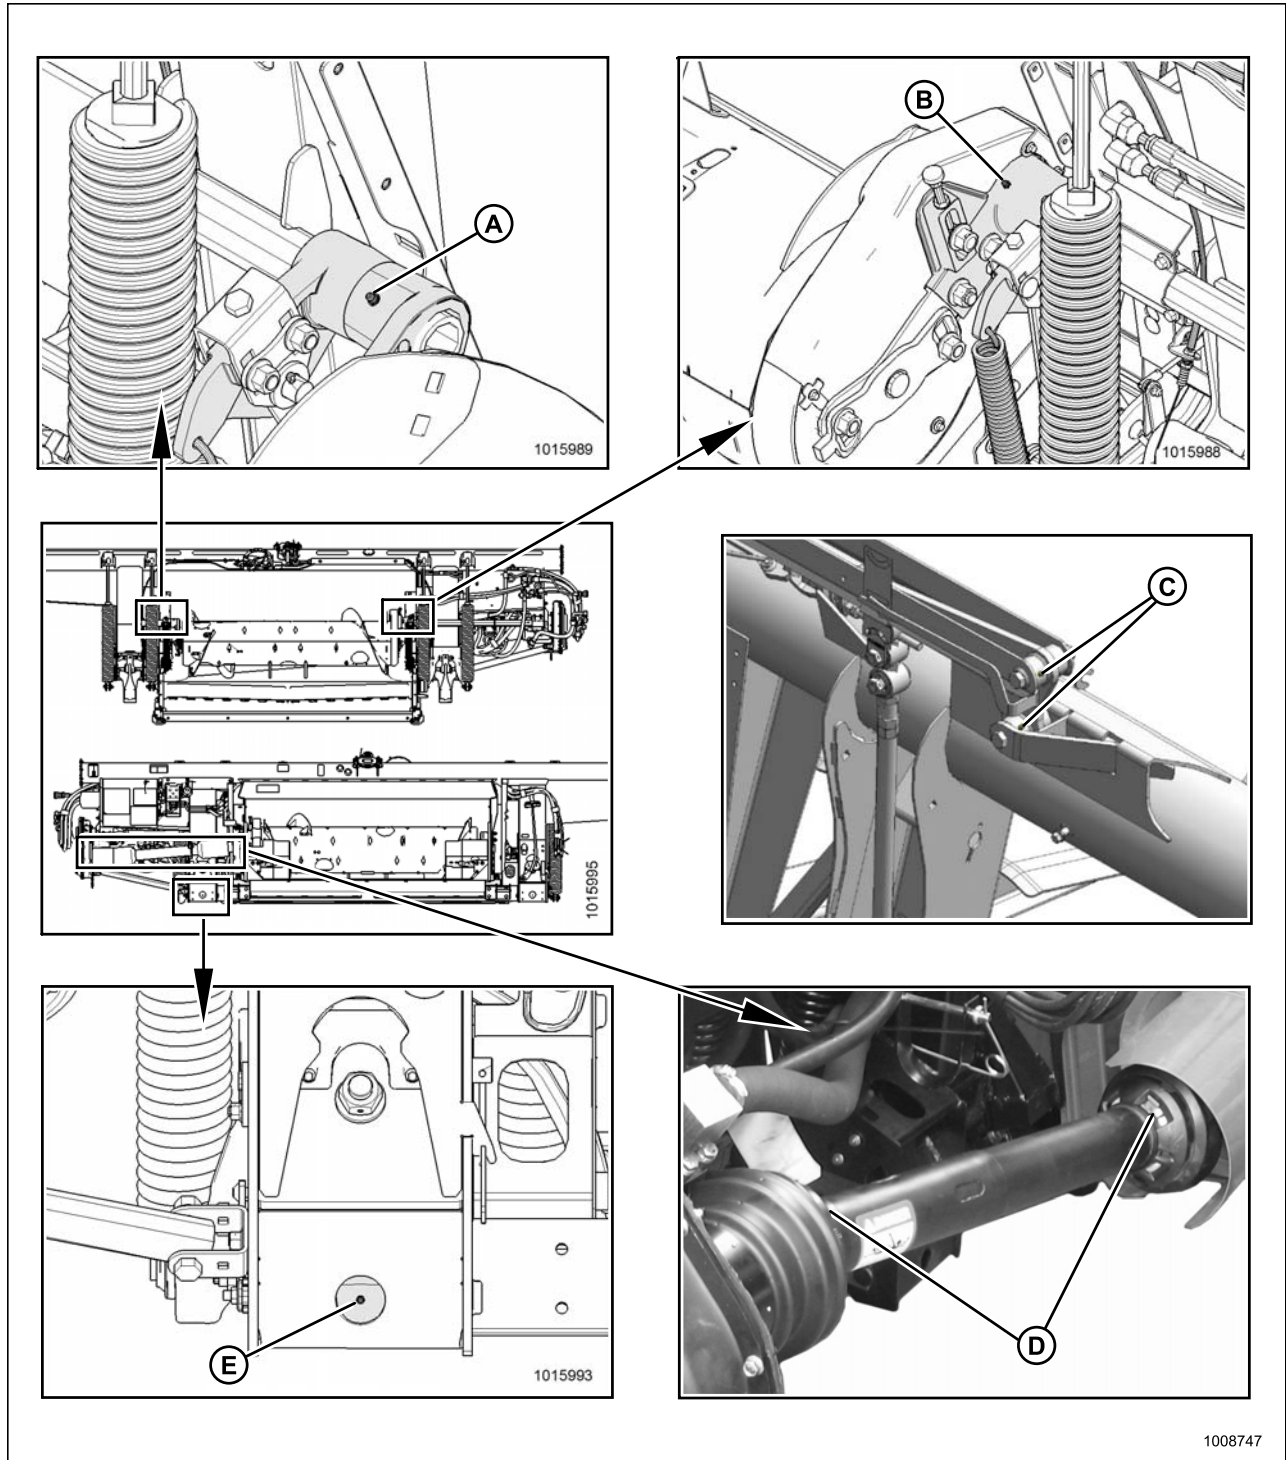

**Figure 6.72: Float Pivot, Driveline Guard, Flex Linkage, and Auger Pivot**

A - Auger Pivot (First Place)

D - Driveline Guard (Two Places)

B - Auger Pivot (Second Place)

E - Float Pivot (Two Places)


C - Flex Linkage ( Two Places) (Both Sides)



## PERFORMING PREDELIVERY CHECKS

### IMPORTANT:

The reel U-joint (C) has an extended lubrication cross and bearing kit. Stop greasing when greasing becomes difficult or if U-joint stops taking grease. **OVERGREASING WILL DAMAGE U-JOINT.** Six to eight pumps is sufficient at first grease (factory). As U-joint wears and requires more than six pumps, grease the joint more often.

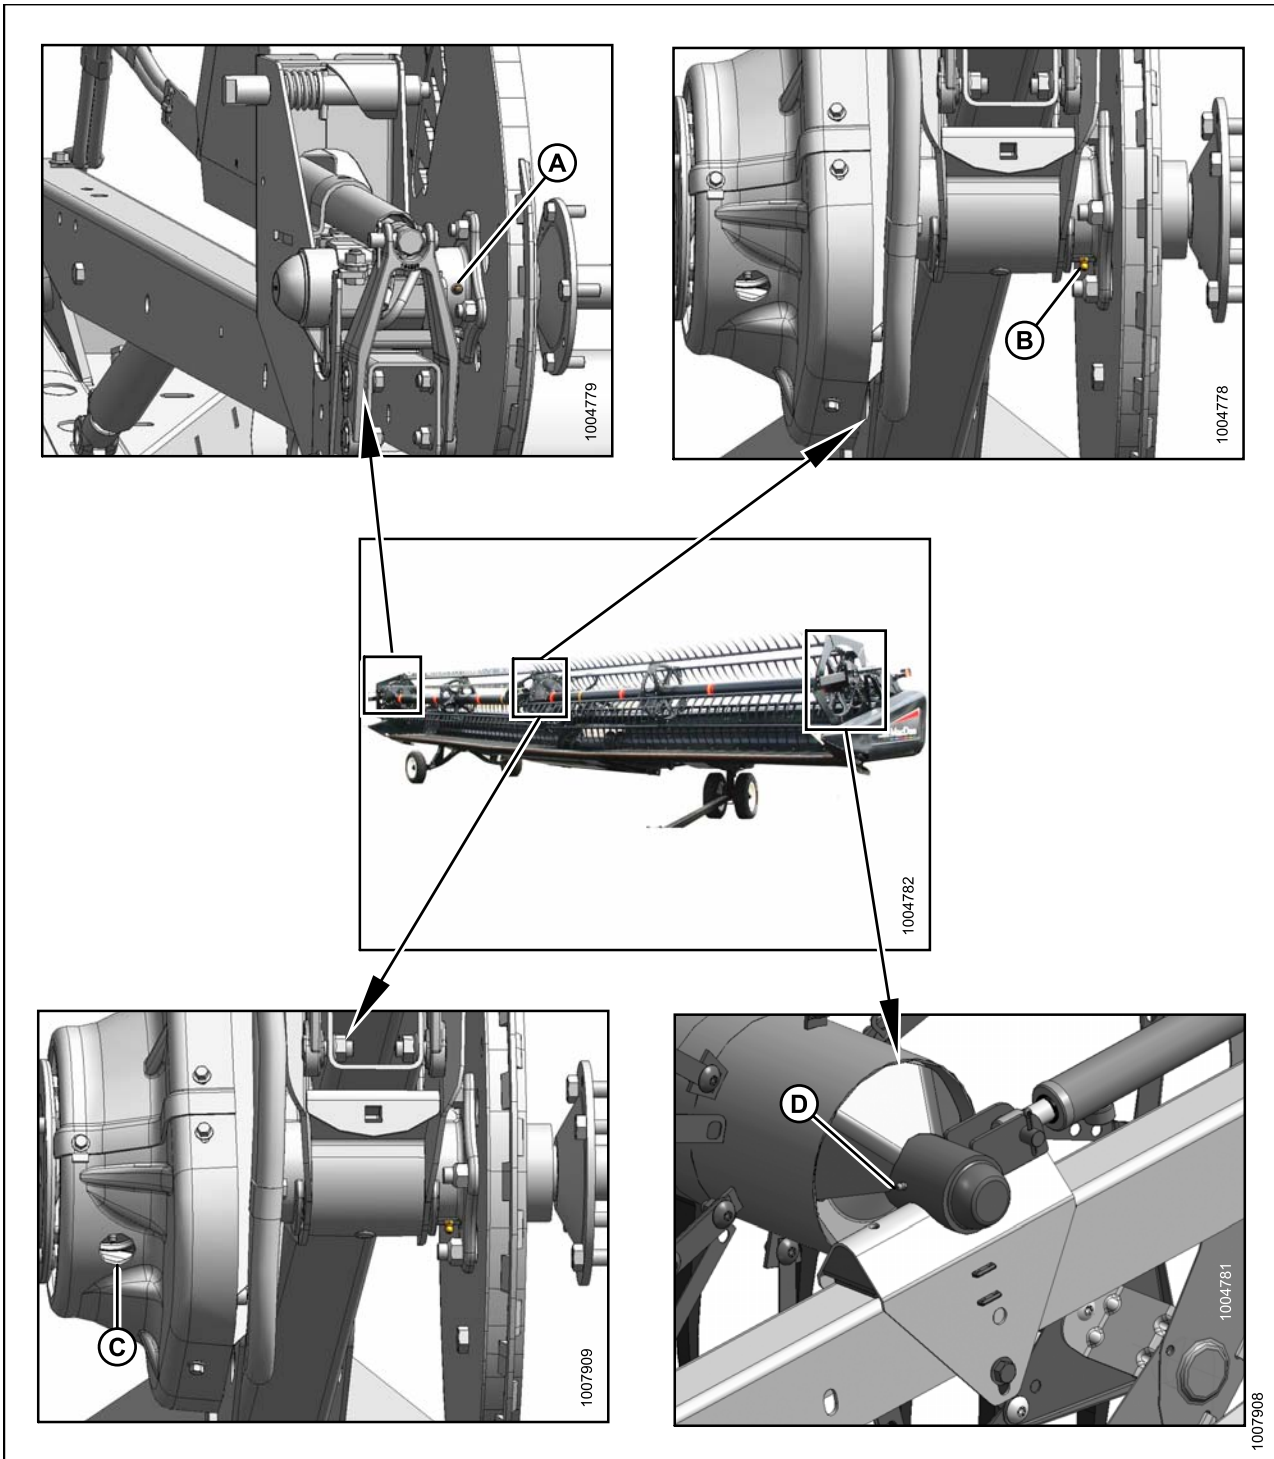


**Figure 6.73: Reel Shaft Bearings**

A - Reel Shaft Right-Hand Bearing (One Place)  
D - Reel Shaft Left-Hand Bearing (One Place)

B - Reel Center Bearing (One Place)

C - Reel Universal (One Place)

## PERFORMING PREDELIVERY CHECKS

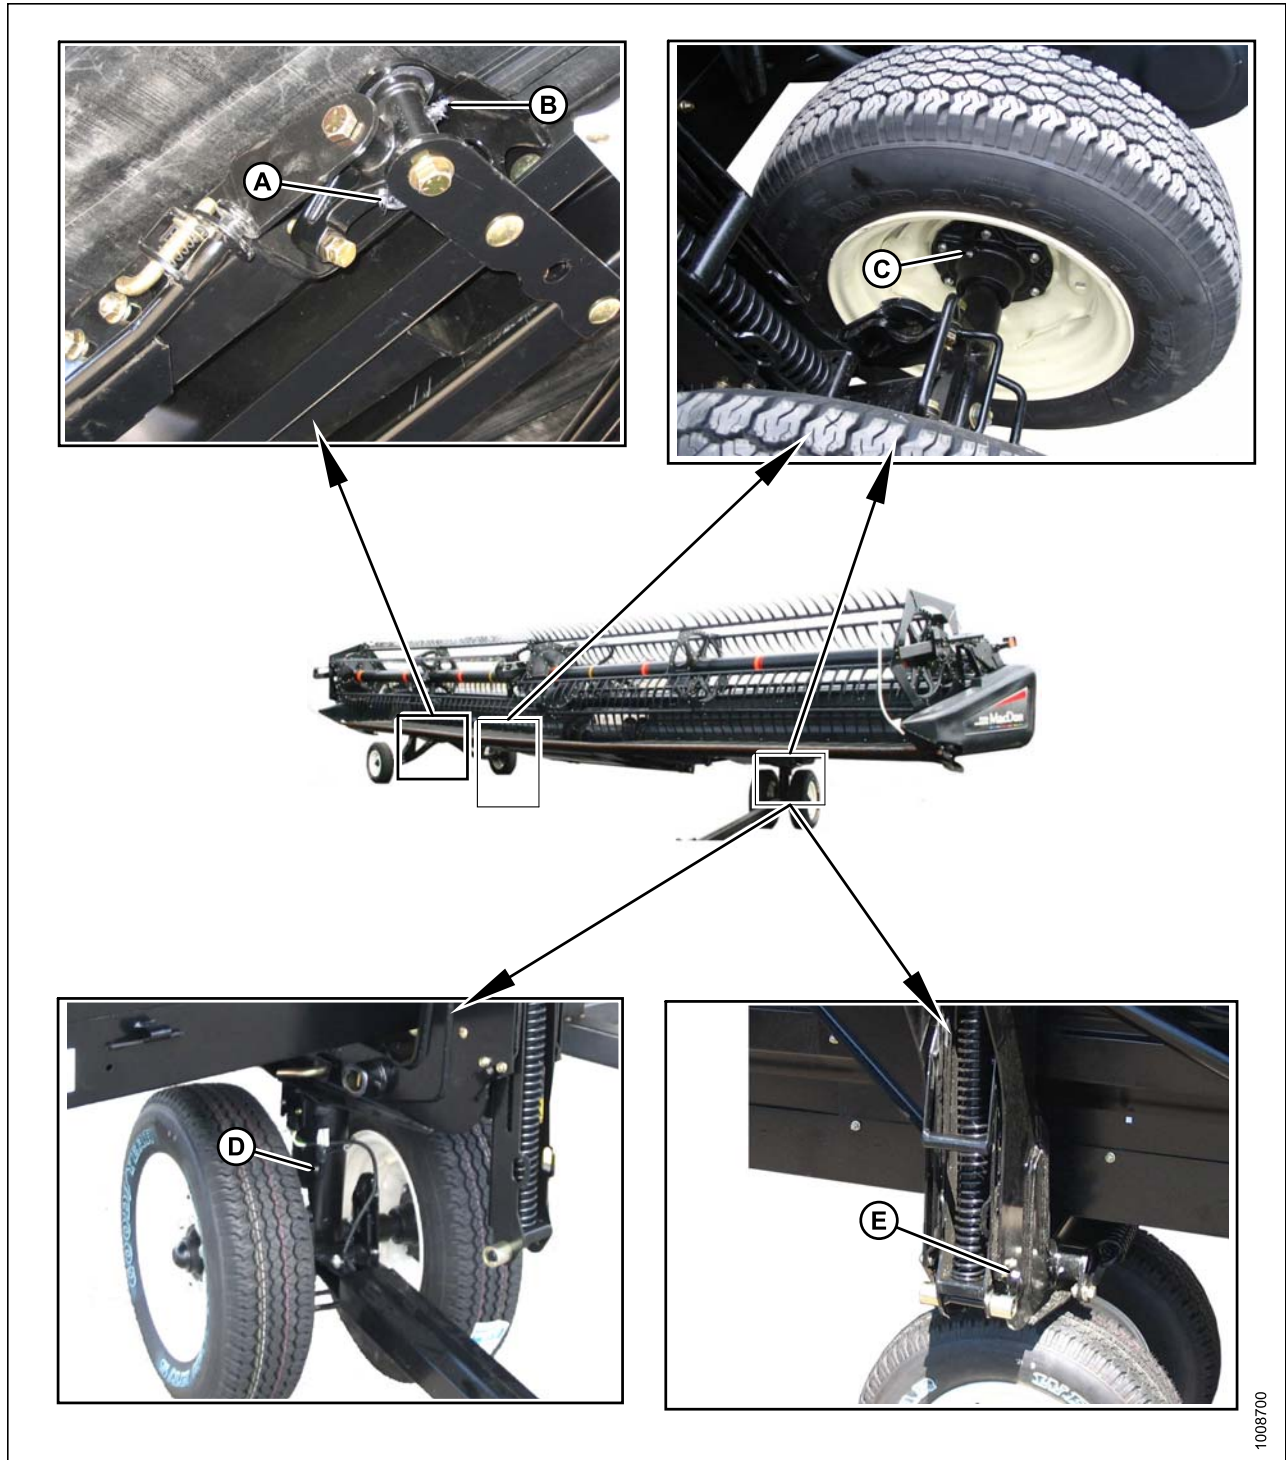

**Figure 6.74: Rear Wheel Axle, Wheel Bearings, Frame/Wheel Pivot, and Front Wheel Pivot**

A - Rear Wheel Axle (First Place)  
D - Front Wheel Pivot (One Place)

B - Rear Wheel Axle (Second Place)  
E - Frame/Wheel Pivot (One Place) Both Sides

C - Wheel Bearings (Four Places)

## 6.16 Checking and Adjusting Endshields

Plastic endshields are subject to expansion or contraction caused by large temperature variations. The position of the top pin and lower catch can be adjusted to compensate for dimensional changes.

1. Check gap (X) between front end of shields and header frame and compare to the values in Table 6.6 *Endshield Gap at Various Temperatures*, page 136.

**Table 6.6 Endshield Gap at Various Temperatures**


Temperature in Degrees F (C)	Gap (X) in Inches (mm)
25 (-4)	1-1/10 (28)
45 (7)	1 (24)
65 (18)	13/16 (20)
85 (29)	5/8 (16)
105 (41)	1/2 (12)
125 (52)	5/16 (8)
145 (63)	3/16 (4)
165 (89)	0

**NOTE:**


If the endshield gap is correct, skip to the next procedure.  
If adjustment is required, follow these steps:

**Opening the endshield:**

2. Push release lever (A) located on the backside of the endshield to unlock the shield.
3. Pull endshield open using handle depression (B).

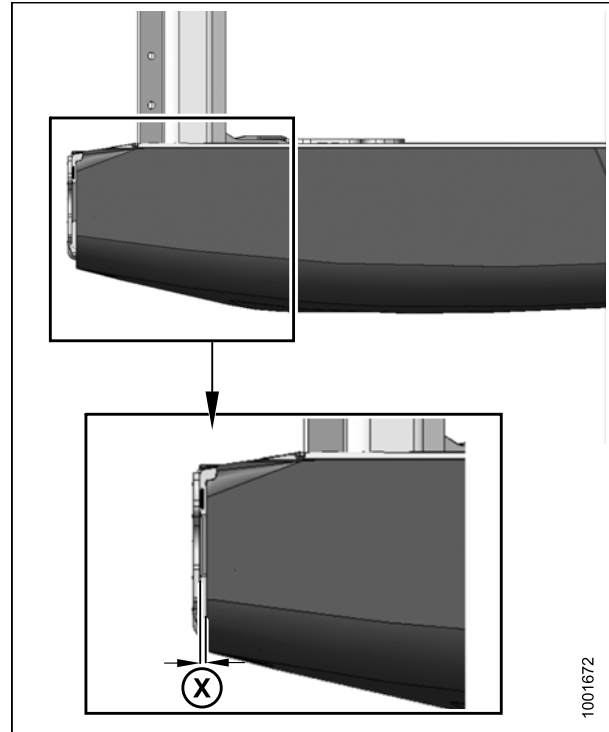

**Figure 6.75: Gap Between Endshield and Header Frame**

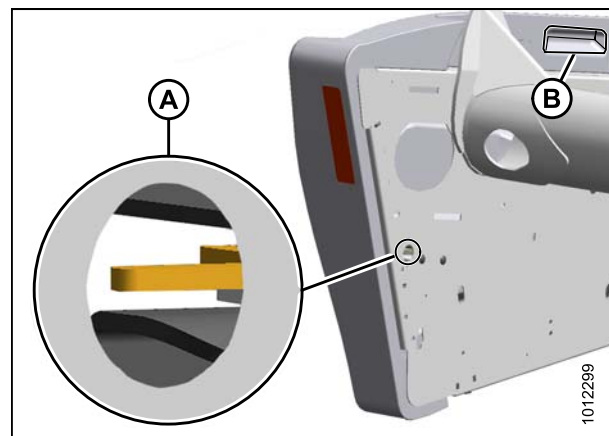

**Figure 6.76: Left Endshield**

## PERFORMING PREDELIVERY CHECKS

4. Pull endshield at handle depression (A). Endshield is retained by a hinge tab (B) and will open in direction (C).

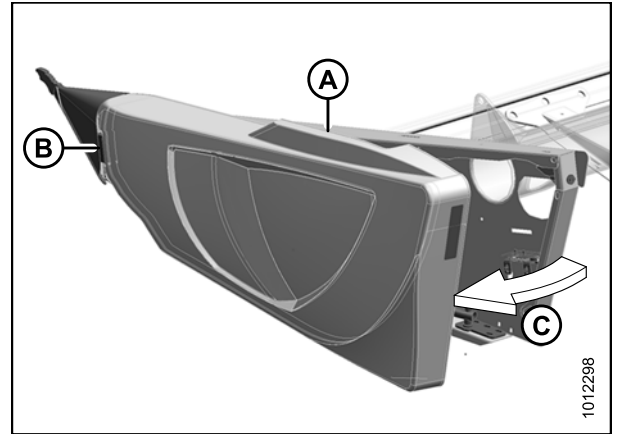


Figure 6.77: Left Endshield

5. Pull the endshield free of hinge tab (A) if additional clearance is required, and swing shield towards the rear of the header.
6. Engage safety catch (B) on hinge arm to secure the shield in fully open position.

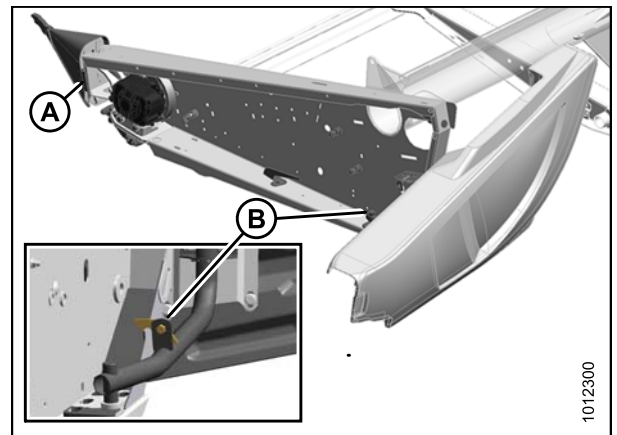


Figure 6.78: Left Endshield

### Adjusting the endshield gap:

7. Loosen the four bolts (A) on the support tube bracket (B).

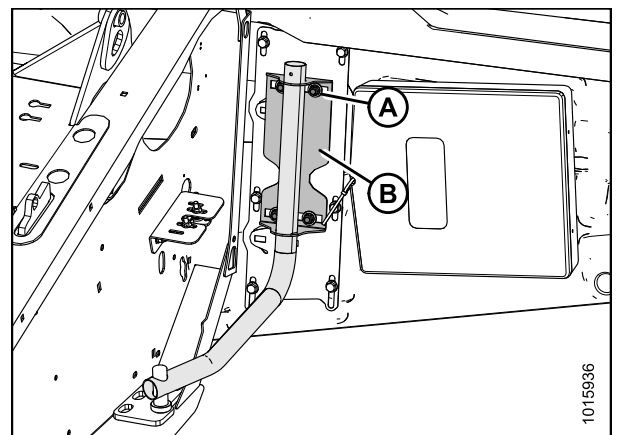


Figure 6.79: LH Endshield Support Tube

## PERFORMING PREDELIVERY CHECKS

8. Loosen the three bolts (A) on latch assembly (B).
9. Adjust latch assembly to achieve the desired gap between the front end of shield and header frame in accordance with Table 6.6 *Endshield Gap at Various Temperatures*, page 136.
10. Tighten the three bolts (A) on latch assembly.
11. Tighten the four bolts on the support tube bracket.
12. Close endshield.

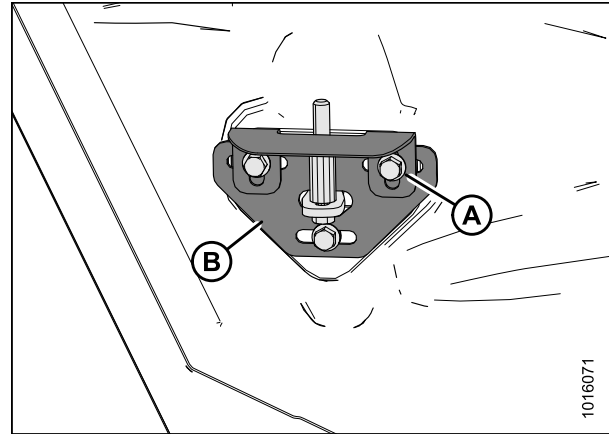


Figure 6.80: LH Endshield Latch Assembly

### Closing the endshield:

13. Disengage lock (B) to allow endshield to move.
14. Insert front of endshield behind hinge tab (A) and into divider cone.

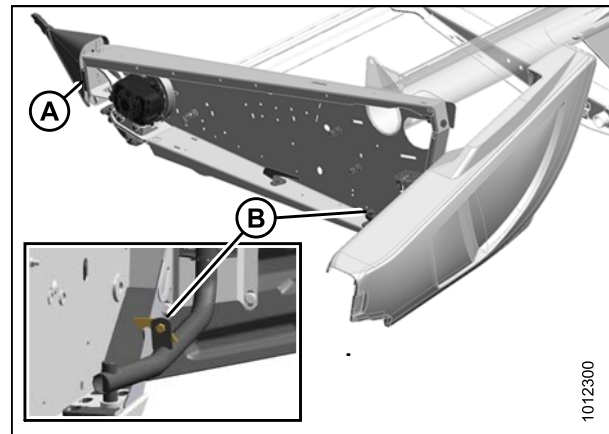


Figure 6.81: Left Endshield

15. Swing endshield in direction (A) into closed position. Engage lock with a firm push.
16. Verify that endshield is locked.

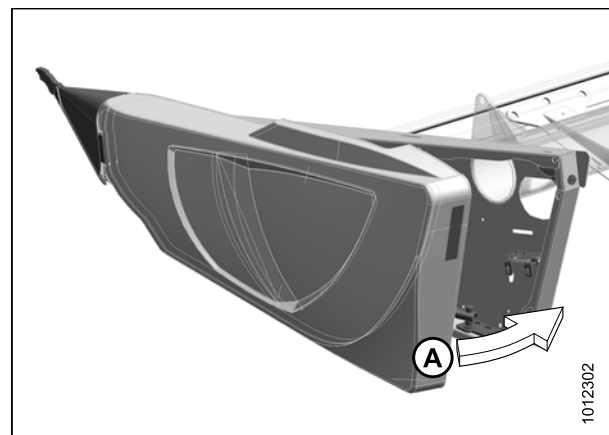


Figure 6.82: Left Endshield



## 6.17 Checking Manuals

Check manual case contents. The manual case is located inside the left-hand endshield.

1. Open the left-hand endshield and remove the cable tie on the manual case.

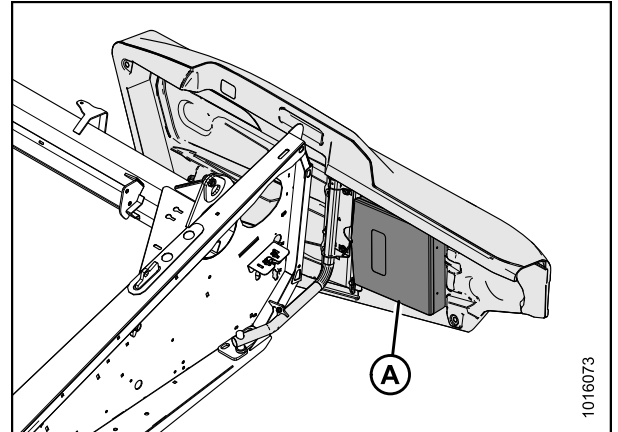


Figure 6.83: Manual Case

2. Confirm that the case contains the following manuals:
  - FD1-Series FlexDraper® Operator's Manual
  - FD1-Series FlexDraper® with FM100 Float Module Parts Catalog
3. Close case and endshield.




## 7 Setting up Auto Header Height Control

### 7.1 Auto Header Height Control (AHHC)

MacDon's auto header height control (AHHC) feature works in conjunction with the AHHC option available on certain combine models.

A sensor is installed in the float indicator box (A) on the FM100 float module. This sensor sends a signal to the combine allowing it to maintain a consistent cutting height and an optimum float as the header follows ground contours. A two-sensor system is also available as an optional kit.

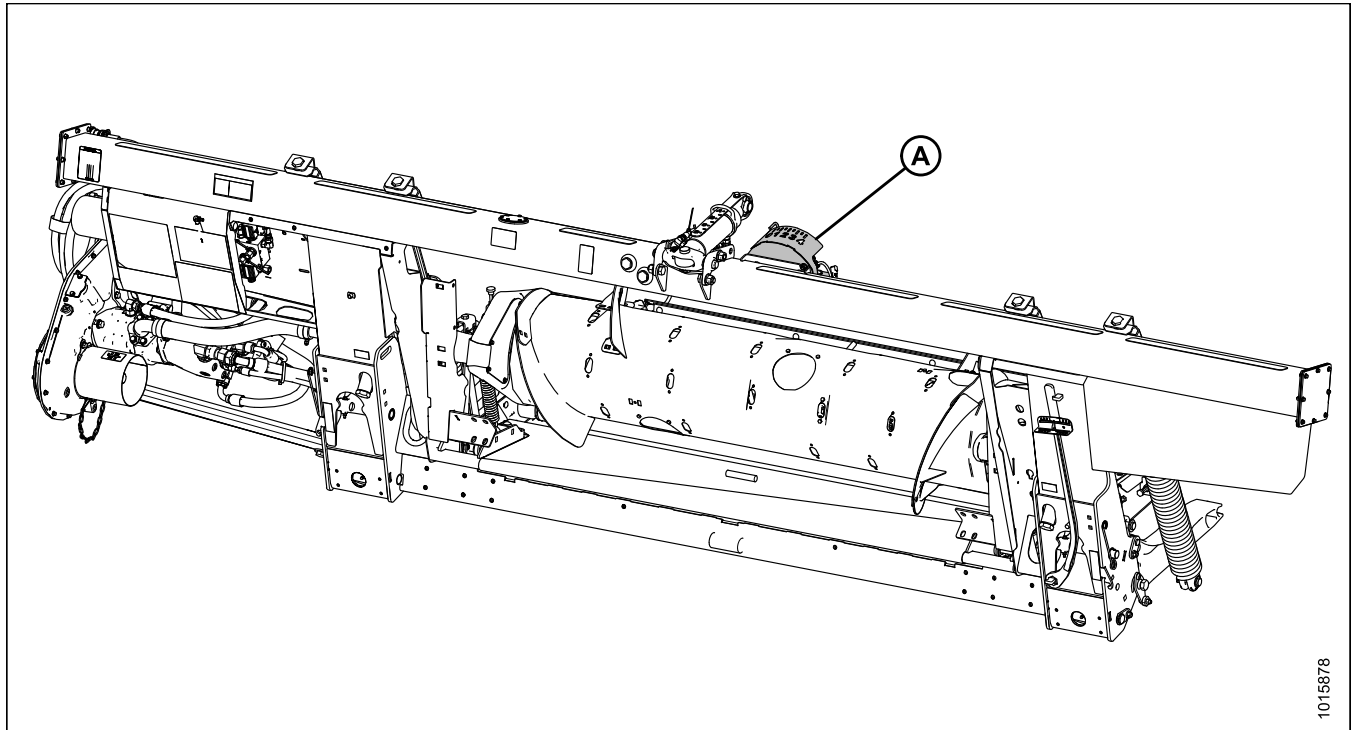

**Figure 7.1: FM100 Float Module**

FM100 float modules are factory-equipped for AHHC; however, before using the AHHC feature, you must do the following:

1. Ensure that the AHHC sensor's output voltage range is appropriate for the combine.  
For more information, refer to [7.1.1 Sensor Output Voltage Range – Combine Requirements, page 143](#).
2. Prepare the combine to use the AHHC feature (applies only to some combine models—refer to the instructions for your combine).
3. Calibrate the AHHC system so that the combine can correctly interpret data from the height sensor on the combine float module (refer to the instructions for your combine).

**NOTE:**

Once calibration is complete, you are ready to use the AHHC feature in the field. Individual combine settings can improve AHHC performance (refer to your combine instruction manual).

## SETTING UP AUTO HEADER HEIGHT CONTROL

Refer to the following instructions for your specific combine model:

- [\*7.1.2 Case IH 2500 and 5088/6088/7088 Combines, page 151\*](#)
- [\*7.1.3 Case IH 5130/6130/7130, 7010/8010, 7120/8120/9120, and 7230/8230/9230 Combines, page 153\*](#)
- [\*7.1.4 Challenger and Massey Ferguson Combines, page 165\*](#)
- [\*7.1.5 Gleaner R65/R66/R75/R76 and S Series Combines, page 173\*](#)
- [\*7.1.6 John Deere 60 Series Combines, page 183\*](#)
- [\*7.1.7 John Deere 70 Series Combines, page 191\*](#)
- [\*7.1.8 John Deere S and T Series Combines, page 198\*](#)
- [\*7.1.9 Lexion 500 Series Combines, page 208\*](#)
- [\*7.1.10 Lexion 600 and 700 Series Combines, page 217\*](#)
- [\*7.1.11 New Holland Combines, page 223\*](#)

## 7.1.1 Sensor Output Voltage Range – Combine Requirements

The auto header height control (AHHC) sensor output must be within a specific voltage range for each combine, or the AHHC feature will not work properly.

**Table 7.1 Combine Voltage Limits**

Combine	Low Voltage Limit	High Voltage Limit	Range (Difference between High and Low Limits)
Challenger, Gleaner A, Massey Ferguson	0.5 V	4.5 V	2.5 V
Case IH 5088/6088/7088, 5130/6130/7130, 7010/8010, 7120/8120/9120, and 7230/8230/9230	0.5 V	4.5 V	2.5 V
Case IH 2588/2577	2.8 V	7.2 V	4.0 V
Gleaner R and S Series	0.5 V	4.5 V	2.5 V
John Deere 60, 70, S, and T Series	0.5 V	4.5 V	2.5 V
Lexion 500/600/700 Series	0.5 V	4.5 V	2.5 V
New Holland CR/CX - 5 V system	0.7 V	4.3 V	2.5 V
New Holland CR/CX - 10 V system	2.8 V	7.2 V	4.1–4.4 V
<b>NOTE:</b> Some combine models do not support checking sensor output voltage from the cab (early 23/2588 series, Lexion 500/600/700 series). For these models, check output voltage manually. Refer to <a href="#">Manually Checking Voltage Range (One-Sensor System), page 143</a> .			

### *Manually Checking Voltage Range (One-Sensor System)*

The one-sensor system is standard for the FM100 float module. If equipped with the optional two-sensor system, refer to [Manually Checking Voltage Range \(Two-Sensor System\), page 146](#).

The output voltage range of the Auto Header Height Control (AHHC) sensors in some combines can be checked from the cab. For instructions, refer to your combine operator's manual or the AHHC instructions later in this document.

To manually check the sensor's output voltage range, follow these steps:


1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.

## SETTING UP AUTO HEADER HEIGHT CONTROL

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.


**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

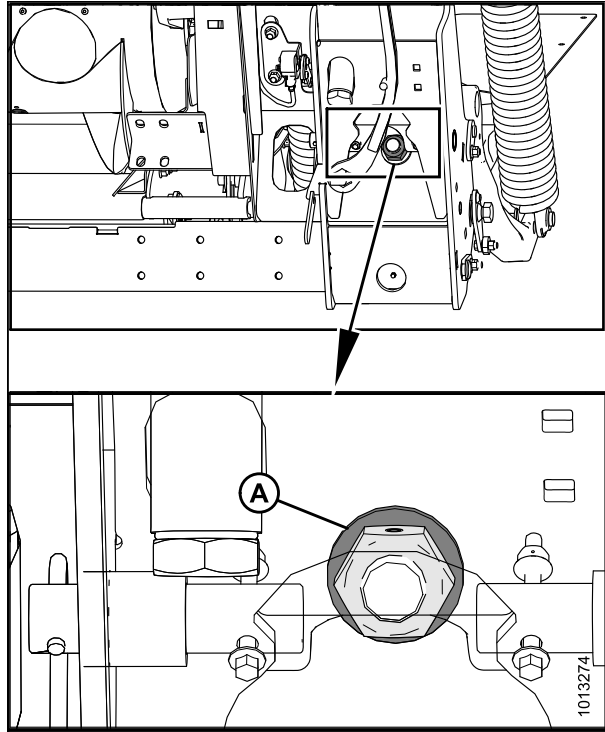

**Figure 7.2: Float Lock**

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

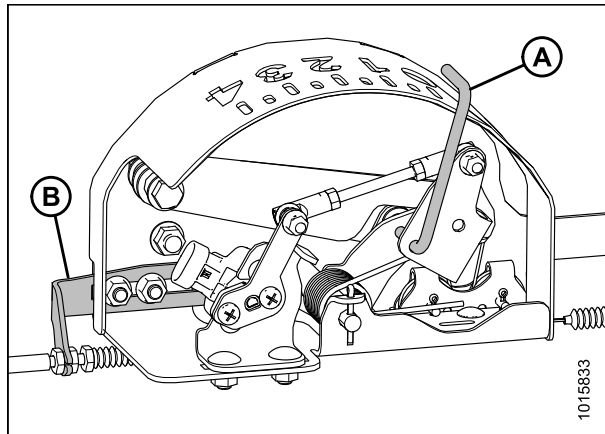

**Figure 7.3: Float Indicator Box**

## SETTING UP AUTO HEADER HEIGHT CONTROL

4. Use a voltmeter (A) to measure the voltage between the ground (Pin 2) and signal (Pin 3) wires at the AHHC sensor in the float indicator box. Ensure it is at the high voltage limit for the combine. Refer to Table [7.1 Combine Voltage Limits, page 143](#).

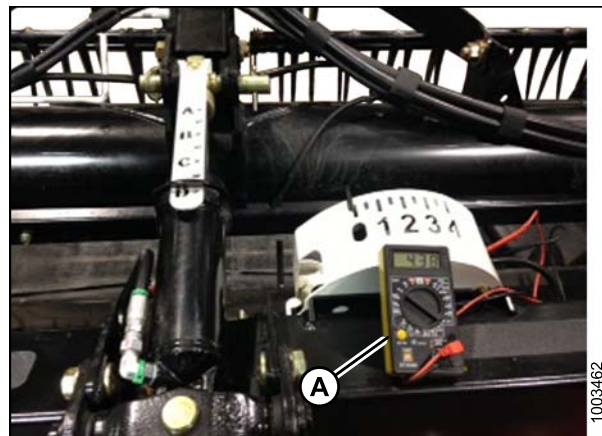


Figure 7.4: Measuring Voltage at Float Indicator Box

5. Fully lower the combine feeder house, and float the header up off the down stops (float indicator should be at 4, and the float module should be fully separated from the header).

### NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

6. Use a voltmeter (A) to measure the voltage between the ground and signal wires at the AHHC sensor in the float indicator box. It should be at the low voltage limit for the combine. Refer to Table [7.1 Combine Voltage Limits, page 143](#).
7. Adjust the voltage limits (refer to [Adjusting Voltage Limits \(One-Sensor System\), page 148](#)) if the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient. Refer to Table [7.1 Combine Voltage Limits, page 143](#).

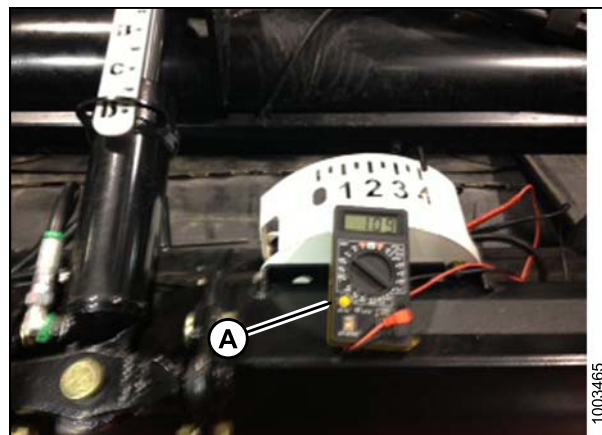


Figure 7.5: Measuring Voltage at Float Indicator Box


## SETTING UP AUTO HEADER HEIGHT CONTROL

### *Manually Checking Voltage Range (Two-Sensor System)*

FM100 float modules equipped with the optional two-sensor system will have a left- and right-hand sensor located on the back frame of the float module.

To manually check the sensor's output voltage range, follow these steps:

1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.

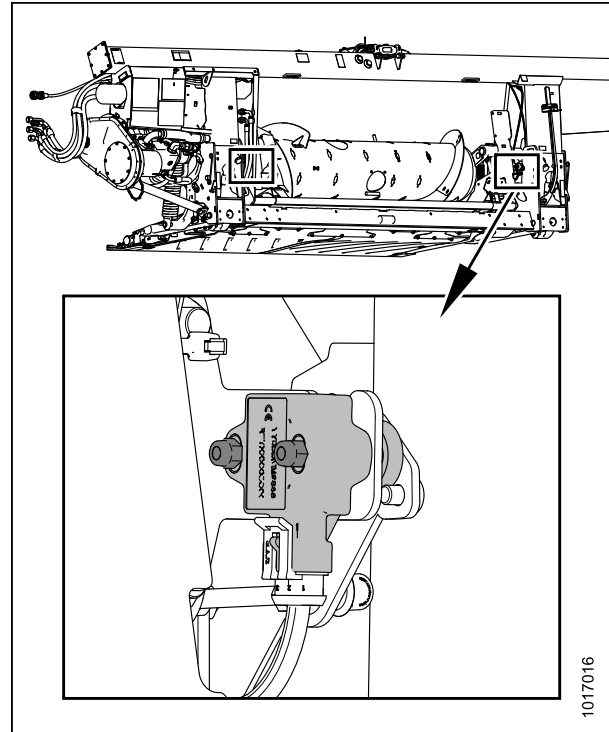


**Figure 7.6: Optional Two-Sensor System**

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

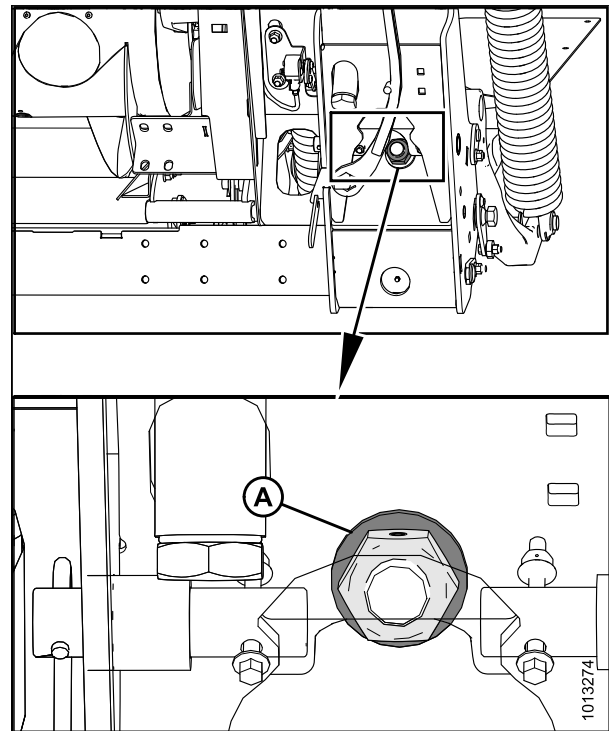

**Figure 7.7: Float Lock**



## SETTING UP AUTO HEADER HEIGHT CONTROL

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

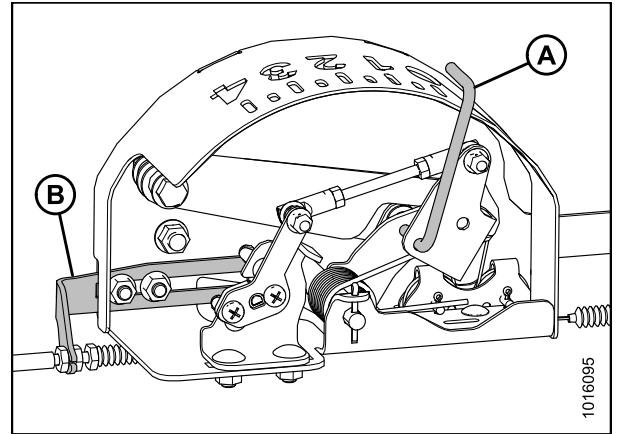


Figure 7.8: Float Indicator Box

4. Use a voltmeter to measure the voltage between the ground (Pin 2) and signal (Pin 3) wires of the AHHC sensor (A) at the back of the float module side frame. Ensure it is at the high voltage limit for the combine. Refer to Table 7.1 *Combine Voltage Limits*, page 143.
5. Repeat at the opposite side.

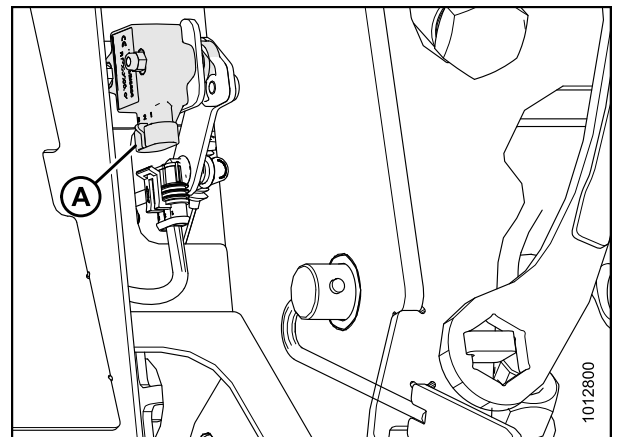


Figure 7.9: Optional Two-Sensor Kit – RH Sensor

6. Fully lower the combine feeder house, and float the header up off the down stops (float indicator [A] should be at 4, and the float module should be fully separated from the header).

### NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

7. Using a voltmeter, measure the voltage between the ground (Pin 2) and signal (Pin 3) wires of the AHHC sensor at the back of the side frame. It should be at the low voltage limit for the combine—refer to Table 7.1 *Combine Voltage Limits*, page 143.
8. Adjust the voltage limits. Refer to *Adjusting Voltage Limits (One-Sensor System)*, page 148) if the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient. Refer to Table 7.1 *Combine Voltage Limits*, page 143).
9. Repeat at the opposite side.

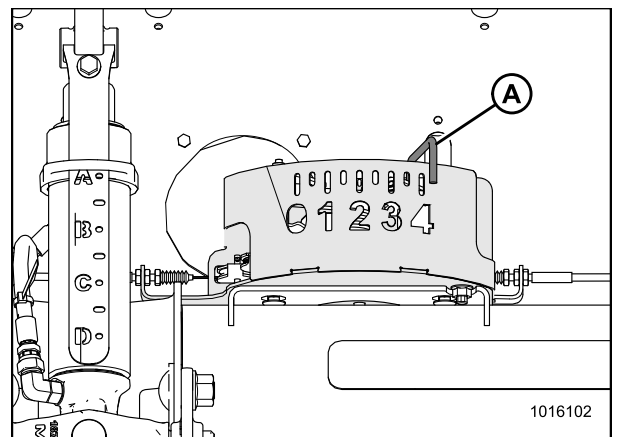


Figure 7.10: Float Indicator Box


## SETTING UP AUTO HEADER HEIGHT CONTROL

### *Adjusting Voltage Limits (One-Sensor System)*

#### **DANGER**

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Complete the following steps to adjust the upper voltage limit:
  - a. Extend guard angle fully; the header angle indicator should be at D.
  - b. Position header 6–10 in. above the ground; the float indicator should be at the 0.
  - c. Check the upper voltage limit using the combine display or voltmeter. Refer to Table [7.1 Combine Voltage Limits, page 143](#).
  - d. Loosen sensor mounting nuts (A).
  - e. Rotate sensor (B) counterclockwise to increase high voltage limit and clockwise to decrease it.
  - f. Tighten sensor mounting nuts (A).
2. Complete the following steps to adjust the lower voltage limit:
  - a. Extend guard angle fully; the header angle indicator should be at D.
  - b. Fully lower header on the ground; the float indicator should be at 4.
  - c. Check the lower voltage limit using the combine display or voltmeter. Refer to Table [7.1 Combine Voltage Limits, page 143](#).
  - d. Loosen sensor mounting nuts (A).
  - e. Rotate sensor counterclockwise to increase low voltage limit and clockwise to decrease it.
  - f. Tighten sensor mounting nuts (A).
3. After making adjustments, recheck both the upper and lower voltage limits to make sure they are within the required range according to Table [7.1 Combine Voltage Limits, page 143](#).

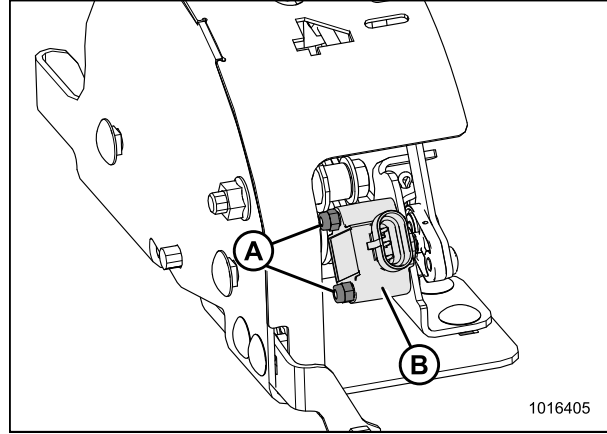

**Figure 7.11: AHHC Sensor Assembly**

## SETTING UP AUTO HEADER HEIGHT CONTROL

4. If unable to get the voltage within the required range, loosen mounting bolts (A) and shift sensor assembly (B) inboard (right as shown in Figure 7.12: *AHHC Sensor Assembly*, page 149).

**NOTE:**

If sensor assembly is shifted right or left, it may be necessary to repeat steps 1 and 2 to achieve the proper voltage limits.

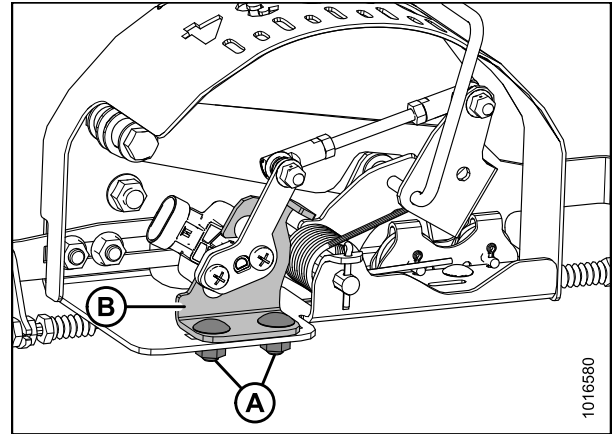


Figure 7.12: AHHC Sensor Assembly

### *Adjusting Voltage Limits (Two-Sensor System)*

#### **⚠ DANGER**

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Extend guard angle fully; the header angle indicator should be at D.
2. Position header 6–10 in. above the ground; the float indicator should be at 0.
3. Adjust left-hand sensor voltage:
  - a. Loosen sensor mounting nuts (A).
  - b. Rotate sensor counterclockwise to lower the voltage. Rotate sensor clockwise to raise the voltage.
  - c. Check that the left-hand sensor is at the correct upper voltage limit according to Table 7.1 *Combine Voltage Limits*, page 143.
  - d. Tighten sensor mounting nuts.


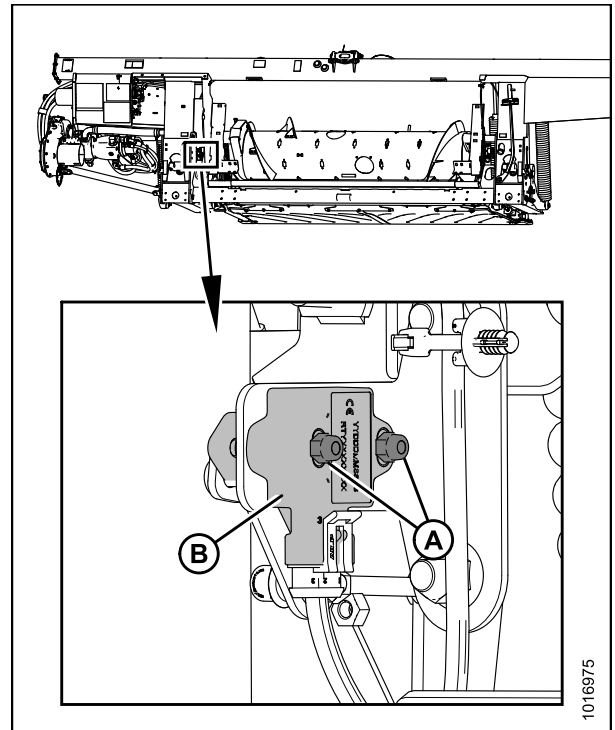


Figure 7.13: Optional Two Sensor Kit – LH Sensor

## SETTING UP AUTO HEADER HEIGHT CONTROL

4. Adjust right-hand sensor voltage:
  - a. Loosen sensor mounting nuts (A).
  - b. Rotate sensor clockwise to lower the voltage. Rotate sensor counterclockwise to raise the voltage.
  - c. Check that the right-hand sensor is at the correct upper voltage limit according to Table [7.1 Combine Voltage Limits, page 143](#).
  - d. Tighten sensor mounting nuts.

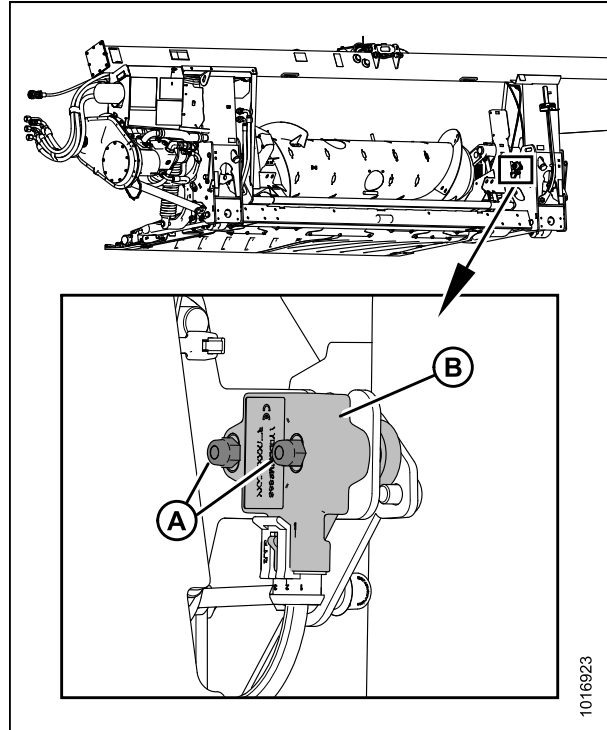

**Figure 7.14: Optional Two Sensor Kit – RH Sensor**

5. Fully lower the header; the float indicator should be at 4.
6. Check that both sensors are at the correct lower voltage limit according to Table [7.1 Combine Voltage Limits, page 143](#).

## 7.1.2 Case IH 2500 and 5088/6088/7088 Combines


### *Calibrating the Auto Header Height Control (Case IH 2500 and 5088/6088/7088)*

For best performance of the Auto Header Height Control (AHHC) system, perform ground calibration with center-link set to D. When calibration is complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

#### **NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to D.
2. Set the flotation on the header and float module package. Refer to operator's manual for instructions. Position fore-aft in mid span.
3. Start combine engine, but do NOT have separator or feeder house engaged.
4. Locate header control switch (A) on the right console, and set to "HT" (this is AHHC mode).

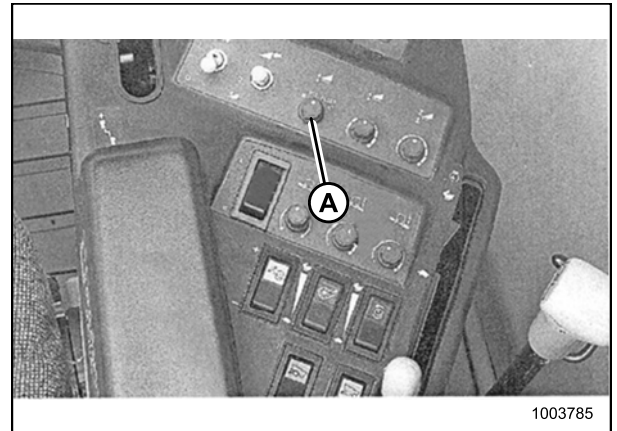

**Figure 7.15: Right Console**

5. Press the header lower switch (A) on the joystick lever until the float module and header are fully lowered. You may need to hold the switch for several seconds.
6. Press the header raise switch (A) on the joystick lever. The header should stop at about the halfway point. Continue holding the header raise switch, and the header will rise until the feeder house reaches its upper limit. The AHHC system is now calibrated.

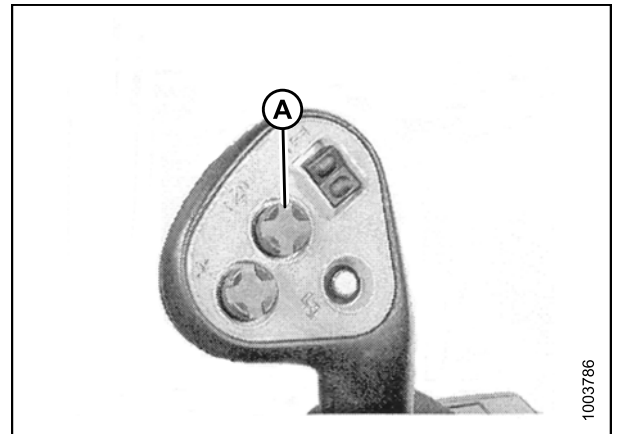


**Figure 7.16: Joystick Lever (Case IH 2300/2500)**

#### **NOTE:**

If float was set heavier to complete the ground calibration procedure, adjust to recommended operating float after the calibration is complete.

## SETTING UP AUTO HEADER HEIGHT CONTROL

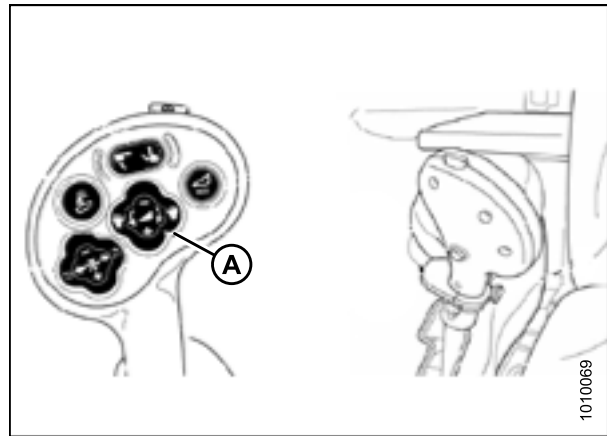

**Figure 7.17: Joystick Lever (Case IH 5088/6088/7088)**

### *Setting the Sensitivity of the Auto Header Height (Case IH 2500 and 5088/6088/7088)*

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the Auto Header Height Control (AHHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

**NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Use the HEADER SETTINGS key (M) to display the HEADER SENSITIVITY CHANGE page.
2. Use the UP or DOWN keys (E and H) to adjust the highlighted item. The height sensitivity setting range is 0 (least sensitive) to 250 (most sensitive) in increments of 10.

**NOTE:**

Adjustments take effect immediately. Use the CANCEL key to return to the original settings.

3. Use the HEADER SETTINGS key (M) to highlight the next changeable item.
4. Use the ENTER key (D) to save changes and return to the monitor page. If there are no changes, the screen will return to the monitor page after five seconds.

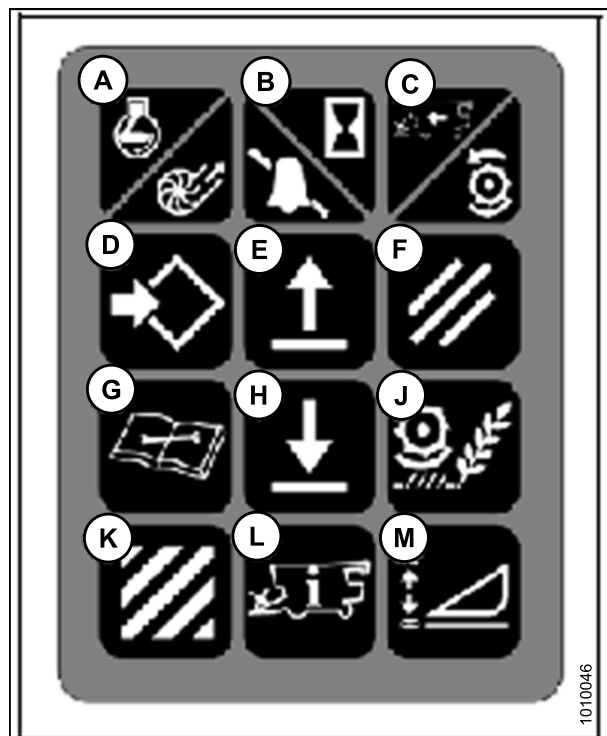

**Figure 7.18: Combine Controls**

## SETTING UP AUTO HEADER HEIGHT CONTROL

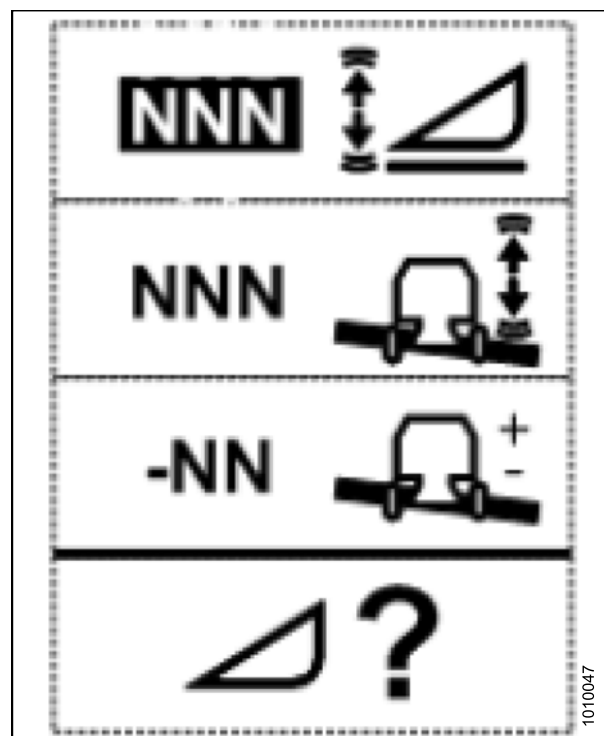


Figure 7.19: Height Sensitivity Change Page

### 7.1.3 Case IH 5130/6130/7130, 7010/8010, 7120/8120/9120, and 7230/8230/9230 Combines

#### *Checking Voltage Range from the Combine Cab (Case 8010)*

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

**⚠ CAUTION**

**Check to be sure all bystanders have cleared the area.**


1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.

## SETTING UP AUTO HEADER HEIGHT CONTROL

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.


**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

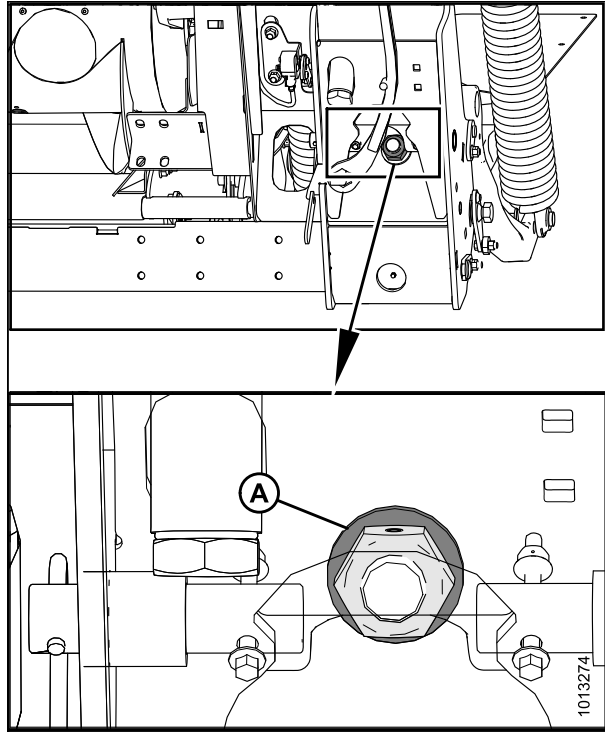

**Figure 7.20: Float Lock**

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

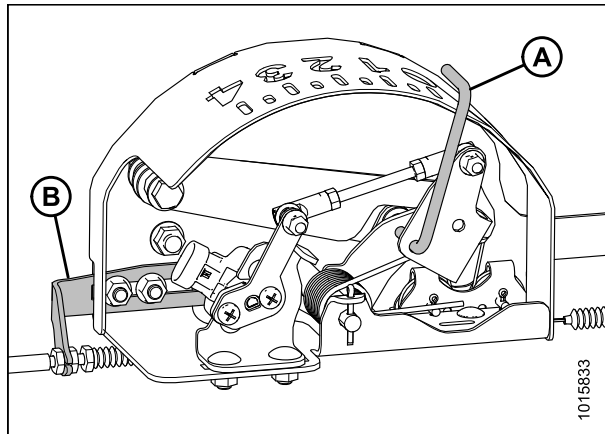

**Figure 7.21: Float Indicator box**



## SETTING UP AUTO HEADER HEIGHT CONTROL

4. Ensure header float is unlocked.
5. Select DIAG (A) on the Universal display MAIN page. The DIAG page displays.

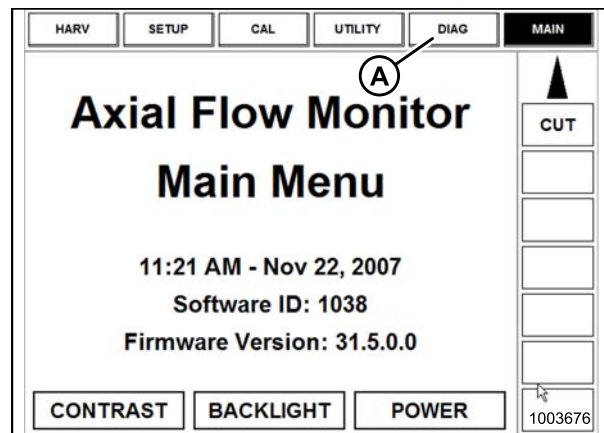


Figure 7.22: Case 8010 Combine Display

6. Select SUB SYSTEM (A). The SUB SYSTEM page displays.

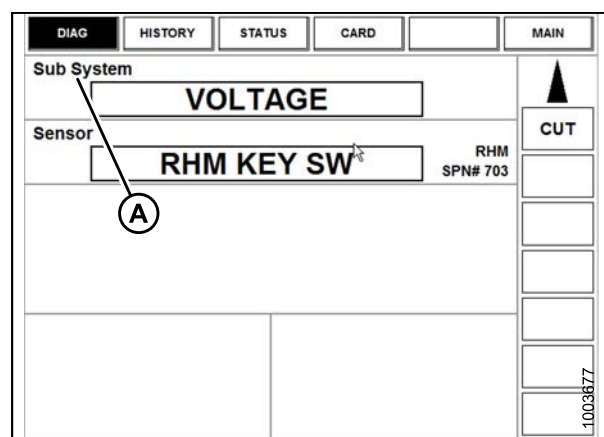


Figure 7.23: Case 8010 Combine Display

7. Select HDR HEIGHT/TILT (A). The SENSOR page displays.

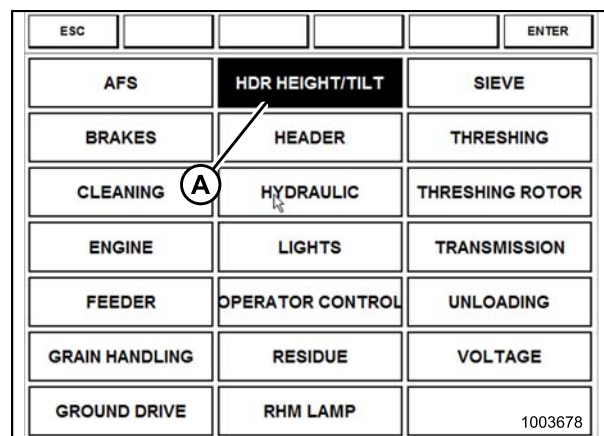


Figure 7.24: Case 8010 Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

8. Select LEFT SEN (A). The exact voltage is displayed. Raise and lower the header to see the full range of voltage readings.

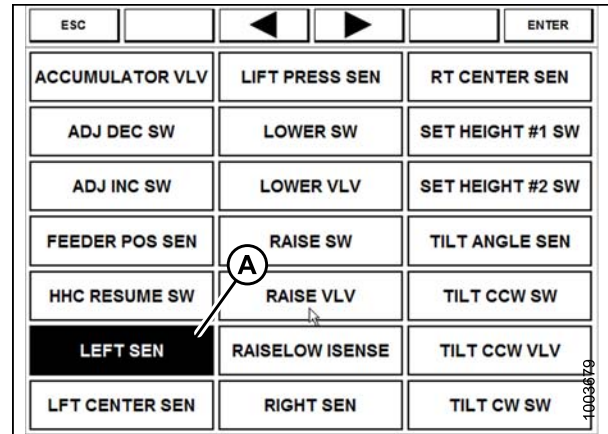


Figure 7.25: Case 8010 Combine Display

9. Adjust the voltage limits (refer to [Adjusting Voltage Limits \(One-Sensor System\), page 148](#)) if the sensor voltage is not within the low and high limits, or if the range between the low and high limits is insufficient (refer to Table [7.1 Combine Voltage Limits, page 143](#)).



Figure 7.26: Case 8010 Combine Display

*Checking Voltage Range from the Combine Cab (Case IH 5130/6130/7130, 7010/8010; 7120/8120/9120; 7230/8230/9230)*

### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

### CAUTION

**Check to be sure all bystanders have cleared the area.**


1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.

## SETTING UP AUTO HEADER HEIGHT CONTROL

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.


**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

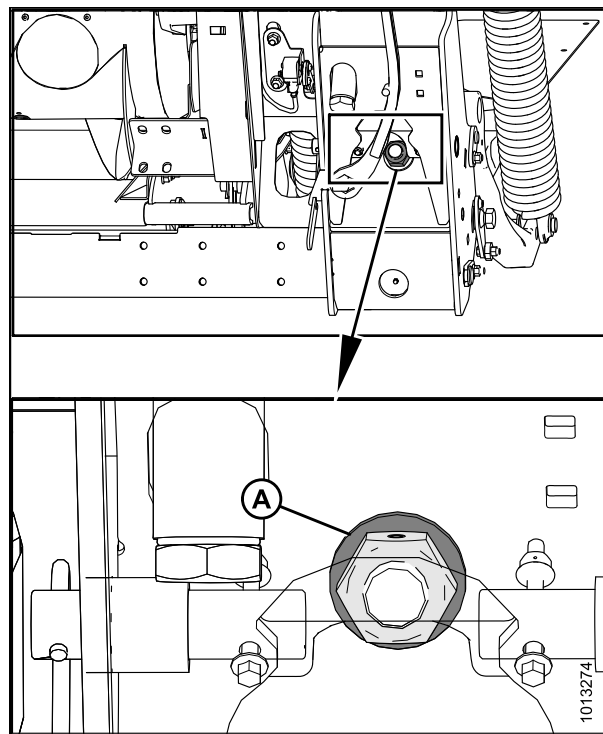

**Figure 7.27: Float Lock**

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

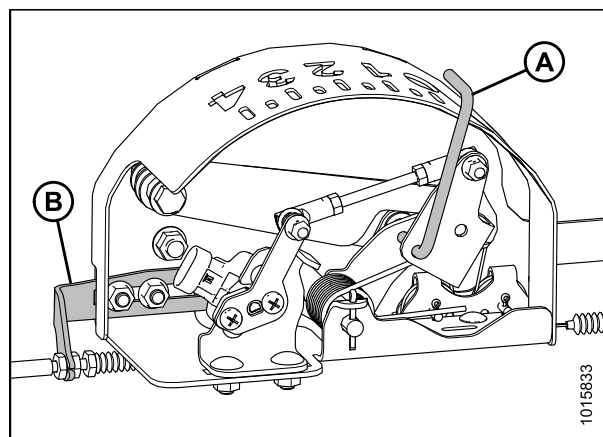

**Figure 7.28: Float Indicator box**

## SETTING UP AUTO HEADER HEIGHT CONTROL

4. Ensure header float is unlocked.
5. Select DIAGNOSTICS (A) on the MAIN page. The DIAGNOSTICS page opens.
6. Select SETTINGS. The SETTINGS page opens.

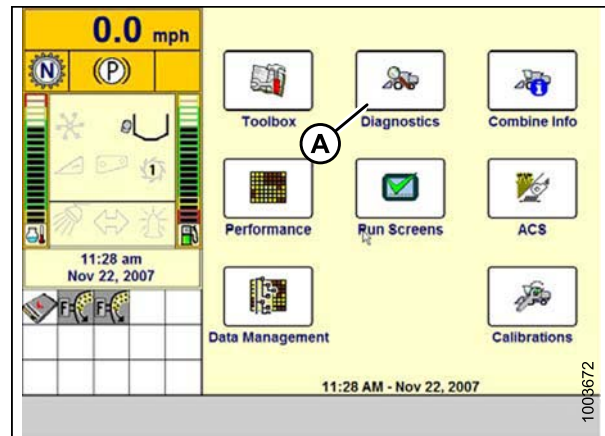


Figure 7.29: Case IH Combine Display

7. Select the GROUP arrow (A). The GROUP dialog box.

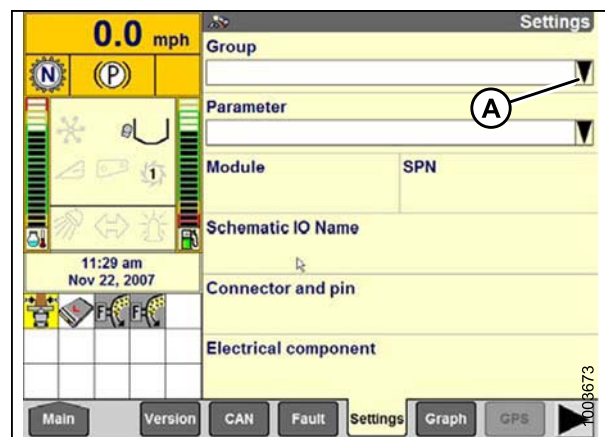


Figure 7.30: Case IH Combine Display

8. Select HEADER HEIGHT/TILT (A). The PARAMETER page opens.

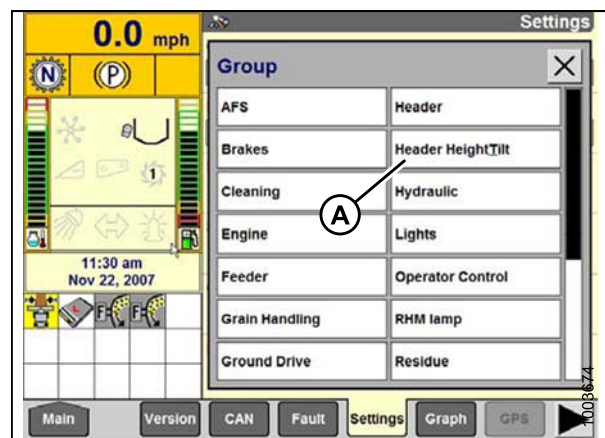


Figure 7.31: Case IH Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

9. Select LEFT HEADER HEIGHT SEN (A), and then select the GRAPH button (B). The exact voltage is displayed at top of page. Raise and lower the header to see the full range of voltage readings.
10. Adjust the voltage limits (refer to [Adjusting Voltage Limits \(One-Sensor System\), page 148](#)) if the sensor voltage is not within the low and high limits or, if the range between the low and high limits is insufficient (refer to Table [7.1 Combine Voltage Limits, page 143](#)).

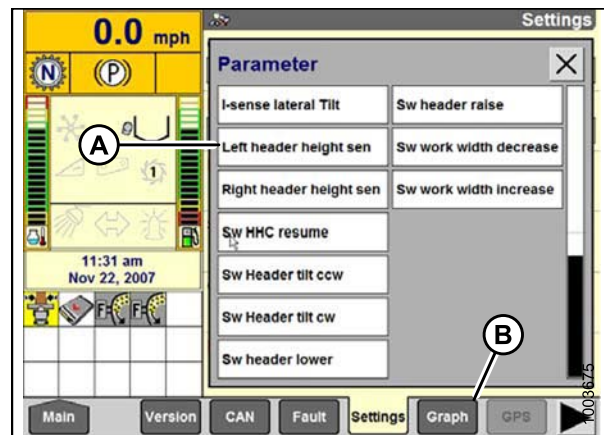


Figure 7.32: Case IH Combine Display

### *Calibrating the Auto Header Height Control (Case IH 5130/6130/7130, 7010/8010; 7120/8120/9120; 7230/8230/9230)*

For best performance from the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

#### **NOTE:**

This procedure applies to combines with a software version below 28.00. For instructions on calibrating the AHHC for combines with software version 28.00 or above, refer to [Calibrating the Auto Header Height Control \(Case Combines with Version 28.00 or Higher Software\), page 161](#).

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to D.
2. Ensure all header and float module electrical and hydraulic connections are made.
3. Select TOOLBOX on the MAIN page, and then select HEADER.
4. Set appropriate HEADER STYLE.

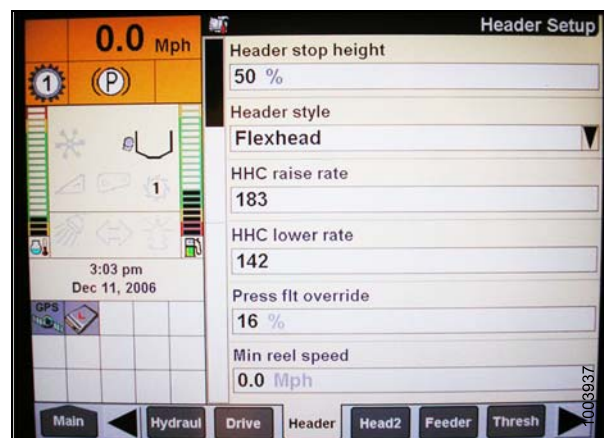


Figure 7.33: Case IH Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

5. Set AUTO REEL SPEED SLOPE.
6. Set HEADER PRESSURE FLOAT to NO if equipped, and ensure REEL DRIVE is HYDRAULIC.

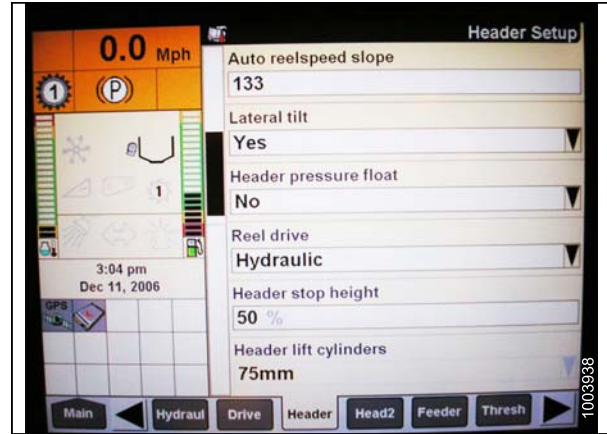


Figure 7.34: Case IH Combine Display

7. Install REEL FORE-BACK (if applicable).
8. Set HEIGHT SENSITIVITY to desired value. The recommended starting point is 180.

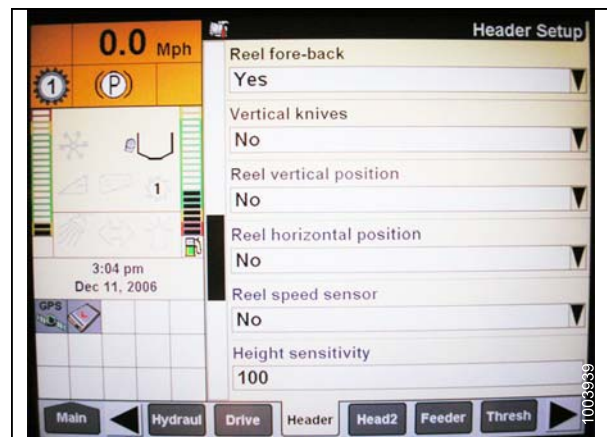


Figure 7.35: Case IH Combine Display

9. Install FORE-AFT CONTROL and HDR FORE-AFT TILT (if applicable).

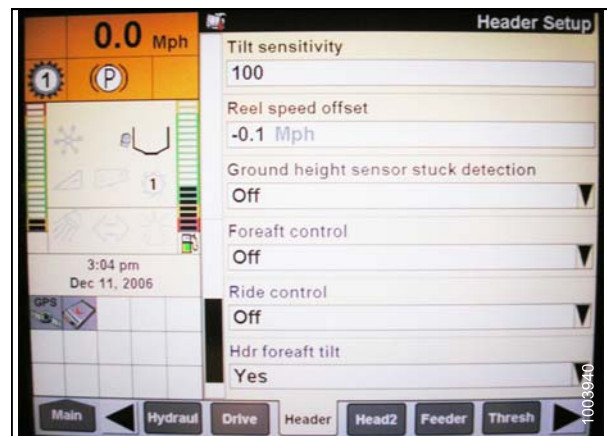


Figure 7.36: Case IH Combine Display



## SETTING UP AUTO HEADER HEIGHT CONTROL

10. Press HEAD2 at bottom of page.
11. Ensure HEADER TYPE is DRAPER.

**NOTE:**

If recognition resistor is plugged in to header harness, you will not be able to change this.

12. Set cutting type to PLATFORM.
13. Set appropriate HEADER WIDTH and HEADER USAGE.

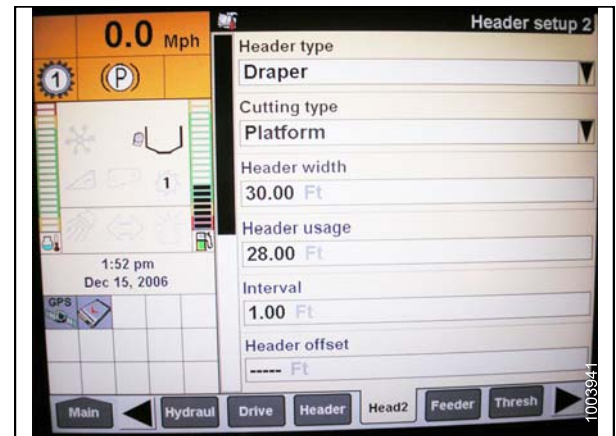


Figure 7.37: Case IH Combine Display

### *Calibrating the Auto Header Height Control (Case Combines with Version 28.00 or Higher Software)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to D.
2. Select TOOLBOX on the MAIN page, and then select HEADER SETUP.
3. Locate the HEADER SUB TYPE field. It will be located on either the HEAD 1 or the HEAD 2 tab.
4. Select 2000 (A).



Figure 7.38: Case IH Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

5. Locate the HEADER SENSORS and HEADER PRESSURE FLOAT fields. They will be located on either the HEAD 1 or the HEAD 2 tab.
6. Select ENABLE (A) in the HEADER SENSORS field.
7. Select NO (B) in the HEADER PRESSURE FLOAT field.

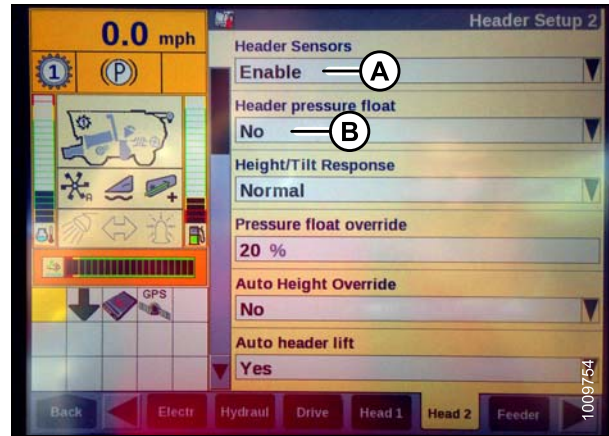


Figure 7.39: Case IH Combine Display

8. Ensure AUTO HEIGHT icon (A) appears on the monitor and is displayed as shown at (B). When the header is set for cutting on the ground, this verifies that the combine is correctly using the potentiometer on the header to sense ground pressure.

**NOTE:**

AUTO HEIGHT field (B) may appear on any of the RUN tabs and not necessarily on the RUN 1 tab.

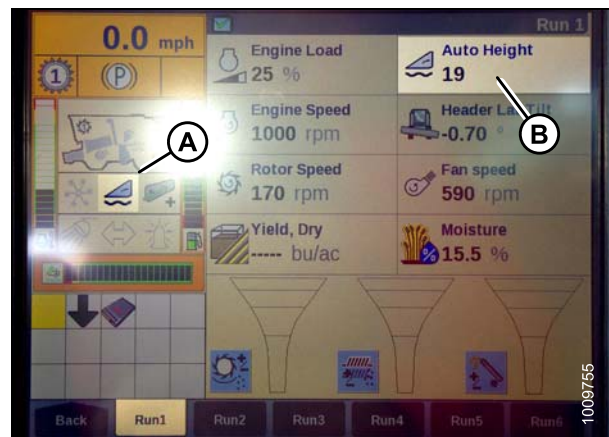


Figure 7.40: Case IH Combine Display

9. Select CALIBRATION on the combine display, and press the right arrow navigation key to enter the information box.
10. Select HEADER (A), and press ENTER. The CALIBRATION dialog box opens.

**NOTE:**

You can use the up and down navigation keys to move between options.

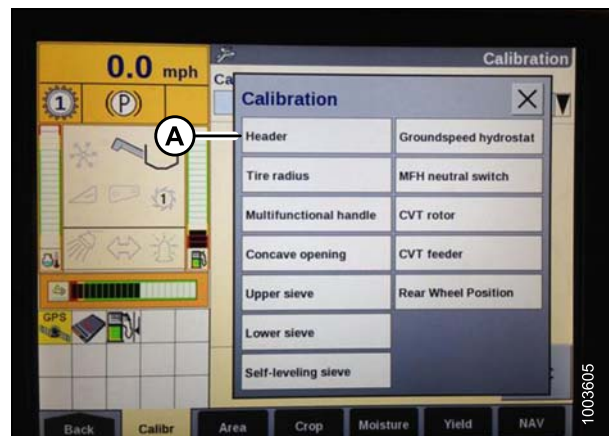


Figure 7.41: Case IH Combine Display



## SETTING UP AUTO HEADER HEIGHT CONTROL

11. Follow the calibration steps in the order in which they appear in the dialog box. As you proceed through the calibration process, the display will automatically update to show the next step.

**NOTE:**

Pressing the ESC key during any of the steps or letting the system sit idle for more than three minutes will cause the calibration procedure to stop.

**NOTE:**

Refer to your combine operator's manual for an explanation of any error codes.

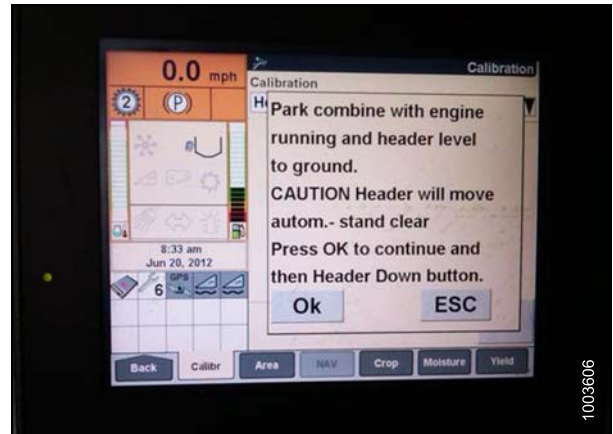


Figure 7.42: Case IH Combine Display

12. When all steps have been completed, CALIBRATION SUCCESSFUL message is displayed on the page. Exit the CALIBRATION menu by pressing the ENTER or ESC key.

**NOTE:**

If float was set heavier to complete ground calibration procedure, adjust to recommended operating float after the calibration is complete.

13. If the unit does not function properly, conduct the maximum stubble height calibration.

### *Setting Preset Cutting Height (Case 7010/8010, 7120/8120/9120, 7230/8230/9230)*

To set the preset cutting height, follow these steps:

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Engage separator and header.
2. Manually raise or lower the header to the desired cutting height.
3. Press the SET #1 switch (A). The HEADER HEIGHT MODE lamp (C), next to the SET #1 switch, turns on.
4. Manually raise or lower the header to a second desired cutting height.
5. Press the SET #2 switch (B). The HEADER HEIGHT MODE lamp (D), next to the SET #2 switch, turns on.

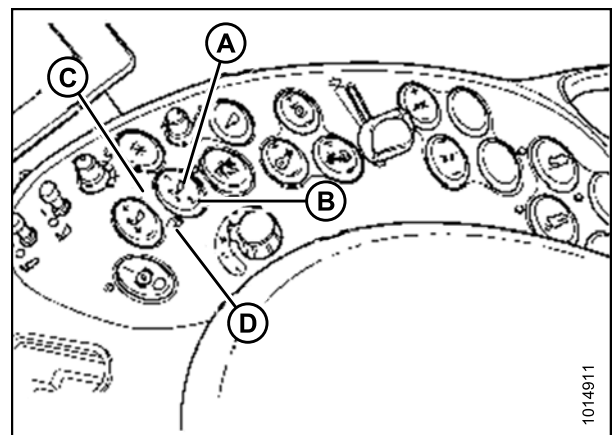


Figure 7.43: Case Combine Controls

## SETTING UP AUTO HEADER HEIGHT CONTROL

6. To swap between set points, press HEADER RESUME (A).
7. To pick up header at headlands, press HEADER RESUME (A) twice. To lower, press HEADER RESUME (A).

**NOTE:**

You can fine adjust these set points by using the FINE ADJUST switch (A).

**NOTE:**

Pressing the HEADER RAISE/LOWER switch will disengage AUTO HEIGHT mode. Press HEADER RESUME to reengage.

**NOTE:**

The ideal ground pressure—in most cases—is one number (on the float indicator box) above the header suspended off the ground. For example, if the float indicator needle (A) is positioned at 0 with the header suspended off the ground, then the ideal ground pressure will be achieved with the needle at position 1. Operating with heavier pressures can wear the cutterbar poly prematurely.

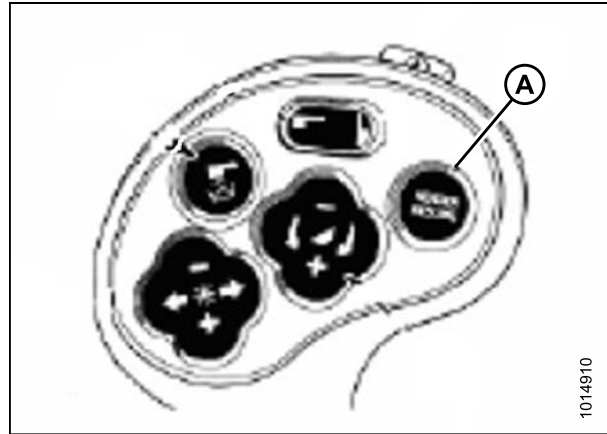


Figure 7.44: Case Combine Controls

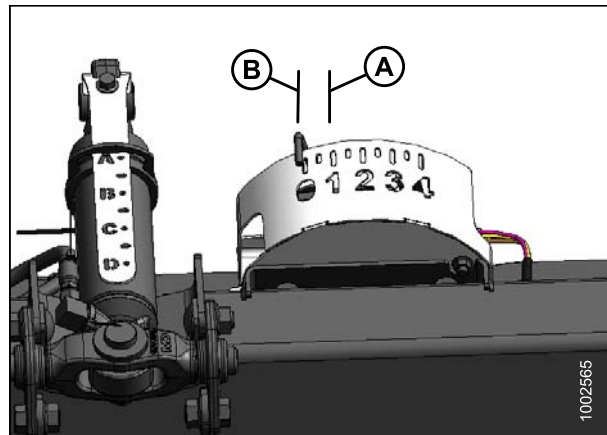


Figure 7.45: Float Indicator Box

## 7.1.4 Challenger and Massey Ferguson Combines

### *Checking Voltage Range from the Combine Cab (Challenger and Massey Ferguson)*


**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.


**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

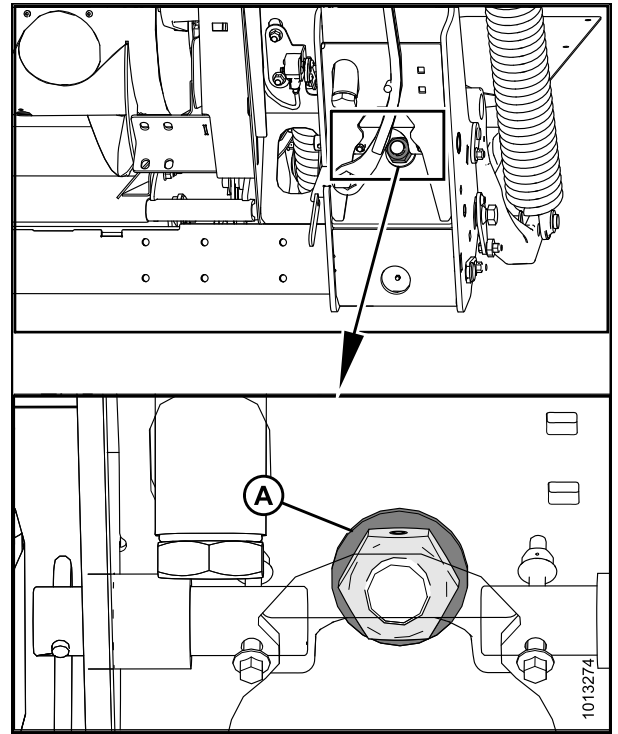

**Figure 7.46: Float Lock**

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

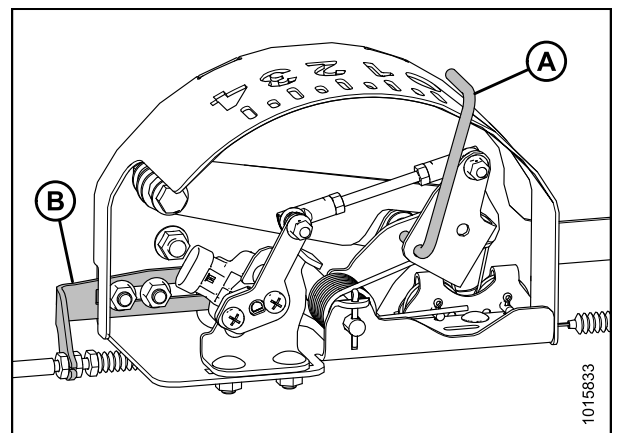

**Figure 7.47: Float Indicator Box**

## SETTING UP AUTO HEADER HEIGHT CONTROL

4. Go to the FIELD page on the combine monitor, and then press the diagnostics icon. The MISCELLANEOUS page displays.
5. Press the VMM DIAGNOSTIC button (A). The VMM DIAGNOSTIC page displays.

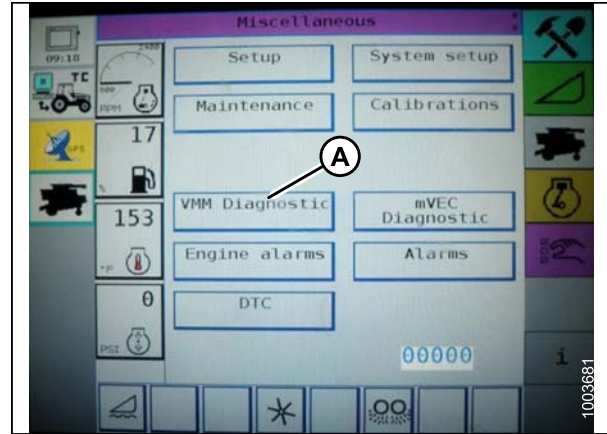


Figure 7.48: Challenger Combine Display

6. Go to the ANALOG IN tab, and then select VMM MODULE 3 by pressing the text box below the four tabs. The voltage from the AHC sensor is now displayed on page as HEADER HEIGHT RIGHT POT and HEADER HEIGHT LEFT POT. The readings may be slightly different.

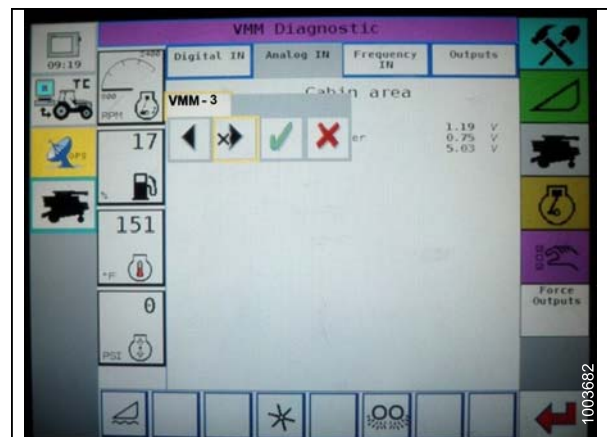


Figure 7.49: Challenger Combine Display

7. Fully lower the combine feeder house (float module should be fully separated from the header).

### NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

8. Read voltage.
9. Raise header so cutterbar is 6 in. (150 mm) off the ground.
10. Read voltage.
11. Adjust the voltage limits (refer to [Adjusting Voltage Limits \(One-Sensor System\)](#), page 148) if the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient (refer to Table 7.1 [Combine Voltage Limits](#), page 143).

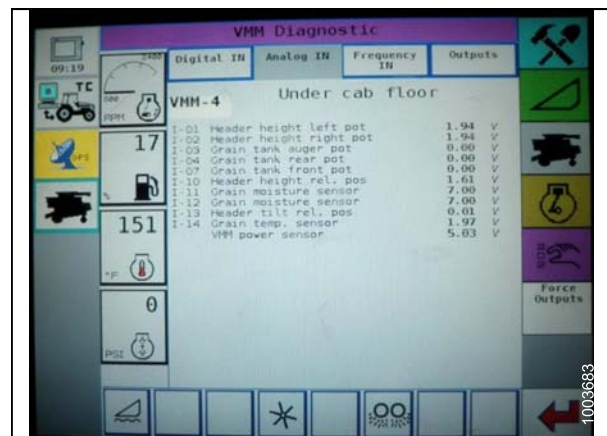


Figure 7.50: Challenger Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

### *Engaging the Auto Header Height Control (Challenger and Massey Ferguson)*

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

The following system components are required in order for the auto header height control (AHHC) to work:

- Main module (PCB board) and header driver module (PCB board) mounted in card box in fuse panel module (FP)
- Multi-function control handle operator inputs
- Operator inputs mounted in the control console module (CC) panel

**NOTE:**

In addition to the above components, the electro hydraulic header lift control valve is an integral part of the system.

Engage the AHHC as follows:

1. Scroll through the header control options on the combine display using the header control switch until the AHHC icon is displayed in the first message box. The AHHC will adjust the header height in relation to the ground according to the height setting and sensitivity setting.



**Figure 7.51: Challenger Combine Display**

### *Calibrating the Auto Header Height Control (Challenger and Massey Ferguson)*

**NOTE:**

For best performance of the auto header height control (AHHC) system, perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual.

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to D.

## SETTING UP AUTO HEADER HEIGHT CONTROL

2. On the FIELD page, press the DIAGNOSTICS icon. The MISCELLANEOUS page appears.



Figure 7.52: Challenger Combine Display

3. Press the CALIBRATIONS button. The CALIBRATIONS page appears.

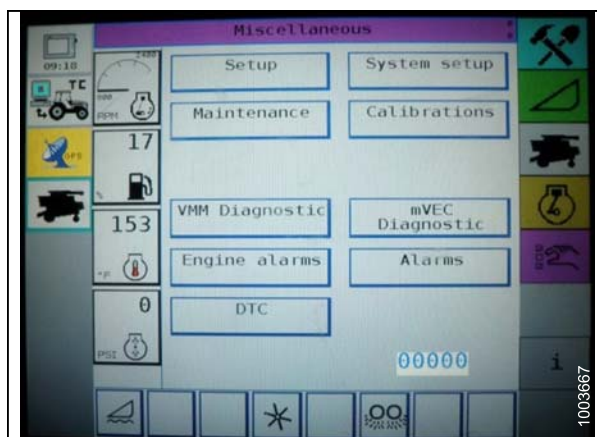


Figure 7.53: Challenger Combine Display

4. Press the HEADER button. The HEADER CALIBRATION page displays a warning.

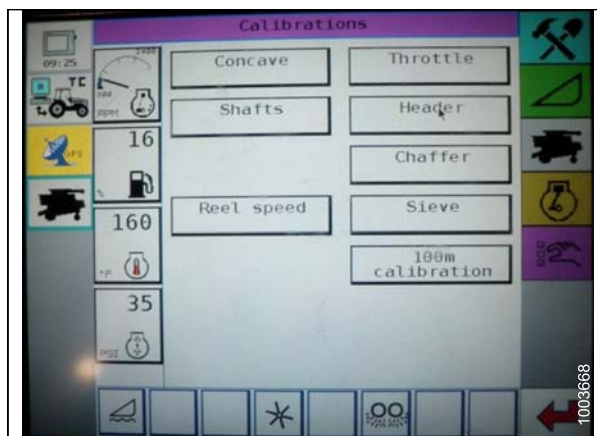


Figure 7.54: Challenger Combine Display



## SETTING UP AUTO HEADER HEIGHT CONTROL

5. Read the warning message, and then press the green check mark button.

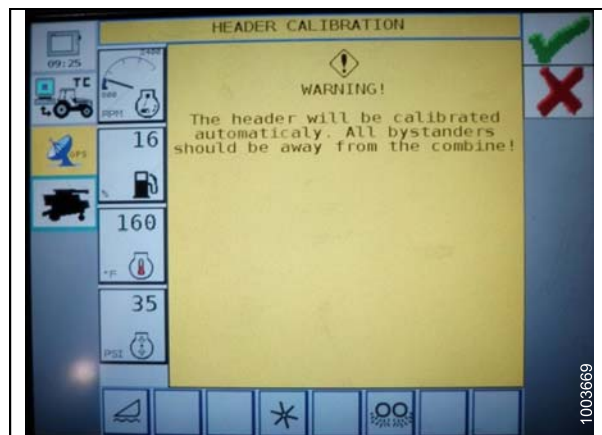


Figure 7.55: Challenger Combine Display

6. Follow the on-screen prompts to complete calibration.

### NOTE:

The calibration procedure can be cancelled at anytime by pressing the cancel button in the bottom right corner of the screen. While the header calibration is running, the calibration can also be canceled by using the up, down, tilt right, or tilt left buttons on the control handle.

### NOTE:

If the combine does not have header tilt installed or if it is inoperable, you may receive warnings during calibration. Press the green check mark if these warnings appear. This will not affect the AHHC calibration.

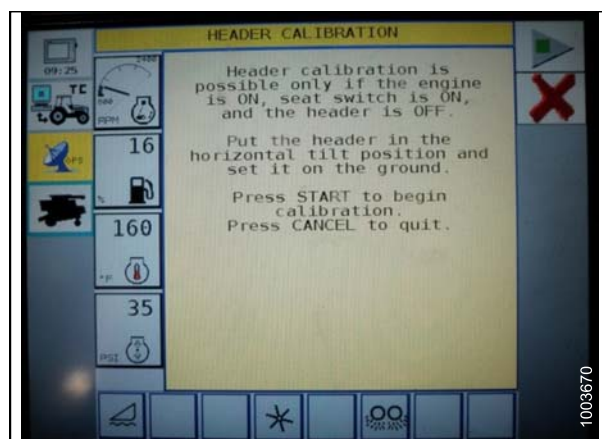


Figure 7.56: Challenger Combine Display

## Adjusting the Header Height (Challenger and Massey Ferguson)

Once the auto header height control (AHHC) is activated, press and release the HEADER LOWER button on the control handle. The AHHC will automatically lower the header to the selected height setting.

### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

The selected AHHC height is adjusted using the HEIGHT ADJUSTMENT knob on the control console. Turning the knob clockwise increases the selected height, and turning the knob counterclockwise decreases the selected height.



**Figure 7.57: Height Adjustment Knob on the Combine Control Console**

### *Adjusting the Header Raise/Lower Rate (Challenger and Massey Ferguson)*

#### **NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Press the Header icon on the FIELD page. The HEADER page displays.



**Figure 7.58: Challenger Combine Display**

2. Press HEADER CONTROL (A). The HEADER CONTROL page displays.

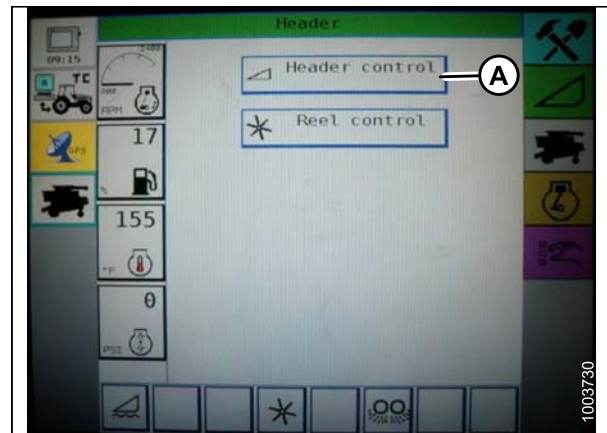

**Figure 7.59: Challenger Combine Display**



## SETTING UP AUTO HEADER HEIGHT CONTROL

3. Go to the TABLE SETTINGS tab.
4. Press up arrow on MAX UP PWM to increase percentage number and increase raise speed; Press down arrow on MAX UP PWM to decrease percentage number and decrease raise speed.
5. Press up arrow on MAX DOWN PWM to increase percentage number and increase lower speed; Press down arrow on MAX DOWN PWM to decrease percentage number and decrease lower speed.

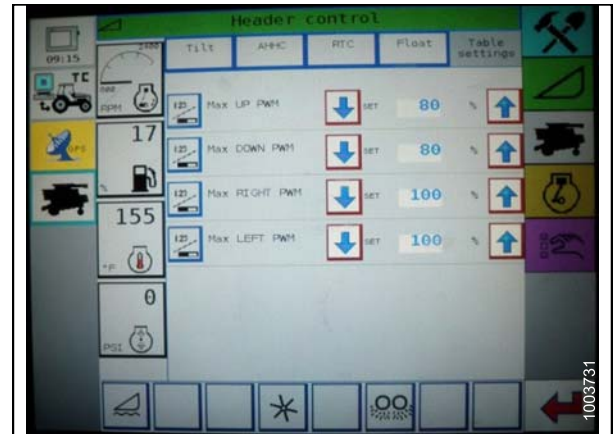


Figure 7.60: Challenger Combine Display

### *Setting the Sensitivity of the Auto Header Height Control (Challenger and Massey Ferguson)*

The sensitivity adjustment controls the distance the cutterbar must travel up or down before the auto header height control (AHHC) reacts and raises or lowers the feeder house. When the sensitivity is set to maximum, only small changes in ground height are needed to cause the feeder house to raise or lower. When the sensitivity is set to minimum, large changes in the ground height are needed to cause the feeder house to raise or lower.

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Press the HEADER icon on the FIELD page. The HEADER page appears.
2. Press the HEADER CONTROL button (A). The HEADER CONTROL page appears. You can adjust sensitivity on this page using the up and down arrows.

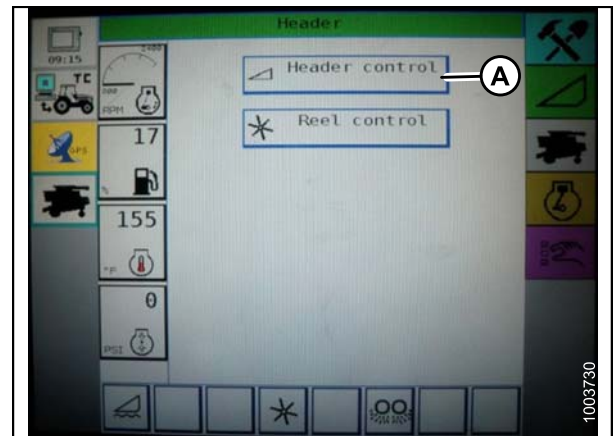


Figure 7.61: Challenger Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

3. Adjust the sensitivity to the maximum setting.
4. Activate the AHHC, and press the HEADER LOWER button on the control handle.
5. Decrease the sensitivity until the feeder house remains steady and does not bounce up and down.

**NOTE:**

This is the maximum sensitivity and is only an initial setting. The final setting must be made in the field as the system reaction will vary with changing surfaces and operating conditions.

**NOTE:**

If maximum sensitivity is not needed, a less sensitive setting will reduce the frequency of header height corrections and component wear. Partially opening the accumulator valve will cushion the action of the header lift cylinders and reduce header hunting.

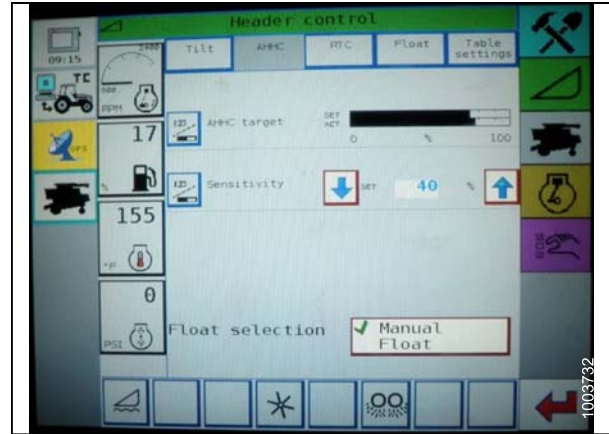


Figure 7.62: Challenger Combine Display

## 7.1.5 Gleaner R65/R66/R75/R76 and S Series Combines

### Checking Voltage Range from the Combine Cab (Gleaner R65/R66/R75/R76 and S Series)


**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.


**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

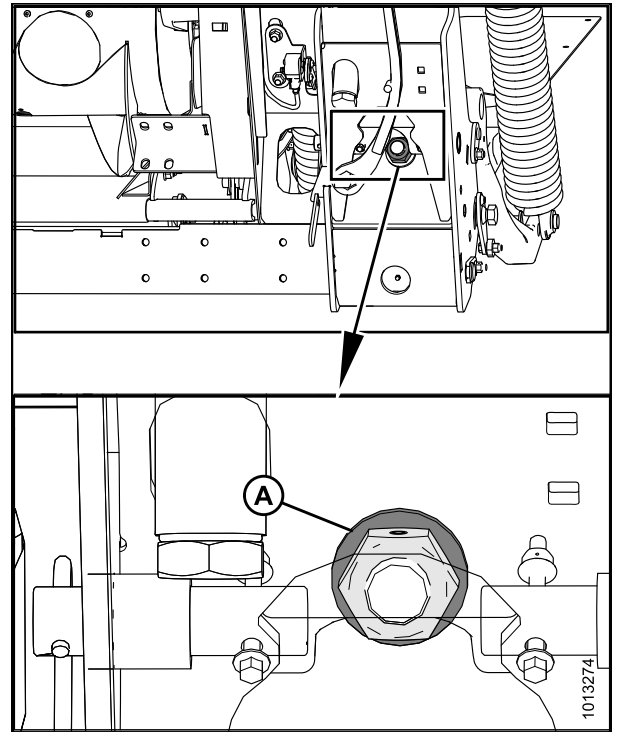


**Figure 7.63: Float Lock**

3. Ensure pointer (A) on the float indicator box is on '0'. If necessary, adjust the cable take-up bracket (B) until pointer is on '0'.

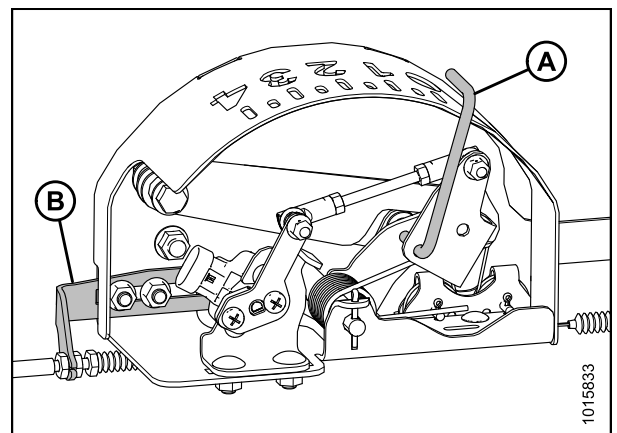

**Figure 7.64: Float Indicator box**

## SETTING UP AUTO HEADER HEIGHT CONTROL

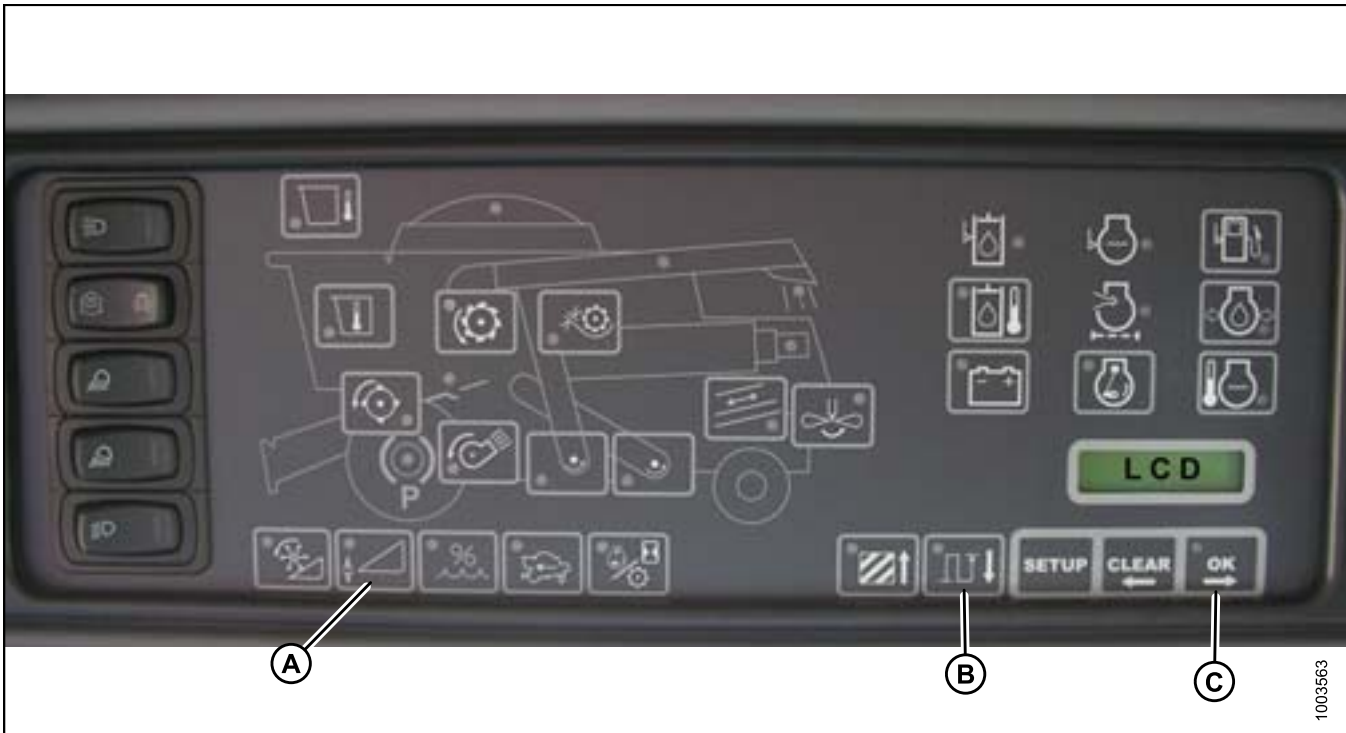

**Figure 7.65: Combine Heads Up Display**

4. Ensure header float is unlocked.
5. Press and hold button (A) on the heads-up display for three seconds to enter diagnostic mode.
6. Scroll down using button (B) until LEFT is displayed on the LCD screen.
7. Press the OK button (C). The number indicated on the LCD screen is the voltage reading from the sensor of the AHHC. Raise and lower the header to see the full range of voltage readings.

### *Engaging the Auto Header Height Control (Gleaner R65/R66/R75/R76 and S Series)*

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.


The following system components are required in order for the auto header height control (AHHC) to work:

- Main module (PCB board) and header driver module (PCB board) mounted in card box in fuse pane module (FP).
- Multi-Function Control Handle operator inputs.
- Operator inputs mounted in the control console module (CC) panel.

**NOTE:**


In addition to the above components, the electro hydraulic header lift control valve also is an integral part of the system.

## SETTING UP AUTO HEADER HEIGHT CONTROL

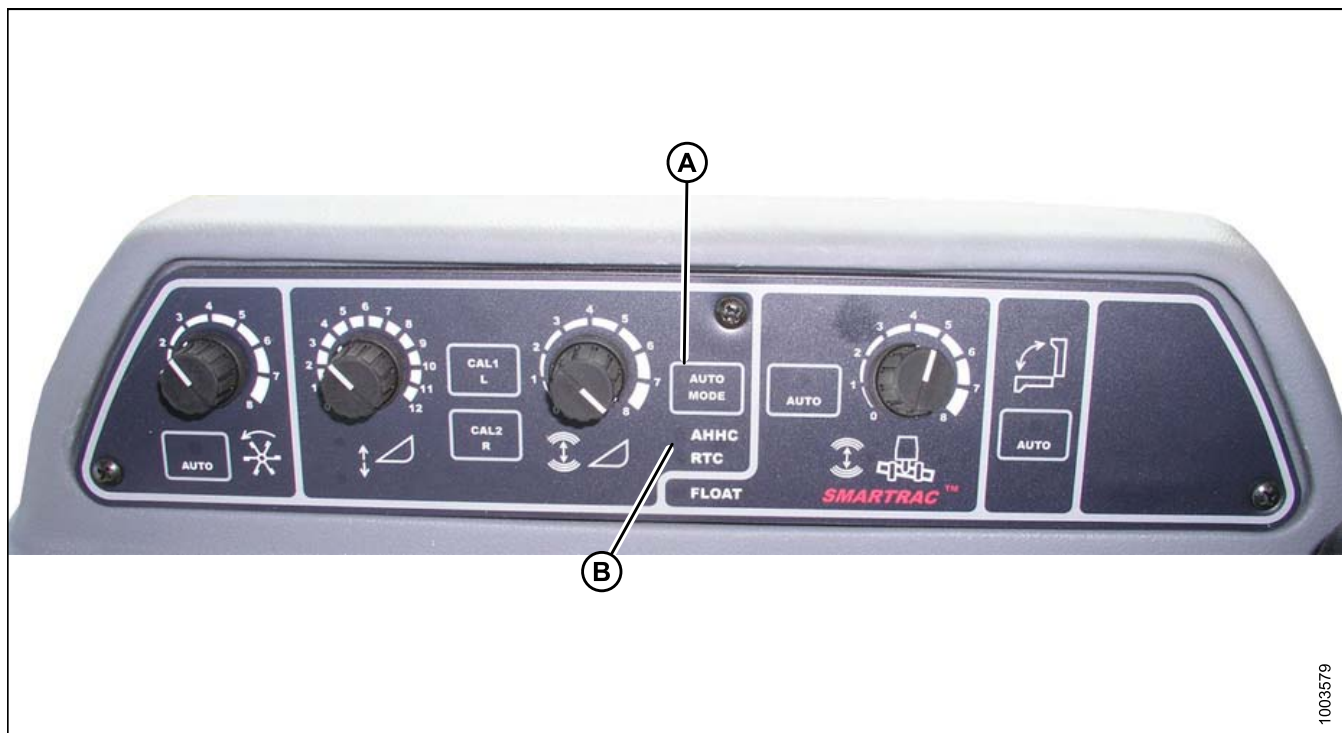

**Figure 7.66: Combine Auto Header Height Controls**

1. Press the AUTO MODE (A) button until the AHHC LED light (B) begins flashing. If the RTC light is flashing, press the AUTO MODE (A) button again until it switches to AHHC.
2. Briefly press button (A) on the control handle. The AHHC light should change from flashing to solid. The header also should drop toward the ground. The AHHC is now engaged and can be adjusted for height and sensitivity.
3. Use controls to adjust height and sensitivity to changing ground conditions such as shallow gullies and field drainage trenches.

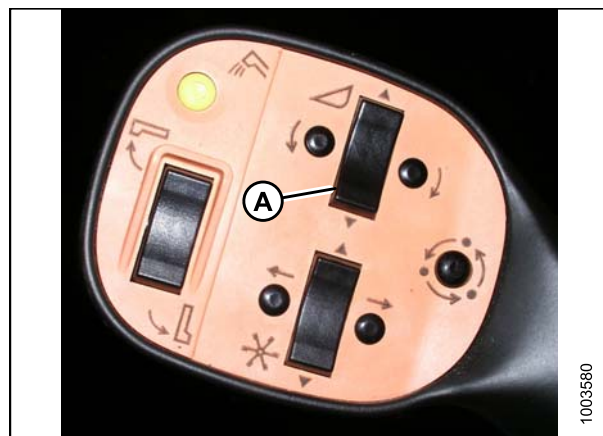

**Figure 7.67: Control Handle**

## SETTING UP AUTO HEADER HEIGHT CONTROL

### *Calibrating the Auto Header Height Control (Gleaner R65/R66/R75/R76 and S Series)*

Calibration should be done on flat, level ground without the header clutches engaged. Header height and header tilt must not be in auto or standby modes. The engine rpm must be above 2000 rpm. The header tilt option on 2004 and earlier model combines does not work with MacDon headers. This system will have to be removed and disabled in order to calibrate the auto header height control (AHHC). Refer to combine manual for instructions.

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



**Figure 7.68: Combine Auto Header Height Controls**

A - AUTO MODE Button  
D - Raise Header  
G - CAL2 Button

B - AHHC Light  
E - Lower Header

C - CAL1 Button  
F - Auto Mode

#### **NOTE:**

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

1. Ensure center-link is set to D.
2. Press AUTO MODE button (A) until the AHHC light (B) is illuminated.
3. Press and hold CAL1 button (C) until you see the following lights flash: raise header (D), lower header (E), tilt auto mode (F), and AHHC (B).
4. Fully lower the header, and continue to hold the HEADER LOWER button for 5–8 seconds to ensure float module has separated from header.



## SETTING UP AUTO HEADER HEIGHT CONTROL

5. Press CAL2 button (G) until lower header light (E) stops flashing, and release it when the raise header light (D) begins flashing.
6. Raise header to its maximum height (ensure the header is resting on the down-stop pads).
7. Press CAL2 button (G) until the raise header light (D) turns off.

### NOTE:

The following steps are applicable only to 2005 and newer combines with the Smartrac feeder house.

8. Wait for the HEADER TILT LEFT light (not shown) to start flashing, and then tilt header to the maximum left position.
9. Press CAL2 button (G) until the HEADER TILT LEFT light (not shown) stops flashing, and release button when the HEADER TILT RIGHT light (not shown) begins flashing.
10. Tilt the header to the maximum right position.
11. Press CAL2 button (G) until all of the following lights flash: raise header (D), lower header (E), height auto mode (A), right header and left header (not shown), and tilt auto mode (F).
12. Center the header.
13. Press CAL1 button (C) to exit calibration and save all values to the memory. All lights should stop flashing.

### *Turning off the Accumulator (Gleaner R65/R66/R75/R76 and S Series)*

The accumulator will affect the combine's reaction time and greatly inhibit the auto header height control's performance.

Refer to the combine operator's manual for proper procedure when turning accumulator off and on. For best performance, turn the feeder house accumulator off.

### NOTE:

The accumulator is located in front of the front left axle beam.



**Figure 7.69: Combine Accumulator On/Off Switch**

A - Accumulator Lever (Off Position)

### *Adjusting the Header Raise/Lower Rate (Gleaner R65/R66/R75/R76 and S Series)*

### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

The auto header height control (AHHC) system's stability is affected by hydraulic flow rates. Ensure that the header raise (A) and header lower (B) adjustable restrictors in the hydraulic valve block are adjusted so that it takes approximately six seconds to raise the header from ground level to maximum height (hydraulic cylinders fully extended), and approximately six seconds to lower the header from maximum height to ground level.

If there is too much header movement (for example, hunting) when the header is on the ground, adjust the lower rate to a slower rate of drop: seven or eight seconds.

### NOTE:

Make this adjustment with the hydraulic system at normal operating temperature (130°F [54.4°C]) and the engine running at full throttle.

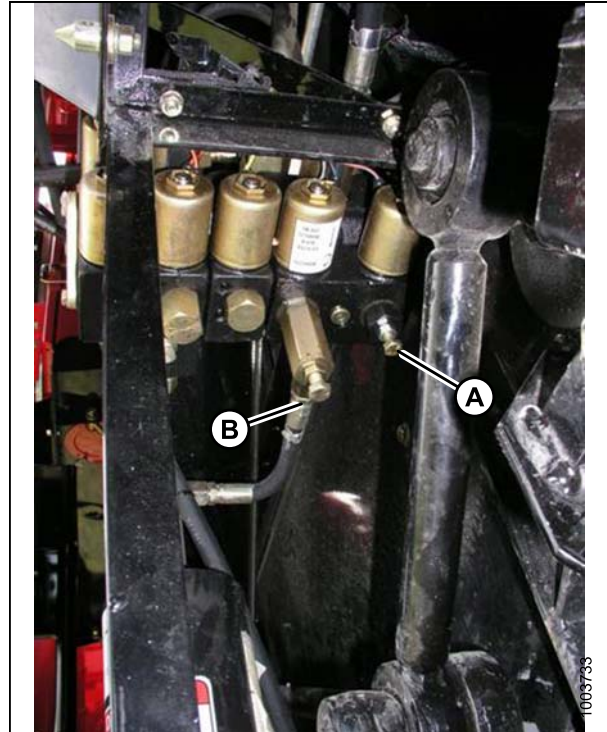


Figure 7.70: Header Raise and Lower Adjustable Restrictors

### Adjusting Ground Pressure (Gleaner R65/R66/R75/R76 and S Series)

### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

To adjust header height, ensure the header is in auto header height control (AHHC) mode. This is indicated by the AUTO MODE LED light (A) displaying a continuous, solid light. The header will lower to the height (ground pressure) corresponding to the position selected with the height control knob (B).

Turn the knob counterclockwise for minimum ground pressure, and clockwise for maximum ground pressure.

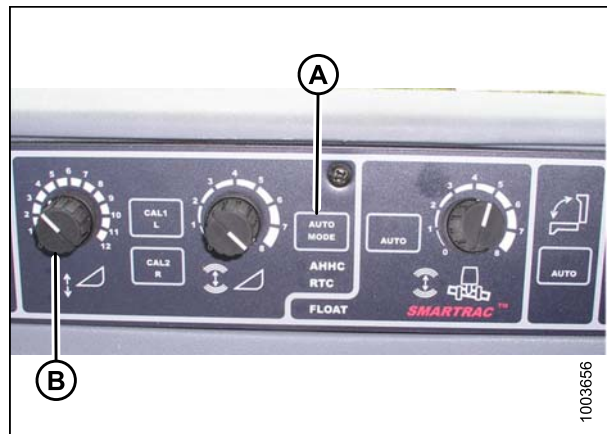


Figure 7.71: Auto Header Height Control Console



## SETTING UP AUTO HEADER HEIGHT CONTROL

**NOTE:**

The ideal ground pressure, in most cases, is one number of separation on the AHHC from having the header fully suspended off the ground (B) to just resting on the ground (A).

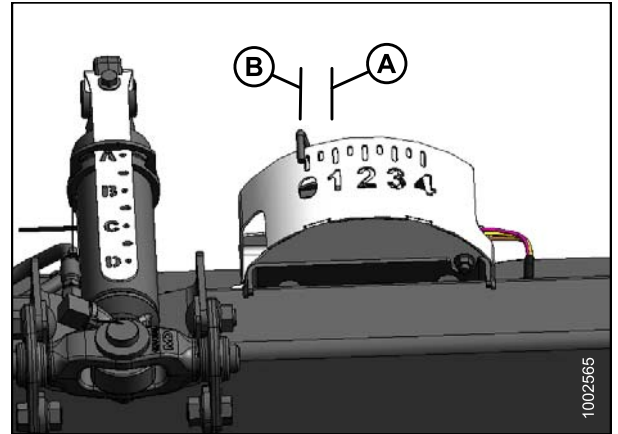


Figure 7.72: Float Indicator Box

### *Adjusting the Sensitivity of the Auto Header Height Control (Gleaner R65/R66/R75/R76 and S Series)*

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



Figure 7.73: Auto Header Height Control Console

## SETTING UP AUTO HEADER HEIGHT CONTROL

The SENSITIVITY ADJUSTMENT dial (A) controls the distance the cutterbar must travel up or down before the AHHC reacts and raises or lowers the feeder house.

When the SENSITIVITY ADJUSTMENT dial (A) is set to maximum (turned completely clockwise), only small changes in ground height are needed to cause the feeder house to raise or lower. In this position, the cutterbar moves up and down approximately 3/4 in. (19 mm) before the control module signals the hydraulic control valve to raise or lower the header frame.

When the SENSITIVITY ADJUSTMENT dial (A) is set to minimum (turned completely counterclockwise), large changes in ground height are needed to cause the feeder house to raise or lower. In this position, the cutterbar moves up and down approximately 2 in. (51 mm) before the control module signals the hydraulic control valve to raise or lower the header frame.

The HEADER SENSE LINE input also changes the range of the sensitivity. When connected to a draper, the counterclockwise position (least sensitive) allows for approximately 4 in. (102 mm) of vertical travel before correction is made.

### *Troubleshooting Alarms and Diagnostic Faults (Gleaner R65/R66/R75/R76 and S Series)*

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

#### **Display type:**


Displayed on tachometer (A) as 'XX' or 'XXX'.



**Figure 7.74: Tachometer**

## SETTING UP AUTO HEADER HEIGHT CONTROL

Displayed on LCD (A) as 'XX in.' or 'XXX cm'.

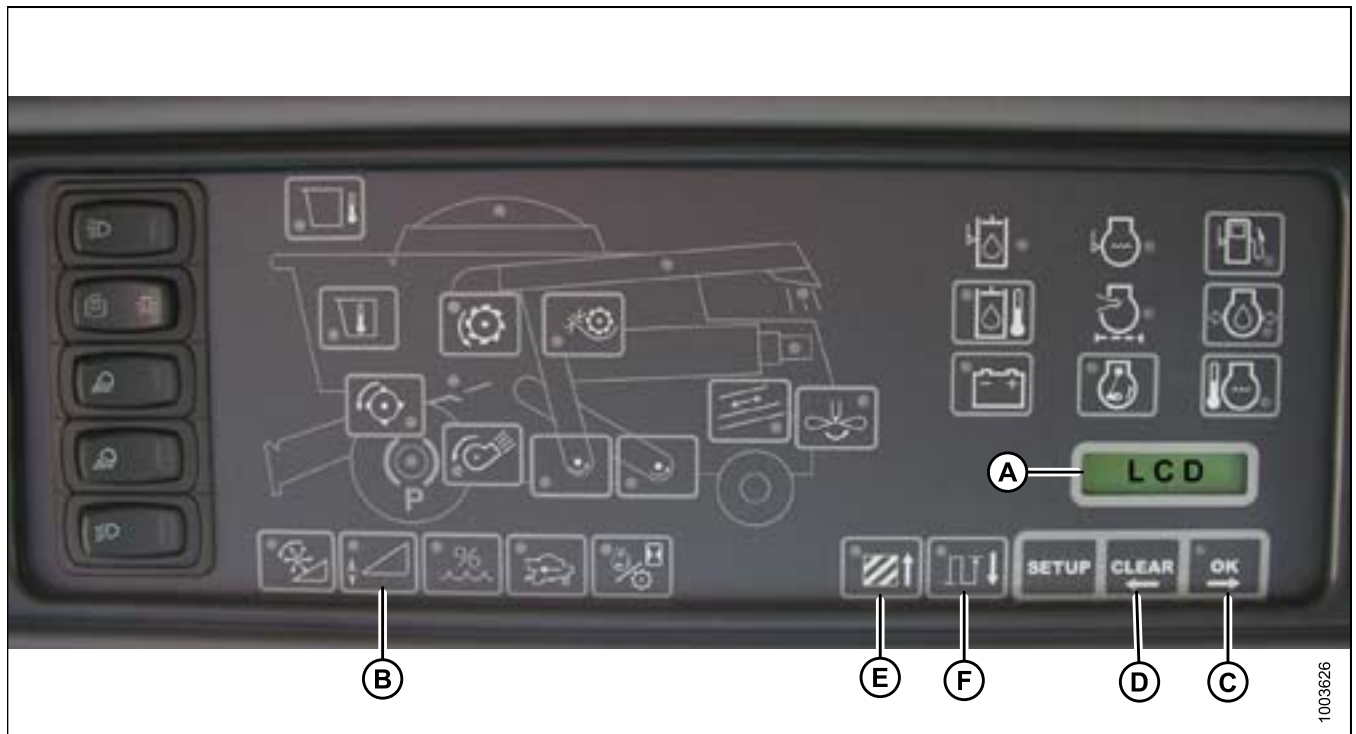

**Figure 7.75: Combine Heads Up Display**

### Alarm conditions:

If an error message is received from the fuse panel, an audible alarm sounds. The LCD on the electronic instrument panel (EIP) indicates the header system in error as HDR CTRL followed by HGT ERR for height, and HDR CTRL followed by TILT ERR for tilt. The header height LED flashes yellow two times every second.

The alarm also is noted by the buzzer sounding five times every ten seconds.

When an alarm condition occurs, a green LED flashes on and off (green, yellow, or red depending on the input). In addition, a message is displayed on the LCD to identify the nature of the alarm. For example, HYD TEMP, OPEN, SHRT will be flashed alternately.

## SETTING UP AUTO HEADER HEIGHT CONTROL

**Diagnostic fault failures:** Refer to Figure [7.75: Combine Heads Up Display, page 181](#).

Pressing the header height switch (B) for a minimum of five seconds will put the EIP in header diagnostic mode. The LCD (shown on previous page) will display the message HDR DIAG when the EIP has entered header diagnostic mode.

In this mode, after three seconds, header fault parameter labels are displayed on the EIP LCD. All the information displayed is read-only.

The OK (C) and CLEAR (D) buttons allow you to scroll through the list of parameters. If there are no active fault codes, the EIP LCD will display NO CODE.

When a parameter is displayed, its label is displayed for three seconds, after which its value is automatically displayed.

Pressing the OK button (C) while the value is displayed will advance to the next parameter and display its label.

When a parameter label is displayed and the OK button (C) is pressed before three seconds, the parameter's value will be displayed.

Pressing AREA (E) will cycle through the options. When LEFT is displayed on the LCD, press the OK button (C), and the auto header height control (AHHC) voltage will be shown on the display.

Press the DIST button (F) to cycle back through the table.

Press the CLEAR button (D) to exit header diagnostics and return to normal mode.

Refer to [7.1.13 Sensor Operation, page 243](#).

## 7.1.6 John Deere 60 Series Combines

### Checking Voltage Range from the Combine Cab (John Deere 60 Series)

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.


**CAUTION**

Check to be sure all bystanders have cleared the area.

1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.


**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

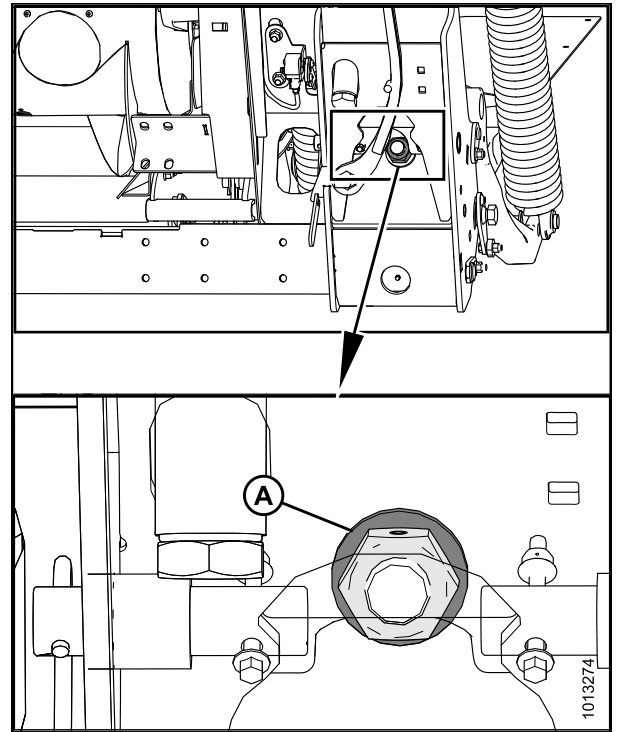


**Figure 7.76: Float Lock**

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

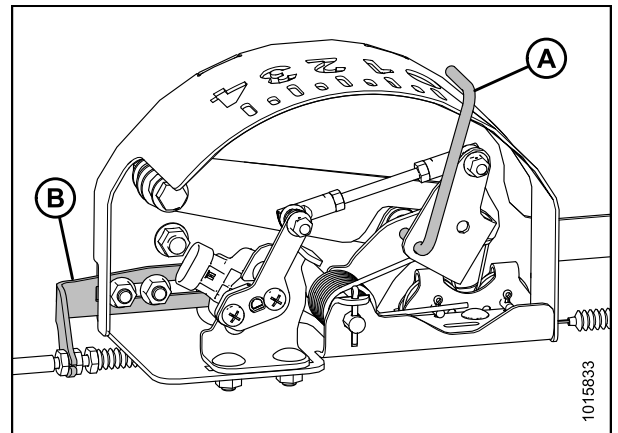

**Figure 7.77: Float Indicator box**

## SETTING UP AUTO HEADER HEIGHT CONTROL

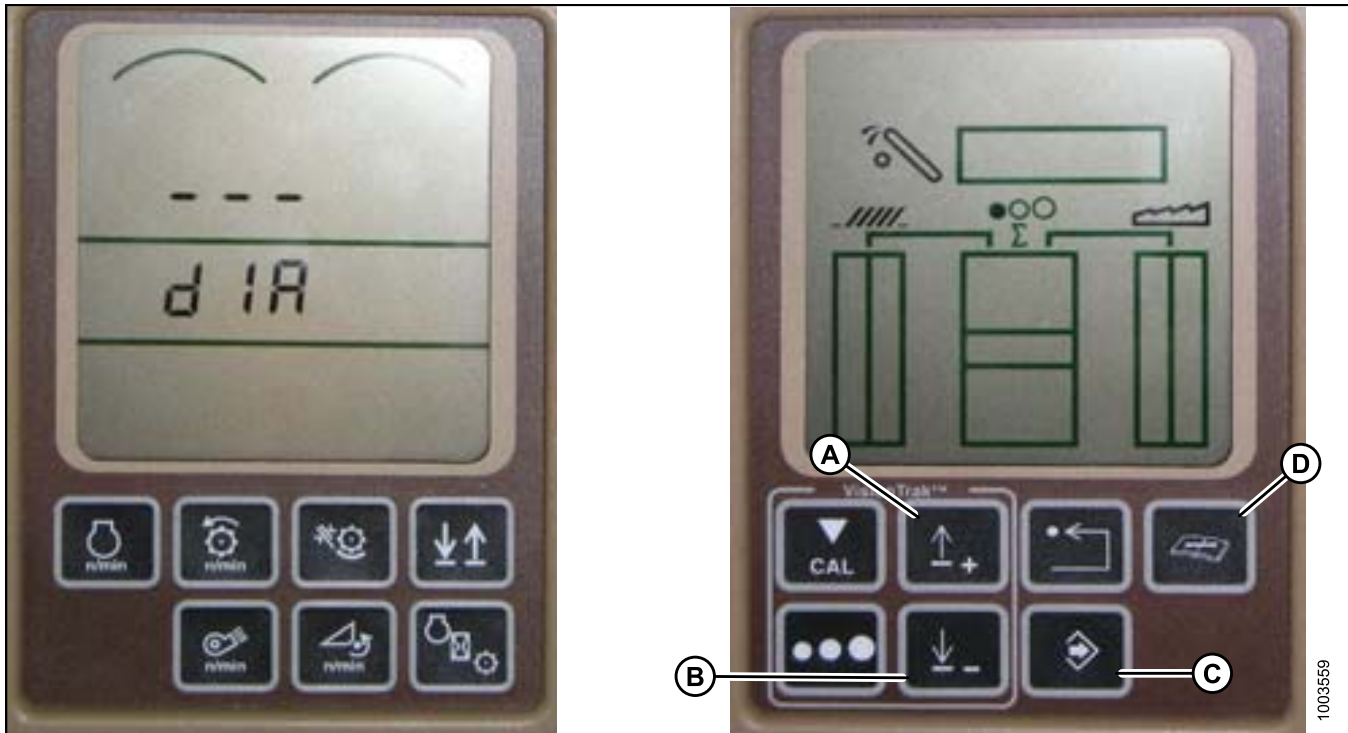

**Figure 7.78: John Deere Combine Display**

4. Press the DIAGNOSTIC button (D) on the monitor—DIA appears on the monitor.
5. Press the UP button (A) until EO1 appears on the monitor—this is the header adjustments.
6. Press the ENTER button (C).
7. Press the UP (A) or DOWN button (B) until 24 is displayed on the top portion of the monitor—this is the voltage reading for the sensor.
8. Ensure header float is unlocked.
9. Start the combine, and fully lower feeder house to the ground.

**NOTE:**

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

10. Check the sensor reading on the monitor.
11. Raise the header so it is just off the ground, and recheck the sensor reading.
12. If the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient, refer to [Adjusting Voltage Limits \(One-Sensor System\)](#), page 148.

## SETTING UP AUTO HEADER HEIGHT CONTROL

### *Calibrating the Auto Header Height Control (John Deere 60 Series)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.


#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

#### **CAUTION**

**Check to be sure all bystanders have cleared the area.**

1. Ensure center-link is set to D.
2. Rest header on down stops, and unlock float module float.
3. Put wings in locked position.
4. Start the combine.
5. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
6. Press the CAL button (B). DIA-CAL appears on the monitor.

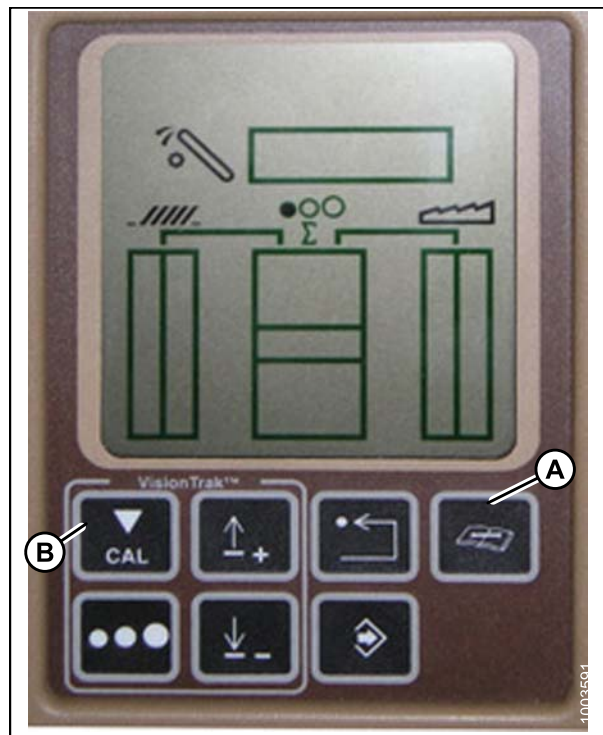

**Figure 7.79: John Deere Combine Display**



## SETTING UP AUTO HEADER HEIGHT CONTROL

7. Press the UP or DOWN buttons until HDR appears on the monitor.
8. Press the ENTER button. HDR H-DN appears on the monitor.

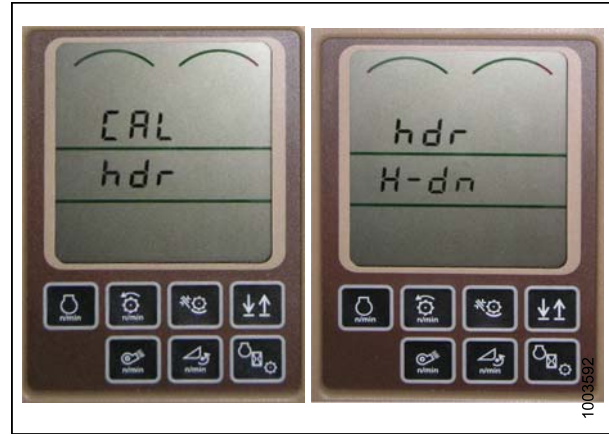


Figure 7.80: John Deere Combine Display

9. Fully lower feeder house to the ground.

**NOTE:**

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

10. Press the CAL button (A) to save the calibration of the header. HDR H-UP appears on the monitor.
11. Raise the header three feet off the ground and press the CAL (A) button. EOC appears on the monitor.
12. Press the ENTER button (B) to save the calibration of the header. Your AHHC is now calibrated.

**NOTE:**

If an error code appears during calibration, the sensor is out of voltage range and will require adjustment. Refer to [Checking Voltage Range from the Combine Cab \(John Deere 60 Series\)](#), page 183.

**NOTE:**

After the calibration is complete, adjust combine operation settings to ensure proper field operation.

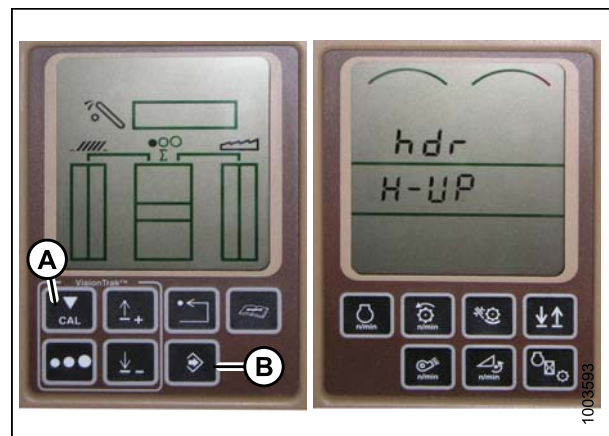


Figure 7.81: John Deere Combine Display

### *Turning the Accumulator Off (John Deere 60 Series)*

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
2. Press the UP button (B) until EO1 appears on the monitor, and press ENTER (D). This is the header adjustment.
3. Press the UP (B) or DOWN (C) button until 132 is displayed on the top portion of the monitor. This is the reading for the accumulator.
4. Press ENTER (D) to select 132 as the accumulator reading (this will allow you to change the display to a three-digit number so it has a 0 in it, for example, x0x).
5. Press the UP (B) or DOWN (C) button until the desired number is displayed, and press the CAL (E) button.
6. Press ENTER (D) to save the changes. The accumulator is now deactivated.

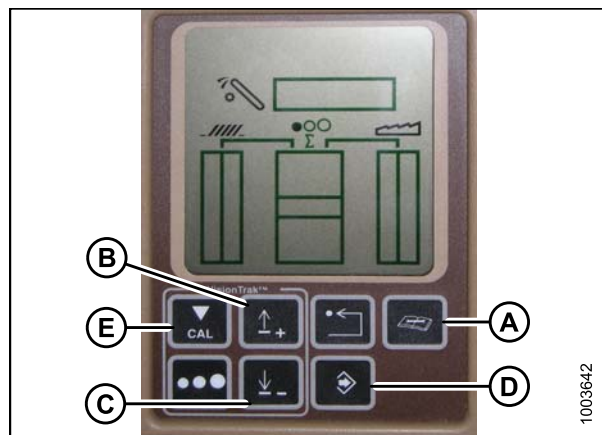


Figure 7.82: John Deere Combine Display

### *Setting the Sensing Grain Header Height to 50 (John Deere 60 Series)*

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

To set the sensing grain header height, follow these steps:

1. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
2. Press the UP button (B) until EO1 appears on the monitor, and press ENTER (D). This is the header adjustment.
3. Press the UP (B) or DOWN (C) button until 128 is displayed on the top portion of the monitor. This is the reading for the sensor.
4. Press ENTER (D) to select 128 as the sensor reading (this will allow you to change the display to a three-digit number so it has a 50 in it).
5. Press the UP (B) or DOWN (C) button until the desired number is displayed, and press the CAL (E) button.
6. Press ENTER (D) to save the changes. The height is now set.

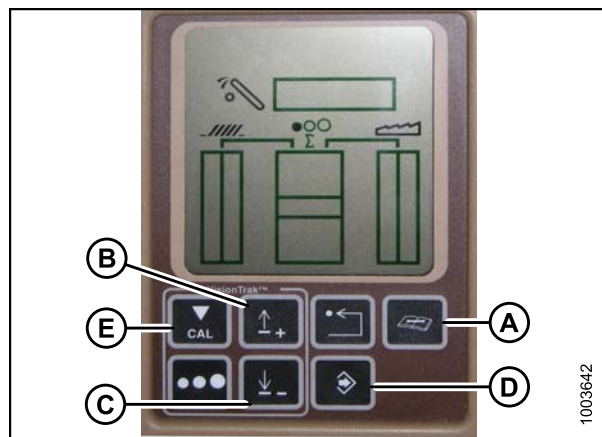


Figure 7.83: John Deere Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

**NOTE:**

Do **NOT** use the active header float function (A) in combination with the MacDon auto header height control (AHHC)—the two systems will counteract one another. The header symbol (B) on the display should NOT have a wavy line under it and should appear exactly as shown on the Active Header Control Display in Figure 7.84: *John Deere Combine Display*, page 188.

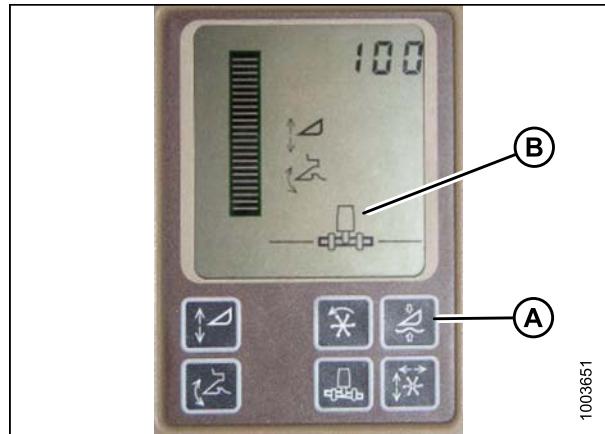


Figure 7.84: John Deere Combine Display

### *Setting the Sensitivity of the Auto Header Height Control (John Deere 60 Series)*

This is also known as dead band adjustment.

**NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
2. Press the UP button (B) until EO1 appears on the monitor, and press ENTER (D). This is the header adjustment.
3. Press the UP (B) or DOWN (C) button until 112 is displayed on the monitor. This is your sensitivity setting.

**NOTE:**

The lower the reading, the higher the sensitivity. Ideal operating range is typically between 50 and 80.

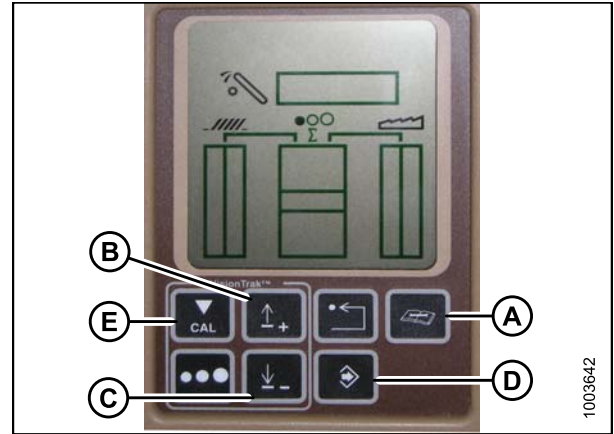

**Figure 7.85: John Deere Combine Display**

4. Press ENTER (D) to select 112 as the sensitivity setting (this will allow you to change the first digit of the number sequence).
5. Press UP (B) or DOWN (C) until the desired number is displayed, then press the CAL (E) button. This will bring you to the second digit. Repeat this procedure until the desired setting is achieved.
6. Press ENTER (D) to save changes.

**NOTE:**

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.

### *Adjusting the Threshold for the Drop Rate Valve (John Deere 60 Series)*

This procedure explains how to adjust the point at which the restrictor valve opens allowing full flow to the lift cylinders.

**NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Press the DIAGNOSTIC button (A) on the monitor. DIA appears on the monitor.
2. Press the UP button (B) until EO1 appears on the monitor and press ENTER (C). This is the header adjustment.
3. Press the UP (B) or DOWN button until 114 is displayed on the top portion of the monitor. This is the setting that adjusts when the fast drop rate starts with respect to the dead band.

**NOTE:**

The default setting is 100. Ideal operating range is typically between 60 and 85.

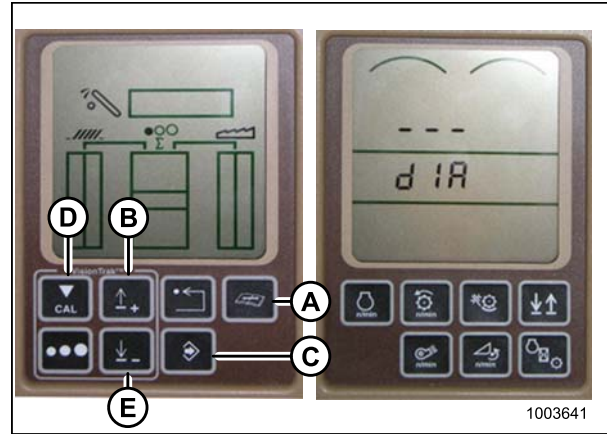

**Figure 7.86: John Deere Combine Display**

4. Press ENTER (C) to select 114 as the fast drop rate (this will allow you to change the first digit of the number sequence).
5. Press UP (B) or DOWN (E) until the desired number is displayed, then press the CAL button (D). This will bring you to the second digit. Repeat this procedure until the desired setting is achieved.
6. Press ENTER (C) to save changes.

**NOTE:**

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.

## 7.1.7 John Deere 70 Series Combines

### Checking Voltage Range from the Combine Cab (John Deere 70 Series)

#### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

#### CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

#### NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

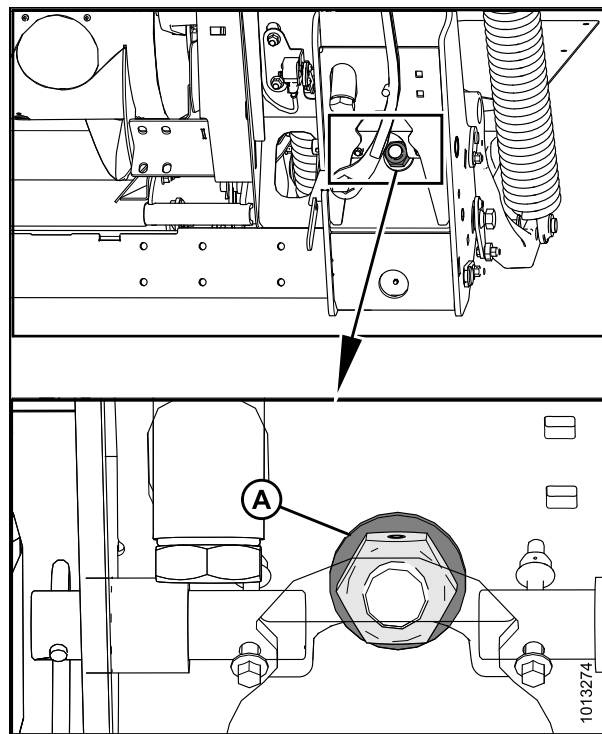


Figure 7.87: Float Lock

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

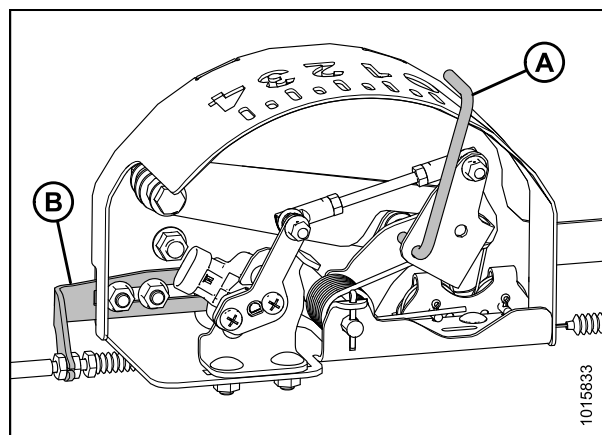


Figure 7.88: Float Indicator box

## SETTING UP AUTO HEADER HEIGHT CONTROL

4. Press the HOME PAGE button (A) on the main page of the monitor.



Figure 7.89: John Deere Combine Display

5. Ensure the three icons (A) depicted in the illustration at right appear on the monitor.



Figure 7.90: John Deere Combine Display

6. Use scroll knob (A) to highlight the middle icon (the green i) and press the check mark button (B) to select it. This will bring up the Message Center.

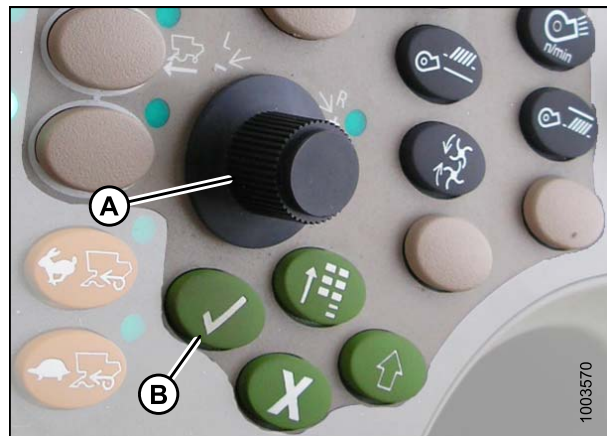


Figure 7.91: John Deere Combine Control Console

## SETTING UP AUTO HEADER HEIGHT CONTROL

7. Use the scroll knob to highlight DIAGNOSTIC ADDRESSES (A) from the right column and select it by pressing the check mark button.
8. Use the scroll knob to highlight drop down box (B) and press the check mark button to select it.



Figure 7.92: John Deere Combine Display

9. Use the scroll knob to highlight LC 1.001 VEHICLE (A) is highlighted and press the check mark button to select it.



Figure 7.93: John Deere Combine Display

10. Use the scroll knob to highlight the down arrow (A) and press the check mark button to scroll through the list until 029 DATA (B) is displayed and voltage reading (C) appears on the monitor.

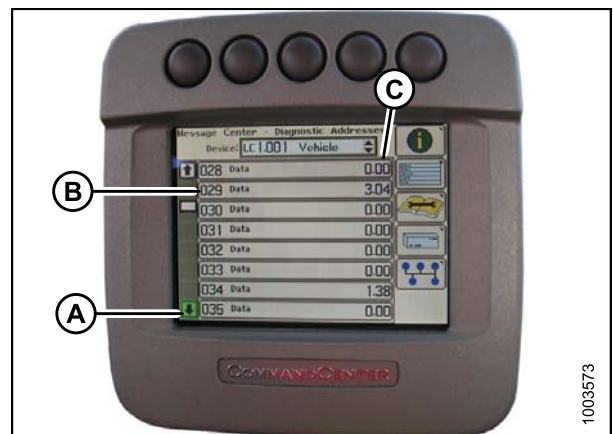


Figure 7.94: John Deere Combine Display

11. Ensure header float is unlocked.
12. Start the combine and fully lower feeder house to the ground.

### NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.



## SETTING UP AUTO HEADER HEIGHT CONTROL

13. Check the sensor reading on the monitor.
14. Raise the header so it is just off the ground and recheck the sensor reading.
15. If the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient, refer to [Adjusting Voltage Limits \(One-Sensor System\)](#), page 148.

### *Calibrating Feeder House Speed (John Deere 70 Series)*

The feeder house speed must be calibrated before you calibrate the auto header height control (AHHC) system. Refer to the combine operator's manual for instructions.

### *Calibrating the Auto Header Height Control (John Deere 70 Series)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

#### **CAUTION**

**Check to be sure all bystanders have cleared the area.**

1. Ensure center-link is set to D.
2. Rest header on down stops and unlock float module float.
3. Place wings in locked position.
4. Start the combine.
5. Press the button located fourth from the left along the top of the monitor (A) to select the icon that resembles an open book with a wrench on it (B).
6. Press the top button (A) a second time to enter diagnostics and calibration mode.



**Figure 7.95: John Deere Combine Display**



## SETTING UP AUTO HEADER HEIGHT CONTROL

7. Select HEADER in box (A) by scrolling down to the box using the scroll knob, and then pressing the check mark button (knob and button are shown in Figure 7.97: [John Deere Combine Control Console, page 195](#)).
8. Scroll down to the lower right icon that resembles an arrow in a diamond (B) and press the check mark button to select it.

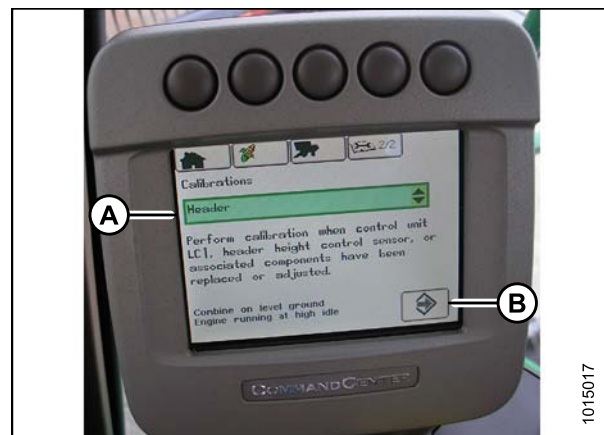


Figure 7.96: John Deere Combine Display

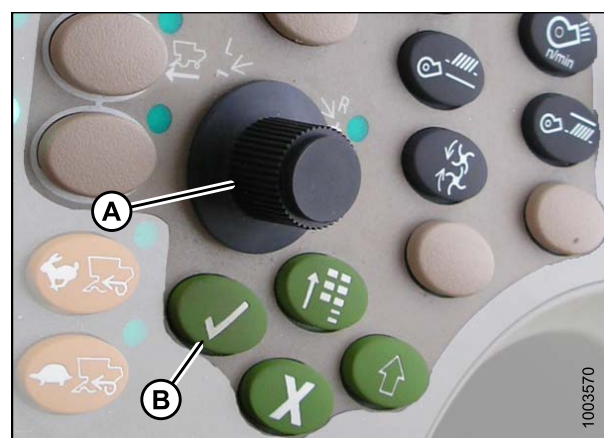


Figure 7.97: John Deere Combine Control Console

A - Scroll Knob

B - Check Mark Button

9. Follow the steps listed on the monitor to perform the calibration.

**NOTE:**

If an error code appears on page, the sensor is not in the correct working range. Refer to [Checking Voltage Range from the Combine Cab \(John Deere S and T Series\), page 198](#) to check and adjust the range.

### *Setting the Sensitivity of the Auto Header Height Control (John Deere 70 Series)*

**NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Press button (A) twice and the current sensitivity setting will appear on the monitor (the lower the reading, the lower the sensitivity).
2. Use scroll knob (B) to adjust the sensitivity setting. The adjustment will be saved automatically.

**NOTE:**

If the page remains idle for a short period of time, it will automatically return to the previous page. Pressing the check mark button (C) also will return the monitor to the previous page.

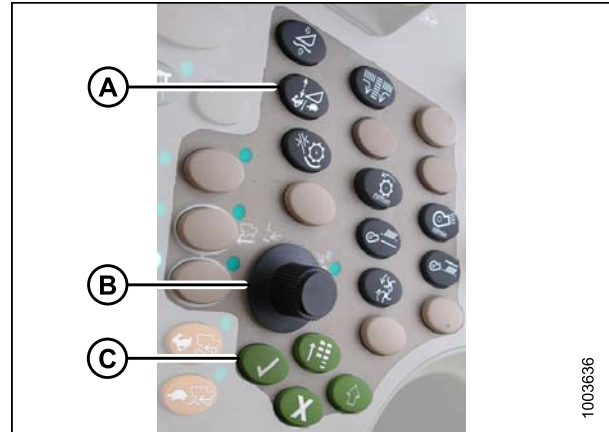

**Figure 7.98: John Deere Combine Control Console**

**NOTE:**

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.



**Figure 7.99: John Deere Combine Display**

### *Adjusting the Manual Header Raise/Lower Rate (John Deere 70 Series)*

**NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Press button (A) and the current raise/lower rate setting will appear on the monitor (the lower the reading, the slower the rate).
2. Use scroll knob (B) to adjust the rate. The adjustment will be saved automatically.

**NOTE:**

If the page remains idle for a short period of time, it will automatically return to the previous page. Pressing the check mark button (C) will also return the monitor to the previous page.

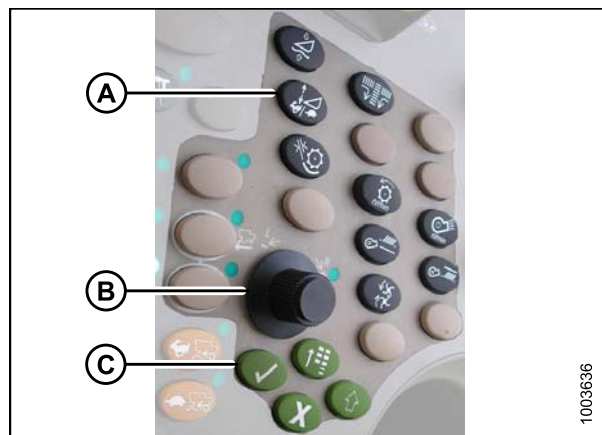

**Figure 7.100: John Deere Combine Control Console**

**NOTE:**

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.



**Figure 7.101: John Deere Combine Display**

## 7.1.8 John Deere S and T Series Combines

### Checking Voltage Range from the Combine Cab (John Deere S and T Series)

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

**CAUTION**

Check to be sure all bystanders have cleared the area.

1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

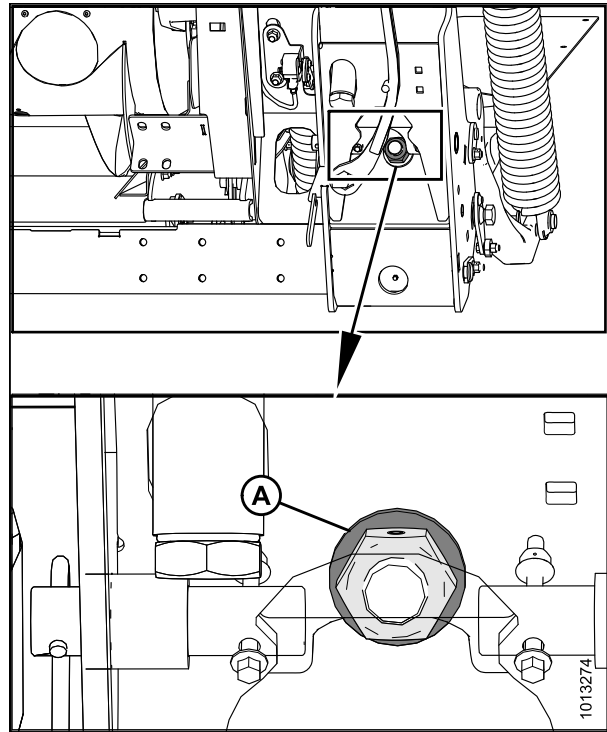


Figure 7.102: Float Lock

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

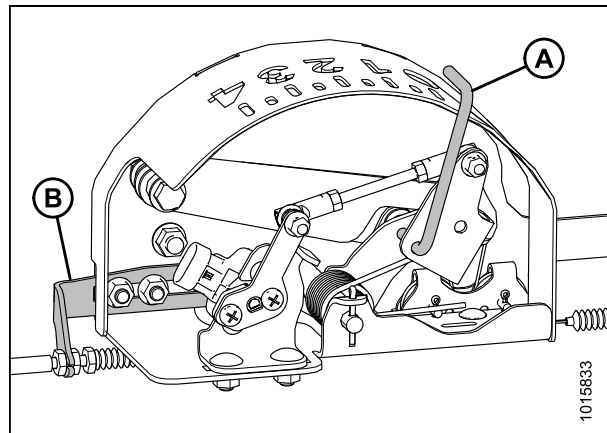


Figure 7.103: Float Indicator Box

## SETTING UP AUTO HEADER HEIGHT CONTROL

4. Press the CALIBRATION icon (A) on the main page of the monitor. The CALIBRATION page appears.

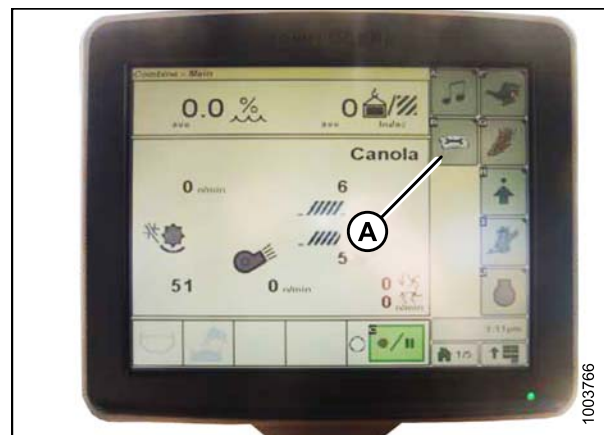


Figure 7.104: John Deere Combine Display

5. Press the DIAGNOSTIC READINGS icon (A) on the CALIBRATION page. The DIAGNOSTIC READINGS page appears. This page provides access to calibrations, header options, and diagnostic information.

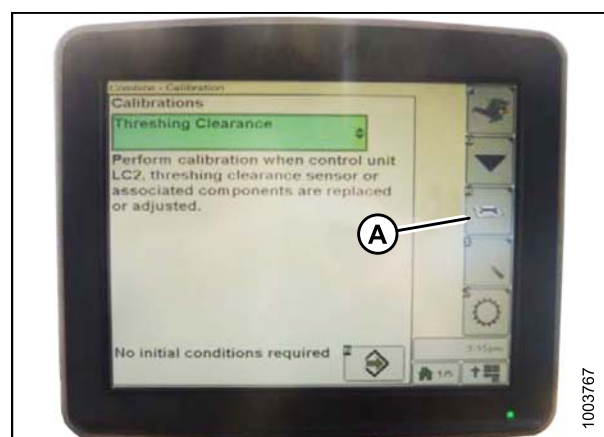


Figure 7.105: John Deere Combine Display

6. Select AHHC RESUME (A) and a list of calibration options appears.

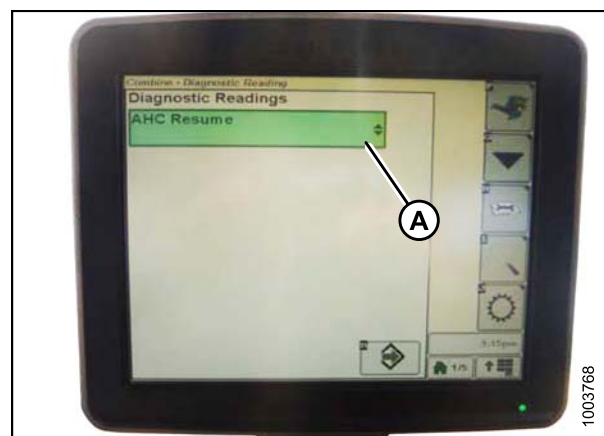


Figure 7.106: John Deere Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

7. Select the AHHC SENSING option.
8. Press the icon that resembles an arrow in a box (A). The AHHC SENSING menu appears and five pages of information are displayed.



Figure 7.107: John Deere Combine Display

9. Press icon (A) until it reads Page 5 near the top of the page and the following sensor readings appear:
  - LEFT HEADER HEIGHT
  - CENTER HEADER HEIGHT
  - RIGHT HEADER HEIGHT

A reading is displayed for both left- and right sensor. On the MacDon header, there are two sensors located at the back of the float module side frame.



Figure 7.108: John Deere Combine Display

10. Ensure header float is unlocked.
11. Start the combine and fully lower feeder house to the ground.

### NOTE:

You may need to hold the HEADER DOWN switch for a few seconds to ensure the feeder house is fully lowered.

12. Check the sensor reading on the monitor.
13. If the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient refer to [Adjusting Voltage Limits \(One-Sensor System\)](#), page 148.

## SETTING UP AUTO HEADER HEIGHT CONTROL


### *Calibrating the Auto Header Height Control (John Deere S and T Series)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

#### **NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to D.
2. Rest header on down stops and unlock float module float.
3. Place wings in locked position.
4. Press the DIAGNOSTIC icon (A) on the main page of the monitor. The CALIBRATION page appears.

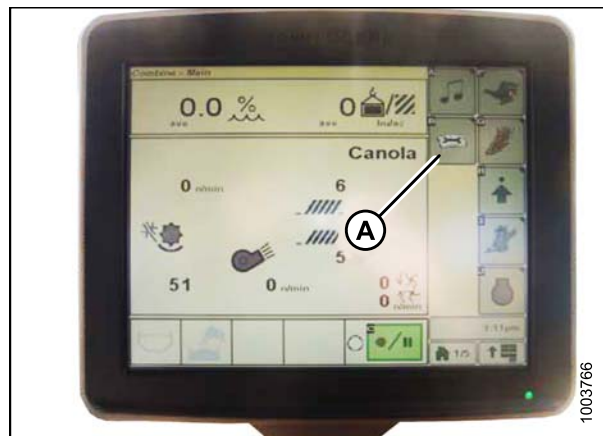

**Figure 7.109: John Deere Combine Display**

5. Select THRESHING CLEARANCE (A) and a list of calibration options appears.

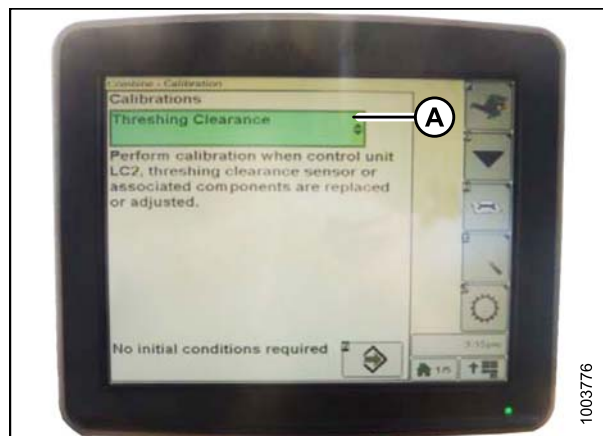

**Figure 7.110: John Deere Combine Display**



## SETTING UP AUTO HEADER HEIGHT CONTROL

6. Select FEEDER HOUSE SPEED (A) and calibrate.
7. Select HEADER (B) and calibrate.

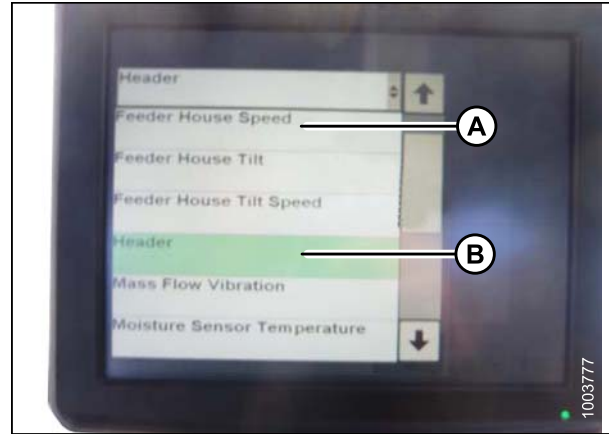


Figure 7.111: John Deere Combine Display

8. Press icon (A) with either FEEDER HOUSE SPEED or HEADER selected and the icon will turn green.

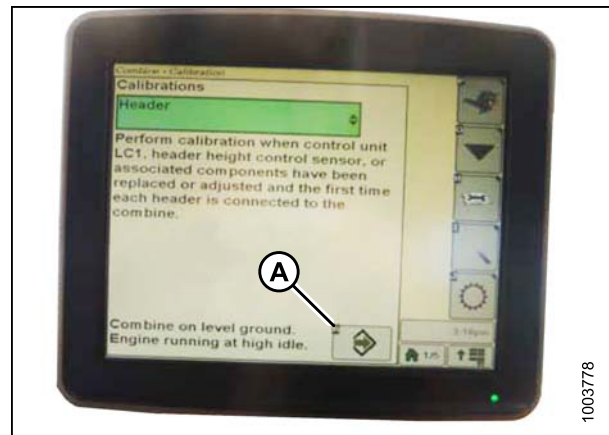


Figure 7.112: John Deere Combine Display

9. Click button (A) and instructions will appear on screen to guide you through the remaining calibration steps.

### NOTE:

If an error code appears during calibration, the sensor is out of voltage range and will require adjustment. Refer to [Checking Voltage Range from the Combine Cab \(John Deere S and T Series\)](#), page 198.

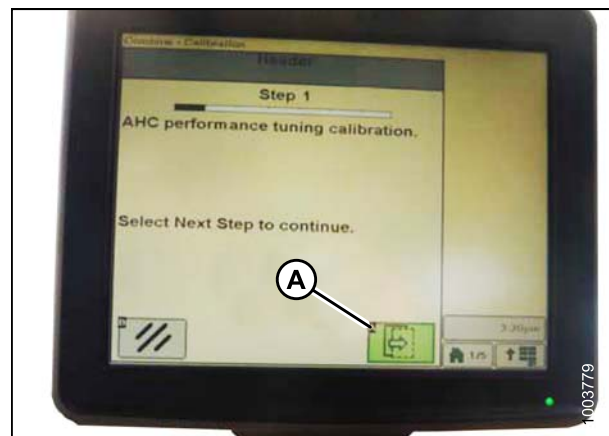


Figure 7.113: John Deere Combine Display

## Setting the Sensitivity of the Auto Header Height Control (John Deere S and T Series)

### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Press button (A) twice and the current sensitivity setting will appear on the monitor.



Figure 7.114: John Deere Combine Command Center

2. Press the – or + icon (A) to adjust rates.

**NOTE:**

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.

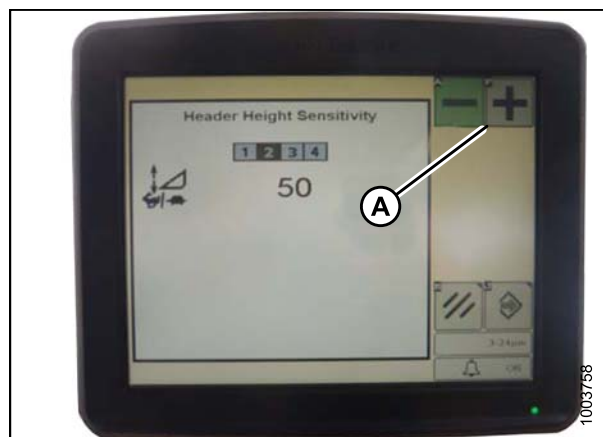


Figure 7.115: John Deere Combine Display

### *Adjusting the Manual Header Raise/Lower Rate (John Deere S and T Series)*

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Press button (A) and the current sensitivity setting will appear on the monitor.



Figure 7.116: John Deere Combine Command Center

2. Press the - or + icon (A) to adjust rates.

**NOTE:**

The numbers depicted on the displays in these illustrations are for reference purposes only; they are not intended to represent the specific settings for your equipment.

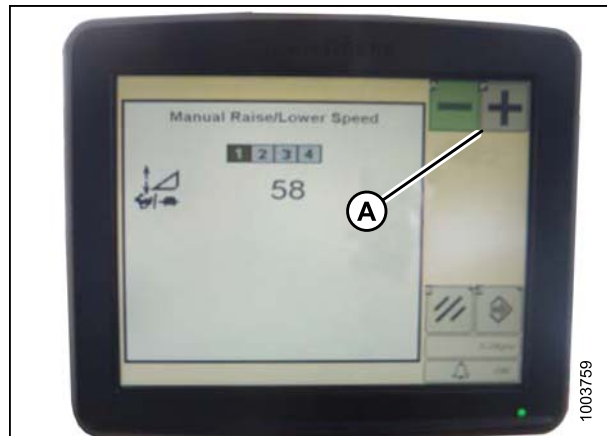


Figure 7.117: John Deere Combine Display

**NOTE:**

The ideal ground pressure—in most cases—is one number (on the float indicator box) above the header suspended off the ground. For example, if the float indicator needle (A) is positioned at 0 with the header suspended off the ground, then the ideal ground pressure will be achieved with the needle positioned at 1. Operating with heavier pressures can wear the cutterbar poly prematurely.

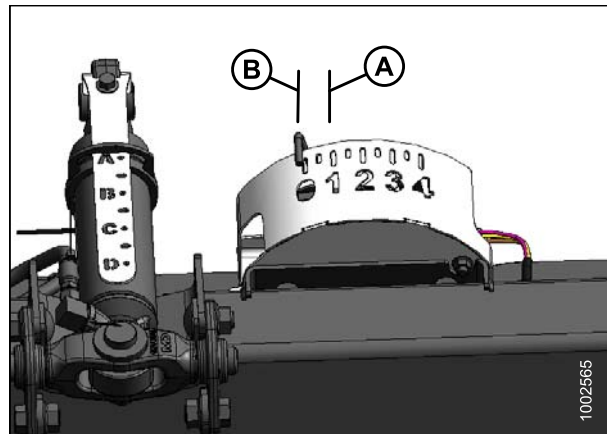


Figure 7.118: Float Indicator Box

## SETTING UP AUTO HEADER HEIGHT CONTROL

### *Calibrating Feeder House Fore/Aft Tilt Range (John Deere S and T Series)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

This procedure applies only to model year 2015 and later John Deere S and T Series combines.

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.


The feeder house fore/aft tilt is controlled by buttons (C) and (D) at the back of the hydro handle.



**Figure 7.119: John Deere Hydro Handle**

#### **NOTE:**

The feeder house fore/aft tilt controls can be changed to work with buttons E and F by pressing the hydro handle icon (A) and then selecting FEEDER HOUSE FORE/AFT TILT from the drop-down menu (B).

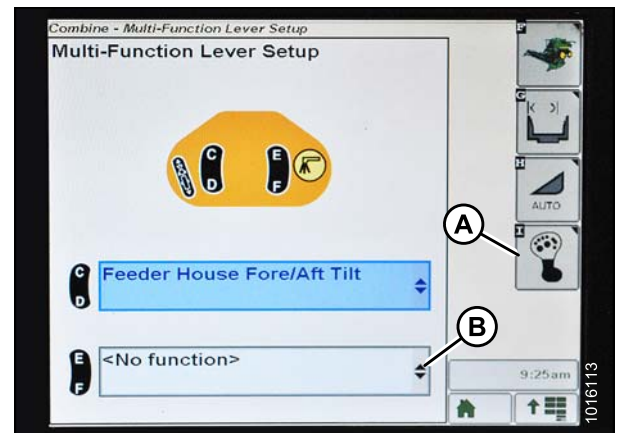

**Figure 7.120: John Deere Combine Display**

To calibrate the feeder house fore/aft tilt range, follow these steps:

1. Ensure center-link is set to D.
2. Rest header on down stops and unlock float module float.
3. Place wings in locked position.

## SETTING UP AUTO HEADER HEIGHT CONTROL

- Press the DIAGNOSTIC icon (A) on the main page of the monitor. The CALIBRATION page displays.

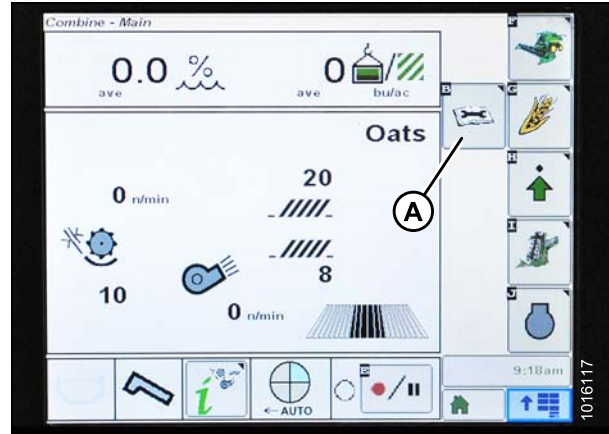


Figure 7.121: John Deere Combine Display

- Select the CALIBRATIONS drop-down menu (A) to view the list of calibration options.

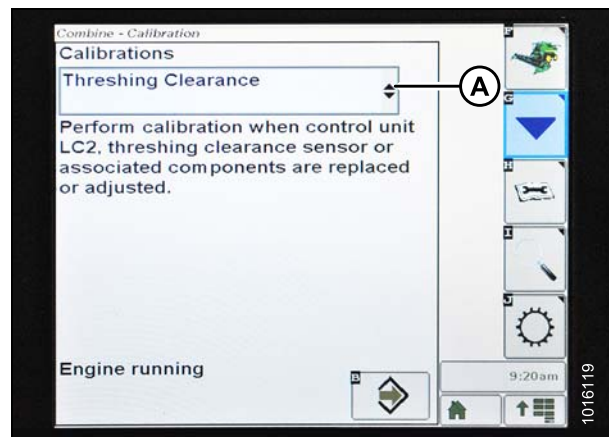


Figure 7.122: John Deere Combine Display

- Press the arrow (A) to cycle up through the calibration options and select FEEDER HOUSE FORE/AFT TILT RANGE.

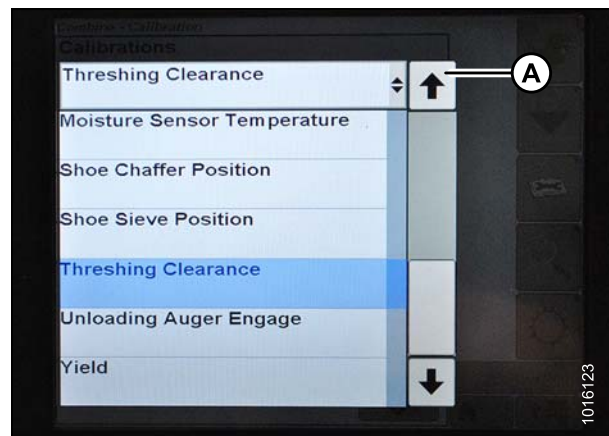


Figure 7.123: John Deere Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

7. Press the ENTER icon (A).

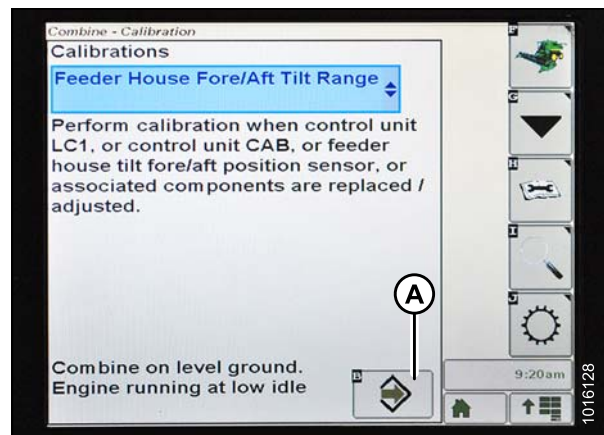


Figure 7.124: John Deere Combine Display

8. Follow the instructions that appear on the screen. As you proceed through the calibration process, the display will automatically update to show the next step.

**NOTE:**

If an error code appears during calibration, the sensor is out of voltage range and will require adjustment. Refer to [Checking Voltage Range from the Combine Cab \(John Deere S and T Series\)](#), page 198.

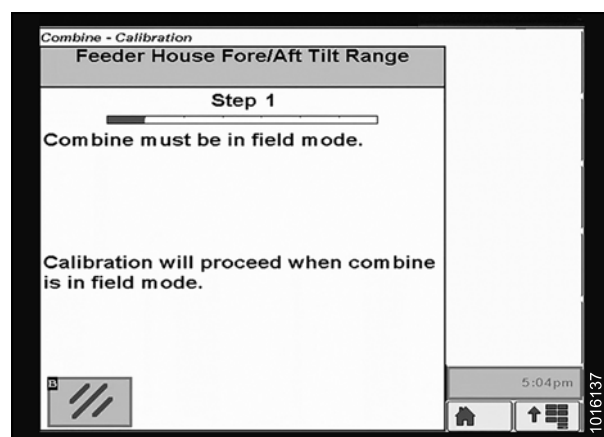


Figure 7.125: John Deere Combine Display



## 7.1.9 Lexion 500 Series Combines


### *Calibrating the Auto Header Height Control (Lexion 500 Series)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

#### **NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to D.
2. Use the '<' key (A) or '>' key (B) to select AUTO HEADER, and press the OK key (C). The 'E5' page displays whether the automatic header height is on or off.

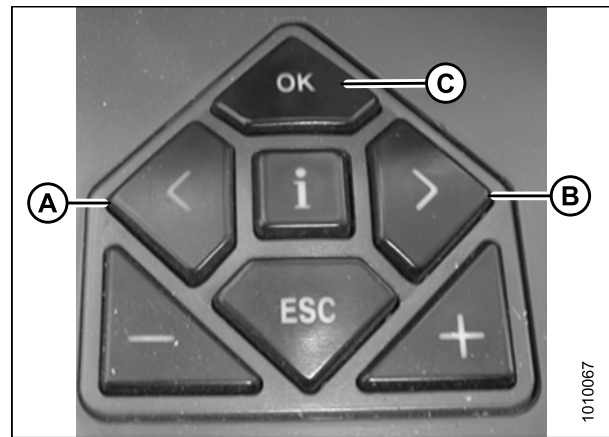

**Figure 7.126: Lexion Combine Controls**

3. Use the '-' key (A) or the '+' key (B) to turn the AHHC on, and press the OK key (C).
4. Engage the threshing mechanism and the header.

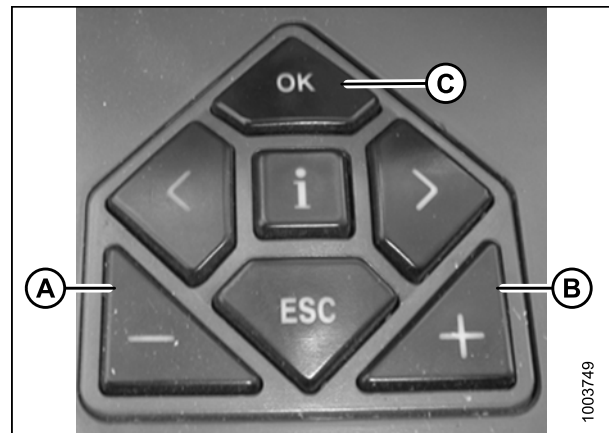

**Figure 7.127: Lexion Combine Controls**



## SETTING UP AUTO HEADER HEIGHT CONTROL

5. Use the '<' or '>' key to select CUTT.HEIGHT LIMITS, and press the OK key (C).
6. Follow the procedure displayed on the screen to program the upper and lower limits of the header into the CEBIS.

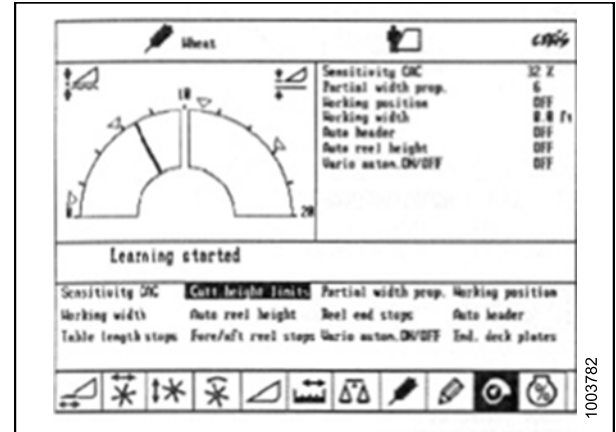


Figure 7.128: Lexion Combine Display

7. Use the '<' or '>' key to select SENSITIVITY CAC, and press the OK key (C).

**NOTE:**

Setting the sensitivity of the AHHC system impacts the reaction speed of the AHHC on the header.

8. Use the '-' key or the '+' key to change the setting of the reaction speed, and press the OK key (C).

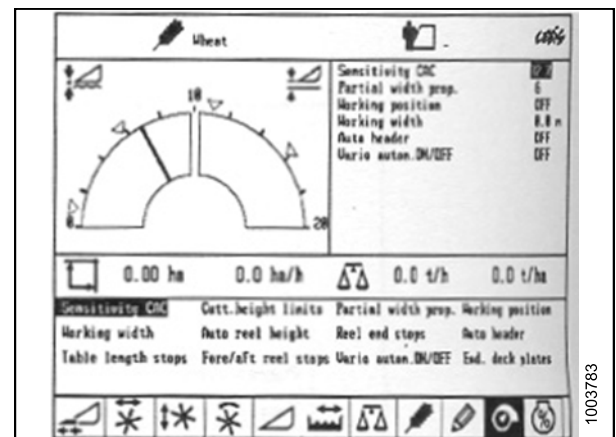


Figure 7.129: Lexion Combine Display

9. Use line (A) or value (B) to determine the sensitivity setting.

**NOTE:**

The setting can be adjusted from 0–100%. When sensitivity is adjusted to 0%, the signals from the sensing bands have no effect on the automatic cutting height adjustment. When sensitivity is adjusted to 100%, the signals from the sensing bands have maximum effect on the automatic cutting height adjustment. The recommended starting point is 50%.

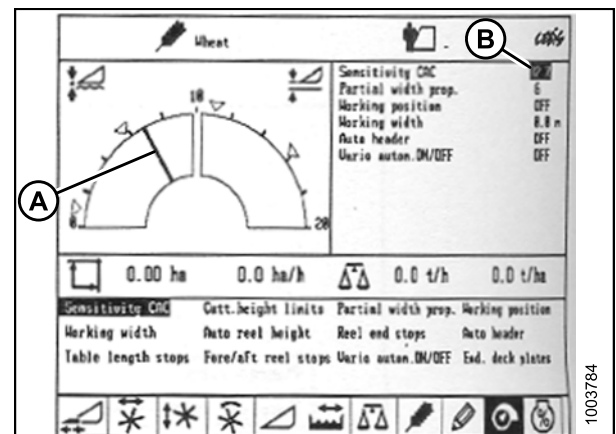


Figure 7.130: Lexion Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

### Setting Cutting Height (Lexion 500 Series)

Cutting heights can be programmed into the preset cutting height and auto contour systems. Use the preset cutting height system for cutting heights above 5.9 in. (150 mm), and use the auto contour system for cutting heights below 5.9 in. (150 mm).

#### Setting Preset Cutting Height (Lexion 500 Series)

#### CAUTION

Check to be sure all bystanders have cleared the area.

#### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Start the engine.
2. Activate the machine enable switch.
3. Engage the threshing mechanism.
4. Engage the header.
5. Briefly press button (A) in order to activate the auto contour system, or briefly press button (B) in order to activate the preset cutting height system.

#### NOTE:

Button (A) is used only with auto header height control (AHHC) function. Button (B) is used only with the return to cut function.



Figure 7.131: Joystick Buttons

6. Use the '<' key (C) or '>' key (D) to select the CUTTING HEIGHT page, and press the OK key (E).
7. Use the '-' key (A) or the '+' key (B) to set the desired cutting height. An arrow indicates the selected cutting height on the scale.

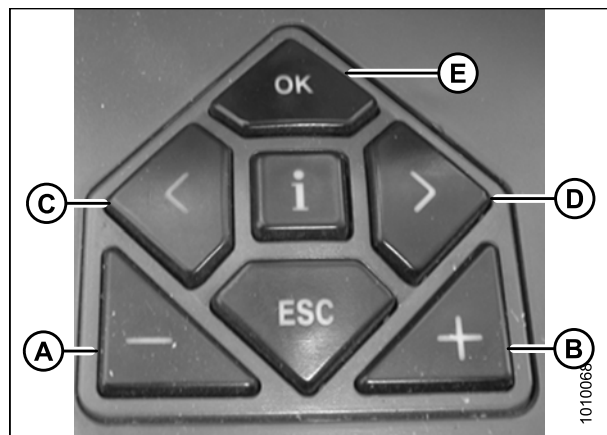


Figure 7.132: Lexion Combine Controls

## SETTING UP AUTO HEADER HEIGHT CONTROL

- Briefly press button (A) or button (B) in order to select the set point.
- Repeat Step 7., [page 210](#) for the set point.



Figure 7.133: Joystick Buttons

### Setting Cutting Height Manually (Lexion 500 Series)

#### CAUTION

Check to be sure all bystanders have cleared the area.

#### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

- Use button (A) to raise the header or button (B) to lower the header to the desired cutting height.
- Press and hold button (C) for three seconds to store the cutting height into the CEBIS (an alarm will sound when the new setting has been stored).
- Program a second set point, if desired, by using button (A) to raise the header or button (B) to lower the header to the desired cutting height, and briefly press button (C) to store the second set point into the CEBIS (an alarm will sound when the new setting has been stored).

#### NOTE:

For above the ground cutting, repeat Step 1., [page 211](#), and use button (D) instead of button (C) while repeating Step 2., [page 211](#).



Figure 7.134: Joystick Buttons

## SETTING UP AUTO HEADER HEIGHT CONTROL

### *Setting the Sensitivity of the Auto Header Height Control (Lexion 500 Series)*

Setting the sensitivity of the auto header height control (AHHC) system impacts the reaction speed of the AHHC on the header.


#### **NOTE:**

The upper and lower limits of the header must be programmed into the CEBIS before adjusting the sensitivity of the AHHC system. The setting can be adjusted from 0–100%. When sensitivity is adjusted to 0%, the signals from the sensing bands have no effect on the automatic cutting height adjustment. When sensitivity is adjusted to 100%, the signals from the sensing bands have maximum effect on the automatic cutting height adjustment. The recommended starting point is 50%.

#### **NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Use the '<' key (C) or the '>' key (D) to select SENSITIVITY CAC, and press the OK key (E).
2. Use the '-' key (A) or the '+' key (B) to change the reaction speed setting, and press the OK key (E).

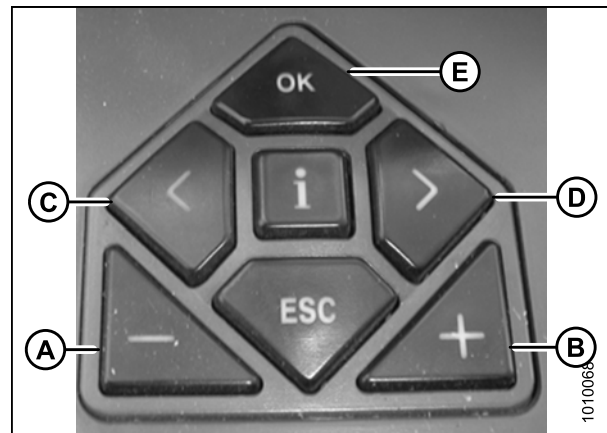

**Figure 7.135: Lexion Combine Controls**

3. Use line (A) or value (B) to determine the sensitivity setting.

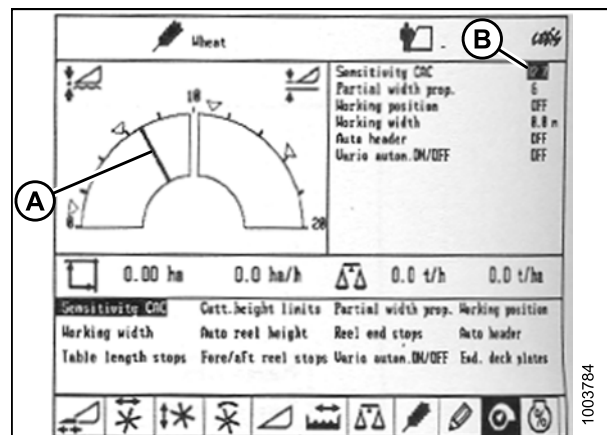

**Figure 7.136: Lexion Combine Display**

# SETTING UP AUTO HEADER HEIGHT CONTROL

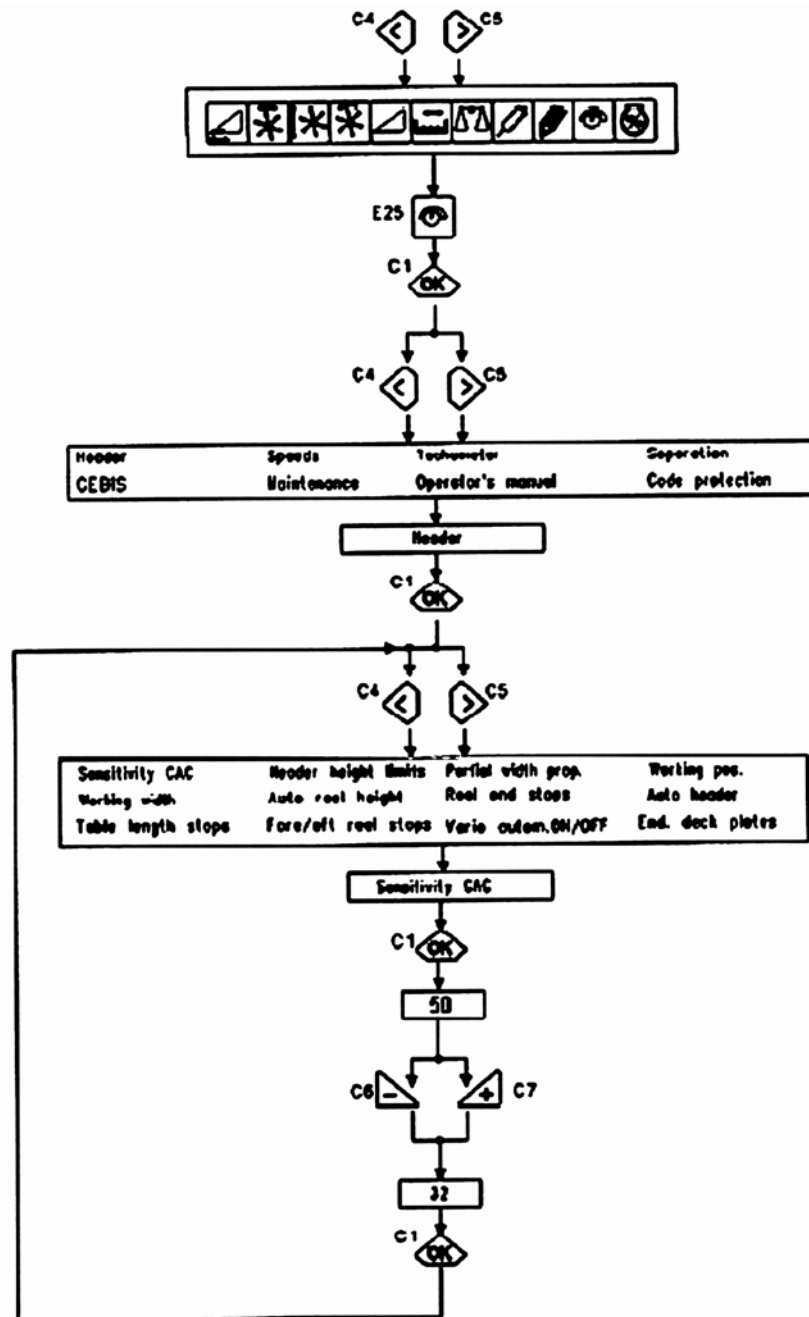


Figure 7.137: Flow Chart for Setting the Sensitivity of the Float Optimizer

1003798

## SETTING UP AUTO HEADER HEIGHT CONTROL


### *Adjusting Auto Reel Speed (Lexion 500 Series)*

The preset reel speed can be set when the automatic header functions are activated.

#### **NOTE:**


Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Use the '<' or '>' key to select REEL WINDOW. Window 'E15' will display the current advance or retard speed of the reel in relation to the ground speed.

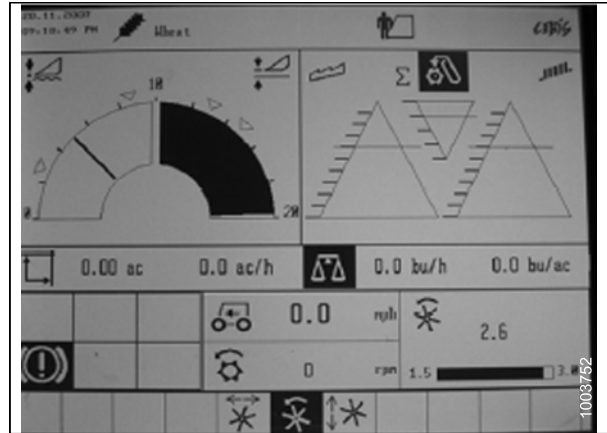

**Figure 7.138: Combine Display**

2. Press the OK key (C) to open the REEL SPEED window.
3. Use the '-' key (A) or the '+' key (B) to set the reel speed in relation to the current ground speed. Window 'E15' will display the selected reel speed.

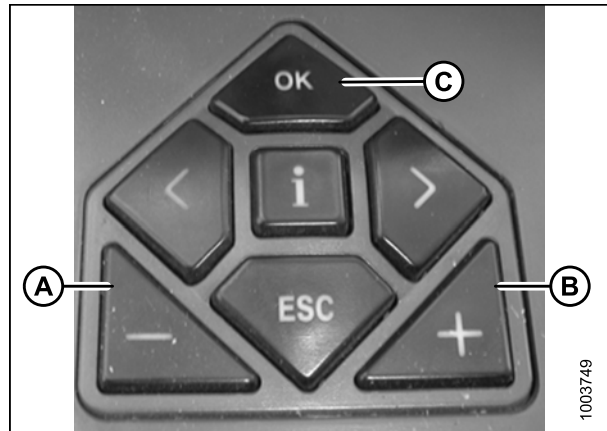

**Figure 7.139: Combine Controls**

4. Manually adjust the reel speed by rotating the rotary switch to the reel position (A), and then use the '-' or '+' key to set the reel speed.



**Figure 7.140: Combine Rotary Switch**

## SETTING UP AUTO HEADER HEIGHT CONTROL

- Press and hold button (A) or button (B) for three seconds to store the setting into the CEBIS (an alarm will sound when the new setting has been stored).

### NOTE:

Whenever button (A) or button (B) is pressed for three seconds, the current positions for reel speed and cutting height are stored.



Figure 7.141: Joystick Buttons

- Use the '<' or '>' key to select the REEL WINDOW. Window 'E15' will display the current advance or retard speed of the reel in relation to the ground speed.

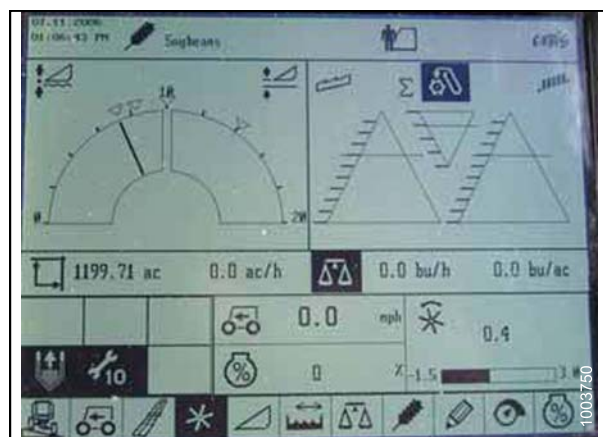


Figure 7.142: Combine Display

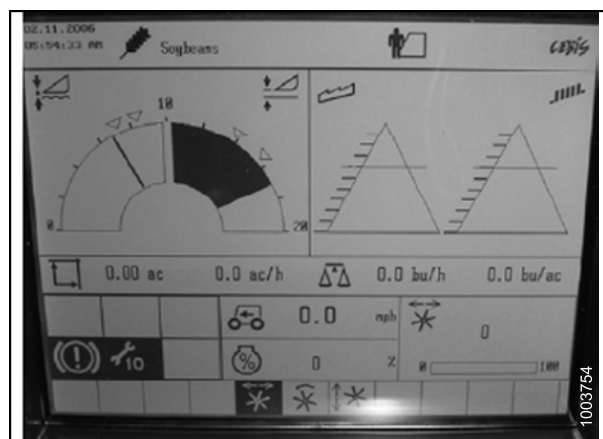


Figure 7.143: Combine Display




## SETTING UP AUTO HEADER HEIGHT CONTROL

7. Press the OK key (E), and use the '<' key (C) or the '>' key (D) to select the REEL FORE AND AFT window.
8. Use the '-' key (A) or the '+' key (B) to set the reel fore-aft position.

**NOTE:**

Joystick button (A) or button (B) also can be used to set the reel fore-aft position.

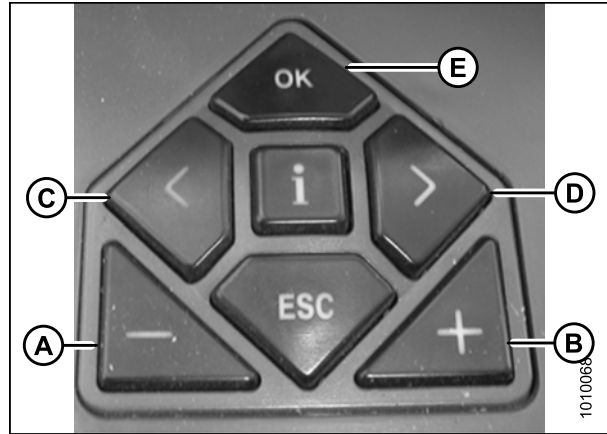

**Figure 7.144: Combine Controls**

9. Press and hold button (C) or button (D) for three seconds to store the setting into the CEBIS (an alarm will sound when the new setting has been stored).

**NOTE:**

Whenever button (C) or button (D) is pressed for three seconds, the current positions for reel speed and cutting height are stored.



**Figure 7.145: Joystick Buttons**

## 7.1.10 Lexion 600 and 700 Series Combines


### *Calibrating the Auto Header Height Control (Lexion 600 and 700 Series)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to D.
2. Ensure that the header float is unlocked (A).
3. Use control knob (A) to highlight the AUTO CONTOUR icon (B) and press control knob (A) to select it.

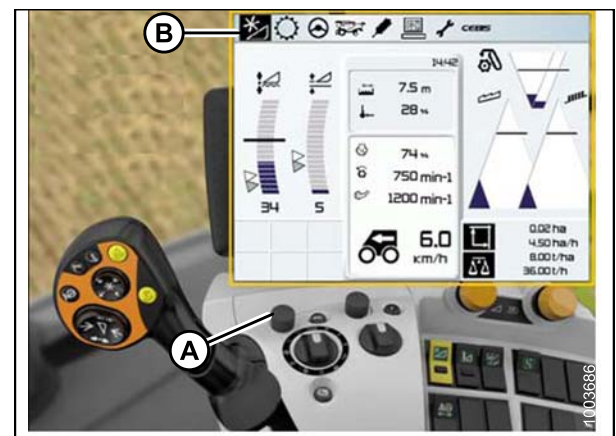

**Figure 7.146: Lexion Combine Display, Console, and Joystick Lever**


4. Use control knob (A) to highlight the icon that resembles a header with up and down arrows (not shown), and press control knob (A) to select it. The highlighted header icon (B) will be displayed on the screen.



**Figure 7.147: Lexion Combine Display, Console, and Joystick Lever**

## SETTING UP AUTO HEADER HEIGHT CONTROL

5. Use control knob (A) to highlight the icon that resembles a header with up and down arrows (C), and press control knob (A) to select it.

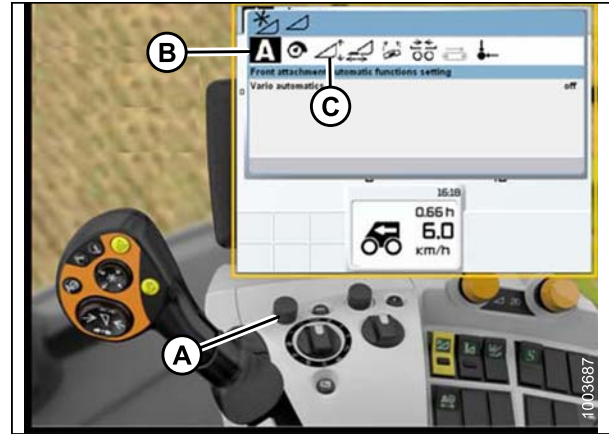

**Figure 7.148: Lexion Combine Display, Console, and Joystick Lever**

6. Use control knob (A) to highlight the icon that resembles a screwdriver (B).
7. Engage the combine separator and feeder house.
8. Press control knob (A) and a progress bar chart will appear.



**Figure 7.149: Lexion Combine Display, Console, and Joystick Lever**

9. Fully raise the feeder house and the progress bar chart will advance to 25% (A).
10. Fully lower the feeder house, and the progress bar chart will advance to 50%.
11. Fully raise the feeder house and the progress bar chart will advance to 75%.
12. Fully lower the feeder house, and the progress bar chart will advance to 100%.



**Figure 7.150: Lexion Combine Display, Console, and Joystick Lever**

## SETTING UP AUTO HEADER HEIGHT CONTROL

13. Ensure the progress bar chart displays 100% (A). The calibration procedure is now complete.

**NOTE:**

If the voltage is not within the range of 0.5–4.5 volts at any time throughout the calibration process, the monitor will indicate learning procedure not concluded.

**NOTE:**

If header float is set too light, an error message will appear. Back float off three full-turns of the adjuster bolts to adjust float to approximately 100–125 lb.



**Figure 7.151: Lexion Combine Display, Console, and Joystick Lever**

### *Setting Cutting Height (Lexion 600 and 700 Series)*

#### **CAUTION**

**Check to be sure all bystanders have cleared the area.**

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Lower the header to desired cutting height or ground pressure setting. The float indicator box should be set to 1.5.
2. Hold the left side of the header raise and lower switch (A) until you hear a ping.

**NOTE:**

You can set two different cutting heights.



**Figure 7.152: Lexion Combine Display, Console, and Joystick Lever**

### *Setting the Sensitivity of the Auto Header Height Control (Lexion 600 and 700 Series)*

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Use control knob (A) to highlight the HEADER/REEL icon (B), and press control knob (A) to select it. The HEADER/REEL dialog box opens.
2. Select HEADER icon.

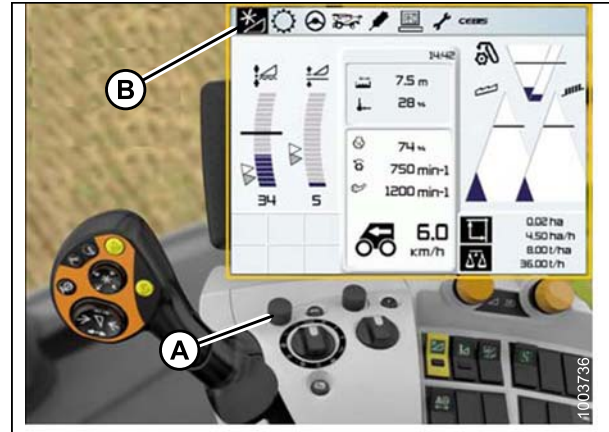


Figure 7.153: Lexion Combine Display, Console, and Joystick Lever

3. Select the FRONT ATTACHMENT PARAMETER SETTINGS icon (A). A list of settings appears.
4. Select SENSITIVITY CAC (B) from the list.



Figure 7.154: Lexion Combine Display, Console, and Joystick Lever

5. Select the SENSITIVITY CAC icon (A).

### NOTE:

To set the sensitivity, you will have to change the CUTTING HEIGHT ADJUSTMENT from the '0' default. The settings from 1–50 provide a faster response, whereas the settings from -1 to -50 provide a slower response. For best results, make adjustments in increments of five.

6. Increase the CUTTING HEIGHT ADJUSTMENT setting if the reaction time between the header and the float module is too slow while cutting on the ground, and decrease the CUTTING HEIGHT ADJUSTMENT setting if the reaction time between the header and the float module is too fast.
7. Increase the sensitivity if the header is lowered too slowly, and decrease the sensitivity if the header hits the ground too hard or is lowered too quickly.



Figure 7.155: Lexion Combine Display




## SETTING UP AUTO HEADER HEIGHT CONTROL

### *Adjusting Auto Reel Speed (Lexion 600 and 700 Series)*

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Use control knob (A) to highlight the HEADER/REEL icon (B), and press control knob (A) to select it. The HEADER/REEL dialog box opens.

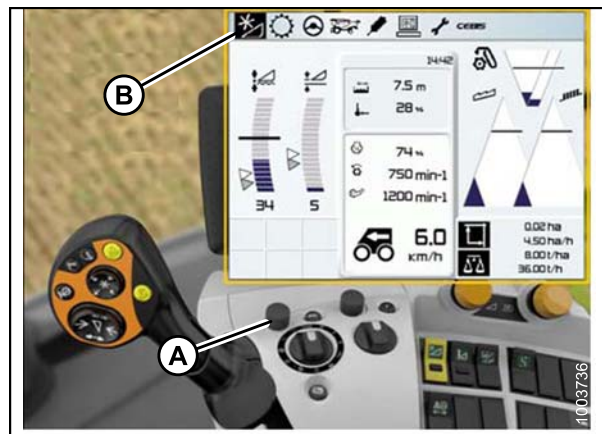

**Figure 7.156: Lexion Combine Display, Console, and Joystick Lever**

2. Use control knob (A) to select REEL SPEED (B), and adjust the reel speed (if you are NOT using Auto Reel Speed). A graph displays in the dialog box.



**Figure 7.157: Lexion Combine Display, Console, and Joystick Lever**

## SETTING UP AUTO HEADER HEIGHT CONTROL

3. Select ACTUAL VALUE (A) from the AUTO REEL SPEED dialog box (if you are using Auto Reel Speed). The ACTUAL VALUE dialog box indicates the auto reel speed.



Figure 7.158: Lexion Combine Display, Console, and Joystick Lever

4. Use control knob (A) to raise or lower the reel speed.

**NOTE:**

This option is only available at full throttle.



Figure 7.159: Lexion Combine Display, Console, and Joystick Lever

**NOTE:**

The ideal ground pressure—in most cases—is one number (on the float indicator box) above the header suspended off the ground. For example, if the float indicator needle (A) is positioned at 0 with the header suspended off the ground, then the ideal ground pressure will be achieved with the needle positioned at 1. Operating with heavier pressures can wear the cutterbar poly prematurely.

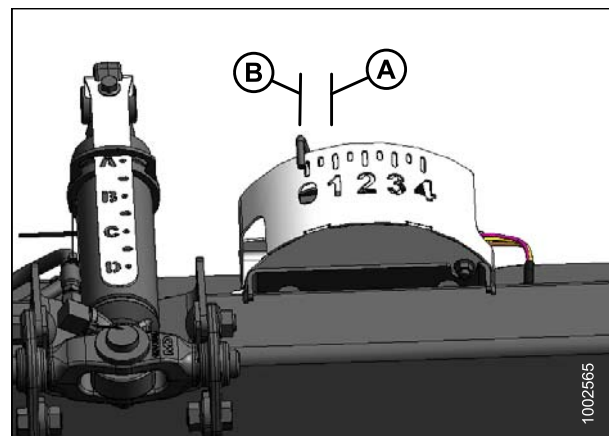


Figure 7.160: Float Indicator Box



## 7.1.11 New Holland Combines

### NOTE:

For New Holland CR models 6.80, 6.90, 7.90, 8.90, 9.90, and 10.90, refer to [7.1.12 New Holland Combines \(CR Series—Model Year 2015 and Later\)](#), page 233.

### Checking Voltage Range from the Combine Cab (New Holland)

### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



## CAUTION

Check to be sure all bystanders have cleared the area.

1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.
2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.

### NOTE:

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.


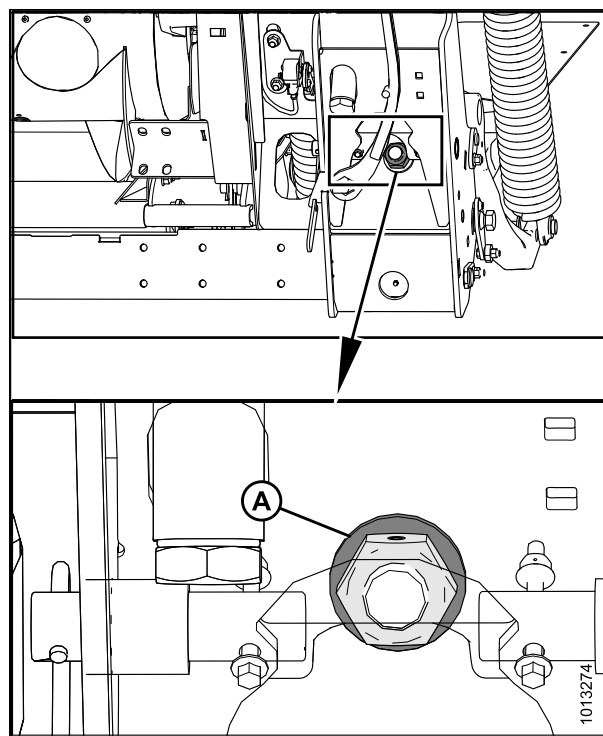


Figure 7.161: Float Lock


## SETTING UP AUTO HEADER HEIGHT CONTROL

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

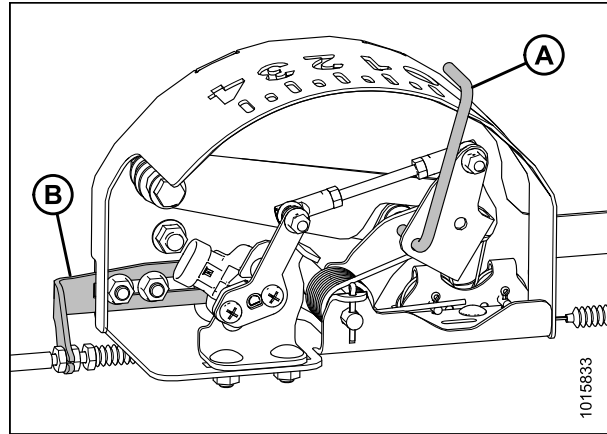


**Figure 7.162: Float Indicator box**

4. Ensure header float is unlocked.
5. Select DIAGNOSTICS (A) on the main page. The DIAGNOSTICS page displays.
6. Select SETTINGS. The SETTINGS page displays.

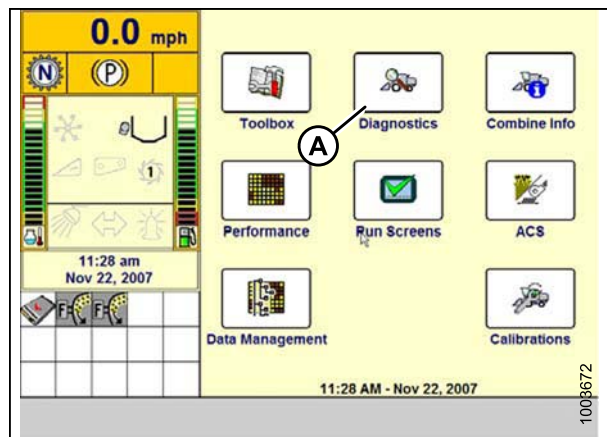

**Figure 7.163: New Holland Combine Display**

7. Select the GROUP drop-down arrow (A). The GROUP dialog box displays.

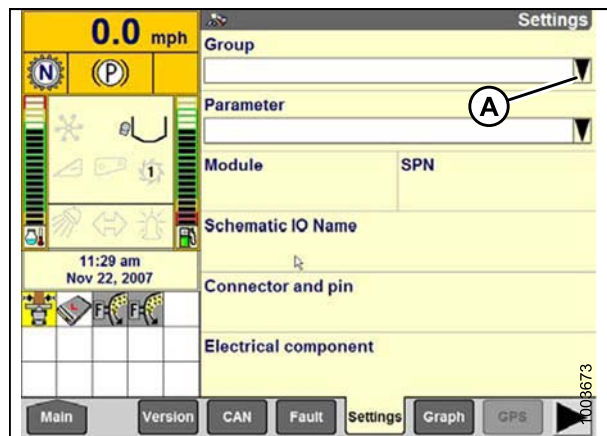

**Figure 7.164: New Holland Combine Display**

## SETTING UP AUTO HEADER HEIGHT CONTROL

8. Select HEADER HEIGHT/TILT(A). The PARAMETER page displays.

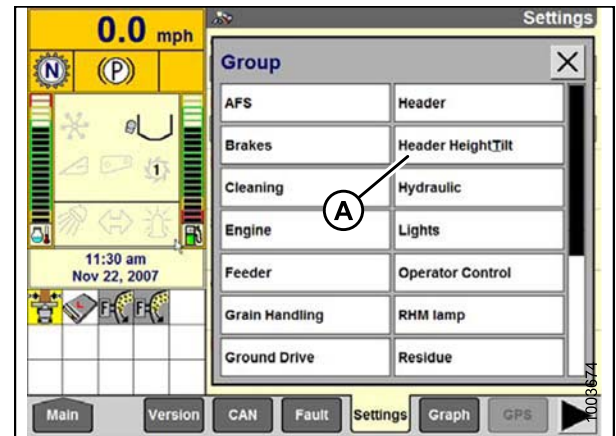


Figure 7.165: New Holland Combine Display

9. Select LEFT HEADER HEIGHT SEN (A), and then select GRAPH button (B). The exact voltage is displayed at the top of the page.
10. Raise and lower the header to see the full range of voltage readings.
11. Adjust the voltage limits (refer to [Adjusting Voltage Limits \(One-Sensor System\)](#), page 148) if the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient (refer to Table 7.1 [Combine Voltage Limits](#), page 143).

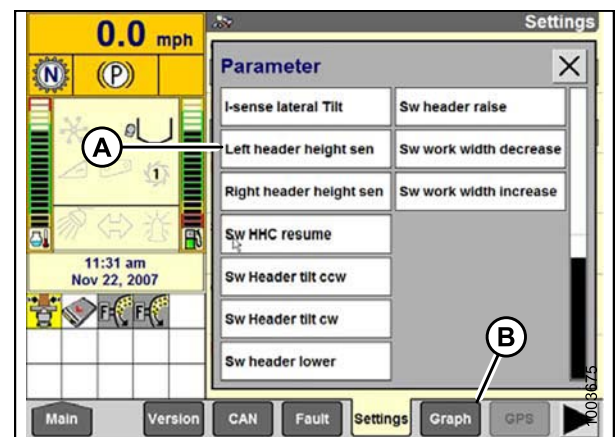


Figure 7.166: New Holland Combine Display

### Engaging the Auto Header Height Control (New Holland CR/CX Series)

#### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Select HEADER LATERAL FLOAT on the combine display, and press ENTER.
2. Use the up and down navigation keys to move between options, and select INSTALLED.



Figure 7.167: New Holland Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

3. Select HEADER AUTOFLOAT, and press ENTER.
4. Use the up and down navigation keys to move between options, and select INSTALLED.



Figure 7.168: New Holland Combine Display

### *Calibrating the Auto Header Height Control (New Holland CR/CX Series)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



#### **CAUTION**

**Check to be sure all bystanders have cleared the area.**

Check the following conditions before starting the header calibration procedure:

- The header is attached to the combine.
- The combine is on level ground, with the header level to the ground.
- The header is on down stops, and the center-link is set to D.
- The engine is running.
- The combine is not moving.
- No faults have been received from the Header Height Controller (HHC) module.
- Header/feeder is disengaged.
- Lateral flotation buttons are NOT pressed.
- ESC key is NOT pressed.

To calibrate the AHHC, follow these steps:

1. Select CALIBRATION on the combine display, and press the right arrow navigation key to enter the information box.

## SETTING UP AUTO HEADER HEIGHT CONTROL

2. Select HEADER (A), and press ENTER. The CALIBRATION dialog box opens.

**NOTE:**

You can use the up and down navigation keys to move between options.

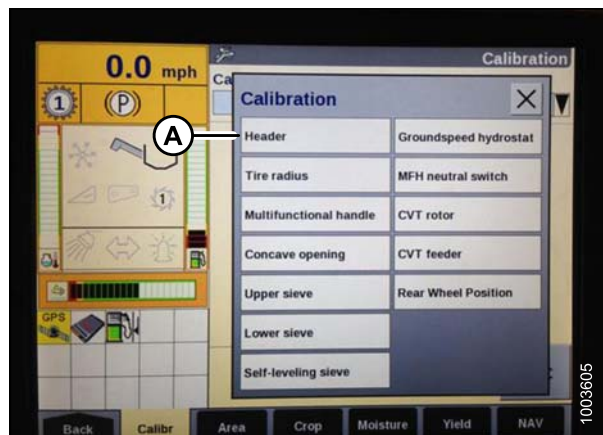


Figure 7.169: New Holland Combine Display

3. Follow the calibration steps in the order in which they appear in the dialog box. As you proceed through the calibration process, the display will automatically update to show the next step.

**NOTE:**

Pressing the ESC key during any of the steps or letting the system sit idle for more than three minutes will cause the calibration procedure to stop.

**NOTE:**

Refer to your combine operator's manual for an explanation of any error codes.



Figure 7.170: New Holland Combine Display

4. When all steps have been completed, CALIBRATION SUCCESSFUL message is displayed on the page. Exit the CALIBRATION menu by pressing the ENTER or ESC key.

**NOTE:**

If float was set heavier to complete ground calibration procedure, adjust to recommended operating float after the calibration is complete.

5. If the unit does not function properly, conduct the maximum stubble height calibration.

### Calibrating Maximum Stubble Height

This procedure describes how to calibrate the area counter to stop or start counting at the correct height. Program the header to a height that will never be reached while cutting. The area counter will stop counting when the header is above the programmed height, and will begin counting when the header is below the programmed height.

Select the height of the header that corresponds to the description above.

## SETTING UP AUTO HEADER HEIGHT CONTROL

### IMPORTANT:

- If the value is set too low, area may NOT be counted since the header is sometimes raised above this threshold although the combine is still cutting.
- If the value is set too high, the area counter will keep counting even when the header is raised (but below this threshold) and the combine is no longer cutting crop.

### CAUTION

Check to be sure all bystanders have cleared the area.

1. Select the MAXIMUM STUBBLE HEIGHT calibration dialog box. As you proceed through the calibration process, the display will automatically update to show the next step.

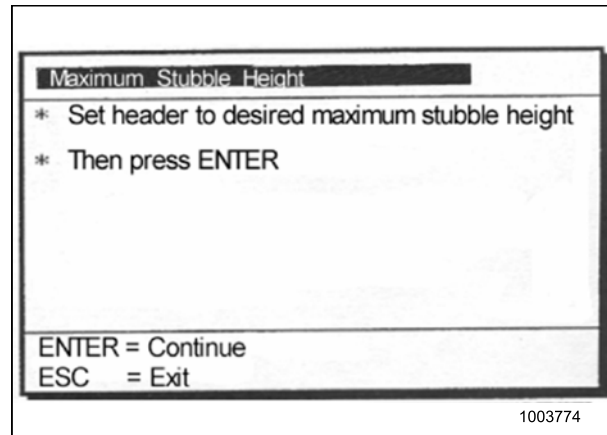


Figure 7.171: New Holland Calibration Dialog Box

2. Move header to the correct position using the header up or down control switch on the multifunction handle.
3. Press ENTER to continue. As you proceed through the calibration process, the display will automatically update to show the next step.
4. Press ENTER or ESC to close the calibration page. The calibration is now complete.

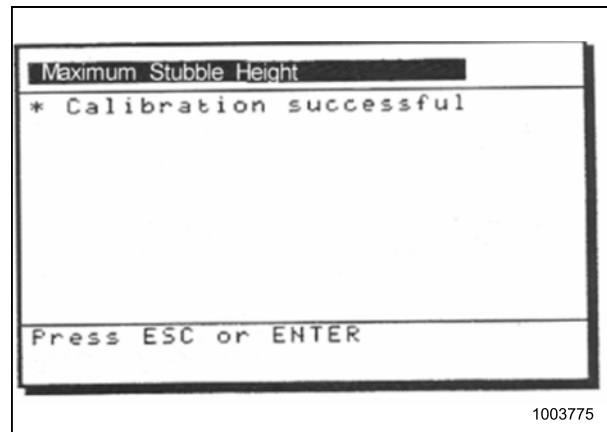


Figure 7.172: New Holland Calibration Dialog Box

### *Adjusting Header Raise Rate (New Holland CR/CX Series)*

If necessary, the header raise rate (the first speed on the HEADER HEIGHT rocker switch of the multifunctional handle) can be adjusted.

### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Select HEADER RAISE RATE on the combine display.
2. Use the + or – buttons to change the setting.
3. Press ENTER to save the new setting.

**NOTE:**

The raise rate can be changed from 32–236 in steps of 34. The factory setting is 100.

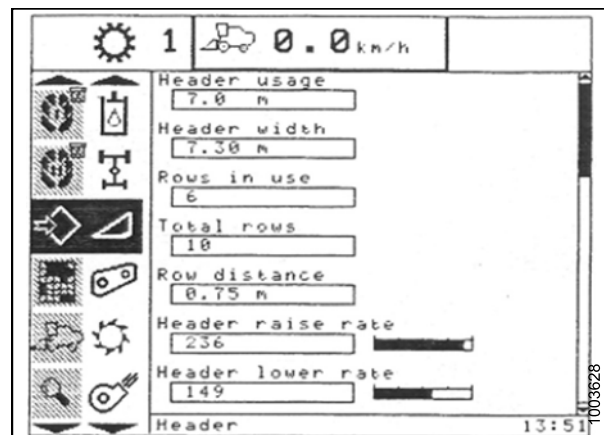


Figure 7.173: New Holland Combine Display

### *Setting the Header Lower Rate to 50 (New Holland CR/CX Series)*

If necessary, the header lower rate (the automatic header height control button or second speed on the header height rocker switch of the multi-function handle) can be adjusted.

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Select HEADER LOWER RATE on the combine display.
2. Use the + or – buttons to change the setting to 50.
3. Press ENTER to save the new setting.

**NOTE:**

The lower rate can be changed from 2–247 in steps of 7. It is factory-set to 100.

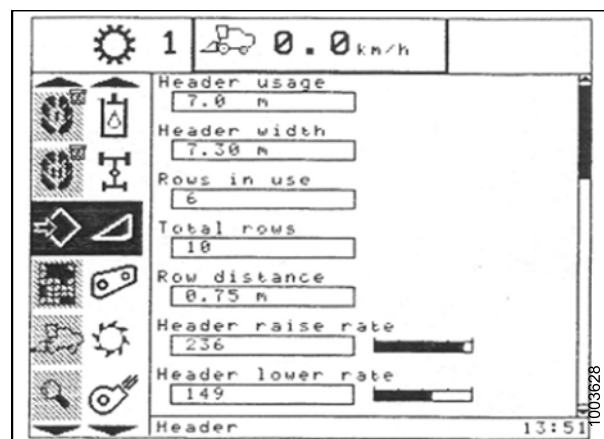


Figure 7.174: New Holland Combine Display

### *Setting the Sensitivity of the Auto Header Height Control to 200 (New Holland CR/CX Series)*

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



## CAUTION

Check to be sure all bystanders have cleared the area.



## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Engage threshing and feeder house.
2. Select HEIGHT SENSITIVITY on the combine display screen.
3. Use the + or – buttons to change the setting to 200.
4. Press ENTER to save the new setting.

**NOTE:**

The sensitivity can be changed from 10–250 in steps of 10. It is factory-set to 100.

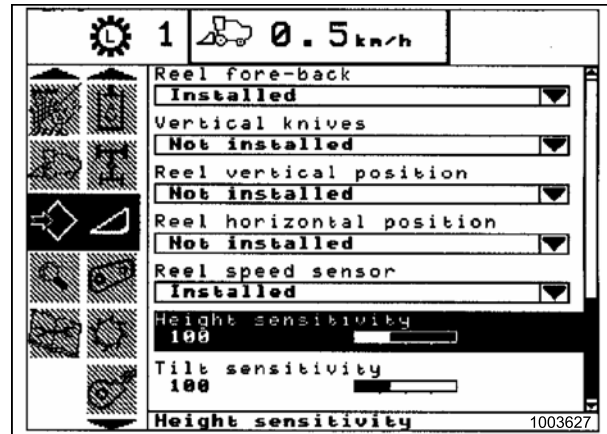


Figure 7.175: New Holland Combine Display

### *Setting Preset Cutting Height (New Holland CR/CX Series)*

To set the preset cutting height, follow these steps:

**NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Engage the threshing mechanism and the feeder with switches (A) and (B).
2. Set HEADER MEMORY rocker switch (D) in STUBBLE HEIGHT/AUTOFLOAT MODE position (A) or (B).
3. Lower the header to the desired cutting height using the HEADER HEIGHT AND HEADER LATERAL FLOTATION rocker switch (C).
4. Press AUTOMATIC HEADER HEIGHT CONTROL button (E) for a minimum of two seconds to store the height position. A beep will confirm the setting.

**NOTE:**

It is possible to store two different header height values by using HEADER MEMORY rocker switch (D) in STUBBLE HEIGHT/AUTOFLOAT MODE position (A) or (B).

5. To change one of the memorized header height set points while the combine is in use, use the HEADER HEIGHT AND HEADER LATERAL FLOTATION rocker switch (C) (slow up/down) to raise or lower header to the desired value. Press the AUTOMATIC HEADER HEIGHT CONTROL button (E) for a minimum of 2 seconds to store the new height position. A beep will confirm setting.

**NOTE:**

Do not press too hard on AUTOMATIC HEADER HEIGHT CONTROL button (E), or float mode will be disengaged.

**NOTE:**

It is not necessary to press rocker switch (D) again after adjusting.

**NOTE:**

The ideal ground pressure—in most cases—is one number (on the float indicator box) above the header suspended off the ground. For example, if the float indicator needle (A) is positioned at 0 with the header suspended off the ground, then the ideal ground pressure will be achieved with the needle positioned at 1. Operating with heavier pressures can wear the cutterbar poly prematurely.

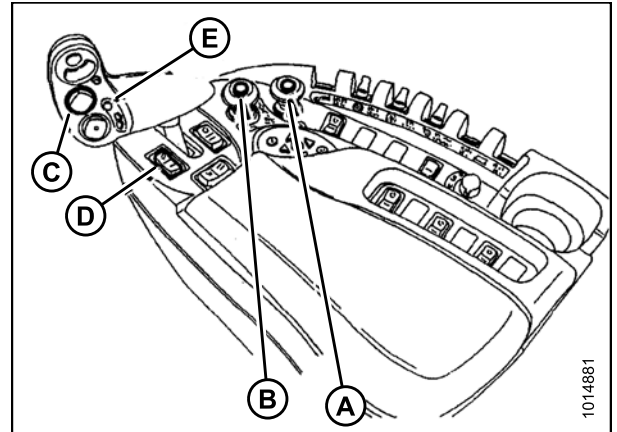


Figure 7.176: New Holland Combine Controls

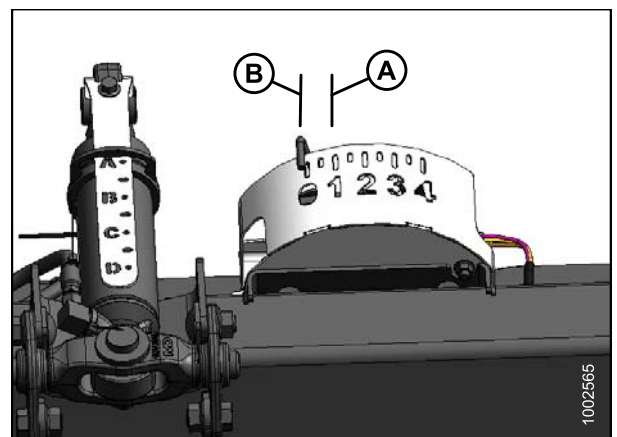


Figure 7.177: Float Indicator Box

## SETTING UP AUTO HEADER HEIGHT CONTROL


### *Configuring Reel Fore-Aft, Header Tilt, and Header Type (New Holland CR Series)*

This procedure applies only to 2016 New Holland CR models 6.90, 7.90, 8.90, and 9.90.

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Simultaneously press both the UNLOAD (A) and RESUME (B) buttons on the hydro handle.

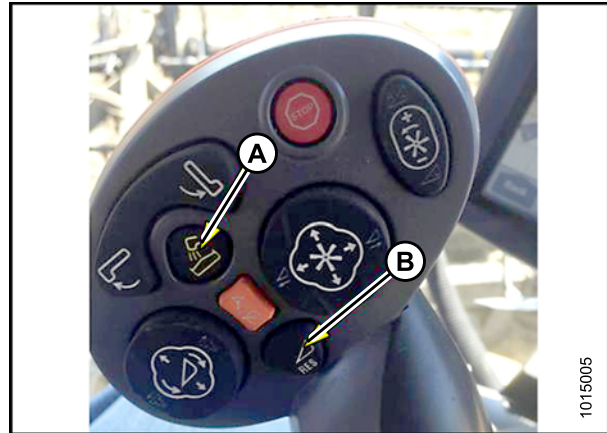


**Figure 7.178: New Holland Combine Controls**

2. On the HEAD 1 page, change the CUTTING TYPE from FLEX to PLATFORM as shown at (A).



**Figure 7.179: New Holland Combine Display**

3. On the HEAD 2 page, change HEADER SUB TYPE from DEFAULT to 80/90 as shown at (A).

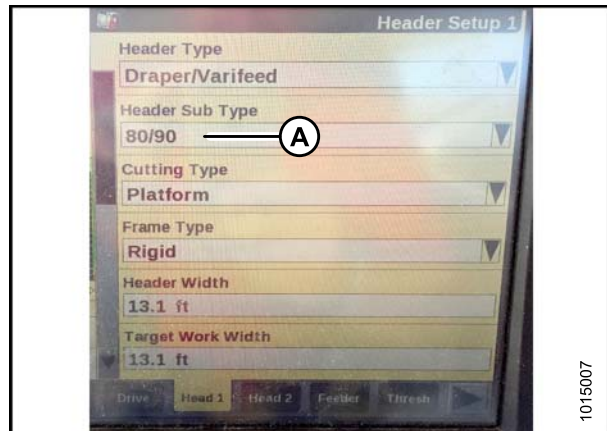

**Figure 7.180: New Holland Combine Display**

## SETTING UP AUTO HEADER HEIGHT CONTROL

There are now two different buttons for ON GROUND presets. The toggle switch that was present on previous models is now configured as shown at right. MacDon headers only require the first two buttons (A and B). The third button down (C) is not configured.

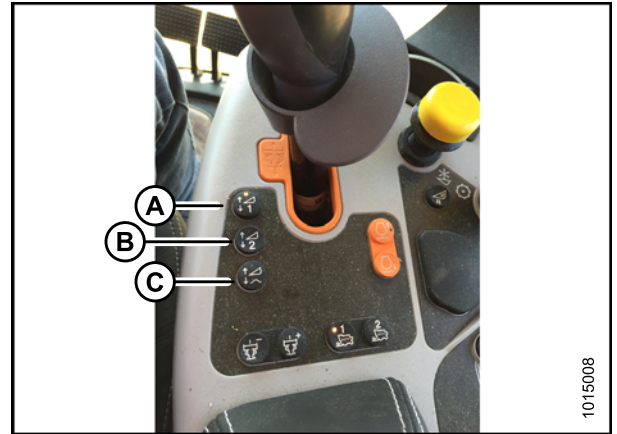


Figure 7.181: New Holland Combine Controls

### 7.1.12 New Holland Combines (CR Series—Model Year 2015 and Later)

This section applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90). For other New Holland combine models, refer to [7.1.11 New Holland Combines, page 223](#).

#### *Checking Voltage Range from the Combine Cab (New Holland CR Series)*

##### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

##### **CAUTION**

**Check to be sure all bystanders have cleared the area.**


1. Position the header 6 in. (150 mm) above the ground, and unlock the float module float.

## SETTING UP AUTO HEADER HEIGHT CONTROL

2. Check that float lock linkage is on down stops (washer [A] cannot be moved) at both locations.


**NOTE:**

If the header is not on down stops during the next two steps, the voltage may go out of range during operation causing a malfunction of the AHHC system.

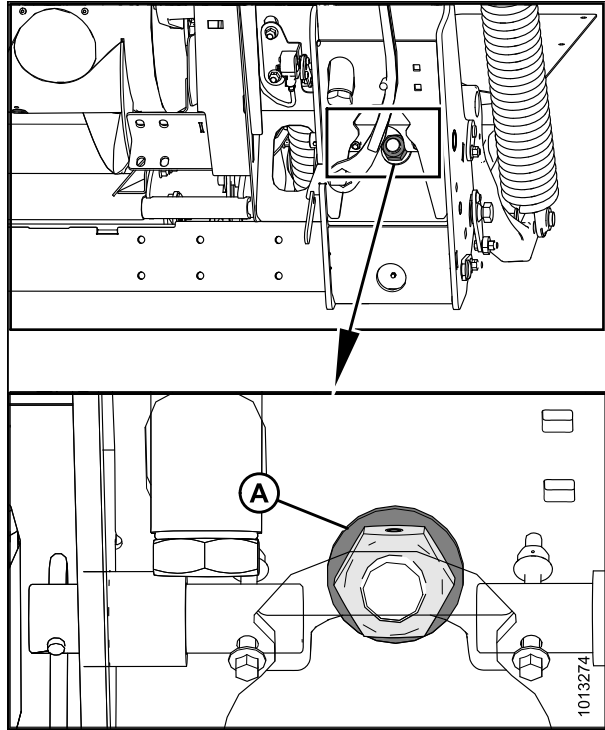

**Figure 7.182: Float Lock**

3. Adjust the cable take-up bracket (B) (if necessary) until the pointer (A) on the float indicator is on the 0.

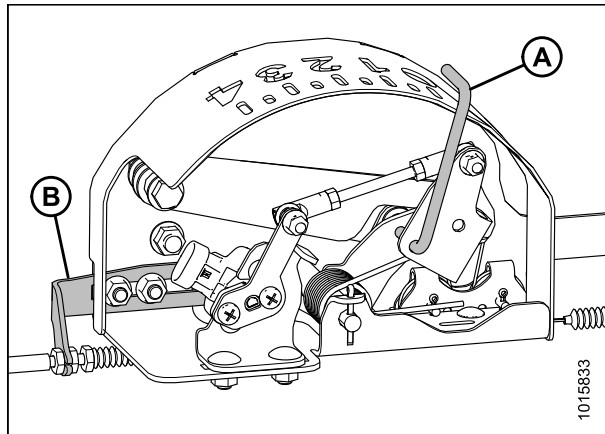

**Figure 7.183: Float Indicator box**

## SETTING UP AUTO HEADER HEIGHT CONTROL

4. Ensure header float is unlocked.
5. Select DIAGNOSTICS (A) on the main page. The DIAGNOSTICS page displays.

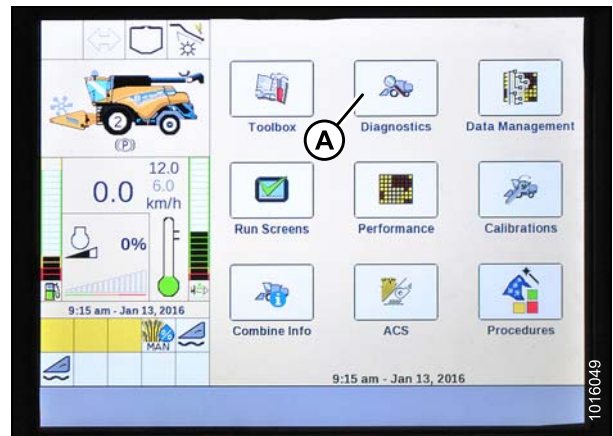


Figure 7.184: New Holland Combine Display

6. Select SETTINGS (A). The SETTINGS page displays.



Figure 7.185: New Holland Combine Display

7. Select HEADER HEIGHT/TILT (A) from the GROUP drop-down menu.
8. Select HEADER HEIGHT SENS. L (B). from the PARAMETER drop-down menu.



Figure 7.186: New Holland Combine Display



## SETTING UP AUTO HEADER HEIGHT CONTROL

9. Select GRAPH (A). The exact voltage (B) is displayed at the top of the page.
10. Raise and lower the header to see the full range of voltage readings.
11. Adjust the voltage limits (refer to [Adjusting Voltage Limits \(One-Sensor System\)](#), page 148) if the sensor voltage is not within the low and high limits or if the range between the low and high limits is insufficient (refer to Table [7.1 Combine Voltage Limits](#), page 143).

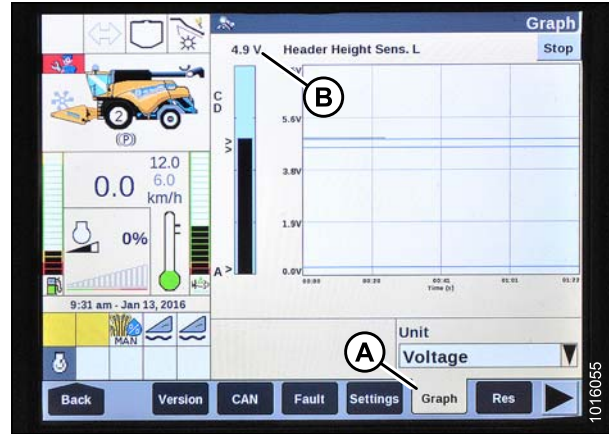


Figure 7.187: New Holland Combine Display

### Engaging the Auto Header Height Control (New Holland CR Series)

This procedure applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90).

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle.

#### NOTE:

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.

1. Ensure center-link is set to D.
2. Select TOOLBOX (A) on the main page. The TOOLBOX page displays.

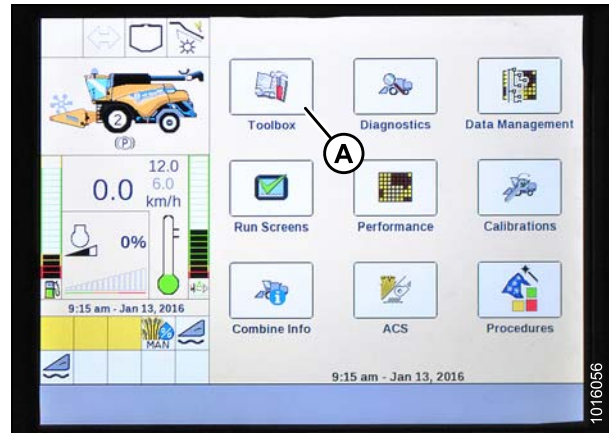


Figure 7.188: New Holland Combine Display



## SETTING UP AUTO HEADER HEIGHT CONTROL

3. Simultaneously press both the UNLOAD (A) and RESUME (B) buttons on the hydro handle.

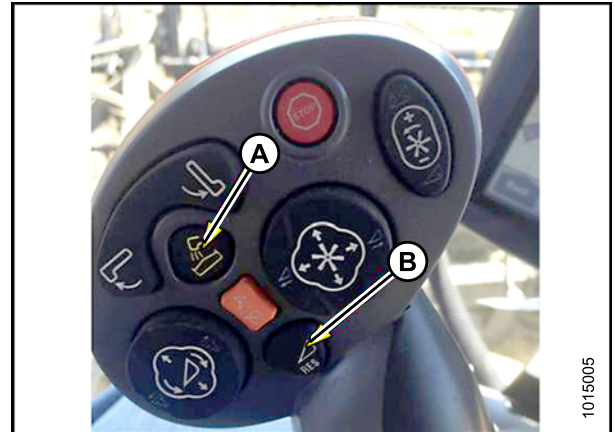


Figure 7.189: New Holland Combine Controls

4. Select HEAD 1 (A). The HEADER SETUP 1 page displays.
5. Select the CUTTING TYPE drop-down arrow (B) and change the CUTTING TYPE to PLATFORM (C).

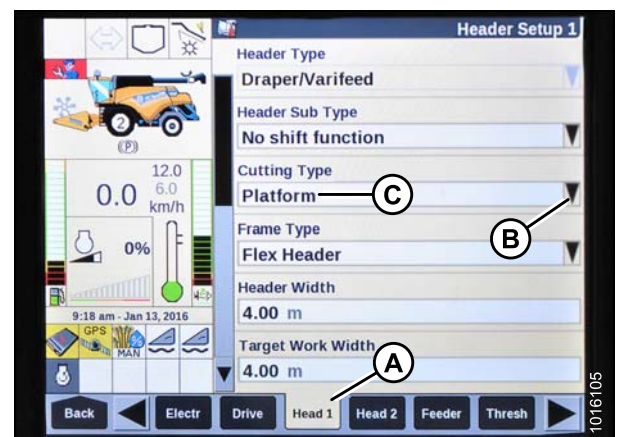


Figure 7.190: New Holland Combine Display

6. Select the HEADER SUB TYPE drop-down arrow (A). The HEADER SUB TYPE dialog box displays.



Figure 7.191: New Holland Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

7. Select 80/90 (A).



Figure 7.192: New Holland Combine Display

8. Select HEAD 2 (A). The HEADER SETUP 2 page displays.



Figure 7.193: New Holland Combine Display

9. Select the AUTOFLOAT drop-down arrow and set AUTOFLOAT to INSTALLED (A).
10. Select the AUTO HEADER LIFT drop-down arrow and set AUTO HEADER LIFT to INSTALLED (B).

### NOTE:

With AUTO HEADER LIFT installed and AHHC engaged, the header will lift up automatically when you pull back on the GSL.

11. Set the values for MANUAL HHC RAISE RATE (C) and MANUAL HHC LOWER RATE (D) for best performance according to ground conditions.



Figure 7.194: New Holland Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

12. Set the values for HHC HEIGHT SENSITIVITY (A) and HHC TILT SENSITIVITY (B) for best performance according to ground conditions.

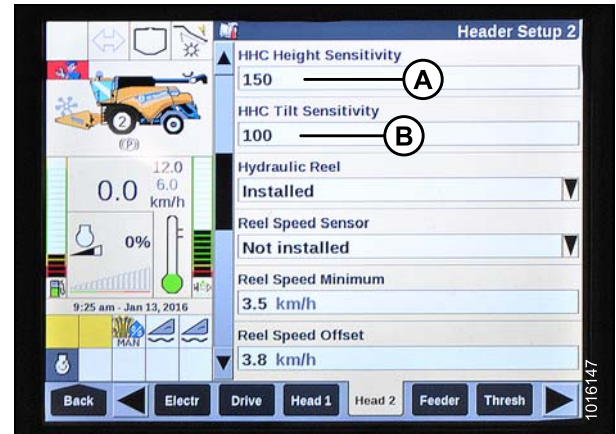


Figure 7.195: New Holland Combine Display

### *Calibrating the Auto Header Height Control (New Holland CR Series)*

For best performance of the auto header height control (AHHC), perform these procedures with the center-link set to D. When setup and calibration are complete, adjust the center-link back to desired header angle. Refer to Header Angle in the header operator's manual for instructions.

#### **NOTE:**

Changes may have been made to the combine controls or display since this document was published. Refer to the combine operator's manual for updates.



### **CAUTION**

**Check to be sure all bystanders have cleared the area.**

Check the following conditions before starting the header calibration procedure:

- The header is attached to the combine.
- The combine is on level ground, with the header level to the ground.
- The header is on down stops, and the center-link is set to D.
- The engine is running.
- The combine is not moving.
- No faults have been received from the Header Height Controller (HHC) module.
- Header/feeder is disengaged.
- Lateral flotation buttons are NOT pressed.
- ESC key is NOT pressed.

To calibrate the AHHC, follow these steps:

## SETTING UP AUTO HEADER HEIGHT CONTROL

1. Select CALIBRATIONS (A) on the main page. The CALIBRATION page displays.

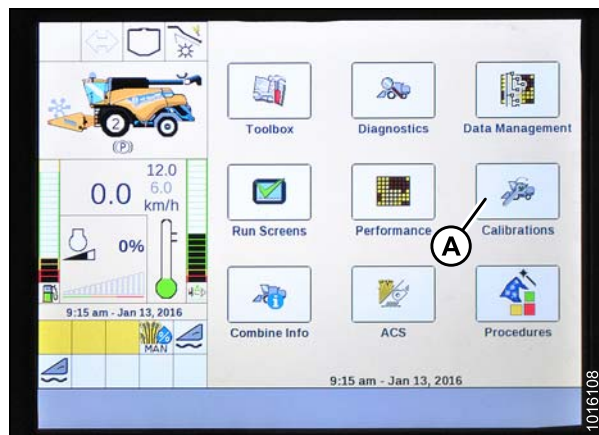


Figure 7.196: New Holland Combine Display

2. Select the CALIBRATION drop-down arrow (A).



Figure 7.197: New Holland Combine Display

3. Select HEADER (A) from the list of calibration options.



Figure 7.198: New Holland Combine Display



## SETTING UP AUTO HEADER HEIGHT CONTROL

- Follow the calibration steps in the order in which they appear on the screen. As you proceed through the calibration process, the display will automatically update to show the next step.

### NOTE:

Pressing the ESC key during any of the steps or letting the system sit idle for more than three minutes will cause the calibration procedure to stop.

### NOTE:

Refer to your combine operator's manual for an explanation of any error codes.

- When all steps have been completed, CALIBRATION COMPLETED message is displayed on the screen.

### NOTE:

If float was set heavier to complete ground calibration procedure, adjust to recommended operating float after the calibration is complete.



Figure 7.199: New Holland Combine Display



Figure 7.200: New Holland Combine Display

### Setting Auto Height (New Holland CR Series)

This procedure applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90).

The console has two buttons used for auto height presets. The toggle switch that was present on previous models is now configured as shown at right. MacDon headers only require the first two buttons (A and B). The third button (C) is not configured.



### CAUTION

Check to be sure all bystanders have cleared the area.

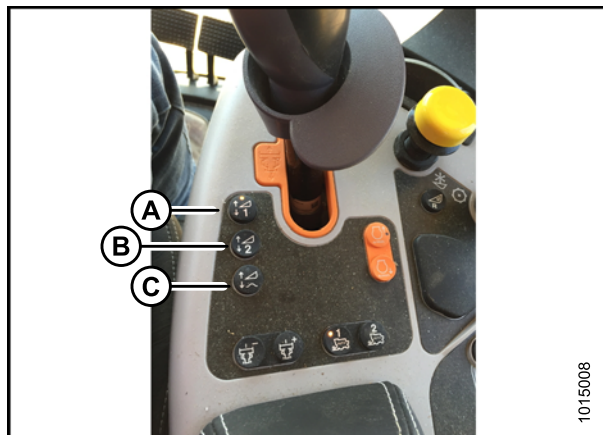


Figure 7.201: New Holland Combine Controls

To set the auto height, follow these steps:

- Engage separator and header.

## SETTING UP AUTO HEADER HEIGHT CONTROL

2. Select RUN SCREENS (A) on the main page.

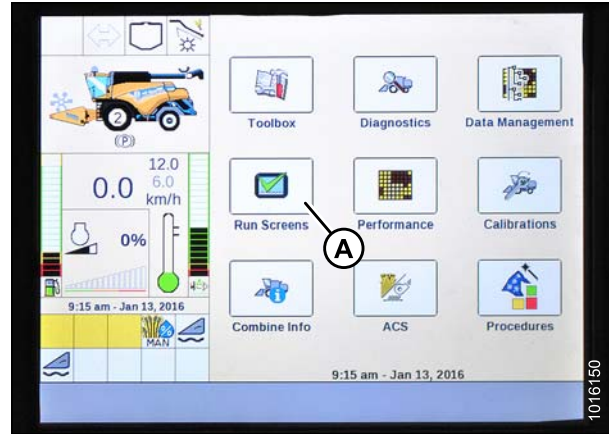


Figure 7.202: New Holland Combine Display

3. Select the RUN tab that shows MANUAL HEIGHT.

### NOTE:

The MANUAL HEIGHT field may appear on any of the RUN tabs. When an auto height set point button is pressed, the display will change to AUTO HEIGHT (A).

4. Lower the header to the ground.
5. Select one of the auto height set point buttons shown in Figure 7.201: *New Holland Combine Controls, page 241*.
  - Press the SET 1 button for a light ground setting (1 on the float indicator box).
  - Press the SET 2 button for a heavier ground setting (2 on the float indicator box).

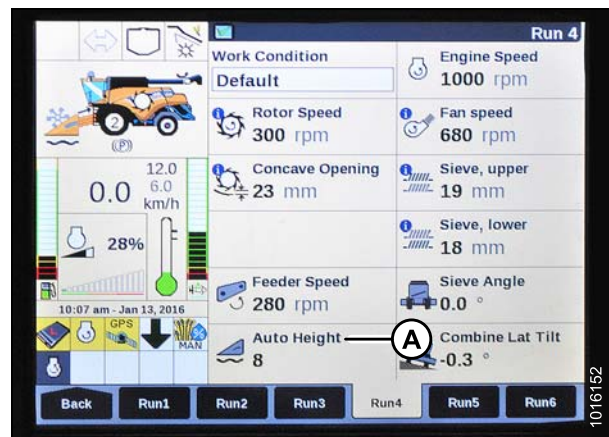


Figure 7.203: New Holland Combine Display

### Setting Maximum Work Height (New Holland CR Series)

This procedure applies only to 2015 and later CR models (6.80, 6.90, 7.90, 8.90, 9.90, and 10.90).

1. Select TOOLBOX (A) on the main page. The TOOLBOX page displays.

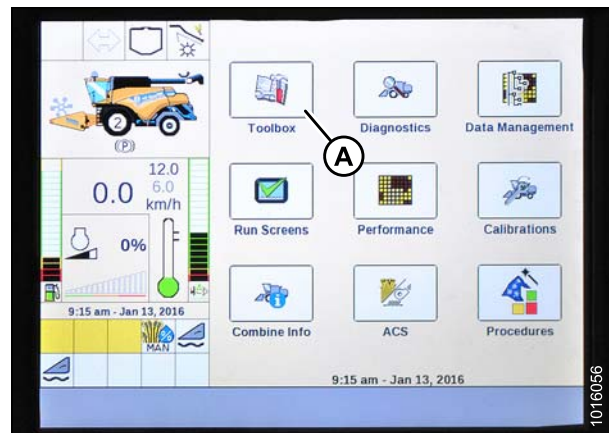


Figure 7.204: New Holland Combine Display

## SETTING UP AUTO HEADER HEIGHT CONTROL

2. Select FEEDER (A). The FEEDER SETUP page displays.
3. Select the MAXIMUM WORK HEIGHT field (B).

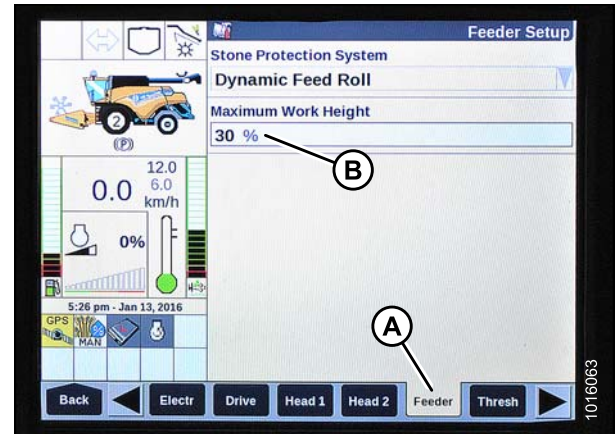


Figure 7.205: New Holland Combine Display

4. Set MAXIMUM WORK HEIGHT to desired value.
5. Press SET and then press ENTER.



Figure 7.206: New Holland Combine Display

### 7.1.13 Sensor Operation

The position sensors supplied with the auto header height control (AHC) system are hall-effect sensors containing sealed connectors. Normal operating signal voltages for the sensors fall between 10% (0.5VDC) and 90% (4.5VDC). An increase in sensor voltage correlates to an increase in header height.

Any sensor error results in a 0 V signal, which indicates either a faulty sensor or lack of supply voltage.

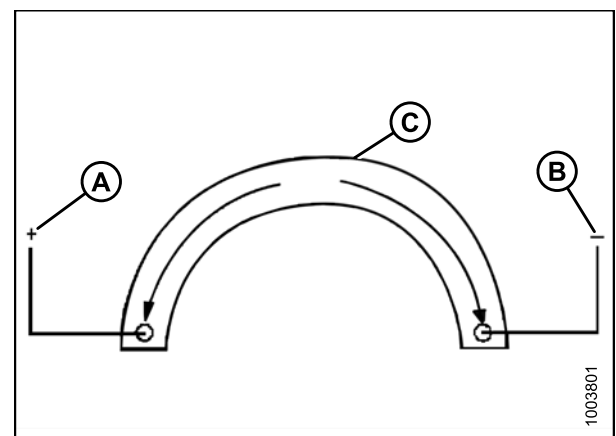


Figure 7.207: Power, Ground, and Signal Wires





## 8 Setting up Reel Height Sensor

### 8.1 Manually Checking Voltage Range

The output voltage range of the auto reel height sensor can be checked from inside the combine. Refer to the combine operator's manual. To check the voltage range of the auto reel height sensor manually, follow these steps:

#### CAUTION

Check to be sure all bystanders have cleared the area.

#### IMPORTANT:

To measure the output voltage of the reel height sensor, the combine needs to be turned ON and supplying power to the sensor. Always engage the combine parking brake to and stay away from the reel.

1. Engage the combine parking brake.
2. Lower the reel fully.
3. Use a voltmeter to measure the voltage between the ground (Pin 2 wire) and the signal (Pin 3 wire) at the reel height sensor (A). Ensure the voltage is within the Y voltage range. Refer to [8.1 Reel Height Sensor Voltage Limits, page 245](#).
4. If voltage is outside the specified range, refer to [8.2 Adjusting Reel Height Sensor, page 246](#).

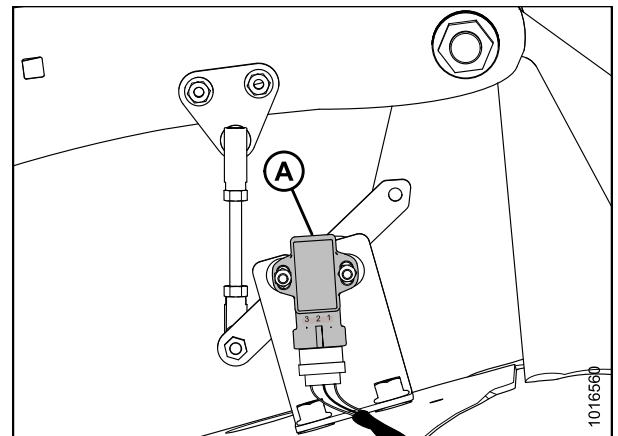


Figure 8.1: Reel Height Sensor (Reel Down)

#### CAUTION

Check to be sure all bystanders have cleared the area.

5. Raise the reel fully.
6. Use a voltmeter to measure the voltage between the ground (Pin 2 wire) and the signal (Pin 3 wire) at the reel height sensor (A). Ensure the voltage is within the X voltage range. Refer to [8.1 Reel Height Sensor Voltage Limits, page 245](#).
7. If voltage is outside the specified range, refer to [8.2 Adjusting Reel Height Sensor, page 246](#).

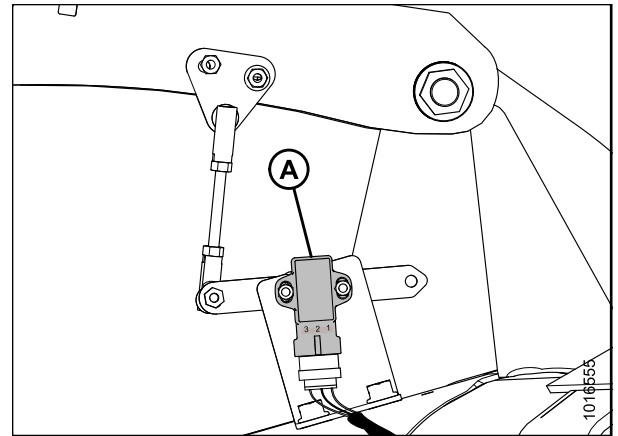


Figure 8.2: Reel Height Sensor (Reel Up)

Table 8.1 Reel Height Sensor Voltage Limits

Combine Type	Voltage Range	
	X Voltage	Y Voltage
Case New Holland	0.3–0.7 V	4.3–4.7 V
John Deere	4.3–4.7 V	0.3–0.7 V
Lexion	4.3–4.7 V	0.3–0.7 V

## 8.2 Adjusting Reel Height Sensor


### DANGER

To avoid bodily injury or death from unexpected start-up of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

#### IMPORTANT:

Ensure reel height is properly set before adjusting reel height sensor. Refer to [6.11 Measuring and Adjusting Reel Clearance to Cutterbar, page 116](#).


1. Lower the reel fully, shut down engine, and remove key from ignition.
2. Loosen two center lock flange nuts (A), and adjust sensor mounting bracket (B) until the threaded rod (C) is parallel with the sensor arm (D). Tighten center lock flange nuts.

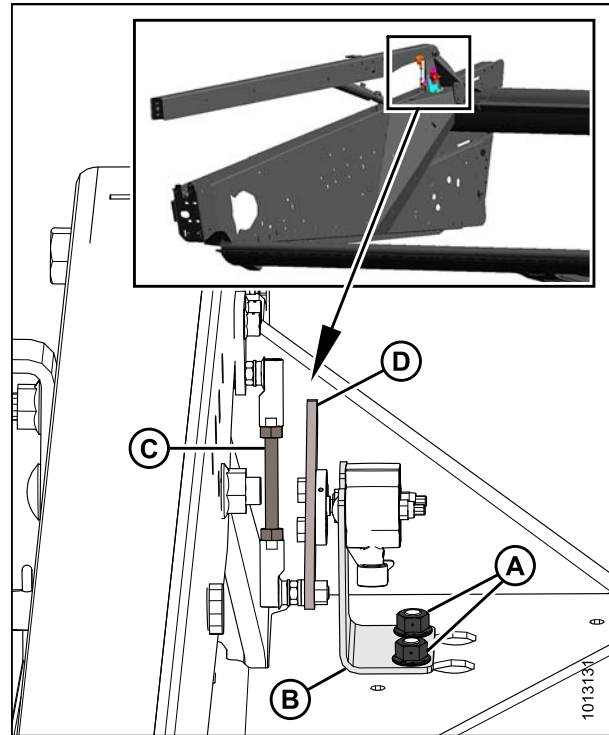

**Figure 8.3: Reel Height Sensor – Right-Hand Reel Arm**

## SETTING UP REEL HEIGHT SENSOR

3. Lower the reel fully.
4. Use the combine display or a voltmeter (if measuring the sensor manually) to measure the upper voltage range between the ground (Pin 2) and signal (Pin 3) wires at the reel height sensor (C).
5. Adjust length of threaded rod (A) to achieve an upper voltage range of 4.1–4.5 V.
6. Raise the reel fully and use combine display or a voltmeter (if measuring the sensor manually) to measure the lower voltage range. Loosen two M5 hex nuts (B) and rotate sensor (C) to achieve a lower voltage range of 0.5–0.9 V.
7. Lower the reel fully and recheck the upper voltage range to ensure it is still within the 4.1–4.5 V tolerance. If the upper voltage range is not within the correct tolerance, repeat adjustment procedure from Step 5, [page 247](#).

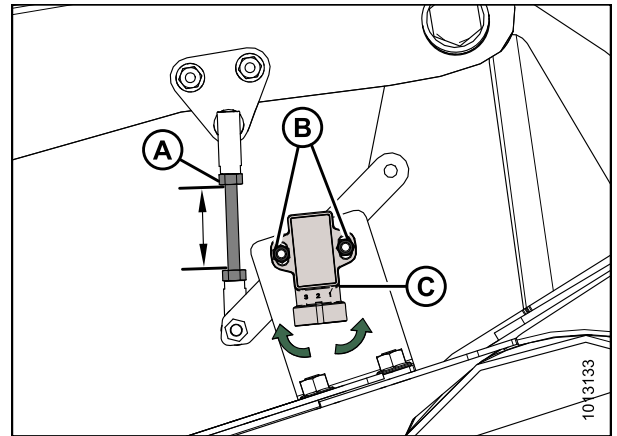

**Figure 8.4: Reel Height Sensor – Right-Hand Reel Arm**



## 9 Running up Header

To run up the header, follow these steps:

### DANGER

Engage header safety props and reel props before working under header or reel.

### DANGER

To avoid bodily injury or death from unexpected start-up or fall of a raised machine, always stop engine and remove key before leaving the operator's seat, and always engage safety props before going under the machine for any reason.

### CAUTION

Never start or move the machine until you are sure all bystanders have cleared the area.

1. Start combine, raise header fully, and engage header lift cylinder locks.
2. Stop engine and remove key.

1. Lower plastic pan under float module and check for shipping materials/debris that may have fallen under float module draper.
2. Rotate latches (A) to unlock handles (B).
3. Hold pan (C) and rotate handles (B) to release pan. Lower pan to expose draper.


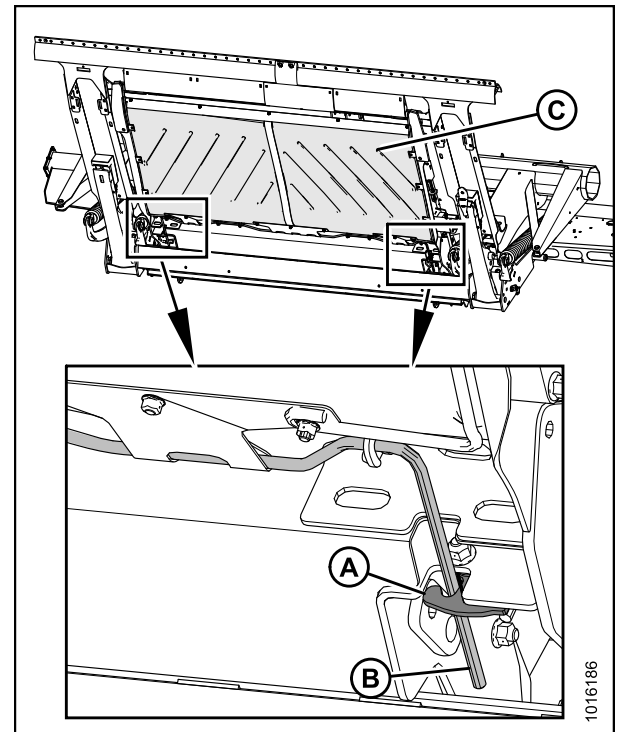


Figure 9.1: Float Module Plastic Pan


## RUNNING UP HEADER

4. Check and remove debris from pan (A) and draper.

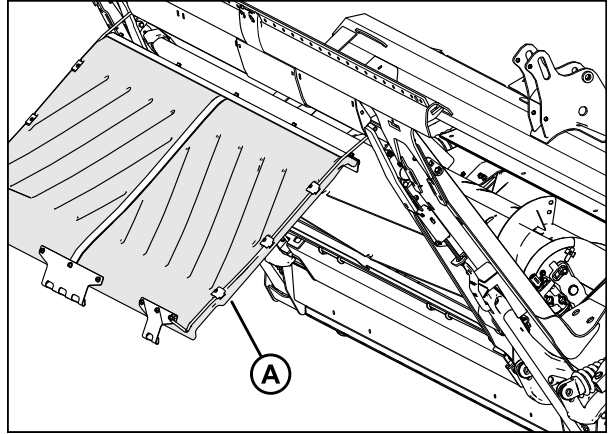


**Figure 9.2: Float Module Plastic Pan**

5. Raise pan and rotate handle (A) so that rod engages clips (B) on pan.

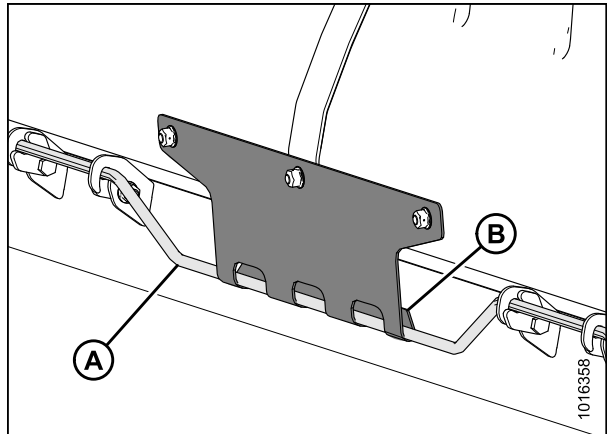

**Figure 9.3: Clips Engaged**

6. Push handle (B) into slot and secure it with latches (A).
7. Open left-hand endshield.

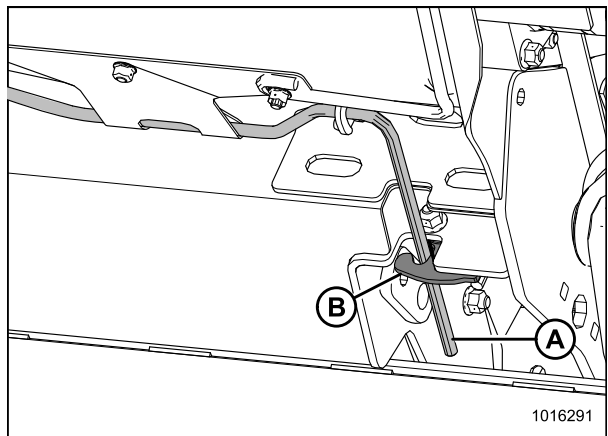

**Figure 9.4: Latches Secured**



## RUNNING UP HEADER

8. Ensure flow control (A) is set to position 6. If required, turn knob until desired setting lines up with the slot in panel.
9. Ensure feeder house variable speed is set to MINIMUM.

### CAUTION


**Never start or move the machine until you are sure all bystanders have cleared the area.**

10. Start combine and run the machine slowly for five minutes while watching and listening **from the operator's seat** for binding or interfering parts.

#### NOTE:

Reel and side drapers will not operate until oil flow fills the lines.

11. Run the machine at operating speed for 15 minutes. Listen for any unusual sounds or abnormal vibration.
12. Perform run-up check as listed on [Predelivery Checklist, page 269](#) (yellow sheet attached to this instruction) to ensure the machine is field-ready.

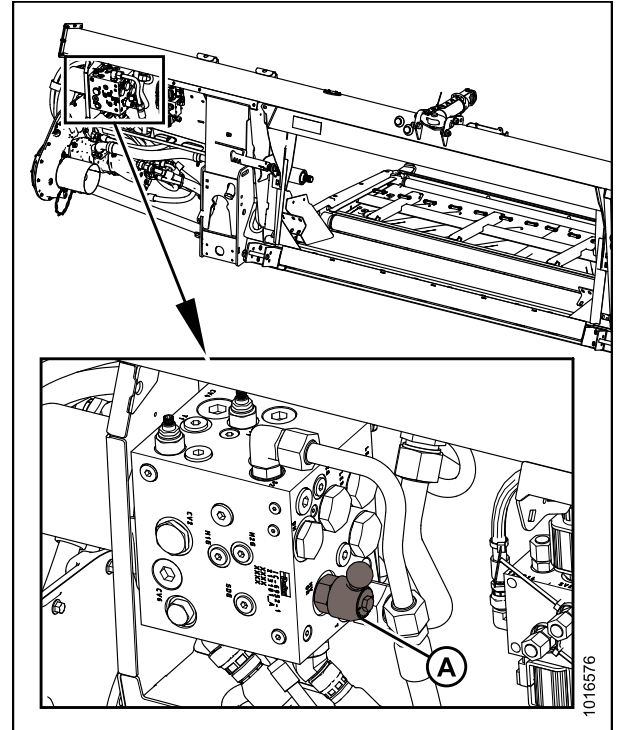

**Figure 9.5: Flow Control**

## 9.1 Performing Post Run-Up Adjustments

Perform post run-up check as listed on the Predelivery Checklist (yellow sheet attached to this instruction [Predelivery Checklist, page 269](#)) to ensure machine is field-ready.

### WARNING

**To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.**

Some adjustments may be necessary after the run-up. Refer to the following:

- [9.1.1 Adjusting Knife, page 251](#)
- [9.1.2 Adjusting Knife Speed, page 253](#)


### 9.1.1 Adjusting Knife

#### WARNING

**To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to machine.**

## RUNNING UP HEADER

1. Stop engine and remove the key.
2. Check guards for signs of heating during run-up due to insufficient clearance between guard and knife.
3. If heating is evident, check gap between knifehead (A) and pitman arm (B). A business card should slide easily through the gap. If not, adjust gap by loosening bolt and tapping knifehead (A) with a hammer. Retighten bolt.

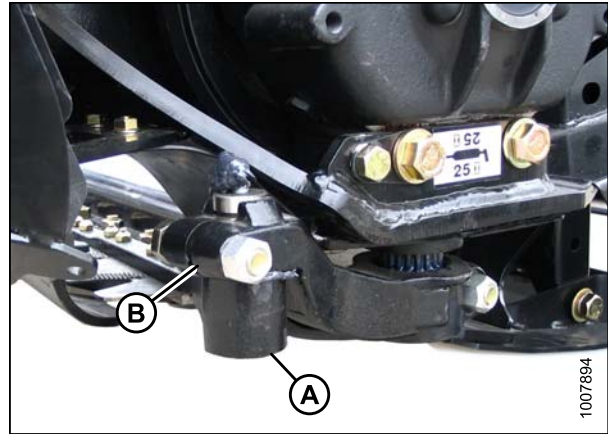

**Figure 9.6: Knifehead and Pitman Arm**

4. Adjust guard alignment as necessary using guard straightening tool (MD #140135). Adjust guard tips upwards by positioning tool as shown and pulling up.



**Figure 9.7: Guard Tips – Upward Adjustment**

5. Adjust guard tips downward by positioning tool as shown and pushing down.



**Figure 9.8: Guard Tips – Downward Adjustment**

## 9.1.2 Adjusting Knife Speed

The header knife drive is driven by the hydraulic pump mounted on the float module.. The following speeds are factory-set for the combine feeder house:

- AGCO: 625 rpm (includes Challenger, Gleaner, and Massey Ferguson)
- Case: 580 rpm
- John Deere: 490 rpm
- Lexion: 750 rpm (420 on combine display)
- New Holland: 580 rpm


### **DANGER**

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

#### **IMPORTANT:**


This is the **minimum** speed setting for variable speed feeder houses. To avoid damage to the header, do NOT operate at speeds higher than the minimum speed settings.

1. Stop combine engine and remove key.
2. Push release lever (A) located on the backside of the endshield to unlock the shield.
3. Pull endshield open using handle depression (B).

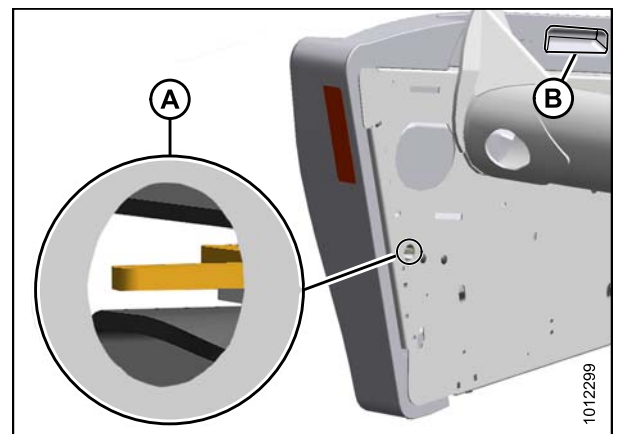

**Figure 9.9: Endshield Latch Access**

4. Pull endshield at handle depression (A). Endshield is retained by a hinge tab (B) and will open in direction (C).

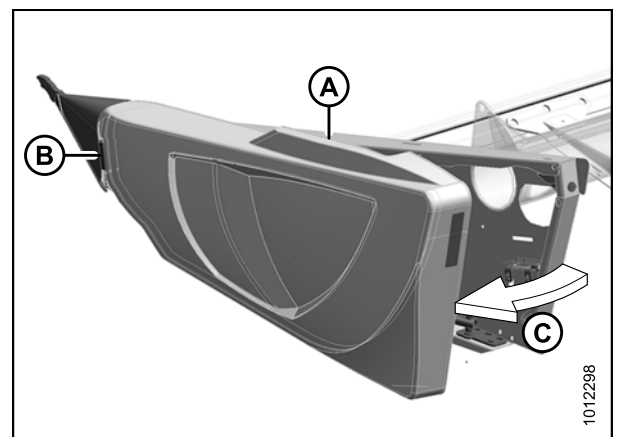

**Figure 9.10: Left-Hand Endshield**

## RUNNING UP HEADER

5. Pull the endshield free of hinge tab (A) if additional clearance is required, and swing shield towards the rear of the header.
6. Engage safety catch (B) on hinge arm to secure the shield in fully open position.

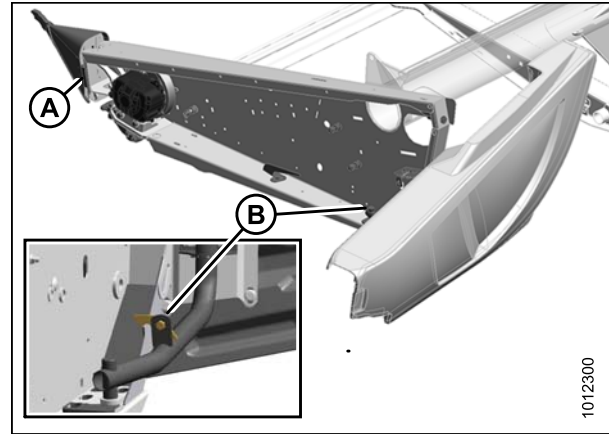


Figure 9.11: Left Endshield

### CAUTION

Clear the area of other persons, pets etc. Keep children away from machinery. Walk around the machine to be sure no one is under, on or close to it.

7. Start engine, engage header drive, and run combine at operating rpm.
8. Check the rpm of knife drive box pulley using a handheld tachometer.
9. Stop engine, remove key, and close endshield.



Figure 9.12: Knife Drive Box

10. Compare actual pulley rpm with values in the following chart:

**Table 9.1 Recommended Knife Drive Speed (rpm)**

Header Size	Recommended Knife Drive Speed Range (rpm)	
	Single Knife	Double Knife
30 ft.	550–650	—
35 ft.	550–600	—
40 ft.	525–600	550–650
45 ft.	N/A	

11. If adjustment to knife drive box pulley rpm is necessary, refer to the header technical manual.

# 10 Reference

## 10.1 Torque Specifications


The following tables provide the correct torque values for various bolts, cap screws, and hydraulic fittings.

- Tighten all bolts to the torque values specified in the charts (unless otherwise noted throughout this manual).
- Replace hardware with the same strength and grade of bolt.
- Use the torque value tables as a guide and periodically check tightness of bolts.
- Understand torque categories for bolts and cap screws by using their identifying head markings.

### 10.1.1 Metric Bolt Specifications

**Table 10.1 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut**

Nominal Size (A)	Torque (ft·lbf) (*in·lbf)		Torque (N·m)	
	Min.	Max.	Min.	Max.
3-0.5	*13	*14	1.4	1.6
3.5-0.6	*20	*22	2.2	2.5
4-0.7	*29	*32	3.3	3.7
5-0.8	*59	*66	6.7	7.4
6-1.0	*101	*112	11.4	12.6
8-1.25	20	23	28	30
10-1.5	40	45	55	60
12-1.75	70	78	95	105
14-2.0	113	124	152	168
16-2.0	175	193	236	261
20-2.5	341	377	460	509
24-3.0	589	651	796	879

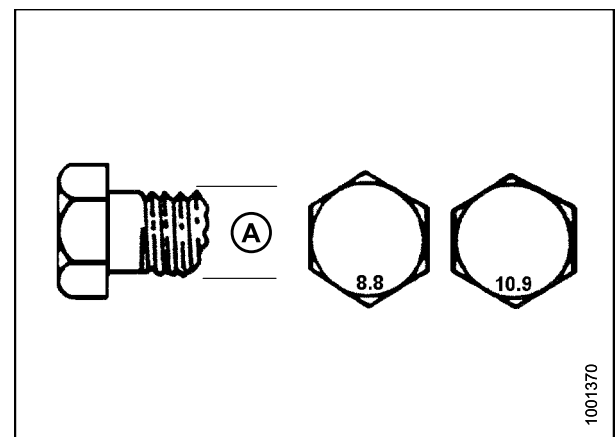


**Figure 10.1: Bolt Grades**

## REFERENCE

**Table 10.2 Metric Class 8.8 Bolts and Class 9 Distorted Thread Nut**


Nominal Size (A)	Torque (ft·lbf) (*in·lbf)		Torque (N·m)	
	Min.	Max.	Min.	Max.
3-0.5	*9	*10	1	1.1
3.5-0.6	*14	*15	1.5	1.7
4-0.7	*20	*22	2.3	2.5
5-0.8	*40	*45	4.5	5
6-1.0	*69	*76	7.7	8.6
8-1.25	*167	*185	18.8	20.8
10-1.5	28	30	37	41
12-1.75	48	53	65	72
14-2.0	77	85	104	115
16-2.0	119	132	161	178
20-2.5	233	257	314	347
24-3.0	402	444	543	600

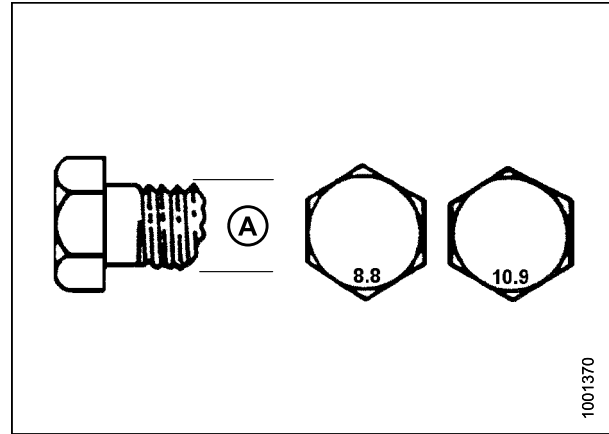

**Figure 10.2: Bolt Grades**

**Table 10.3 Metric Class 10.9 Bolts and Class 10 Free Spinning Nut**

Nominal Size (A)	Torque (ft·lbf) (*in·lbf)		Torque (N·m)	
	Min.	Max.	Min.	Max.
3-0.5	*18	*19	1.8	2
3.5-0.6	*27	*30	2.8	3.1
4-0.7	*41	*45	4.2	4.6
5-0.8	*82	*91	8.4	9.3
6-1.0	*140	*154	14.3	15.8
8-1.25	28	31	38	42
10-1.5	56	62	75	83
12-1.75	97	108	132	145
14-2.0	156	172	210	232
16-2.0	242	267	326	360
20-2.5	472	521	637	704
24-3.0	815	901	1101	1217

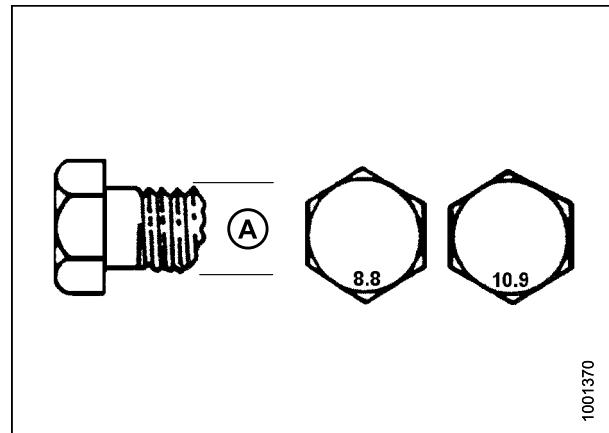


**Figure 10.3: Bolt Grades**

## REFERENCE

**Table 10.4 Metric Class 10.9 Bolts and Class 10 Distorted Thread Nut**

Nominal Size (A)	Torque (ft·lbf) (*in·lbf)		Torque (N·m)	
	Min.	Max.	Min.	Max.
3-0.5	*12	*13	1.3	1.5
3.5-0.6	*19	*21	2.1	2.3
4-0.7	*28	*31	3.1	3.4
5-0.8	*56	*62	6.3	7
6-1.0	*95	*105	10.7	11.8
8-1.25	19	21	26	29
10-1.5	38	42	51	57
12-1.75	66	73	90	99
14-2.0	106	117	143	158
16-2.0	165	182	222	246
20-2.5	322	356	434	480
24-3.0	556	614	750	829

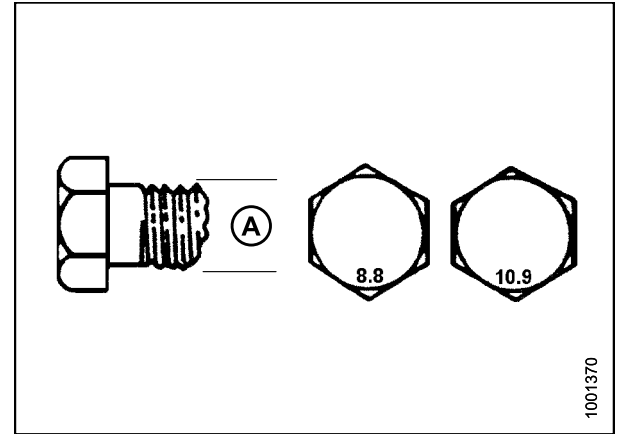

**Figure 10.4: Bolt Grades**



## 10.1.2 Metric Bolt Specifications Bolting into Cast Aluminum

Table 10.5 Metric Bolt Bolting into Cast Aluminum

Nominal Size (A)	Bolt Torque			
	8.8 (Cast Aluminum)		10.9 (Cast Aluminum)	
	ft-lbf	N-m	ft-lbf	N-m
M3	–	–	1	–
M4	–	–	2.6	4
M5	–	–	5.5	8
M6	6	9	9	12
M8	14	20	20	28
M10	28	40	40	55
M12	52	70	73	100
M14	–	–	–	–
M16	–	–	–	–

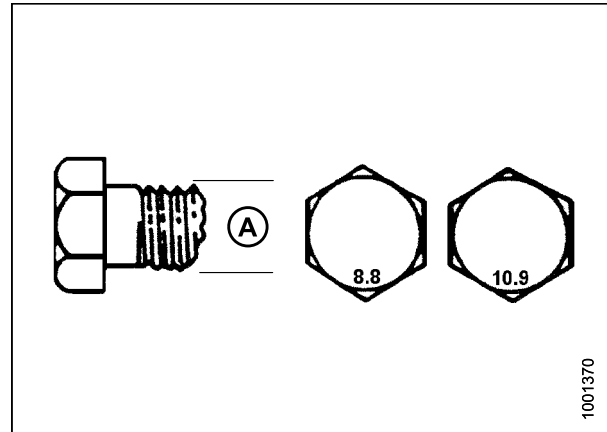


Figure 10.5: Bolt Grades

## 10.1.3 Flare-Type Hydraulic Fittings

1. Check flare (A) and flare seat (B) for defects that might cause leakage.
2. Align tube (C) with fitting (D) and thread nut (E) onto fitting without lubrication until contact has been made between the flared surfaces.
3. Torque the fitting nut (E) to the specified number of flats from finger tight (FFFT) or to a given torque value in Table [10.6 Flare-Type Hydraulic Tube Fittings, page 259](#).
4. Use two wrenches to prevent fitting (D) from rotating. Place one wrench on the fitting body (D) and tighten nut (E) with the other wrench to the torque shown.
5. Assess the final condition of the connection.

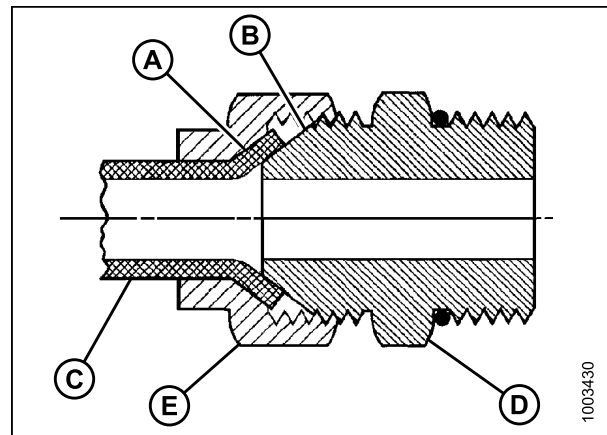


Figure 10.6: Hydraulic Fitting

## REFERENCE

**Table 10.6 Flare-Type Hydraulic Tube Fittings**

SAE Dash Size	Thread Size (in.)	Torque Value <sup>3</sup>		Flats from Finger Tight (FFFT)	
		ft·lbf	N·m	Tube	Swivel Nut or Hose
-2	5/16–24	3–4	4–5	—	—
-3	3/8–24	5–6	7–8	—	—
-4	7/16–20	13–14	18–19	2-1/2	2
-5	1/2–20	14–15	19–21	2	2
-6	9/16–18	22–24	30–33	2	1-1/2
-8	3/4–16	42–46	57–63	2	1-1/2
-10	7/8–14	60–66	81–89	1-1/2	1-1/2
-12	1-1/16–12	83–91	113–124	1-1/2	1-1/4
-14	1-3/16–12	100–110	136–149	1-1/2	1-1/4
-16	1-5/16–12	118–130	160–176	1-1/2	1
-20	1-5/8–12	168–184	228–250	1	1
-24	1-7/8–12	195–215	264–291	1	1
-32	2-1/2–12	265–291	359–395	1	1
-40	3–12	—	—	1	1

3. Torque values shown are based on lubricated connections as in reassembly.

### 10.1.4 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Back off the lock nut (C) as far as possible. Ensure that washer (D) is loose and is pushed toward the lock nut (C) as far as possible.
3. Check that O-ring (A) is **NOT** on the threads and adjust if necessary.
4. Apply hydraulic system oil to the O-ring (A).

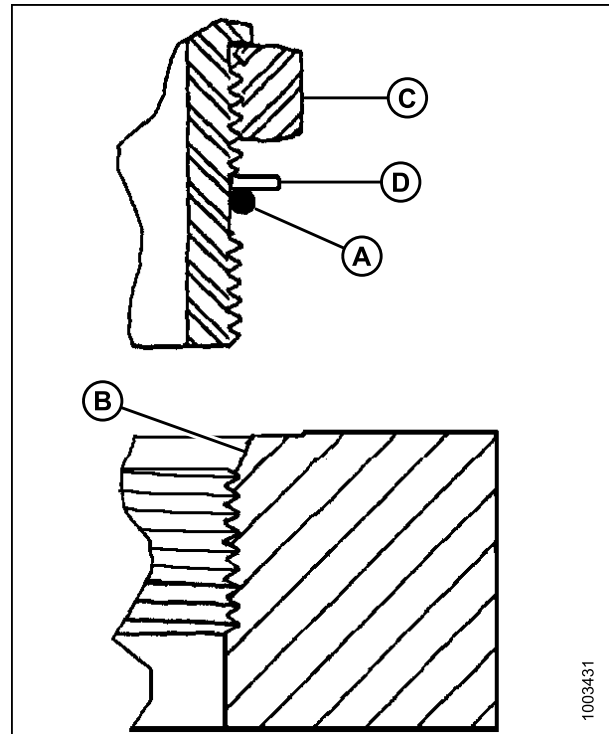


Figure 10.7: Hydraulic Fitting

5. Install fitting (B) into port until back up washer (D) and O-ring (A) contact the part face (E).
6. Position angle fittings by unscrewing no more than one turn.
7. Turn lock nut (C) down to washer (D) and tighten to torque shown. Use two wrenches, one on fitting (B) and the other on lock nut (C).
8. Check the final condition of the fitting.

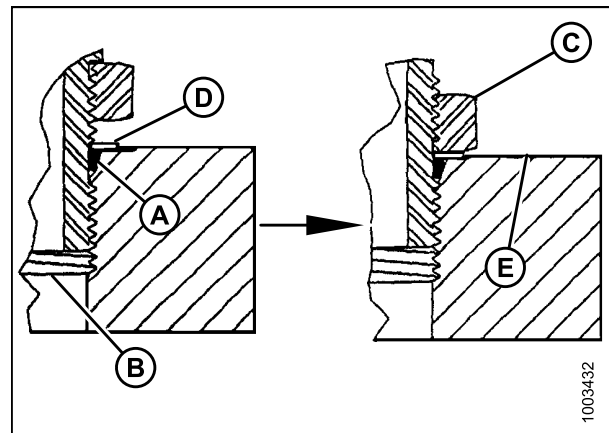


Figure 10.8: Hydraulic Fitting

## REFERENCE

**Table 10.7 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)**

SAE Dash Size	Thread Size (in.)	Torque Value <sup>4</sup>	
		ft·lbf (*in·lbf)	N·m
-2	5/16–24	*53–62	6–7
-3	3/8–24	*106–115	12–13
-4	7/16–20	14–15	19–21
-5	1/2–20	15–24	21–33
-6	9/16–18	19–21	26–29
-8	3/4–16	34–37	46–50
-10	7/8–14	55–60	75–82
-12	1-1/16–12	88–97	120–132
-14	1-3/8–12	113–124	153–168
-16	1-5/16–12	130–142	176–193
-20	1-5/8–12	163–179	221–243
-24	1-7/8–12	199–220	270–298
-32	2-1/2–12	245–269	332–365

---

4. Torque values shown are based on lubricated connections as in reassembly.

## REFERENCE

### 10.1.5 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Check that O-ring (A) is **NOT** on the threads and adjust if necessary.
3. Apply hydraulic system oil to the O-ring.
4. Install fitting (C) into port until fitting is hand tight.
5. Torque fitting (C) according to the values in Table [10.8 O-Ring Boss \(ORB\) Hydraulic Fittings \(Non-Adjustable\)](#), page 262.
6. Check the final condition of the fitting.

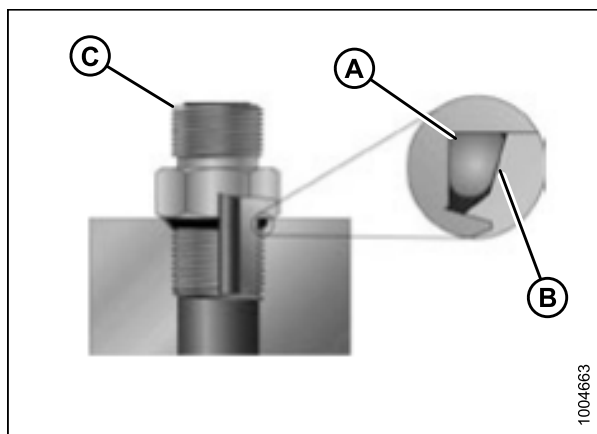


Figure 10.9: Hydraulic Fitting

Table 10.8 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value <sup>5</sup>	
		ft·lbf (*in·lbf)	N·m
-2	5/16–24	*53–62	6–7
-3	3/8–24	*106–115	12–13
-4	7/16–20	14–15	19–21
-5	1/2–20	15–24	21–33
-6	9/16–18	19–21	26–29
-8	3/4–16	34–37	46–50
-10	7/8–14	55–60	75–82
-12	1-1/16–12	88–97	120–132
-14	1-3/8–12	113–124	153–168
-16	1-5/16–12	130–142	176–193
-20	1-5/8–12	163–179	221–243
-24	1-7/8–12	199–220	270–298
-32	2-1/2–12	245–269	332–365

5. Torque values shown are based on lubricated connections as in reassembly.

## 10.1.6 O-Ring Face Seal (ORFS) Hydraulic Fittings

1. Check components to ensure that the sealing surfaces and fitting threads are free of burrs, nicks, scratches, or any foreign material.



Figure 10.10: Hydraulic Fitting

2. Apply hydraulic system oil to the O-ring (B).
3. Align the tube or hose assembly so that the flat face of the sleeve (A) or (C) comes in full contact with O-ring (B).
4. Thread tube or hose nut (D) until hand-tight. The nut should turn freely until it is bottomed out.
5. Torque fittings according to the values in Table [10.9 O-Ring Face Seal \(ORFS\) Hydraulic Fittings, page 264](#).

**NOTE:**

If applicable, hold the hex on the fitting body (E) to prevent rotation of fitting body and hose when tightening the fitting nut (D).

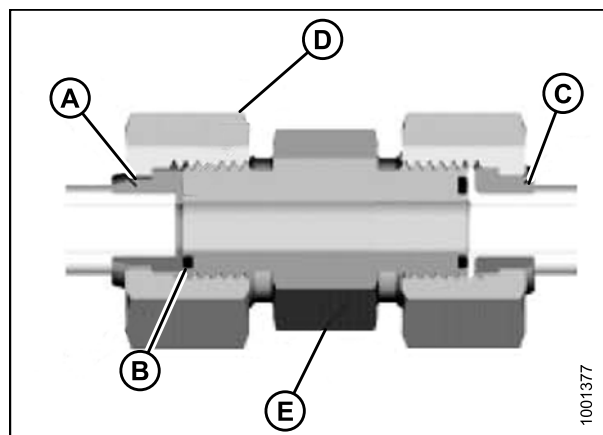


Figure 10.11: Hydraulic Fitting

6. Use three wrenches when assembling unions or joining two hoses together.
7. Check the final condition of the fitting.

## REFERENCE

**Table 10.9 O-Ring Face Seal (ORFS) Hydraulic Fittings**

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value <sup>6</sup>	
			ft·lbf	N·m
-3	Note <sup>7</sup>	3/16	—	—
-4	9/16	1/4	18–21	25–28
-5	Note <sup>7</sup>	5/16	—	—
-6	11/16	3/8	29–32	40–44
-8	13/16	1/2	41–45	55–61
-10	1	5/8	59–65	80–88
-12	1-3/16	3/4	85–94	115–127
-14	Note <sup>7</sup>	7/8	—	—
-16	1-7/16	1	111–122	150–165
-20	1-11/16	1-1/4	151–167	205–226
-24	1–2	1-1/2	232–256	315–347
-32	2-1/2	2	376–414	510–561

6. Torque values and angles shown are based on lubricated connection as in reassembly.

7. O-ring face seal type end not defined for this tube size.



## 10.2 Lifting Equipment Requirements

The following topic describes the minimum equipment requirements for lifting headers.

### CAUTION

To avoid injury to bystanders from being struck by machinery, do not allow people to stand in unloading area.

### CAUTION


Equipment used for loading and unloading must meet or exceed the minimum specified requirements. Using inadequate equipment may result in vehicle tipping, machine damage, or chain breakage.

#### NOTE:

When a header and float module are ordered together, they are shipped with the float module already installed in the header.

#### IMPORTANT:

Forklifts are normally rated for a load center 24 in. (610 mm) ahead of back end of the forks. To obtain the forklift capacity for a load center (A) at 48 in. (1220 mm) (B), check with your forklift distributor. The minimum fork length (C) is 78 in. (1981 mm).

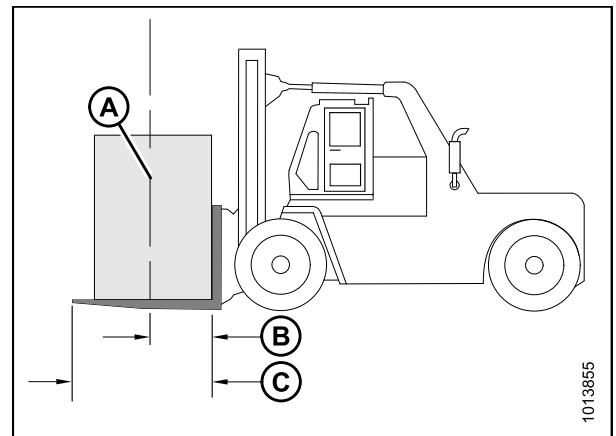

**Figure 10.12: Minimum Lifting Capacity**

A - Center of Gravity of the Load  
B - Load Center 48 in. (1220 mm) from Back of Forks  
C - Minimum Fork Length 78 in. (1981 mm)

**Table 10.10 Lifting Chain Requirements**

Type	Overhead lifting quality (1/2 in.)
Minimum Load	5000 lb. (2270 kg)

## 10.3 Conversion Chart

Table 10.11 Conversion Chart

Quantity	Inch-Pound Units		Factor	SI Units (Metric)	
	Unit Name	Abbreviation		Unit Name	Abbreviation
Area	acres	acres	$\times 0.4047 =$	hectares	ha
Flow	US gallons per minute	gpm	$\times 3.7854 =$	liters per minute	L/min
Force	pounds force	lbf	$\times 4.4482 =$	Newtons	N
Length	inch	in.	$\times 25.4 =$	millimeters	mm
	foot	ft.	$\times 0.305 =$	meters	m
Power	horsepower	hp	$\times 0.7457 =$	kilowatts	kW
Pressure	pounds per square inch	psi	$\times 6.8948 =$	kilopascals	kPa
			$\times .00689 =$	megapascals	MPa
			$\div 14.5038 =$	bar (Non-SI)	bar
Torque	pound feet or foot pounds	ft-lbf	$\times 1.3558 =$	Newton meters	N·m
	pound inches or inch pounds	in-lbf	$\times 0.1129 =$	Newton meters	N·m
Temperature	degrees Fahrenheit	°F	$(^{\circ}\text{F}-32) \times 0.56 =$	Celsius	°C
Velocity	feet per minute	ft/min	$\times 0.3048 =$	meters per minute	m/min
	feet per second	ft/s	$\times 0.3048 =$	meters per second	m/s
	miles per hour	mph	$\times 1.6063 =$	kilometers per hour	km/h
Volume	US gallons	US gal	$\times 3.7854 =$	liters	L
	ounces	oz.	$\times 29.5735 =$	milliliters	ml
	cubic inches	in <sup>3</sup>	$\times 16.3871 =$	cubic centimeters	cm <sup>3</sup> or cc
Weight	pounds	lb.	$\times 0.4536 =$	kilograms	kg

## 10.4 Definitions

The following terms and acronyms may be used in this manual.

Term	Definition
AHHC	Automatic Header Height Control
API	American Petroleum Institute
ASTM	American Society of Testing and Materials
Bolt	A headed and externally threaded fastener that is designed to be paired with a nut
Center-link	A hydraulic cylinder link between the header and the machine to which it is attached: It is used to change header angle
CGVW	Combined vehicle gross weight
D1-Series header	MacDon D115, D120, D125, D130, D135, D140, or D145 combine draper header from the D1 model number series
DK	Double knife
DKD	Double-knife drive
DDD	Double-draper drive
DR	Double reel
FD1-Series header	MacDon FD130, FD135, FD140, or FD145 combine FlexDraper® header from the FD1 model number series
Finger tight	Finger tight is a reference position where sealing surfaces or components are making contact with each other and the fitting has been tightened to a point where the fitting is no longer loose
FFFT	Flats from finger tight
GSL	Ground speed lever
GVW	Gross vehicle weight
Hard joint	A joint made with the use of a fastener where the joining materials are highly incompressible
Header	A machine that cuts and lays crop into a windrow and is attached to a self-propelled windrower
Hex key	A hex key or Allen key (also known by various other synonyms) is a tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in the head (internal-wrenching hexagon drive)
HDS	Hydraulic deck shift
hp	Horsepower
JIC	Joint Industrial Council: A standards body that developed the standard sizing and shape for original 37° flared fitting
Knife	A cutting device which uses a reciprocating cutter (also called a sickle)
MDS	Mechanical deck shift
n/a	Not applicable
Nut	An internally threaded fastener that is designed to be paired with a bolt

## REFERENCE

Term	Definition
NPT	National Pipe Thread: A style of fitting used for low pressure port openings Threads on NPT fittings are uniquely tapered for an interference fit
ORB	O-ring boss: A style of fitting commonly used in port opening on manifolds, pumps, and motors
ORFS	O-ring face seal: A style of fitting commonly used for connecting hoses and tubes This style of fitting is also commonly called ORS, which stands for O-ring seal
rpm	Revolutions per minute
RoHS (Reduction of Hazardous Substances)	A directive by the European Union to restrict the use of certain hazardous substances (such as hexavalent chromium used in some yellow zinc platings)
SAE	Society of Automotive Engineers
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread in one of the mating parts
SDD	Single-drawer drive
SK	Single knife
SKD	Single-knife drive
Soft joint	A joint made with the use of a fastener where the joining materials are compressible or experience relaxation over a period of time
spm	Strokes per minute
SR	Single reel
Truck	A four-wheel highway/road vehicle weighing no less than 7500 lb. (3400 kg)
Tension	Axial load placed on a bolt or screw, usually measured in pounds (lb.) or Newtons (N)
TFFT	Turns from finger tight
Torque	The product of a force X lever arm length, usually measured in foot-pounds (ft-lbf) or Newton-meters (N·m)
Torque angle	A tightening procedure where the fitting is assembled to a precondition (finger tight) and then the nut is turned further a number of degrees or a number of flats to achieve its final position
Torque-tension	The relationship between the assembly torque applied to a piece of hardware and the axial load it induces in the bolt or screw
UCA	Upper cross auger
Untimed knife drive	Unsynchronized motion applied at the cutterbar to two separately driven knives from a single hydraulic motor or two hydraulic motors
Washer	A thin cylinder with a hole or slot located in the center that is to be used as a spacer, load distribution element, or a locking mechanism

# Predelivery Checklist

Perform these checks and adjustments prior to delivery to your Customer. **Adjustments are normally not required as the machine is factory-assembled and adjusted.** If adjustments are required, refer to the appropriate page number in this manual. The completed checklist should be retained by either the Operator or the Dealer.



## CAUTION

Carefully follow the instructions given. Be alert for safety related messages that bring your attention to hazards and unsafe practices.

Header Serial Number:

Float Module Serial Number:

**Table 1 FD1-Series FlexDraper®/FM100 Float Module Predelivery Checklist – North America**

✓	Item	Reference
	Check for shipping damage or missing parts. Be sure all shipping dunnage is removed.	—
	Check for loose hardware. Tighten to required torque.	<a href="#">10.1 Torque Specifications, page 255</a>
	Check tire pressure (Transport/Stabilizer Option).	<a href="#">6.1 Checking Tire Pressure: Transport and Stabilizer Wheels, page 91</a>
	Check wheel bolt torque (Transport/Stabilizer Option).	<a href="#">6.2 Checking Wheel Bolt Torque, page 92</a>
	Check knife drive box breather position.	<a href="#">6.3 Checking Knife Drive Box, page 93</a>
	Check knife drive box lube level.	<a href="#">6.3 Checking Knife Drive Box, page 93</a>
	Check float module gearbox lube level.	<a href="#">6.4 Checking Oil Level in Header Drive Gearbox, page 95</a>
	Check hydraulic reservoir lube level before and after run-up.	<a href="#">6.5 Checking Oil Level in Hydraulic Reservoir, page 96</a>
	Check knife drive belt(s) tension.	<a href="#">6.6 Checking and Adjusting Knife Drive Belt Tension, page 97</a>
	Check if reel is centered between header endsheets (with header in full smile).	<a href="#">6.8 Centering the Reel, page 101</a>
	Grease all bearings and drivelines.	<a href="#">6.15 Lubricating the Header, page 127</a>
	Check side draper tension.	<a href="#">6.13 Adjusting Draper Tension, page 123</a>
	Check draper seal.	<a href="#">6.14 Checking and Adjusting Draper Seal, page 125</a>
	Check wing balance.	<a href="#">6.10.1 Checking Wing Balance, page 108</a>
	Check header float.	<a href="#">6.9 Checking and Adjusting Header Float, page 102</a>
	Check reel tine to cutterbar clearance.	<a href="#">6.11.1 Measuring Reel Clearance, page 116</a>
	Check auger flighting to feed pan clearance.	<a href="#">6.12 Adjusting Auger to Pan Clearance, page 120</a>
	Check the knife hold-down adjustment.	<a href="#">6.7 Checking Knife Hold-Downs, page 98</a>

## PREDELIVERY CHECKLIST

✓	Item	Reference
	Check fitment of endshields.	<a href="#">6.16 Checking and Adjusting Endshields, page 136</a>
	Check skid shoes are evenly adjusted at a setting appropriate for first crop.	—
	Ensure feeder house variable speed is set to minimum.	—
	Ensure Auto Header Height is calibrated and functioning correctly.	<a href="#">7.1 Auto Header Height Control (AHHC), page 141</a>
<b>Run-up procedure</b>		<a href="#">9 Running up Header, page 249</a>
	Check hydraulic hose and wiring harness routing for clearance when raising or lowering header and reel.	—
	Check lights are functional.	—
	Check knife speed.	<a href="#">9.1.2 Adjusting Knife Speed, page 253</a>
<b>Post run-up check. Stop engine.</b>		<a href="#">9.1 Performing Post Run-Up Adjustments, page 251</a>
	Check knife sections for discoloration caused by misalignment of components.	<a href="#">9.1.1 Adjusting Knife, page 251</a>
	Check for hydraulic leaks.	—
	Check that the manual storage case contains all of the required manuals.	<a href="#">6.17 Checking Manuals, page 139</a>

**Date Checked:**

**Checked by:**





**MacDon Industries Ltd.**

680 Moray Street  
Winnipeg, Manitoba  
Canada R3J 3S3  
t. (204) 885-5590  
f. (204) 832-7749

**MacDon, Inc.**

10708 N. Pomona Avenue  
Kansas City, Missouri  
United States 64153-1924  
t. (816) 891-7313  
f. (816) 891-7323

**MacDon Australia Pty. Ltd.**

A.C.N. 079 393 721  
P.O. Box 243, Suite 3, 143 Main Street  
Greensborough, Victoria, Australia 3088  
t. 03 9432 9982  
f. 03 9432 9972

**LLC MacDon Russia Ltd.**

123317 Moscow, Russia  
10 Presnenskaya nab, Block C  
Floor 5, Office No. 534, Regus Business Centre  
t. +7 495 775 6971  
f. +7 495 967 7600

## CUSTOMERS

[MacDon.com](http://MacDon.com)

## DEALERS

[Portal.MacDon.com](http://Portal.MacDon.com)

Trademarks of products are the marks of their  
respective manufacturers and/or distributors.

Printed in Canada