


M1170 Windrower Operator's Station Features

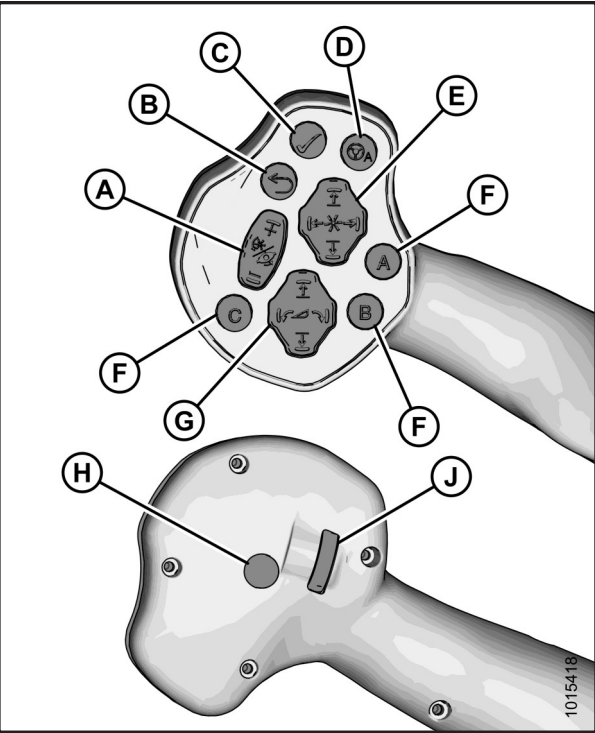

Ground Speed Lever (GSL) Buttons	
Callout	Function
A	Reel speed/disk speed
B	Back
C	Select
D	Autosteer engage (if installed)
E	Reel position
F	One-Touch-Return presets
G	Header position
H	Shift
J	Scroll wheel and select

Ground Speed Lever (GSL) Shortcuts	
Buttons	Function
Shift + back	Home page
Shift + select	Main menu access
Shift + scroll	Adjust maximum ground speed


Pro Tip

Easily activate the turn signals when transporting by using the REEL/DISK SPEED +/- buttons on the GSL.

1015695




Harvest Performance Tracker (HPT) Display	
Callout	Function
A	Soft keys 1–4 (opens run pages 1–4)
B	Home (returns to the last run page)
C	Scroll and select (scrolling highlights menu options, pressing knob activates selection)
D	Back (moves up one level in menu structure)
E	Main menu (accesses windrower and header settings)

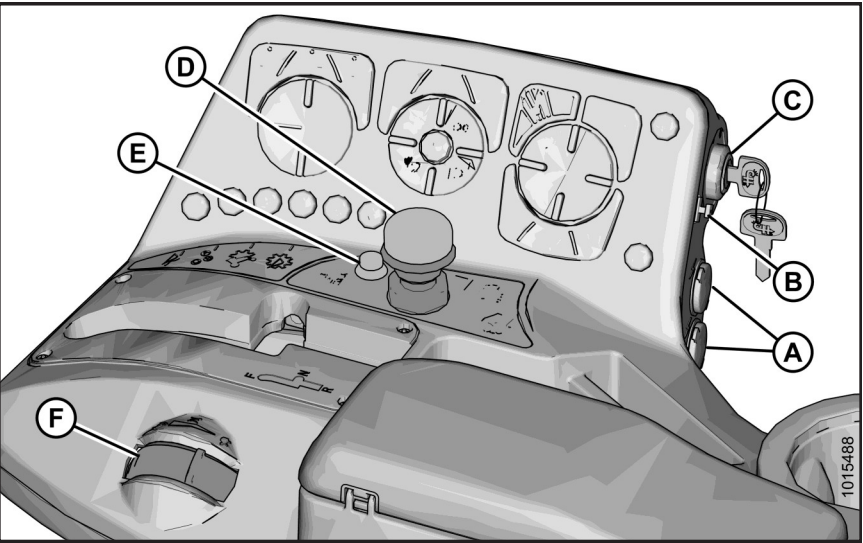


Operator Console Features			
Callout	Function	Callout	Function
A	Auxiliary power outlets	D	Header drive
B	USB jack	E	Header drive reverse
C	Ignition	F	Throttle

M1170 Windrower Operator's Station Features

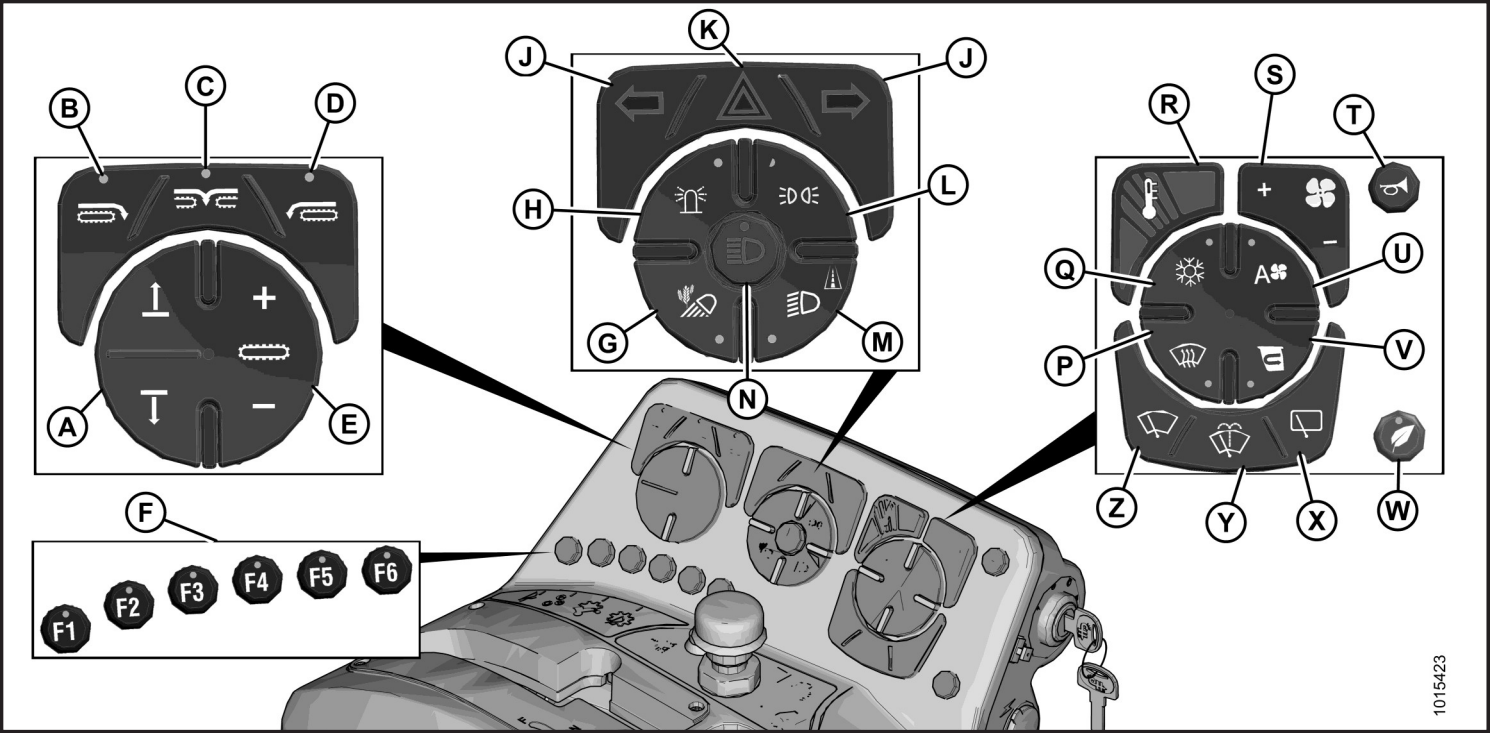

Operator Console Buttons			
Callout	Function	Callout	Function
A	Double window attachment (DWA) / swath roller attachment raise/lower	N	High beams
B	Deck shift draper right side deliver	P	Windshield defog/defrost
C	Deck shift draper center delivery	Q	Air conditioning
D	Deck shift draper left side delivery	R	Temperature
E	Draper/double windrow attachment (DWA) speed	S	Blower speed (manual mode)
F	Harvest performance tracker (HPT) shortcuts	T	Horn
G	Cab-forward field lights	U	Auto fan speed
H	Beacon lights	V	Cab air recirculation
J	Turn signals	W	Eco Engine Control (EEC)
K	Hazard light	X	Windshield wiper (rear)
L	Clearance lights	Y	Wiper fluid (front and rear)
M	Road lights	Z	Windshield wiper (front)

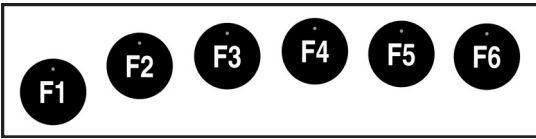

Console Function Button Shortcuts	
Button	Shortcut
F1	Float menu
F2	One-Touch-Return
F3	Windrower settings
F4	Header settings

Normal Start – Engine Temperature above 15°C (60°F)

- Lock operator's seat in either cab-forward or engine-forward position, GSL in PARK, and HEADER DRIVE switch OFF.
- Put your seat belt on. Set throttle to LOW IDLE position (fully back).
- If HPT is still booting up, allow the Wait to Start (WTS) symbol to disappear before starting the engine.
- Sound horn three times.
- Turn ignition key to START position until engine starts, release key, and idle engine until temperature reaches 40°C (104°F). HPT displays MacDon logo for 16 seconds before switching to the header disengage page.

M1170 Maintenance and Servicing

Ongoing Maintenance Intervals	
Time	Service
Every 10 hours or daily	Check tire inflation.
	Check engine oil level.
	Check engine coolant level at reserve tank.
	Check hydraulic oil level.
	Drain fuel filter water trap.
Every 50 hours	Fill fuel tank.
	Check hydraulic hoses and lines for leaks.
	Check diesel exhaust fluid (DEF) level.
	Grease caster pivots (x2).
	Grease top lift link pivots (x4).
Every 100 hours or annually	Grease caster wheel bearings.
	Clean cab fresh air intake filter.
	Check gearbox oil level.
	Clean cab air return filter.
	Clean radiator, hydraulic oil cooler, charge air cooler, and A/C condenser.
Every 250 hours	Change engine oil and filter.
	Change engine gearbox oil.
	Change air cleaner primary filter.
	Check wheel drive oil level.
NOTE: Refer to M1170 Operator's Manual for service beyond 250 hours.	

Break-In Inspections		
Hr(s)	Item	Check
1	Drive wheel nuts	Torque: 510 Nm (375 lbf-ft) dry Refer to M1170 Operator's Manual.
5	A/C compressor belt	Tension
	Caster wheel nuts	Torque: 170 Nm (125 lbf-ft)
	Caster wheel anti-shimmy dampener bolts	Torque bolts: Inboard (x2): 135 Nm (100 lbf-ft) Outboard: 244 Nm (180 lbf-ft) Outboard jam nut: 135 Nm (100 lbf-ft)
	Walking beam width adjustment bolts	Torque: 759 Nm (560 lbf-ft)
10	Walking beam width adjustment bolts	Torque: 759 Nm (560 lbf-ft)
50	Hose clamps: air intake, radiator, heater and hydraulic	Hand-tighten unless otherwise noted.
	Walking beam width adjustment bolts	Torque: 759 Nm (560 lbf-ft)
	Caster wheel anti-shimmy dampener bolts	Torque bolts to the same specification as 5 hour check.
	Main gearbox oil	Change
	Drive wheel oil lubricant	
	Hydraulic return filter	
	Hydraulic charge filter	


Fluids and Lubricants			
Fluid	Capacity	Spec	Description/Information
Diesel exhaust fluid (DEF)	28 L (7.5 US Gallons)	Must meet ISO 22241 requirements	Diesel exhaust system
Fuel: diesel No.2	518 L (137 US Gallons)	ASTM D-975 Grade S15	Sulphur (by weight) 0.5% max. water and sediment (by vol) 0.05% max. lubricity 520 microns
Fuel: diesel no. 1 and no. 2 mix	518 L (137 US Gallons)	n/a	Sulphur (by weight) 0.5% pref. 1% max. water and sediment (by weight) 0.1% max. lubricity 460 microns
Engine coolant	30 L (7.9 US Gallons)	ASTM D-6120 and Fleetguard ES Compleat®	Refer to M1170 Operator's Manual
Drive wheel lubricant	1.4 L (1.5 US Quarts)	SAE 75W-140 (or 80W-140) API service class GL-5	Fully synthetic gear lubricant (SAE J2360 preferred)
Grease	As required	SAE multi-purpose	High temperature extreme pressure EP2. max 1% molybdenum disulphide, lithium base unless otherwise noted
Engine oil	11 L (11.6 US Quarts)	SAE 15W-40 for API class SJ and CJ-4	Engine oil pan
Hydraulic oil	60 L (15.8 US Gallons)	Hydraulic transmission oil Refer to operator's manual	Windrower drive and header drive
Gearbox oil	2.1 L (2.2 US Quarts)	SAE 75W-140 (or 80W-140) API service class GL-5 (SAE J2360 preferred)	Fully synthetic gear lubricant for engine gearbox
A/C refrigerant	2.27 kg (5 lb.)	R134A	Cab A/C system
A/C compressor oil	240 cc (8.1 fl. oz)	SP-15 PAG	Cab A/C compressor lubricant

Tire Pressures
The recommended tire pressure will vary depending on header type and attachments installed. Refer to your M1170 Operator's Manual for a complete list of recommended tire pressures.

Harvest Performance Tracker (HPT) Menu Structure

QuickMenu

Pressing the encoder knob (A) (or the SELECT button on the GSL) opens the QuickMenu on the HPT display. The QuickMenu is the main way to adjust on-screen values. Adjustable parameters are highlighted by a white border (B). The cursor position is highlighted with a red border (C). Use the encoder knob to move the red cursor to the desired area. Press SELECT to access the adjustment (D). Once the parameter is selected, use the scroll wheel to change the value. Press BACK or HOME to save the adjustment.

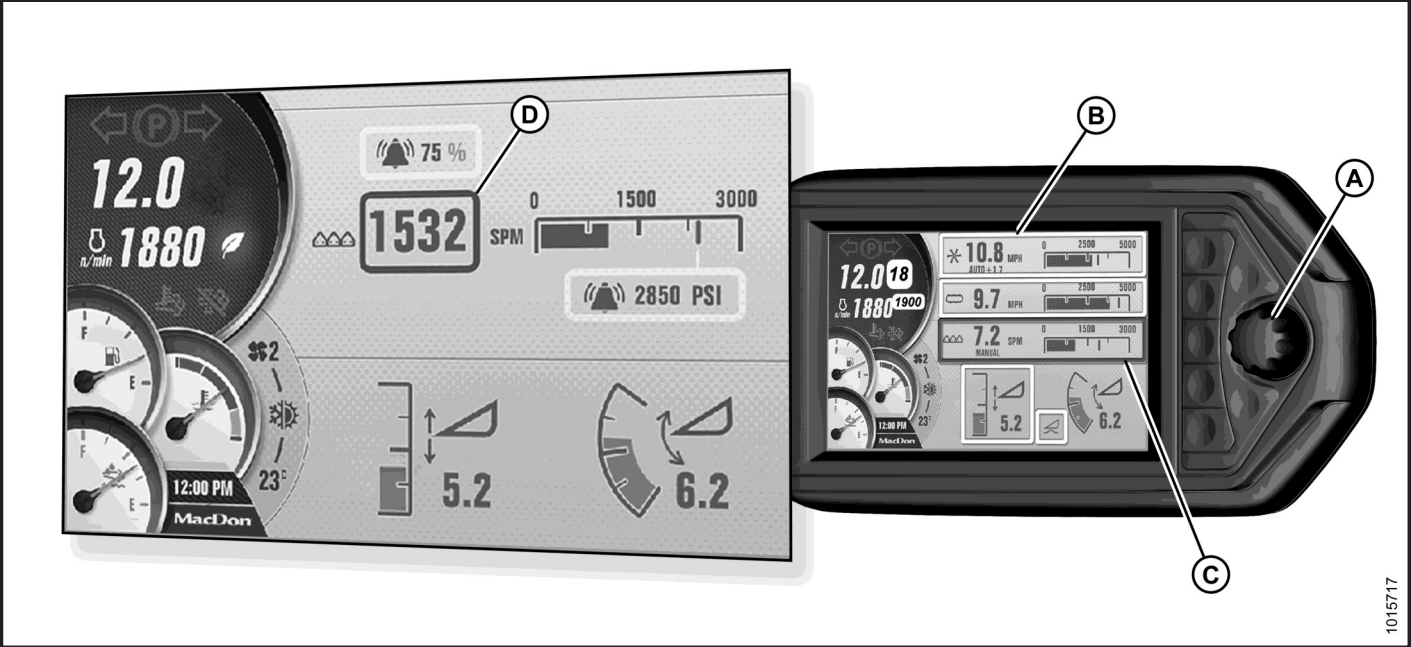

QuickMenu Features		
• Adjust float	• Set knife speed	• Access maintenance information
• Adjust Eco Engine Control (EEC) speed	• Adjust auto speed settings	• Manage telltales
• Set maximum ground speed	• Define header alarm speeds	• Turn auto speeds ON/OFF
• Set header alarm pressure		

Information:

Contains information about the windrower, header, and performance data.

Settings:

Provides access to adjustable settings for the display, windrower, header, and One-Touch-Return.

Maintenance:

Contains the maintenance scheduler. Turn ON/OFF individual maintenance notifications and log your maintenance history.

Diagnostics:

Provides access to diagnostic information, engine faults, and windrower faults.

Engine Aftertreatment:

Provides access to the selective catalytic reduction (SCR) catalyst conditioning MANUAL (FORCE) and INHIBIT switches.