

A40DX and A40DX Grass Seed Auger Header

Reel Speed Control Kit (MD #B6604 and 318001)
Installation Instructions

214679 Revision C

Original Instruction

A40DX Grass Seed (GSS) Auger Header



1026025

Published January 2021

© 2021 MacDon Industries, Ltd.

The information in this publication is based on the information available and in effect at the time of printing. MacDon Industries, Ltd. makes no representation or warranty of any kind, whether expressed or implied, with respect to the information in this publication. MacDon Industries, Ltd. reserves the right to make changes at any time without notice.

Introduction

The Auger Header Reel Speed Control kit (MD #B6604 or 318001) is required to provide the variable reel speed function on the A40DX and A40DX Grass Seed (GSS) Header. This document explains how to install the kit.

A list of parts included in this kit is provided in Chapter *2 Parts List, page 5*.

Installation Time

This kit will take approximately 1 hour to install.

Conventions

The following conventions are used in this document:

- Right and left are determined from the operator's position. The front of the header is the side that faces the crop; the back of the header is the side that connects to the windrower.
- Unless otherwise noted, use the standard torque values provided in the auger header operator's manual and technical manual.

NOTE:

Keep your MacDon publications up-to-date. The most current version of this instruction can be downloaded from our Dealer-only site (<https://portal.macdon.com>) (login required).

NOTE:

This document is currently available in English only.

Summary of Changes

At MacDon, we're continuously making improvements, and occasionally these improvements affect product documentation. The following list provides an account of major changes from the previous version of this document.

Section	Summary of Change	Internal Use Only
Inside front cover	Added copyright information.	Technical Publications
<i>1.1 Signal Words, page 1</i>	Expanded and clarified signal word descriptions.	Safety, Technical Publications
<i>3 Installation Instructions, page 7</i>	Updated installation steps to apply to both A40DX and A40DX GSS headers.	Product Support

TABLE OF CONTENTS

Introduction i

Summary of Changes..... ii

Chapter 1: Safety 1

 1.1 Signal Words 1

 1.2 General Safety 2

Chapter 2: Parts List..... 5

Chapter 3: Installation Instructions 7

Chapter 4: Operation 13

Chapter 1: Safety

Understanding and following safety procedures consistently will help to ensure the safety of machine operators and bystanders.

1.1 Signal Words

Three signal words, **DANGER**, **WARNING**, and **CAUTION**, are used to alert you to hazardous situations. Two signal words, **IMPORTANT** and **NOTE**, identify non-safety related information.

Signal words are selected using the following guidelines:

DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.

CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

IMPORTANT:

Indicates a situation that, if not avoided, could result in a malfunction or damage to the machine.

NOTE:

Provides additional information or advice.

1.2 General Safety

Protect yourself when assembling, operating, and servicing machinery.

CAUTION

The following general farm safety precautions should be part of your operating procedure for all types of machinery.

Wear all protective clothing and personal safety devices that could be necessary for the job at hand. Do **NOT** take chances. You may need the following:

- Hard hat
- Protective footwear with slip-resistant soles
- Protective glasses or goggles
- Heavy gloves
- Wet weather gear
- Respirator or filter mask

In addition, take the following precautions:

- Be aware that exposure to loud noises can cause hearing impairment or loss. Wear suitable hearing protection devices such as earmuffs or earplugs to help protect against loud noises.



Figure 1.1: Safety Equipment



Figure 1.2: Safety Equipment

- Provide a first aid kit in case of emergencies.
- Keep a properly maintained fire extinguisher on the machine. Be familiar with its proper use.
- Keep young children away from machinery at all times.
- Be aware that accidents often happen when the Operator is tired or in a hurry. Take time to consider the safest way. **NEVER** ignore warning signs of fatigue.

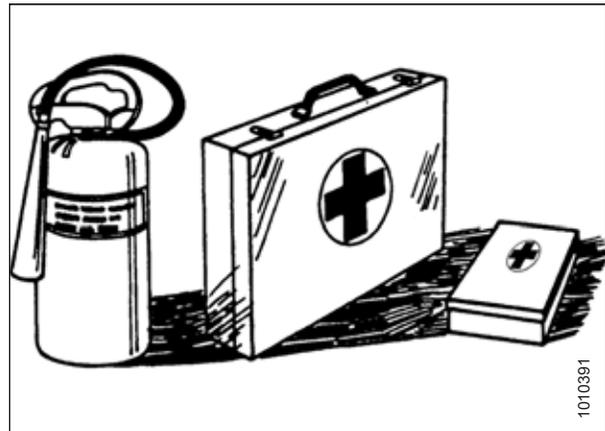


Figure 1.3: Safety Equipment

SAFETY

- Wear close-fitting clothing and cover long hair. **NEVER** wear dangling items such as scarves or bracelets.
- Keep all shields in place. **NEVER** alter or remove safety equipment. Make sure driveline guards can rotate independently of shaft and can telescope freely.
- Use only service and repair parts made or approved by equipment manufacturer. Substituted parts may not meet strength, design, or safety requirements.



Figure 1.4: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. **NEVER** attempt to clear obstructions or objects from a machine while the engine is running.
- Do **NOT** modify the machine. Unauthorized modifications may impair machine function and/or safety. It may also shorten the machine's life.
- To avoid injury or death from unexpected startup of the machine, **ALWAYS** stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

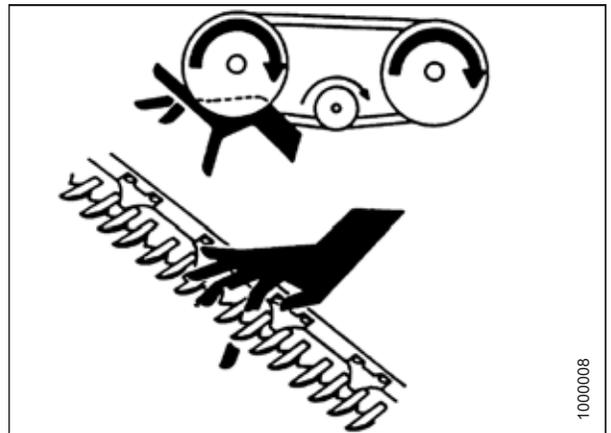


Figure 1.5: Safety around Equipment


- Keep service area clean and dry. Wet and/or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
- Keep work area well lit.
- Keep machinery clean. Straw and chaff on a hot engine are fire hazards. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before storage.
- **NEVER** use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover sharp or extending components to prevent injury from accidental contact.



Figure 1.6: Safety around Equipment


Chapter 2: Parts List

A parts list is provided in this instruction so that you can confirm that you have received all required parts before you begin installation.

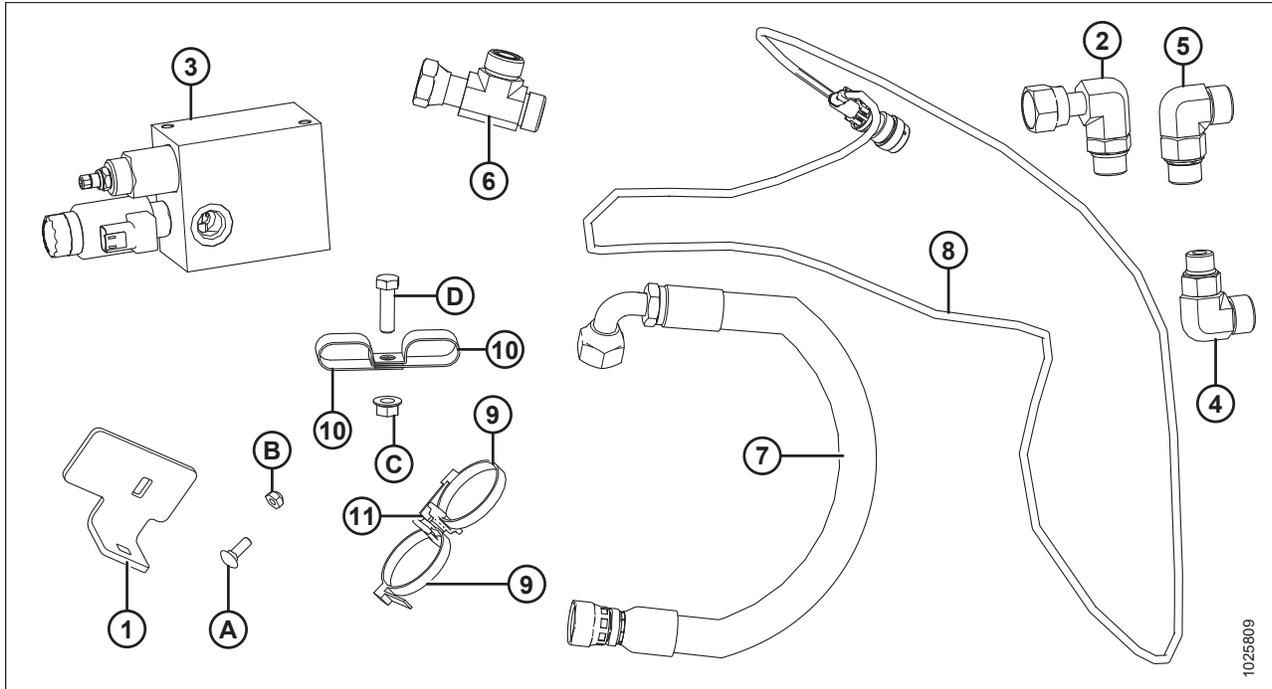

Ref	Part Number	Description	Quantity
1	170974	BRACKET – BAR	1
2	252896	FITTING – ELBOW HYDRAULIC	1
3	170955	VALVE – FLOW CONTROL	1
4	135918	FITTING – ELBOW 90° HYDRAULIC	1
5	136089	FITTING – ELBOW 90° HYDRAULIC	1
6	135784	FITTING – TEE HYDRAULIC	1
7	170952	HOSE – HYDRAULIC	1
8	283709	HARNES – AUGER HEADER REEL SPEED	1
9	30753	FASTENER – CABLE TIE, BLACK	9
10	135235	CLAMP – DOUBLE HOSE INSULATED	2
11	134442	SPACER – DUAL SWIVEL SADDLE	3

PARTS LIST

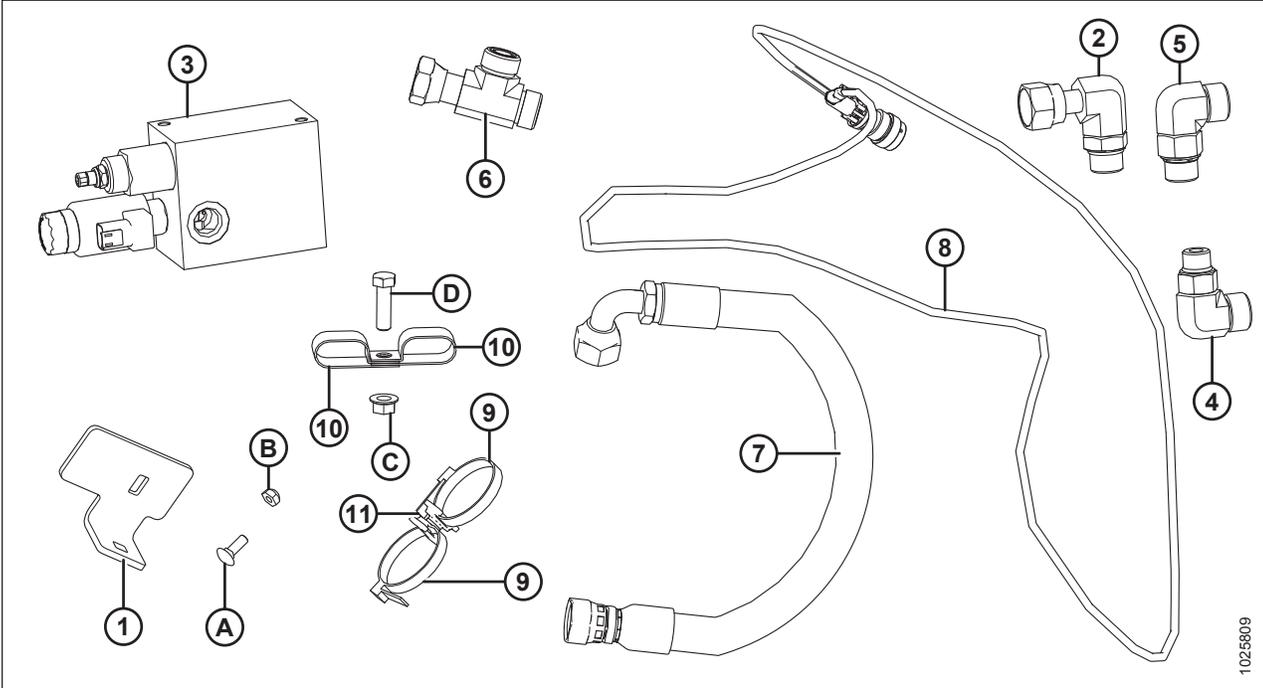

Ref	Part Number	Description	Quantity
A	21476	BOLT – RHSN 1/4-20 X .75-GR5-ZP	1
B	18724	NUT – HEX LOCK DT 1/4-20 UNC ZP	1
C	30228	NUT – FLANGE DT SMOOTH FACE 0.375-16 UNC	1
D	21264	BOLT – HH 3/8 NC X 1.25 LG GR 5 ZP	1

Chapter 3: Installation Instructions

To install the Reel Speed Control kit (MD #B6604 or 318001) on an A40DX or A40DX Grass Seed Auger Header, follow this procedure:

DANGER

To avoid bodily injury or death from unexpected startup of machine, always stop the engine and remove the key before making adjustments to the machine.

1. Lower the header onto blocks, or raise the header fully. Shut the engine off, and remove the key from the ignition. If raising the header, engage the safety props.

CAUTION

Ensure shield lock engages in the open position as shown at location (B) before letting go of shield.

2. Insert a screwdriver or equivalent tool into opening (A) at the base of the endshield and push to release the latch.
3. Pull the bottom and lift the endshield until shield support (B) engages the bolt. Check that support (B) is engaged before releasing hold on the shield.

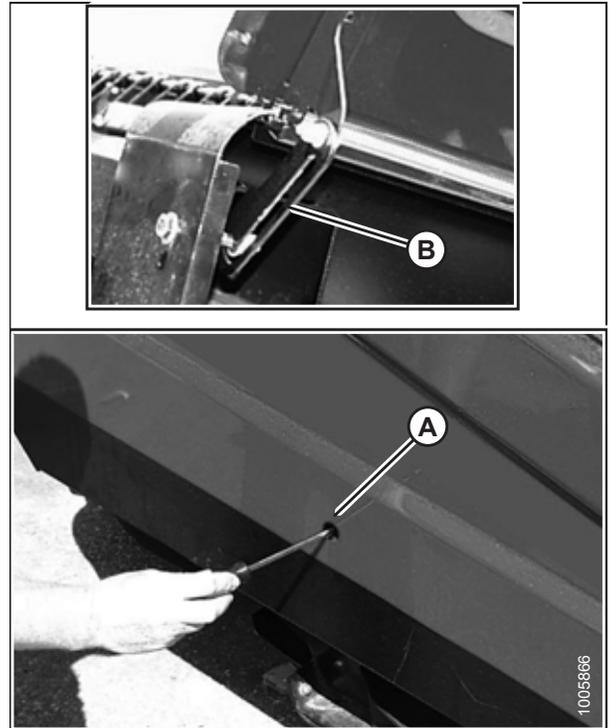


Figure 3.1: Opening Endshield

4. If equipped with rear shield, disengage rubber latch (A).
5. Open shield (B).

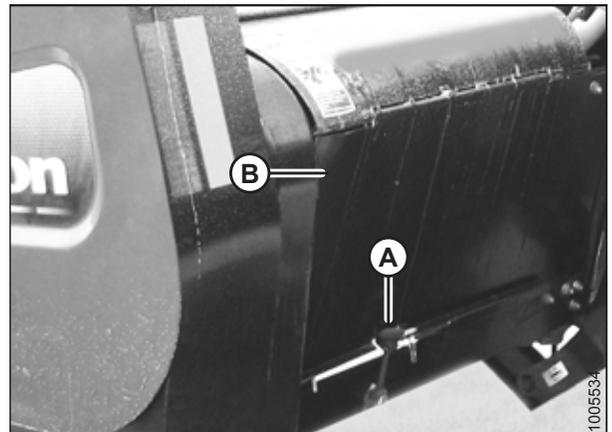


Figure 3.2: Opening Driveline Shield

INSTALLATION INSTRUCTIONS

Relocating knife guard straightening tool

- Remove hair pin (A) securing knife guard straightening tool (B) in its storage position, then remove tool (B). Retain for reinstallation.
- Remove the bolt and nut securing wrench support plate (C) to bar (D). Retain for reinstallation.

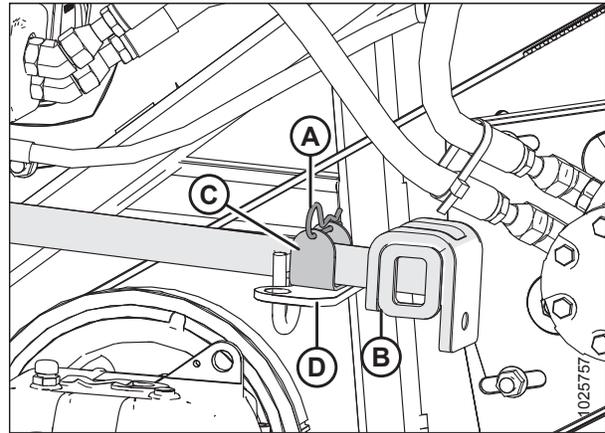


Figure 3.3: Knife Guard Straightening Tool in Storage Position (with Existing Bracket)

- Assemble wrench support plate (A), removed in Step 7, page 8, to bracket (B) (MD #170974) using bolt (C) (MD #21476) and hex lock nut (MD #18724).
- Install the assembled parts to bar (D) using bolt (E) and the nut removed in Step 7, page 8.

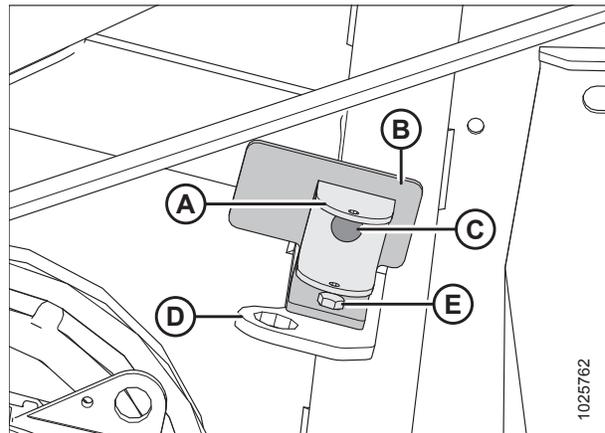


Figure 3.4: New Support Bracket

- Position knife guard straightening tool (A) as shown and secure with hair pin (B).

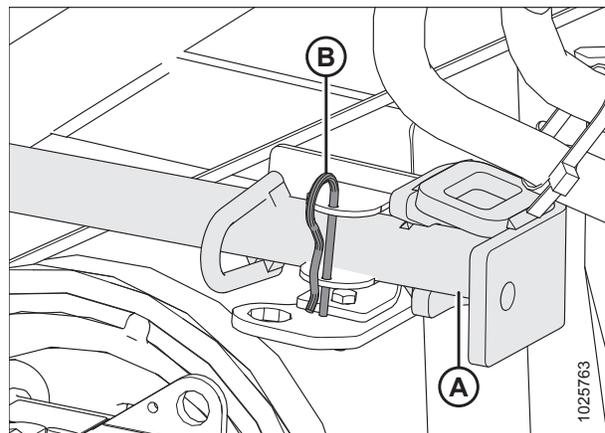


Figure 3.5: Knife Guard Straightening Tool in Storage Position (with New Bracket)

INSTALLATION INSTRUCTIONS

Installation of reel speed hydraulic valve

11. Loosely install elbow fitting (B) (MD #252896) in port EF of flow control valve (C) (MD #170955).

IMPORTANT:

Orient the fittings on the valve as shown.

12. Loosely install 90-degree elbow fitting (A) (MD #136089) in port IN.

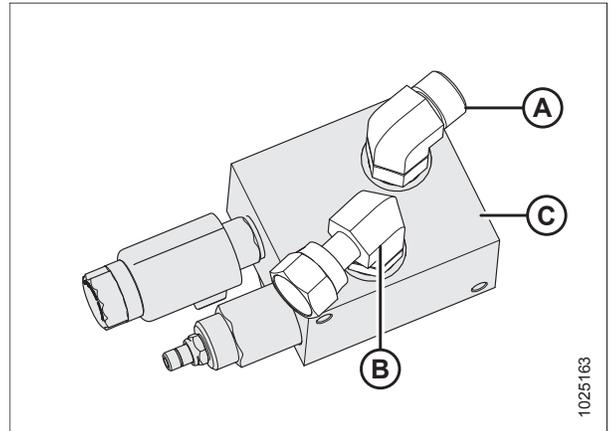


Figure 3.6: Flow Control Valve

13. Loosely install 90-degree elbow fitting (A) (MD #135918) in port CF of flow control valve (B).

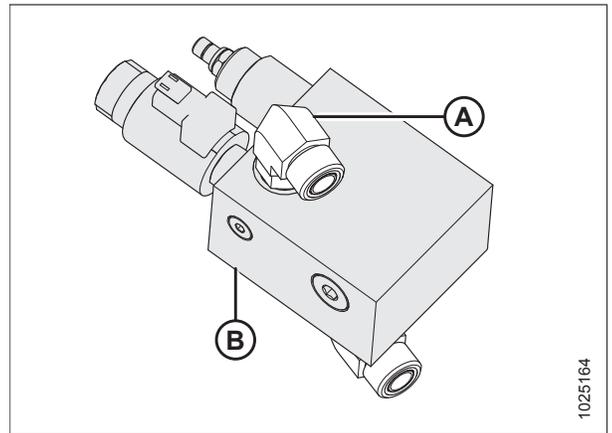


Figure 3.7: Flow Control Valve

14. Disconnect hydraulic hoses (A) and (B) from reel motor (C).

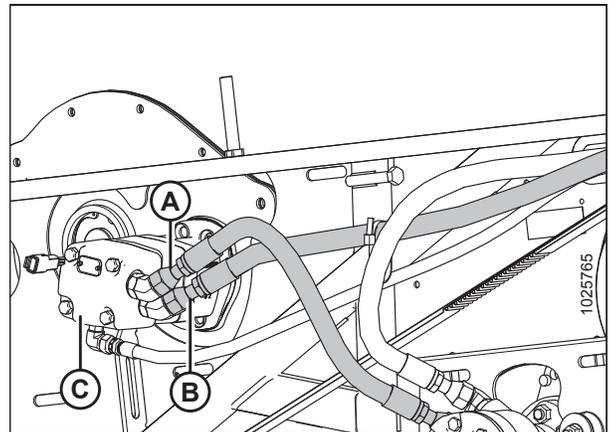


Figure 3.8: Reel Motor Hydraulics

INSTALLATION INSTRUCTIONS

15. Position flow control valve (A) as shown.
16. Loosely connect elbow fitting (B) in port EF of flow control valve (A) to elbow fitting (C) of reel motor (D).
17. Loosely connect hydraulic hose (E) that is routed through the endshield to elbow fitting (F) in port IN of flow control valve (A).

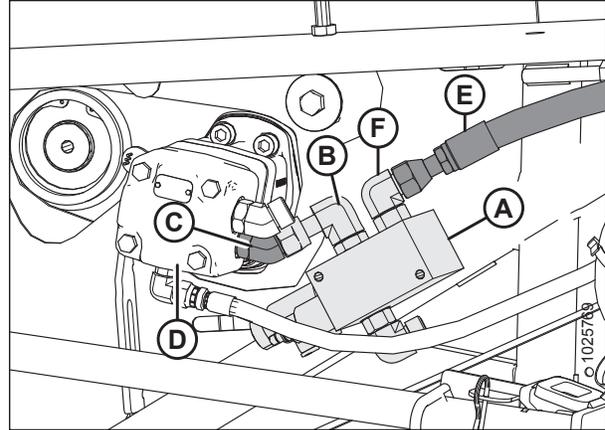


Figure 3.9: Installing Flow Control Valve

18. Connect tee fitting (A) (MD #135784) to elbow fitting (B) of reel motor (C) as shown.
19. Connect hose (D) coming from auger hydraulic motor to tee fitting (A) as shown.

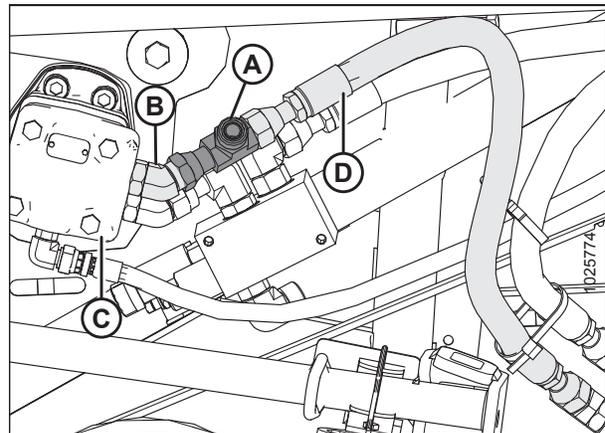


Figure 3.10: Installing Flow Control Valve

20. Connect hose (A) (MD #170952) to tee fitting (B) and to elbow fitting (C) in port CF of flow control valve (D).

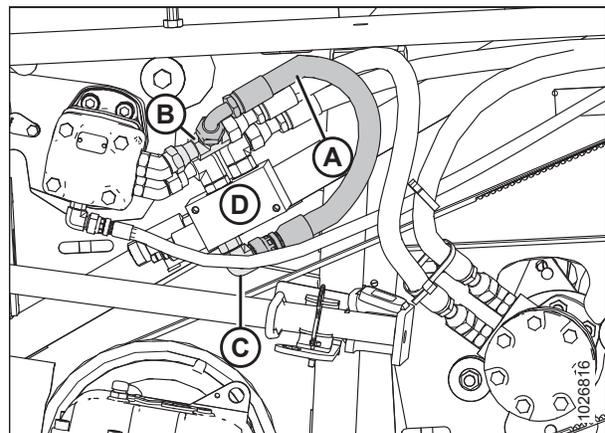


Figure 3.11: Installing Flow Control Valve

INSTALLATION INSTRUCTIONS

21. Secure two hydraulic hoses (A) using two clamps (B) (MD #135235), bolt (C) (MD #21264), and nut (D) (MD #30228).
22. Tighten all fittings.

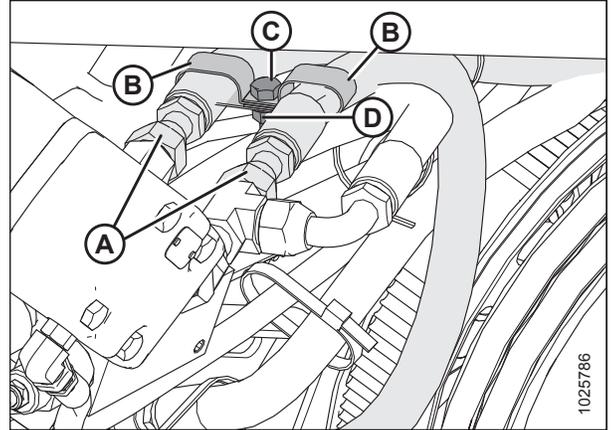


Figure 3.12: Securing Hoses with Clamps

23. Route reel speed harness (A) (MD #283709) along the main header harness using a dual swivel spacer (MD #134442) and two cable ties (MD #30753) as required to keep the harness secured.

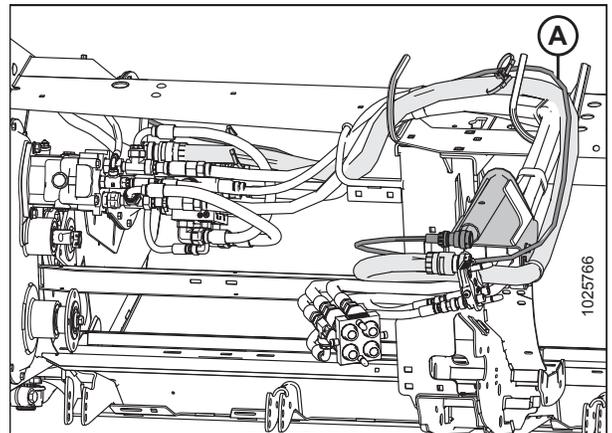


Figure 3.13: Reel Speed Harness Routing

24. Plug reel speed harness (D) into flow control valve (E).
25. Using a dual swivel spacer (A) (MD #134442) and two cable ties (B) (MD #30753), secure hydraulic hose (C) and reel speed harness (D) together as shown.
26. Secure excess harness above the pump.

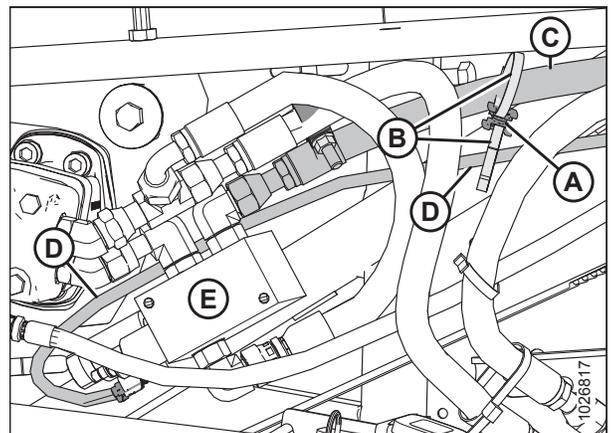


Figure 3.14: Securing Hoses

INSTALLATION INSTRUCTIONS

27. If equipped, lower shield (B).
28. Engage rubber latch (A).

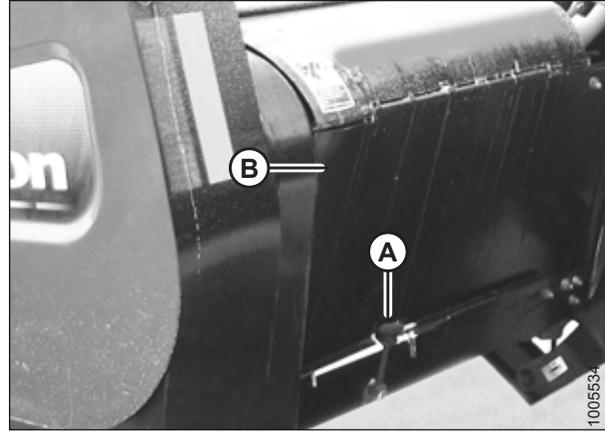


Figure 3.15: Closing Driveline Shield

29. Grasp the top of the endshield, push slightly, and move support (A) inboard to disengage the support.
30. Lower the endshield to approximately 30 cm (1 ft.) from the closed position.
31. Release the endshield so that it drops to the closed position. The endshield will self-latch.

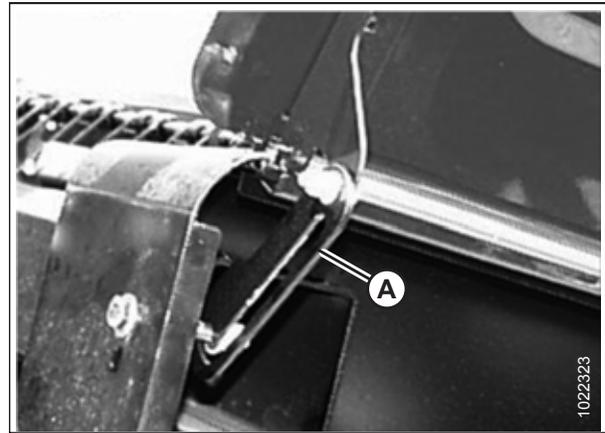


Figure 3.16: Closing Endshield

32. Attach the auger header to the windrower if it's not already attached. Refer to the windrower or header operator's manual for the procedures to attach the header and connect its hydraulics.
33. Connect the variable reel speed harness to top electrical connector (A) under the left platform of the windrower.

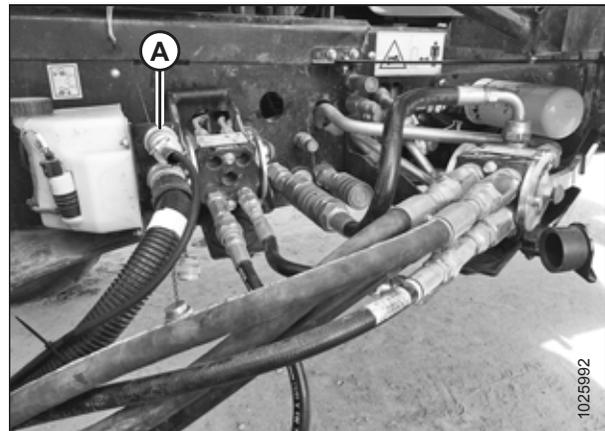


Figure 3.17: Reel Speed Harness Connection

Chapter 4: Operation

Installation of this kit requires the following software versions installed in the windrower:

- Harvest Performance Tracker (HPT) software: Install_SPW_HPAH203586K_efs or newer
 - Master Controller software: MCAH203587M.ida4 or newer
1. Turn the ignition to ON. The HPT screen will display auger header (A) as attached.



Figure 4.1: HPT Screen Display

2. Press soft key 5 on the HPT to open main menu (A), or press SHIFT and SELECT on the ground speed lever (GSL).
3. Using the HPT scroll knob, navigate to SETUP (B), then HEADER SETUP (C). The HEADER SETUP page opens and displays a list of different headers.

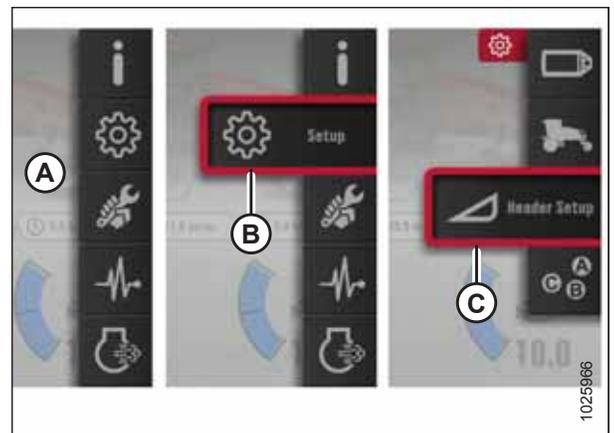


Figure 4.2: HPT Screen Display

4. Select the header type currently attached to the windrower. Select either AUGER or GSS AUGER (A) from the options listed. A new page opens.

NOTE:

The attached header always appears first on the list.



Figure 4.3: HPT Screen Display

OPERATION

- Using the HPT scroll knob, scroll and select ATTACHMENTS (A). A new page opens.

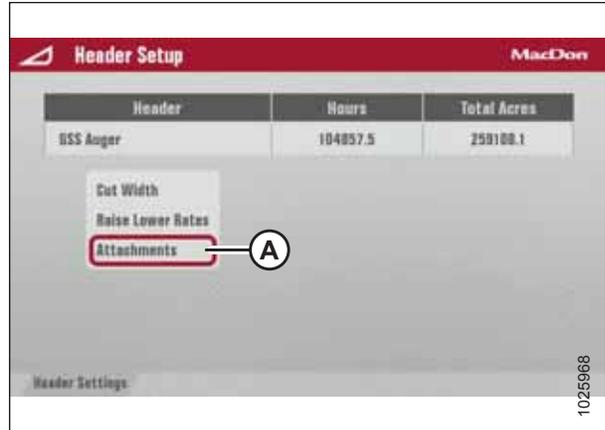


Figure 4.4: HPT Screen Display

- Select DIFFERENTIAL AUGER-REEL CONTROL (A). Once this is done, the auger speed can be controlled via the quick menus on RUN SCREEN 2.

NOTE:

This will enable the system to use the differential auger-reel control package.

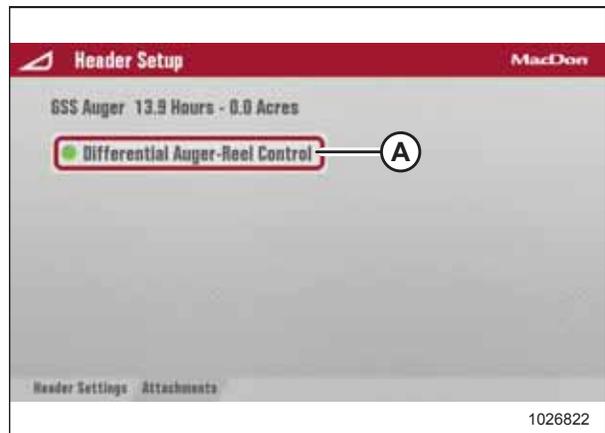


Figure 4.5: HPT Screen Display

- To adjust the auger speed, press soft key 2 on the HPT to display RUN SCREEN 2.



Figure 4.6: HPT Screen Display

OPERATION

- Press scroll knob (A) on the HPT or SELECT button (B) on the ground speed lever (GSL) to display the Quick Menu system.

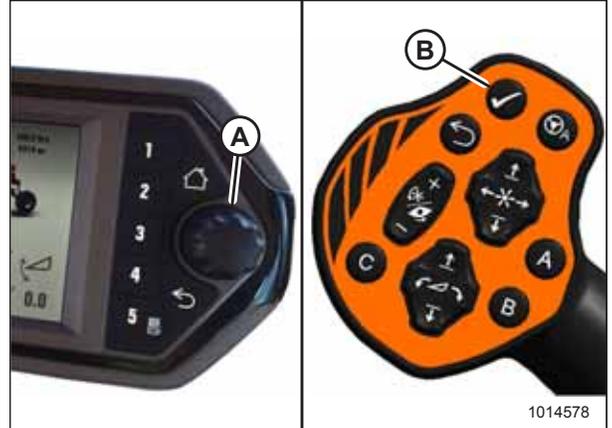


Figure 4.7: HPT Scroll Knob and GSL Select Button

- Scroll to AUGER SPEED tile (A) and select it.



Figure 4.8: HPT Screen Display

- Auger speed (A) can now be adjusted.

IMPORTANT:

Reel speed is still adjusted the same way as it would be without the kit (using the reel speed button on the GSL), but it is important to know that the minimum/maximum reel speed is dependent on the auger speed, and in some cases, in order to have the reel run slower or faster, the Operator may have to decrease or increase the auger speed.



Figure 4.9: HPT Screen Display

MacDon Industries Ltd.

680 Moray Street
Winnipeg, Manitoba
Canada R3J 3S3
t. (204) 885 5590 f. (204) 832 7749

MacDon, Inc.

10708 N. Pomona Avenue
Kansas City, Missouri
United States 64153-1924
t. (816) 891 7313 f. (816) 891 7323

MacDon Australia Pty. Ltd.

A.C.N. 079 393 721
54 National Boulevard, Campbellfield, Victoria,
Australia 3061
t. +61 3 8301 1911 f. +61 3 8301 1912

MacDon Brasil Agribusiness Ltda.

Rua Grã Nicco, 113, Sala 404, B. 04
Mossunguê, Curitiba, Paraná
CEP 81200-200 Brasil
t. +55 41 2101 1713 f. +55 41 2101 1699

LLC MacDon Russia Ltd.

123317 Moscow, Russia
10 Presnenskaya nab, Block C
Floor 5, Office No. 534, Regus Business Centre
t. +7 495 775 6971 f. +7 495 967 7600

MacDon Europe GmbH

Edisonstrasse 63
Haus A, 12459 Berlin
Germany
t. +49 30 408 172 839

CUSTOMERS

MacDon.com

DEALERS

Portal.MacDon.com

Trademarks of products are the marks of their
respective manufacturers and/or distributors.

Printed in Canada