

M155 and M205 Self-Propelled Windrower

Unloading and Assembly Instructions (North America)

169885 Revision A

Original Instruction

Featuring the Dual Direction® and Ultra Glide® suspension on the M155 and M205.



1000141

Published in June, 2014

Introduction

This instructional manual describes the unloading, setup, and pre-delivery requirements for MacDon M155 and M205 Self-Propelled Windrowers.

Use the Table of Contents to guide you to specific areas. Retain this instruction for future reference.

CAREFULLY READ ALL THE MATERIAL PROVIDED BEFORE ATTEMPTING TO UNLOAD, ASSEMBLE, OR USE THE MACHINE.

NOTE: Keep your MacDon publications up-to-date. The most current version can be downloaded from our website (www.macdon.com) or from our Dealer-only site (<https://portal.macdon.com>) (login required).

List of Revisions

The following list provides an account of major changes from the previous version of this document.

Summary of Change	Location
Added Signal Words in Safety Section.	1 Safety, page 1
More terminologies added to Definitions Section.	4 Definitions, page 19
Updated drive wheel images and added references to a 10-bolt wheel assembly.	<ul style="list-style-type: none"> • 6.2 Installing Drive Wheel, page 27 • 7.13 Final Steps, page 134
Removed reference to walking beam grease zerk. No longer required with new design.	6.12.2 Lubrication Points, page 97
Restructured the header attach procedures to improve readability.	6.11 Attaching Headers, page 42
Added the procedure Attaching the A-, D-, and R-Series on windrowers with hydraulic center link but no self-alignment kit for M205.	<ul style="list-style-type: none"> • Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment Kit, page 66 • Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment, page 49 • Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment, page 84
Manual and catalog part numbers changed.	7.12 Manuals, page 133
Updated Trimble Mount kit and Label (GPS completion kit) location.	7.13 Final Steps, page 134
Updated lift linkage image to include new decal.	Various sections

TABLE OF CONTENTS

Introduction	i
List of Revisions	ii
1 Safety	1
1.1 Signal Words	1
1.2 General Safety	2
1.3 Safety Signs	4
2 Recommended Torques	5
2.1 Torque Specifications	5
2.1.1 SAE Bolt Torque Specifications	5
2.1.2 Metric Bolt Specifications	7
2.1.3 Metric Bolt Specifications Bolting into Cast Aluminum	10
2.1.4 Flare-Type Hydraulic Fittings	10
2.1.5 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)	12
2.1.6 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)	14
2.1.7 O-Ring Face Seal (ORFS) Hydraulic Fittings	15
3 Conversion Chart	17
4 Definitions	19
5 Unloading the Windrower	21
5.1 Using Two Forklifts to Unload Windrower	21
5.2 Using One Forklift to Unload Windrower	23
5.2.1 Method 1	23
5.2.2 Method 2	24
6 Assembling the Windrower	25
6.1 Repositioning Right-Hand Leg	25
6.2 Installing Drive Wheel	27
6.3 Repositioning Caster Wheels	28
6.4 Unpacking Ignition Keys	30
6.5 Installing Steps	31
6.6 Connecting Batteries	32
6.7 Starting Engine	33
6.8 Installing AM/FM Radio	36
6.9 Installing Slow Moving Vehicle (SMV) Sign	40
6.10 Attaching Header Boots	41
6.11 Attaching Headers	42
6.11.1 Attaching a D-Series Header	42
Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment	43
Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment	49
Attaching a D-Series Header: Mechanical Center-Link	54
6.11.2 Attaching an A-Series Header	60
Attaching an A-Series Header: Hydraulic Center-Link and Optional Self-Alignment Kit	61
Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment Kit	66
Attaching an A-Series Header: Mechanical Center-Link	72
6.11.3 Attaching an R-Series Header	78
Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment	79
Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment	84
Attaching an R-Series Header: Mechanical Center-Link	90
6.12 Lubricating the Windrower	96
6.12.1 Lubrication Procedure	96
6.12.2 Lubrication Points	97
6.13 Cab Display Module (CDM) Programming	98
6.13.1 M205 Detailed Programming Menu Flow Chart	100

TABLE OF CONTENTS

6.13.2	M155 Detailed Programming Menu Flow Chart	104
7	Performing Predelivery Checks.....	109
7.1	Recording Serial Numbers	109
7.2	Checking Wheel Drive Lubricant Level	110
7.3	Tire Pressures and Ballast Requirements	111
7.3.1	Checking Tire Pressures.....	111
7.3.2	Checking Tire Ballast.....	111
7.4	Checking Engine Air Intake	113
7.5	Checking Hydraulic Oil.....	116
7.6	Checking Fuel Separator.....	117
7.7	Checking Engine Coolant.....	118
7.8	Checking Gearbox Lubricant Level	119
7.9	Checking Air Conditioning (A/C) Compressor Belt.....	120
7.10	Checking Safety System	121
7.11	Operational Checks	123
7.11.1	Checking Engine Warning Lights.....	123
7.11.2	Checking Engine Startup	124
7.11.3	Checking Engine Speed	124
7.11.4	Checking Gauges and Cab Display Module (CDM) Display.....	124
7.11.5	Checking Electrical System.....	125
7.11.6	Checking Operator's Presence System.....	125
7.11.7	Checking Exterior Lights	126
7.11.8	Checking Horn	130
7.11.9	Checking Interior Lights	131
7.11.10	Checking Air Conditioning (A/C) and Heater.....	131
7.12	Manuals.....	133
7.13	Final Steps.....	134
	Predelivery Checklist	135

1 Safety

1.1 Signal Words

Three signal words, DANGER, WARNING, and CAUTION, are used to alert you to hazardous situations. The appropriate signal word for each situation has been selected using the following guidelines:

DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death, or serious injury.

WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death, or serious injury. It may also be used to alert against unsafe practices.

CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor, or moderate injury. It may be used to alert against unsafe practices.

1.2 General Safety

CAUTION

The following are general farm safety precautions that should be part of your operating procedure for all types of machinery.

Protect yourself

- When assembling, operating, and servicing machinery, wear all the protective clothing and personal safety devices that **COULD** be necessary for the job at hand. Don't take chances.

- You may need:

- A hard hat
- Protective footwear with slip resistant soles
- Protective glasses or goggles
- Heavy gloves
- Wet weather gear
- A respirator or filter mask
- Hearing protection

Be aware that exposure to loud noise can cause impairment or loss of hearing. Wearing suitable hearing protection devices such as ear muffs or ear plugs. These will help protect against objectionable or loud noises.

- Provide a first aid kit for use in case of emergencies.
- Keep a fire extinguisher on the machine. Be sure the fire extinguisher is properly maintained. Be familiar with its proper use.
- Keep young children away from the machinery at all times.
- Be aware that accidents often happen when the Operator is tired or in a hurry to get finished. Take the time to consider the safest way. Never ignore warning signs of fatigue.

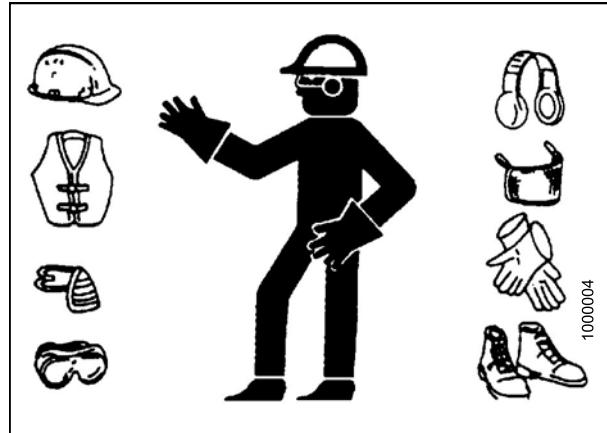


Figure 1.1: Safety Equipment



Figure 1.2: Safety Equipment

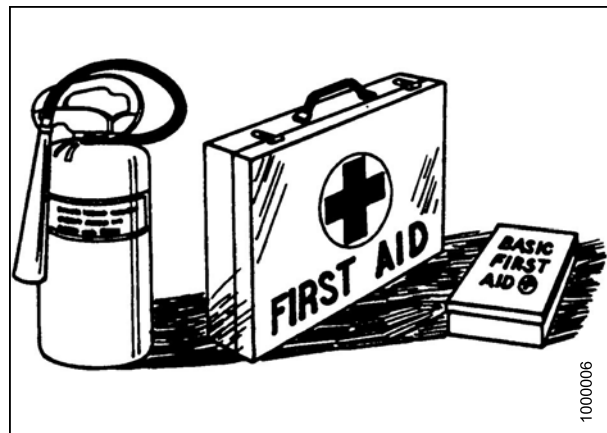


Figure 1.3: Safety Equipment

SAFETY

- Wear close fitting clothing and cover long hair. Never wear dangling items such as scarves or bracelets.
- Keep all shields in place. Never alter or remove safety equipment. Make sure driveline guards can rotate independently of the shaft and can telescope freely.
- Use only service and repair parts, made, or approved by the equipment manufacturer. Substituted parts may not meet strength, design, or safety requirements.



Figure 1.4: Safety around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. Never attempt to clear obstructions or objects, from a machine while the engine is running.
- Do **NOT** modify the machine. Non-authorized modifications may impair machine function and/or safety. It may also shorten the machine's life.
- Stop the engine and remove the key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

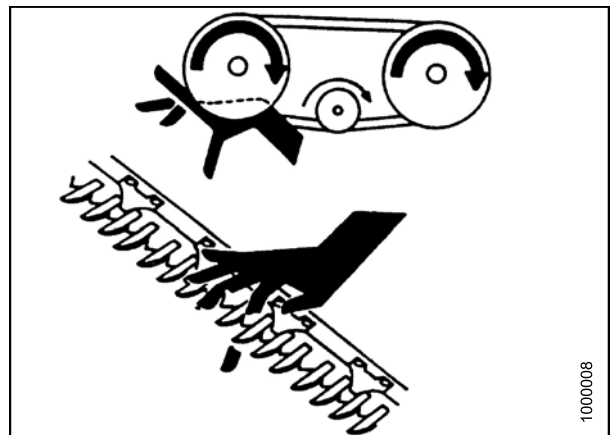


Figure 1.5: Safety around Equipment

- Keep the area used for servicing machinery clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
- Keep work area well lit.
- Keep machinery clean. Straw and chaff, on a hot engine, are a fire hazard. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before storage.
- Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover sharp or extending components to prevent injury from accidental contact.



Figure 1.6: Safety around Equipment

SAFETY

1.3 Safety Signs

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or become illegible.
- If original parts on which a safety sign was installed are replaced, be sure the repair part also bears the current safety sign.
- Safety signs are available from your Dealer Parts Department.

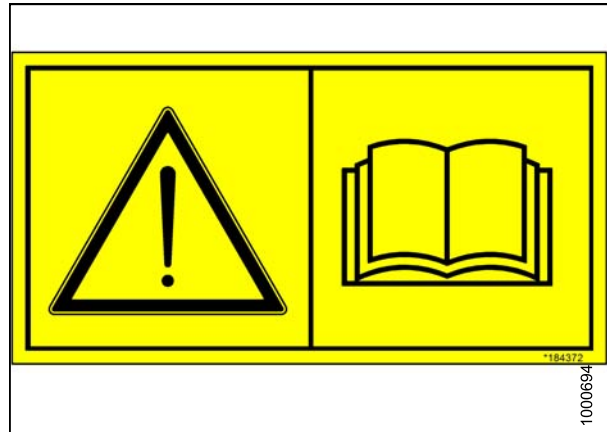


Figure 1.7: Operator's Manual Decal

2 Recommended Torques

2.1 Torque Specifications

The following tables give correct torque values for various bolts, cap screws, and hydraulic fittings.

- Tighten all bolts to the torques specified in chart (unless otherwise noted throughout this manual).
- Replace hardware with the same strength and grade bolt.
- Check tightness of bolts periodically, using the tables below as a guide.
- Torque categories for bolts and cap screws are identified by their head markings.

2.1.1 SAE Bolt Torque Specifications

Torque values shown in this table are valid for non-greased, or non-oiled threads and heads. Therefore, do **NOT** grease or oil bolts or cap screws unless otherwise specified in this manual.

Table 2.1 SAE Grade 5 Bolt and Grade 5 Free Spinning Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
1/4-20	*106	*117	11.9	13.2
5/16-18	*218	*241	24.6	27.1
3/8-16	32	36	44	48
7/16-14	52	57	70	77
1/2-13	79	87	106	118
9/16-12	114	126	153	170
5/8-11	157	173	212	234
3/4-10	281	311	380	420
7/8-9	449	496	606	669
1-8	611	676	825	912

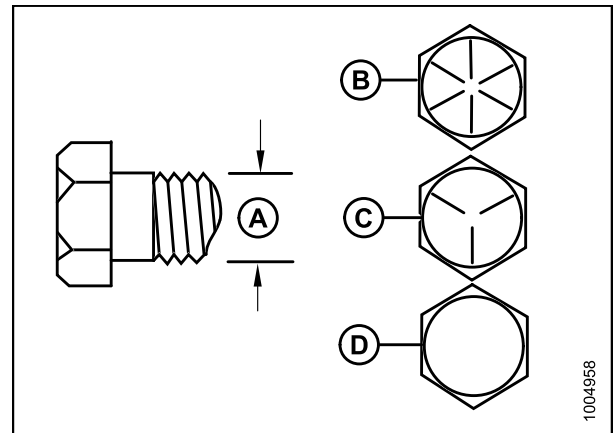


Figure 2.1: Bolt Grades

A - Nominal Size
C - SAE-5

B - SAE-8
D - SAE-2

RECOMMENDED TORQUES

Table 2.2 SAE Grade 5 Bolt and Grade 5 Distorted Thread Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
1/4-20	*72	*80	8.1	9
5/16-18	*149	*164	16.7	18.5
3/8-16	22	24	30	33
7/16-14	35	39	48	53
1/2-13	54	59	73	80
9/16-12	77	86	105	116
5/8-11	107	118	144	160
3/4-10	192	212	259	286
7/8-9	306	338	413	456
1-8	459	507	619	684

Table 2.3 SAE Grade 8 Bolt and Grade 8 Distorted Thread Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
1/4-20	*150	*165	16.8	18.6
5/16-18	18	19	24	26
3/8-16	31	34	42	46
7/16-14	50	55	67	74
1/2-13	76	84	102	113
9/16-12	109	121	148	163
5/8-11	151	167	204	225
3/4-10	268	296	362	400
7/8-9	432	477	583	644
1-8	647	716	874	966

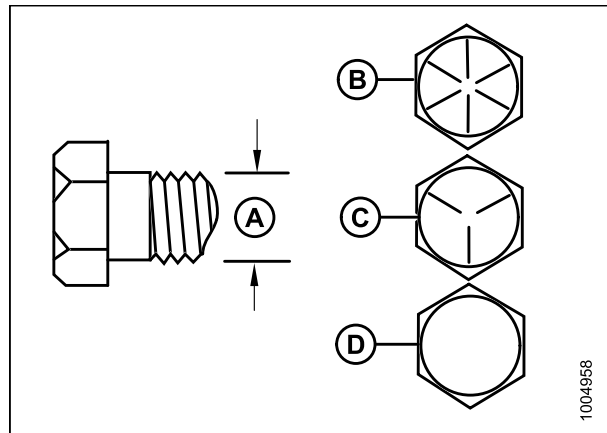


Figure 2.2: Bolt Grades

A - Nominal Size
C - SAE-5

B - SAE-8
D - SAE-2

RECOMMENDED TORQUES

Table 2.4 SAE Grade 8 Bolt and Grade 8 Free Spinning Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
1/4-20	*150	*165	16.8	18.6
5/16-18	26	28	35	38
3/8-16	46	50	61	68
7/16-14	73	81	98	109
1/2-13	111	123	150	166
9/16-12	160	177	217	239
5/8-11	221	345	299	330
3/4-10	393	435	531	587
7/8-9	633	700	855	945
1-8	863	954	1165	1288

2.1.2 Metric Bolt Specifications

Table 2.5 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut

Nominal Size	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
3-0.5	*13	*14	1.4	1.6
3.5-0.6	*20	*22	2.2	2.5
4-0.7	*29	*32	3.3	3.7
5-0.8	*59	*66	6.7	7.4
6-1.0	*101	*112	11.4	12.6
8-1.25	20	23	28	30
10-1.5	40	45	55	60
12-1.75	70	78	95	105
14-2.0	113	124	152	168
16-2.0	175	193	236	261
20-2.5	341	377	460	509
24-3.0	589	651	796	879

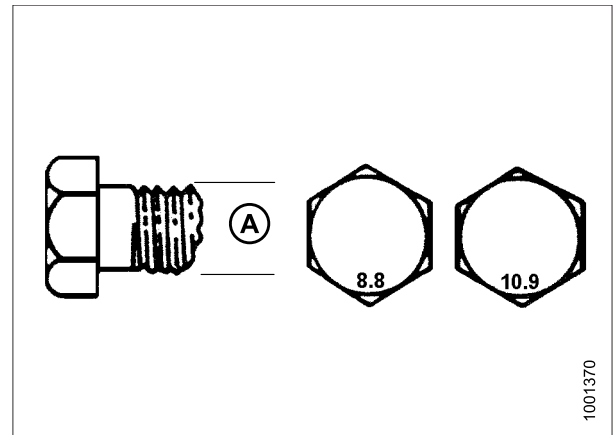


Figure 2.3: Bolt Grades

A - Nominal Size

RECOMMENDED TORQUES

Table 2.6 Metric Class 8.8 Bolts and Class 9 Distorted Thread Nut

Nominal Size	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
3-0.5	*9	*10	1	1.1
3.5-0.6	*14	*15	1.5	1.7
4-0.7	*20	*22	2.3	2.5
5-0.8	*40	*45	4.5	5
6-1.0	*69	*76	7.7	8.6
8-1.25	*167	*185	18.8	20.8
10-1.5	28	30	37	41
12-1.75	48	53	65	72
14-2.0	77	85	104	115
16-2.0	119	132	161	178
20-2.5	233	257	314	347
24-3.0	402	444	543	600

Table 2.7 Metric Class 10.9 Bolts and Class 10 Free Spinning Nut

Nominal Size	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
3-0.5	*18	*19	1.8	2
3.5-0.6	*27	*30	2.8	3.1
4-0.7	*41	*45	4.2	4.6
5-0.8	*82	*91	8.4	9.3
6-1.0	*140	*154	14.3	15.8
8-1.25	28	31	38	42
10-1.5	56	62	75	83
12-1.75	97	108	132	145
14-2.0	156	172	210	232
16-2.0	242	267	326	360
20-2.5	472	521	637	704
24-3.0	815	901	1101	1217

RECOMMENDED TORQUES

Table 2.8 Metric Class 10.9 Bolts and Class 10 Distorted Thread Nut

Nominal Size	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
3-0.5	*12	*13	1.3	1.5
3.5-0.6	*19	*21	2.1	2.3
4-0.7	*28	*31	3.1	3.4
5-0.8	*56	*62	6.3	7
6-1.0	*95	*105	10.7	11.8
8-1.25	19	21	26	29
10-1.5	38	42	51	57
12-1.75	66	73	90	99
14-2.0	106	117	143	158
16-2.0	165	182	222	246
20-2.5	322	356	434	480
24-3.0	556	614	750	829

RECOMMENDED TORQUES

2.1.3 Metric Bolt Specifications Bolting into Cast Aluminum

Table 2.9 Metric Bolt Bolting into Cast Aluminum

Nominal Size	Bolt Torque			
	8.8 (Cast Aluminum)		10.9 (Cast Aluminum)	
	ft-lbf	N-m	ft-lbf	N-m
M3			1	
M4			2.6	4
M5			5.5	8
M6	6	9	9	12
M8	14	20	20	28
M10	28	40	40	55
M12	52	70	73	100
M14				
M16				

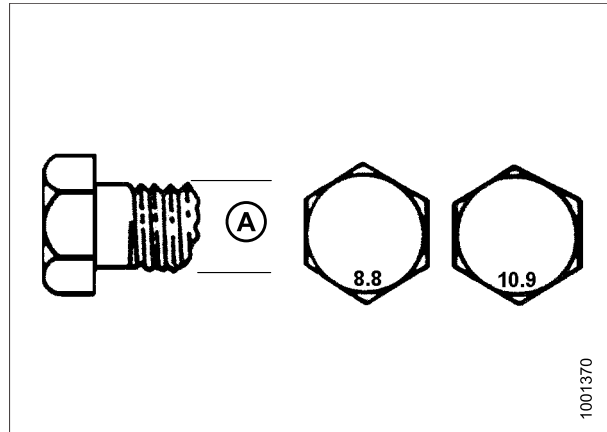


Figure 2.4: Bolt Grades

A - Nominal Size

2.1.4 Flare-Type Hydraulic Fittings

1. Check flare (A) and flare seat (B) for defects that might cause leakage.
2. Align tube (C) with fitting (D) and thread nut (E) onto fitting without lubrication until contact has been made between the flared surfaces.
3. Torque the fitting nut (E) to the specified number of FFFT or to a given torque value shown in the following table.
4. To prevent the fitting (D) from rotating, use two wrenches. Place one wrench on the fitting body (D) and tighten the nut (E) with the other wrench to the torque shown.
5. Assess the final condition of the connection.

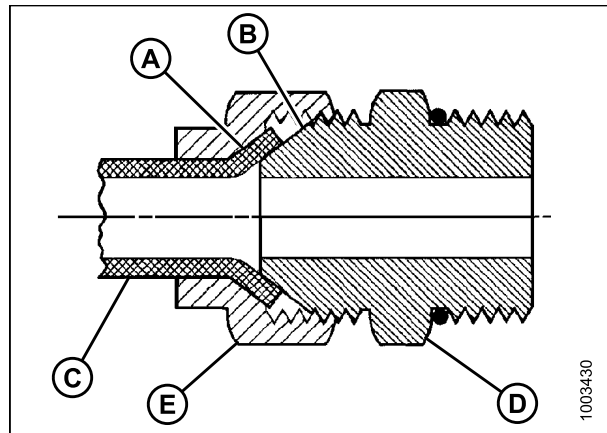


Figure 2.5: Hydraulic Fitting

A - Flare
 B - Flare Seat
 C - Tube
 D - Body
 E - Nut

RECOMMENDED TORQUES

Table 2.10 Flare-Type Hydraulic Tube Fittings

SAE No.	Tube Size O.D. (in.)	Thread Size (in.)	Nut Size across Flats (in.)	Torque Value ¹		Flats from Finger Tight (FFFT)	
				ft-lbf	N-m	Flats	Turns
3	3/16	3/8	7/16	6	8	1	1/6
4	1/4	7/16	9/16	9	12	1	1/6
5	5/16	1/2	5/8	12	16	1	1/6
6	3/8	9/16	11/16	18	24	1	1/6
8	1/2	3/4	7/8	34	46	1	1/6
10	5/8	7/8	1	46	62	1	1/6
12	3/4	1-1/16	1-1/4	75	102	3/4	1/8
14	7/8	1-3/8	1-3/8	90	122	3/4	1/8
16	1	1-5/16	1-1/2	105	142	3/4	1/8

1. Torque values shown are based on lubricated connections as in reassembly.

RECOMMENDED TORQUES

2.1.5 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Back off the lock nut (C) as far as possible. Ensure that washer (D) is not loose and is pushed toward the lock nut (C) as far as possible.
3. Check that O-ring (A) is **NOT** on the threads, adjust if necessary.
4. Apply hydraulic system oil to the O-ring (A).

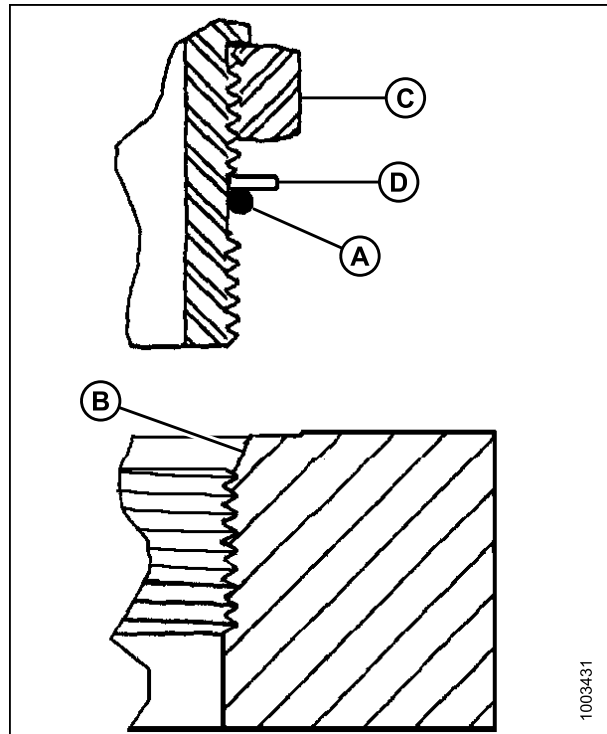


Figure 2.6: Hydraulic Fitting

A - O-Ring B - Seat C - Nut
D - Washer

5. Install fitting (B) into port until back up washer (D) and O-ring (A) contacts on part face (E).
6. Position angle fittings by unscrewing no more than one turn.
7. Turn lock nut (C) down to washer (D) and tighten to torque shown. Use two wrenches, one on the fitting (B) and the other on the lock nut (C).
8. Check the final condition of the fitting.

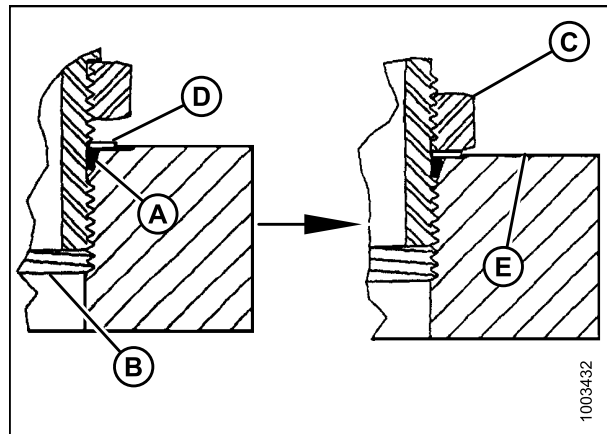


Figure 2.7: Hydraulic Fitting

A - O-Ring B - Fitting C - Nut
D - Washer E - Part Face

RECOMMENDED TORQUES

Table 2.11 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ²	
		ft·lbf (*in·lbf)	N·m
-3	3/8-24	*106-115	12-13
-4	7/16-20	14-15	19-21
-5	1/2-20	15-24	21-33
-6	9/16-18	19-21	26-29
-8	3/4-16	34-37	46-50
-10	7/8-14	55-60	75-82
-12	1-1/16-12	88-97	120-132
-14	1-3/8-12	113-124	153-168
-16	1-5/16-12	130-142	176-193
-20	1-5/8-12	163-179	221-243
-24	1-7/8-12	199-220	270-298

2. Torque values shown are based on lubricated connections as in reassembly.

RECOMMENDED TORQUES

2.1.6 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Check that O-ring (A) is **NOT** on the threads, adjust if necessary.
3. Apply hydraulic system oil to the O-ring.
4. Install fitting (C) into port until fitting is hand tight.
5. Torque fitting (C) per value in chart. Refer to table [2.12 O-Ring Boss \(ORB\) Hydraulic Fittings \(Non-Adjustable\)](#), page 14.
6. Check the final condition of the fitting.

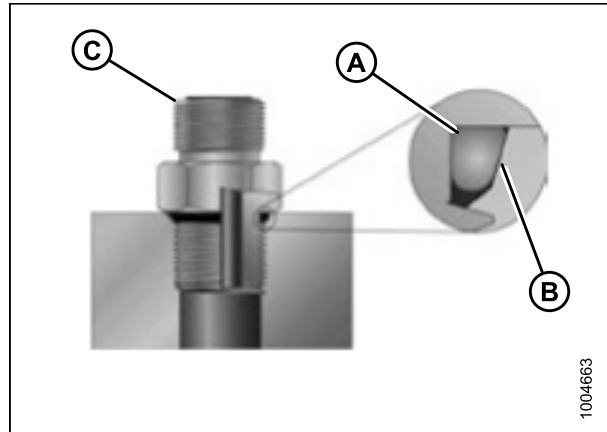


Figure 2.8: Hydraulic Fitting

Table 2.12 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ³	
		ft-lbf (*in-lbf)	N-m
-3	3/8-24	*106-115	12-13
-4	7/16-20	14-15	19-21
-5	1/2-20	15-24	21-33
-6	9/16-18	19-21	26-29
-8	3/4-16	34-37	46-50
-10	7/8-14	55-60	75-82
-12	1-1/16-12	88-97	120-132
-14	1-3/8-12	113-124	153-168
-16	1-5/16-12	130-142	176-193
-20	1-5/8-12	163-179	221-243
-24	1-7/8-12	199-220	270-298

3. Torque values shown are based on lubricated connections as in reassembly.

RECOMMENDED TORQUES

2.1.7 O-Ring Face Seal (ORFS) Hydraulic Fittings

To tighten O-ring face seal (ORFS) hydraulic fittings, follow these steps:

1. Check components to ensure that the sealing surfaces and fitting threads are free of burrs, nicks, and scratches or any foreign material.



Figure 2.9: Hydraulic Fitting

2. Apply hydraulic system oil to the O-ring (B).
3. Align the tube or hose assembly so that the flat face of the sleeve (A) or (C) comes in full contact with O-ring (B).
4. Thread tube or hose nut (D) until hand-tight. The nut should turn freely until it is bottomed out.
5. Torque fitting further to the torque value in the table shown in the opposite column.

NOTE: If applicable, hold the hex on the fitting body (E) to prevent rotation of fitting body and hose when tightening the fitting nut (D).

6. When assembling unions or two hoses together, three wrenches will be required.
7. Check the final condition of the fitting.

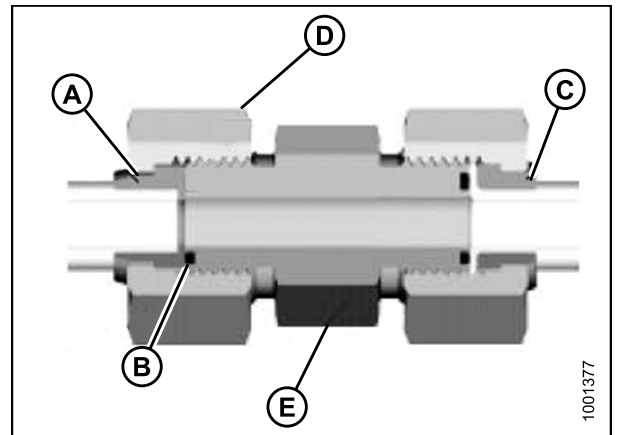


Figure 2.10: Hydraulic Fitting

A - Brazed Sleeve
B - O-Ring
C - Two Piece Sleeve
D - Nut
E - Fitting Body

RECOMMENDED TORQUES

Table 2.13 O-Ring Face Seal (ORFS) Hydraulic Fittings

SAE Dash Size	Thread Size (in.)	Torque Value ⁴	
		ft·lbf (*in·lbf)	N·m
-3	Note ⁵	–	–
-4	9/16–18	18–21	25–28
-5	Note ⁵	–	–
-6	11/16-16	29–32	40–44
-8	13/16-16	41–45	55–61
-10	1–14	59–65	80–88
-12	1-3/16-12	85–94	115–127
-14	Note ⁵	–	–
-16	1-7/16-12	111–122	150–165
-20	1-11/16-12	151–167	205–226
-24	2–12	232–256	315–347
-32	2-1/2-12	376–414	510–561

4. Torque values and angles shown are based on lubricated connection, as in reassembly.

5. O-ring face seal type end not defined for this tube size

3 Conversion Chart

Quantity	Inch-Pound Units		Factor	SI Units (Metric)	
	Unit Name	Abbreviation		Unit Name	Abbreviation
Area	acres	acres	$\times 0.4047 =$	hectares	ha
Flow	US gallons per minute	gpm	$\times 3.7854 =$	liters per minute	L/min
Force	pounds force	lbf	$\times 4.4482 =$	Newtons	N
Length	inch	in.	$\times 25.4 =$	millimeters	mm
	foot	ft.	$\times 0.305 =$	meters	m
Power	horsepower	hp	$\times 0.7457 =$	kilowatts	kW
Pressure	pounds per square inch	psi	$\times 6.8948 =$	kilopascals	kPa
			$\times .00689 =$	megapascals	MPa
			$\div 14.5038 =$	bar (non-SI)	bar
Torque	pound feet or foot pounds	ft-lbf	$\times 1.3558 =$	newton meters	N-m
	pound inches or inch pounds	in-lbf	$\times 0.1129 =$	newton meters	N-m
Temperature	degrees fahrenheit	$^{\circ}\text{F}$	$(^{\circ}\text{F}-32) \times 0.56 =$	Celsius	$^{\circ}\text{C}$
Velocity	feet per minute	ft/min	$\times 0.3048 =$	meters per minute	m/min
	feet per second	ft/s	$\times 0.3048 =$	meters per second	m/s
	miles per hour	mph	$\times 1.6063 =$	kilometres per hour	km/h
Volume	US gallons	US gal	$\times 3.7854 =$	liters	L
	ounces	oz.	$\times 29.5735 =$	milliliters	ml
	cubic inches	in. ³	$\times 16.3871 =$	cubic centimetres	cm ³ or cc
Weight	pounds	lbs	$\times 0.4536 =$	kilograms	kg

4 Definitions

The following terms and acronyms may be used in this manual.

Term	Definition
A-Series header	MacDon auger header.
API	American Petroleum Institute.
APT	Articulated Power Turn.
ASTM	American Society of Testing and Materials.
Bolt	A headed and externally threaded fastener that is designed to be paired with a nut.
Cab-forward	Windrower operation with the Operator and cab facing in the direction of travel.
CDM	Cab display module on a self-propelled windrower.
Center-link	A hydraulic cylinder or manually adjustable turnbuckle type link between the header and the machine to which it is attached. It is used to change header angle.
CGVV	Combined vehicle gross weight.
D-Series header	MacDon draper headers.
DWA	Double Windrow Attachment.
ECM	Engine control module.
Engine-forward	Windrower operation with the Operator and engine facing in the direction of travel.
Finger tight	Finger tight is a reference position where sealing surfaces or components are making contact with each other and the fitting has been tightened to a point where the fitting is no longer loose.
F.F.F.T	Flats from finger tight.
GSL	Ground speed lever.
GVW	Gross vehicle weight.
Hard joint	A joint made with the use of a fastener where the joining materials are highly incompressible.
Header	A machine that cuts and lays crop into a windrow and is attached to a self-propelled windrower.
Hex key	A hex key or Allen key (also known by various other synonyms) is a tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in the head (internal-wrenching hexagon drive).
hp	Horsepower.
ISC	Intermediate Speed Control.
JIC	Joint Industrial Council: a standards body that developed the standard sizing and shape for original 37° flared fitting.
Knife	A cutting device which uses a reciprocating cutter. Also called a sickle.
n/a	Not applicable.
Nut	An internally threaded fastener that is designed to be paired with a bolt.
N-DETENT	The slot opposite the NEUTRAL position on operator's console.

DEFINITIONS

Term	Definition
NPT	National Pipe Thread: a style of fitting used for low pressure port openings. Threads on NPT fittings are uniquely tapered for an interference fit.
ORB	O-ring boss: a style of fitting commonly used in port opening on manifolds, pumps and motors.
ORFS	O-ring face seal: a style of fitting commonly used for connecting hoses and tubes. This style of fitting is also commonly called ORS, which stands for O-ring seal.
PTO	Power Take-Off.
rpm	Revolutions per minute.
R-Series header	MacDon rotary disc header.
RoHS (Reduction of Hazardous Substances)	A directive by the European Union to restrict the use of certain hazardous substances (such as hexavalent chromium used in some yellow zinc platings).
SAE	Society Of Automotive Engineers.
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread in one of the mating parts.
Self-Propelled (SP) Windrower	Self-propelled machine consisting of a power unit with a header and/or conditioner.
Soft joint	A joint made with the use of a fastener where the joining materials are compressible or experience relaxation over a period of time.
spm	Strokes per minute.
Tractor	Agricultural type tractor.
Truck	A four-wheel highway/road vehicle weighing no less than 7500 lbs (3400 kg).
Tension	Axial load placed on a bolt or screw, usually measured in pounds (lb) or Newtons (N).
T.F.F.T.	Turns from finger tight.
Torque	The product of a force X lever arm length, usually measured in foot-pounds (ft-lbf) or Newton-meters (N·m).
Torque angle	A tightening procedure where the fitting is assembled to a precondition (finger tight) and then the nut is turned further a number of degrees or a number of flats to achieve its final position.
Torque-tension	The relationship between the assembly torque applied to a piece of hardware and the axial load it induces in the bolt or screw.
UCA	Upper cross auger.
Washer	A thin cylinder with a hole or slot located in the center and is to be used as a spacer, load distribution element, or a locking mechanism.
Windrower	Power unit of a self-propelled header.
WCM	Windrower control module.

5 Unloading the Windrower

You can use one or two forklifts to unload the windrower. Refer to [5.1 Using Two Forklifts to Unload Windrower, page 21](#) or [5.2 Using One Forklift to Unload Windrower, page 23](#).

5.1 Using Two Forklifts to Unload Windrower



Figure 5.1: M155 Shown, M205 Looks Similar

CAUTION

To avoid injury to bystanders from being struck by machinery, do NOT allow people to stand in unloading area.

CAUTION

Equipment used for unloading must meet or exceed the requirements specified below. Using inadequate equipment may result in chain breakage, vehicle tipping, or machine damage.

Table 5.1 Lifting Vehicle

Minimum Lifting Capacity ⁶	5500 lb (2500 kg)
Minimum Fork Length	78 in. (1981 mm)

IMPORTANT:

- Forklifts are normally rated for a load located 24 in. (610 mm) ahead of back end of forks.
- To obtain the forklift capacity at 48 in. (1220 mm), check with your forklift distributor.

1. Move trailer onto level ground and block trailer wheels.

6. At 48 in. (1220 mm) from back end of forks.

UNLOADING THE WINDROWER

2. Set forklift tines to the widest possible setting.
3. Position one forklift on either side of trailer and position forks under windrower frame.

NOTE: Windrower center of gravity is approximately 55 in. (1397 mm) rearward of drive wheel center.

4. Lift with both forklifts simultaneously until windrower is clear of trailer bed.

WARNING

Be sure forks are secure before moving trailer away from load. Stand clear when lifting.

5. Drive the truck slowly forward until trailer bed is clear of windrower.
6. Lower unit slowly and simultaneously with both forklifts to the ground. If ground is soft, place wooden blocks under front shipping stands.
7. Back off forklifts.
8. Check windrower for shipping damage and check shipment for missing parts.

UNLOADING THE WINDROWER

5.2 Using One Forklift to Unload Windrower

Two different methods can be used to unload the windrower using one forklift. Refer to [5.2.1 Method 1, page 23](#) or [5.2.2 Method 2, page 24](#).

5.2.1 Method 1

CAUTION

Equipment used for unloading must meet or exceed the requirements specified below. Using inadequate equipment may result in chain breakage, vehicle tipping, or machine damage.

Table 5.2 Lifting Vehicle

Minimum Capacity ⁷	5500 lb (2500 kg)
-------------------------------	-------------------

IMPORTANT:

- Forklifts are normally rated for a load located 24 in. (610 mm) ahead of back end of forks.
- To obtain the forklift capacity of 48 in. (1220 mm), check with your forklift distributor.

Table 5.3 Chain

Type	Overhead lifting quality (1/2 in.)
Minimum Working Load	5000 lb (2270 kg)

1. Position rear of trailer against unloading dock that is the same height or slightly lower than the trailer bed.
2. Remove shipped parts from under windrower frame.
3. Set forklift tines to widest possible setting.
4. Drive forklift up to rear of windrower and place forks under the rear frame cross member.
5. Install chains from forklift mast to jacking brackets on both front legs of windrower. Chains must be the same length.

CAUTION

The front legs rest on the trailer bed on skid shoes. Ensure there are no obstructions to prevent rearward sliding of the skid shoes and watch carefully as the unit is dragged to ensure the skid shoes are not sliding sideways towards the edge of the trailer bed.

6. Drag windrower rearward off of carrier.
7. Remove chains and back off the forklift.
8. Check windrower for shipping damage and check shipment for missing parts.

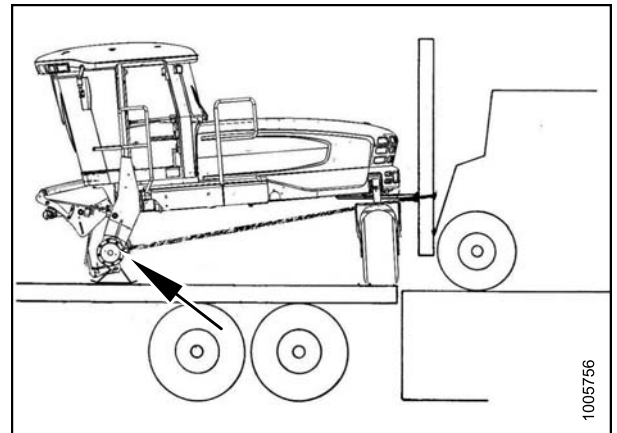


Figure 5.2: Unloading Windrower

⁷ At 48 in. (1220 mm) from back end of forks.

UNLOADING THE WINDROWER

5.2.2 Method 2

CAUTION

Equipment used for unloading must meet or exceed the requirements specified below. Using inadequate equipment may result in chain breakage, vehicle tipping, or machine damage.

Table 5.4 Lifting Vehicle

Minimum Capacity ⁸	11,000 lb (4994 kg)
Minimum Fork Length	78 in. (1981 mm)

IMPORTANT:

- Forklifts are normally rated for a load located 24 in. (610 mm) ahead of back end of forks.
- To obtain the forklift capacity of 48 in. (1220 mm), check with your forklift distributor.

WARNING

Be sure forks are secure before moving away from load. Stand clear when lifting.

1. Move trailer onto level ground and block trailer wheels.
2. Set forklift tines to the widest possible setting.
3. Position forklift on left or right side of trailer and position forks (A) under windrower frame.

NOTE: Windrower center of gravity is approximately 55 in. (1397 mm) rearward of drive wheel center.

WARNING

Ensure forks project beyond far side of frame.

4. Lift until windrower is clear of trailer bed.
5. Slowly back forklift away from trailer until windrower is clear of trailer.
6. Lower unit slowly to the ground. If ground is soft, place wooden blocks under front shipping stands.
7. Back off forklift.
8. Check windrower for shipping damage and check shipment for missing parts.



Figure 5.3: Unloading Windrower

8. At 48 in. (1220 mm) from back end of forks.

6 Assembling the Windrower

Follow each of the procedures in this chapter in order.

6.1 Repositioning Right-Hand Leg

The right cab-forward leg requires repositioning from shipping to field configuration as follows:

1. Support front of the windrower with stand (or equivalent) so that the right-hand leg is off the ground.
2. Position jack (A) under right-hand leg and raise jack slightly to take some weight off leg.

IMPORTANT:

Removal of pins will be difficult if jack is NOT positioned to take weight off leg.

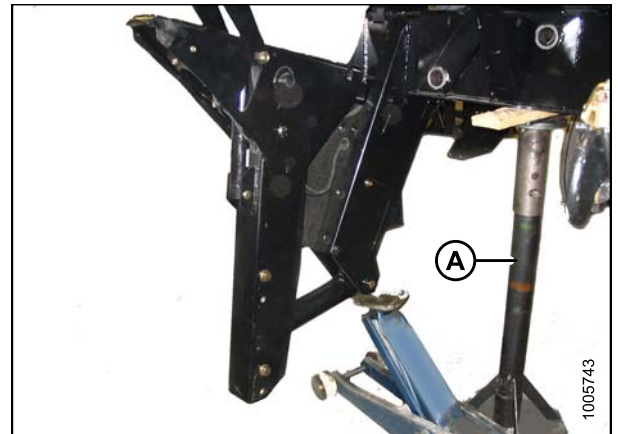


Figure 6.1: Right-Hand Leg

3. Remove two bolts, washers, and nuts (A) from frame.

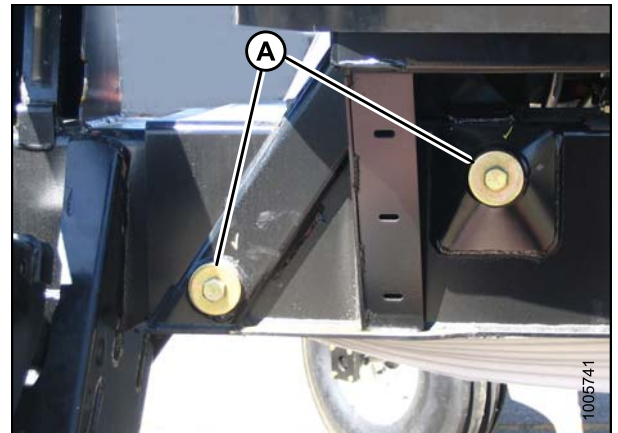


Figure 6.2: Windrower Frame

ASSEMBLING THE WINDROWER

4. Adjust jack height while observing pin (A) position in bore. When pin (A) is loose, tap out pin (A) with hammer or use tool (MD #B5442) to extract pin.
5. Repeat for second pin.



Figure 6.3: Windrower Frame

6. Move leg out to expose one hole (A).
7. Reinstall pins and secure with bolts, washers (B), and nuts (not shown). Torque nuts to 100 lbf-ft (136 N·m).
8. Lower jack and remove it from the right-hand leg.

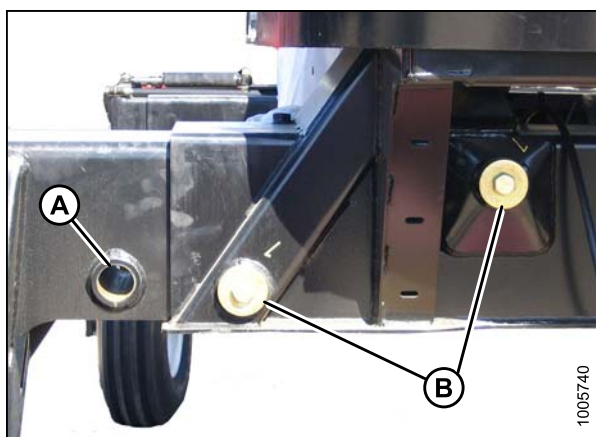


Figure 6.4: Windrower Frame

ASSEMBLING THE WINDROWER

6.2 Installing Drive Wheel

1. Position drive wheel (A) against wheel drive hub (B), so that air valve (C) are on the outside and tire tread (D) points forward, when windrower is in cab forward. For Turf tires (diamond tread), be sure arrow on sidewall points in forward rotation, when windrower in cab forward.
2. Lift wheel on hub with lifting device. Lower lifting device.

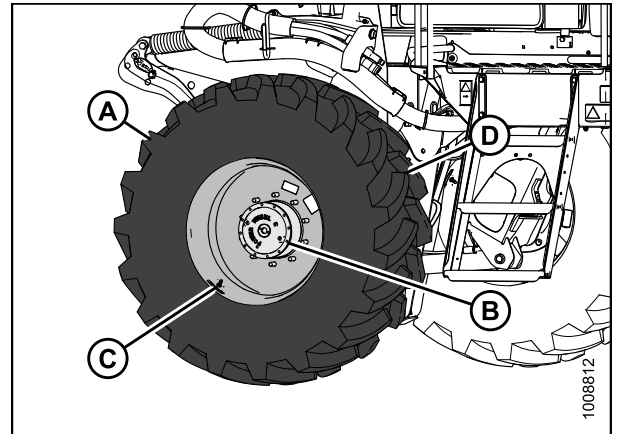


Figure 6.5: Drive Wheel Assembly

3. Line up the holes in the rim with the studs on the wheel drive hub and install wheel nuts (A).

NOTE: To avoid damage to wheel rims and studs, tighten nuts by hand, do **NOT** use an impact gun, do **NOT** use lubricant or Never-Seez® compound, and do **NOT** overtighten wheel nuts.

4. Torque drive wheel nuts to 375 ft·lbf (510 N·m) using the tightening sequence shown at right.

IMPORTANT:

Ensure that only manufacturer specified nuts (MD #205397) are used.

5. After one hour of operation, retorque the wheel nuts. Then check every hour until two consecutive checks produce no movement of the nuts.

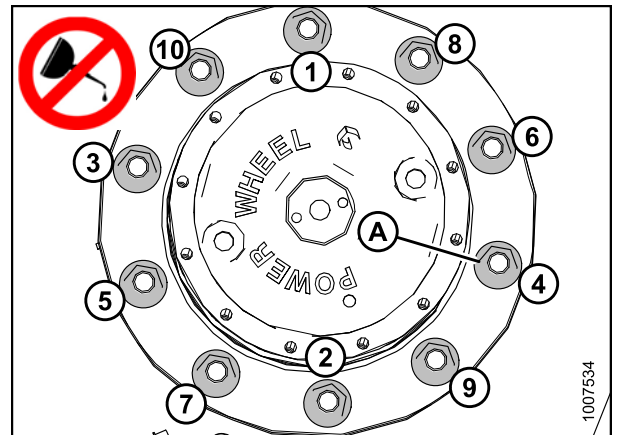


Figure 6.6: Drive Wheel Nuts

ASSEMBLING THE WINDROWER

6.3 Repositioning Caster Wheels

As an option, the rear casters can be adjusted to a narrow tread width to allow loading and shipping without having to remove them.

A **NARROW TREAD** width also suits smaller headers by allowing more space to the uncut crop and provides more manoeuvrability around poles, irrigation inlets, and other obstacles.

A **WIDER TREAD** width is useful in heavy crops that produce large windrows so that run-over is reduced.

1. Raise rear of windrower slightly so that most of the weight is off the casters, using a jack or other lifting device under the frame where shown (B).

NOTE: Lifting device should have a lifting capacity of at least 5000 lb (2270 kg).

2. Remove six bolts (A) (four on backside, two on underside) and washers from left and right sides of walking beam.

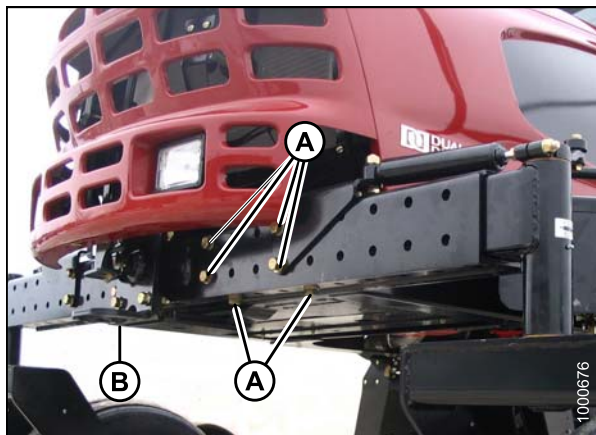


Figure 6.7: Walking Beam

3. Slide extensions outboard equal amounts and align holes at desired location.

NOTE: Use the caster wheels to assist in moving the axle by rotating the caster so that the wheel is parallel to the axle.



Figure 6.8: Walking Beam

ASSEMBLING THE WINDROWER

IMPORTANT:

Caster wheels must be equidistant from center of windrower.

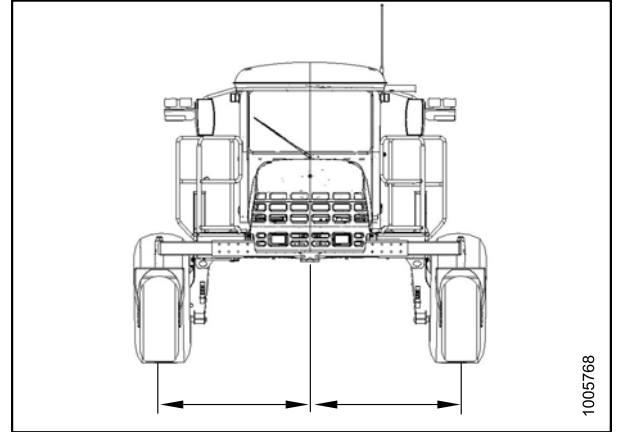


Figure 6.9: Widest Tread Width Shown

4. Position bracket (A) and install bolts (B). The two shorter bolts are installed at the back inboard locations. Torque as follows:
 - a. Snug bottom bolts (C).
 - b. Tighten and torque back bolts to 330 ft·lbf· (447 N·m).
 - c. Tighten and torque bottom bolts to 330 ft·lbf· (447 N·m).
5. Lower windrower to ground.

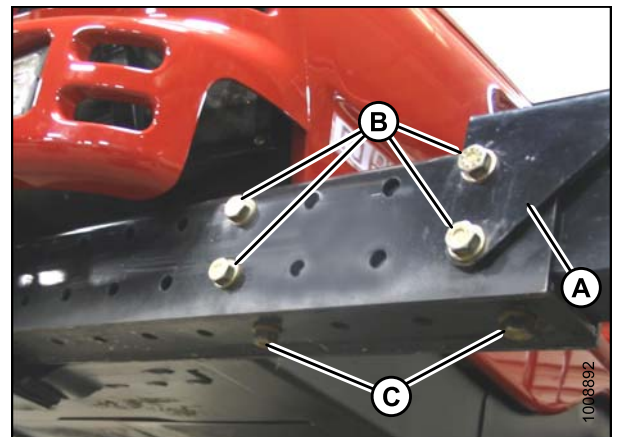


Figure 6.10: Walking Beam

IMPORTANT:

Re-torque bolts after first 5 and 10 hours of operation.

ASSEMBLING THE WINDROWER

6.4 Unpacking Ignition Keys

1. Remove wing nut (A) from fuse box cover (B) and remove cover.

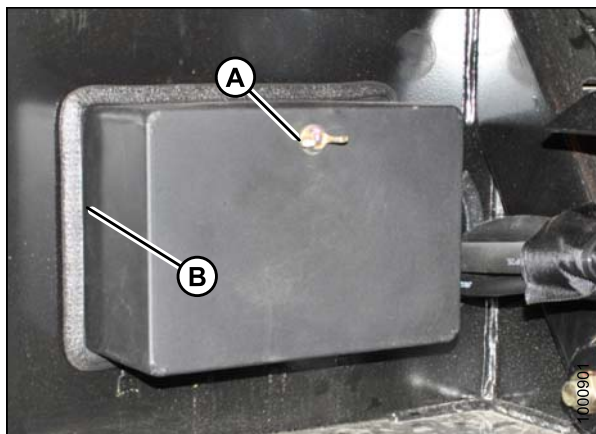


Figure 6.11: Fuse Box

2. Remove tape and keys (A) from inside cover. Discard tape.
3. Unlock cab doors and place key on console.
4. Close cab doors.
5. Reinstall cover (B) with wing nut.

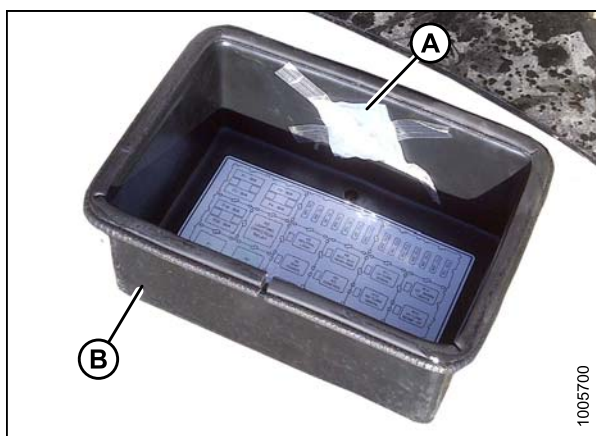


Figure 6.12: Fuse Cover

ASSEMBLING THE WINDROWER

6.5 Installing Steps

NOTE: Procedure for left-hand installation is shown, right-hand installation is similar.

1. Remove two bolts (A) securing steps to platform and remove steps.
2. Remove the remaining lower bolt (B).

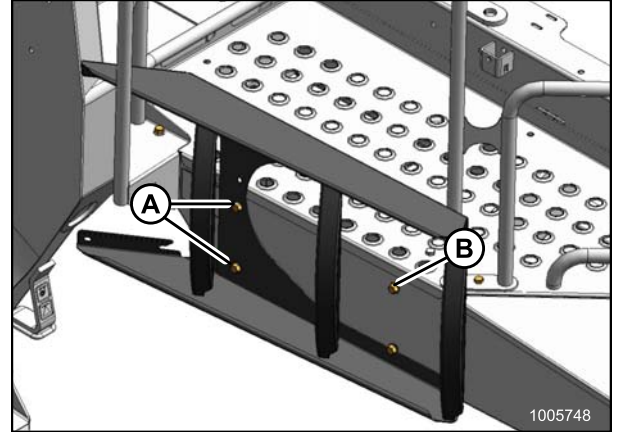


Figure 6.13: LH Steps Shipping Position

3. Reinstall one bolt (A) in lower hole in platform. Do **NOT** thread in fully.

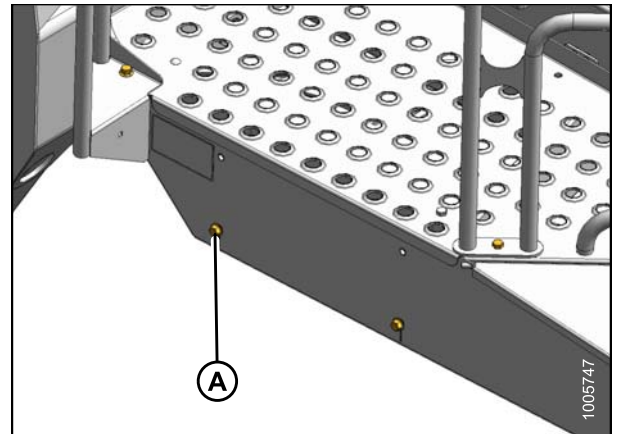


Figure 6.14: LH Platform

4. Hang step assembly on lower bolts (B). If required, back off bolts.
5. Install two bolts (A) in upper holes in step and tighten.
6. Tighten lower bolts (B).
7. Repeat for other step assembly.

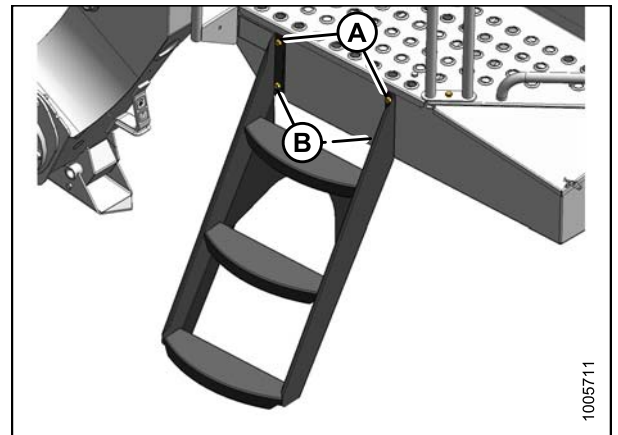


Figure 6.15: LH Steps Installed

ASSEMBLING THE WINDROWER

6.6 Connecting Batteries

1. Open right-hand (cab-forward) maintenance platform.
2. The battery main disconnect switch (A) is located on the right-hand frame rail beside the batteries. Ensure battery switch (A) is switched to POWER OFF position.
3. Remove cable ties securing battery cables to battery clamp.

IMPORTANT:

BATTERY IS NEGATIVE GROUNDED. Always connect red starter cable to the positive (+) terminal of battery and black ground cable to negative (-) terminal of battery. Reversed polarity in battery or alternator may result in permanent damage to electrical system.

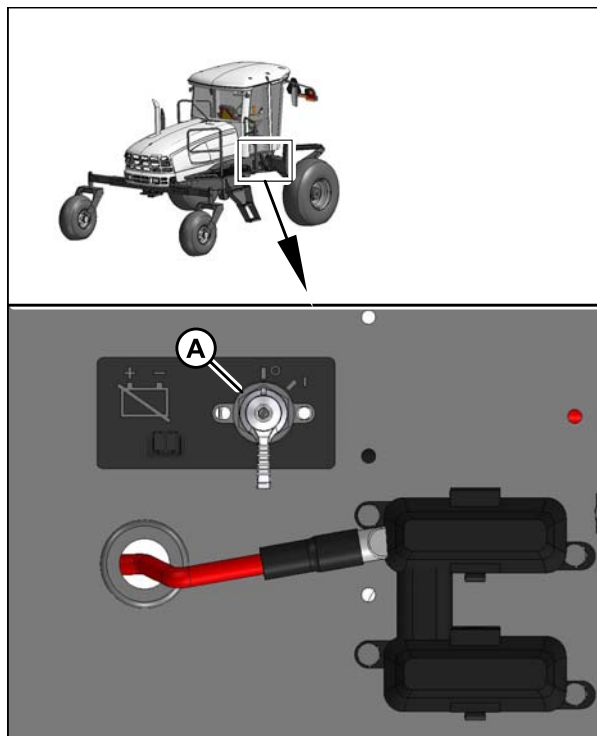


Figure 6.16: Battery Switch

4. Remove plastic caps from battery posts.
5. Attach positive (red) cable terminals to positive post (A) on batteries and tighten. Reposition plastic covers onto clamps.
6. Attach negative (black) cable terminals to negative post (B) on batteries and tighten clamps.
7. Turn battery switch to POWER ON position.
8. Move platform back to closed position.

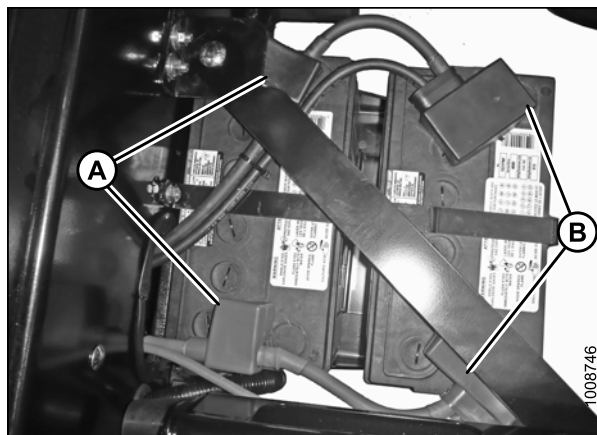


Figure 6.17: Batteries

ASSEMBLING THE WINDROWER

6.7 Starting Engine

1. Check fuel level and if required, add sufficient fuel for a 15 minute run.
2. Lock (A) should be engaged at cab-forward or engine-forward position.
3. Move ground speed lever (GSL) (B) into N-DETENT.
4. Turn steering wheel until it locks.
5. Push HEADER DRIVE switch (C) to OFF.

CAUTION

Check to be sure all bystanders have cleared the area.



Figure 6.18: Operator Console

ASSEMBLING THE WINDROWER

6. **Normal Start (All Engines):** engine temperature above 60°F (16°C).
 - a. Set throttle to START position (A)—fully back.
 - b. Sound horn (C) three times.

NOTE: For M155 and M205, horn is located on the headliner.

- c. Turn ignition key (B) to RUN position. Single loud tone sounds, engine warning lights illuminate, and the cab display module (CDM) displays “HEADER DISENGAGED” and “IN PARK”.



WARNING

If starter engages with steering wheel unlocked, ground speed lever out of NEUTRAL, or header clutch engaged, DO NOT START ENGINE. Refer to technical manual.

- d. Turn ignition key (B) to START position until engine starts and then release key. Tone ceases and warning lights go out.

IMPORTANT:

- Do **NOT** operate starter for longer than 15 seconds at a time.
- If engine does **NOT** start, wait at least two minutes before trying again.
- After the third 15 second crank attempt, allow starter motor to cool for 10 minutes before further cranking attempts.
- If engine still does **NOT** start, refer to Table [6.1 Troubleshooting, page 35](#).



Figure 6.19: Operator Console

ASSEMBLING THE WINDROWER

7. **Cold Start:** engine temperature below 40°F (5°C).

NOTE: Engines are not equipped with cold start assist system.

- a. Follow Step **6., page 34.**
Engine will cycle through a period where it appears to labour until engine warms up.

NOTE: Throttle is nonresponsive during this time as engine is in WARM UP mode. This mode will last from 30 seconds to 3 minutes depending on temperature. After engine has stabilized and is idling normally, throttle becomes active.

IMPORTANT:

Do **NOT** operate engine above 1500 rpm, until engine temperature gauge is above 100°F (40°C).

Table 6.1 Troubleshooting

Problem	Solution
Controls not in NEUTRAL	Move GSL to NEUTRAL. Move steering wheel to locked position. Disengage header clutch.
Operator's station not locked	Adjust position of operator's station. Ensure lock is engaged.
Neutral interlock misadjusted	Refer to the technical manual.
No fuel to engine	Fill empty fuel tank. Replace clogged filter.
Old fuel in tank	Drain tank. Refill with fresh fuel.
Water, dirt, or air in fuel system	Drain, flush, fill, and prime system.
Improper type of fuel	Use proper fuel for operating conditions.
Crankcase oil too heavy	Use recommended oil.
Low battery output	Have battery tested. Check battery electrolyte level.
Poor battery connection	Clean and tighten loose connections.
Faulty starter	Refer to the technical manual.
Wiring shorted, circuit breaker open	Check continuity of wiring and breaker (manual reset).
Faulty injectors	Refer to the technical manual.

ASSEMBLING THE WINDROWER

6.8 Installing AM/FM Radio

Provision has been made for installation of an AM/FM radio. The mounting is designed to fit a DIN E style radio with a depth of 'X' = 161 mm and having a 5 mm threaded stud (A) centered on the rear for support.

Provision has been made for adjustments, should the radio fall outside these parameters.

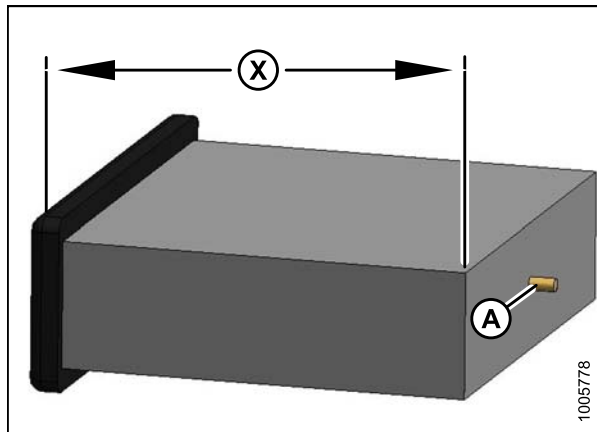


Figure 6.20: Mounting Dimension

1. Ensure battery disconnect switch is turned to OFF position.
2. Ensure the ignition is turned to the OFF position.
3. Remove radio panel by removing four screws (A).

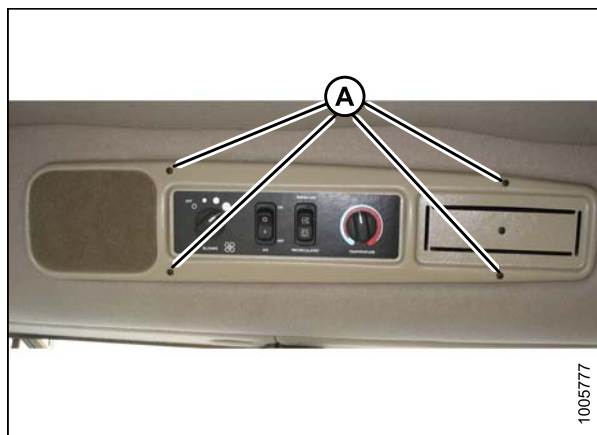


Figure 6.21: Radio Panel

4. Remove screw and nuts (A) and (C) to remove support (B) from panel. Retain metric nut (C) and lock washer.

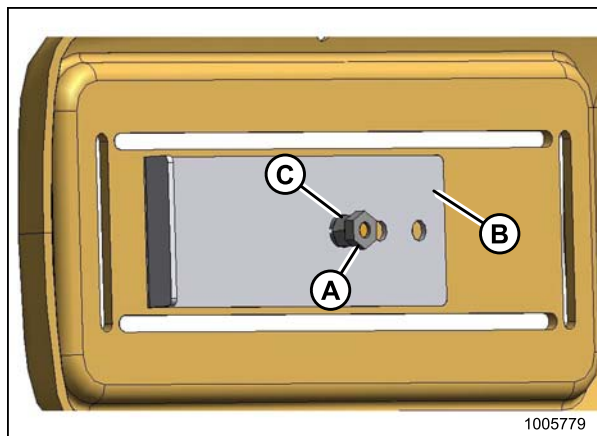


Figure 6.22: Panel Support

ASSEMBLING THE WINDROWER

5. Remove the cut-out by cutting the tabs (A) in the panel. Remove sharp edges on panel.

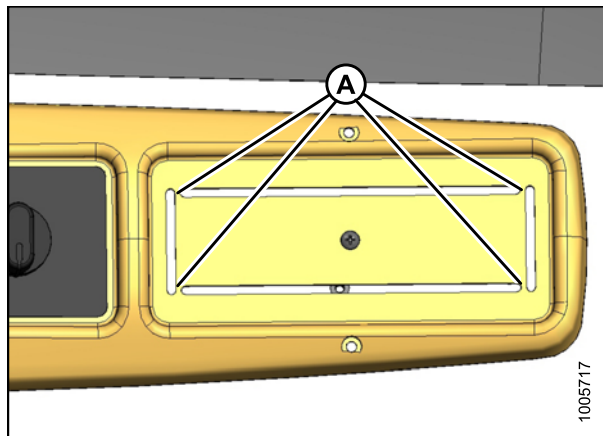


Figure 6.23: Panel

6. Position receptacle (A) (supplied with radio) in opening and secure by bending tabs (B) on receptacle against panel.

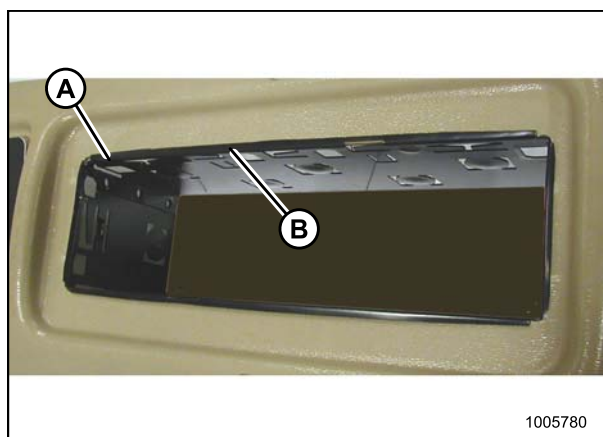


Figure 6.24: Radio Receptacle

7. Insert radio into receptacle and attach radio bezel. Ensure radio locks into position and faceplate (A) is against the panel.



Figure 6.25: Radio Installed

ASSEMBLING THE WINDROWER

8. A six-pin connector for the radio is included in the wiring harness. In order to mate properly with this connector, the radio must have a six-pin connector (Packard #2977042) and have a terminal arrangement as shown at right.
9. Attach two additional wires in the wiring harness to the radio:
 - a. **Circuit 503:** Red with 1/4 in. female blade terminal. This is a live wire provided for powering a radio clock/memory, if these exist on your radio.
 - b. **Circuit 315:** Black ground wire attaches to radio body.
10. Plug cable from antenna into radio.

NOTE: An approved radio package is available from Radio Engineering Industries (REI) of Omaha, Nebraska.

11. Attach stud (supplied with radio) to center rear of radio.
12. Attach support (B) to stud on back of radio chassis, with lock washer and metric nut (A) that was supplied with the support. Support can be attached to chassis in multiple locations to allow for proper mounting of radio.
13. Reinstall radio panel with original screws.

14. Adjust bracket (A) if necessary by loosening nuts (B) to allow radio to slide into opening and securely capture support (C).
15. Retrieve antenna from inside cab and remove protective cover from base end.

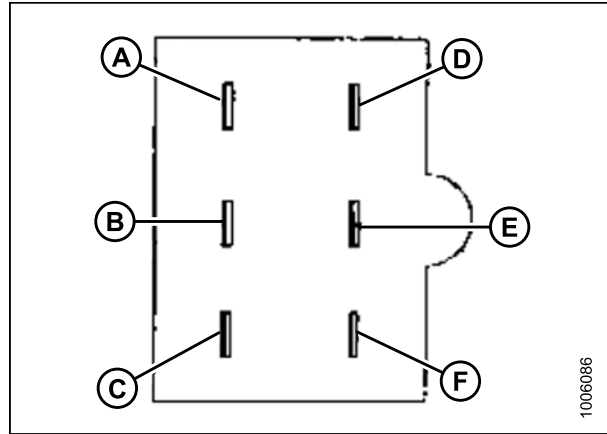


Figure 6.26: Six-Pin Connector

A - Left Speaker Power +	B - Left Speaker Ground -
C - Radio Ground -	D - Radio Power + (Live When Ignition is On)
E - Right Speaker Power +	F - Right Speaker Ground -

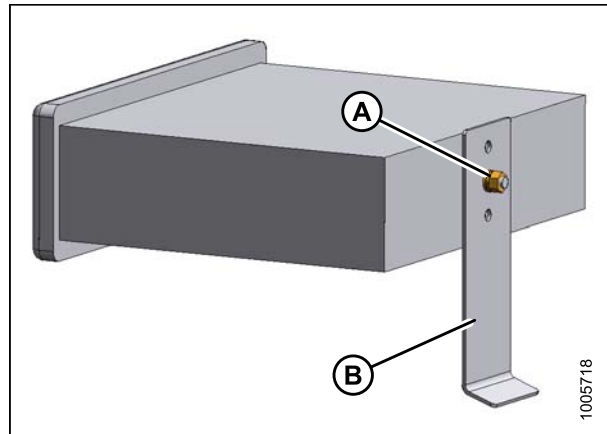


Figure 6.27: Radio and Support

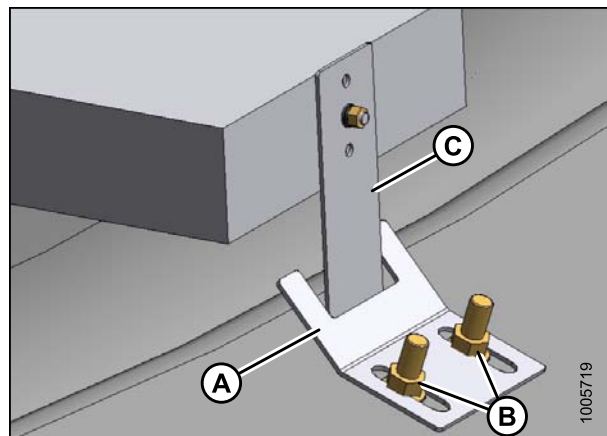


Figure 6.28: Radio and Support

ASSEMBLING THE WINDROWER

16. Remove protective cover (A) from antenna mount on cab roof and thread antenna onto base until hand tight.

NOTE: Store protective cover in cab to protect antenna mount if antenna needs to be removed.

17. Turn ignition key to ACC, switch radio ON, and check operation in accordance with instructions supplied with the radio.

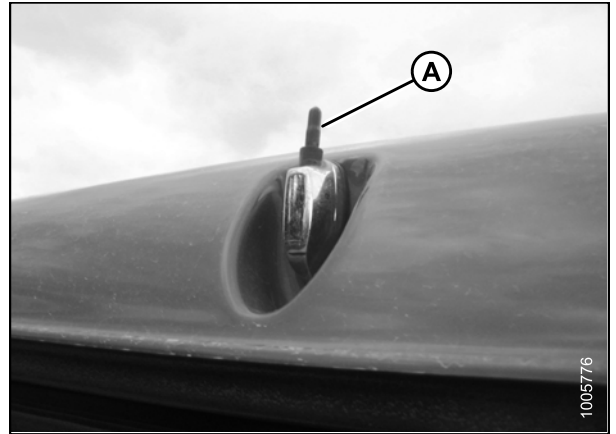


Figure 6.29: Antenna Mount on Cab Roof

ASSEMBLING THE WINDROWER

6.9 Installing Slow Moving Vehicle (SMV) Sign

1. Install SMV sign (A) (shipped in cab) on windrower in accordance with instructions supplied with the sign. SMV signs must be visible when travelling on the road.

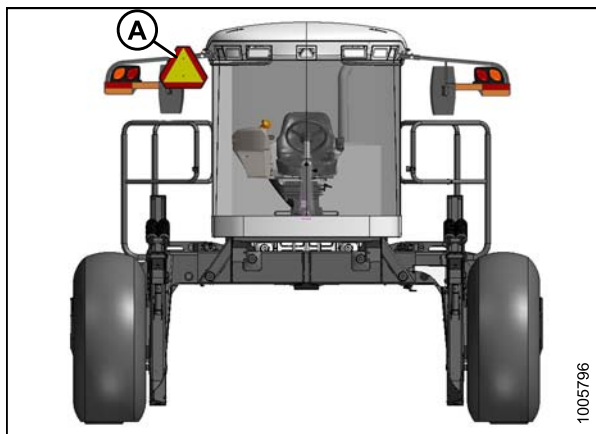


Figure 6.30: Engine-Forward

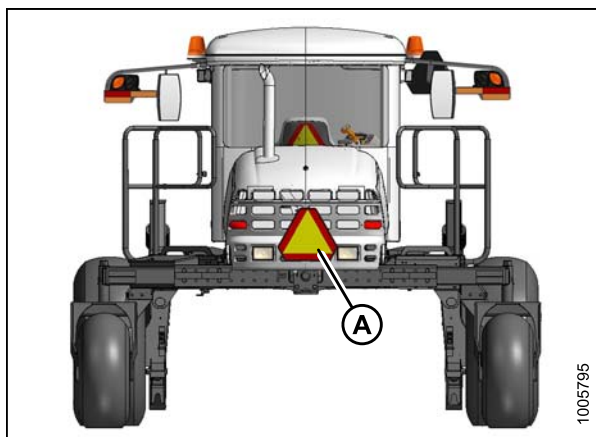


Figure 6.31: Cab-Forward

ASSEMBLING THE WINDROWER

6.10 Attaching Header Boots

Header boots are required to attach a D-Series Draper Header to the windrower.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and NOT installed at hole location (A).

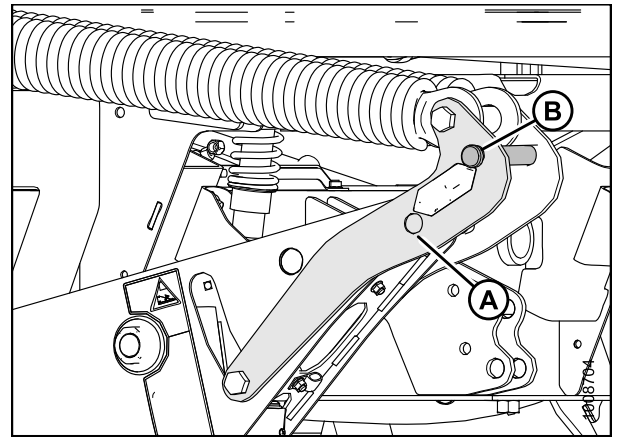


Figure 6.32: Header Lift

If **NOT** installed, attach draper header boots (supplied with header) to windrower lift linkage as follows:

1. Remove pin (B) from boot (A).
2. Position boot (B) on lift linkage (A) and reinstall pin (C). Pin may be installed from either side of boot.
3. Secure pin (C) with hairpin (D).
4. Repeat for opposite side.

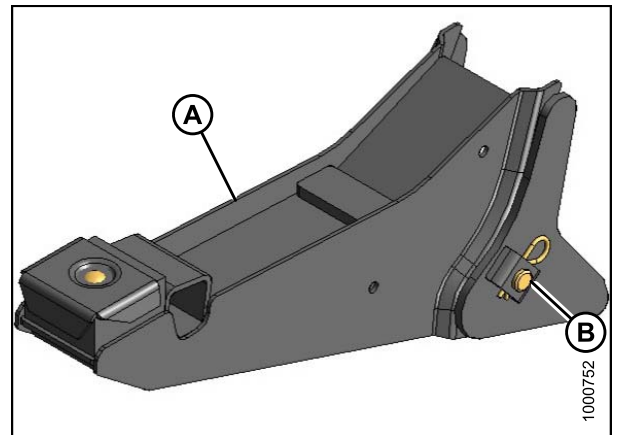


Figure 6.33: Header Boot

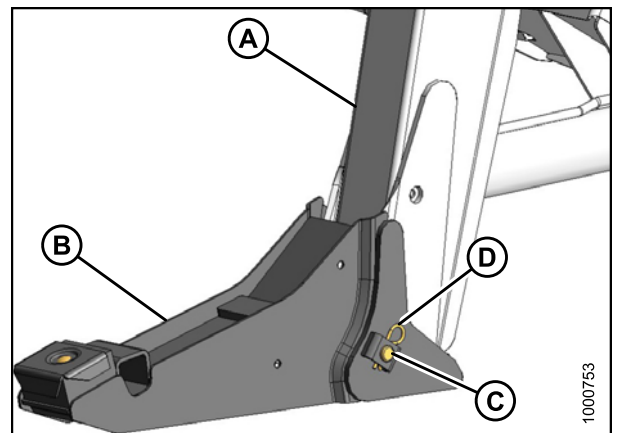


Figure 6.34: Header Boot

ASSEMBLING THE WINDROWER

6.11 Attaching Headers

6.11.1 Attaching a D-Series Header

The D-Series header can be attached to an M155 or M205 Self-propelled Windrower. For attachment procedure, refer to the specific windrower model.

M155 Self-Propelled Windrower

To operate a D-Series draper header, The M155 Self-propelled Windrower must be fitted with a Base Draper Drive kit and if an HC10 Hay Conditioner is installed, a Reverser kit.

If necessary, obtain the following kits from your MacDon Dealer and install them in accordance with the instructions supplied with the kits.

Kit Description	Kit Number
Base Draper Drive kit	B5577
Reverser kit ⁹	B4656

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [*Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 43*](#)
- [*Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment, page 49*](#)
- [*Attaching a D-Series Header: Mechanical Center-Link, page 54*](#)

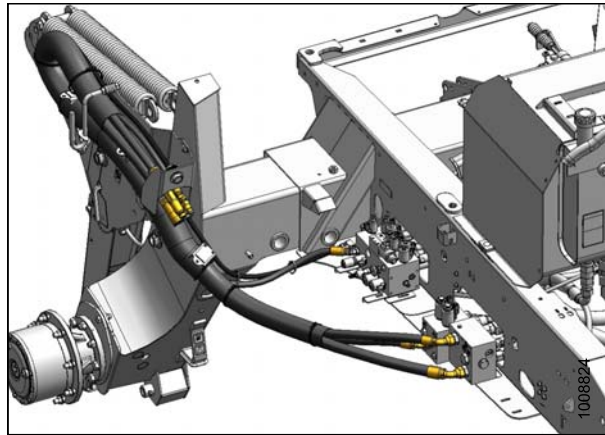


Figure 6.35: M155 Draper Header Hydraulics

9. Required for HC10 Hay Conditioner operation.

ASSEMBLING THE WINDROWER

M205 Self-Propelled Windrower

To operate a D-Series header, the M205 Self-propelled Windrower must be equipped with a Draper Driver Basic kit and a Completion kit as shown.

Windrowers equipped with D-Series hydraulics have four header drive hoses on the left-hand side and up to five reel drive hoses on the right-hand side.

If necessary, obtain the following kits from your MacDon Dealer and install them in accordance with the instructions supplied with the kits.

Kit Description	Kit Number
Base Draper/Auger Drive kit	B5491
Draper Header Reel Drive Completion kit	B5496
Hydraulic Couplers kit	B5497

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 43](#)
- [Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment, page 49](#)

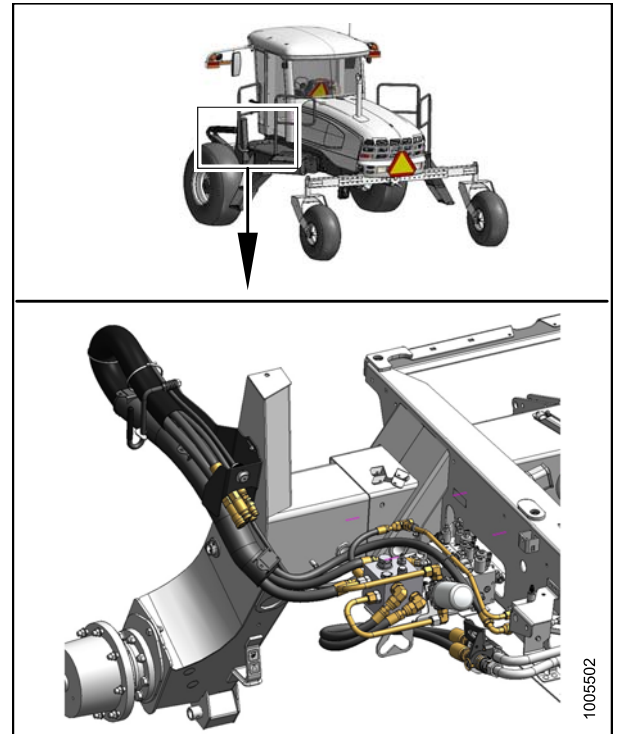


Figure 6.36: M205 Draper Header Drive Hydraulics

Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment

NOTE: This topic assumes that draper header boots have already been attached to the windrower lift linkage. If that is not the case, refer to [6.10 Attaching Header Boots, page 41](#).

To attach a D-Series header to an M155 or M205 Self-propelled Windrower equipped with a hydraulic center-link and optional self-alignment, follow these steps:

DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

ASSEMBLING THE WINDROWER

1. Remove the hairpin (A) from pins (B) and remove the pins from the header legs.

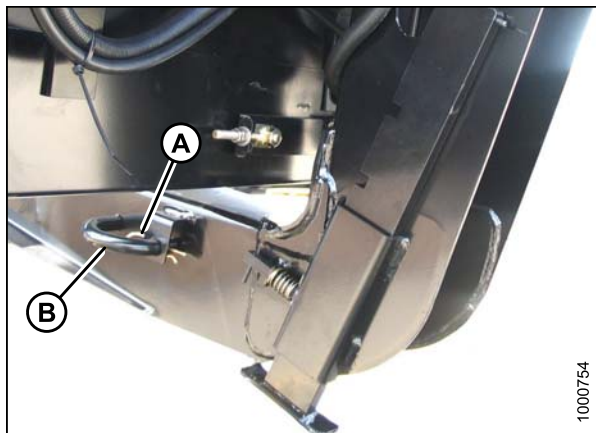


Figure 6.37: Header Leg

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.



Figure 6.38: GSL

3. If necessary, activate the REEL UP switch (A) on the GSL to raise the center-link, so that the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

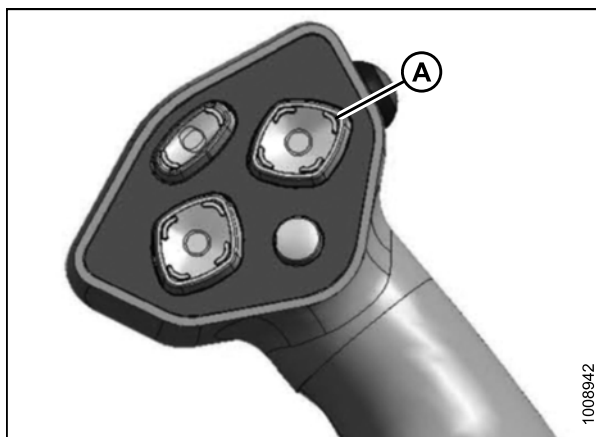


Figure 6.39: GSL

ASSEMBLING THE WINDROWER

4. Slowly drive the windrower forward so the boots (A) enter the header legs (B). Continue to drive slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
5. Ensure that lift linkages are properly engaged in header legs, contacting the support plates.

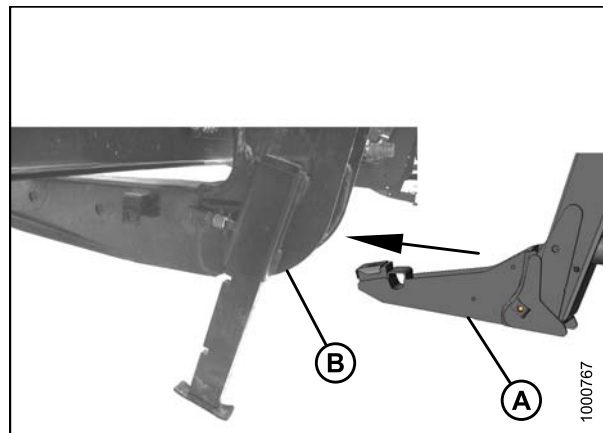


Figure 6.40: Header Leg and Boot

6. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Reel up (A) to raise the center-link
 - Reel down (B) to lower the center-link
 - Header tilt up (C) to retract the center-link
 - Header tilt down (D) to extend the center-link

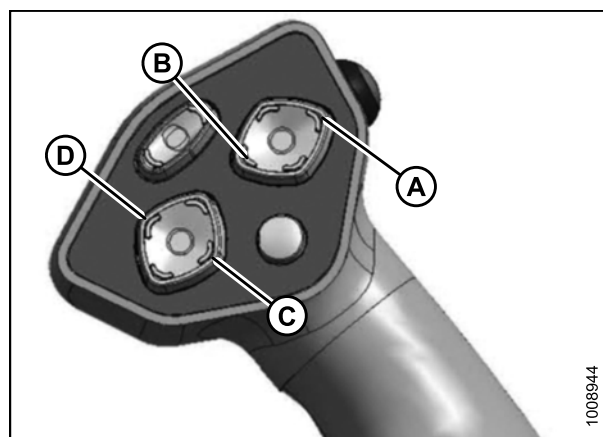


Figure 6.41: GSL

7. Adjust position of the center-link cylinder (A) with the REEL UP and REEL DOWN switches, and HEADER TILT switches on the GSL to position the hook above the header attachment pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

8. Lower center-link (A) onto the header with REEL DOWN switch until it locks into position (hook release [B] is down).
9. Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.

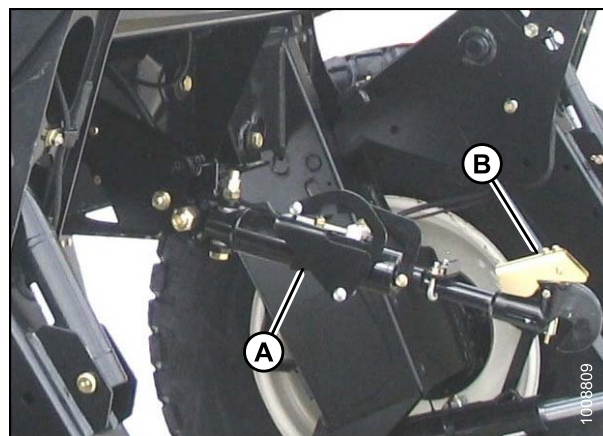


Figure 6.42: Hydraulic Center-Link

ASSEMBLING THE WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

10. Press the HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does **NOT** raise fully, rephase the lift cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate toward header to release and lower the safety prop (B) onto cylinder.
 - c. Repeat for the opposite lift cylinder.

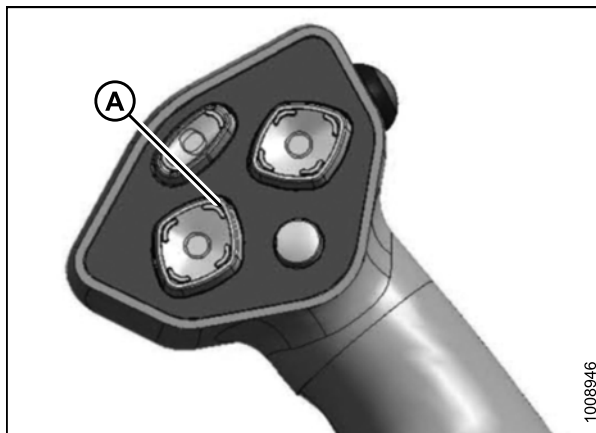


Figure 6.43: GSL

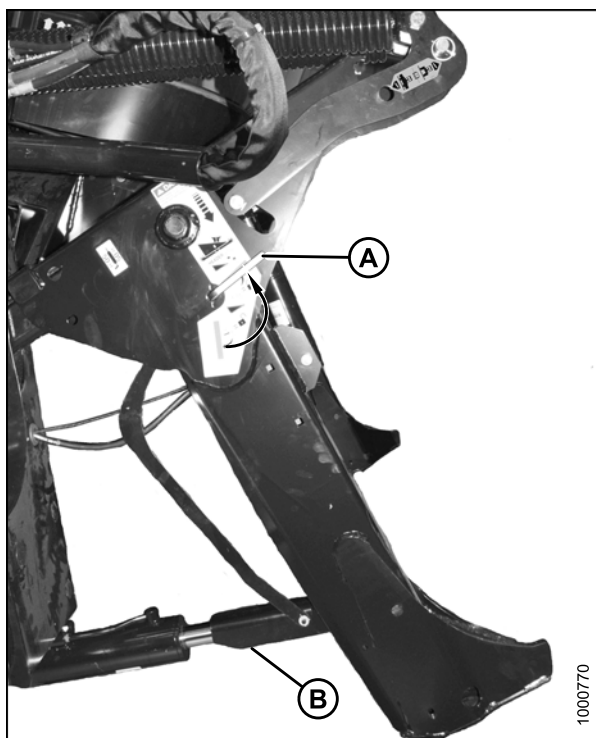


Figure 6.44: Cylinder Stop

ASSEMBLING THE WINDROWER

12. Install pin (B) through the header leg, (engaging U-bracket in lift linkage) on both sides and secure with a hairpin (A).
13. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin (C).

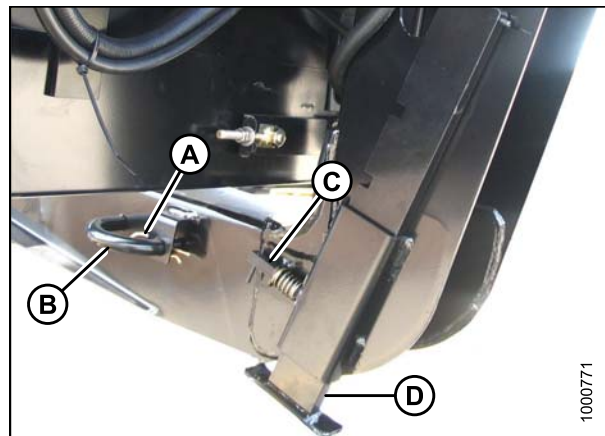


Figure 6.45: Header Leg

14. Remove clevis pin from storage position (B) in linkage and insert in hole (A) to engage float springs. Secure with hairpin.

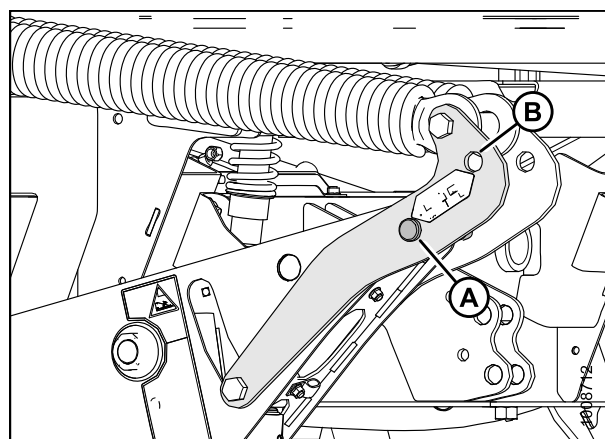


Figure 6.46: Header Lift Linkage

15. Disengage safety prop by turning lever (A) downward to release and lower stop until lever locks into vertical position.
16. Repeat for opposite lift safety prop.

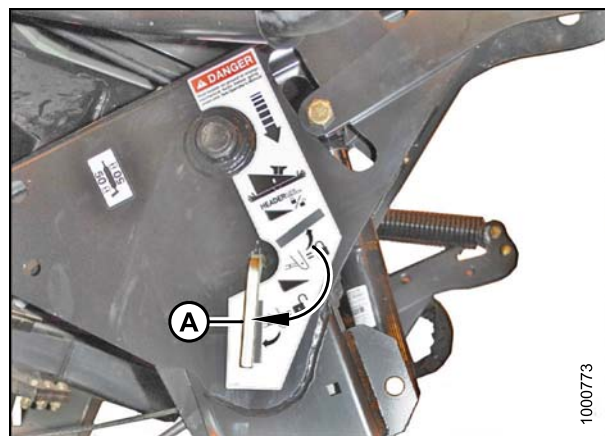


Figure 6.47: Cylinder Stop

ASSEMBLING THE WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

17. Start engine and activate HEADER DOWN switch on GSL to lower header fully.
18. Stop engine and remove key.

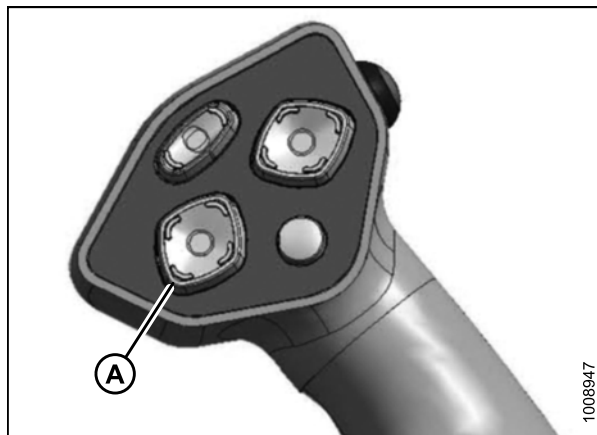


Figure 6.48: GSL

19. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

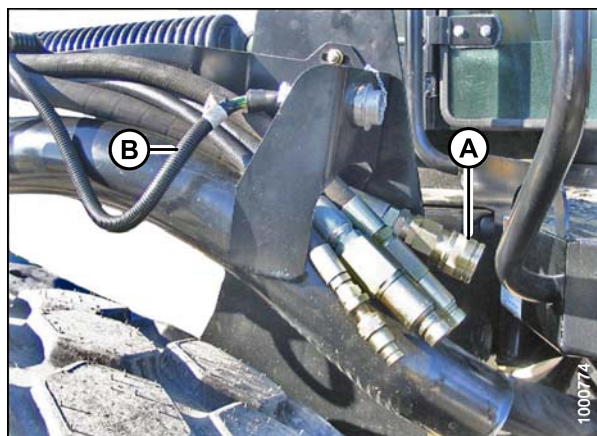


Figure 6.49: Header Drive Hoses and Harness

20. Connect reel hydraulics (A) at right-hand side of windrower. Refer to the draper header operator's manual.

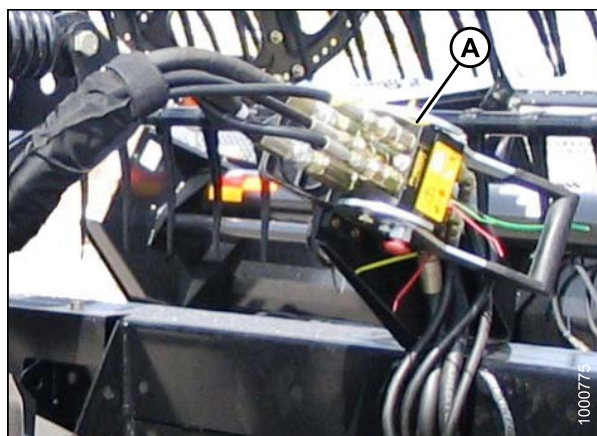


Figure 6.50: Reel Hydraulics

ASSEMBLING THE WINDROWER

Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment

NOTE: This topic assumes that draper header boots have already been attached to the windrower lift linkage. If that is not the case, refer to [6.10 Attaching Header Boots, page 41](#).

To attach a D-Series header to an M155 or M205 Self-propelled Windrower equipped with a hydraulic center-link without the self-alignment kit, follow these steps:

DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

1. Remove the hairpin (A) from pin (B) and remove the pins from both header legs.

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

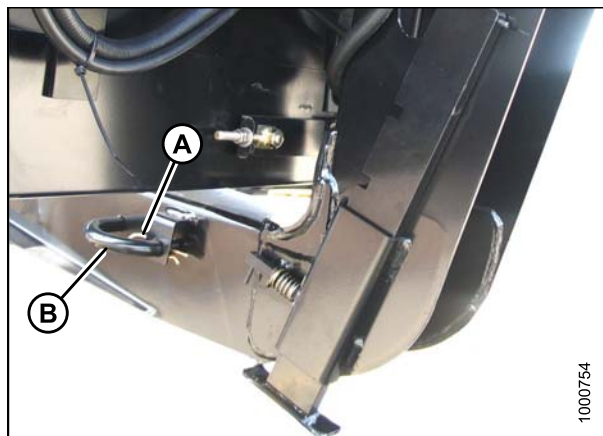


Figure 6.51: Header Leg

2. Start engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.



Figure 6.52: GSL

ASSEMBLING THE WINDROWER

3. If necessary, relocate the pin (A) at the frame linkage as required to raise the center-link (B) so that the hook (B) is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

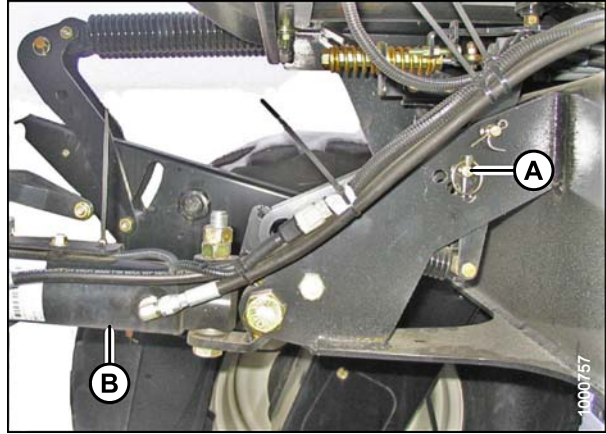


Figure 6.53: Hydraulic Center-Link without Self-Alignment Kit

4. Slowly drive the windrower forward so the boots (A) enter the header legs (B). Continue to drive slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
5. Ensure that lift linkages are properly engaged in header legs, contacting the support plates.

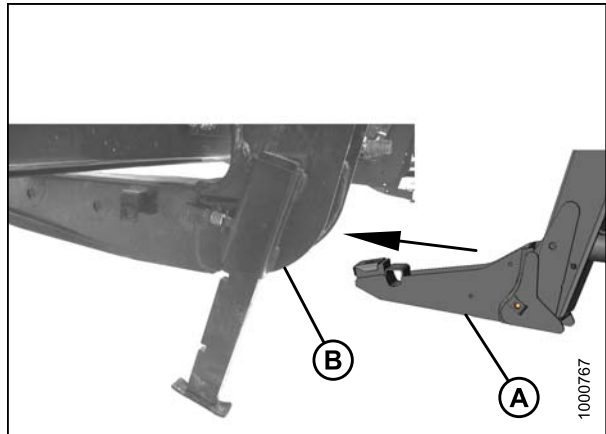


Figure 6.54: Header Leg and Boot

6. Activate HEADER TILT cylinder switches on ground speed lever (GSL) to extend or retract center-link cylinder so that the hook lines up with the header attachment pin.
7. Stop engine and remove key from ignition.

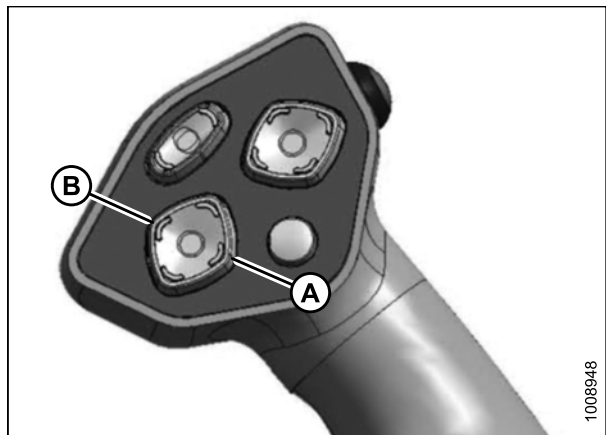


Figure 6.55: GSL

A - Header Tilt Up

B - Header Tilt Down

ASSEMBLING THE WINDROWER

8. Push down on rod end of link cylinder (B), until hook engages pin on header and is locked.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

9. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

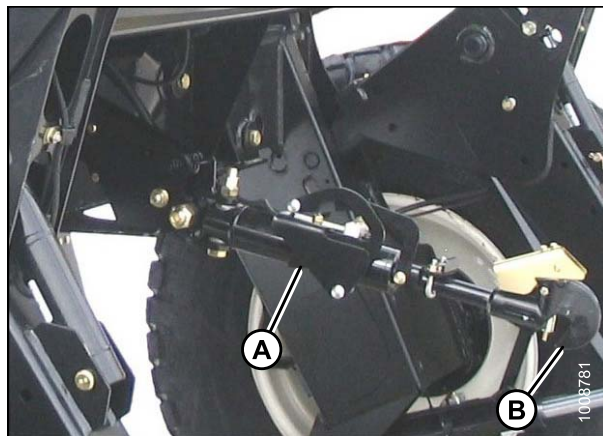


Figure 6.56: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

10. Start engine and press the HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does **NOT** raise fully, rephase the cylinders as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

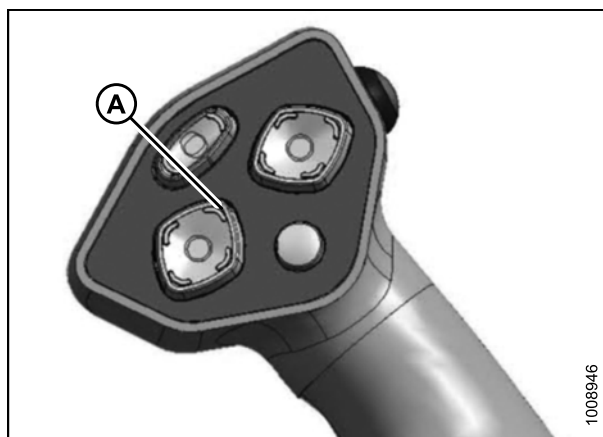


Figure 6.57: GSL

ASSEMBLING THE WINDROWER

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate toward header to release and lower the cylinder stop (B) onto cylinder.
 - c. Repeat for the opposite lift cylinder.

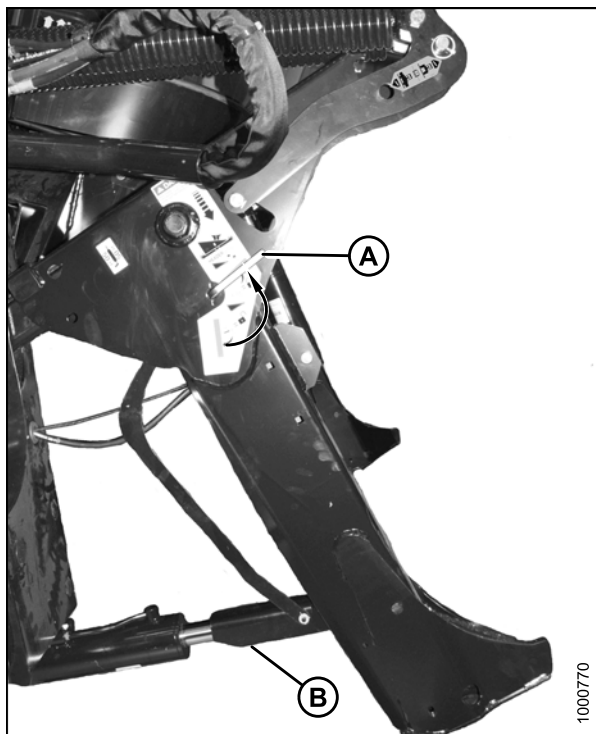


Figure 6.58: Cylinder Stop

12. Install the pin (B) through header leg, (engaging U-bracket in lift linkage) on both sides and secure with hairpin (A).
13. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin (C).

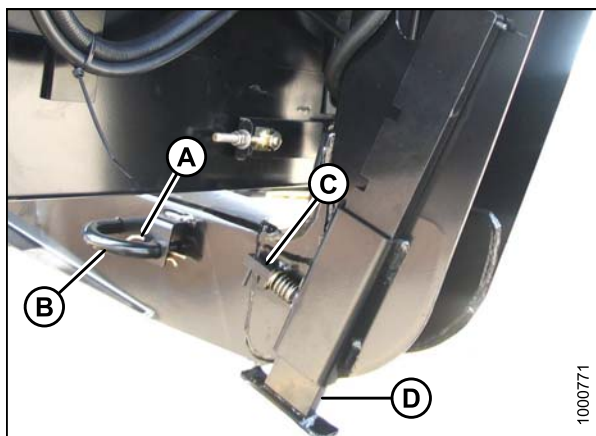


Figure 6.59: Header Leg

ASSEMBLING THE WINDROWER

14. Remove clevis pin from storage position (B) in linkage and insert in hole (A) to engage float springs. Secure with hairpin.

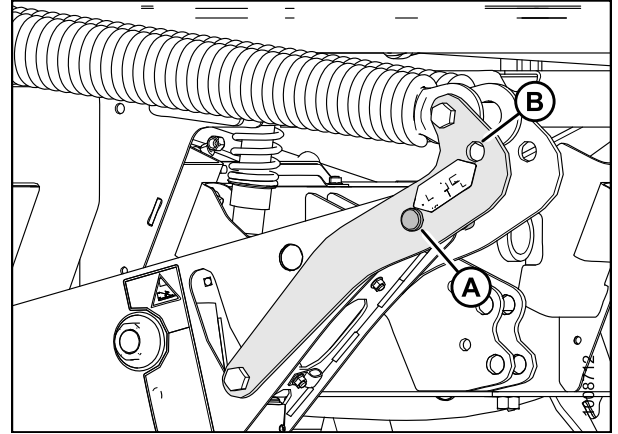


Figure 6.60: Header Lift Linkage

15. Disengage safety prop by turning lever (A) downward to release and lower stop until lever locks into vertical position.
16. Repeat for opposite safety prop.

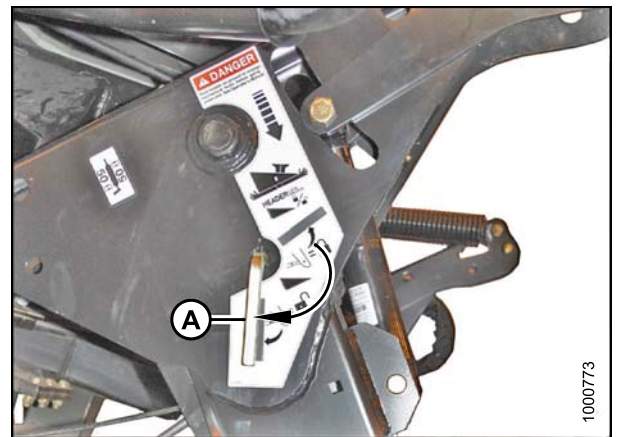


Figure 6.61: Cylinder Stop

CAUTION

Check to be sure all bystanders have cleared the area.

17. Start engine and activate HEADER DOWN switch (A) on GSL to lower header fully.
18. Stop engine and remove key.

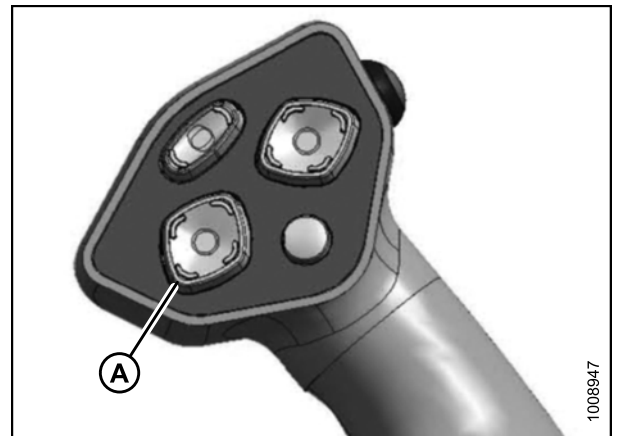


Figure 6.62: GSL

ASSEMBLING THE WINDROWER

19. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

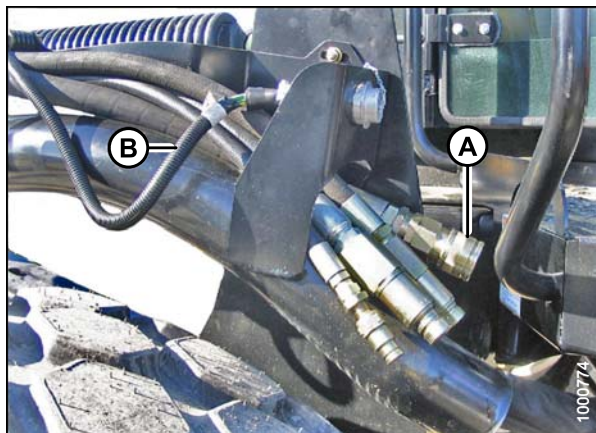


Figure 6.63: Header Drive Hoses and Harness

20. Connect reel hydraulics (A) at right-hand side of windrower. Refer to the draper header operator's manual.

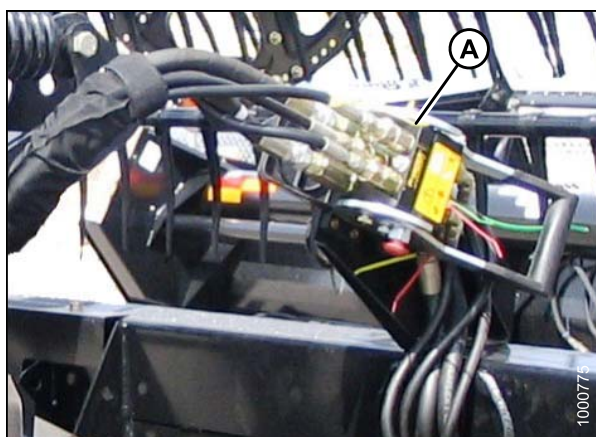


Figure 6.64: Reel Hydraulics

Attaching a D-Series Header: Mechanical Center-Link

NOTE: This topic assumes that draper header boots have already been attached to the windrower lift linkage. If that is not the case, refer to [6.10 Attaching Header Boots, page 41](#).

To attach a D-Series header to an M155 Self-propelled Windrower equipped with a mechanical center-link, follow these steps:

DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

ASSEMBLING THE WINDROWER

1. Remove the hairpin (A) from pins (B) and remove the pins from header legs.

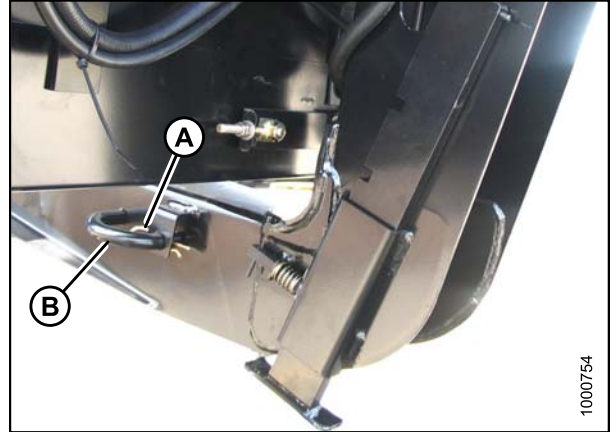


Figure 6.65: Header Leg

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

3. Slowly drive the windrower forward so the boots (A) enter the header legs (B). Continue to drive slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
4. Ensure that lift linkages are properly engaged in header legs, contacting the support plates.

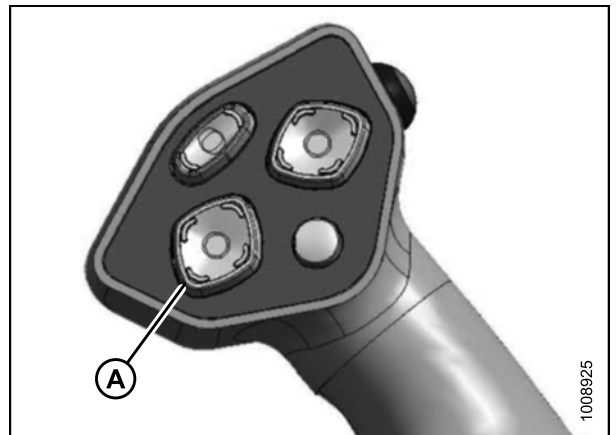


Figure 6.66: GSL

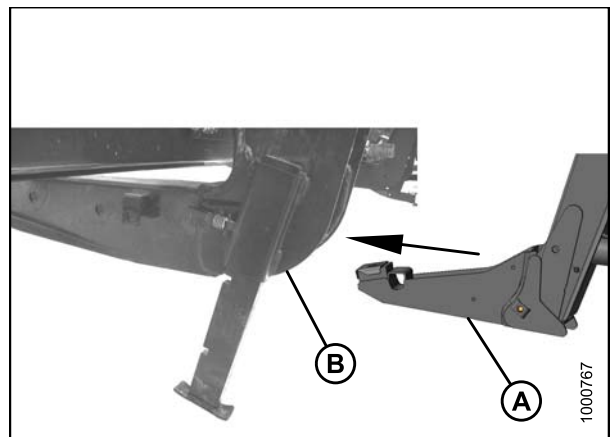


Figure 6.67: Header Leg and Boot

5. Stop engine and remove key from ignition.

ASSEMBLING THE WINDROWER

- Loosen nut (A) and rotate barrel (B) to adjust length so that the link lines-up with header bracket.
- Install clevis pin (C) and secure with cotter pin (D).
- Adjust link to required length for proper header angle by rotating barrel (B). Tighten nut (A) against barrel. A slight tap with a hammer is sufficient.

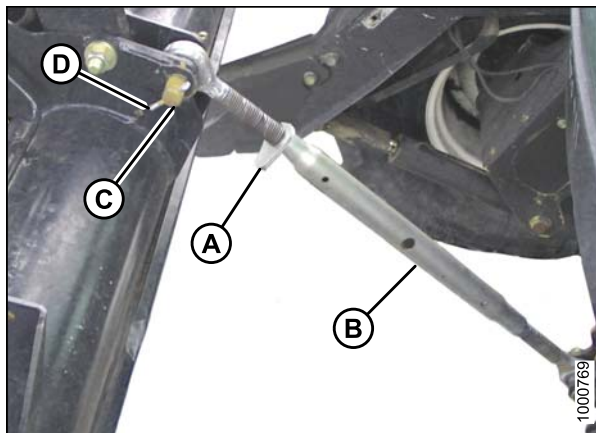


Figure 6.68: Mechanical Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

- Press the HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does **NOT** raise fully, rephase the cylinders as follows:

- Press and hold the HEADER UP switch until both cylinders stop moving.
- Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

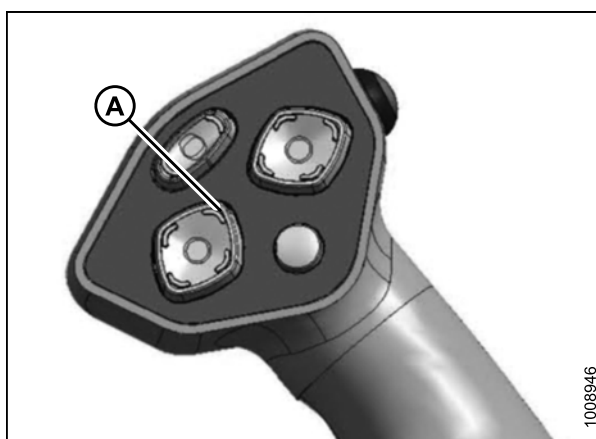


Figure 6.69: GSL

ASSEMBLING THE WINDROWER

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate toward header to release and lower the safety prop (B) onto cylinder.
 - c. Repeat for the opposite lift cylinder.

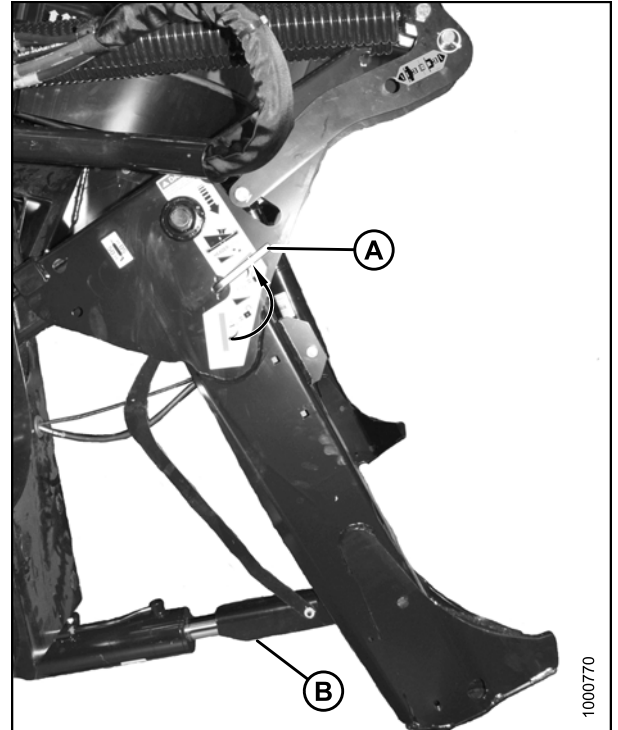


Figure 6.70: Cylinder Stop

11. Install pin (B) through header leg, (engaging U-bracket in lift linkage) on both sides and secure with a hairpin (A).
12. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin (C).

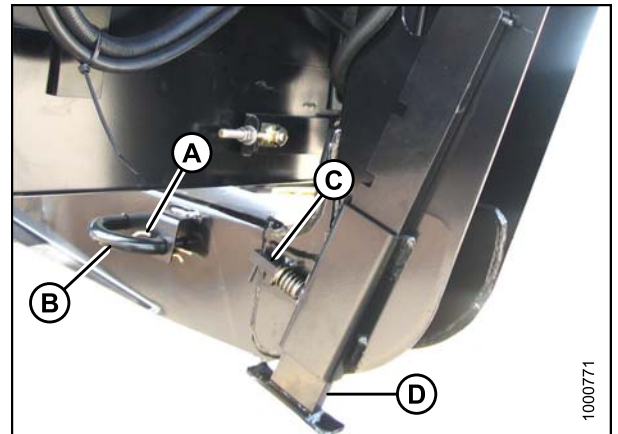


Figure 6.71: Header Leg

ASSEMBLING THE WINDROWER

13. Remove clevis pin from storage position (B) in linkage and insert in hole (A) to engage float springs. Secure with hairpin.

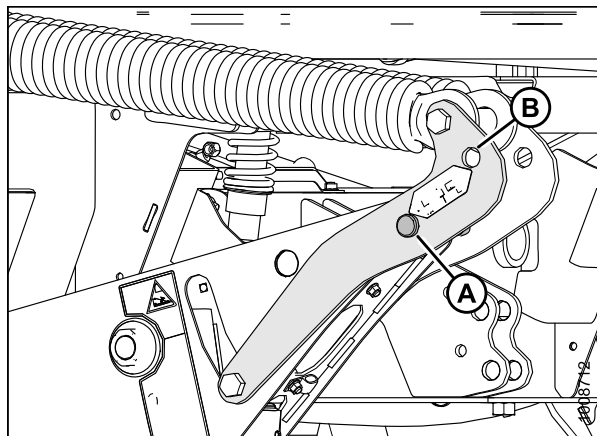


Figure 6.72: Header Lift Linkage

14. Disengage safety prop by turning lever (A) downward to release and lower stop until lever locks into vertical position.
15. Repeat for opposite safety prop.

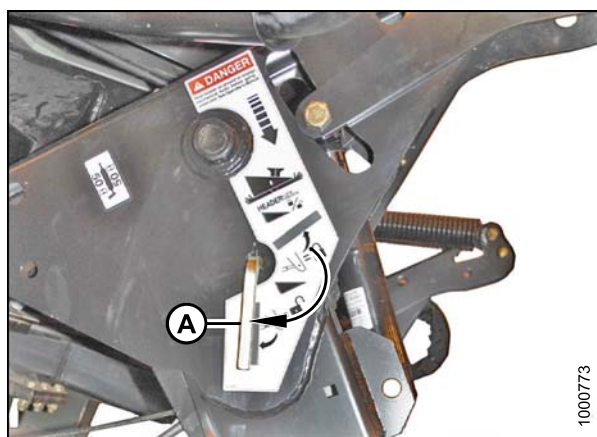


Figure 6.73: Cylinder Stop

CAUTION

Check to be sure all bystanders have cleared the area.

16. Start engine and activate HEADER DOWN switch on GSL (A) to lower header fully.
17. Stop engine and remove key.

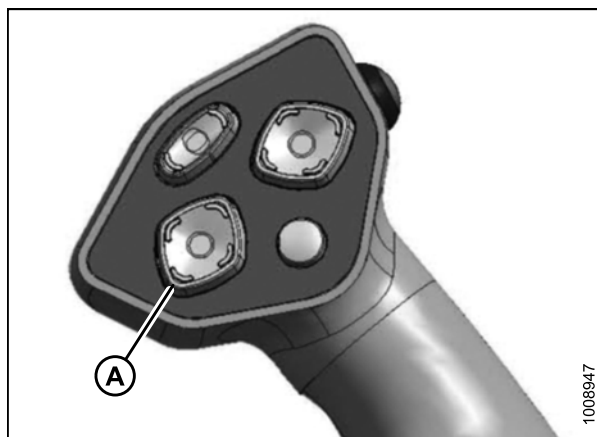


Figure 6.74: GSL

ASSEMBLING THE WINDROWER

18. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

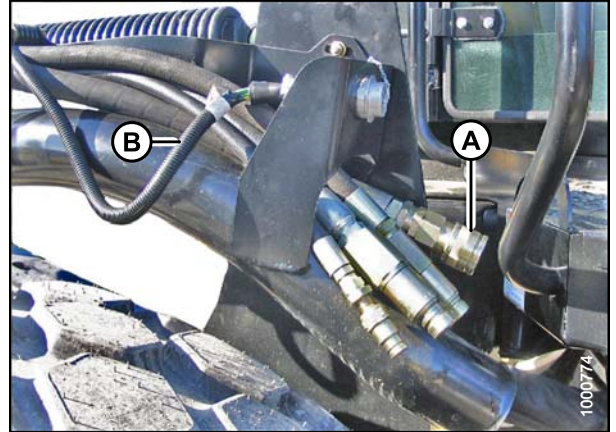


Figure 6.75: Header Drive Hoses and Harness

19. Connect reel hydraulics (A) at right-hand side of windrower. Refer to the draper header operator's manual.

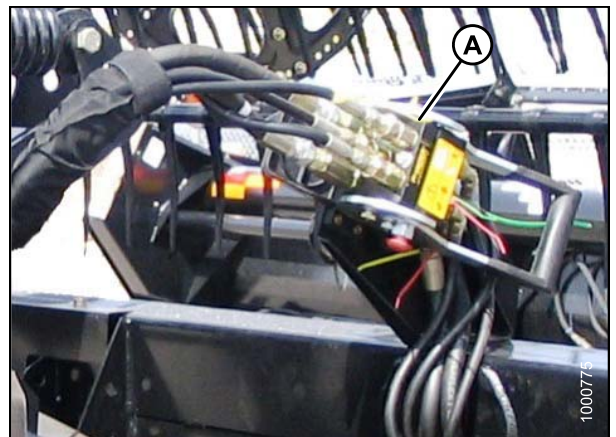


Figure 6.76: Reel Hydraulics

ASSEMBLING THE WINDROWER

6.11.2 Attaching an A-Series Header

The A-Series header can be attached to an M155 or M205 Self-propelled Windrower. For attachment procedure, refer to the specific windrower model.

M155 Self-Propelled Windrower

The M155 Self-propelled Windrower is factory-equipped to run an A-Series Auger Header.

Windrowers equipped with A-Series hydraulics have four header drive hoses on the left-hand side.

The attachment procedure varies depending on the type of center-link installed on the windrower. Refer to the appropriate instruction based on the type of link installed on your windrower:

- [Attaching an A-Series Header: Hydraulic Center-Link and Optional Self-Alignment Kit, page 61](#)
- [Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment Kit, page 66](#)
- [Attaching an A-Series Header: Mechanical Center-Link, page 72](#)

M205 Self-Propelled Windrower

To operate an A-Series Auger Header, the M205 Self-propelled Windrower must be equipped with an Auger Drive Basic kit and a Completion kit as shown.

Windrowers equipped with A-Series hydraulics have four header drive hoses on the left-hand side.

If necessary, obtain the following kits from your MacDon Dealer, and install them in accordance with the instructions supplied with the kits.

Kit Description	Kit Number
Base Draper/Auger Drive kit	B5491
Draper Conditioner/Auger Header Reverser Completion kit	B5492
Hydraulic Coupler kit	B5497

The attachment procedure varies depending on the type of center-link installed on the windrower. Refer to the appropriate instruction based on the type of link installed on your windrower:

- [Attaching an A-Series Header: Hydraulic Center-Link and Optional Self-Alignment Kit, page 61](#)
- [Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment Kit, page 66](#)



Figure 6.77: M155 A40-D Auger Header

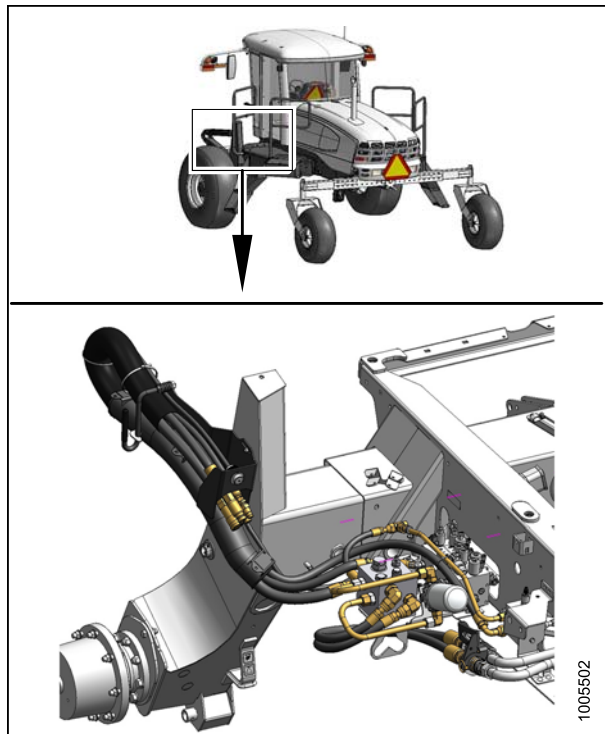


Figure 6.78: M205 Auger Header Drive Hydraulics

ASSEMBLING THE WINDROWER

Attaching an A-Series Header: Hydraulic Center-Link and Optional Self-Alignment Kit

To attach an A-Series header to an M155 or M205 Self-propelled Windrower equipped with a hydraulic center-link and optional self-alignment, follow these steps:

⚠ DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

1. Remove hairpin (A) from pin (B) and remove pin from left and right header boots (C) on header.

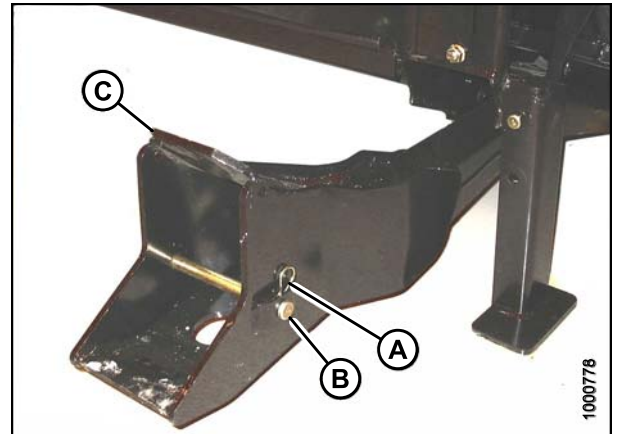


Figure 6.79: Header Boot

⚠ CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and NOT installed at hole location (A).

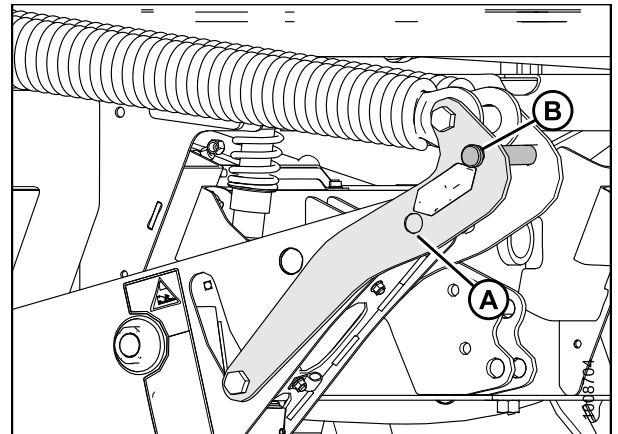


Figure 6.80: Header Lift Linkage

ASSEMBLING THE WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

3. If necessary, activate the REEL UP switch (A) on the GSL to raise the center-link, so that the hook is above the attachment pin on the header..

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

4. Slowly drive the windrower forward so the feet (A) on the windrower enter the boots (B) on the header. Continue to drive slowly forward until the feet engage the boots and the header nudges forward.

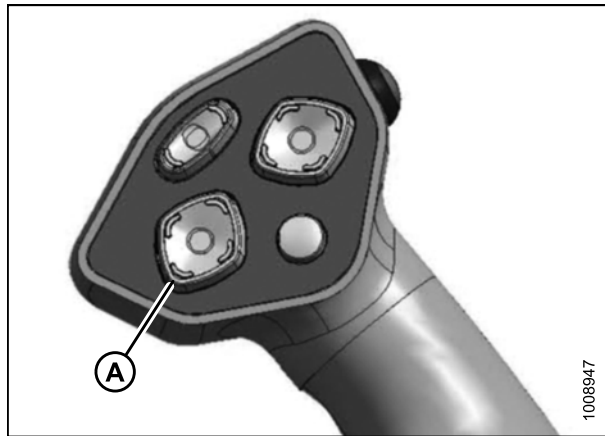


Figure 6.81: GSL

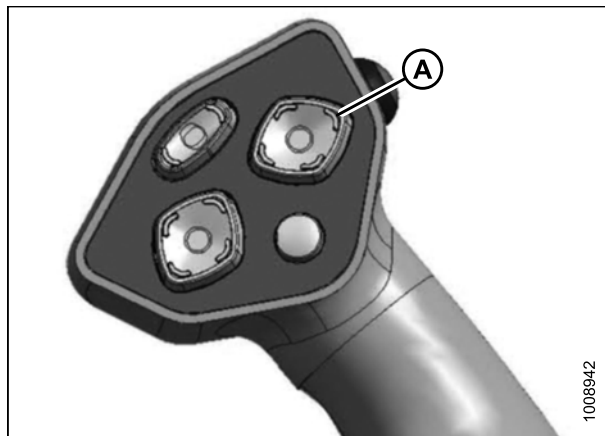


Figure 6.82: GSL

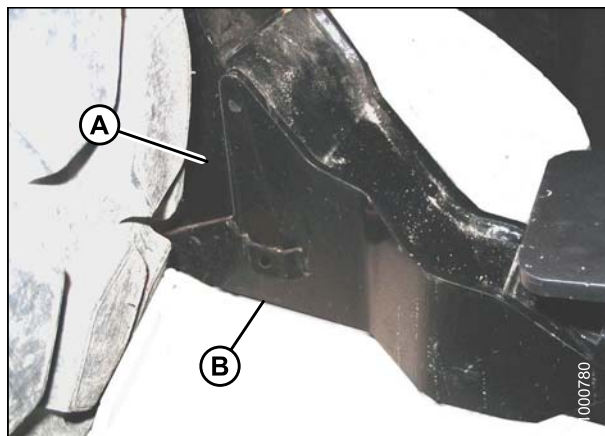


Figure 6.83: Header Boot

ASSEMBLING THE WINDROWER

- Use the following GSL functions to position the center-link hook above the header attachment pin:

- Reel up (A) to raise the center-link
- Reel down (B) to lower the center-link
- Header tilt up (C) to retract the center-link
- Header tilt down (D) to extend the center-link

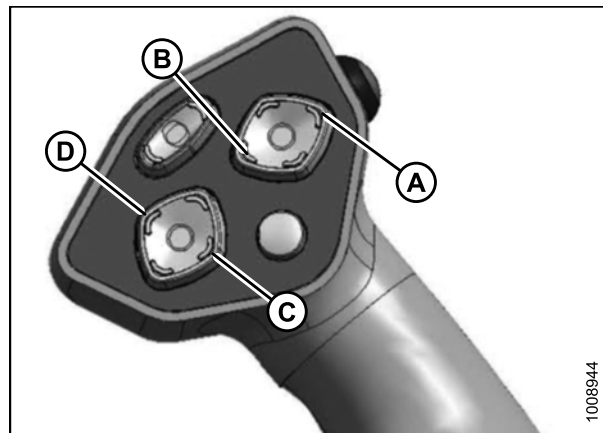


Figure 6.84: GSL

- Adjust position of the center-link cylinder (A) with the REEL UP and REEL DOWN switches. Position the hook above the header attachment pin using the HEADER TILT switches on the GSL.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

- Lower center-link (A) onto the header with REEL DOWN switch until it locks into position (hook release [B] is down).
- Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.
- Start engine and press HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does NOT raise fully, the lift cylinders require re-phasing. If re-phasing is needed, proceed as follows:

- Press and hold the HEADER UP switch until both cylinders stop moving.
- Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

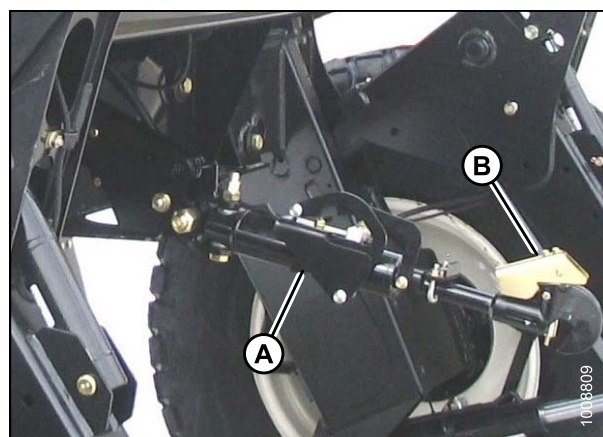


Figure 6.85: Hydraulic Center-Link



Figure 6.86: GSL

ASSEMBLING THE WINDROWER

10. Safety props are located on both of the windrower's header lift cylinders. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate toward header to release and lower the safety prop (B) onto cylinder.
 - c. Repeat for the opposite lift cylinder.

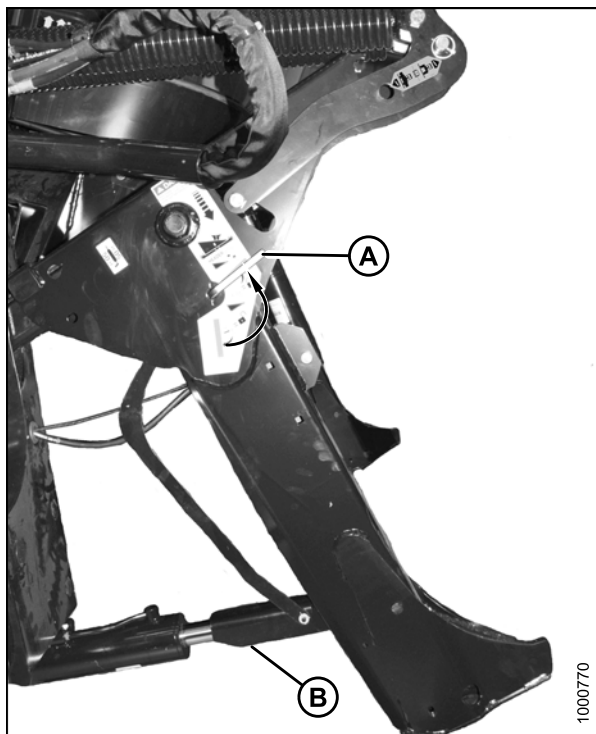


Figure 6.87: Safety Prop

11. Install clevis pin (A) through each boot and foot, and secure with hairpin. Do this to both sides.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

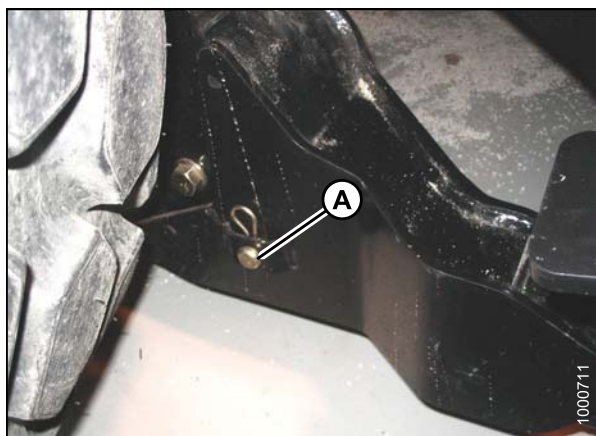


Figure 6.88: Header Boot

ASSEMBLING THE WINDROWER

12. Remove lynch pin from clevis pin (A) in stand (B).
13. Hold stand (B) and remove pin (A).
14. Position stand to storage position by inverting stand and relocating on bracket as shown. Reinsert clevis pin (A) and secure with lynch pin.

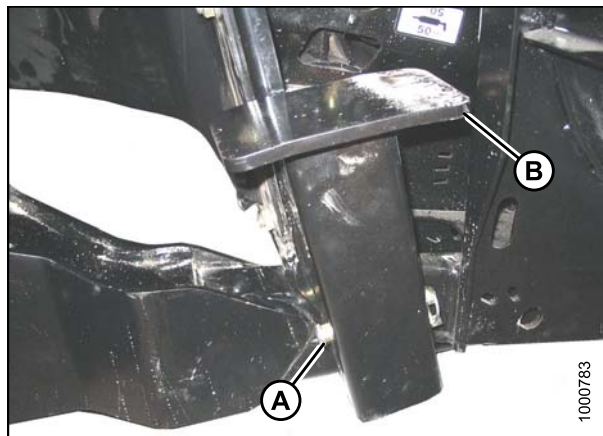


Figure 6.89: Header Stand

15. Remove clevis pin from storage position (B) in linkage, and insert in hole (A) to engage float springs. Secure with hairpin.

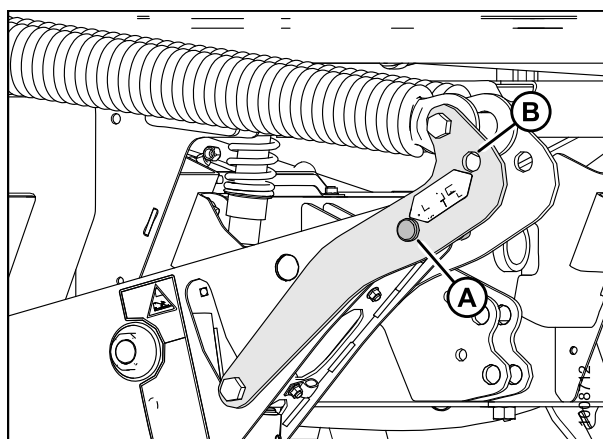


Figure 6.90: Header Lift Linkage

16. Disengage safety prop by turning lever (A) downward to release and lower safety prop until lever locks into vertical position.
17. Repeat for opposite safety prop.

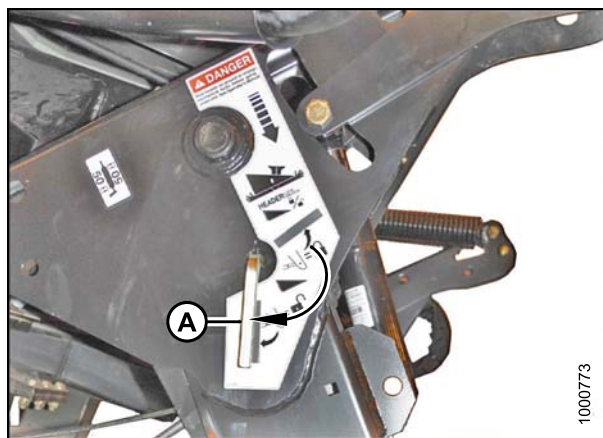


Figure 6.91: Safety Prop

ASSEMBLING THE WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

18. Start engine and activate HEADER DOWN switch (A) on GSL to lower header fully. Stop engine and remove key.

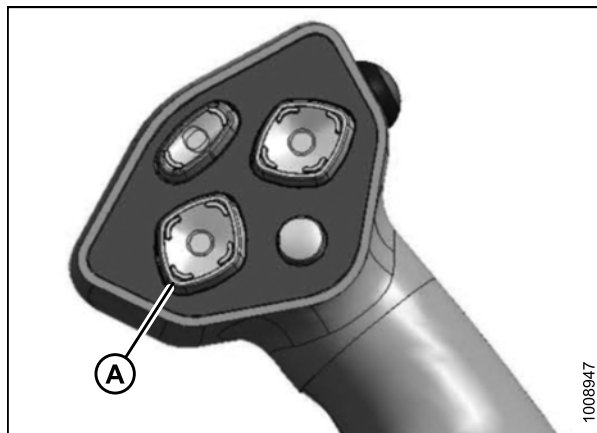


Figure 6.92: GSL

19. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the auger header operator's manual.

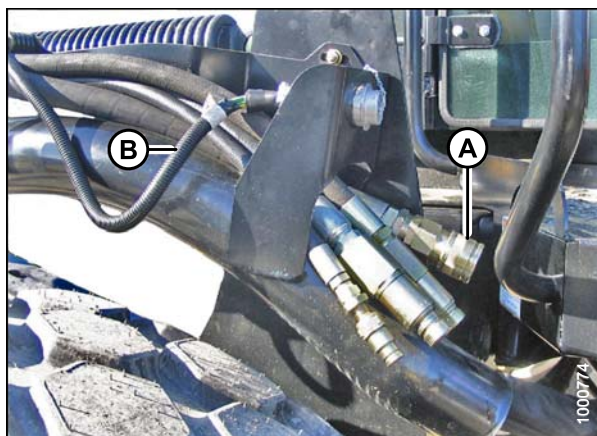


Figure 6.93: Header Drive Hoses and Harness

Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment Kit

To attach an A-Series header to an M155 or M205 Self-propelled Windrower equipped with a hydraulic center-link without the self-alignment kit, follow these steps:

DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

ASSEMBLING THE WINDROWER

1. Remove hairpin (A) from clevis pin (B) and remove the clevis pin from left and right header boots (C) on header.

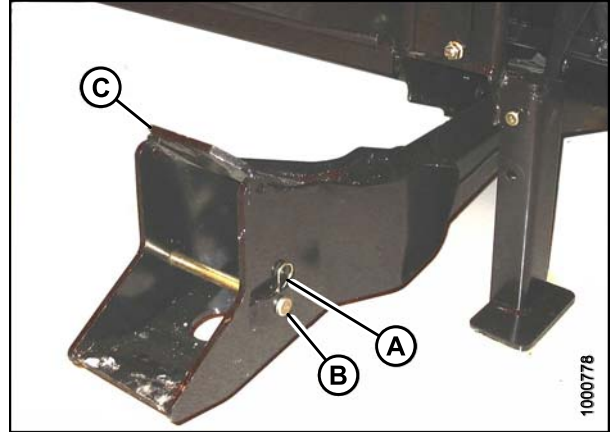


Figure 6.94: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and NOT installed at hole location (A).

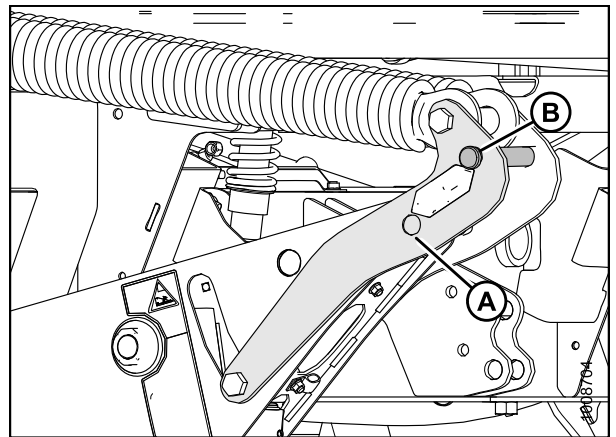


Figure 6.95: Header Lift Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

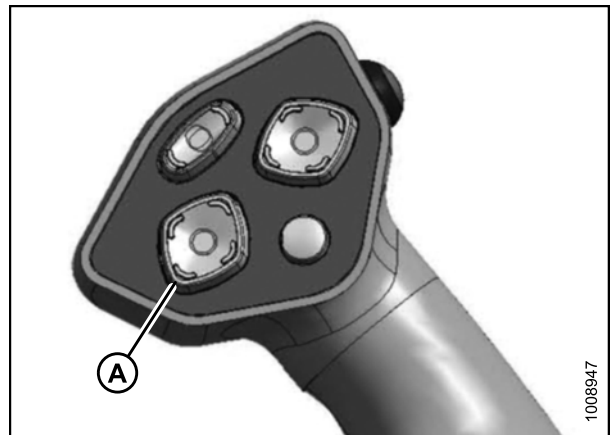


Figure 6.96: GSL

ASSEMBLING THE WINDROWER

3. If necessary, relocate pin (A) at the frame linkage as required to raise the center-link (B) so that the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

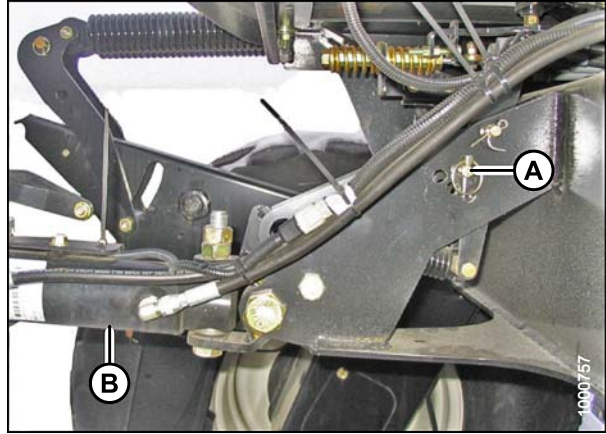


Figure 6.97: Hydraulic Center-Link without Self-Alignment Kit

4. Slowly drive the windrower forward so the feet (A) on the windrower enter the boots (B) on the header. Continue to drive slowly forward until the feet engage the boots and the header nudges forward.

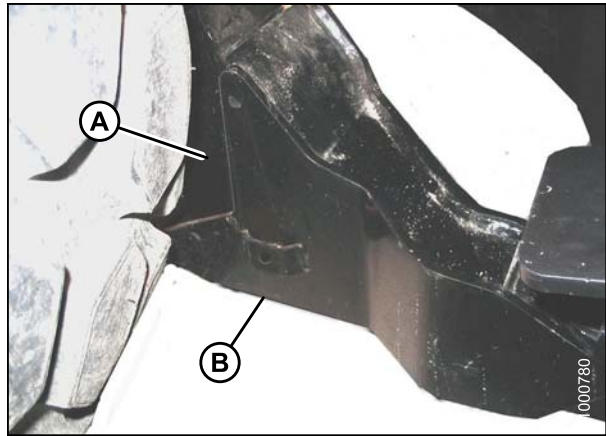


Figure 6.98: Header Boot

5. Activate HEADER TILT cylinder switches on ground speed lever (GSL) to extend or retract center-link cylinder so that the hook lines up with the header attachment pin.
6. Stop engine and remove key from ignition.

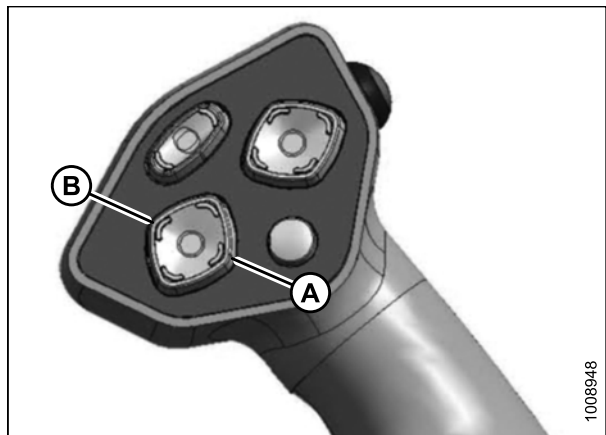


Figure 6.99: GSL

A - Header Tilt Up

B - Header Tilt Down

ASSEMBLING THE WINDROWER

7. Push down on rod end of link cylinder (B), until hook engages pin on header and is locked.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

8. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

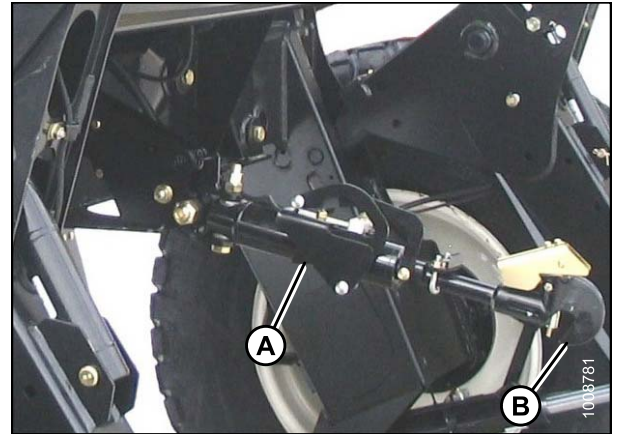


Figure 6.100: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

9. Start engine and press the HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does **NOT** raise fully, the lift cylinders require rephasing. If rephasing is needed, proceed as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

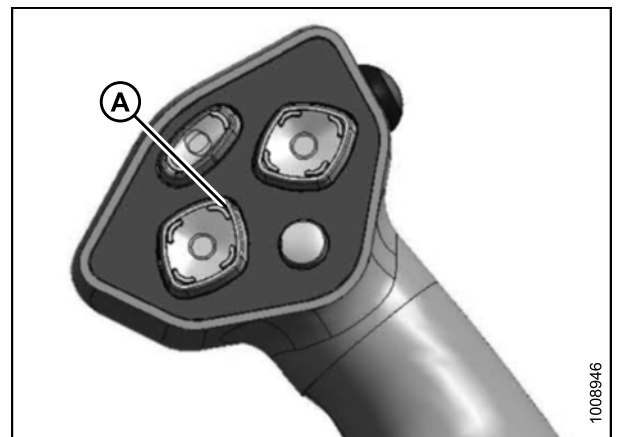


Figure 6.101: GSL

ASSEMBLING THE WINDROWER

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate toward header to release and lower the safety prop (B) onto cylinder.
 - c. Repeat for the opposite lift cylinder.

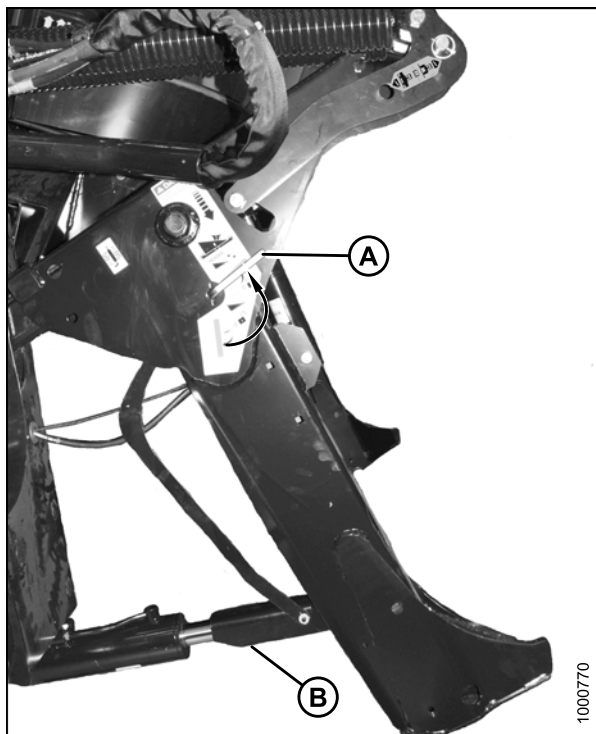


Figure 6.102: Cylinder Stop

11. Install clevis pin (A) through each boot and foot, and secure with hairpin. Do this to both sides.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

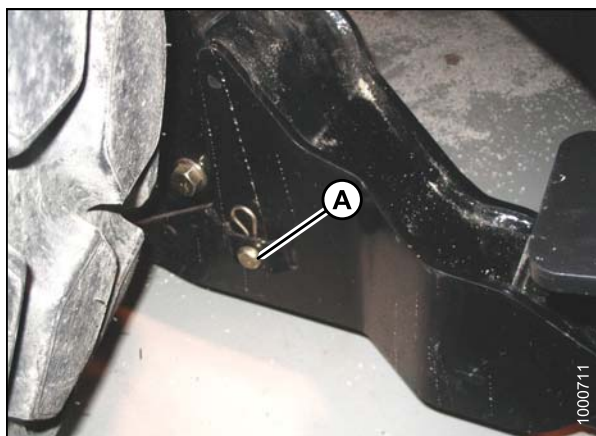


Figure 6.103: Header Boot

ASSEMBLING THE WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

18. Start engine and activate HEADER DOWN switch (A) on GSL to lower header fully. Stop engine and remove key.

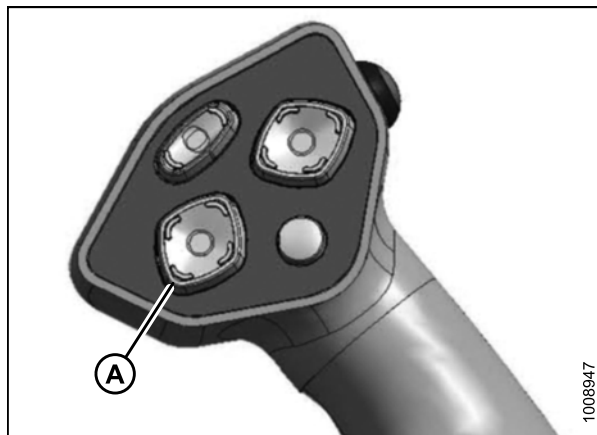


Figure 6.107: GSL

19. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the auger header operator's manual.

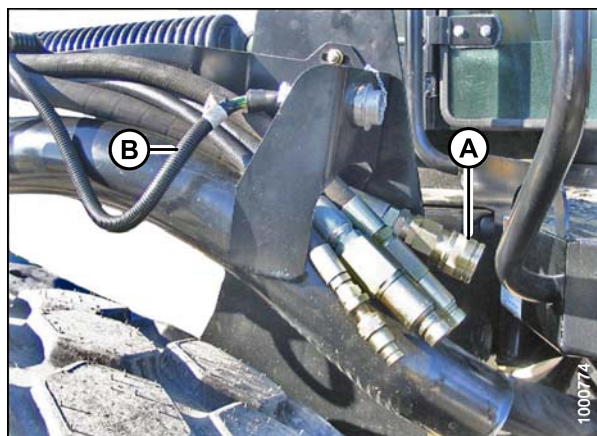


Figure 6.108: Header Drive Hoses and Harness

Attaching an A-Series Header: Mechanical Center-Link

To attach an A-Series header to an M155 Self-propelled Windrower equipped with a mechanical center-link, follow these steps:

DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

ASSEMBLING THE WINDROWER

1. Remove hairpin (A) from clevis pin (B) and remove pin from left and right header boots (C) on header.

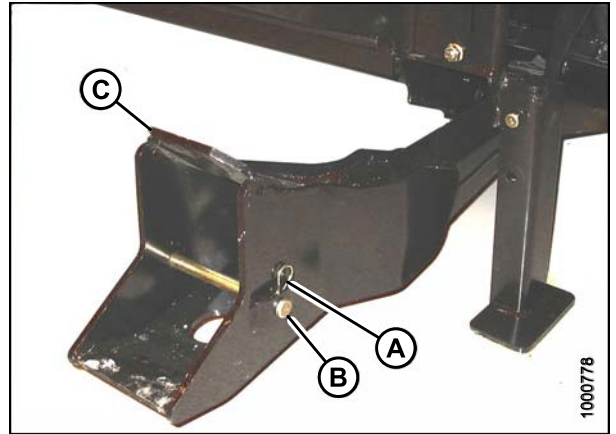


Figure 6.109: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and NOT installed at hole location (A).

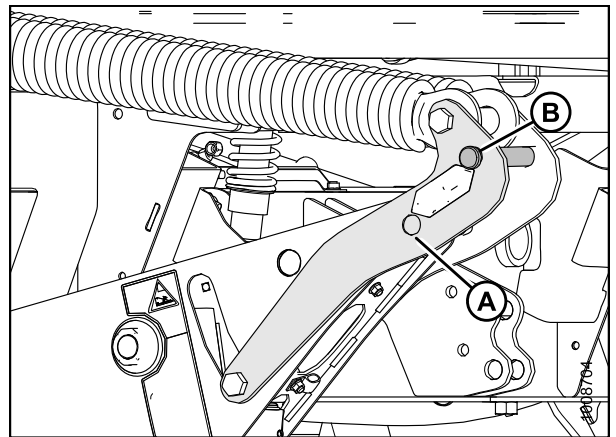


Figure 6.110: Header Lift Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

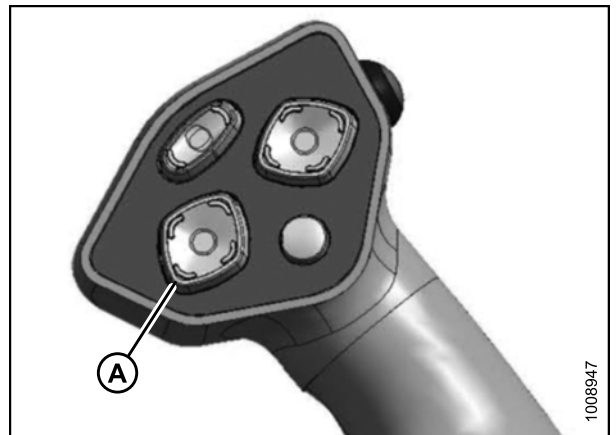


Figure 6.111: GSL

ASSEMBLING THE WINDROWER

3. Slowly drive the windrower forward so the feet (A) on the windrower enter the boots (B) on the header. Continue to drive slowly forward until the feet engage the boots and the header nudges forward.

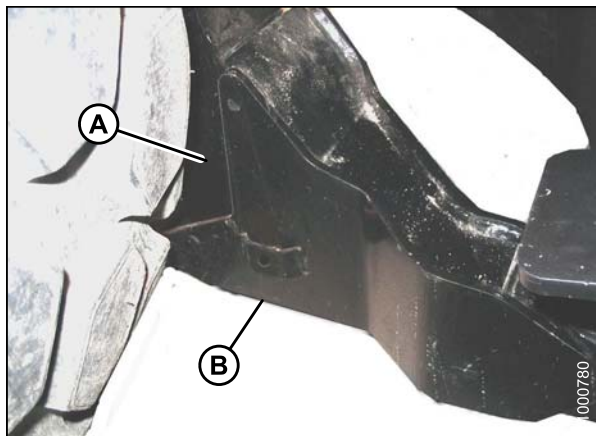


Figure 6.112: Header Boot

4. Stop engine and remove key from ignition.
5. Loosen nut (A) and rotate barrel (B) to adjust length so that the link lines-up with header bracket.
6. Install clevis pin (C) and secure with cotter pin (D).
7. Adjust link to required length for proper header angle by rotating barrel (B). Tighten nut (A) against barrel. A slight tap with a hammer is sufficient.

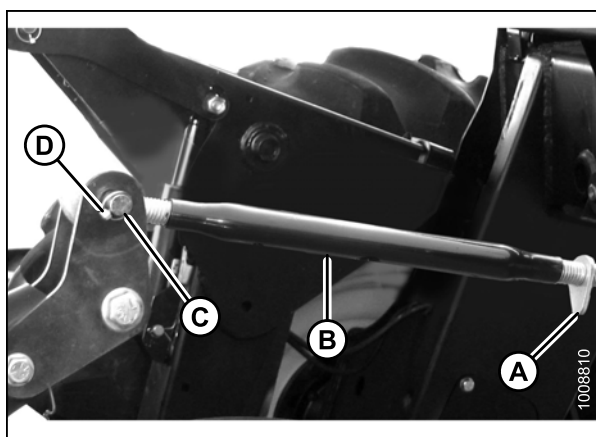


Figure 6.113: Mechanical Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

8. Start engine and press the HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does **NOT** raise fully, the lift cylinders require rephasing. If rephasing is needed, proceed as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.



Figure 6.114: GSL

ASSEMBLING THE WINDROWER

9. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate toward header to release and lower the safety prop (B) onto cylinder.
 - c. Repeat for the opposite lift cylinder.

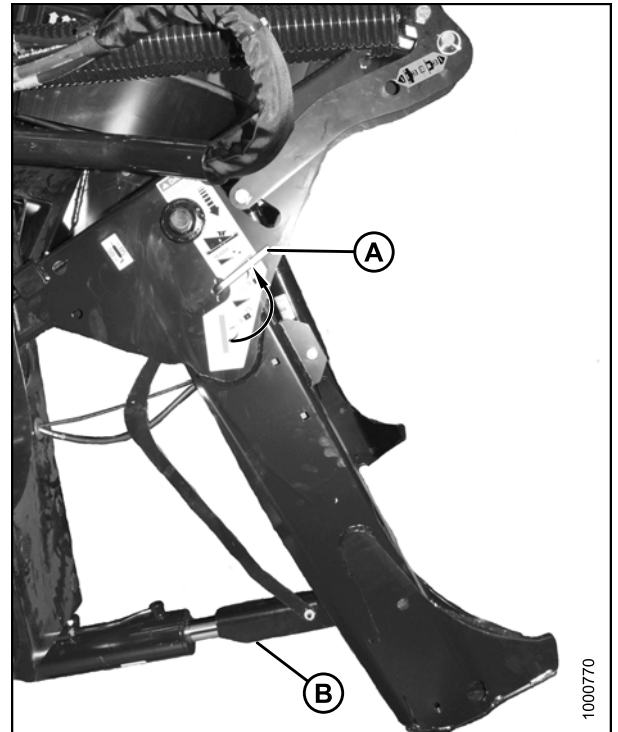


Figure 6.115: Cylinder Stop

10. Install clevis pin (A) through each boot and foot, and secure with hairpin. Do this to both sides.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

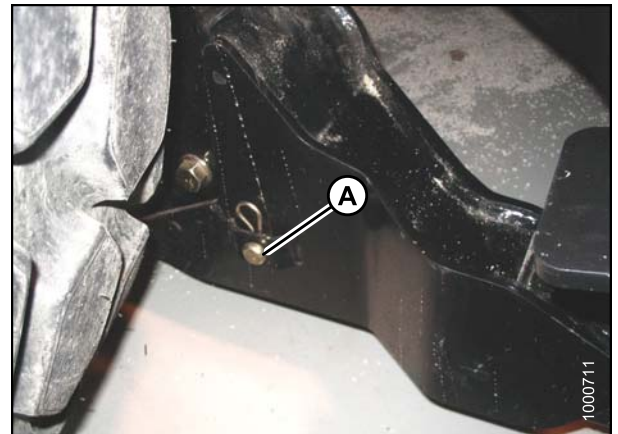


Figure 6.116: Header Boot

ASSEMBLING THE WINDROWER

11. Remove lynch pin from clevis pin (A) in stand (B).
12. Hold stand (B) and remove pin (A).
13. Position stand to storage position by inverting stand and relocating on bracket as shown. Reinsert clevis pin (A) and secure with lynch pin.

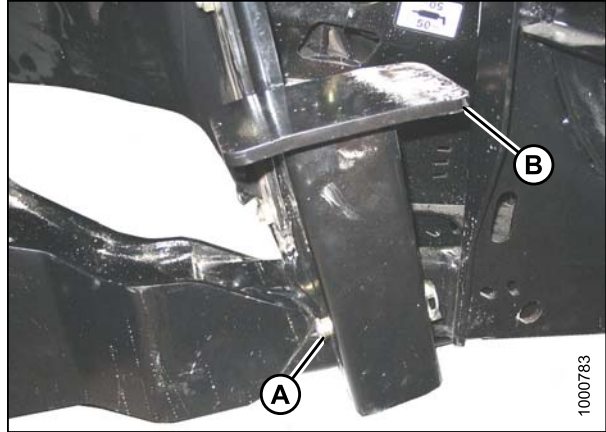


Figure 6.117: Header Stand

14. Remove clevis pin from storage position (B) in linkage, and insert in hole (A) to engage float springs. Secure with hairpin.

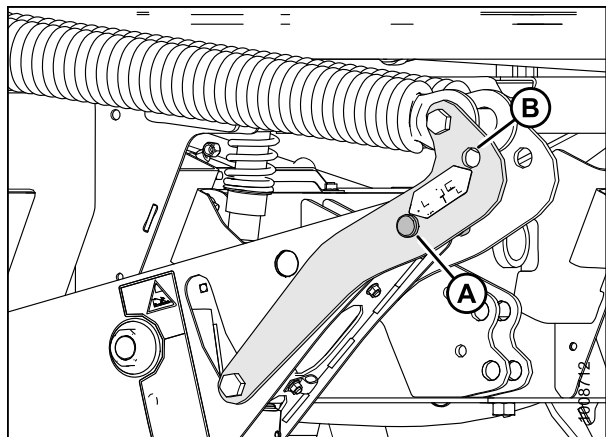


Figure 6.118: Header Lift Linkage

15. Disengage safety prop by turning lever (A) downward to release and lower safety prop until lever locks into vertical position.
16. Repeat for opposite safety prop.

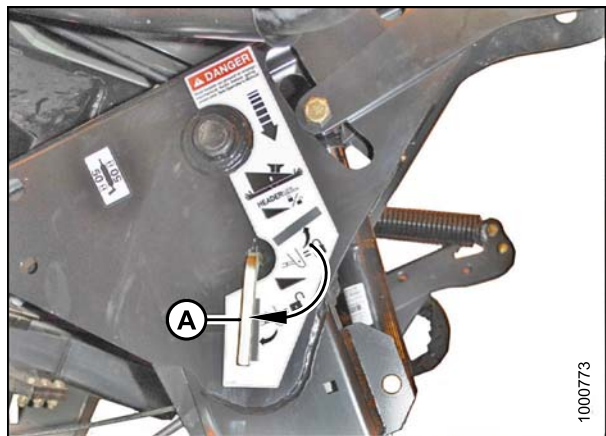


Figure 6.119: Safety Prop

ASSEMBLING THE WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

17. Start engine and activate HEADER DOWN switch (A) on GSL to lower header fully. Stop engine and remove key.

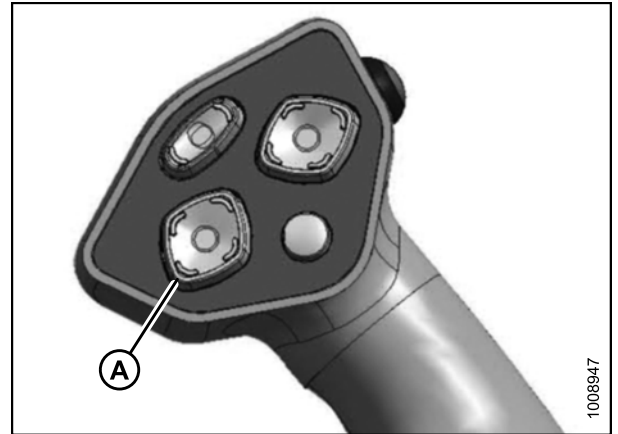


Figure 6.120: GSL

18. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the auger header operator's manual.

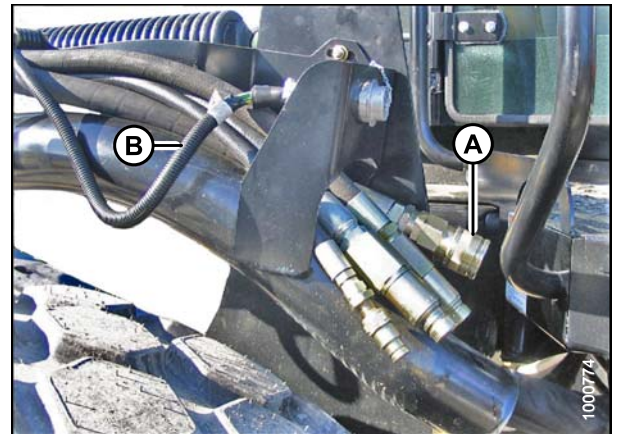


Figure 6.121: Header Drive Hoses and Harness

ASSEMBLING THE WINDROWER

6.11.3 Attaching an R-Series Header

The R-Series header can be attached to an M155 or M205 windrower. For attachment procedure, refer to the specific windrower model.

M155 Self-Propelled Windrower

The M155 Self-propelled windrower can operate **ONLY** 13-foot R80 and R85 Rotary Disc Headers. These headers are shipped without the motor and hoses installed, and the installation of a separate motor and hose bundle is necessary. A Hydraulic Valve kit is also needed to operate the header.

If necessary, obtain the following kits from your MacDon Dealer and install them in accordance with the instructions supplied with the kits.

Kit Description	Kit Number
Hydraulic Drive kit	B5510
Hydraulic Valve kit	B4657

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 79](#)
- [Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment, page 84](#)
- [Attaching an R-Series Header: Mechanical Center-Link, page 90](#)

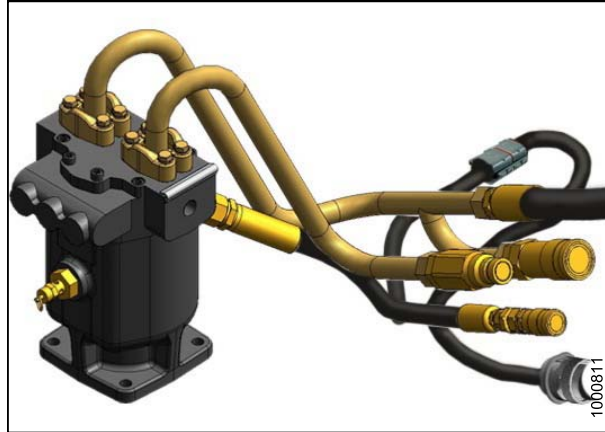


Figure 6.122: M155 Hydraulic Drive Kit (MD #B5510)

ASSEMBLING THE WINDROWER

M205 Self-Propelled Windrower

The M205 Self-propelled Windrower is factory equipped with hydraulics and connections to run the R-Series Rotary Disc headers.

The R85 16-foot header is factory equipped with the hydraulic connections for attachment to the windrower.

The R85 13-foot header and the R80 13- and 16-foot headers are shipped without the motor and hoses installed and the installation of a separate motor and hose bundle is necessary.

If required, obtain Hydraulic Drive kit (MD #B5456) from your MacDon Dealer and install it in accordance with the instructions supplied with the kit.

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 79](#)
- [Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment, page 84](#)

Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment

To attach an R-Series header to an M155 or M205 Self-propelled Windrower equipped with a hydraulic center-link and optional self-alignment, follow these steps:

⚠ DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

1. Remove hairpin (B) from clevis pin (A) and remove pin from on left and right header boots (C) on header.

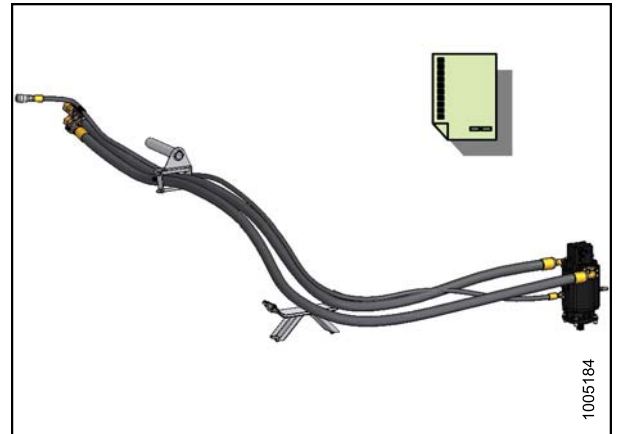


Figure 6.123: M205 Hydraulic Drive Kit (MD #B5456)

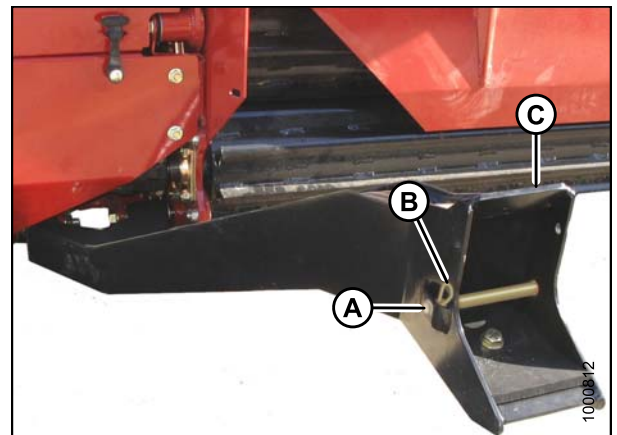


Figure 6.124: Header Boot

ASSEMBLING THE WINDROWER

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and NOT installed at hole location (A).

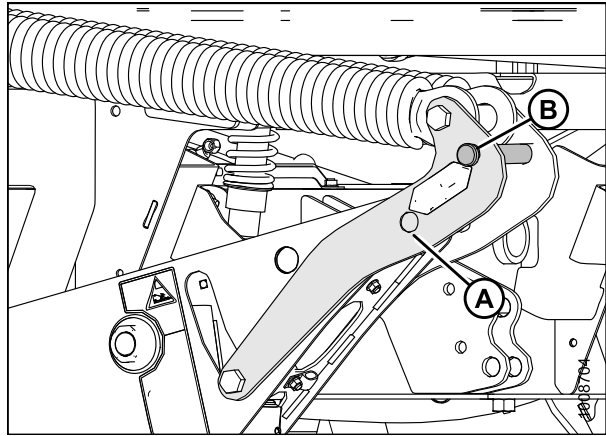


Figure 6.125: Header Lift Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

3. If necessary, activate the REEL UP switch (A) on the GSL to raise the center-link so that the hook is above the attachment pin on the header.

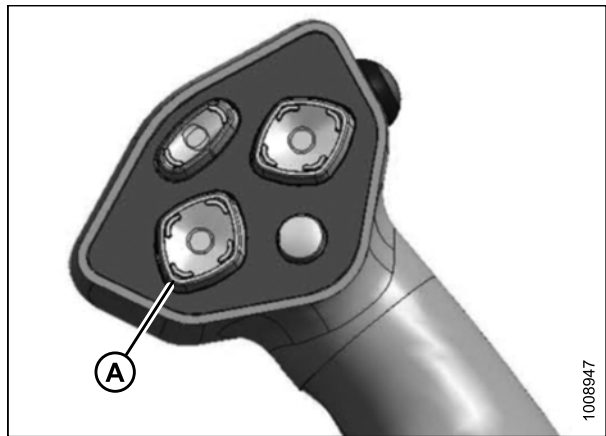


Figure 6.126: GSL

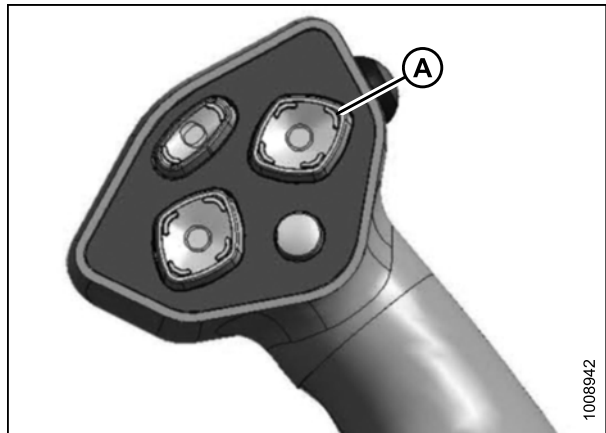


Figure 6.127: GSL

ASSEMBLING THE WINDROWER

4. Slowly drive windrower forward so that feet (A) on windrower enter boots (B) on the header. Continue to drive slowly forward until feet engage the boots and header nudges forward.

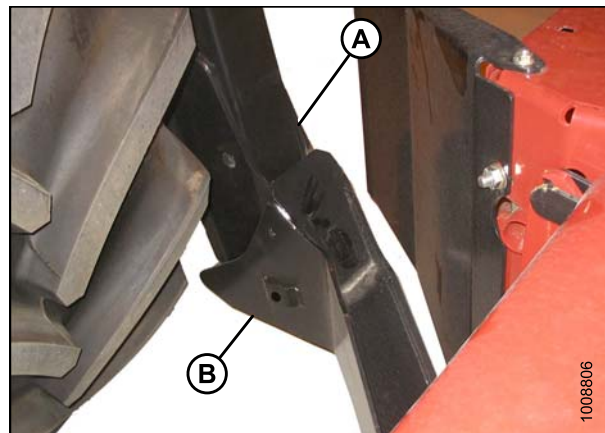


Figure 6.128: Header Boot

5. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Reel up (A) to raise the center-link
 - Reel down (B) to lower the center-link
 - Header tilt up (C) to retract the center-link
 - Header tilt down (D) to extend the center-link

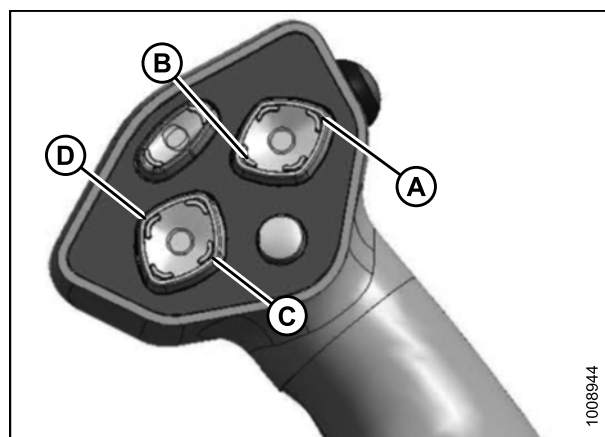


Figure 6.129: GSL

6. Adjust position of the center-link cylinder (E) with the REEL UP and REEL DOWN switches. Position the hook above the header attachment pin using HEADER TILT switches on the GSL.
7. Lower center-link (A) onto the header with REEL DOWN switch until it locks into position (hook release [B] is down).
8. Check that center-link is locked onto header by pressing the REEL UP switch on the GSL.

IMPORTANT:

Hook release (B) must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

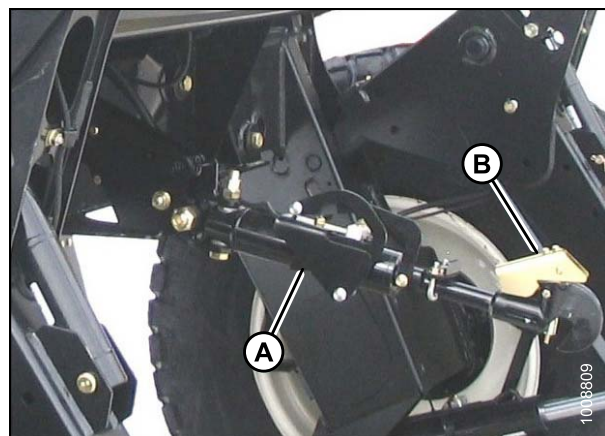


Figure 6.130: Hydraulic Center-Link

ASSEMBLING THE WINDROWER

9. Start engine and press HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does NOT raise fully, the lift cylinders require re-phasing. If re-phasing is needed, proceed as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.



Figure 6.131: GSL

10. Safety props are located on both of the windrower's header lift cylinders. Engage safety props on both lift cylinders as follows:

- a. Stop engine and remove key from ignition.
- b. Pull lever (A) and rotate toward header to release and lower the safety prop (B) onto cylinder.
- c. Repeat for the opposite lift cylinder.

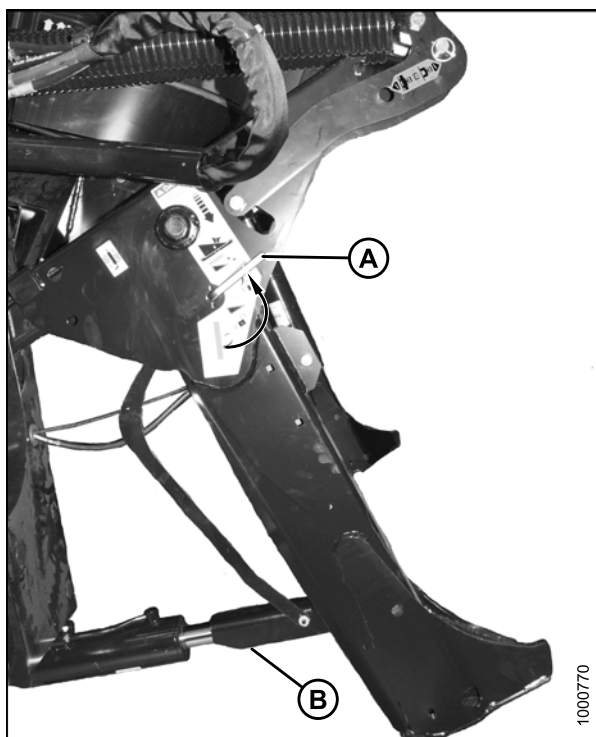


Figure 6.132: Safety Prop

ASSEMBLING THE WINDROWER

11. Install clevis pin (A) through each boot and foot, and secure with hairpin (B). Do this to both sides.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

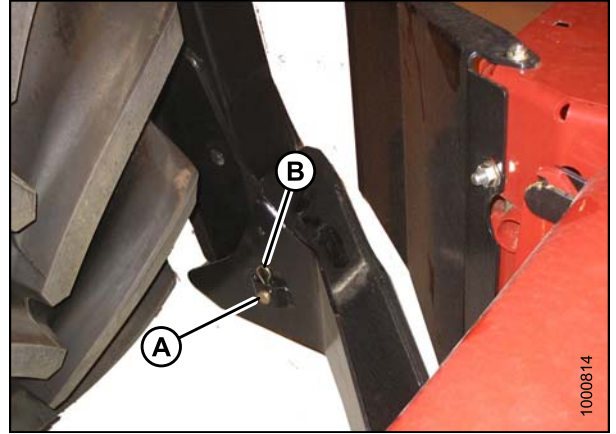


Figure 6.133: Header Boot

12. Remove clevis pin from storage position (B) in linkage, and insert in hole (A) to engage float springs. Secure with hairpin.

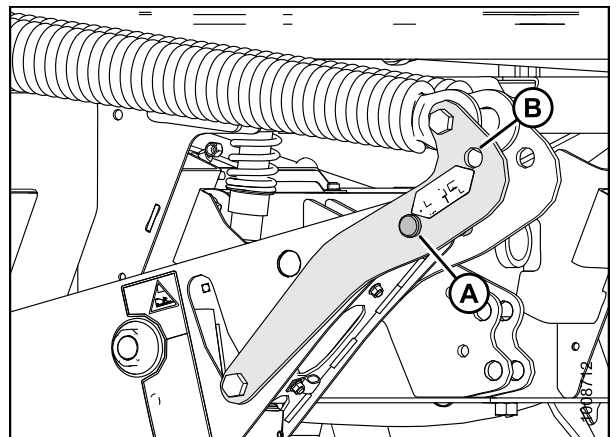


Figure 6.134: Header Lift Linkage

13. Disengage safety prop by turning lever (A) downward to release and lower safety prop until lever locks into vertical position.
14. Repeat for opposite safety prop.

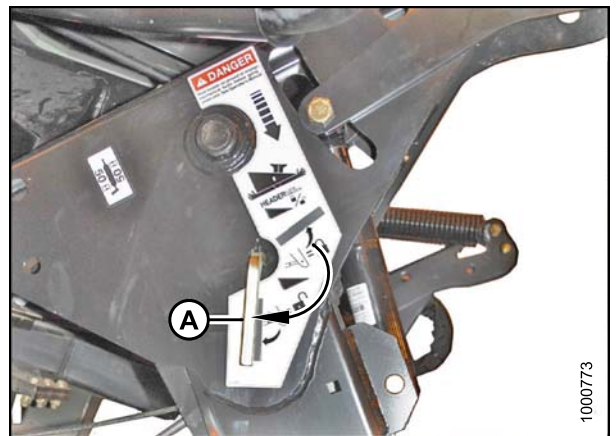


Figure 6.135: Safety Prop

ASSEMBLING THE WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

15. Start engine and activate HEADER DOWN switch (A) on GSL to lower header fully. Stop engine and remove key.

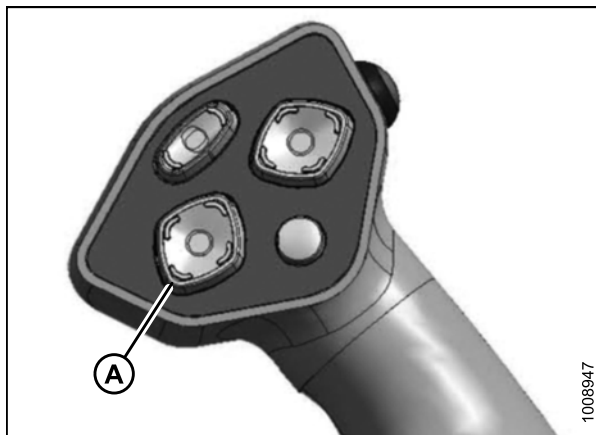


Figure 6.136: GSL

16. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

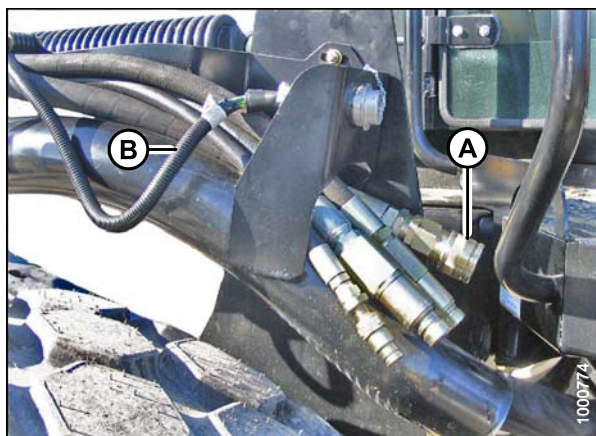


Figure 6.137: Header Drive Hoses and Harness

Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment

To attach an R-Series header to an M155 or M205 Self-propelled Windrower equipped with a non-self-aligning hydraulic center-link, follow these steps:

DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

ASSEMBLING THE WINDROWER

1. Remove hairpin (B) from clevis pin (A) and remove pin from left and right header boots (C) on header.

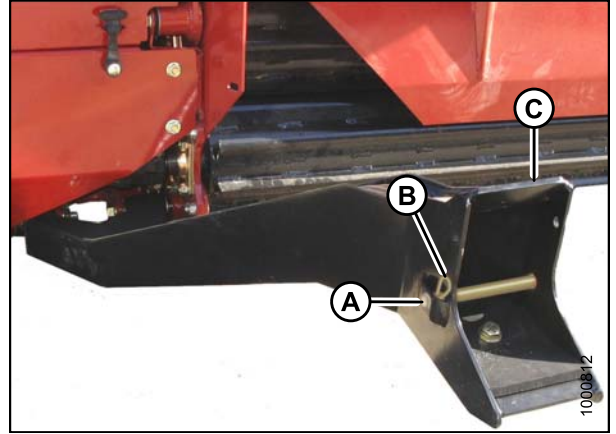


Figure 6.138: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and NOT installed at hole location (A).

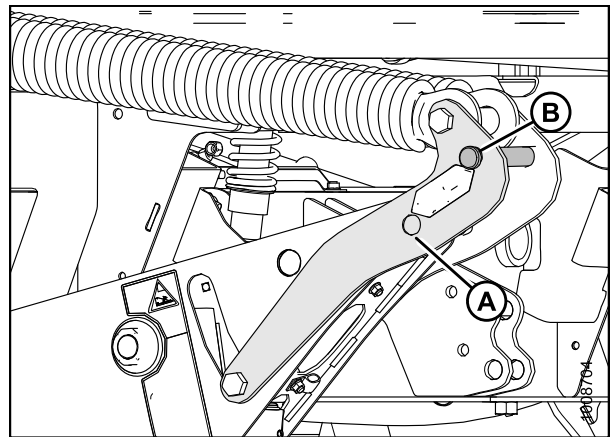


Figure 6.139: Header Lift Linkage

ASSEMBLING THE WINDROWER

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

3. If necessary, relocate the clevis pin (A) at the frame linkage as required to raise the center-link (B), so that the hook is above the attachment pin on the header.

4. Slowly drive windrower forward so that feet (A) on windrower enter boots (B) on the header. Continue to drive slowly forward until feet engage the boots and header nudges forward.

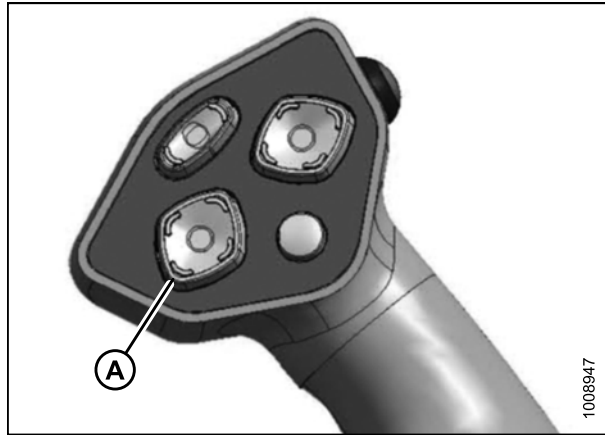


Figure 6.140: GSL

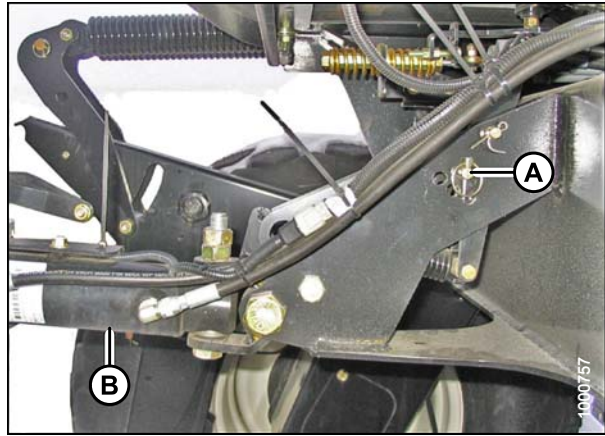


Figure 6.141: Hydraulic Center-Link without Self-alignment

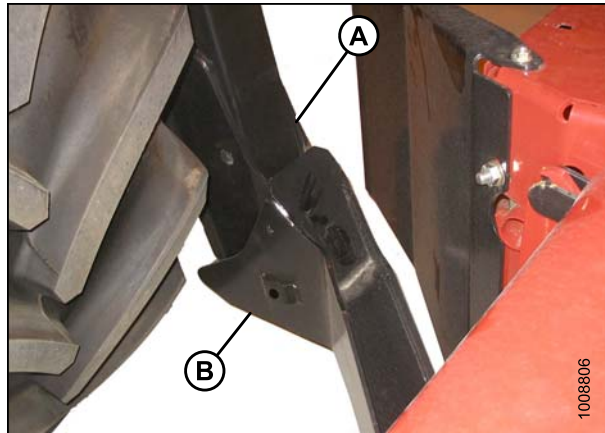


Figure 6.142: Header Boots

ASSEMBLING THE WINDROWER

5. Activate HEADER TILT cylinder switches on ground speed lever (GSL) to extend or retract center-link cylinder so that the hook lines up with the header attachment pin.
6. Stop engine and remove key from ignition.

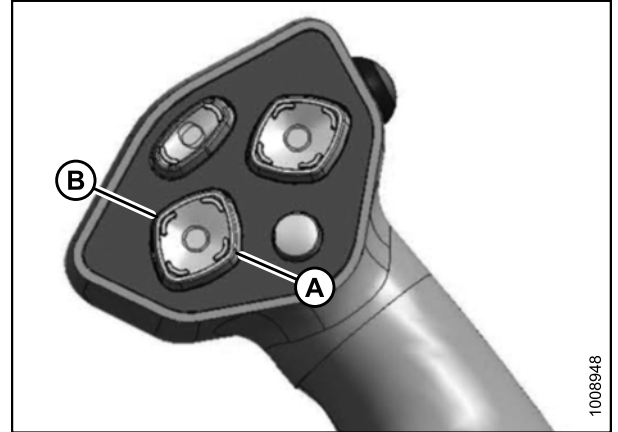


Figure 6.143: GSL

7. Push down on rod end of link cylinder (B), until hook engages pin on header and is locked.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

8. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

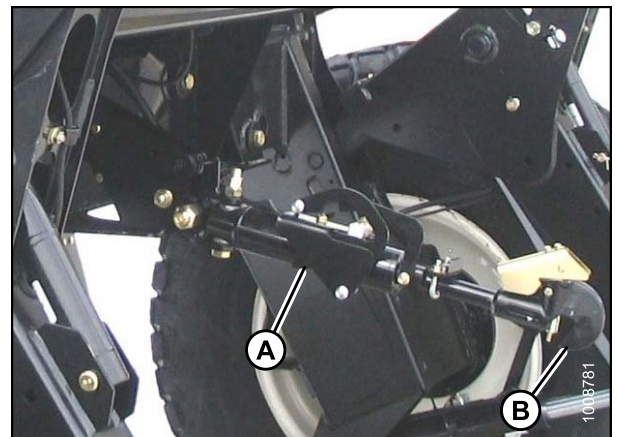


Figure 6.144: Hydraulic Center-Link

9. Start engine and press HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does NOT raise fully, the lift cylinders require re-phasing. If re-phasing is needed, proceed as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.



Figure 6.145: GSL

ASSEMBLING THE WINDROWER

10. Safety props are located on both of the windrower's header lift cylinders. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate toward header to release and lower the safety prop (B) onto cylinder.
 - c. Repeat for the opposite lift cylinder.

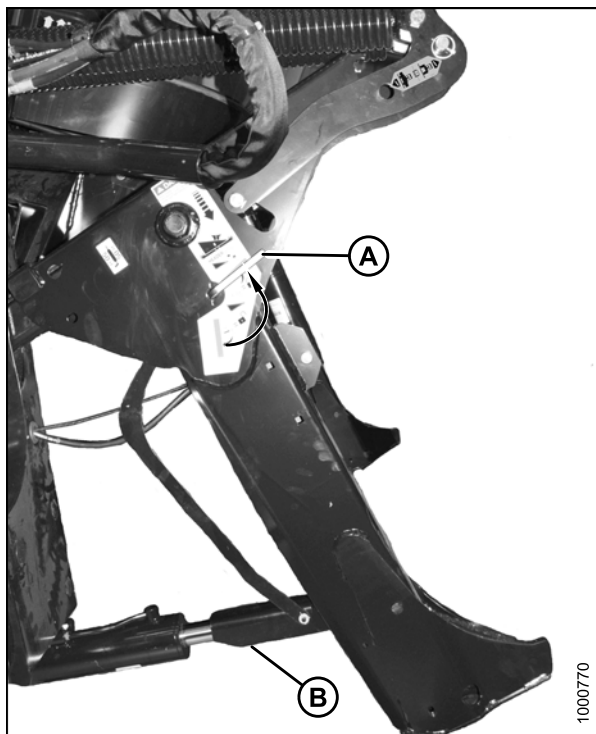


Figure 6.146: Safety Prop

11. Install clevis pin (A) through each boot and foot, and secure with hairpin (B). Do this to both sides.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

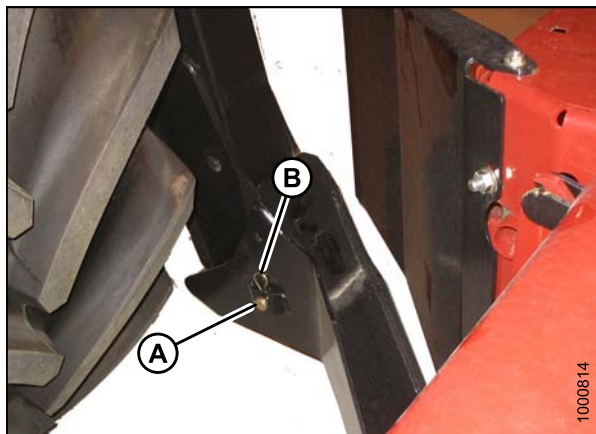


Figure 6.147: Header Boot

ASSEMBLING THE WINDROWER

12. Remove clevis pin from storage position (B) in linkage, and insert in hole (A) to engage float springs. Secure with hairpin.

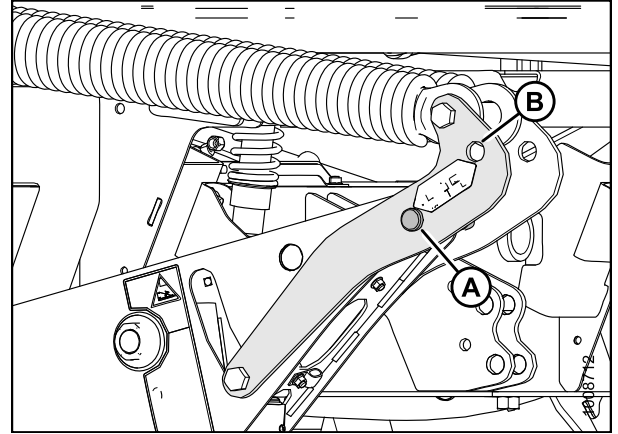


Figure 6.148: Header Lift Linkage

13. Disengage safety prop by turning lever (A) downward to release and lower safety prop until lever locks into vertical position.
14. Repeat for opposite safety prop.

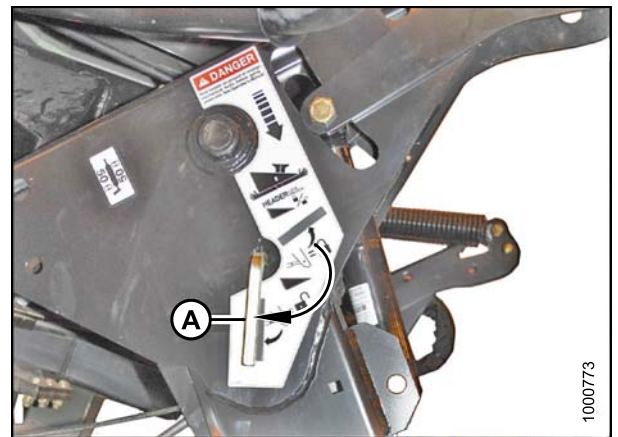


Figure 6.149: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

15. Start engine and activate HEADER DOWN switch (A) on GSL to lower header fully. Stop engine and remove key.

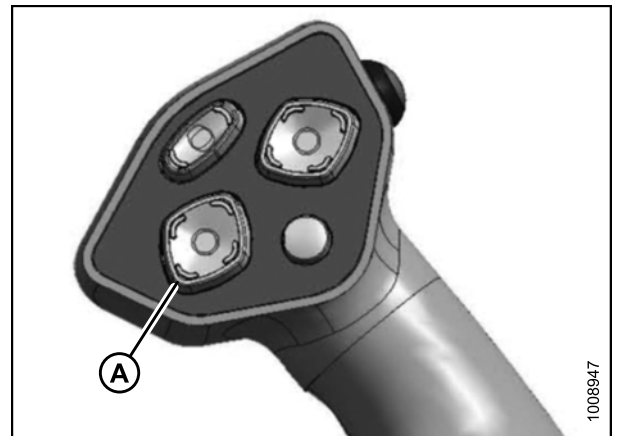


Figure 6.150: GSL

ASSEMBLING THE WINDROWER

16. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

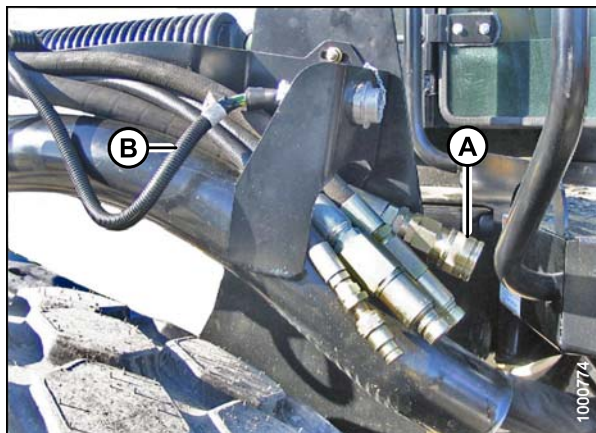


Figure 6.151: Header Drive Hoses and Harness

Attaching an R-Series Header: Mechanical Center-Link

To attach an R-Series header to an M155 Self-propelled Windrower with the mechanical center-link option, follow these steps:

⚠ DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

1. Remove hairpin (B) from clevis pin (A) and remove pin from on left and right header boots (C) on header.

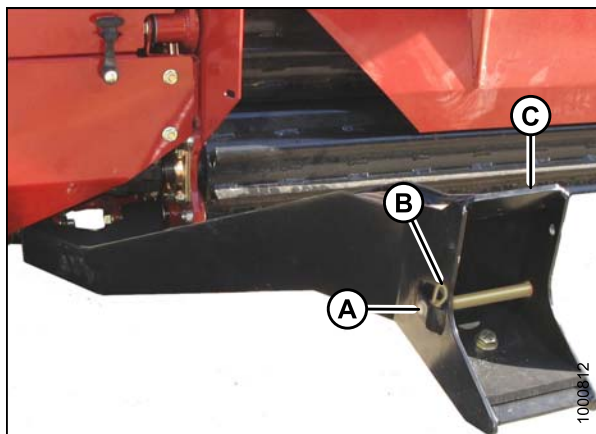


Figure 6.152: Header Boot

ASSEMBLING THE WINDROWER

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and NOT installed at hole location (A).

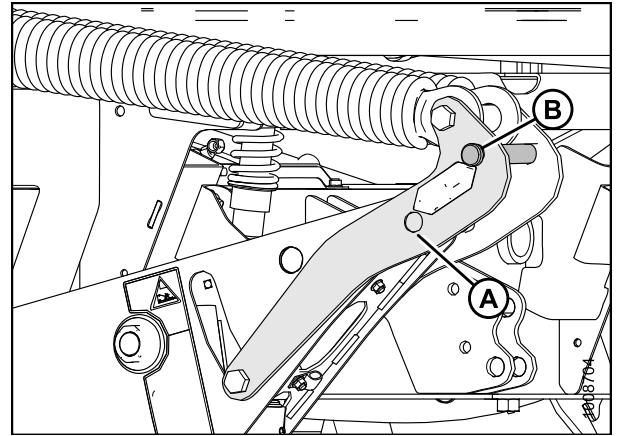


Figure 6.153: Header Lift Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate HEADER DOWN button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.
3. Slowly drive windrower forward so that feet (A) on windrower enter boots (B) on the header. Continue to drive slowly forward until feet engage the boots and header nudges forward.

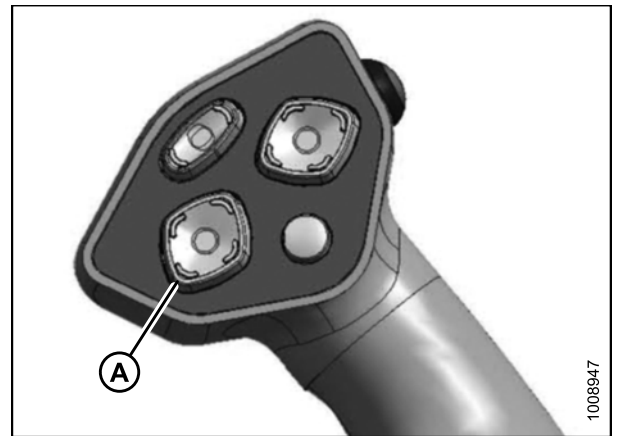


Figure 6.154: GSL

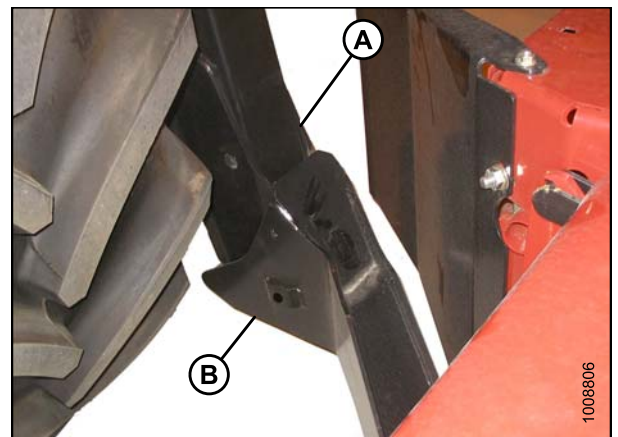


Figure 6.155: Header Boot

ASSEMBLING THE WINDROWER

4. Stop engine and remove the key.
5. Loosen nut (A) and rotate barrel (B) to adjust length so that the link lines up with header bracket.
6. Install pin (C) and secure with cotter pin (D).
7. Adjust link to required length for proper header angle by rotating barrel (B). Tighten nut (A) against barrel. A slight tap with a hammer is sufficient.

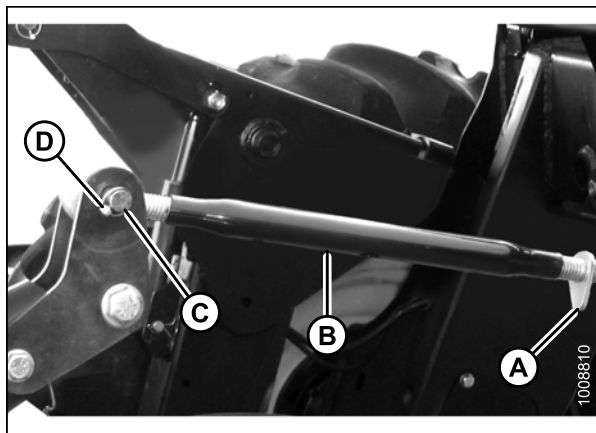


Figure 6.156: Mechanical Center-Link

8. Start engine and press HEADER UP switch (A) to raise header to maximum height.

NOTE: If one end of the header does NOT raise fully, the lift cylinders require re-phasing. If re-phasing is needed, proceed as follows:

- a. Press and hold the HEADER UP switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

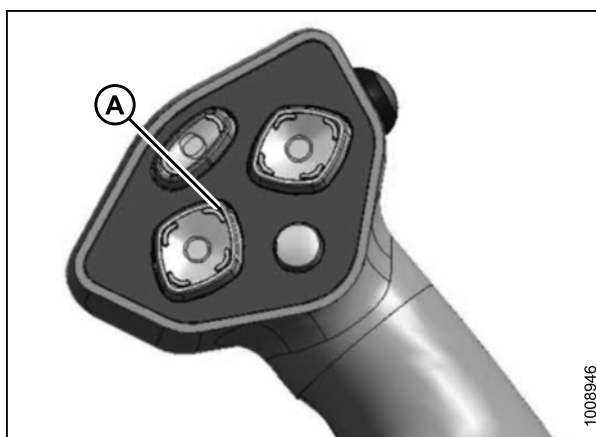


Figure 6.157: GSL

ASSEMBLING THE WINDROWER

9. Safety props are located on both of the windrower's header lift cylinders. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate toward header to release and lower the safety prop (B) onto cylinder.
 - c. Repeat for the opposite lift cylinder.

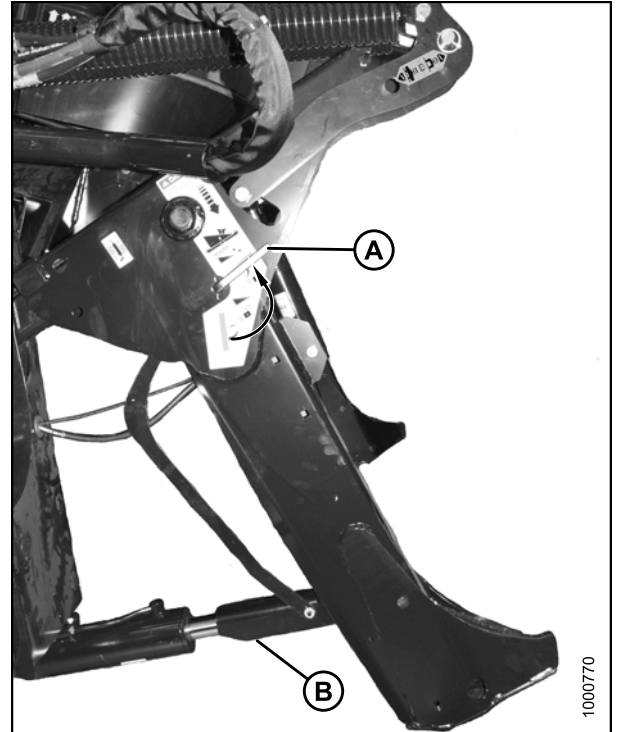


Figure 6.158: Safety Prop

10. Install clevis pin (A) through each boot and foot, and secure with hairpin (B). Do this to both sides.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

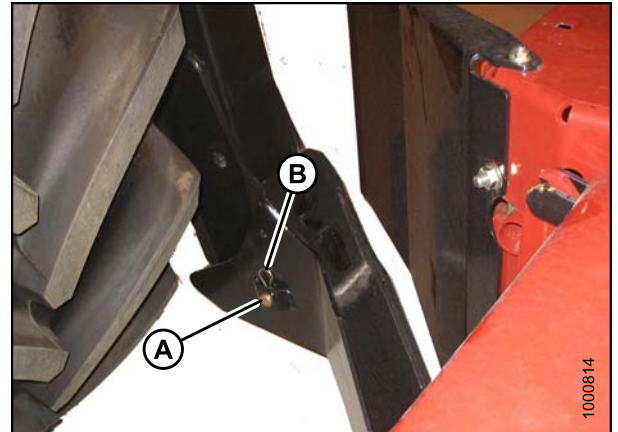


Figure 6.159: Header Boot

ASSEMBLING THE WINDROWER

11. Remove clevis pin from storage position (B) in linkage, and insert in hole (A) to engage float springs. Secure with hairpin.

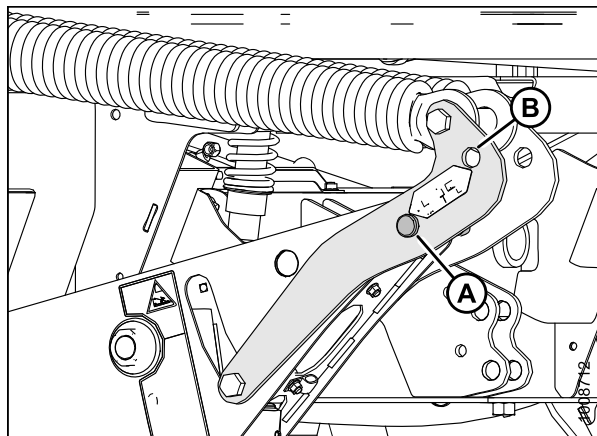


Figure 6.160: Header Lift Linkage

12. Disengage safety prop by turning lever (A) downward to release and lower safety prop until lever locks into vertical position.
13. Repeat for opposite safety prop.

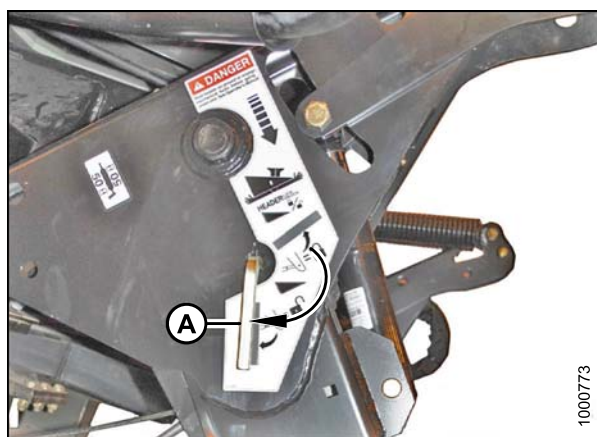


Figure 6.161: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

14. Start engine and activate HEADER DOWN switch (A) on GSL to lower header fully. Stop engine and remove key.

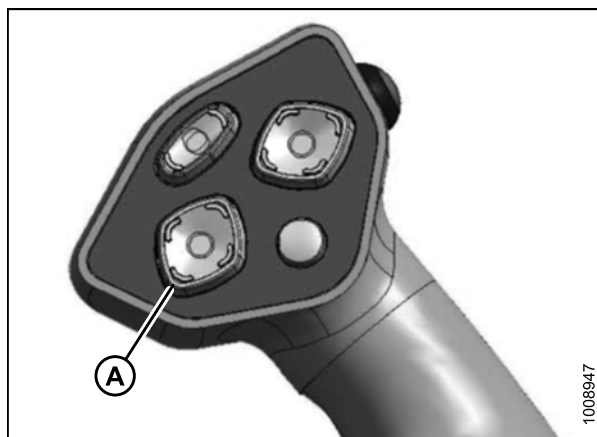


Figure 6.162: GSL

ASSEMBLING THE WINDROWER

15. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

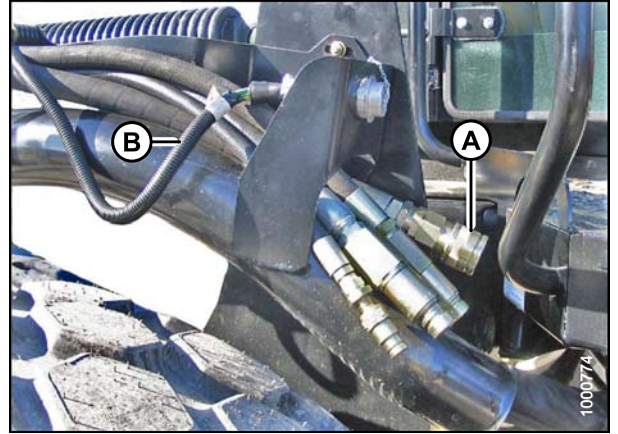


Figure 6.163: Header Drive Hoses and Harness

ASSEMBLING THE WINDROWER

6.12 Lubricating the Windrower

Table 6.2 Recommended Lubricant

Spec.	Description	Use
SAE Multi-Purpose	High Temperature, Extreme Pressure (EP2) Performance With 1% Max Molybdenum Disulphide (NLGI Grade 2) Lithium Base	As required unless otherwise specified.

6.12.1 Lubrication Procedure

DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine.

1. Wipe grease fitting with a clean cloth before greasing, to avoid injecting dirt and grit.
2. Inject grease through fitting with grease gun until grease overflows fitting, except where noted.
3. Leave excess grease on fitting to keep out dirt.
4. Replace any loose or broken fittings immediately.
5. If fitting will **NOT** take grease, remove and clean thoroughly. Also clean lubricant passageway. Replace fitting, if necessary.

ASSEMBLING THE WINDROWER

6.12.2 Lubrication Points

Refer to the following illustrations to identify various locations that require lubrication.

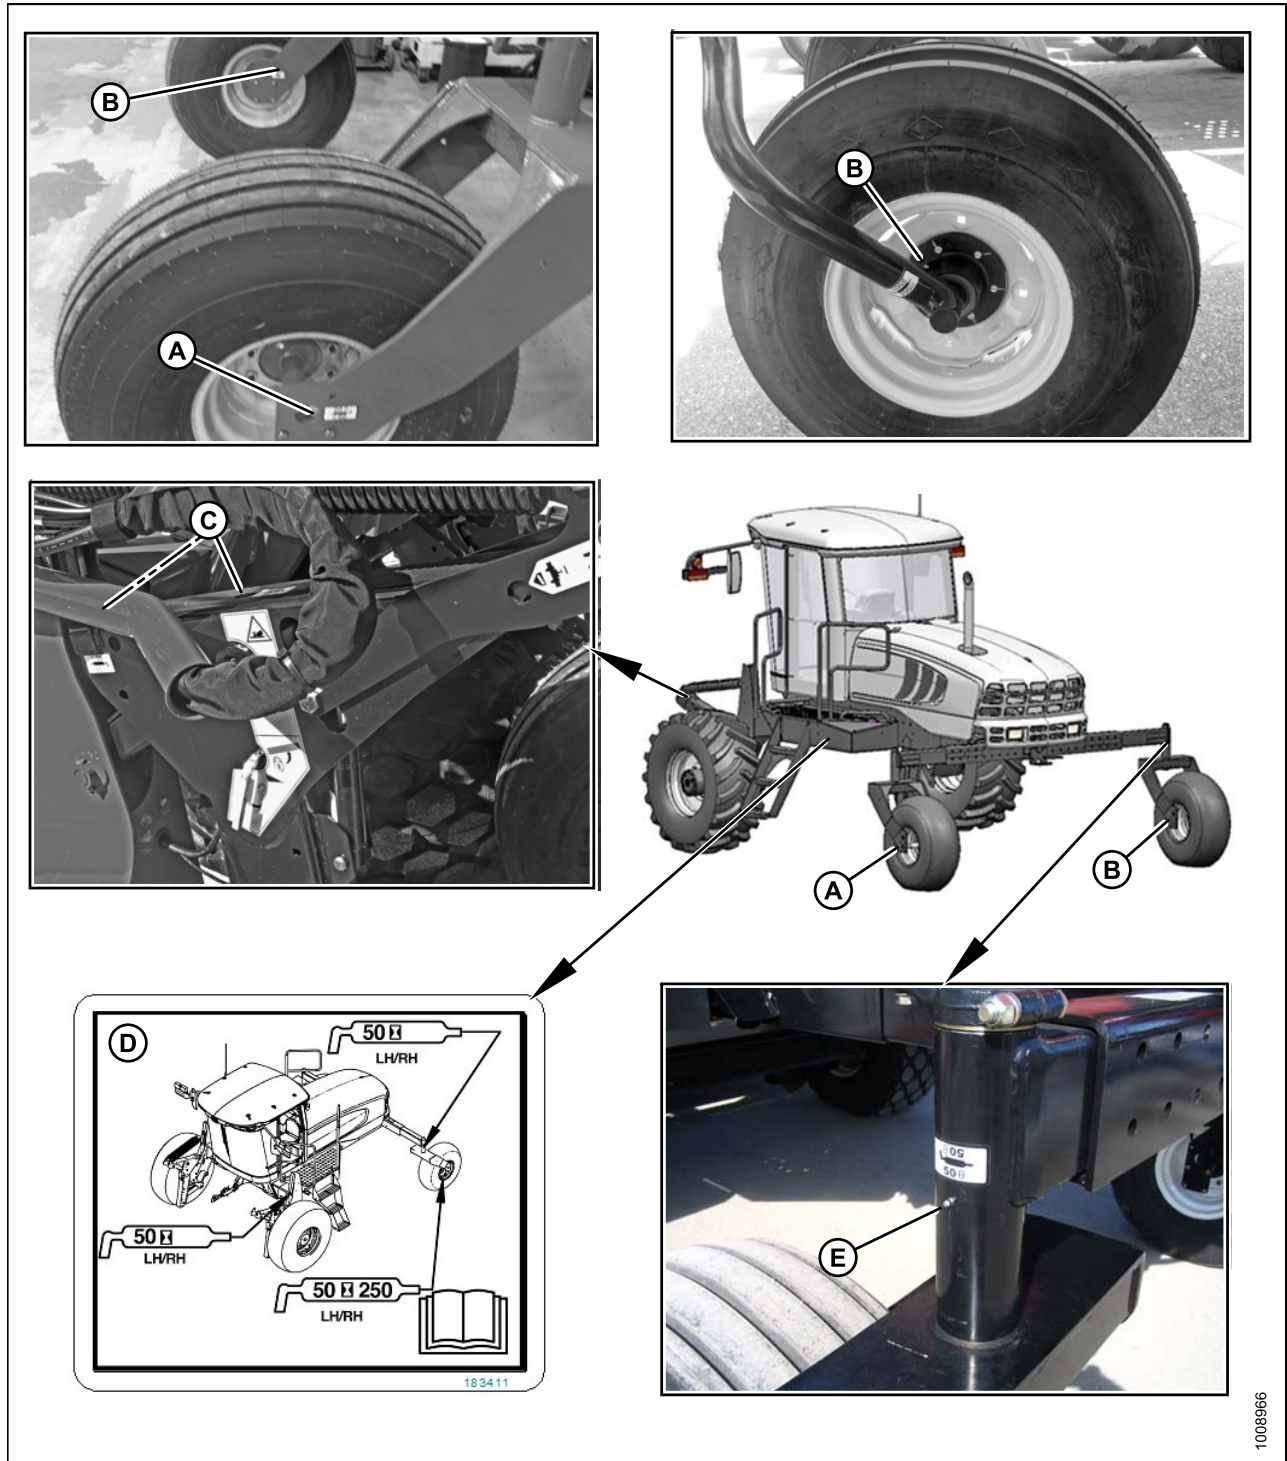


Figure 6.164: Lubrication Points

- A - Forked Caster Wheel Bearing (2 Places) (Outer—Both Wheels)
- C - Top Link (2 Places) (Both Sides)
- D - Lubrication Decal (MD #183411)

- B - Forked/formed Caster Wheel Bearing (2 Places) (Inner—Both Wheels) (50 Hrs/250 Hrs)
- E - Caster Pivot (Both Sides)

6.13 Cab Display Module (CDM) Programming



Figure 6.165: CDM

A - Side Display

D - Menu Item Scroll Forward

B - Main Display

E - Menu Item Scroll Backward

C - Select Switch

F - Program Switch

A – SIDE DISPLAY displays software revision status.

- Upper Line – C### (CDM)
- Lower Line – M### (WCM)

B – MAIN DISPLAY displays menu item and selection.

- Upper Line – Menu Item
- Lower Line – Selection

C – SELECT SWITCH places monitor into Program Mode with PROGRAM switch. Press to accept menu item and advance to next item.

D – MENU ITEM SCROLL FORWARD displays value under menu item.

- Push to scroll forward
- Hold down for fast scroll¹⁰

E – MENU ITEM SCROLL BACKWARD displays value under menu item.

- Push to scroll backward
- Hold down for fast scroll¹⁰

F – PROGRAM SWITCH places monitor into program mode. Press while pressing SELECT switch.

10. Fast scroll applies only when changing KNIFE SPEED, OVERLOAD PRESSURE, and TIRE SIZE.

ASSEMBLING THE WINDROWER

NOTE: Contact your MacDon Dealer for information regarding software updates to the electronic modules. Your Dealer will have the necessary interface tools and access to the latest software upgrades.

IMPORTANT:

Header must be attached to the windrower so that the CDM can detect the type of header (Header ID) and adjust the programming mode accordingly.

Proceed as follows to program the CDM:

NOTE: Pressing PROGRAM at any time will cancel the programming mode/menus and return back to the main operating displays. For detailed programming menu selection, refer to [6.13.1 M205 Detailed Programming Menu Flow Chart, page 100](#) and [6.13.2 M155 Detailed Programming Menu Flow Chart, page 104](#).

1. Turn ignition key to RUN or start the engine.
2. On CDM, press PROGRAM and SELECT to enter programming mode.
3. Press SELECT. WINDROWER SETUP? with header width displayed on upper line.
4. Press left or right arrow to change value on lower line.
5. Press SELECT to advance to the next L1 item and press arrow keys to change values.
6. Set the following functions:

NOTE: The following can be set by the Dealer provided that the header is installed and other information needed is available.


- DWA INSTALLED?
- TILT CYL INSTALLED?
- DISC BLK INSTALLED?
- HDR CUT WIDT?
- HAY CONDITIONER?
- SET TIRE SIZE?

7. Press PROGRAM to exit programming mode when finished entering values.

ASSEMBLING THE WINDROWER

6.13.1 M205 Detailed Programming Menu Flow Chart

The programming menu flow chart is current for cab display module (CDM) software 315 and windrower control module (WCM) software V109.

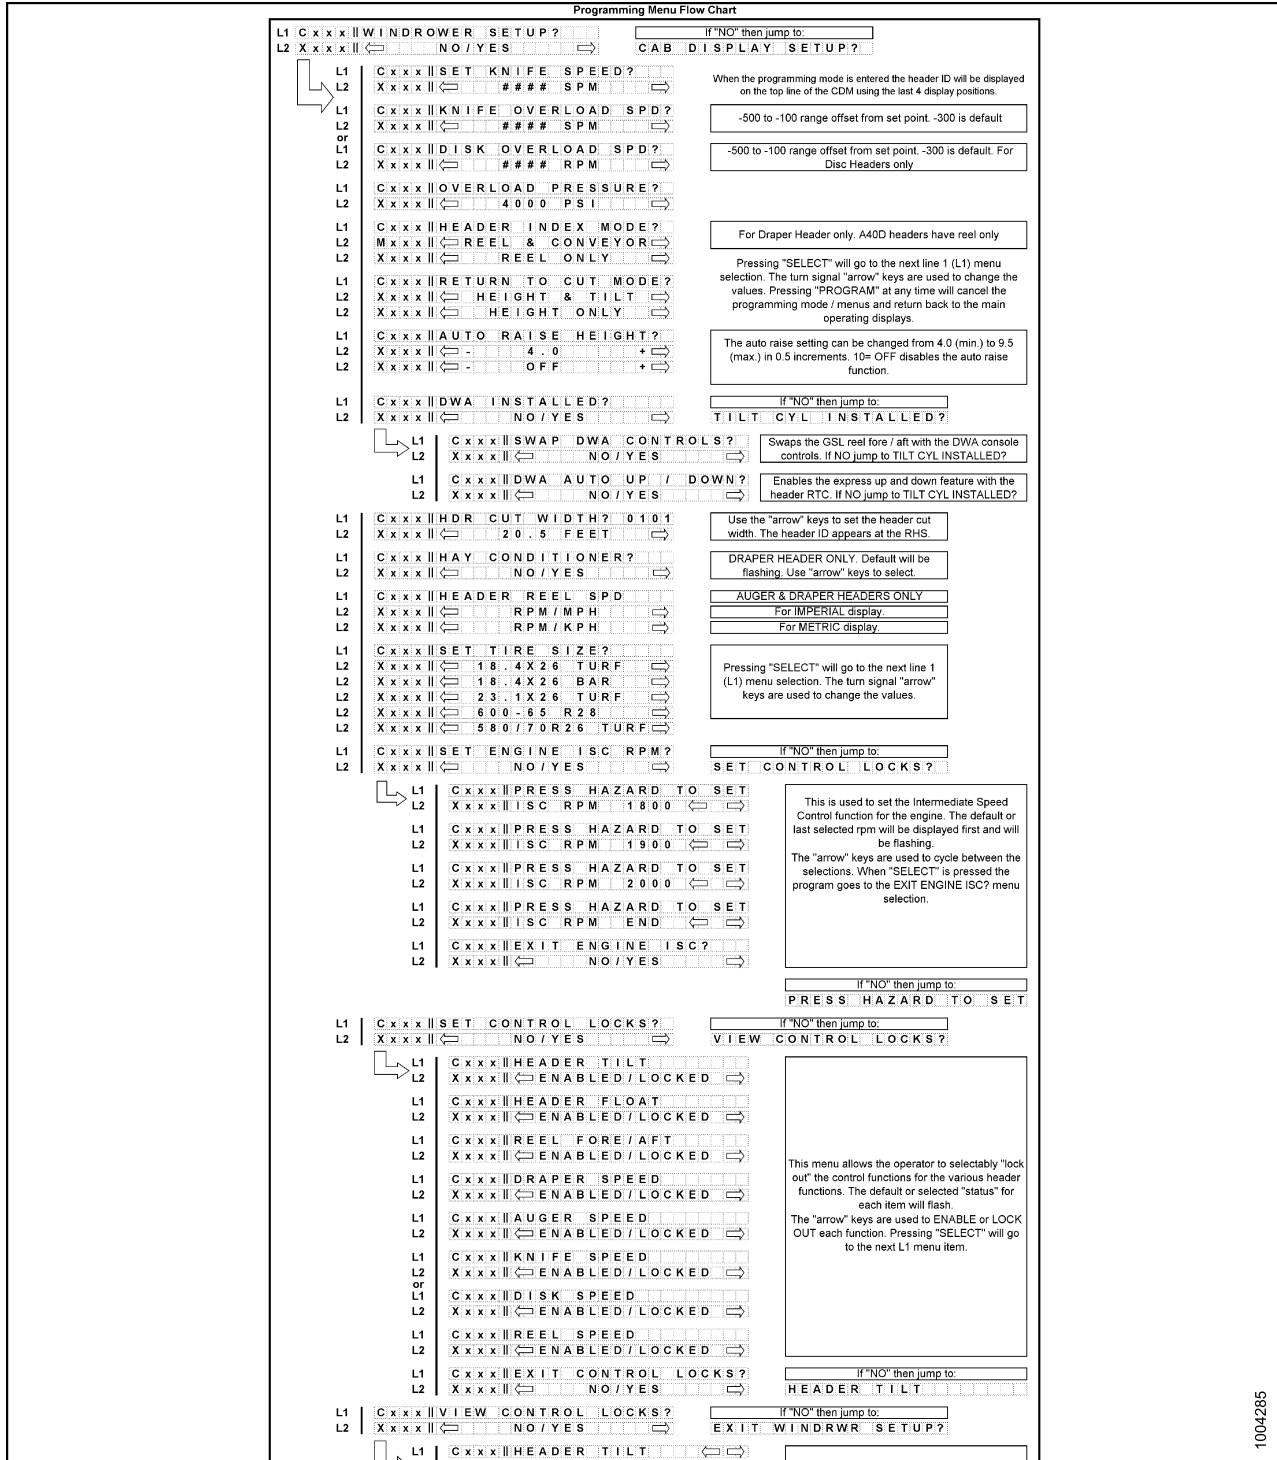

1004285

ASSEMBLING THE WINDROWER

L2	X x x x 5 7 5 . 1 HRS ENABLED	
L2	X x x x 6 4 8 . 6 HRS LOCKED	
L1	C x x x HEADER FLOAT	← →
L2	X x x x 5 7 5 . 1 HRS ENABLED	
L2	X x x x 6 4 8 . 6 HRS LOCKED	
L1	C x x x REEL FORE / AFT	← →
L2	X x x x 5 7 5 . 1 HRS ENABLED	
L2	X x x x 6 4 8 . 6 HRS LOCKED	
L1	C x x x DRAPER SPEED	← →
L2	X x x x 5 7 5 . 1 HRS ENABLED	
L2	X x x x 6 4 8 . 6 HRS LOCKED	
L1	C x x x AUGER SPEED	← →
L2	X x x x 5 7 5 . 1 HRS ENABLED	
L2	X x x x 6 4 8 . 6 HRS LOCKED	
L1	C x x x KNIFE SPEED	← →
L2	X x x x 5 7 5 . 1 HRS ENABLED	
L2	X x x x 6 4 8 . 6 HRS LOCKED	
L1	C x x x DISK SPEED	← →
L2	X x x x 5 7 5 . 1 HRS ENABLED	
L2	X x x x 6 4 8 . 6 HRS LOCKED	
L1	C x x x REEL SPEED	← →
L2	X x x x 5 7 5 . 1 HRS ENABLED	
L2	X x x x 6 4 8 . 6 HRS LOCKED	
L1	C x x x EXIT VIEW LOCKOUTS?	
L2	X x x x NO / YES	← →
L1	C x x x EXIT WINDROW SETUP?	
L2	X x x x NO / YES	← →
		If "NO" then jump to: HEADER TILT
		or DISCOVERLOAD SPD?
		Disc Header Only
L1	C x x x CAB DISPLAY SETUP?	
L2	X x x x NO / YES	← →
		If "NO" then jump to: CALIBRATE SENSORS?
		Only if Engine is running!
L1	C x x x DISPLAY LANGUAGE?	
L2	X x x x ENGLISH	← →
L2	X x x x ESPANOL	← →
L1	C x x x DISPLAY UNITS?	
L2	X x x x IMPERIAL	← →
L2	X x x x METRIC	← →
L1	C x x x CDM BUZZER VOLUME	
L2	X x x x	← →
L1	C x x x CDM BACKLIGHTING	
L2	X x x x	← →
L1	C x x x CDM CONTRAST	
L2	X x x x	← →
L1	C x x x EXIT DISPLAY SETUP?	
L2	X x x x NO / YES	← →
		If "NO" then jump to: DISPLAY LANGUAGE?
L1	C x x x CALIBRATE SENSORS?	
L2	X x x x NO / YES	← →
		If "NO" then jump to: DIAGNOSTIC MODE?
		If engine off then jump to diagnostic mode?
L1	C x x x TO CALIBRATE SELECT	
L2	X x x x HEADER HEIGHT	← →
L2	X x x x HEADER TILT	← →
L2	X x x x HEADER FLOAT	← →
L2	X x x x STOP & EXIT	← →
L1	C x x x HEIGHT SENSOR CAL	
L2	X x x x RAISE HDR TO START	
L1	C x x x CALIBRATING HEIGHT	
L2	X x x x RAISE HEADER HOLD	
L2	X x x x HEADER RAISE DONE	
L1	C x x x HEIGHT SENSOR CAL	
L2	X x x x PRESS LOWER HEADER	
L1	C x x x CALIBRATING HEIGHT	
L2	X x x x LOWER HEADER HOLD	
L2	X x x x HT SENSOR COMPLETE	
L1	C x x x TO CALIBRATE SELECT	
L2	X x x x HEADER HEIGHT	← →
L2	X x x x HEADER TILT	← →
L2	X x x x HEADER FLOAT	← →
L2	X x x x STOP & EXIT	← →
L1	C x x x HDR TILT SENSOR CAL	
L2	X x x x EXTEND TLT TO START	
L1	C x x x CALIBRATING TILT	
L2	X x x x EXTEND TILT HOLD	
L2	X x x x EXTEND TILT DONE	
L1	C x x x HDR TILT SENSOR CAL	
L2	X x x x PRESS RETRACT TILT	
L1	C x x x CALIBRATING TILT	
L2	X x x x RETRACT TILT HOLD	
L2	X x x x HDR TILT COMPLETE	
L1	C x x x TO CALIBRATE SELECT	
L2	X x x x HEADER HEIGHT	← →

When the control lock outs are viewed the lower display line (L2) will show the engine hours and either ENABLED or LOCKED to indicate the present status along with the engine hours at which time the function was either ENABLED or LOCKED.

Using the "arrow" keys allows the operator to select the various functions. Pressing "SELECT" will go to the EXIT VIEW LOCKOUTS? menu selection.

Use the "arrow" keys to change the default language. Pressing "SELECT" goes to the next L1 menu selection.

The "arrow" keys are used to select between IMPERIAL or METRIC. The default value will be displayed first.

The "arrow" keys are used to change the CDM buzzer volume, CDM backlighting or the CDM contrast, with the bar graph indicating the relative level for each item. When "SELECT" is pressed the program goes to the EXIT DISPLAY SETUP? menu selection.

The operator can select any of the three items requiring calibration (or exit the CAL menu) by using the turn signal switches to cycle through the choices. Pressing SELECT will take the operator to the calibration menu for that particular sensor.

The display will indicate the sensor being calibrated. The operator will be prompted to raise the header and HOLD will flash until the system has completed reading in the signal with the header fully raised. HOLD will change to DONE (with buzzer).

When the header raise is done, the CDM will prompt the user to lower the header. COMPLETE (with buzzer) will flash on the screen for 2 seconds when the calibration is finished.

The operator can select any of the three items requiring calibration (or exit the CAL menu) by using the turn signal switches to cycle through the choices. Pressing SELECT will take the operator to the calibration menu for that particular sensor.

The display will indicate the sensor being calibrated. The operator will be prompted to extend the header tilt and HOLD will flash until the system has completed reading in the signal with the header tilt fully extended. HOLD will change to DONE (with buzzer).

When the header tilt extend is done, the CDM will prompt the user to press the header tilt retract. COMPLETE (with buzzer) will flash on the screen for 2 seconds when the calibration is finished.

The operator can select any of the three items requiring calibration (or exit the CAL menu) by using the turn signal

ASSEMBLING THE WINDROWER

L2	X x x x	←	HEADER TILT	→	switches to cycle through the choices. Pressing SELECT will take the operator to the calibration menu for that particular sensor.
L2	X x x x	←	HEADER FLOAT	→	
L2	X x x x	←	STOP & EXIT	→	
L1	C x x x		CALIBRATING FLOAT		The display will indicate the sensor being calibrated. The operator will be prompted to press the float (+) and HOLD will flash until the system has completed reading in the signal with the header float fully extended. HOLD will change to DONE (with buzze
L2	X x x x		PRESS FLT+ TO START		
L1	C x x x		CALIBRATING FLOAT		
L2	X x x x		FLOAT (+)	HOLD	When the header float (+) is done, the CDM will prompt the user to press the header float (-). COMPLETE (with buzzer) will flash on the screen for 2 seconds when the calibration is finished.
L2	X x x x		FLOAT (+)	DONE	
L1	C x x x		FLOAT SENSOR CAL		
L2	X x x x		PRESS FLOAT (-)		Select any of the sensors by using the turn signal switches to cycle through the choices. Pressing SELECT will take the operator to the calibration menu for that particular sensor. NO is the default for EXIT CAL?. If "NO" then jump to:
L1	C x x x		CALIBRATING FLOAT		
L2	X x x x		FLOAT (-)	HOLD	
L2	X x x x		HDR FLOAT	COMPLETE	TO CALIBRATE SELECT
L1	C x x x		TO CALIBRATE SELECT		
L2	X x x x		HEADER HEIGHT	→	
L2	X x x x		HEADER TILT	→	TO CALIBRATE SELECT
L2	X x x x		HEADER FLOAT	→	
L1	C x x x		EXIT CAL?	NO/YES	
L1	C x x x		DIAGNOSTIC MODE?		If "NO" then jump to:
L2	X x x x		NO/YES	→	EXIT SETUP?
L1	C x x x		VIEW ERROR CODES?		If "NO" then jump to:
L2	X x x x		NO/YES	→	ENTER SENSOR SETUP?
L1	C x x x		VIEW WINDRWR CODES?		If "NO" then jump to:
L2	X x x x		NO/YES	→	VIEW ENGINE CODES?
L1	1		1234.5 HRS 123	→	The last 10 distinct error codes are stored along with the code #, Exxx, engine hours and number of occurrences. The "arrow" keys are used to cycle between codes.
L2	E 47		SENSOR VOLTS LOW		
L1	2		1230.5 HRS 123	→	
L2	E 71		LOW HYDRAULIC OIL		If "NO" then jump to the first error code logged.
L1	C x x x		EXIT WINDRWR CODES?		
L2	X x x x		NO/YES	→	
L1	C x x x		VIEW ENGINE CODES?		If "NO" then jump to:
L2	X x x x		NO/YES	→	EXIT ERROR CODES?
L1	1		PREVIOUS ENG. CODES		The last 10 distinct error codes are stored.
L2	# # # # S # # F # # C				
L1	C x x x		EXIT ENGINE CODES?		
L2	X x x x		NO/YES	→	If "NO" then jump to the first engine error code logged.
L1	C x x x		EXIT ERROR CODES?		If "NO" then jump to:
L2	X x x x		NO/YES	→	VIEW WINDRWR CODES?
L1	C x x x		ENTER SENSOR SETUP?		If "NO" then jump to:
L2	X x x x		NO/YES	→	READ SENSOR INPUTS?
L1	C x x x		KNIFE SPEED SENSOR		The operator can select each sensor and selectively enable or disable the sensor. This can be used to disable a failed sensor to eliminate false or erratic display readings.
L2	X x x x		ENABLE / DISABLE	→	
L1	C x x x		HEADER HT SENSOR		
L2	X x x x		ENABLE / DISABLE	→	When "SELECT" is pressed the program goes to the EXIT SENSOR SETUP? menu selection.
L1	C x x x		HEADER TILT SENSOR		
L2	X x x x		ENABLE / DISABLE	→	
L1	C x x x		HEADER FLOAT SENSOR		NOTE: The oil temp. readout applies to units with the Sensata oil temp. sensor.
L2	X x x x		ENABLE / DISABLE	→	
L1	C x x x		OVERLOAD PRESSURE		
L2	X x x x		ENABLE / DISABLE	→	If "NO" then jump to:
L1	C x x x		HYD OIL TEMP SENSOR		
L2	X x x x		ENABLE / DISABLE	→	
L1	C x x x		EXIT SENSOR SETUP?		KNIFE SPEED SENSOR
L2	X x x x		NO/YES	→	
L1	C x x x		READ SENSOR INPUTS?		If "NO" then jump to:
L2	M x x x		NO/YES	→	ACTIVATE FUNCTIONS?
L1	C x x x		SENSOR INPUT	→	For diagnostic purposes each sensors input signal can be read. This helps in determining how each sensor is operating and if the proper output voltages are being received by the control system.
L2	X x x x		HDR HEIGHT 3.59 V		
L1	C x x x		SENSOR INPUT	→	
L2	X x x x		HDR ANGLE 1.84 V		When "SELECT" is pressed the program goes to the EXIT READ SENSORS? menu selection.
L1	C x x x		SENSOR INPUT	→	
L2	X x x x		2.45 V FLOAT 2.84 V		
L1	C x x x		SENSOR INPUT	→	If "NO" then jump to:
L2	X x x x		KNIFE SPEED 123 HZ		
L1	C x x x		SENSOR INPUT	→	
L2	X x x x		WHEEL SPEED 123 HZ		If a sensor has been disabled "SENSOR" will be flashing in the area where the input reading would have been.
L1	C x x x		SENSOR INPUT	→	
L2	X x x x		HYD OIL TEMP 1.00 V		
L1	C x x x		EXIT READ SENSORS?		If a sensor has been disabled "SENSOR" will be
L2	X x x x		NO/YES	→	
L1	C x x x		SENSOR INPUT	→	
L2	X x x x		HDR HEIGHT SENSOR 3.59 V		
L1	C x x x		SENSOR INPUT	→	
L2	X x x x		HDR ANGLE SENSOR	→	
L1	C x x x		SENSOR INPUT	→	
L2	X x x x		HDR ANGLE SENSOR	→	
L1	C x x x		SENSOR INPUT	→	

1004287


ASSEMBLING THE WINDROWER

	<p>L2 X x x x 2 . 4 5 V F L O A T S E N S O R</p> <p>L1 C x x x S E N S O R I N P U T ⏪ ⏩</p> <p>L2 X x x x K N I F E S P E E D S E N S O R</p> <p>L1 C x x x S E N S O R I N P U T ⏪ ⏩</p> <p>L2 X x x x R E E L S P E E D S E N S O R</p> <p>L1 C x x x S E N S O R I N P U T ⏪ ⏩</p> <p>L2 X x x x H Y D O I L T E M P S E N S O R</p>	<p>flashing in the area where the input reading would have been.</p> <p>If a sensor has been disabled "SENSOR" will be flashing in the area where the input reading would have been.</p> <p>NOTE: The oil temp. readout applies to the M205 model with the Sensata oil temp. sensor.</p>
<p>L1 C x x x A C T I V A T E F U N C T I O N S ?</p> <p>L2 X x x x ⏪ N O / Y E S ⏩</p>	<p style="text-align: right;">If "NO" then jump to:</p> <p>FORCE HEADER TYPE?</p> <p>L1 C x x x A C T I V A T E H E A D E R H T</p> <p>L2 X x x x ⏪ D O W N / U P ⏩</p> <p>L1 C x x x A C T I V A T E R E E L H T</p> <p>L2 X x x x ⏪ D O W N / U P ⏩</p> <p>L1 C x x x A C T I V A T E H D R T I L T</p> <p>L2 X x x x ⏪ I N / O U T ⏩</p> <p>L1 C x x x K N I F E D R V S P D X X X X</p> <p>L2 X x x x D 0 P 0 ⏪ - < > + ⏩</p> <p>L1 C x x x D R A P E R D R V S P D X X X X</p> <p>L2 X x x x D 0 P 0 ⏪ - < > + ⏩</p> <p>L1 C x x x R E E L D R V S P D X X X X</p> <p>L2 X x x x D 0 P 0 ⏪ - < > + ⏩</p> <p>L1 C x x x D I S C D R V S P D X X X X</p> <p>L2 X x x x D 0 P 0 ⏪ - < > + ⏩</p> <p>L1 C x x x A C T I V A T E D W A D R V</p> <p>L2 X x x x D 0 P 0 ⏪ - < > + ⏩</p> <p>L1 C x x x A C T I V A T E R E E L F / A</p> <p>L2 X x x x ⏪ F O R E / A F T ⏩</p> <p>L1 C x x x A C T I V A T E H Y D P U R G E ?</p> <p>L2 X x x x ⏪ N O / Y E S ⏩</p> <p>L1 C x x x T O A C T I V A T E P U R G E</p> <p>L2 X x x x P R E S S A N D H O L D ⏩</p> <p>L1 C x x x P U R G E C Y C L E S T A R T E D</p> <p>L2 X x x x P R E S S A N D H O L D ⏩</p> <p>L1 C x x x P U R G E C Y C L E E N D E D</p> <p>L2 X x x x </p> <p>L1 C x x x P U R G E C Y C L E E N D E D</p> <p>L2 X x x x ⏪ N O E X I T Y E S ⏩</p> <p>L1 C x x x E X I T F U N C T I O N M E N U ?</p> <p>L2 X x x x ⏪ N O / Y E S ⏩</p>	<p>For diagnostic purposes each header function can be activated by using the "arrow" keys on the CDM. When "SELECT" is pressed the program will go to the next function that can be activated.</p> <p>If a disk header is detected then the nomenclature should read: DISC DRIVE instead of KNIFE DRIVE.</p> <p>PWM OPERATION: If the HAZARD switch is pressed instead of the TURN SIGNAL switch the GSL will operate the PWM valve (HAZARD sw must be held) and the PWM value will reset to zero when released.</p> <p style="text-align: center;">For Disc Header only</p> <p style="text-align: center;">The DWA menu selection should only be available if the DWA INSTALLED? is set to YES.</p> <p style="text-align: center;">For Disc Header only</p> <p>ACTIVATE HYD PURGE - This is to allow the operator to purge the air from a new or changed pump system.</p> <p>Pressing and holding the right hand "arrow" button activates a predetermined timed purge cycle. Releasing pressure on the switch or a completed cycle (timed out) will jump to the PURGE CYCLE ENDED menu selection.</p> <p style="text-align: center;">If "NO" then jump to:</p> <p style="text-align: center;">T O A C T I V A T E P U R G E</p> <p style="text-align: center;">If "NO" then jump to:</p> <p style="text-align: center;">A C T I V A T E H E A D E R H T</p>
<p>L1 C x x x F O R C E H E A D E R T Y P E ?</p> <p>L2 X x x x ⏪ N O / Y E S ⏩</p>	<p style="text-align: right;">"NO" then jump to:</p> <p>EXIT DIAGNOSTIC?</p> <p>L1 C x x x S E L E C T H E A D E R T Y P E</p> <p>L2 X x x x ⏪ D I S K H E A D E R ⏩</p> <p>L2 X x x x ⏪ S K A U G E R ⏩</p> <p>L2 X x x x ⏪ D K A U G E R ⏩</p> <p>L2 X x x x ⏪ G R A S S S E E D ⏩</p> <p>L2 X x x x ⏪ 2 0 F T S K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 2 5 F T S K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 3 0 F T S K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 3 5 F T S K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 1 5 F T D K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 2 0 F T D K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 2 5 F T D K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 3 0 F T D K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 3 5 F T D K D R A P E R ⏩</p> <p>L2 X x x x ⏪ 4 0 F T D K D R A P E R ⏩</p> <p>L1 C x x x E X I T F O R C E H E A D E R ?</p> <p>L2 X x x x ⏪ N O / Y E S ⏩</p> <p>L1 C x x x E X I T D I A G N O S T I C ?</p> <p>L2 X x x x ⏪ N O / Y E S ⏩</p> <p>L1 C x x x E X I T S E T U P ?</p> <p>L2 X x x x ⏪ N O / Y E S ⏩</p> <p style="text-align: center;">If "YES" then jump to:</p> <p style="text-align: center;">O P E R A T I N G S C R E E N S</p>	<p>This allows the operator to select or "force" a header ID configuration if a "NO HEADER" ID is being read by the control system. The header type will revert back to "NO HEADER" every time the ignition is cycled.</p> <p>When "SELECT" is pressed the program goes to the EXIT HEADER TYPE? menu selection.</p> <p style="text-align: center;">If "NO" then jump to:</p> <p style="text-align: center;">S E L E C T H E A D E R T Y P E</p> <p style="text-align: center;">If "NO" then jump to:</p> <p style="text-align: center;">V I E W E R R O R C O D E S ?</p> <p style="text-align: center;">If "NO" then jump to:</p> <p style="text-align: center;">W I N D R O W E R S E T U P ?</p>

ASSEMBLING THE WINDROWER

6.13.2 M155 Detailed Programming Menu Flow Chart

The programming menu flow chart is current for cab display module (CDM) software 315 and windrower control module (WCM) software 214.

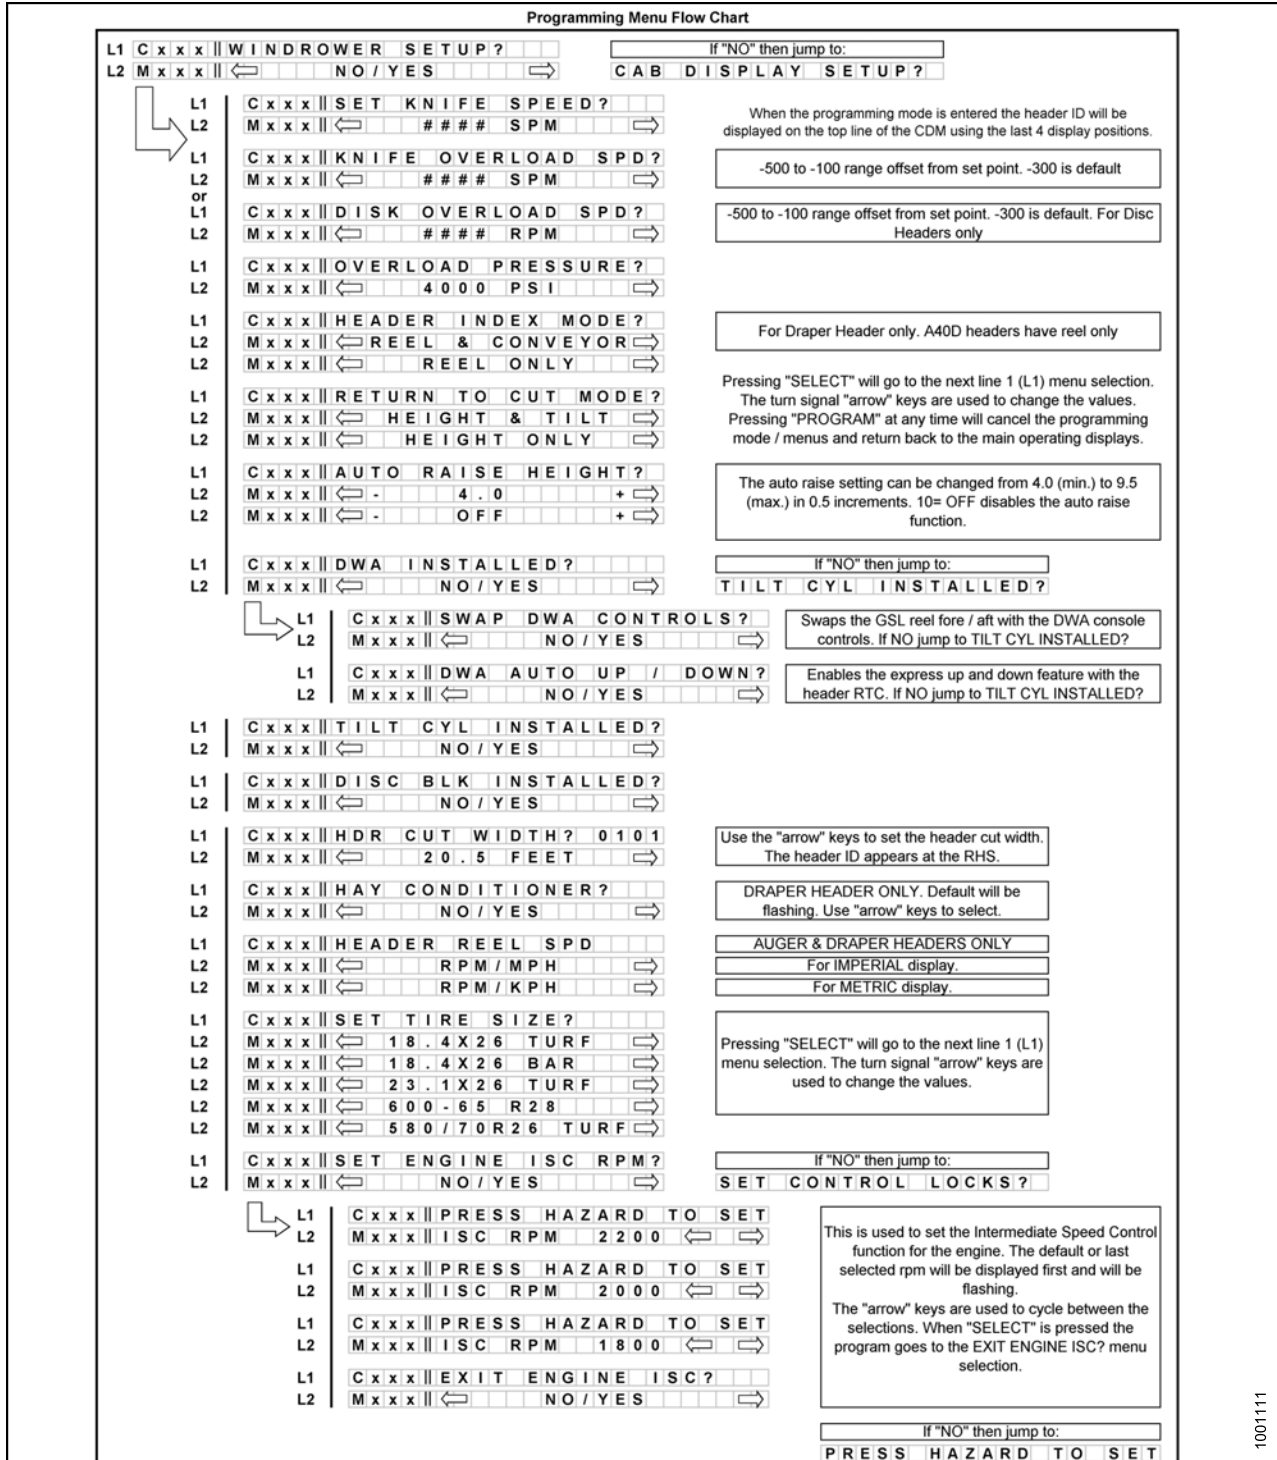

100111

ASSEMBLING THE WINDROWER

L1 | C x x x || SET CONTROL LOCKS? | If "NO" then jump to: _____
 L2 | M x x x || ← NO / YES → | VIEW CONTROL LOCKS?

↙ L1 | C x x x || HEADER TILT | _____
 L2 | M x x x || ← ENABLED / LOCKED →

L1 | C x x x || HEADER FLOAT | _____
 L2 | M x x x || ← ENABLED / LOCKED →

L1 | C x x x || REEL FORE / AFT | _____
 L2 | M x x x || ← ENABLED / LOCKED →

L1 | C x x x || DRAPER SPEED | _____
 L2 | M x x x || ← ENABLED / LOCKED →

L1 | C x x x || AUGER SPEED | _____
 L2 | M x x x || ← ENABLED / LOCKED →

L1 | C x x x || KNIFE SPEED | _____
 L2 | M x x x || ← ENABLED / LOCKED →

or
 L1 | C x x x || DISK SPEED | _____
 L2 | M x x x || ← ENABLED / LOCKED →

L1 | C x x x || REEL SPEED | _____
 L2 | M x x x || ← ENABLED / LOCKED →

L1 | C x x x || EXIT CONTROL LOCKS? | _____
 L2 | M x x x || ← NO / YES →

This menu allows the operator to selectively "lock out" the control functions for the various header functions. The default or selected "status" for each item will flash.

The "arrow" keys are used to ENABLE or LOCK OUT each function. Pressing "SELECT" will go to the next L1 menu item.

_____ If "NO" then jump to:
 HEADER TILT | _____

L1 | C x x x || VIEW CONTROL LOCKS? | If "NO" then jump to: _____
 L2 | M x x x || ← NO / YES → | EXIT WINDRWR SETUP?

↙ L1 | C x x x || HEADER TILT | _____
 L2 | M x x x || 5 7 5 . 1 HRS ENABLED
 L2 | M x x x || 6 4 8 . 6 HRS LOCKED

L1 | C x x x || HEADER FLOAT | _____
 L2 | M x x x || 5 7 5 . 1 HRS ENABLED
 L2 | M x x x || 6 4 8 . 6 HRS LOCKED

L1 | C x x x || REEL FORE / AFT | _____
 L2 | M x x x || 5 7 5 . 1 HRS ENABLED
 L2 | M x x x || 6 4 8 . 6 HRS LOCKED

L1 | C x x x || DRAPER SPEED | _____
 L2 | M x x x || 5 7 5 . 1 HRS ENABLED
 L2 | M x x x || 6 4 8 . 6 HRS LOCKED

L1 | C x x x || AUGER SPEED | _____
 L2 | M x x x || 5 7 5 . 1 HRS ENABLED
 L2 | M x x x || 6 4 8 . 6 HRS LOCKED

L1 | C x x x || KNIFE SPEED | _____
 L2 | M x x x || 5 7 5 . 1 HRS ENABLED
 L2 | M x x x || 6 4 8 . 6 HRS LOCKED

L1 | C x x x || DISK SPEED | _____
 L2 | M x x x || 5 7 5 . 1 HRS ENABLED
 L2 | M x x x || 6 4 8 . 6 HRS LOCKED

L1 | C x x x || REEL SPEED | _____
 L2 | M x x x || 5 7 5 . 1 HRS ENABLED
 L2 | M x x x || 6 4 8 . 6 HRS LOCKED

L1 | C x x x || EXIT VIEW LOCKOUTS? | _____
 L2 | M x x x || ← NO / YES →

When the control lock outs are viewed the lower display line (L2) will show the engine hours and either ENABLED or LOCKED to indicate the present status along with the engine hours at which time the function was either ENABLED or LOCKED.

Using the "arrow" keys allows the operator to select the various functions. Pressing "SELECT" will go to the EXIT VIEW LOCKOUTS? menu selection.

_____ If "NO" then jump to:
 HEADER TILT | _____

L1 | C x x x || EXIT WINDRWR SETUP? | If "NO" then jump to: _____
 L2 | M x x x || ← NO / YES → | SET KNIFE SPEED? | _____

or | DISC OVERLOAD SPD? | _____

Disc Header Only

1001067

ASSEMBLING THE WINDROWER

<p>L1 <input type="checkbox"/> L2 <input type="checkbox"/> C x x x VIEW ERROR CODES ?</p> <p>M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p>	<p style="text-align: right;">If "NO" then jump to:</p> <p style="text-align: center;">ENTER SENSOR SETUP ?</p>	
<p>L1 <input type="checkbox"/> L2 <input type="checkbox"/> C x x x VIEW WINDRWR CODES ?</p> <p>M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> 1 1 2 3 4 . 5 HRS 1 2 3 <input type="checkbox"/></p> <p>L2 <input type="checkbox"/> E 4 7 SENSOR VOLTS LOW <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> 2 1 2 3 0 . 5 HRS 1 2 3 <input type="checkbox"/></p> <p>L2 <input type="checkbox"/> E 7 1 LOW HYDRAULIC OIL <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x EXIT WINDRWR CODES ?</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x VIEW ENGINE CODES ?</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> 1 PREVIOUS ENG. CODES</p> <p>L2 <input type="checkbox"/> # # # # S # # F # # C</p> <p>L1 <input type="checkbox"/> C x x x EXIT ENGINE CODES ?</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x EXIT ERROR CODES ?</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p>	<p style="text-align: right;">If "NO" then jump to:</p> <p style="text-align: center;">VIEW ENGINE CODES ?</p> <p>The last 10 distinct error codes are stored along with the code #, Exxx, engine hours and number of occurrences. The "arrow" keys are used to cycle between codes.</p> <p>If "NO" then jump to the first error code logged.</p> <p style="text-align: right;">If "NO" then jump to:</p> <p style="text-align: center;">EXIT ERROR CODES ?</p> <p>The last 10 distinct error codes are stored.</p> <p>If "NO" then jump to the first engine error code logged.</p> <p style="text-align: right;">If "NO" then jump to:</p> <p style="text-align: center;">VIEW WINDRWR CODES ?</p>	
<p>L1 <input type="checkbox"/> L2 <input type="checkbox"/> C x x x ENTER SENSOR SETUP ?</p> <p>M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x KNIFE SPEED SENSOR</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> ENABLE / DISABLE <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x HEADER HT SENSOR</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> ENABLE / DISABLE <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x HEADER TILT SENSOR</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> ENABLE / DISABLE <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x HEADER FLOAT SENSOR</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> ENABLE / DISABLE <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x OVERLOAD PRESSURE</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> ENABLE / DISABLE <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x HYD OIL TEMP SENSOR</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> ENABLE / DISABLE <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x EXIT SENSOR SETUP ?</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p>	<p style="text-align: right;">If "NO" then jump to:</p> <p style="text-align: center;">READ SENSOR INPUTS ?</p>	<p>The operator can select each sensor and selectively enable or disable the sensor. This can be used to disable a failed sensor to eliminate false or erratic display readings.</p> <p>When "SELECT" is pressed the program goes to the EXIT SENSOR SETUP? menu selection.</p> <p>NOTE: The oil temp. readout applies to units with the Sensata oil temp. sensor.</p> <p style="text-align: right;">If "NO" then jump to:</p> <p style="text-align: center;">KNIFE SPEED SENSOR</p>
<p>L1 <input type="checkbox"/> L2 <input type="checkbox"/> C x x x READ SENSOR INPUTS ?</p> <p>M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p> <p>L1 <input type="checkbox"/> C x x x SENSOR INPUT <input type="checkbox"/></p> <p>L2 <input type="checkbox"/> M x x x HDR HEIGHT 3 . 5 9 V</p> <p>L1 <input type="checkbox"/> C x x x SENSOR INPUT <input type="checkbox"/></p> <p>L2 <input type="checkbox"/> M x x x HDR ANGLE 1 . 8 4 V</p> <p>L1 <input type="checkbox"/> C x x x SENSOR INPUT <input type="checkbox"/></p> <p>L2 <input type="checkbox"/> M x x x 2 . 4 5 V FLOAT 2 . 8 4 V</p> <p>L1 <input type="checkbox"/> C x x x SENSOR INPUT <input type="checkbox"/></p> <p>L2 <input type="checkbox"/> M x x x KNIFE SPEED 1 2 3 HZ</p> <p>L1 <input type="checkbox"/> C x x x SENSOR INPUT <input type="checkbox"/></p> <p>L2 <input type="checkbox"/> M x x x WHEEL SPEED 1 2 3 HZ</p> <p>L1 <input type="checkbox"/> C x x x SENSOR INPUT <input type="checkbox"/></p> <p>L2 <input type="checkbox"/> M x x x HYD OIL TEMP 1 . 0 0 V</p> <p>L1 <input type="checkbox"/> C x x x EXIT READ SENSORS ?</p> <p>L2 <input type="checkbox"/> M x x x <input type="checkbox"/> NO / YES <input type="checkbox"/></p>	<p style="text-align: right;">If "NO" then jump to:</p> <p style="text-align: center;">ACTIVATE FUNCTIONS ?</p>	<p>For diagnostic purposes each sensors input signal can be read. This helps in determining how each sensor is operating and if the proper output voltages are being received by the control system.</p> <p>When "SELECT" is pressed the program goes to the EXIT READ SENSORS? menu selection.</p> <p style="text-align: right;">If "NO" then jump to:</p> <p style="text-align: center;">SENSOR INPUT <input type="checkbox"/></p> <p style="text-align: center;">HDR HEIGHT 3 . 5 9 V</p> <p>If a sensor has been disabled "SENSOR" will be flashing in the area where the input reading would have been.</p> <p>If a sensor has been disabled "SENSOR" will be flashing in the area where the input reading would have been.</p> <p>If a sensor has been disabled "SENSOR" will be flashing in the area where the input reading would have been.</p> <p>NOTE: The oil temp. readout applies to the M205 model with the Sensata oil temp. sensor.</p>

ASSEMBLING THE WINDROWER

L1	C x x x	ACTIVATE FUNCTIONS?	If "NO" then jump to:
L2	M x x x	← NO / YES →	FORCE HEADER TYPE?
L1	C x x x	ACTIVATE HEADER HT	For diagnostic purposes each header function can be activated by using the "arrow" keys on the CDM. When "SELECT" is pressed the program will go to the next function that can be activated.
L2	M x x x	← DOWN / UP →	
L1	C x x x	ACTIVATE REEL HT	If a disk header is detected then the nomenclature should read: DISC DRIVE instead of KNIFE DRIVE.
L2	M x x x	← DOWN / UP →	
L1	C x x x	ACTIVATE HDR TILT	PWM OPERATION: If the HAZARD switch is pressed instead of the TURN SIGNAL switch the GSL will operate the PWM valve (HAZARD sw must be held) and the PWM value will reset to zero when released.
L2	M x x x	← IN / OUT →	
L1	C x x x	KNIFE DRV SPD XXXX	For Disc Header only
L2	M x x x	D 0 P 0 ← - Δ + →	
L1	C x x x	DRAPER DRV SPD XXXX	The DWA menu selection should only be available if the DWA INSTALLED? is set to YES.
L2	M x x x	D 0 P 0 ← - Δ + →	
L1	C x x x	REEL DRV SPD XXXX	For Disc Header only
L2	M x x x	D 0 P 0 ← - Δ + →	
L1	C x x x	DISC DRV SPD XXXX	ACTIVATE HYD PURGE - This is to allow the operator to purge the air from a new or changed pump system.
L2	M x x x	D 0 P 0 ← - Δ + →	
L1	C x x x	ACTIVATE DWA DRV	Pressing and holding the right hand "arrow" button activates a predetermined timed purge cycle. Releasing pressure on the switch or a completed cycle (timed out) will jump to the PURGE CYCLE ENDED menu selection.
L2	M x x x	D 0 P 0 ← - Δ + →	
L1	C x x x	ACTIVATE REEL F/A	If "NO" then jump to:
L2	M x x x	← FORE / AFT →	
L1	C x x x	ACTIVATE HYD PURGE?	If "NO" then jump to:
L2	M x x x	← NO / YES →	
L1	C x x x	TO ACTIVATE PURGE	TO ACTIVATE PURGE
L2	M x x x	← PRESS AND HOLD →	
L1	C x x x	PURGE CYCLE STARTED	If "NO" then jump to:
L2	M x x x	← PRESS AND HOLD →	
L1	C x x x	PURGE CYCLE ENDED	ACTIVATE HEADER HT
L2	M x x x	← NO / YES →	
L1	C x x x	PURGE CYCLE ENDED	EXIT DIAGNOSTIC?
L2	M x x x	← NO / YES →	
L1	C x x x	EXIT FUNCTION MENU?	If "NO" then jump to:
L2	M x x x	← NO / YES →	
L1	C x x x	FORCE HEADER TYPE? "NO" then jump to:	This allows the operator to select or "force" a header ID configuration if a "NO HEADER" ID is being read by the control system. The header type will revert back to "NO HEADER" every time the ignition is cycled. When "SELECT" is pressed the program goes to the EXIT HEADER TYPE? menu selection.
L2	M x x x	← NO / YES →	
L1	C x x x	SELECT HEADER TYPE	If "NO" then jump to:
L2	M x x x	← DISK HEADER →	
L2	M x x x	← SK AUGER →	If "NO" then jump to:
L2	M x x x	← DK AUGER →	
L2	M x x x	← GRASS SEED →	VIEW ERROR CODES?
L2	M x x x	← 20 FT SK DRAPER →	
L2	M x x x	← 25 FT SK DRAPER →	If "NO" then jump to:
L2	M x x x	← 30 FT SK DRAPER →	
L2	M x x x	← 35 FT SK DRAPER →	WINDROWER SETUP?
L2	M x x x	← 15 FT DK DRAPER →	
L2	M x x x	← 20 FT DK DRAPER →	If "YES" then jump to:
L2	M x x x	← 25 FT DK DRAPER →	
L2	M x x x	← 30 FT DK DRAPER →	OPERATING SCREENS
L2	M x x x	← 35 FT DK DRAPER →	
L2	M x x x	← 40 FT DK DRAPER →	
L1	C x x x	EXIT FORCE HEADER?	
L2	M x x x	← NO / YES →	
L1	C x x x	EXIT DIAGNOSTIC?	
L2	M x x x	← NO / YES →	
L1	C x x x	EXIT SETUP?	
L2	M x x x	← NO / YES →	

1001070

7 Performing Predelivery Checks

Perform the final checks and adjustments as listed on the Predelivery Checklist (yellow sheet attached to back of instruction), to ensure the machine is field-ready. Refer to the following pages for detailed instructions as indicated on the Checklist.

The completed Checklist should be retained either by the Operator or the Dealer.

NOTE: The majority of checks and adjustments are performed during the assembly procedures. The following additional inspections should be performed after assembly is complete.

7.1 Recording Serial Numbers

1. Record windrower and engine serial numbers on the Checklist.



Figure 7.1: M155/M205 Serial Number Location

A - Serial Number Plate

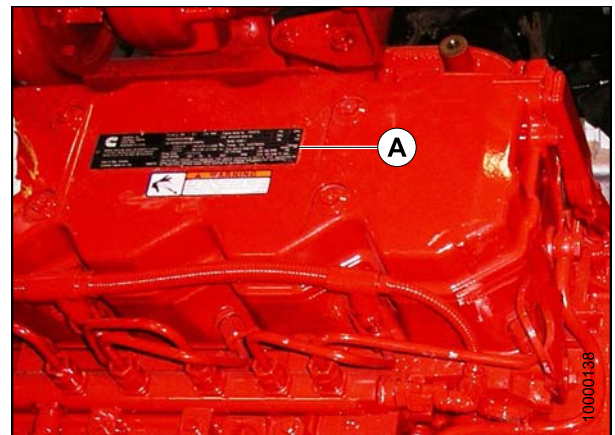


Figure 7.2: Engine Serial Number Location

A - Serial Number Plate

PERFORMING PREDELIVERY CHECKS

7.2 Checking Wheel Drive Lubricant Level

Check the wheel drive lubricant level every 200 hours or annually.

NOTE: The windrower should be on level ground when checking lubricant level.

1. Position windrower so that plugs (A) and (B) are horizontally aligned with the center (C) of the hub.
2. Remove plug (A) or (B). The lubricant should be visible through the port or running out slightly.
3. Reinstall plugs and tighten.

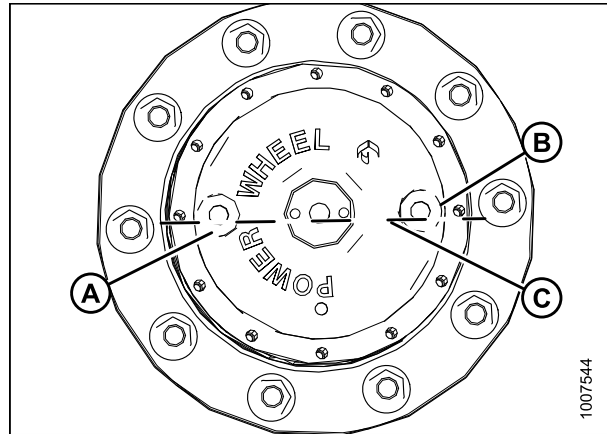


Figure 7.3: Wheel Drive Assembly

PERFORMING PREDELIVERY CHECKS

7.3 Tire Pressures and Ballast Requirements

7.3.1 Checking Tire Pressures

Measure tire pressure with a gauge:

Tire Type	Size	Pressure
Bar	18.4–26	32 psi (221 kPa)
	600/65R28	26 psi (179 kPa)
Turf	18.4–26	35 psi (241 kPa)
	23.1–26	20 psi (138 kPa)
	580/70R26	24 psi (165 kPa)
Rear	All	10 psi (60 kPa)

7.3.2 Checking Tire Ballast

Fluid ballasting of rear caster tires is recommended to provide adequate machine stability when using large headers on the windrower.

Also, the stability of machine varies with different attachments, windrower options, terrain and operator's driving technique.

Ballast capability per tire is at a maximum fill of 75% or when fluid is level with valve stem when the stem is positioned at the "12 o'clock" position.

Fluid can be added to any level up to maximum fill and always add an equal amount of fluid on both sides.

Tire Size	Fluid per Tire at 75% Fill U.S. Gal. (liters)	Total Weight of BOTH Tires lb (kg) ¹¹
7.5 x 16	10 (38)	200 (91)
10 x 16	18 (69)	380 (170)
16.5 x 16.1	41 (158)	830 (377)

11. Weights are given for typical calcium chloride and water mixtures. Weight is reduced by 20% if only water is used (for areas that do not require anti-freeze protection).

PERFORMING PREDELIVERY CHECKS

Table 7.1 M155 and M205 Windrower

Header Description		Rec. Tire Size	Recommended Ballast			
			Level Ground		Hills	
Type	Size		Per Tire	Both Tires	Per Tire	Both Tires
			U.S. Gal. (liters)	lb (kg) ¹²	U.S. Gal. (liters)	lb (kg) ¹²
A-Series, all options	All		0			
D-Series	25 FT and down	7.5 x 16	0			
	30 FT SR or DR without conditioner	10 x 16				
	35 FT SR	16.5 x 16.1	18 (69)	380 (170)	30 (115)	630 (288)
	30 FT DR with steel fingers and conditioner	Level ground: 10 x 16	30 (115)	630 (288)	41 (158)	830 (377)
35 FT DR (5- or 6-bat)	16.5 x 16.1					
40 FT	Hills: 16.5 x 16.1					
R-Series, all options	13 FT	7.5 x 16 10 x 16 16.5 x 16.1	0			

12. If only water is used, increase volume of water by 20% (up to maximum allowable fill per tire) to compensate.

PERFORMING PREDELIVERY CHECKS

7.4 Checking Engine Air Intake

1. Check that air cleaner cap is firmly attached and that latches (A) and clamps (B) are secure.

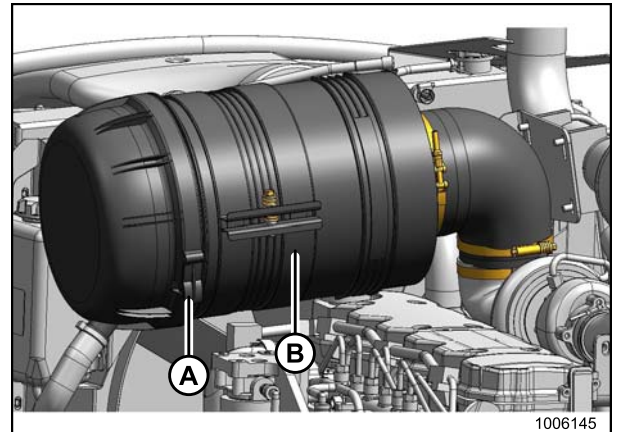


Figure 7.4: M205 Air Intake System

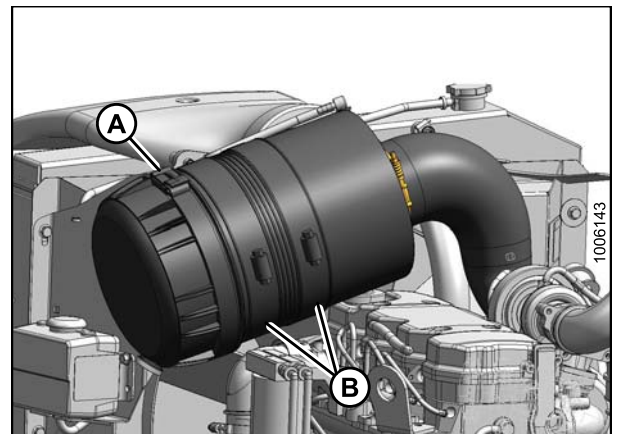


Figure 7.5: M155 Air Intake System

PERFORMING PREDELIVERY CHECKS

2. **M155 only:** Check constant torque spring clamp (A) at back of air cleaner. Hold 0.018 in. (0.46 mm) gauge between middle coils and tighten clamp until gauge is snug. Remove gauge.

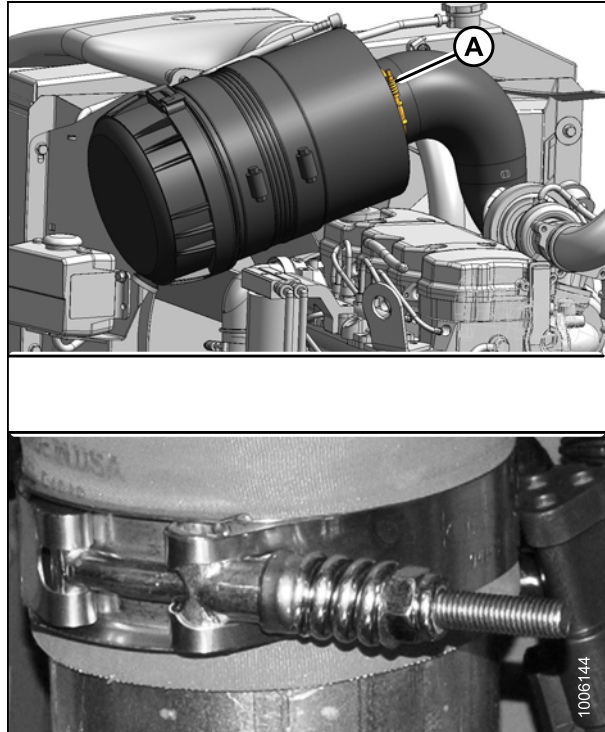


Figure 7.6: Air Intake System

3. Check constant torque clamps (A) on charge air cooling duct connection at turbocharger inlet. Constant torque type clamps (A) should be tightened to achieve gap as shown.

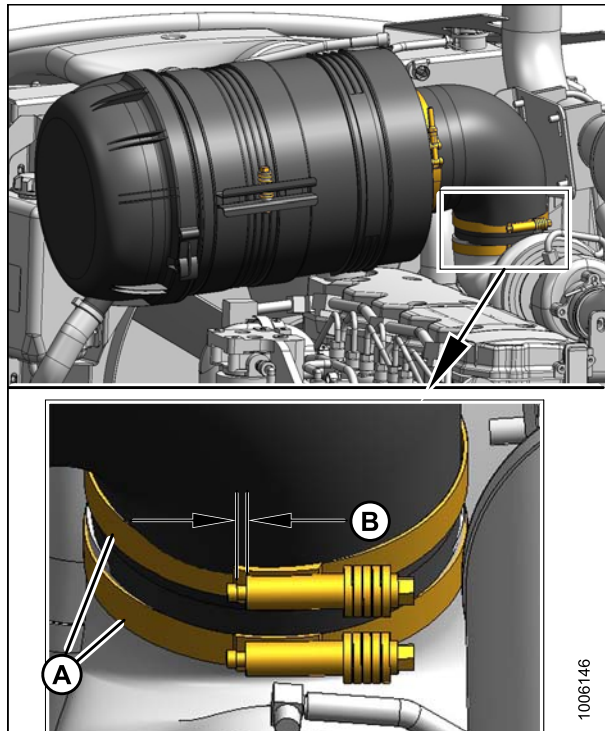


Figure 7.7: Air Intake System

A - Constant Torque Clamps

B - 0.157 +/- 0.02 in. (4 +/- 0.5 mm) Gap

PERFORMING PREDELIVERY CHECKS

4. Check constant torque clamps (A) on charge air cooling duct connections at turbocharger outlet and engine air intake. Hold 0.018 in. (0.46 mm) gauge between middle coils of clamp and tighten clamp until gauge is snug. Remove gauge.

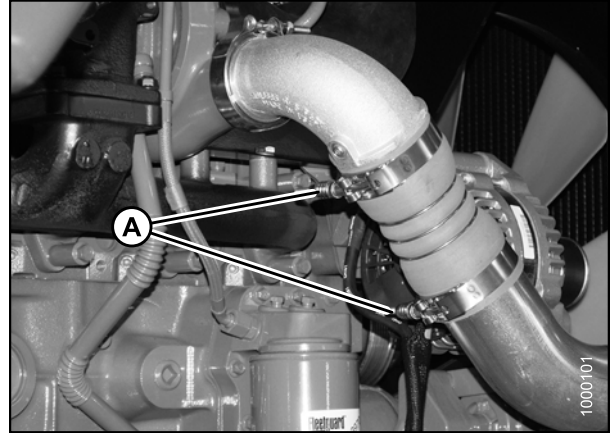


Figure 7.8: Air Intake System

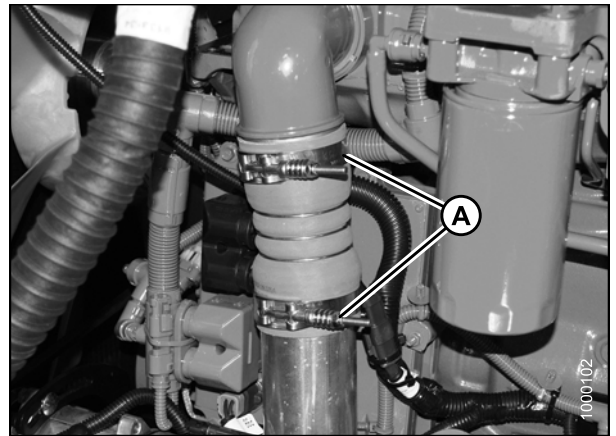


Figure 7.9: Air Intake System

PERFORMING PREDELIVERY CHECKS

7.5 Checking Hydraulic Oil

Follow these steps to check the hydraulic oil:

1. Stand on left (cab-forward side) platform to access the filler pipe.
2. Turn filler cap (A) counterclockwise to unlock cap and remove dipstick.

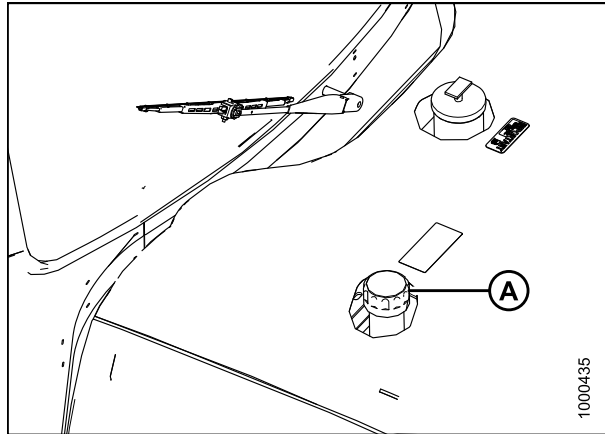


Figure 7.10: Engine Hood

3. Check that level is between LOW and FULL marks.
4. Reinstall dipstick and filler cap, and turn clockwise to tighten/lock.

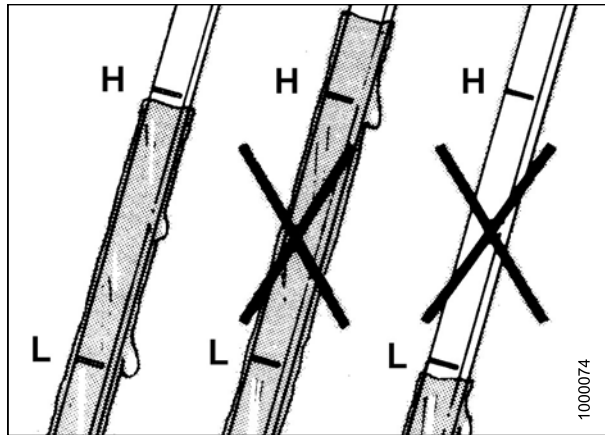


Figure 7.11: Checking Hydraulic Oil

PERFORMING PREDELIVERY CHECKS

7.6 Checking Fuel Separator

1. Place a container under the filter drain (A).
2. Turn drain valve by hand 1-1/2 to 2 turns counterclockwise, until draining occurs.
3. Drain the filter sump of water and sediment, until clear fuel is visible. Clean as necessary.
4. Turn the valve clockwise to close the drain (A).
5. Safely dispose of fluid in container.

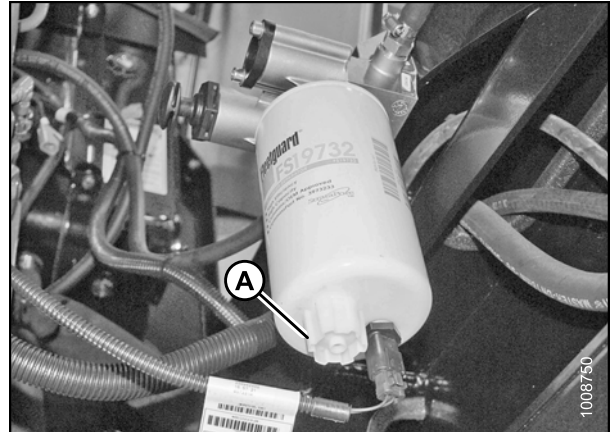


Figure 7.12: Fuel Filter

PERFORMING PREDELIVERY CHECKS

7.7 Checking Engine Coolant

1. Check the coolant level in the coolant recovery tank (A). Tank should be at least one-half full.
2. Check coolant concentration in the radiator. Coolant shall be rated for temperatures of -30°F (-34°C).

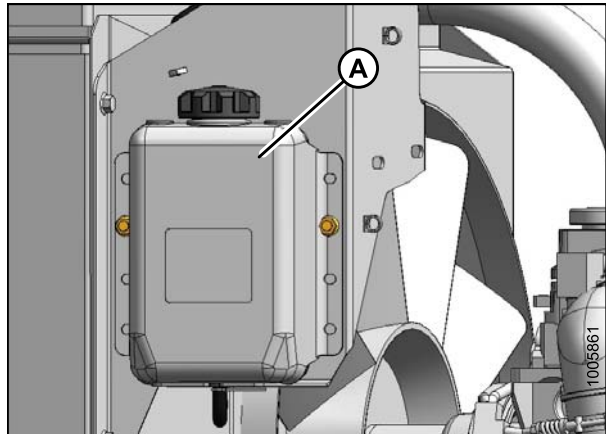


Figure 7.13: M155/M205 Coolant Recovery Tank

PERFORMING PREDELIVERY CHECKS

7.8 Checking Gearbox Lubricant Level

1. Remove plug (A). The lubricant should be visible through the hole or slightly running out.
2. Replace plug and tighten.

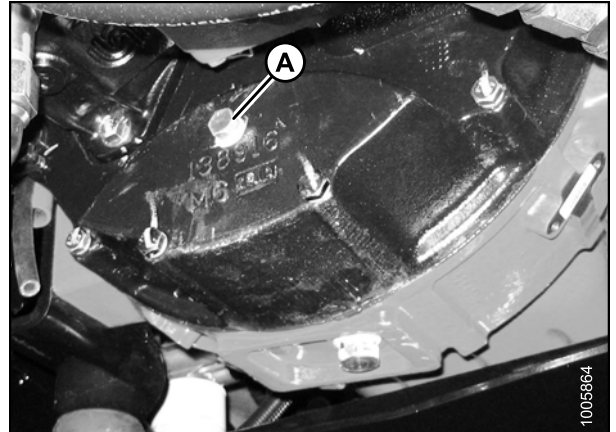


Figure 7.14: Gearbox

PERFORMING PREDELIVERY CHECKS

7.9 Checking Air Conditioning (A/C) Compressor Belt

Tension on A/C compressor belt (A) should be such that a force of 8–12 lbf (35–55 N) deflects the belt 3/16 in. (5 mm) at mid-span.



Figure 7.15: A/C Compressor Belt

PERFORMING PREDELIVERY CHECKS

7.10 Checking Safety System

Ensure battery main disconnect switch is switched to POWER ON position. Refer to [7.11 Operational Checks, page 123](#).

A properly functioning system should operate as follows:

- The starter should engage **ONLY** when the ground speed lever (GSL) is in N-DETENT, the steering wheel is locked in the CENTER position, and the HEADER DRIVE switch is in the OFF position.
- Under the above conditions, the brake should engage and the machine should not move after engine start-up.
- The steering wheel should **NOT** lock with the engine running and the GSL out of the N-DETENT.
- The machine should **NOT** move with the engine running and with the steering wheel still centered, when the GSL is pulled straight out of N-DETENT (not in forward or reverse).

If the system does not function as described above, refer to the technical manual.

CAUTION

Check to be sure all bystanders have cleared the area.

To check that the safety system is operating properly, follow these steps:

1. With the engine shut down and the HEADER DRIVE switch engaged, try to start the engine. The cab display module (CDM) should display "HEADER ENGAGED" on the upper line and "DISENGAGE HEADER" on the lower line.

If the engine turns over, the system requires adjustment. Refer to the technical manual for adjustment procedures.

2. With the engine shut down, do the following:
 - a. Open engine compartment hood.
 - b. Pry the steering interlock away from pintle arms (A) by inserting a wedge or pry bar between one of the interlock channels (B) and pintle arm.
 - c. Insert a wood block approximately 3/4 in. (19 mm) thick, between the other channel and pintle arm, so that the interlock channel is clear of the pintle arm.
 - d. Turn the steering wheel off center and move the GSL in N-DETENT.
 - e. Try to start the engine. The CDM should flash "CENTER STEERING", accompanied by a short beep with each flash and the engine should not turn over.
If the engine turns over, the system requires adjustment. Refer to the technical manual for adjustment procedures.
 - f. Remove key.
 - g. Remove wood block previously inserted and close hood.

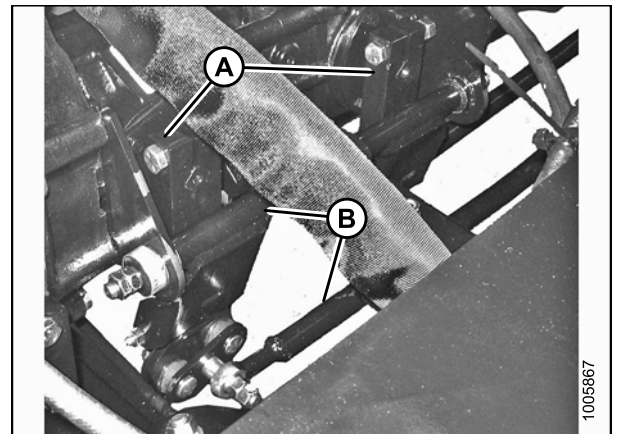


Figure 7.16: Pintle Arms

PERFORMING PREDELIVERY CHECKS

3. With the engine shut down, steering wheel centered, and the GSL in NEUTRAL but not in N-DETENT, try to start the engine. The CDM should flash “CENTER STEERING” on the upper line and “PLACE GSL INTO N” on the lower line accompanied by a short beep with each flash and the engine should not turn over. If the engine turns over, the system requires adjustment. Refer to the technical manual for adjustment procedures.
4. With the engine shut down, steering wheel centered, GSL in N-DETENT, and operator’s station **NOT** locked, try to start the engine. Engine should crank but not start. The CDM should display “SEAT BASE NOT LOCKED”. If engine starts, the system requires adjustment. Refer to the technical manual.

PERFORMING PREDELIVERY CHECKS

7.11 Operational Checks

A battery main disconnect switch (A) is located on the right-hand (cab-forward) frame rail, behind the maintenance platform, and can be accessed by moving the platform.

Ensure switch is switched to POWER ON position.

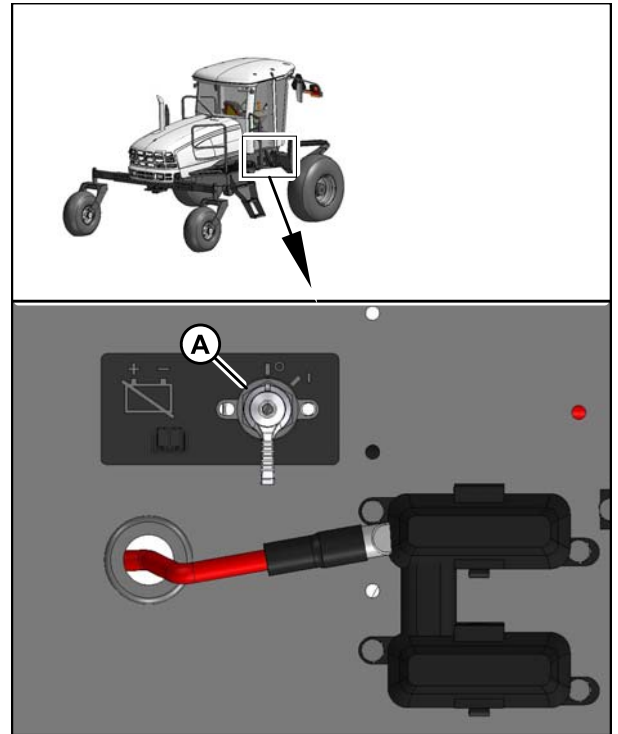


Figure 7.17: M155/M205 Battery Switch

7.11.1 Checking Engine Warning Lights

1. Turn ignition key (A) to RUN position. A single loud tone beeps and the engine warning lights (B) illuminate.
2. Turn ignition key (A) to OFF position.



Figure 7.18: Cab Display Module (CDM)

PERFORMING PREDELIVERY CHECKS

7.11.2 Checking Engine Startup

1. Start the engine. For instructions, refer to [6.7 Starting Engine, page 33](#).
The brakes should engage and the machine should not move after engine start-up.
2. Ensure the steering wheel is centered. Move ground speed lever (GSL) (A) straight out of N-DETTENT (neither forward nor reverse). The machine should not move.
3. With the GSL out of N-DETTENT, check that the steering wheel is free to move.
4. If the machine does not function as described above, the system requires adjustment. Refer to the technical manual.



Figure 7.19: Operator Console

7.11.3 Checking Engine Speed

Check engine speed on cab display module (CDM) (A).

	Idle	Maximum rpm (No Load)
M155	1075–1150	2320–2350
M205		2250–2340



Figure 7.20: CDM

7.11.4 Checking Gauges and Cab Display Module (CDM) Display

1. Check that engine temperature gauge (A) and fuel gauge (B) are working.
2. Turn exterior lights ON and check gauge lights are ON.



Figure 7.21: Temperature and Fuel Gauges

PERFORMING PREDELIVERY CHECKS

- Check that CDM display (A) is working by pushing SELECT (B) on the CDM or the SELECT button (C) on the ground speed lever (GSL).

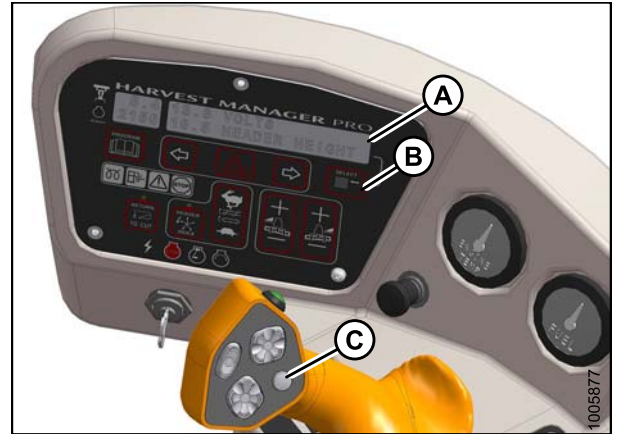


Figure 7.22: CDM

7.11.5 Checking Electrical System

Push the SELECT button on the ground speed lever (GSL) or the SELECT switch on the cab display module (CDM) to display VOLTS. The display indicates the condition of the battery and alternator. Refer to following table.

Ignition	Engine	Reading	Indicated Condition
ON	Running	13.8–15.0	Normal
		>16.0 (see note)	Regulator out of adjustment
		<12.5 (see note)	Alternator not working OR Regulator out of adjustment
	Shut down	12.0	Battery normal

NOTE: Display flashes voltage reading with single loud tone. Repeats every 30 minutes until condition is fixed.

7.11.6 Checking Operator's Presence System

- With the windrower engine running, place the ground speed lever (GSL) (A) in NEUTRAL and turn the steering wheel until it locks.

CAUTION

Check to be sure all bystanders have cleared the area.

- With everyone clear of the machine, engage HEADER DRIVE switch (B).
- After header drives are running, stand up out of the seat. In approximately 5 seconds the header should shut off. If not, the Operator Presence System requires adjustment. Refer to the technical manual.

NOTE: To restart the header, move the HEADER DRIVE switch (B) to the OFF position and back to the ON position again.



Figure 7.23: Operator Console

PERFORMING PREDELIVERY CHECKS

4. With the engine running, position the GSL (A) in NEUTRAL and in N-DETENT:
 - a. Swivel the operator's station, but do **NOT** lock into position.
 - b. Move GSL out of N-DETENT. The engine should shutdown, and the lower display will flash "LOCK SEAT BASE → CENTER STEERING WHEEL → NOT IN NEUTRAL".
 - c. Swivel and lock the operator's station, and the display should return to normal.
 - d. If the engine does not shut down, the seat position switches require adjustment. Refer to the technical manual.
5. With the windrower moving at **LESS THAN** 5 mph (8 km/h), stand up out of the seat. The CDM will flash "NO OPERATOR" on the upper line and "ENGINE SHUTDOWN 5...4...3...2...1...0" on the lower line accompanied by a steady tone. At "0", the engine shuts down.

If the engine does not shut down, the Operator Presence System requires adjustment. Refer to the technical manual.
6. With the windrower moving at **MORE THAN** 5 mph (8 km/h), stand up out of the seat. The CDM beeps once and displays "NO OPERATOR" on the lower line. If not, the Operator Presence System requires adjustment. Refer to the technical manual.

7.11.7 Checking Exterior Lights

1. Ensure operator's seat is in cab-forward mode.
2. Switch FIELD lights (A) ON and check that all lights are functioning as shown at right.



Figure 7.24: Exterior Light Switches

PERFORMING PREDELIVERY CHECKS

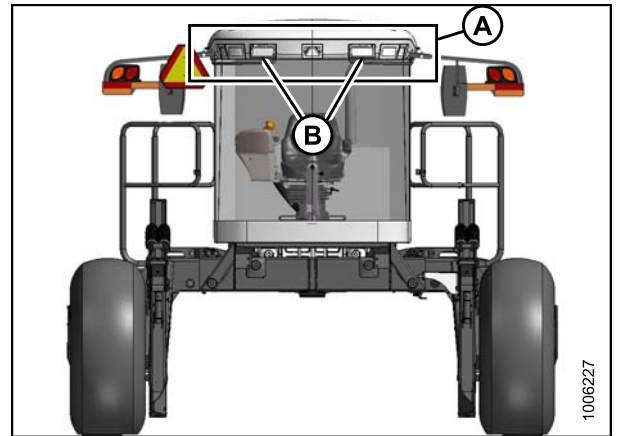


Figure 7.25: Front: Cab-Forward Mode

A - Field Lights

B - High/Low Road Lights
(Optional)

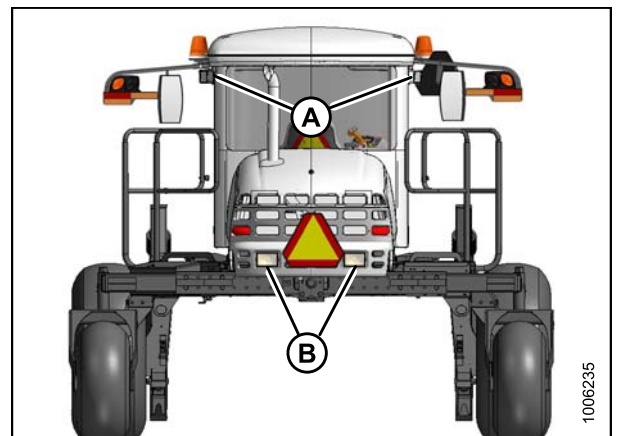


Figure 7.26: Rear: Cab-Forward Mode

A - Field Lights

B - Swath Lights—High/Low

3. Switch ROAD lights (B) ON and check that all lights are functioning as shown at right.
4. Activate HIGH/LOW switch (A).
5. Activate turn signals and hazard warning lights with switches on cab display module (CDM).
6. Turn lights OFF.



Figure 7.27: Exterior Light Switches

PERFORMING PREDELIVERY CHECKS

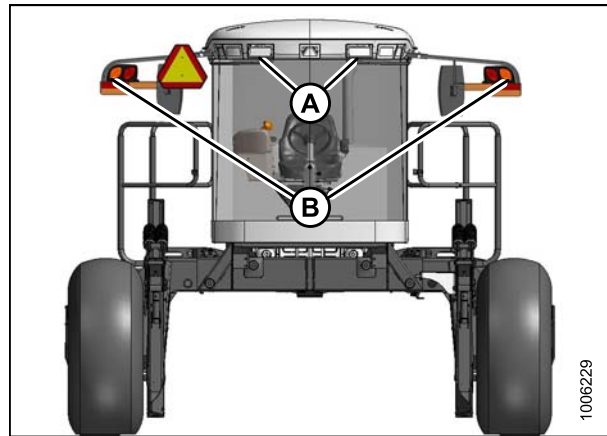


Figure 7.28: Front: Cab-Forward Mode

A - High/Low Road Lights

B - Turn Signals, Hazard Warning Lights—Amber

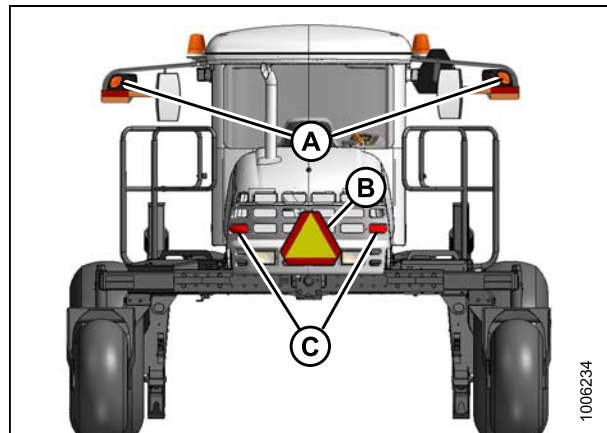


Figure 7.29: Rear: Cab-Forward Mode

A - Turn Signals, Hazard Warning Lights—Amber

B - SMV Sign

C - Tail Lights—Red (If Installed)

7. Rotate operator's seat to engine-forward mode.
8. Switch ROAD lights (B) ON and check that all lights are functioning as shown at right.
9. Activate HIGH/LOW (A) switch and check lights.
10. Activate turn signals and hazard warning lights with switches on CDM and then check lights.



Figure 7.30: Exterior Light Switches

PERFORMING PREDELIVERY CHECKS

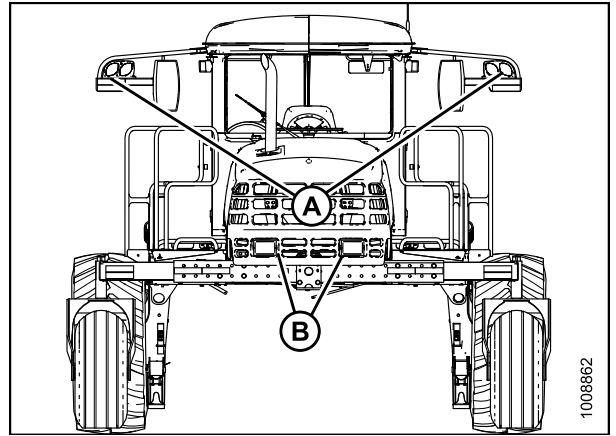


Figure 7.31: Front: Engine-Forward Mode

A - Turn Signals, Hazard Warning Lights—Amber
B - High/Low Road Lights

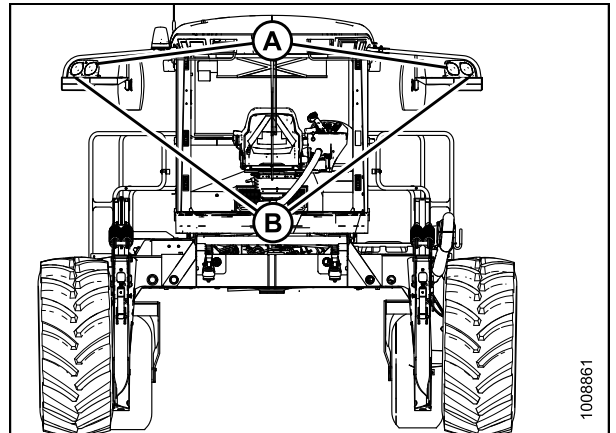


Figure 7.32: Rear: Engine-Forward Mode

A - Tail/Brake Lights—Red
B - Turn Signals, Hazard Warning Lights—Amber

11. Switch beacons (A) ON and check that they are working properly.



Figure 7.33: Exterior Light Switches

PERFORMING PREDELIVERY CHECKS

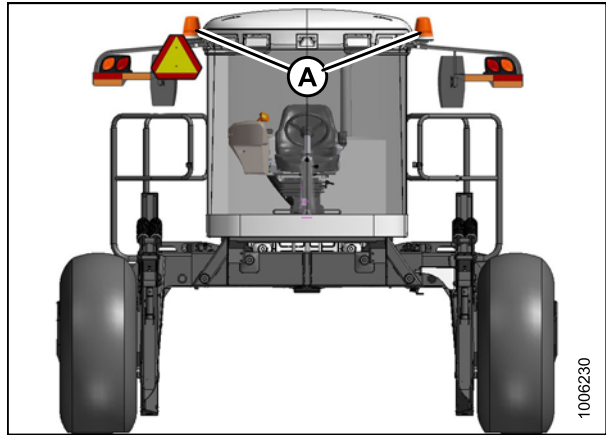


Figure 7.34: Rear: Engine-Forward Mode

A - Beacon Lights—Amber

7.11.8 Checking Horn

1. Push HORN button (A) and listen for horn.

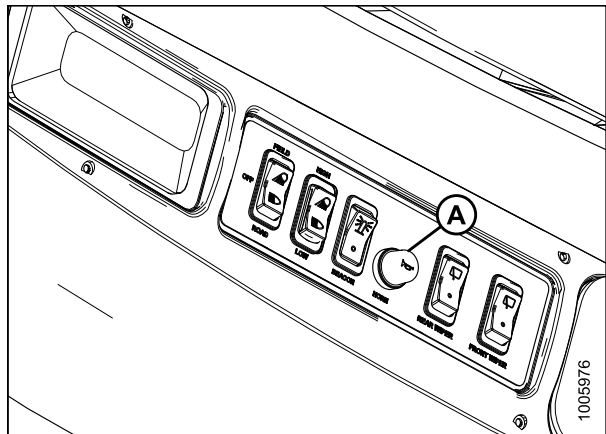


Figure 7.35: Horn Location

PERFORMING PREDELIVERY CHECKS

7.11.9 Checking Interior Lights

1. Switch lights ON and OFF with switches on each light. Interior lights only work with ROAD or FIELD light switch ON.

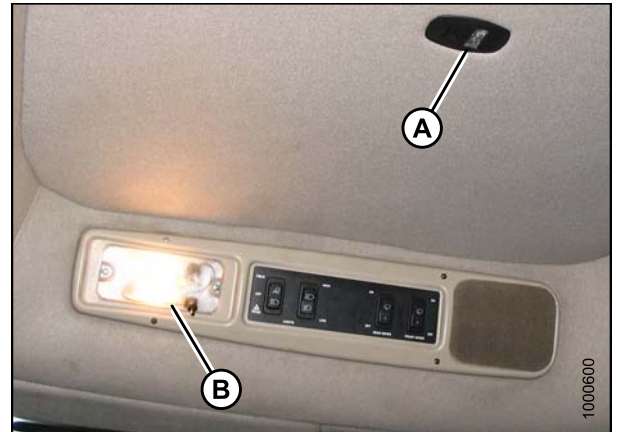


Figure 7.36: Interior Lights and Switches

A - Ambient Light in Roof Liner B - Interior Light

7.11.10 Checking Air Conditioning (A/C) and Heater



Figure 7.37: M155/M205 A/C controls

A - Blower Switch

B - Air Conditioning Switch

C - Outside Air Switch

D - Temperature Control

- **Blower switch** – Controls blower speed. Switch settings are OFF, LO, MEDIUM, and HI.
- **Air conditioning switch** – Controls A/C system. When set to ON, A/C operates with blower switch on. When set to OFF, the A/C system does not operate.

PERFORMING PREDELIVERY CHECKS

- **Outside air switch** – Controls air source. When set to FRESH AIR, starts booster fan and filtered outside air is drawn into the cab. When set to RECIRCULATE, stops booster fan and air inside cab is recirculated.
- **Temperature control** – Controls cab temperature. To increase temperature, turn knob clockwise. To decrease temperature, turn knob counterclockwise.

IMPORTANT:

To distribute the oil throughout the A/C system, perform the following steps whenever the machine is first started after storage for more than one week:

1. With the engine running, turn BLOWER switch to the first position, turn TEMPERATURE CONTROL switch to maximum heating and A/C control to OFF.
2. Click A/C switch from the OFF to the ON position for one second, then back to OFF for 5 to 10 seconds. Repeat this step ten times.

PERFORMING PREDELIVERY CHECKS

7.12 Manuals

The following manuals are stored in the manual storage case (A) behind the operator's seat:

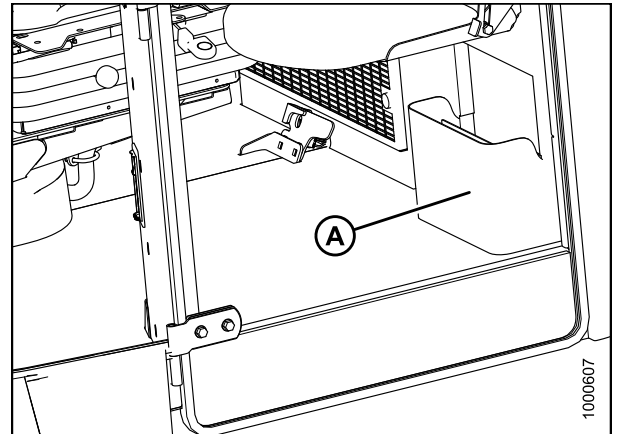


Figure 7.38: Manual Storage Case

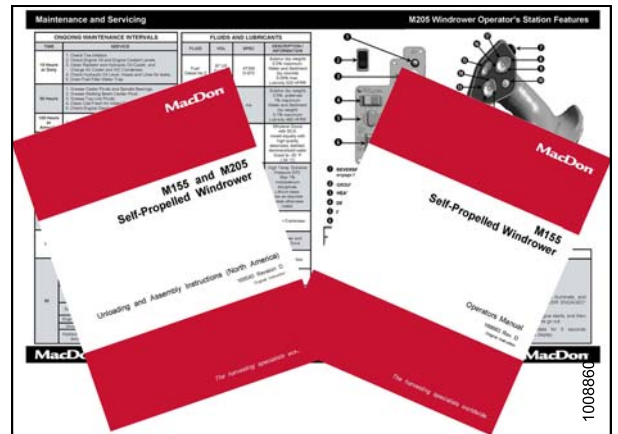


Figure 7.39: Manuals and Quick Card

Model	Macdon Part Number			
	Operator's Manuals	Parts Catalogs	Quick Cards	Engine Manuals
M155	169883	169884	169882	166240
M205	169887	169888	169889	

PERFORMING PREDELIVERY CHECKS

7.13 Final Steps

1. Once all predelivery checks are complete, remove plastic coverings from cab display module (CDM) and seats.
2. Locate Trimble Display Mount kit and Label (GPS completion kit) that is in a bag in cab. If not yet for installation, place kit in toolbox for safekeeping.
3. AFTER machine is delivered to end user, remove decal (MD #166705) from windshield.

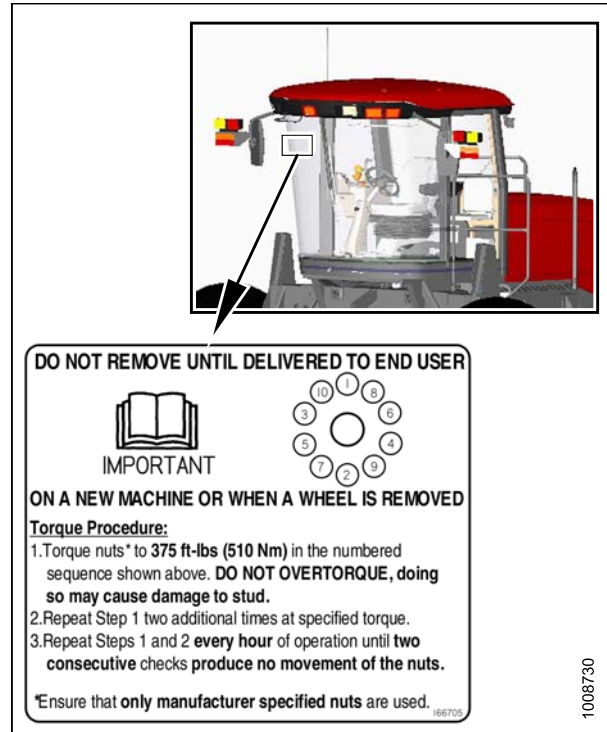


Figure 7.40: Windshield Decal (MD #166705)

Predelivery Checklist

Perform these checks and adjustments prior to delivery to your Customer. The completed checklist should be retained by either the Operator or the Dealer.

CAUTION

Carefully follow the instructions given. Be alert for safety related messages that bring your attention to hazards and unsafe practices.

Windrower Serial Number:

Engine Serial Number:

Table 1 M155 and M205 Self-Propelled Windrower Predelivery Checklist

✓	Item	Reference
	Check for shipping damage or missing parts. Be sure all shipping dunnage is removed.	—
	Check for loose hardware. Tighten to required torque.	2 Recommended Torques, page 5
	Check tire air pressures and adjust as required.	7.3.1 Checking Tire Pressures, page 111
	Check final drive hub lubricant level.	7.2 Checking Wheel Drive Lubricant Level, page 110
	Check engine coolant level and strength at reserve tank.	7.7 Checking Engine Coolant, page 118
	Check air cleaner and clamps.	7.4 Checking Engine Air Intake, page 113
	Check hydraulic oil level and check for leaks along lines.	7.5 Checking Hydraulic Oil, page 116
	Check fuel separator for water and foreign material. Drain and clean as necessary. Add fuel.	7.6 Checking Fuel Separator, page 117
	Check gear box lubricant level.	7.8 Checking Gearbox Lubricant Level, page 119
	Check tension of A/C compressor belt.	7.9 Checking Air Conditioning (A/C) Compressor Belt, page 120
	Check that machine is completely lubricated.	6.12 Lubricating the Windrower, page 96
	Check Neutral interlock system.	7.10 Checking Safety System, page 121
	Check horn operation.	7.11.8 Checking Horn, page 130
	Check engine oil pressure indicator light at cab display module (CDM).	7.11.1 Checking Engine Warning Lights, page 123
	Start Engine and Run to Operating Temperature.	7.11.2 Checking Engine Startup, page 124
	Check CDM for operation.	7.11.4 Checking Gauges and Cab Display Module (CDM) Display, page 124
	Check Operator's Presence System.	7.11.6 Checking Operator's Presence System, page 125
	Check alternator charge rate at instrument console.	7.11.5 Checking Electrical System, page 125
	Check that air conditioning is functioning properly.	7.11.10 Checking Air Conditioning (A/C) and Heater, page 131

PREDELIVERY CHECKLIST

✓	Item	Reference
	Check that heater is functioning properly.	<i>7.11.10 Checking Air Conditioning (A/C) and Heater, page 131</i>
	Check that instrument console gauge lights and interior lights are functioning properly.	<i>7.11.4 Checking Gauges and Cab Display Module (CDM) Display, page 124</i> and <i>7.11.9 Checking Interior Lights, page 131</i>
	Check maximum (no load) engine speed at CDM.	<i>7.11.3 Checking Engine Speed, page 124</i>
	Check that exterior lights are functioning properly.	<i>7.11.7 Checking Exterior Lights, page 126</i>
	Check that hazard and signal lights are functioning properly.	<i>7.11.7 Checking Exterior Lights, page 126</i>
	Check that beacons are functioning properly (if installed).	<i>7.11.7 Checking Exterior Lights, page 126</i>
	Complete the header's Predelivery Checklist (if applicable).	—
	Check that manuals are with the Windrower.	<i>7.12 Manuals, page 133</i>
	Check that plastic coverings from cab interior have been removed.	<i>7.13 Final Steps, page 134</i>

Date Checked:

Checked by:

MacDon Industries Ltd.

680 Moray Street
Winnipeg, Manitoba
Canada R3J 3S3
t. (204) 885-5590
f. (204) 832-7749

MacDon, Inc.

10708 N. Pomona Avenue
Kansas City, Missouri
United States 64153-1924
t. (816) 891-7313
f. (816) 891-7323

MacDon Australia Pty. Ltd.

A.C.N. 079 393 721
P.O. Box 243, Suite 3, 143 Main Street
Greensborough, Victoria, Australia 3088
t. 03 9432 9982
f. 03 9432 9972

LLC MacDon Russia Ltd.

123317 Moscow, Russia
10 Presnenskaya nab, Block C
Floor 5, Office No. 534, Regus Business Centre
t. +7 495 775 6971
f. +7 495 967 7600

CUSTOMERS
www.macdon.com

DEALERS
www.macdondealers.com

Trademarks of products are the marks of their
respective manufacturers and/or distributors.

Printed in Canada