

MacDon[®]

M155 **Self-Propelled Windrower**

Operator's Manual

147649 Revision A
2016 Model Year
Original Instruction

The harvesting specialists.

This manual contains instructions for SAFETY, OPERATION, and MAINTENANCE/SERVICE for the MacDon M155 Self-Propelled Windrower. Featuring the Dual Direction® and Ultra Glide® suspension on the M155.



Published June, 2015

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm. Battery posts, terminals, and related accessories contain lead and lead components. Wash hands after handling.

Declaration of Conformity

<h2 style="margin: 0;">EC Declaration of Conformity</h2>	
<p>[1] MacDon MacDon Industries Ltd. 680 Moray Street, Winnipeg, Manitoba, Canada R3J 3S3</p>	<p>[4] As Per Shipping Document</p> <p>[5] July 31, 2014</p>
<p>[2] Windrower</p> <p>[3] MacDon M Series</p>	<p>[6] _____ Natalia Pedersen Product Integrity</p>

EN	BG	CZ	DA
<p>We, [1] Declare, that the product: Machine Type: [2] Name & Model: [3] Serial Number(s): [4] fulfils all the relevant provisions of the Directive 2006/42/EC. Harmonized standards used, as referred to in Article 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Place and date of declaration: [5] Identity and signature of the person empowered to draw up the declaration: [6] Name and address of the person authorized to compile the technical file: Hartmut Hartmann Wersener Holz 2a D-49504 Lotte (Germany) hartmut.hartmann@prodoku.com</p>	<p>Ние, [1] декларираме, че следният продукт: Тип машина: [2] Наименование и модел: [3] Серийен номер(а) [4] отговаря на всички приложими разпоредби на директива 2006/42/ЕО. Използвани са следните хармонизирани стандарти според чл. 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Местно и дата на декларацията: [5] Име и подпис на лицето, упълномощено да изготви декларацията: [6] Име и адрес на лицето, упълномощено да състави техническия файл: Хартмут Хартман Wersener Holz 2a D-49504 Lotte (Германия) hartmut.hartmann@prodoku.com</p>	<p>My, [1] Prohláším, že produkt: Typ zařízení: [2] Název a model: [3] Sériové(a) číslo(a): [4] splňuje všechna relevantní ustanovení směrnice 2006/42/EC. Byly použity harmonizované standardy, jak je uvedeno v článku 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Místo a datum prohlášení: [5] Identita a podpis osoby oprávněné k vydání prohlášení: [6] Jméno a adresa osoby oprávněné k vyplnění technického souboru: Hartmut Hartmann Wersener Holz 2a D-49504 Lotte (Německo) hartmut.hartmann@prodoku.com</p>	<p>Vi, [1] erklærer, at produktet: Maskintype [2] Navn og model: [3] Serienummer (-numre): [4] Opfylder alle bestemmelser i direktiv 2006/42/EF. Anvendte harmoniserede standarder, som henviser til i paragraf 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Sted og dato for erklæringen: [5] Identitet på og underskrift fra den person, som er bemyndiget til at udarbejde erklæringen: [6] Navn og adresse på den person, som er bemyndiget til at udarbejde den tekniske fil: Hartmut Hartmann Wersener Holz 2a D-49504 Lotte (Tyskland) hartmut.hartmann@prodoku.com</p>
<p>Wir, [1] Erklären hiermit, dass das Produkt: Maschinentyp: [2] Name & Modell: [3] Seriennummer (n): [4] alle relevanten Vorschriften der Richtlinie 2006/42/EG erfüllt. Harmonisierte Standards wurden, wie in folgenden Artikeln angegeben, verwendet 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Ort und Datum der Erklärung: [5] Name und Unterschrift der Person, die dazu befugt ist, die Erklärung auszustellen: [6] Name und Anschrift der Person, die dazu berechtigt ist, die technischen Unterlagen zu erstellen: Hartmut Hartmann Wersener Holz 2a D-49504 Lotte (Deutschland) hartmut.hartmann@prodoku.com</p>	<p>Nosotros [1] declaramos que el producto: Tipo de máquina: [2] Nombre y modelo: [3] Números de serie: [4] cumple con todas las disposiciones pertinentes de la directiva 2006/42/EC. Se utilizaron normas armonizadas, según lo dispuesto en el artículo 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Lugar y fecha de la declaración: [5] Identidad y firma de la persona facultada para draw redactar la declaración: [6] Nombre y dirección de la persona autorizada para elaborar el expediente técnico: Hartmut Hartmann Wersener Holz 2a D-49504 Lotte (Germany) hartmut.hartmann@prodoku.com</p>	<p>Meie, [1] deklareerime, et toode Seadme tüüp: [2] Nimi ja mudel: [3] Seerianumbrid: [4] vastab kõigile direktiivi 2006/42/EÜ asjakohastele sätetele. Kasutatud on järgnevald harmoniseeritud standardeid, millele on viidatud ka punktis 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Deklaratsiooni koht ja kuupäev: [5] Deklaratsiooni koostamiseks volitatud isiku nimi ja allkiri: [6] Tehnilise dokumendi koostamiseks volitatud isiku nimi ja aadress: Hartmut Hartmann Wersener Holz 2a D-49504 Lotte (Saksamaa) hartmut.hartmann@prodoku.com</p>	<p>Nous soussignés, [1] Déclarons que le produit : Type de machine : [2] Nom et modèle : [3] Numéro(s) de série : [4] Est conforme à toutes les dispositions pertinentes de la directive 2006/42/EC. Utilisation des normes harmonisées, comme indiqué dans l'Article 7(2): EN ISO 4254-1:2013 EN ISO 4254-7:2009 Lieu et date de la déclaration : [5] Identité et signature de la personne ayant reçu le pouvoir de rédiger cette déclaration : [6] Nom et adresse de la personne autorisée à constituer le dossier technique : Hartmut Hartmann Wersener Holz 2a D-49504 Lotte (Allemagne) hartmut.hartmann@prodoku.com</p>

The Harvesting Specialists

MacDon

1013910

Figure 1: Declaration of Conformity (Page 1 of 2)

Whole Body and Hand-Arm Vibration Levels

The weighted root mean square acceleration, to which the whole body is subjected, ranges from 0.57 to 1.06 m/s² as measured on a representative machine during typical operations and analyzed in accordance with ISO 5008.

During the same operations, the weighted root means square hand-arm vibration was less than 1.45 m/s² when analyzed in accordance with ISO 5349. These acceleration values depend on the roughness of the ground, the speeds at which the windrower is operated, the operator's experience, weight, and driving habits.

Noise Levels

The A-weighted sound pressure levels inside the operator's station ranged from 70.1 to 73.1 dB(A) as measured on several representative machines in accordance with ISO 5131. The sound pressure level depends upon the engine speed and load, field and crop conditions, and the type of platform used.

Introduction

This manual contains information on the MacDon M155 Self-Propelled Windrower which, when coupled with one of MacDon's auger, rotary, or draper headers, provides a package designed to cut and lay in windrows a variety of grain, hay, and specialty crops.

The M155 Windrower is Dual Direction[®], meaning that the windrower can be driven in the cab-forward or the engine-forward modes. Right and left designations are therefore determined by the operator's position, facing the direction of travel. This manual uses the terms "right cab-forward", "left cab-forward", "right engine-forward", and "left engine-forward" when referencing specific locations on the machine.

Use this manual as your first source of information about the machine. Use the Table of Contents and the Index to guide you to specific areas. Study the Table of Contents to familiarize yourself with how the material is organized.

If you follow the instructions given here, your M155 Windrower will work well for many years.

Use this manual in conjunction with your header operator's manual.

A manual storage case is provided in the cab. Keep this manual handy for frequent reference and to pass on to new Operators or Owners. Call your Dealer if you need assistance, information, or additional copies of this manual.

CAREFULLY READ ALL THE MATERIAL PROVIDED BEFORE ATTEMPTING TO USE THE MACHINE.

NOTE: Keep your MacDon publications up-to-date. The most current version can be downloaded from our website www.macdon.com or from our Dealer-only site (<https://portal.macdon.com>) (login required).

NOTE:

Chinese and Russian translations of this manual can be ordered from MacDon, downloaded from the MacDon Dealer Portal (<https://portal.macdon.com>)(login required), or downloaded from the MacDon international website (<http://www.macdon.com/world>).

List of Revisions

At MacDon, we're continuously making improvements: occasionally these improvements impact product documentation. The following list provides an account of major changes from the previous version of this document.

Summary of Change	Location
Declaration of Conformity revised.	Declaration of Conformity, page i
Fuse panel cover decal was 183481.	Fuse Box Decal, page 398
Reel to Ground Speed revised.	Setting Reel to Ground Speed, page 282
Safety Decals 169502 and 169504 added to cab.	1.11 Safety Sign Locations, page 13
Product Overview was Description.	2 Product Overview, page 29
Letter "l" removed from illustrations.	1.11 Safety Sign Locations, page 13
Illustration added.	Using the Auto Raise Height Feature, page 210
Setting Draper Index revised.	Setting Draper Index, page 287
Legend removed from illustration.	Setting the Auger Speed on A40-D Headers, page 294
Conversion Chart was 5.3.2	8.3 Conversion Chart, page 468
Step 4 in Turning Engine Manually revised.	Turning the Engine Manually, page 333
Address deleted.	7.1.19 Swath Roller, page 450
Engine Fault Codes updated.	8.4 Engine Error Codes, page 469
Emergency Exit added.	3.12 Emergency Exit, page 59
Cab Display Module (CDM) chapter added and content revised.	3.19 Cab Display Module (CDM), page 74
Reference chapter added.	8 Reference, page 453
7 Options and Attachments revised.	7.1 Options and Attachments, page 447

Serial Number

If you require MacDon technical assistance, please have the serial number recorded and ready before you call. Record the model number, model year, and serial number of the windrower and engine on the lines below.

The windrower serial number plate (A) is located on the left side of the main frame near the walking beam.

WINDROWER MODEL NUMBER _____

WINDROWER SERIAL NUMBER _____

YEAR OF MANUFACTURE _____

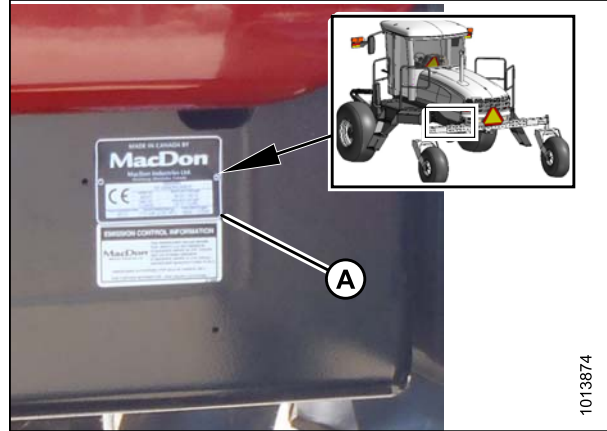


Figure 3: Machine Serial Number Location

The engine serial number plate (A) is located on top of the engine cylinder head cover.

ENGINE SERIAL NUMBER _____

DATE OF MANUFACTURE _____



Figure 4: Engine Serial Number Location

TABLE OF CONTENTS

Declaration of Conformity	i
Whole Body and Hand-Arm Vibration Levels	iii
Noise Levels	iii
Introduction	iv
List of Revisions	v
Serial Number	vi
1 Safety	1
1.1 Safety Alert Symbols	1
1.2 Signal Words	2
1.3 General Safety	3
1.4 Maintenance Safety	5
1.5 Hydraulic Safety	6
1.6 Tire Safety	7
1.7 Battery Safety	8
1.8 Welding Precaution	9
1.9 Engine Safety	10
1.9.1 High Pressure Rails	10
1.9.2 Engine Electronics	11
1.10 Safety Signs	12
1.10.1 Installing Safety Decals	12
1.11 Safety Sign Locations	13
1.12 Understanding Safety Signs	17
2 Product Overview	29
2.1 Definitions	29
2.2 Specifications	31
2.3 Windrower Dimensions	34
2.4 Component Location	36
3 Operator's Station	39
3.1 Operator Console	39
3.2 Operator Presence System	41
3.2.1 Header Drive	41
3.2.2 Engine and Transmission	41
3.3 Operator's Seat Adjustments	42
3.3.1 Fore-Aft	42
3.3.2 Seat Suspension and Height	42
3.3.3 Vertical Dampener	43
3.3.4 Armrest	43
3.3.5 Fore-Aft Isolator Lock	44
3.3.6 Seat Tilt	44
3.3.7 Armrest Angle	45
3.3.8 Lumbar Support	45
3.4 Training Seat	46
3.5 Seat Belts	47
3.6 Steering Column Adjustment	48
3.7 Lighting	49
3.7.1 Cab-Forward Lighting: Field	49
3.7.2 Engine-Forward Lighting: Road	50
3.7.3 Cab-Forward Lighting: Road (Optional)	51
3.7.4 Beacon Lighting (Optional)	52
3.7.5 HID Auxiliary Lighting (Optional)	53
3.8 Windshield Wipers	54
3.9 Rear View Mirrors	55
3.10 Cab Temperature	56

TABLE OF CONTENTS

3.10.1	Heater Shut-Off	56
3.10.2	Air Distribution	56
3.10.3	Climate Controls	57
3.11	Interior Lights	58
3.12	Emergency Exit	59
3.13	Operator Amenities	60
3.14	Radio	62
3.14.1	AM/FM Radio	62
3.14.2	Antenna Mounting	62
3.15	Horn	64
3.16	Engine Controls and Gauges	65
3.17	Windrower Controls	66
3.18	Header Controls	68
3.18.1	Header Drive Switch	68
3.18.2	Header Drive Reverse Button	68
3.18.3	Ground Speed Lever (GSL) Header Switches	69
	Display Selector Switch	70
	Reel Position Switches	70
	Header Position Switches	71
	Reel and Disc Speed Switches	71
3.18.4	Console Header Switches	72
	Deck Shift/Float Preset Switch	72
	Double Windrow Attachment (DWA) / Swath Roller Switch (if installed)	73
3.19	Cab Display Module (CDM)	74
3.19.1	Engine and Windrower Functions	74
3.19.2	Header Functions	75
3.19.3	Operating Screens	76
	Ignition ON, Engine Not Running	76
	Engine Running – At Initial Start Up	76
	Engine-Forward, Engine Running	77
	Cab-Forward, Engine Running, Header Disengaged	77
	Cab-Forward, Engine Running, Header Engaged, Auger Header Index Switch OFF	77
	Cab-Forward, Engine Running, Header Engaged, Auger Header Index Switch ON	79
	Engine Running, Header Engaged, Auger Header	80
	Cab-Forward, Engine Running, Header Engaged, Draper Header, Index Switch OFF	81
	Cab-Forward, Engine Running, Header Engaged, Draper Header, Index Switch ON	82
	Cab-Forward, Engine Running, Header Engaged, Rotary Header Installed	83
	Miscellaneous Operational Information	83
3.19.4	Cab Display Module (CDM) Warning/Alarms	85
	Engine Warning Lights	85
	Display Warnings and Alarms	86
3.19.5	Cab Display Module (CDM) Programming	89
3.19.6	Cab Display Options	90
	Setting the Cab Display Language	90
	Changing the Windrower Display Units	91
	Adjusting the Cab Display Buzzer Volume	92
	Adjusting the Cab Display Backlighting	93
	Adjusting the Cab Display Contrast	94
3.19.7	Calibrating the Header Sensors	95
	Calibrating the Header Height Sensor	95
	Calibrating the Header Tilt Sensor	98
	Calibrating the Header Float Sensors	100
3.19.8	Programming the Windrower	101
	Activating the Hydraulic Center-Link on an M155	101

TABLE OF CONTENTS

	Activating the Rotary Header Drive Hydraulics on an M155	102
	Setting the Knife Overload Speed	103
	Setting the Rotary Disc Overload Speed.....	104
	Setting the Header Knife Speed.....	105
	Setting the Hydraulic Overload Pressure	106
	Setting the Header Index Mode	107
	Setting the Return to Cut Mode.....	108
	Setting the Header Cut Width	109
	Activating the Double Windrower Attachment (DWA).....	110
	Setting the Auto Raise Height.....	112
	Activating the Hay Conditioner.....	112
	Displaying Reel Speed.....	113
	Setting the Windrower's Tire Size	114
	Setting the Engine Intermediate Speed Control (ISC) RPM on an M155/M205.....	115
	Clearing Sub-Acres.....	116
3.19.9	Activating Cab Display Lock Outs.....	117
	Activating Knife Speed Control Lock Out	117
	Activating Rotary Disc Speed Control Lock Out.....	118
	Activating the Header Float Control Lock Out	119
	Activating the Draper Speed Control Lock Out.....	121
	Activating the Auger Speed Control Lock Out	122
	Activating the Reel Speed Control Lock Out	123
	Activating the Reel Fore-Aft Control Lock Out.....	125
	Activating the Header Tilt Control Lock Out.....	126
3.19.10	Displaying Activated Cab Display Lock Outs	127
3.19.11	Troubleshooting Windrower Problems	129
	Displaying the Windrower and Engine Error Codes	129
	Switching the Installed Header Sensors On or Off.....	131
	Displaying Header Sensors Input Signals	132
	Forcing a Header ID.....	134
3.19.12	Troubleshooting Header Problems	135
	Testing the Header Up/Down Activate Function Using the Cab Display Module (CDM)	135
	Testing the Reel Up/Down Activate Function Using the Cab Display Module (CDM)	137
	Testing the Header Tilt Activate Function Using the Cab Display Module (CDM)	139
	Testing the Reel Fore-Aft Activate Function Using the Cab Display Module (CDM).....	140
	Activating the Hydraulic Purge Using the Cab Display Module (CDM)	142
	Testing the Knife Drive Circuit Using the Cab Display Module (CDM)	144
	Testing the Draper Drive Circuit Activate Function Using the Cab Display Module (CDM)	146
	Testing the Reel Drive Circuit Activate Function Using the Cab Display Module (CDM)	147
	Testing the Rotary Disc Drive Circuit Activate Function Using the Cab Display Module (CDM)	149
	Testing the Double Windrower Attachment (DWA) Drive Activate Function Using the Cab Display Module (CDM).....	151
3.19.13	Engine Error Codes.....	152
3.19.14	Cab Display Module (CDM) and Windrower Control Module (WCM) Fault Codes	152
4	Operation	153
4.1	Owner/Operator Responsibilities.....	153
4.2	Symbol Definitions.....	154
4.2.1	Engine Functions	154
4.2.2	Windrower Operating Symbols.....	155
4.2.3	Header Functions.....	156

TABLE OF CONTENTS

4.3	Operating the Windrower.....	157
4.3.1	Operational Safety	157
4.3.2	Break-In Period	158
4.3.3	Preseason Checks/Annual Service.....	158
	Air Conditioning Compressor Coolant Cycling.....	159
4.3.4	Daily Checks and Maintenance	159
4.3.5	Engine Operation	160
	Starting the Engine	160
	Engine Warmup.....	162
	Engine Intermediate Speed Control (ISC).....	163
	Shutting Down the Engine	163
	Filling the Fuel Tank.....	163
	Engine Temperature.....	164
	Engine Oil Pressure.....	165
	Electrical	165
	Engine Warning Lights	165
4.3.6	Driving the Windrower	165
	Entering and Exiting the Windrower	167
	Driving Forward in Cab-Forward Mode.....	168
	Driving Reverse in Cab-Forward Mode.....	169
	Driving Forward in Engine-Forward Mode.....	170
	Driving in Reverse in Engine-Forward Mode.....	171
	Spin Turning.....	172
	Stopping	172
4.3.7	Adjusting Caster Tread Width.....	173
4.3.8	Transporting.....	175
	Driving on the Road	175
	Towing Header with Windrower.....	178
	Towing the Windrower (Emergency).....	190
	Final Drives	191
4.3.9	Storing the Windrower	191
4.4	Operating with a Header	193
4.4.1	Header Safety Props	193
4.4.2	Header Float.....	195
	Float Operating Guidelines	195
	Checking Float	195
	Float Options.....	198
4.4.3	Levelling the Header.....	199
4.4.4	Header Drive	202
	Engaging and Disengaging the Header	202
	Reversing the Header	203
4.4.5	Adjusting Header Angle	203
	Checking Self-Locking Center-Link Hook.....	205
4.4.6	Cutting Height.....	206
4.4.7	Return to Cut	207
	Programming the Return to Cut Feature	207
	Using the Return to Cut Feature	208
4.4.8	Auto Raise Height	209
	Programming the Auto Raise Height Feature.....	209
	Using the Auto Raise Height Feature	210
4.4.9	Header Drop Rate	210
4.4.10	Double Windrowing	211
	Double Windrow Attachment (DWA) Deck Position	211
	Double Windrow Attachment (DWA) Draper Speed.....	212

TABLE OF CONTENTS

4.4.11	Swath Roller Operation.....	212
4.5	Attaching and Detaching Headers.....	213
4.5.1	Attaching a D-Series Header.....	213
	Attaching Header Boots	213
	Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment	214
	Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment	219
	Attaching a D-Series Header: Mechanical Center-Link	225
4.5.2	Detaching a D-Series Header	229
	Detaching a D-Series Header: Hydraulic Center-Link	230
	Detaching a D-Series Header: Mechanical Center-Link	233
4.5.3	Attaching an A-Series Header	237
	Hydraulic Link with Optional Self-Alignment Kit	238
	Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment	238
	Attaching an A-Series Header: Mechanical Center-Link	245
4.5.4	Detaching an A-Series Header	249
	Detaching an A-Series Header: Hydraulic Center-Link	250
	Detaching an A-Series Header: Mechanical Center-Link	253
4.5.5	Attaching an R-Series Header.....	257
	Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment	257
	Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment	262
	Attaching an R-Series Header: Mechanical Center-Link	267
4.5.6	Detaching an R-Series Header.....	271
	Detaching an R-Series Header: Hydraulic Center-Link	272
	Detaching an R-Series Header: Mechanical Center-Link	275
4.6	Operating with a D-Series Header.....	279
4.6.1	Configuring Hydraulics.....	279
4.6.2	Attaching Header Boots.....	280
4.6.3	Header Position	281
4.6.4	Adjusting the Reel Fore-Aft Position	281
4.6.5	Adjusting the Reel Height	282
4.6.6	Reel Speed.....	282
	Setting Reel to Ground Speed	282
	Setting the Reel Only Speed.....	285
4.6.7	Draper Speed	286
	Setting Draper to Ground Speed.....	286
	Setting Draper Minimum Speed	286
	Setting Draper Index	287
	Setting Draper Speed Independent of Ground Speed.....	288
4.6.8	Knife Speed	289
	Setting Knife Speed “On the Go”.....	290
4.6.9	Deck Shift Control	291
	Deck Shift	291
	Setting Float Options with Deck Shift.....	291
4.7	Operating with an A-Series Header.....	294
4.7.1	Auger Speed.....	294
	Auger Speed on A30-D Headers.....	294
	Setting the Auger Speed on A40-D Headers.....	294
4.7.2	Reel Speed.....	295
	Reel Speed on A30-D Headers.....	295
	Reel Speed on A40-D Headers.....	295
4.7.3	Knife Speed	300
	Setting Knife Speed “On the Go”.....	300
4.8	Operating with an R-Series Header.....	302
4.8.1	Disc Speed	302

TABLE OF CONTENTS

Setting Disc Speed	303
5 Maintenance and Servicing	305
5.1 Preparation For Servicing.....	305
5.2 Engine Compartment Hood	306
5.2.1 Opening Hood (Lower Position).....	306
5.2.2 Closing Hood (Lower Position).....	307
5.2.3 Opening Hood (Highest Position)	307
5.2.4 Closing Hood (Highest Position).....	308
5.3 Maintenance Platforms	309
5.3.1 Opening Platforms (Standard Position).....	309
5.3.2 Closing Platforms (Standard Position).....	310
5.3.3 Opening Platforms (Major Service Position)	311
5.3.4 Closing Platforms (Major Service Position).....	312
5.4 Windrower Lubrication	314
5.4.1 Lubricating the Windrower	314
5.4.2 Lubrication Points.....	315
5.5 Operator's Station.....	316
5.5.1 Seat Belts.....	316
5.5.2 Safety Systems.....	316
Checking Operator Presence System.....	316
Checking Engine Interlock.....	317
5.5.3 Ground Speed Lever (GSL) Adjustments	317
Adjusting Ground Speed Lever (GSL) Lateral Movement.....	317
Adjusting Ground Speed Lever (GSL) Fore-Aft Movement.....	318
5.5.4 Steering Adjustments	319
Checking Steering Link Pivots	319
Checking Steering Chain Tension	321
5.5.5 Park Brake.....	322
Adjusting and Replacing Interlock Switch	322
5.5.6 Heating, Ventilating, and Air Conditioning (HVAC) System	325
Fresh Air Intake Filter.....	325
Return Air Cleaner/Filter.....	327
Air Conditioning Condenser.....	329
Air Conditioning (A/C) Evaporator Core.....	329
Air Conditioning (A/C) Compressor	331
5.5.7 Engine.....	332
General Engine Inspection	332
Turning the Engine Manually	333
Engine Oil	335
Air Intake System.....	337
Fuel System	345
Engine Cooling System.....	353
Gearbox.....	363
Exhaust System.....	364
Belts	365
Engine Speed.....	368
5.5.8 Electrical System.....	368
Preventing Electrical System Damage.....	368
Battery	369
Headlights: Engine-Forward.....	376
Field Lights: Cab-Forward	380
Flood Lights: Forward	381
High-Intensity Discharge (HID) Auxiliary Lighting (Optional - MD #B5596).....	383
Flood Lights: Rear	386

TABLE OF CONTENTS

	Replacing Bulbs in Red and Amber Lights	388
	Replacing Red Tail Lights (if installed)	388
	Replacing the Bulbs in Beacon Lights (if installed)	389
	Replacing a Console Gauge Light	394
	Replacing the Cabin Dome Light	395
	Replacing the Ambient Light Fixture	395
	Turn Signal Indicators	396
	Accessing Circuit Breakers and Fuses	396
5.5.9	Hydraulic System	400
	Checking and Filling Hydraulic Oil	401
	Hydraulic Oil Cooler	403
	Draining Hydraulic Oil	403
	Changing Hydraulic Oil Filters	404
	Header and Reel Hydraulics	407
	Traction Drive Hydraulics	409
	Hoses and Lines	411
5.5.10	Wheels and Tires	411
	Drive Wheel	411
	Caster Wheel	418
5.5.11	Maintenance Schedule	425
	Break-In Inspections	426
	Maintenance Schedule/Record	427
6	Troubleshooting	429
6.1	Engine Troubleshooting	429
6.2	Electrical Troubleshooting	435
6.3	Hydraulics Troubleshooting	436
6.4	Header Drive Troubleshooting	437
6.5	Traction Drive Troubleshooting	438
6.6	Steering and Ground Speed Control Troubleshooting	441
6.7	Cab Air Troubleshooting	442
6.8	Operator's Station Troubleshooting	446
7	Options and Attachments	447
7.1	Options and Attachments	447
7.1.1	AM/FM Radio	447
7.1.2	Automated Steering Systems	447
7.1.3	Booster Spring Kit (External)	447
7.1.4	Booster Spring Kit (Internal)	447
7.1.5	Draper Header Case Drain Kit	447
7.1.6	Double Windrow Attachment (DWA)	448
7.1.7	Draper Header Reel Drive and Lift Plumbing	448
7.1.8	Engine Block Heater	448
7.1.9	Engine Fan Air Baffle	448
7.1.10	Header Drive Reverser	448
7.1.11	HID Auxiliary Lighting	449
7.1.12	Hydraulic Center-Link	449
7.1.13	Light Header Flotation	449
7.1.14	Lighting and Marking for Cab-Forward Road Travel	449
7.1.15	Mechanical Center-Link	449
7.1.16	Pressure Sensor Kit	449
7.1.17	Rotary Header Drive Hydraulics (13-foot)	450
7.1.18	Self-Aligning Center-Link	450
7.1.19	Swath Roller	450
7.1.20	Towing Harness	450

TABLE OF CONTENTS

7.1.21	Warning Beacons	450
7.1.22	Weight Box	451
7.1.23	Windshield Shades.....	451
8	Reference.....	453
8.1	Recommended Torques	453
8.1.1	Torque Specifications	453
	SAE Bolt Torque Specifications.....	453
	Metric Bolt Specifications	455
	Metric Bolt Specifications Bolting into Cast Aluminum	458
	Flare-Type Hydraulic Fittings	458
	O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)	460
	O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable).....	462
	O-Ring Face Seal (ORFS) Hydraulic Fittings	463
8.2	Recommended Fuel, Fluids, and Lubricants	465
8.2.1	Storing Lubricants and Fluids.....	465
8.2.2	Fuel Specifications	465
8.2.3	Lubricants, Fluids, and System Capacities	466
8.2.4	Filter Part Numbers	467
8.3	Conversion Chart.....	468
8.4	Engine Error Codes	469
8.5	Cab Display Module (CDM) Error Codes	481
8.6	Cab Display Module (CDM) and Windrower Control Module (WCM) Fault Codes.....	484
	Index	485

1 Safety

1.1 Safety Alert Symbols

This safety alert symbol indicates important safety messages in this manual and on safety signs on the .

This symbol means:

- **ATTENTION!**
- **BECOME ALERT!**
- **YOUR SAFETY IS INVOLVED!**

Carefully read and follow the safety message accompanying this symbol.

Why is safety important to you?

- Accidents disable and kill
- Accidents cost
- Accidents can be avoided



Figure 1.1: Safety Symbol

1.2 Signal Words

Three signal words, *DANGER*, *WARNING*, and *CAUTION*, are used to alert you to hazardous situations. The appropriate signal word for each situation has been selected using the following guidelines:

DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It may also be used to alert against unsafe practices.

CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may be used to alert against unsafe practices.

1.3 General Safety

CAUTION

The following are general farm safety precautions that should be part of your operating procedure for all types of machinery.

Protect yourself.

- When assembling, operating, and servicing machinery, wear all the protective clothing and personal safety devices that **could** be necessary for the job at hand. Don't take chances. You may need the following:
 - Hard hat
 - Protective footwear with slip resistant soles
 - Protective glasses or goggles
 - Heavy gloves
 - Wet weather gear
 - Respirator or filter mask
- Be aware that exposure to loud noises can cause hearing impairment or loss. Wear suitable hearing protection devices such as ear muffs or ear plugs to help protect against objectionable or loud noises.

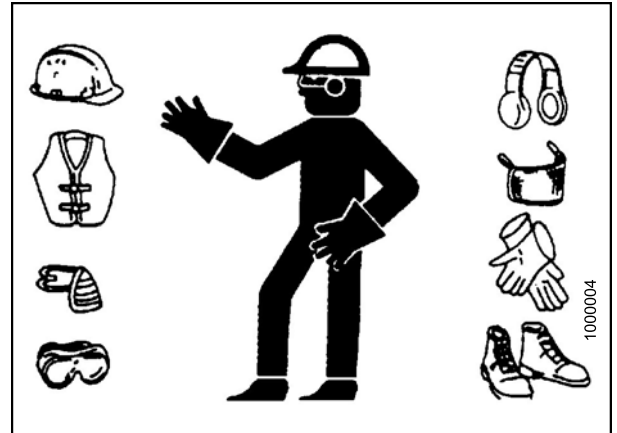


Figure 1.2: Safety Equipment



Figure 1.3: Safety Equipment

- Provide a first aid kit for use in case of emergencies.
- Keep a fire extinguisher on the machine. Be sure the fire extinguisher is properly maintained. Be familiar with its proper use.
- Keep young children away from the machinery at all times.
- Be aware that accidents often happen when the Operator is tired or in a hurry. Take the time to consider the safest way. Never ignore the warning signs of fatigue.

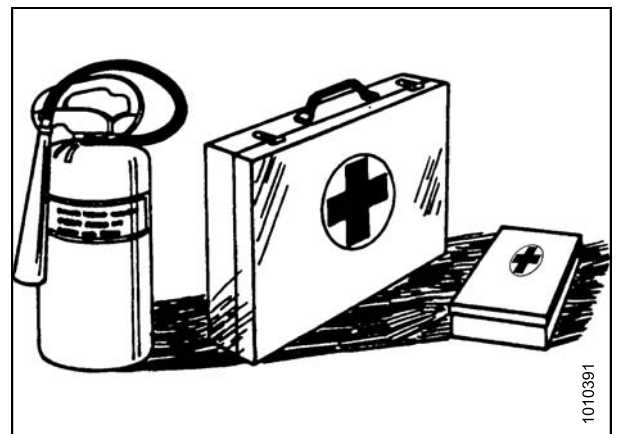


Figure 1.4: Safety Equipment

SAFETY

- Wear close-fitting clothing and cover long hair. Never wear dangling items such as scarves or bracelets.
- Keep all shields in place. Never alter or remove safety equipment. Make sure driveline guards can rotate independently of the shaft and can telescope freely.
- Use only service and repair parts made or approved by the equipment manufacturer. Substituted parts may not meet strength, design, or safety requirements.



Figure 1.5: Safety Around Equipment

- Keep hands, feet, clothing, and hair away from moving parts. Never attempt to clear obstructions or objects from a machine while the engine is running.
- Do **NOT** modify the machine. Non-authorized modifications may impair machine function and/or safety. It may also shorten the machine's life.
- To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

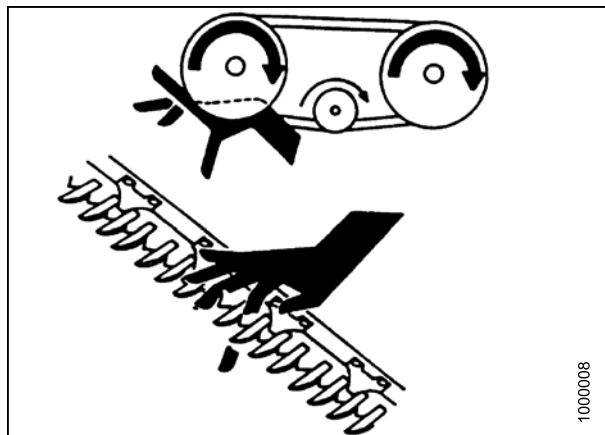


Figure 1.6: Safety Around Equipment

- Keep the service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment. Be sure all electrical outlets and tools are properly grounded.
- Keep work area well lit.
- Keep machinery clean. Straw and chaff on a hot engine is a fire hazard. Do **NOT** allow oil or grease to accumulate on service platforms, ladders, or controls. Clean machines before storage.
- Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials may be toxic and/or flammable.
- When storing machinery, cover sharp or extending components to prevent injury from accidental contact.



Figure 1.7: Safety Around Equipment

1.4 Maintenance Safety

To ensure your safety while maintaining the machine:

- Review the operator's manual and all safety items before operation and/or maintenance of the machine.
- Place all controls in Neutral, stop the engine, set the park brake, remove the ignition key, and wait for all moving parts to stop before servicing, adjusting, and/or repairing.
- Follow good shop practices:
 - Keep service areas clean and dry
 - Be sure electrical outlets and tools are properly grounded
 - Use adequate lighting for the job at hand
- Relieve pressure from hydraulic circuits before servicing and/or disconnecting the machine.
- Make sure all components are tight and that steel lines, hoses, and couplings are in good condition before applying pressure to hydraulic systems.
- Keep hands, feet, clothing, and hair away from all moving and/or rotating parts.
- Clear the area of bystanders, especially children, when carrying out any maintenance, repairs or, adjustments.
- Install transport lock or place safety stands under the frame before working under the .
- If more than one person is servicing the machine at the same time, be aware that rotating a driveline or other mechanically-driven component by hand (for example, accessing a lube fitting) will cause drive components in other areas (belts, pulleys, and knives) to move. Stay clear of driven components at all times.
- Wear protective gear when working on the machine.
- Wear heavy gloves when working on knife components.



Figure 1.8: Safety Around Equipment

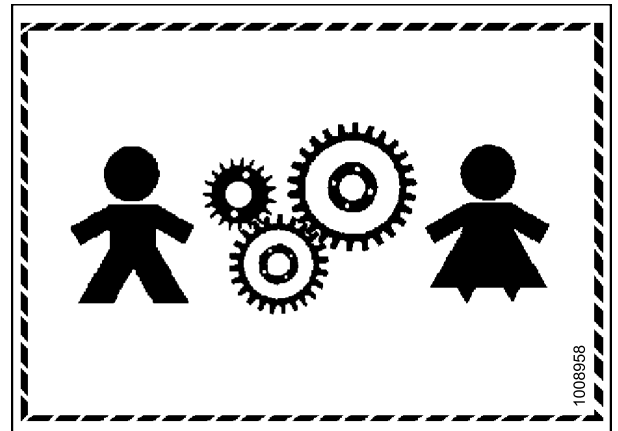


Figure 1.9: Equipment NOT Safe for Children

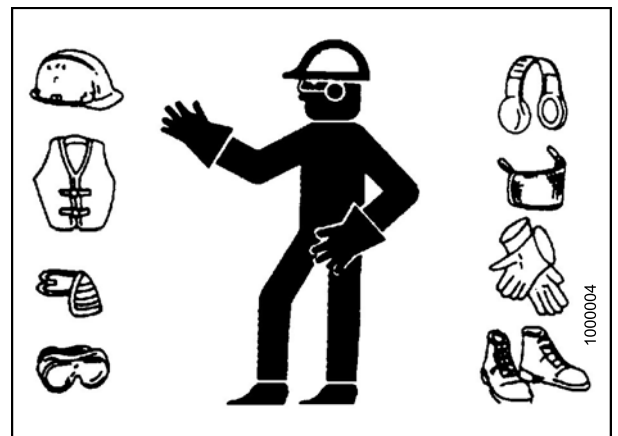


Figure 1.10: Safety Equipment

1.5 Hydraulic Safety

- Always place all hydraulic controls in Neutral before dismounting.
- Make sure that all components in the hydraulic system are kept clean and in good condition.
- Replace any worn, cut, abraded, flattened, or crimped hoses and steel lines.
- Do **NOT** attempt any makeshift repairs to the hydraulic lines, fittings, or hoses by using tapes, clamps, cements, or welding. The hydraulic system operates under extremely high pressure. Makeshift repairs will fail suddenly and create hazardous and unsafe conditions.

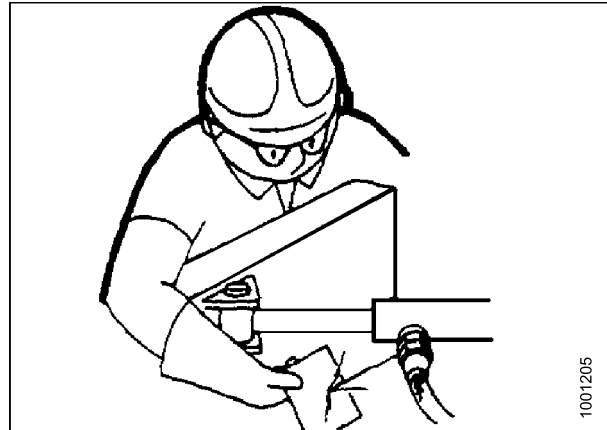


Figure 1.11: Testing for Hydraulic Leaks

- Wear proper hand and eye protection when searching for high-pressure hydraulic leaks. Use a piece of cardboard as a backstop instead of hands to isolate and identify a leak.
- If injured by a concentrated high-pressure stream of hydraulic fluid, seek medical attention immediately. Serious infection or toxic reaction can develop from hydraulic fluid piercing the skin.



Figure 1.12: Hydraulic Pressure Hazard

- Make sure all components are tight and steel lines, hoses, and couplings are in good condition before applying pressure to a hydraulic system.

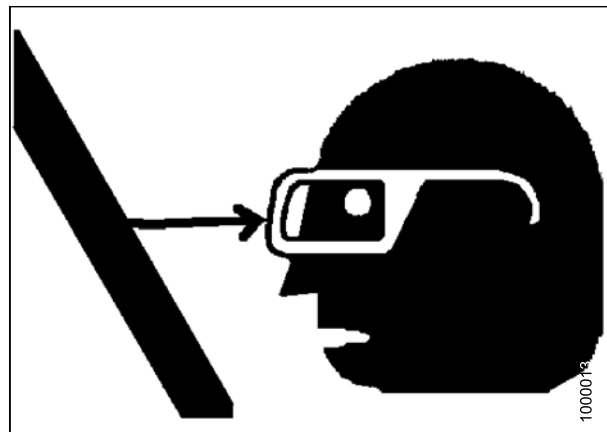


Figure 1.13: Safety Around Equipment

1.6 Tire Safety

- Follow proper procedures when mounting a tire on a wheel or rim. Failure to do so can produce an explosion that may result in serious injury or death.

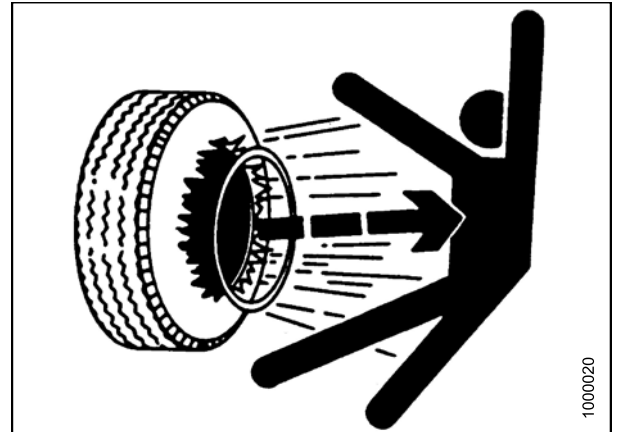


Figure 1.14: Overinflated Tire

- Do **NOT** attempt to mount a tire unless you have the proper training and equipment.
- Have a qualified tire dealer or repair service perform required tire maintenance.



Figure 1.15: Safely Filling a Tire with Air

1.7 Battery Safety

WARNING

- Keep all sparks and flames away from the batteries, as a gas given off by electrolyte is explosive.
- Ventilate when charging in enclosed space.

WARNING

- Wear safety glasses when working near batteries.
- Do NOT tip batteries more than 45° to avoid electrolyte loss.
- Battery electrolyte causes severe burns. Avoid contact with skin, eyes, or clothing.
- Electrolyte splashed into the eyes is extremely dangerous. Should this occur, force the eye open, and flood with cool, clean water for five minutes. Call a doctor immediately.
- If electrolyte is spilled or splashed on clothing or the body, neutralize it immediately with a solution of baking soda and water, then rinse with clear water.

WARNING

- To avoid injury from spark or short circuit, disconnect battery ground cable before servicing and part of electrical system.
- Do NOT operate the engine with alternator or battery disconnected. With battery cables disconnected and engine running, a high voltage can be built up if terminals touch the frame. Anyone touching the frame under these conditions would be severely shocked.
- When working around storage batteries, remember that all of the exposed metal parts are live. Never lay a metal object across the terminals because a spark or short circuit will result.
- Keep batteries out of reach of children.



Figure 1.16: Safety Around Batteries

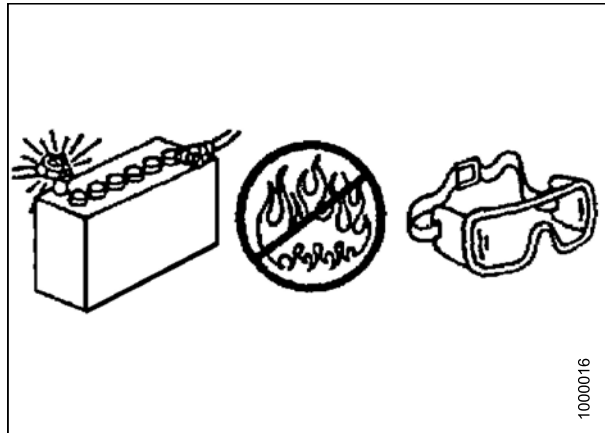


Figure 1.17: Safety Around Batteries

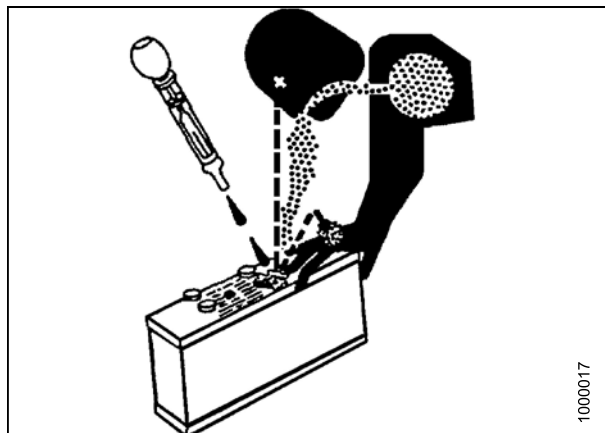


Figure 1.18: Safety Around Batteries

1.8 Welding Precaution

High currents and voltage spikes associated with welding can cause damage to electronic components. Before welding on any part of the windrower or an attached mower conditioner, disconnect all electronic module harness connections as well as the battery cables. Refer to your Dealer for proper procedures.

1.9 Engine Safety

WARNING

Do NOT use aerosol types of starting aids such as ether. Such use could result in an explosion and personal injury.

CAUTION

- In the initial start-up of a new, serviced, or repaired engine, always be ready to shut the engine off in order to stop an over-speed. This may be accomplished by shutting off the air and/or fuel supply to the engine. Over-speed shut down should occur automatically for engines that are controlled electronically.
- Do NOT bypass or disable the automatic shutoff circuits. The circuits are provided in order to help prevent personal injury. The circuits are also provided in order to help prevent engine damage. Refer to your Dealer for repairs and adjustments.
- Inspect the engine for potential hazards.
- Before starting the engine, ensure that no one is on, underneath, or close to the engine. Ensure that people clear the area.
- All protective guards and all protective covers must be installed if the engine must be started in order to perform service procedures.
- To help prevent an accident that is caused by parts in rotation, work around the parts carefully.
- If a warning tag is attached to the engine start switch or to the controls, do NOT start the engine or move the controls. Consult with the person who attached the warning tag before the engine is started.
- Start the engine from the operator's compartment. Always start the engine according to the procedure that is described in the Starting the Engine section of the operator's manual. Knowing the correct procedure will help to prevent major damage to the engine components and prevent personal injury.
- To ensure that the jacket water heater (if equipped) and/or the lube oil heater (if equipped) is working correctly, check the water temperature gauge and/or the oil temperature gauge during the heater operation. Engine exhaust contains products of combustion which can be harmful to your health. Always start the engine and operate the engine in a well ventilated area. If the engine is started in an enclosed area, vent the engine exhaust to the outside.

NOTE:

The engine may be equipped with a device for cold starting. If the engine will be operated in very cold conditions, then an additional cold starting aid may be required. Normally, the engine will be equipped with the correct type of starting aid for your region of operation.

1.9.1 High Pressure Rails

CAUTION

Contact with high pressure fuel may cause fluid penetration and burn hazards. High pressure fuel spray may cause a fire hazard. Failure to follow these inspection, maintenance, and service instructions may cause personal injury or death.

1.9.2 Engine Electronics

WARNING

Tampering with the electronic system installation or the original equipment manufacturer (OEM) wiring installation can be dangerous and could result in personal injury or death and/or engine damage.

WARNING

Electrical Shock Hazard. The electronic unit injectors use DC voltage. The engine control module (ECM) sends this voltage to the electronic unit injectors. Do NOT come in contact with the harness connector for the electronic unit injectors while the engine is operating. Failure to follow this instruction could result in personal injury or death.

This engine has a comprehensive, programmable engine monitoring system. The ECM has the ability to monitor the engine operating conditions. If conditions exceed the allowable range, the ECM will initiate an immediate action.

The following actions are available for engine monitoring control:

- Warning
- Derate
- Shutdown

The following monitored engine operating conditions have the ability to limit engine speed and/or the engine power:

- Engine coolant temperature
- Engine oil pressure
- Engine speed
- Intake manifold air temperature

The engine monitoring package can vary for different engine models and different engine applications. However, the monitoring system and the engine monitoring control will be similar for all engines. Together, the two controls provide the engine monitoring function for the specific engine application.

SAFETY

1.10 Safety Signs

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or become illegible.
- If original parts on which a safety sign was installed are replaced, be sure the repair part also bears the current safety sign.
- Safety signs are available from your Dealer Parts Department.

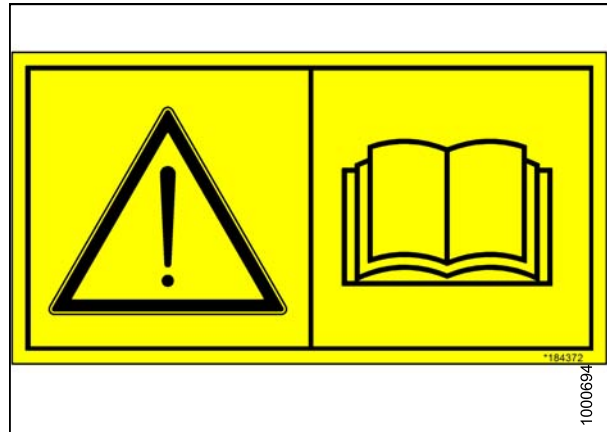


Figure 1.19: Operator's Manual Decal

1.10.1 Installing Safety Decals

1. Clean and dry the installation area.
2. Decide on the exact location before you remove the decal backing paper.
3. Remove the smaller portion of the split backing paper.
4. Place the sign in position and slowly peel back the remaining paper, smoothing the sign as it is applied.
5. Prick small air pockets with a pin and smooth out.

1.11 Safety Sign Locations

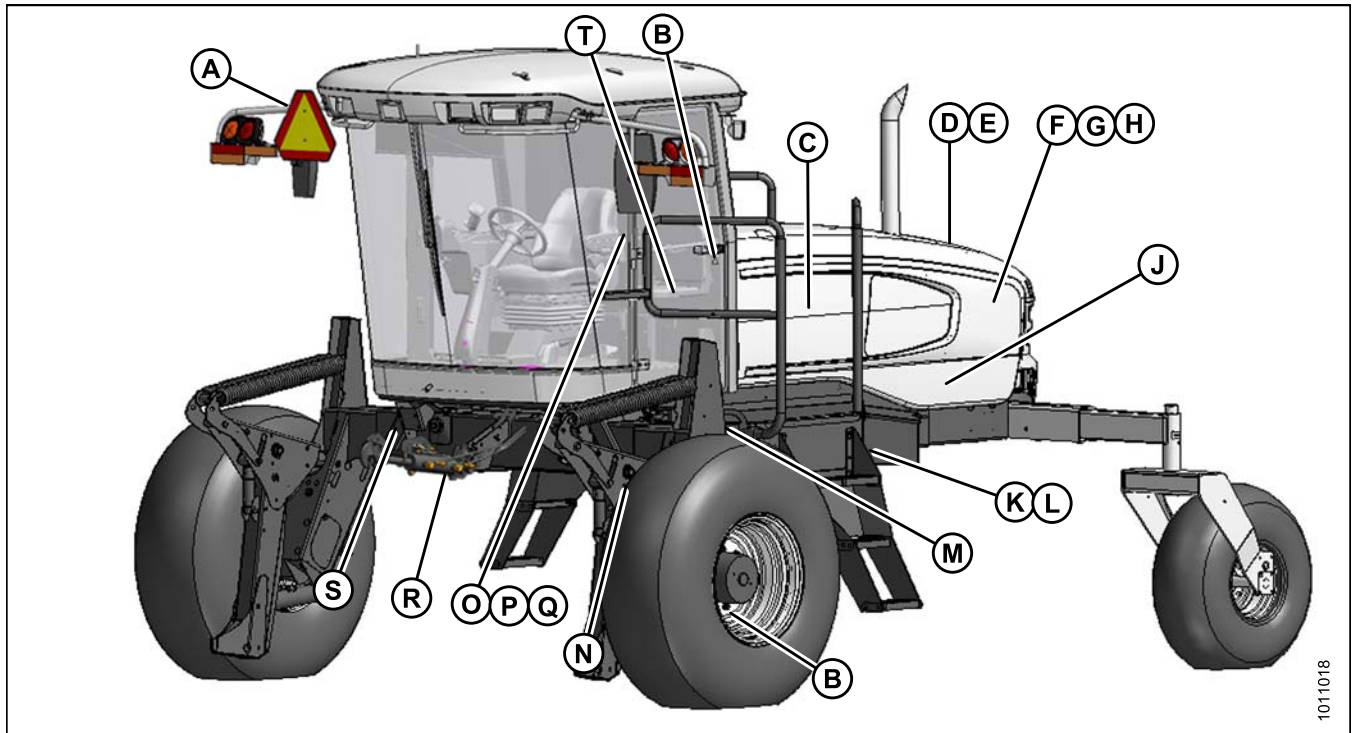


Figure 1.20: Safety Sign Locations (Left Cab-forward Side)

A - Hazard Sign (MD #135378)

D - Exhaust Cover (MD #166450)

G - Fan Shroud (Middle) (MD #166451)

K - Platform (L of Step) (MD #166425)

N - Lift Linkage (MD #166438)

Q - Inner Post (MD #166463)

T - Trainers Seat (MD #167502)

B - Cab Door and Rim (MD #166454)

E - Close to Radiator Cap (MD #166461)

H - Fan Shroud (Bottom) (MD #166452)

L - Platform (R of Step) (MD #166441)

O - Inner Post (MD #166457)

R - Neutral Interlock (MD #166425)

C - Oil Reservoir under Hood (MD #166466)

F - Fan Shroud (Top) (MD #166450)


J - Frame Opening (MD #166233)

M - Frame at Valve Block (MD #166466)

P - Inner Post (MD #166234)

S - Frame (MD #166425)


SAFETY

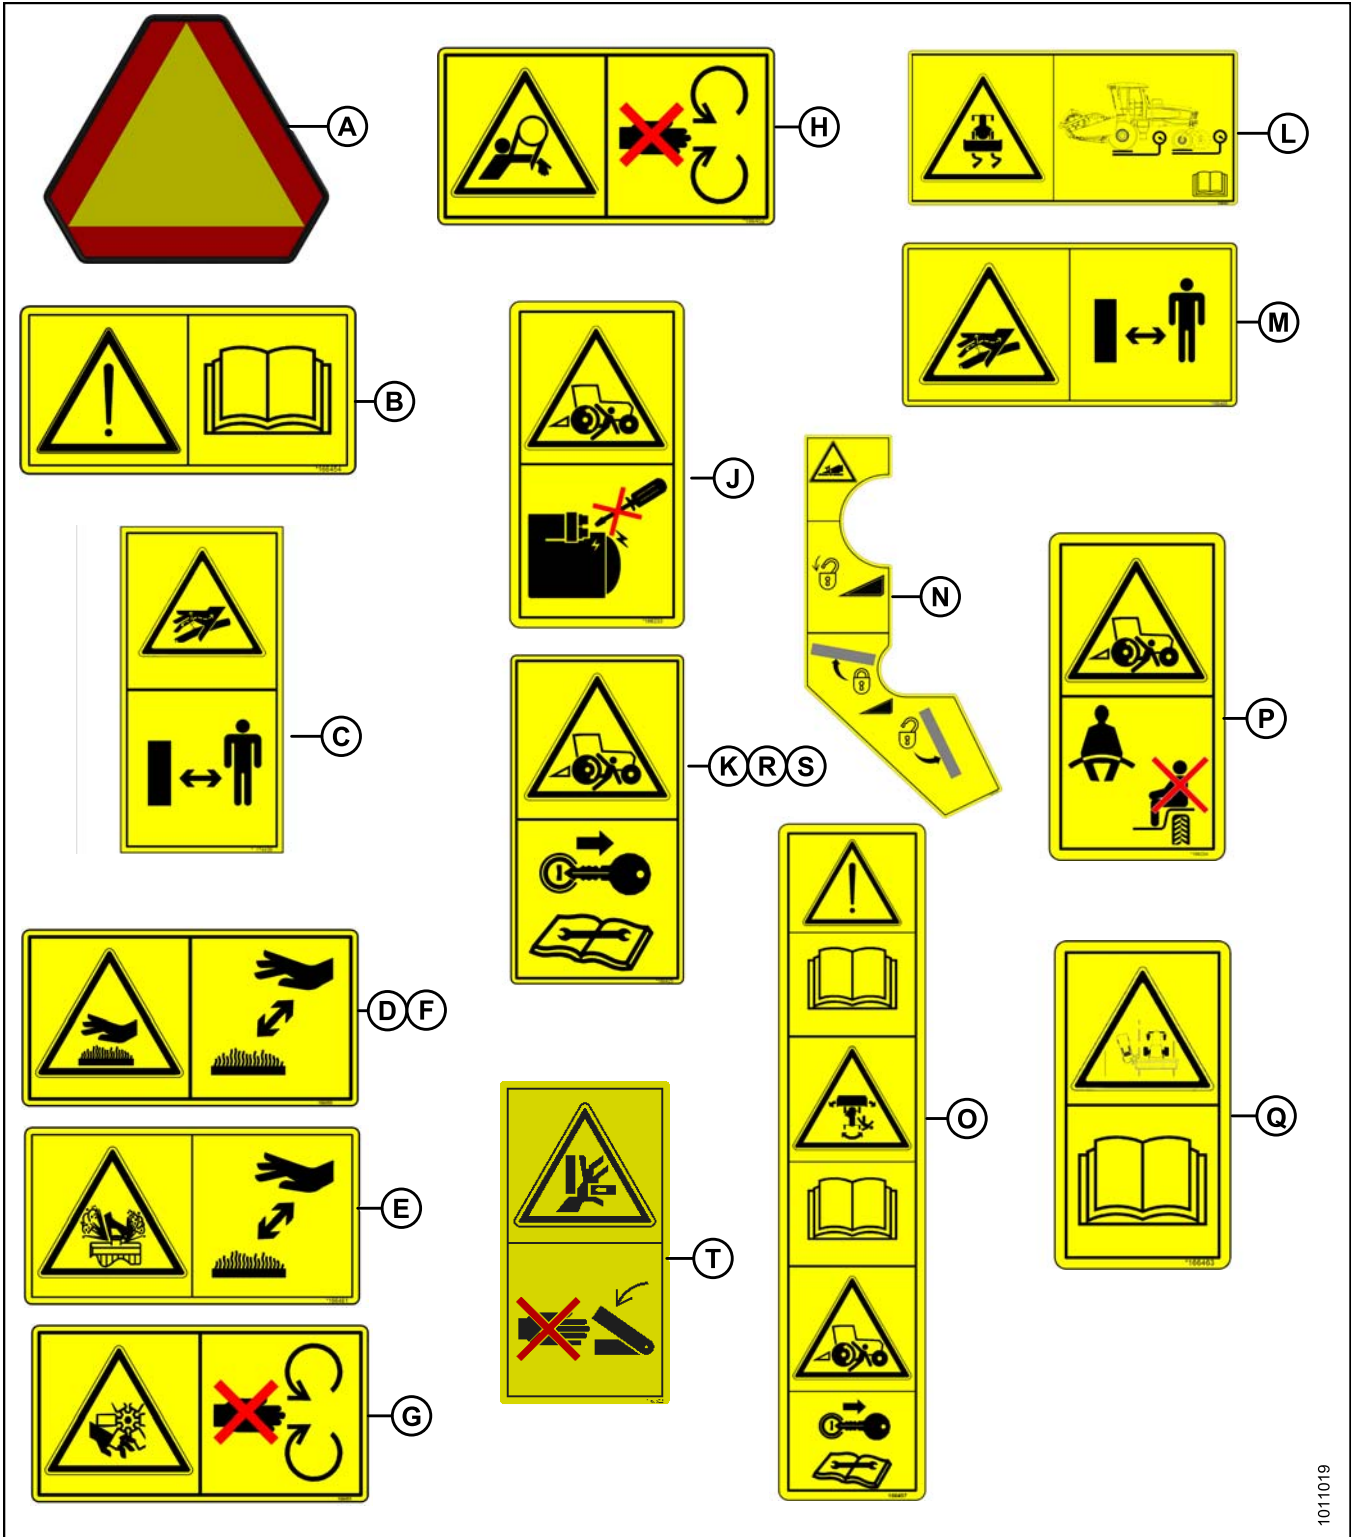

1011019

Figure 1.21: Safety Signs (Left Cab-forward Side)

SAFETY

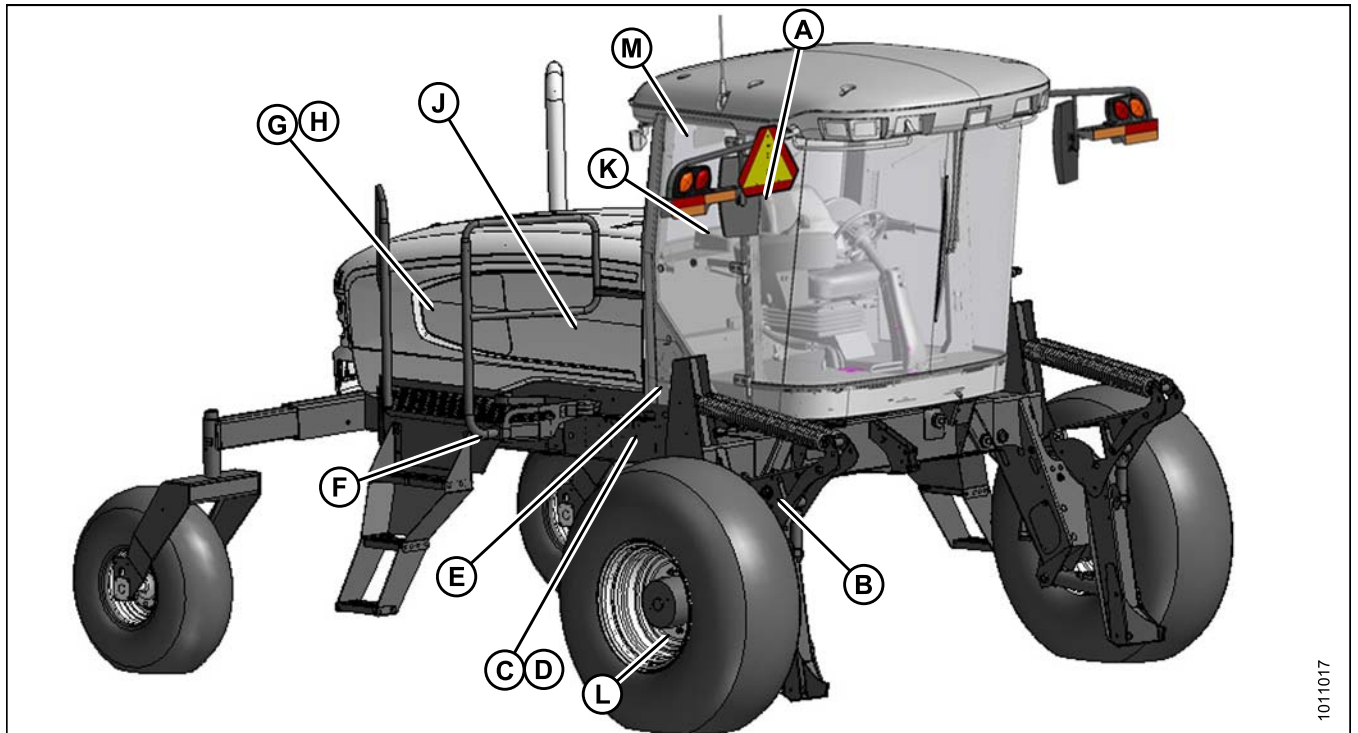

1011017


Figure 1.22: Safety Sign Locations (Right Cab-forward Side)

A - Hazard Sign on Seat (MD #115148)
D - Frame (MD #166456)
G - Shroud (MD #166451)
K - Wiper Cover (MD #166465)

B - Lift Linkage (MD #166439)
E - Cab Frame (MD #184372)
H - Shroud (MD #166452)
L - Rim (MD #166454 [similar to [E]])

C - Frame (MD #166455)
F - Platform (MD #166425)
J - Hydraulic Reservoir (MD #174436)
M - Window (MD #167504)

SAFETY

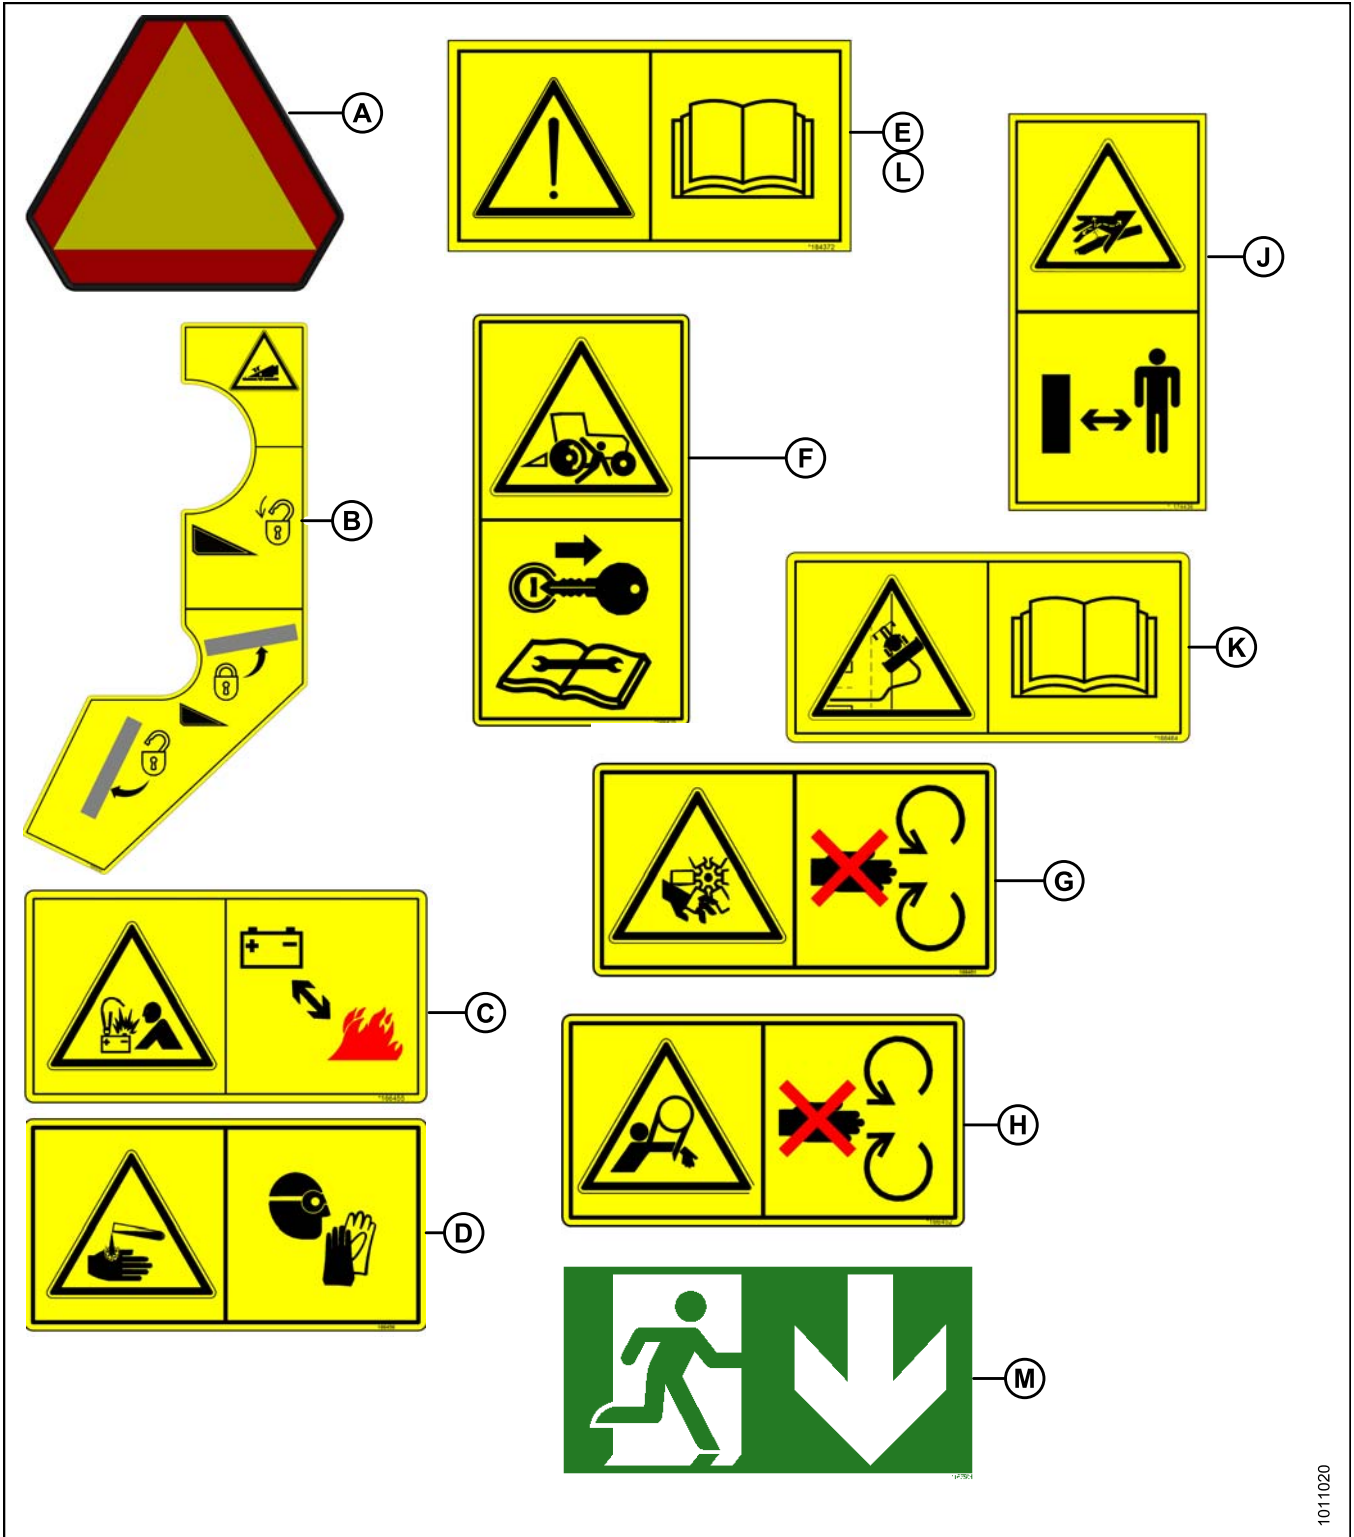

1011020

Figure 1.23: Safety Signs (Right Cab-forward Side)

1.12 Understanding Safety Signs

MD #166233

Run-over hazard

DANGER

- Do not start engine by shorting across starter or starter relay terminals. Machine will start with drive engaged and move if starting circuitry is bypassed.
- Start engine only from operator's seat. Do not try to start engine with someone under or near machine.



Figure 1.24: MD #166233

MD #166234

Run-over hazard

WARNING

- The training seat is provided for an experienced Operator of the machine when a new Operator is being trained.
- The training seat is not intended as a passenger seat or for use by children.
- Use the seat belt whenever operating the machine or riding as a trainer.
- Keep all other riders off the machine.



Figure 1.25: MD #166234

MD #166425

Run-over hazard

WARNING

- Remove key from ignition.
- Read the tractor and mower manufacturer's manuals for inspection and maintenance instructions.
- Read the windrower and header manuals for inspection and maintenance instructions.

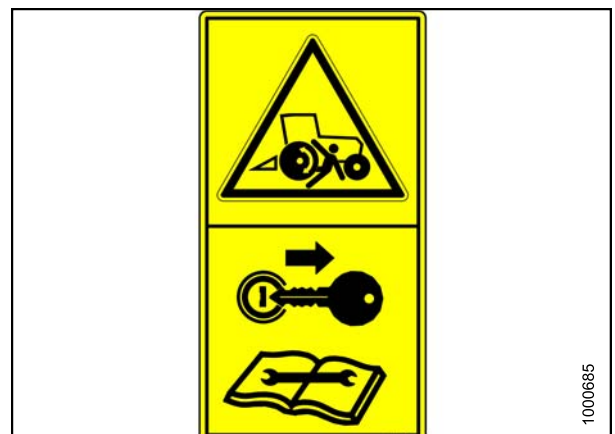


Figure 1.26: MD #166425

SAFETY

MD #166439

Roll-over hazard

WARNING

- Stop the engine and remove the key from ignition before servicing, adjusting, lubricating, cleaning, or unplugging the machine.

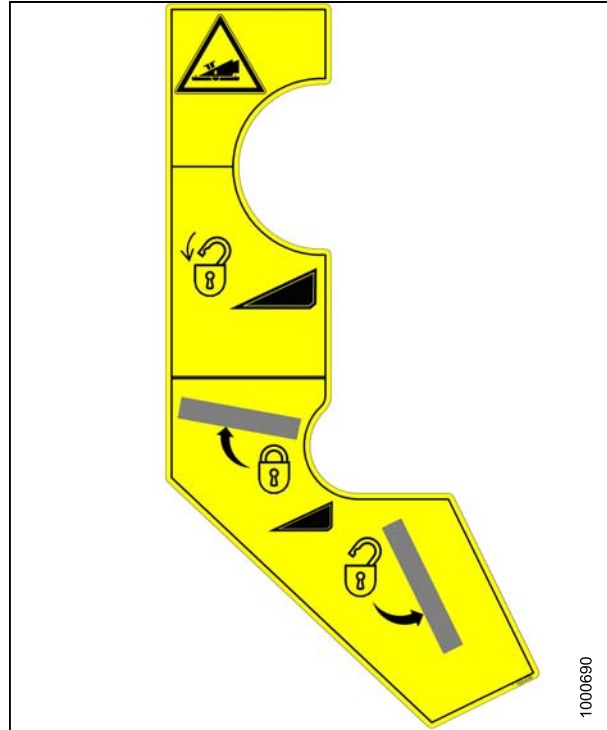


Figure 1.27: MD #166439

MD #166438

Crushing hazard

DANGER

- Rest header on ground or engage safety props before going under unit.

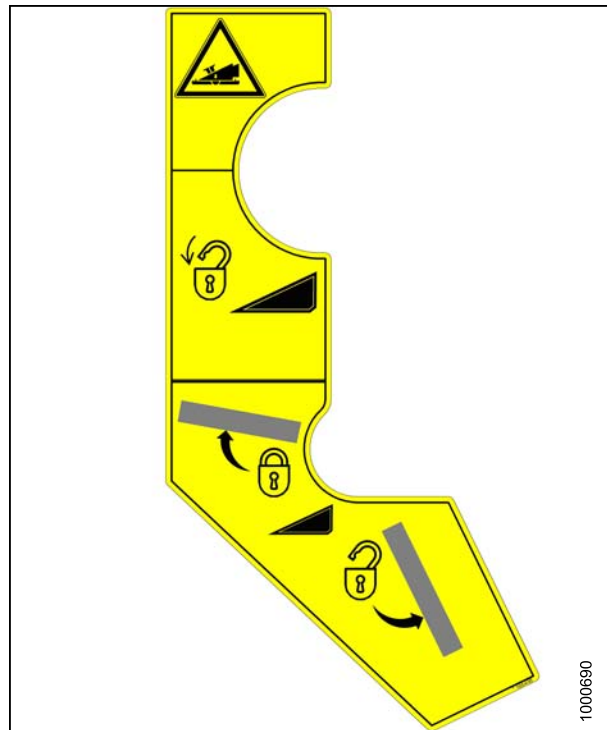


Figure 1.28: MD #166438

SAFETY

MD #166439

Crushing hazard

DANGER

- Rest header on ground or engage safety props before going under unit.

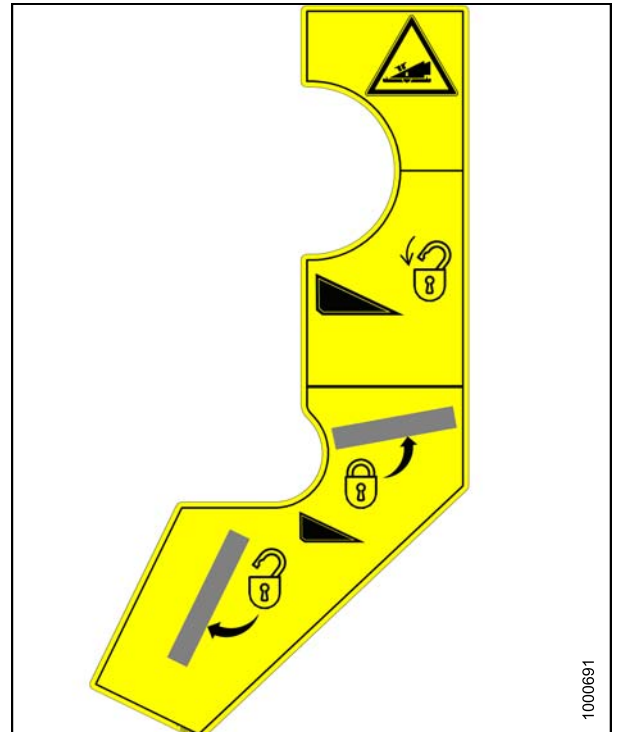


Figure 1.29: MD #166439

MD #166441

Loss of control hazard

CAUTION

- To prevent machine damage and/or loss of control, it is essential that the machine be equipped such that weights are within the specified limits.

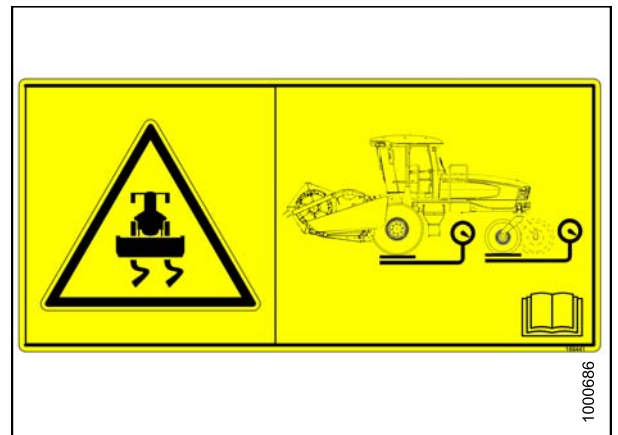


Figure 1.30: MD #166441

SAFETY

MD #166450

Hot surface hazard

WARNING

- To avoid injury, keep a safe distance from hot surface.

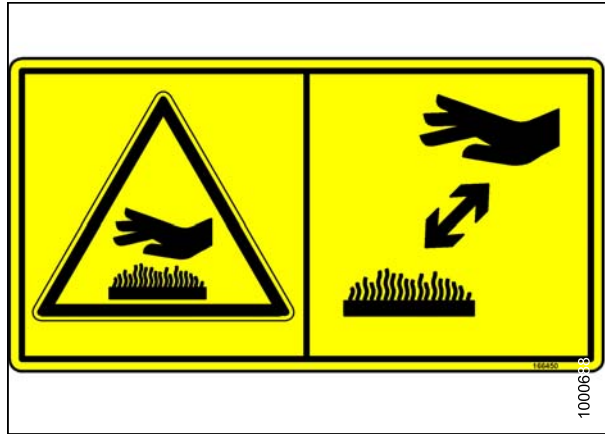


Figure 1.31: MD #166450

MD #166451

Rotating fan hazard

WARNING

- To avoid injury, stop the engine and remove the key before opening engine hood.

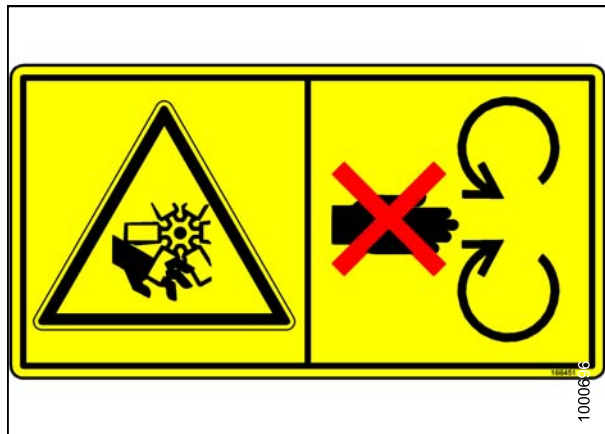


Figure 1.32: MD #166451

SAFETY

MD #166454

General hazard pertaining to machine operation and servicing.

CAUTION

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do not allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of machine before starting engine and during operation.
- Keep riders off the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage header drive, put transmission in Neutral, and wait for all movement to stop before leaving operator's position.
- Shut off the engine and remove the key from ignition before servicing, adjusting, lubricating, cleaning, or unplugging machine.
- Engage locks to prevent lowering of header or reel before servicing in the raised position.
- Use slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

MD #166455

Explosion hazard

WARNING

- Prevent serious bodily injury caused by explosive battery gases.
- Keep sparks and flames away from the battery.
- Refer to operator's manual for battery boosting and charging procedures.

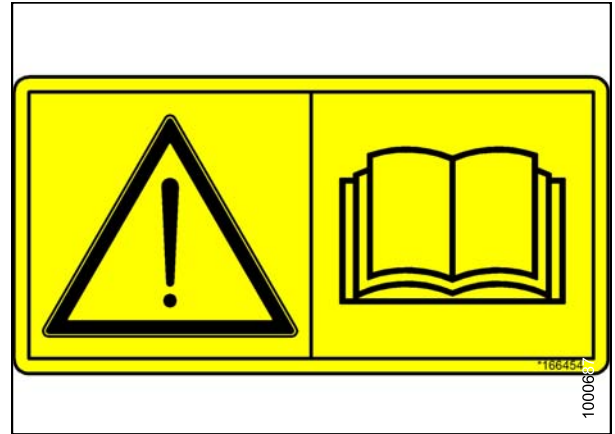


Figure 1.33: MD #166454

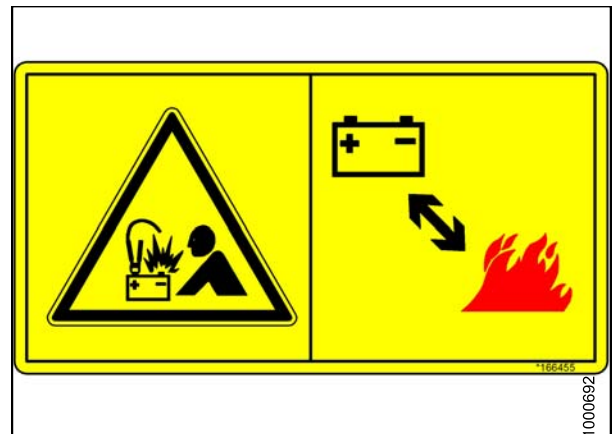


Figure 1.34: MD #166455

SAFETY

MD #166456

Battery acid hazard

WARNING

- Corrosive and poisonous battery acid. Acid can severely burn your body and clothing.



Figure 1.35: MD #166456

SAFETY

MD #166457

General hazard pertaining to machine operation and servicing

CAUTION

To avoid injury or death from improper or unsafe machine operation:

- Read the operator's manual and follow all safety instructions. If you do not have a manual, obtain one from your Dealer.
- Do not allow untrained persons to operate the machine.
- Review safety instructions with all Operators every year.
- Ensure that all safety signs are installed and legible.
- Make certain everyone is clear of machine before starting engine and during operation.
- Keep riders off the machine.
- Keep all shields in place and stay clear of moving parts.
- Disengage header drive, put transmission in Neutral and wait for all movement to stop before leaving operator's position.
- Shut off the engine and remove the key from ignition before servicing, adjusting, lubricating, cleaning, or unplugging machine.
- Engage locks to prevent lowering of header or reel before servicing in the raised position.
- Use slow moving vehicle emblem and flashing warning lights when operating on roadways unless prohibited by law.

Run-over hazard

WARNING

- Machine will move if steering wheel is turned while engine is running.
- Steering response is opposite to what is normally expected when backing up. Turn bottom of steering wheel in direction you want to go.
- Always move ground speed lever to slow end of range before shifting high-low speed control.
- Stop the engine and remove the key from ignition before servicing, adjusting, lubricating, cleaning, or unplugging the machine.

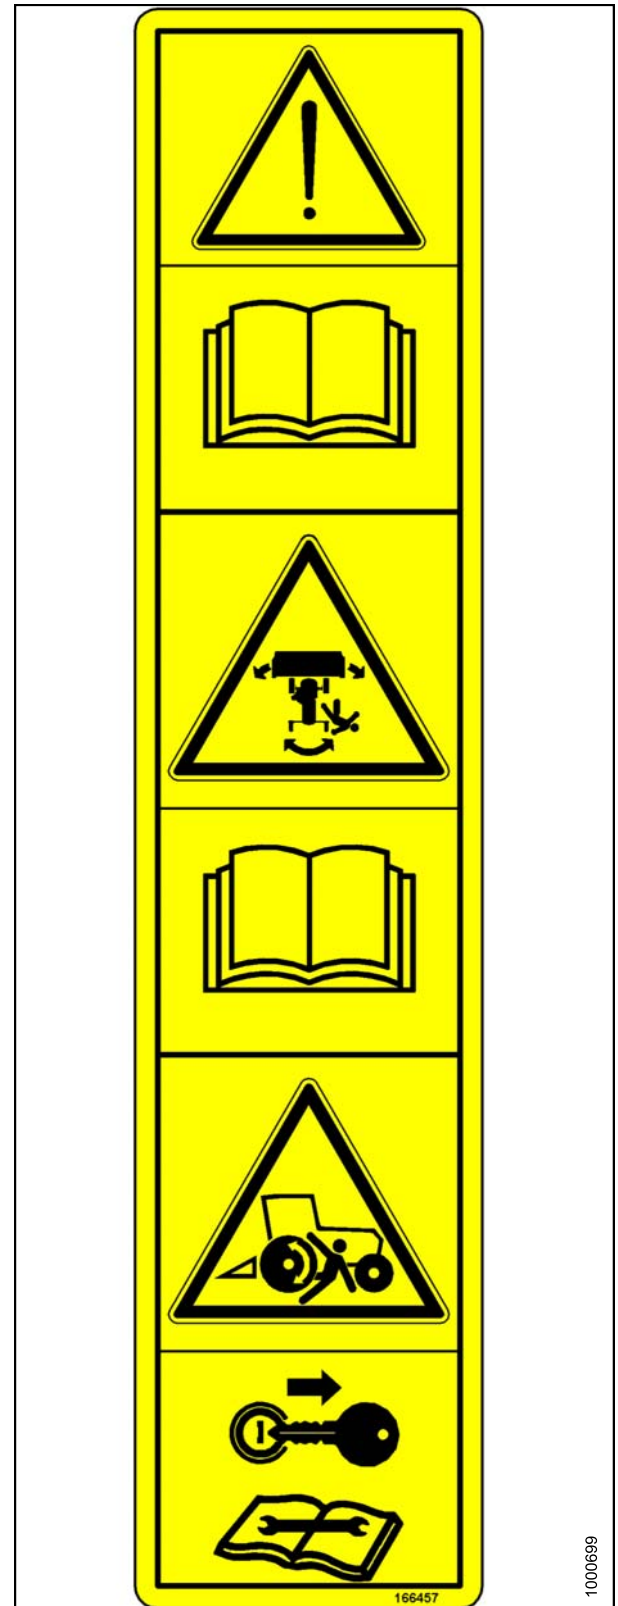


Figure 1.36: MD #166457

SAFETY

MD #166461

Hot fluid under pressure hazard

CAUTION

- Coolant is under pressure and may be hot. Never remove radiator cap when engine is hot.

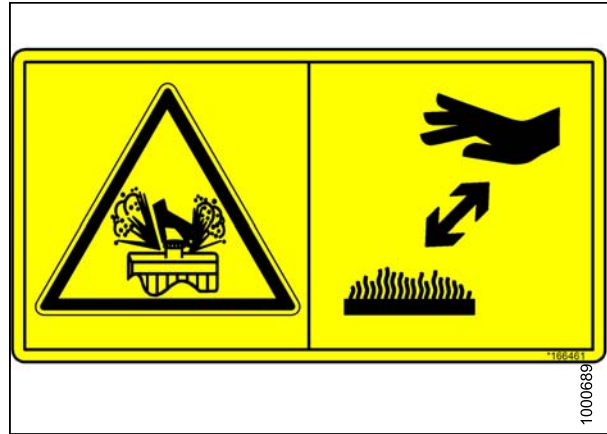


Figure 1.37: MD #166461

MD #166463

Collision hazard in transport

WARNING

- Collision between windrower and other vehicles may result in injury or death.

When driving windrower on public roadways:

- Obey all highway traffic regulations in your area. Use pilot vehicles front and rear of windrower if required by law.
- Use slow moving vehicle emblem and flashing warning lights unless prohibited by law.
- If width of attached header impedes other vehicle traffic, remove header and install MacDon approved weight box. Refer to operator's manual for safe procedure to tow header.



Figure 1.38: MD #166463

SAFETY

MD #166465

Loss of control hazard

WARNING

To avoid serious injury or death from loss of control:

- Do not make abrupt changes in steering direction.
- Anticipate turns by slowing down well in advance.
- Do not rapidly accelerate or decelerate while turning.
- Limit speed to maximum 20 mph (32 km/h) when towing a header. To ensure steering control, refer to operator's manual for adding weight to drive wheels.

When travelling on steep slopes:

- Reduce speed and lower header.
- Move ground speed lever to slow end of range.
- Shift high-low speed control to low range.

With header removed, steering control is reduced if weight is not added to drive wheels. If you must drive the windrower without header or MacDon weight system:

- Operate in low speed range.
- Avoid slopes.
- Do not tow a header. **If control of machine is lost, immediately pull ground speed lever to neutral.**

MD #166466

High pressure oil hazard

WARNING

- Do not go near leaks.
- High pressure oil easily punctures skin causing serious injury, gangrene, or death.
- If injured, seek emergency medical help. Immediate surgery is required to remove oil.
- Do not use finger or skin to check for leaks.
- Lower load or relieve hydraulic pressure before loosening fittings.

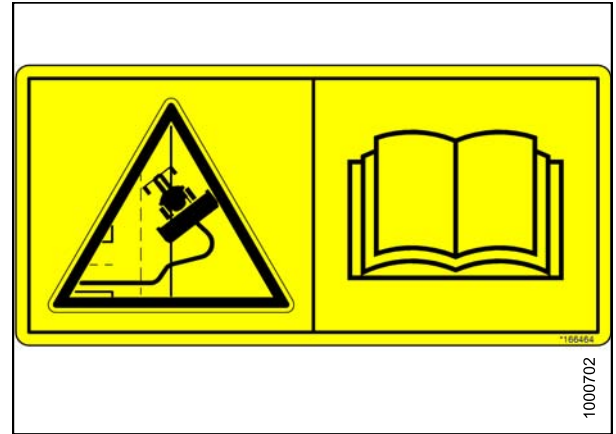


Figure 1.39: MD #166465



Figure 1.40: MD #166466

SAFETY

MD #166833

Run-over hazard

WARNING

- Remove key from ignition.
- Read tractor and mower manufacturer's manuals for inspection and maintenance instructions.
- Read the windrower and header manuals for inspection and maintenance instructions.

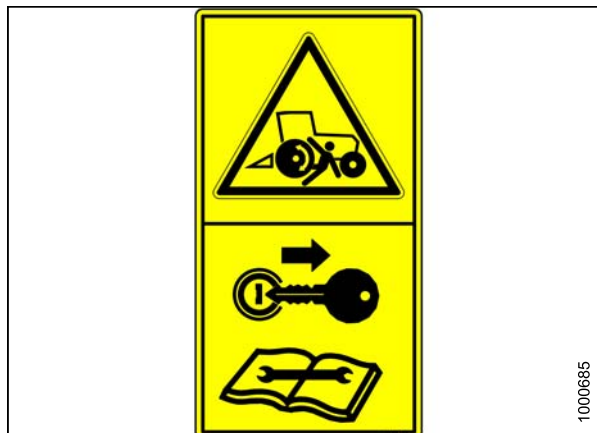


Figure 1.41: MD #166425

MD #167502

Pinch point hazard

WARNING

- To avoid injury, be cautious when opening/closing the training seat to avoid getting pinched.
- Failure to comply could result in death or serious injury.



Figure 1.42: MD #167502

MD #167504

Emergency exit

ATTENTION

- To exit the machine via the secondary door, follow the arrow on the running man sign.

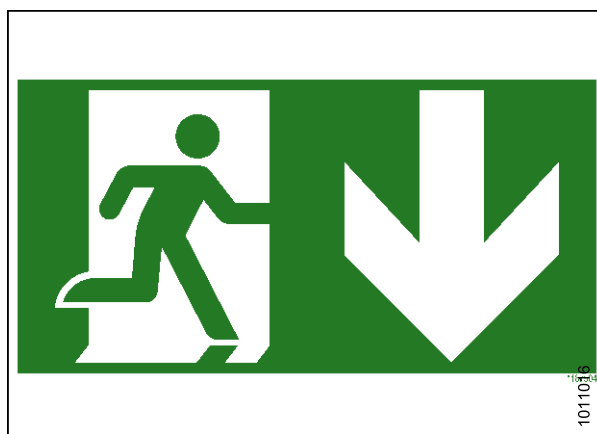


Figure 1.43: MD #167504

SAFETY

MD #174436

High pressure oil hazard

WARNING

- Do not go near leaks.
- High pressure oil easily punctures skin causing serious injury, gangrene, or death.
- If injured, seek emergency medical help. Immediate surgery is required to remove oil.
- Do not use finger or skin to check for leaks.
- Lower load or relieve hydraulic pressure before loosening fittings.



Figure 1.44: MD #174436

MD #190546

Slippery surface

WARNING

- Do not use this area as a step or platform.
- Failure to comply could result in serious injury or death.



Figure 1.45: MD #190546

2 Product Overview

2.1 Definitions

The following terms and acronyms may be used in this manual.

Term	Definition
A-Series header	MacDon auger header
API	American Petroleum Institute
ASTM	American Society of Testing and Materials
Bolt	A headed and externally threaded fastener that is designed to be paired with a nut
Cab-forward	Windrower operation with the Operator and cab facing in the direction of travel
CDM	Cab display module on a self-propelled windrower
Center-link	A hydraulic cylinder or manually adjustable turnbuckle type link between the header and the machine to which it is attached: It is used to change header angle
CGVW	Combined vehicle gross weight
D-Series header	MacDon D50, D60, and D65 rigid draper headers
DWA	Double Windrow Attachment
ECM	Engine control module
Engine-forward	Windrower operation with the Operator and engine facing in the direction of travel
Finger tight	Finger tight is a reference position where sealing surfaces or components are making contact with each other and the fitting has been tightened to a point where the fitting is no longer loose
FFFT	Flats from finger tight
GSL	Ground speed lever
GVW	Gross vehicle weight
Hard joint	A joint made with the use of a fastener where the joining materials are highly incompressible
Header	A machine that cuts and lays crop into a windrow and is attached to a self-propelled windrower
Hex key	A hex key or Allen key (also known by various other synonyms) is a tool of hexagonal cross-section used to drive bolts and screws that have a hexagonal socket in the head (internal-wrenching hexagon drive)
hp	Horsepower
ISC	Intermediate Speed Control
JIC	Joint Industrial Council: A standards body that developed the standard sizing and shape for original 37° flared fitting
Knife	A cutting device which uses a reciprocating cutter (also called a sickle)
n/a	Not applicable
Nut	An internally threaded fastener that is designed to be paired with a bolt
N-DETENT	The slot opposite the NEUTRAL position on operator's console

PRODUCT OVERVIEW

Term	Definition
NPT	National Pipe Thread: A style of fitting used for low pressure port openings Threads on NPT fittings are uniquely tapered for an interference fit
ORB	O-ring boss: A style of fitting commonly used in port opening on manifolds, pumps, and motors
ORFS	O-ring face seal: A style of fitting commonly used for connecting hoses and tubes This style of fitting is also commonly called ORS, which stands for O-ring seal
PTO	Power take-off
rpm	Revolutions per minute
R-Series header	MacDon rotary disc header
RoHS (Reduction of Hazardous Substances)	A directive by the European Union to restrict the use of certain hazardous substances (such as hexavalent chromium used in some yellow zinc platings)
SAE	Society of Automotive Engineers
Screw	A headed and externally threaded fastener that threads into preformed threads or forms its own thread in one of the mating parts
Self-Propelled (SP) Windrower	Self-propelled machine consisting of a power unit with a header
Soft joint	A joint made with the use of a fastener where the joining materials are compressible or experience relaxation over a period of time
spm	Strokes per minute
Tractor	Agricultural type tractor
Truck	A four-wheel highway/road vehicle weighing no less than 7500 lbs (3400 kg)
Tension	Axial load placed on a bolt or screw, usually measured in pounds (lb) or Newtons (N)
TFFT	Turns from finger tight
Torque	The product of a force X lever arm length, usually measured in foot-pounds (ft·lbf) or Newton-meters (N·m)
Torque angle	A tightening procedure where the fitting is assembled to a precondition (finger tight) and then the nut is turned further a number of degrees or a number of flats to achieve its final position
Torque-tension	The relationship between the assembly torque applied to a piece of hardware and the axial load it induces in the bolt or screw
UCA	Upper cross auger
Washer	A thin cylinder with a hole or slot located in the center that is to be used as a spacer, load distribution element, or a locking mechanism
Windrower	Power unit of a self-propelled header
WCM	Windrower control module

PRODUCT OVERVIEW

2.2 Specifications

ENGINE		
Type	Cummins QSB-4.5L CM850 4 Cylinder Turbo Diesel. B20 Biodiesel Approved.	
Displacement	275 cu. in. (4.5 L)	
Power	Rated	148 hp (110 kW) @ 2300 rpm
	Peak	156 hp (116 kW) @ 2000 rpm
ELECTRICAL SYSTEM		
Recommended Battery (2)	12 Volt, Maximum Dimension: 13.25 x 7.37 x 9.44 in (334 x 188 x 232 mm). Group Rating 29H or 31A. Heavy Duty / Off Road / Vibration Resistant.	
Minimum CCA per battery (Cold Cranking Amps)	650	
Battery BCI group rating	29H or 31A	
Alternator	130 amp	
Egress Lighting	Standard	
Starter	Wet Type	
Working Lights	11	
TRACTION DRIVE		
Type	Hydrostatic, 3 Speed Electric Shift	
Speed	Field (Cab-Forward)	Low-Range: 0–11 mph (18 km/h), Mid-Range: 0–16 mph (26 km/h)
	Reverse (Cab-Forward)	6 mph (9.6 km/h)
	Transport (Engine-Forward)	High Range: 0–23 mph (37 km/h)
Transmission	Type	2 Piston Pumps: 1 per Drive Wheel.
	Displacement	2.65 cu. in. (44 cc)
	Flow	40 US gpm (167 L/min)
	Pressure	5500 psi (379 bar)
Final Drive	Type	Planetary Gearbox
	Ratio	30.06 : 1
Wheel Motor Displacement	Low Range	4.15 cu. in. (68 cc)
	Mid Range	3.01 cu. in. (50 cc)
	High Range	1.93 cu. in. (32 cc)
SYSTEM CAPACITIES		
Fuel Tank	97 US Gallons (367 L)	
Hydraulic Reservoir	17.2 US Gallons (65 L)	
HEADER DRIVE (Refer to Table 2.1 M155 Hydraulic Pumps , page 33).		

PRODUCT OVERVIEW

HEADER LIFT/TILT		
	Type	Hydraulic Double Acting Cylinders. Tilt - Optional Hydraulic Positioning, Optional Hydraulic Center-Link
	Function	Lift / Tilt / Float
HEADER FLOAT		
	Primary Adjustment	Manual, External, Drawbolt With Springs (1 per side). One Inner Booster Spring On Left Side.
	Fine Adjustment	Hydraulic, In-Cab Switch
	Automatic	Hydraulic, 3 Programmable Settings For All Headers (Deck Shift Compensation On Draper Headers)
CAB		
Type		Spring/Shock Suspension
Dimensions	Width	63 in. (1600 mm)
	Depth	68.3 in. (1735 mm) (at top of window)
	Height	64.6 in. (1640 mm)
	Volume	125 cu. ft. (3540 L)
Seat	Driver	Adjustable Air-Ride Suspension, Seat Belt
	Training	Folding, Cab Mounted, Seat Belt
Windshield Wiper	Front	31.5 in. (800 mm) Blade
	Rear	22 in. (560 mm) Blade
Heater		24,000 Btu/h (7038 W)
Air Conditioning		28,280 Btu/h (8288 W)
Electrical Outlets		One Live, Two On Ignition, One Live/Keyed
Mirrors		One Inside (Transport), Two Outside (Field)
Radio		Two Speakers and Antenna Factory Installed. Radio is Dealer-Installed
SYSTEM MONITORING		
Speeds		Ground (mph or km/h), Engine (rpm), Knife (spm), Disc (rpm), Reel (rpm or mph/km/h), Conveyor (Ref. No.)
Header		Height, Angle, Float, Header Drive Load Gauge
TIRE OPTIONS (Refer to 2.3 Drive Tires, page 34 for options).		
FRAME AND STRUCTURE		
Dimensions		Refer to 2.3 Drive Tires, page 34
Frame to Ground (Crop Clearance)		45.7 in. (1160 mm)
Weight	Base	9610 lbs (4360 kg) ¹
	Maximum GVW	21,500 lbs (9750 kg) ¹
	Maximum CGVW	23,100 lbs (10,480 kg) ¹

1. Weights do not include options.

PRODUCT OVERVIEW

HEADER COMPATIBILITY		
Auger Headers	A30-D, A40-D	All Sizes
Draper Headers	D50, D60, and D65 ²	Up to 35 FT.
Draper Headers	D60 and D65 40 FT ²	40 FT.
Rotary Disc	R80 and R85	13 FT. Only ³

NOTE:

Specifications and design are subject to change without notice or obligation to revise previously sold units.

Table 2.1 M155 Hydraulic Pumps

Pump Type	Specifications	Controller Type	Function
Pump A - Load Sense Pressure Compensated Piston Pump	Variable Displacement: 0–2.75 cu. in. (45 cc) Flow = 0-27 gpm (102 L/min) at 4000 psi (27.56 MPa)	Electric over hydraulic Maximum flow rate determined by header ID	Knife drive or part of disc drive (option) M1 circuit
Pump B - Load Sense Pressure Compensated Piston Pump	Variable Displacement: 0–2.32 cu. in. (38 cc) Flow = 0-24 gpm (84 L/min) at 3200 psi (22.05 MPa)	Electric over hydraulic Maximum flow rate determined by header ID	Conveyor and reel drive or part of disc drive (option) M2 circuit
Pump C - Gear Pump	Displacement: 0.84 cu. in. (13.8 cc) Flow at Full Throttle 11.5 gpm. (44 L/min) at 2500 psi (17.23 MPa)	Engine rpm	Supercharge flow and pressure for traction drive, brake release, Neutral lock, and DWA draper drive (if installed)
Pump D- Gear Pump	Displacement: 0.84 cu. in. (13.8 cc) Flow at Full Throttle 11.5 gpm. (44 L/min) at 2500 psi (17.23 MPa)	Engine rpm	Supercharge flow and pressure for traction drive, brake release, and Neutral lock

2. Depending on header options

3. Only 18.4 x 26 tires are compatible with the 13 FT R80 and R85

PRODUCT OVERVIEW

Tire Size	Wheel Position	Tread (A) in. (mm)	Hubs (B) in. (mm)	Tires (C) in. (mm)
23.1-26 turf tires	Inner/outer (shipping)	126-1/8 (3203)	140-9/16 (3571)	149-5/16 (3793)
	Outer/outer	133-3/16 (3383)	147-11/16 (3751)	156-7/16 (3973)
	Inner/inner	119 (3023)	133-1/2 (3391)	142-1/4 (3613)

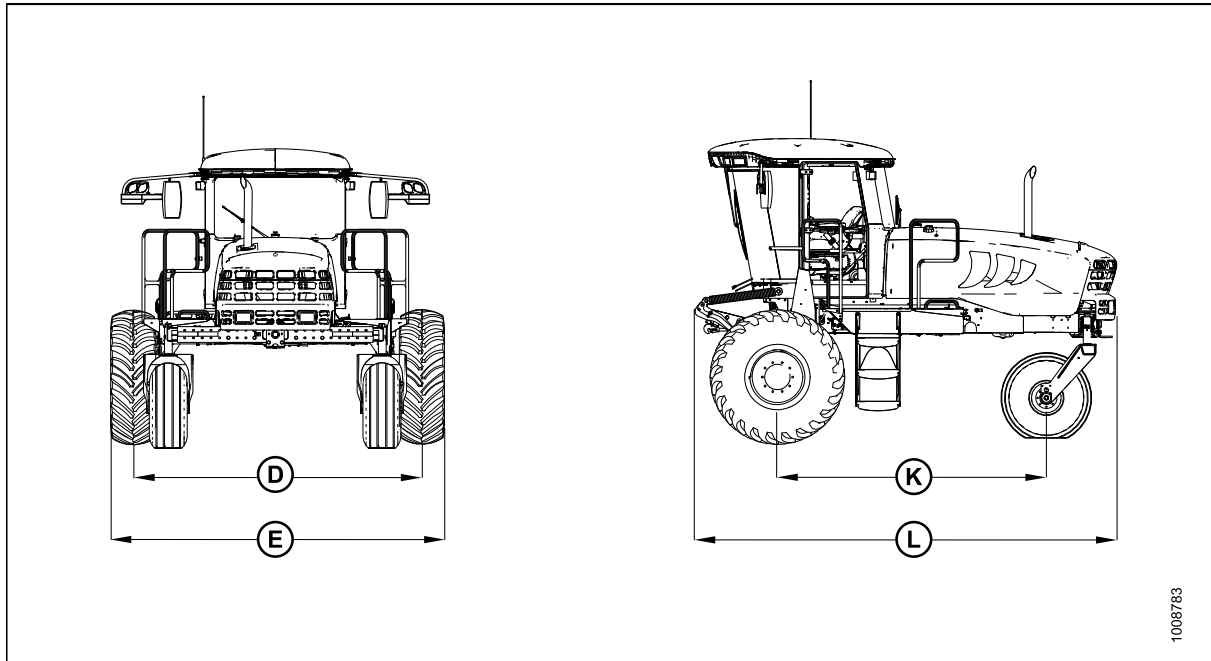


Figure 2.2: Windrower Dimensions – Engine Forward

D - Caster Tire Tread

E - Caster Tire Casters

K - 120-9/16 in. (3064 mm)

L - 186-7/8 in. (4747 mm)

Table 2.3 Caster Tires

Tire Size	Wheel Position	Tread (D) in. (mm)	Castors (E) in. (mm)
7.5-16SL	Minimum	96-7/16 (2448)	118-15/16 (3032)
	Maximum	135-11/16 (3448)	158-3/4 (4032)
10-16 formed caster	Minimum	96-7/16 (2448)	118-15/16 (3032)
	Maximum	135-11/16 (3448)	158-3/4 (4032)
10-16 forked caster	Minimum	96-7/16 (2448)	118-11/16 (3014)
	Maximum	135-11/16 (3448)	158 (4014)
16.5 x 16.1	Minimum	96-7/16 (2448)	118-11/16 (3014)
	Maximum	135-11/16 (3448)	158 (4014)

2.4 Component Location

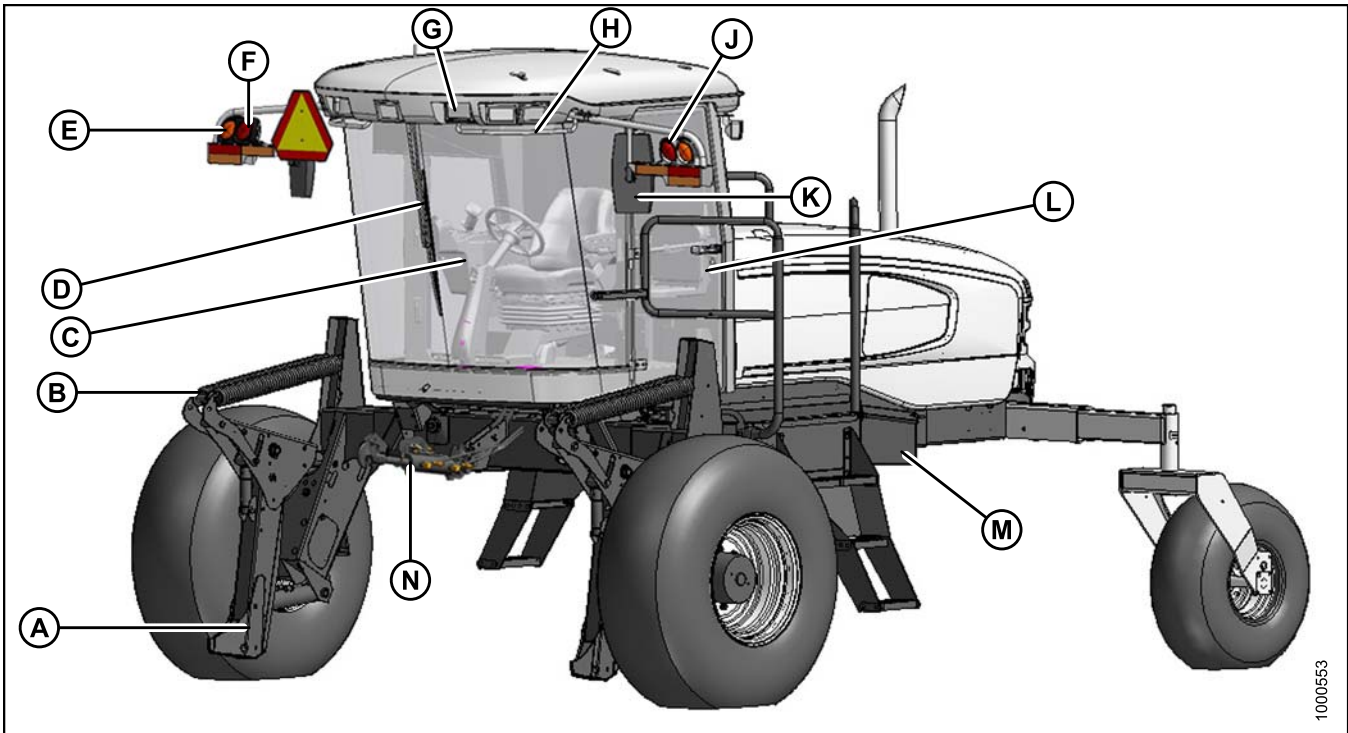


Figure 2.3: Front Cab-Forward View

A - Header Lift Leg
 D - Windshield Wiper
 G - Field/Road Lights
 K - Mirror
 N - Center-Link

B - Header Float Springs
 E - Turn Signal / Hazard Lights
 H - Handholds
 L - Door

C - Operator's Station
 F - Tail Light Engine-Forward
 J - Tail Light Engine-Forward
 M - Maintenance Platform

PRODUCT OVERVIEW

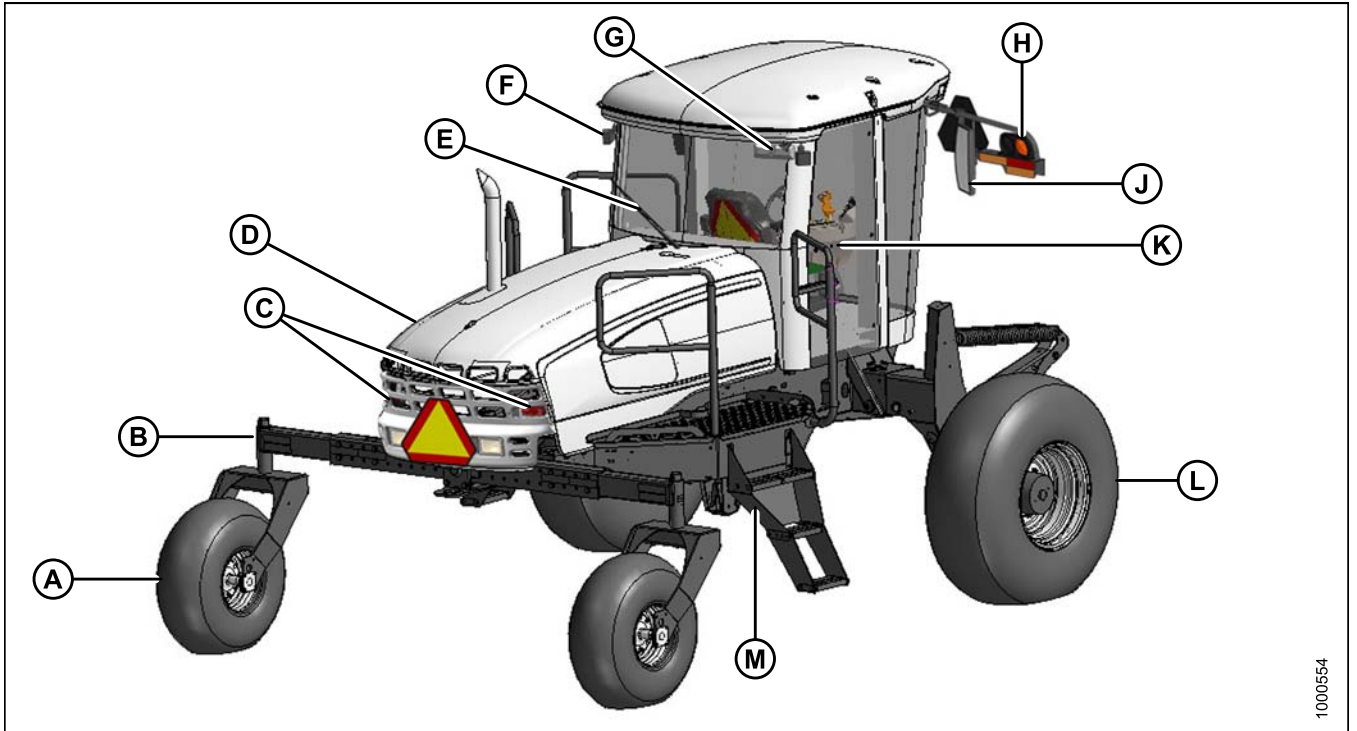


Figure 2.4: Rear Cab-Forward View

A - Caster Wheel
D - Engine Compartment Hood
G - Horn
K - Door

B - Walking Beam
E - Windshield Wiper
H - Turn Signal/Hazard Lights
L - Drive Wheel

C - Tail Lights - Cab-Forward (Option)
F - Field Lights
J - Mirror
M - Maintenance Platform

1000554

3 Operator's Station

The operator's station is designed for operating the windrower in a cab-forward mode (working mode) or in an engine-forward mode (transport mode). The operator's station, which includes the seat, console, and steering column, pivots 180 degrees so that the Operator maintains access to the windrower controls and gauges regardless of the direction of travel.

3.1 Operator Console

The console contains controls to operate the windrower, as well as amenities for the Operator. The console position is adjustable to suit each particular Operator.

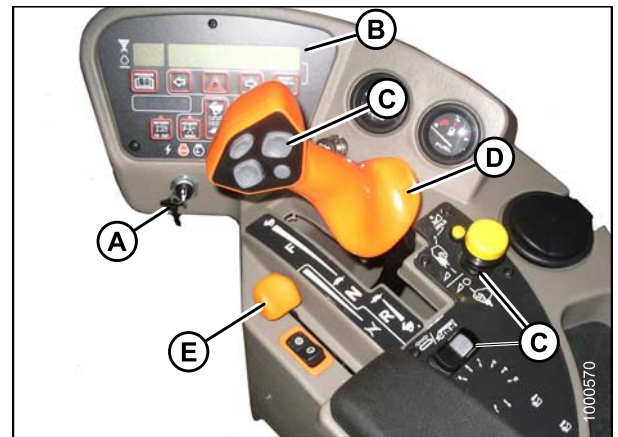


Figure 3.1: Operator Console

1. Adjusting fore-aft and height:
 - a. Pull lever (A) and slide console fore or aft to the desired position.
 - b. Release lever to lock console.

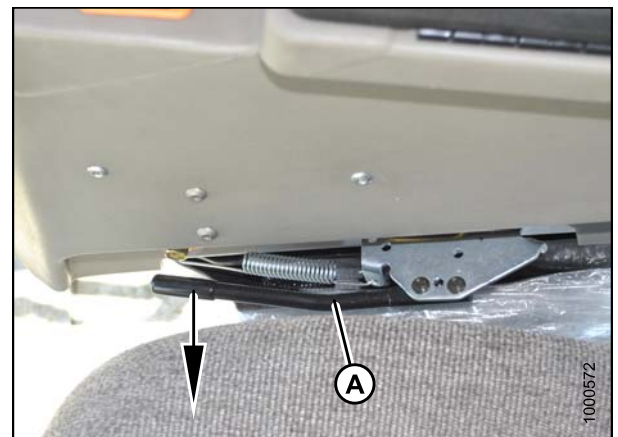


Figure 3.2: Seat Fore-Aft

OPERATOR'S STATION

2. Adjusting only fore-aft:
 - a. Loosen nuts (A) under console.
 - b. Move console as required.
 - c. Tighten nuts (A).



Figure 3.3: Seat Fore-Aft

3.2 Operator Presence System

The Operator Presence System is a safety feature designed to deactivate or alarm selected systems when the Operator is not seated at the operator's station.

These systems include:

- Header Drive
- Engine and Transmission

3.2.1 Header Drive

- Requires the Operator to be seated in the seat in order to engage the header drive.
- Power is maintained to the header drive for five seconds after the Operator leaves the seat, and then the header shuts down.
- After the header has shut down automatically, the HEADER DRIVE switch must be moved to OFF position and back to the ON position again to restart the header.

3.2.2 Engine and Transmission

- The engine will not start when the HEADER DRIVE switch is engaged.
- The engine will shut down when the windrower is moving at 5 mph (8 km/h) or less and the Operator leaves the seat and the transmission is not locked in NEUTRAL. The CDM will flash "NO OPERATOR" on the upper line and "ENGINE SHUT DOWN 5...4...3...2...1...0" on the lower line accompanied by a steady tone. At "0", the engine shuts down.
- If the windrower is moving at greater than 5 mph (8 km/h) and Operator leaves the seat, after five seconds an alarm will sound and the lower display line will flash "NO OPERATOR".
- When the seat is in between cab-forward and engine-forward positions, the engine will shut off if the transmission is not locked in the NEUTRAL position. The lower display will flash "LOCK SEAT BASE" until the seat base is locked into position.

3.3 Operator's Seat Adjustments

The operator's seat has several adjustments. Refer to the following for the location and description of each adjustment.

3.3.1 Fore-Aft

Adjusts fore-aft position.

1. Pull lever (A) up to release.
2. Move seat forward or rearward.
3. Release lever (A).



Figure 3.4: Fore-Aft Position

3.3.2 Seat Suspension and Height

Controls suspension stiffness and seat height.

INCREASE: Press upper switch (A).

DECREASE: Press lower switch (B).



Figure 3.5: Seat Suspension and Height

3.3.3 Vertical Dampener

Adjusts suspension dampening.

INCREASE: Turn knob (A) counterclockwise.

DECREASE: Turn knob (A) clockwise.

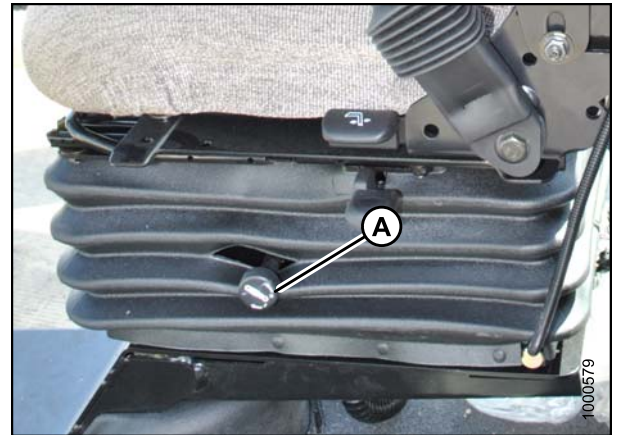


Figure 3.6: Vertical Dampener

3.3.4 Armrest

Raise armrest (A) for easier access to seat.

Lower armrest (A) after seat belt is buckled.



Figure 3.7: Armrest

3.3.5 Fore-Aft Isolator Lock

Locks seat fore-aft isolator.

LOCK: Push lever (A) down.

UNLOCK: Pull lever (A) up.



Figure 3.8: Fore-Aft Isolator Lock

3.3.6 Seat Tilt

To adjust seat tilt:

1. Pull lever (A) up to release.
2. Position seat back as desired.
3. Release lever (A).



Figure 3.9: Seat Tilt

3.3.7 Armrest Angle

Adjusts angle of armrest.

INCREASE: Rotate knob (A) clockwise.

DECREASE: Rotate knob (A) counterclockwise.

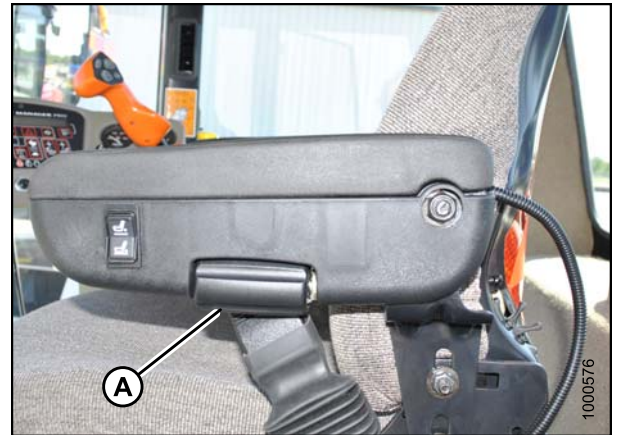


Figure 3.10: Armrest Angle

3.3.8 Lumbar Support

Adjusts stiffness of seat back.

INCREASE: Rotate knob (A) upward.

DECREASE: Rotate knob (A) downward.

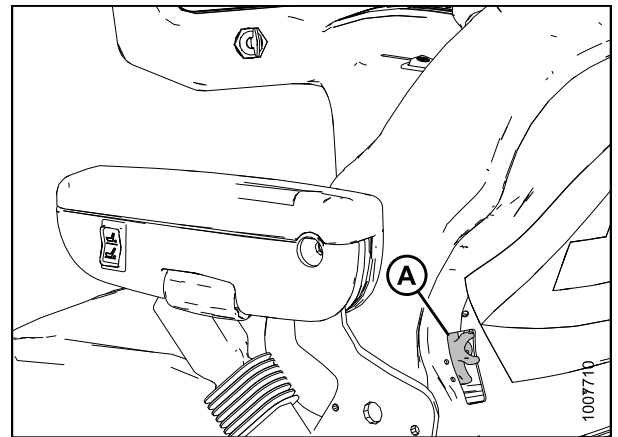


Figure 3.11: Lumbar Support

3.4 Training Seat

A wall-mounted fold-up training seat complete with seat belt is provided.

⚠ WARNING

- The training seat is provided for an experienced Operator of the machine when a new Operator is being trained.
- The training seat is **NOT** intended as a PASSENGER SEAT or FOR USE BY CHILDREN. USE THE SEAT BELT whenever operating the machine or riding as a Trainer.
- **KEEP ALL OTHER RIDERS OFF THE MACHINE.**

For storage, lift seat (B) and secure with latch (A).

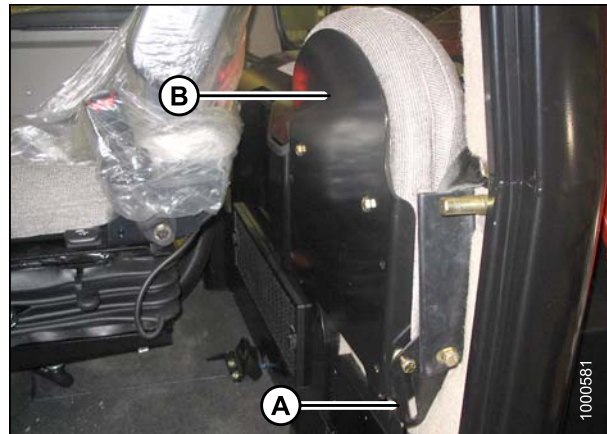


Figure 3.12: Training Seat

To lower seat, lift latch (A) and lower seat (B).



Figure 3.13: Training Seat

3.5 Seat Belts

The windrower is equipped with a seat belt on the operator's and trainer's seats.

WARNING

The seat belt can help ensure your safety if it is used and maintained.

- Before starting the engine, securely fasten your seat belt. Ensure that anyone occupying the trainee's seat is secured by a seat belt as well.
- Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.

To fasten seat belt:

1. Pull belt with metal eye (A) at right side completely across your body.
2. Push the metal eye (A) into the buckle (B) until it locks.
3. Adjust the position of the belt as low on your body as possible.

To release seat belt:

4. Push the red button (C) in the end of the buckle.
5. Separate the buckle (B) and metal eye (A).

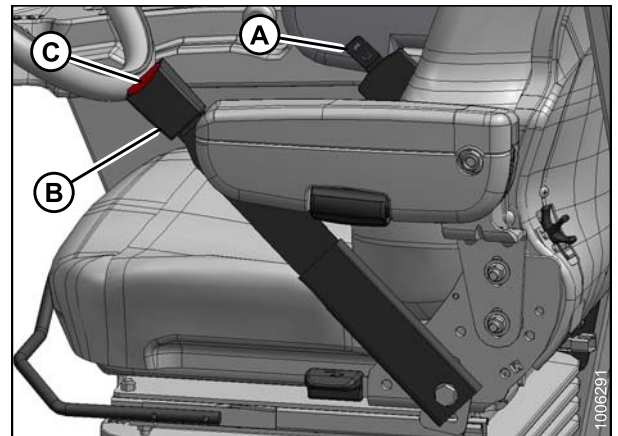


Figure 3.14: Seat Belt

3.6 Steering Column Adjustment

The steering column can be adjusted to suit each particular Operator and for easier entry to and exit from the seat.

To adjust the steering column:

1. Hold onto steering wheel, lift handle (A), and move steering wheel up or down to desired position.
2. Release handle (A) to lock steering wheel position.

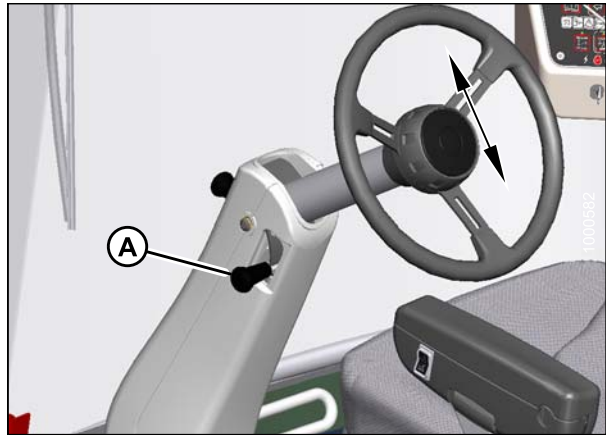


Figure 3.15: Adjust Steering Column

3.7 Lighting

The field and road light switches are located on a panel in the cab headliner.

The position of the operator's station (cab-forward mode or engine-forward mode) automatically determines the lighting.

The hazard lights are activated automatically when certain conditions are met. The windrower must be cab-forward, medium range, brake off, and header off.

The work lights will not turn on if the windrower is engine-forward or if the windrower is cab-forward, out of park, medium range, and header off.

IMPORTANT:

Red and amber reflector tape is applied to be visible in both engine-forward and cab-forward modes.

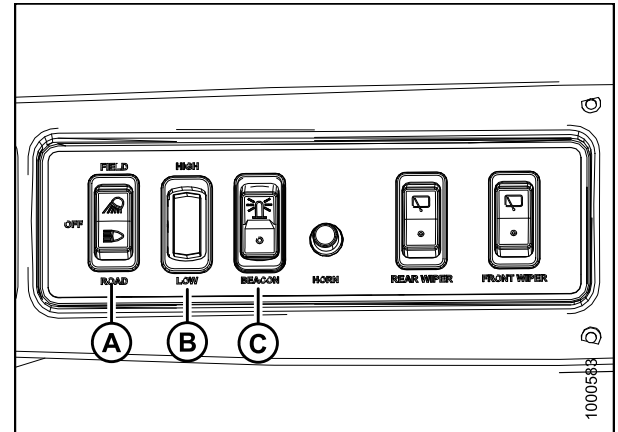


Figure 3.16: Roof Liner Console

A - Field or Road Lights B - Low or High Beams
C - Beacon (If Equipped)

3.7.1 Cab-Forward Lighting: Field

The following lights are on when the light switch is in FIELD position with the windrower in cab-forward mode:

- Field lights in cab roof (front and rear)
- Swath lights in hood
- HID lights (if installed) on mirror supports

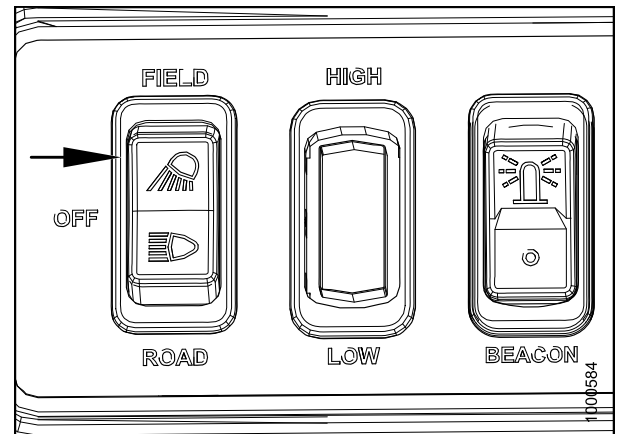


Figure 3.17: Field Light Switch

The two innermost lights in the field light group (A) at the front of the cab are adjustable. Refer to [Adjusting Field Lights, page 380](#).

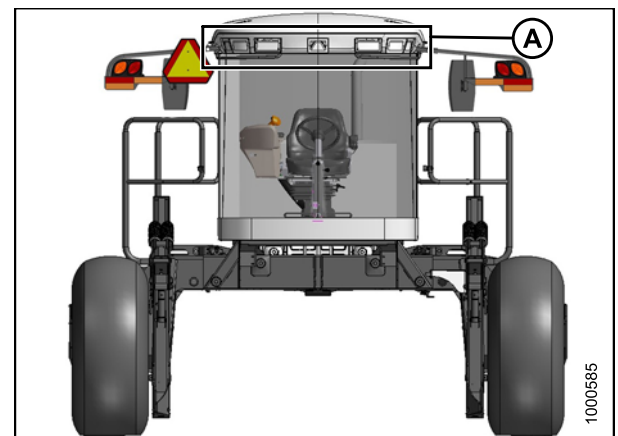


Figure 3.18: Cab-Forward: Front View

OPERATOR'S STATION

The two field lights (A) at the rear of the cab are adjustable. Refer to [Adjusting Rear Flood Lights](#), page 386.

The two swath lights (B) in the hood are adjustable but, because they are used as road lights in engine-forward mode and adjusted accordingly, they should **NOT** be adjusted for field operation.

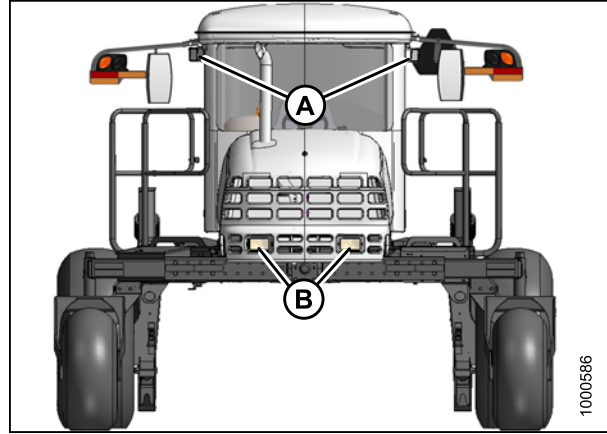


Figure 3.19: Cab-Forward: Rear View

3.7.2 Engine-Forward Lighting: Road

The following lights are ON when the light switch (A) is in ROAD position with the windrower in engine-forward mode:

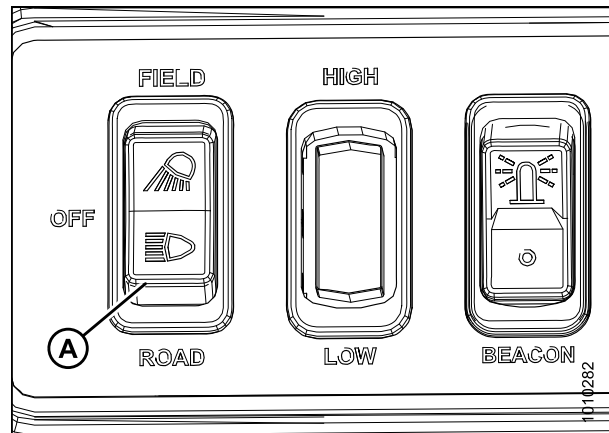


Figure 3.20: Road Light Switch

- Red tail lights (A) on the mirror supports
- Amber turn signals and hazard lights (B) on mirror supports rear view

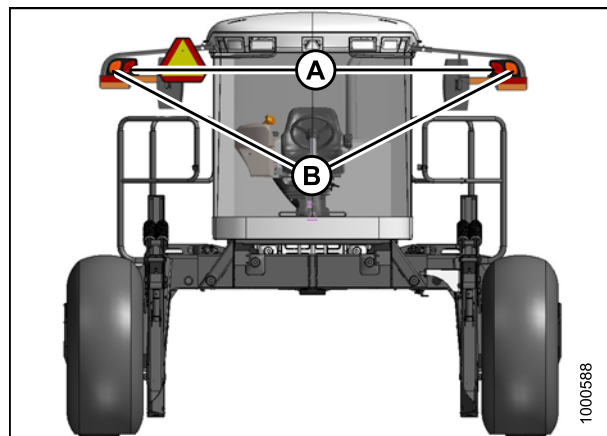


Figure 3.21: Engine-Forward: Rear View

OPERATOR'S STATION

- Amber turn signals and hazard lights (A) on mirror supports front view
- Headlights (B) in hood with low/high

The two headlights in the hood are adjustable. Refer to [Aligning Headlights, page 376](#).

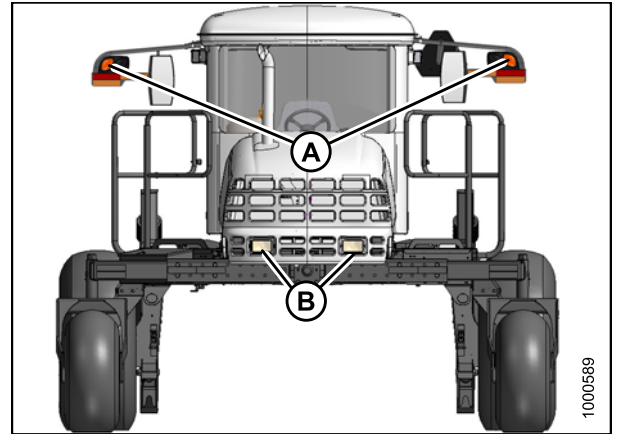


Figure 3.22: Engine-Forward: Front View

3.7.3 Cab-Forward Lighting: Road (Optional)

If equipped, the following lights are functional with switch (A) in the ROAD position:

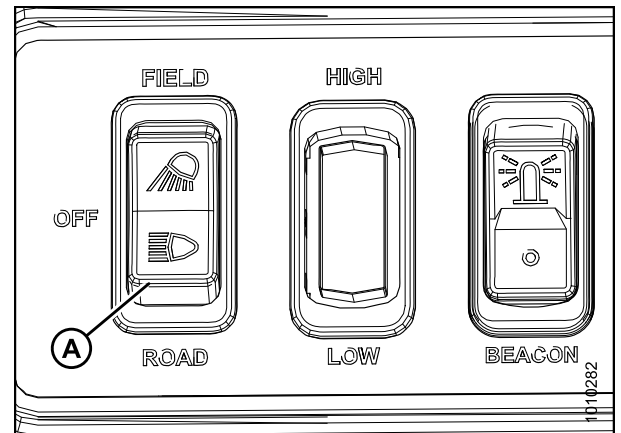


Figure 3.23: Road Light Switch

- Four lights (A) in cab roof
- Amber turn signals and hazard lights (B) on mirror supports visible from both front and rear

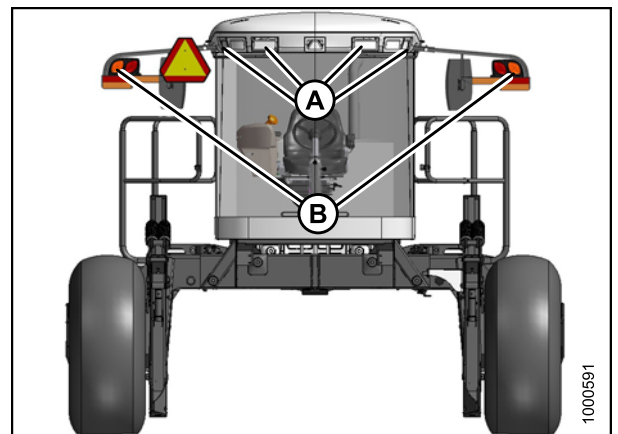


Figure 3.24: Cab Forward: Front View

OPERATOR'S STATION

- Red lights (C) in hood

NOTE:

The hazard lights will be automatically activated when certain conditions are met. The windrower must be cab-forward, medium range, brake OFF, and header OFF.

IMPORTANT:

Optional red tail lighting and marking kit must be installed so that road travel in the cab-forward mode complies with road travel regulations. See your MacDon Dealer.

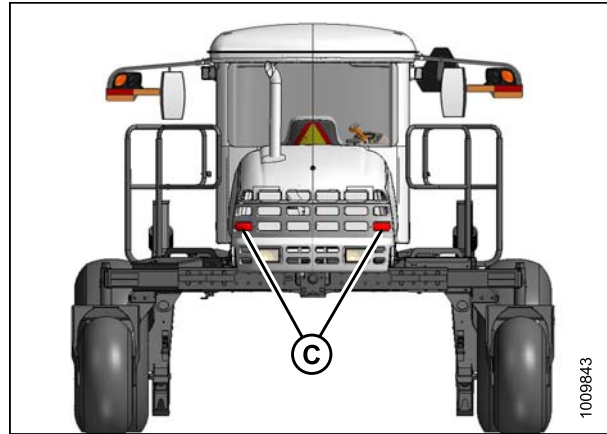


Figure 3.25: Cab Forward: Rear View

3.7.4 Beacon Lighting (Optional)

MD #B5582

The beacon lights (A) are functional when the ignition and the beacon switch (B) are ON.

The beacons **MUST** be used when driving on the road where required by law.

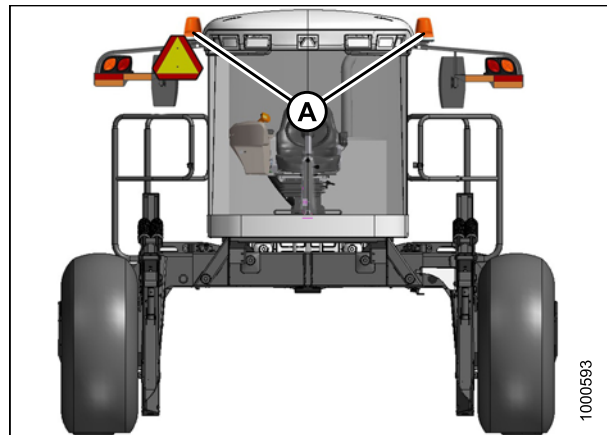


Figure 3.26: Cab-Forward: Front View

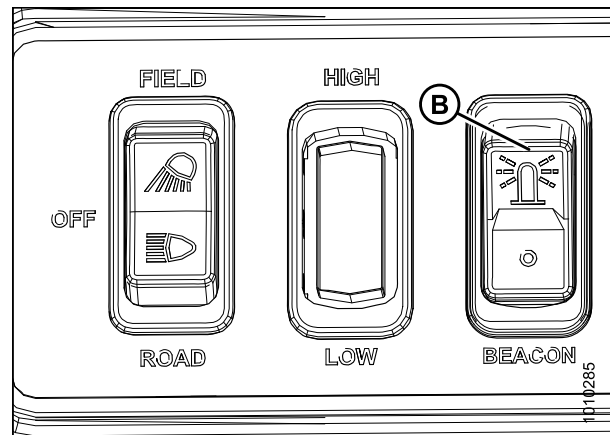


Figure 3.27: Beacon Light Switch

3.7.5 HID Auxiliary Lighting (Optional)

Two optional High Intensity Discharge (HID) lights (MD #B5596) provide additional lighting during field operation.

If installed, HID auxiliary lighting is located on the mirror supports (A) and operates in cab-forward mode only.



Figure 3.28: HID Auxiliary Lights (Optional)

Optional HID auxiliary lighting is activated with the light switch (B) in the FIELD position.

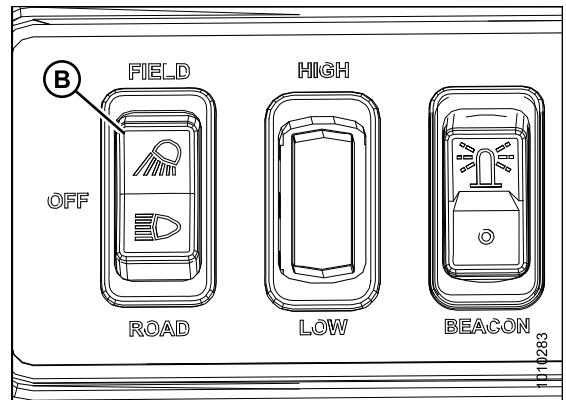


Figure 3.29: Field Light Switch

3.8 Windshield Wipers

The windshield wiper controls are located in the cab headliner. The illustration shows the controls in cab-forward mode.

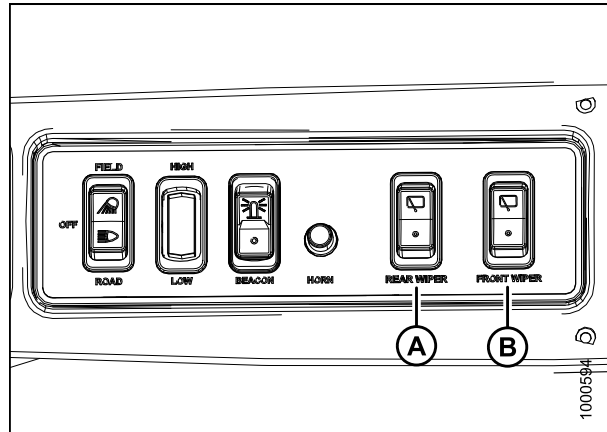


Figure 3.30: Wiper Controls

A - Rear Wiper

B - Front Wiper

3.9 Rear View Mirrors

Two outside mounted, adjustable mirrors (A) provide a rear view when the windrower is in cab-forward mode.

A single interior mounted mirror (B) provides a rear view in the engine-forward mode.

The mirror/light assembly (A) is designed to fold back if accidentally struck. A detent-type lock keeps it in place.

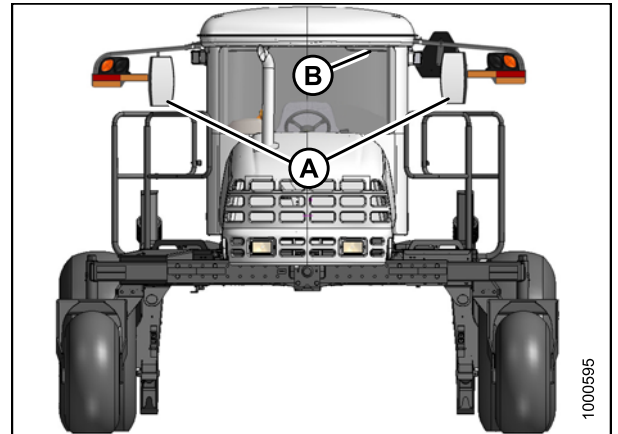


Figure 3.31: Mirrors

3.10 Cab Temperature

The cab environment is controlled by a climate control system that provides clean air-conditioned or heated air for the Operator.

The heater/evaporator/blower assembly is located under the cab floorboard and is accessible from beneath the windrower.

3.10.1 Heater Shut-Off

A shut-off valve (A) at the engine allows the cab heater to be isolated from the engine coolant.

The valve must be OPEN to provide heat to the cab but can be CLOSED for maximum cooling.

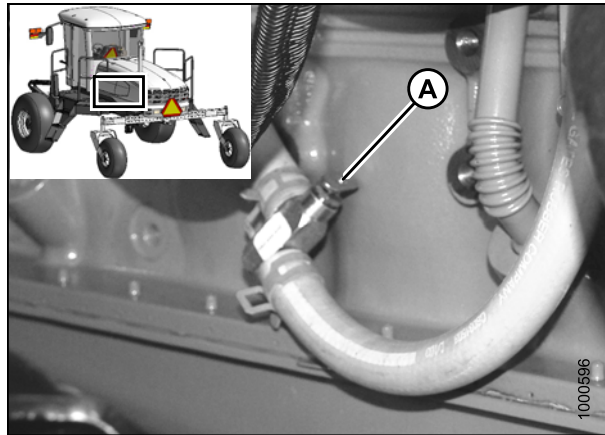


Figure 3.32: Heater Shut-Off Valve

3.10.2 Air Distribution

Cab air distribution is controlled through adjustable air vents (A) located in the cab posts. The vents provide window and Operator ventilation.

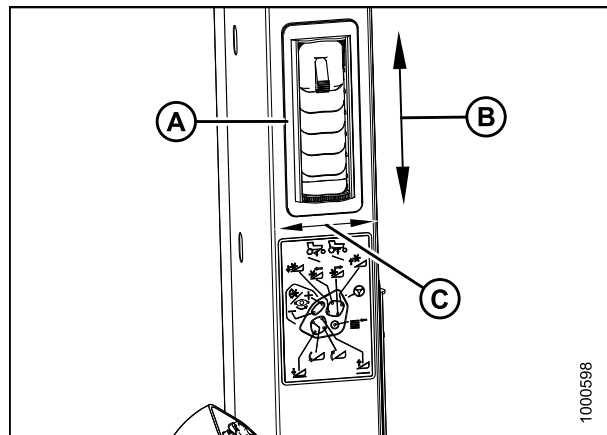


Figure 3.33: Adjustable Air Vents

A - Vent B - Open/Close C - Direction

3.10.3 Climate Controls

A – BLOWER Switch controls the blower speed.

- OFF / LOW / MEDIUM / HIGH

B – Air Conditioning (A/C) Switch controls A/C system.

- OFF: A/C does not operate.
- ON: A/C operates with blower switch ON.

C – Outside Air witch controls the air source.

- FRESH AIR: Starts booster fan and filtered outside air is drawn into cab.
- RECIRCULATE: Stops booster fan and cab air is recirculated.

D – TEMPERATURE Control Dial controls cab temperature.

- Turning the dial clockwise: Increases temperature.
- Turning the dial counterclockwise: Decreases temperature.

IMPORTANT:

To distribute the refrigerant oil throughout the A/C system, perform the following steps when starting the windrower after more than one week of storage:

1. Ensure heater shut-off valve at engine is OPEN. Refer to [3.10.1 Heater Shut-Off, page 56](#).
2. Turn blower switch to the first position, turn temperature control switch to MAXIMUM heating, and A/C control to OFF.
3. Start engine and operate at low idle until engine is warm.
4. Click A/C switch from OFF to ON for 1 second, then back to OFF for 5 to 10 seconds. Repeat this step ten times.

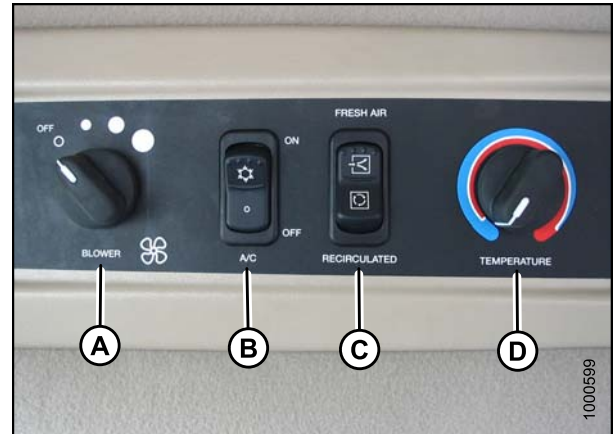


Figure 3.34: Climate Controls

3.11 Interior Lights

Two interior lights are installed in the cab headliner.

A low intensity LED light (A) is located directly overhead to provide ambient lighting if desired. It functions only when the key is in the run position. An ON/OFF switch is located on the light.

The other interior light (B) is located on the headliner switch panel and the push-ON, push-OFF button is located on the light. It functions at any time.

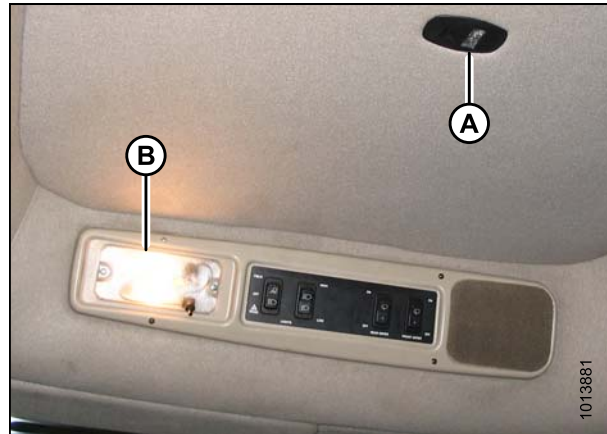


Figure 3.35: Interior Lights

3.12 Emergency Exit

The emergency exit is located behind the operator console. An emergency exit sign (A) is located above the window.

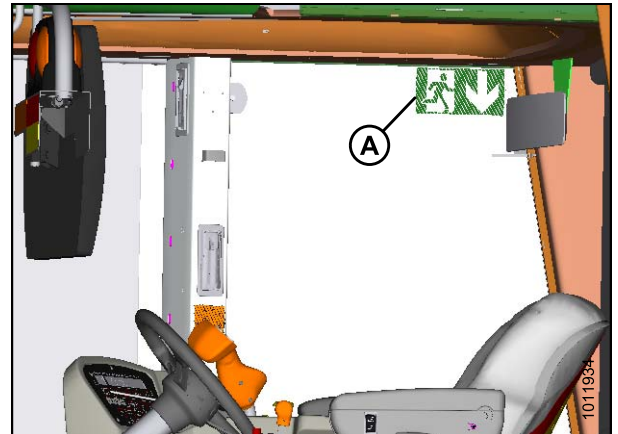


Figure 3.36: Emergency Exit Sign

To open the emergency exit window, do the following:

1. Release the window latch (A).
2. Remove the latch pin (B).
3. Push window open (C).

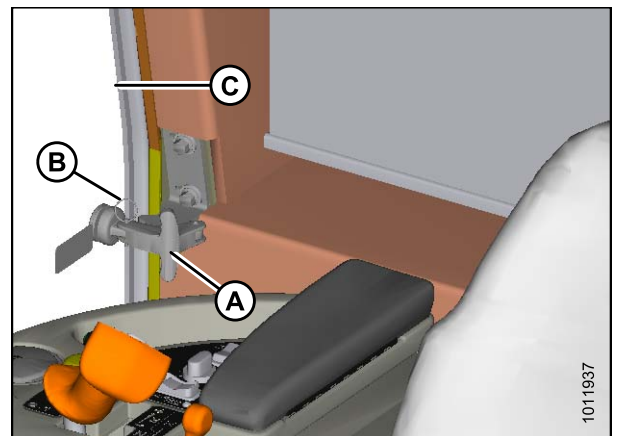


Figure 3.37: Emergency Exit Window

3.13 Operator Amenities

The operator's station includes the following amenities:

Operator's Console

- A - Auxiliary power outlet
- B - Utility tray (under armrest)
- C - Cigarette lighter
- D - Ashtray / cup holder
- E - Utility tray

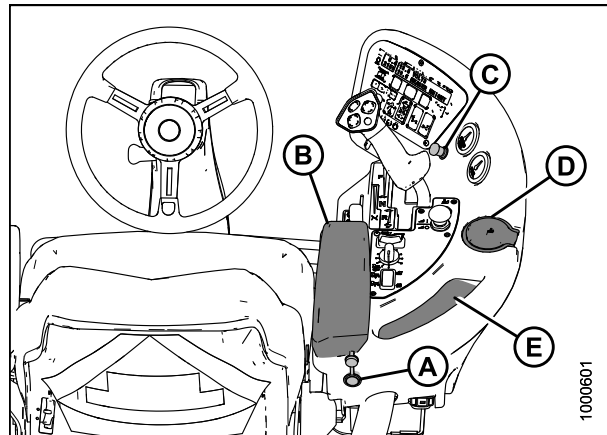


Figure 3.38: Console

Window Shades (Optional)

Retractable window shades (A) can be installed for the front and rear windows.

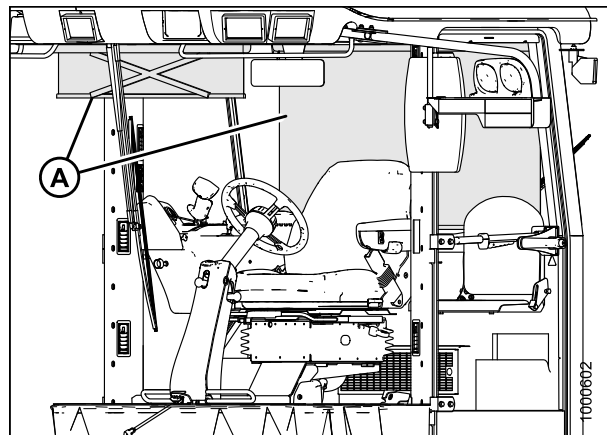


Figure 3.39: Window Shades (Optional)

Auxiliary Outlets

Two auxiliary power outlets are located on either side of the wiper motor cover/storage tray behind the Operator (cab-forward mode).

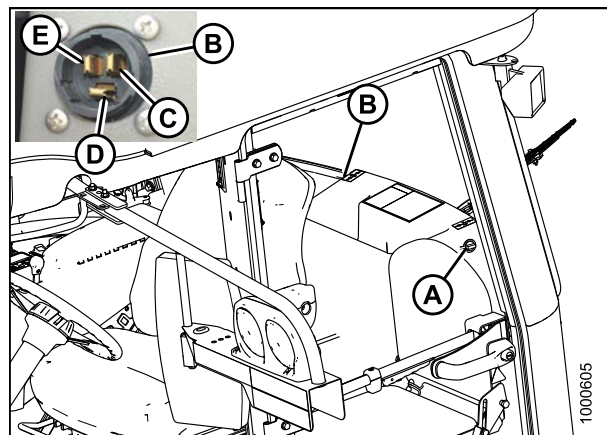


Figure 3.40: Auxiliary Power Outlets

- A - Auxiliary Power Outlet
- B - Auxiliary Power Outlet
- C - Battery Terminal
- D - Ground Terminal
- E - Switched Terminal

OPERATOR'S STATION

Manual Storage

A manual storage case (A) is located under the training seat.

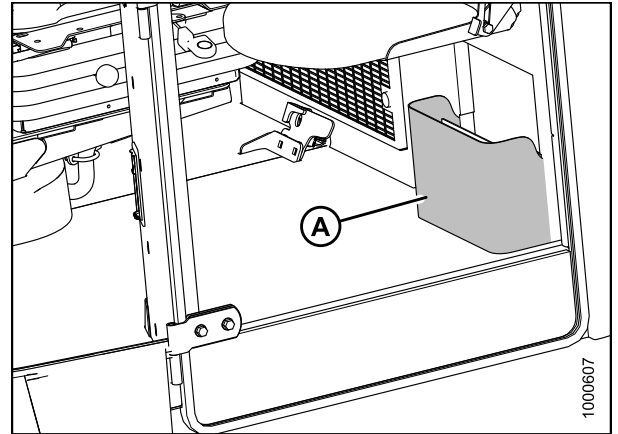


Figure 3.41: Operator's Manual Storage

Coat Hook

A coat hook (A) is located above the training seat, left of the Operator.

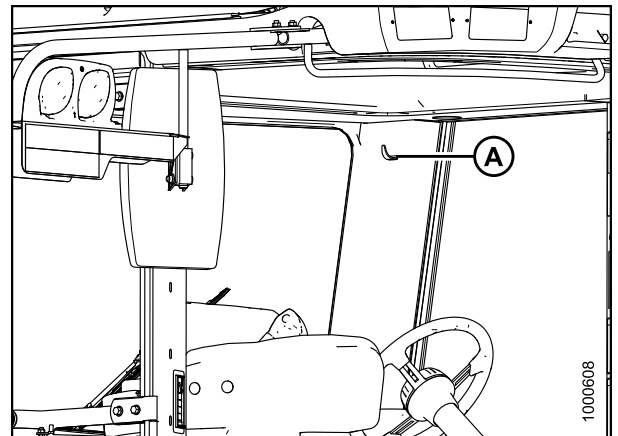


Figure 3.42: Coat Hook

3.14 Radio

A radio is available as optional equipment from your Dealer.

3.14.1 AM/FM Radio

A space (B) is provided in the cab headliner to accommodate the installation of an AM/FM radio that is available as optional equipment from your Dealer.

Two pre-wired speakers (A) have been factory-installed in the headliner.

For radio installation procedures, refer to MD #169885 M155 and M205 Self-Propelled Windrower Unloading and Assembly Instructions (North America) or MD #169886 M-Series Self-Propelled Windrower Unloading and Assembly Instructions (Container Shipments).

Operating instructions are supplied with the radio.

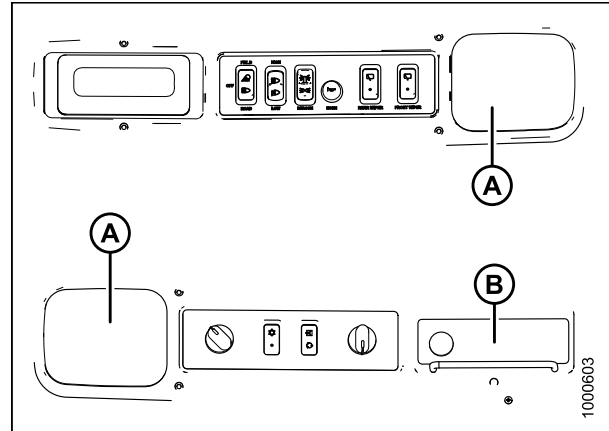


Figure 3.43: Speakers in Roof Liner

A - Speakers

B - Radio Mounting Location

3.14.2 Antenna Mounting

An optional base for a magnetic roof-mounted antenna is available from your Dealer.

IMPORTANT:

Antenna base can only be installed on the left cab-forward and right rear cab roof bolts.

Order antenna mount (MD #160288 [B]) or refer to illustration for part dimensions to make an improvised version. A knockout (C) for the antenna lead is provided on the cab post.

1. Remove existing bolt (A).
2. Install antenna mount (B) and secure with bolt (A).

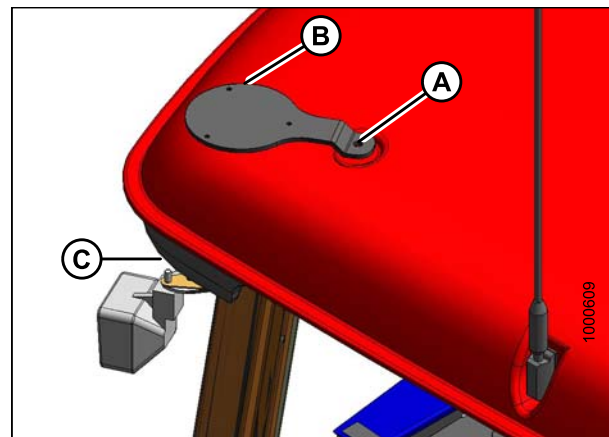


Figure 3.44: Antenna Mount

OPERATOR'S STATION

The knockout (A) is located on the exterior right cab-forward rear corner post of the cab, under the roof, between the horn and the light.

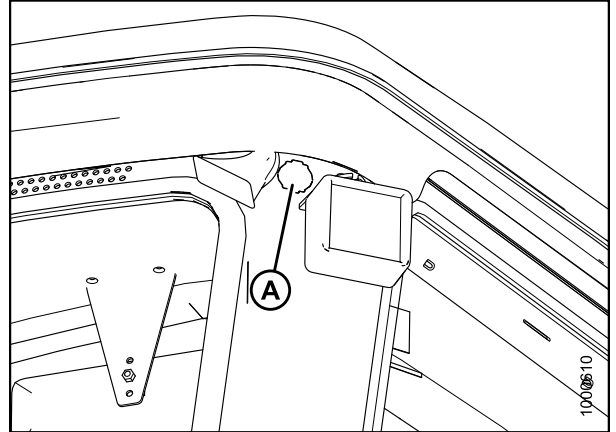


Figure 3.45: Knockout Location in Cab

To make your own mount, refer to dimensions template.
Use 11 GA. or 3.0 mm steel sheet.

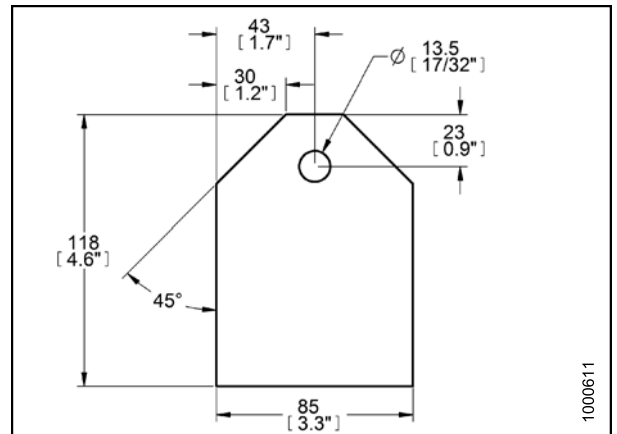


Figure 3.46: Template for Antenna Mount

3.15 Horn

The horn is activated by pushing button (A) located on the panel in the headliner.

Sound the horn three times prior to starting the engine.

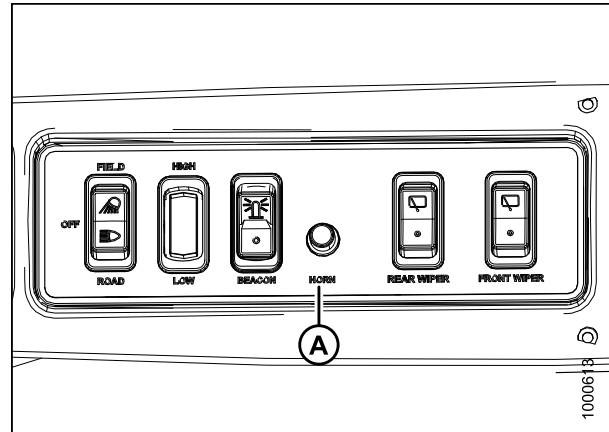


Figure 3.47: Horn Button Location

The horn (A) is located outside the cab on the rear right cab-forward corner of the cab, under the roof.

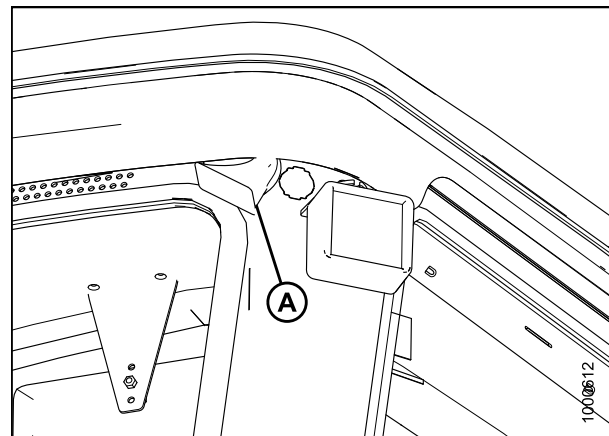


Figure 3.48: Horn Location

3.16 Engine Controls and Gauges

The following engine controls and gauges are conveniently located on the operator's console.

A – Ignition Switch

- ACC: Fully counterclockwise
- OFF: All electrical systems OFF
- RUN: Clockwise
- START: Fully clockwise to crank engine: Release and switch returns to RUN
- REMOVE KEY WHEN WINDROWER NOT IN USE. KEY ALSO LOCKS DOORS

B – Engine Temperature Gauge indicates engine coolant temperature

- Normal Running: 180°–225°F (82°–107°C)
- Warning Tone Over 230°F (110°C)

C – Fuel Gauge indicates fuel level in tank

- E: Empty
- F: Full

D – Throttle controls engine speed

- FULL: Push lever forward
- OPERATING: Refer to [Driving Forward in Cab-Forward Mode, page 168](#)
- CLOSED: Pull lever back



Figure 3.49: Engine Controls and Gauges

A - Ignition Switch
C - Fuel Gauge

B - Engine Temperature Gauge
D - Throttle

3.17 Windrower Controls

Console Controls:

A – TURN SIGNALS activate turn signals on windrower and header

- Push-ON / Push-OFF

B – GROUND SPEED LEVER (GSL) controls speed and direction of movement

- F: Forward
- N: NEUTRAL
- N-DETENT: Engages Neutral Interlock, and applies park brake when steering locked in center
- R: Reverse

C – HAZARD WARNING LIGHTS activate signals on windrower and header

- Push-ON / Push-OFF

D – GROUND SPEED RANGE SWITCH shifts transmission speed range

- High range: 0–23 mph (37 km/h)
ENGINE-FORWARD ONLY
- Mid range: 0–16 mph (25.7 km/h)
CAB-FORWARD ONLY
- Low range: 0–11 mph (17.7 km/h)

E – N-Detent

Autosteer Control:

A – AUTOSTEER ENGAGEMENT SWITCH engages/disengages the automated steering system (if compatible system is installed)

- ENGAGE: Click to engage
- DISENGAGE: Turn steering wheel or click to disengage



Figure 3.50: Console Controls

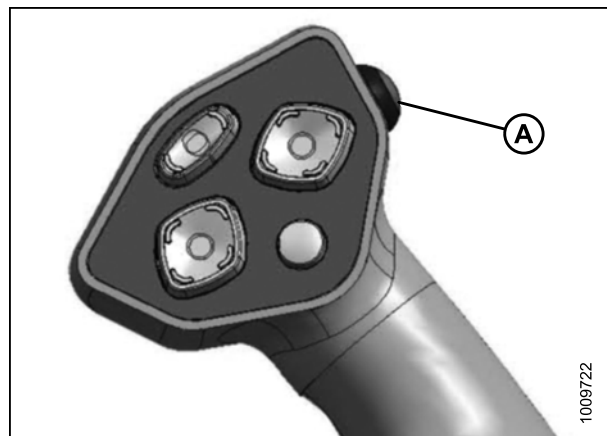


Figure 3.51: Autosteer

OPERATOR'S STATION

The autosteer engagement switch harness end (A) is beneath the cab between the fuel tank and evaporator box.



Figure 3.52: Autosteer Harness

3.18 Header Controls

All header controls are conveniently located on the operator's console and on the ground speed lever (GSL) handle.

NOTE:

Some controls are optional equipment and may not be present in your unit. Some controls may be installed but nonfunctional for certain headers.

Refer to specific header sections in this manual for detailed operating procedures of all header controls.

3.18.1 Header Drive Switch

The HEADER DRIVE switch (A) engages and disengages the header drive.

To engage the header drive, pull up on the collar (B) and push down on the switch (A).

To disengage the header drive, push the switch down.

IMPORTANT:

Always move throttle lever back to IDLE before engaging header drive. Do **NOT** engage header with engine at full rpm.

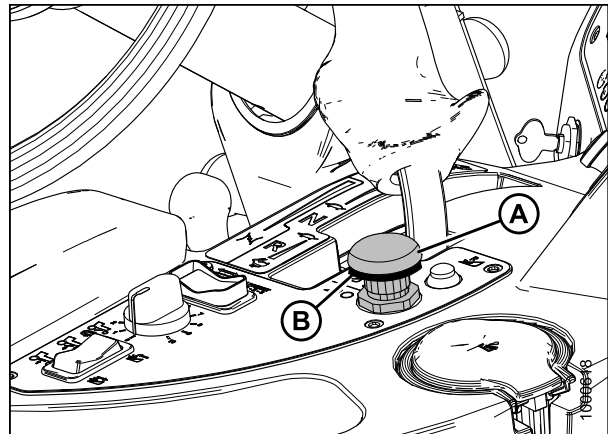


Figure 3.53: Header Drive Switch

3.18.2 Header Drive Reverse Button

NOTE:

The optional hydraulic reversing kit must be installed on draper headers with a conditioner and on auger headers.

- ENGAGE: Push and hold REVERSER button (B) and engage header with Switch (A)
- DISENGAGE: Release REVERSER Button (B)

NOTE:

To re-engage in forward operation, Switch (A) must be pushed down and then up again.

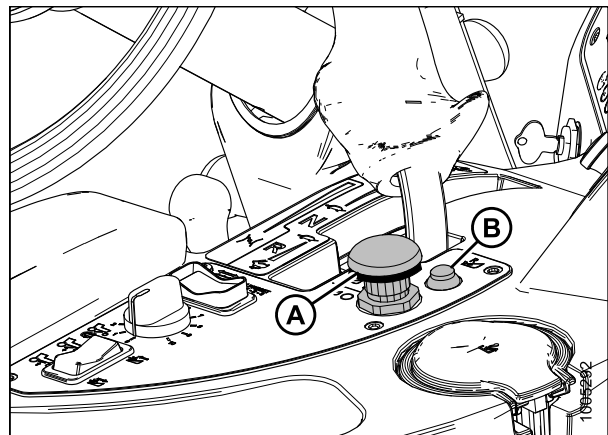


Figure 3.54: Header Drive Switches

3.18.3 Ground Speed Lever (GSL) Header Switches

The switches on the GSL (A) control the most common header functions.

NOTE:

A decal (B) identifying switch functions is located on the cab post above the operator's console.

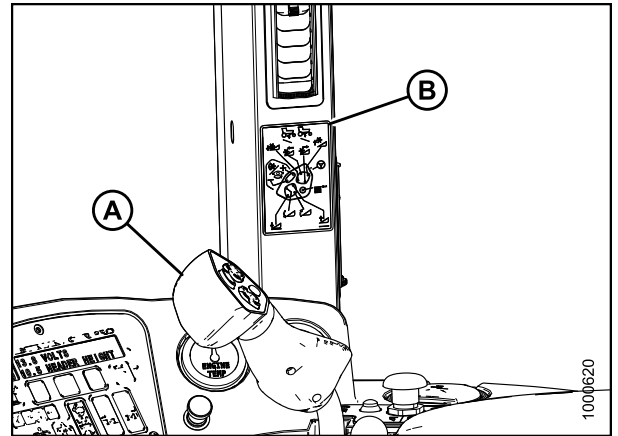


Figure 3.55: GSL

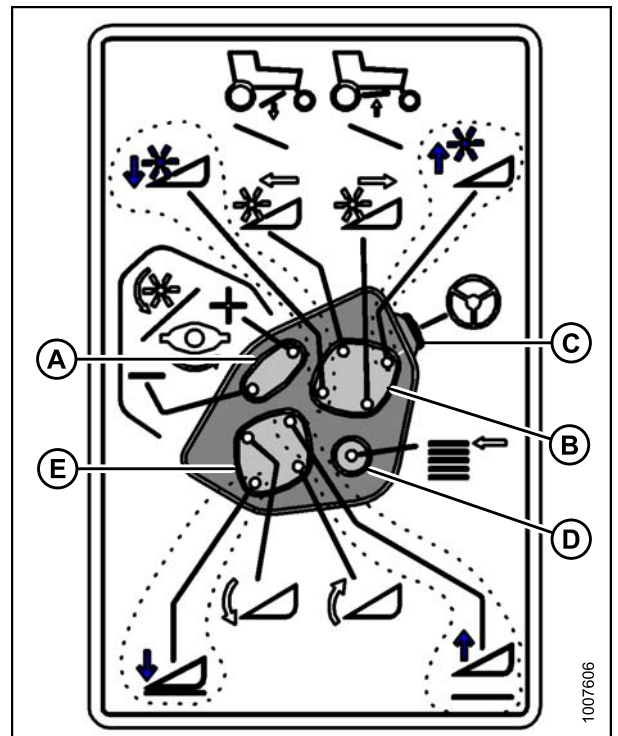


Figure 3.56: GSL Function Groups

- | | |
|--------------------------|----------------------|
| A - Reel Speed | B - Reel Position |
| C - Autosteer Engagement | D - Display Selector |
| E - Header Position | |

OPERATOR'S STATION

Display Selector Switch

Pressing the display selector switch (A) selects and displays the settings on the cab display module (CDM) top line read-out for each of the header controls.

Press switch (A) to scroll through settings.

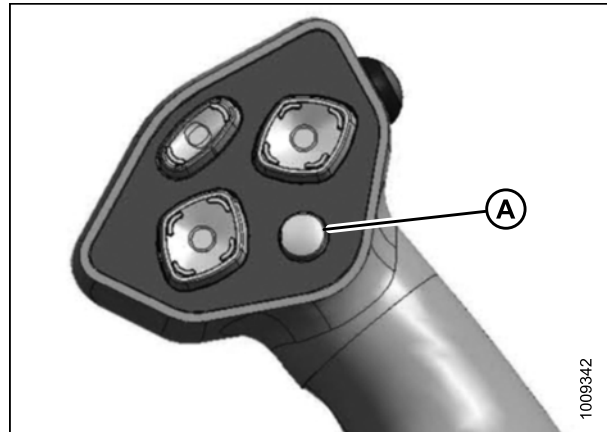


Figure 3.57: GSL

Reel Position Switches

The functions performed by the reel position switches depend on which header is attached and the cab display module (CDM) programming.

- For functions related to Double Windrow Attachment (DWA) position, refer to:
 - [4.4.10 Double Windrowing, page 211](#)
- For functions related to Reel Fore-Aft position and height on Draper headers, refer to:
 - [4.6.4 Adjusting the Reel Fore-Aft Position, page 281](#)
 - [4.6.5 Adjusting the Reel Height, page 282](#)
- For the Center-Link Assist Cylinder, refer to the section appropriate for your header:
 - [4.5.3 Attaching an A-Series Header, page 237](#)
 - [4.5.1 Attaching a D-Series Header, page 213](#)
 - [4.5.5 Attaching an R-Series Header, page 257](#)

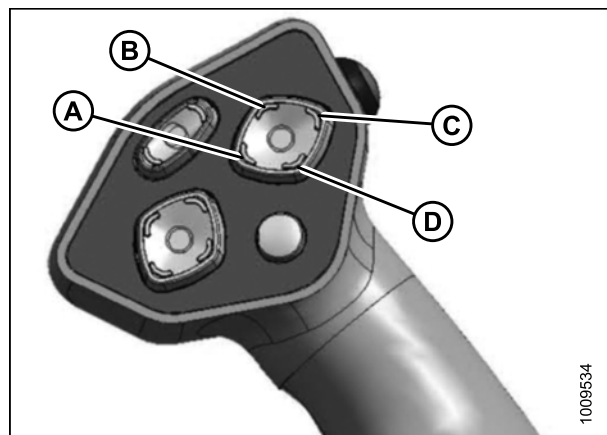


Figure 3.58: Ground Speed Selector

A - Reel Down B - Reel Forward
C - Reel Up D - Reel Aft

NOTE:

For detailed switch operating modes, refer to the section in this manual, specific to your header.

OPERATOR'S STATION

Header Position Switches

Use the header position switches on the ground speed lever (GSL) to adjust the position of the header, relative to the ground.

- To lower the header down, press switch (A)
- To raise the header up, press switch (C)
- To tilt the header down, press switch (B)
- To tilt the header up, press switch (D)

Release switch at desired position.

NOTE:

Refer to the section in this manual that is specific to your header for detailed switch operating modes.

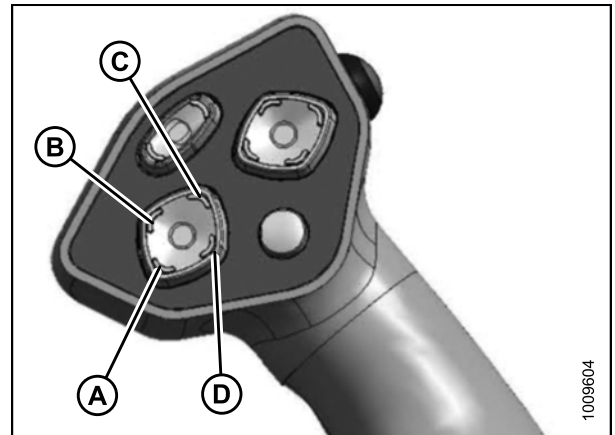


Figure 3.59: Ground Speed Lever

Reel and Disc Speed Switches

Press and hold switch (A) to increase the reel or disc speed. Press and hold switch (B) to decrease the reel or disc speed. Release switch at desired speed.

Auger Header

- A-30 header: Not applicable
- A-40 header: Auger speed is automatically maintained when reel speed is changed

IMPORTANT:

Reel speed on auger header **MUST NOT EXCEED** 85 rpm. Auger speed **MUST NOT EXCEED** 320 rpm.

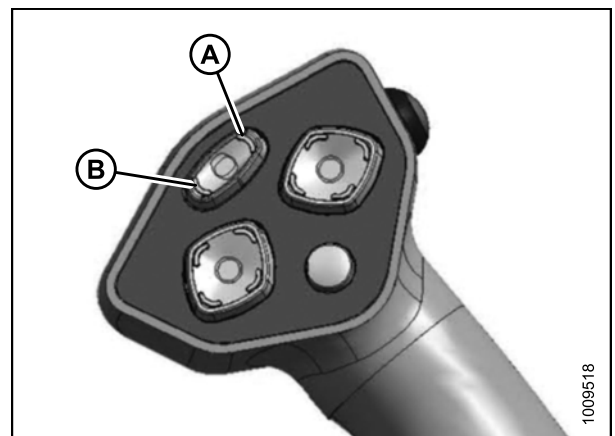


Figure 3.60: Ground Speed Lever

Draper Header

- Reel speed is limited in INDEX HEADER SPEED mode

Rotary Disc Header

- Conditioner speed automatically adjusts when DISC SPEED is changed

3.18.4 Console Header Switches

The operator's console contains switches for the following header functions:

Deck Shift/Float Preset Switch

Draper Header with Deck Shift Option

- Controls deck shifting and float settings for double windrowing options with a draper header

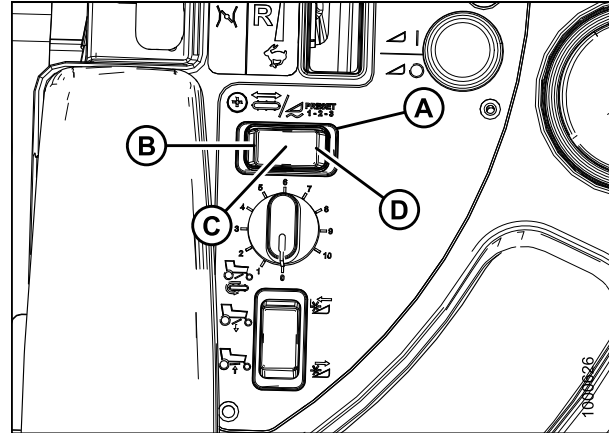


Figure 3.61: Header Switches

- A - Deck Shift/Float Preset Switch
- B - Left Side Delivery
- C - Center Delivery
- D - Right Side Delivery

Draper Header with Fixed Decks/Auger Header/Rotary Header

- Selects pre-programmed header float settings. Refer to [Float Options, page 198](#) to learn how to preset the float.

NOTE:

Refer to the section in this manual that is specific to your header for detailed switch operating modes.

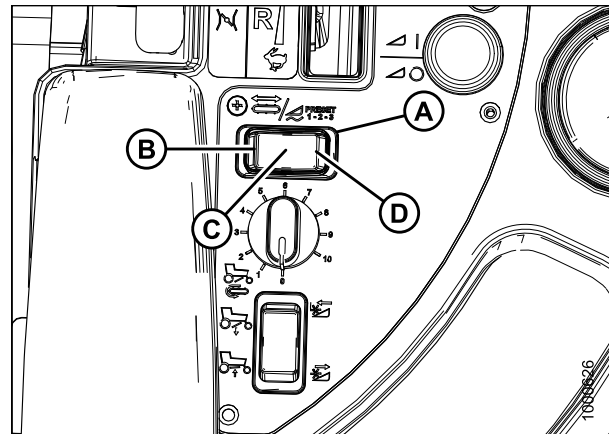


Figure 3.62: Header Switches

- A - Deck Shift/Float Preset Switch
- B - Float Preset 1
- C - Float Preset 2
- D - Float Preset 3

OPERATOR'S STATION

Double Windrow Attachment (DWA) / Swath Roller Switch (if installed)

With Double Windrow attachment

- If switch (A) is installed in the console, the DWA deck is raised with switch in position (C) or lowered in position (B). The cab display module (CDM) must be programmed for this configuration, refer to [Activating the Double Windrow Attachment \(DWA\), page 110](#).

Switch (A) may be used in lieu of the DWA switches on the ground speed lever (GSL).

With Swath Roller attachment

- The roller is raised by pressing switch (A) to position (C) or lowered with switch in position (B).

NOTE:

You may swap controls to the rocker switch or to the GSL handle, by changing the programming in the CDM. Refer to [3.19.5 Cab Display Module \(CDM\) Programming, page 89](#).

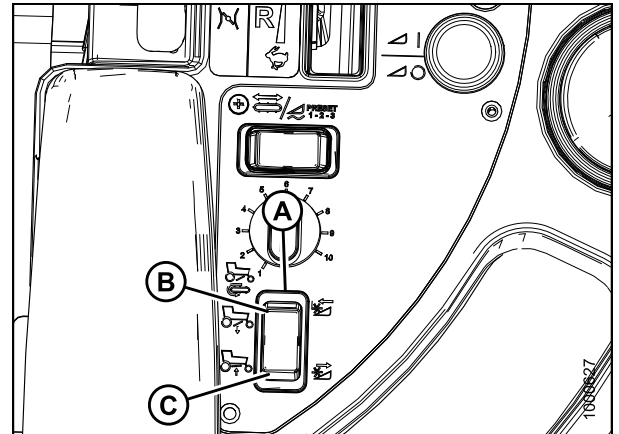


Figure 3.63: Console Switches

3.19 Cab Display Module (CDM)

3.19.1 Engine and Windrower Functions



Figure 3.64: Cab Display Module (CDM) Engine and Windrower Functions

- A – Engine rpm
- B – Ground Speed: mph or km/h
- C – DISPLAY: Engine/windrower functions
- D – HAZARD WARNING LIGHTS switch: Activates hazard warning lights, cancels turn signal
- E – SELECT switch: Allows operator to select display item on lower line. Push to SELECT
- F – TURN SIGNAL switches: Activates turn signals on windrower and header Push-ON / Push-OFF
- G – IGNITION switch positions: Accessory / Stop / Run / Start
- H – Engine warning lights: Engine Pre-Heat / Water In Fuel / CAUTION / Stop Engine

3.19.2 Header Functions



Figure 3.65: Cab Display Module (CDM)

- (A) DISPLAY: Header functions
- (B) SELECT SWITCH: Allows Operator to select display item on lower line. Push to SELECT.
- (C) FLOAT SWITCH – Header Right Side: Changes header float. The system remembers setting with deck shift option if activated with float setting switch. Push + to Increase. Push – to Decrease.
- (D) FLOAT SWITCH – Header Left Side: Changes header float. The system remembers setting with deck shift option if activated with float setting switch. Push + to Increase. Push – to Decrease.
- (E) AUGER/DRAPER SPEED ADJUST: Changes auger/drapper speed INDEX with INDEX SWITCH ON. Changes auger/drapper SPEED with INDEX SWITCH OFF. Push upper switch to increase. Push lower switch to decrease.
- (F) HEADER INDEX SWITCH: Links reel and conveyor speed to ground speed. Push-ON / Push-OFF.

NOTE:

Illuminates in ON position. (Header must be engaged)

- (G) RETURN TO CUT HEIGHT SWITCH: Allows cutting height preset. Push-ON/Push-OFF.

NOTE:

Illuminates in ON position. (Header must be engaged)

3.19.3 Operating Screens

The cab display module (CDM) and the windrower control module (WCM) provide information on several functions for the engine, header, and windrower. The information displayed in various operating modes is described in the following sections.



Figure 3.66: CDM Operating Screen

A - Display Selector for Upper Line
D - CDM Lower Line

B - Display
E - Display Selector for Lower Line

C - CDM Upper Line

Ignition ON, Engine Not Running

Display (Upper Line) (2–3 Seconds)	Description
HEADER DISENGAGED	Indicates HEADER DRIVE switch is OFF.
IN PARK	Indicates ground speed lever (GSL) is in N-DETENT.

Engine Running – At Initial Start Up

Display (upper line) (2–3 seconds)	Description
HEADER TYPE AND SIZE	Ignition start, engine running.
IN PARK	Indicates ground speed lever (GSL) in N-DETENT. On startup.

OPERATOR'S STATION

Engine-Forward, Engine Running

Display	Description
ROAD GEAR (Upper Line)	Ground speed range switch in high range.
#####.# ENGINE HRS (Upper or Lower Line)	Total engine operating time.
#####.# HEADER HRS (Upper or Lower Line)	Total header operating time.
##### TOTAL ACRES (Upper or Lower Line) ##### TOTAL HECT (if Metric)	Total area cut by machine.
##.# HEADER HEIGHT (Upper or Lower Line)	Distance setting (00.0–10.0) between cutterbar and ground.
##.# HEADER ANGLE (Upper or Lower Line)	Angle setting (00.0–10.0) header relative to ground.
### °C or F HYD OIL TEMP	Hydraulic oil temperature.
##.# VOLTS (Upper or Lower Line)	Engine electrical system operating voltage.
SCROLL (Lower Line)	Displays above items after 2–3 seconds; press SELECT to cancel.

Cab-Forward, Engine Running, Header Disengaged

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time.
#####.# HEADER HRS	Total header operating time.
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Area cut since last reset. To reset, display SUB ACRES on lower line, and hold down Program switch until display resets (5–7 seconds).
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine.
##.# HEADER HEIGHT	Distance setting (00.0–10.0) between cutterbar and ground.
##.# HEADER ANGLE	Angle setting (00.0–10.0) header relative to ground.
##.# L FLOAT R ##.#	Float setting (0.0–10.0).
### °C or F HYD OIL TEMP	Hydraulic oil temperature.
##.# VOLTS	Engine electrical system operating voltage.
SCROLL (Lower Line)	Displays above items after 2–3 seconds; press SELECT to cancel.

Cab-Forward, Engine Running, Header Engaged, Auger Header Index Switch OFF

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time.
#####.# HEADER HRS	Total header operating time.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
##.# ACRES/HOUR ##.# HECTARES/HOUR (If Metric)	Actual cutting rate in acres (hectares)/hour.
###.# SUB ACRES ###.# SUB HECTARES (If Metric)	Area cut since last reset. To reset, display SUB ACRES on lower line, and hold down program switch until display resets (5–7 seconds).
##### TOTAL ACRES ##### TOTAL HECT (If Metric)	Total area cut by machine.
###.# REEL RPM ###.# REEL SENSOR	Reel rotational speed. Sensor Disabled. RPM and SENSOR alternate at 1 second intervals.
##.# AUGER SPEED	Auger rotational speed (4.7–9.9).
#### KNIFE SPEED #### KNIFE SENSOR	Knife speed in strokes per minute. Sensor Disabled. SPEED and SENSOR alternate at 1 second intervals.
##.# HEADER HEIGHT ##.# HEADER SENSOR	Distance setting (00.0–10.0) between cutterbar and ground. Sensor Disabled. HEIGHT and SENSOR alternate at 1 second intervals.
##.# HEADER ANGLE ##.# HEADER SENSOR	Angle setting (00.0–10.0) header relative to ground. Sensor Disabled. ANGLE and SENSOR alternate at 1 second intervals.
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Left and right float setting (0.0–10.0). Sensor Disabled.
LOAD ■■■■ ####	Bar graph representing hydraulic operating pressure. Full scale is preprogrammed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ⁵ .
###.# °C or F HYD OIL TEMP ###.# °C or F HYD TEMP	Hydraulic oil temperature. Sensor Disabled. TEMP and SENSOR alternate at 1 second intervals.
##.# VOLTS	Engine electrical system operating voltage.
SCROLL SUB-MENU (Lower Line Only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays sub-menu after 2–3 seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch.

5. The LOAD sensor to monitor knife/conditioner circuit pressure is optional. To monitor reel/auger circuit pressure, relocate sensor as per Form MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Cab-Forward, Engine Running, Header Engaged, Auger Header Index Switch ON

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time.
#####.# HEADER HRS	Total Header operating time.
###.# ACRES/HOUR ###.# HECTARES/HOUR (If Metric)	Actual cutting rate in acres (hectares)/hour.
###.# SUB ACRES ###.# SUB HECTARES (If Metric)	Area cut since last reset. To reset, display SUB ACRES on lower line, and hold down program switch until display resets 5–7 seconds).
##### TOTAL ACRES ##### TOTAL HECT (If Metric)	Total area cut by machine.
##.## ##.# REEL IND. ##.## REEL SENSOR	Reel Peripheral speed along with ground speed in mph or km/h. Sensor disabled. IND and SENSOR alternate at 1 second intervals.
##.# AUGER SPEED ##.# AUGER SENSOR	Auger rotational speed (4.7–9.9). Sensor disabled. SPEED and SENSOR alternate at 1 second intervals.
#### KNIFE SPEED #### KNIFE SENSOR	Knife speed In strokes per minute. Sensor disabled. SPEED and SENSOR alternate at 1 second intervals.
##.# HEADER HEIGHT ##.# HEADER SENSOR	Distance setting (00.0–10.0) between cutterbar and ground. Sensor disabled. HEIGHT and SENSOR alternate at 1 second intervals.
##.# HEADER ANGLE ##.# TILT SENSOR	Angle setting (00.0–10.0) header relative to ground. Sensor disabled. ANGLE and SENSOR alternate at 1 second intervals.
##.# L FLOAT R ##.# FLOAT SENS DISABLED (If Sensor Disabled)	Left and right float setting (0.0–10.0). Sensor disabled.
LOAD ■■■■ #####	Bar graph representing hydraulic operating pressure. Full scale is preprogrammed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ⁶
###.# °C or F HYD OIL TEMP ###.# °C or F HYD TEMP	Hydraulic oil temperature. Sensor Disabled. TEMP and SENSOR alternate at 1 second intervals.

6. The LOAD sensor to monitor knife/conditioner circuit pressure is optional. To monitor reel/auger circuit pressure, relocate sensor as per Form MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Display (Lower or Upper Line)	Description
##.# VOLTS	Engine electrical system operating voltage.
SCROLL SUB-MENU (Lower Line Only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays sub-menu after 2–3 Seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch.

Engine Running, Header Engaged, Auger Header

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time.
#####.# UNIT HRS	Total windrower operating time.
#####.# HEADER HRS	Total header operating time.
##.# ACRES/HOUR ##.# HECTARES/HOUR (if Metric)	Actual cutting rate in acres (hectares)/hour.
###.# SUB ACRES ###.# SUB HECTARES (if Metric)	Area cut since last reset.
##### TOTAL ACRES ##### TOTAL HECT (if Metric)	Total area cut by machine.
##.# REEL RPM ##.# REEL SENSOR (Flashing)	Reel rotational speed. Optional ⁷ Sensor disabled.
##.# AUGER SPEED	Auger rotational speed (4.7–9.9).
#### KNIFE SPEED #### KNIFE SENSOR (Flashing)	Knife speed In strokes per minute. Optional ⁷ . Sensor disabled.
##.# HEADER HEIGHT ##.# HEADER SENSOR (Flashing)	Distance setting (00.0–10.0) between cutterbar and ground. Sensor disabled.
##.# HEADER ANGLE ##.# ANGLE SENSOR	Angle setting (00.0–10.0) header relative to ground. Optional ⁷ . Sensor disabled.
##.# VOLTS	Engine electrical system operating voltage.
FUEL ■■■■ ■■■■	Level of fuel in tank.
ENGINE TEMP ### °F ENGINE TEMP ### °C (if Metric)	Engine coolant temperature.
SCROLL SUB-MENU (Lower Line Only) #### KNIFE SPEED ##.# AUGER SPEED ##.# REEL RPM ##.# HEADER HEIGHT	Displays sub-menu after 2–3 Seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch. Knife speed is optional ⁷ . Reel rpm is optional ⁷ .

7. Optional: Available with Expansion Module installation – Whole Goods Bundle MD #B4666.

OPERATOR'S STATION

Cab-Forward, Engine Running, Header Engaged, Draper Header, Index Switch OFF

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time.
#####.# HEADER HRS	Total header operating time.
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Actual cutting rate in acres (hectares)/hour.
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Area cut since last reset. To reset, display SUB ACRES on lower line, and hold down program switch until display resets (5–7 seconds).
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine.
###.## REEL MPH ###.## REEL KPH (if metric) ###.## REEL SENSOR (flashing)	Reel peripheral speed. Sensor Disabled. MPH or KPH and SENSOR alternate at 1 second intervals.
##.# DRAPER SPEED	Draper speed (0.0–11.0).
#### KNIFE SPEED #### KNIFE SENSOR	Knife speed In strokes per minute. Sensor Disabled. SPEED and SENSOR alternate at 1 second intervals.
##.# HEADER HEIGHT ##.# HEADER SENSOR	Distance setting (00.0–10.0) between cutterbar and ground. Sensor Disabled. HEIGHT and SENSOR alternate at 1 second intervals.
##.# HEADER ANGLE ##.# HEADER SENSOR	Angle setting (00.0–10.0). Header relative to ground. Sensor Disabled. ANGLE and SENSOR alternate at 1 second intervals.
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Left and right float setting (0.0–10.0). Sensor Disabled.
###.# °C or F HYD OIL TEMP ###.# °C or F HYD SENSOR	Hydraulic oil temperature. Sensor Disabled. TEMP and SENSOR alternate at 1 second intervals.
LOAD ■■■■ #####	Bar graph representing hydraulic operating pressure. Full scale is pre-programmed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ⁸
##.# VOLTS	Engine electrical system operating voltage.
SCROLL SUB-MENU (Lower Line Only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ##### ###.## REEL MPH ##.# DRAPER SPEED	Displays sub-menu after 2–3 seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch.
KNIFE SPD OVERLOAD	Knife or Disc Speed Drops Below Programmed Value.

8. The LOAD sensor to monitor knife/conditioner circuit pressure is optional. To monitor reel/auger circuit pressure, relocate sensor as per Form MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Cab-Forward, Engine Running, Header Engaged, Draper Header, Index Switch ON

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time.
#####.# HEADER HRS	Total header operating time.
##.# ACRES/HOUR ##.# HECTARES/HOUR (if metric)	Actual cutting rate in acres (hectares)/hour.
###.# SUB ACRES ###.# SUB HECTARES (if metric)	Area cut since last reset. To reset, display SUB ACRES on lower line and hold down program switch until display resets (5–7 Seconds).
##### TOTAL ACRES ##### TOTAL HECT (if metric)	Total area cut by machine.
###.### REEL IND REEL.SENSOR	Reel peripheral speed along with ground speed in mph or km/h. Sensor Disabled. IND and SENSOR alternate at 1 second intervals.
##.# ##.# DRAP INDX	Draper speed along with ground speed in mph or km/h.
#### KNIFE SPEED #### KNIFE SENSOR	Knife speed in strokes per minute. Sensor Disabled. SPEED and SENSOR alternate at 1 second intervals.
##.# HEADER HEIGHT ##.# HEADER SENSOR	Distance setting (00.0–10.0) between cutterbar and ground. Sensor Disabled. HEIGHT and SENSOR alternate at 1 second intervals.
##.# HEADER ANGLE ##.# HEADER SENSOR	Angle setting (00.0–10.0) header relative to ground. Sensor Disabled. ANGLE and SENSOR alternate at 1 second intervals.
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Left and right float setting (0.0–10.0). Sensor Disabled.
LOAD ■■■■ #####	Bar graph representing hydraulic operating pressure. Full scale is pre-programmed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ⁹
##.# VOLTS	Engine electrical system operating voltage.
SCROLL SUB-MENU (lower line only) #### KNIFE SPEED ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ###.### REEL IND ##.# ##.# DRAP INDX	Displays sub-menu after 2–3 seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch.
###.### REEL MIN RPM (lower line)	Reel speed drops below programmed set-point.
MINIMUM (lower line)	Reel speed at zero ground speed.

9. The LOAD sensor to monitor knife/conditioner circuit pressure is optional. To monitor reel/auger circuit pressure, relocate sensor as per Form MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Cab-Forward, Engine Running, Header Engaged, Rotary Header Installed

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Lower or Upper Line)	Description
#####.# ENGINE HRS	Total engine operating time.
#####.# HEADER HRS	Total header operating time.
##.# ACRES/HOUR ##.# HECTARES/HOUR (If Metric)	Actual cutting rate in acres (hectares)/hour.
###.# SUB ACRES ###.# SUB HECTARES (If Metric)	Area cut since last reset. To reset, display SUB ACRES on lower line, and hold down program switch until display resets (5–7 seconds).
##### TOTAL ACRES ##### TOTAL HECT (If Metric)	Total area cut by machine.
#### DISC RPM ##.## DISC SENSOR	Disc rotational speed. Sensor Disabled. RPM and SENSOR alternate at 1 second intervals.
##.# HEADER HEIGHT ##.# HEIGHT SENSOR	Distance setting (00.0–10.0) between cutterbar and ground. Sensor Disabled. HEIGHT and SENSOR alternate at 1 second intervals.
##.# HEADER ANGLE ##.# HEADER SENSOR	Angle setting (00.0–10.0) header relative to ground. Sensor Disabled. ANGLE and SENSOR alternate at 1 second intervals.
##.# L FLOAT R ##.# FLOAT SENS DISABLED	Left and right float setting (0.0–10.0). Sensor Disabled.
LOAD ■■■■ ####	Bar graph representing hydraulic operating pressure. Full scale is pre-programmed overload pressure (2500–5000 psi). If sensor disabled, LOAD does not display ¹⁰ .
### °C or F HYD OIL TEMP ### °C or F HYD TEMP	Hydraulic oil temperature. Sensor Disabled. TEMP and SENSOR alternate at 1 second intervals.
##.# VOLTS	Engine electrical system operating voltage.
SCROLL SUB-MENU (Lower Line Only) #### DISC RPM ##.# HEADER HEIGHT LOAD ■■■■ ■■■■ ####	Displays sub-menu after 2–3 seconds. Press SELECT to cancel. Scroll through sub-menu display with CDM switch.

Miscellaneous Operational Information

Scroll through display with cab display module (CDM) switch or ground speed lever (GSL) switch.

Display (Upper Line)	Description
HEADER DISENGAGED	Header drive is disengaged.
##.# FOOT DISK	AUGER or DRAPER will appear in place of DISK, depending on type of header attached.

10. The LOAD sensor to monitor knife/conditioner circuit pressure is optional-installed. To monitor reel/auger circuit pressure, relocate sensor as per Form MD #169031, which is available through your Dealer.

OPERATOR'S STATION

Display (Upper Line)	Description
IN PARK	GSL in N-DETENT position.
< LEFT TURN ■	Indicates left turn when left arrow is pressed on CDM. Engine-forward mode only ¹¹ .
■ RIGHT TURN >	Indicates right turn when right arrow is pressed on CDM. Engine forward mode only ¹²
■ HAZARD ■	Indicates hazard warning lights are on when hazard button is pressed on CDM.
HEADER REVERSE	Header drive running in reverse.
HEADER ENGAGED	Header drive engaged.
ROAD GEAR	With HIGH RANGE selected on Console switch. Engine-forward only ¹²

11. If road light kit is not installed, CDM will display E135 LEFT STOP LAMP as a malfunction in CAB-FORWARD mode.

12. If road light kit is not installed, CDM will display E134 RIGHT STOP LAMP as a malfunction in CAB-FORWARD mode.

3.19.4 Cab Display Module (CDM) Warning/Alarms

The CDM displays warnings and sounds alarms to notify of abnormal windrower status at startup when the ignition is turned ON, and at engine operating speeds above 500 rpm.

Engine Warning Lights



Figure 3.67: CDM Engine Warning Lights

A - Engine Pre-Heat
D - Stop

B - Water in Fuel
E - Display

C - Caution

- ENGINE PRE-HEAT: Illuminates yellow. Wait to start engine.
- WATER IN FUEL: Illuminates yellow. Service recommended.
- CAUTION: Illuminates yellow. Prompt attention is required. Refer to display code.
- STOP: Illuminates red. Stop engine immediately. Refer to display code.
- DISPLAY: Displays malfunction code. Refer to [8.4 Engine Error Codes, page 469](#) or your Dealer.

OPERATOR'S STATION

Display Warnings and Alarms

Informs Operator of abnormal windrower conditions.



Figure 3.68: CDM Display Warnings and Alarms

Display (A)	Flashing	Alarm Tone	Description
BRAKE OFF	X	Short beep with each flash	Engine running, brake solenoid not activated
BRAKE ON	X	Short beep with each flash	Ground speed lever (GSL) out of N-DETENT, but interlock switch remains closed to apply brake
BRAKE SW FAILURE	X	Short beep with each flash	Ignition ON / engine not running, brake switch and relay closed
CAB-FORWARD SW ON/ ENG-FORWARD SW ON	X	Messages flash alternately	Both seat switches activated
CENTER STEERING		Beeps at 2 per second	GSL or interlock switches not closed with key ON / engine OFF
DISENGAGE HEADER RE-ENGAGE <1800 RPM>	X	None	R80/R85 - Engine rpm above 1800 rpm when engaging header
ENGINE AIR FILTER	X	Single loud tone for 10 seconds, Repeats every 30 minutes until condition is corrected	Engine air filter requires servicing

OPERATOR'S STATION

Display (A)	Flashing	Alarm Tone	Description
ENGINE TEMPERATURE	X	Ongoing intermittent moderate tone until temperature is below 215°F (102°C)	Engine temperature over 230°F (110°C)
HEADER DISENGAGED		None	Normal
DISENGAGE HEADER	X	None	Header switch is in the ON position when ignition switch is turned ON
HEADER OIL PRESS	X	Continuous loud tone until oil pressure is regained	Low header charge oil pressure causes header to shut down: header ON switch must be moved to OFF position and then to ON position to restart the header
HYDRAULIC FILTER	X	Single loud tone for 10 seconds, Repeats every 15 minutes until condition is corrected	Excessive pressure increase across hydraulic oil filter
### °C or F HYD OIL COLD	X	Tone sounds with each flash for 5 seconds and then stops for 1 minute: flashing continues if oil still cold after 1 minute, tone sounds again	Hydraulic oil temp <50°F (10°C)
### °C or F HYD OIL HOT	X	Tone with each flash for 5 seconds at 220°F (105°C) then tone stops for 1 minute while flashing continues: if oil still hot after 1 minute, tone sounds again. Flashing and steady tone at temperatures of 230°F (110°C) and higher	Hydraulic oil temp >220°F (105°C) but <230°F (110°C)
IN PARK	X	One short beep	GSL in N-DETENT, steering wheel centered, and brakes are engaged
KNIFE SPEED OVERLOAD	X	Short beep with each flash until condition is corrected	Machine overload: knife or disc speed drops below programmed value
LOCK SEAT BASE	X	None	Seat base not detected in cab or engine-forward position
LOW HYDRAULIC OIL	X	Continuous loud tone for 5 seconds, If condition is not rectified, single loud tone every 5 minutes	Low hydraulic oil level, header shuts down automatically if engaged: Header ON switch must be moved to OFF position and then to ON position to restart the header
NO HEADER		None	Header is not detected

OPERATOR'S STATION

Display (A)	Flashing	Alarm Tone	Description
NO OPERATOR		Continuous tone	Operator not detected in seat with header engaged or out of N-DETENT: engine shutdown after 5 seconds
NO OPERATOR ENGINE SHUT DOWN		Continuous tone	Engine shutdown when Operator not detected in seat with machine moving under 5 mph (8 km/h)
NOT IN PARK	X	Short beep with each flash	GSL or interlock switches not closed with key ON / engine OFF
PLACE GSL INTO "N"		Beeps at 2 per second until corrected	GSL or interlock switches not closed with key ON / engine OFF
SLOW DOWN	X	Short beep with each flash	Ground speed is greater than or equal to 25 mph (40 km/h): Operator should pull back on the GSL to reduce ground speed
TRANS OIL PRESS	X	Continuous loud tone until oil pressure is regained	Low transmission charge oil pressure
TRANS OIL TEMP	X	Ongoing intermittent moderate tone until temperature is below acceptable level	Transmission oil temperature above 221°F (105°C)
##.# LOW VOLTS	X	Single loud tone for 10 seconds	Voltage below 11.5
##.# HIGH VOLTS	X	Single loud tone for 10 seconds	Voltage above 15.5

3.19.5 Cab Display Module (CDM) Programming



Figure 3.69: CDM

A - Side Display

B - Main Display

C - Select Switch

D - Menu Item Scroll Forward

E - Menu Item Scroll Backward

F - Program Switch

Side Display: Displays software revision status.

- Upper Line – C### (CDM)
- Lower Line – M### (WCM)

Main Display: Displays menu item and selection¹³.

- Upper Line – Menu Item
- Lower Line – Selection

Select Switch: Places monitor into Program Mode with program switch. Press to accept menu item and advance to next item.

Menu Item Scroll Forward: Displays value under menu item.

- Push to scroll forward
- Hold down for fast scroll¹⁴

Menu Item Scroll Backward: Displays value under menu item.

- Push to scroll backward
- Hold down for fast scroll¹⁴

Program Switch: Places monitor into program mode. Press while pressing select switch.

13. The current selection is flashing.

14. Fast scroll applies only when changing KNIFE SPEED, OVERLOAD PRESSURE, and TIRE SIZE.

OPERATOR'S STATION

NOTE:

Contact your MacDon Dealer for information regarding software updates to the electronic modules. Your Dealer will have the necessary interface tools and access to the latest software upgrades.

NOTE:

The following menus are available when ignition key is set to RUN:

- WINDROWER SETUP
- CAB DISPLAY SETUP
- DIAGNOSTIC MODE

The CALIBRATE SENSORS menu is available only when engine is running.

3.19.6 Cab Display Options

The display and sound features of the cab display module (CDM) can be adjusted to suit each particular Operator.

NOTE:

The procedures listed in this section are current for cab display module (CDM) software version C417 and windrower control module (WCM) M221. The WCM is supplied pre-loaded with the latest released version of the operating software. Any subsequent updates will be made available via internet download from the MacDon web site: macdondealers.com.

NOTE:

Screens may appear differently if running newer or older versions of software, and not all features are available for every machine.

Setting the Cab Display Language

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

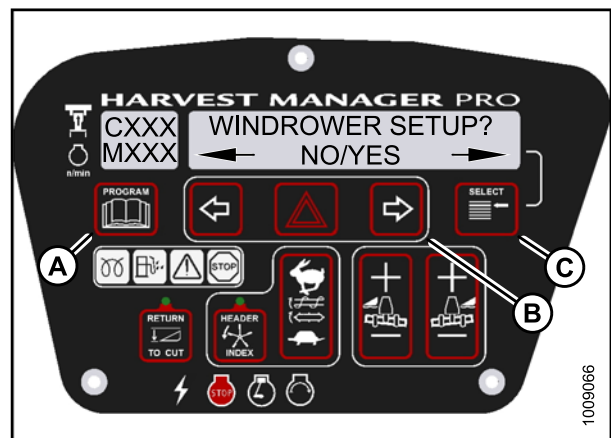


Figure 3.70: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

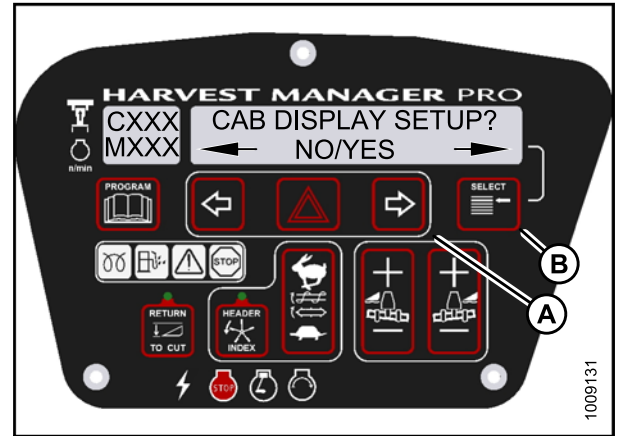


Figure 3.71: M155 Cab Display Setup

- Press right (C) arrow select YES. Press SELECT (D).
 - DISPLAY LANGUAGE? is displayed on the upper line.
 - Default language is displayed on the lower line.
- Press left (B) or right (C) arrow to select preferred language.

NOTE:

English, Russian, and Spanish language options are available on windrowers. Not all options are available on all windrowers.

- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

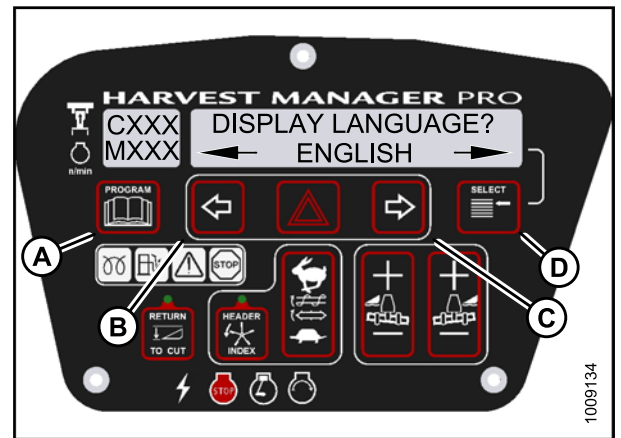


Figure 3.72: M155 Display Language

Changing the Windrower Display Units

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

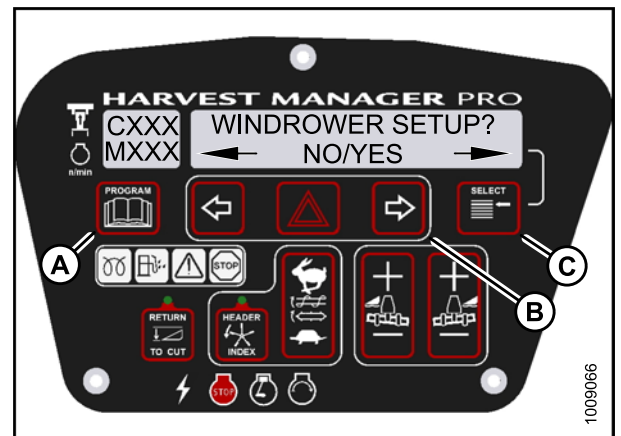


Figure 3.73: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? is displayed on the upper line.

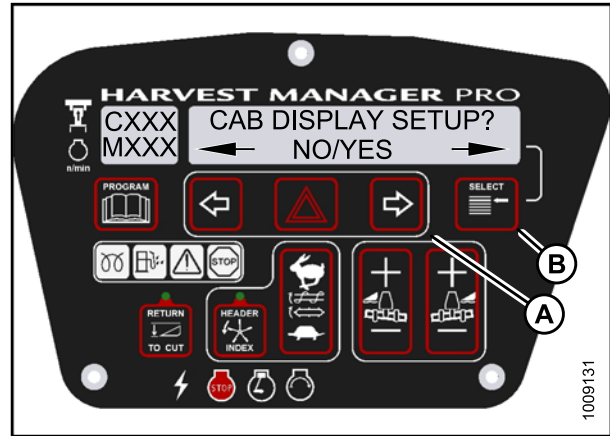


Figure 3.74: M155 Cab Display Setup

5. Press SELECT (D) until DISPLAY UNITS? is displayed on the upper line.
 - Default setting is displayed on the lower line.
6. Press left (B) or right (C) arrow to select either METRIC or IMPERIAL speed display.
7. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

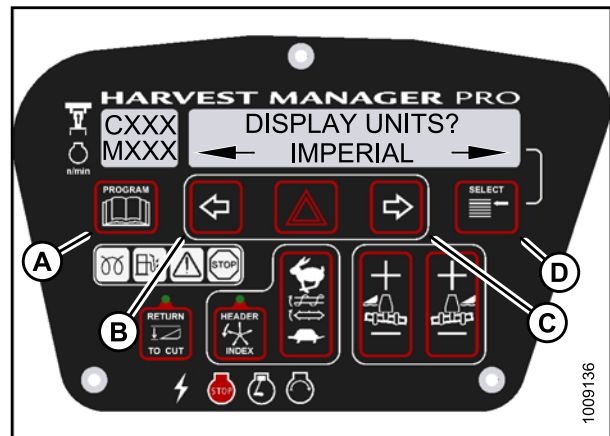


Figure 3.75: M155 Display Units

Adjusting the Cab Display Buzzer Volume

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

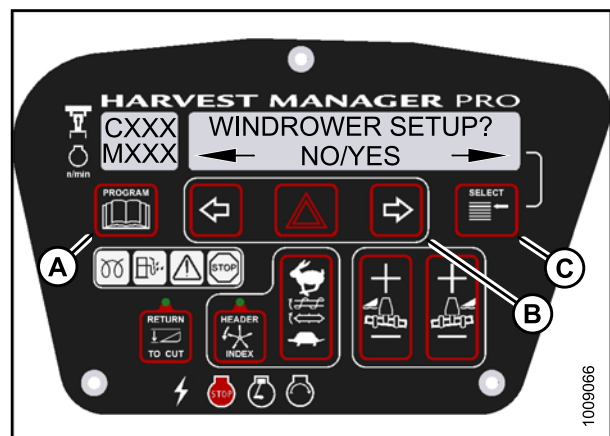


Figure 3.76: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? is displayed on the upper line.

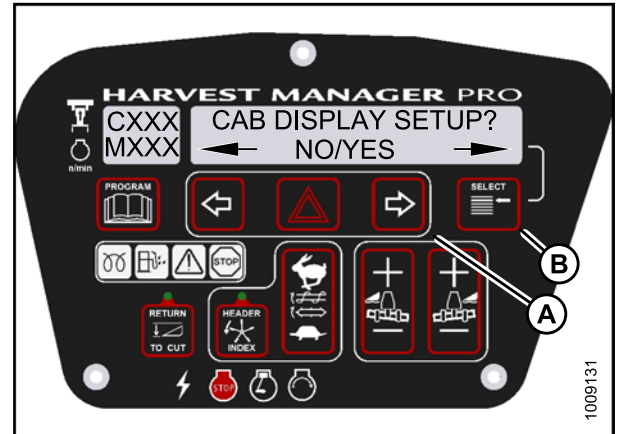


Figure 3.77: M155 Cab Display Setup

5. Press SELECT (D) until BUZZER VOLUME is displayed on the upper line.
 - Previous setting is displayed on the lower line.
6. Press left (B) or right (C) arrows to adjust buzzer volume.
7. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

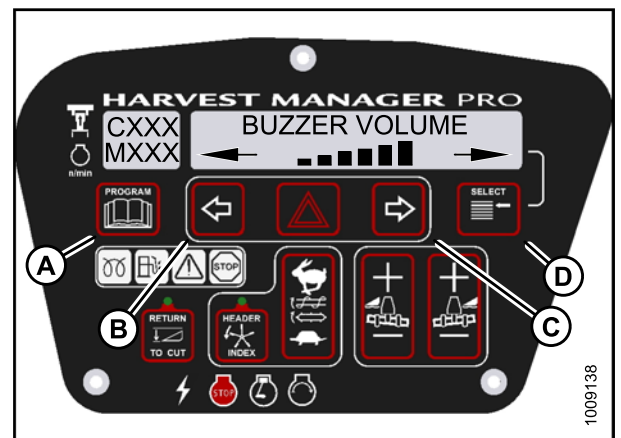


Figure 3.78: M155 Buzzer Volume

Adjusting the Cab Display Backlighting

The backlighting feature brightens the display screen helping you read the cab display module (CDM) in low light situations.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

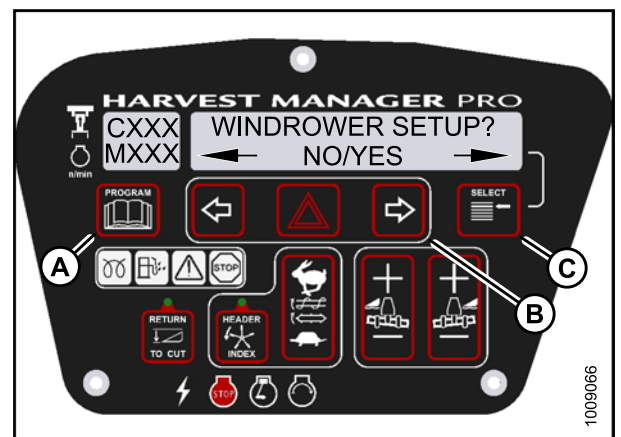


Figure 3.79: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? is displayed on the upper line.

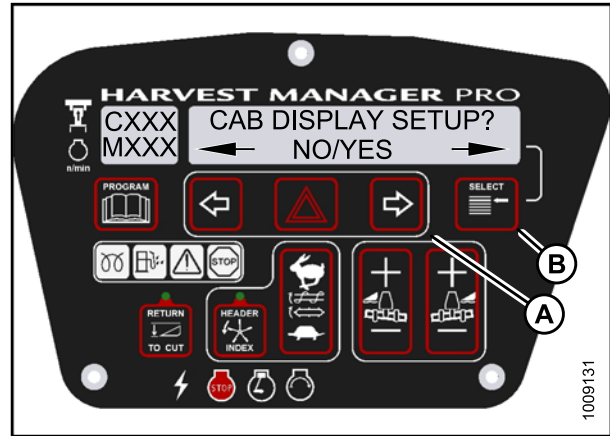


Figure 3.80: M155 Cab Display Setup

5. Press SELECT (D) until BACKLIGHTING is displayed on the upper line.
 - Default setting is displayed on the lower line.
6. Press left (B) or right (C) arrows to adjust display backlighting.
7. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

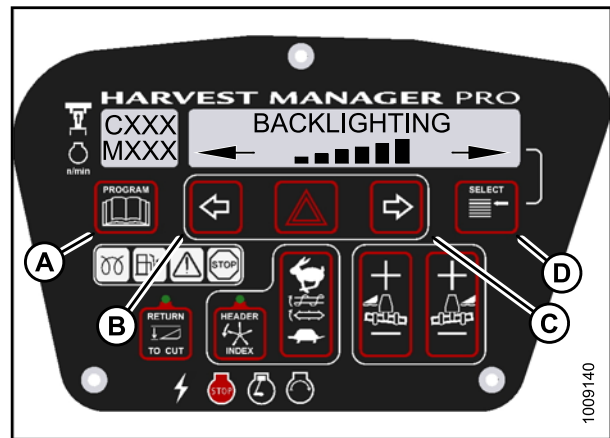


Figure 3.81: M155 Backlighting

Adjusting the Cab Display Contrast

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

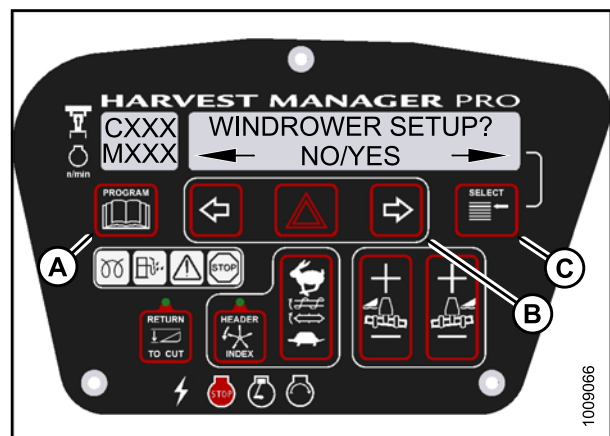


Figure 3.82: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until CAB DISPLAY SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - DISPLAY LANGUAGE? is displayed on the upper line.

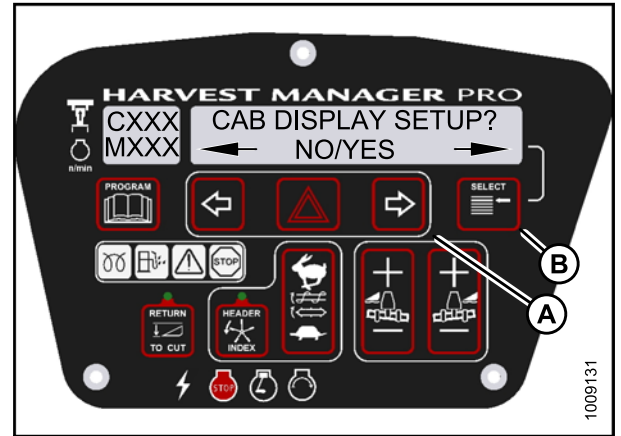


Figure 3.83: M155 Cab Display Setup

5. Press SELECT (D) until DISPLAY CONTRAST is displayed on the upper line.
 - Default setting is displayed on the lower line.
6. Press left (B) or right (C) arrows to adjust display contrast.
7. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next CAB DISPLAY SETUP? action.

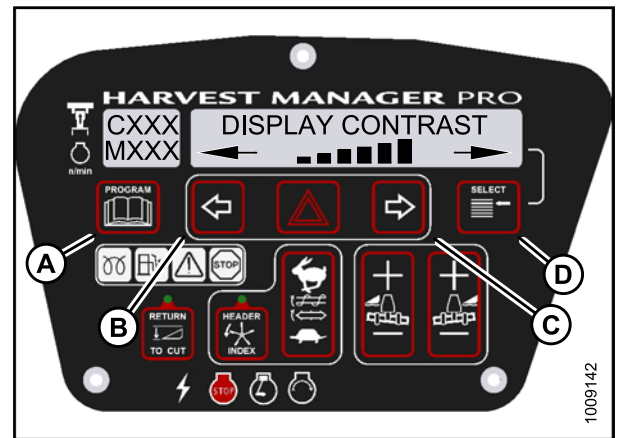


Figure 3.84: M155 Display Contrast

3.19.7 Calibrating the Header Sensors

Sensor calibration programs the windrower control module (WCM) with settings for the attached header.

Calibrating the Header Height Sensor

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- The engine **MUST** be running to perform this procedure.

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
3. Press SELECT (C) until CALIBRATE SENSORS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

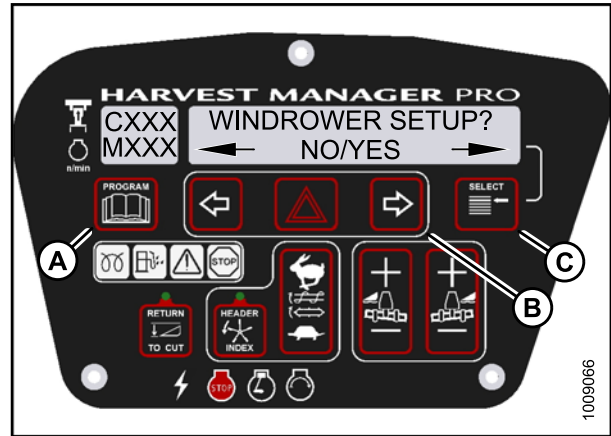


Figure 3.85: M155 CDM Programming Buttons

4. Press right (B) arrow to select Yes. Press SELECT (C).
 - TO CALIBRATE SELECT is displayed in upper line.
5. Press left (A) or right (B) arrow until HEADER HEIGHT is displayed on the lower line. Press SELECT (C).
 - CALIBRATING HEIGHT is displayed on the upper line.
 - RAISE HEADER HOLD is displayed on the lower line.



Figure 3.86: M155 Header Height Calibration

CAUTION

Check to be sure all bystanders have cleared the area.

6. Press and hold the HEADER UP (C) button on the ground speed lever (GSL).
 - CALIBRATING HEIGHT is displayed on the upper line.
 - RAISE HEADER HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration. RAISE HEADER DONE will display on the lower line once calibration is complete.

7. Release the HEADER UP (C) button.
 - HEIGHT SENSOR CAL is displayed on the upper line.
 - PRESS LOWER HEADER is displayed on the lower line.

8. Press and hold HEADER DOWN (A) button on GSL.

NOTE:

The word HOLD will flash during calibration. HT SENSOR COMPLETE will display on the lower line once calibration is complete.

9. Release HEADER DOWN (A) button.
 - TO CALIBRATE SELECT is displayed on the upper line.
 - HEADER HEIGHT is displayed on the lower line.
10. Press right arrow to select next header sensor calibration or STOP & EXIT. Press SELECT. Refer to [Calibrating the Header Tilt Sensor, page 98](#) or [Calibrating the Header Float Sensors, page 100](#).
11. Press PROGRAM to exit Programming Mode.

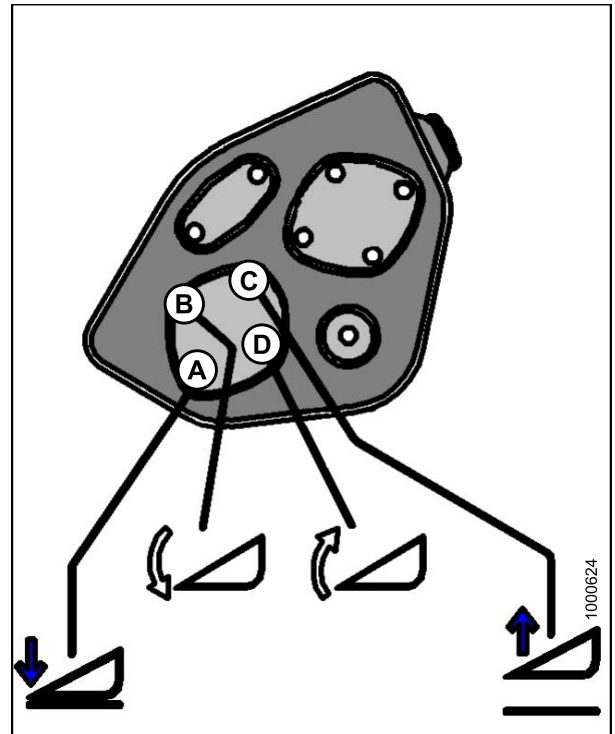


Figure 3.87: Header Height Controls on Ground Speed Lever

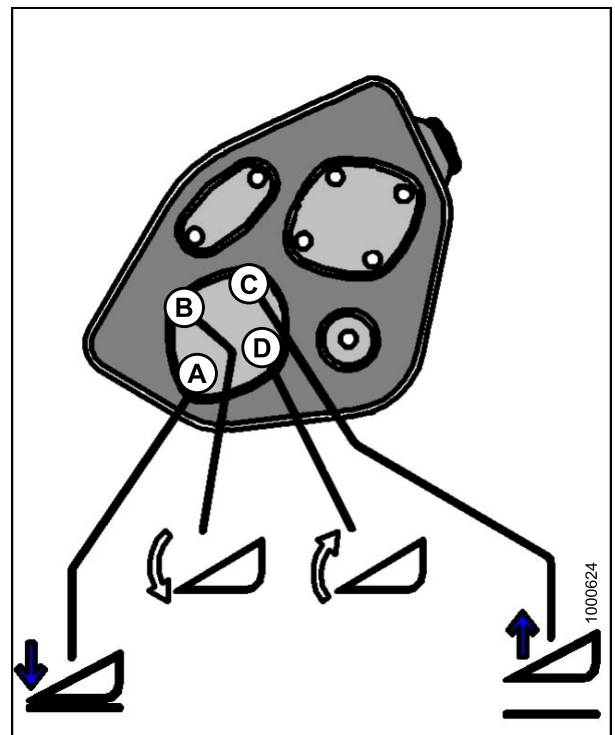


Figure 3.88: Header Height Controls on Ground Speed Lever

OPERATOR'S STATION

Calibrating the Header Tilt Sensor

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. Refer to [4.5 Attaching and Detaching Headers, page 213](#).
- This procedure requires installation of the optional Hydraulic Center-Link (MD #B4650) .
- The engine **MUST** be running to perform this procedure.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
3. Press SELECT (C) until CALIBRATE SENSORS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

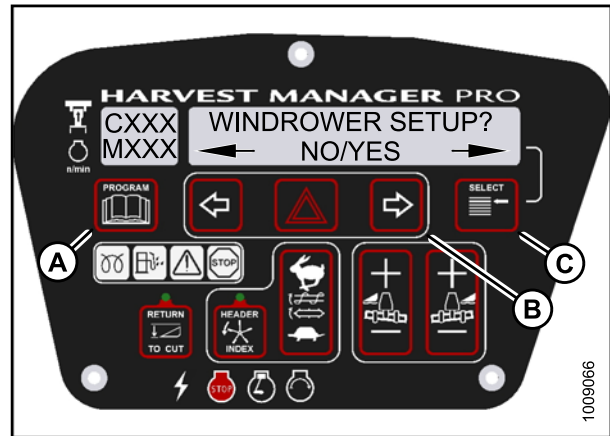


Figure 3.89: M155 CDM Programming Buttons

4. Press right (B) arrow to select Yes. Press SELECT (C).
 - TO CALIBRATE SELECT is displayed in upper line
5. Press left (A) or right (B) arrow until HEADER TILT is displayed on the lower line. Press SELECT (C).
 - HDR TILT SENSOR CAL is displayed on the upper line.
 - EXTEND TILT TO START is displayed on the lower line.

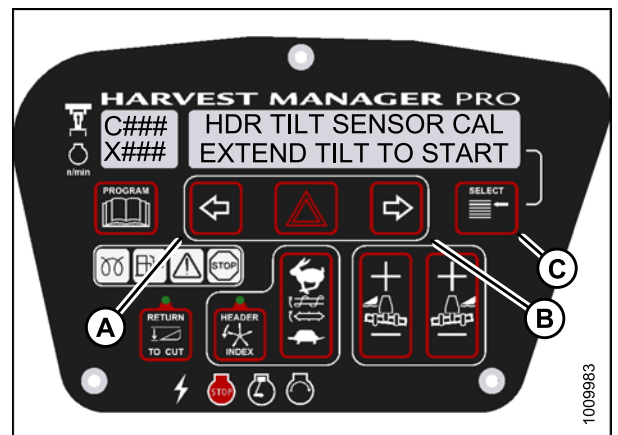


Figure 3.90: M155 Header Tilt

CAUTION

Check to be sure all bystanders have cleared the area.

6. Press and hold the HEADER TILT EXTEND (B) button on the ground speed lever (GSL).
 - CALIBRATING TILT is displayed on the upper line.
 - EXTEND TILT HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration. HEADER TILT DONE will display on the lower line once calibration is complete.

7. Release the HEADER TILT EXTEND (B) button.
 - HEADER TILT SENSOR CAL is displayed on upper line.
 - PRESS RETRACT TILT is displayed on the lower line.

8. Press and hold HEADER TILT RETRACT (D) button on GSL.
 - CALIBRATING TILT is displayed on the upper line.
 - RETRACT TILT HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration. HEADER TILT COMPLETE will display on the lower line once calibration is complete.

9. Release HEADER TILT RETRACT (D) button.
 - TO CALIBRATE SELECT is displayed on the upper line.
 - HEADER TILT is displayed on the lower line.
10. Press right arrow to select next header sensor calibration or STOP & EXIT. Press SELECT. Refer to [Calibrating the Header Height Sensor, page 95](#) or [Calibrating the Header Float Sensors, page 100](#).
11. Press PROGRAM to exit Programming Mode.

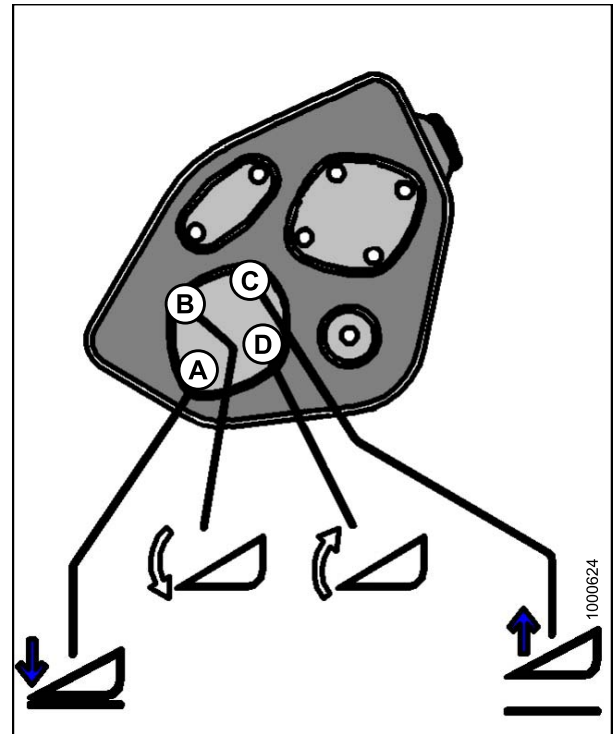


Figure 3.91: Header Tilt Controls on Ground Speed Lever

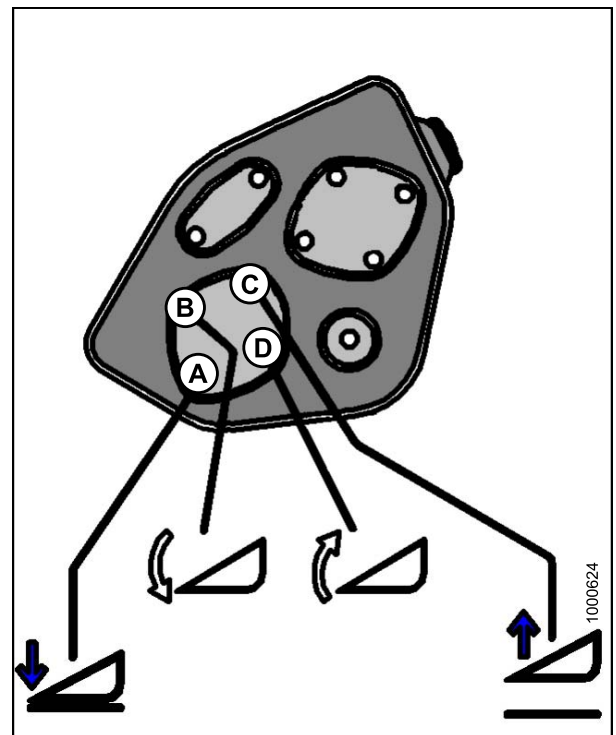


Figure 3.92: Header Tilt Controls on Ground Speed Lever

OPERATOR'S STATION

Calibrating the Header Float Sensors

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

- The Operator can use the left or right FLOAT buttons on the cab display module (CDM) to perform this procedure.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
3. Press SELECT (C) until CALIBRATE SENSORS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

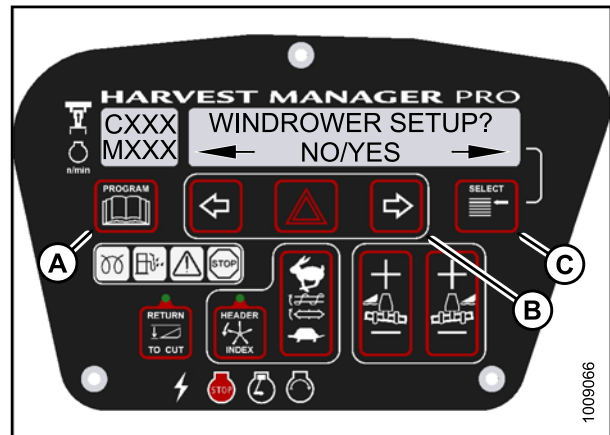


Figure 3.93: M155 CDM Programming Buttons

4. Press right (B) arrow to select Yes. Press SELECT (C).
 - TO CALIBRATE SELECT is displayed in upper line.
5. Press left (A) or right (B) arrow until HEADER FLOAT is displayed on the lower line. Press SELECT (C).
 - CALIBRATING FLOAT is displayed on the upper line.
 - PRESS FLOAT + TO START is displayed on the lower line.

CAUTION

Check to be sure all bystanders have cleared the area.

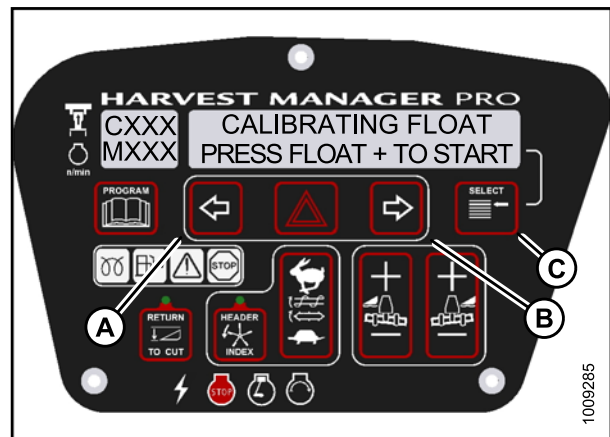


Figure 3.94: M155 Header Float

OPERATOR'S STATION

- Press and hold FLOAT + button (A) on the CDM.
 - CALIBRATING FLOAT is displayed on the upper line.
 - FLOAT (+) HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration.
FLOAT (+) DONE will display on the lower line once calibration is complete.

- Release the FLOAT + button (A).
 - CALIBRATING FLOAT is displayed on the upper line.
 - FLOAT (-) HOLD is displayed on the lower line.

- Press and hold FLOAT - button (A) on CDM.
 - CALIBRATING FLOAT is displayed on the upper line.
 - FLOAT (-) HOLD is displayed on the lower line.

NOTE:

The word HOLD will flash during calibration.
HDR FLOAT COMPLETE will display on the lower line once calibration is complete.

- Release FLOAT - button (A).
 - TO CALIBRATE SELECT is displayed on the upper line.
 - HEADER FLOAT is displayed on the lower line.

- Press right arrow to select next header sensor calibration or STOP & EXIT. Press SELECT
Refer to [Calibrating the Header Height Sensor, page 95](#) or [Calibrating the Header Tilt Sensor, page 98](#).

- Press PROGRAM to exit Programming Mode.

3.19.8 Programming the Windrower

The windrower can be programmed to meet changing crop conditions, activate newly added options, indicate a change of header type, or increase the comfort level of the Operator.

Activating the Hydraulic Center-Link on an M155

NOTE:

- This procedure requires installation of the optional Hydraulic Center-Link (MD #B4650).



Figure 3.95: M155 Positive Header Float



Figure 3.96: M155 Negative Header Float

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

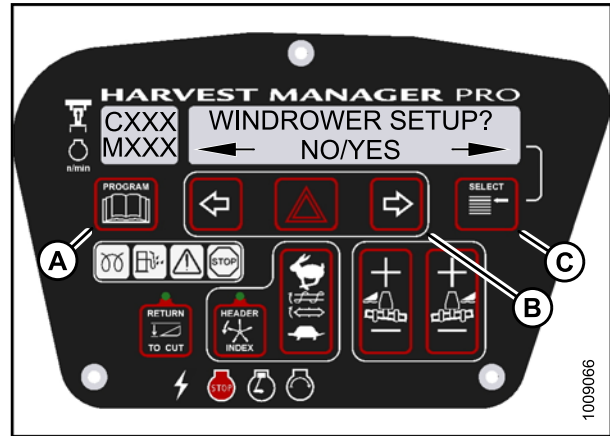


Figure 3.97: M155 CDM Programming Buttons

4. Press SELECT (C) until TILT CYL INSTALLED? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (B) arrow to select YES. Press SELECT (C).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (C) to proceed to next WINDROWER SETUP action.

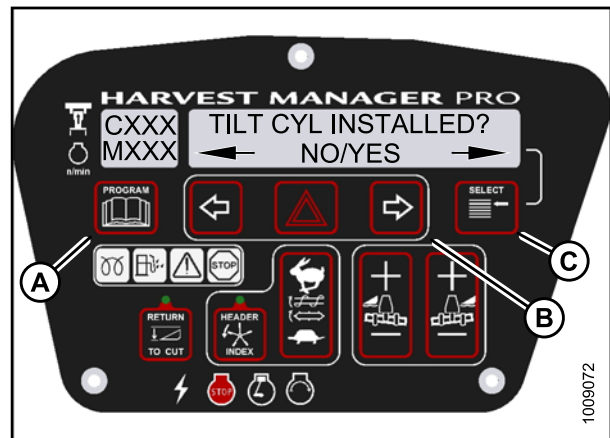


Figure 3.98: M155 Hydraulic Center-Link

Activating the Rotary Header Drive Hydraulics on an M155

NOTE:

This procedure requires installation of the optional Rotary Header Drive Hydraulics (MD #B5510). For more information, refer to [7.1.17 Rotary Header Drive Hydraulics \(13-foot\)](#), page 450.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

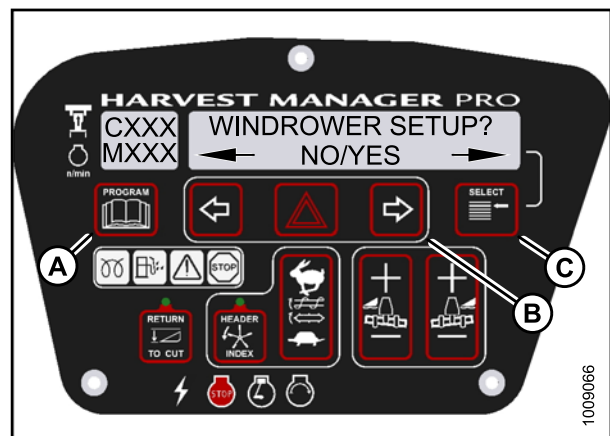


Figure 3.99: CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (D) until DISC BLK INSTALLED? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (C) arrow to select YES. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

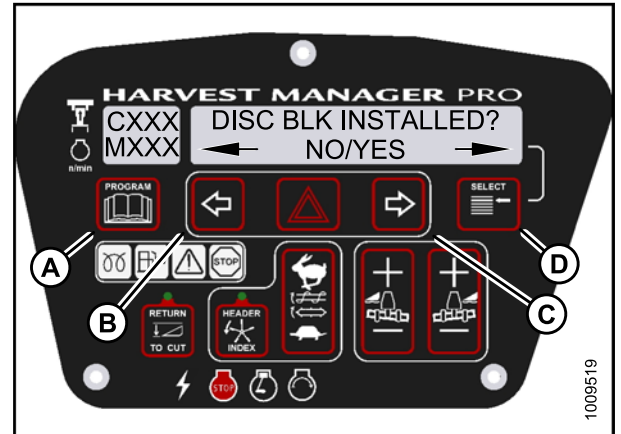


Figure 3.100: Rotary Disc Hydraulics

Setting the Knife Overload Speed

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - The recommended knife overload speed is 75% of knife speed.
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
 3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

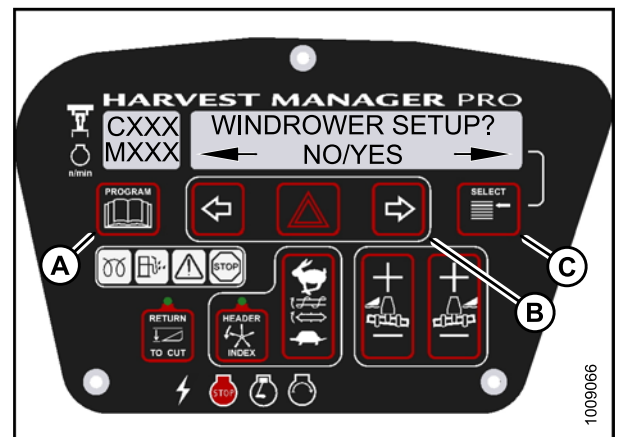


Figure 3.101: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until KNIFE OVERLOAD SPD? is displayed on the upper line.

- Current overload speed is displayed on the lower line.

NOTE:

Default setting is -300 SPM. Range is -500 to -100 SPM.

- Press left (B) or right (C) arrows to set knife overload speed. Press SELECT (D).
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

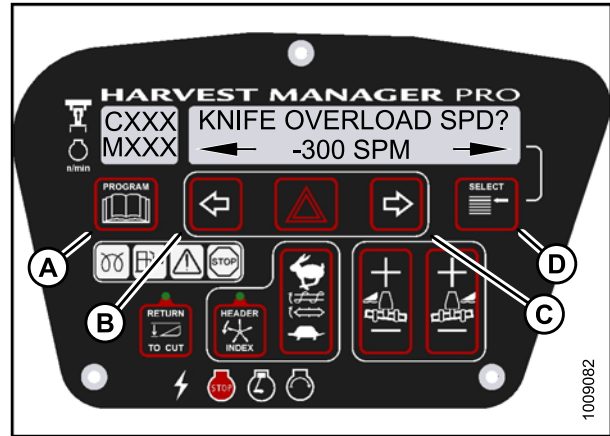


Figure 3.102: M155 Knife Overload Speed

Setting the Rotary Disc Overload Speed

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- The recommended disc overload speed is 75% of disc speed. For more information refer to the rotary disc header operator's manual to determine proper overload speed.

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

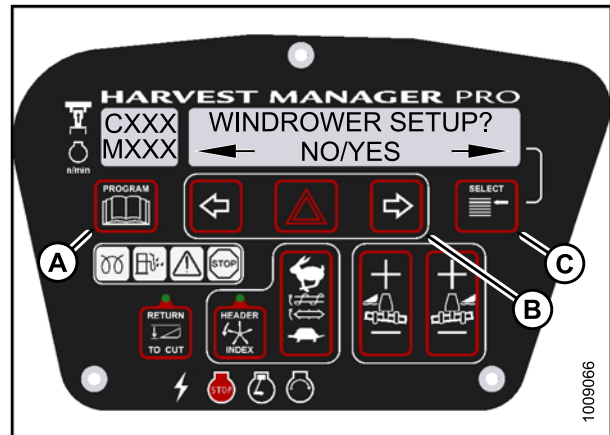


Figure 3.103: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (D) until DISK OVERLOAD SPD? is displayed on the upper line.

- The current overload speed is displayed on the lower line.

NOTE:

Default setting is -300 SPM. Range is -500 to -100 rpm.

5. Press left (B) or right (C) arrows to set disc overload speed. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

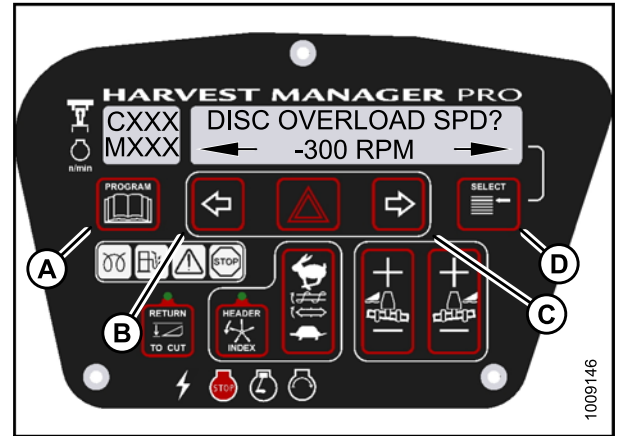


Figure 3.104: M155 Disc Overload Speed

Setting the Header Knife Speed

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.
 - The current knife speed is displayed on the lower line.

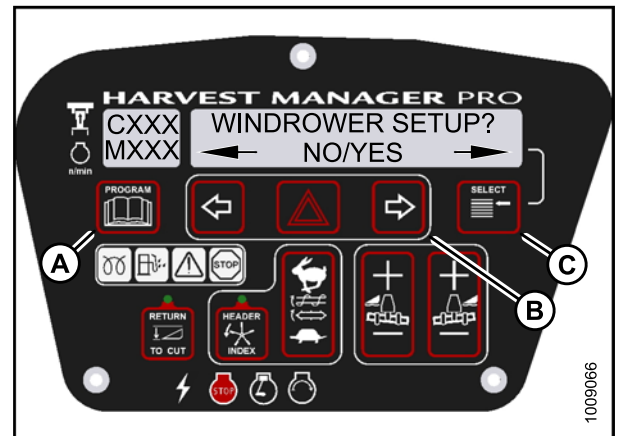


Figure 3.105: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press left (B) or right (C) arrows to select knife speed. Press SELECT (D).
5. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

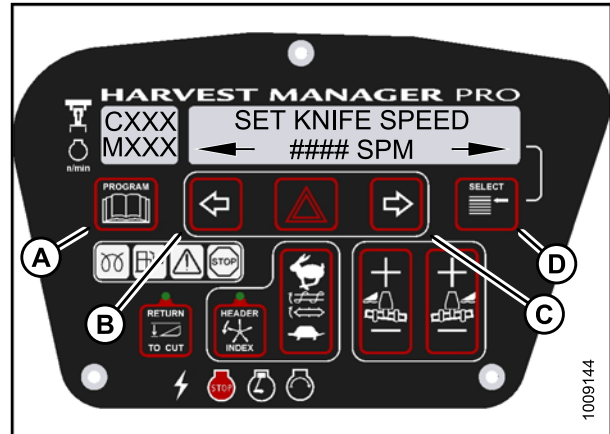


Figure 3.106: M155 Knife Speed

Setting the Hydraulic Overload Pressure

NOTE:

- This procedure requires installation of the optional pressure sensor (MD #B5574). For overload pressure values, refer to pressure sensor installation instructions (MD #169031).
- To enable sensor, refer to [Switching the Installed Header Sensors On or Off, page 131](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

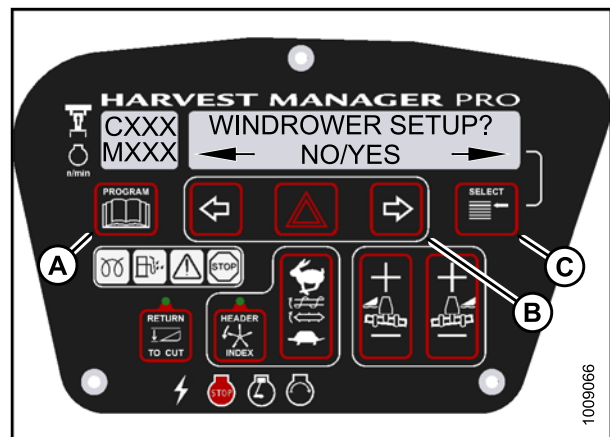


Figure 3.107: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (D) until OVERLOAD PRESSURE? is displayed on the upper line.

- The current overload pressure is displayed on lower line.

NOTE:

Pressure range is 2500–5000 psi (17,237–34,474 kPa).

5. Press left (B) or right (C) arrows to set hydraulic overload pressure. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

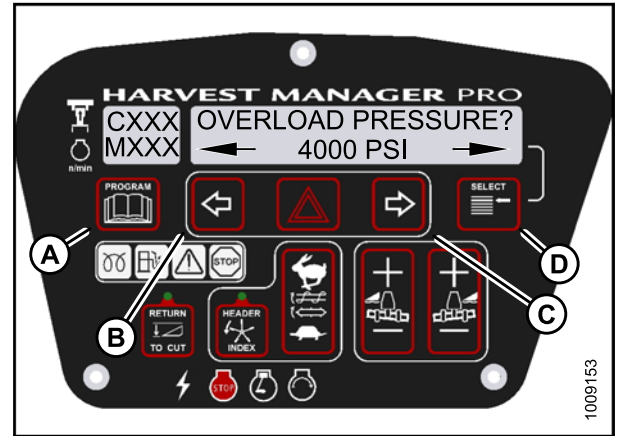


Figure 3.108: M155 Hydraulic Overload Pressure

Setting the Header Index Mode

Header Index feature is not applicable to rotary headers.

For more information on the Header Index feature, refer to [4.6.6 Reel Speed, page 282](#) and [4.6.7 Draper Speed, page 286](#).

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

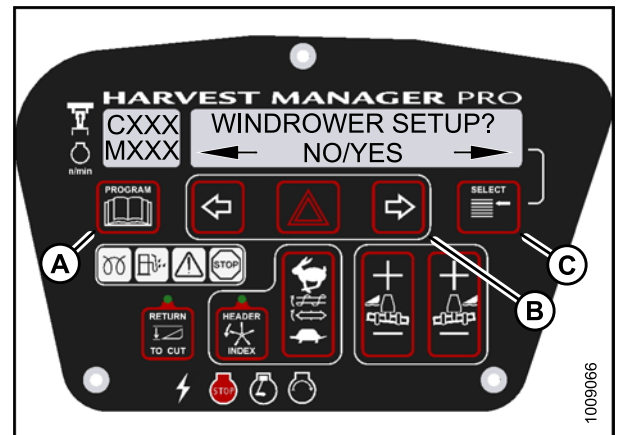


Figure 3.109: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until HEADER INDEX MODE? is displayed on the upper line.
 - REEL & CONVEYOR or REEL ONLY is displayed on the lower line.
- Press left (B) or right (C) arrows to set header index mode. Press SELECT (D).
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

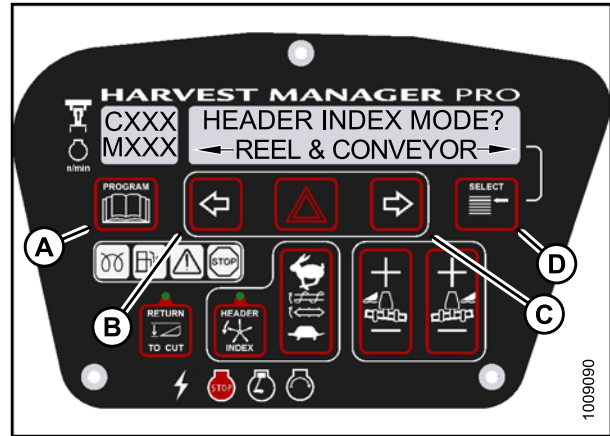


Figure 3.110: M155 Header Index Mode

Setting the Return to Cut Mode

For more information on the Return to Cut feature, refer to [4.4.7 Return to Cut](#), page 207.

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers](#), page 213.

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

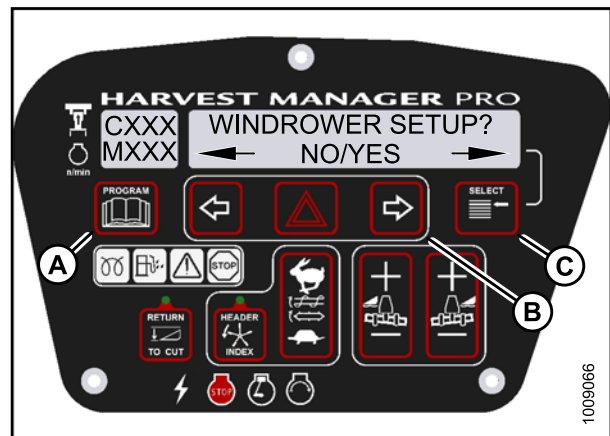


Figure 3.111: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until RETURN TO CUT MODE? is displayed on the upper line.
 - HEIGHT & TILT or HEIGHT ONLY will be displayed on the lower line.
- Press left (B) or right (C) arrows to select return to cut mode. Press SELECT (D).
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

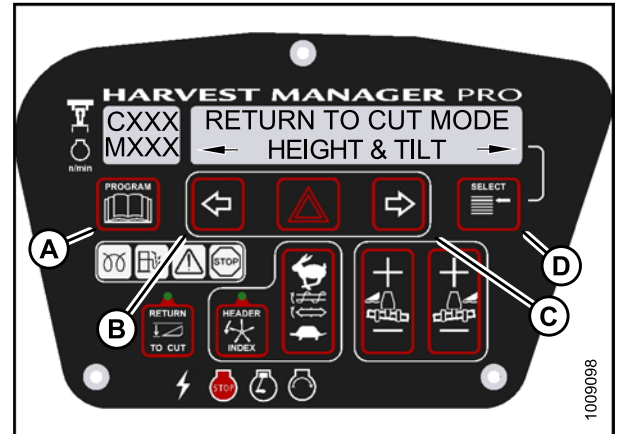


Figure 3.112: M155 Return to Cut Mode

Setting the Header Cut Width

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- Header cut width is less than actual header width to accurately measure number of acres cut.
- Headers send electrical signals to the windrower to produce a header ID; however, the cut width will always default to the smallest header size available for each header type. For example, A-Series Auger Headers comes in 14-, 16-, and 18-foot sizes, but the cut width will automatically default to the smallest 14-foot size and will need to be changed according to your specific header's size.

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed.

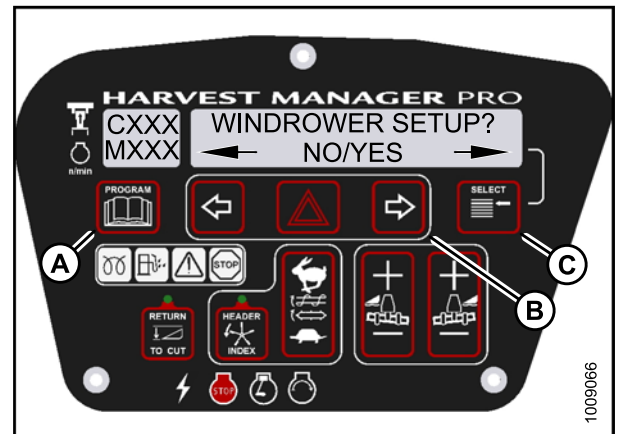


Figure 3.113: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until HDR CUT WIDTH? ##### is displayed on the upper line.
 - Previous cutting width is displayed on the lower line.
- Press left (B) or right (C) arrows to change the headers cut width. Press SELECT (D).
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

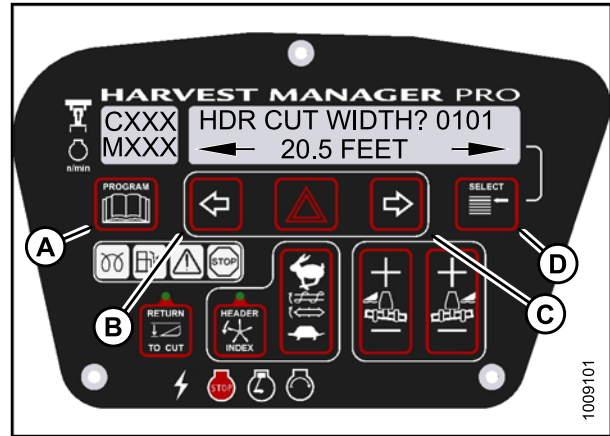


Figure 3.114: M155 Header Cut Width

Activating the Double Windrower Attachment (DWA)

NOTE:

- Follow this procedure if installing the DWA; however, refer to the DWA manual if you require additional installation instructions.
 - Follow this procedure if installing a drive manifold (MD #139508).
- Turn ignition key to RUN, or start the engine.
 - Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
 - Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

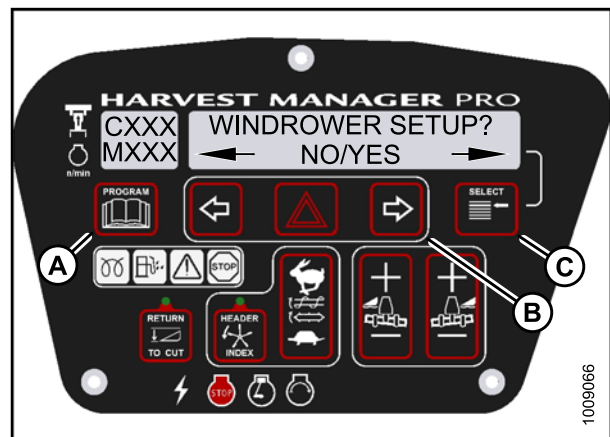


Figure 3.115: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (B) until DWA INSTALLED? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).



Figure 3.116: M155 DWA Controls

6. SWAP DWA CONTROLS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

NOTE:

This step swaps the DWA controls from the console switch to the ground speed lever (GSL) reel fore-aft buttons.

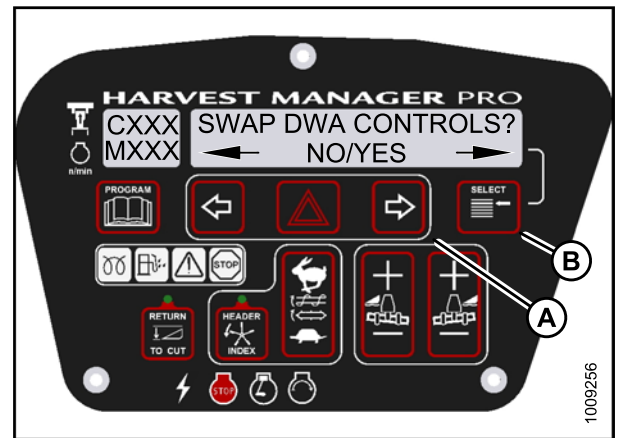


Figure 3.117: M155 DWA Controls

7. Press right (C) arrow to select YES. Press SELECT (D).
 - DWA AUTO UP/DOWN ? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

NOTE:

If the Operator selects YES, the DWA Auto-Up function will be activated by the GSL Reel Fore-Aft button.

8. Press right (C) arrow to select YES. Press SELECT (D).
9. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next WINDROWER SETUP action.

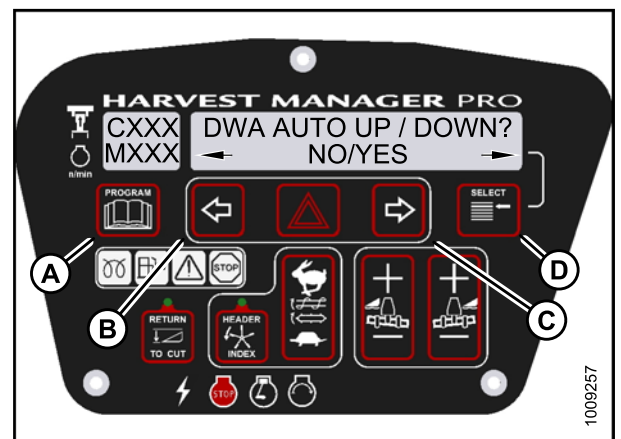


Figure 3.118: M155 DWA Auto Up/Down

OPERATOR'S STATION

Setting the Auto Raise Height

For more information on the Auto Raise Height feature, refer to [4.4.8 Auto Raise Height, page 209](#).

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

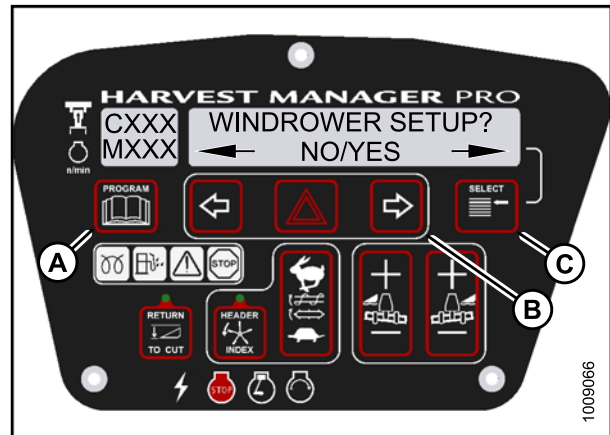


Figure 3.119: M155 CDM Programming Buttons

4. Press SELECT (D) until AUTO RAISE HEIGHT? is displayed on the upper line.
 - Last measurement is displayed on the lower line.

NOTE:

The auto raise height ranges from 4.0 (minimum) to 9.5 (maximum), in 0.5 increments. A setting of 10 disables the auto raise function.

5. Press left (B) arrow or right (C) arrow to change auto-raise height.
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

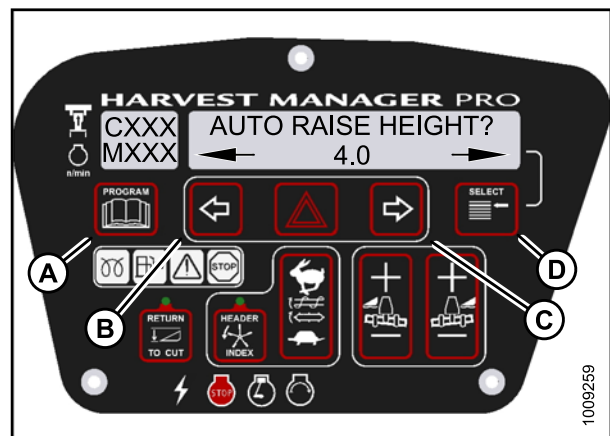


Figure 3.120: M155 Auto Raise Height

Activating the Hay Conditioner

NOTE:

- This procedure is for draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

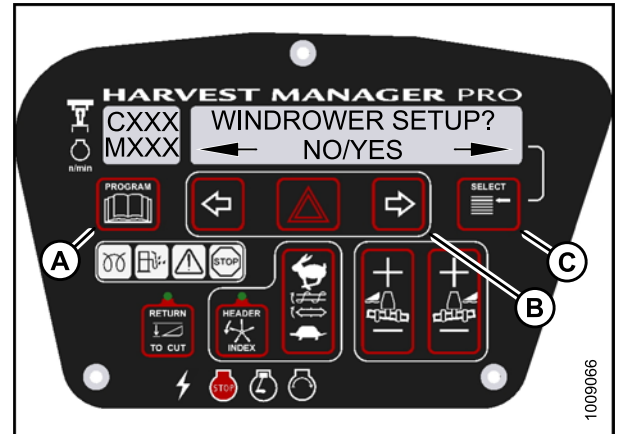


Figure 3.121: M155 CDM Programming Buttons Shown – M205 Similar

4. Press SELECT (C) until HAY CONDITIONER? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (B) arrow to select YES. Press SELECT (C).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (C) to proceed to next WINDROWER SETUP action.

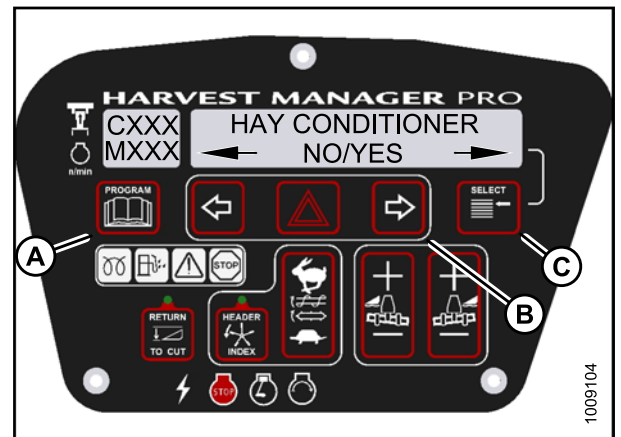


Figure 3.122: M155 Hay Conditioner Shown – M205 Similar

Displaying Reel Speed

NOTE:

- This procedure is for draper and auger headers. It does not apply to rotary disc headers.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on CDM to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

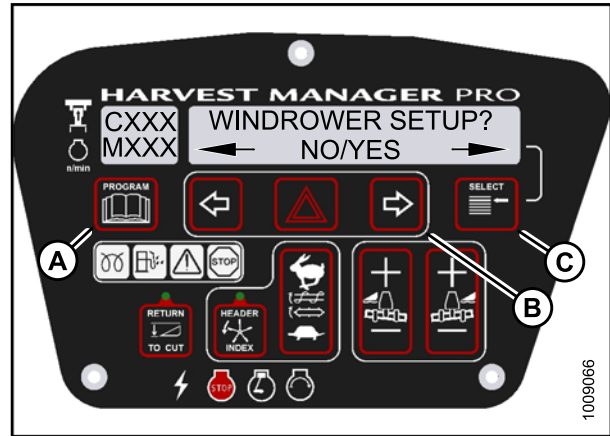


Figure 3.123: M155 CDM Programming Buttons

4. Press SELECT (D) until HEADER REEL SPEED? is displayed on the upper line.
 - RPM/MPH or RPM/KPH is displayed on the lower line.
5. Press left (B) or right (C) arrow to select either Imperial or Metric units. Press SELECT (D).
6. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

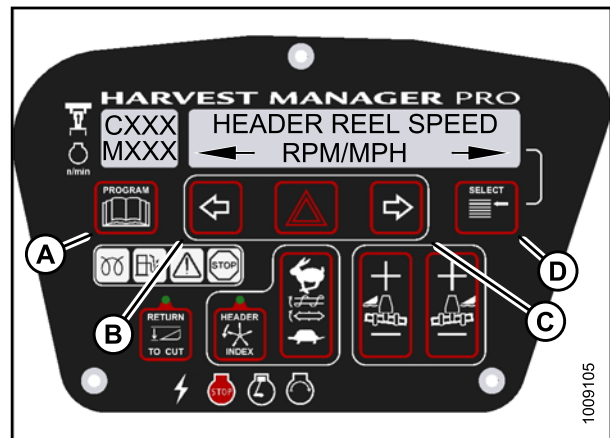


Figure 3.124: M155 Reel Speed Display

Setting the Windrower's Tire Size

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

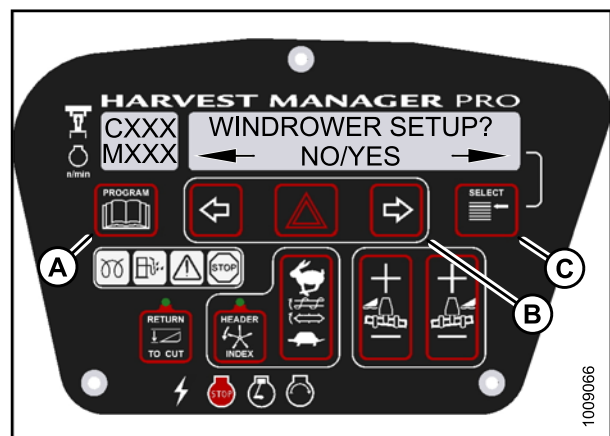


Figure 3.125: M155 CDM Programming Buttons

OPERATOR'S STATION

- Press SELECT (D) until SET TIRE SIZE? is displayed on the upper line.
 - Currently installed tire size is displayed on the lower line.

NOTE:

The following tire sizes are available:

- 18.4 x 26 TURF
- 18.4 x 26 BAR
- 23.1 x 26 TURF
- 600 – 65 R28

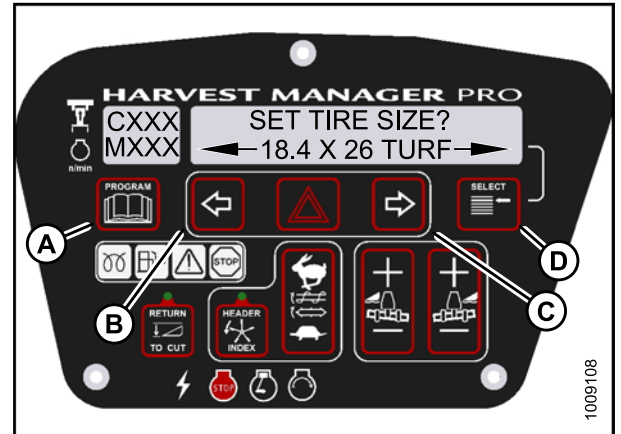


Figure 3.126: M155 Tire Size

- Press left (B) or right (C) arrow and select tire size. Press SELECT (D).
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

Setting the Engine Intermediate Speed Control (ISC) RPM on an M155/M205

NOTE:

The ISC sets the engine speed when the header is engaged. For more information, refer to [Engine Intermediate Speed Control \(ISC\), page 163](#). The engine **MUST** be running to perform this procedure.

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
- Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

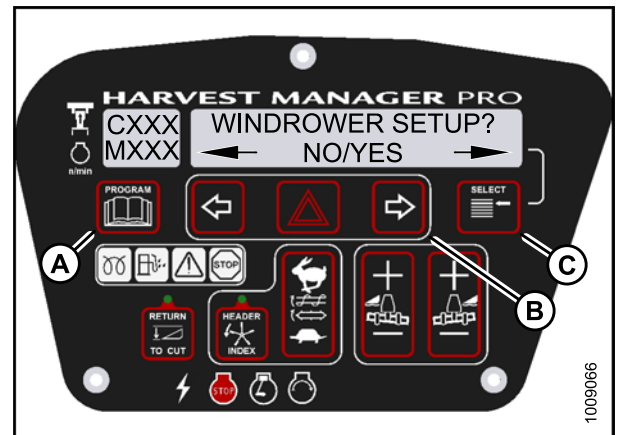


Figure 3.127: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (C) until SET ENGINE ISC RPM? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (B) arrow to select YES. Press SELECT (C).
 - PRESS HAZARD TO SET is displayed on the upper line.
 - ISC RPM ##### is displayed on the lower line.

NOTE:

The previously selected ISC rpm will be flashing.

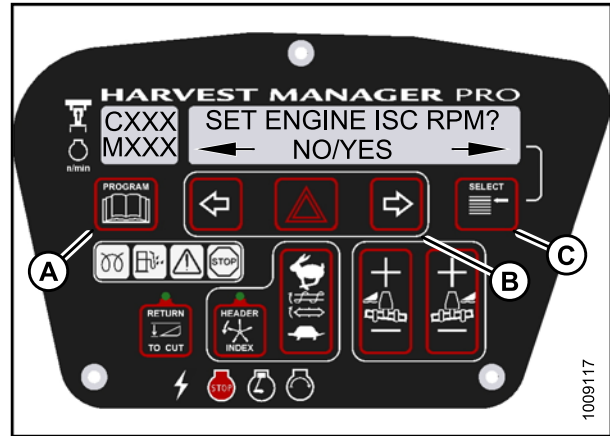


Figure 3.128: M155 Engine ISC RPM

6. Press right (C) arrow to cycle between rpm options. Press HAZARD (B) to set.
7. Press Select (D).

 - EXIT ENGINE ISC? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

8. Press right (C) arrow to select YES. Press SELECT (D).
9. Press PROGRAM (A) to exit Programming Mode.

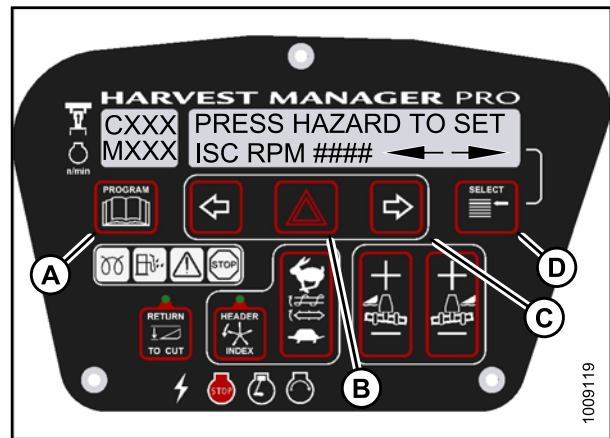


Figure 3.129: M155 ISC RPM

Clearing Sub-Acres

1. With the key "ON", and the operators station is in cab forward position. Press SELECT until the CDM displays sub-acres on the bottom line. Then press and hold the PROGRAM (A) button on the CDM until the sub-acres are cleared.



Figure 3.130: Cab Display Module (CDM)

3.19.9 Activating Cab Display Lock Outs

You can lock some of the header functions controlled by the cab display module (CDM) to prevent accidental changes to header settings. You can use this feature to keep header settings constant when several different operators use the windrower.

NOTE:

FUNCTION LOCKED flashes on CDM when locked header function switch is pressed.

Activating Knife Speed Control Lock Out

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

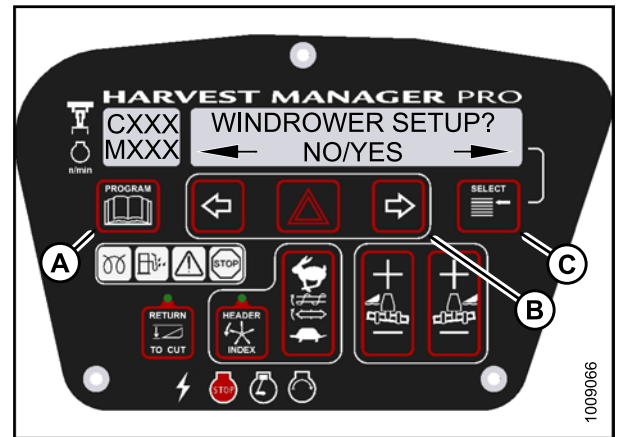


Figure 3.131: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

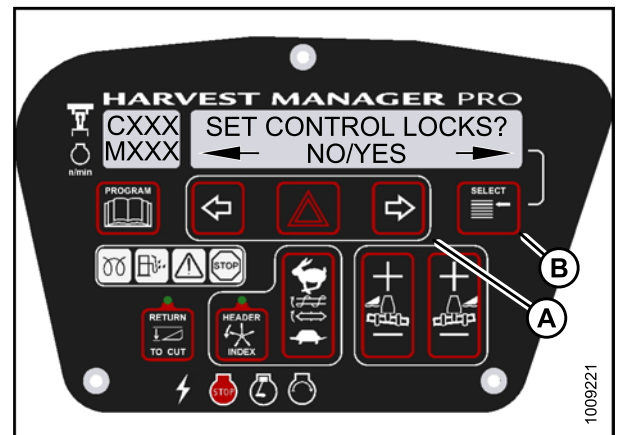


Figure 3.132: M155 Control Locks

OPERATOR'S STATION

- Press SELECT (D) until KNIFE SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
- Press left arrow (B) to enable KNIFE SPEED control switch, or press right arrow (C) to lock KNIFE SPEED control switch.
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

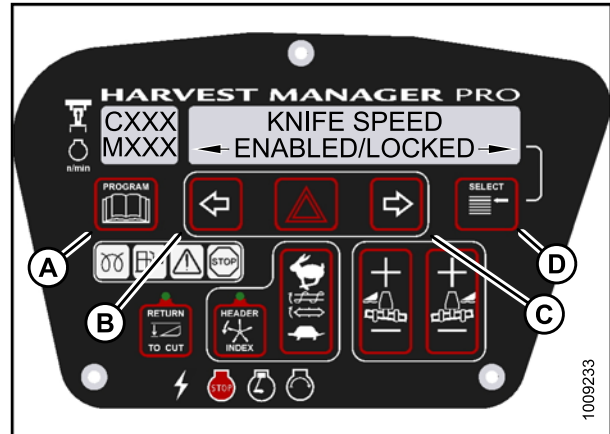


Figure 3.133: M155 Knife Speed Control Lock

Activating Rotary Disc Speed Control Lock Out

NOTE:

- This procedure is for rotary disc headers only.
 - The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- Turn ignition key to RUN, or start the engine.
 - Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
 - Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

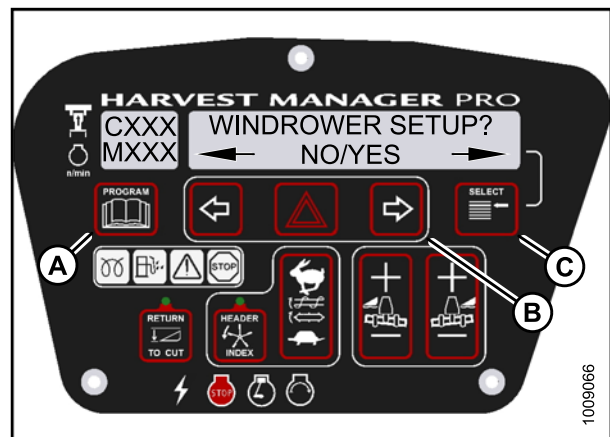


Figure 3.134: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

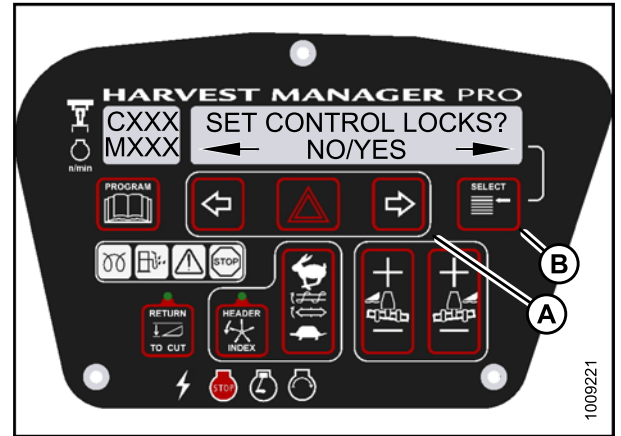


Figure 3.135: M155 Control Locks

6. Press SELECT (D) until DISK SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left arrow (B) to enable DISK SPEED control switch, or press right arrow (C) to lock DISK SPEED control switch.
8. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

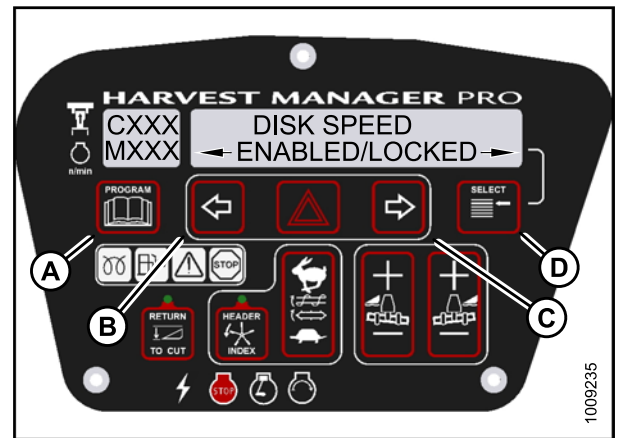


Figure 3.136: M155 Disc Speed Control Lock

Activating the Header Float Control Lock Out

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

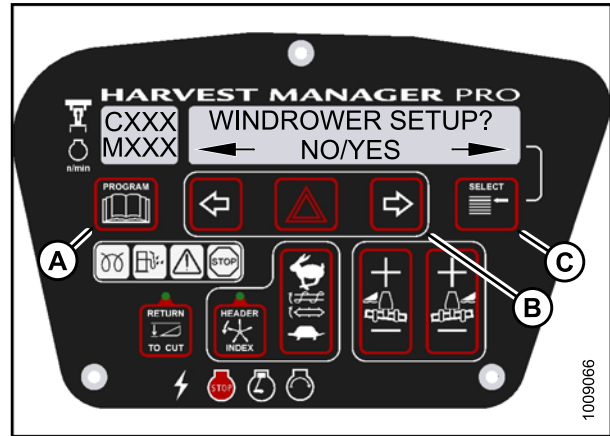


Figure 3.137: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

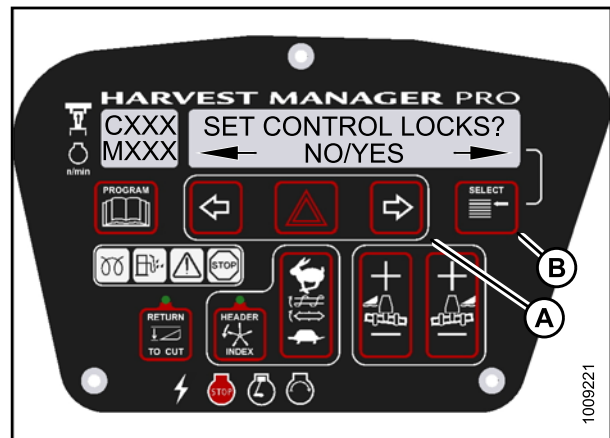


Figure 3.138: M155 Control Locks

6. Press SELECT (D) until HEADER FLOAT is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left arrow (B) to enable HEADER FLOAT control switch, or press right arrow (C) to lock HEADER FLOAT control switch.
8. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

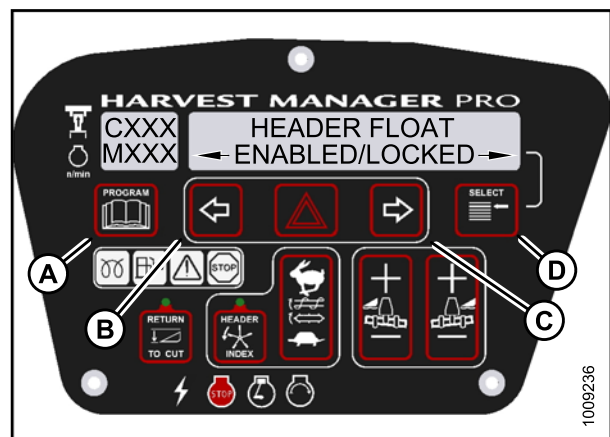


Figure 3.139: M155 Header Float Control Lock

OPERATOR'S STATION

Activating the Draper Speed Control Lock Out

NOTE:

- This procedure is for draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

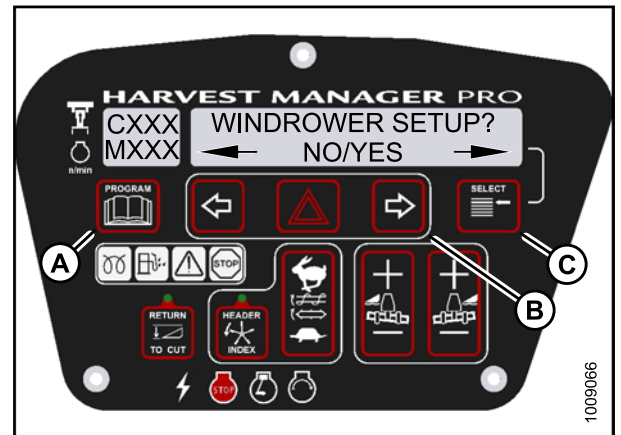


Figure 3.140: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

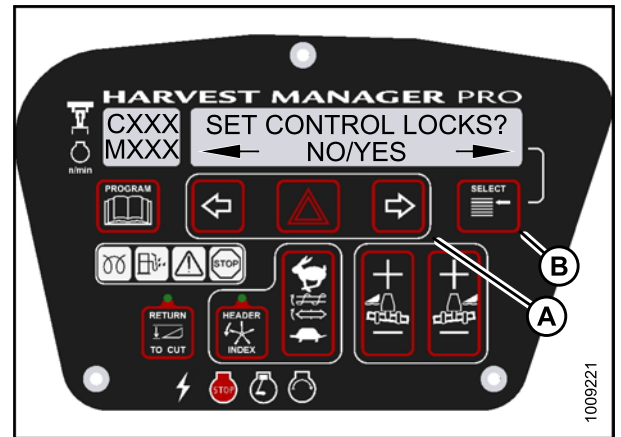


Figure 3.141: M155 Control Locks

OPERATOR'S STATION

- Press SELECT (D) until DRAPER SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
- Press left arrow (B) to enable DRAPER SPEED control switch, or press right arrow (C) to lock DRAPER SPEED control switch.
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next WINDROWER SETUP action.

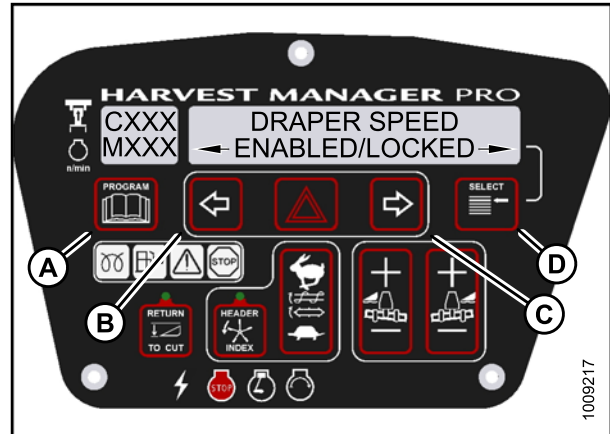


Figure 3.142: M155 Draper Control Lock

Activating the Auger Speed Control Lock Out

NOTE:

- This procedure is for A40-D Headers only.
 - An auger header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- Turn ignition key to RUN, or start the engine.
 - Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
 - Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

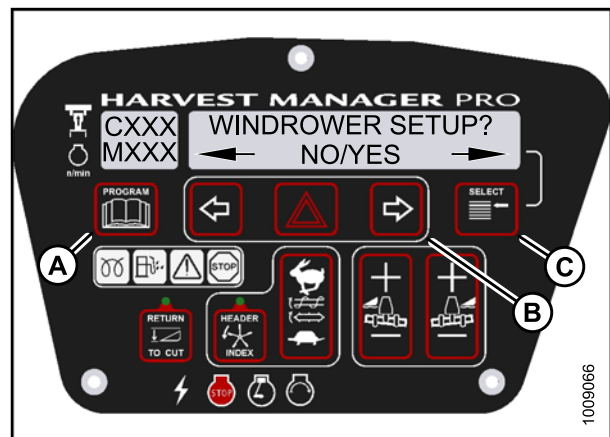


Figure 3.143: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

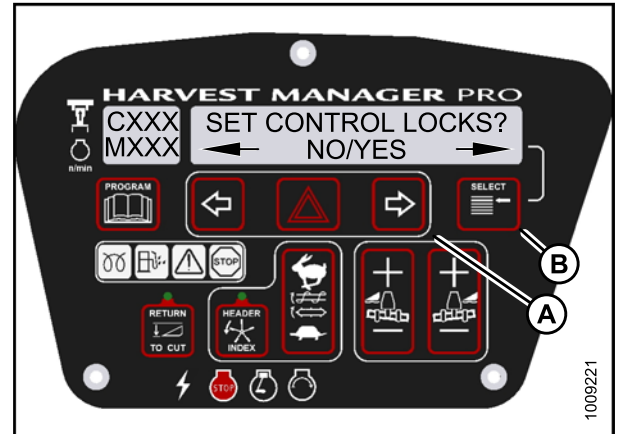


Figure 3.144: M155 Control Locks

6. Press SELECT (D) until AUGER SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left (B) arrow to enable AUGER SPEED control switch.
Press right (C) arrow to lock AUGER SPEED control switch.
8. Press PROGRAM (A) to exit Programming Mode, or press SELECT (D) to proceed to next WINDROWER SETUP action.

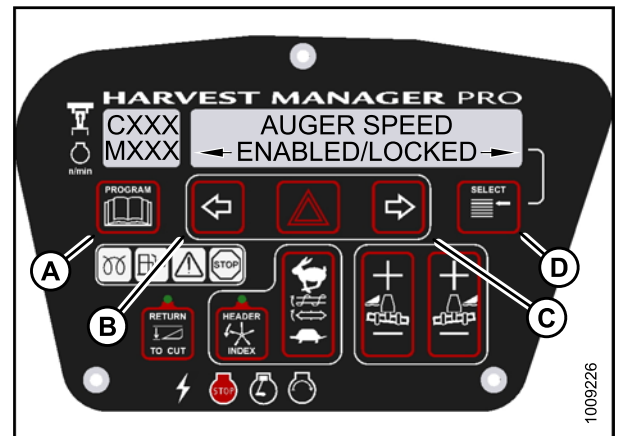


Figure 3.145: M155 Auger Control Lock

Activating the Reel Speed Control Lock Out

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

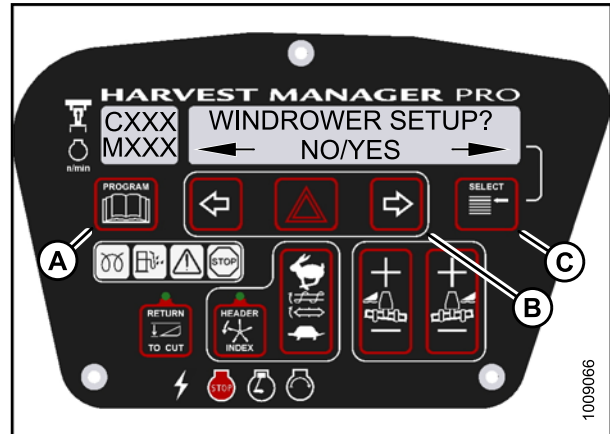


Figure 3.146: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

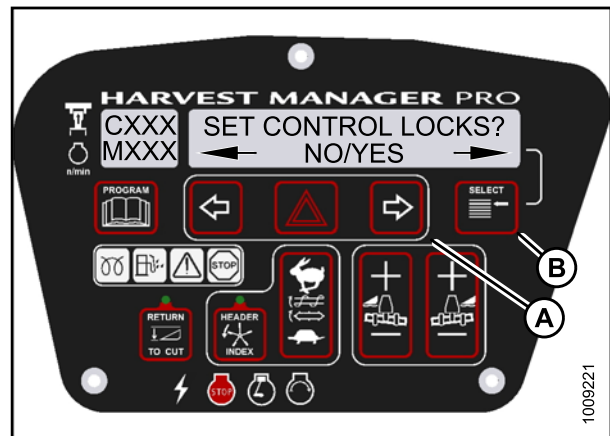


Figure 3.147: M155 Control Locks

6. Press SELECT (D) until REEL SPEED is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left (B) arrow to enable REEL SPEED control switch. Press right (C) arrow to lock REEL SPEED control switch.
8. Press PROGRAM (A) to exit Programming Mode, or press SELECT (D) to proceed to next WINDROWER SETUP action.

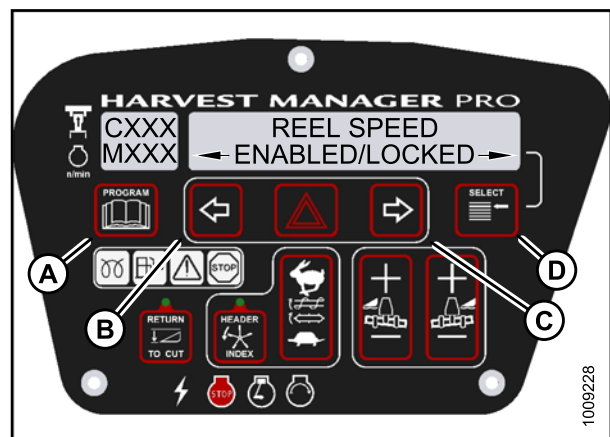


Figure 3.148: M155 Reel Speed Control Lock

OPERATOR'S STATION

Activating the Reel Fore-Aft Control Lock Out

NOTE:

- This procedure is for draper headers only.
- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

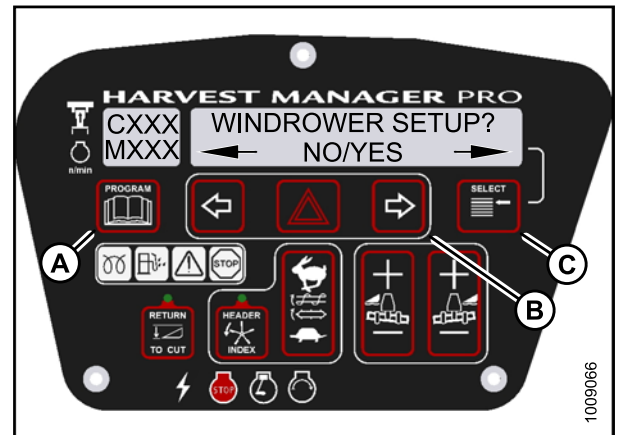


Figure 3.149: M155 CDM Programming Buttons

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

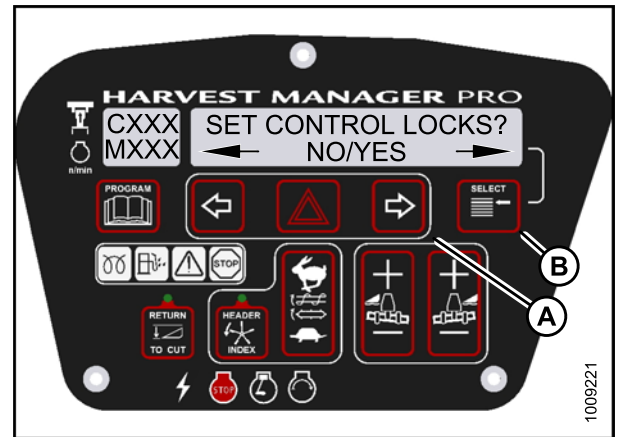


Figure 3.150: M155 Control Locks

OPERATOR'S STATION

- Press SELECT (D) until REEL FORE/AFT is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
- Press left (B) arrow to enable REEL FORE/AFT control switch.
Press right (C) arrow to lock REEL FORE/AFT control switch.
- Press PROGRAM (A) to exit Programming Mode, or press SELECT (D) to proceed to next WINDROWER SETUP action.

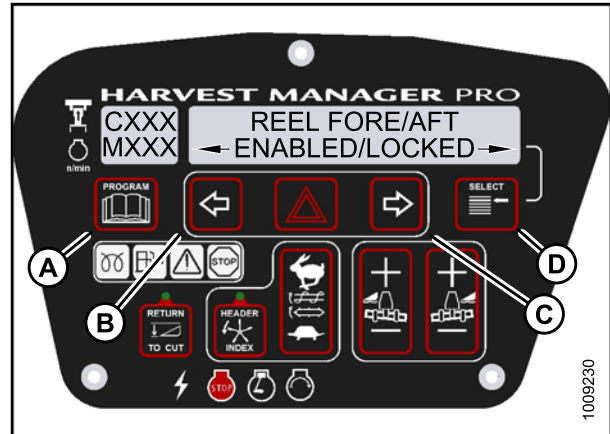


Figure 3.151: M155 Reel Fore-Aft Control Lock

Activating the Header Tilt Control Lock Out

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - This procedure requires installation of the optional hydraulic center-link (MD #B4650).
- Turn ignition key to RUN, or start the engine.
 - Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
 - Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

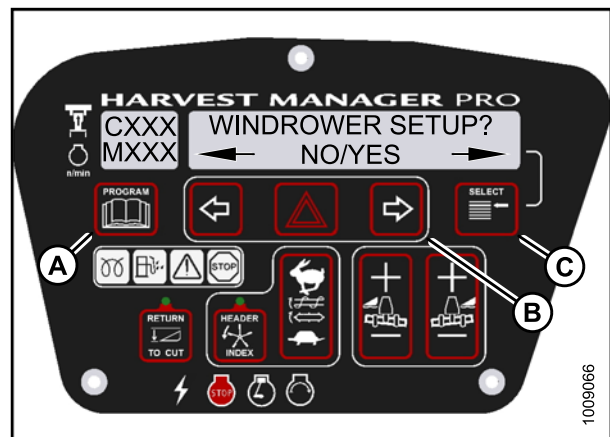


Figure 3.152: M155 CDM Programming Buttons

OPERATOR'S STATION

4. Press SELECT (B) until SET CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).

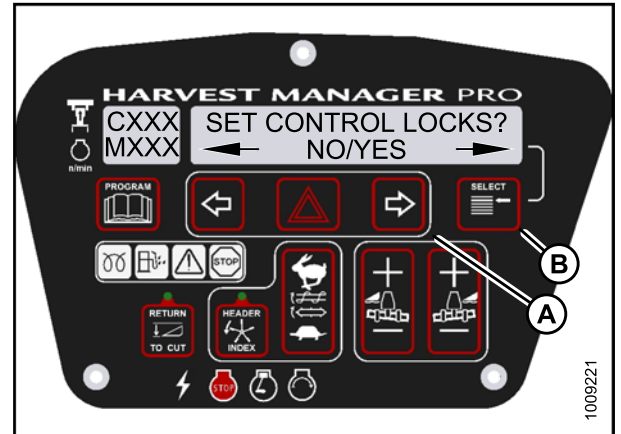


Figure 3.153: M155 Control Locks

6. Press SELECT (D) until HEADER TILT is displayed on the upper line.
 - ENABLED/LOCKED is displayed on the lower line.
7. Press left (B) arrow to enable HEADER TILT control switch.
Press right (C) arrow to lock HEADER TILT control switch.
8. Press PROGRAM (A) to exit Programming Mode, or press SELECT (D) to proceed to next WINDROWER SETUP action.

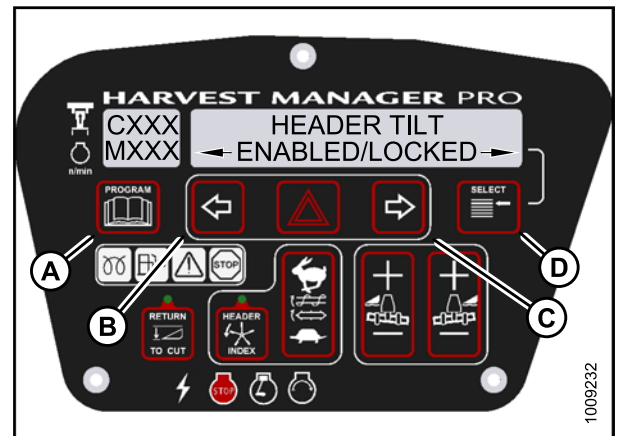


Figure 3.154: M155 Header Tilt Control Lock

3.19.10 Displaying Activated Cab Display Lock Outs

Displaying the activated control locks allows you to quickly determine which controls are locked on the cab display module (CDM).

NOTE:

- Displaying header tilt control lock requires installation of the optional Hydraulic Center-Link (MD #B4650).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press right (B) arrow to select YES. Press SELECT (C).
 - SET KNIFE SPEED? is displayed on the upper line.

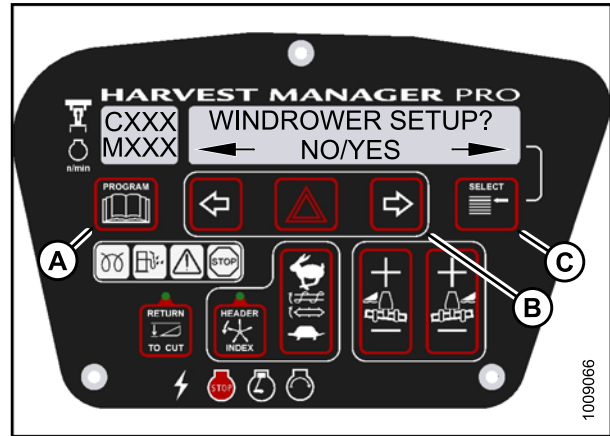


Figure 3.155: M155 CDM Programming Buttons

4. Press SELECT (B) until VIEW CONTROL LOCKS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
5. Press right (A) arrow to select YES. Press SELECT (B).
 - HEADER TILT is displayed on the upper line.
 - The control switch status is displayed on the lower line. The hours displayed indicate when a switch was enabled or locked.

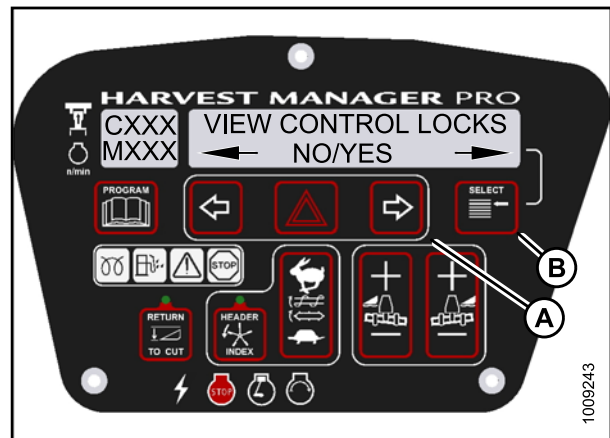


Figure 3.156: M155 Control Locks

OPERATOR'S STATION

6. Press left (B) or right (C) arrow to cycle between control switch lock outs. The displayed control switches are as follows:
 - HEADER TILT
 - HEADER FLOAT
 - REEL FORE/AFT
 - DRAPER SPEED
 - AUGER SPEED
 - KNIFE SPEED
 - DISK SPEED
 - REEL SPEED



Figure 3.157: M155 Control Locks

NOTE:

Not all control locks apply to every header.

7. Press SELECT.
 - EXIT VIEW LOCKOUTS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
8. Press right to select YES.
9. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next WINDROWER SETUP action.

3.19.11 Troubleshooting Windrower Problems

Displaying the Windrower and Engine Error Codes

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.
3. Press SELECT (C) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.

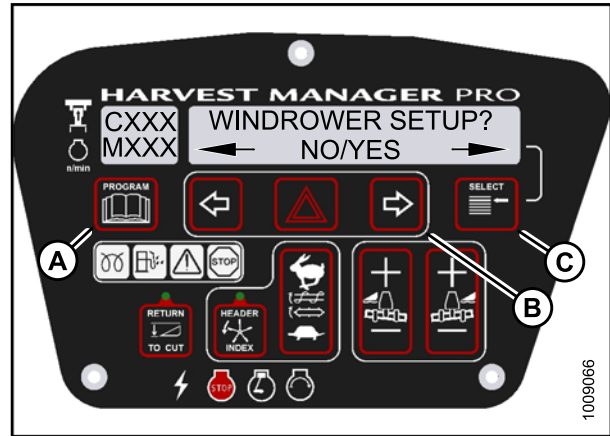


Figure 3.158: M155 CDM Programming Buttons

4. Press right (A) arrow to select Yes. Press SELECT (B).
5. VIEW ERROR CODES? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - VIEW WINDRWR CODES? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

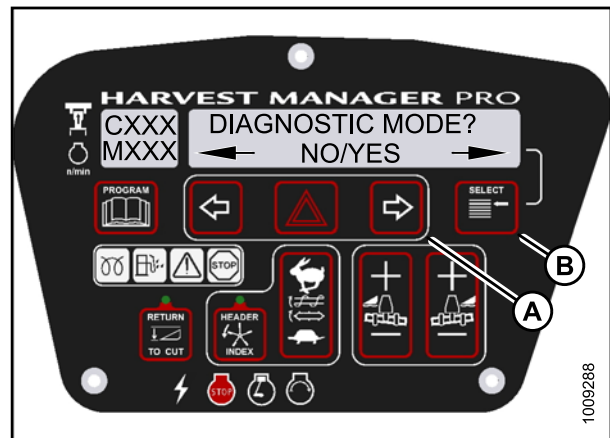


Figure 3.159: M155 Diagnostic Functions

7. Press right (C) arrow to select YES. Press SELECT (D).
 - The most recent error code will be displayed.
 - Refer to [8.5 Cab Display Module \(CDM\) Error Codes, page 481](#).
8. Press and left (B) or right (C) arrow to cycle through the last 10 recorded windrower error codes until EXIT WINDROWER CODES is displayed.
9. Press right (C) arrow to select YES. Press SELECT (D).
 - VIEW ENGINE CODES is displayed on the upper line.
 - NO/YES is displayed on the lower line.

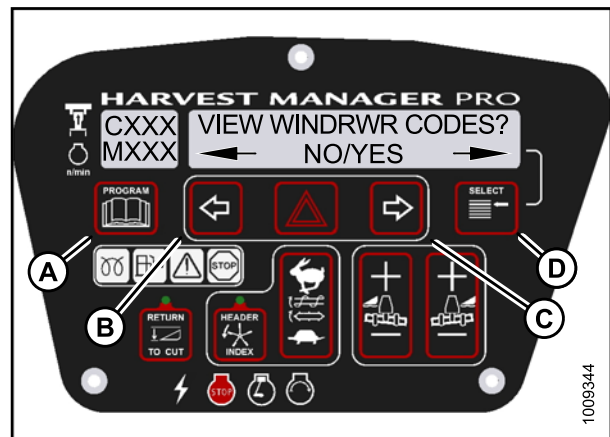


Figure 3.160: M155 Windrower Codes

OPERATOR'S STATION

10. Press right (C) arrow to select YES. Press SELECT (D).
11. Press and left (B) or right (C) arrow to cycle through the last 10 recorded engine error codes until EXIT ENGINE CODES is displayed.
 - Refer to [8.4 Engine Error Codes, page 469](#).
12. Press right (C) arrow to select YES. Press SELECT (D).
13. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next DIAGNOSTIC MODE.

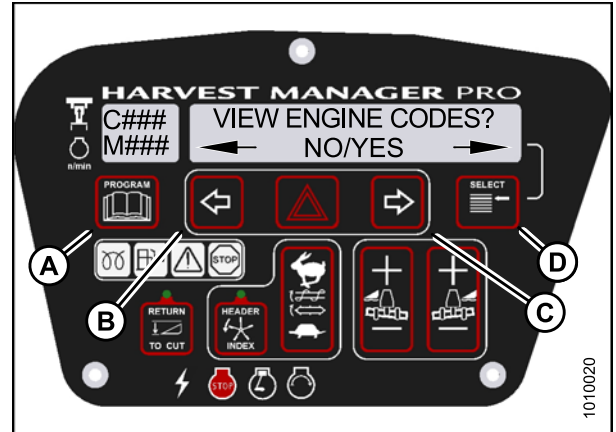


Figure 3.161: M155 Engine Codes

Switching the Installed Header Sensors On or Off

You can selectively enable or disable header sensors in the event of a malfunction or as part of a troubleshooting routine.

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- Disabled sensors flash the word SENSOR on CDM during regular operation.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
3. Press SELECT (C) until DIAGNOSTIC MODE? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (B) arrow to select Yes. Press SELECT (C).
 - VIEW ERROR CODES? is displayed on the upper line.

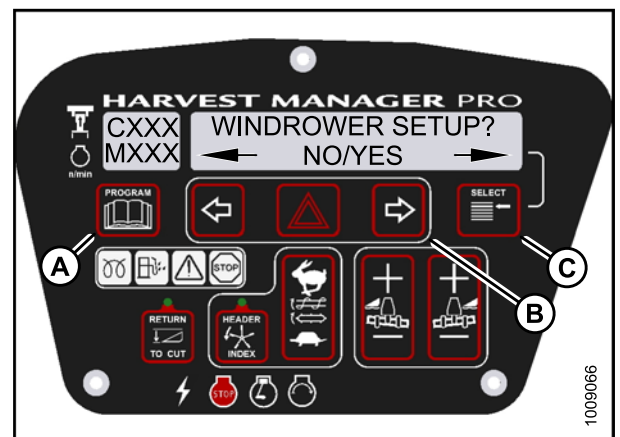


Figure 3.162: M155 CDM Programming Buttons

OPERATOR'S STATION

5. Press SELECT (B) until ENTER SENSOR SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select Yes. Press SELECT (B).
 - KNIFE SPEED SENSOR is displayed on the lower line.
 - ENABLE/DISABLE is displayed on the lower line.

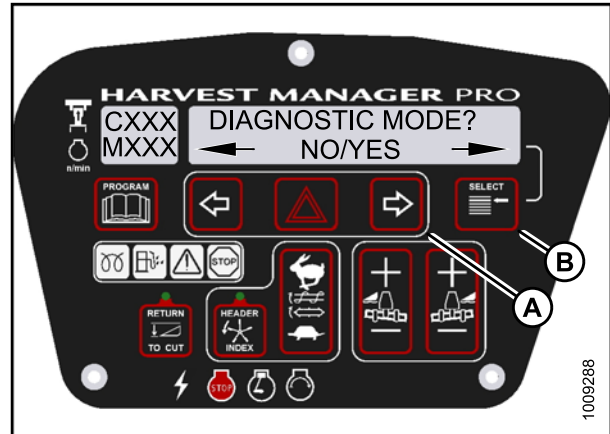


Figure 3.163: M155 Diagnostic Functions

7. Press left (B) arrow to enable a sensor. Press right (C) arrow to disable sensor. Press SELECT (D) to confirm selection and move on to next sensor. The following sensors are available:
 - HEADER HT SENSOR
 - HEADER TILT SENSOR
 - KNIFE SPEED SENSOR
 - REEL SPEED SENSOR
 - HEADER FLOAT SENSOR
 - OVERLOAD PRESSURE ¹⁵
 - HYD OIL TEMP SENSOR

When sensors have been modified, press SELECT (D) to display the EXIT SENSOR SETUP? selection.

8. Press right arrow to select YES. Press SELECT.
9. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next DIAGNOSTIC MODE.

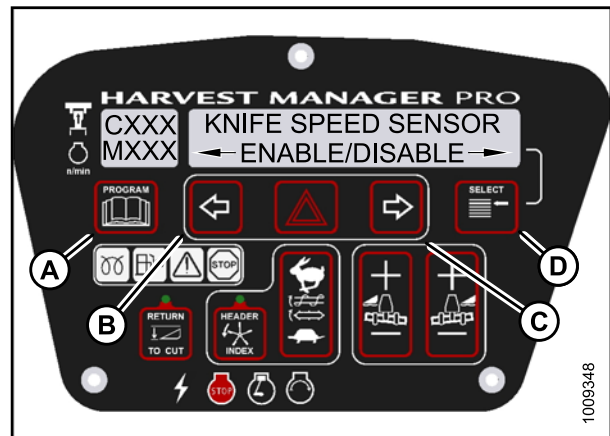


Figure 3.164: M155 Header Sensors

Displaying Header Sensors Input Signals

You can display individual sensor input signals in the event of a malfunction or as part of a troubleshooting routine.

NOTE:

The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).

15. Requires installation of optional pressure sensor (MD #5574).

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

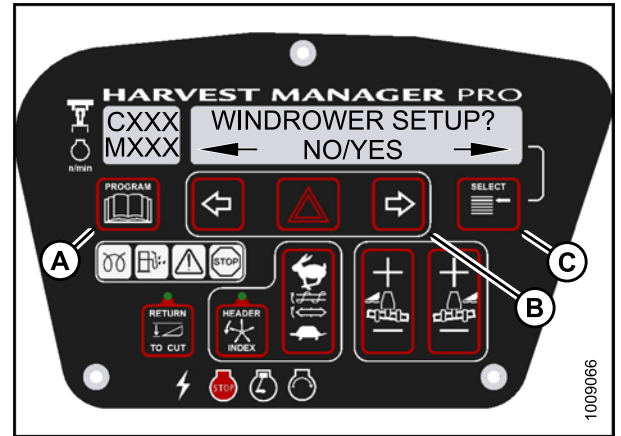


Figure 3.165: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select YES. Press SELECT (B).
 - VIEW ERROR CODES? is displayed on the upper line.
5. Press SELECT (B) until READ SENSOR SETUP? is displayed on the upper line.
 - NO/YES is displayed on the lower line.

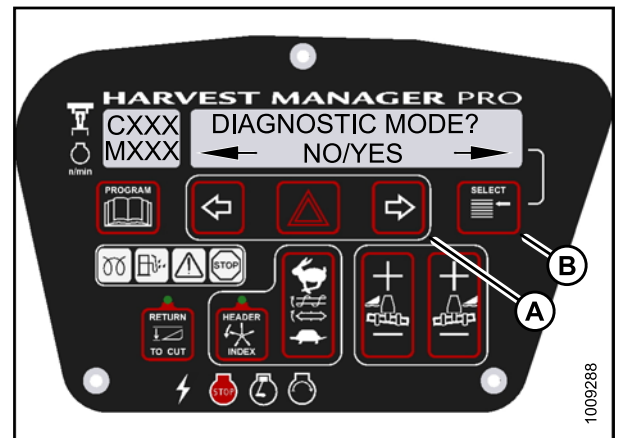


Figure 3.166: M155 Diagnostic Functions

6. Press right (C) arrow to select Yes. Press SELECT (D).
 - SENSOR INPUT is displayed on the upper line.
 - HDR HEIGHT 1.23 V is displayed on the lower line.
7. Press left (B) or right (C) arrow to cycle between individual sensor readers.
8. Press SELECT (D) to skip to EXIT READ SENSORS? selection.

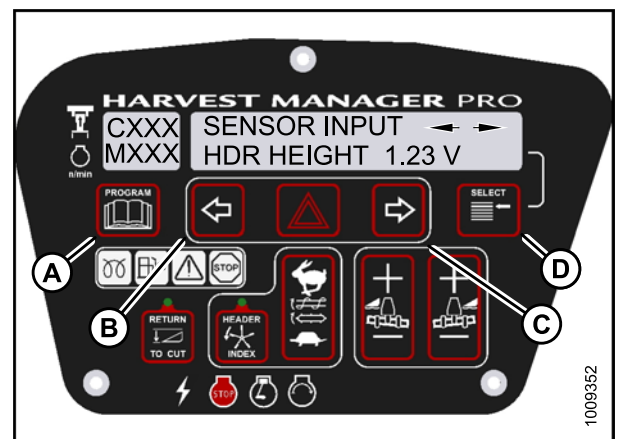


Figure 3.167: M155 Header Sensors

9. Press right arrow to select YES. Press SELECT.
10. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next DIAGNOSTIC MODE.

OPERATOR'S STATION

Forcing a Header ID

The header must be attached to the windrower to troubleshoot certain issues. If damage has occurred to the header wiring or no header is available, you can force the windrower control module (WCM) to read a header ID. The WCM reverts to reading NO HEADER each time the engine ignition is cycled.

IMPORTANT:

Forcing a Header ID that is different from the attached header can damage the windrower and header. Doing so can lead to vibration, belt failures, and other over-speeding related problems.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

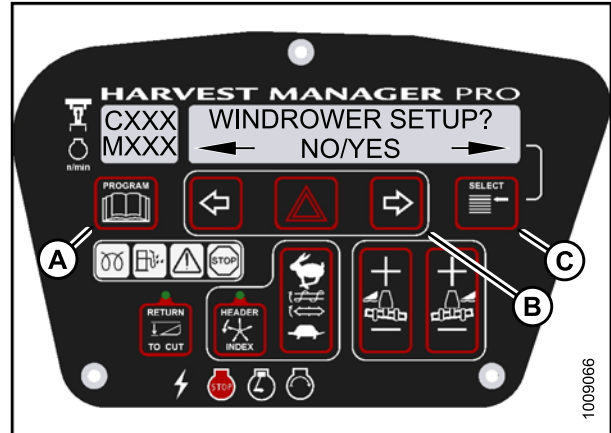


Figure 3.168: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

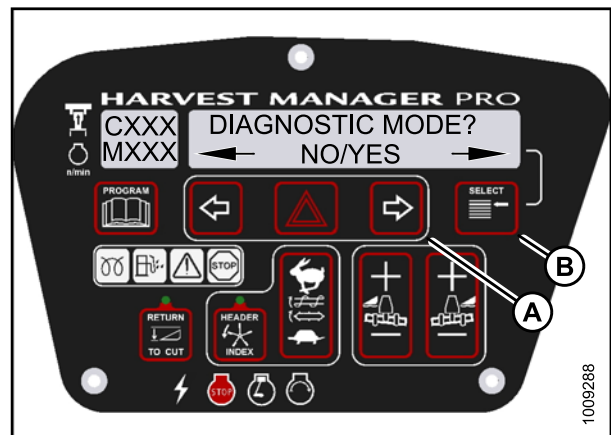


Figure 3.169: M155 Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (B) until FORCE HEADER TYPE? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - SELECT HEADER TYPE is displayed on the upper line.
 - DISK HEADER is displayed on the lower line.

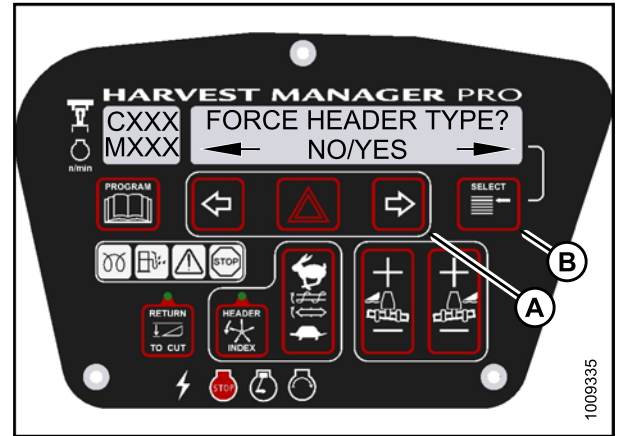


Figure 3.170: M155 Header Type

7. Press left (A) or right (B) arrow to cycle through list of header types.
8. When desired header type is displayed press SELECT (C).
 - EXIT FORCE HEADER? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
9. Press right arrow (B) to select YES. Press SELECT (C). Proceed to next DIAGNOSTIC MODE or press PROGRAM to exit programming mode.

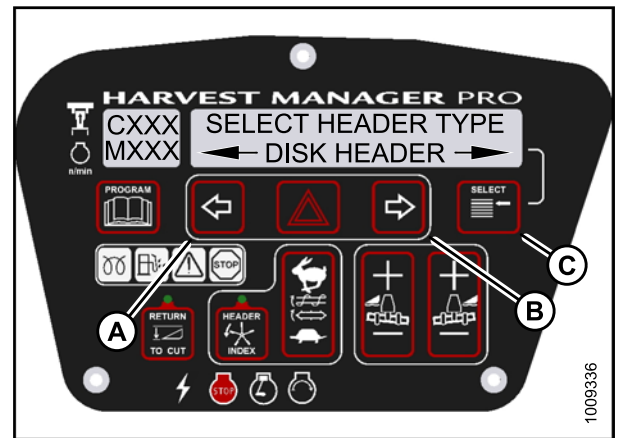


Figure 3.171: M155 Header Type

3.19.12 Troubleshooting Header Problems

You can test individual parts of the header as part of a troubleshooting routine.

Testing the Header Up/Down Activate Function Using the Cab Display Module (CDM)

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- The engine **MUST** be running to perform this procedure.

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.

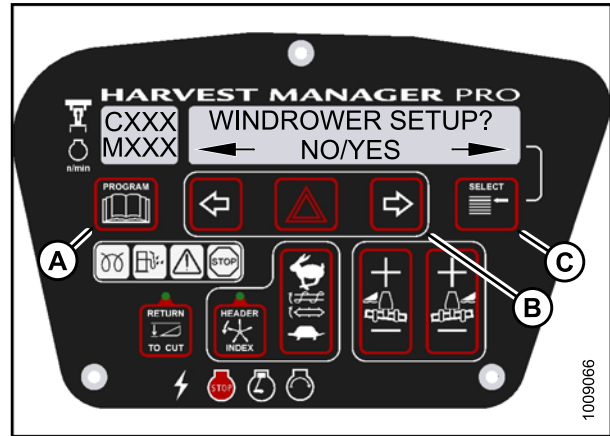


Figure 3.172: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

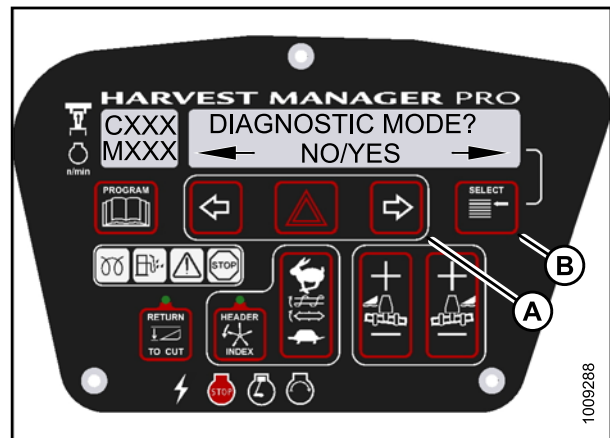


Figure 3.173: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).

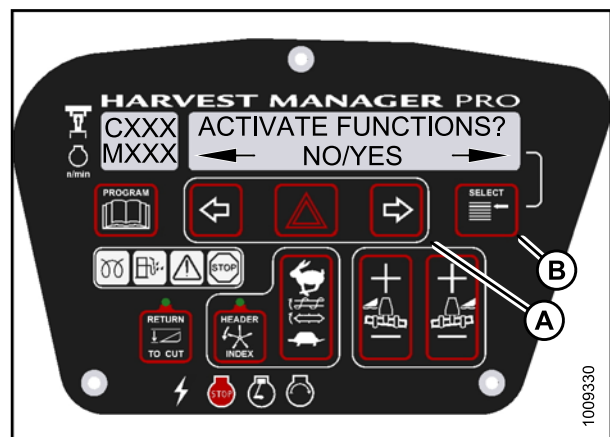


Figure 3.174: M155 Functions

OPERATOR'S STATION

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (D) until ACTIVATE HEADER HT is displayed on the upper line.
 - DOWN/UP is displayed on the lower line.
8. Press and hold left (B) arrow to lower header or, press and hold right (C) arrow to raise header. Verify header is functioning properly.
9. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.

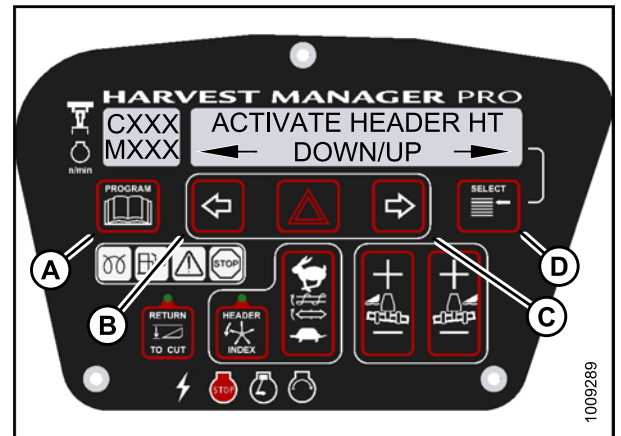


Figure 3.175: M155 Header Height

Testing the Reel Up/Down Activate Function Using the Cab Display Module (CDM)

NOTE:

- This procedure is for draper headers only.
 - The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. [4.5 Attaching and Detaching Headers, page 213](#).
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.

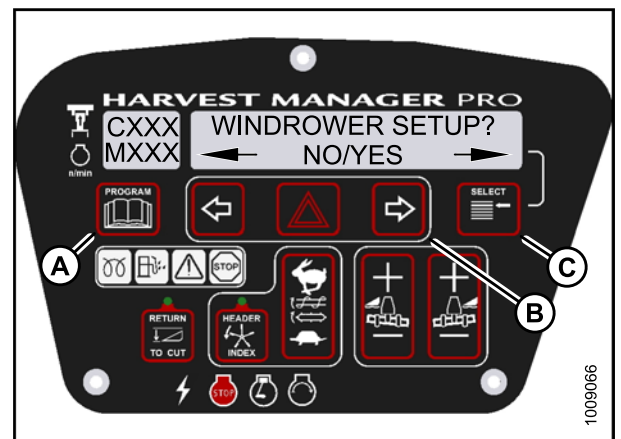


Figure 3.176: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

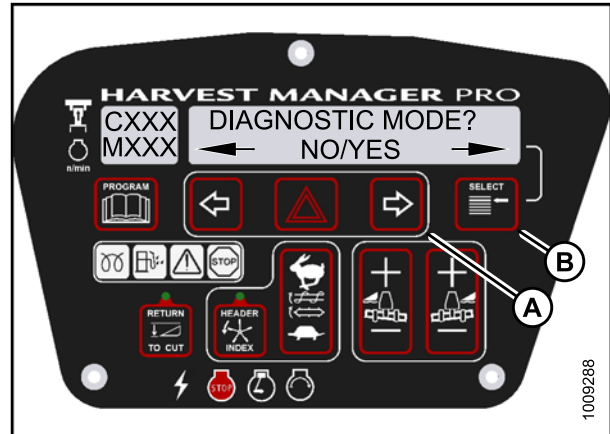


Figure 3.177: M155 Diagnostic Functions

5. Press SELECT (D) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (C) arrow to select YES. Press SELECT (D).



Figure 3.178: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (D) until ACTIVATE REEL HT is displayed on the upper line.
 - DOWN/UP is displayed on the lower line.
8. Press and hold left (B) arrow to **lower** reel. Press and hold right (C) arrow to **raise** reel.
Verify reel is functioning properly.
9. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.

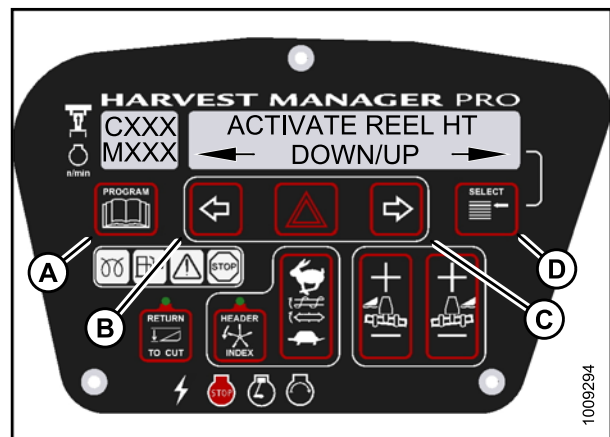


Figure 3.179: M155 Reel Height

OPERATOR'S STATION

Testing the Header Tilt Activate Function Using the Cab Display Module (CDM)

NOTE:

- The header **MUST** be attached to the windrower to perform this procedure. The cab display module (CDM) automatically adjusts its programming for each header. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - This procedure requires installation of the optional Hydraulic Center-Link (MD #B4650) .
 - The engine **MUST** be running to perform this procedure.
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

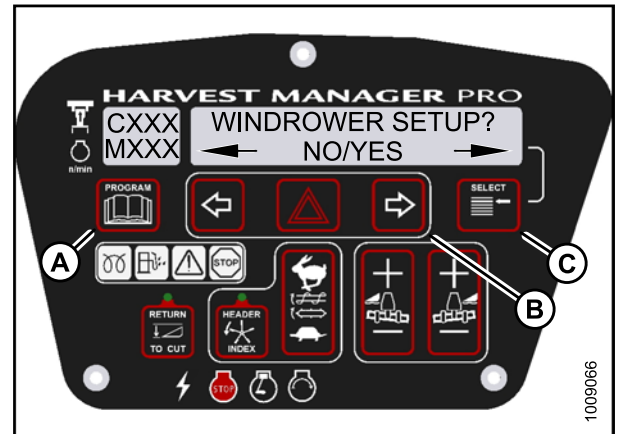


Figure 3.180: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

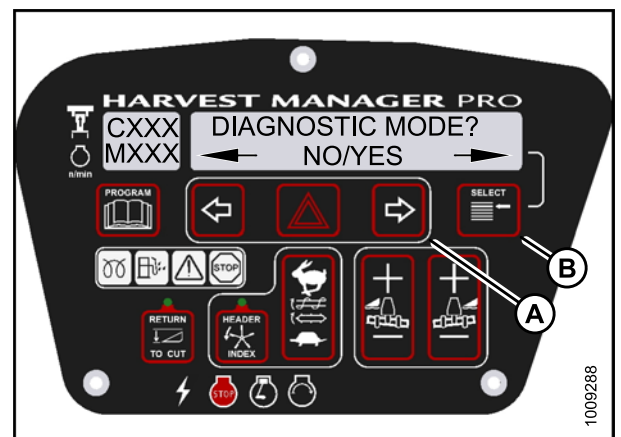


Figure 3.181: M155 Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (D) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (C) arrow to select YES. Press SELECT (D).

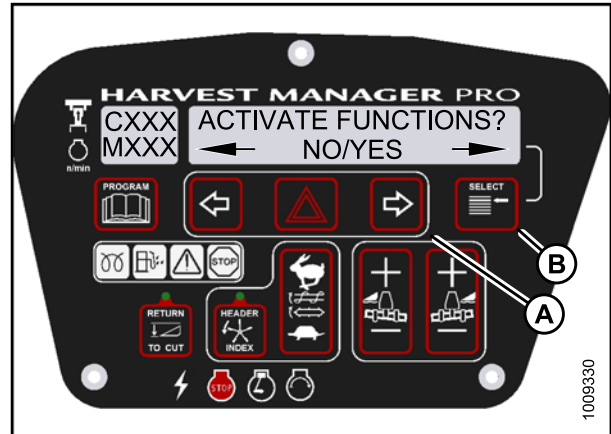


Figure 3.182: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (D) until ACTIVATE HDR TILT is displayed on the upper line.
 - IN/OUT is displayed on the lower line.
8. Press and hold left (B) arrow to **decrease** header tilt. Press and hold right (C) arrow to **increase** header tilt. **Verify header is functioning properly.**
9. Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.

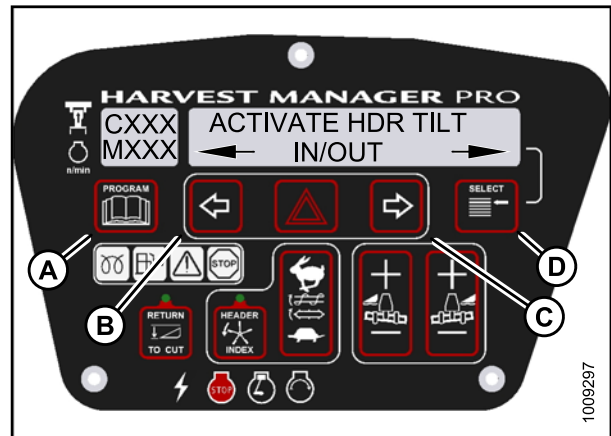


Figure 3.183: M155 Header Tilt Angle

Testing the Reel Fore-Aft Activate Function Using the Cab Display Module (CDM)

NOTE:

- The header **MUST** be attached to windrower to perform this procedure. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- The engine **MUST** be running to perform this procedure.

OPERATOR'S STATION

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

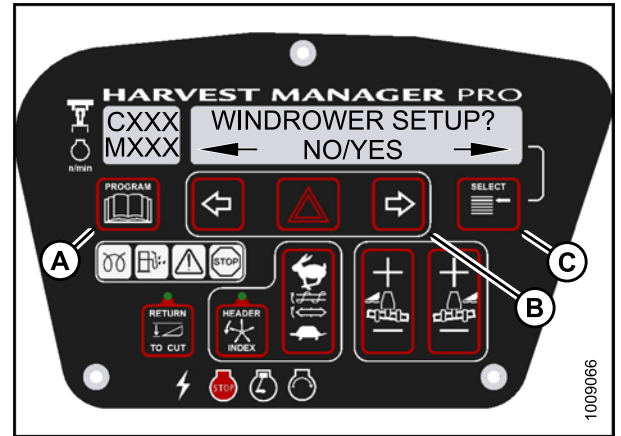


Figure 3.184: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

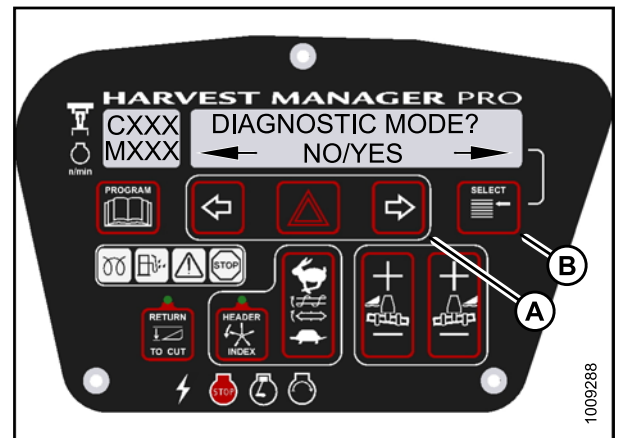


Figure 3.185: M155 Diagnostic Functions

5. Press SELECT (D) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (C) arrow to select YES. Press SELECT (D).

CAUTION

Check to be sure all bystanders have cleared the area.

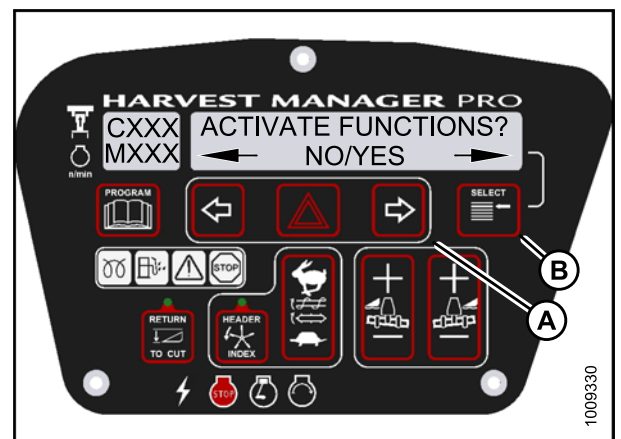


Figure 3.186: M155 Functions

OPERATOR'S STATION

- Press SELECT (D) until ACTIVATE REEL F/A is displayed on the upper line.
 - FORE/AFT is displayed on the lower line.
- Press and hold left (B) arrow to move reel **forward**. Press and hold right (C) arrow to move reel **backward**.
Verify reel fore-aft is functioning properly.
- Press PROGRAM (A) to exit Programming Mode or press SELECT (D) to proceed to next ACTIVATE FUNCTION.

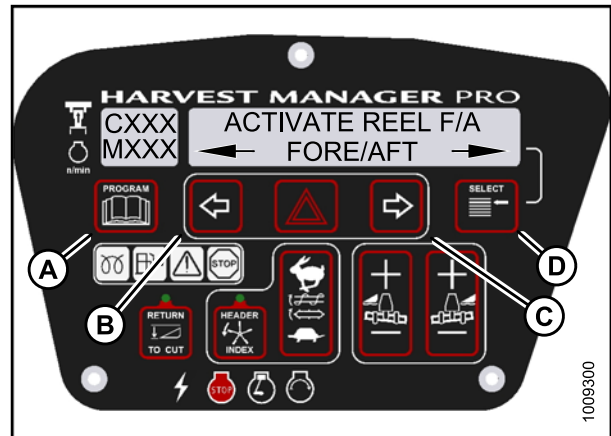


Figure 3.187: M155 Reel Fore-Aft

Activating the Hydraulic Purge Using the Cab Display Module (CDM)

The hydraulic purge removes air from the hydraulic pump system after it has been repaired or changed.

NOTE:

Engine **MUST** be running to perform this procedure.

- Turn ignition key to RUN, or start the engine.
- Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

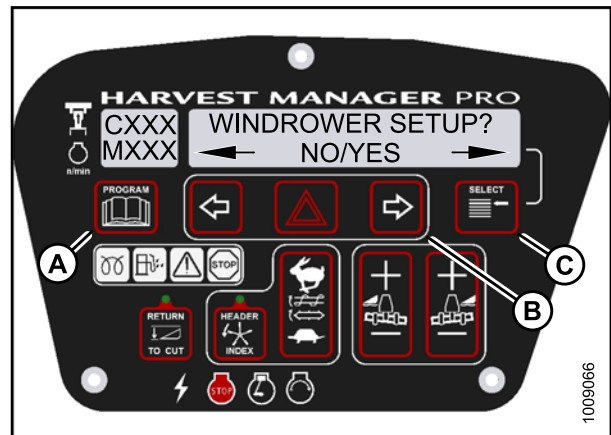


Figure 3.188: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

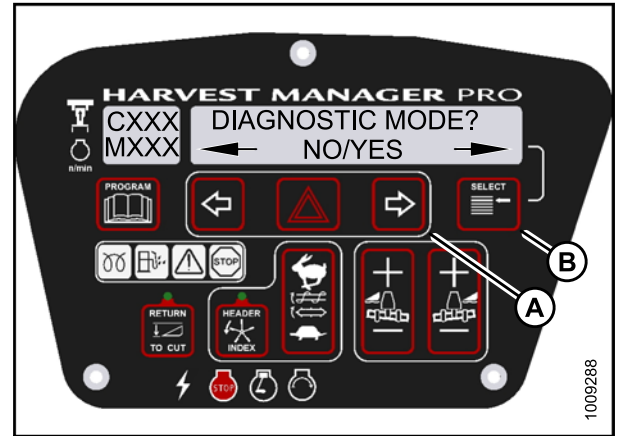


Figure 3.189: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.
 - DOWN/UP is displayed on the lower line.

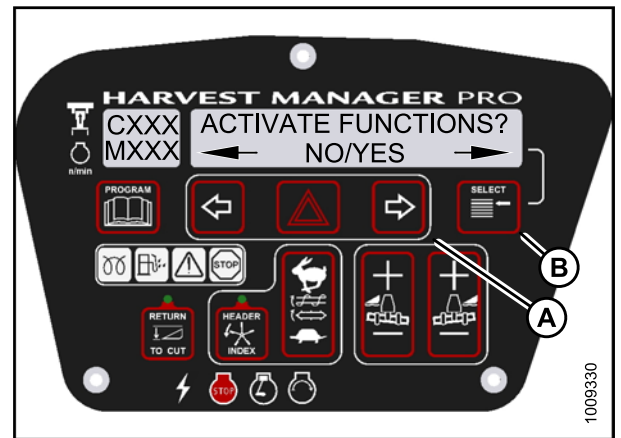


Figure 3.190: M155 Functions

7. Press SELECT (B) until ACTIVATE HYD PURGE? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
8. Press right (A) arrow to select YES. Press SELECT (B).
 - TO ACTIVATE PURGE is displayed on the upper line.
 - PRESS AND HOLD is displayed on the lower line.



CAUTION

Check to be sure all bystanders have cleared the area.



Figure 3.191: M155 Hydraulic Purge

OPERATOR'S STATION

NOTE:

Holding the right arrow activates a timed purge cycle. The CDM will jump to the exit menu if the arrow is released before the end of the timed cycle.

9. Press and hold right (A) arrow to activate purge cycle.
 - PURGE CYCLE STARTED will display on the upper line.
10. When PURGE CYCLE ENDED is displayed release right (A) arrow.
 - NO EXIT YES is displayed on the lower line.
11. Press right arrow to select YES. Press SELECT.
12. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next ACTIVATE FUNCTION.



Figure 3.192: M155 Hydraulic Purge Cycle

Testing the Knife Drive Circuit Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive for a significant length of time. Doing so can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- The header **MUST** be attached to windrower to follow this procedure. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
 - The engine **MUST** be running to perform this procedure.
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.

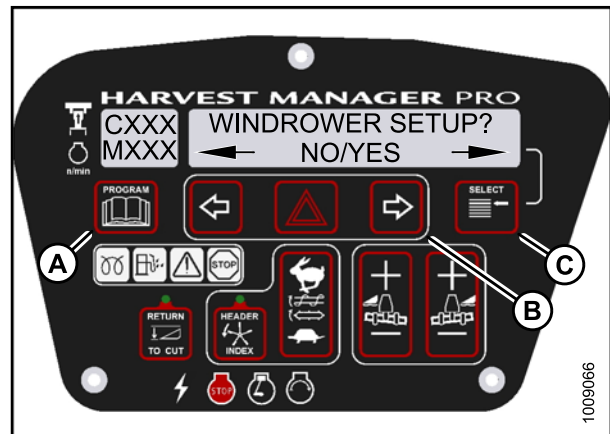


Figure 3.193: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

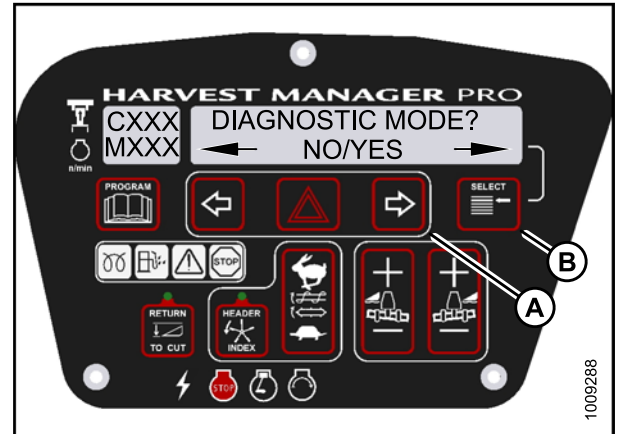


Figure 3.194: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.

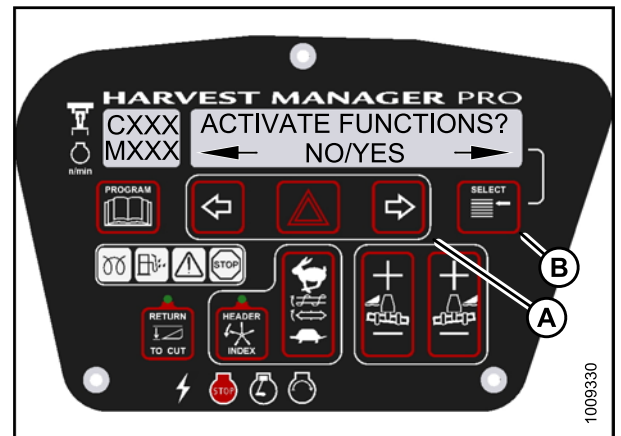


Figure 3.195: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (E) until KNIFE DRIVE SPD XXXX is displayed on the upper line.

IMPORTANT:

Do **NOT** over speed the knife drive.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to **decrease** knife speed.
 - Press right (D) arrow to **increase** knife speed.

Verify the knife drive is functioning properly.

9. Release the HAZARD (C) button. The knife will stop.
10. Press PROGRAM (A) to exit Programming Mode or press SELECT (E) to proceed to next ACTIVATE FUNCTION.

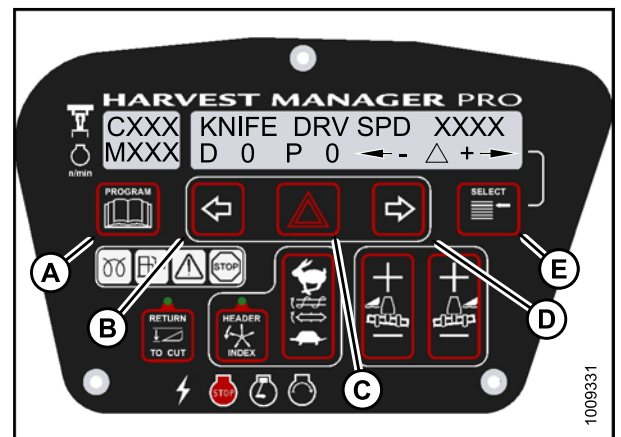


Figure 3.196: M155 Knife Drive

OPERATOR'S STATION

Testing the Draper Drive Circuit Activate Function Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive for a significant length of time. Doing so can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- A draper header **MUST** be attached to windrower to follow this procedure. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#)
- The engine **MUST** be running to perform this procedure.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

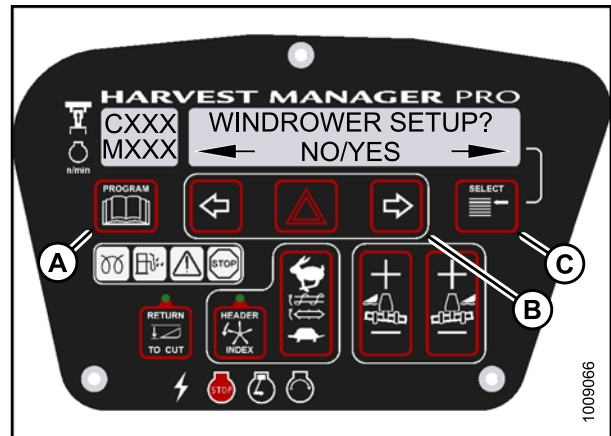


Figure 3.197: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

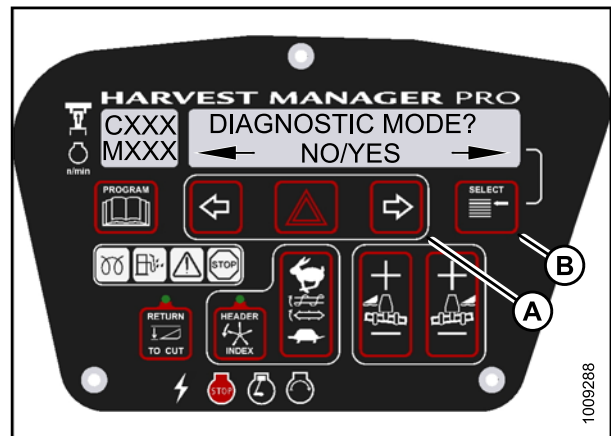


Figure 3.198: M155 Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.



Figure 3.199: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (B) until DRAPER DRV SPD XXXX is displayed on the upper line.

IMPORTANT:

Do **NOT** over speed the drapers.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to **decrease** draper speed.
 - Press right (D) arrow to **increase** draper speed.

Verify the draper drive is functioning properly.

9. Release the HAZARD (C) button. The drapers will stop.
10. Press PROGRAM (A) to exit Programming Mode or press SELECT (E) to proceed to next ACTIVATE FUNCTION.

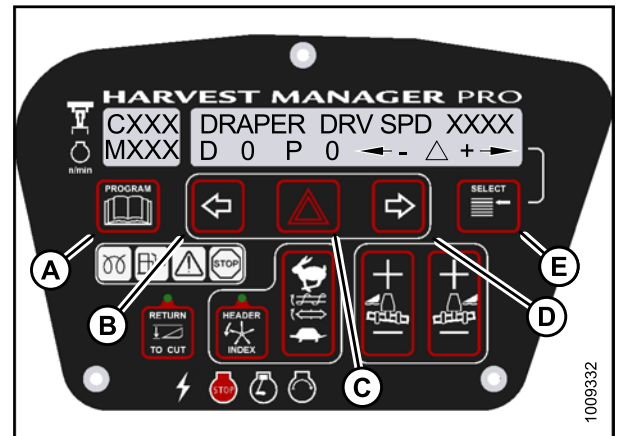


Figure 3.200: M155 Draper Drive

Testing the Reel Drive Circuit Activate Function Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive for a significant length of time. Doing so can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- The header **MUST** be attached to windrower to follow this procedure. For more information, refer to [4.5 Attaching and Detaching Headers, page 213](#).
- This procedure does not apply to rotary disc headers.
- The engine **MUST** be running to perform this procedure.

OPERATOR'S STATION

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (E) until REEL DRV SPD XXXX is displayed on the upper line.

IMPORTANT:

Do **NOT** over speed the reel.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to **decrease** reel speed.
 - Press right (D) arrow to **increase** reel speed.

Verify the reel drive is functioning properly.

9. Release the HAZARD (C) button. The reel will stop.
10. Press PROGRAM (A) to exit Programming Mode or press SELECT (E) to proceed to next ACTIVATE FUNCTION.

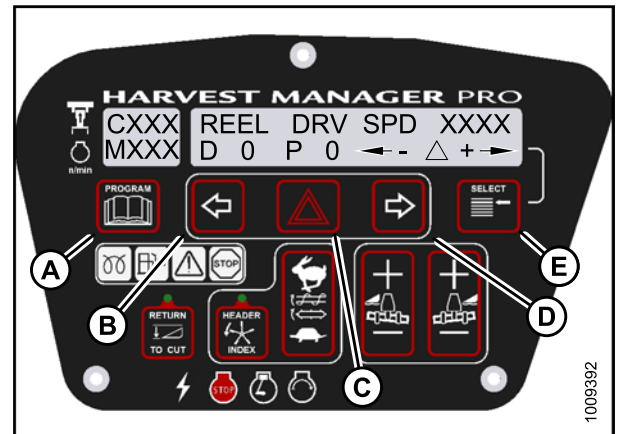


Figure 3.204: M155 Reel Drive

Testing the Rotary Disc Drive Circuit Activate Function Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive for a significant length of time. Doing so can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- A rotary disc header **MUST** be attached to windrower to follow this procedure.
 - The engine **MUST** be running to perform this procedure.
1. Turn ignition key to RUN, or start the engine.
 2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode.
 - WINDROWER SETUP? is displayed on the upper line.

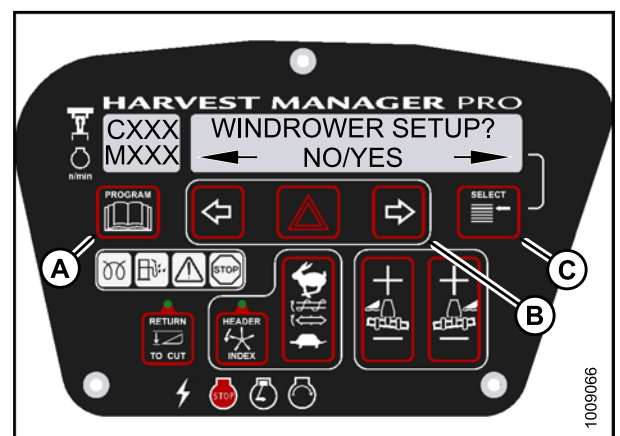


Figure 3.205: M155 CDM Programming Buttons

OPERATOR'S STATION

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

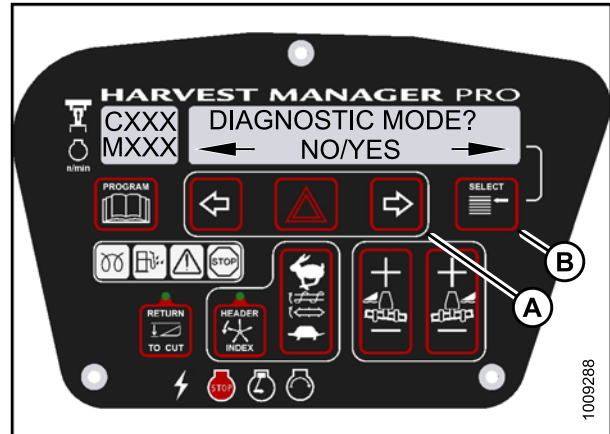


Figure 3.206: M155 Diagnostic Functions

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.

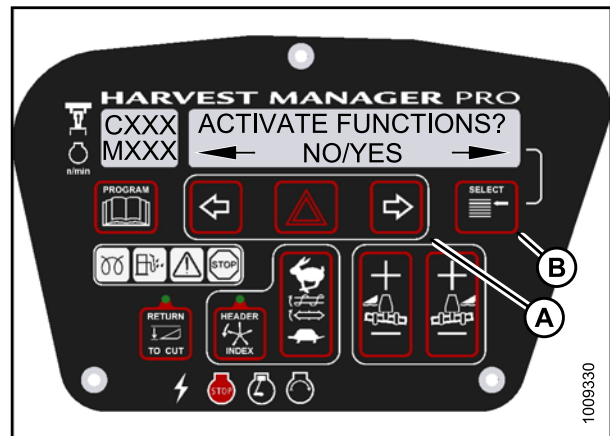


Figure 3.207: M155 Functions

CAUTION

Check to be sure all bystanders have cleared the area.

7. Press SELECT (E) until DISC DRV SPD XXXX is displayed on the upper line.

IMPORTANT:

Do **NOT** over speed the disc drive.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to **decrease** disc speed.
 - Press right (D) arrow to **increase** disc speed.

Verify the disc drive is functioning properly.

9. Release the HAZARD (C) button. The disc drive will stop.
10. Press PROGRAM to exit Programming Mode or press SELECT to proceed to next ACTIVATE FUNCTION.

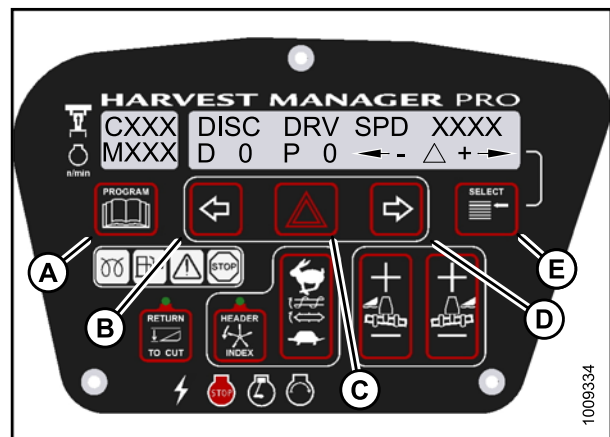


Figure 3.208: M155 Disc Drive

OPERATOR'S STATION

Testing the Double Windrower Attachment (DWA) Drive Activate Function Using the Cab Display Module (CDM)

IMPORTANT:

Do not over-speed a drive for a significant length of time. Doing so can lead to vibration, belt failures, or other over-speeding related problems.

NOTE:

- DWA must be attached to windrower and activated under the WINDROWER SETUP menu. For more information, refer to [Activating the Double Windrower Attachment \(DWA\)](#), page 110.
- Engine **MUST** be running to perform this procedure.

1. Turn ignition key to RUN, or start the engine.
2. Press PROGRAM (A) and SELECT (C) on cab display module (CDM) to enter Programming Mode. Press SELECT (C).
 - WINDROWER SETUP? is displayed on the upper line.

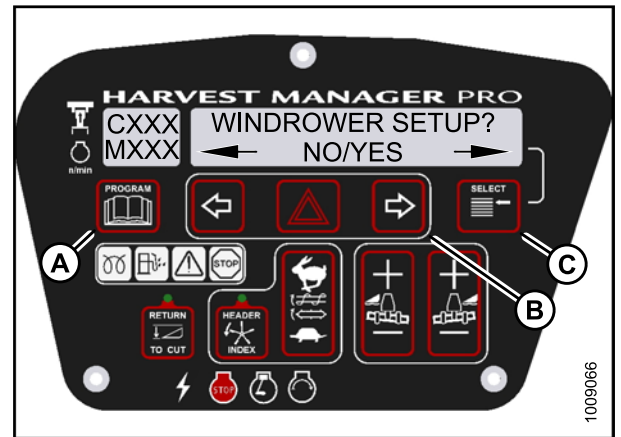


Figure 3.209: M155 CDM Programming Buttons

3. Press SELECT (B) until DIAGNOSTIC MODE? is displayed in upper line.
 - NO/YES is displayed on the lower line.
4. Press right (A) arrow to select Yes. Press SELECT (B).

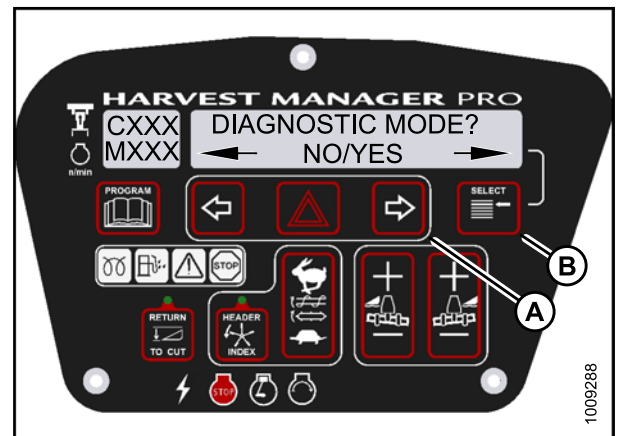


Figure 3.210: M155 Diagnostic Functions

OPERATOR'S STATION

5. Press SELECT (B) until ACTIVATE FUNCTIONS? is displayed on the upper line.
 - NO/YES is displayed on the lower line.
6. Press right (A) arrow to select YES. Press SELECT (B).
 - ACTIVATE HEADER HT is displayed on the upper line.



Figure 3.211: M155 Functions

7. Press SELECT (E) until ACTIVATE DWA DRV is displayed on the upper line.

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Do **NOT** over speed the DWA drive.

8. Press and hold HAZARD (C) button.
 - Press left (B) arrow to decrease DWA drive speed.
 - Press right (D) arrow to increase DWA drive speed.

Verify the DWA drive is functioning properly.

9. Release the HAZARD (C) button. The DWA drive will stop.
10. Press PROGRAM (A) to exit Programming Mode or press SELECT (E) to proceed to next ACTIVATE FUNCTION.

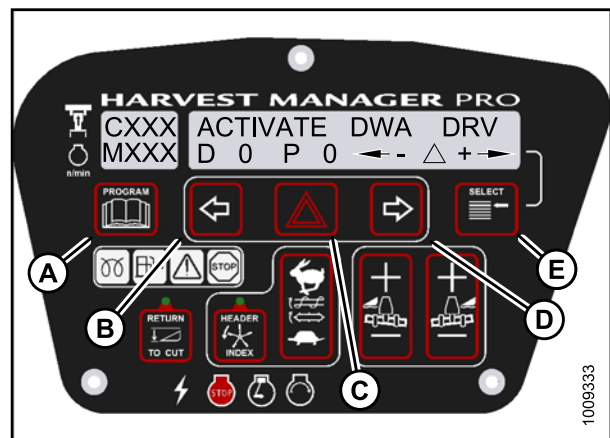


Figure 3.212: M155 DWA Drive

3.19.13 Engine Error Codes

The cab display module (CDM) displays error codes when there is a fault with one of the several sensors that monitor and control engine operation, to assist the Operator or Technician in locating a specific problem with engine operation. Refer to [8.4 Engine Error Codes, page 469](#).

3.19.14 Cab Display Module (CDM) and Windrower Control Module (WCM) Fault Codes

The CDM displays fault codes when there is a fault with one of the sensors that monitor and control windrower operation, to assist the Operator or Technician in locating a specific problem with the windrower. Refer to [8.5 Cab Display Module \(CDM\) Error Codes, page 481](#).

4 Operation

4.1 Owner/Operator Responsibilities

CAUTION

- It is your responsibility to read and understand this manual completely before operating the windrower. Contact your Dealer if an instruction is not clear to you.
- Follow all safety messages in the manual and on safety signs on the machine.
- Remember that YOU are the key to safety. Good safety practices protect you and the people around you.
- Before allowing anyone to operate the windrower, for however short a time or distance, make sure they have been instructed in its safe and proper use.
- Review the manual and all safety related items with all Operators every year.
- Be alert for other Operators not using recommended procedures or not following safety precautions. Correct these mistakes immediately, before an accident occurs.
- Do NOT modify the machine. Unauthorized modifications may impair the function and/or safety and affect machine life.
- The safety information given in this manual does NOT replace safety codes, insurance needs, or laws governing your area. Be sure your machine meets the standards set by these regulations.

4.2 Symbol Definitions

The following symbols are used to depict functions or reactions at the various instruments and controls. Learn the meaning of these symbols before operating the windrower.

4.2.1 Engine Functions

These are the symbols that are used on the console.

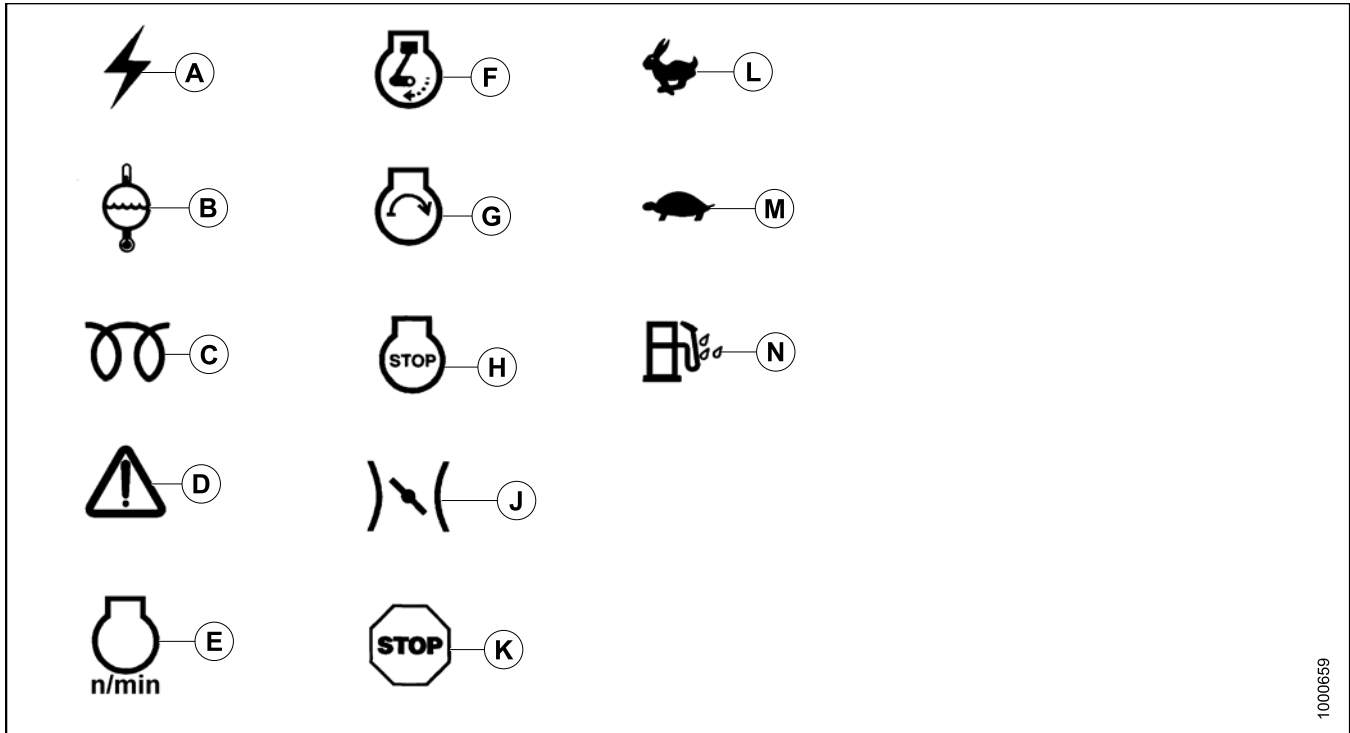


Figure 4.1: Engine Function Symbols

A - Electrical Power – Accessories

B - Engine Coolant Temperature

C - Engine Glow Plugs

D - Engine Malfunction

E - Engine rpm

F - Engine Run

G - Engine Start

H - Engine Stop

J - Engine Throttle

K - Engine Urgent Stop

L - Fast

M - Slow

N - Water in Fuel

4.2.2 Windrower Operating Symbols

These are the symbols used on the console for windrower operation.



Figure 4.2: Windrower Operating Symbols

A - Turn Signals

D - Neutral

G - Headlights High Beam

K - Fresh Air

N - Seat Height Up

Q - Seat Fore Aft Isolator

T - Cab Temperature Control

B - Hazard Warning Lights

E - Reverse

H - Work Light

L - Blower

O - Seat Height Down

R - Seat Back Fore and Aft

U - Air Conditioning

C - Forward

F - Headlights Low Beam

J - Lighter

M - Windshield Wiper

P - Seat Fore and Aft

S - Seat Ride Damping

V - Recirculate

4.2.3 Header Functions

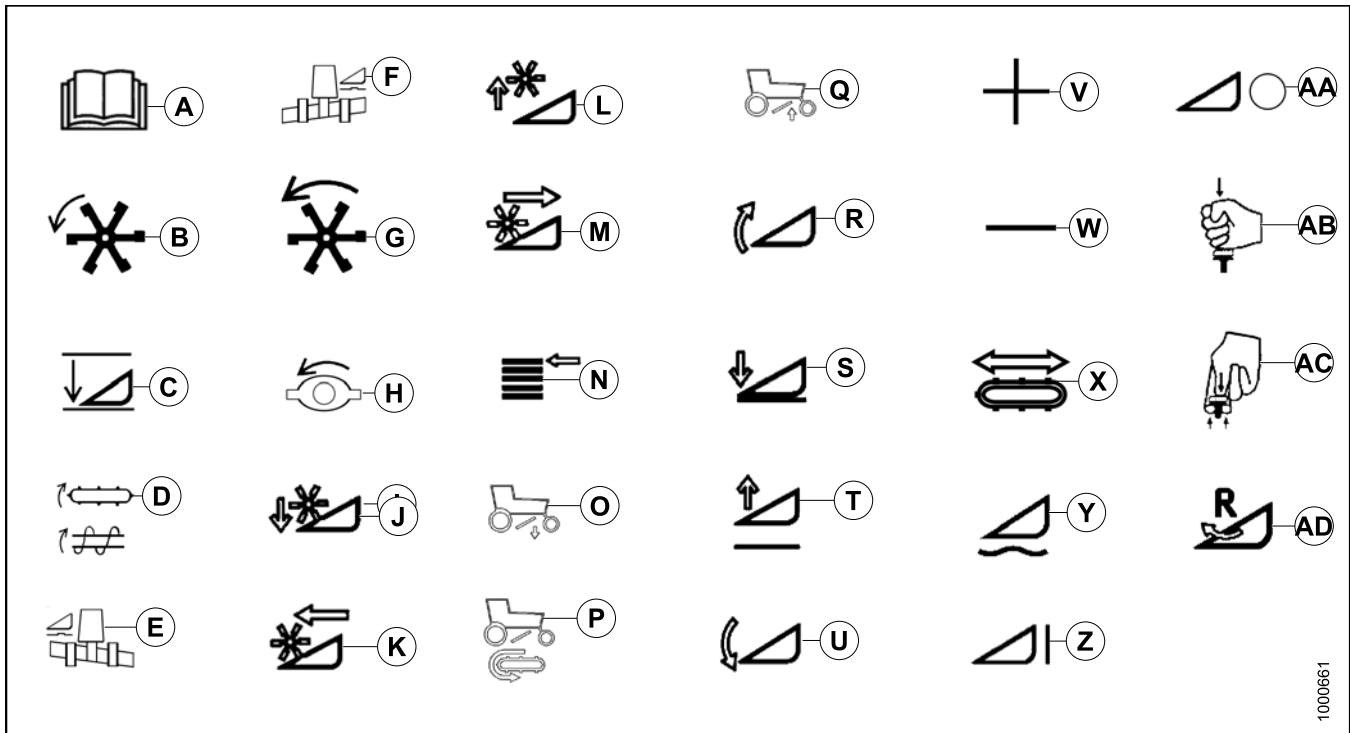


Figure 4.3: Header Function Symbols

- | | | |
|----------------------------|-----------------------|---------------------------------|
| A - Program | B - Header Index | C - Return to Cut |
| D - Conveyor/Auger Speed | E - Float Left | F - Float Right |
| G - Reel Speed | H - Disc Speed | J - Reel Down |
| K - Reel Forward | L - Reel Up | M - Reel Rearward |
| N - Display Select | O - DWA Down | P - DWA Draper Speed |
| Q - DWA Up | R - Header Tilt Up | S - Header Down |
| T - Header Up | U - Header Tilt Down | V - Increase |
| W - Decrease | X - Deck Shift | Y - Float |
| Z - Header Engage | AA - Header Disengage | AB - Push Down Header Disengage |
| AC - Pull Up Header Engage | AD - Header Reverse | |

4.3 Operating the Windrower

4.3.1 Operational Safety

CAUTION

Follow these safety precautions:

- Wear close fitting clothing and protective shoes with slip resistant soles.
- Remove foreign objects from the machine and surrounding area.
- Carry with you any protective clothing and personal safety devices that **COULD** be necessary through the day. Don't take chances.
- You may need:
 - a hard hat
 - protective glasses or goggles
 - heavy gloves
 - respirator or filter mask
 - wet weather gear



Figure 4.4: Safety Equipment

- Protect against noise. Wear a suitable hearing protective device such as ear muffs or ear plugs to protect against objectionable or uncomfortable loud noises.
- Follow all safety and operational instructions given in your operator's manuals. If you do not have a header manual, get one from your Dealer and read it thoroughly.
- Never attempt to start the engine or operate the machine except from the operator's seat
- Check the operation of all controls in a safe clear area before starting work.
- Check for excessive vibration and unusual noises. If there is any indication of trouble, shut down and inspect the machine. Follow proper shutdown procedure. Refer to [Shutting Down the Engine, page 163](#).
- Operate only in daylight or good artificial light.



Figure 4.5: Safety Equipment

4.3.2 Break-In Period

The windrower is ready for normal operation. However there are several items to check and watch out for during the first 150 hours.

In addition to the following, perform the items specified in [Break-In Inspections, page 426](#).

DANGER

Before investigating an unusual sound or attempting to correct a problem, place ground speed lever (GSL) in N-DETENT, shut off engine, and remove key.

IMPORTANT:

Until you become familiar with the sound and feel of your new windrower, be extra alert and attentive.

- Operate engine at moderate load and avoid extremely heavy or light loading for longer than five minutes.
- Avoid unnecessary idling. If engine will be idling longer than five minutes after reaching operating temperature, turn key OFF to stop engine.
- Check engine oil level frequently. Watch for any signs of leakage. If oil must be added, refer to [Checking Engine Oil Level, page 335](#).

NOTE:

During the break-in period, a higher than usual oil consumption should be considered normal.

NOTE:

If windrower must be driven in cold weather (below freezing), let engine idle for three minutes, and then operate at moderate speed until oil has warmed up.

- Watch coolant gauge in cab for temperature rising beyond normal operating range. Check that coolant level at reserve tank (mounted next to radiator) stays between HOT and COLD marks on tank. Refer to [Engine Cooling System, page 353](#). If over-heating problems occur, check for coolant leaks.

4.3.3 Preseason Checks/Annual Service

CAUTION

- Review the operator's manual to refresh your memory on safety and operating recommendations.
- Review all safety signs and other decals on the windrower and note hazard areas.
- Be sure all shields and guards are properly installed and secured. Never alter or remove safety equipment.
- Be sure you understand and have practiced safe use of all controls. Know the capacity and operating characteristics of the machine.
- Store a properly stocked first aid kit and charged fire extinguisher on the windrower.

1. Perform the following checks:

- a. Drain off excess hydraulic oil added for storage. Refer to [Draining Hydraulic Oil, page 403](#).
- b. Remove plastic bags and/or tape from all sealed openings (air cleaner intake, exhaust pipe, fuel tank).
- c. Charge battery and install. Be sure terminals are clean and cables are connected securely.

OPERATION

- d. Adjust tension on air conditioning (A/C) compressor belt. Refer to [Tensioning Air Conditioner \(A/C\) Compressor Belt, page 367](#).
 - e. Distribute A/C refrigerant by cycling A/C switch. Refer to [Air Conditioning Compressor Coolant Cycling, page 159](#).
 - f. Check the entire A/C system for leakage at the beginning of each season.
2. Perform annual maintenance. Refer to [5.5.11 Maintenance Schedule, page 425](#).

Air Conditioning Compressor Coolant Cycling

IMPORTANT:

Perform the following steps whenever the machine is first started after storage for more than one week:

1. Turn blower switch (A) to the first position, turn temperature control switch (D) to maximum heating, and A/C control switch (B) to OFF.
2. Start engine, and operate at low idle until engine is warm.
3. Click A/C switch (B) from OFF to ON for one second, then back to OFF for 5 to 10 seconds. Repeat this step ten times.

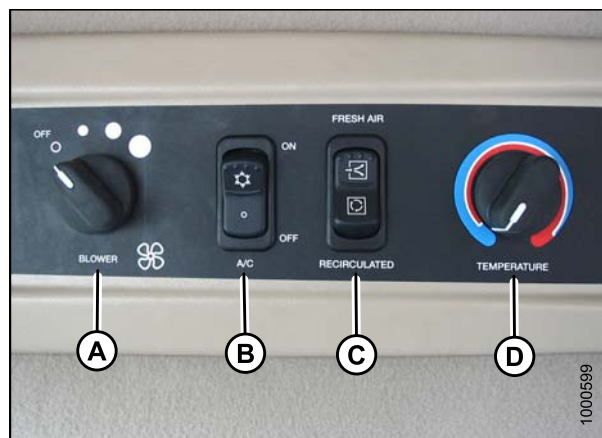


Figure 4.6: Climate Control

A - Blower Switch
B - Air Conditioning Switch
C - Outside Air Switch
D - Temperature Control

4.3.4 Daily Checks and Maintenance

Perform the following checks and recommended maintenance before operating the windrower every day:

1. Check the machine for leaks.

NOTE:

Use proper procedure when searching for pressurized fluid leaks. Refer to [Hoses and Lines, page 411](#).

2. Check for missing or broken parts.
3. Clean the windows and mirrors to ensure good visibility in all directions. Stand on the platform to access the rear window. Hold onto the handholds on the cab front corners and stand on the header anti-slip strips to wash the front window.
4. Clean all lights and reflective surfaces to maintain visibility to others.
5. Perform daily maintenance. Refer to [5.5.11 Maintenance Schedule, page 425](#).

4.3.5 Engine Operation

Starting the Engine

⚠ DANGER

- Avoid possible injury or death from a runaway machine.
- This machine has safety devices which allow the engine to start only when the ground speed lever is in N-DETENT, the steering wheel is locked in the NEUTRAL position, and the header drive switch is in the OFF position. Under no circumstances are these devices to be deliberately rewired or misadjusted so that the engine can be started with controls out of NEUTRAL.
- Do NOT start engine by shorting across starter or starter relay terminals. Machine will start with drive engaged and move if normal starting circuitry is bypassed.
- Start engine only from operator's seat with controls in NEUTRAL. NEVER start engine while standing on ground. Never try to start engine with someone under or near machine.
- Before starting engine, be sure there is plenty of ventilation to avoid asphyxiation.

IMPORTANT:

Do NOT tow machine to start engine. Damage to hydrostatic drives will result.

⚠ WARNING

Before starting engine, securely fasten your seat belt and ensure trainer's seat belt is fastened if occupied. The seat belt can help ensure your safety if it is used and maintained.

1. The battery main disconnect switch is located on the right-hand frame rail, behind the maintenance platform, and can be accessed by moving the platform. Ensure switch is in the POWER ON position.

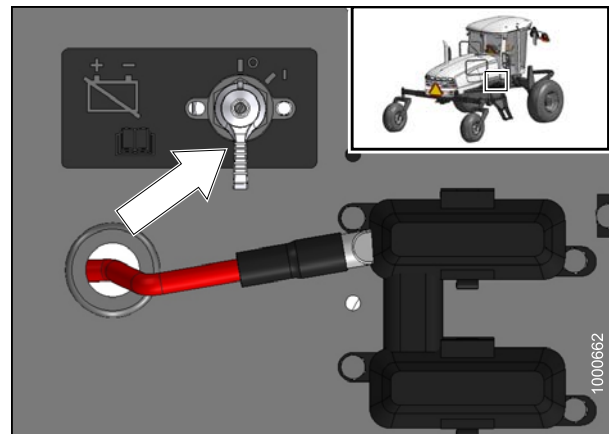


Figure 4.7: Battery Disconnect Switch

OPERATION

2. Ensure lock (A) at the base of the steering column is engaged at cab-forward or engine-forward position.
3. Move ground speed lever (GSL) (B) into N-DETENT.
4. Turn steering wheel until it locks. It may be possible to move the steering wheel slightly in the locked position.

IMPORTANT:

Do **NOT** attempt to force the wheel out of locked position as damage to the traction system may occur.

5. Fasten seat belt.
6. Push HEADER DRIVE switch (C) to ensure it is OFF.

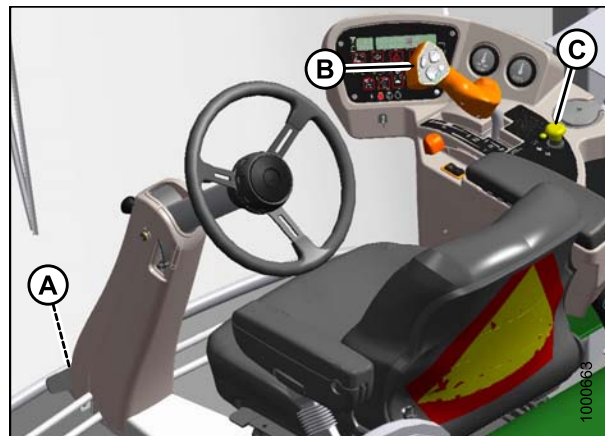


Figure 4.8: Operator Controls

Normal Start

Engine temperature above 60°F (16°C):

WARNING

If starter engages with steering wheel unlocked, ground speed lever out of NEUTRAL, or header clutch engaged, **DO NOT START ENGINE**. See your Dealer.

1. Set throttle (A) to START position—fully back.

IMPORTANT:

The machine gauges and instruments provide important information about machine operation and condition. Familiarize yourself with the gauges and monitor them carefully during start-up operation. Refer to [3.16 Engine Controls and Gauges, page 65](#).

CAUTION

Check to be sure all bystanders have cleared the area.

2. Sound horn three times.
3. Turn ignition key (B) to RUN position. Single loud tone sounds, engine warning lights illuminate as a self-test, and cab display module (CDM) displays “HEADER DISENGAGED” and “IN PARK”.
4. Turn ignition key (B) to START position until engine starts, and then release key. CDM displays programmed header data for five seconds if attached, and then returns to previous display.



Figure 4.9: Operator Console

OPERATION

IMPORTANT:

- Do **NOT** operate starter for longer than 15 seconds at a time.
- If engine does not start, wait at least two minutes before trying again.
- After the third 15 second crank attempt, allow solenoid to cool for 10 minutes before further cranking attempts. If engine still does not start, refer to [Engine Troubleshooting](#).

Cold Start

WARNING

If starter engages with steering wheel unlocked, ground speed lever (GSL) out of NEUTRAL, or header clutch engaged, **DO NOT START ENGINE**. See your Dealer.

IMPORTANT:

Do **NOT** operate engine above 1500 rpm until engine temperature gauge is above 100°F (40°C).

When the engine temperature is below 40°F (5°C), follow the procedure for a normal start. Refer to [Normal Start, page 161](#). The engine will cycle through a period where it appears to labor until the engine warms up. The throttle is nonresponsive during this time as the engine is in “WARM UP” mode. This mode will last from 30 seconds to 3 minutes depending on the temperature. After the engine has stabilized and is idling normally, the throttle becomes active.

Engine Warmup

Allow engine to run with throttle lever (A) at or near low idle position until temperature gauge (B) reaches approximately 100°F (40°C).

NOTE:

Scroll through cab display module (CDM) for engine temperature.



Figure 4.10: Operator Console

OPERATION

Engine Intermediate Speed Control (ISC)

The engine operating speed can be programmed to enable the windrower to operate at reduced engine rpm (that is, 1800, 2000, or 2200 rpm) without significantly affecting the ground or header speeds. The default setting is 2200 rpm or the last selected rpm.

NOTE:

Previous M-Series windrower models included an OFF (full throttle) option which is **NOT** available on the M155.

Engine ISC is useful when operating loads are reduced such as in light crop conditions that do not require the maximum engine rpm. Reduced engine speed lowers fuel consumption, noise levels, and exhaust emissions in addition to reducing engine wear.

The programmed engine speed is activated when the header is engaged.

Programming instructions are provided in [3.19.5 Cab Display Module \(CDM\) Programming, page 89](#).

Shutting Down the Engine

CAUTION

Park on a flat, level surface, header on the ground, and the ground speed lever in N-DETENT position and steering wheel locked.

IMPORTANT:

Before stopping engine, run at low idle for approximately five minutes to cool hot engine parts (and allow turbocharger to slow down while engine oil pressure is available).

1. Lower header.
2. Place ground speed lever (GSL) (B) into N-DETENT.
3. Lock steering wheel.
4. Turn ignition key (A) counterclockwise to OFF position.



Figure 4.11: Operator Console

Filling the Fuel Tank

Fill the fuel tank daily, preferably at the end of the day's operation to help prevent condensation in the tank.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

WARNING

- To avoid personal injury or death from explosion or fire, do NOT smoke or allow flame or sparks near fuel tank when refueling.
- NEVER refuel the windrower when the engine is hot or running.

CAUTION

Do NOT allow tank to empty. Running out of fuel can cause air locks and/or contamination of the fuel system. Refer to [System Priming, page 352](#).

1. Stop windrower and remove key.
2. Stand on either platform to access the fuel tank filler pipe.
3. Clean the area around filler cap (A).
4. Turn cap handle (B) counterclockwise until loose and then remove cap.
5. Fill tank with approved fuel, refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 466](#).

IMPORTANT:

Do NOT fill tank completely—space is required for expansion. A filled tank could overflow if exposed to a rise in temperature, such as direct sunlight.

6. Replace fuel tank cap (A) and turn cap handle (B) clockwise until snug.

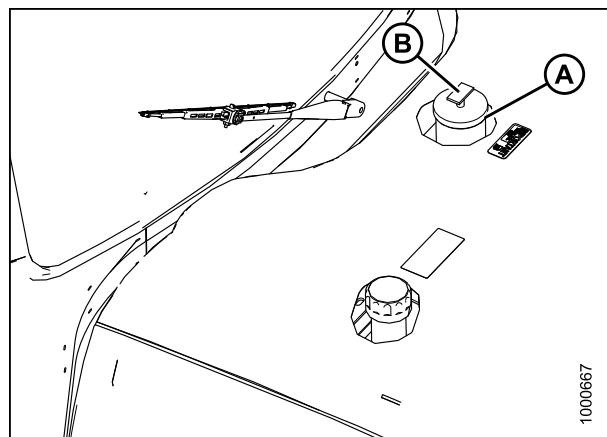


Figure 4.12: Fuel Filler Cap

Engine Temperature

The normal engine operating temperature range is 180–225°F (82–107°C). Engine temperature is indicated by gauge (B) on the operator’s console.

If the temperature exceeds 230°F (110°C), an ongoing intermittent tone will be heard and the cab display module (CDM) will flash “ENGINE TEMP”. Stop the engine **immediately** and determine cause. The tone will stop and the CDM will return to normal when the temperature drops below 225°F (107°C).



Figure 4.13: Operator Console

OPERATION

Engine Oil Pressure

The nominal engine oil pressure is 10 psi (69 kPa) at low idle and 55.1 psi (380 kPa) at maximum rated speed.

If the oil pressure drops below the preset level of 7.5 psi (52 kPa), the cab display module (CDM) flashes an error code and error message.

If the STOP ENGINE light illuminates, stop the engine **IMMEDIATELY** and investigate.

If the yellow CAUTION light illuminates, stopping immediately is optional. You may continue operations and investigate later, but you are **STRONGLY** advised to monitor the situation carefully.

Electrical

The electrical system voltage is displayed on the cab display module (CDM) when selected with the SELECT button on the ground speed lever (GSL) handle or the SELECT switch on the CDM. The display indicates the condition of the battery and alternator.

Ignition	Engine	Reading	Indicated Condition
ON	Running	13.8–15.0	Normal
		> 16.0 ¹⁶	Regulator out of adjustment
		< 12.5 ¹⁶	Alternator not working or regulator out of adjustment
	Shut down	12.0	Battery normal

Engine Warning Lights

There are four engine warning lights that illuminate if abnormal conditions occur while the engine is running. The engine warning lights should **NOT** be illuminated under normal operating conditions. For more information, refer to [Engine Warning Lights, page 85](#).

4.3.6 Driving the Windrower



WARNING

The seat belt can help ensure your safety if it is used and maintained.

- Before starting the engine, securely fasten your seat belt. Ensure that anyone occupying the trainee's seat is secured by a seat belt as well.
- Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.

16. Display flashes voltage reading with single loud tone. Repeats every 30 minutes until condition is fixed.

OPERATION

WARNING

- Avoid driving the machine with header removed. Removing header decreases the weight on drive wheels, reducing steering control.
- If necessary to drive machine with header removed, use transmission field speed range, do NOT exceed 1500 rpm engine speed, and avoid loose gravel and slopes.
- Never use windrower as a towing vehicle when header is removed, except as instructed in [Towing Header with Windrower, page 178](#). There is insufficient weight on the drive wheels to provide steering control.
- Because of windrower shape characteristics, a roll-over protected (ROPS) cab is not required. If operating with header removed, be aware that cab structure will NOT withstand a roll-over.

CAUTION

HYDROSTATIC STEERING

- Turning the steering wheel varies the hydraulic flow to one drive wheel relative to the other drive wheel.
- The reaction of this type of steering is different from conventional steering mechanisms.

CAUTION

- With the engine running, moving the ground speed lever out of N-DETENT unlocks steering. Any movement of steering wheel will then cause the machine to move, even if the ground speed lever has not been moved forward or rearward from the NEUTRAL position.
- Hydrostatic steering is more sensitive than mechanical steering.
- Steering is opposite to normal when driving in reverse.
- The brakes are only on when the ground speed lever (GSL) is in N-DETENT and the steering wheel is centered and locked.

DANGER

- NEVER move the ground speed lever or steering wheel until you are sure all bystanders have cleared the area.
- Make sure area is clear before making turns, as the ends of a header travel in a large arc.
- Check the operation of all controls in a safe, clear area before starting work.
- Do know the capacity and operating characteristics of your machine.
- Do NOT allow riders in or on the machine.
- Do NOT operate unless seated in the operator's position.
- Do NOT attempt to get on or off a moving windrower.
- AVOID sudden starts and stops.
- AVOID inclines, ditches, and fences.
- Do NOT rapidly accelerate or decelerate when turning.
- REDUCE your speed before turning, crossing slopes, or travelling over rough ground.
- Do NOT allow anyone to stand behind the machine while operating. Foreign objects may be forcibly ejected.

OPERATION

Entering and Exiting the Windrower

CAUTION

To provide more secure hand and foot mobility, preventing slipping and possible injury, **ALWAYS** face the windrower and use the hand rail when dismounting (or mounting). **NEVER** attempt to get on or off a moving windrower.

Before leaving the operator's seat for any reason:

- Park on level ground if possible.
- Be sure ground speed lever is in N-DETENT and steering wheel is locked in the straight-ahead position.
- Fully lower header and reel.
- Disengage header drives.
- To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition.
- Turn off wipers.
- Turn off lights unless required for inspection purposes.
- Release seat belt.
- Raise armrest and steering wheel for easier exit and re-entry.
- Lock the cab door when leaving the windrower unattended. (When the door is locked, it can still be opened from inside the cab.)

Swing-away platforms and stairs (A) are provided on both sides of the windrower to accommodate cab-forward and engine-forward access to the operator's station, as well as several maintenance tasks.

The left cab-forward side platform is shown in the rearward (cab-forward) position.

Two doors (B) are provided for cab entry and exit in either cab-forward mode or engine-forward mode. Enter the cab using the door opposite the operator's console.

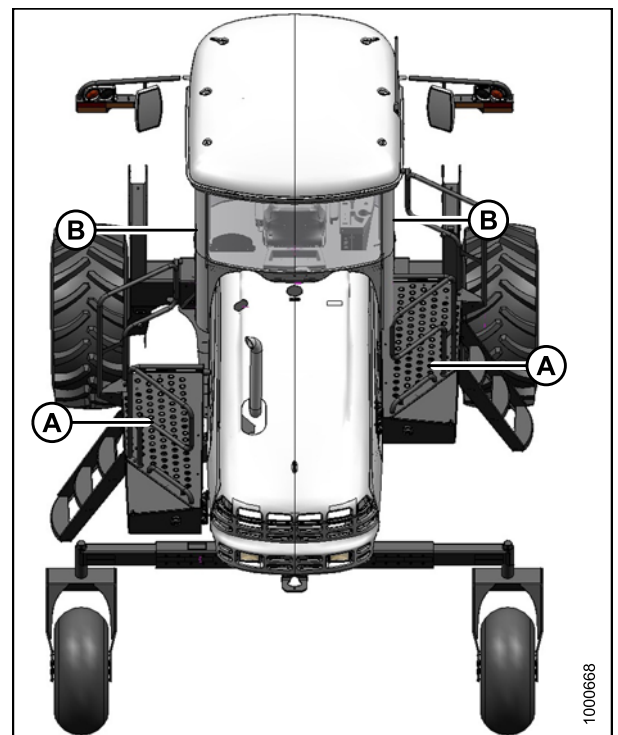


Figure 4.14: Platforms and Doors

Driving Forward in Cab-Forward Mode

CAUTION

Operate both steering wheel and ground speed lever slowly for familiarization. Avoid the common tendency of new Operators to oversteer.

WARNING

Do NOT drive windrower on road in cab-forward configuration, unless it is equipped with the proper lighting and markings for cab-forward road travel.

In cab-forward mode, the Operator's station is facing away from the engine. If necessary, swivel operator's seat to cab-forward position as follows:

1. Place ground speed lever (GSL) (A) in N-DETENT. Engine can be running.

IMPORTANT:

If GSL is NOT in N-DETENT, damage to the GSL cable may result when swivelling operator's station.

2. Pull up on knob (B) and hold to release latch (C) at base of steering column.
3. Turn steering wheel counterclockwise to pivot operator's station clockwise 180° until pin engages latch to secure operator's station in new position.
4. Ensure seat belt is fastened.
5. Start engine if not running. Refer to [Starting the Engine, page 160](#).
6. There are two cab-forward speed ranges. Set ground speed range switch (A) to either **H** (0–16 mph [25.7 km/h]), or **L** (0–11 mph [17.7 km/h]).
7. Slowly push throttle (B) to full forward (operating speed). cab display module (CDM) should display 2320–2350 rpm at (C).

CAUTION

Check again to be sure all bystanders have cleared the area.

8. Move the GSL (E) out of N-DETENT and slowly forward to desired speed which will be displayed at (D).



Figure 4.15: Cab-Forward Mode



Figure 4.16: Operator Console

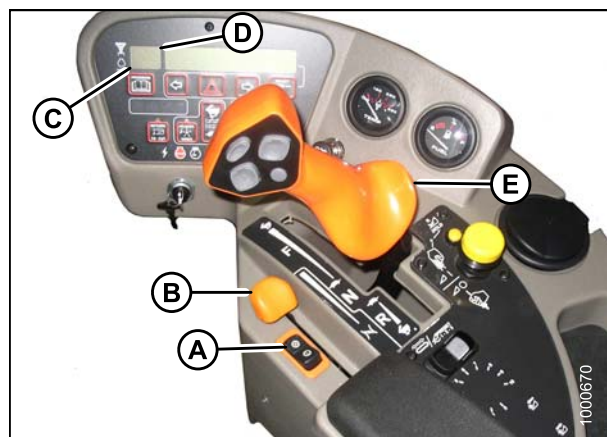


Figure 4.17: Operator Console

OPERATION

IMPORTANT:

The windrower can be equipped with an automatic steering system for use in the field. An automated steering system is available as an option and can be installed by a MacDon Dealer. The GSL has been pre-wired at the factory with a switch. Refer to [7.1.2 Automated Steering Systems, page 447](#).

Driving Reverse in Cab-Forward Mode

WARNING

Back up slowly. Steering is opposite to normal when reversing. Hold steering wheel at the bottom and turn wheel in direction you want the rear (cab-forward) of the machine to travel.

1. Move speed range switch (A) to L (low-range position).
2. Move throttle lever (B) to a mid-range position.

NOTE:

Reversing in low speed range and at reduced engine speed is recommended since steering will be less sensitive than at higher speed settings.

CAUTION

Check again to be sure all bystanders have cleared the area.

3. Move the ground speed lever (GSL) rearward to desired speed.
4. Steer as shown.



Figure 4.18: Operator's Console

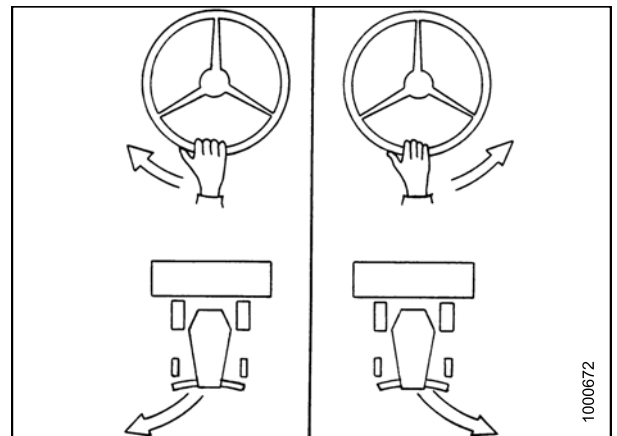


Figure 4.19: Cab-Forward Mode

OPERATION

Driving Forward in Engine-Forward Mode

In the engine-forward mode, the Operator's station is facing toward the engine. If necessary, swivel operator's station to engine-forward position as follows:

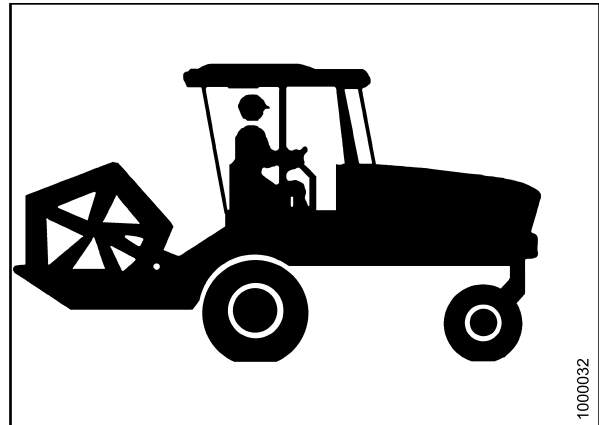


Figure 4.20: Engine-Forward – Seat Faces Engine

1. Place ground speed lever (GSL) (A) in N-DETENT and lock steering wheel. Engine can be running.

IMPORTANT:

If GSL is **NOT** in N-DETENT, damage to the GSL cable may result when swivelling operator's station.

2. Pull up on knob (B) and hold to release latch (C) at base of steering column.
3. Turn steering wheel clockwise to pivot operator's station counterclockwise 180° until pin engages latch to secure operator's station in new position.
4. Start engine if not running.



Figure 4.21: Engine-Forward – Seat Faces Engine

5. Set ground speed range switch (A) to **H** for road speed (0–23 mph [37 km/h]). Cab display module (CDM) will display ROAD GEAR at (F) and an alarm will briefly sound.
6. Slowly push throttle (B) to full forward (operating speed). CDM should display 2320–2350 rpm at (C).

CAUTION

Check to be sure all bystanders have cleared the area.

7. Slowly move the GSL (E) forward to desired speed which will be displayed at (D).

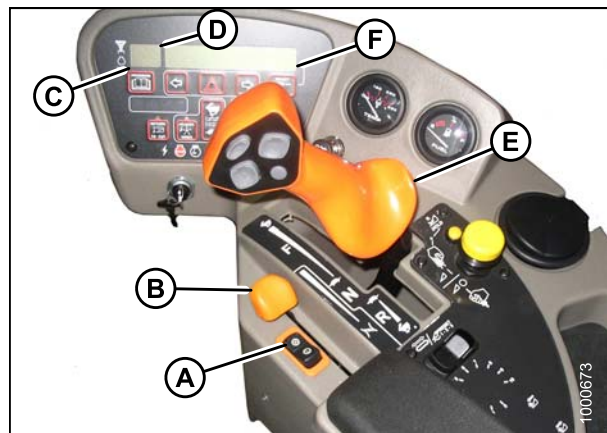


Figure 4.22: Operator Console

CAUTION

Operate both steering wheel and ground speed lever slowly while becoming familiar with the machine. Remember that steering is more sensitive when speed-range control is in road speed position. Avoid the common tendency of new Operators to oversteer.

8. If more tractive (lugging) power is required (for example, when driving up a ramp, up a hill, or up out of a ditch):
 - a. Move the GSL (E) closer to NEUTRAL.
 - b. Switch speed-range control (B) to **L** (low range).
9. Once the lugging condition no longer exists:
 - a. Set GSL (E) to **NOT MORE THAN HALF** maximum forward speed.
 - b. Move speed-range control (B) to **H** (high-range). Steering is more sensitive in this speed range.



Figure 4.23: Operator Console

Driving in Reverse in Engine-Forward Mode

WARNING

Back up slowly. Steering is opposite to normal when reversing. Hold steering wheel at the bottom and turn wheel in direction you want the rear (cab-forward) of the machine to travel.

1. Move speed-range switch (A) to **L** (low-range position).
2. Move throttle lever (B) to a mid-range position.

NOTE:

Reversing in low speed range and at reduced engine speed is recommended since steering will be less sensitive than at higher speed settings.



Figure 4.24: Operator Console

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

3. Move the ground speed lever (GSL) (C) rearward to desired speed.
4. Steer as shown.

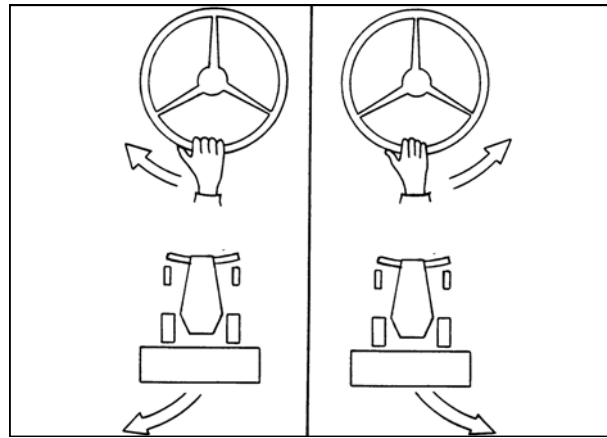


Figure 4.25: Steering the Windrower

Spin Turning

Hydrostatic steering provides significantly more manoeuvrability than mechanical steering.

CAUTION

Be sure area is clear before making turns. Although windrower pivots on the spot, the ends of the header travel faster and in a large arc.

1. Move the ground speed lever (GSL) (A) out of N-DETENT towards the seat and hold.
2. Slowly turn the steering wheel in the desired direction of turn. The windrower will pivot between the drive wheels.
3. To increase the turn radius, slowly move the GSL away from NEUTRAL. Remember that this will increase ground speed as well.
4. To stop the turn, slowly turn the steering wheel back to its centered position.



Figure 4.26: Operator Console

Stopping

WARNING

Do NOT move ground speed lever rapidly back to NEUTRAL. You may be thrown forward by sudden stop. Always wear seat belt when operating windrower.

To stop the windrower:

OPERATION

1. **SLOWLY** return the ground speed lever (GSL) (A) to NEUTRAL and into N-DETENT.
2. Turn steering wheel until it locks.
3. Move throttle lever (B) to low idle position.

NOTE:

Avoid unnecessary idling. Stop engine if it will be idling for longer than five minutes.

NOTE:

Brakes are automatically engaged when steering wheel is locked in NEUTRAL position.

IMPORTANT:

Before stopping engine, run at low idle for approximately five minutes to cool hot engine parts (and allow turbocharger to slow down while engine oil pressure is available).

4. Turn ignition key counterclockwise to OFF position.



Figure 4.27: Operator Console

4.3.7 Adjusting Caster Tread Width

The rear casters can be adjusted to a narrow tread width to allow loading and shipping without having to remove them.

A narrow tread width also suits smaller headers by allowing more space to the uncut crop and provides more manoeuvrability around poles, irrigation inlets, or other obstacles.

A wider tread width is useful in heavy crops that produce large windrows so that runover is reduced.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ CAUTION

Park on a flat, level surface, header on the ground, and the ground speed lever in N-DETENT position and steering wheel locked.

OPERATION

Adjust the caster tread width as follows:

1. Raise rear of windrower slightly so that most of the weight is off the casters, using a jack or other lifting device under the frame at (A).

NOTE:

Lifting device should have a lifting capacity of at least 5000 lb (2270 kg).

2. Remove six bolts (B) four on backside, two on underside, and washers from left and right side of walking beam.

3. Slide extensions inboard or outboard equal amounts and align holes at desired location.

NOTE:

Use the caster wheels to assist in moving the extensions by rotating the caster until the wheel is parallel to the walking beam.

IMPORTANT:

Caster wheels must be equidistant from center of windrower.

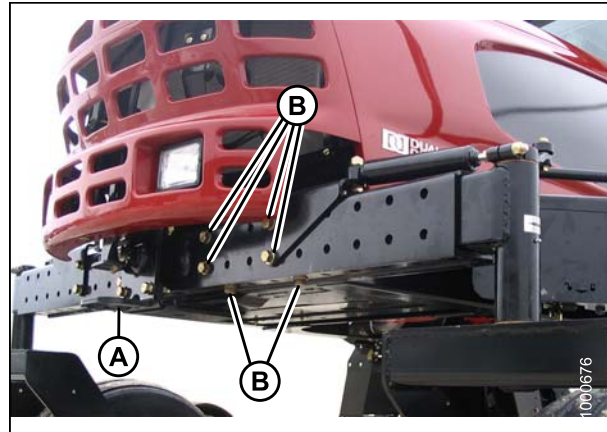


Figure 4.28: Caster Wheel Extensions



Figure 4.29: Caster Wheel Extensions

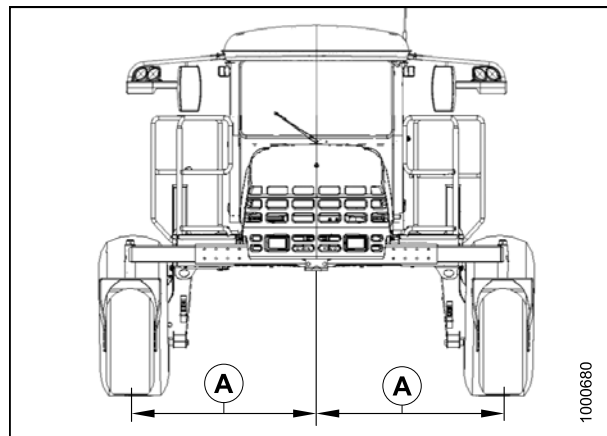


Figure 4.30: Adjustable Caster Wheels

OPERATION

4. Line up holes then install shorter bottom bolts (B).
5. Position bracket (A) and install back bolts (C).
6. Tighten bolts as follows:
 - a. Snug bottom bolts (B), then snug back bolts (C).
 - b. Tighten and torque back bolts (C) to 330 ft lbf (447 N·m).
 - c. Tighten and torque bottom bolts (B) to 330 ft lbf (447 N·m).
7. Lower windrower to ground.

IMPORTANT:

Torque bolts after first 5 and 10 hours of operation.

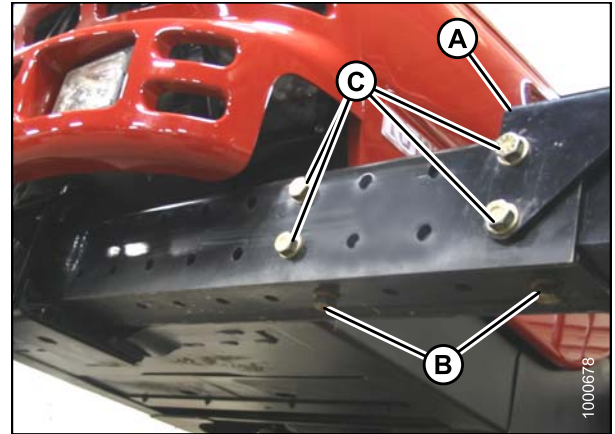


Figure 4.31: Caster Wheel Extensions

4.3.8 Transporting

Driving on the Road

The M155 Self-Propelled Windrower is designed to be driven on the road with the engine facing forward to provide better visibility for the Operator and improved stability for the machine. The windrower is also capable of being driven on the road in cab-forward mode, but at a reduced speed and under restricted conditions.

! WARNING

Collision between windrower and other vehicles may result in injury or death.

! WARNING

When driving windrower on public roadways:

- Obey all highway traffic regulations in your area. Use pilot vehicles in front and rear of windrower if required by law.
- Use slow-moving vehicle emblem and flashing warning lights unless prohibited by law.
- If width of attached header impedes other vehicle traffic, remove header and install a MacDon approved weight box.

! WARNING

- Do NOT drive windrower on the road in the cab-forward mode, unless the optional lighting marking kit is installed, as lighting/reflector visibility will not be compliant with road regulations. Refer to [7.1.14 Lighting and Marking for Cab-Forward Road Travel, page 449](#).
- Do NOT drive windrower on a road or highway at night or in conditions that reduce visibility, such as fog or rain. The width of the windrower may not be apparent under these conditions.

! CAUTION

Operate both steering wheel and ground speed lever slowly while becoming familiar with the machine. Remember that steering is more sensitive when speed-range control is in road speed position. Avoid the common tendency of new Operators to oversteer.

OPERATION

CAUTION

Check local laws for width regulations and lighting and marking requirements before transporting on roads.

Before driving windrower on a roadway:

1. Ensure HEADER DRIVE switch (A) is pushed to OFF position (down).
2. Clean flashing amber lamps, red tail and head lamps, and check that they work properly.
3. Clean all reflective surfaces and slow moving vehicle emblems.
4. Adjust interior rear view mirror and clean windows.



Figure 4.32: Header Drive Switch

5. Push LIGHT switch (A) to ROAD position to activate lamps. Always use these lamps on roads to provide warning to other vehicles.
 - a. Use HIGH / LOW LIGHTS (B) as required when other vehicles are approaching.
 - b. Do **NOT** use FIELD lamps on roads, other drivers may be confused by them.
6. Push BEACON switch (C) ON to activate beacons.

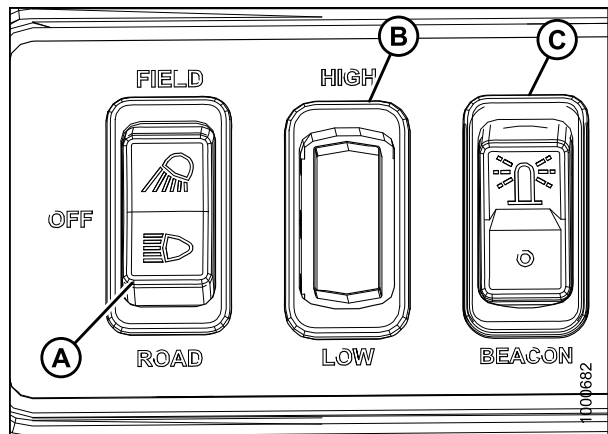


Figure 4.33: Light Switches

7. Press switch (A) on cab display module (CDM) to activate hazard lights.



Figure 4.34: CDM

OPERATION

- Set ground speed range switch (A) for ROAD speed. CDM will display ROAD GEAR at (F) if windrower is in engine-forward mode.

NOTE:

Windrower can be moving, but speed must be less than 5 mph (8 km/h) for road gear to engage.

- Slowly push throttle (B) to full forward (operating speed). CDM should display 2320–2350 rpm (C).
- Slowly move the ground speed lever (GSL) (E) forward to desired speed which will be displayed at (F).
- To slow the windrower, pull the GSL (E) rearward to decrease the speed.
- Move the GSL (E) to N-DETENT.
- Lock steering wheel.
- Shut off engine by turning key counterclockwise to OFF position.
- If towing a header, refer to [Towing Header with Windrower, page 178](#).

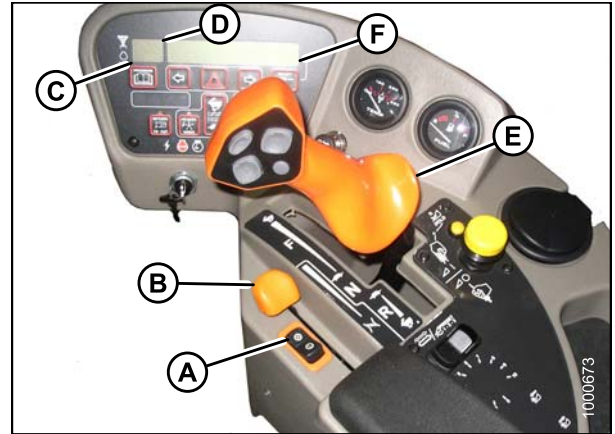


Figure 4.35: Operator Console

WARNING

To avoid serious injury or death from loss of control:

- Do NOT make abrupt changes in steering direction.
- Anticipate turns and steep slopes by slowing down well in advance.
- Do NOT rapidly accelerate or decelerate while turning.

When travelling on steep slopes:

- Move ground speed lever (GSL) closer to NEUTRAL to reduce speed.
- Lower header.
- Move GROUND SPEED RANGE switch to L – low range.
- If the ground speed is greater than or equal to 25 mph (40 km/h), the CDM will display a warning message (SLOW DOWN) with an audible alert. Move GSL closer to NEUTRAL to reduce speed.

With header removed, steering control is reduced if weight is not added to drive wheels. If you must drive the windrower without header or MacDon weight system:

- Operate in low speed range.
- Do NOT exceed 1500 rpm engine speed.
- Avoid loose gravel and slopes.
- Do NOT tow a header.
- If control of machine is lost, immediately pull ground speed lever (GSL) to NEUTRAL.

OPERATION

Towing Header with Windrower

The windrower can be used to tow a MacDon draper header that has the slow speed transport option installed. Ensure the optional weight box or an approved header transporter is installed on the windrower to transfer weight to the lift arms.

WARNING

- A windrower without a header or weight box must **NOT** be used to tow headers due to reduced traction and possible loss of control.
- For towed equipment without brakes, do **NOT** exceed 20 mph (32 km/h).



Figure 4.36: Towing a Header

CAUTION

- To tow a header with an M155 Self-Propelled Windrower, the header must be equipped with the appropriate equipment to comply with local regulations.
- Before towing, conduct a pre-trip inspection to verify signal lighting and safety equipment is installed and functioning properly.
- Do **NOT** exceed the Combined Gross Vehicle Weight (CGVW) specified in table [4.1 Maximum Weight, page 178](#).
- To prevent damage and/or loss of control, ensure the machine and attached equipment are within the following weight limits:

Table 4.1 Maximum Weight

		lb	kg
Maximum GVW (includes mounted implements)		21,500	9750
Maximum CGVW (includes towed and mounted implements)		23,100	10,480
Weight (A) on both drive wheels	Maximum	18,750	8500
	Minimum	10,070	4570
Maximum weight (B) on both caster tires		6050	2750

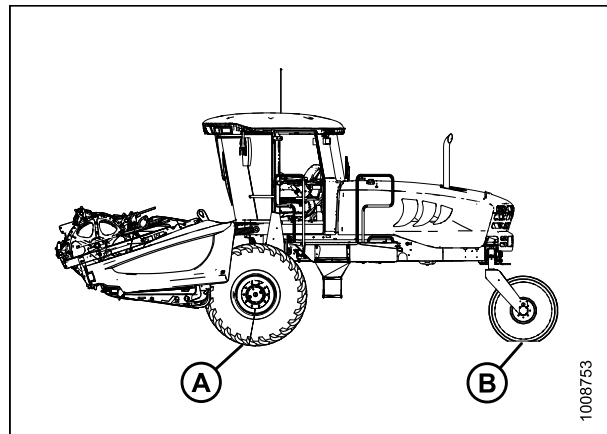


Figure 4.37: Maximum Weight

Converting from Field to Transport Mode

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

OPERATION

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

1. Set header on the ground (field position).
2. Disconnect the following hydraulic and electrical connections:
 - a. **Left Side** – Store hydraulic hoses and electrical cable into the storage position. Refer to header operator's manual.
 - b. **Right Side** – Release the multi-link and place into storage on windrower. Refer to header operator's manual.
3. Retrieve temporary lift pin from storage location on weight box and install into rear hole (A) at the top of the lift arms. This provides additional lift height for transport wheel deployment.

CAUTION

Check to be sure all bystanders have cleared the area.

4. Start engine and raise header to full height.
5. Stop engine and engage safety props on lift cylinders.
6. Deploy header slow speed transport system. Refer to header operator's manual.

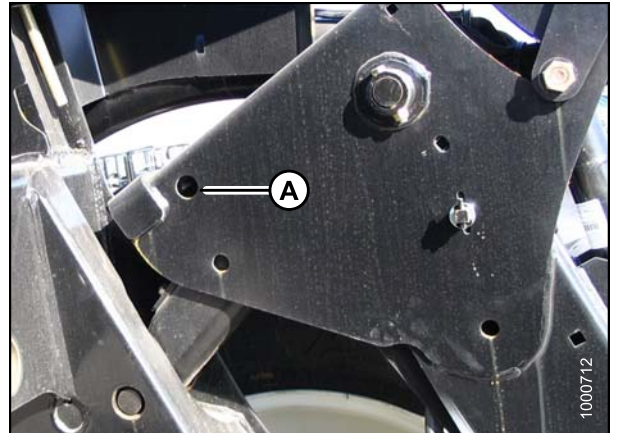


Figure 4.38: Lift Arms



Figure 4.39: Header in Transport Mode

OPERATION

7. Remove float pin from engaged position (A) and insert in storage location (B). Secure with lynch pin.

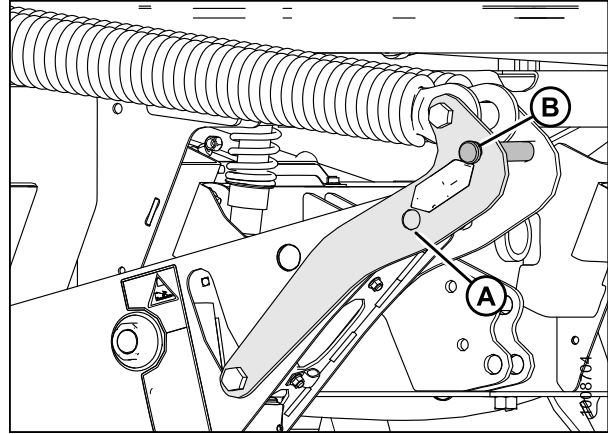


Figure 4.40: Lift Arms

8. Remove pins (A) from lower end of lift linkages.

NOTE:

Pins (A) are also used to secure weight box to windrower linkage.

9. Release the safety props on the header lift cylinders. Refer to [4.4.1 Header Safety Props, page 193](#).
10. Start engine and lower header down onto the transport wheels.

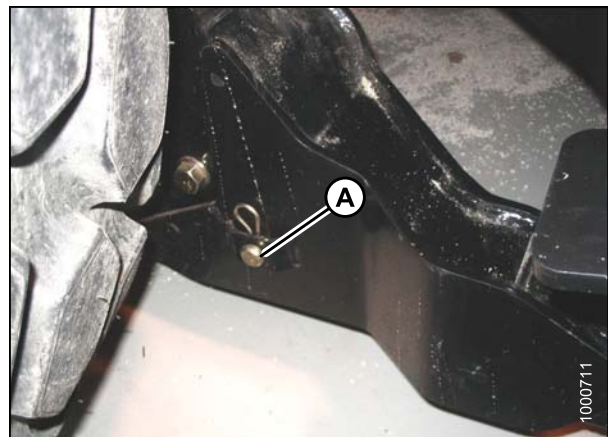


Figure 4.41: Lift Arms

11. Use the HEADER TILT switches to release load on the center-link if necessary.
12. Shut down engine and remove key from ignition.

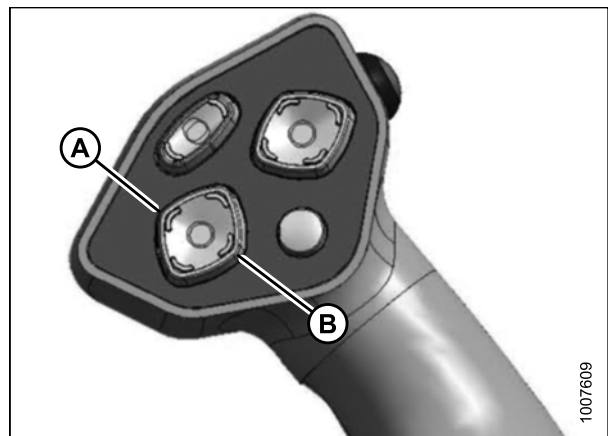


Figure 4.42: Ground Speed Lever (GSL)

A - Header Tilt Down

B - Header Tilt Up

OPERATION

Disconnect the center-link as follows:

13. To unlock the center-link, pull up on latch (A) and position latch into notch (B) on top of hook.
14. Lift center-link off header pin.

NOTE:

If center-link self-alignment kit is installed, start engine and raise center-link with the REEL UP switch on the ground speed lever (GSL).

15. Slowly back windrower away from header, shut engine OFF, and remove key from ignition.

16. If using a mechanical link, disconnect the center-link as follows:

- a. Loosen nut (A) and rotate barrel (B) to relieve load on link.
- b. Remove cotter pin (D) on pin (C), and remove pin to disconnect from windrower. Reinstall pin in header.

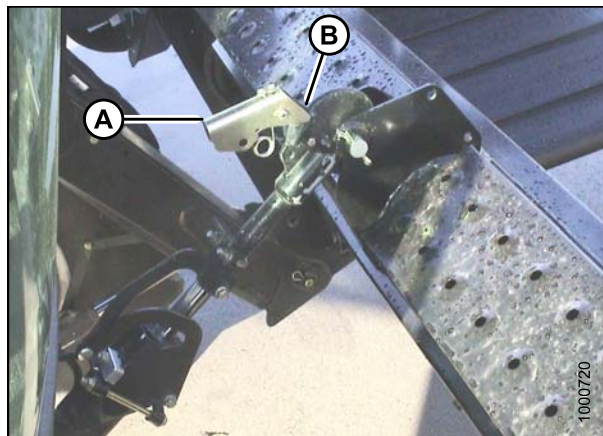


Figure 4.43: Hydraulic Link

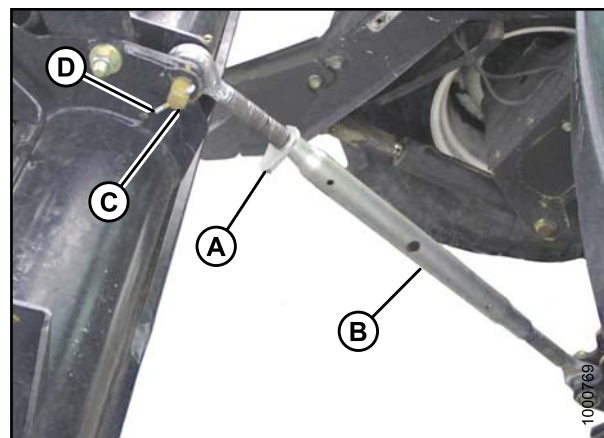


Figure 4.44: Mechanical Link

Converting from Transport Mode to Field Operation

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop engine and remove key from ignition.
2. Disconnect electrical harness at connector (B) from windrower and store harness (A) on weight box.

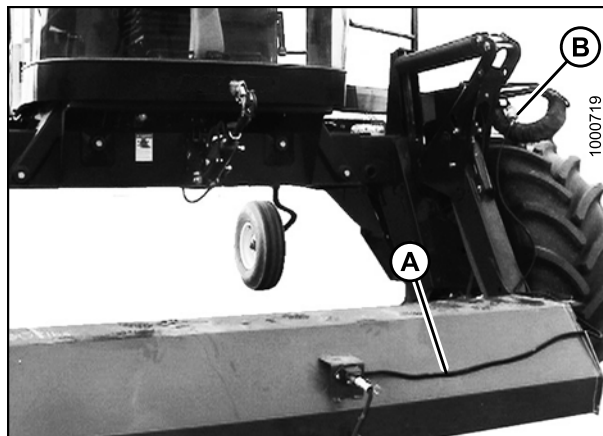


Figure 4.45: Electrical Harness

OPERATION

3. Disconnect wiring connector (A) at front wheel.



Figure 4.46: Header Transport Wheel

4. Remove clevis pin (D).
5. Push latch (C) and lift tow-bar (A) from hook. Release latch and replace clevis pin.
6. Unhook tow-bar from weight box.

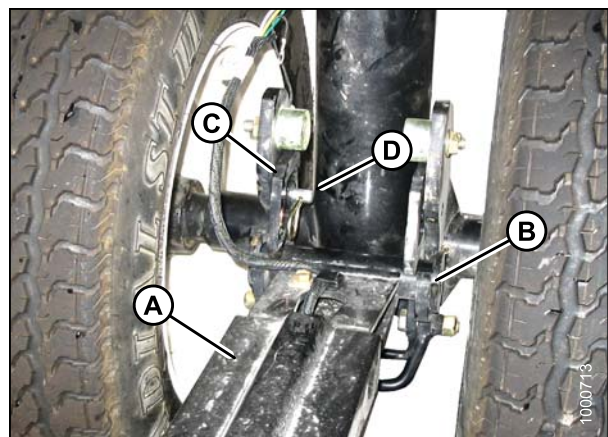


Figure 4.47: Header Transport Wheel

CAUTION

Check to be sure all bystanders have cleared the area.

7. Start engine and lower lift arms until rear of lift arms floats up and away from the lift arm mechanism.
8. Stop engine and remove key from ignition.
9. Remove temporary lift pins (A) from weight box and install pins (F) into holes at rear of lift arms.
10. Start engine and fully raise lift arms. Stop engine and remove key from ignition.
11. Engage lift cylinder safety props. Refer to [4.4.1 Header Safety Props, page 193](#).

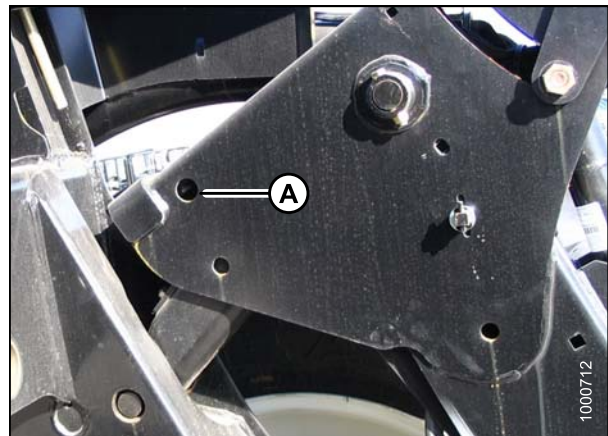


Figure 4.48: Lift Arms

OPERATION

12. Move float pins from working hole location (A) to disengage the float and store pins at storage hole location (B).

IMPORTANT:

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage hole location and **NOT** installed in working hole location.

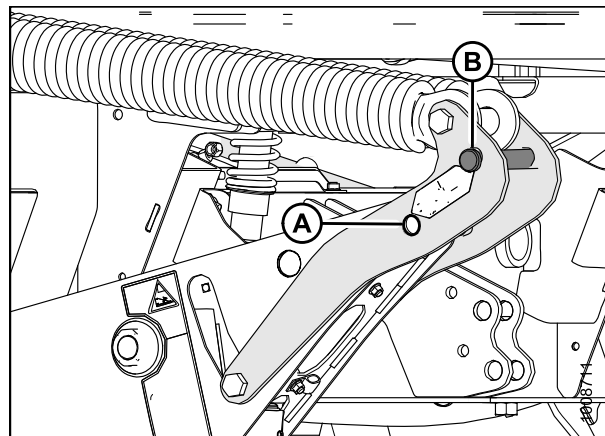


Figure 4.49: Float Pins

13. Remove pins (A) securing lift linkages to weight box and retain pins for attaching header to windrower. Disengage lift cylinder safety props. Refer to [4.4.1 Header Safety Props](#), page 193.

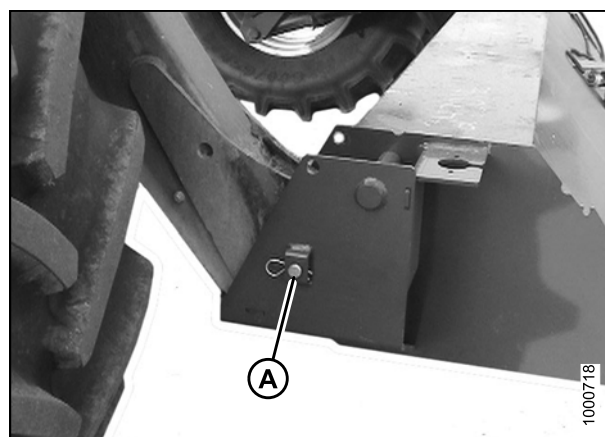


Figure 4.50: Weight Box

14. Start engine, lower weight box onto blocks, and back away.
15. Attach header to windrower. Refer to [4.5 Attaching and Detaching Headers](#), page 213.
16. Convert header into field position. Refer to header operator's manual for procedure.
17. Start engine and lower header to ground. Continue to retract lift cylinders so that member (A) lifts off of link (B).
18. Remove temporary lift pins (C) from lift arms and install pins into storage holes in weight box.
19. Before operating the machine, double check that all pins are secure and that all safety equipment is installed and fully functional.
20. Proceed with operation of header.

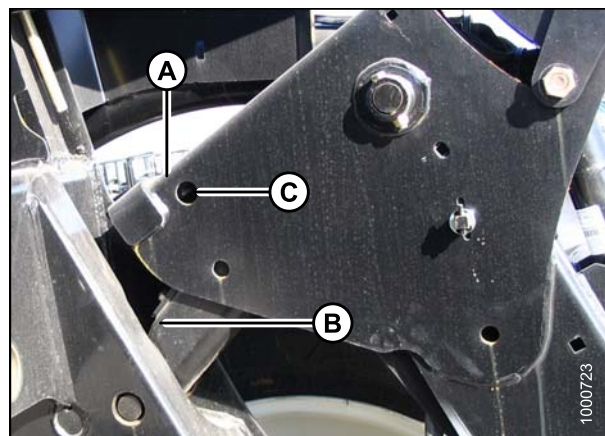


Figure 4.51: Lift Arms

OPERATION

Attaching Header Transport Hitch to Header

Attach header transport hitch to header as follows:

1. Position end (A) of the aft section onto front wheel hook (B).
2. Push down until latch (C) captures the end (A).
3. Secure latch (C) with clevis pin (D).

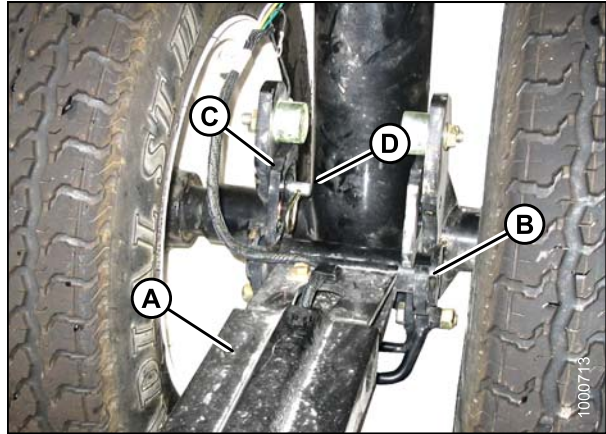


Figure 4.52: Transport Hitch

4. Remove the L-pin from end (A) of aft section (if installed).

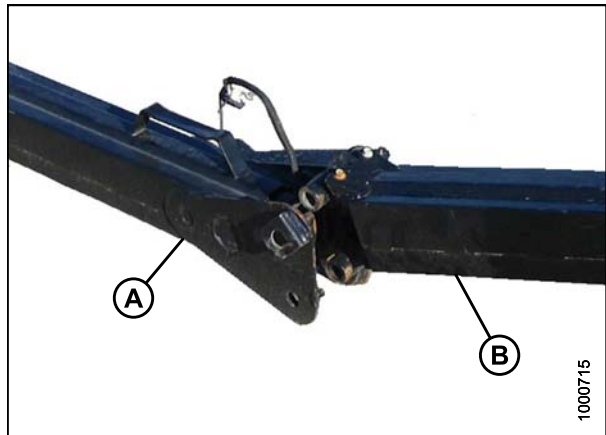


Figure 4.53: Transport Hitch

5. Position end (B) of the forward section into end (A) of the aft section and lower forward section into aft section.

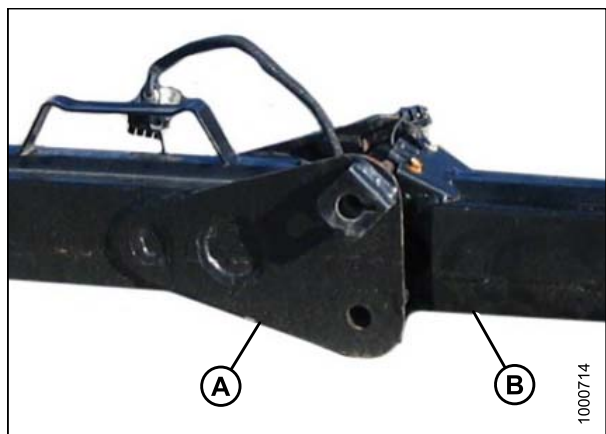


Figure 4.54: Transport Hitch

OPERATION

6. Fully insert L-pin (A) in upper hole and turn pin to lock it. Secure with ring pin (B).
7. Make electrical connection at the joint (C).

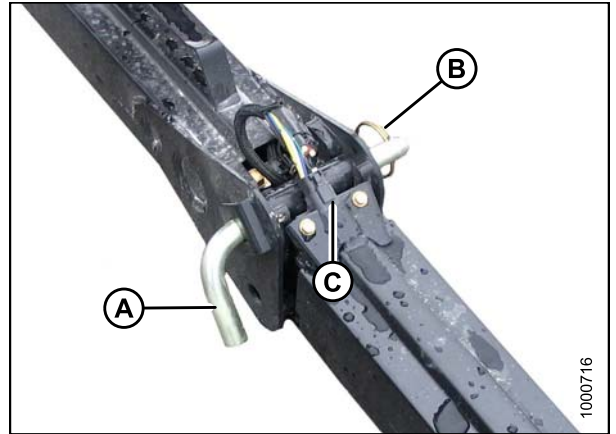


Figure 4.55: Transport Hitch

8. Make the electrical connection at the header wheel (A).



Figure 4.56: Header Transport Wheel

IMPORTANT:

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to windrower, ensure that float engagement pin is installed in storage location (B) and **NOT** installed at hole location (A).

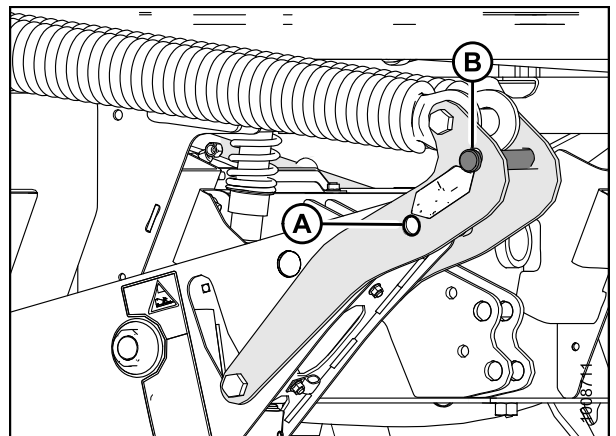


Figure 4.57: Lift Linkage

OPERATION

9. Drive windrower so that windrower lift arms are positioned into the weight box pockets.
10. Raise lift arms slightly, install locking pins (A) into pockets, and through windrower header lift linkages. Secure with hairpin.

NOTE:

Pins (A) were previously removed from the header lift linkage lower end.

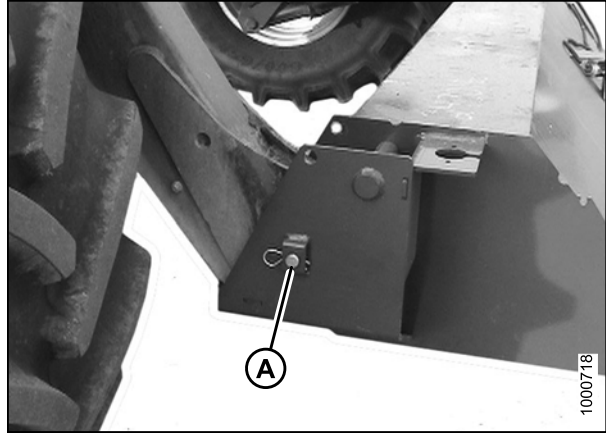


Figure 4.58: Windrower Lift Linkage

11. Route the weight box harness (A) to the electrical connector at the left side lift linkage and connect harness to connector on windrower (B).
12. Raise lift arms fully, shut engine OFF, and remove key from ignition.

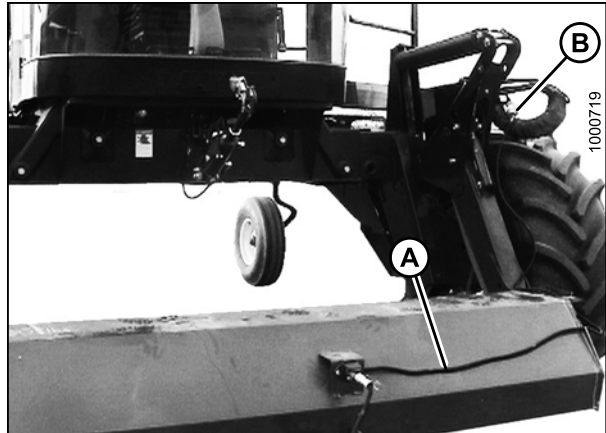


Figure 4.59: Weight Box

13. Move float pins from storage location (A) to engaged position (B).

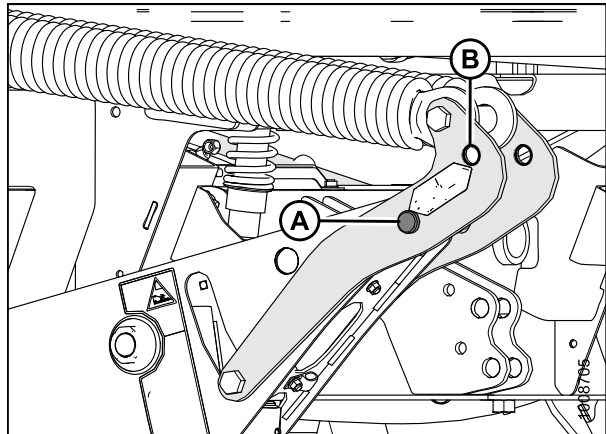


Figure 4.60: Lift Linkage

OPERATION

14. Start engine and press HEADER DOWN switch (A) on ground speed lever (GSL) to lower lift arms until the lift arm lifts away from the linkage at the rear of the lift arm.

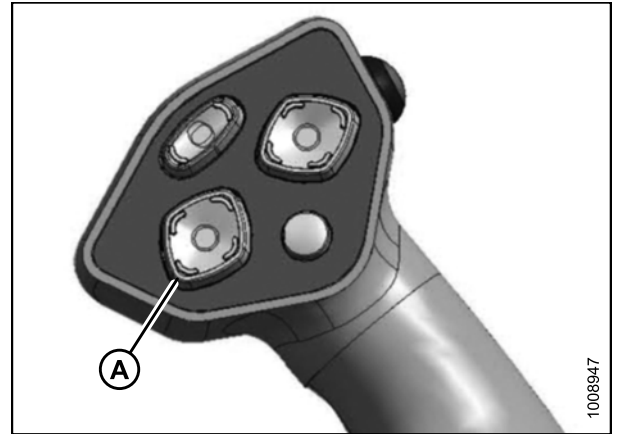


Figure 4.61: GSL

15. Attach slow speed transport hitch to the weight box tongue with drawbar pin. Secure using lynch pin (A). Attach safety chain (B).
16. Connect hitch harness (C) to electrical socket at front of weight box.

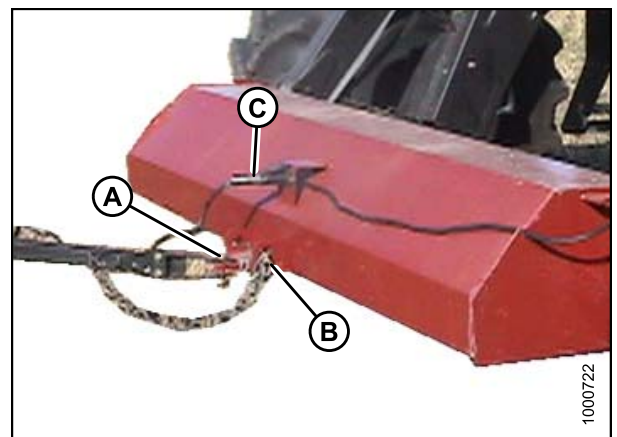


Figure 4.62: Weight Box

17. Remove the temporary lift pins (A) (should be loose in lift arm) and place into storage holes on weight box.

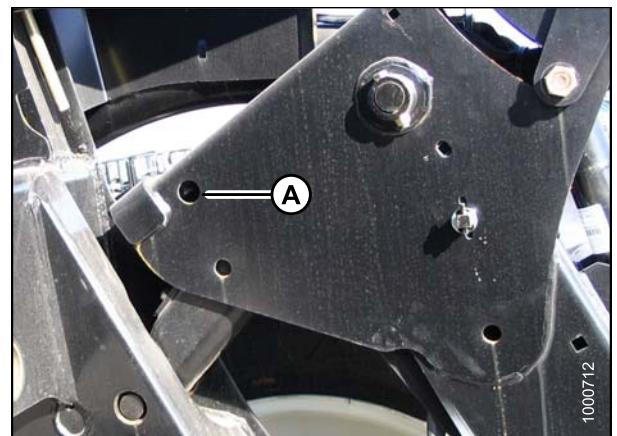


Figure 4.63: Lift Arms

Converting from Field to Transport Mode

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

OPERATION

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

1. Set header on the ground (field position).
2. Disconnect the following hydraulic and electrical connections:
 - a. **Left Side** – Store hydraulic hoses and electrical cable into the storage position. Refer to header operator's manual.
 - b. **Right Side** – Release the multi-link and place into storage on windrower. Refer to header operator's manual.
3. Retrieve temporary lift pin from storage location on weight box and install into rear hole (A) at the top of the lift arms. This provides additional lift height for transport wheel deployment.

CAUTION

Check to be sure all bystanders have cleared the area.

4. Start engine and raise header to full height.
5. Stop engine and engage safety props on lift cylinders.
6. Deploy header slow speed transport system. Refer to header operator's manual.

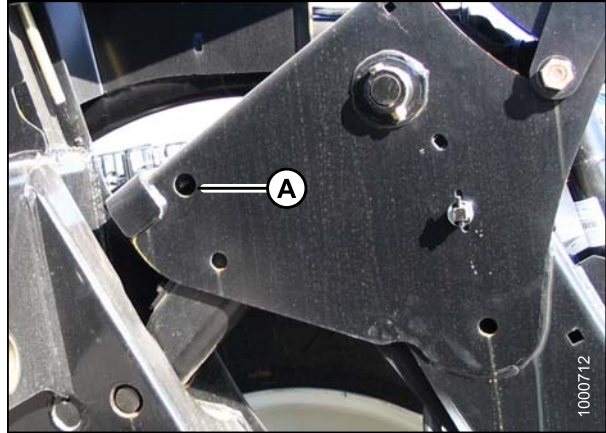


Figure 4.64: Lift Arms



Figure 4.65: Header in Transport Mode

OPERATION

7. Remove float pin from engaged position (A) and insert in storage location (B). Secure with lynch pin.

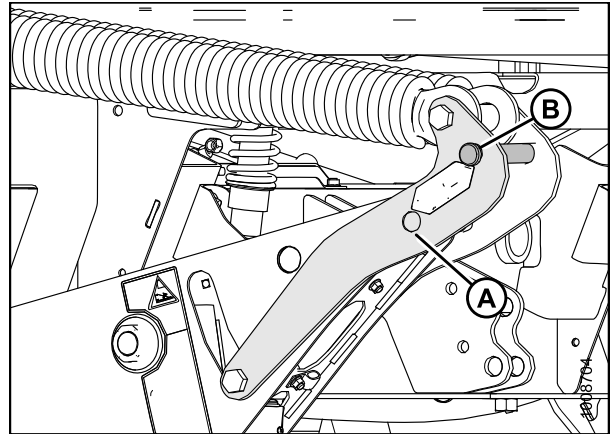


Figure 4.66: Lift Arms

8. Remove pins (A) from lower end of lift linkages.

NOTE:

Pins (A) are also used to secure weight box to windrower linkage.

9. Release the safety props on the header lift cylinders. Refer to [4.4.1 Header Safety Props, page 193](#).
10. Start engine and lower header down onto the transport wheels.

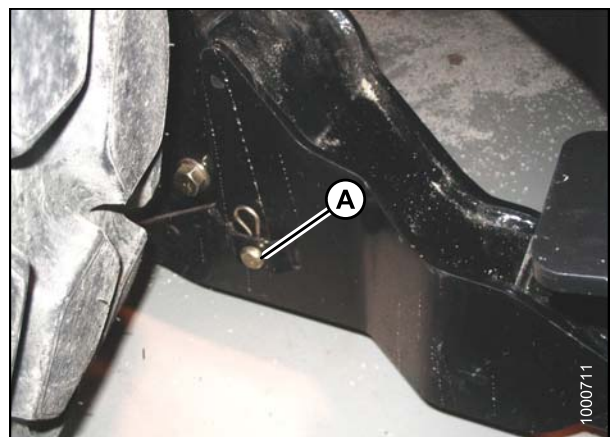


Figure 4.67: Lift Arms

11. Use the HEADER TILT switches to release load on the center-link if necessary.
12. Shut down engine and remove key from ignition.

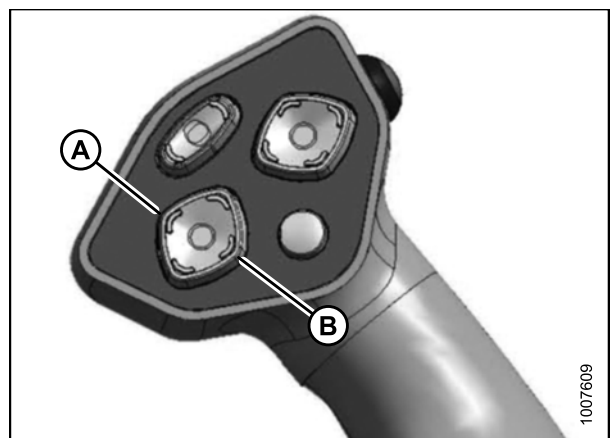


Figure 4.68: Ground Speed Lever (GSL)

A - Header Tilt Down

B - Header Tilt Up

OPERATION

Disconnect the center-link as follows:

13. To unlock the center-link, pull up on latch (A) and position latch into notch (B) on top of hook.
14. Lift center-link off header pin.

NOTE:

If center-link self-alignment kit is installed, start engine and raise center-link with the REEL UP switch on the ground speed lever (GSL).

15. Slowly back windrower away from header, shut engine OFF, and remove key from ignition.

16. If using a mechanical link, disconnect the center-link as follows:

- a. Loosen nut (A) and rotate barrel (B) to relieve load on link.
- b. Remove cotter pin (D) on pin (C), and remove pin to disconnect from windrower. Reinstall pin in header.

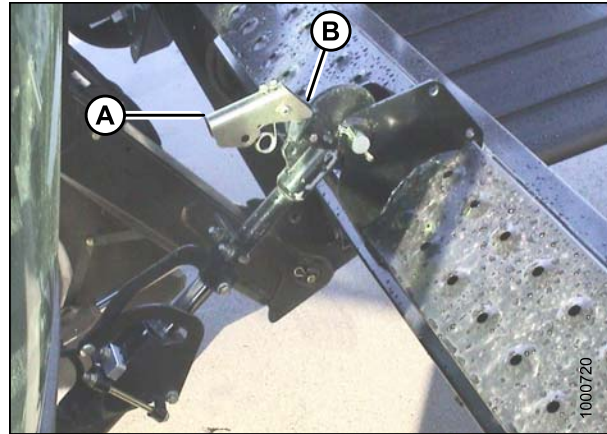


Figure 4.69: Hydraulic Link

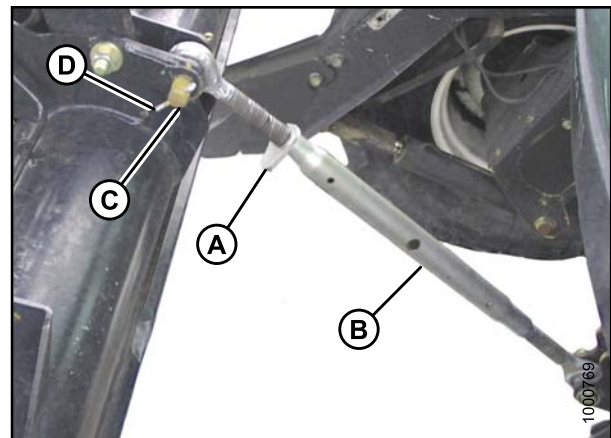


Figure 4.70: Mechanical Link

Towing the Windrower (Emergency)

In emergency situations, for example, towing out of a field or into a shop, windrower may be towed without a trailer, providing the following precautions are followed:

WARNING

A proper towing apparatus is critical to safe towing. Use the following guidelines:

- Do NOT attach directly from hitch to walking beam. Slope of tow-bar will not provide proper transfer of braking force to windrower, causing loss of control.
- For proper steering, towing apparatus should be attached to BOTH left and right cab-forward frame members, and should attach to tow-bar at same height as towing vehicle hitch.
- Towing apparatus should be removed for field operation, to avoid interference with windrow.

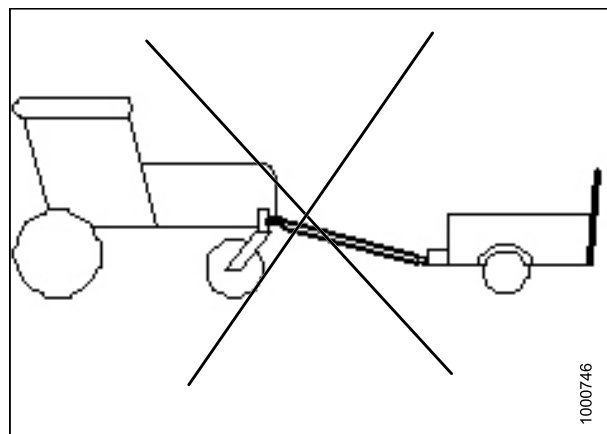


Figure 4.71: Improper Towing Procedure

OPERATION

WARNING

With final drives disengaged, the windrower may roll on a sloped surface. Before disengaging final drives, attach windrower to towing vehicle. After towing, engage drives and ensure ground speed lever (GSL) is in N-DETENT before detaching from towing vehicle.

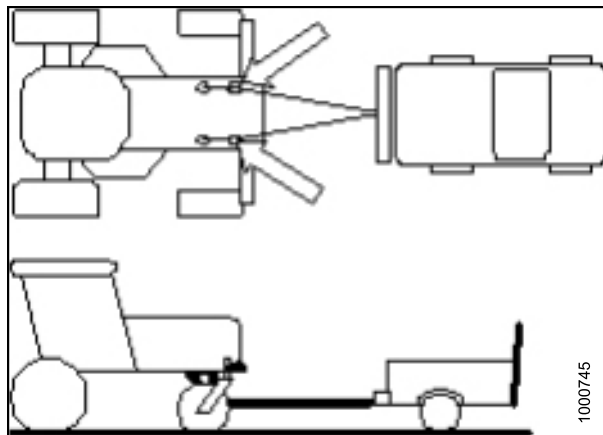


Figure 4.72: Correct Towing Procedure

IMPORTANT:

- Failure to disengage final drives before towing will result in serious transmission damage.
- Do **NOT** exceed 16 mph (26 km/h) when towing windrower.
- Do **NOT** use this towing method for normal transporting of windrower.
- Even with final drives disengaged, rolling speeds of more than 16 mph (26 km/h) will cause final drive gears to run at excessive speeds, possibly severely damaging or causing the unit to fail.

Final Drives

Disengage and engage final drives as follows:

1. Remove the two bolts (A) at the center of drive wheel.
2. Remove cap (B) and flip over so that dished side faces in. The cap depresses a pin that disengages the gearbox.
3. After towing, reverse cover (B) to engage final drives. Be sure plunger at center of wheel pops out to engage drive.

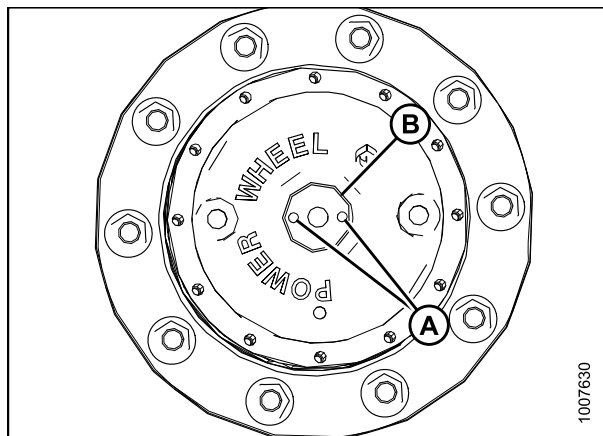


Figure 4.73: Final Drives

4.3.9 Storing the Windrower

At the end of each operating season, you need to store your windrower properly.

WARNING

Never use gasoline, naphtha, or any volatile material for cleaning purposes. These materials are toxic and can be flammable.

OPERATION

CAUTION

Never operate engine in a closed building. Proper ventilation is required to avoid exhaust gas hazards.

CAUTION

Remember when working around storage batteries that all of the exposed metal parts are live. Never lay a metal object across the terminals because a spark and short circuit will result.

1. Clean the windrower thoroughly.
2. Store windrower in a dry protected place.
3. Remove battery. Refer to [Removing Batteries, page 373](#).
4. Bring to full charge and store in a cool, dry place not subject to freezing.
5. If stored outside, always cover windrower with a waterproof tarpaulin or other protective material. This will protect the switches, instruments, tires, etc. from inclement weather.
6. If no cover is available; seal air cleaner intake and exhaust pipe with plastic bags and/or waterproof tape.
7. If possible, block up windrower to take weight off tires. If it is not possible to block up the machine, increase tire pressure by 25% for storage. Adjust to recommended operating pressure before next use.
8. Repaint all worn or chipped painted surfaces to prevent rust.
9. Lubricate the windrower thoroughly, leaving excess grease on fittings to keep moisture out of bearings. Apply grease to exposed threads and sliding surfaces of components.
10. Check for worn components and repair. Tighten loose hardware and replace any missing hardware. Refer to [8.1 Recommended Torques, page 453](#).
11. Check for broken components and order replacements from your Dealer. Attention to these items right away will save time and effort at beginning of next season.
12. Add approved rust inhibitor to the engine oil in accordance with the manufacturer's instructions. Run engine to operating temperature to mix inhibitor with oil, unless otherwise specified.
13. To prevent condensation, fill hydraulic oil reservoir to filler neck with approved hydraulic system oil. Refer to [Checking and Filling Hydraulic Oil, page 401](#).
14. Test engine coolant antifreeze concentration to ensure it is sufficient to protect engine against lowest expected temperature.

4.4 Operating with a Header

The M155 Self-Propelled Windrower is designed to operate with a MacDon A-Series Auger Header, R-Series Rotary Header, or D-Series Rigid Draper Header with or without a Hay Conditioner.

This section describes the attachment and detachment procedures and operating instructions for these header types.

4.4.1 Header Safety Props

Safety props are located on both header lift cylinders on the windrower.

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

Engage safety props as follows:

1. Start engine and press header up (A) switch to raise header to maximum height.
2. Rephase cylinders if one end of the header does not raise fully. If rephasing is required, proceed as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

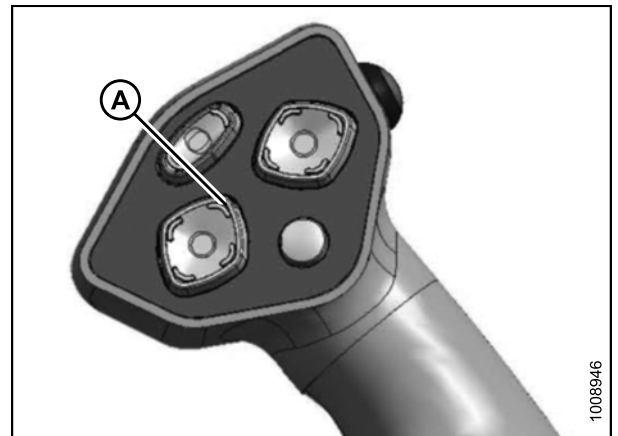


Figure 4.74: Ground Speed Lever (GSL)

OPERATION

3. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.

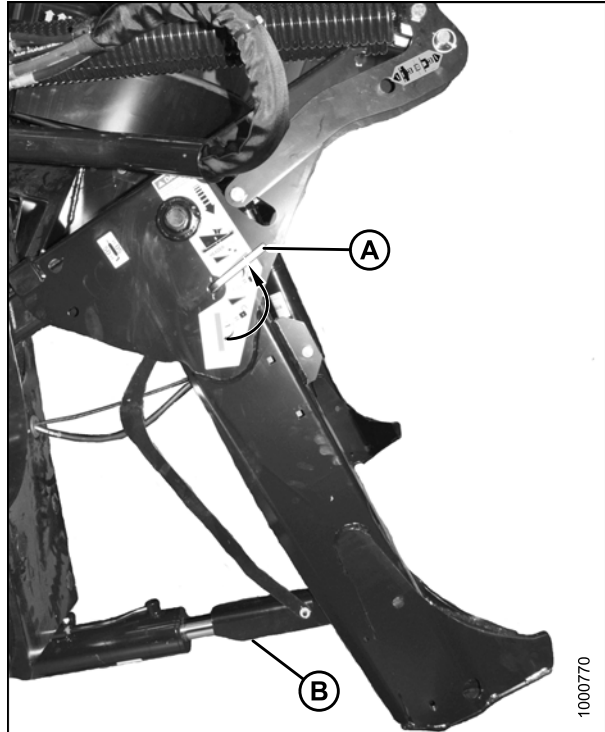


Figure 4.75: Safety Prop

4. Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
5. Start engine, choose a level area, and lower header to the ground. Stop engine and remove key.

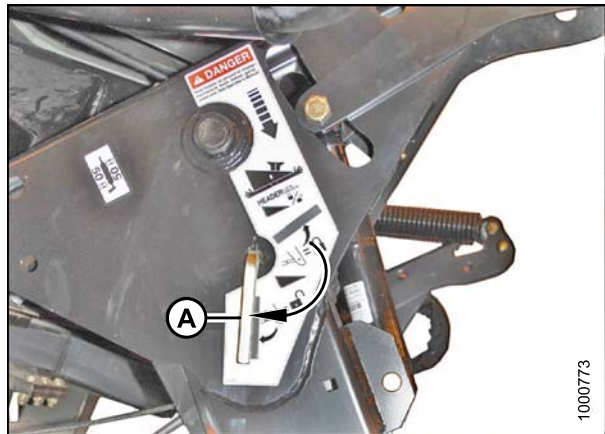


Figure 4.76: Safety Prop

4.4.2 Header Float

The header float feature allows the header to closely follow ground contours and respond quickly to sudden changes or obstacles. The float setting is ideal when the cutterbar is on the ground with minimal bouncing, scooping, or pushing soil.

IMPORTANT:

- Set header float as light as possible—without excessive bouncing—to avoid frequent breakage of knife components, scooping soil, or soil build-up at the cutterbar in wet conditions.
- Avoid excessive bouncing (resulting in a ragged cut) by operating at a slower ground speed when the float setting is light.
- Readjust the float when adding or removing optional attachments that affect the weight of the header.
- Refer to your header operator's manual for setting float and adjustment guidelines.

Float Operating Guidelines

When working with the cutterbar on the ground:

- Set center-link to mid-range position (05.0 on cab display module [CDM]). Refer to [4.4.5 Adjusting Header Angle, page 203](#).
- Minimize scooping rocks by adjusting the header skid shoes downward to raise guards when operating at the flattest header angle.
- Adjust header height or adjust header angle to minimize pushing soil.

When working with the cutterbar off the ground (draper header only):

- Set center-link to mid-range position (05.0 on CDM). Refer to [4.4.5 Adjusting Header Angle, page 203](#).
- Balance the amount of header weight carried by the float and stabilizer wheels. Refer to your draper header operator's manual.
- Use the CDM controls to automatically maintain cutting height. Refer to [4.4.6 Cutting Height, page 206](#).

Checking Float

M-Series windrowers are equipped with primary (coarse) and secondary (fine) float adjustment systems. The primary or coarse adjustment uses drawbolts to change the tension on the springs in the lift linkages. The secondary or fine adjustment uses hydraulic cylinders to change the spring tension.

OPERATION



Figure 4.77: Cab Display Module (CDM) Float Adjustment

A - CDM Display
D - Header Tilt Down

B - Left Float Adjustment
E - Header Lower

C - Right Float Adjustment
F - Header Tilt Up

Check header float as follows:

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

⚠ CAUTION

Check to be sure all bystanders have cleared the area.

1. Start the engine.
2. Using HEADER TILT switches (D, F), set center-link to mid-range position (5.0 on CDM [A]).
3. Using HEADER DOWN switch (E), lower header fully with lift cylinders fully retracted.
4. Set left (B) and right (C) float fine adjustments on CDM to approximately 5.0 as follows:
 - a. Using FLOAT SELECTOR switch (B), push + to increase float or – to decrease float on left side of header. CDM display (A) will indicate selected float for left side, for example (5.0 L FLOAT R XX.X).
 - b. Repeat for right side float with switch (C). Display will indicate float for both sides, for example (5.0 L FLOAT R 5.0).
5. Shut down engine and remove key.
6. Grasp the divider rod and lift. The force to lift should be as noted in the following table and should be approximately the same at both ends.

OPERATION

Header	Force Required to Lift Header at the Ends with Lift Cylinder Fully Retracted
Auger	75–85 lbf (335–380 N)
Rotary	95–105 lbf (426–471 N)
Draper	75–85 lbf (335–380 N) with stabilizer/transport wheels raised (if equipped)

Adjusting Float Using Drawbolts

Coarse float adjustment is done using the drawbolts located on either side of the windrower.

If necessary, coarse adjust the float with the drawbolts as follows:

CAUTION

Check to be sure all bystanders have cleared the area.

1. Start engine.
2. Using HEADER UP (A) switch on ground speed lever (GSL), raise the header fully, shut down engine, and remove key.

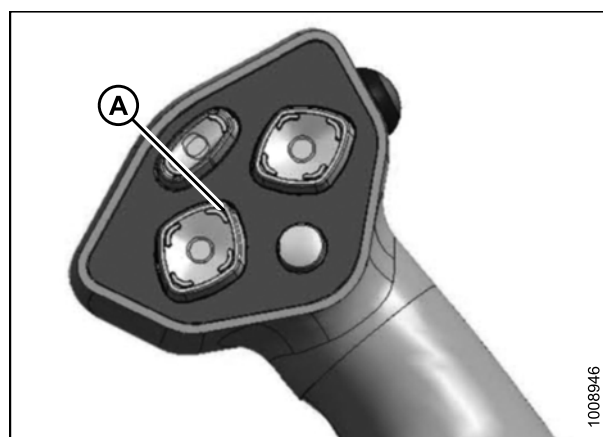


Figure 4.78: GSL

3. Turn drawbolt (A) clockwise to increase float (makes header lighter) or counterclockwise to decrease float (makes header heavier).
4. Recheck the header float.

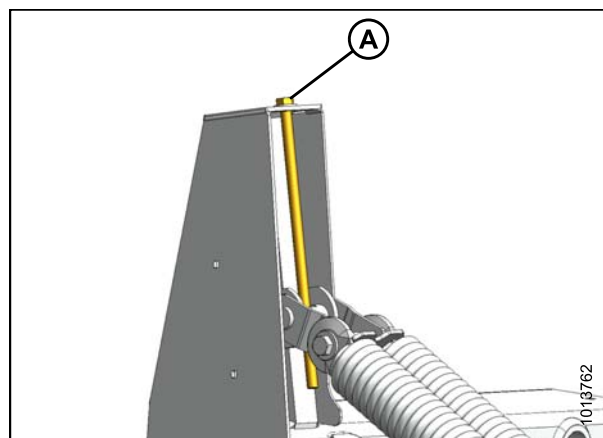


Figure 4.79: Header Float Adjustment

OPERATION

Float Options

For draper headers without the deck shift option, auger headers, and rotary headers, the float can be preprogrammed for three types of windrowing conditions.

Example:

- Position 1: Border
- Position 2: Normal
- Position 3: Rocky

Set float presets as follows:

1. Engage header.
2. Push FLOAT PRESET SWITCH (A) to Position 1 (B).

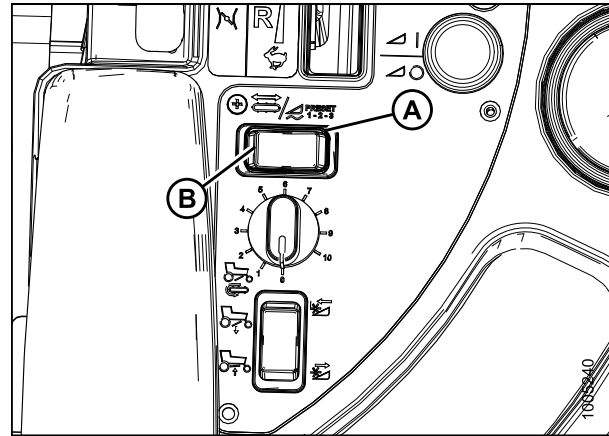


Figure 4.80: Float Preset Switch

3. Using HEADER TILT switches (D, F), set center-link to mid-range position (5.0 on CDM [A]).
4. Using HEADER DOWN switch (E), lower header fully with lift cylinders fully retracted.
5. Set left (B) and right (C) float fine adjustments on CDM to approximately 5.0 as follows:
 - a. Using FLOAT SELECTOR switch (B), push + to increase float or – to decrease float on left side of header. CDM display (A) will indicate selected float for left side, for example (5.0 L FLOAT R XX.X).
 - b. Repeat for right side float with switch (C). Display will indicate float for both sides, for example (5.0 L FLOAT R 5.0).

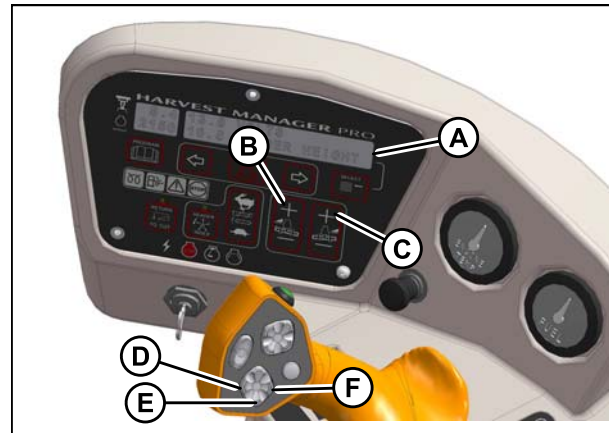


Figure 4.81: Operator Console

- | | |
|------------------------|-----------------------|
| A - CDM Display | B - Adjust Left Float |
| C - Adjust Right Float | D - Header Tilt Down |
| E - Lower Header | F - Header Tilt Up |

OPERATION

6. Select a second preset with the FLOAT PRESET 2 SWITCH (C).
7. Repeat Steps [1., page 198](#) and [2., page 198](#) to set the float.
8. Select a third preset with the FLOAT PRESET 3 SWITCH (D).
9. Repeat steps [1., page 198](#) and [2., page 198](#) to set the float.
10. Operate windrower.

NOTE:

For draper headers with the deck shift option, the float can be preprogrammed to compensate for weight distribution when the decks are shifted. Refer to [Setting Float Options with Deck Shift, page 291](#).

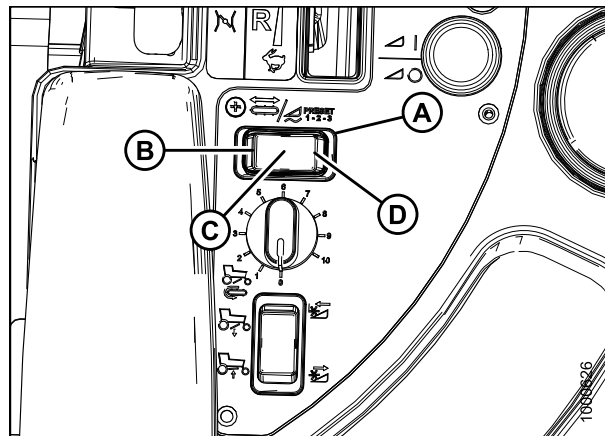


Figure 4.82: Float Preset Switch

4.4.3 Levelling the Header

The windrower linkages are factory-set to provide the proper level for the header and should not normally require adjustment.



DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

If the header is not level, check the windrower tire pressures before adjusting the levelling linkages.

NOTE:

The float springs are **NOT** used to level the header.

To level the header, follow these steps:

1. Place float pins in locked out location (A).

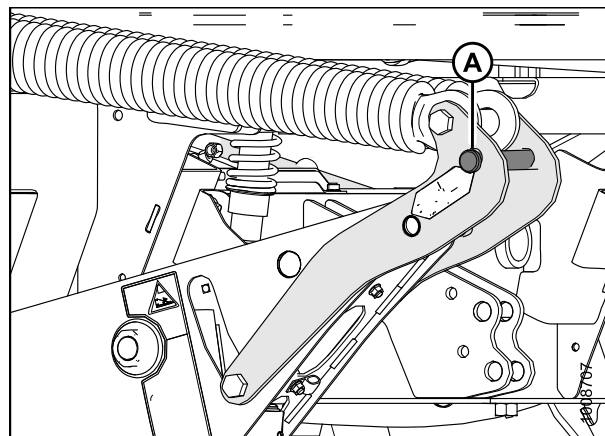


Figure 4.83: Float Pins – Disengaged

OPERATION

2. Park windrower on level ground.
3. Raise header fully and hold momentarily to allow lift cylinders to rephase.

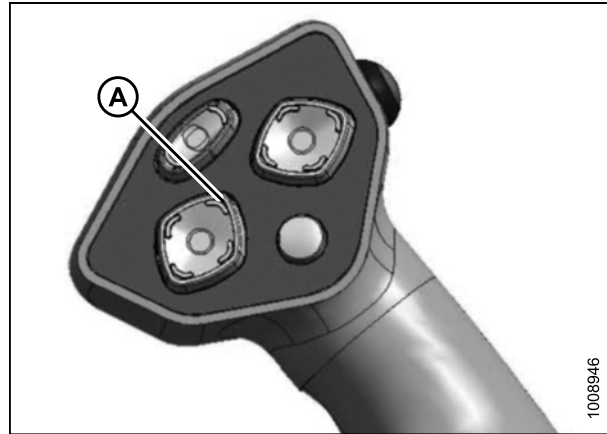


Figure 4.84: Ground Speed Lever (GSL)

4. Set header approximately 6 in. (150 mm) off ground and check that member (A) is against link (B). Stop engine and remove key from ignition.
5. Measure distance to ground at both ends of header and determine the end that is higher.
6. If adjustment is necessary, start engine and raise header fully. Turn off engine and remove key from ignition.

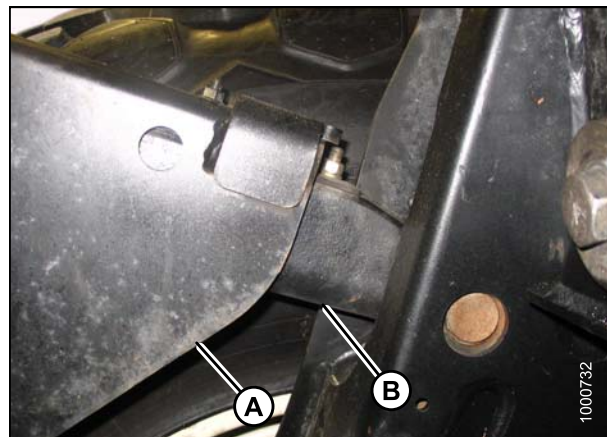


Figure 4.85: Lift Linkage

7. Move float pins to engaged position (A).

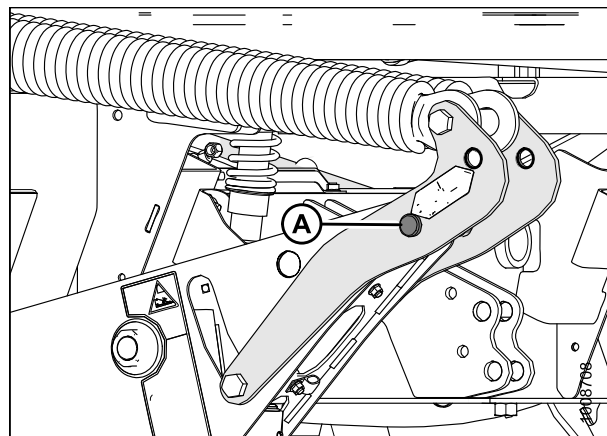


Figure 4.86: Float Pins – Engaged

OPERATION

8. Start engine and lower header onto ground until member (A) lifts off link (B) on both sides.
9. Stop engine and remove key.

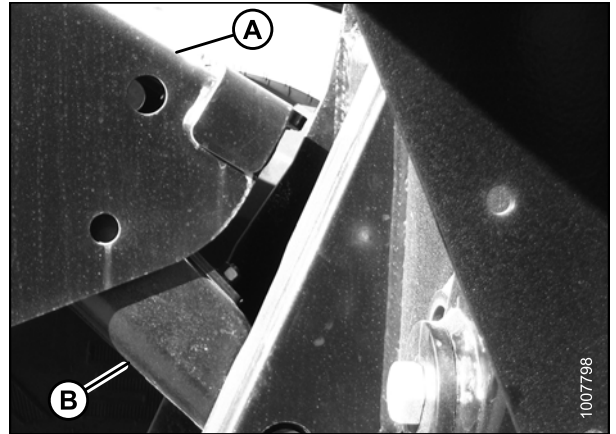


Figure 4.87: Lift Linkage

10. On high side, remove nut, washer, and bolt (A) that attaches shims (B) to link.
11. Remove one or both shims (B) and reinstall the hardware (A).
12. Start engine and raise header fully.
13. Stop engine and remove key from ignition.
14. Move float pins to disengaged position.
15. Start engine and set header approximately 6 in. (150 mm) off ground and check that member (A) is against link (B). Stop engine and remove key from ignition.
16. Measure distance to ground at both ends of header.
17. If additional levelling is required, repeat steps 6 to 9 and install the removed shim on the opposite linkage.

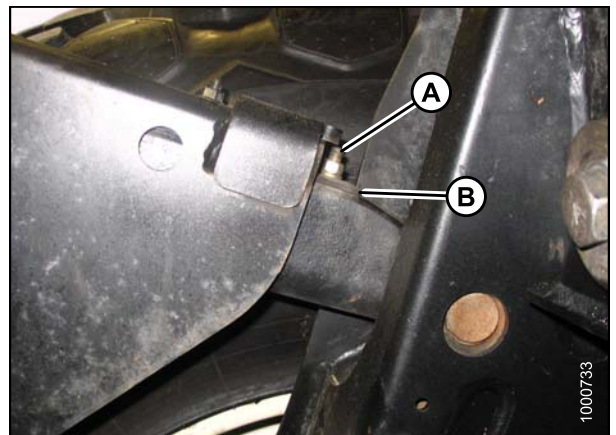


Figure 4.88: Lift Linkage

NOTE:

If required, additional shims are available from your Dealer.

18. Once header is level, return float pins to their engaged position (A).

NOTE:

Float does **NOT** require adjustment after levelling header.

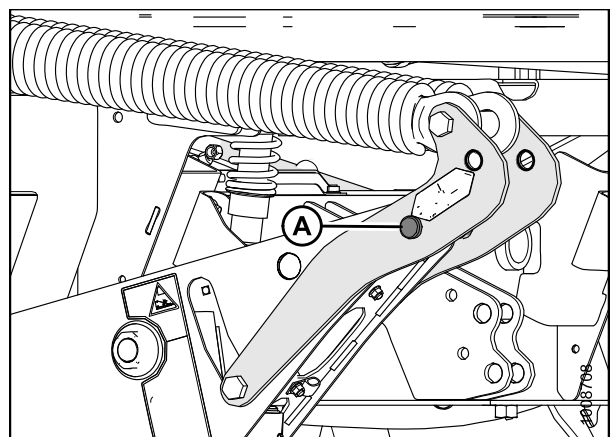


Figure 4.89: Float Pins – Engaged

OPERATION

4.4.4 Header Drive

All header controls are conveniently located on the operator's console and on the ground speed lever (GSL) handle.

NOTE:

Some controls are optional equipment and may not be present in your unit. Some controls may be installed, but will be nonfunctional for certain headers.

Engaging and Disengaging the Header

IMPORTANT:

Always move throttle lever back to idle before engaging header drive. Do **NOT** engage header with engine at full rpm.

CAUTION

Check to be sure all bystanders have cleared the area.

1. To Engage Header:

- a. Move throttle (A) to adjust engine speed to idle.
- b. Push the center down and pull up the HEADER DRIVE switch (B) to engage header drive. A slight delay between switch ON and operating speed is normal.

2. To Disengage Header:

- a. Push HEADER DRIVE switch (B) down to disengage header drive.



Figure 4.90: Operator Console

OPERATION

Reversing the Header

NOTE:

The optional hydraulic reversing kit must be installed.

IMPORTANT:

Hose plumbing to the reverser block is specific to the header type. To prevent damage to the reel on D-Series headers, refer to the reverser kit installation instruction MD# 169213 when switching from an auger header to a draper header on the same windrower.

- Reverses knife and conditioner on D-Series draper headers.
- Reverses reel, auger, knife and conditioner on A-Series auger headers.

Reverse the header as follows:

1. Push down and hold HEADER DRIVE REVERSE button (A) and pull up the HEADER DRIVE switch (B).
2. CDM will display HEADER REVERSE.
3. **RELEASE REVERSE BUTTON (A) TO STOP HEADER.**
4. Push down the HEADER DRIVE switch (B) to OFF, so that it can be restarted.

NOTE:

To engage header drive, push down, and pull up HEADER DRIVE knob.



Figure 4.91: Operator Console

4.4.5 Adjusting Header Angle

Header angle is defined as the angle between the ground and the drapers/cutterbar. It is adjustable to accommodate crop conditions and/or soil type.

Refer to the appropriate header operator's manual for the range of adjustment and recommended settings for your particular header.

The header angle can be hydraulically adjusted from the cab without shutting down the windrower when the windrower is equipped with the hydraulic center-link. A readout on the cab display module (CDM) allows you to establish settings for each crop condition.

IMPORTANT:

- Changing header angle will affect float slightly because it has the effect of making the header lighter or heavier.
- To prevent excessive guard breakage when conditions are not suited to heavier float (e.g., rocky or wet), do **NOT** use the TILT CONTROL "on the go". Instead, use the HEADER HEIGHT switch.

OPERATION



Figure 4.92: Operator Console

A - Program Button
D - Header Tilt Up

B - Display
E - Display Selector

C - Header Tilt Down

Hydraulic Link (Optional)

Adjust the header angle as follows:

- To decrease (flatten) header angle, operate HEADER TILT UP switch (D) on ground speed lever (GSL) handle so that cylinder retracts. The CDM display will show a reading on the lower line of decreasing value between 00.0 and 10.0.
- To increase (steepen) header angle, operate HEADER TILT DOWN switch (C) on GSL handle so the cylinder extends. The CDM display will show a reading on the lower line of increasing value between 00.0 and 10.0.

NOTE:

The HEADER TILT switch can be locked out to prevent inadvertent header angle changes when pressing the HEADER HEIGHT control switches. Refer to [Activating the Header Tilt Control Lock Out, page 126](#).

OPERATION

Mechanical Link

Adjust header angle as follows:

1. Lower header to ground, shut down windrower and remove key from ignition.
2. Loosen nut (A) on center-link.
 - To increase (steepen) angle, rotate barrel (B) to lengthen center-link.
 - To decrease (flatten) angle, rotate barrel (B) to shorten center-link.
3. Tighten plate nut (A) with a slight tap of a hammer.

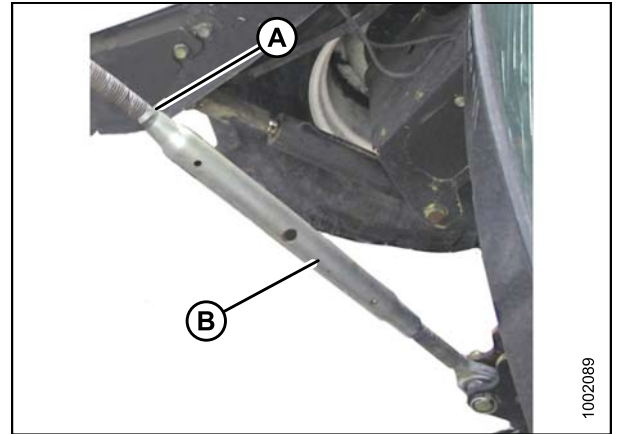


Figure 4.93

Checking Self-Locking Center-Link Hook

Periodically check the operation of the hook locking mechanism and ensure that it is working properly as follows:

1. If header is attached to windrower, disconnect center-link hook from header by pulling up on handle (A) to release the locking device and then lifting the hook off the header pin.

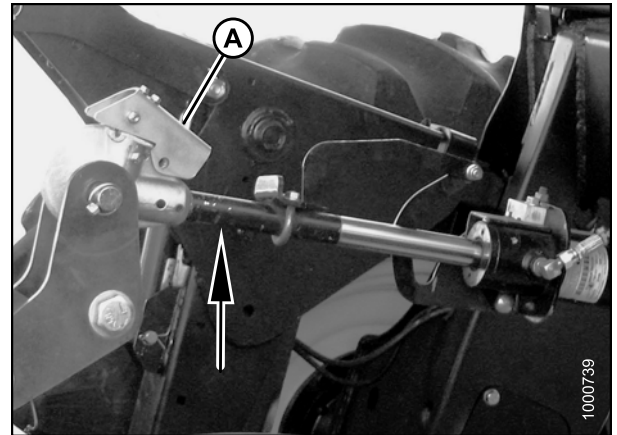


Figure 4.94: Center-Link

2. Lower the handle (A) into the **LOCK** position.
3. Push up on lock pin (B) only. Handle should catch on casting and pin should **NOT** lift.

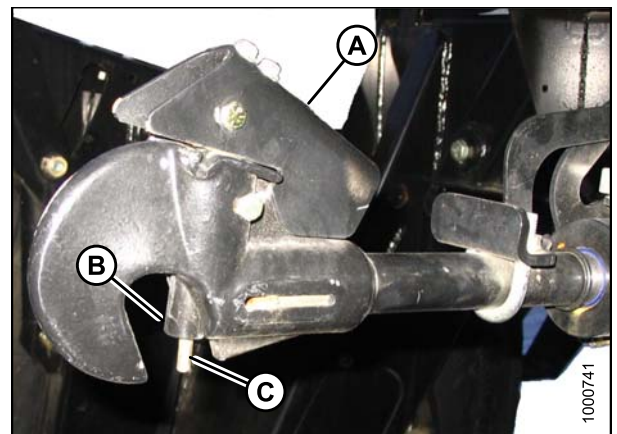


Figure 4.95: Center-Link Hook

A - Handle

B - Lock Pin

C - Actuator Rod

OPERATION

4. Push up on actuator rod and lock pin should lift with the handle.



Figure 4.96: Center-Link Hook

4.4.6 Cutting Height



Figure 4.97: Operator Console

Cutting height is adjusted by raising or lowering the header with the HEADER UP (B) or HEADER DOWN (C) switches on the ground speed lever (GSL).

The cab display module (CDM) indicates header height with a reading on the DISPLAY (A) lower line between 00.0 and 10.0, with 00.0 being on the ground.

Use DISPLAY SELECTOR switch (D) to display the current setting.

4.4.7 Return to Cut

The M-Series monitoring system will assist you in maintaining the desired cutting height with the RETURN TO CUT feature. This feature can be turned OFF or ON with a switch on the cab display module (CDM).

The return to cut (RTC) feature provides preset cutting height and tilt angle settings for the header.

If desired, the CDM can be programmed so only the cutting height feature is active.

The AUTO RAISE HEIGHT feature allows you to raise the header to a preselected height while in the RETURN TO CUT mode. Refer to [Programming the Auto Raise Height Feature, page 209](#).

Refer to the following for RTC programming and operating procedures:

- [Programming the Return to Cut Feature, page 207](#)
- [Using the Return to Cut Feature, page 208](#)

Programming the Return to Cut Feature

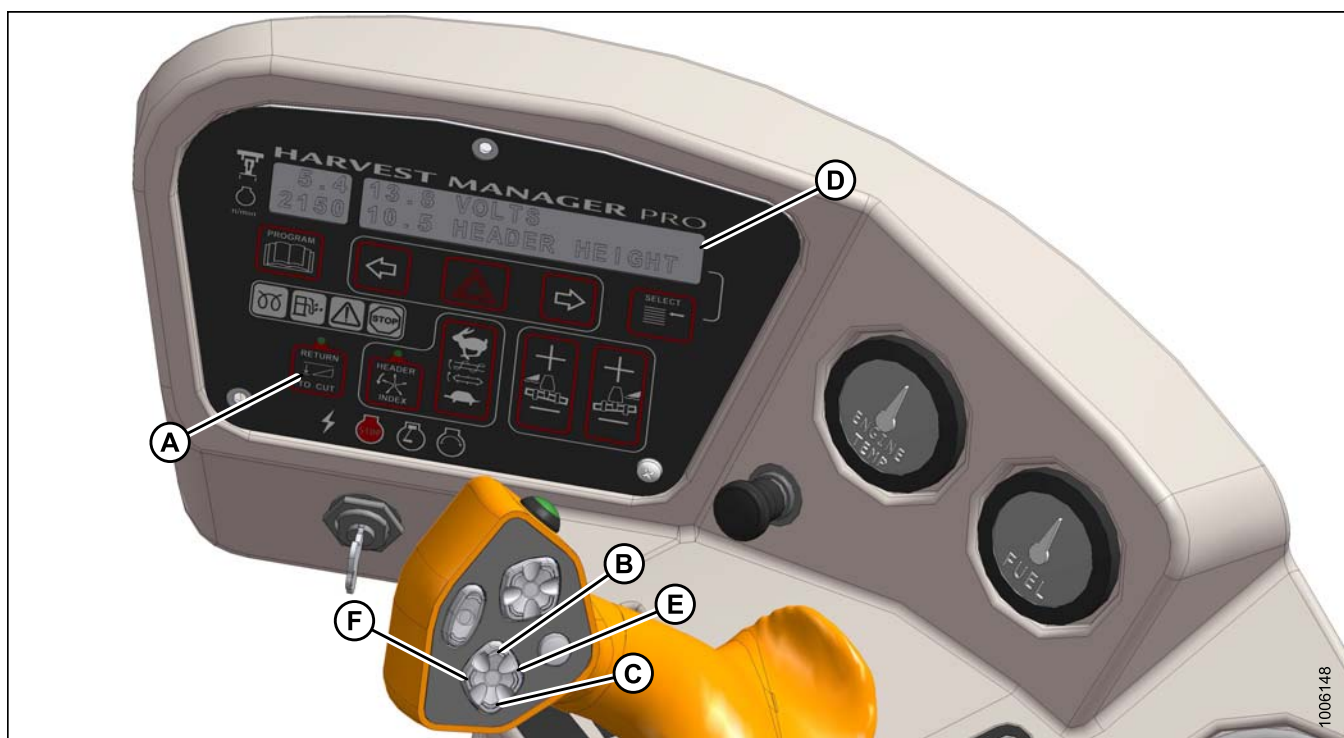


Figure 4.98: Operator Console

Program the RETURN TO CUT (RTC) feature as follows:

CAUTION

Check to be sure all bystanders have cleared the area.

1. Start and windrower and engage the header.
2. Set RETURN TO CUT switch (A) to OFF (indicator light is OFF).
3. Adjust the header to the desired cutting height with the HEADER UP (B) or HEADER DOWN (C) switches on the ground speed lever (GSL). The cab display module (CDM) displays between **00.0 and 10.0** at (D).

OPERATION

- Adjust the header angle with the HEADER TILT UP (E) or HEADER TILT DOWN (F) switches on the GSL. The CDM displays between **00.0** and **10.0**. This step is not required when height only has been preselected.
- Press the RETURN TO CUT switch (A) on the CDM. The indicator light will illuminate and the settings are now programmed into the windrower control module (WCM).

Using the Return to Cut Feature

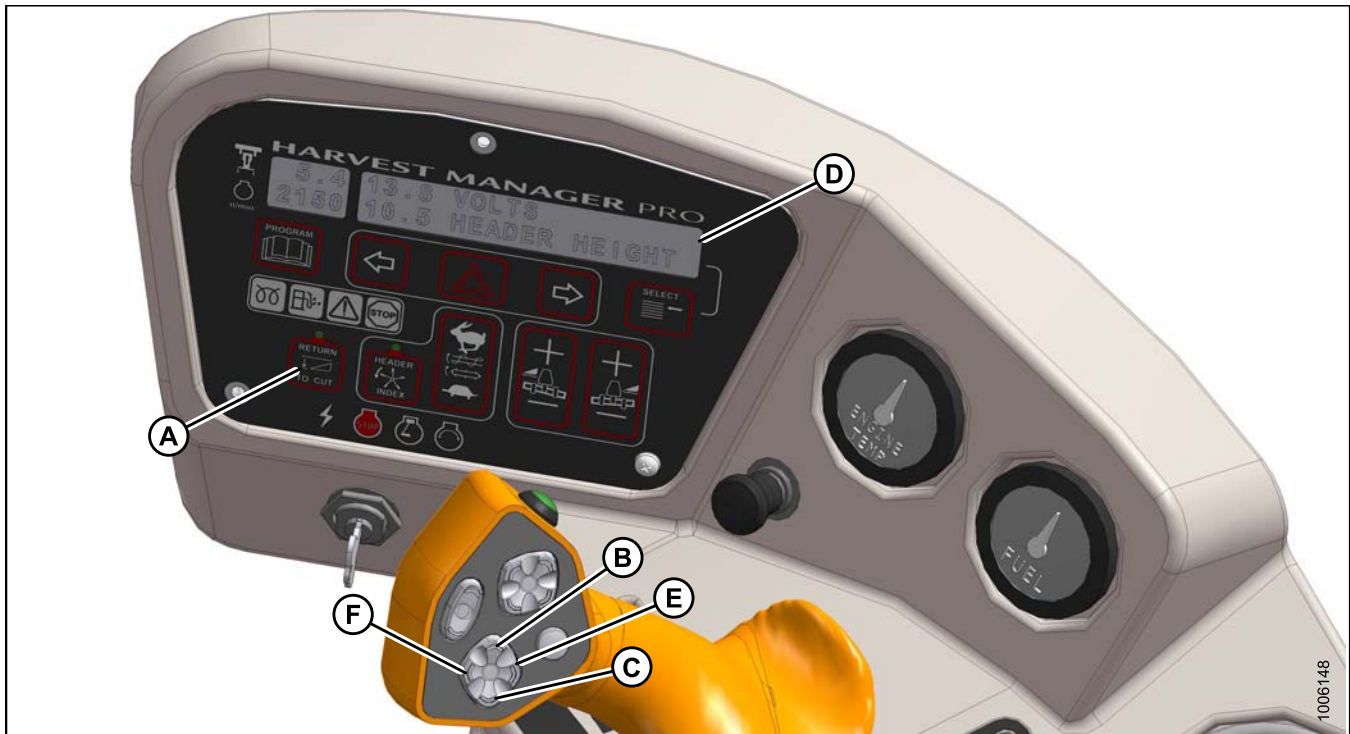


Figure 4.99: Operator Console

A - Return to Cut
D - Display

B - Header Up
E - Header Tilt Up

C - Header Down
F - Header Tilt Down

Use the RETURN TO CUT feature as follows:

IMPORTANT:

Ensure the header is engaged and the RETURN TO CUT switch (A) is illuminated.

NOTE:

The header can be raised or lowered by **pressing and holding** the HEADER UP (B) or HEADER DOWN (C) switches on the ground speed lever (GSL).

- If header is above the preset cutting height, **momentarily press** HEADER DOWN switch (C) and the header will return to preset height.
- If the header is below the preset height, **press and hold** the HEADER UP (B) switch to raise the header. Release switch to stop header. Alarm will sound when header rises past the preset height.
- If the header angle changes, double-click (two clicks within 0.5 seconds) the HEADER TILT UP (E) or HEADER TILT DOWN switch (F) and the header will return to the preset angle.

OPERATION

NOTE:

If the header cannot return to the preset height or angle within 30 seconds, the RETURN TO CUT feature will deactivate to prevent the hydraulic oil from overheating. Push the RETURN TO CUT switch (A) to reactivate.

4.4.8 Auto Raise Height

The header can be automatically raised if programmed into the cab display module (CDM).

Refer to the following topics:

- [Programming the Auto Raise Height Feature, page 209](#)
- [Using the Auto Raise Height Feature, page 210](#)

Programming the Auto Raise Height Feature

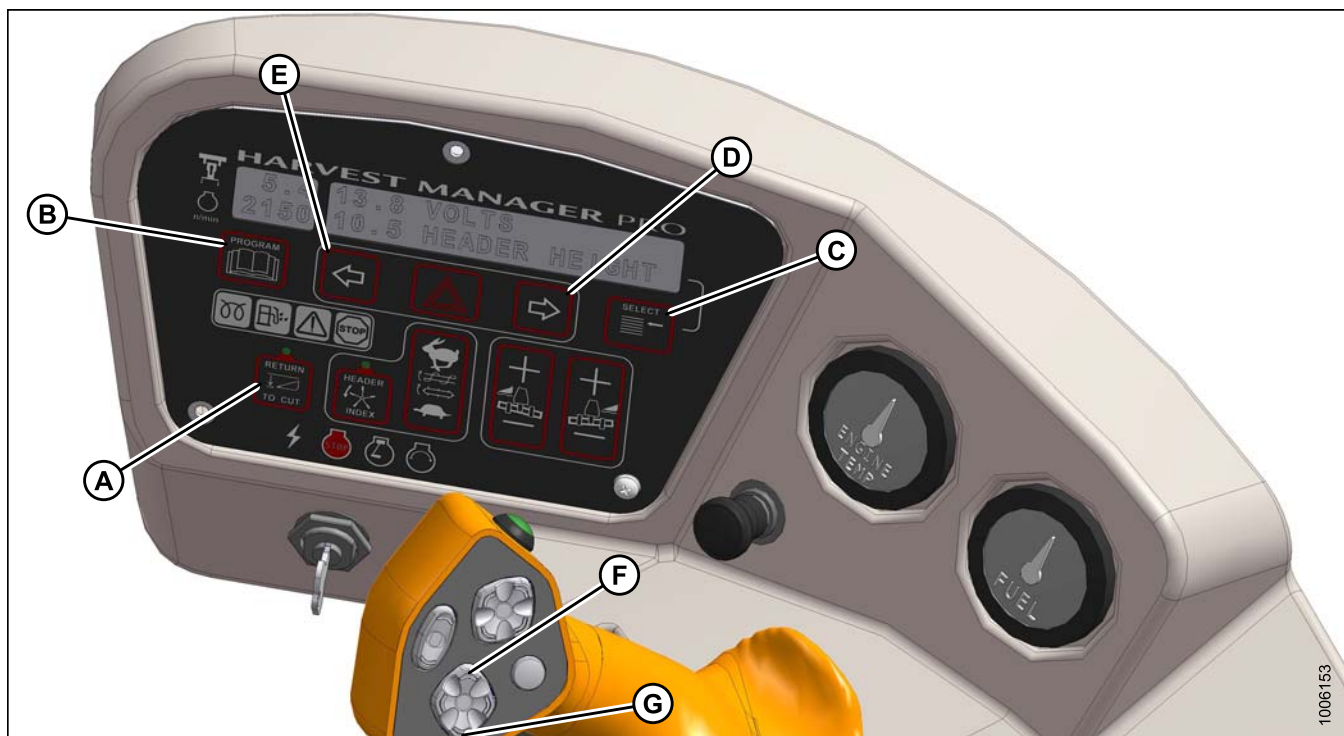


Figure 4.100: Operator Console

A - Return to Cut
E - Left Arrow

B - Program
F - Header Up

C - Select
G - Header Down

D - Right Arrow

Program the AUTO RAISE HEIGHT feature as follows:

NOTE:

RETURN TO CUT switch (A) can be OFF or ON.

1. Turn ignition ON or run engine.
2. Press PROGRAM (B) and SELECT (C) on cab display module (CDM) to enter programming mode.
3. Press SELECT (C). WINDROWER SETUP? is displayed on upper line (B).

OPERATION

4. Press right arrow (D), then SELECT. SET KNIFE SPEED? is displayed.
5. Press SELECT (C) until AUTO RAISE HEIGHT is displayed.
6. Press left arrow (E) or right arrow (D) to change value on lower line. Working range is 4.0 to 9.5. At 10.0, the feature is disabled and "OFF" is displayed.
7. When finished entering desired values, press PROGRAM to exit programming mode.

Using the Auto Raise Height Feature

IMPORTANT:

The windrower must be running with the header engaged at the cutting height and the RETURN TO CUT switch (A) activated.

Use the AUTO RAISE HEIGHT feature as follows:

1. To raise the header to the AUTO RAISE HEIGHT set point, double-click (two clicks within 0.5 seconds) the HEADER UP switch (B) on the ground speed lever (GSL).

NOTE:

With AUTO RAISE HEIGHT turned ON, the ACRE counter will be disabled when header height greater than preset cutting height.

2. If desired, press HEADER UP switch while header is being raised to disable AUTO RAISE HEIGHT and maintain current height.

NOTE:

With AUTO RAISE HEIGHT turned OFF, the ACRE counter will be disabled when header height value is greater than 9.5. OFF is displayed on the cab display module (CDM).

3. To return the header to the preset cutting height, momentarily press HEADER DOWN switch (C).

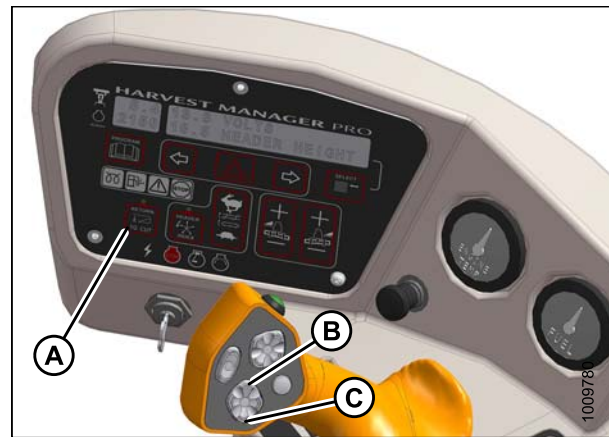


Figure 4.101: Operator's Station

4.4.9 Header Drop Rate

The header should lower gradually when the HEADER DOWN switch is pressed. From full height to ground should take 3–4 seconds.

If the drop rate requires adjustment, refer to [Adjusting Header Drop Rate, page 408](#).

4.4.10 Double Windrowing

The double windrow attachment (DWA) deposits two windrows of conditioned material close together to be picked up by a forage chopper.

The system is for use with the A-Series Auger Header, R-Series Rotary Disc Header, and D65 Draper Header with HC10 Hay Conditioner.

The conditioned crop is deposited onto the side delivery system draper and delivered to the side of the windrower when required.

Raising the side delivery system shuts off the draper and allows the crop to be deposited between the windrower wheels as it would be without the side delivery system.

Refer to MacDon M-Series Windrower Double Windrow Attachment Manual (MD #169216) for complete operating and maintenance instructions. The manual is shipped with the DWA kit.



Figure 4.102: DWA

Double Windrow Attachment (DWA) Deck Position

The deck is raised and lowered with the DWA UP (A) and DWA DOWN (B) switches on the ground speed lever (GSL) or with the rocker switch on the operator's console, depending on how the windrower cab display module (CDM) is programmed during the installation of the double windrow attachment (DWA).

To swap controls from the console to the GSL, refer to [Activating the Double Windrower Attachment \(DWA\), page 110](#).

NOTE:

The same switch is used for raising and lowering a swath roller (if installed).

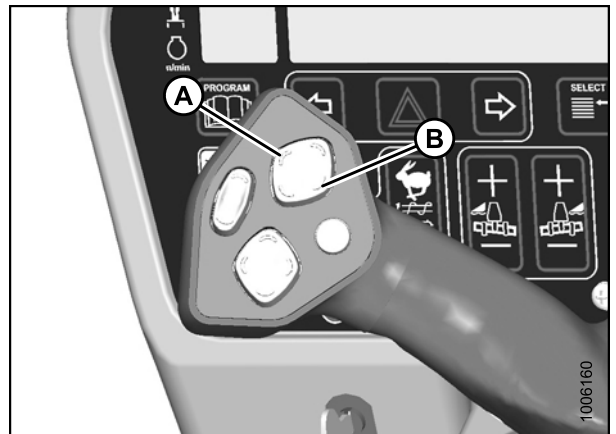


Figure 4.103: Ground Speed Lever (GSL)

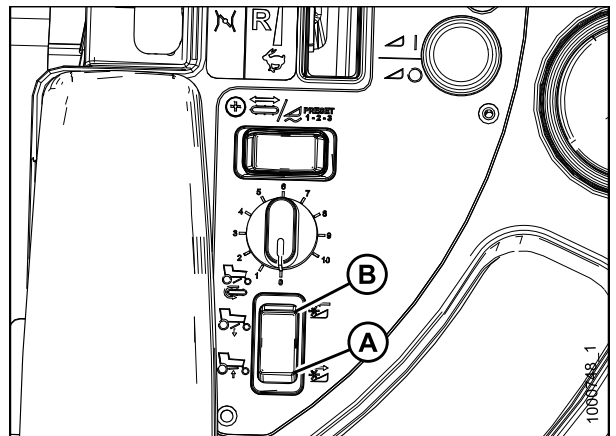


Figure 4.104: Operator's Console

OPERATION

Double Windrow Attachment (DWA) Draper Speed

The draper speed is controlled with the rotary switch (A) next to the rocker switch on the operator's console.

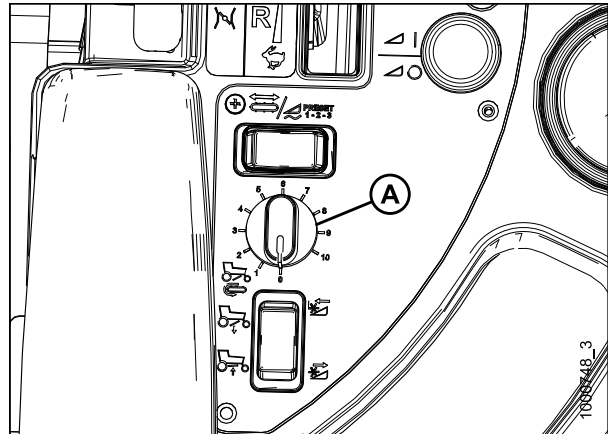


Figure 4.105: Operator's Console

4.4.11 Swath Roller Operation

The swath roller is raised and lowered with the DWA UP (A) and DWA DOWN (B) switches on the ground speed lever (GSL) or with the rocker switch on the operator's console. This depends on how the windrower cab display module (CDM) is programmed during the installation of the Swath Roller kit.

To swap controls from the console to the GSL, refer to [Activating the Double Windrower Attachment \(DWA\)](#), page 110.

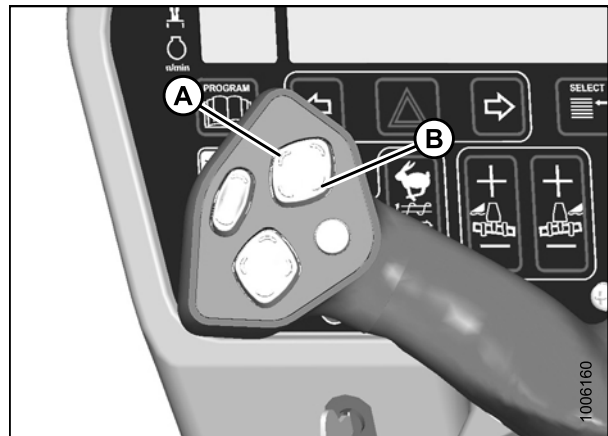


Figure 4.106: GSL

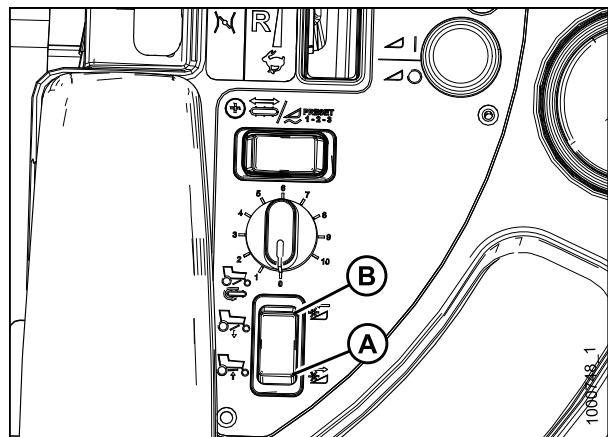


Figure 4.107: Rocker Switch

4.5 Attaching and Detaching Headers

4.5.1 Attaching a D-Series Header

D50, D60, and D65 headers can be attached to an M155 or M205 Self-Propelled Windrower. For attachment procedure, refer to the section for your specific windrower model.

Refer to the following instructions based on the type of center-link installed on your windrower:

- [Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 214](#)
- [Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment, page 219](#)
- [Attaching a D-Series Header: Mechanical Center-Link, page 225](#)

Attaching Header Boots

Header boots are required to attach a D-Series draper header to the windrower. Attach header boots (supplied with header) to windrower lift linkage if not already installed.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

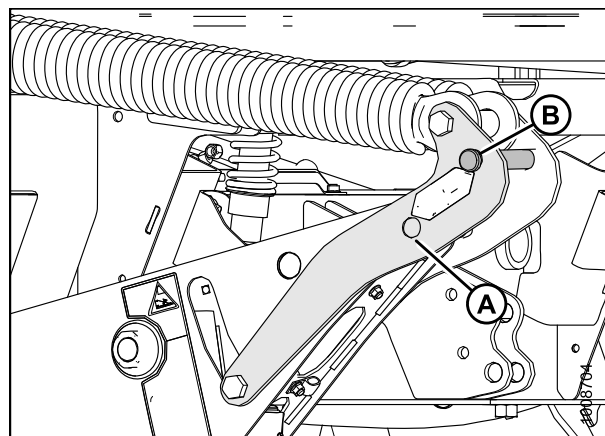


Figure 4.108: Header Float Linkage

1. Remove pin (B) from boot (A).

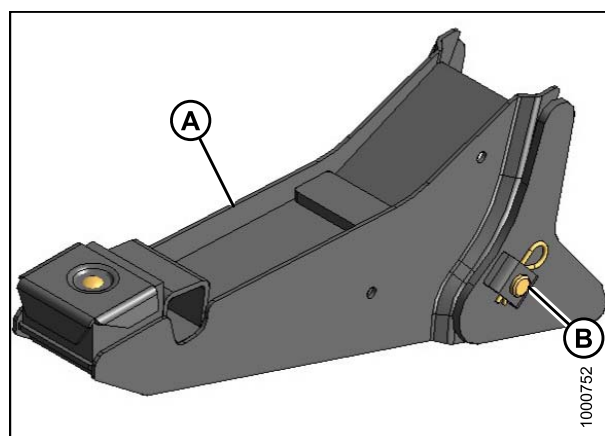


Figure 4.109: Header Boot

OPERATION

2. Position boot (B) onto lift linkage (A) and reinstall pin (C). Pin may be installed from either side of boot.
3. Secure pin (C) with hairpin (D).
4. Repeat for opposite side.

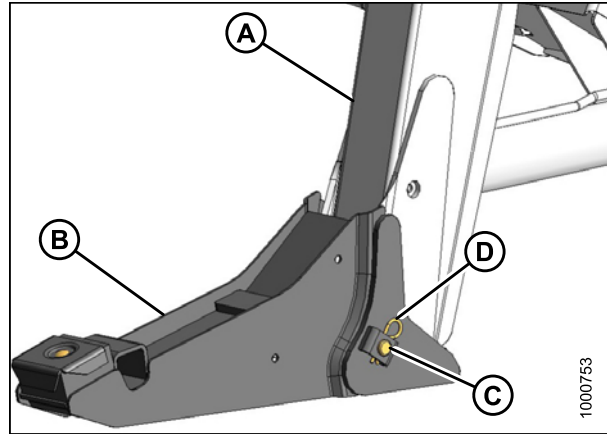


Figure 4.110: Header Boot

Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment

NOTE:

Draper header boots must be installed onto the windrower lift linkage before starting this procedure. Refer to [Attaching Header Boots, page 213](#).

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (A) from pins (B), and remove pins from both header legs.

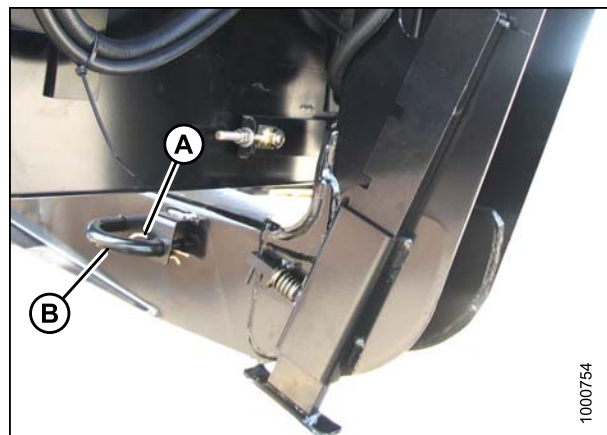


Figure 4.111: Header Leg

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate the header down button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

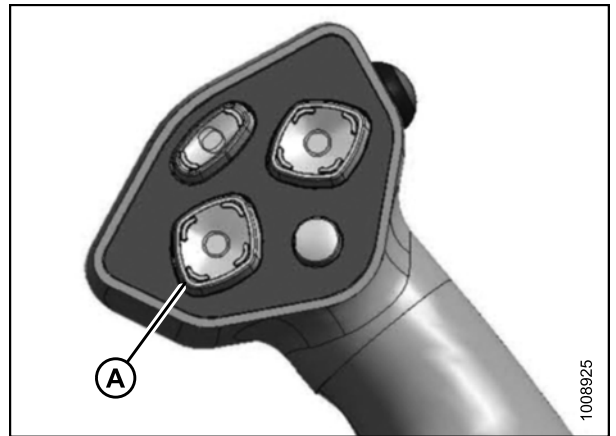


Figure 4.112: GSL

3. Activate the reel up switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

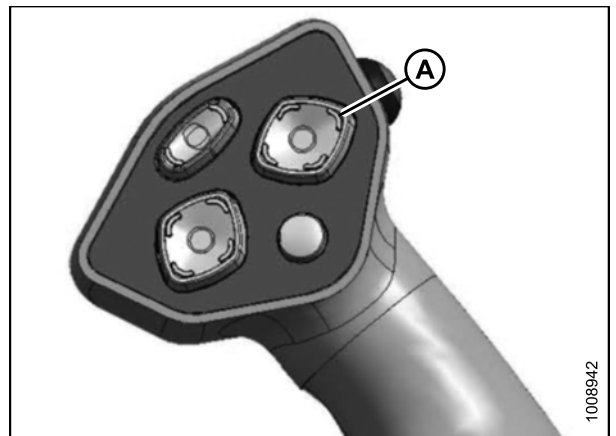


Figure 4.113: GSL

4. Drive the windrower slowly forward until the boots (A) enter the header legs (B). Continue driving slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
5. Ensure the lift linkages are properly engaged in the header legs and are contacting the support plates.

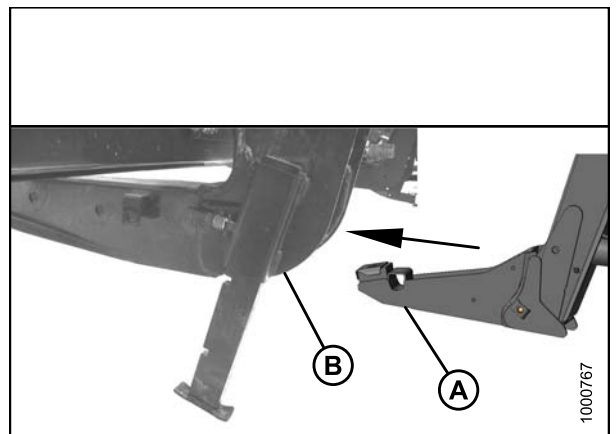


Figure 4.114: Header Leg and Boot

OPERATION

6. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Reel up (A) to raise the center-link
 - Reel down (B) to lower the center-link
 - Header tilt up (C) to retract the center-link
 - Header tilt down (D) to extend the center-link

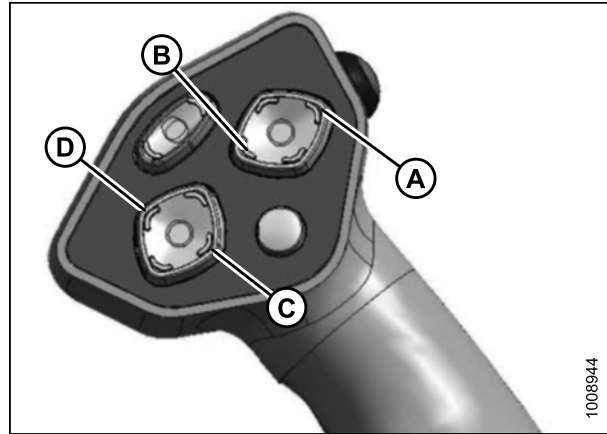


Figure 4.115: GSL

7. Adjust position of the center-link cylinder (A) with the reel up, reel down, and header tilt switches on the GSL until the hook is above the header attachment pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

8. Lower center-link (A) onto the header with the reel down switch on the GSL until it locks into position (hook release [B] is down).
9. Check that center-link is locked onto header by pressing the reel up switch on the GSL.

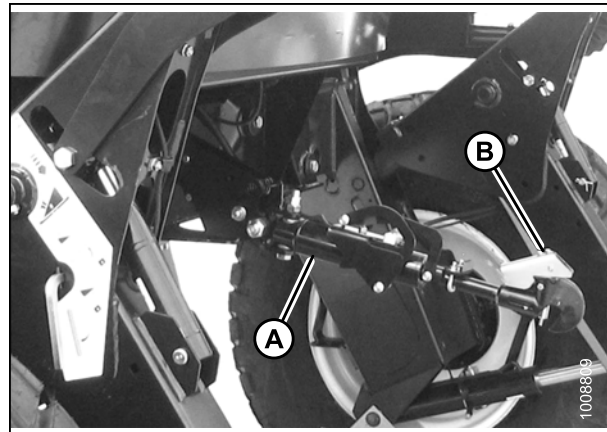


Figure 4.116: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

10. Press the header up switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- a. Press and hold the header up switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.



Figure 4.117: GSL

OPERATION

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

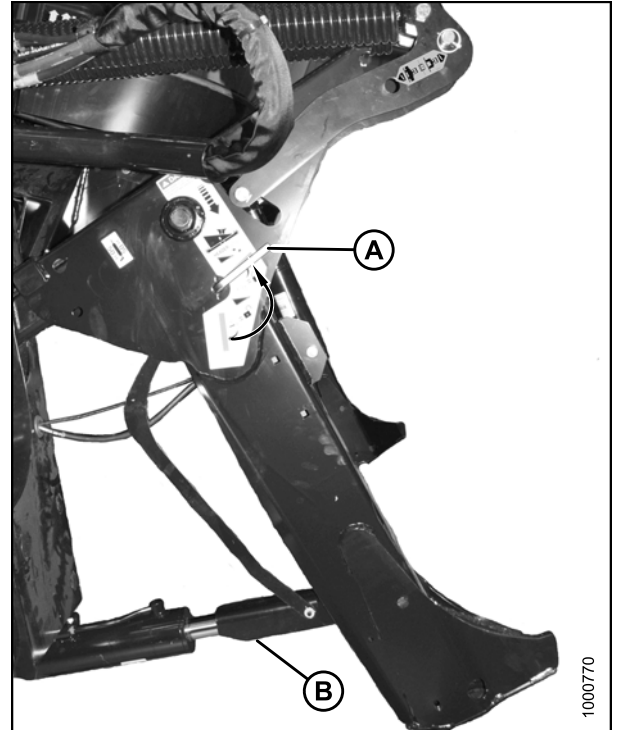


Figure 4.118: Safety Prop

12. Install pin (B) through the header leg (engaging U-bracket in lift linkage) on both sides and secure with hairpin (A).
13. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin.

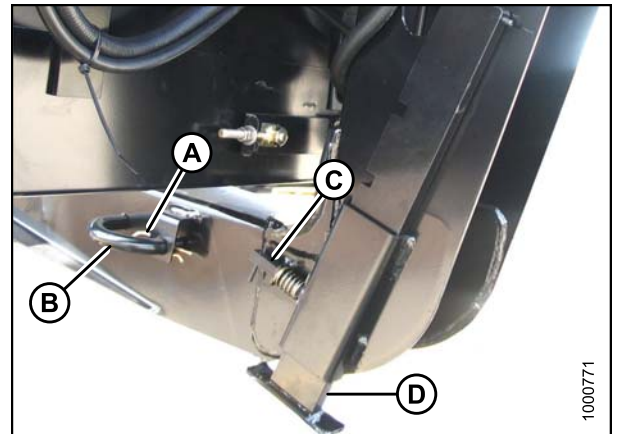


Figure 4.119: Header Leg

OPERATION

14. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

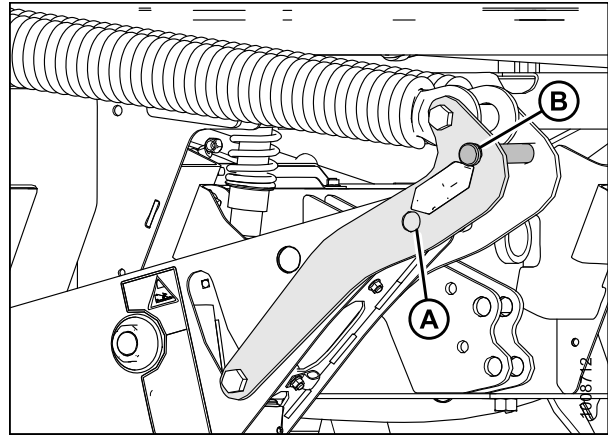


Figure 4.120: Header Float Linkage

15. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
16. Repeat for opposite safety prop.

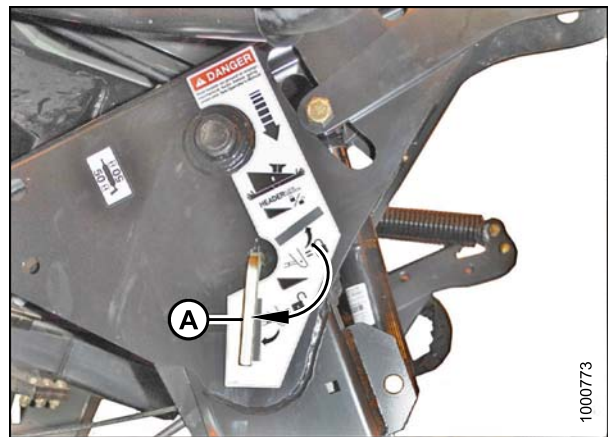


Figure 4.121: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

17. Start the engine and activate the header down switch (A) on the GSL to fully lower the header.
18. Stop engine and remove key from ignition.

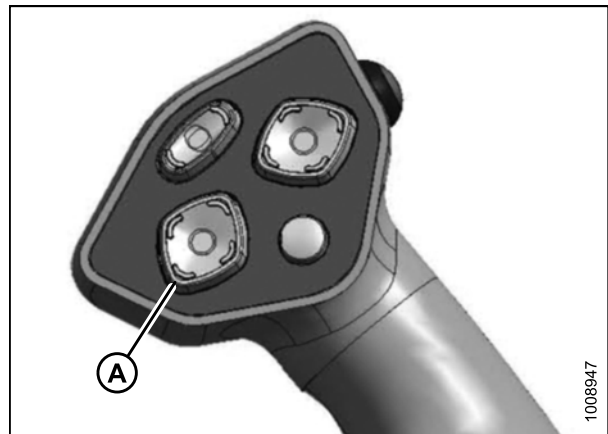


Figure 4.122: GSL

OPERATION

19. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

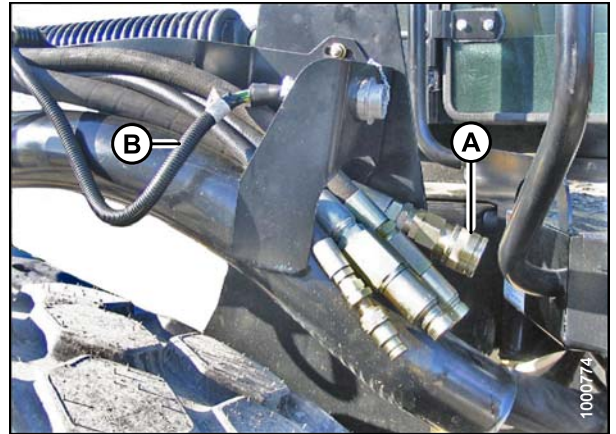


Figure 4.123: Header Drive Hoses and Harness

20. Connect reel hydraulics (A) at right cab-forward side of windrower. Refer to the draper header operator's manual.

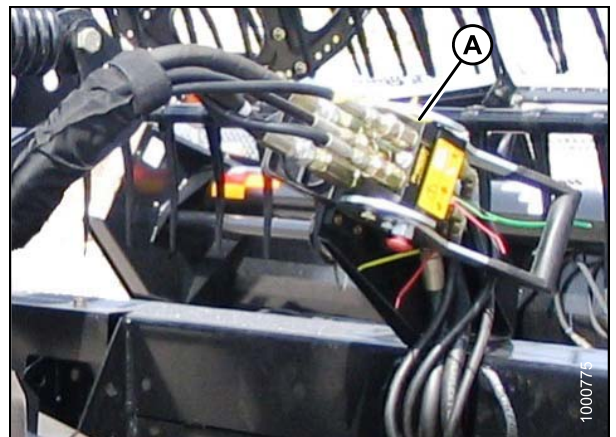


Figure 4.124: Reel Hydraulics

Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment

NOTE:

Draper header boots must be installed onto the windrower lift linkage before starting this procedure. Refer to [Attaching Header Boots, page 213](#).

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

OPERATION

1. Remove hairpin (A) from pins (B), and remove pins from both header legs.

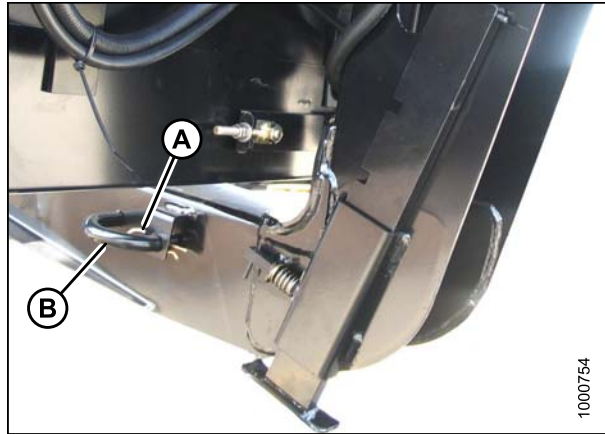


Figure 4.125: Header Leg

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate the header down button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

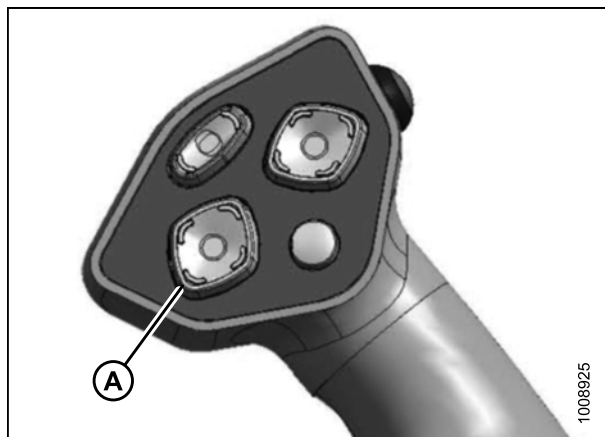


Figure 4.126: GSL

3. Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

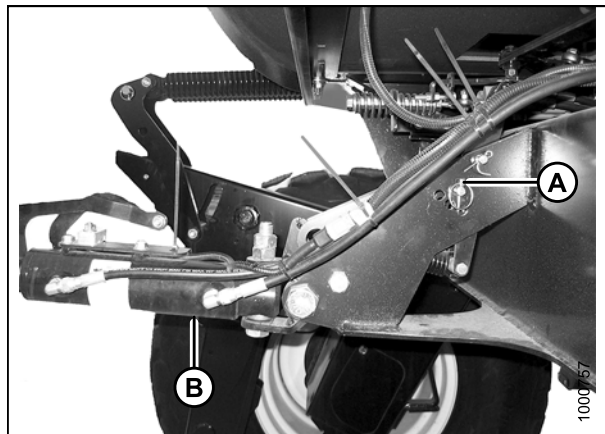


Figure 4.127: Hydraulic Center-Link without Self-Alignment Kit

OPERATION

4. Drive the windrower slowly forward until the boots (A) enter the header legs (B). Continue driving slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
5. Ensure the lift linkages are properly engaged in the header legs and are contacting the support plates.

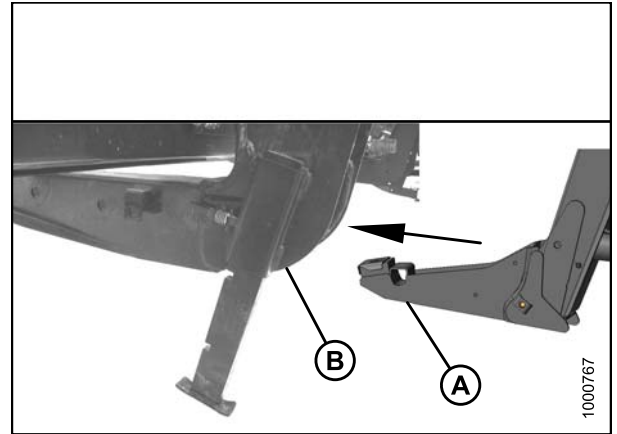


Figure 4.128: Header Leg and Boot

6. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Header tilt up (A) to retract the center-link
 - Header tilt down (B) to extend the center-link
7. Stop engine and remove key from ignition.

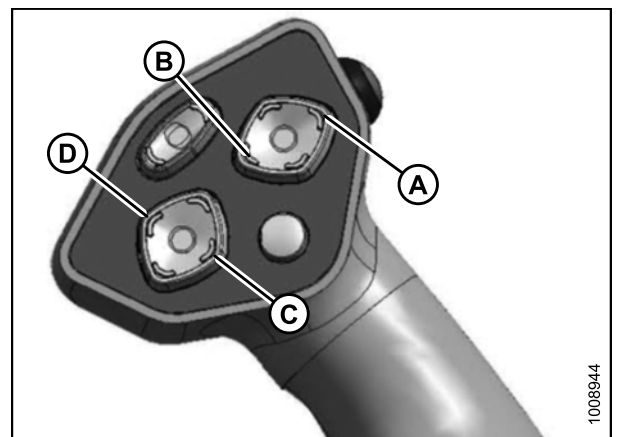


Figure 4.129: GSL

8. Push down on rod end of link cylinder (B) until hook engages and locks onto header pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

9. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

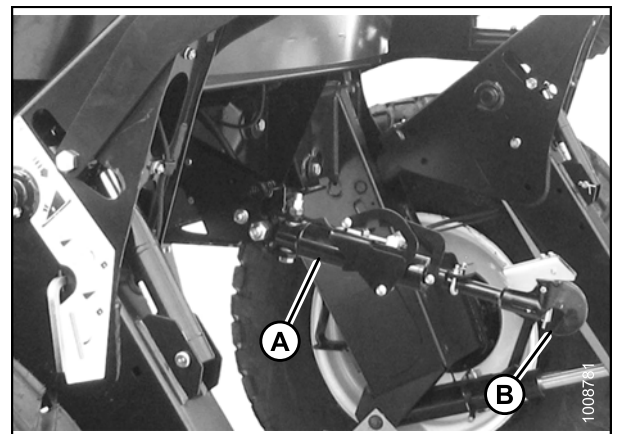


Figure 4.130: Hydraulic Center-Link

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

10. Start the engine.
11. Press the header up switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- a. Press and hold the header up switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

12. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

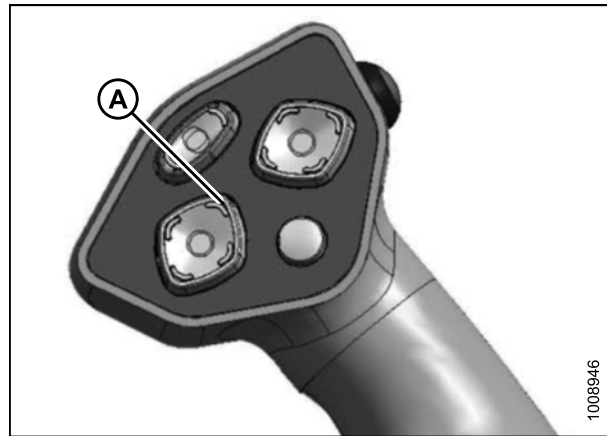


Figure 4.131: GSL

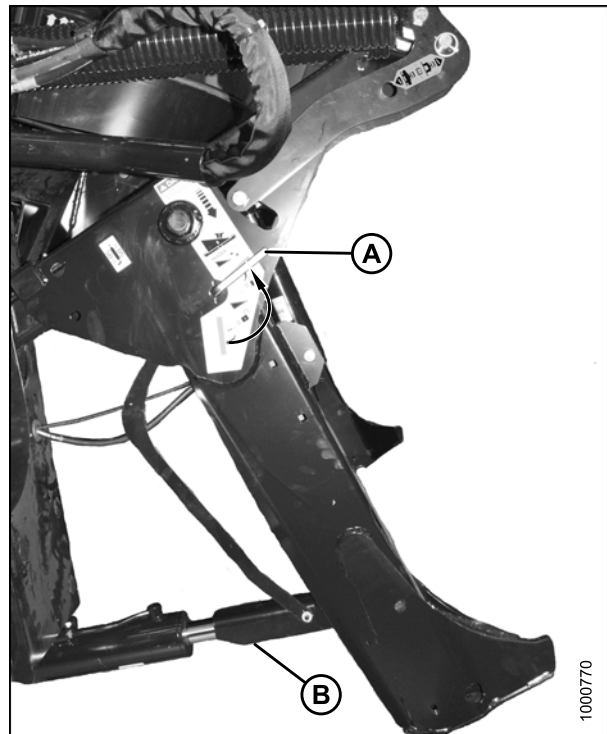


Figure 4.132: Safety Prop

OPERATION

13. Install pin (B) through the header leg (engaging U-bracket in lift linkage) on both sides and secure with hairpin (A).
14. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin.

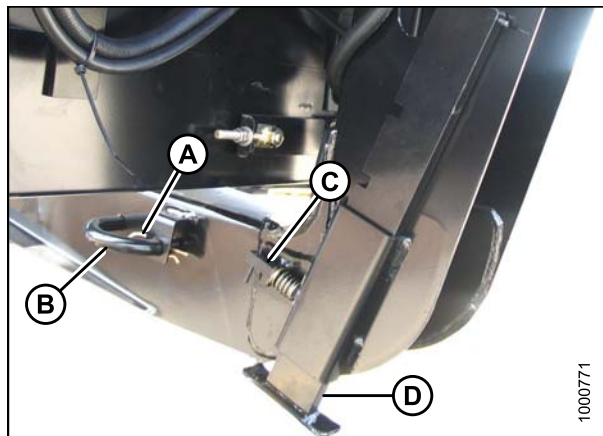


Figure 4.133: Header Leg

15. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

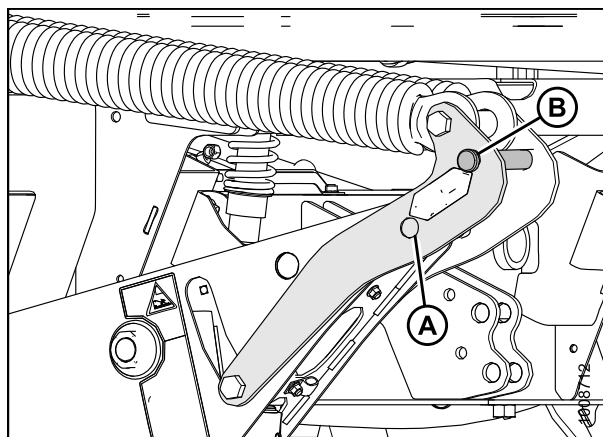


Figure 4.134: Header Float Linkage

16. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
17. Repeat for opposite safety prop.

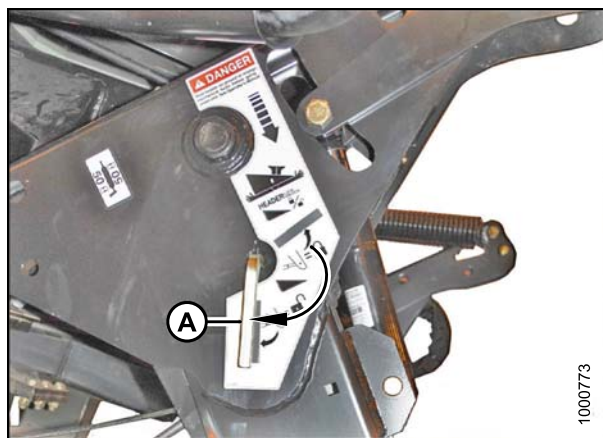


Figure 4.135: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

18. Start the engine and activate the header down switch (A) on the GSL to fully lower the header.
19. Stop engine and remove key from ignition.

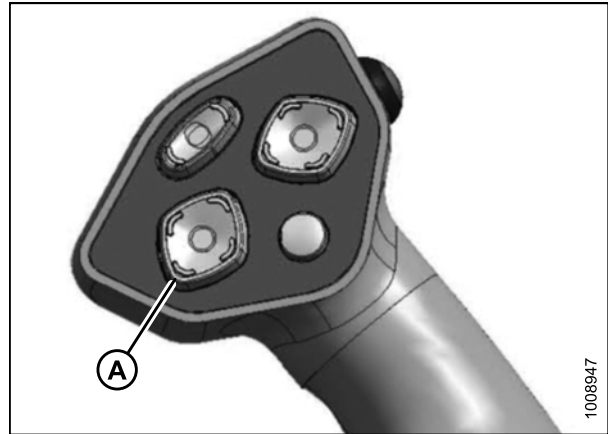


Figure 4.136: GSL

20. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

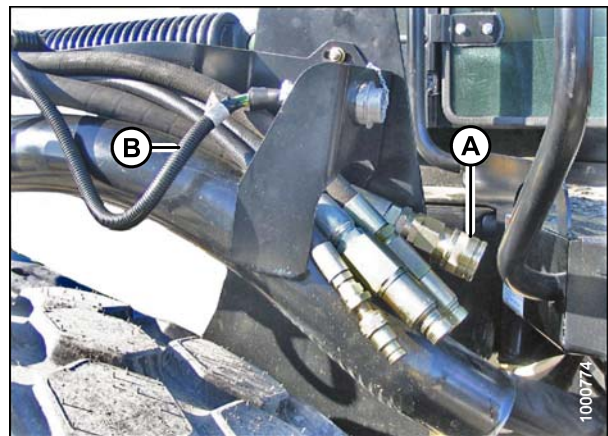


Figure 4.137: Header Drive Hoses and Harness

21. Connect reel hydraulics (A) at right cab-forward side of windrower. Refer to the draper header operator's manual.

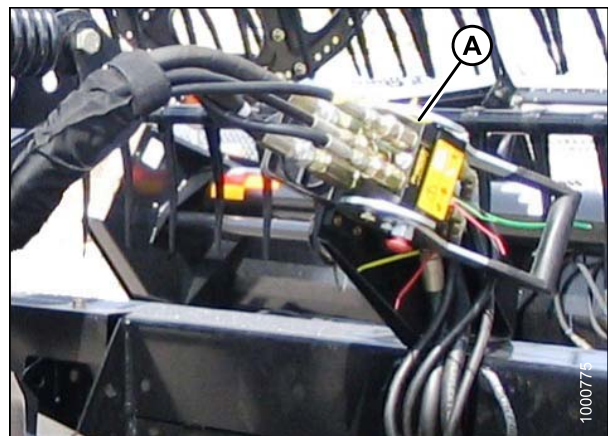


Figure 4.138: Reel Hydraulics

OPERATION

Attaching a D-Series Header: Mechanical Center-Link

NOTE:

Draper header boots must be installed onto the windrower lift linkage before starting this procedure. Refer to [Attaching Header Boots, page 213](#).

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (A) from pins (B), and remove pins from both header legs.

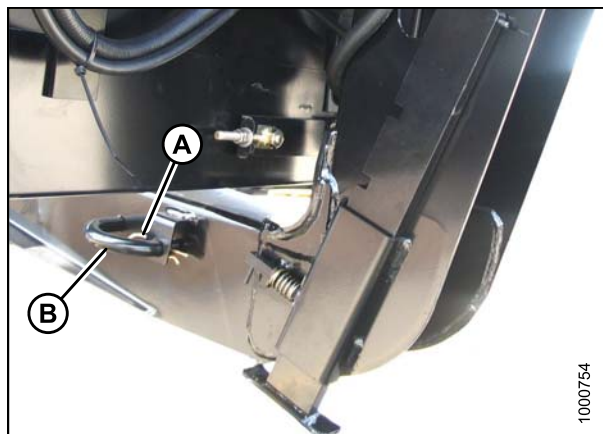


Figure 4.139: Header Leg

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate the header down button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.



Figure 4.140: GSL

OPERATION

3. Drive the windrower slowly forward until the boots (A) enter the header legs (B). Continue driving slowly forward until lift linkages contact the support plates in the header legs and the header nudges forward.
4. Ensure the lift linkages are properly engaged in the header legs and are contacting the support plates.

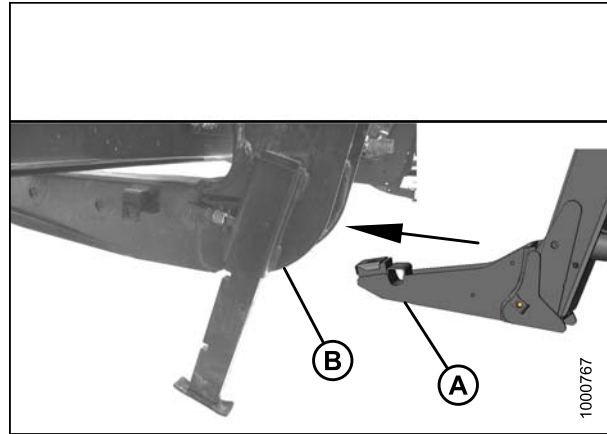


Figure 4.141: Header Leg and Boot

5. Stop engine and remove key from ignition.
6. Loosen nut (A) and rotate barrel (B) to adjust length until the link is aligned with the header bracket.
7. Install clevis pin (C) and secure with cotter pin (D).
8. Adjust length of link to achieve proper header angle by rotating barrel (B). Tighten nut (A) against barrel (a slight tap with a hammer is sufficient).

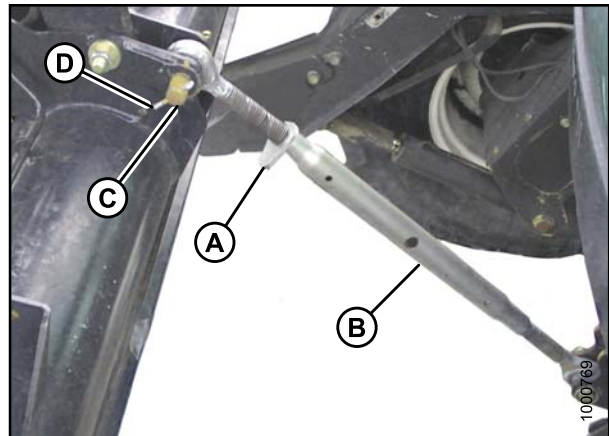


Figure 4.142: Mechanical Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

9. Start the engine.
10. Press the header up switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- a. Press and hold the header up switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

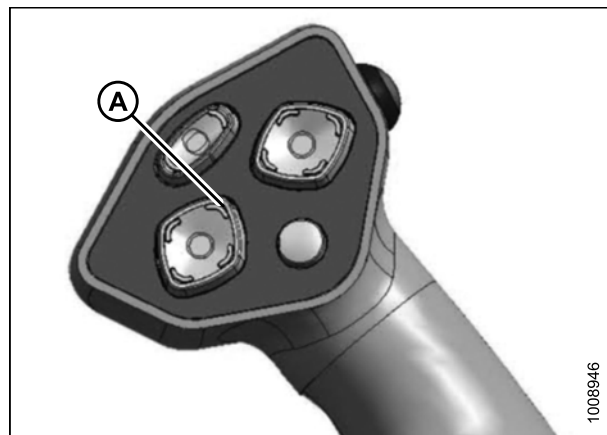


Figure 4.143: GSL

OPERATION

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

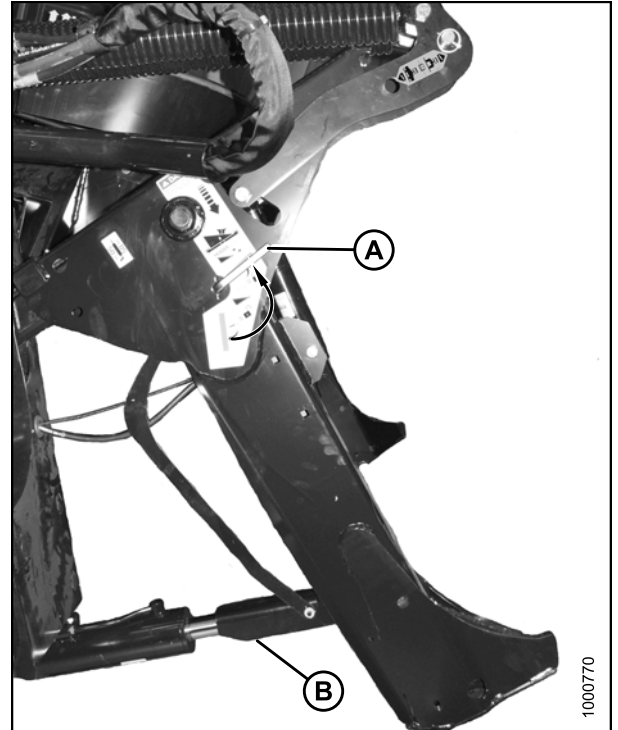


Figure 4.144: Safety Prop

12. Install pin (B) through the header leg (engaging U-bracket in lift linkage) on both sides and secure with hairpin (A).
13. Raise header stand (D) to storage position by pulling spring pin (C) and lifting stand into uppermost position. Release spring pin.

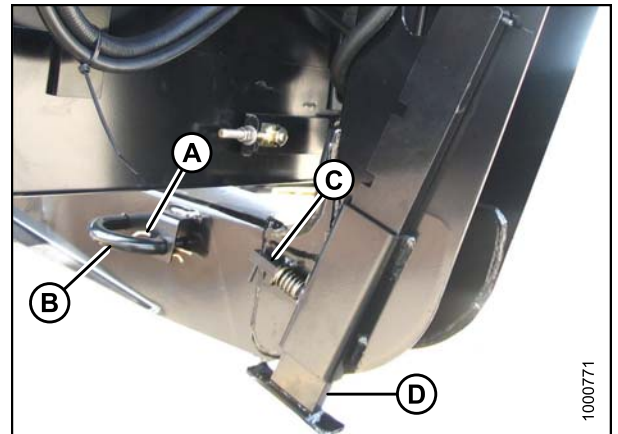


Figure 4.145: Header Leg

OPERATION

14. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

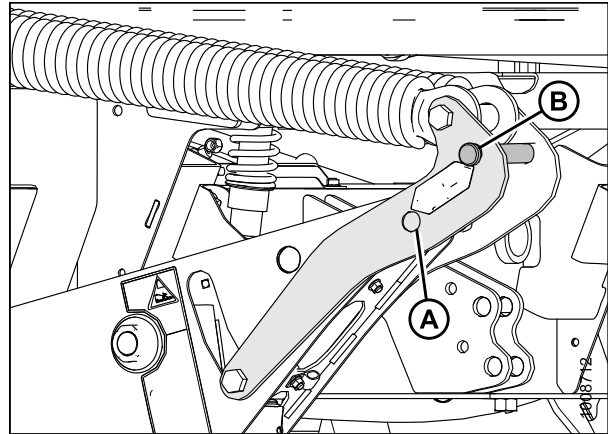


Figure 4.146: Header Float Linkage

15. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
16. Repeat for opposite safety prop.

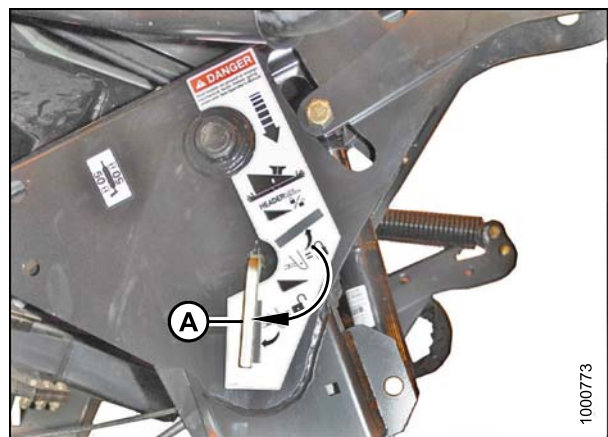


Figure 4.147: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

17. Start the engine and activate the header down switch (A) on the GSL to fully lower the header.
18. Stop engine and remove key from ignition.

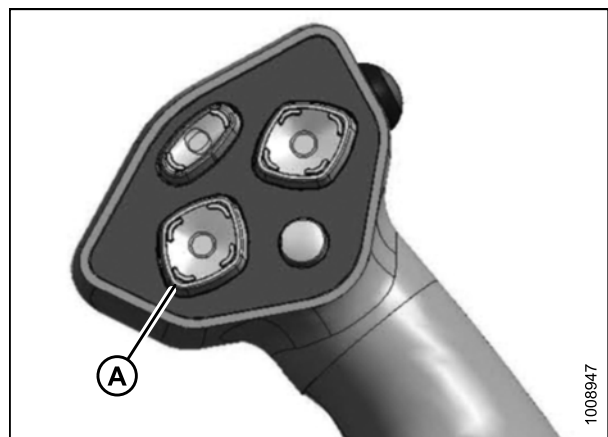


Figure 4.148: GSL

OPERATION

19. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

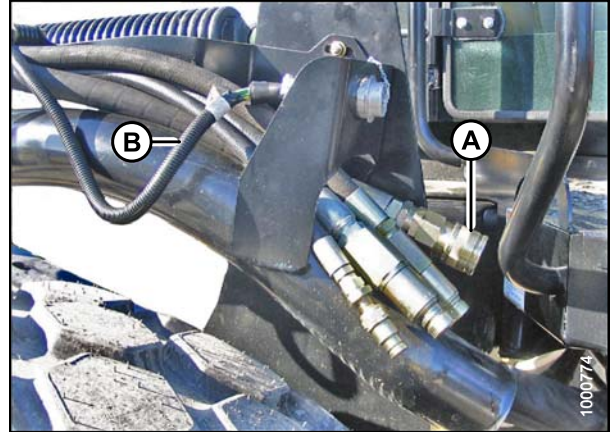


Figure 4.149: Header Drive Hoses and Harness

20. Connect reel hydraulics (A) at right cab-forward side of windrower. Refer to the draper header operator's manual.

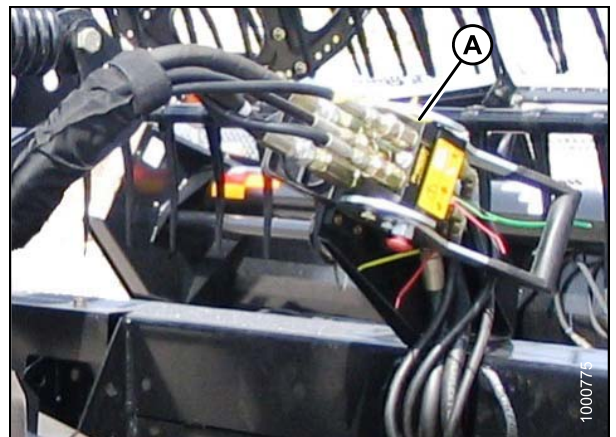


Figure 4.150: Reel Hydraulics

4.5.2 Detaching a D-Series Header

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Detaching a D-Series Header: Hydraulic Center-Link, page 230](#)
- [Detaching a D-Series Header: Mechanical Center-Link, page 233](#)

OPERATION

Detaching a D-Series Header: Hydraulic Center-Link

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Start engine and press header up (A) switch to raise header to maximum height.
2. Rephase cylinders if one end of the header does not raise fully. If rephasing is required, proceed as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.
3. Stop engine and remove key.
4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.



Figure 4.151: GSL

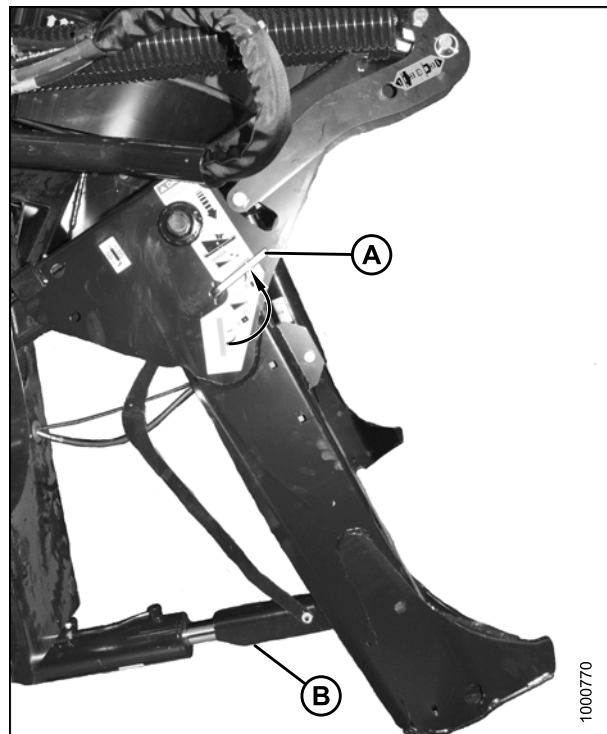


Figure 4.152: Safety Prop

OPERATION

5. Remove the pin (B) by removing the hairpin (A) from header leg on both sides.
6. Lower header stand (D) by pulling spring loaded pin (C). Release spring pin to lock stand.

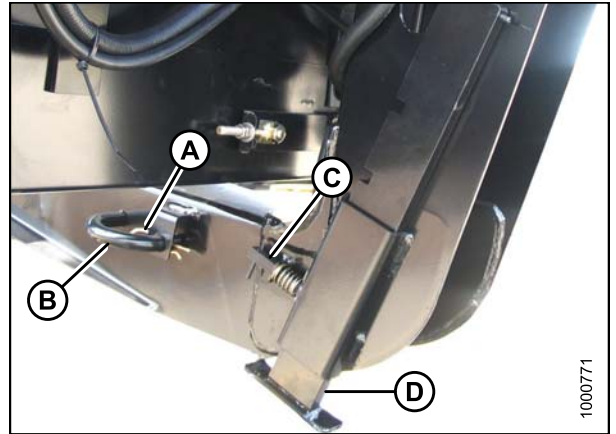


Figure 4.153: Header Stand

7. Remove clevis pin from location (A) to disengage float springs and insert in storage hole (B). Secure with lynch pin.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

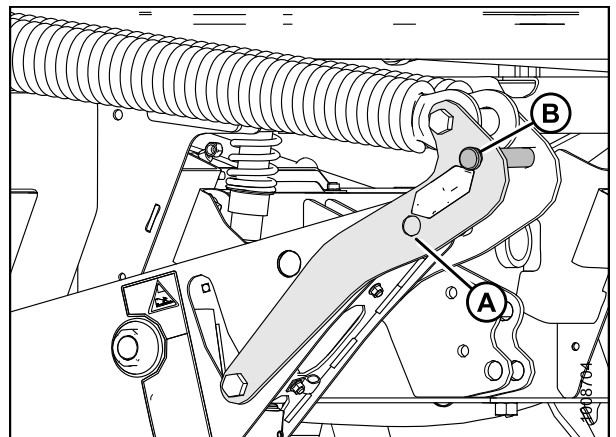


Figure 4.154: Header Float Linkage

8. Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
9. Start engine, choose a level area, and lower header to the ground. Stop engine and remove key.

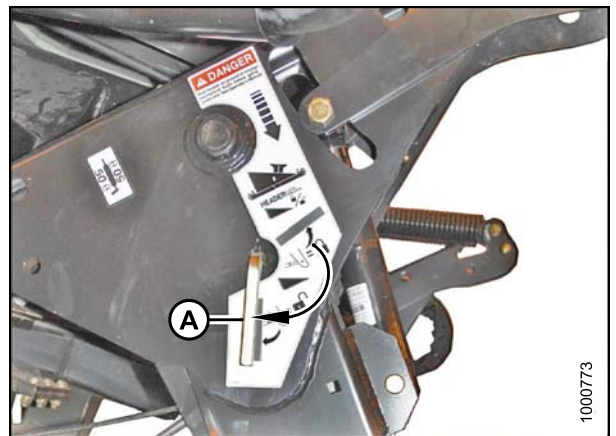


Figure 4.155: Safety Prop

OPERATION

10. Disconnect header drive hydraulics (A) and electrical harness (B) from header and store in support on windrower left cab-forward side. Refer to the draper header operator's manual for further information.

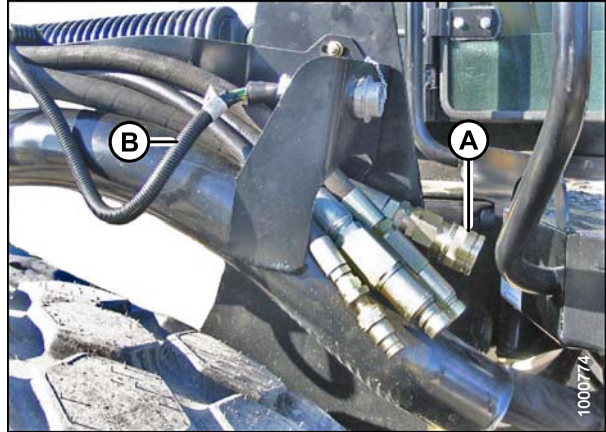


Figure 4.156: Header Drive Hydraulics

11. Disconnect reel hydraulics (A) from header and store on bracket at windrower left cab-forward side. Refer to the draper header operator's manual for further information.

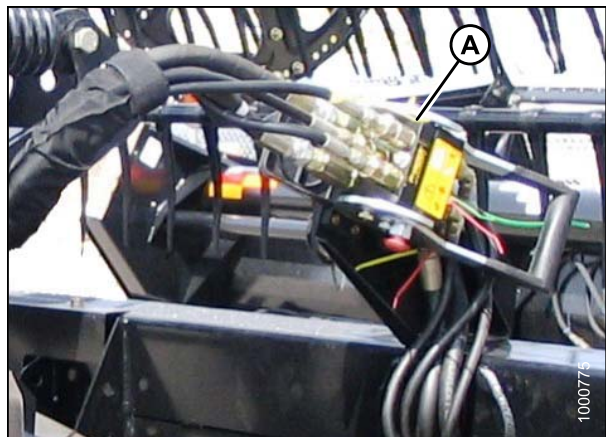


Figure 4.157: Reel Hydraulics

CAUTION

Check to be sure all bystanders have cleared the area.

12. Start engine and activate header tilt up (A) and header tilt down (B) cylinder switches on ground speed lever (GSL) to release load on center-link cylinder.

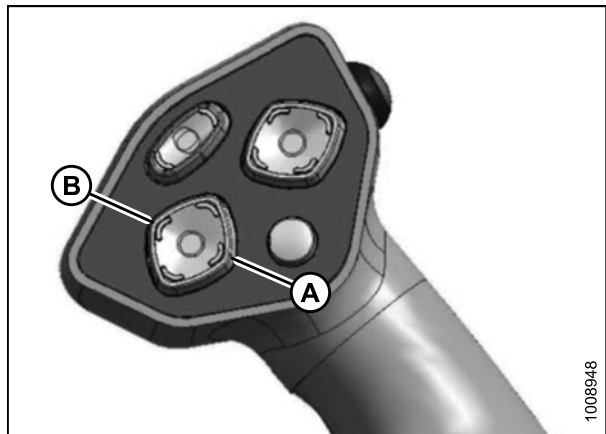


Figure 4.158: GSL

OPERATION

13. Disconnect center-link by lifting release (B) and lift hook (A) off header.

NOTE:

If optional center-link self-alignment kit is installed, lift release (B) and then operate the link lift cylinder with REEL UP switch on GSL to disengage the center-link from the header.

NOTE:

If hay conditioner is installed, watch clearances on both sides.

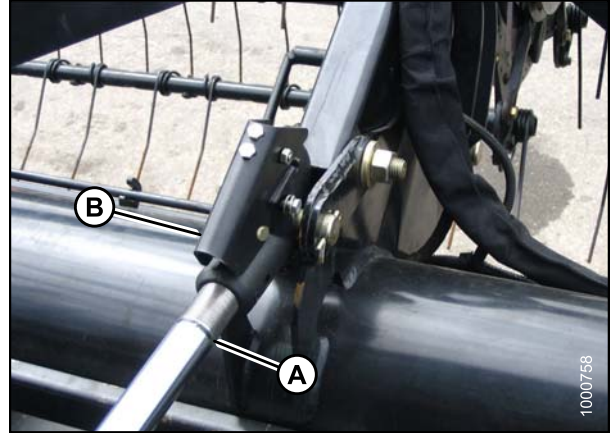


Figure 4.159: Hydraulic Center-Link

14. Reinstall pin (A) into header leg and secure with a hairpin (B).

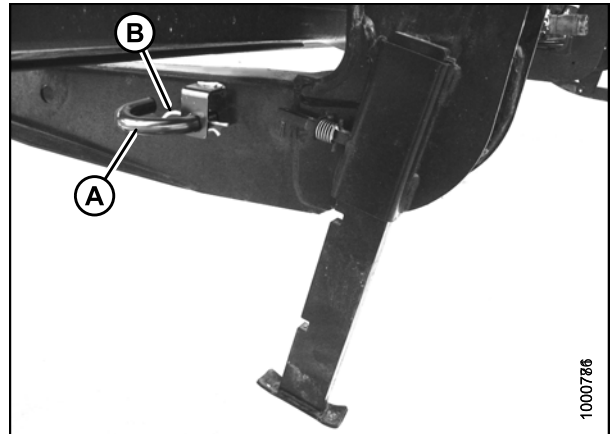


Figure 4.160: Header Stand

Detaching a D-Series Header: Mechanical Center-Link

To detach a D-Series header from an M-Series windrower equipped with mechanical center-link, follow these steps:

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Start engine and press HEADER UP (A) switch to raise header to maximum height.
2. If one end of the header does **NOT** raise completely, rephase the cylinders as follows:
 - a. Press and hold the HEADER UP (A) switch on the ground speed lever (GSL) until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are phased.
3. Stop engine and remove key.

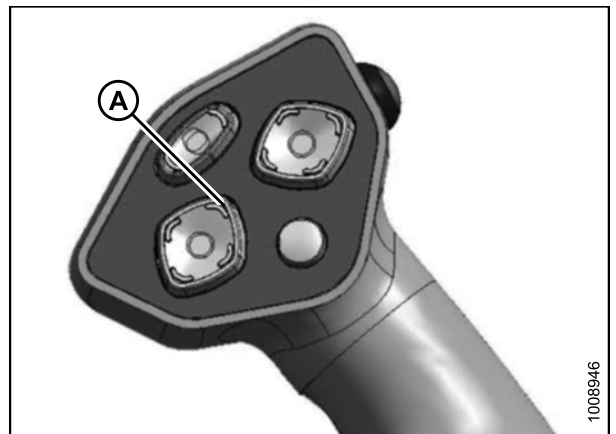


Figure 4.161: GSL

OPERATION

4. To engage the safety props, pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for the opposite cylinder.

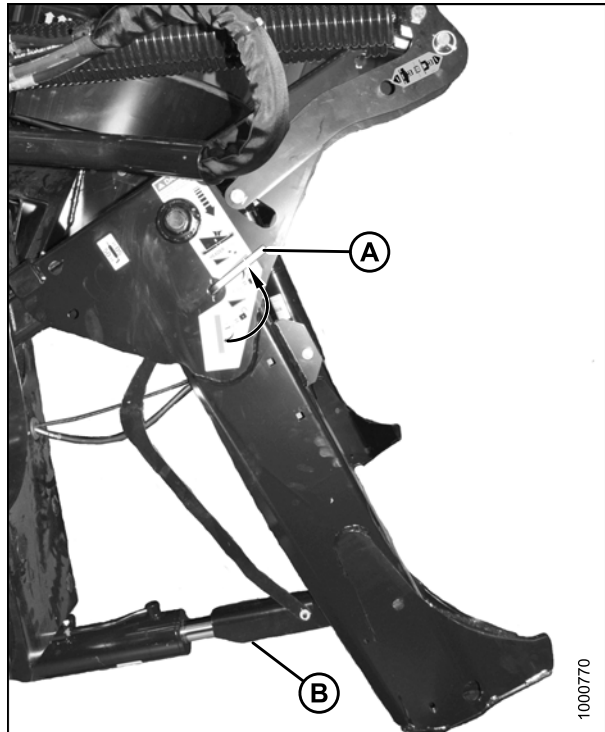


Figure 4.162: Safety Prop

5. Remove the clevis pin (B) by removing hairpin (A) from header leg on both sides.
6. Lower header stand (D) by pulling spring loaded pin (C). Release pin to lock stand.

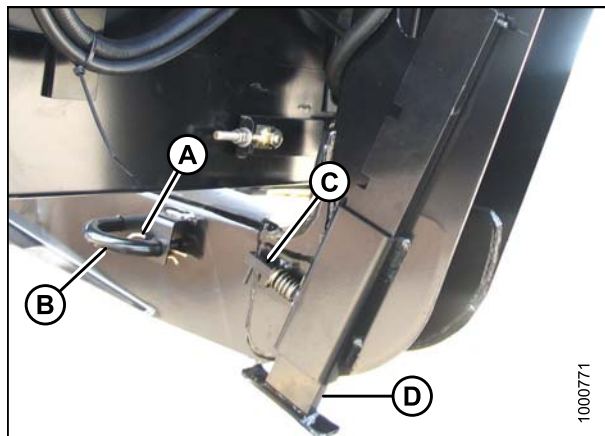


Figure 4.163: Header Stand

OPERATION

7. Remove the clevis pin from location (A) to disengage float springs and insert in storage hole (B). Secure with lynchpin.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

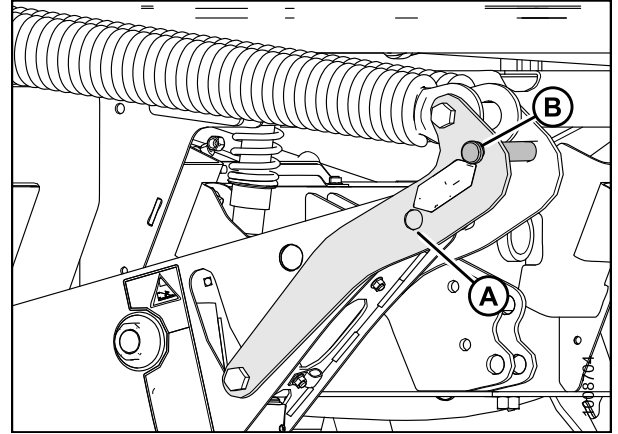


Figure 4.164: Header Float Linkage

8. Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
9. Start engine, choose a level area, and lower header to the ground. Stop engine and remove key.

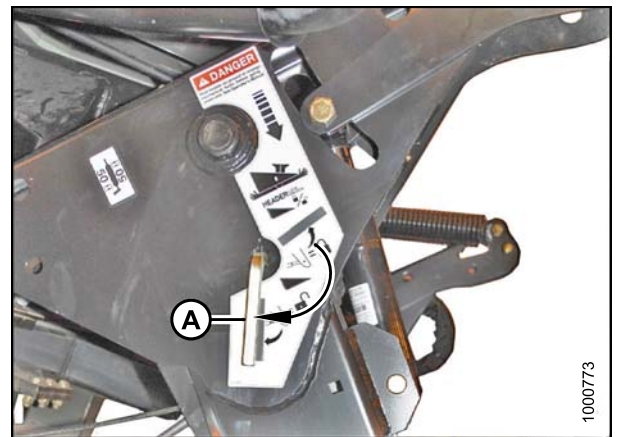


Figure 4.165: Safety Prop

10. Disconnect header drive hydraulics (A) and electrical harness (B) from header and store in support on windrower left cab-forward side. Refer to the draper header operator's manual for further information.

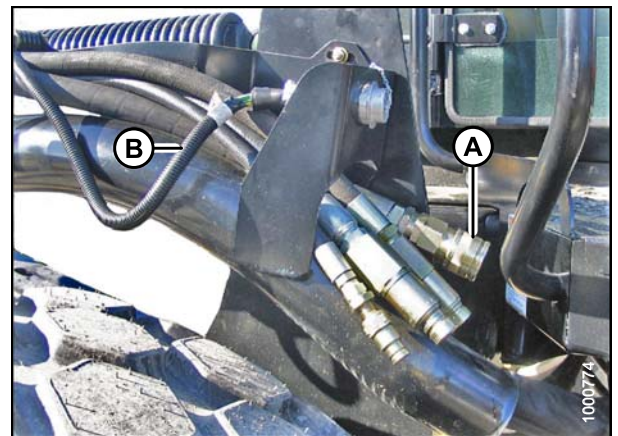


Figure 4.166: Header Drive Hydraulics

OPERATION

11. Disconnect reel hydraulics (A) from header and store on bracket at windrower left cab-forward side. Refer to the draper header operator's manual for further information.

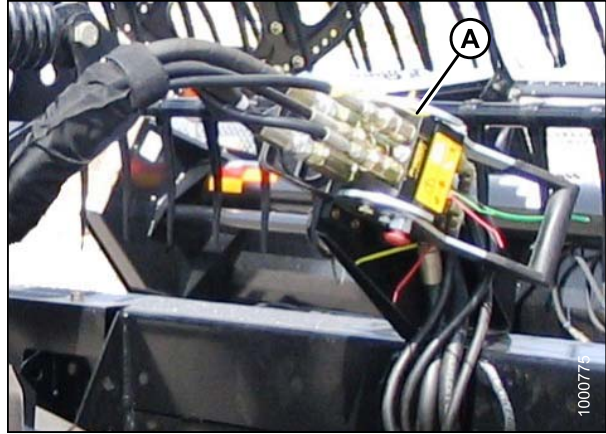


Figure 4.167: Reel Hydraulics

12. Loosen nut (A) and rotate barrel (B) to relieve load on link.
13. Remove cotter pin on clevis pin (D) and remove the pin (C) to disconnect from windrower. Reinstall clevis pin (C) in header.
14. Tighten nut (A) against barrel. A slight tap with a hammer is sufficient.

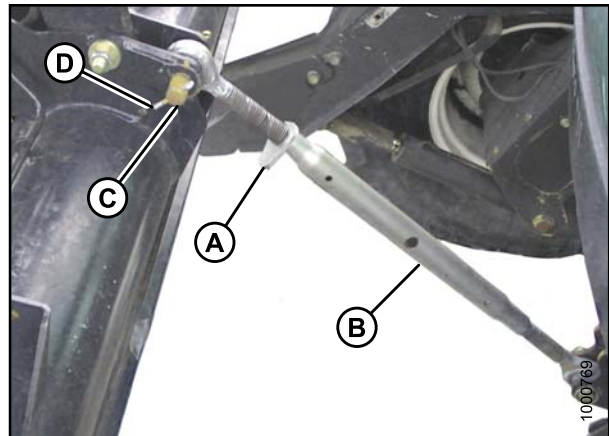


Figure 4.168: Mechanical Center-Link

15. Reinstall pin (A) into header leg and secure with a hairpin (B).

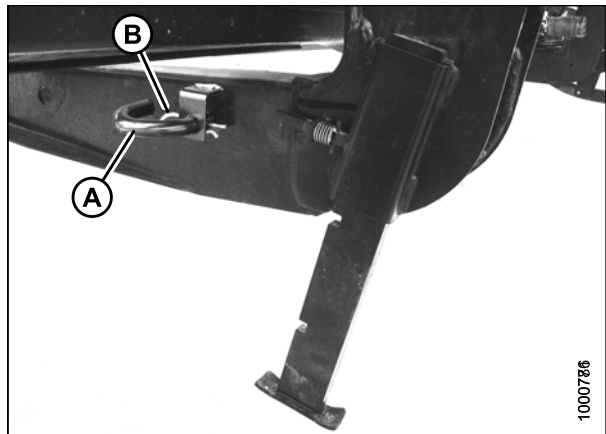


Figure 4.169: Header Leg

4.5.3 Attaching an A-Series Header

A30-D, A30-S, and A40-D headers can be attached to an M155 or M205 Self-Propelled Windrower. For attachment procedure, refer to the section for your specific windrower model.

Refer to the following instructions based on the type of center-link installed on your windrower:

- [*Hydraulic Link with Optional Self-Alignment Kit, page 238*](#)
- [*Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment, page 238*](#)
- [*Attaching an A-Series Header: Mechanical Center-Link, page 245*](#)

OPERATION

Hydraulic Link with Optional Self-Alignment Kit

1. Adjust position of the center-link cylinder with the reel up (A), reel down (B), header tilt up (C), and header tilt down (D) switches on the ground speed lever (GSL) to position the hook above the header attachment pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

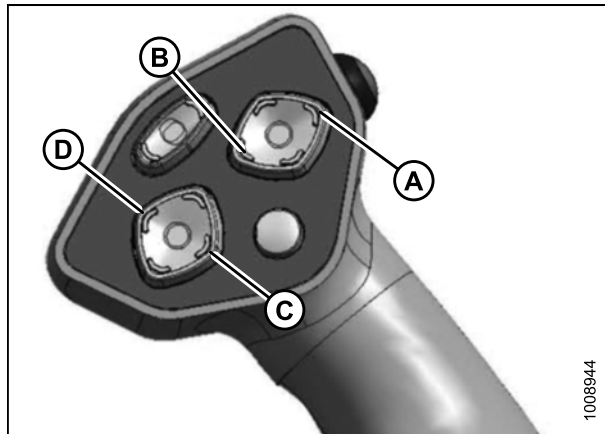


Figure 4.170: GSL

2. Lower center-link (A) onto the header with reel down switch until it locks into position (hook release [B] is down).
3. Check that center-link is locked onto header by pressing the reel up switch on the GSL.

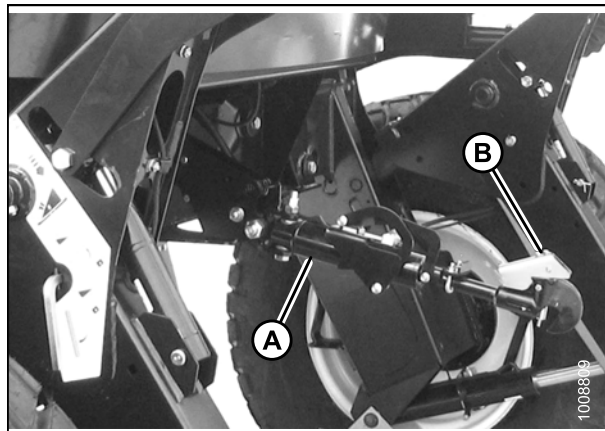


Figure 4.171: Hydraulic Center-Link

Attaching an A-Series Header: Hydraulic Center-Link without Self-Alignment

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

OPERATION

1. Remove hairpin (A) from clevis pin (B) and remove clevis pin from the header boots (C) on both sides of the header.

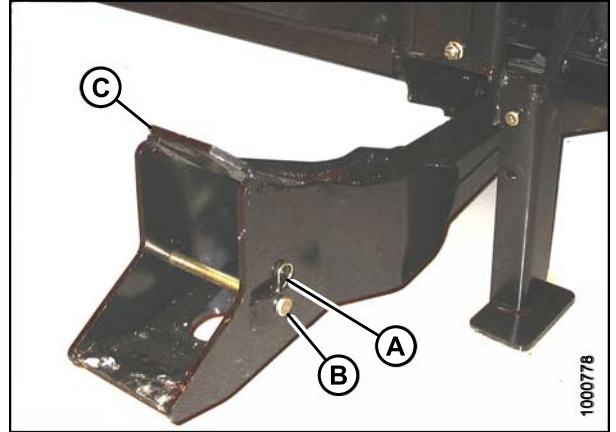


Figure 4.172: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

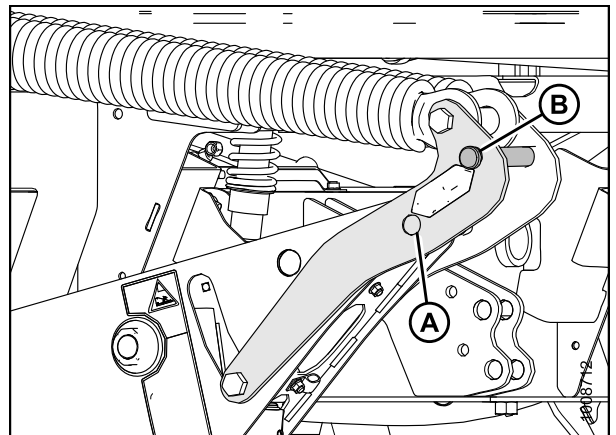


Figure 4.173: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate the header down button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

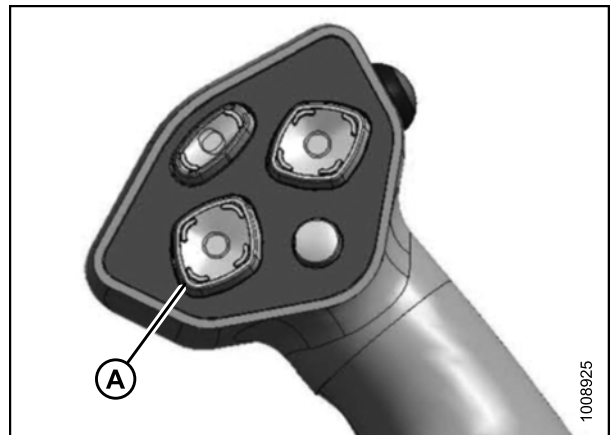


Figure 4.174: GSL

OPERATION

3. Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

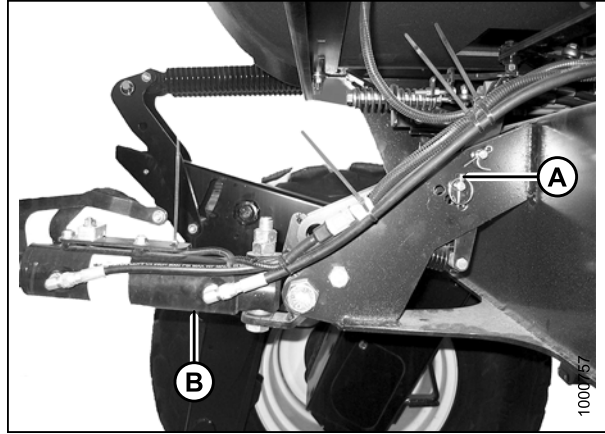


Figure 4.175: Hydraulic Center-Link without Self-Alignment Kit

4. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

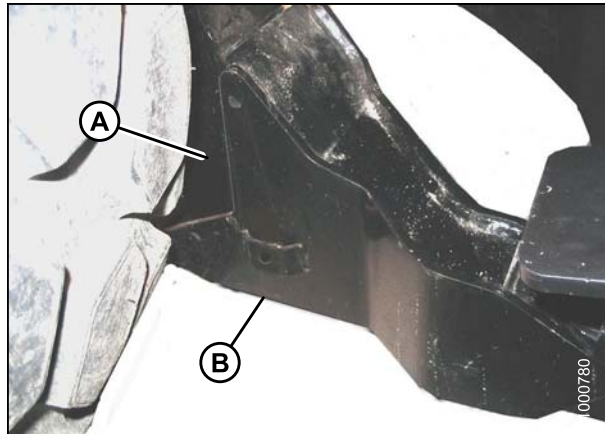


Figure 4.176: Header Boot

5. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Header tilt up (A) to retract center-link
 - Header tilt down (B) to extend center-link
6. Stop engine and remove key from ignition.

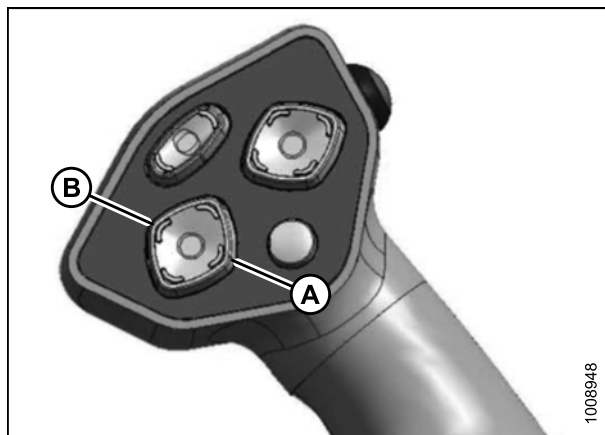


Figure 4.177: GSL

OPERATION

7. Push down on rod end of link cylinder (B) until hook engages and locks onto header pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

8. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

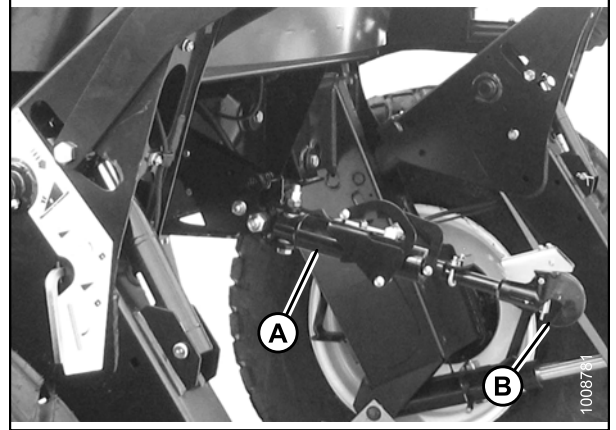


Figure 4.178: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

9. Start the engine.
10. Press the header up switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- a. Press and hold the header up switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

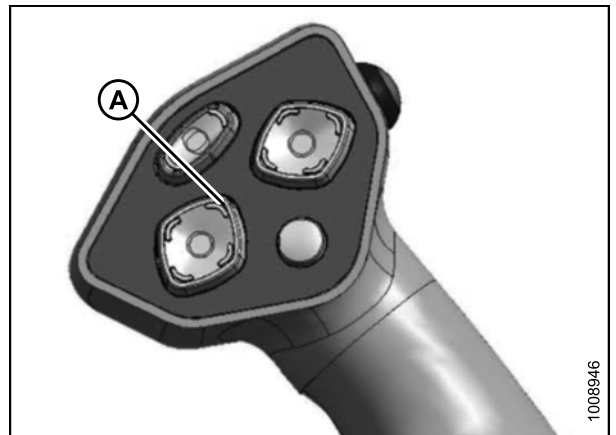


Figure 4.179: GSL

OPERATION

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

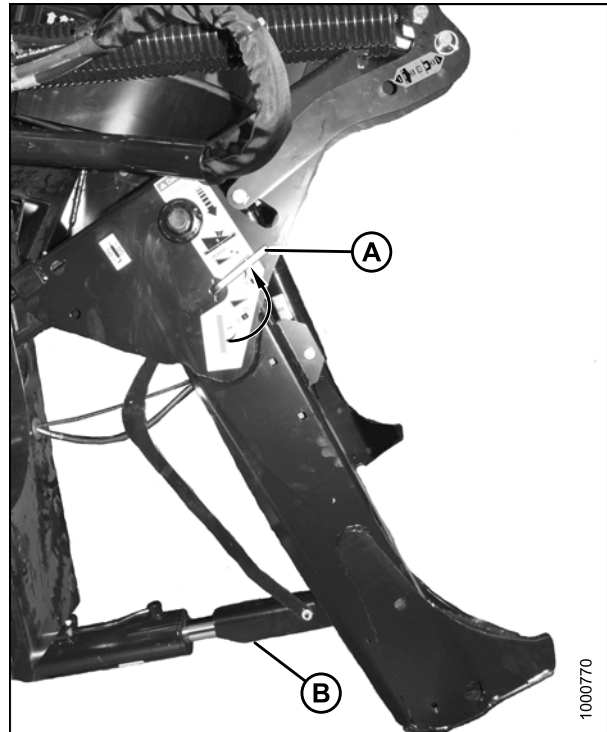


Figure 4.180: Safety Prop

12. Install clevis pin (A) through boot and foot and secure with hairpin. Repeat for opposite boot.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

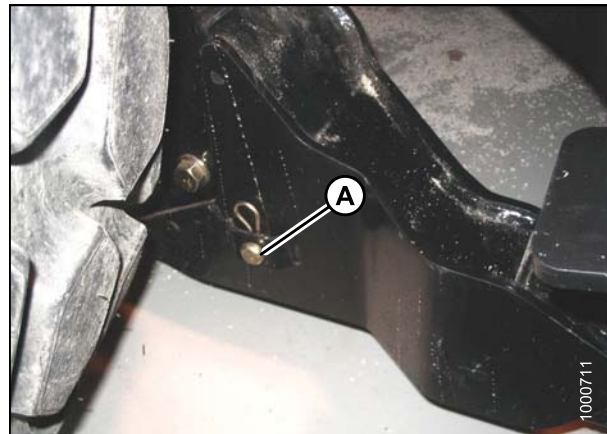


Figure 4.181: Header Boot

OPERATION

13. Remove lynch pin from clevis pin (A) in stand (B).
14. Hold stand (B) and remove pin (A).
15. Move stand (B) to storage position by inverting and relocating onto bracket as shown. Reinsert clevis pin (A) and secure with lynch pin.

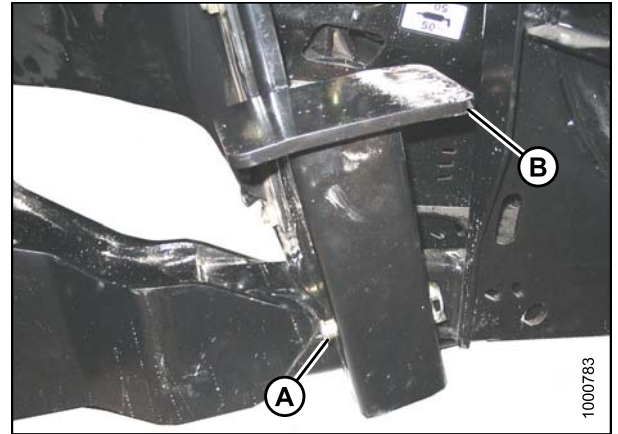


Figure 4.182: Header Stand

16. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

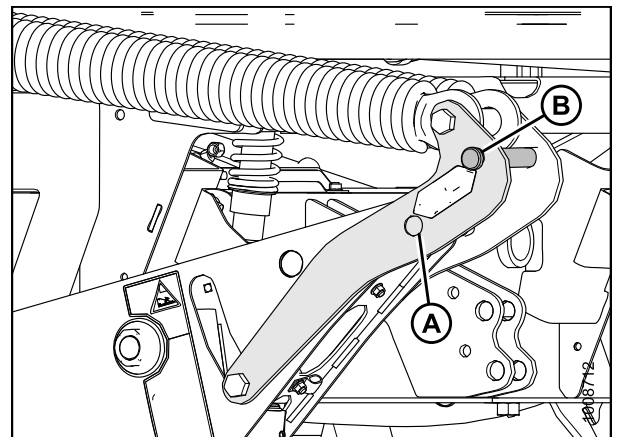


Figure 4.183: Header Float Linkage

17. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
18. Repeat for opposite safety prop.

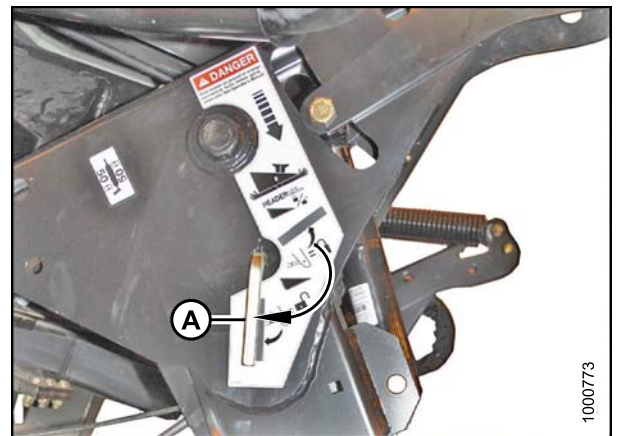


Figure 4.184: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

19. Start the engine and activate the header down switch (A) on the GSL to fully lower the header.
20. Stop engine and remove key from ignition.

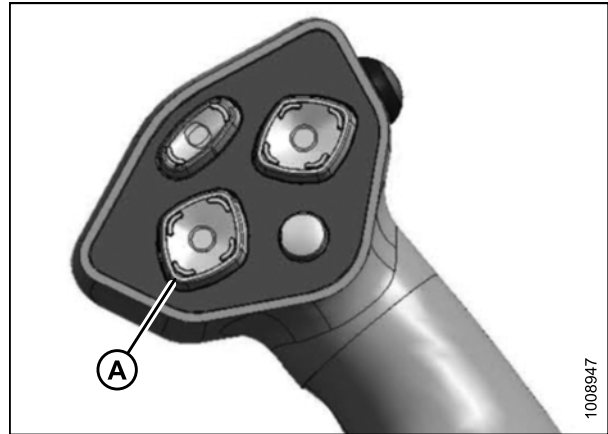


Figure 4.185: GSL

21. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the auger header operator's manual.

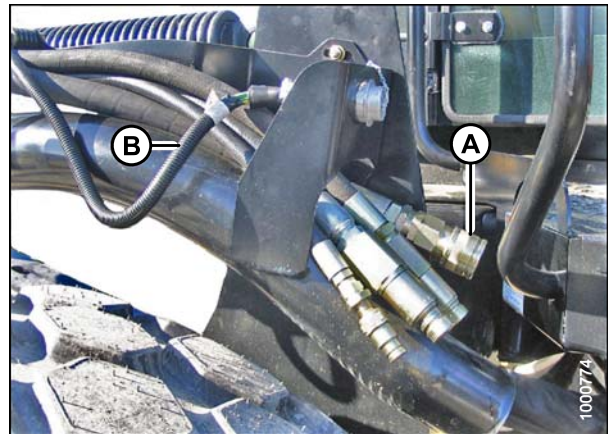


Figure 4.186: Header Drive Hoses and Harness

OPERATION

Attaching an A-Series Header: Mechanical Center-Link

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (A) from clevis pin (B) and remove clevis pin from the header boots (C) on both sides of the header.

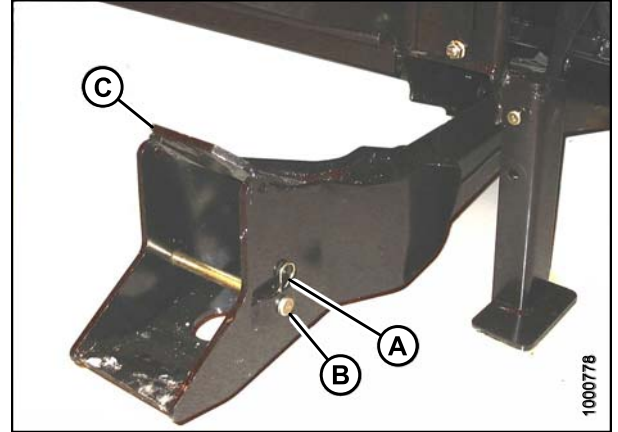


Figure 4.187: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

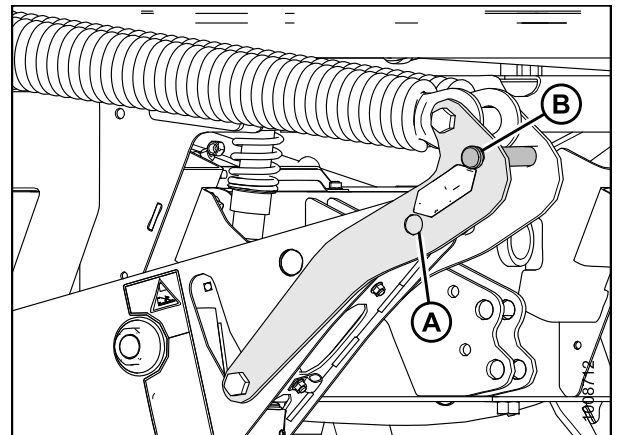


Figure 4.188: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate the header down button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

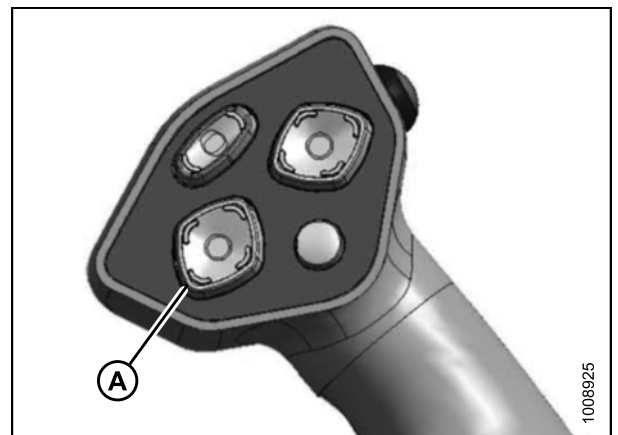


Figure 4.189: GSL

OPERATION

3. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

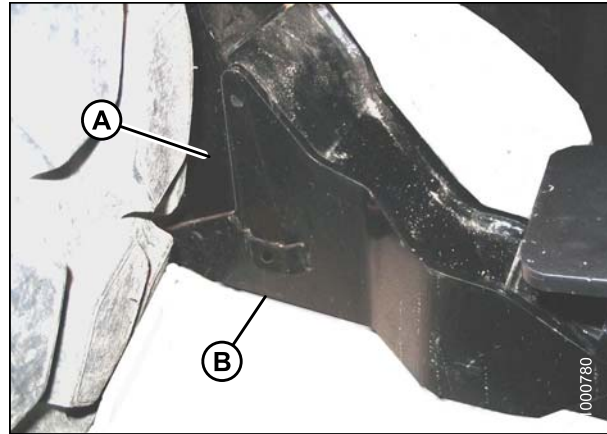


Figure 4.190: Header Boot

4. Stop engine and remove key from ignition.
5. Loosen nut (A) and rotate barrel (B) to adjust length until the link is aligned with the header bracket.
6. Install clevis pin (C) and secure with cotter pin (D).
7. Adjust length of link to achieve proper header angle by rotating barrel (B). Tighten nut (A) against barrel (a slight tap with a hammer is sufficient).

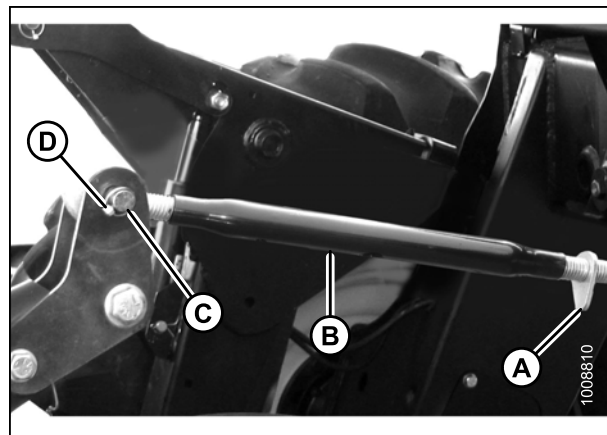


Figure 4.191: Mechanical Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

8. Start the engine.
9. Press the header up switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- a. Press and hold the header up switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.



Figure 4.192: GSL

OPERATION

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

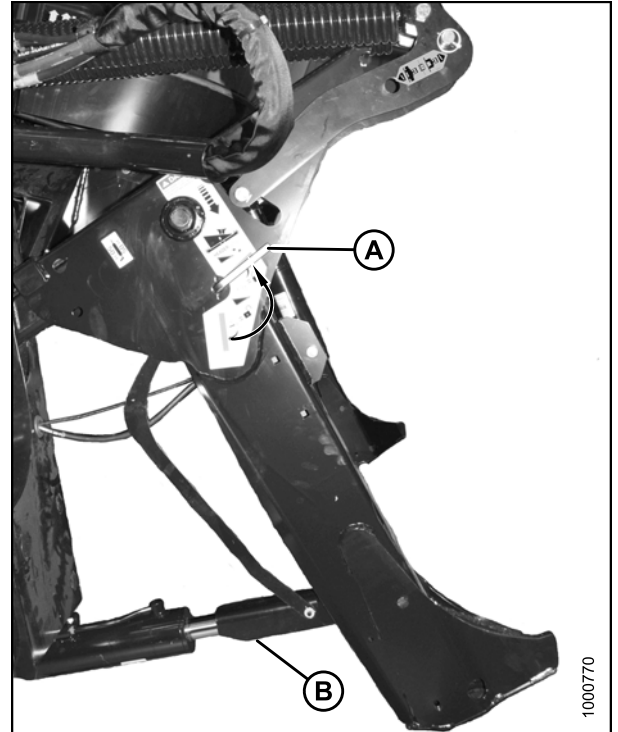


Figure 4.193: Safety Prop

11. Install clevis pin (A) through boot and foot and secure with hairpin. Repeat for opposite boot.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

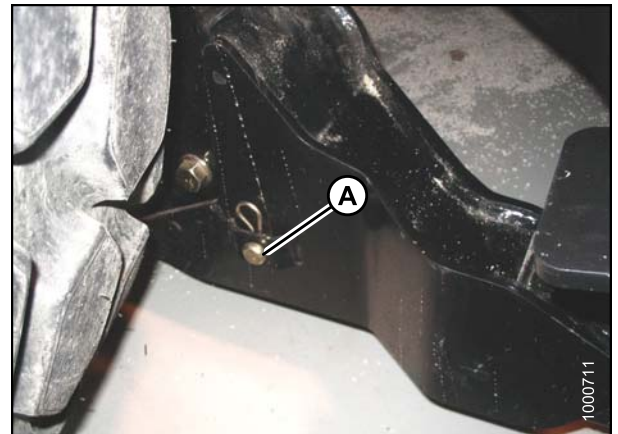


Figure 4.194: Header Boot

OPERATION

12. Remove lynch pin from clevis pin (A) in stand (B).
13. Hold stand (B) and remove pin (A).
14. Move stand (B) to storage position by inverting and relocating onto bracket as shown. Reinsert clevis pin (A) and secure with lynch pin.

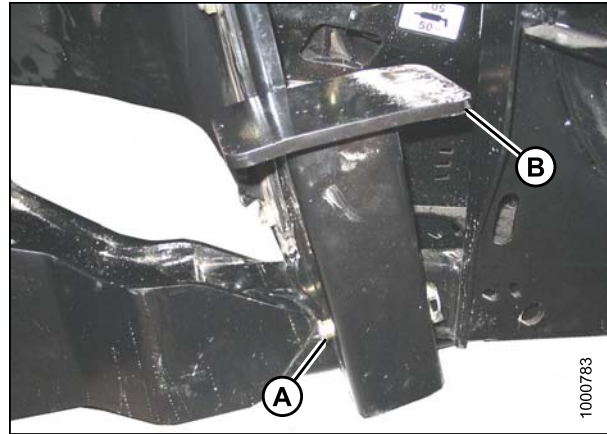


Figure 4.195: Header Stand

15. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

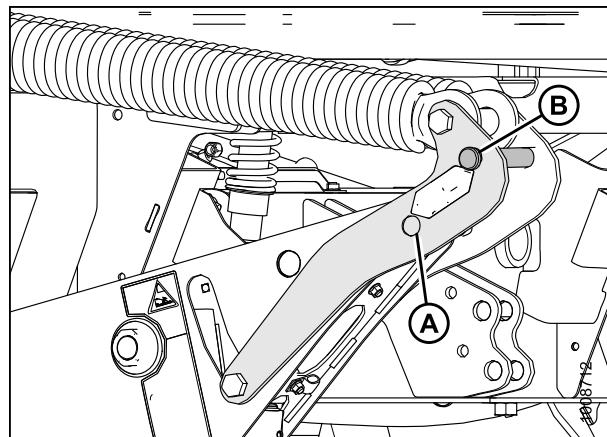


Figure 4.196: Header Float Linkage

16. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
17. Repeat for opposite safety prop.

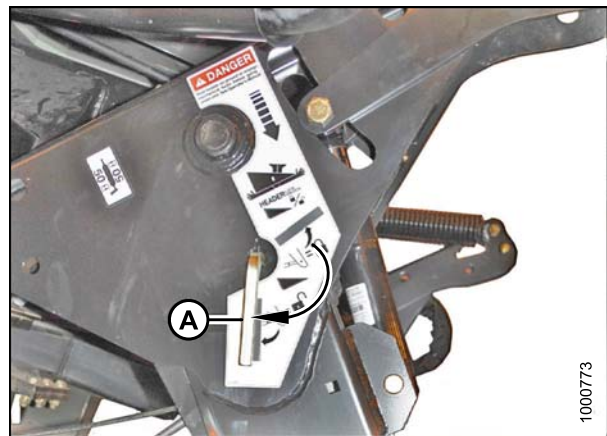


Figure 4.197: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

18. Start the engine and activate the header down switch (A) on the GSL to fully lower the header.
19. Stop engine and remove key from ignition.

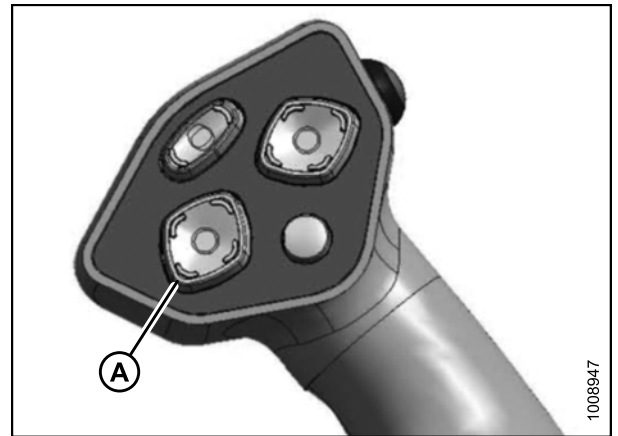


Figure 4.198: GSL

20. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the draper header operator's manual.

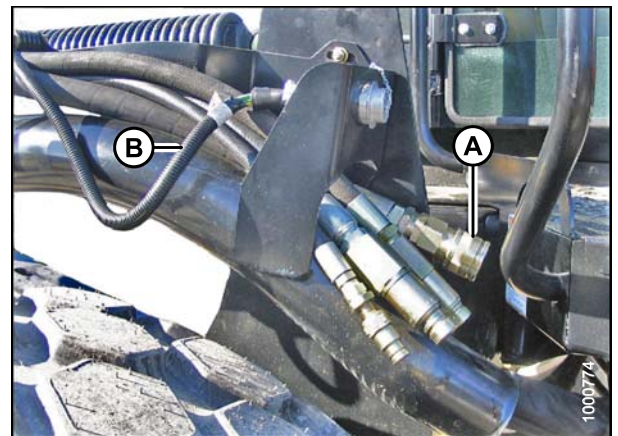


Figure 4.199: Header Drive Hoses and Harness

4.5.4 Detaching an A-Series Header

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Detaching an A-Series Header: Hydraulic Center-Link, page 250](#)
- [Detaching an A-Series Header: Mechanical Center-Link, page 253](#)

OPERATION

Detaching an A-Series Header: Hydraulic Center-Link

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key before making adjustments to the machine.

1. Start engine and press header up button (A) on ground speed lever (GSL) to raise header to maximum height.
2. If one end of the header does **NOT** raise fully, rephase the cylinders as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.
3. Stop engine and remove key.

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.



Figure 4.200: GSL

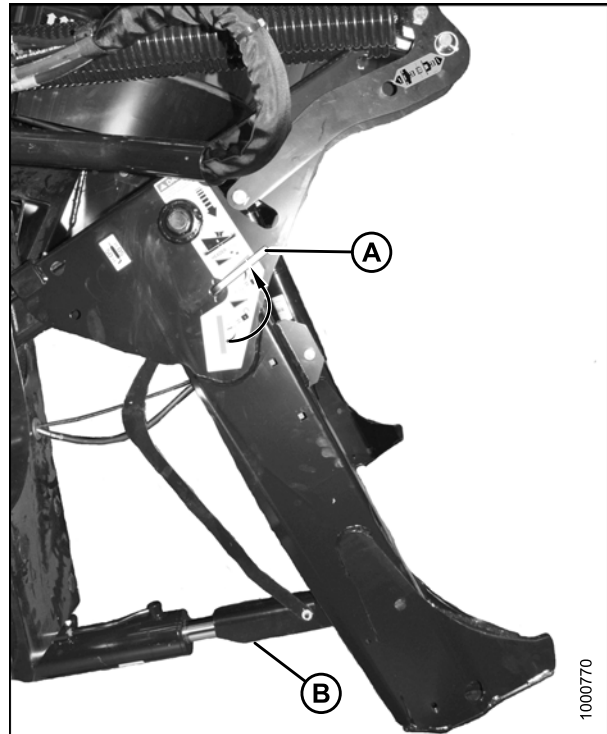


Figure 4.201: Safety Prop

OPERATION

5. Remove hairpin from the clevis pin (A) and remove clevis pin from header boots (B) on both sides.

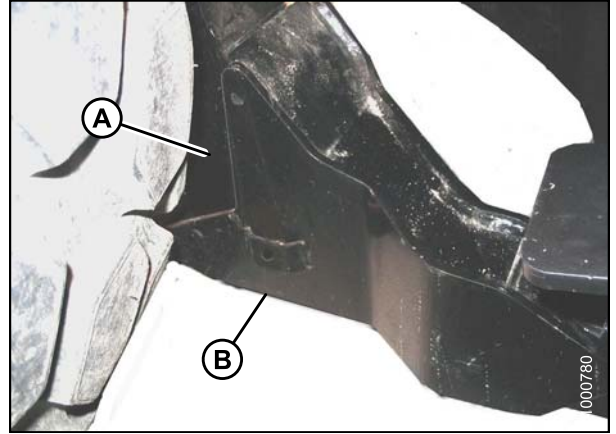


Figure 4.202: Header Boot

6. Lower stand (A) by pulling clevis pin (B), inverting stand, and relocating on bracket. Reinsert pin (B) and secure with hairpin.

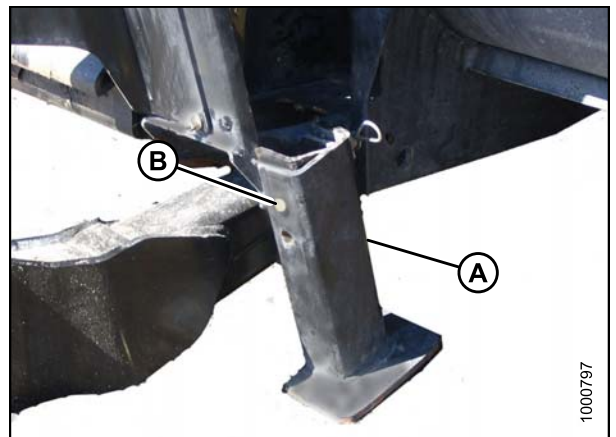


Figure 4.203: Header Stand

7. Remove clevis pin from linkage (A) to disengage float springs, and insert clevis pin into storage hole (B). Secure with lynch pin. Repeat for opposite linkage.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

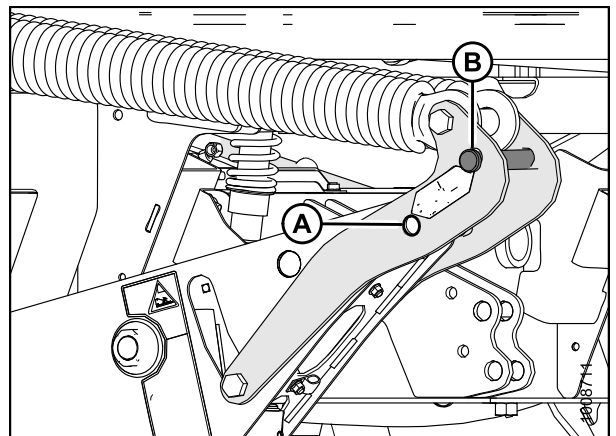


Figure 4.204: Header Float Linkage

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

8. Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
9. Start engine, choose a level area, and lower header to the ground.

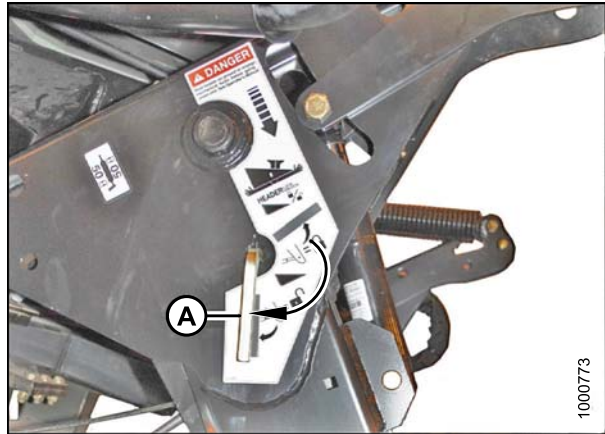


Figure 4.205: Safety Props

10. Activate header tilt up (A) and header tilt down (B) cylinder switches on GSL to release load on center-link cylinder.

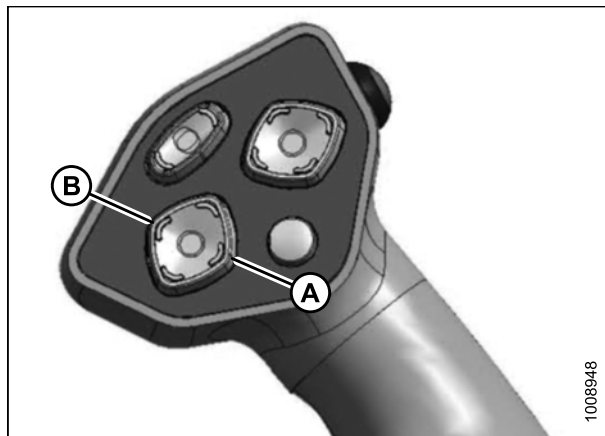


Figure 4.206: GSL

11. Stop engine and remove key from ignition.
12. Lift hook release (C) and lift hook (B) off header pin.

NOTE:

If optional center-link self-alignment kit is installed, lift release (C) and then operate the link lift cylinder with reel up switch on GSL to disengage the center-link from the header.

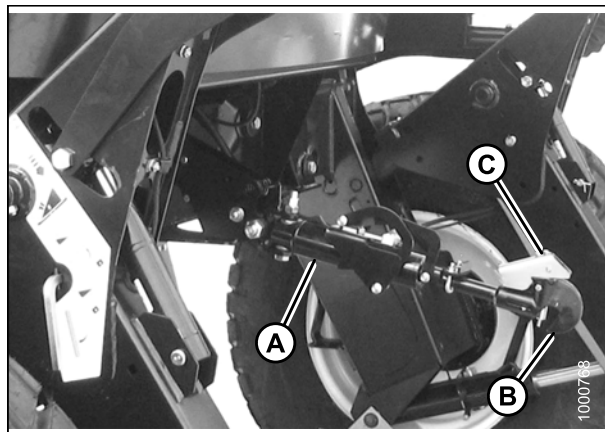


Figure 4.207: Hydraulic Center-Link

OPERATION

13. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the auger header operator's manual.
14. Back windrower slowly away from header.

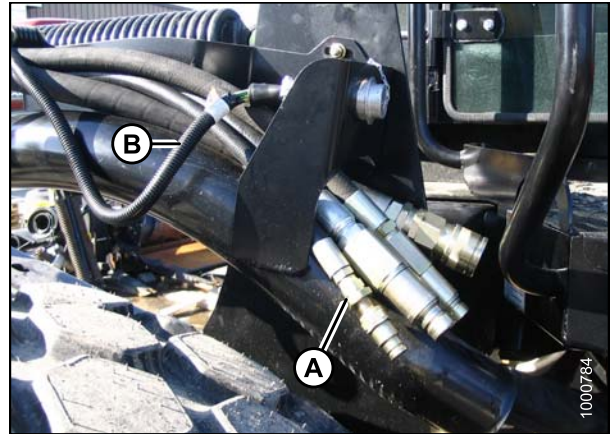


Figure 4.208: Header Drive Hydraulics

15. Reinstall clevis pin (B) into header boot (C) and secure with hairpin (A). Repeat for opposite side.

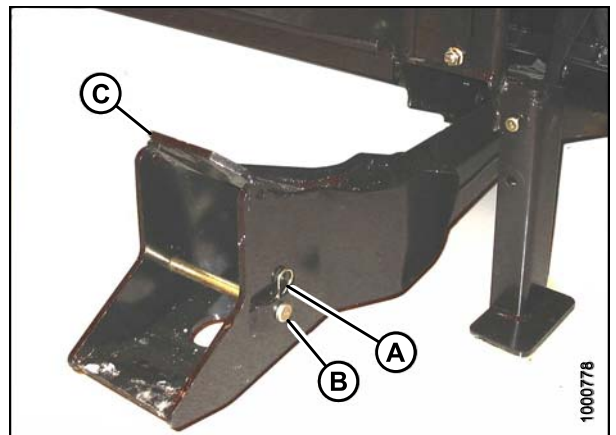


Figure 4.209: Header Boots

Detaching an A-Series Header: Mechanical Center-Link

WARNING

To avoid bodily injury or death from unexpected startup of machine, always stop engine, and remove key before making adjustments to machine.

1. Start engine and press header up button (A) on ground speed lever (GSL) to raise header to maximum height.
2. If one end of the header does **NOT** raise fully follow these steps to rephase the cylinders:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are phased.
3. Stop engine and remove key.

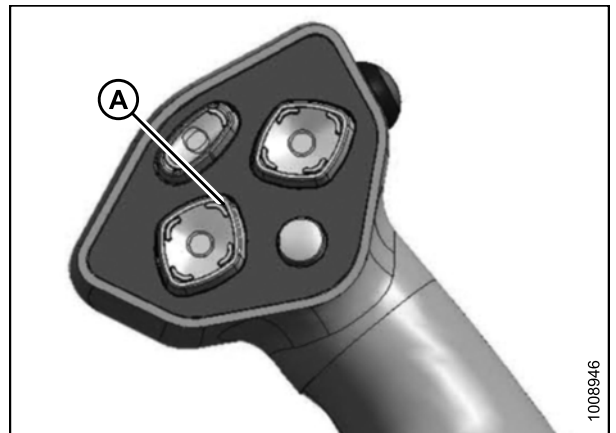


Figure 4.210: GSL

OPERATION

DANGER

To avoid bodily injury from fall of raised header, always engage safety props when working on or around raised header, and before going under header for any reason.

4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.

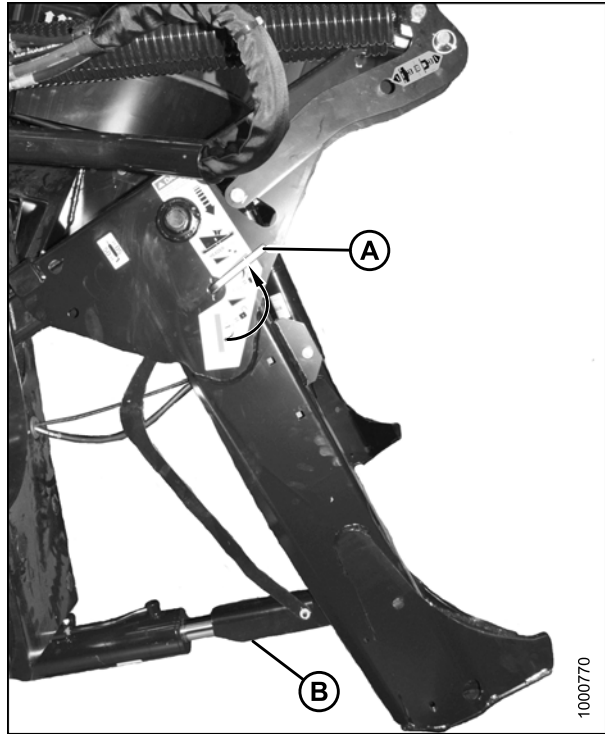


Figure 4.211: Safety Prop

5. Remove hairpin from clevis pin (A) and remove clevis pin from the left and right header boots (B).

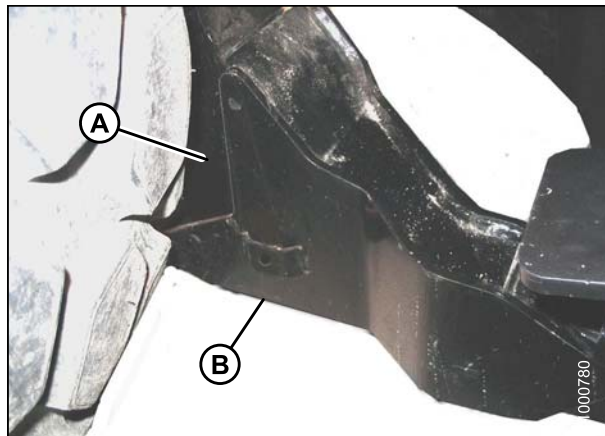


Figure 4.212: Header Boot

OPERATION

6. Lower the header stand (A) by pulling clevis pin (B), inverting stand, and relocating on bracket. Reinsert clevis pin (B) and secure with hairpin.

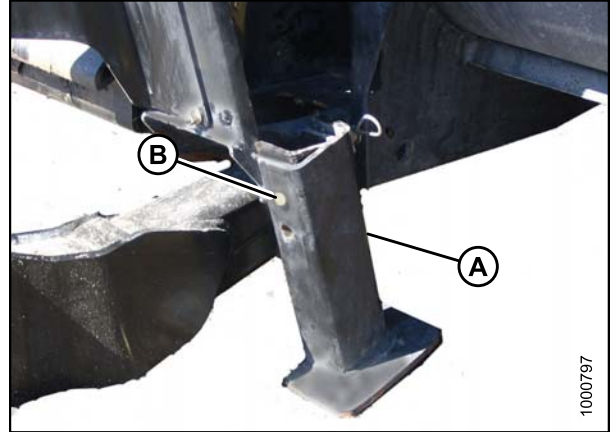


Figure 4.213: Header Stand

7. Remove clevis pin from linkage (A) to disengage float springs and insert in storage hole (B). Secure with lynch pin. Repeat for opposite linkage.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

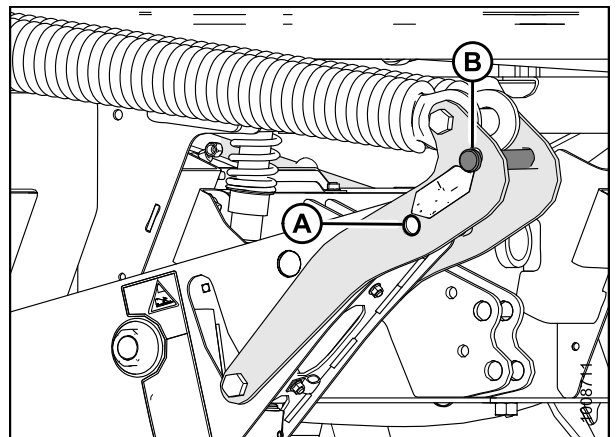


Figure 4.214: Header Float Linkage

8. Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
9. Start engine, choose a level area, and lower header to the ground. Stop engine and remove key.

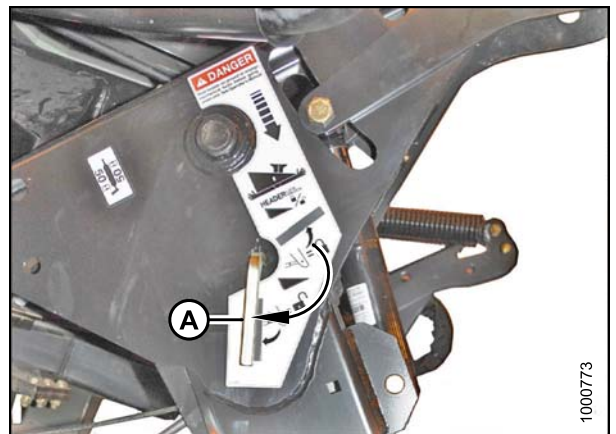


Figure 4.215: Safety Prop

OPERATION

10. Loosen nut (A) and rotate barrel (B) to relieve load on link.
11. Remove cotter pin (D) on clevis pin (C) and remove pin to disconnect from header.
12. Reinstall clevis pin in header.

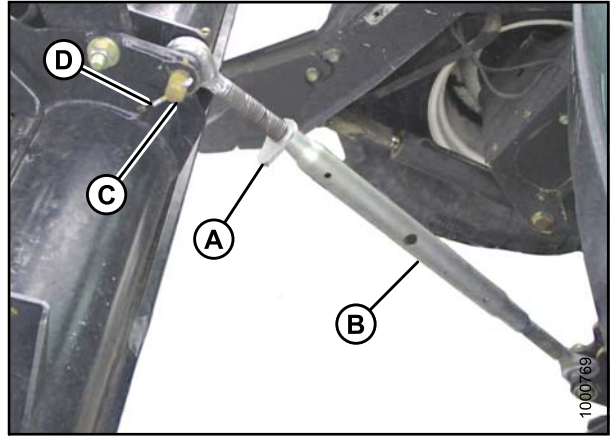


Figure 4.216: Mechanical Center-Link

13. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the auger header operator's manual.
14. Slowly back windrower away from header.

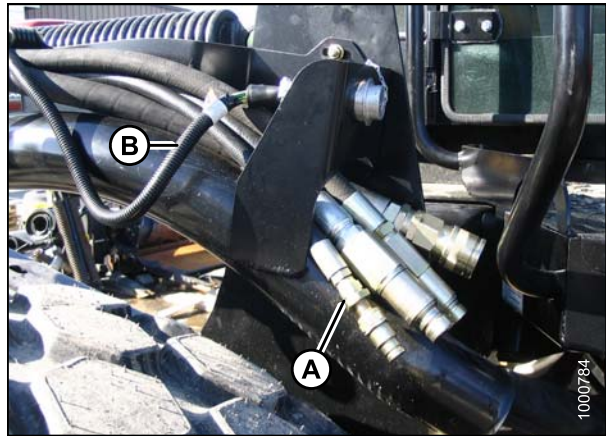


Figure 4.217: Header Drive Hydraulics

15. Reinstall clevis pin (B) and secure with hairpin (A) in header boot (C).
16. Repeat for the opposite side.

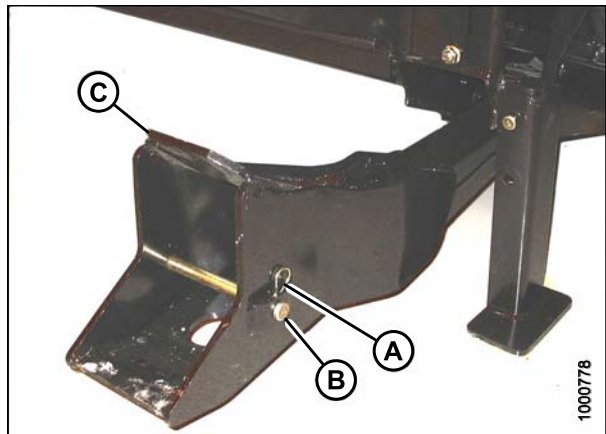


Figure 4.218: Header Boot

4.5.5 Attaching an R-Series Header

R-Series Rotary Disc Headers (R80 and R85) can be attached to an M155 or M205 Self-Propelled Windrower. For attachment procedure, refer to the section for your specific windrower model.

Refer to the following instructions based on the type of center-link installed on your windrower:

- [Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 257](#)
- [Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment, page 262](#)
- [Attaching an R-Series Header: Mechanical Center-Link, page 267](#)

Attaching an R-Series Header: Hydraulic Center-Link with Optional Self-Alignment

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (B) from clevis pin (A) and remove clevis pin from the header boots (C) on both sides of the header.

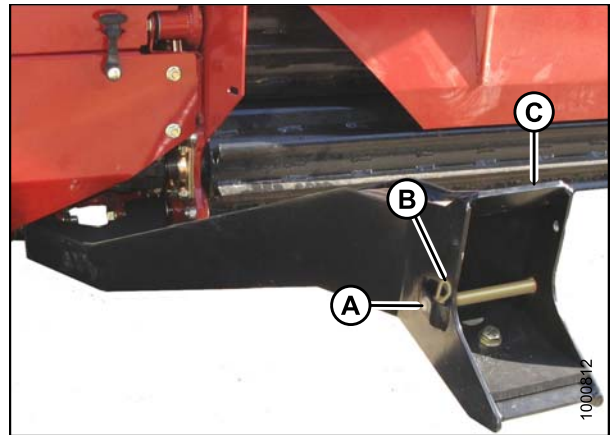


Figure 4.219: Header Boot

⚠ CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

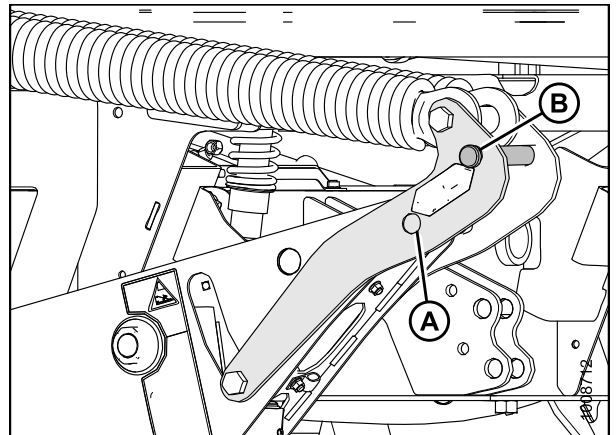


Figure 4.220: Header Float Linkage

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate the header down button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

3. Activate the reel up switch (A) on the GSL to raise the center-link until the hook is above the attachment pin on the header.

4. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

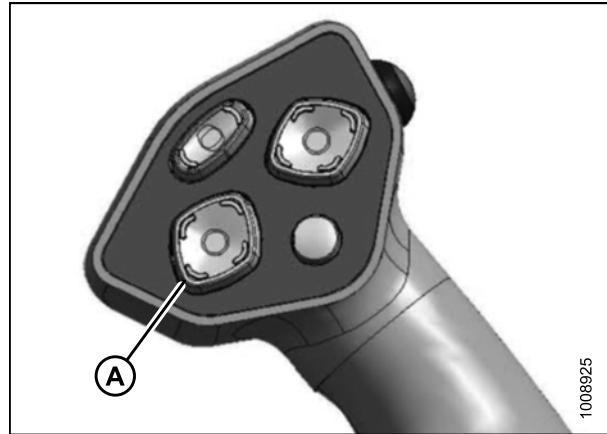


Figure 4.221: GSL

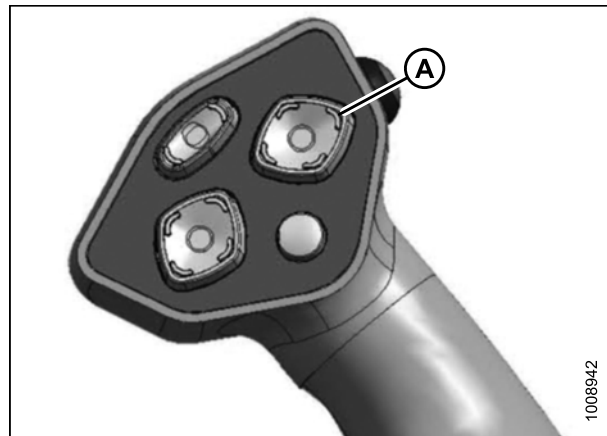


Figure 4.222: GSL

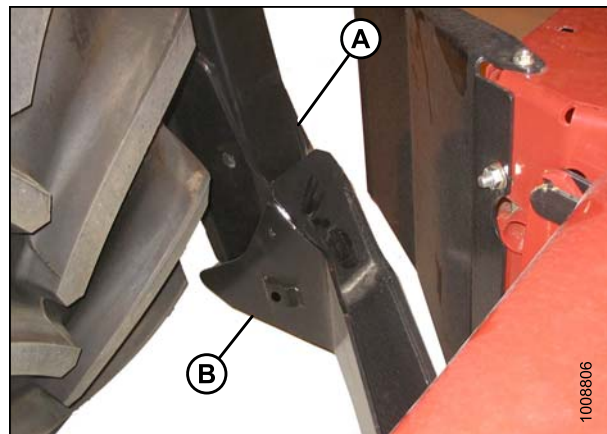


Figure 4.223: Header Boot

OPERATION

- Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Reel up (A) to raise the center-link
 - Reel down (B) to lower the center-link
 - Header tilt up (C) to retract the center-link
 - Header tilt down (D) to extend the center-link

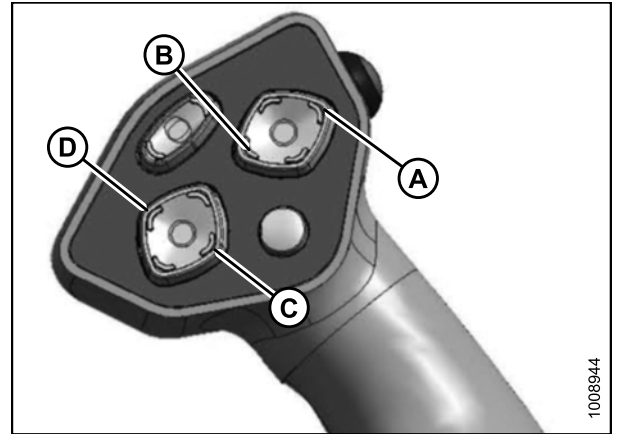


Figure 4.224: GSL

- Adjust position of the center-link cylinder (A) with the reel up and reel down switches on the GSL until the hook is positioned above the header attachment pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

- Lower center-link (A) onto the header with reel down switch until it locks into position (hook release [B] is down).
- Check that center-link is locked onto header by pressing the reel up switch on the GSL.

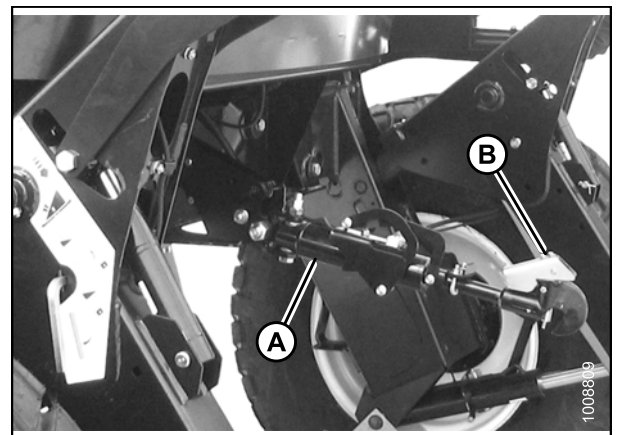


Figure 4.225: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

- Press the header up switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- Press and hold the header up switch until both cylinders stop moving.
- Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

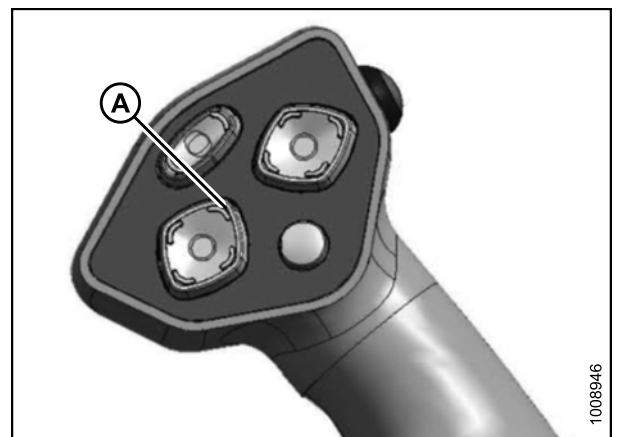


Figure 4.226: GSL

OPERATION

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

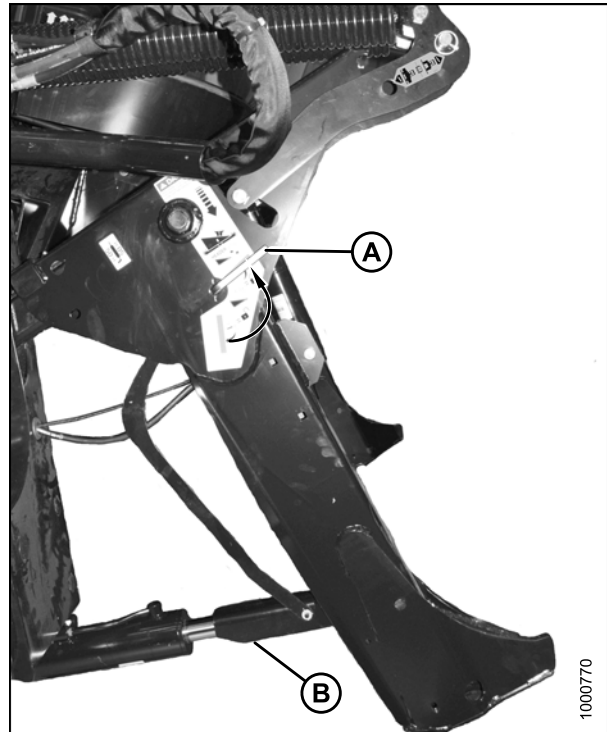


Figure 4.227: Safety Prop

11. Install clevis pin (A) through boot and foot and secure with hairpin (B). Repeat for opposite side.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

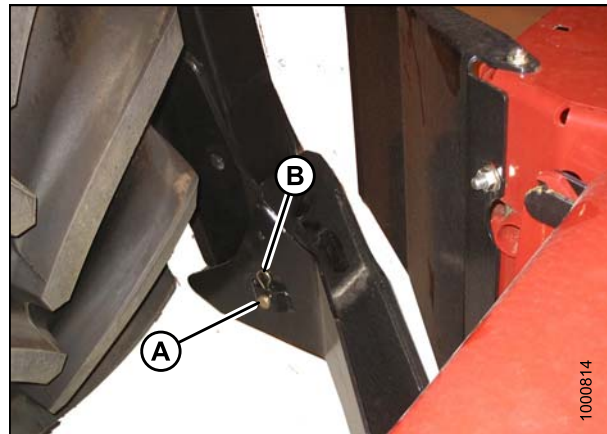


Figure 4.228: Header Boot

OPERATION

12. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

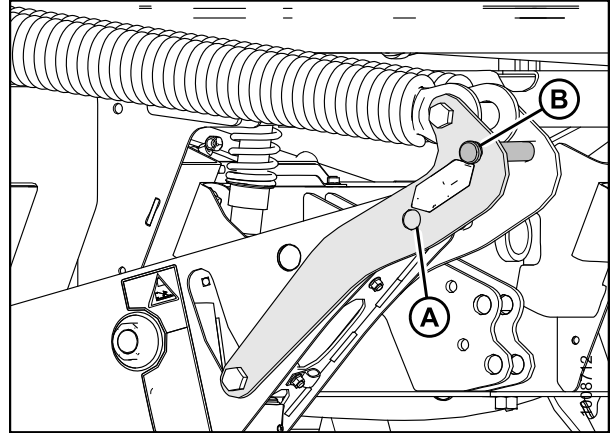


Figure 4.229: Header Float Linkage

13. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
14. Repeat for opposite safety prop.

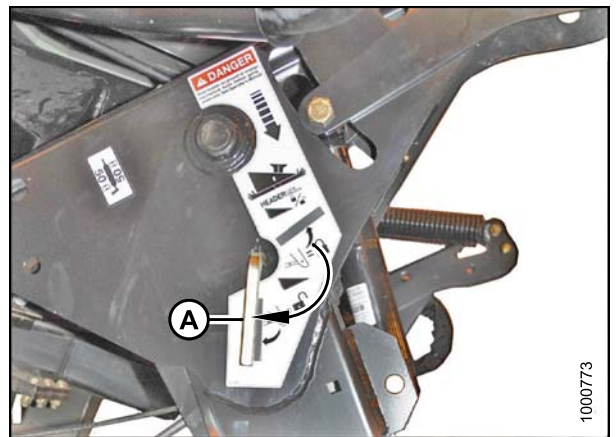


Figure 4.230: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

15. Start the engine and activate the header down switch (A) on the GSL to fully lower the header.
16. Stop engine and remove key from ignition.

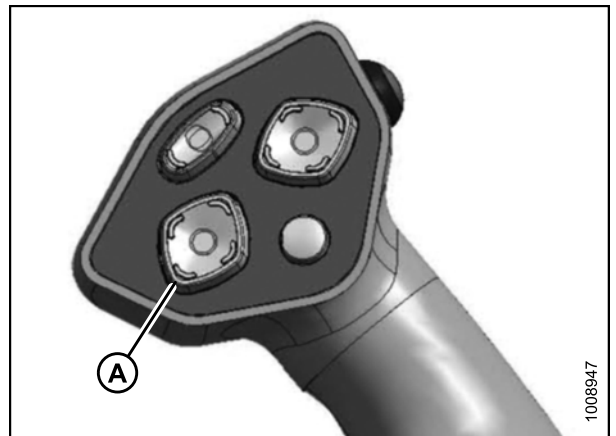


Figure 4.231: GSL

OPERATION

17. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

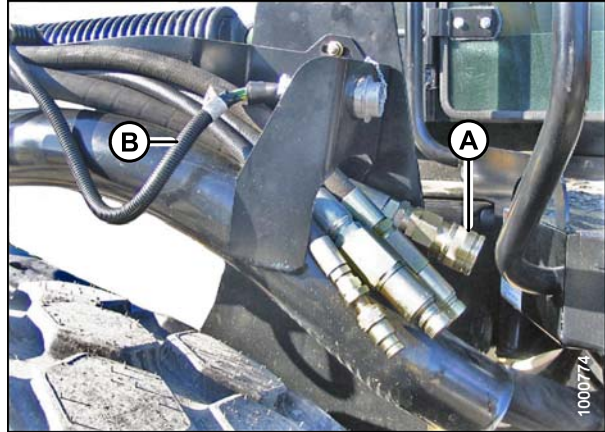


Figure 4.232: Header Drive Hoses and Harness

Attaching an R-Series Header: Hydraulic Center-Link without Self-Alignment

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (B) from clevis pin (A) and remove clevis pin from the header boots (C) on both sides of the header.

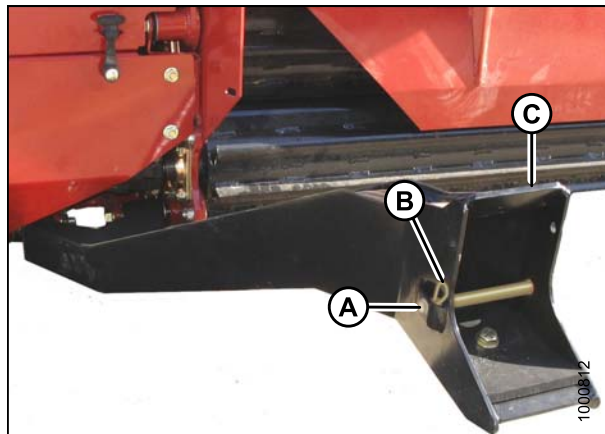


Figure 4.233: Header Boot

⚠ CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

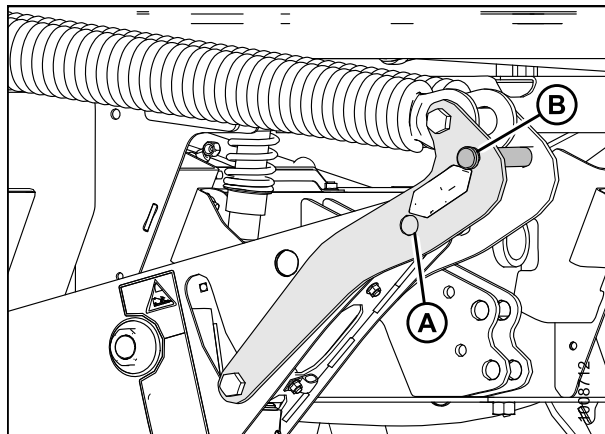


Figure 4.234: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate the header down button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

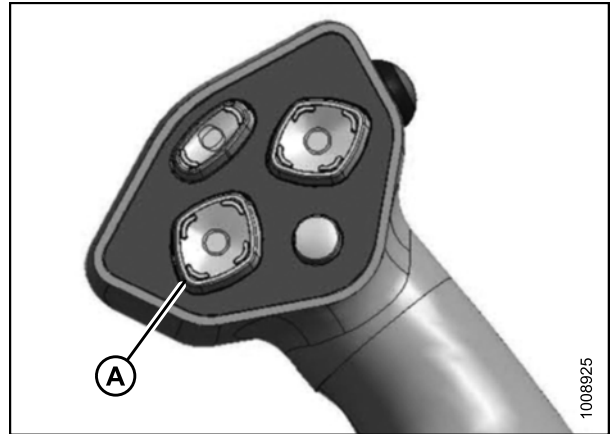


Figure 4.235: GSL

3. Relocate pin (A) in frame linkage as required to raise the center-link (B) until the hook is above the attachment pin on the header.

IMPORTANT:

If the center-link is too low, it may contact the header as the windrower approaches the header for hookup.

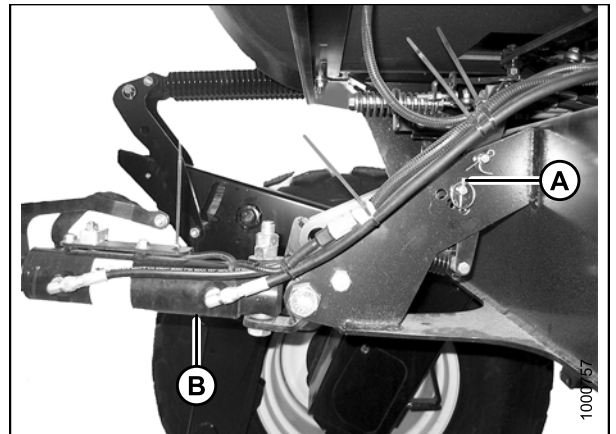


Figure 4.236: Hydraulic Center-Link without Self-Alignment Kit

4. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

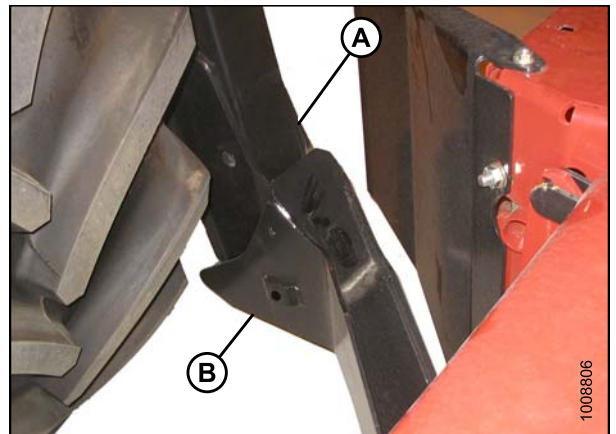


Figure 4.237: Header Boot

OPERATION

5. Use the following GSL functions to position the center-link hook above the header attachment pin:
 - Header tilt up (A) to retract the center-link
 - Header tilt down (B) to extend the center-link
6. Stop engine and remove key from ignition.

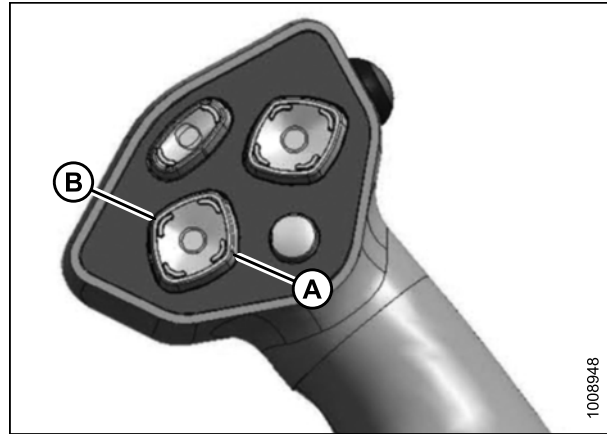


Figure 4.238: GSL

7. Push down on rod end of link cylinder (B) until hook engages and locks onto header pin.

IMPORTANT:

Hook release must be down to enable self-locking mechanism. If the release is open (up), manually push it down after hook engages header pin.

8. Check that center-link (A) is locked onto header by pulling upward on rod end (B) of cylinder.

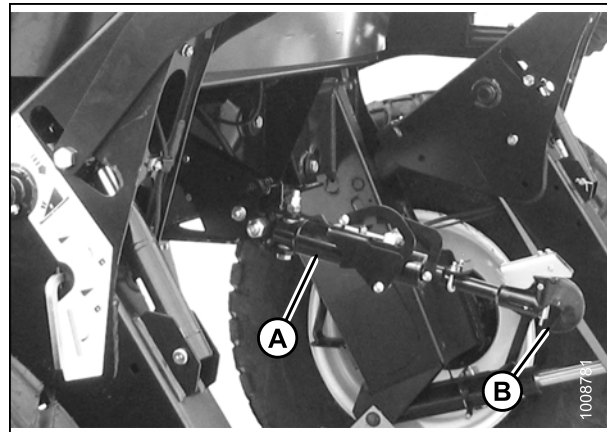


Figure 4.239: Hydraulic Center-Link

CAUTION

Check to be sure all bystanders have cleared the area.

9. Start the engine.
10. Press the header up switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- a. Press and hold the header up switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.



Figure 4.240: GSL

OPERATION

11. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

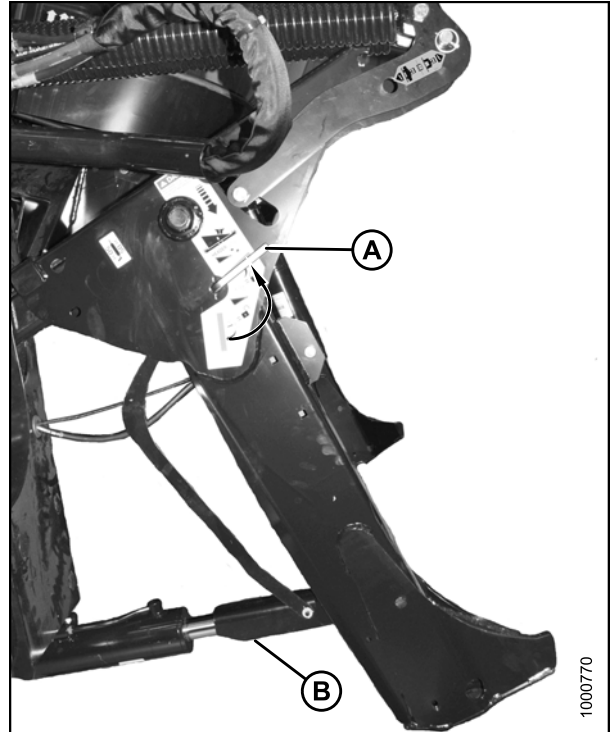


Figure 4.241: Safety Prop

12. Install clevis pin (A) through boot and foot and secure with hairpin (B). Repeat for opposite side.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

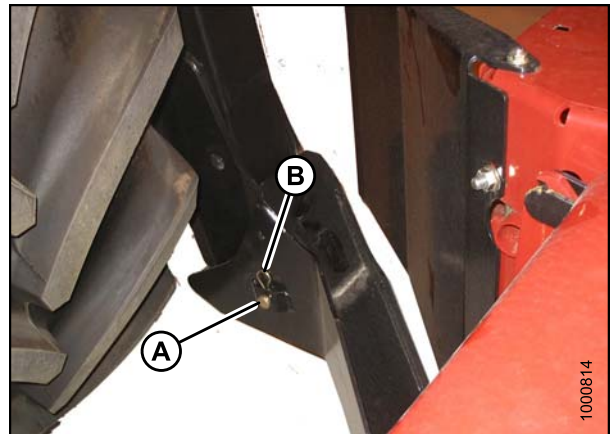


Figure 4.242: Header Boot

OPERATION

13. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

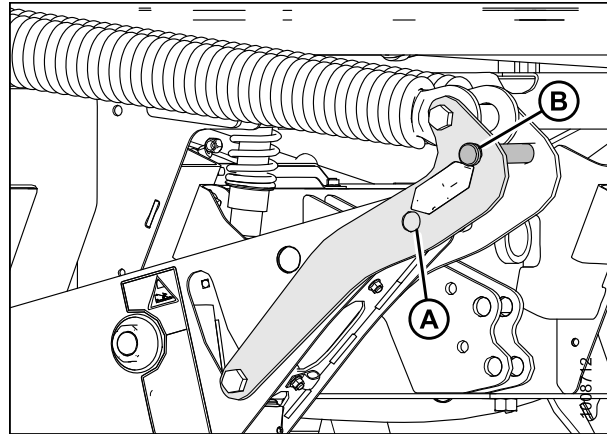


Figure 4.243: Header Float Linkage

14. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
15. Repeat for opposite safety prop.

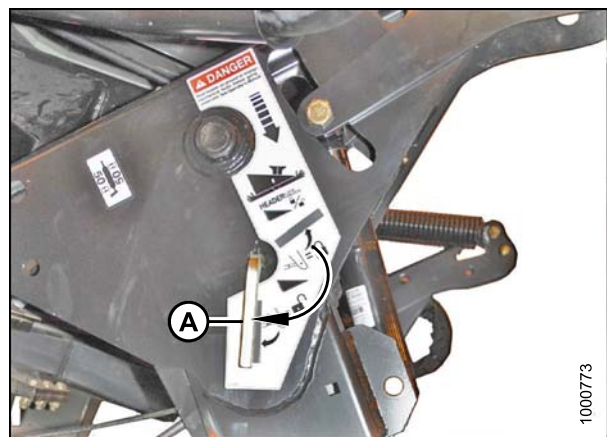


Figure 4.244: Safety Prop

CAUTION

Check to be sure all bystanders have cleared the area.

16. Start the engine and activate the header down switch (A) on the GSL to fully lower the header.
17. Stop engine and remove key from ignition.

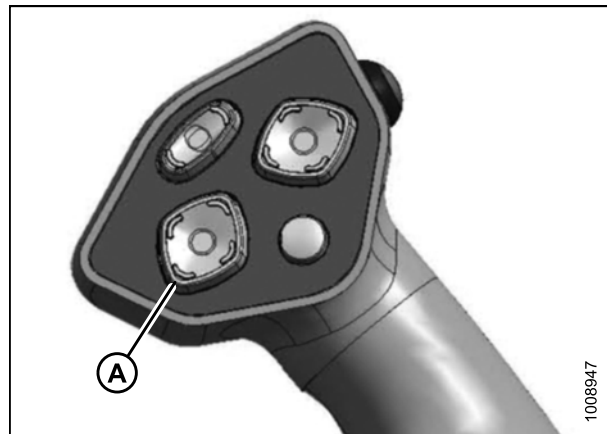


Figure 4.245: GSL

OPERATION

18. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

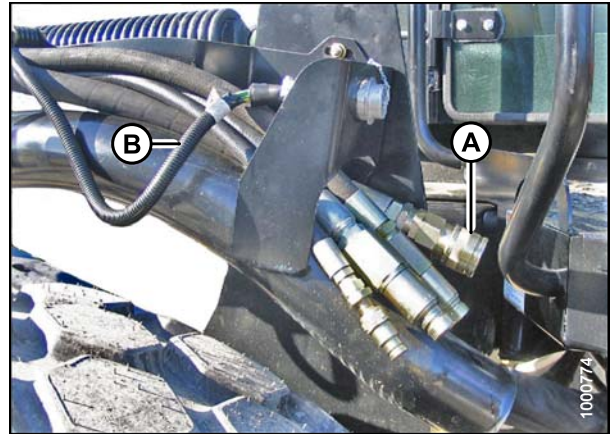


Figure 4.246: Header Drive Hoses and Harness

Attaching an R-Series Header: Mechanical Center-Link

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Remove hairpin (B) from clevis pin (A) and remove clevis pin from the header boots (C) on both sides of the header.

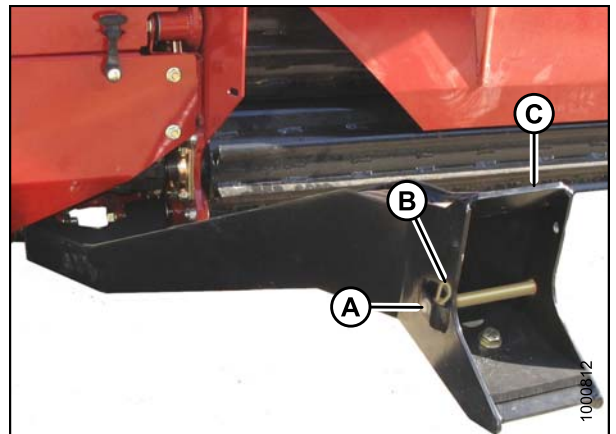


Figure 4.247: Header Boot

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

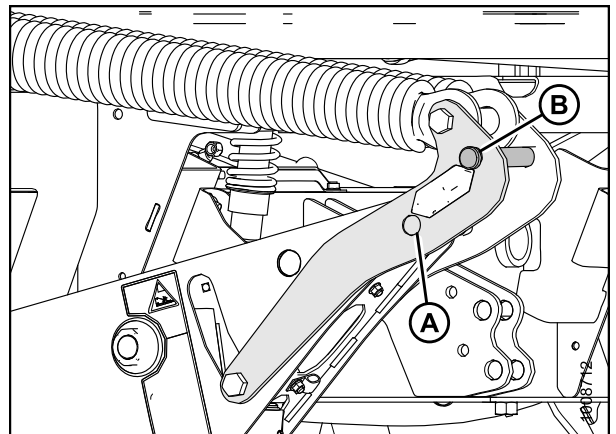


Figure 4.248: Header Float Linkage

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

IMPORTANT:

Remove protective cover from exhaust stack prior to starting engine.

2. Start the engine and activate the header down button (A) on the ground speed lever (GSL) to fully retract header lift cylinders.

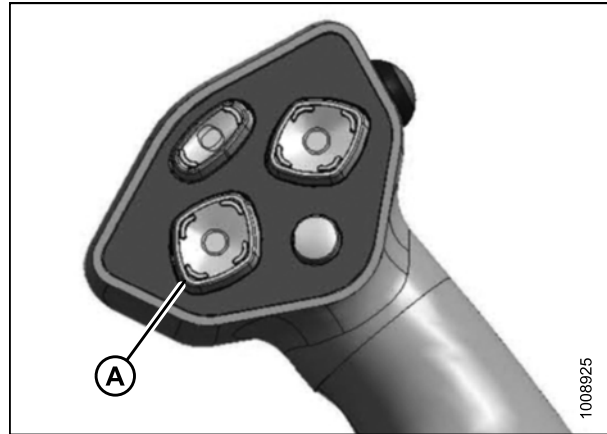


Figure 4.249: GSL

3. Drive the windrower slowly forward until the windrower feet (A) enter the header boots (B). Continue driving slowly forward until the feet engage the boots and the header nudges forward.

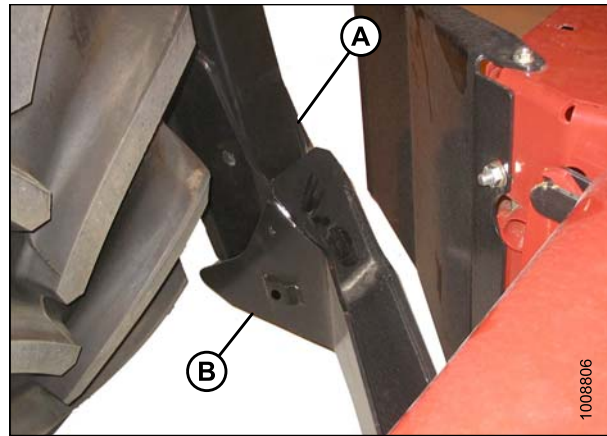


Figure 4.250: Header Boot

4. Stop engine and remove key from ignition.
5. Loosen nut (A) and rotate barrel (B) to adjust length until the link is aligned with the header bracket.
6. Install clevis pin (C) and secure with cotter pin (D).
7. Adjust length of link to achieve proper header angle by rotating barrel (B). Tighten nut (A) against barrel (a slight tap with a hammer is sufficient).

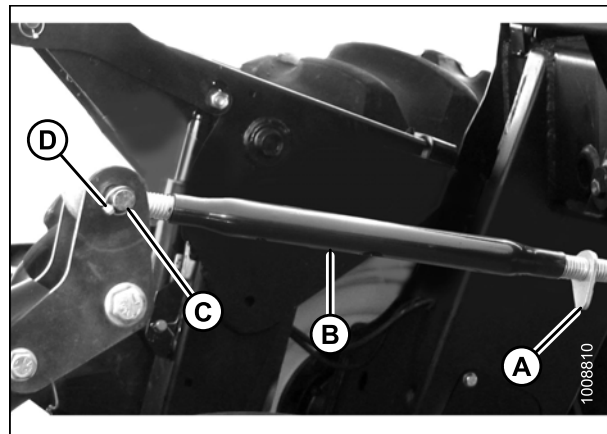


Figure 4.251: Mechanical Center-Link

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

8. Start the engine.
9. Press the header up switch (A) to raise header to maximum height.

NOTE:

If one end of the header does **NOT** fully raise, rephase the lift cylinders as follows:

- a. Press and hold the header up switch until both cylinders stop moving.
- b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

NOTE:

It may be necessary to repeat this procedure if there is air in the system.

10. Engage safety props on both lift cylinders as follows:
 - a. Stop engine and remove key from ignition.
 - b. Pull lever (A) and rotate towards the header to release and lower safety prop (B) onto the lift cylinder.
 - c. Repeat for opposite lift cylinder.

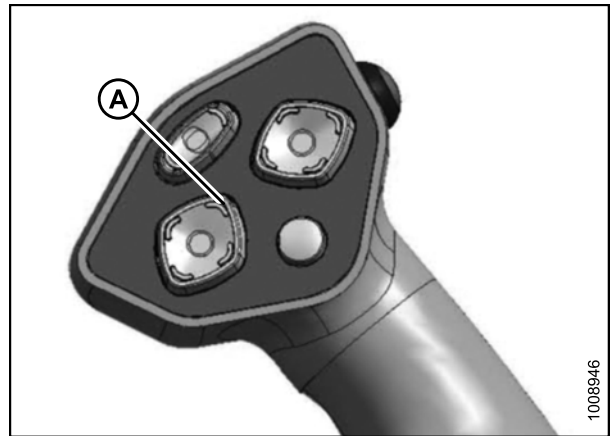


Figure 4.252: GSL

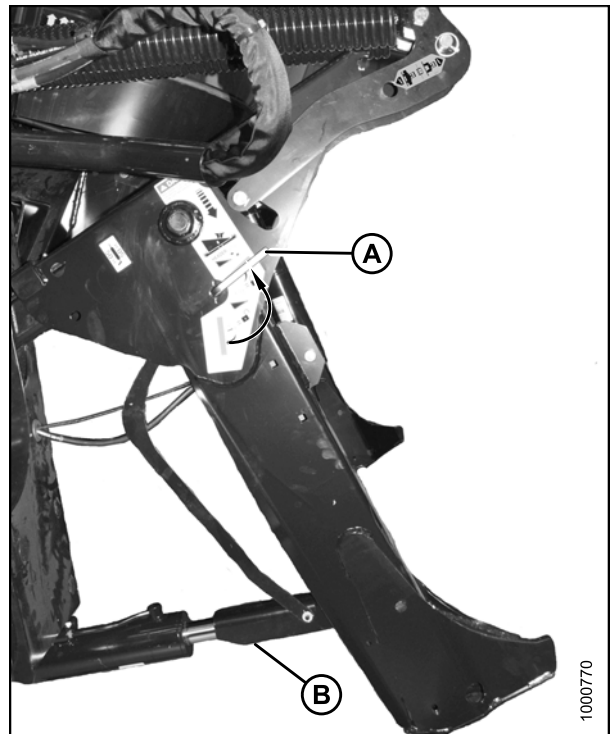


Figure 4.253: Safety Prop

OPERATION

11. Install clevis pin (A) through boot and foot and secure with hairpin (B). Repeat for opposite side.

IMPORTANT:

Ensure clevis pin (A) is fully inserted and hairpin is installed behind bracket.

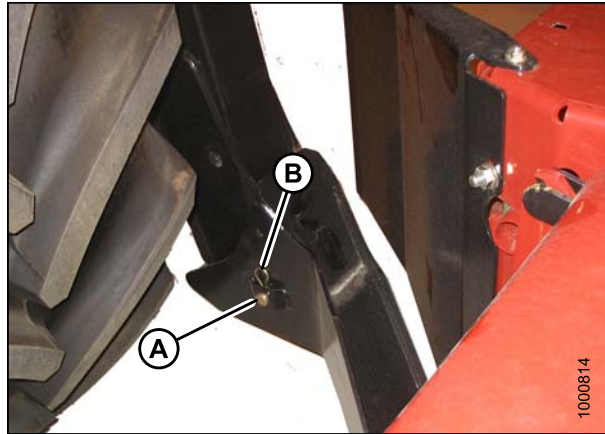


Figure 4.254: Header Boot

12. Remove clevis pin from storage position (B) in linkage and insert into hole (A) to engage float springs. Secure with hairpin.

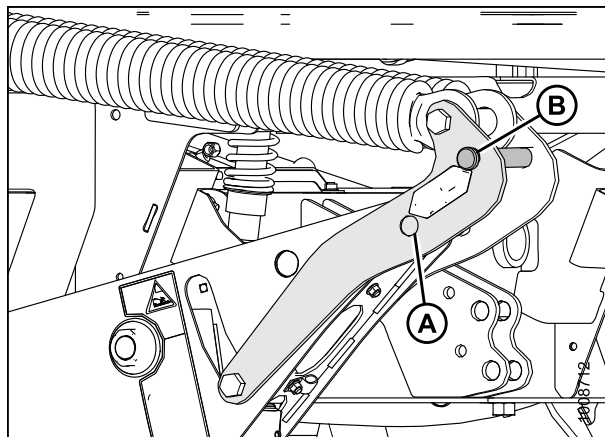


Figure 4.255: Header Float Linkage

13. Disengage safety prop by turning lever (A) downwards to release and lower stop until lever locks into vertical position.
14. Repeat for opposite safety prop.

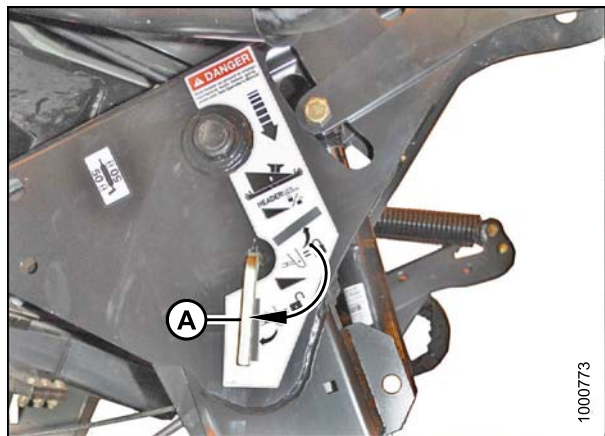


Figure 4.256: Safety Prop

OPERATION

CAUTION

Check to be sure all bystanders have cleared the area.

15. Start the engine and activate the header down switch (A) on the GSL to fully lower the header.
16. Stop engine and remove key from ignition.

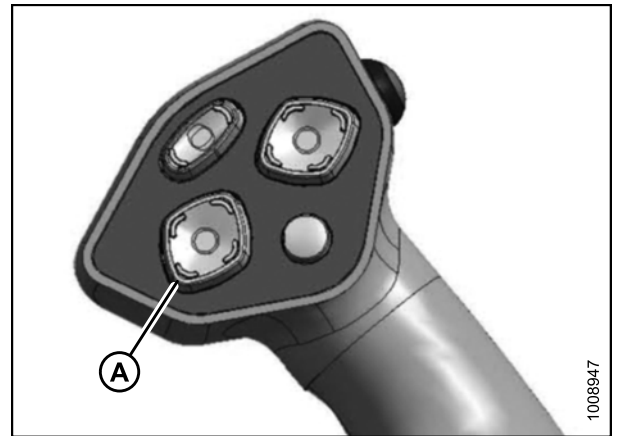


Figure 4.257: GSL

17. Connect header drive hoses (A) and electrical harness (B) to header. Refer to the rotary disc header operator's manual.

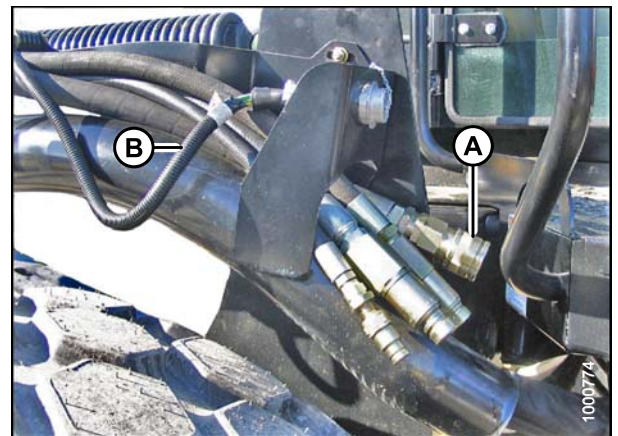


Figure 4.258: Header Drive Hoses and Harness

4.5.6 Detaching an R-Series Header

Refer to the procedure that is appropriate for the center-link installed on the windrower:

- [Detaching an R-Series Header: Hydraulic Center-Link, page 272](#)
- [Detaching an R-Series Header: Mechanical Center-Link, page 275](#)

OPERATION

Detaching an R-Series Header: Hydraulic Center-Link

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Start engine and press header up (A) switch to raise header to maximum height.
2. Rephase cylinders if one end of the header does not raise fully. If rephasing is required, proceed as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.
3. Stop engine and remove key from ignition.
4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.



Figure 4.259: Ground Speed Lever (GSL)

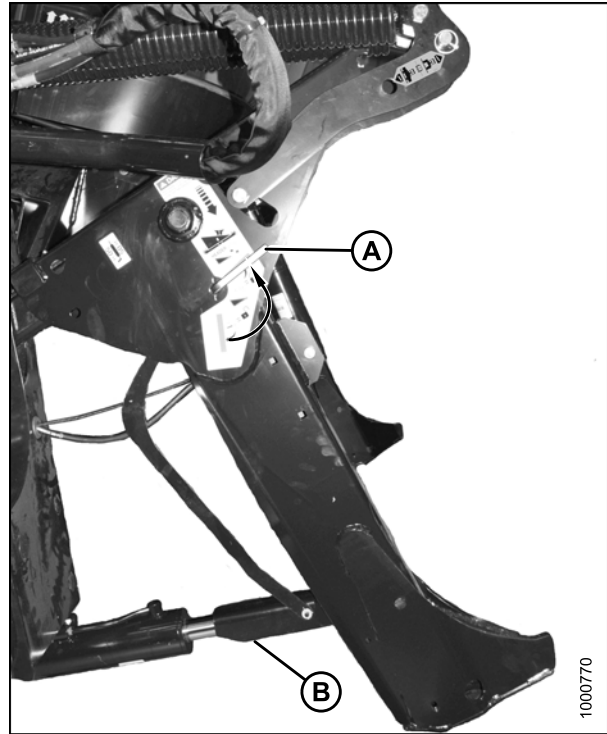


Figure 4.260: Safety Prop

OPERATION

5. Remove hairpin from clevis pin (A) and remove clevis pin from header boot (B) on both sides of header.

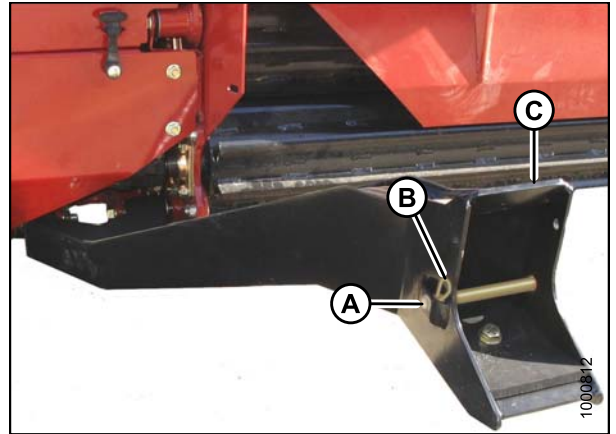


Figure 4.261: Header Boots

6. Remove clevis pin from location (A) to disengage float springs and insert into storage hole (B). Secure with hairpin.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

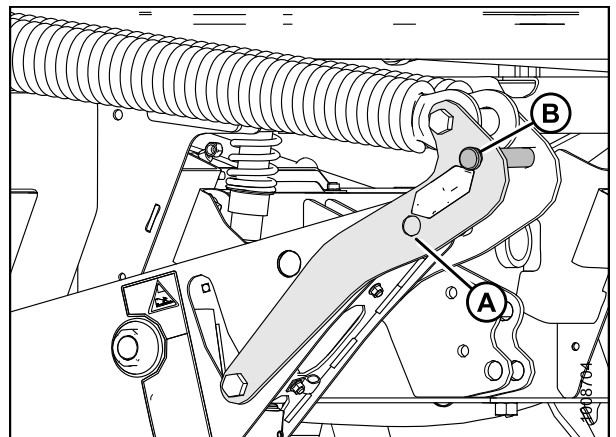


Figure 4.262: Header Float Linkage

CAUTION

Check to be sure all bystanders have cleared the area.

7. Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
8. Start engine, choose a level area, and lower header to the ground.

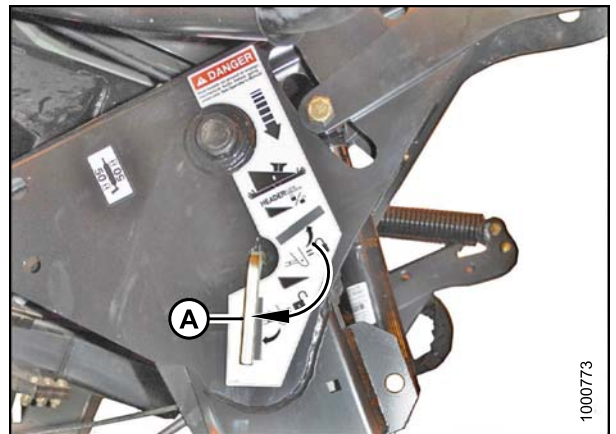


Figure 4.263: Safety Props

OPERATION

9. Activate header tilt up (A) and header tilt down (B) cylinder switches on GSL to release load on center-link cylinder.

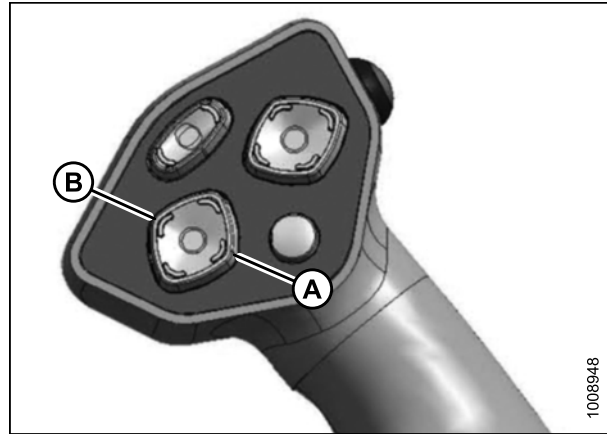


Figure 4.264: GSL

10. Stop engine and remove key from ignition.
11. Lift hook release (C) and lift hook (B) off header pin.

NOTE:

If optional center-link lift cylinder is installed, lift release (C) and then operate the link lift cylinder from the cab to disengage the center-link from the header.

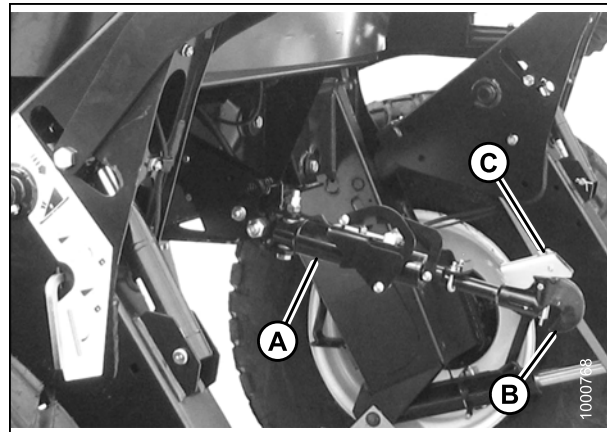


Figure 4.265: Hydraulic Center-Link

12. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the R-Series Header Operator's Manual.
13. Back windrower slowly away from header.

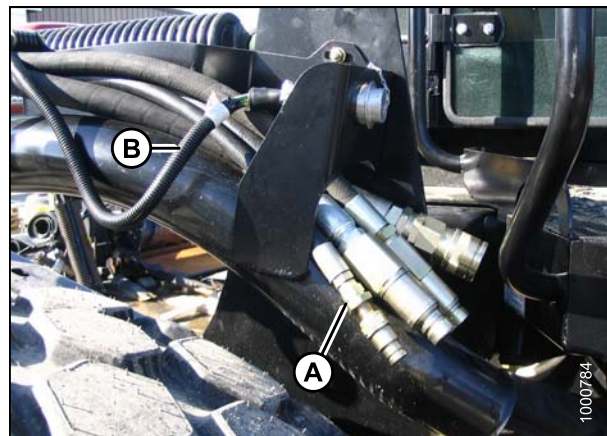


Figure 4.266: Header Drive Hydraulics

OPERATION

14. Reinstall clevis pin (A) through boot (C) and secure with hairpin (B). Repeat for opposite side.

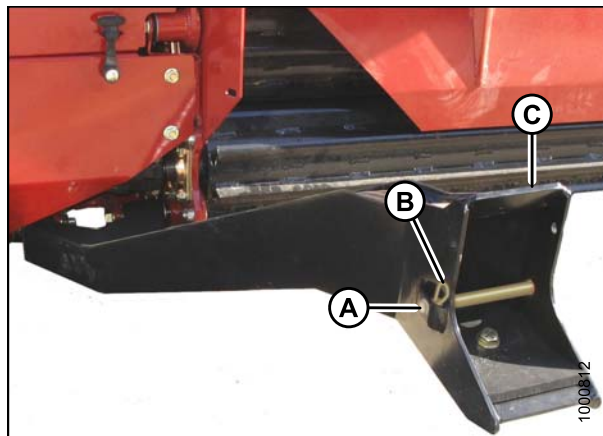


Figure 4.267: Header Boot

Detaching an R-Series Header: Mechanical Center-Link

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Start engine and press header up (A) switch to raise header to maximum height.
2. Rephase cylinders if one end of the header does not raise fully. If rephasing is required, proceed as follows:
 - a. Press and hold the header up (A) switch until both cylinders stop moving.
 - b. Continue to hold the switch for 3–4 seconds. Cylinders are now phased.

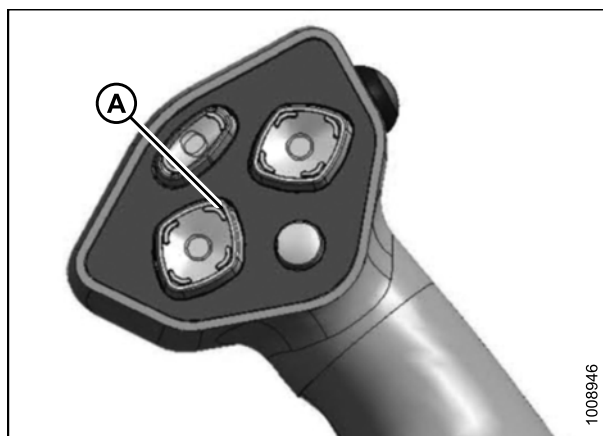


Figure 4.268: Ground Speed Lever (GSL)

OPERATION

3. Stop engine and remove key from ignition.
4. Pull lever (A) and rotate toward header to lower safety prop (B) onto cylinder. Repeat for opposite cylinder.

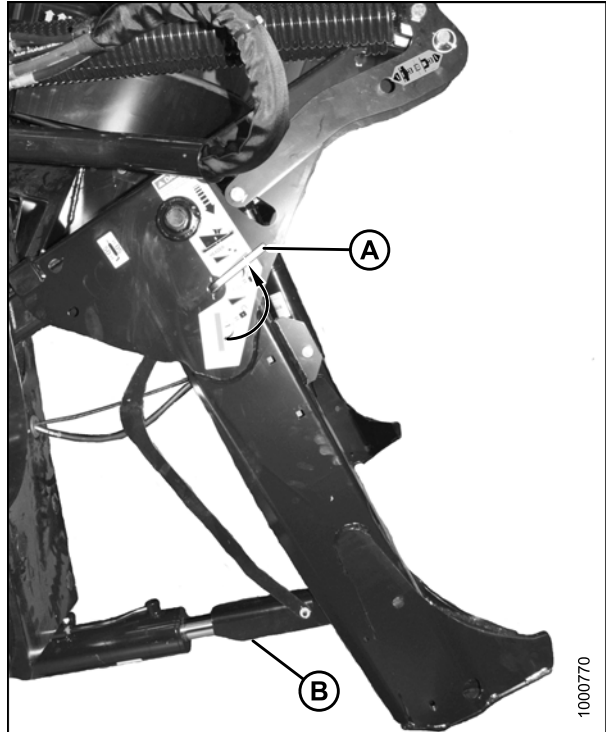


Figure 4.269: Safety Prop

5. Remove hairpin (B) from clevis pin (A) and remove pin from left and right header boots (C) on header.

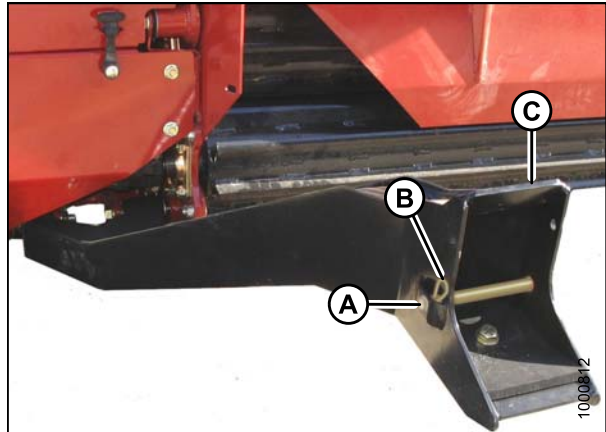


Figure 4.270: Header Boots

OPERATION

6. Remove clevis pin from location (A) to disengage float springs and insert in storage hole (B). Secure with hairpin.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

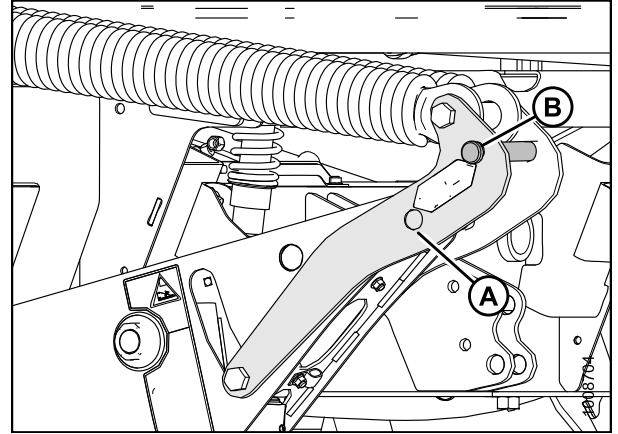


Figure 4.271: Header Float Linkage

7. Disengage safety props by turning lever (A) away from header to raise safety prop until lever locks into vertical position. Repeat for opposite cylinder.
8. Start engine, choose a level area, and lower header to the ground. Stop engine and remove key.

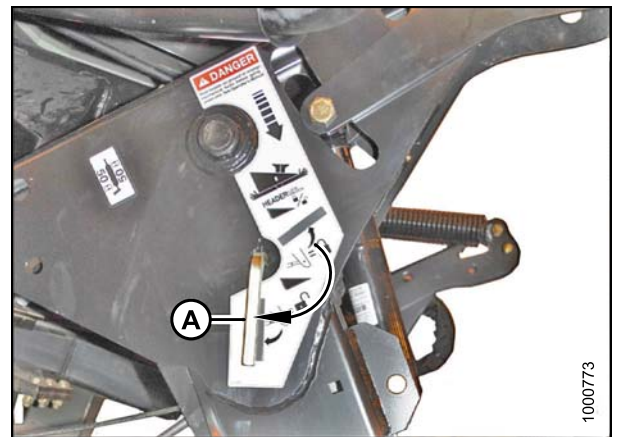


Figure 4.272: Safety Prop

9. Loosen nut (B) and rotate barrel (A) to relieve load on link.

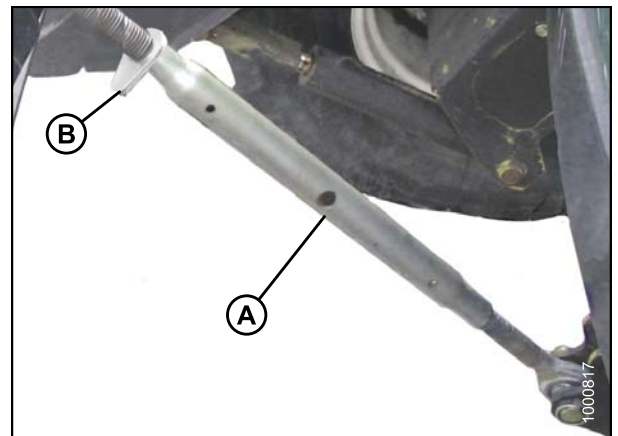


Figure 4.273: Mechanical Center-Link

OPERATION

10. Remove cotter pin on clevis pin (B) and remove pin to disconnect from header. Reinstall clevis pin in header.
11. Tighten nut against barrel (A). A slight tap with a hammer is sufficient.

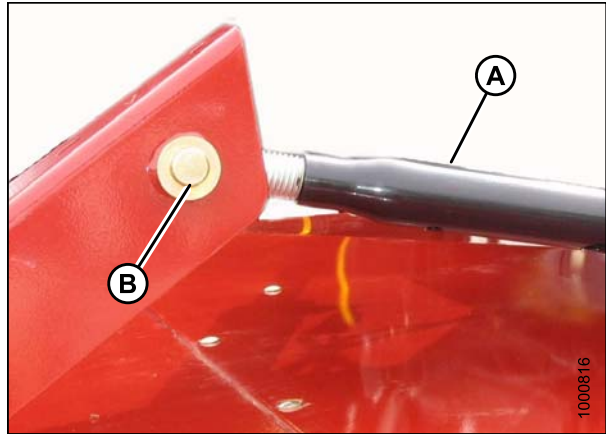


Figure 4.274: Mechanical Center-Link

12. Disconnect header drive hydraulics (A) and electrical harness (B). Refer to the R-Series Header Operator's Manual.
13. Start engine and slowly back windrower away from header.

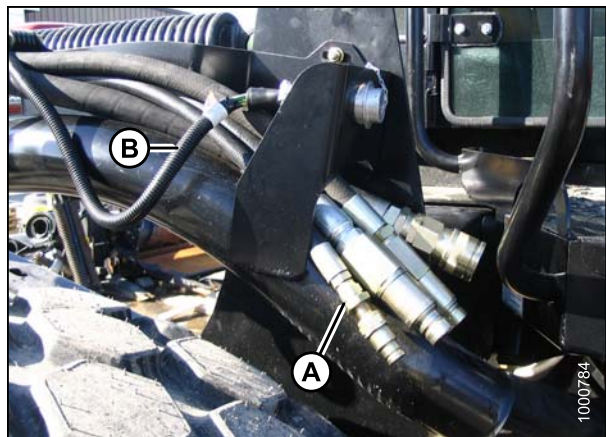


Figure 4.275: Header Drive Hydraulics

14. Stop engine and remove the key.
15. Reinstall the clevis pin (A) through each boot (C) and secure with hairpin (B). Do this to both sides.

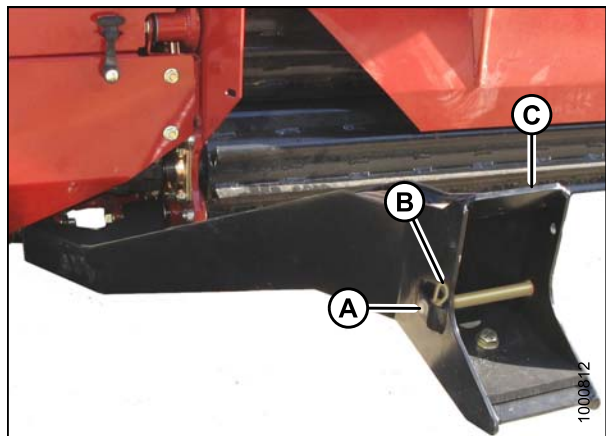


Figure 4.276: Header Boots

4.6 Operating with a D-Series Header

The M155Self-Propelled Windrower is factory-equipped to run an D-Series Draper Header.

If installing a HC10 Hay Conditioner, Reverser kit #B4656 is recommended. If necessary, obtain the recommended kit from your MacDon Dealer and install it in accordance with the instructions supplied with the kit.

Refer to the following procedures according to the center-link installed on the windrower:

- [Attaching a D-Series Header: Hydraulic Center-Link with Optional Self-Alignment, page 214](#)
- [Attaching a D-Series Header: Hydraulic Center-Link without Self-Alignment, page 219](#)
- [Attaching a D-Series Header: Mechanical Center-Link, page 225](#)

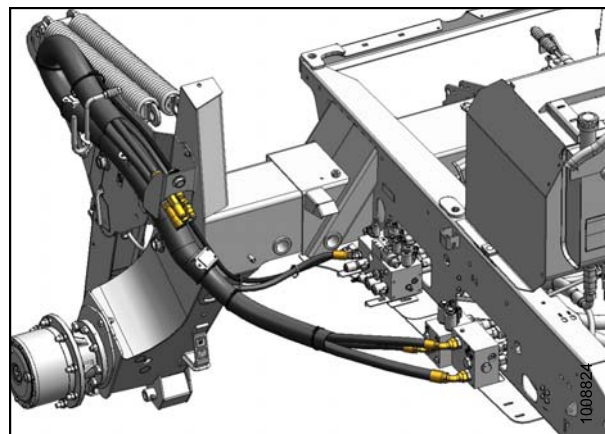


Figure 4.277: Draper Header Hydraulics

4.6.1 Configuring Hydraulics

The windrower must be fitted with a draper drive basic kit to operate D-Series draper headers.

Windrowers equipped with D-Series hydraulics have four header drive hoses on the left cab-forward side.

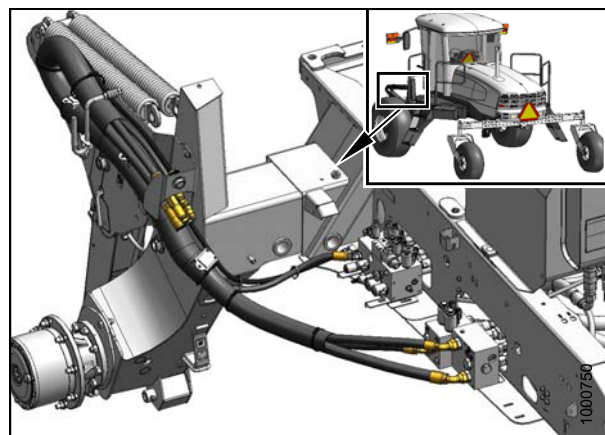


Figure 4.278: Draper Header Drive Hydraulics

OPERATION

There are also up to five reel drive hoses on the right cab-forward side.

If necessary, obtain the following kit from your MacDon Dealer.

- Base Kit MD #B5577 (Installation instruction is supplied with the kit.)

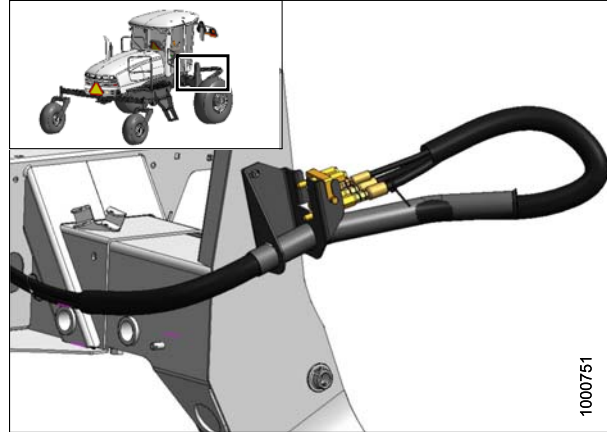


Figure 4.279: Draper Header Reel Hydraulics

4.6.2 Attaching Header Boots

Header boots are required to attach a D-Series draper header to the windrower. Attach header boots (supplied with header) to windrower lift linkage if not already installed.

CAUTION

To prevent damage to the lift system when lowering header lift linkages without a header or weight box attached to the windrower, ensure the float engagement pin is installed in storage position (B) and NOT in engaged position (A).

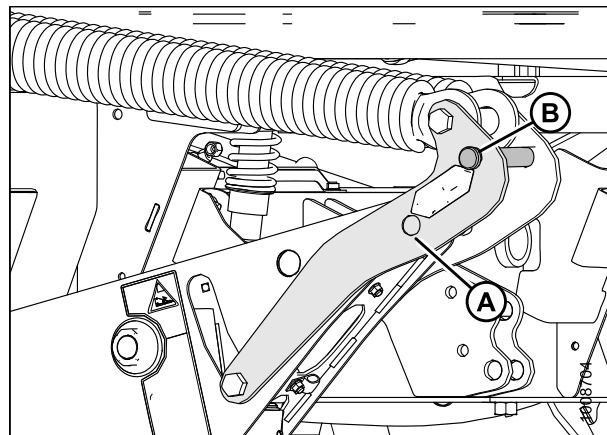


Figure 4.280: Header Float Linkage

1. Remove pin (B) from boot (A).

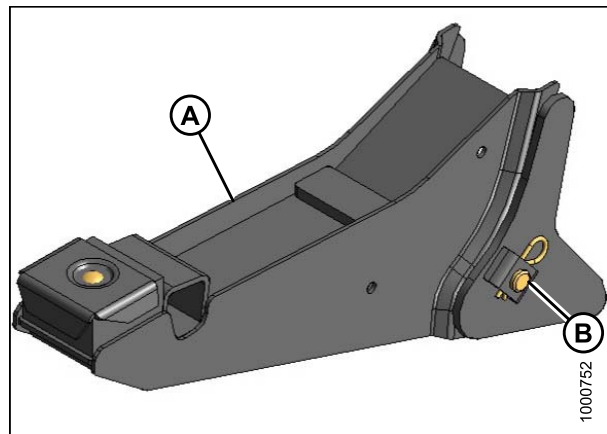


Figure 4.281: Header Boot

OPERATION

2. Position boot (B) onto lift linkage (A) and reinstall pin (C). Pin may be installed from either side of boot.
3. Secure pin (C) with hairpin (D).
4. Repeat for opposite side.

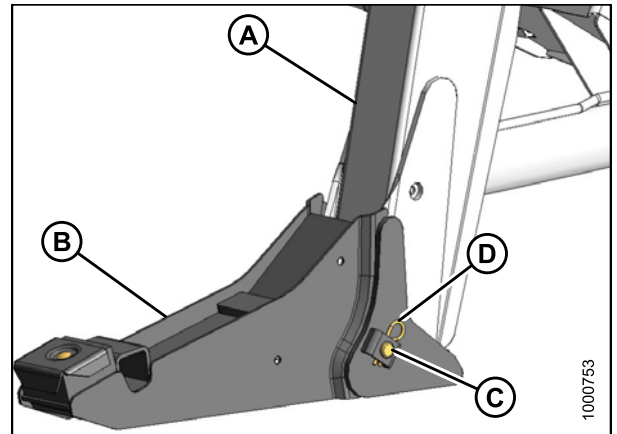


Figure 4.282: Header Boot

4.6.3 Header Position

Refer to [4.4 Operating with a Header, page 193](#) for procedures for controlling header height, header tilt, and float.

4.6.4 Adjusting the Reel Fore-Aft Position

The reel fore-aft position can be hydraulically adjusted with the optional reel position system and is controlled with multi-function switches on the ground speed lever (GSL).

Press and hold the switch for the desired FORWARD (A) or AFT (B) movement of the reel.

NOTE:

The switches also control adjustments to the optional double windrow attachment (DWA) conveyor and can be activated when programming the cab display module (CDM).



Figure 4.283: Ground Speed Lever (GSL)

4.6.5 Adjusting the Reel Height

Press and hold the switch for the desired movement of the reel REEL UP (A) or REEL DOWN (B).

IMPORTANT:

Under certain conditions, with reel raised to full height, the reel tines may contact the cab roof. Exercise care to avoid damage to the machine.

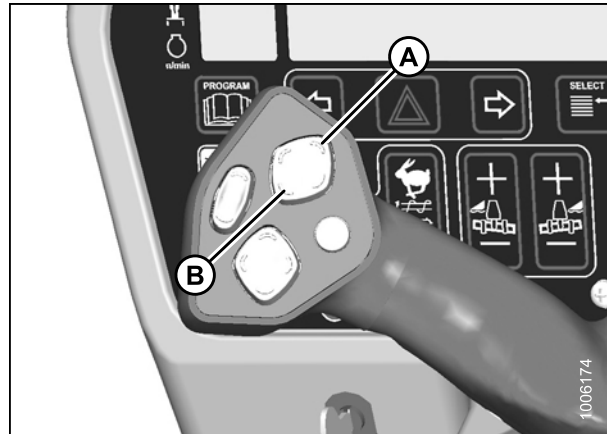


Figure 4.284: Ground Speed Lever (GSL)

4.6.6 Reel Speed

The reel speed is controlled with switches on the ground speed lever (GSL) in the cab. On D-Series draper headers, reel speed can be set relative to the ground speed of the windrower using the header index feature or can run independently. Refer to your header's operator manual for specific windrowing guidelines and recommended speeds.

Setting Reel to Ground Speed

Setting the speed of the reel relative to ground speed (using the header index function) allows you to run the engine at lower rpm while maintaining the desired ground and reel speed. Reducing engine speed saves fuel and reduces noise in the cab.

Setting the reel to ground speed requires setting the minimum reel speed and the reel index.



Figure 4.285: Operator Console

⚠ CAUTION

Check to be sure all bystanders have cleared the area.

1. Set the minimum reel speed as follows:

IMPORTANT:

Set the minimum reel speed while stationary with the ground speed lever (GSL) in the N-DETENT position.

- a. Engage header.
- b. Set HEADER INDEX switch (B) to **ON**.
- c. Press the DISPLAY SELECTOR button (E) on the GSL to display **##.## MIN REEL** at (A) or press the FAST (C) or SLOW (D) switch.

The displayed value (##.##) = rpm or mph or km/h¹⁷

- d. Press FAST (C) or SLOW (D) until the desired minimum reel speed is achieved.

2. Set the reel index as follows:

IMPORTANT:

Reel index can only be adjusted while operating at a ground speed faster than minimum reel speed plus header index value.

- a. Set HEADER INDEX switch (B) to **ON**.

17. Depending on CDM programming.

OPERATION

- b. Press the DISPLAY SELECTOR button (E) on the GSL to display **##.## ##.# REEL IND**¹⁸ or press FAST (C) or SLOW (D) switch.
 - The displayed value (**##.##**) = reel speed (rpm or mph or km/h¹⁷)
 - The displayed value (**##.##**) = reel index value
- c. Press FAST (C) or SLOW (D) until the desired reel index is achieved.

NOTE:

The reel will continue operating at the minimum reel speed setting when the ground speed drops below the set value. The cab display module (CDM) display (A) will flash **##.## MIN REEL (RPM or MPH or KPH)** prompting you to change the minimum set-point or increase your ground speed if the total of the ground speed, plus the index value is **LESS THAN** the minimum reel speed set-point.

Examples:

Windrower is operating at 8 mph with header index ON and set at -1.0.

- Display shows **7.0 -1.0 REEL IND** where **7.0** (8.0-1.0) is the reel speed in mph and **-1.0** is the HEADER INDEX setting.

Windrower speed drops to 7.5 mph at same header index setting.

- Display shows **6.5 -1.0 REEL IND** where **6.5** (7.5-1.0) is the reel speed in mph and **-1.0** is the HEADER INDEX setting.

Windrower is operating at 8 mph with header index ON and set at 2.0.

- Display shows: **10.0 2.0 REEL IND** where **10.0** (8+2.0) is the reel speed in mph and **2.0** is the HEADER INDEX setting.

18. REEL IND will only be displayed when operating at a ground speed faster than minimum reel speed plus header index value.

OPERATION

Setting the Reel Only Speed



Figure 4.286: Operator Console

A - Display

D - Reel Slow

B - Header Index

E - Display Selector

C - Reel Fast

CAUTION

Check to be sure all bystanders have cleared the area.

Set the speed of the reel independently of ground speed as follows while operating the windrower:

NOTE:

This procedure is similar to changing the draper speed “on the go” with the draper speed control switch. Refer to [Setting Draper Speed Independent of Ground Speed, page 288](#). These changes become the new set-points.

1. Set HEADER INDEX (B) to **OFF**.
2. Press REEL FAST (C) or REEL SLOW (D) on the ground speed lever (GSL) until display (A) shows **###.## REEL MPH** with desired reel speed.

The displayed value (##.##) = reel speed (rpm or mph or km/h¹⁹)

19. Depending on CDM programming.

4.6.7 Draper Speed

Draper speed affects the orientation of stalks in the windrow. For more information refer to your header operator's manual for guidelines.

The draper speed can be set to run independently, or relative to the ground speed of the windrower with the header index function.

Setting Draper to Ground Speed

Setting the speed of the draper relative to ground speed (using the header index function) allows you to run the engine at lower rpm while maintaining the desired ground and draper speed. Reducing engine speed saves fuel and reduces noise in the cab.

Setting draper to ground speed requires setting both the minimum draper speed and the draper index.

Refer to the following:

- [Setting Draper Minimum Speed, page 286](#)
- [Setting Draper Index, page 287](#)

Setting Draper Minimum Speed

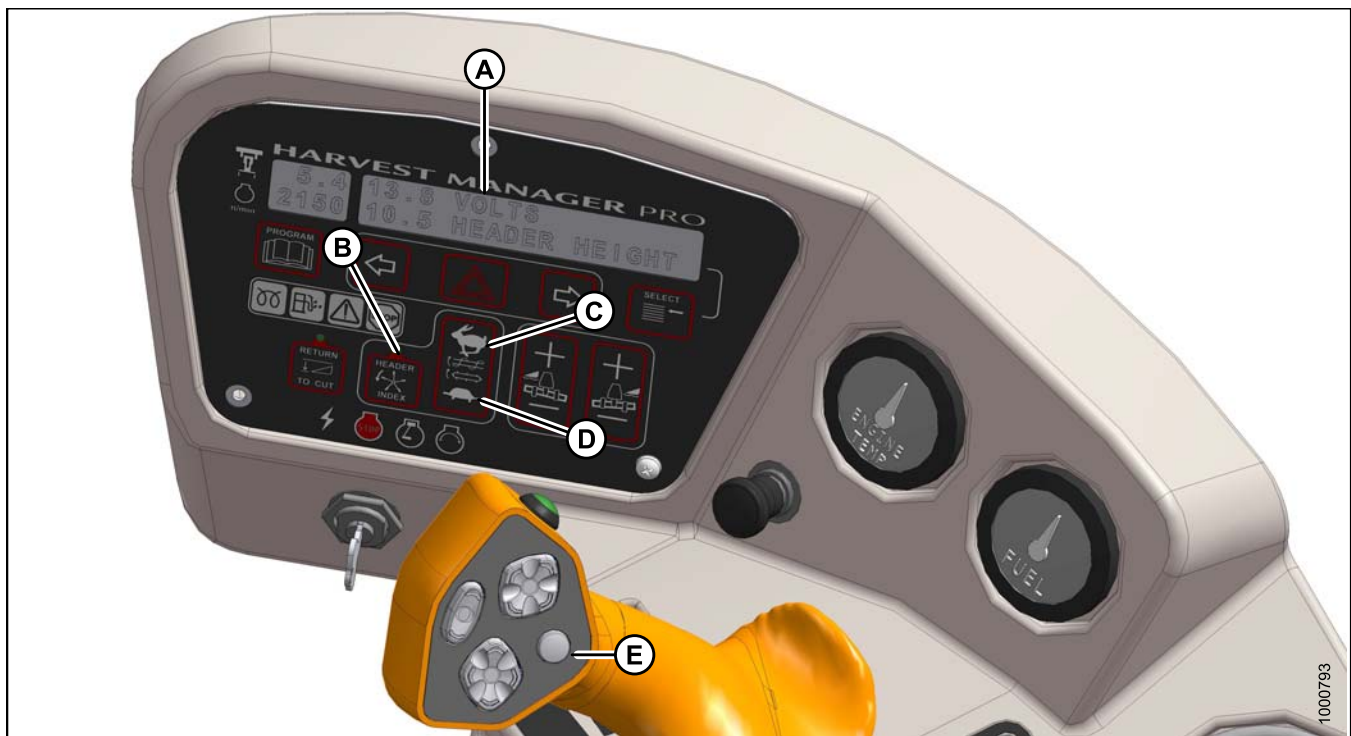


Figure 4.287: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

Set draper minimum speed as follows:

OPERATION

IMPORTANT:

Set the minimum draper speed while stationary with the ground speed lever (GSL) in the N-DETENT position.

1. Engage header.
2. Set HEADER INDEX (B) switch to **ON**.
3. Press DISPLAY SELECTOR button (E) until display (A) shows **###.## DRAPER MIN.**
The displayed value (###.##) = draper speed (mph or km/h²⁰).
4. Use the FAST (C) and SLOW (D) buttons to set the desired minimum draper speed.

Setting Draper Index

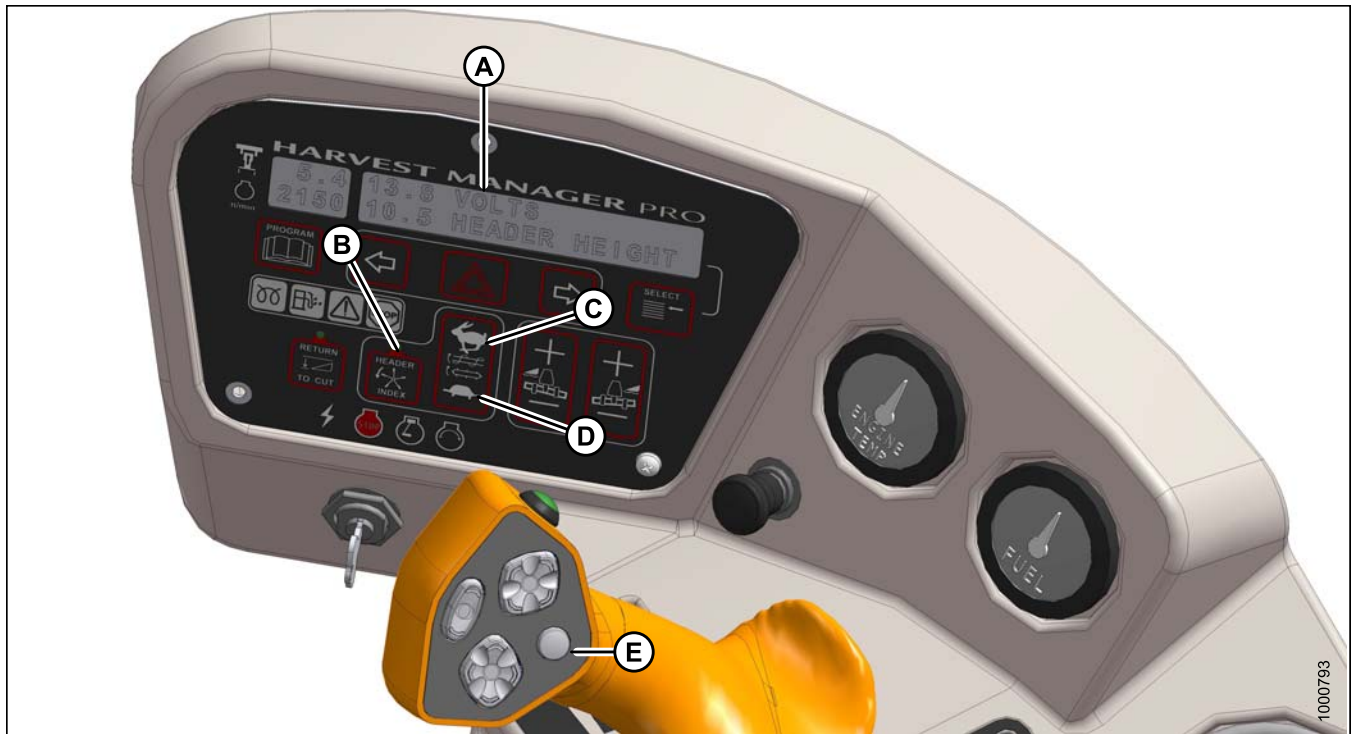


Figure 4.288: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

Set draper index as follows:

IMPORTANT:

Draper Index can only be adjusted while operating at a ground speed faster than minimum draper speed plus header index value.

1. Engage header.
2. Set HEADER INDEX switch (B) to **ON**.

20. Depending on cab display module (CDM) programming.

OPERATION

3. Press DISPLAY SELECTOR (E) on the ground speed lever (GSL) to display **DRAPER INDX**²¹ at (A) on the cab display module (CDM).
4. Press DRAPER FAST (C) or SLOW (D) on the CDM until display (A) shows **###.## ##.# DRAP IND** with the desired index value.
 - The displayed value (###.##) = draper speed (mph or km/h²²)
 - The displayed value (##.#) = the index value

Examples:

- Windrower is operating at 8 mph with header index ON and set at 1.5.
Display shows: **9.5 1.5 DRAP INDX** where **9.5** (8 + 1.5) is the draper speed in mph and **1.5** is the header index setting.
- Windrower speed drops to 7.5 mph at same header index setting.
Display shows: **9.0 1.5 DRAP INDX** where **9.0** (7.5 + 1.5) is the draper speed in mph and **1.5** is the header index setting.
- Windrower is operating at 8 mph with header index ON and set at 0.9.
Display shows: **8.9 0.9 DRAP INDX** where **8.9** (8 + 0.9) is the draper speed in mph and **0.9** is the header index setting.

Setting Draper Speed Independent of Ground Speed

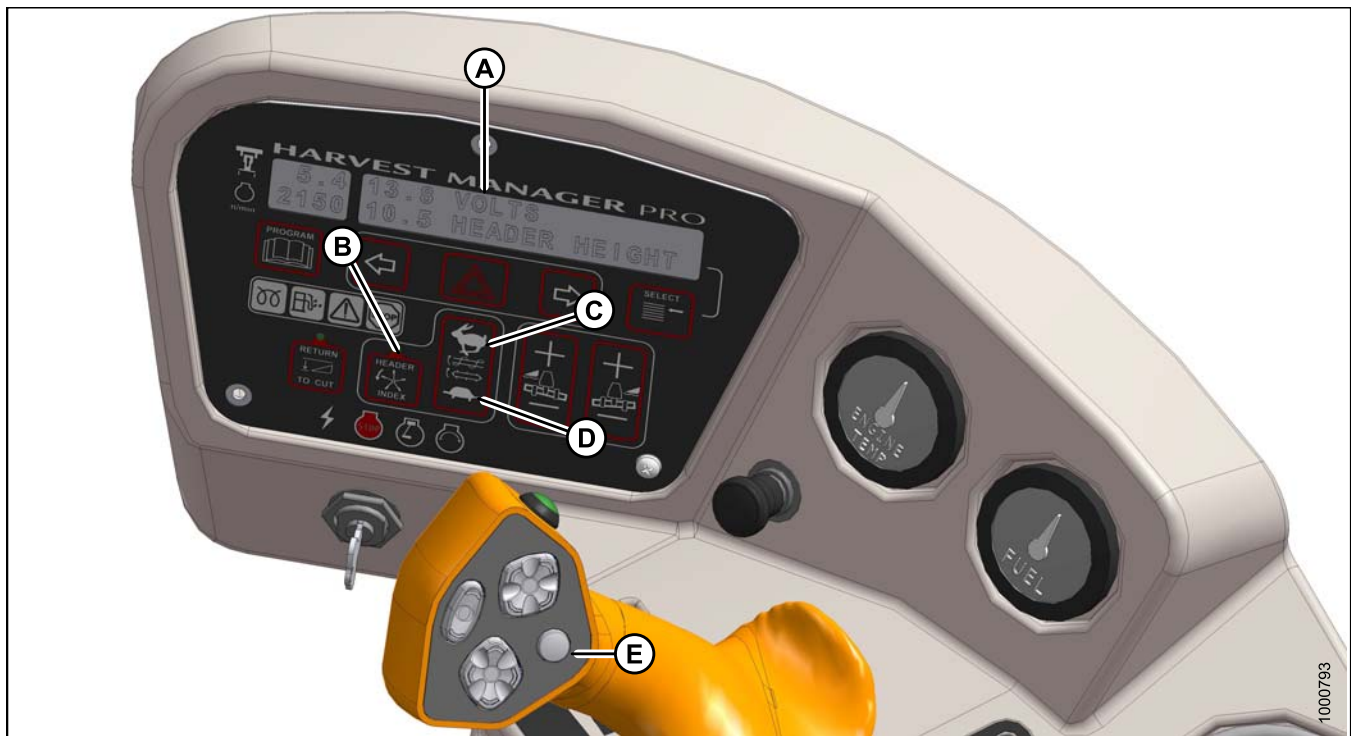


Figure 4.289: Operator Console

Set the speed of the draper independent of ground speed as follows:

21. DRAPER INDX will only be displayed when operating at a ground speed faster than minimum draper speed plus the header index value.
22. Depending on CDM programming.

OPERATION

NOTE:

This procedure can also be used to change the draper speed “on the go”.

 **CAUTION**

Check to be sure all bystanders have cleared the area.

1. Engage header.
2. Set HEADER INDEX switch (B) to **OFF**.
3. Press DISPLAY SELECTOR button (E) to show **##.# DRAPER SPEED** on the cab display module (CDM) (A).
Displayed value (##.#) = draper speed (mph or km/h²³).
4. Press FAST (C) or SLOW (D) on the CDM until desired draper speed is displayed at (A).

4.6.8 Knife Speed

The ideal cutting speed of the knife should achieve a clean cut. Crop types and conditions usually influence the knife and forward speeds.

Table 4.2 Knife Speed Table

Header Description		Knife Speed			
Type	Size (ft)	Minimum		Maximum	
		rpm ²⁴	spm ²⁵	rpm ²⁴	spm ²⁵
Draper with double knife	15	750	1500	950	1900
	20 and 25	700	1400	850	1700
	30	600	1200	800	1600
	35			700	1400
Draper with single knife	20 and 25	600	1200	750	1500
	30			700	1400
	35	550	1100		

When the header is first attached to the windrower, the windrower control module (WCM) receives a code from the header that determines the knife speed range and the minimum speed.

The desired speed can be programmed on the cab display module (CDM) and stored in the WCM memory so the knife will operate at the original set-point after the header is detached and reattached to the windrower.

If no header code is detected, the CDM displays NO HEADER and the knife speed reverts to the Operator’s selection from a range of 800–1000 strokes per minute.

Refer to the header operator’s manual for the suggested knife speed for a variety of crops and conditions.

NOTE:

The knife speed cannot be programmed outside the range specified for each header.

23. Depending on CDM programming.
 24. Revolutions per minute is the speed of knife drive box pulley
 25. Strokes per minute of knife (rpm x 2)

OPERATION

NOTE:

The knife speed can be adjusted without shutting down the machine, though it is recommended that the windrower be stopped before adjusting CDM settings.

Setting Knife Speed “On the Go”



Figure 4.290: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

Display and set knife speed “on the go” as follows:

1. Engage header.
2. Press PROGRAM (D) and SELECT (E) on cab display module (CDM) to show **#### KNIFE SPM** at (A).
Displayed value (####) = strokes per minute.
3. Press SLOWER (B) or FASTER (C) until desired knife speed is displayed at (A).

4.6.9 Deck Shift Control

When connected to a draper header with the deck shift option, hydraulic deck shift control allows you to select the deck position and draper rotation of the header from the operator's station. It selects crop delivery from the left side, center, or right side of the header.

Deck Shift

CAUTION

Check to be sure all bystanders have cleared the area.

Shift decks as follows:

1. Engage header by pushing down on the yellow HEADER DRIVE button while pulling up on the black ring at the base of the switch.
2. Push the switch (A) to desired delivery position. Deck(s) will move and direction of drapers will change accordingly.
3. Operate windrower.

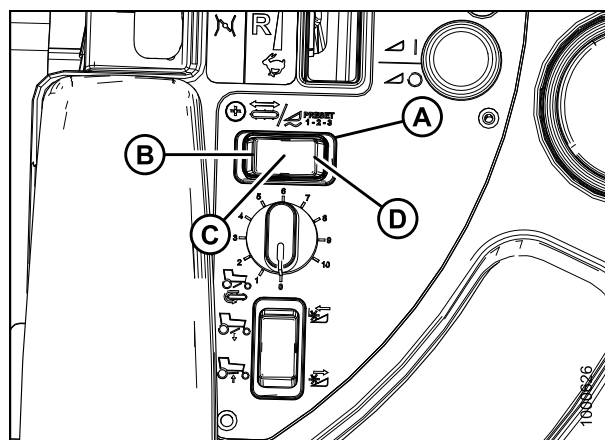


Figure 4.291: Deck Shift Switch

A - Deck Shift Switch B - Left Side Delivery
C - Center Delivery D - Right Side Delivery

Setting Float Options with Deck Shift

For draper headers equipped with the deck shift option, the header float can be set for each deck position. Float is maintained when the decks are shifted.

CAUTION

Check to be sure all bystanders have cleared the area.

Program the float as follows:

1. Engage header.

OPERATION

- Using HEADER TILT SWITCHES (A) and (B) on the ground speed lever (GSL), set center-link to mid-range position (05.0 on Display [E]).

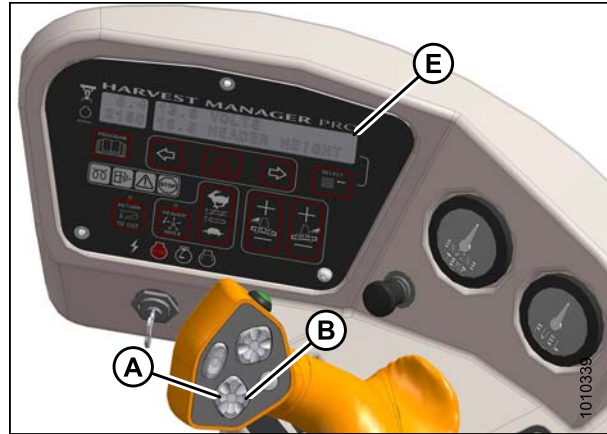


Figure 4.292: Operator Console

- Select a deck position with DECK SHIFT switch (A) from one of the following delivery options:
 - B - Left side delivery
 - C - Center delivery
 - D - Right side delivery

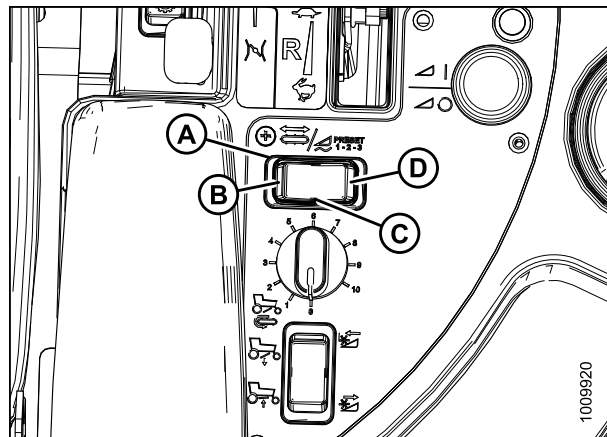


Figure 4.293: Deck Shift Switch

- Using HEADER DOWN switch (A) on the GSL, lower header fully with lift cylinders fully retracted.
- Using LEFT FLOAT SWITCH (B), push + to increase float or - to decrease float on left side of header. Display (D) will indicate selected float value for left side, for example (8.0 L FLOAT R ##.#).
- Repeat for right side float with RIGHT switch (C). Display (D) will indicate float value for both sides, for example (8.0 L FLOAT R 3.0).

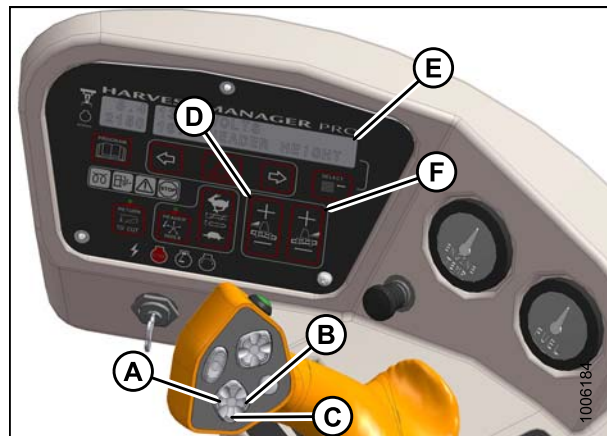


Figure 4.294: Operator Console

OPERATION

7. Select a second deck position with the DECK SHIFT switch (A).
8. Repeat step 5., page 292 and step 6., page 292 to set the float for the second deck position.
9. Select a third deck position with the DECK SHIFT switch (A).
10. Repeat step 5., page 292 and step 6., page 292 to set the float for the third deck position.

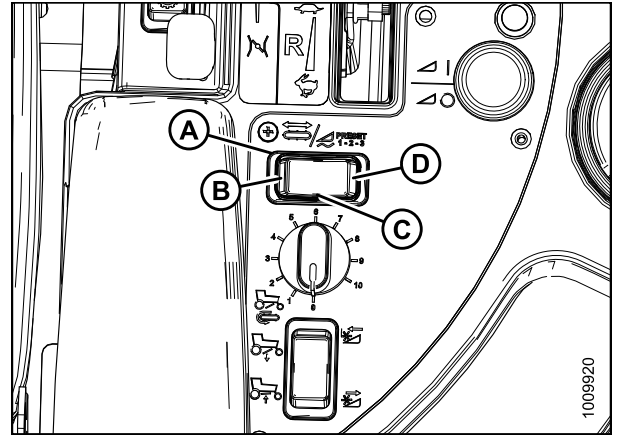


Figure 4.295: Deck Shift Switch

A - Deck Shift Switch

B - Left Side Delivery

C - Center Delivery

D - Right Side Delivery

4.7 Operating with an A-Series Header

The M155 is factory-equipped to run an A-Series Auger Header.

4.7.1 Auger Speed

Auger Speed on A30-D Headers

On A30-D Auger Headers, the auger speed is fixed to the knife speed. The auger speed is **NOT** monitored and cannot be displayed.

Setting the Auger Speed on A40-D Headers

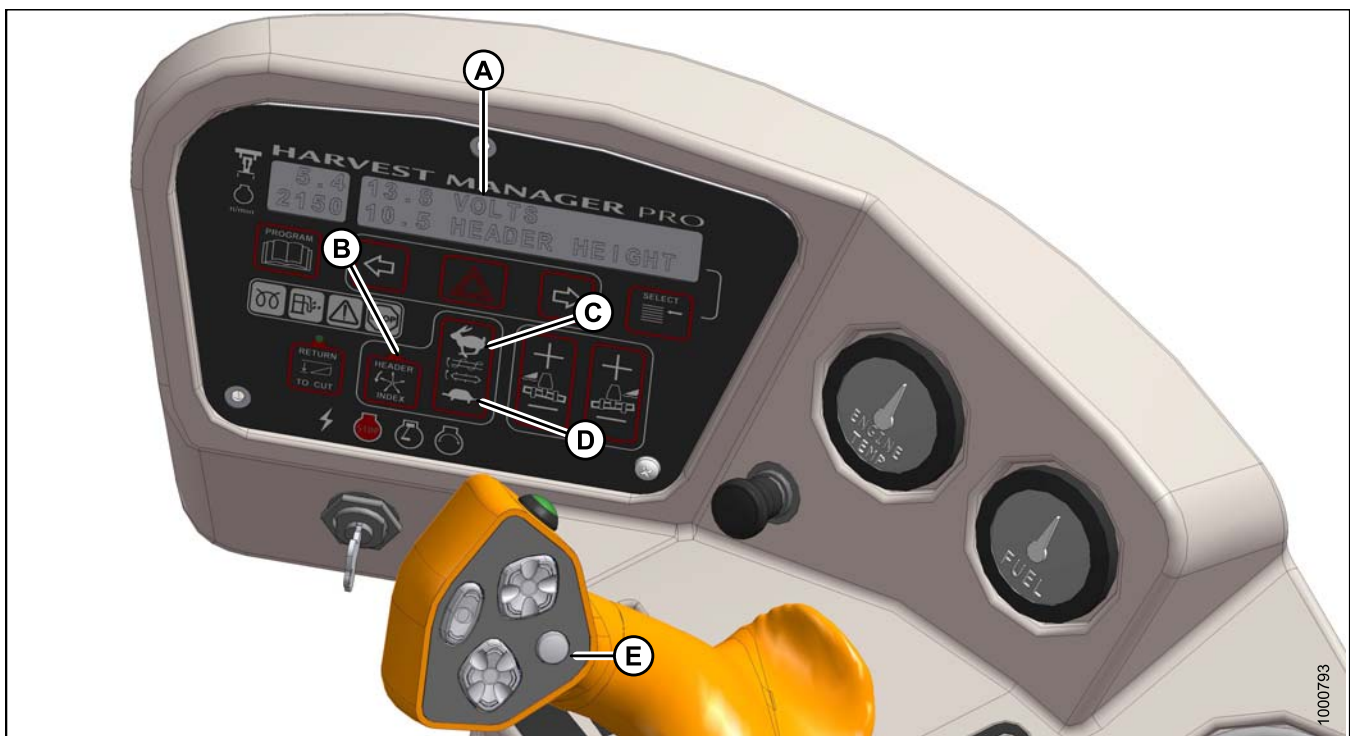


Figure 4.296: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

To set the auger speed, follow these steps:

1. Engage header.
2. Set the HEADER INDEX switch (B) to **OFF**.
3. Press DISPLAY SELECTOR switch (E) on the ground speed lever (GSL) or press FAST (C) or SLOW (D) on the cab display module (CDM) until **### AUGER SPEED** is displayed at (A).

The displayed value (###) = auger speed setting.

OPERATION

NOTE:

Changes to reel speed will affect the auger speed directly. However, when adjusting reel speed, the auger speed value displayed on the CDM will not change.

4. Press FAST (C) or SLOW (D) on the CDM until the desired auger speed is achieved.

4.7.2 Reel Speed

Refer to your header operator's manual for recommended reel speed settings for your particular crop.

Reel Speed on A30-D Headers

The reel is driven by the auger and both are dependent on the main header drive speed. The auger and reel speed can only be changed by installing a different size auger drive sprocket, or by varying the windrower engine rpm. A30-D headers do **NOT** have a reel speed sensor, therefore no reel/auger speed information is displayed on the cab display module.

Reel Speed on A40-D Headers

The A40-D Auger Header features a hydraulic direct drive reel with an operating speed range of 15–85 rpm. Reel speed is controlled by the cab display module (CDM) and the ground speed lever (GSL) in the operator's station.

The reel drive motor and the auger drive motor are connected in series but a separate line to the auger allows the reel speed to change independently from the auger speed. Switches on the GSL are used to adjust the reel speed which is displayed on the CDM display. The reel speed can be set by three methods:

- Reel Only (only reel speed changes)
- Reel On-the-Go (reel and auger speeds change)
- Reel to Ground (indexed)

NOTE:

Adjusting the reel speed will result in a change to auger speed unless the auger speed has been preset.

OPERATION

Adjusting Reel Only Speed

The A40 reel drive is hydraulically driven. Adjusting reel speed also changes auger speed, unless the auger speed is initially set at a predetermined value. The following procedure sets the auger speed so that subsequent reel speed adjustments will only affect the reel.

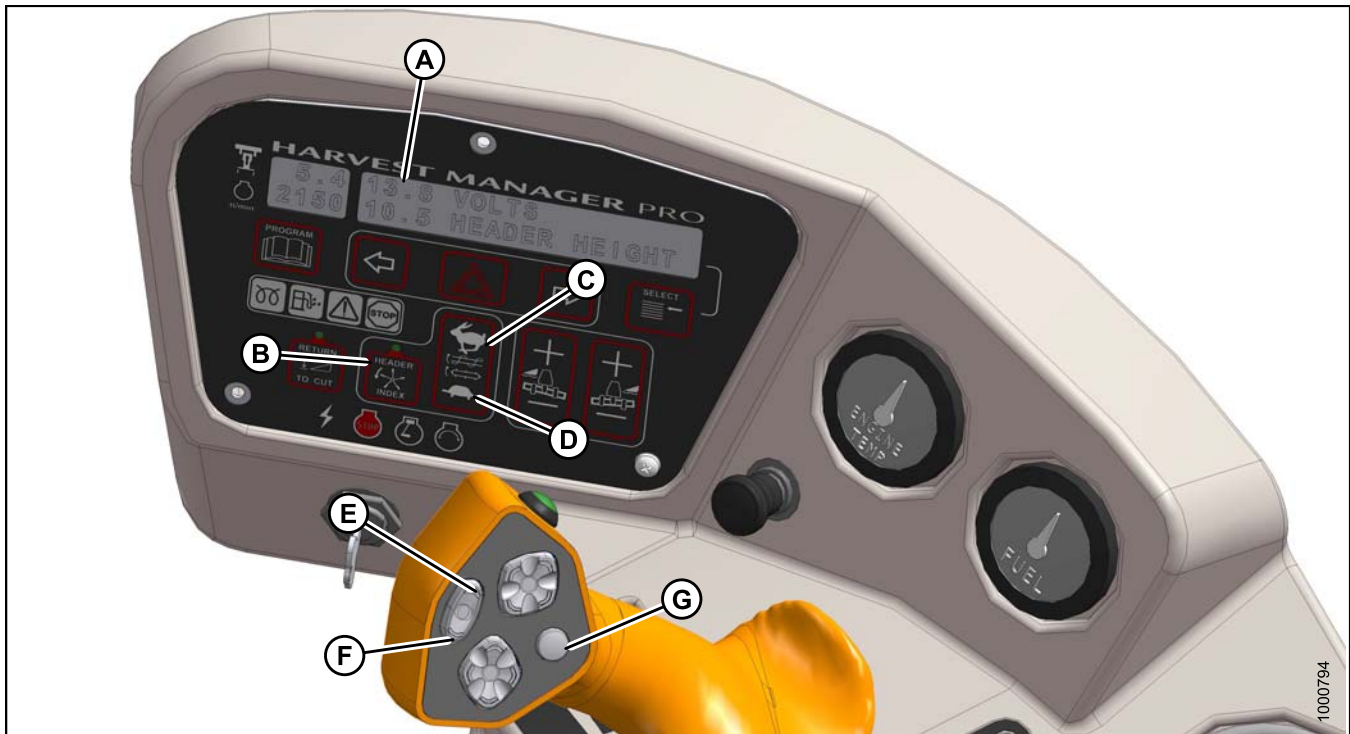


Figure 4.297: Operator Console

A - Display
B - Header Index
C - Auger Fast
D - Auger Slow
E - Fast
F - Slow
G - Display Selector

IMPORTANT:

To prevent over-speeding the auger, initially set the speed of the reel and auger as follows: Subsequent adjustments to reel speed do **NOT** affect auger speed.

1. Engage header.
2. Set HEADER INDEX SWITCH (B) to **OFF**.
3. On ground speed lever (GSL) press REEL SLOW switch (F) until a beep is heard.
4. Display (A) shows **### REEL RPM**.
5. On cab display module (CDM) press AUGER SLOW (D) or FAST (C) switch to set desired auger speed.
6. Display (A) shows **### AUGER SPEED**.
7. On GSL press REEL SLOW (F) or FAST (E) switch to set desired reel speed.
8. Display (A) shows **### REEL RPM**.

NOTE:

The auger speed will **NOT** change if the reel speed is adjusted.

Adjusting Reel Speed “On The Go”

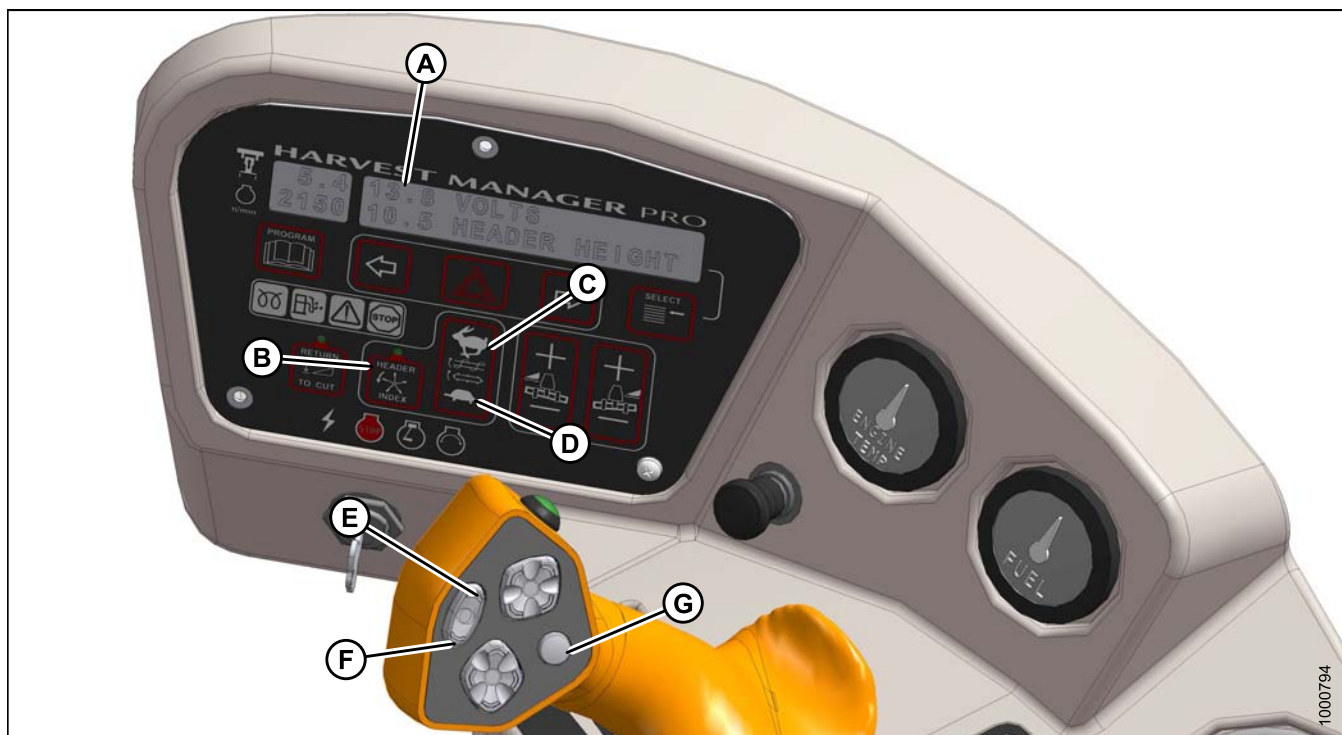


Figure 4.298: Operator Console

- | | | | |
|---------------|------------------|----------------------|----------------|
| A - Display | B - Header Index | C - Auger Fast | D - Auger Slow |
| E - Reel Fast | F - Reel Slow | G - Display Selector | |

The reel speed adjustment range is from 15 to 85 rpm. Adjust the reel speed while the machine is in operation as follows:

1. Set HEADER INDEX switch (B) to **OFF**.
2. Press REEL SLOW (F) or REEL FAST (E) on the ground speed lever (GSL) until display (A) shows **###.## REEL RPM** with desired reel speed.

The displayed value (##.##) = reel speed (rpm or mph or km/h²⁶).

NOTE:

Adjusting reel speed will alter auger speed unless the auger speed has been preset.

Setting Reel to Ground Speed

Setting the speed of the reel relative to ground speed (using the header index function) automatically adjusts the reel speed with changes to ground speed. Benefits may include improved crop flow and reduced operator fatigue.

Setting the reel to ground speed requires setting the minimum reel speed and the reel index.

26. Depending on CDM programming.

OPERATION

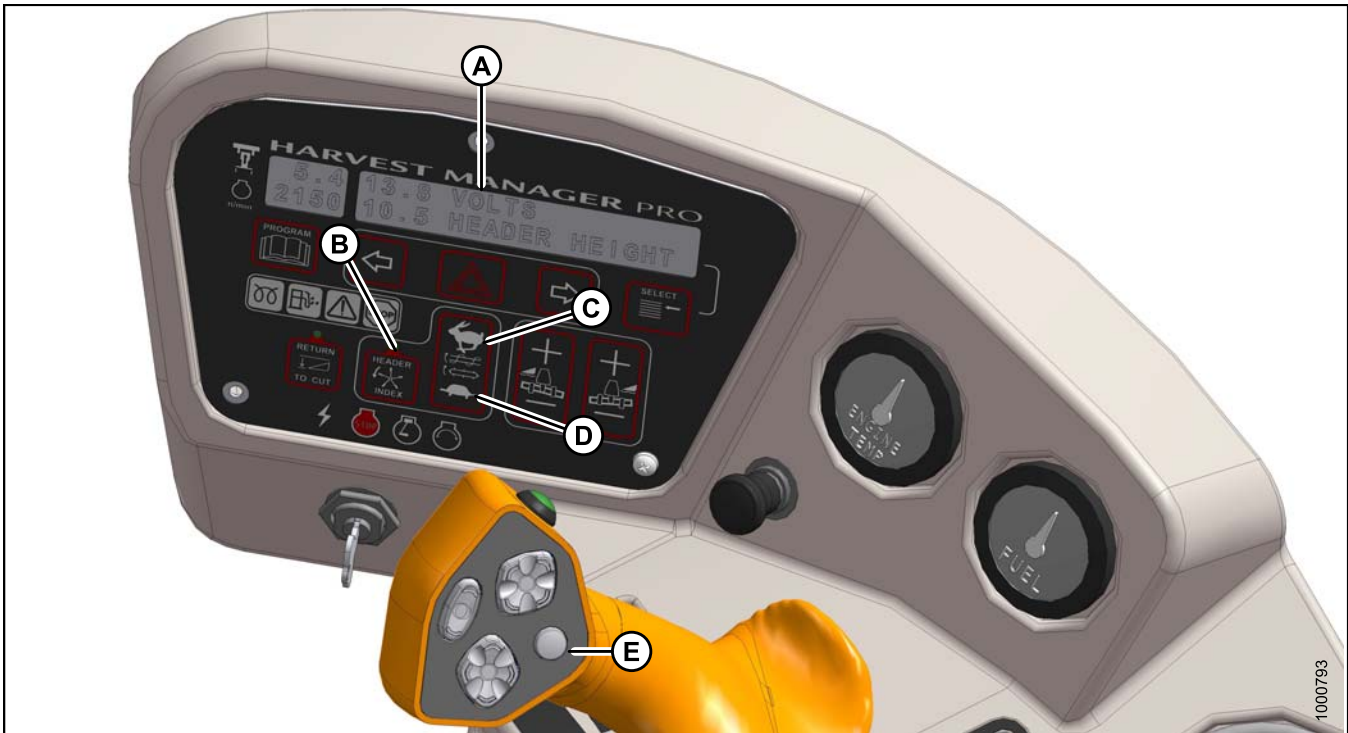


Figure 4.299: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

1. Set the minimum reel speed as follows:

IMPORTANT:

Set the minimum reel speed while stationary with the ground speed lever (GSL) in the N-DETENT position.

- a. Engage header.
- b. Set HEADER INDEX switch (B) to **ON**.
- c. Press the DISPLAY SELECTOR button (E) on the GSL to display **###.## MIN REEL** at (A) or press the FAST (C) or SLOW (D) switch.
The displayed value (**###.##**) = reel speed (rpm or mph or km/h²⁷).
- d. Press FAST (C) or SLOW (D) until the desired minimum reel speed is achieved.

2. Set the reel index as follows:

IMPORTANT:

Reel index can only be adjusted while operating at a ground speed faster than minimum reel speed plus header index value.

27. Depending on CDM programming.

OPERATION

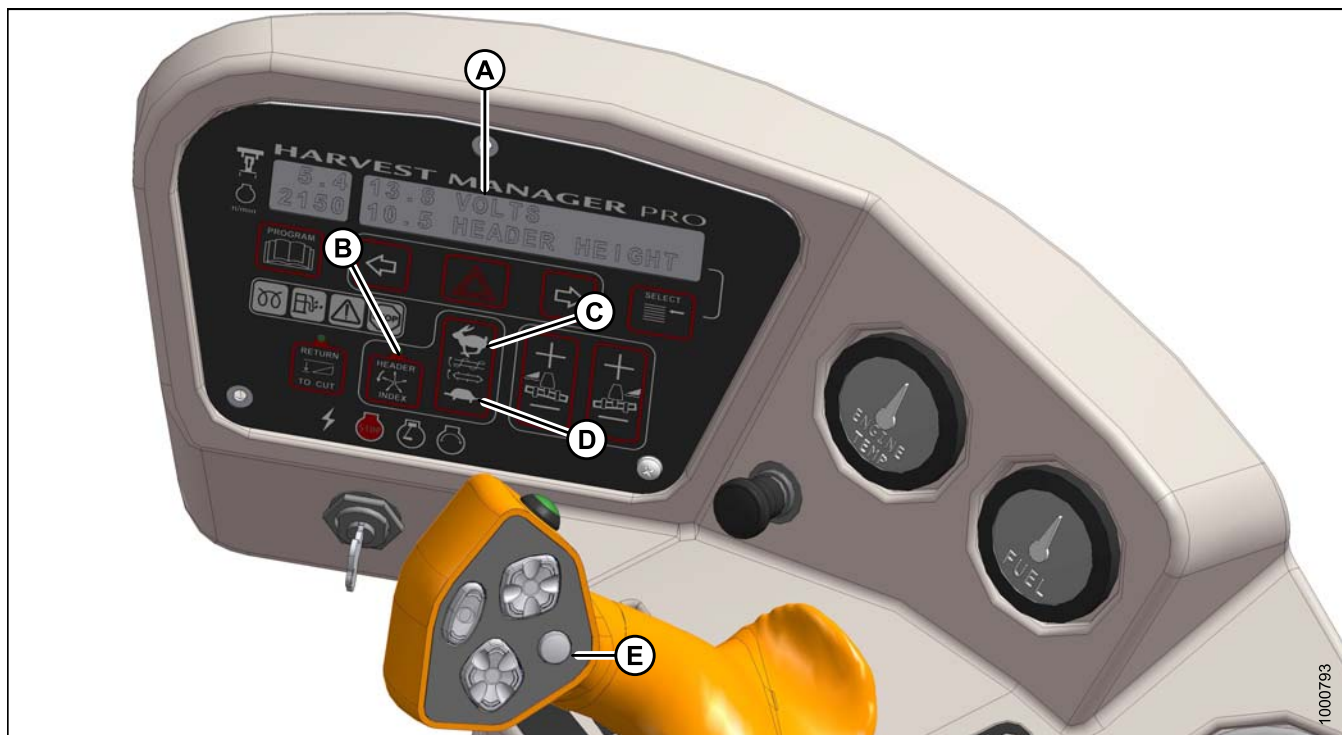


Figure 4.300: Operator Console

- Set the HEADER INDEX switch (B) to **ON**.
- Press the DISPLAY SELECTOR button (E) on the GSL to display **###.## ##.# REEL IND²⁸** or press the FAST (C) or SLOW (D) switch.
 - The displayed value (**###.##**) = reel speed (mph or km/h or rpm²⁷)
 - The displayed value (**##.#**) = reel index value
- Press FAST (C) or SLOW (D) until the desired reel index value is achieved.

NOTE:

The reel will continue operating at the minimum reel speed setting when ground speed drops below the set value. The cab display module (CDM) display (A) will flash **###.## MIN REEL (RPM or MPH or KPH²⁷)** prompting you to change the minimum set-point or increase ground speed if the total of ground speed, plus the index value is **LESS THAN** the minimum reel speed set-point.

Examples:

- Windrower is operating at 8 mph with HEADER INDEX ON, and set at -1.0.
Display shows: **7.0 -1.0 REEL IND** where **7.0** (8.0-1.0) is the reel speed in mph and **-1.0** is the header index setting.
- Windrower speed drops to 7.5 mph at same HEADER INDEX setting.
Display shows: **6.5 -1.0 REEL IND** where **6.5** (7.5-1.0) is the reel speed in mph and **-1.0** is the header index setting.
- Windrower is operating at 8 mph with HEADER INDEX ON, and set at 2.0.
Display shows: **10.0 2.0 REEL IND** where **10.0** (8+2.0) is the reel speed in mph and **2.0** is the header index setting.

28. REEL IND will only be displayed when operating at a ground speed faster than minimum reel speed plus header index value.

OPERATION

4.7.3 Knife Speed

The ideal knife cutting speed should achieve a clean cut. Crop types and conditions usually influence the knife and forward speeds.

When the header is first attached to the windrower, the windrower control module (WCM) receives a code from the header that determines the knife speed range and the minimum speed.

The desired speed can be programmed on the cab display module (CDM) and stored in the WCM memory so the knife will operate at the original set-point after the header is detached and reattached to the windrower.

If no header code is detected, the CDM displays NO HEADER and the knife speed reverts to the Operator's selection from a range of 800–1000 strokes per minute.

Refer to the header operator's manual for the suggested knife speed for a variety of crops and conditions.

NOTE:

The knife speed cannot be programmed outside the range specified for each header.

NOTE:

The knife speed can be adjusted without shutting down the machine, though it is recommended that the windrower be stopped before adjusting CDM settings.

Setting Knife Speed "On the Go"



Figure 4.301: Operator Console

CAUTION

Check to be sure all bystanders have cleared the area.

OPERATION

Display and set knife speed “on the go” as follows:

1. Engage header.
2. Press PROGRAM (D) and SELECT (E) on cab display module (CDM) until display (A) shows **#### KNIFE SPM**.
The displayed value (####) = strokes per minute.
3. Press SLOWER (B) or FASTER (C) until desired knife speed is displayed at (A).

Setting Disc Speed



Figure 4.303: Operator Console

A - Display
D - Slow

B - Header Index
E - Display Selector

C - Fast

CAUTION

Check to be sure all bystanders have cleared the area.

Follow these steps to set the disc speed:

1. Engage header.
2. Set HEADER INDEX switch (B) to **OFF**.
3. Press FAST (C) or SLOW (D) on ground speed lever (GSL) until display (A) shows **#### DISC RPM** with desired disc speed.

Displayed value (####) = disc speed (rpm).

5 Maintenance and Servicing

The following section will guide you through some of the windrower's basic maintenance and service requirements. More detailed maintenance, service, and parts information is available from your MacDon Dealer.

5.1 Preparation For Servicing

WARNING

To avoid personal injury, before servicing adapter/header or opening drive covers:

- Fully lower the header. If necessary to service in the raised position, always engage lift safety props.
- Disengage drives.
- Stop engine, and remove key.
- Wait for all moving parts to stop.

5.2 Engine Compartment Hood

The engine hood has two open positions. The lowest is for general maintenance such as checking and adding fluid, servicing the cooling box, etc. The highest position accommodates full access to the engine bay.

5.2.1 Opening Hood (Lower Position)

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Locate latch (A) behind grill and lift to release hood.
3. Raise hood until strap (B), which should be looped under hooks (C) and (D), stops it at approximately a 40° angle.
4. Remove strap from hook (C) and allow hood to rise slightly further.

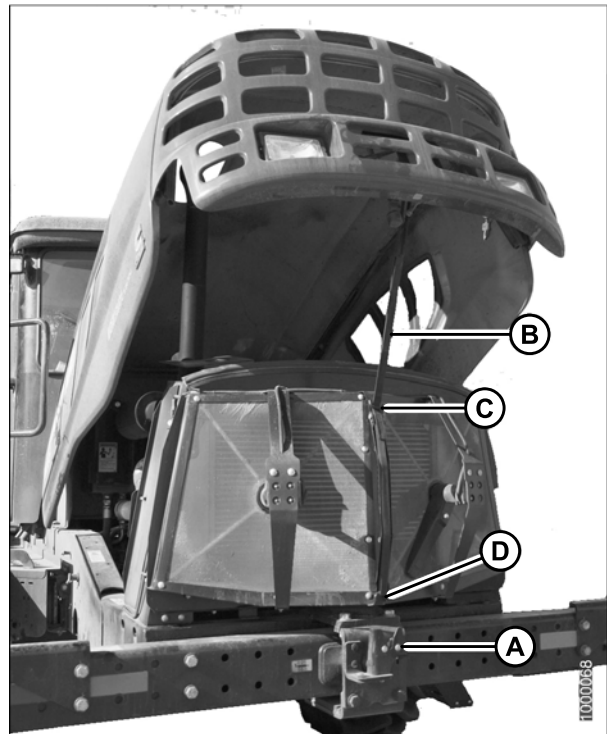


Figure 5.1: Hood Open (Lower Position)

5.2.2 Closing Hood (Lower Position)

1. Grasp the strap at (B) and loop under upper hook (C).

IMPORTANT:

Failure to hook strap may result in it becoming entangled with the screen cleaners or the latch.

2. Pull down on strap (B), grasp the hood when within reach and lower until hood engages latch (A).

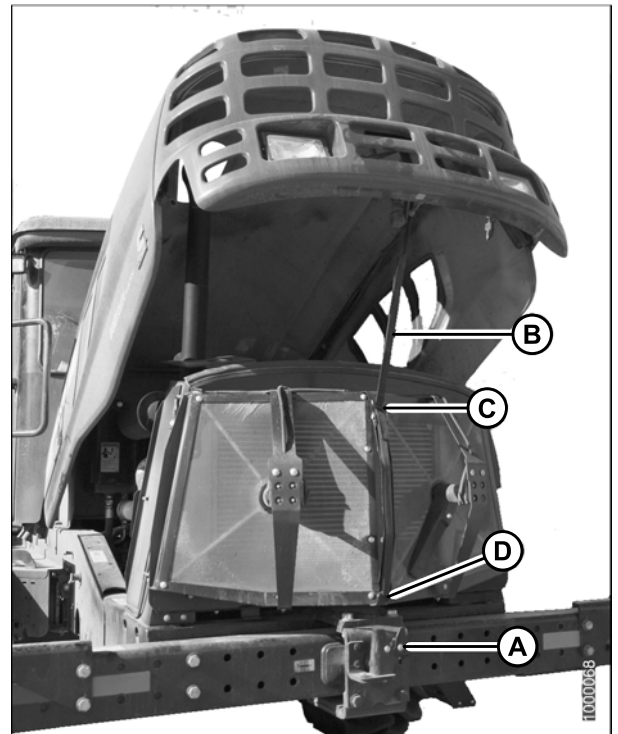


Figure 5.2: Hood Open (Lower Position)

5.2.3 Opening Hood (Highest Position)

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.

MAINTENANCE AND SERVICING

2. Locate latch (A) behind grill and lift to release hood.
3. Raise hood until strap (B) (which should be looped under hooks [C] and [(D)] stops it at approximately a 40° angle.
4. Remove strap from hook (C) and allow hood to rise slightly further.
5. Remove strap from hook (D) and allow hood to rise fully to approximately 65°.

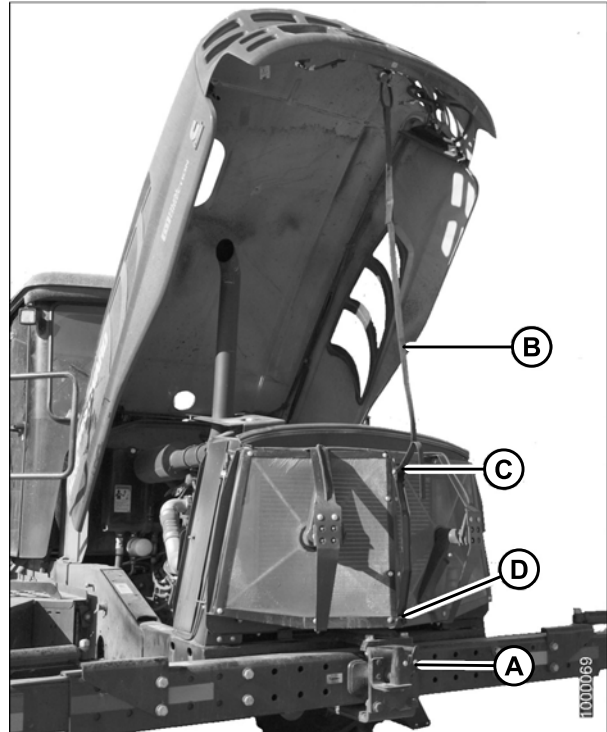


Figure 5.3: Hood Open (Highest Position)

5.2.4 Closing Hood (Highest Position)

1. Pull down on strap (B) and loop under lower hook (D).
2. Grasp the strap and loop under upper hook (C).

IMPORTANT:

Failure to hook strap may result in it becoming entangled with the screen cleaners or the latch.

3. Pull down on strap, grasp the hood when within reach, and lower until hood engages latch (A).

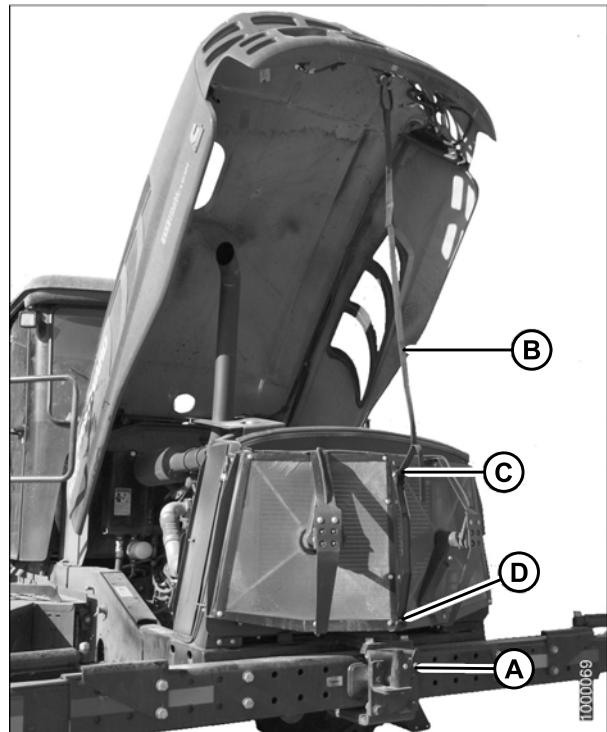


Figure 5.4: Hood Open (Highest Position)

5.3 Maintenance Platforms

Swingaway platform/stair units are provided on both sides of the windrower for access to the operator's station and engine bay.

The platforms can be swung away from the windrower to allow access to the hydraulics plumbing or battery.

The maintenance platforms have three positions:

- Closed position
- Open standard position
- Open major servicing position

5.3.1 Opening Platforms (Standard Position)

CAUTION

Do NOT stand on an unlocked side platform. It is unstable and may cause you to fall.

NOTE:

This procedure describes how to open the cab-forward left platform (A). Use the same procedure for the right platform (B).

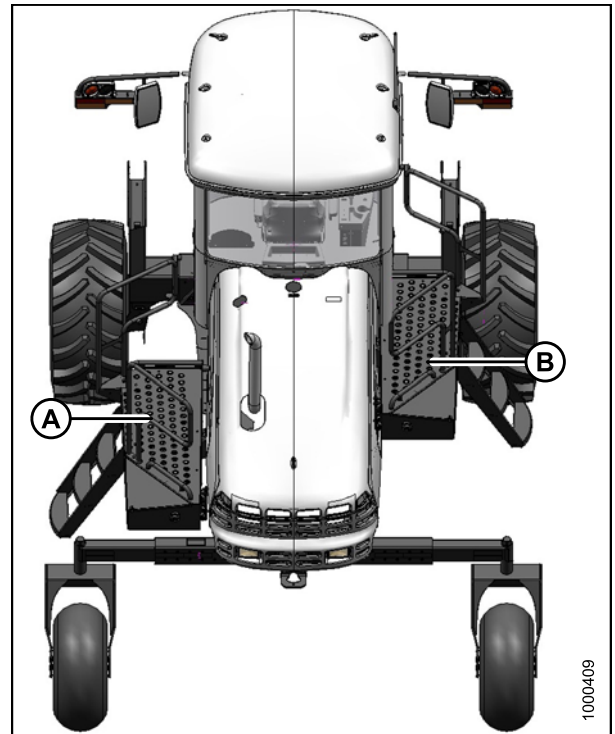


Figure 5.5: Platforms

MAINTENANCE AND SERVICING

1. Push latch (A) and pull platform (B) toward walking beam until it stops and latch engages in open position.

NOTE:

Ensure the platform is latched before using.

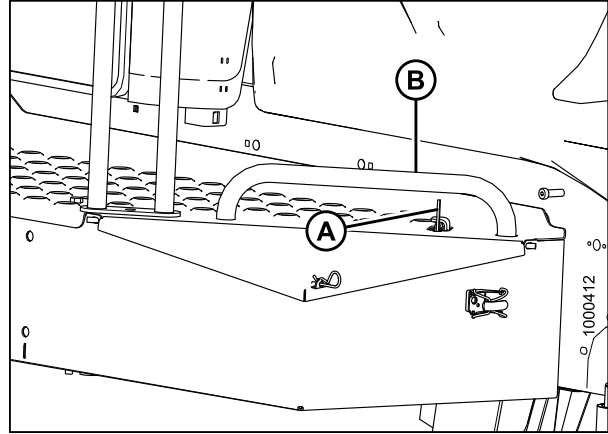


Figure 5.6: Platform Latch

5.3.2 Closing Platforms (Standard Position)

CAUTION

Do NOT stand on an unlocked side platform. It is unstable and may cause you to fall.

NOTE:

This procedure describes how to close the cab-forward left platform (A): use the same procedure for the right platform (B).

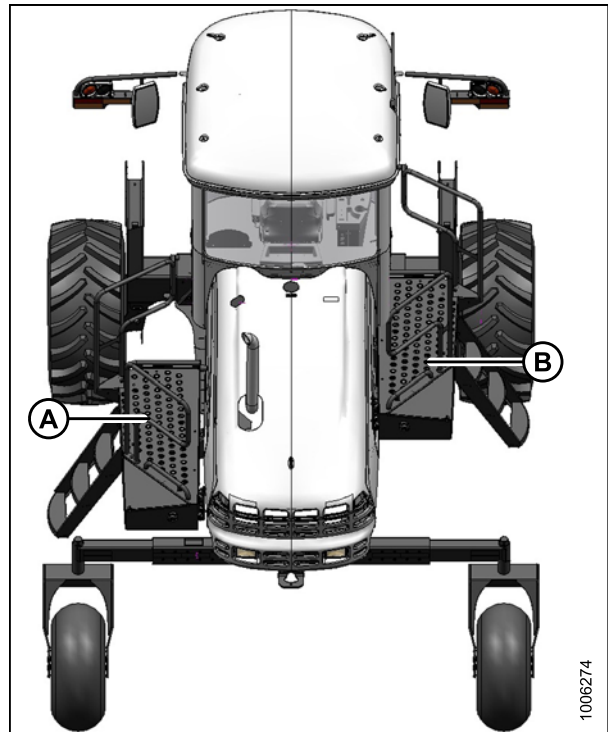


Figure 5.7: Platforms

MAINTENANCE AND SERVICING

1. If platform is latched in the open position, push latch (A) to unlock it.
2. Grasp handle (B) on platform and push forward until it stops and latch (A) engages.

NOTE:

Ensure the platform is latched properly before using.

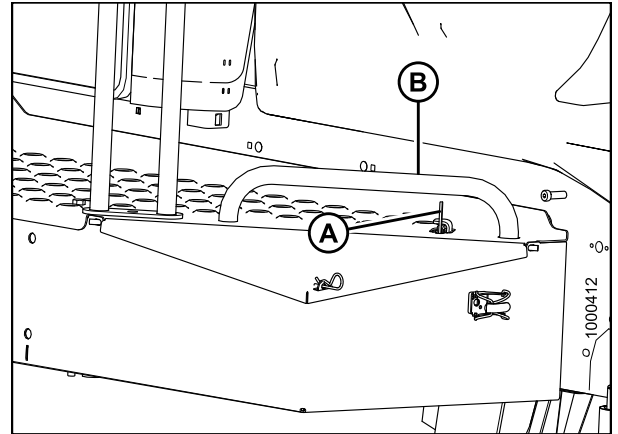


Figure 5.8: Platform Latch

5.3.3 Opening Platforms (Major Service Position)

To improve access to the hydraulics plumbing or battery, the platforms can be swung away from the windrower.

CAUTION

Do NOT stand on an unlocked side platform. It is unstable and may cause you to fall.

1. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.

IMPORTANT:

Failure to open hood will result in damage to the hood when the platform is moved.

NOTE:

This procedure describes how to open the cab-forward left platform (A): use the same procedure for the right platform (B).

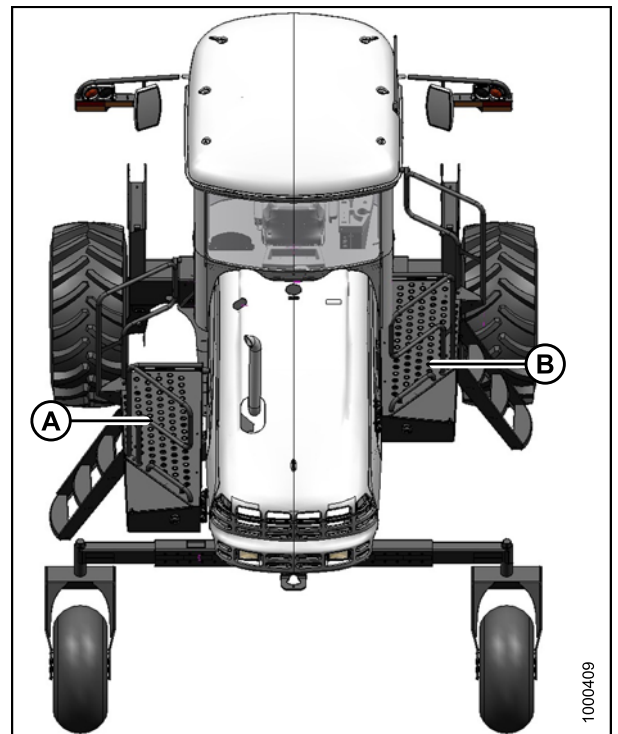


Figure 5.9: Platforms

MAINTENANCE AND SERVICING

2. Unlock latch (A) and move platform (B) toward open position. Do **NOT** lock in full aft position.

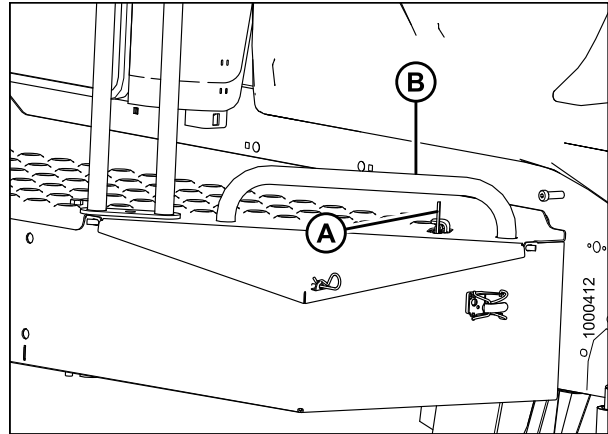


Figure 5.10: Platform Latch

3. Remove the nut and bolt that secure link (A) to the frame. Swing link (A) out of the way.
4. Pull the front (cab-forward) end of platform away from frame while moving it towards the walking beam. The aft corner of platform (B) should project slightly into the engine bay when the opening is optimum.

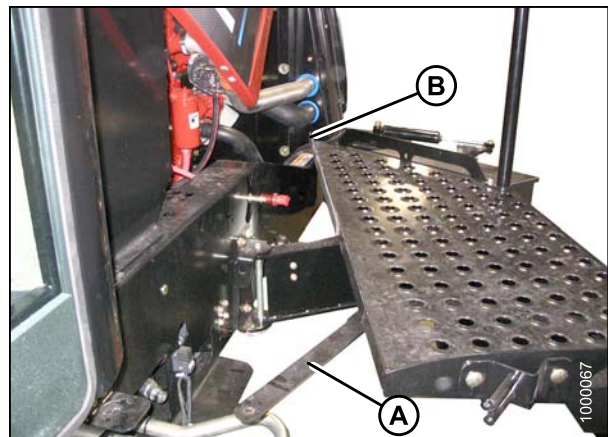


Figure 5.11: Platforms

5.3.4 Closing Platforms (Major Service Position)

CAUTION

Do **NOT** stand on an unlocked side platform. It is unstable and may cause you to fall.

1. Swing link (A) all the way forward.
2. Push the front (cab-forward) end of platform towards the frame while moving the platform forward (cab-forward).
3. Position link (A) on bracket and install bolt and nut. Tighten enough so that link can still swivel on bracket.

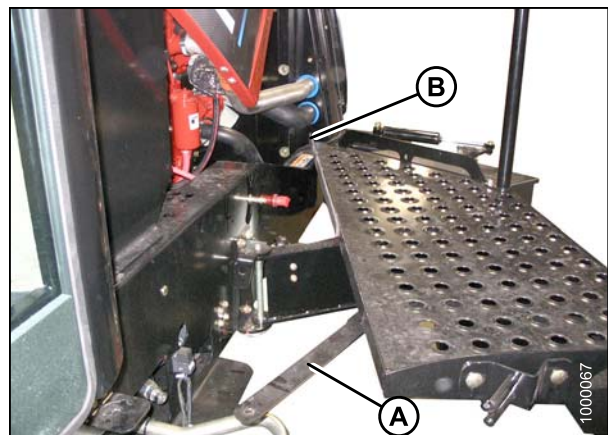


Figure 5.12: Platforms

MAINTENANCE AND SERVICING

4. Move platform (B) forward (cab-forward) until it stops and latch (A) engages.
5. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.

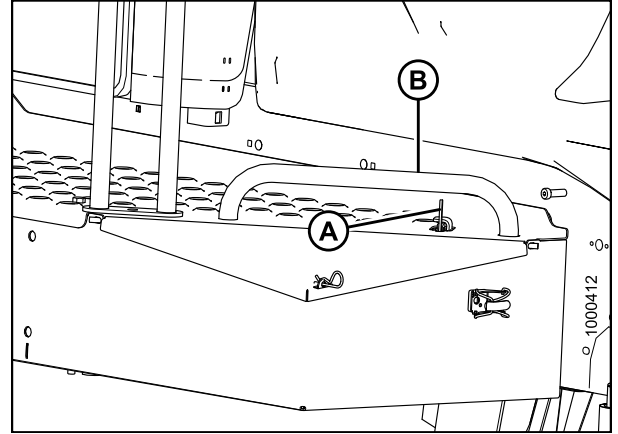


Figure 5.13: Platform Latch

5.4 Windrower Lubrication

WARNING

To avoid personal injury, before servicing windrower or opening drive covers, follow procedures in the SAFETY section.

The greasing points are marked on the machine by decals showing a grease gun and grease interval in hours of operation.

Log hours of operation and use the Maintenance Checklist provided to keep a record of scheduled maintenance. Refer to *Maintenance Schedule/Record, page 427*.

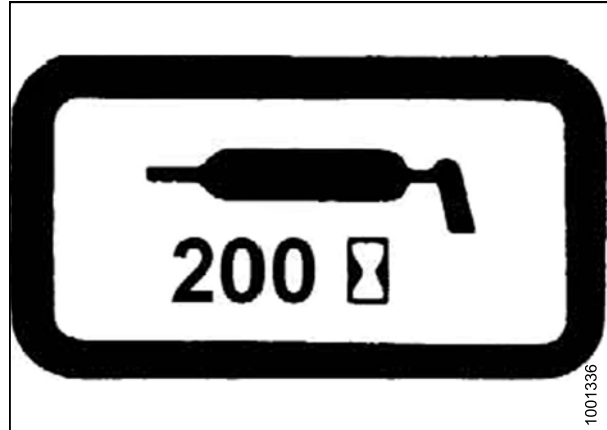


Figure 5.14: Lubrication Interval Decal

5.4.1 Lubricating the Windrower

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. To avoid injecting dirt and grit, wipe grease fitting with a clean cloth before greasing.
2. Inject grease through fitting with grease gun until grease overflows fitting, except where noted. Refer to *8.2.3 Lubricants, Fluids, and System Capacities, page 466*.
3. Leave excess grease on fitting to keep out dirt.
4. Replace any loose or broken fittings immediately.
5. If fitting will **NOT** take grease, remove and clean thoroughly. Also clean lubricant passageway. Replace fitting if necessary.

5.4.2 Lubrication Points

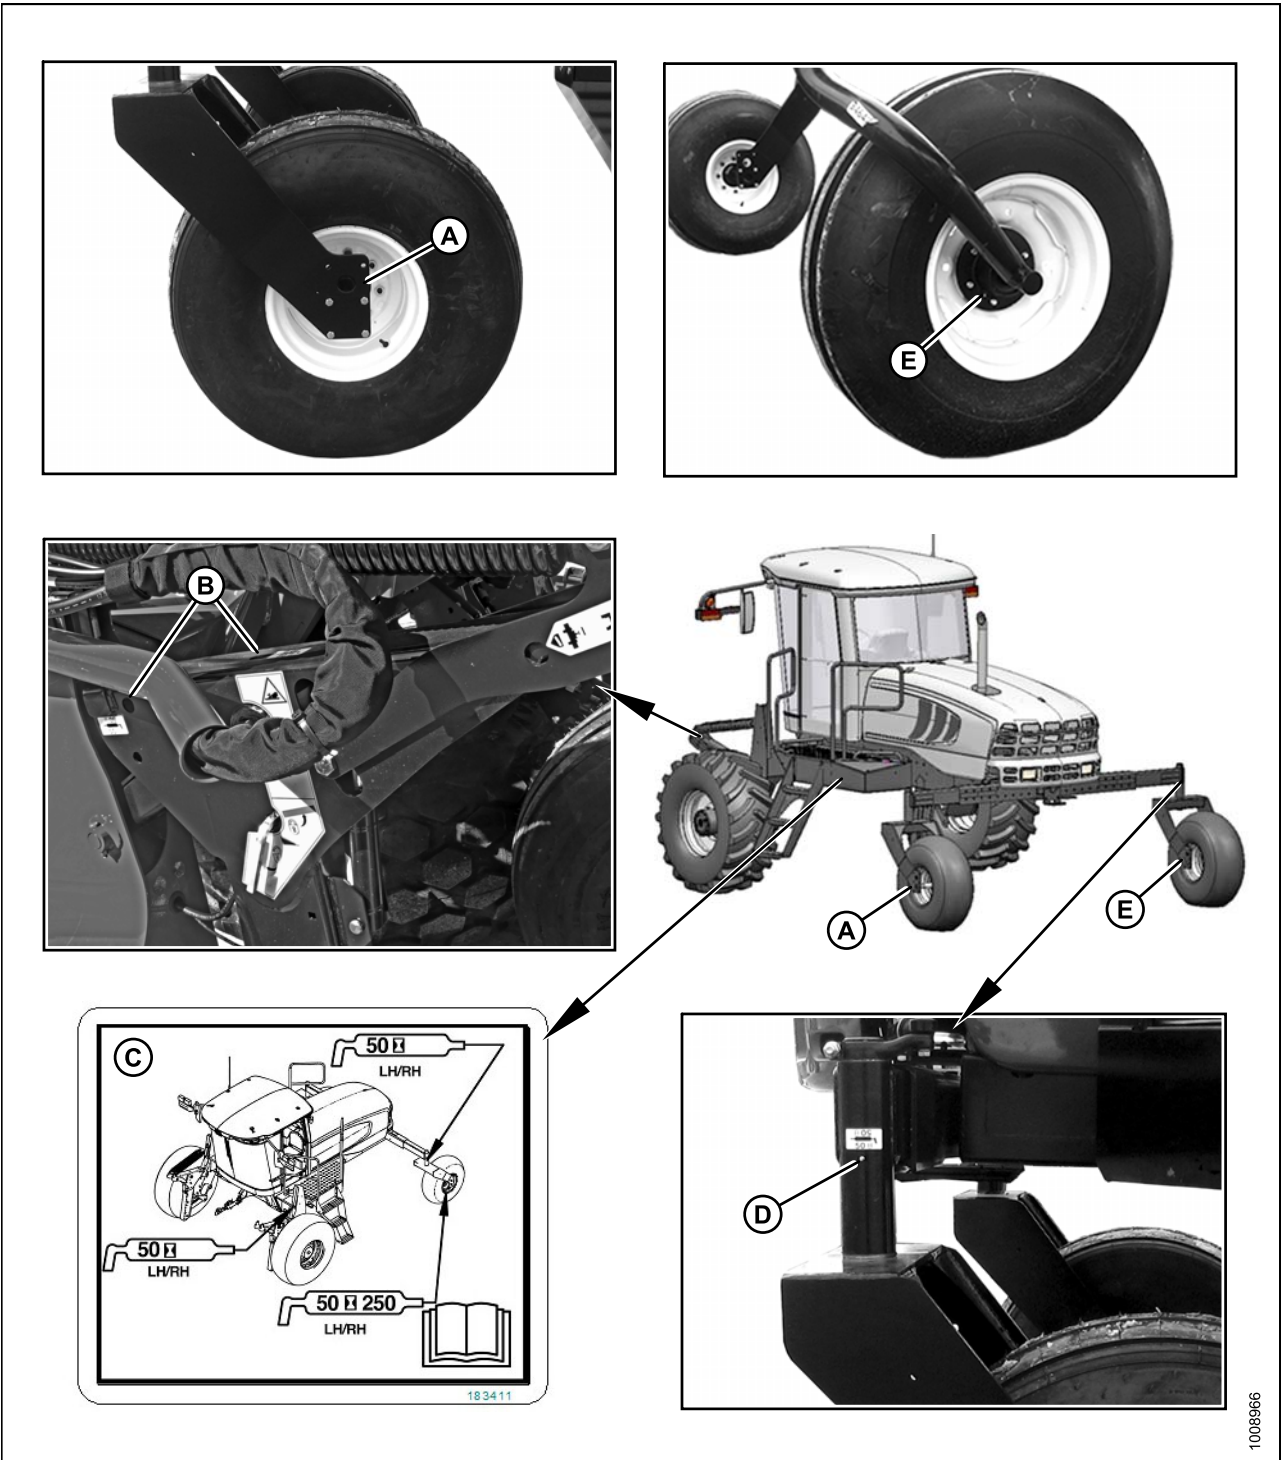


Figure 5.15: Lubrication Points

A - Forked Caster Wheel Bearing (2 Places) (Outer – Both Wheels)

C - Lubrication Decal (MD #183411)

E - Forked/Formed Caster Wheel Bearing (2 Places) (Inner – Both Wheels) (50 Hrs/250 Hrs)

B - Top Link (2 Places) (Both Sides)

D - Caster Pivot (Both Sides)

5.5 Operator's Station

5.5.1 Seat Belts

- Keep sharp edges and items that can cause damage away from the belts.
- Check belts, buckles, retractors, tethers, slack take-up system, and mounting bolts for damage.
- Check that bolts are tight on the seat bracket or mounting.
- Replace all parts that have damage or wear.
- Replace belts that have cuts that can weaken the belt.
- Keep seat belts clean and dry. Clean only with a soap solution and warm water. Do **NOT** use bleach or dye on the belts, as this may weaken the material.

5.5.2 Safety Systems

Perform the following checks on the operator's presence and engine lock-out systems every year or every 500 hours—whichever occurs first.

Checking Operator Presence System



CAUTION

Check to be sure all bystanders have cleared the area.

1. While the windrower engine running, place the ground speed lever (GSL) in NEUTRAL and turn the steering wheel until it locks.
2. With everyone clear of the machine, engage header drive switch:
 - a. After header drives are running, stand up out of the seat. In approximately 5 seconds, the header should shut off.
 - b. If **NOT**, the Operator Presence System requires adjustment. See your MacDon Dealer.

NOTE:

To restart the header, move the HEADER DRIVE switch to OFF position and back to the ON position again.

3. With the engine running, position the GSL in NEUTRAL and in N-DETENT:
 - a. Swivel the operator's station, but do **NOT** lock into position.
 - b. Move GSL out of N-DETENT. The engine should shut down and the lower display will flash "LOCK SEAT BASE → CENTER STEERING WHEEL → NOT IN NEUTRAL".
 - c. Swivel and lock the operator's station and the display should return to normal.
 - d. If the engine does **NOT** shut down, the seat position switches require adjustment. See your MacDon Dealer.
4. With the windrower moving at less than 5 mph (8 km/h):
 - a. Stand up out of the seat.
 - b. The cab display module (CDM) will flash "NO OPERATOR" on the upper line and "ENGINE SHUT DOWN 5...4...3...2...1...0" on the lower line accompanied by a steady tone. At "0", the engine shuts down.
 - c. If the engine does **NOT** shut down, the Operator Presence System requires adjustment. See your MacDon Dealer.

MAINTENANCE AND SERVICING

5. With the windrower moving at more than 5 mph (8 km/h):
 - a. Stand up out of the seat.
 - b. The CDM should beep once and display “NO OPERATOR” on the lower line.
 - c. If **NOT**, the Operator Presence System requires adjustment. See your MacDon Dealer.

Checking Engine Interlock

CAUTION

Check to be sure all bystanders have cleared the area.

1. With the engine shut down and the header drive switch engaged, try to start the engine. If the engine turns over, the system requires adjustment. See your MacDon Dealer.
2. With the engine shut down, steering wheel **NOT** centered, and the ground speed lever (GSL) in NEUTRAL, but **NOT** in N-DETENT, try to start the engine. The cab display module (CDM) will flash “NOT IN NEUTRAL” on the display upper line and “CENTER STEERING WHEEL” on the lower line, accompanied by a short beep with each flash and the engine should **NOT** turn over. If the engine turns over, the system requires adjustment. See your MacDon Dealer.

A properly functioning system should operate as follows. If not, see your MacDon Dealer.

- The starter should engage **ONLY** when the GSL is in N-DETENT, steering wheel locked in the CENTER position and the header drive switch is in the OFF position.
- The brake should engage and the machine should **NOT** move after engine start-up, under the above conditions.
- The steering wheel should **NOT** lock with the engine running and the GSL is out of the N-DETENT.
- The machine should **NOT** move with the engine running and with the steering wheel still centered, when the GSL is pulled straight out of N-DETENT (**NOT** in forward or reverse).

5.5.3 Ground Speed Lever (GSL) Adjustments

Adjusting Ground Speed Lever (GSL) Lateral Movement

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator’s seat for any reason.

The ground speed lever (GSL) should easily move into the N-DETENT by itself.

Adjust the lateral pivot resistance as follows:

MAINTENANCE AND SERVICING

1. Remove the five screws (A) securing control panel (B) to console, remove panel, and store in the tray.

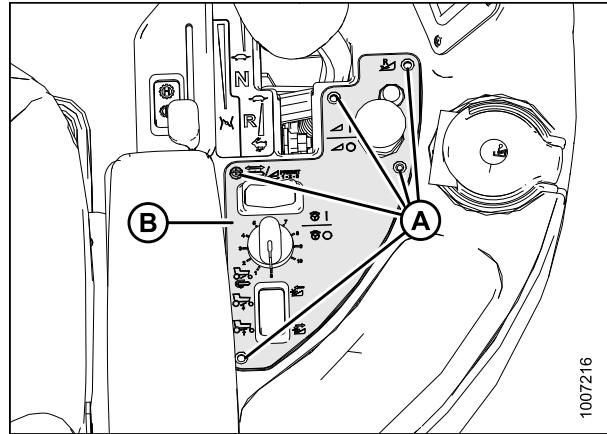


Figure 5.16: Header Control Panel

2. Back off the jam nut (A) and turn nut (B) to either tighten or loosen the pivot. The nut should be tightened to snug and then backed off 1/2 turn.
3. Tighten jam nut (A).
4. Check movement of GSL.

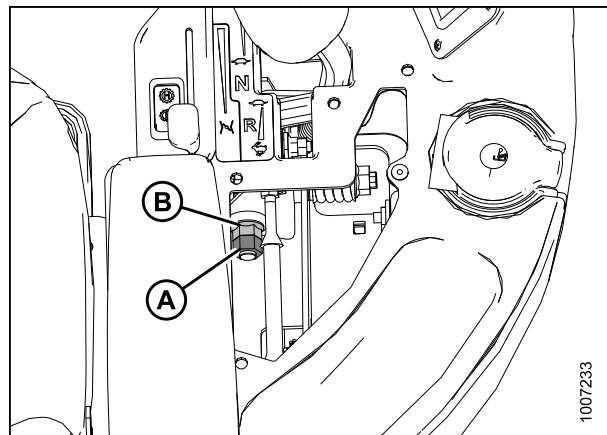


Figure 5.17: Header Control Panel

5. Reinstall the control panel (B) with the five screws (A).

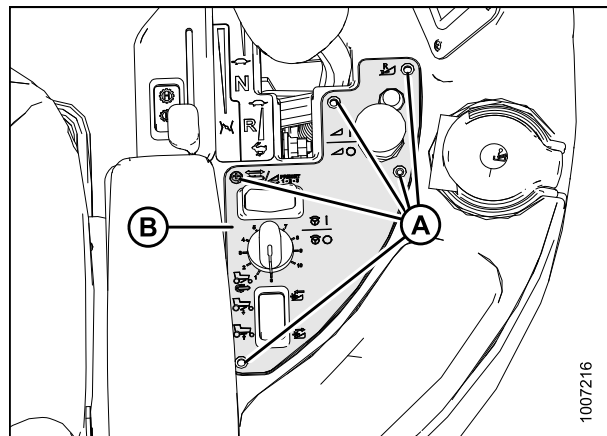


Figure 5.18: Header Control Panel

Adjusting Ground Speed Lever (GSL) Fore-Aft Movement

The GSL should remain as positioned by the Operator yet be movable without excessive force.

Adjust as follows:

MAINTENANCE AND SERVICING

1. Pull handle (A) toward the operator's seat and move the console fully forward to ease accessibility from the underside of the console.

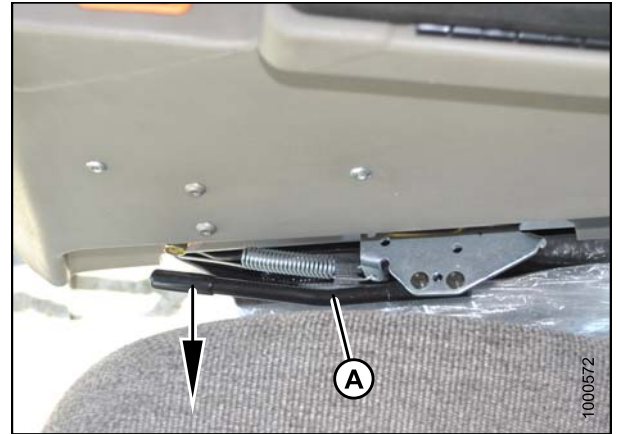


Figure 5.19: Seat Adjustment Handle

2. Set spring dimension (B) to 1-1/4 in. (32 mm).
3. To increase the pivot resistance, turn the nut (A) clockwise to compress the spring.
4. To decrease the resistance, turn the nut (A) counterclockwise to release the spring tension.

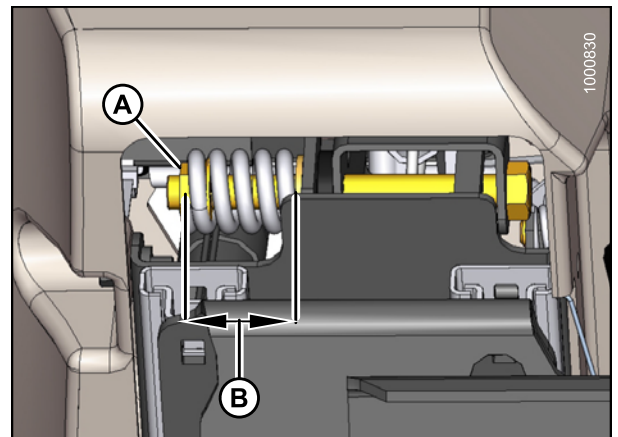


Figure 5.20: GSL Adjustment Spring

B - Spring Dimension 1-1/4 in. (32 mm)

5.5.4 Steering Adjustments

Checking Steering Link Pivots

The following checks should be performed every year:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Place ground speed lever (GSL) (A) in N-DETENT, shut down engine, and remove key.



Figure 5.21: Operator Console

2. Check steering rod bolts (A) for looseness and ball joints (B) for any perceptible movement.

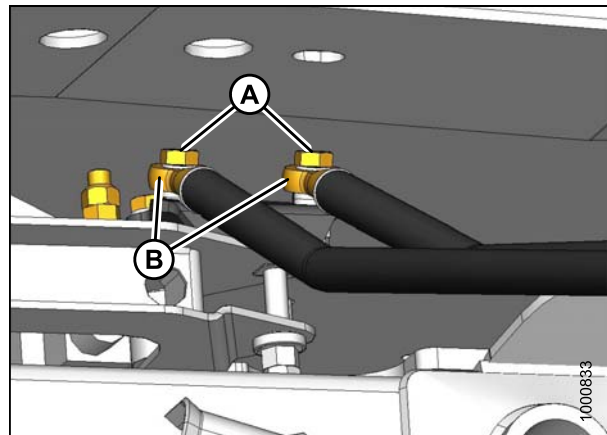


Figure 5.22: Steering Rods

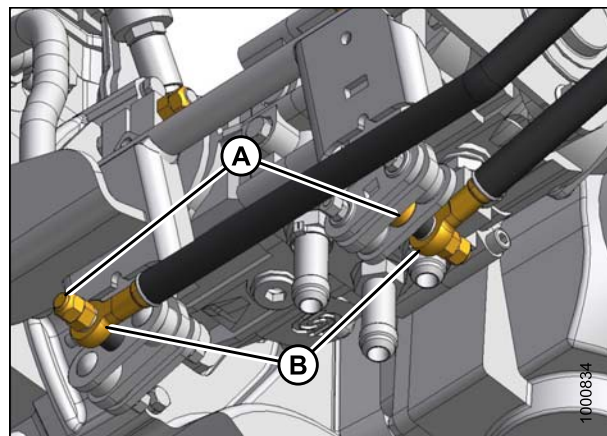


Figure 5.23: Steering Rods (Pump End)

MAINTENANCE AND SERVICING

3. Check steering link bolts (A) for looseness and ball joints (B) for any perceptible movement.

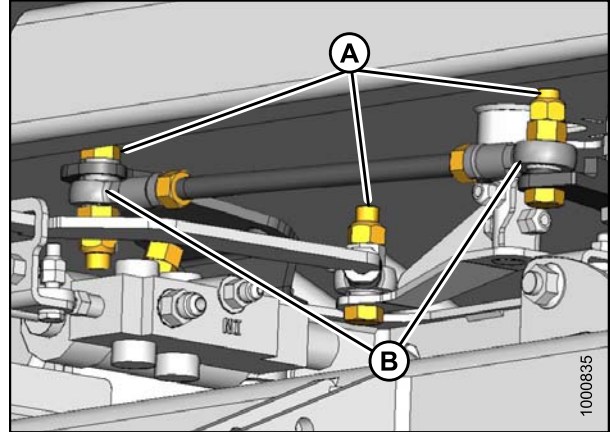


Figure 5.24: Steering Link

4. If bolts are loose:
 - a. Back off jam nut (A).
 - b. Tighten inside nut (B) to 70–80 ft·lbf (95–108 N·m).
 - c. Hold inside nut (B) and tighten jam nut (A) to 60–70 ft·lbf (81–95 N·m).

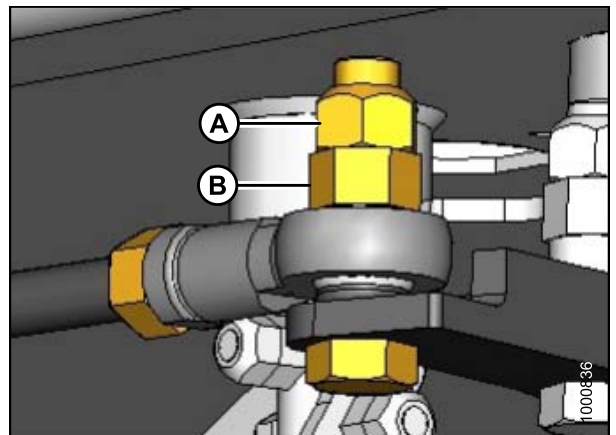


Figure 5.25: Steering Link

5. See your MacDon Dealer to replaced any loose steering link ball joints or steering rod ball joints.
6. After replacing parts or making adjustments, perform checks for Neutral Interlock and steering lock. Refer to [5.5.2 Safety Systems, page 316](#).

Checking Steering Chain Tension

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Check steering for binding or excessive play which may be the result of the steering chain being too tight or too loose. If the steering chain does **NOT** require adjustment, skip the following steps.
2. If the chain tension requires adjustment, swivel the operator's station to position steering column close to the door.

MAINTENANCE AND SERVICING

3. At the base of the steering column, check dimension (C) at spring. It should be 5/8 in. (16 mm). Adjust dimension as follows:
 - a. Loosen nut (A) and turn nut (B) to achieve 5/8 in. (16 mm) dimension (C).
 - b. Tighten nut (A) against nut (B) to secure position.
 - c. Check that steering chain is taut and steering shaft is free to rotate.

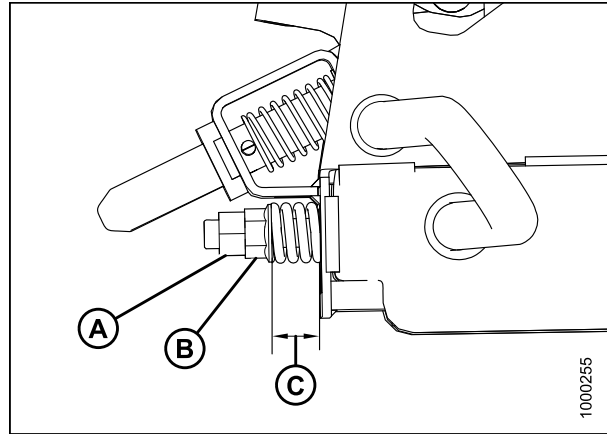


Figure 5.26: Steering Tension Adjuster

5.5.5 Park Brake

The brake is applied when the interlock is fully engaged. To engage the interlock and the brake, the ground speed lever (GSL) must be in the N-DETENT position and the steering wheel centered.

Adjusting and Replacing Interlock Switch

The ground speed lever (GSL) switch is located inside the console, but can easily be removed for adjustment or replacement. Check that GSL contacts switch lever and pushes plunger.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Adjust or replace switch as follows:

1. Place GSL (A) in N-DETENT, shut down engine, and remove key.



Figure 5.27: Operator Console

MAINTENANCE AND SERVICING

2. Remove the five screws (A) securing the control panel (B) to the console.
3. Remove the control panel (B) and store in the tray.

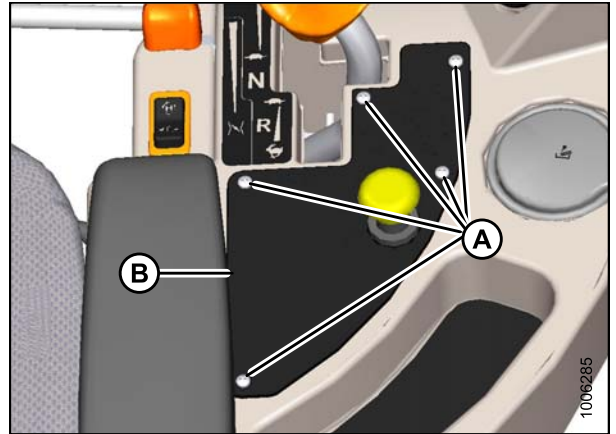


Figure 5.28: Header Control Panel

4. Remove the three rubber nuts (A) securing the switch support plate (B) to the console.

NOTE:

For clarity, console in the image was made transparent to show the switch support plate (B).

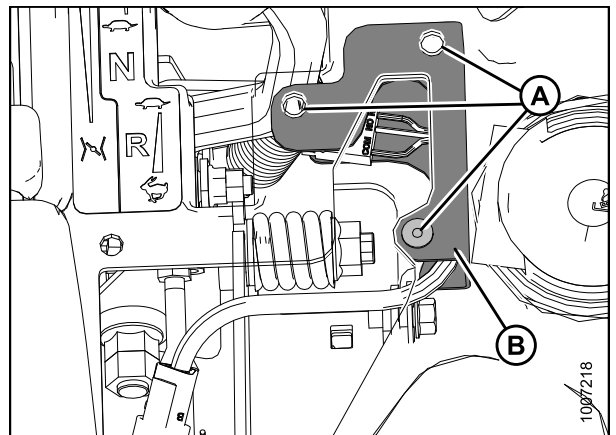


Figure 5.29: Console (Transparent)

5. Move the switch support plate (A) on top of the console (B).

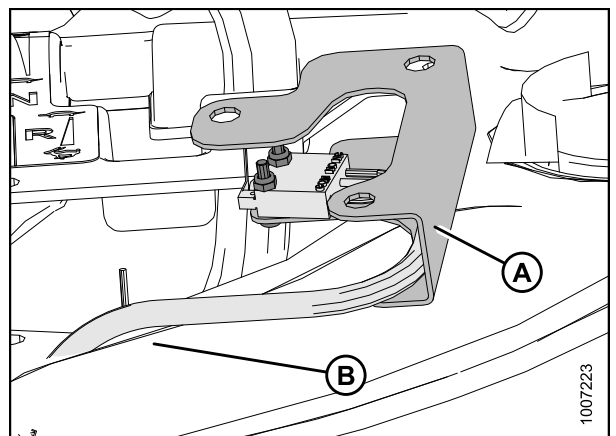


Figure 5.30: Switch Support Plate

MAINTENANCE AND SERVICING

6. Adjust switch (A) as follows:
 - a. Loosen nuts (B) and rotate switch on support sufficiently so that GSL will contact switch lever (C) and push in the plunger (D).
 - b. Tighten nuts (B).

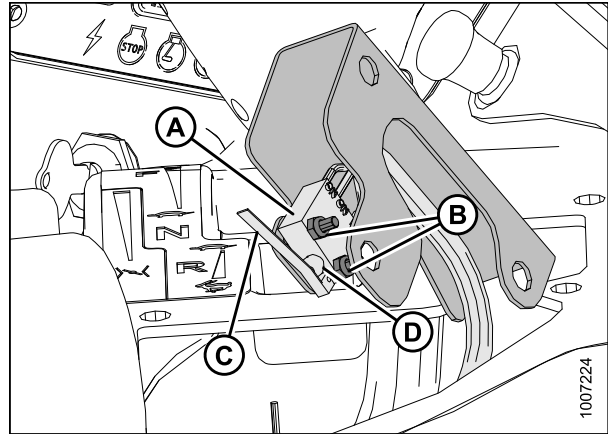


Figure 5.31: Interlock Switch

7. If necessary, replace switch as follows:
 - a. Disconnect wiring harness (A) at connector.
 - b. Remove nuts and screws (B) and remove the old switch (C).
 - c. Install the new switch (C) on the support and secure with nuts and screws (B).
 - d. Connect harness (A) to console wiring.

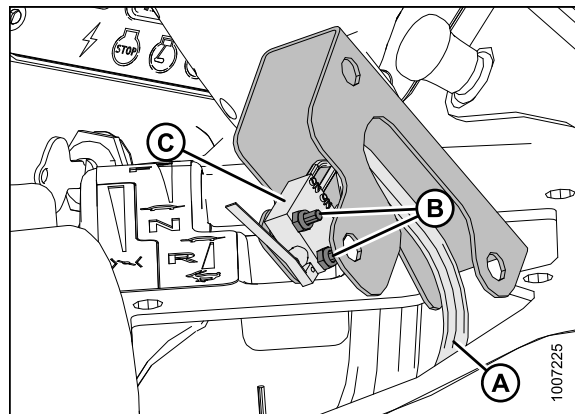


Figure 5.32: Interlock Switch

8. Position the switch support plate (B) inside the console and secure with rubber nuts (A).

NOTE:

For clarity, console in the image was made transparent to show the switch support plate (B).

9. Check operation of the new switch.

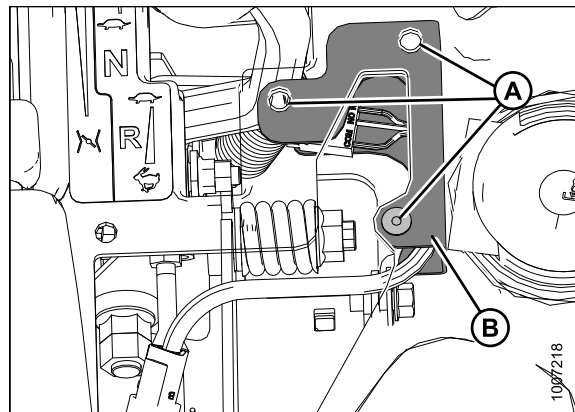


Figure 5.33: Console (Transparent)

10. Reinstall control panel (B) with five screws (A).

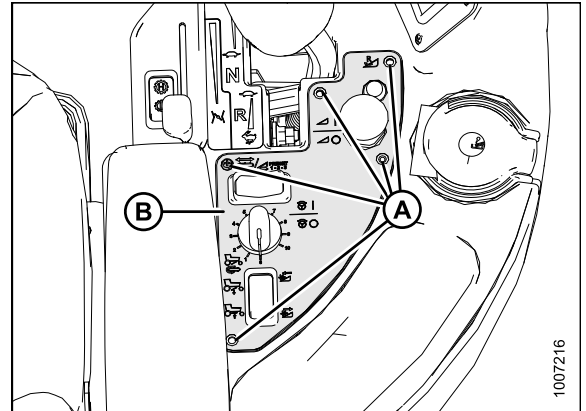


Figure 5.34: Header Control Panel

5.5.6 Heating, Ventilating, and Air Conditioning (HVAC) System

Fresh Air Intake Filter

The fresh air filter is located outside the right rear of the cab and should be serviced every 50 hours under normal conditions and more frequently in severe conditions.

Removing Fresh Air Filter



To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Open the right cab-forward platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
2. Rotate latch (A) and slide filter tray (B) out of the housing.

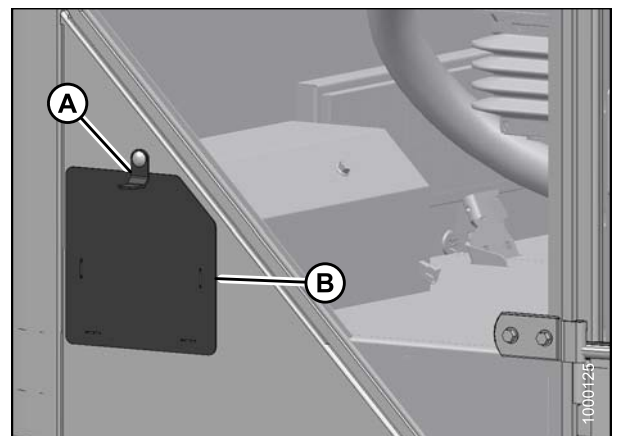


Figure 5.35: Filter Tray

MAINTENANCE AND SERVICING

3. Remove filter (A) from tray (B).

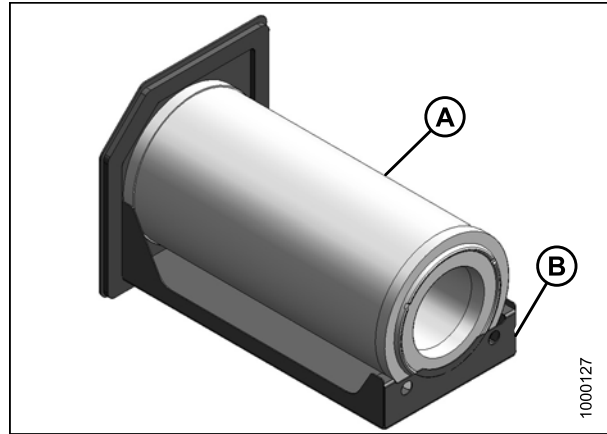


Figure 5.36: Fresh Air Filter

Inspecting And Cleaning Fresh Air Filter Element

1. Tap the sides of the filter element gently to loosen dirt. Do **NOT** tap element against a hard surface.
2. Using a dry element cleaner gun, clean element with compressed air.

IMPORTANT:

Air pressure must **NOT** exceed 60 psi (414 kPa). Do **NOT** direct air against outside of element, as dirt might be forced through to inside.

3. Hold the air nozzle next to the filter element's inner surface and move up and down pleats.
4. Repeat previous steps to remove additional dirt as required.
5. Hold a bright light inside the element and check carefully for holes. Discard any element that shows the slightest hole.
6. Check outer screen for dents. Vibration would quickly wear a hole in the filter.
7. Check filter gasket for cracks, tears, or other signs of damage. If gasket is damaged or missing, replace element.

Installing Fresh Air Filter

Refer to [8.2.4 Filter Part Numbers, page 467](#) for part number.

1. Clean tray (B) and interior of filter housing.
2. Place filter (A) onto tray (B).

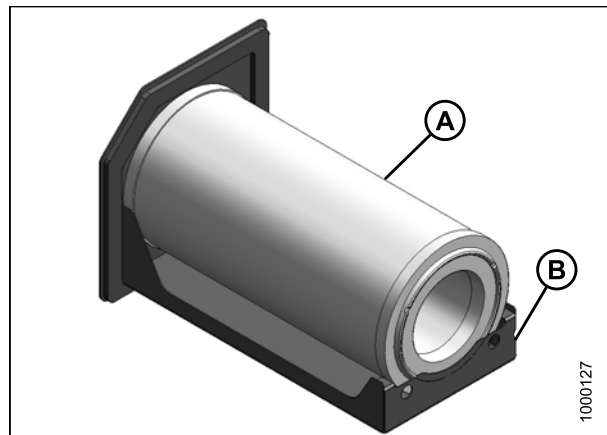


Figure 5.37: Fresh Air Filter

MAINTENANCE AND SERVICING

3. Slide filter tray (B) into housing.
4. Close and latch housing door (A).

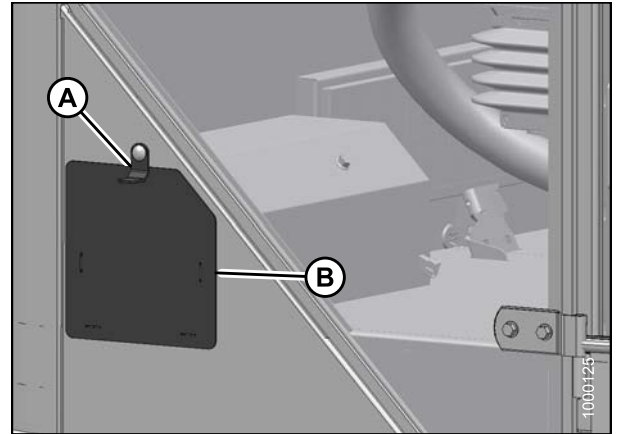


Figure 5.38: Cab Fresh Air Filter Access

Return Air Cleaner/Filter

The return air cleaner/filter is located behind the operator's seat on the cab wall and should be serviced every 100 hours.

Removing and Installing Return Air Filter/Cleaner

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

If replacing the return air filter, refer to [8.2.4 Filter Part Numbers, page 467](#) for the part number.

1. Unscrew the two knobs (A) attaching cover and filter to cab wall, and remove the cover and filter assembly (B).

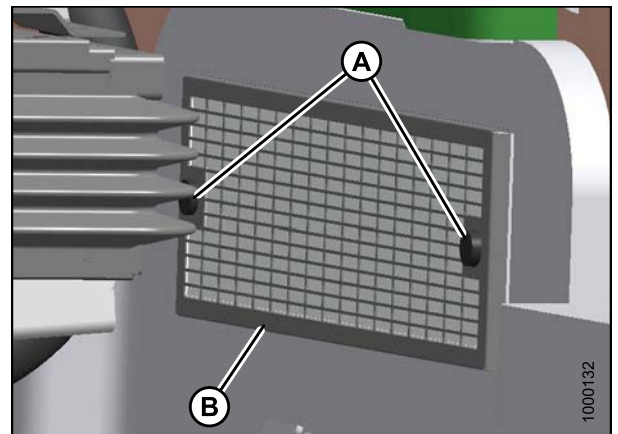


Figure 5.39: Return Air Filter

MAINTENANCE AND SERVICING

2. Separate the filter (B) from the cover (A).
3. Clean or replace the filter. If cleaning filter, refer to [Cleaning Return Air Cleaner, page 328](#).
4. Assemble the cleaner (B) and cover (A), and position on cab wall over opening.

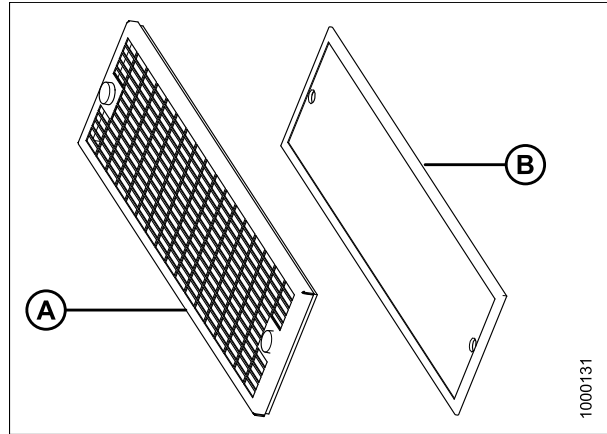


Figure 5.40: Return Air Filter

5. Secure filter assembly (B) to cab wall with knobs (A).

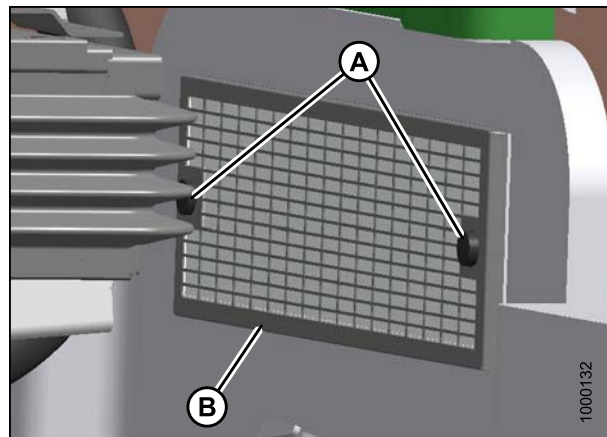


Figure 5.41: Return Air Filter

Cleaning Return Air Cleaner

Clean the electrostatic filter as follows:

1. Mix a solution of warm water and detergent in a suitable container so that the filter (B) can soak for a few minutes.
2. Agitate to flush out the dirt.
3. Rinse with clean water, and then dry with compressed air.
4. Inspect filter for damage, separation, and holes. Replace if damaged.

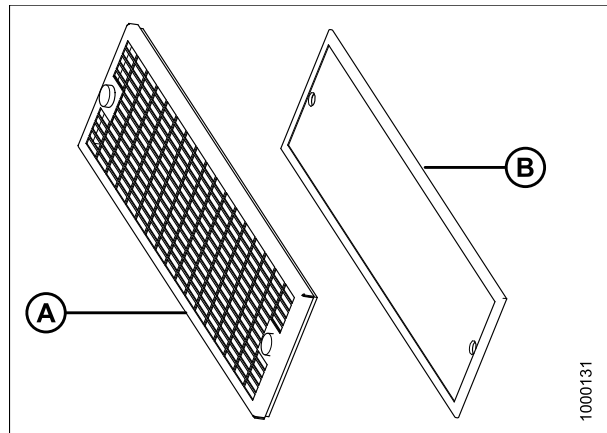


Figure 5.42: Return Air Filter

Air Conditioning Condenser

The air conditioning condenser should be cleaned daily with compressed air. More frequent cleaning may be necessary in severe conditions.

Cleaning the condenser can be done at the same time as the radiator, oil cooler, and charge air cooler. Refer to [Maintaining Engine Cooling Box, page 358](#).

Air Conditioning (A/C) Evaporator Core

The A/C evaporator should be checked annually for cleanliness. If the A/C system produces insufficient cooling, a possible cause is clogged evaporator fins. Fins will clog up from the side opposite the blowers. The evaporator is located inside the heating air conditioning unit under the cab.

Removing Air Conditioning (A/C) Cover

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Loosen the clamps (A) on the two drain hoses and pull the hoses off the A/C drain tubes.

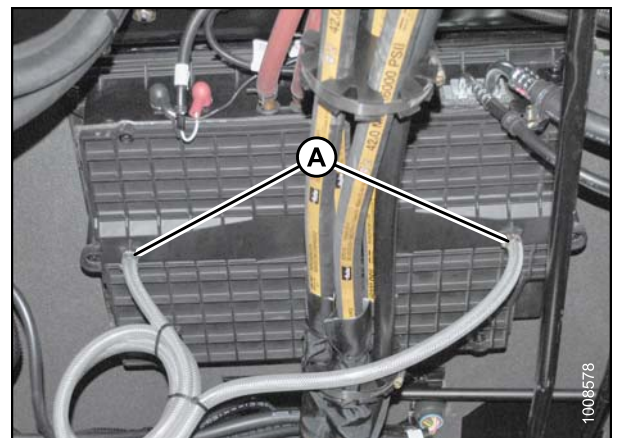


Figure 5.43: HVAC System

2. Remove the eight screws (A) that attach the cover (B) and remove the cover.

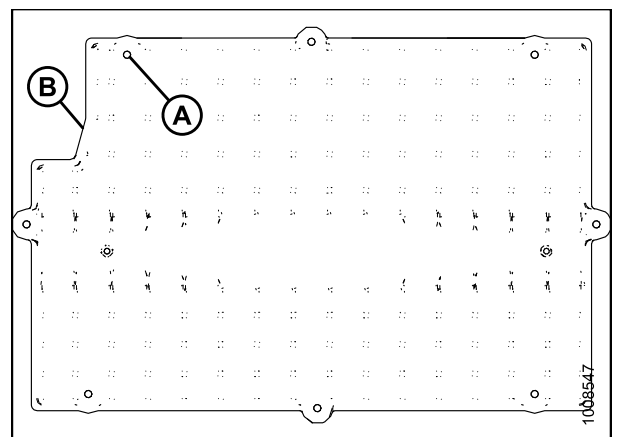


Figure 5.44: HVAC System

Cleaning Air Conditioning (A/C) Evaporator Core

WARNING

To avoid cuts from evaporator fins, do NOT use bare hands to brush away clogs.

MAINTENANCE AND SERVICING

1. Use a vacuum cleaner or compressed air to remove dirt from inside the unit.
2. Blow compressed air through the evaporator fins from the blower side (A) first as shown. Direct the air straight into the evaporator to prevent fin damage. A nozzle extension makes this procedure easier.
3. Repeat the previous step from the side (B) opposite the blowers.

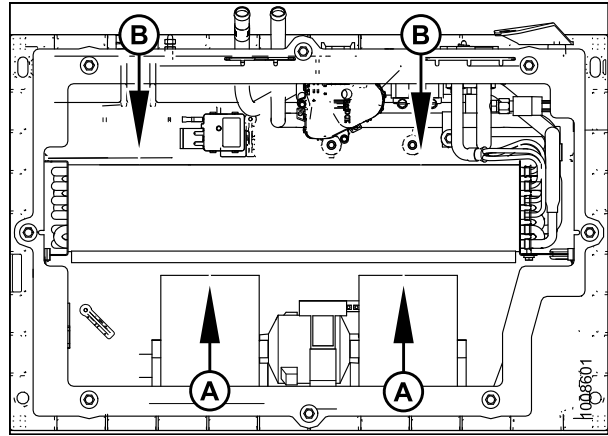


Figure 5.45: HVAC System

4. If you cannot feel the compressed air blowing through the evaporator core, proceed as follows:
 - a. Protect the blower motor (A) from water.
 - b. Soak the evaporator core (B) with warm water using a low pressure hose. Let soak for several minutes.
 - c. Blow compressed air through the core from the blower side (C).
 - d. Repeat the soaking procedure until air blows through the evaporator freely.

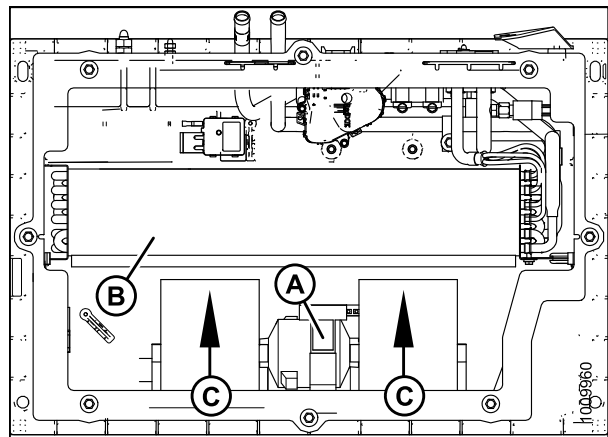


Figure 5.46: HVAC System

Installing Air Conditioning (A/C) Cover

1. Straighten any bent fins.
2. Position cover (B) and attach with eight screws (A).

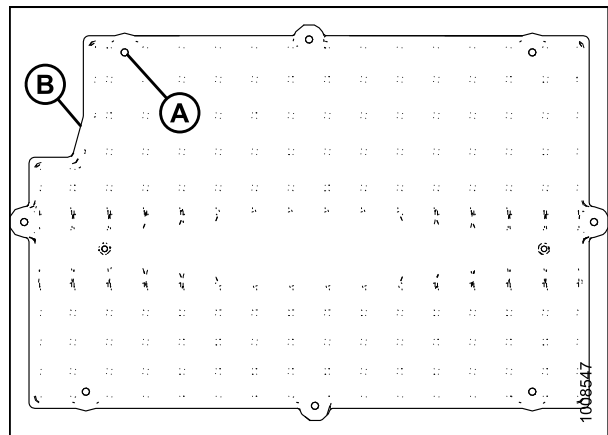


Figure 5.47: HVAC System

MAINTENANCE AND SERVICING

3. Reattach drain hoses to drain tubes and secure with hose clamps (A).

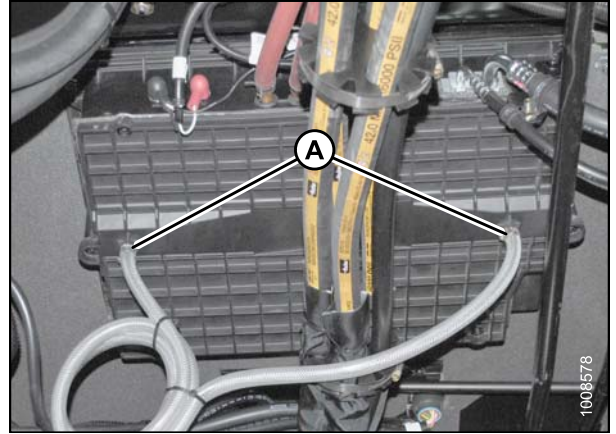


Figure 5.48: HVAC System

Air Conditioning (A/C) Compressor

The compressor is protected from excessively low suction and high discharge pressures by two switches that shut down the compressor to prevent damage to the system. These switches do not require regular servicing or maintenance. Contact your MacDon Dealer if you suspect a problem with the switches.

- The low pressure switch is normally closed when there is sufficient refrigerant in the system and the pressure is above 34 psi (234 kPa). The system remains pressurized at about 60–70 psi (414–483 kPa) with the compressor off. When the A/C system is turned on, the compressor starts because the system pressure is above 34 psi (234 kPa). As the system gets colder, the suction pressure (low side) drops. At 3.5–12.5 psi (24–86 kPa) (for 2014 and prior: 2–8 psi [14–55 kPa]), the switch opens and shuts down the compressor. When the pressure rises above 15–25 psi (103–172 kPa), the switch closes and the compressor restarts. The low pressure switch is located at the outlet of the evaporator (under cab in the A/C box).
- The high pressure switch is normally closed when there is sufficient refrigerant in the system. The system remains pressurized at about 60–70 psi (414–483 kPa) with the compressor off. If the pressure exceeds 360–380 psi (2482–2620 kPa) during operation, the valve opens. It will close when pressure falls below 220–280 psi (1517–1931 kPa). The high pressure switch is located on the receiver drier (right cab-forward frame rail, behind the fuse panel).

If the compressor cycles rapidly due to rapid pressure changes, the cab display module (CDM) displays a warning "CHECK A/C SYSTE". Contact your Dealer.

MAINTENANCE AND SERVICING

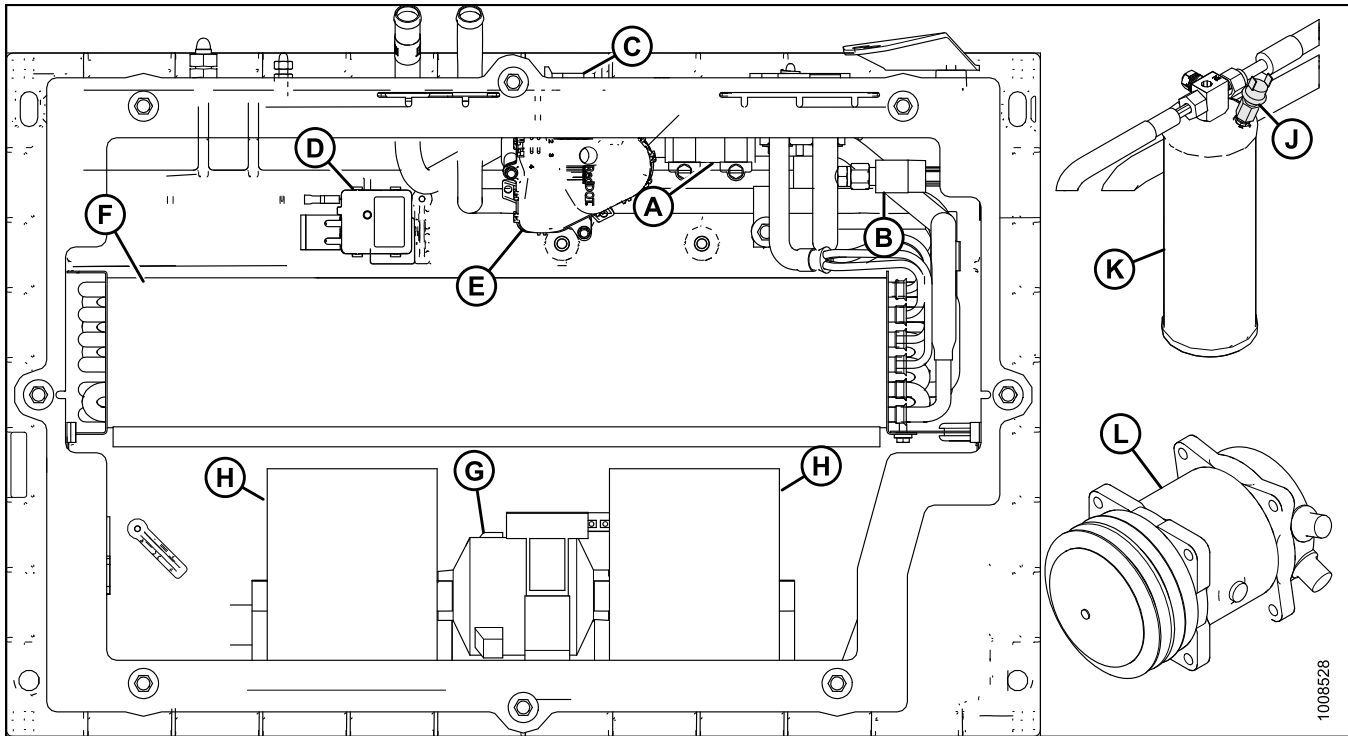


Figure 5.49: HVAC System (MD #202957)

A - Expansion Valve	B - Low Pressure Switch	C - Electrical Connector	D - Thermostat
E - Heater Valve	F - Evaporator Core	G - Blower Motor	H - Blower Fans
J - High Pressure Switch	K - Receiver Dryer	L - Compressor	

Servicing the Air Conditioning Compressor

Refer to [Replacing Air Conditioner \(A/C\) Compressor Belt](#), page 367 for belt replacement procedure.

See your MacDon Dealer for all other servicing procedures.

5.5.7 Engine

CAUTION

- **NEVER** operate engine in a closed building. Proper ventilation is required to avoid exhaust gas hazards.
- **Keep the engine clean.** Straw and chaff on a hot engine are a fire hazard.
- **NEVER** use gasoline, naphtha, or any other volatile material for cleaning purposes. These materials are toxic and/or flammable.

General Engine Inspection

Engine inspection should be performed by your MacDon Dealer.

Refer to your engine manual for further information. (Owner's Manual QSB 4.5 and QSB 6.7 Engine Cummins #4021531 are supplied with your machine).

Turning the Engine Manually

To manually turn the engine with the flywheel, an access hole is provided on the left cab-forward side for a barring tool that is available from Cummins.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop engine and remove ignition key.
2. Open the hood to the lowest position, refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.
3. Open left cab-forward side platform, refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
4. Remove positive (red) cables (A) from battery posts first, then remove negative (black) cables (B) from both battery posts.

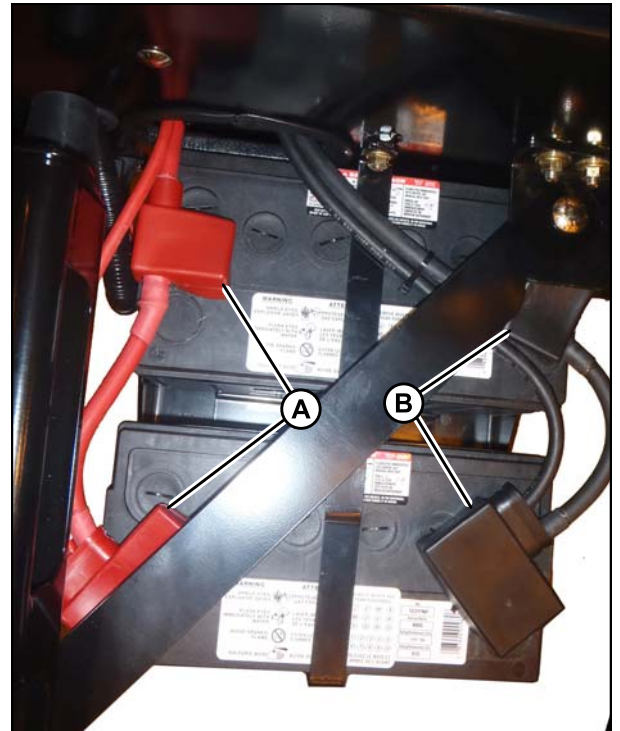


Figure 5.50: Battery Terminal Location

MAINTENANCE AND SERVICING

IMPORTANT:

Clean the area around the plastic cap to ensure nothing falls into gearbox oil reservoir.

5. Clean the area around the plastic cap on access hole (A). Remove the cap.
6. Insert the barring tool (B) into the flywheel housing until it engages the ring gear.
7. Attach a 1/2 in. square drive ratchet or breaker bar and turn.
8. Remove barring tool (B) and clean oil from around access hole.
9. Clean plastic cap and reinstall in access hole (A) with silicone sealant.

IMPORTANT:

BATTERY IS NEGATIVE GROUNDED. Always connect starter cable to the positive (+) terminal of battery and battery ground cable to negative (-) terminal of battery. Reversed polarity in battery or alternator may result in permanent damage to electrical system.

10. Attach negative (black) cables (B) to negative posts on batteries, and tighten clamps. Then attach positive (red) cables (A) to positive post on batteries and tighten clamps.
11. Position plastic covers onto clamps.
12. Close the hood, refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.
13. Close platform, refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 310.

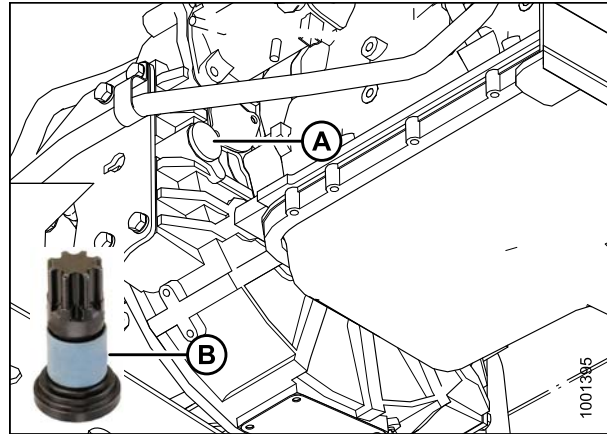


Figure 5.51: Access Hole Location for Barring Tool

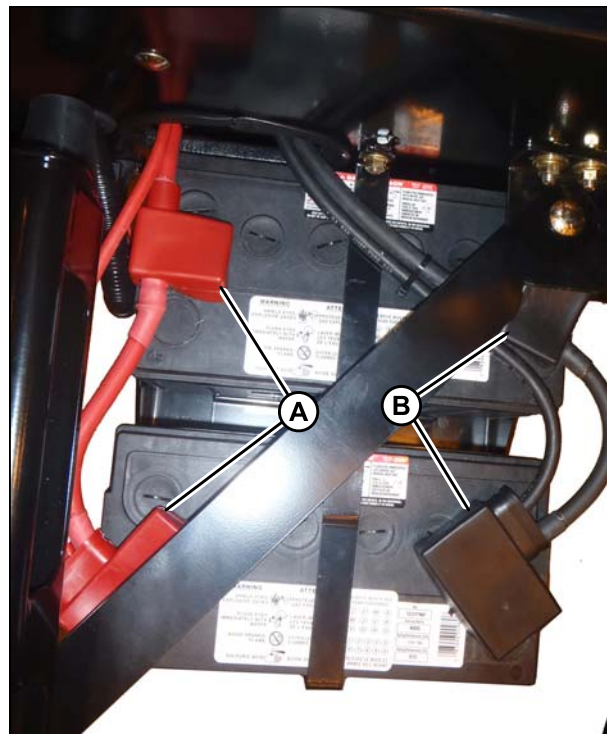


Figure 5.52: Battery Terminal Location

Engine Oil

Checking Engine Oil Level

Check engine oil level daily (every 10 hours) and watch for any signs of leakage.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

NOTE:

During the break-in period, a higher than usual oil consumption should be considered normal.

1. Open the hood to the lowest position. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.
2. Operate the engine at low idle and check for leaks at the filter and drain plug.
3. Stop the engine and remove the key. Wait about five minutes.
4. Remove the dipstick (A) by turning it counterclockwise to unlock.
5. Wipe the dipstick clean and reinsert it into the engine.
6. Remove the dipstick again and check the oil level.

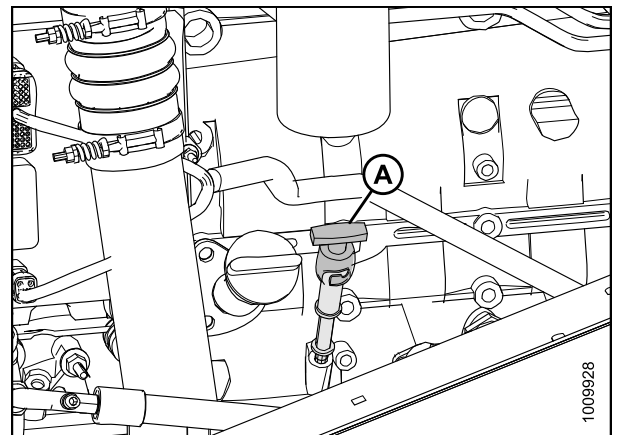


Figure 5.53: Engine Oil Level

7. Oil level should be between LOW and HIGH. If level is below LOW mark, 2 US quarts (1.9 liters) will raise the level from LOW to HIGH.

NOTE:

If you need to add oil, refer to [Adding Engine Oil](#), page 337.

8. Replace dipstick and turn it clockwise to lock.
9. Close the hood, refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.

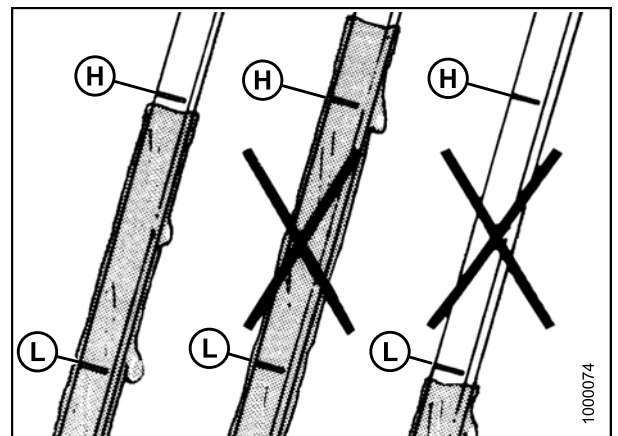


Figure 5.54: Engine Oil Level

Changing Engine Oil

Refer to the following procedures:

- [Checking Engine Oil Level, page 335](#)
- [Draining Engine Oil, page 336](#)
- [Replacing Engine Oil Filter, page 336](#)
- [Adding Engine Oil, page 337](#)

Draining Engine Oil



DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

The engine should be warm prior to changing the oil.

1. Stop the engine and remove the key.
2. Place a drain pan with a capacity of about 6 US gallons (24 liters) under the engine oil drain.
3. Remove oil drain plug (A) and allow the oil to completely finish draining.
4. Replace drain plug (A).
5. Check the condition of the used oil. If either of the following is evident, have your Dealer correct the problem before starting the engine:
 - Thin black oil indicates fuel dilution
 - Milky discoloration indicates coolant dilution
6. Properly dispose of used oil.

IMPORTANT:

Do not run engine without oil in the crankcase. Refer to [Adding Engine Oil, page 337](#).

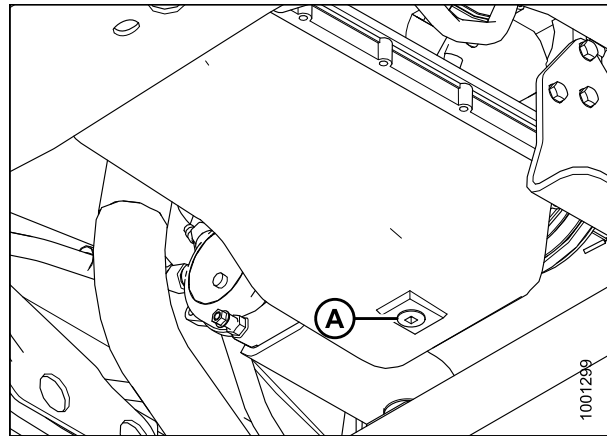


Figure 5.55: Engine Oil Drain Plug

Replacing Engine Oil Filter

NOTE:

Replace oil filter each time engine oil is changed.

1. Open the hood, refer to [5.2.1 Opening Hood \(Lower Position\), page 306](#).

MAINTENANCE AND SERVICING

2. Clean around the filter head (A).
3. Remove filter (B).
4. Clean gasket mating surface.
5. Apply a thin film of clean oil to the gasket on the new filter. Refer to [8.2.4 Filter Part Numbers, page 467](#) for recommended oil filter to use.
6. Screw the new filter onto the filter mount until the gasket contacts the filter head.
7. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the oil filter. Overtightening can damage the gasket and filter.

8. Properly dispose of used oil filter.

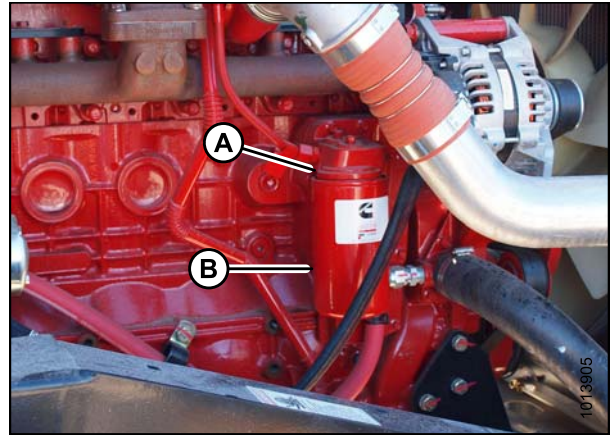


Figure 5.56: Engine Oil Filter

Adding Engine Oil

DANGER

To avoid bodily injury or death from unexpected startup of machine, always stop engine and remove key from ignition before leaving operator's seat for any reason.

1. Stop the engine and remove the key. Wait about five minutes.
2. Open the hood, refer to [5.2.1 Opening Hood \(Lower Position\), page 306](#).
3. Remove filler cap (A) by turning it counterclockwise.
4. Carefully pour in the new oil. A funnel is recommended to avoid spillage. Refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 466](#) for oil specifications.

CAUTION

Do **NOT** fill above the **HIGH** mark.

5. Replace oil filler cap (A) and turn it clockwise until snug.
6. Check the oil level, refer to [Checking Engine Oil Level, page 335](#).
7. Close the hood, refer to [5.2.2 Closing Hood \(Lower Position\), page 307](#).

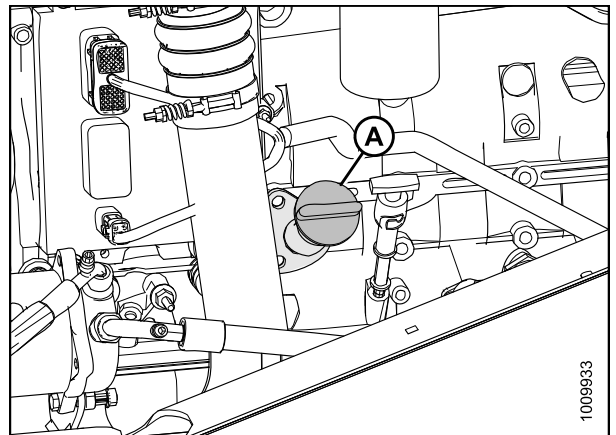


Figure 5.57: Oil Filler Cap

Air Intake System

IMPORTANT:

Do **NOT** run engine with air cleaner disconnected or disassembled.

MAINTENANCE AND SERVICING

Engine intake air is drawn through a duct (A) from the cooling box that precleans the air and then through a dual element filter (B).

The air cleaner canister is equipped with an aspirator (C) that removes dust continuously from the air cleaner housing.

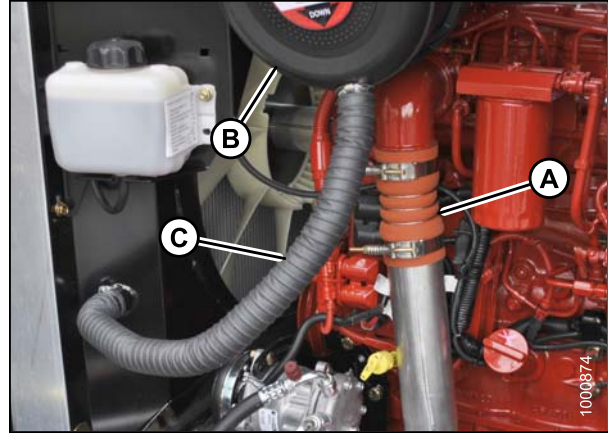


Figure 5.58: Air Intake System

The air cleaner is also equipped with a restriction switch (A) that activates a warning display and tone on the cab display module (CDM) when the filter system requires servicing.

After servicing the filter, the restriction switch must be reset by pushing the button at the end of the switch.

IMPORTANT:

- Do **NOT** run engine with air cleaner disconnected or disassembled.
- Over-servicing the filter element increases the risk of dirt being ingested by the engine and severely damaging the engine.
- Filter servicing should only be performed when the CDM indicates “ENGINE AIR FILTER” or at the specified interval. Refer to [Maintenance Schedule/Record, page 427](#).

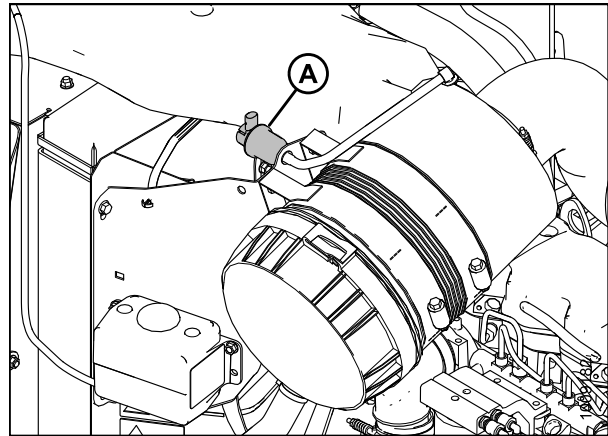


Figure 5.59: Air Restriction Indicator

MAINTENANCE AND SERVICING

Air Filter Restriction Indicator

During engine operation, the indicator shows the vacuum in inches of H₂O and kPa. As dirt accumulates in the filter, the restriction increases.

When the indicator gauge reaches the CHANGE FILTER mark (A), 25 inches of H₂O (6.20 kPa), a warning tone will sound and the cab display module (CDM) will indicate the filter requires servicing.

IMPORTANT:

Over-servicing the filter element increases the risk of dirt being ingested by the engine, causing severe damage.

Service air filter ONLY IF indicator reaches the CHANGE FILTER mark (A) or 2.5 inches H₂O (6.20 kPa).

IMPORTANT:

After servicing filters, press the RESET button on the end of the indicator (B).

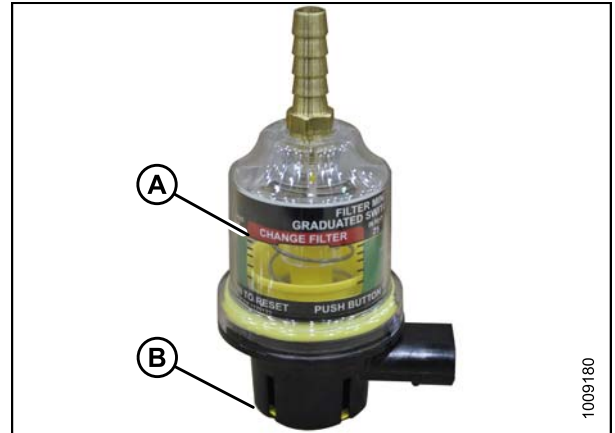


Figure 5.60: Air Filter Restriction Indicator

Removing Primary Air Filter

1. Open the hood, refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.
2. Open the maintenance platform on right cab-forward side. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
3. Slightly lift catch (A) at side of end cap (B) and rotate end cap counterclockwise until it stops.

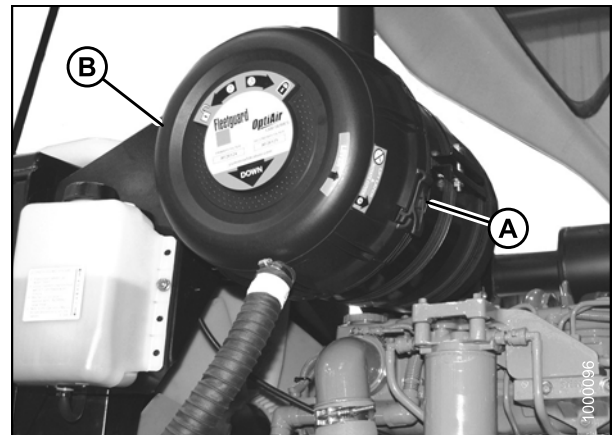


Figure 5.61: Engine Air Cleaner

MAINTENANCE AND SERVICING

4. Make sure arrow (A) lines up with UNLOCK symbol on end cap.
5. Pull off the end cap.



Figure 5.62: Engine Air Cleaner

6. Check the aspirator duct opening (A) for obstructions or damage. Clean if necessary.

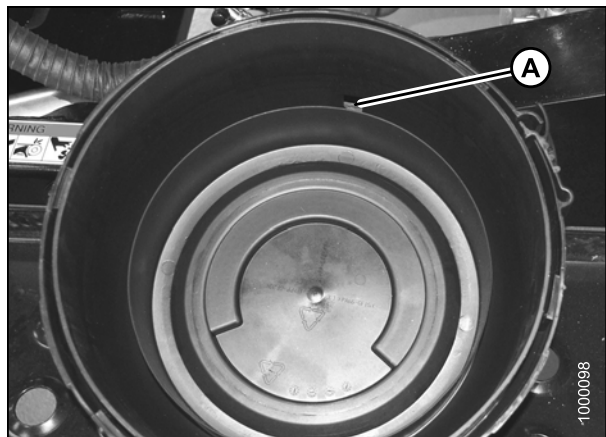


Figure 5.63: Engine Air Cleaner

7. Pull out the primary filter element (A).

IMPORTANT:

Be extremely careful with the dirty element until it is completely out of the housing. Accidentally bumping it while still inside means dirt and dust may contaminate the clean side of filter housing.

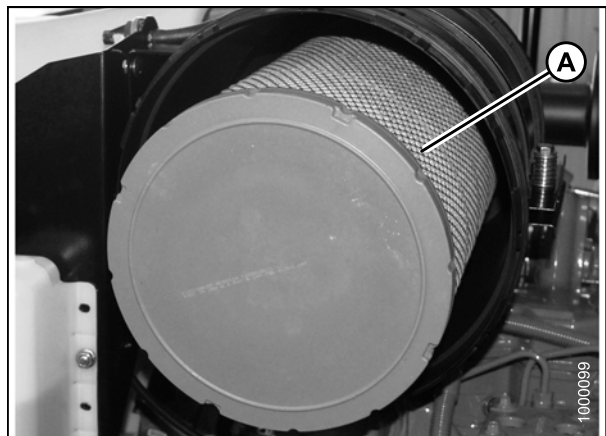


Figure 5.64: Engine Air Cleaner

MAINTENANCE AND SERVICING

Replace the secondary air filter (A) every year or after every third primary filter change (even if it appears clean).

If the secondary air filter is dirty, inspect the primary filter and the filter canister to determine the reason for contamination.

- Examine the filter canister for cracks and replace if necessary.
- Ensure filter sealing surfaces are soft, flexible, and sealing properly. Hard seals may allow debris through to the secondary filter.
- Ensure canister retaining latches are secure.

IMPORTANT:

- Do **NOT** remove the secondary filter element unless it needs replacing.
 - Do **NOT** attempt to clean the secondary element (A). It is replace only.
8. Clean the inside of the canister housing and end cap carefully. Dirt left in the air cleaner housing may be harmful to your engine.
 - Remove hardened dirt ridges wherever filter gaskets contact the cleaner housing.
 - Clean the gasket sealing surfaces of the housing. An improper gasket seal is one of the most common causes of engine contamination.
 - Wipe every surface clean with a clean, water-dampened cloth.
 - Check the housing visually to make sure it is clean before putting in a new filter element.
 9. Check for uneven dirt patterns on old element. It is a valuable clue to potential dust leakage or gasket sealing problems. A pattern on the element clean side is a sign that the old element was **NOT** firmly sealed or that a dust leak exists.
 - Press on the fresh gasket to see if it springs back.
 - Check the gasket for correct sizing. On a radial seal element the gasket surface is the inside diameter of the open end cap.
 - Make sure the gasket is seating evenly. If the gasket is not forming a perfect seal, you will **NOT** have protection.
 - Ensure the sealing surface in the housing is clean, and the filter element is the correct model number. It may be too short for the housing.
 - Identify and rectify the cause of any leaks before replacing the filter element.
 10. If required, also change the secondary filter. Refer to [Removing and Installing Secondary Air Filter, page 344](#).

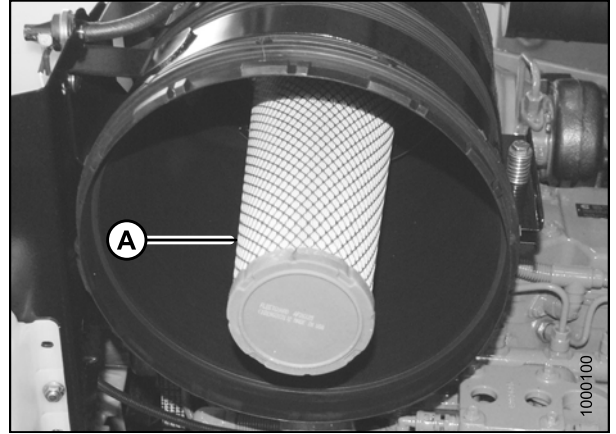


Figure 5.65: Engine Air Cleaner

Installing Primary Air Filter

NOTE:

If replacing air filter, refer to [8.2.4 Filter Part Numbers](#), page 467.

1. Insert new primary filter element (A) into canister over secondary element, and push into place, ensuring that element is firmly seated in canister.

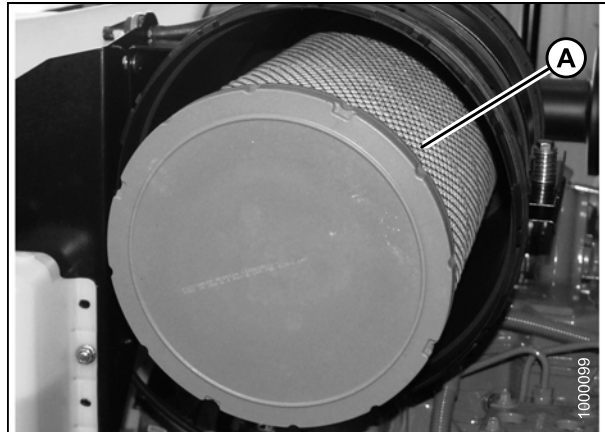


Figure 5.66: Engine Air Cleaner

2. Align arrow (A) to UNLOCK position on end cap, and push end cap fully onto housing.
3. Rotate end cap clockwise until catch (A) engages housing to prevent end cap from turning.

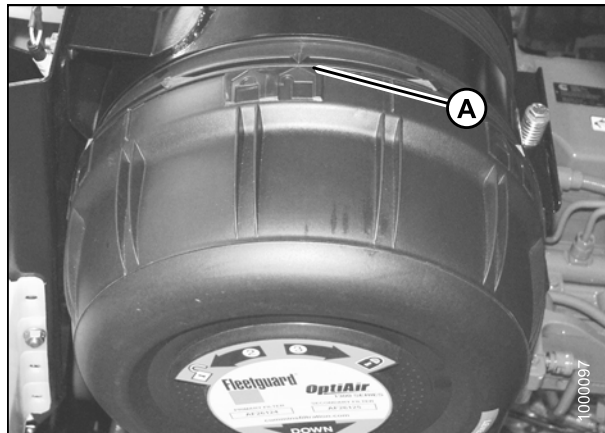


Figure 5.67: Engine Air Cleaner

4. Position end cap (B) onto filter housing with aspirator pointing approximately down.
5. Secure end cap onto filter housing by closing latch (A).

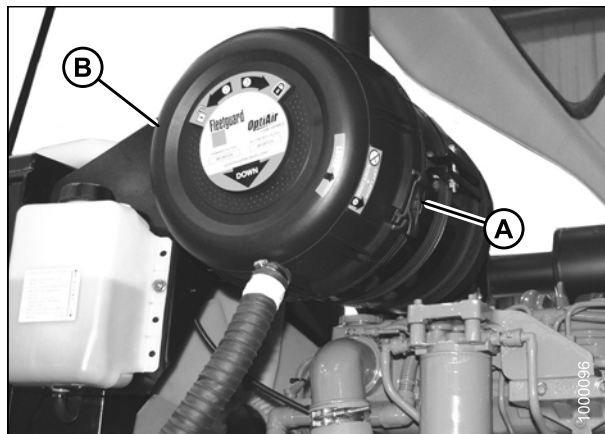


Figure 5.68: Engine Air Cleaner

MAINTENANCE AND SERVICING

6. After servicing the filter, reset the restriction switch (A) by pushing the button on the end.
7. Close the hood, refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.
8. Close the maintenance platform, refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.

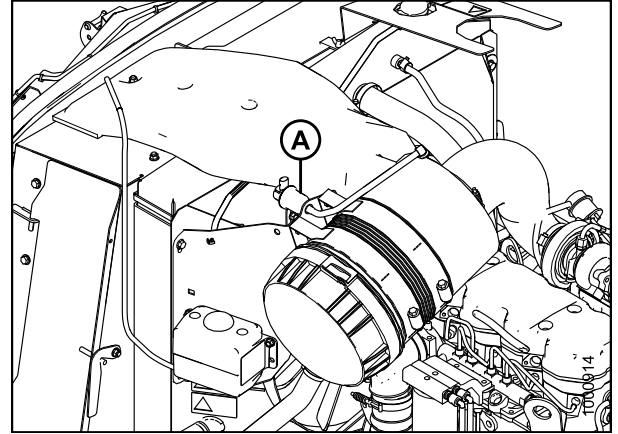


Figure 5.69: Engine Air Cleaner

Cleaning Engine Air Filter Primary Element

IMPORTANT:

The secondary (inner) element should NEVER be cleaned, only replaced.

IMPORTANT:

Air filter element cleaning is NOT recommended due to the possible degradation of the element material. If cleaning is performed, there are several risks involved and the following procedures should be followed. If any of the following conditions are found, the filter element MUST be replaced.

1. Hold a bright light inside element, and check carefully for holes.
2. Check outer screen for dents. Vibration would quickly wear a hole in the filter.
3. Check filter gasket for cracks, tears, or other signs of damage.
4. Check element for oil or soot contamination.
5. Check the secondary element for cleanliness. If there is visible dirt on the secondary element, replace both primary and secondary elements. Do **NOT** clean.

IMPORTANT:

The air cleaner's primary (outer) filter element should be replaced after three cleanings or at the specified interval. The secondary (inner) element should be replaced every third time the primary element is changed. Refer to [5.5.11 Maintenance Schedule](#), page 425 for the required interval.

6. If secondary element passes inspection, clean primary element as follows:
 - a. Use compressed air **NOT** exceeding 60 psi (400 kPa), and a Dry Element Cleaner Gun.
 - b. Hold nozzle next to inner surface only, and move up and down on pleats.
 - c. After three cleaning's (or at the specified interval), replace the primary element.
7. Repeat inspection before installing.

Removing and Installing Secondary Air Filter

Replace the secondary air filter (A) every year or after every third primary filter change (even if it appears clean).

If the secondary air filter is dirty, inspect the primary filter and the filter canister to determine the reason for contamination.

- Examine the filter canister for cracks and replace if necessary.
- Ensure filter sealing surfaces are soft, flexible, and sealing properly. Hard seals may allow debris through to the secondary filter.
- Ensure canister retaining latches are secure.

NOTE:

- Do **NOT** remove the secondary filter element unless it needs replacing.
- Do **NOT** attempt to clean the secondary element (A). Replace only.

1. Remove the primary filter, refer to [Removing Primary Air Filter, page 339](#).

IMPORTANT:

When replacing secondary filter, reinsert new filter as soon as possible to prevent dirt from entering engine intake.

2. Remove the secondary element (A) from canister.

NOTE:

If replacing filter, refer to [8.2.4 Filter Part Numbers, page 467](#).

3. Insert new secondary filter element (A) into canister, seal first, and push until seal is seated inside canister.
4. Reinstall the primary filter, refer to [Installing Primary Air Filter, page 342](#).

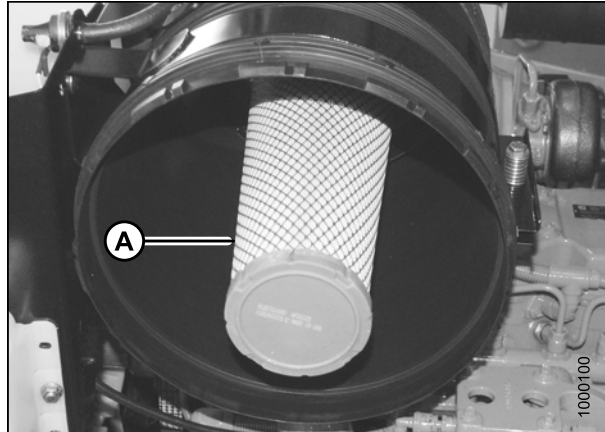


Figure 5.70: Engine Air Cleaner

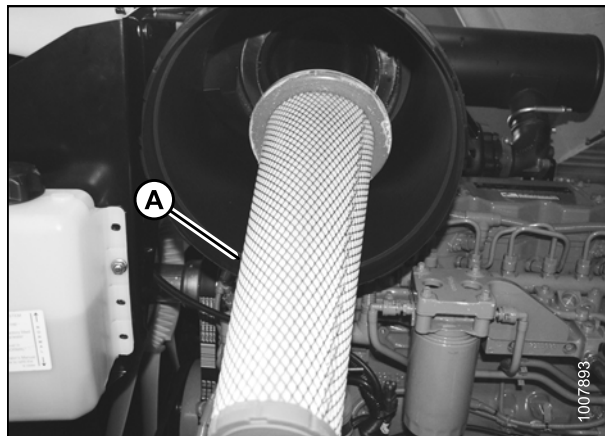


Figure 5.71: Engine Air Cleaner

Fuel System

Replacing Fuel Tank Vent Filter

The fuel tank is vented by a hose that is connected to the filler tube. The hose is connected to a filter that should be changed every year.

Replace the filter as follows:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

WARNING

To avoid personal injury or death from explosion or fire, do NOT smoke or allow flame or sparks near windrower when servicing.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 307.
3. Open the right cab-forward side maintenance platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
4. Locate filter (A) on vent line against hydraulic oil reservoir.
5. Release hose tension clamps (B) and slide away from filter. Pull hoses off filter.
6. Position new filter through hole in frame and attach top hose onto filter. The *IN* marking on the filter should face down.

NOTE:

If filter has an arrow instead of an *IN* marking, arrow should point up.

7. Attach lower hose to filter and secure both hoses with tension clamps (B).
8. Close hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 308.
9. Close the maintenance platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 310.

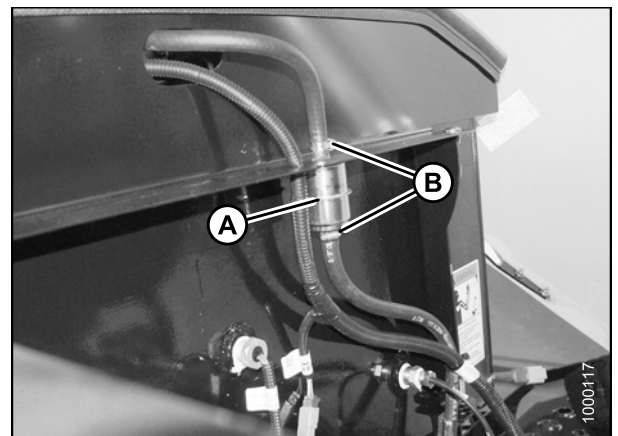


Figure 5.72: Fuel System

Maintaining Fuel Filters

The windrower fuel system is equipped with primary (A) and secondary (B) screw-on cartridge type filters. The primary filter (A) is equipped with a separator that separates sediment and water from the fuel.

Refer to the following procedures:

- [Removing Primary Fuel Filter, page 346](#)
- [Installing Primary Fuel Filter, page 347](#)
- [Removing Secondary Fuel Filter, page 348](#)
- [Installing Secondary Fuel Filter, page 348](#)

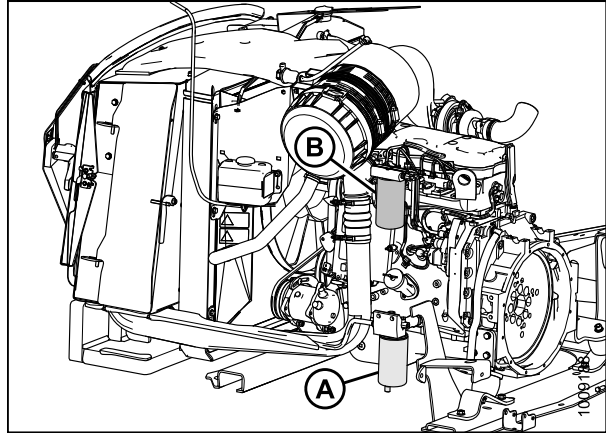


Figure 5.73: Fuel System Filters

Removing Primary Fuel Filter

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\), page 307](#).
3. On the bottom of the fuel tank, locate the fuel supply valve (A) and move it to the closed position.

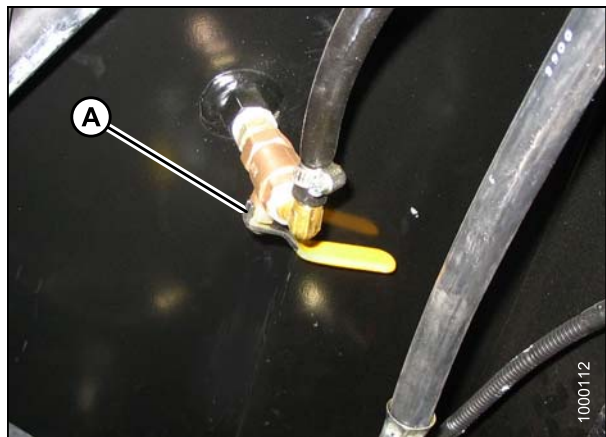


Figure 5.74: Fuel System

MAINTENANCE AND SERVICING

4. Locate the primary fuel filter (A) on the right cab-forward side of the windrower.

NOTE:

Bottom part of the image made transparent to show location of the primary filter.

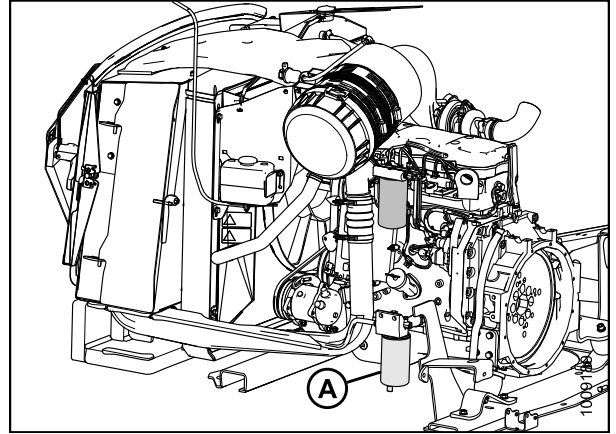


Figure 5.75: Fuel Filter Locations

5. Clean around the primary filter (A) head.
6. Disconnect the water in fuel (WIF) sensor (B) from bottom of filter.
7. Turn valve (C) by hand counterclockwise and drain filter into a container.
8. Remove filter (A) with a filter wrench.
9. Clean gasket mating surface.

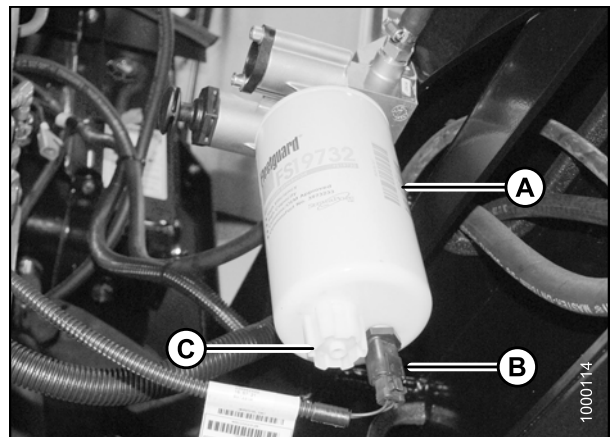


Figure 5.76: Fuel System

Installing Primary Fuel Filter

IMPORTANT:

Do **NOT** prefill filter with fuel. Prefilling can contaminate the fuel system.

NOTE:

If replacing filter, refer to [8.2.4 Filter Part Numbers, page 467](#).

MAINTENANCE AND SERVICING

1. Screw the new filter (A) onto the filter mount until the gasket contacts the filter head.
2. Reconnect water in fuel (WIF) sensor (B).
3. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the filter. Overtightening can damage the gasket and filter.

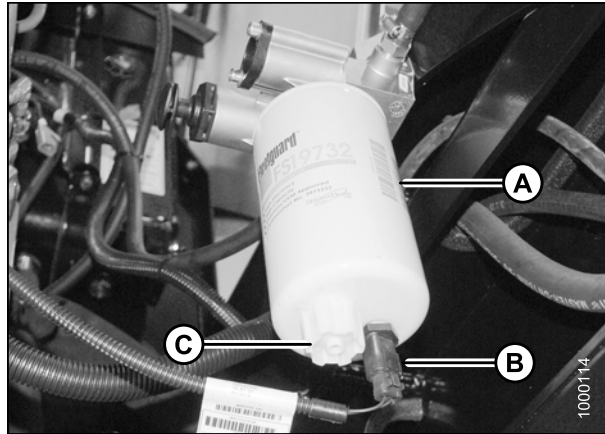


Figure 5.77: Fuel System

Removing Secondary Fuel Filter

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 307.
3. Clean around the secondary filter head (A).
4. Place a container under the filter to catch spilled fluid.
5. Remove filter (B) with a filter wrench.
6. Clean gasket mating surface.

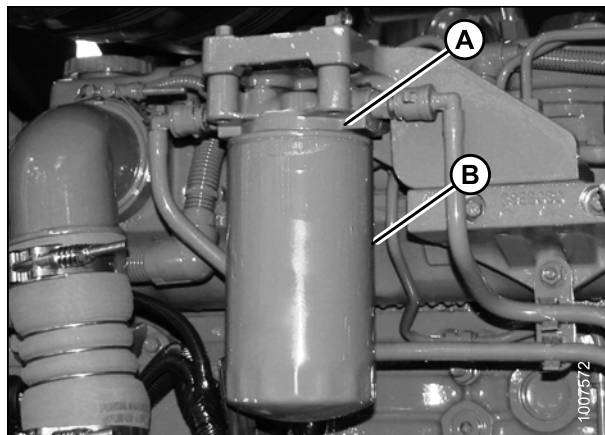


Figure 5.78: Fuel System

Installing Secondary Fuel Filter

IMPORTANT:

Do **NOT** prefill filter with fuel. Prefilling can contaminate the fuel system.

NOTE:

If replacing filter, refer to [8.2.4 Filter Part Numbers](#), page 467.

MAINTENANCE AND SERVICING

1. Screw the new secondary filter (A) onto the filter mount until the gasket contacts the filter head.
2. Tighten the filter an additional 1/2 to 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install the filter. Overtightening can damage the gasket and filter.

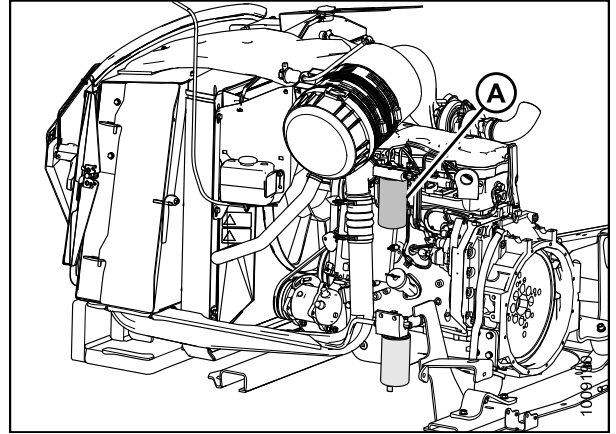


Figure 5.79: Fuel System

3. Open fuel valve (A) under fuel tank.
4. Prime the fuel system. Refer to [Priming Fuel System, page 352](#).

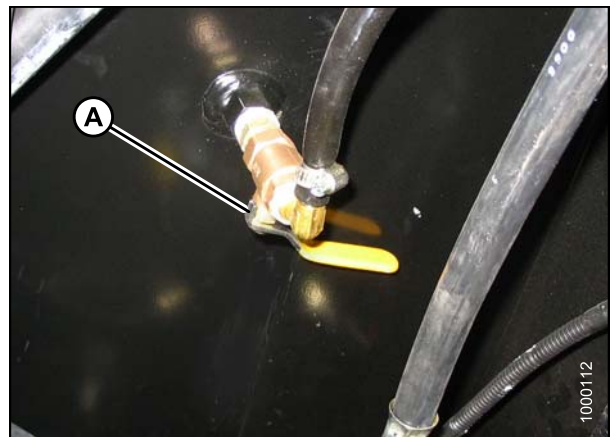


Figure 5.80: Bottom of Fuel Tank

Draining Fuel Tank

Draining the fuel tank is necessary to remove old or contaminated fuel.

WARNING

- To avoid personal injury or death from explosion or fire, do **NOT** smoke or allow flame or sparks near fuel tank when refueling.
- **NEVER** refuel the windrower when the engine is hot or running.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the hood., Refer to [5.2.1 Opening Hood \(Lower Position\), page 306](#).

MAINTENANCE AND SERVICING

3. Close fuel supply valve (A). Located on the bottom of the fuel tank.

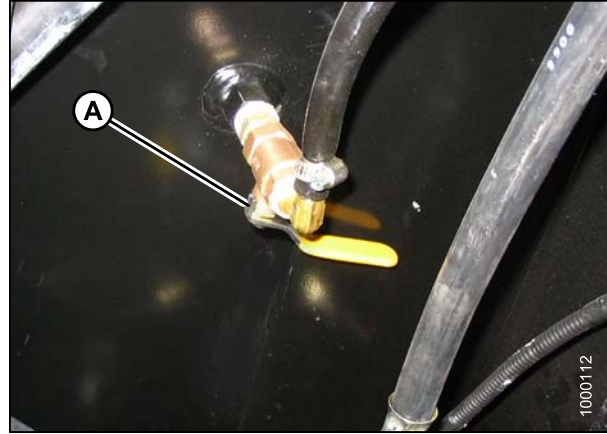


Figure 5.81: Bottom of Fuel Tank

4. Place a 5 US gallon (20 liter) drain pan under the fuel supply hose (A) at primary filter.
5. Loosen clamp (B) and pull fuel supply hose (A) off fitting.

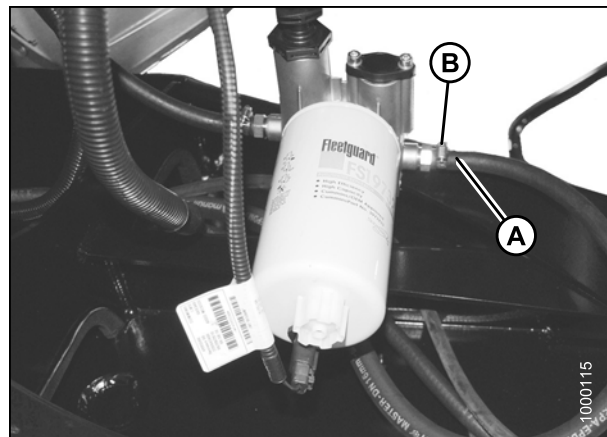


Figure 5.82: Fuel System

6. Route hose to drain pan and open valve (A) to drain tank.

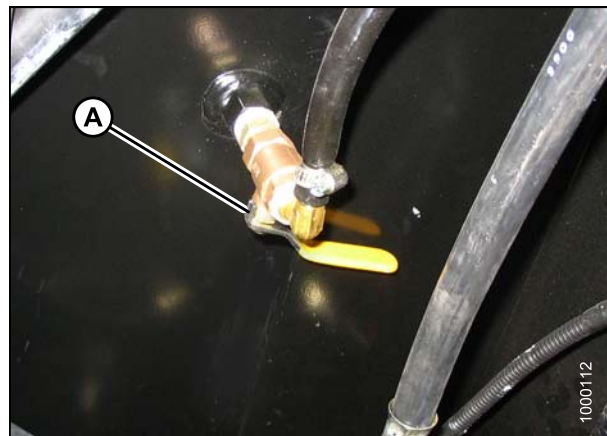


Figure 5.83: Bottom of Fuel Tank

MAINTENANCE AND SERVICING

7. Add some clean fuel to tank to flush out any remaining contaminants.
8. Reattach fuel supply hose (A) to fitting. Install clamp (B) and tighten.

NOTE:

Do **NOT** refill the fuel tank if performing additional maintenance on fuel system. Refill it once work is completed. Refer to [Filling the Fuel Tank](#), page 163.

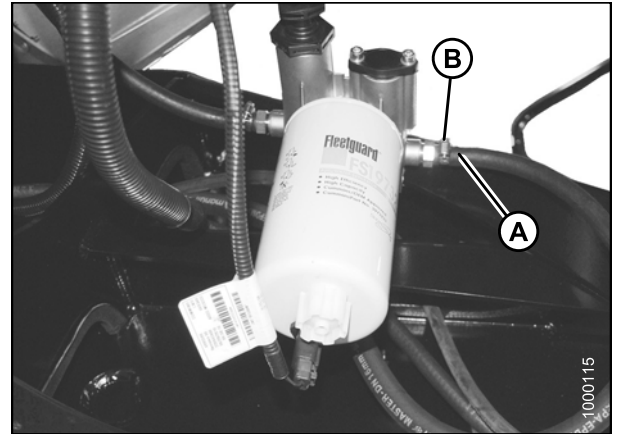


Figure 5.84: Fuel System

Fuel/Water Separator

A fuel water separator is incorporated into the primary fuel filter. The separator is equipped with a drain and with a sensor that detects water in the fuel and alerts the Operator on the cab display module (CDM). Drain the water and sediment from the separator daily or at any time the CDM Water In Fuel (WIF) light illuminates.

To remove water from the fuel system, refer to [Removing Water from Fuel System](#), page 351.

Removing Water from Fuel System

Drain the water and sediment as follows from the separator daily, or at any time the cab display module (CDM) water in fuel (WIF) light illuminates.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.
3. Place a container under the filter (A) to catch spilled fluid.
4. Turn drain valve (B) by hand 1-1/2 to 2 turns counterclockwise until draining occurs.
5. Drain the filter sump of water and sediment until clear fuel is visible.
6. Turn the valve clockwise to close the drain.
7. Dispose of fluid safely.
8. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.

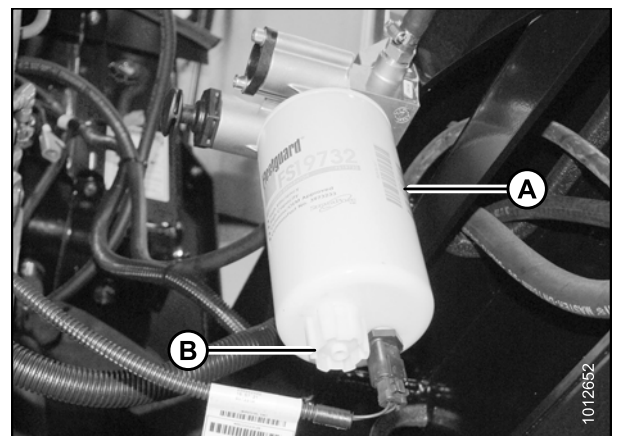


Figure 5.85: Fuel System

System Priming

Controlled venting of air is provided at the injection pump through the fuel drain manifold. Small amounts of air introduced by changing filters or injection pump supply line will be vented automatically, if the fuel filters are changed in accordance with instructions.

IMPORTANT:

Bleeding the fuel system is **NOT** recommended or required. Manual priming will be required if:

- Fuel filter is replaced
- Injection pump is replaced
- High-pressure fuel lines are replaced
- Engine is run until fuel tank is empty

Priming Fuel System

To prime the fuel system, follow these steps:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

WARNING

The fuel pump high-pressure fuel lines and fuel rail contain extremely high pressure fuel. Never loosen any fittings. Personal injury and property damage can result.

1. Stop the engine and remove the key.
2. Open the hood to lowest position. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.
3. Turn the priming knob (A) counterclockwise to unlock the plunger on the primary filter head.
4. Pump approximately 120 times to pressurize the fuel system.
5. Lock the plunger by turning knob (A) clockwise until snug.
6. Try starting engine. If engine does **NOT** start, repeat priming.
7. Close hood. Refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.



Figure 5.86: Fuel System

MAINTENANCE AND SERVICING

Engine Cooling System

The engine cooling system is designed to maintain the engine operating temperature within the specified operating range.

NOTE:

Antifreeze is essential in any climate. It broadens the operating temperature range by lowering the coolant freezing point, **AND** by raising its boiling point. Antifreeze also contains rust inhibitors and other additives to prolong engine life.

IMPORTANT:

If antifreeze strength is not adequate, do **NOT** drain cooling system to protect against freezing. System may not drain completely and damage from freezing could still result.

Refer to [8.2.3 Lubricants, Fluids, and System Capacities](#), page 466 for detailed information.

Inspecting Radiator Cap

The radiator cap must fit tightly and the cap gasket must be in good condition to maintain the 14–18 psi (97–124 kPa) pressure in the cooling system.

CAUTION

To avoid personal injury from hot coolant, do **NOT** turn radiator cap until engine cools.

1. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 307.
2. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
3. Turn the cap (A) counterclockwise to the first notch to relieve pressure before removing cap completely.
4. Turn the cap (A) again and remove.
5. Check the gasket for cracks or deterioration and replace the cap if necessary.
6. Check that the spring in the cap moves freely.
7. Replace the cap if spring is stuck.
8. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 310.
9. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 308.

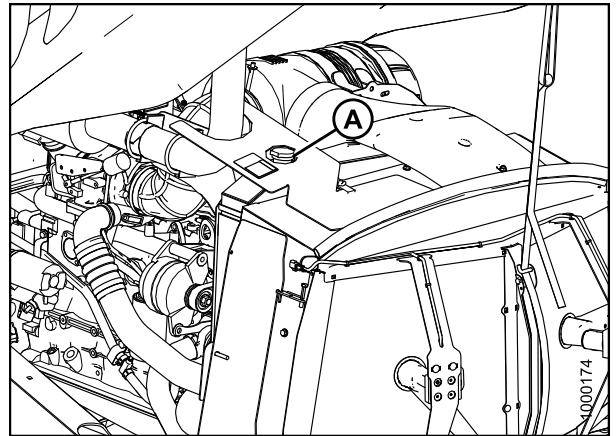


Figure 5.87: Engine Cooling System

Checking Engine Coolant Strength

Check the anti-freeze in the radiator with a tester every year, preferably before off-season storage.

CAUTION

To avoid personal injury from hot coolant, do **NOT** turn radiator cap until engine cools.

1. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 307.
2. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.

MAINTENANCE AND SERVICING

3. Remove the radiator cap (A).

IMPORTANT:

Turn the cap (A) counterclockwise to the first notch to relieve pressure before removing cap completely.

4. Check the coolant in the radiator using an antifreeze tester. Tester should indicate protection to temperatures of -30°F (-34°C).
5. Inspect the radiator cap before reinstalling, refer to [Inspecting Radiator Cap, page 353](#).
6. Replace radiator cap (A).
7. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\), page 310](#).
8. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\), page 308](#).

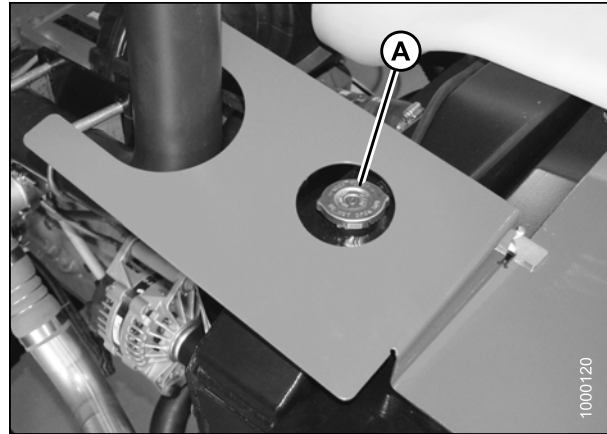


Figure 5.88: Engine Cooling System

Checking Coolant Level

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Check coolant level in the coolant recovery tank (A) daily.

1. Stop the engine and remove the key.
2. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\), page 307](#).
3. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 309](#).

NOTE:

To view coolant capacities. Refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 466](#).

4. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\), page 310](#).
5. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\), page 308](#).

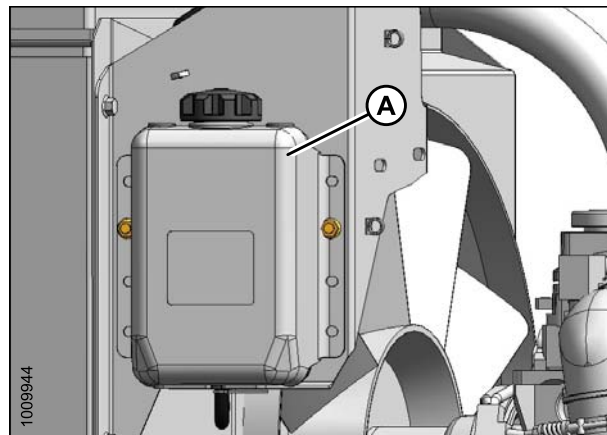


Figure 5.89: Engine Cooling System

Changing Coolant

Coolant should be drained and the system flushed and filled with new coolant every **2000 hours or 2 years**.

Refer to the following procedures:

- [Draining Coolant, page 355](#)
- [Adding Coolant, page 357](#)

MAINTENANCE AND SERVICING

Draining Coolant

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

To avoid personal injury from hot coolant, do NOT turn radiator cap until engine cools.

1. Stop the engine, remove the key. Let the engine cool.
2. Open the hood., Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 307.
3. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
4. Turn the radiator cap (A) to the first notch to relieve pressure before removing cap completely.

IMPORTANT:

Place a drain pan (about 8 US gallons [30 liters]) under the engine and radiator and use a deflector or hose to prevent coolant running onto frame.

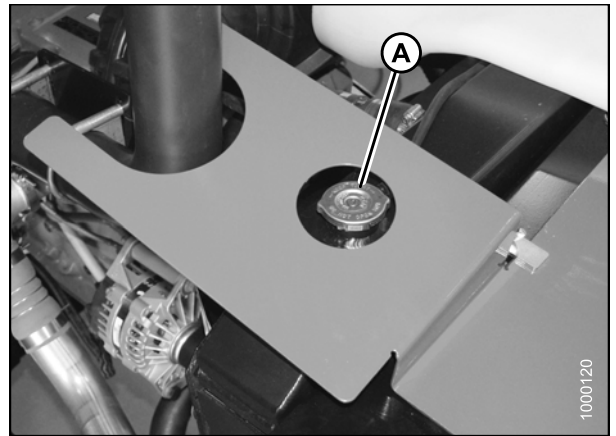


Figure 5.90: Radiator Cap

5. Remove the radiator cap and open radiator drain valve (A) located at the bottom of the engine side of the radiator lower tank. (Frame has been removed from illustration for clarity.)

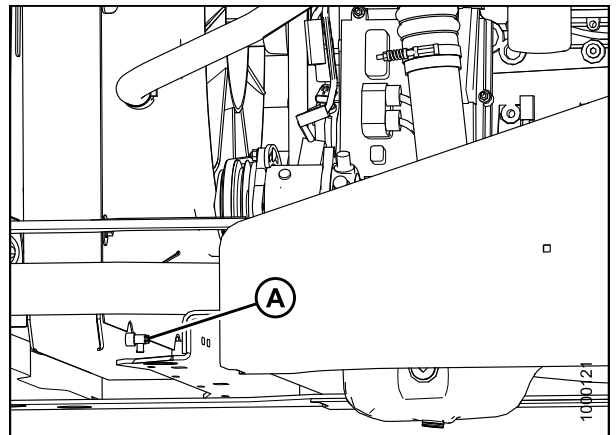


Figure 5.91: Radiator Drain Valve

MAINTENANCE AND SERVICING

6. Close the heater shut-off valve (A) and disconnect hose on heater side of valve.
7. Open valve to drain the block.
8. When system is drained, reattach hose on valve (A).

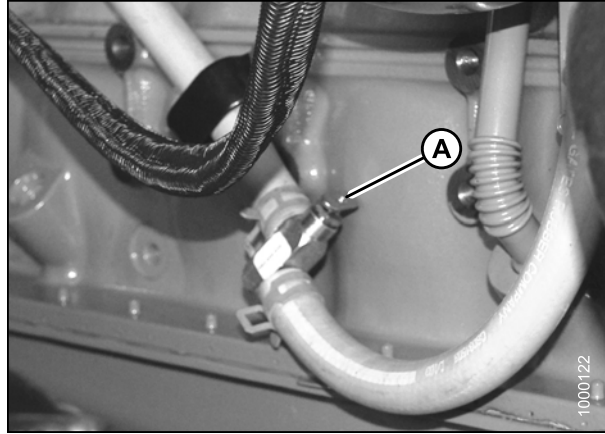


Figure 5.92: Heater Shut-Off Valve

9. Close radiator drain valve (A) at the bottom of the engine side of the radiator lower tank. (Frame has been removed from illustration for clarity.)
10. Fill system with clean water through the radiator and replace radiator cap.

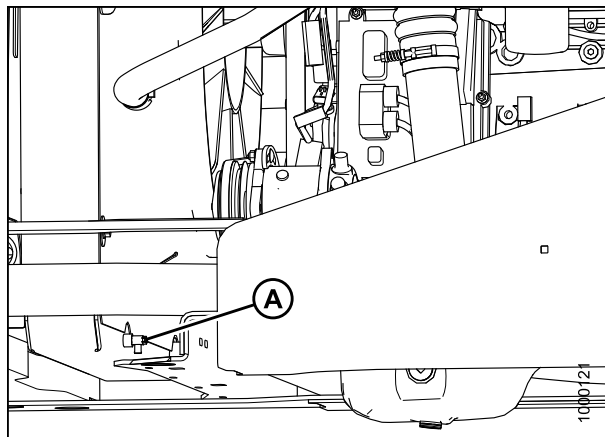


Figure 5.93: Radiator Drain Valve

11. Open heater shut-off valve (A).
12. Start engine and turn temperature control knob to HIGH. Run engine until normal operating temperature is reached.
13. Stop the engine and drain water out before rust or sediment settles. Repeat coolant removal procedure.
14. Close drain valves and fill system with a solution of clean water and a heavy duty radiator cleaner. Follow instructions provided with cleaner.
15. After using the cleaner solution, flush system with clean water again. Inspect radiator, hoses, and fittings for leaks.
16. Close drain valves and fill system. Refer to [Adding Coolant, page 357](#).
17. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\), page 310](#).
18. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\), page 308](#).

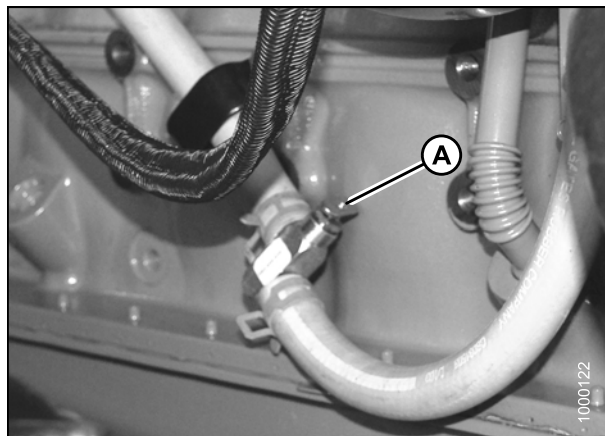


Figure 5.94: Heater Shut-Off Valve

Adding Coolant

Check the coolant level in the coolant recovery tank daily, the tank should be at least one-half full. If less, add coolant.

CAUTION

To avoid personal injury from hot coolant, do NOT turn radiator cap until engine cools.

NOTE:

Do NOT add coolant to radiator except when changing coolant.

To add coolant to the coolant recovery tank, follow these steps:

1. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 307.
2. Open the platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
3. Remove the cap (A) from coolant recovery tank (B).

NOTE:

For coolant specifications, refer to [8.2.3 Lubricants, Fluids, and System Capacities](#), page 466.

4. Add coolant at a rate not exceeding three gallons per minute until the recovery tank is one-half full.

CAUTION

Before starting the machine, check to be sure all bystanders have cleared the area.

5. Start engine and run at high idle for approximately 20 minutes or until the engine temperature reaches 85°C (185°F).
6. Check the coolant level again and add until the recovery tank is one-half full.
7. Replace the cap (A).
8. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 310.
9. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 308.

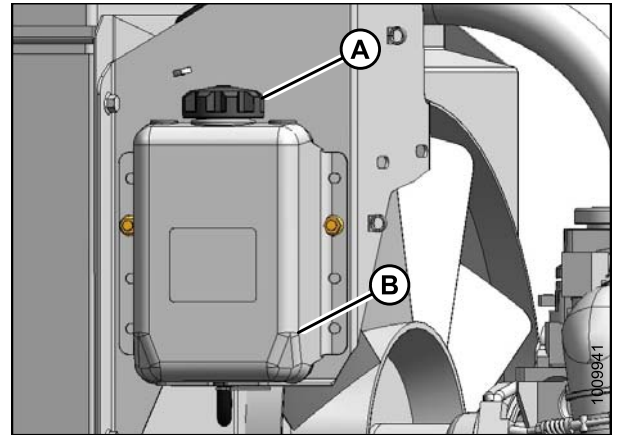


Figure 5.95: Coolant Recovery Tank

MAINTENANCE AND SERVICING

Maintaining Engine Cooling Box

Refer to the following procedures:

- [Opening Cooler Box Screen, page 358](#)
- [Charge Air Cooling, page 359](#)
- [Cleaning Screens and Coolers, page 359](#)
- [Cleaning Cooler Box Components, page 360](#)
- [Adjusting Screen Cleaner Rotor to Screen Clearance, page 362](#)
- [Closing Cooler Box Screen, page 363](#)

Opening Cooler Box Screen

1. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\), page 307](#).
2. Push latch (A) and open screen assembly access door (B). Secure with rod stored inside screen door.

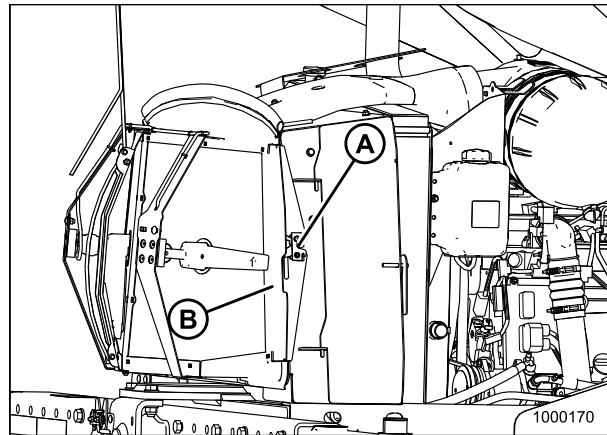


Figure 5.96: Engine Cooling System

Charge Air Cooling

Charge air is routed through a cooler that is located in the cooling box (C), prior to entering the engine intake. The cooler should be cleaned daily with compressed air. Refer to [Maintaining Engine Cooling Box, page 358](#)

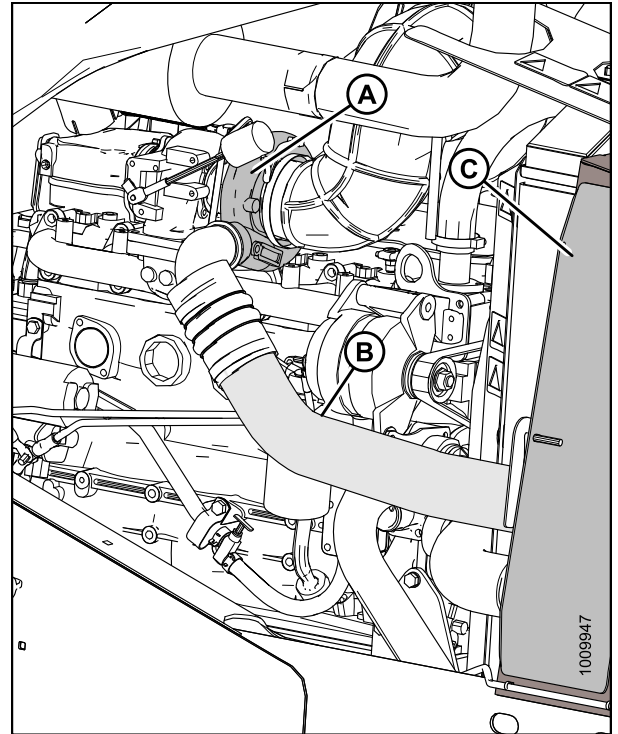


Figure 5.97: Engine Air Intake System

Cleaning Screens and Coolers

The cooling box screen is cleaned using two electrically driven rotors and suction from the engine's cooling fan to sweep and vacuum the screen when the engine is running. If the screen is not being cleaned, the rotors or ducts may be plugged.

Follow these steps to clear plugged rotors:

1. Open the hood Refer to [5.2.3 Opening Hood \(Highest Position\), page 307](#).
2. Remove nuts (B).
3. Pivot screen cleaner assembly (C) away from screen.
4. Blow out debris from cleaner ducts (A) with compressed air.
5. If ducts are plugged, open the cooler box screen. Refer to [Opening Cooler Box Screen, page 358](#).

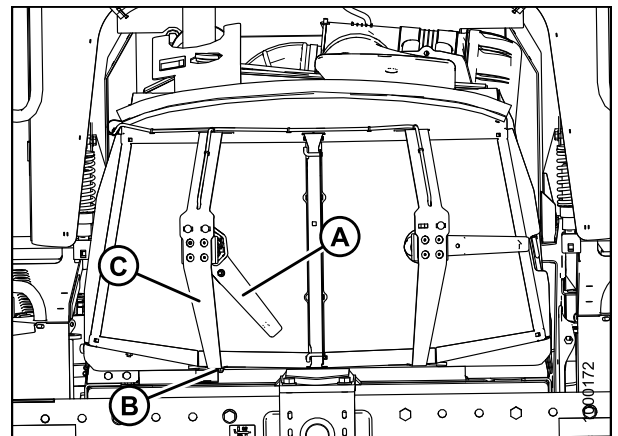


Figure 5.98: Engine Cooling System

MAINTENANCE AND SERVICING

6. Blow debris out of ducts (A) with compressed air.
7. Clean screen with compressed air.

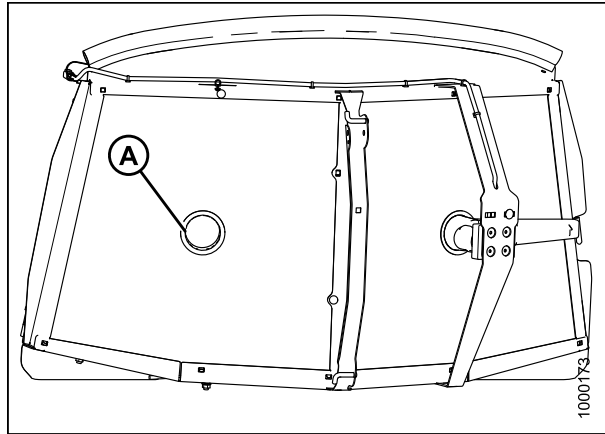


Figure 5.99: Engine Cooling System

8. Move the screen cleaner assembly (C) back into position and secure with bolts and nuts (B).
9. Ensure ducts (A) have the proper screen clearance. Refer to [Adjusting Screen Cleaner Rotor to Screen Clearance](#), page 362.
10. Close the cooler box screen. Refer to [Closing Cooler Box Screen](#), page 363.
11. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 308.

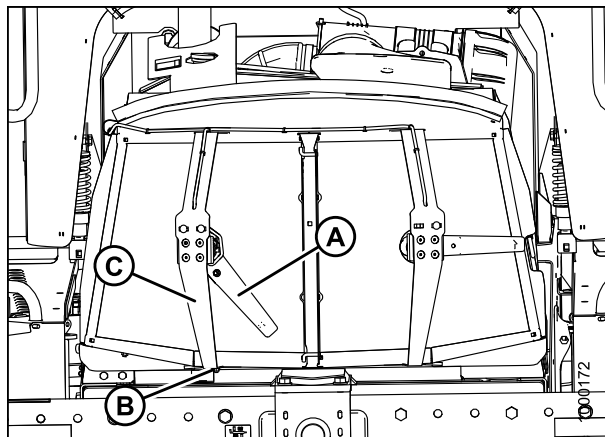


Figure 5.100: Engine Cooling System

Cleaning Cooler Box Components

The radiator and oil cooler should be cleaned daily with compressed air. More frequent cleaning may be necessary in severe conditions. The charge air cooler and air conditioning condenser may also be cleaned at the same time.

To clean these components, proceed as follows:

1. Open cooler box screen, refer to [Opening Cooler Box Screen](#), page 358.
2. Lift latch (A) and open the right-hand access door (B).

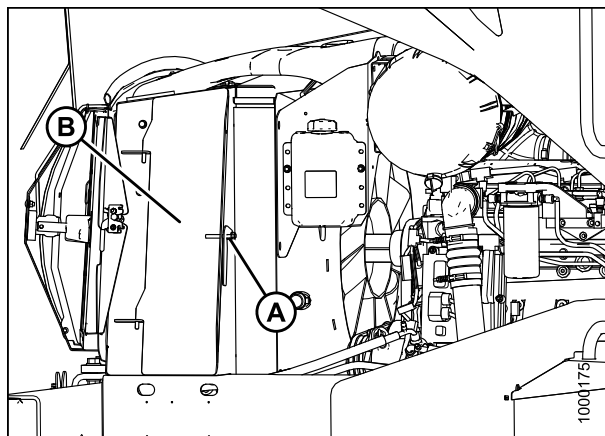


Figure 5.101: Engine Cooling System

MAINTENANCE AND SERVICING

- Slide out the oil cooler / air conditioning condenser assembly (A).

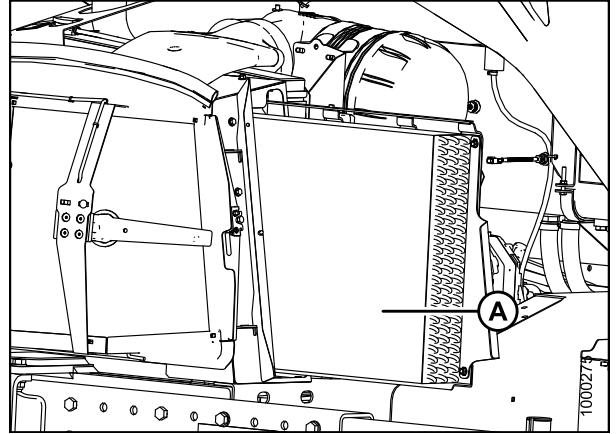


Figure 5.102: Engine Cooling System

- Lift latch (A) and open the left-hand access door (B).

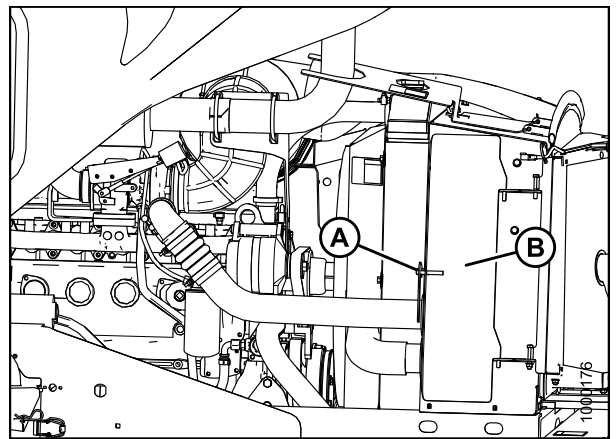


Figure 5.103: LH Cooler Access Door

- Remove wing nut (A) and open access door (B) at top of cooling box.

NOTE:

Fins on coolers can be very easily bent which may interfere with its function. Exercise caution when cleaning.

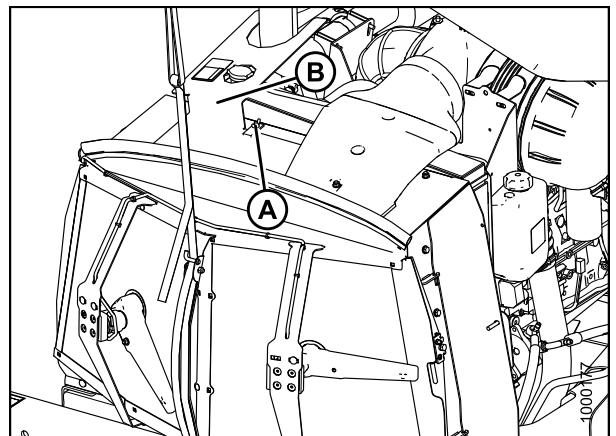


Figure 5.104: Engine Cooling System

MAINTENANCE AND SERVICING

6. Clean radiator (D) through access holes in cooling box with compressed air.
7. Clean oil cooler / air conditioning condenser (A), charge air cooler (E), fuel cooler (B), and cooling box (C) with compressed air.
8. Inspect all lines and coolers for evidence of leaks and damage.
9. Slide oil cooler / air conditioning condenser (A) back into cooling box (C).
10. Close side access door and lock with lever.
11. Close access door on top of the cooling box and secure with wing nut.
12. Close cooler box screen, refer to [Closing Cooler Box Screen, page 363](#).

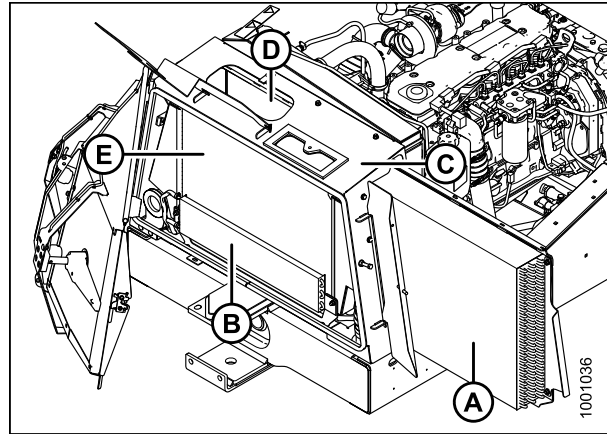


Figure 5.105: Engine Cooling System

Adjusting Screen Cleaner Rotor to Screen Clearance

Check clearance between trailing edge of screen cleaner rotor (A) and screen. It should be $3/64$ – $5/16$ in. (1–8 mm) at all locations when rotating.

NOTE:

Screen cleaner rotors rotate counterclockwise and may touch screen as long as they continue to rotate.

If necessary, adjust clearance as follows:

1. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\), page 306](#).
2. Loosen nut (B) on motor support (C).
3. Move support in or out until rotor is $3/32$ – $1/4$ in. (2–6 mm) from screen near the center.
4. Retighten nut (B).
5. Loosen the two motor mount bolts (D).
6. Move motor/rotor assembly (E) to obtain $3/64$ – $5/16$ in. (1–8 mm) gap to screen at full rotation of the rotor.
7. Retighten nuts (D) on motor mount.
8. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\), page 307](#).

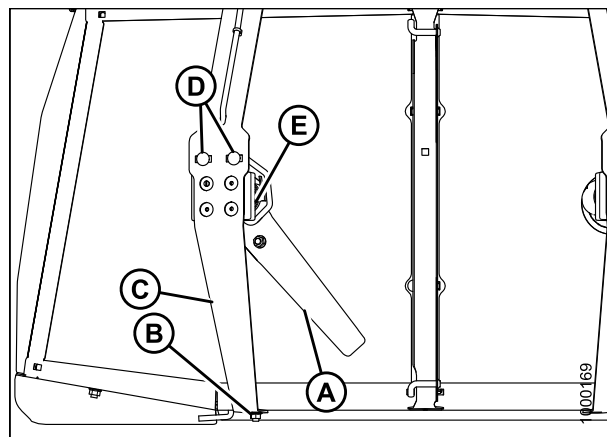


Figure 5.106: Screen Cleaner

Closing Cooler Box Screen

1. Unhook the support rod and store it in the screen door. Close screen access door (B) and engage latch (A).
2. Close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 308.

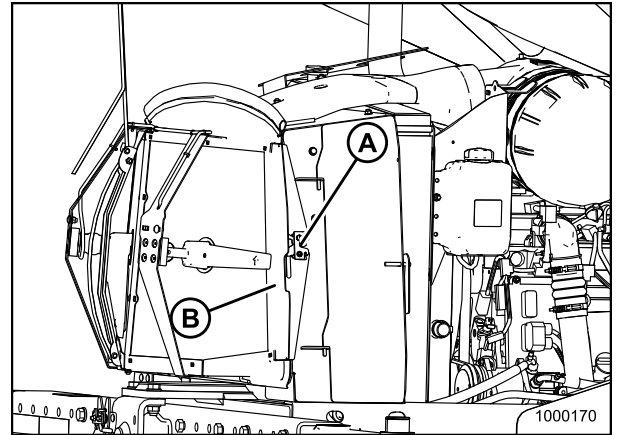


Figure 5.107: Engine Cooling System

Gearbox

Checking Lubricant Level and Adding Lubricant

CAUTION

Park on a flat, level surface, header on the ground, and the ground speed lever in N-DETENT position and steering wheel locked.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Check the lubricant level every 50 hours as follows:
 - a. Park the windrower on level ground, shut down engine, and remove key.
 - b. Remove check plug (A). The lubricant should be visible through the hole or slightly running out.

NOTE:

To view lubricant specifications, refer to [8.2.3 Lubricants, Fluids, and System Capacities](#), page 466.

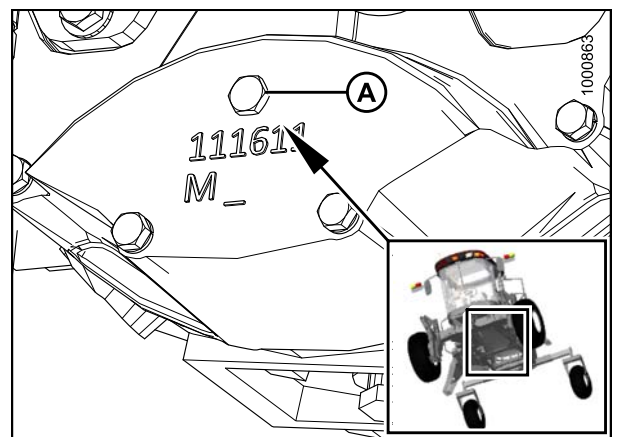


Figure 5.108: Gearbox Lubricant Check Plug

MAINTENANCE AND SERVICING

2. Add lubricant as follows:
 - a. Remove breather cap (A) and add lubricant until it runs out the check port. If refilling, add approximately 2.2 US quarts (2.1 liters).
 - b. Replace check plug and breather cap and tighten.
 - c. Operate the engine at low idle and check for leaks at the check plug and drain plug.

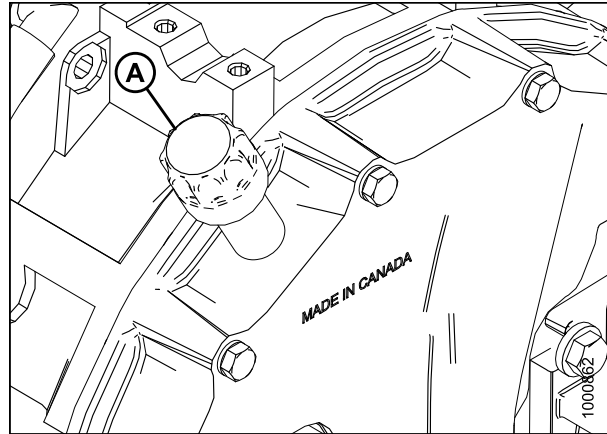


Figure 5.109: Gearbox Breather Cap

Changing Lubricant

Change gearbox lubricant after the first 50 hours, and then at 500 hours as follows:

NOTE:

The engine should be warm prior to changing the oil.

1. Stop engine and remove key.
2. Place a 1 US gallon (4 liters) drain pan under the gearbox.
3. Remove drain plug (B) and allow oil to completely finish draining.
4. Install drain plug (B) and remove check plug (A).
5. Add lubricant. Refer to [Checking Lubricant Level and Adding Lubricant, page 363](#).
6. Operate the engine at low idle and check for leaks at the check plug and drain plug.

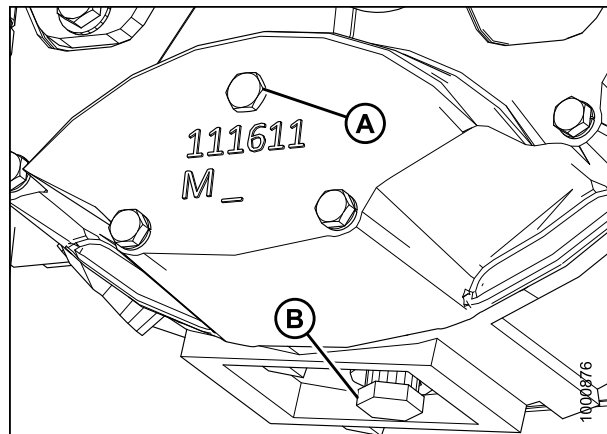


Figure 5.110: Gearbox Lubricant Drain Plug

Exhaust System

CAUTION

Engine exhaust stack may be hot. To avoid burns, do NOT touch exhaust canister when engine is running. Allow sufficient cooling time after shut-down.

MAINTENANCE AND SERVICING

The exhaust system requires no regular maintenance, but it should be inspected periodically as follows:

1. Open the hood to its highest position. For instructions, refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 307.
2. Inspect the area around clamps (A) for breakage, cracks, and rust-through. In addition to excess noise, a leaky exhaust system may allow exhaust gases to escape to the cab.
3. Check tubing for dents or crushed areas. Dents or crushed portions of any tubing create exhaust flow restriction and increase back pressure significantly. Even relatively small dents will cause decreased fuel economy and increased turbo wear. If dents are relatively large, increased bearing and cylinder wear will occur due to increased exhaust temperature.
4. Make sure the exhaust system is secured to eliminate vibration. The brackets (B) should fit securely to the muffler (C) and to the engine.

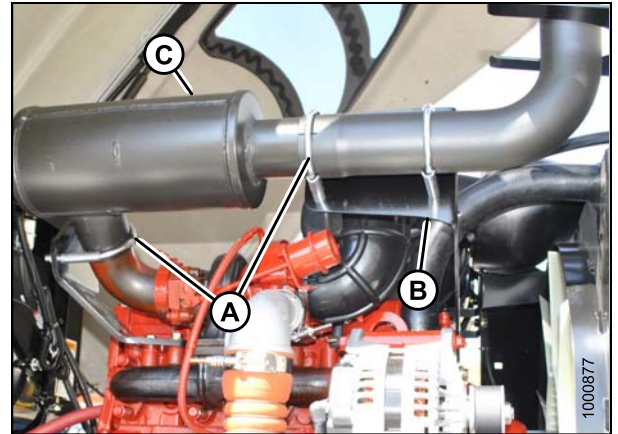


Figure 5.111: Exhaust System

IMPORTANT:

Do **NOT** change muffler type, piping sizes, or exhaust configuration. See your Dealer for proper replacement parts.

Belts

Tensioning Alternator/Fan Belt

The alternator, water pump, and fan belt are automatically tightened. Manual adjustment is **NOT** required.

Replacing Fan Belt



To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine and remove the key.
2. Open the left cab-forward platform, refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
3. Open the hood, refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.

MAINTENANCE AND SERVICING

- Loosen compressor mounting hardware (B) and push compressor towards engine to release tension.
- Remove belt (A) from compressor.

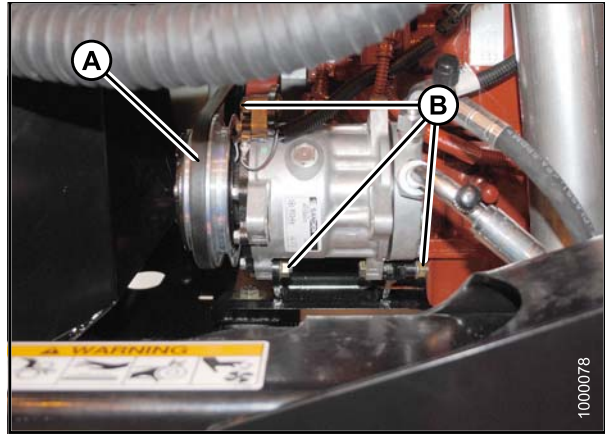


Figure 5.112: A/C Compressor

- Insert the drive end of a 1/2 in. drive ratchet wrench into the belt tensioner (B).
- Rotate tensioner counterclockwise until fan belt (A) can be slipped off pulley (C). Release tensioner and remove wrench.
- Remove belt in order 1–2–3 as shown. Route fan belt around fan and remove belt.

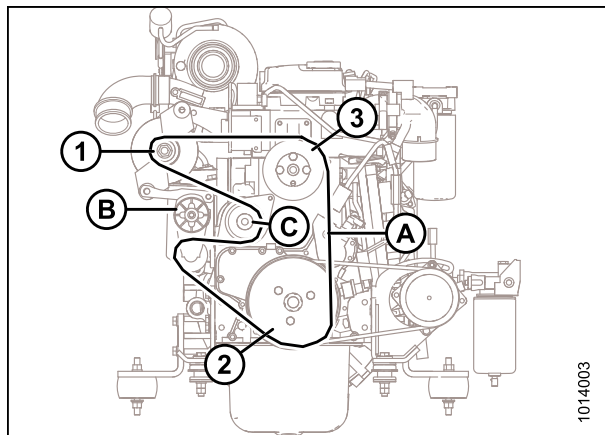


Figure 5.113: Engine Belts

- Install new belt (A) around fan and onto pulleys in order 3–2–1.
- Insert the drive end of a 1/2 in. drive ratchet wrench into the belt tensioner (B).
- Rotate tensioner counterclockwise until belt (A) can be slipped onto pulley (C). Release tensioner and remove wrench.
- Check that belt is properly seated in all pulley grooves.
- Install new compressor belt (A).
- Pry compressor away from engine so that a force of 8–12 lbf (35–55 N) deflects the belt (A) 3/16 in. (5 mm) at mid-span.
- Tighten compressor mounting hardware (B).
- Recheck tension and readjust as required.
- Close the hood, refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.
- Close the platform, refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 310.

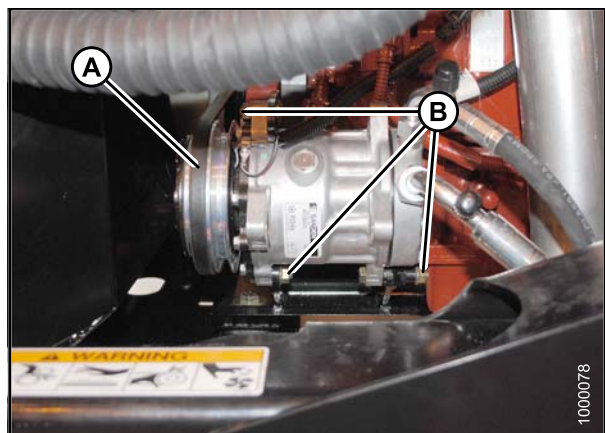


Figure 5.114: A/C Compressor

Tensioning Air Conditioner (A/C) Compressor Belt

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine and remove the key.
2. Open the hood, refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.
3. Loosen compressor mounting hardware (B).
4. Pry compressor away from engine so that a force of 8–12 lbf (35–55 N) deflects the belt (A) 3/16 in. (5 mm) at mid-span.
5. Tighten compressor mounting hardware (B).
6. Recheck tension and readjust as required.
7. Close the hood, refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.

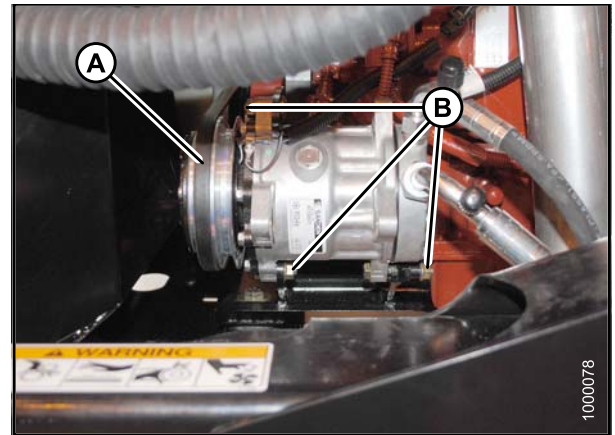


Figure 5.115: A/C Compressor

Replacing Air Conditioner (A/C) Compressor Belt

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down the engine and remove the key.
2. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.
3. Loosen compressor mounting hardware (B) and push compressor towards engine to release tension.
4. Remove belt (A) from compressor.
5. Install new compressor belt (A).
6. Pry compressor away from engine so that a force of 8–12 lbf (35–55 N) deflects the belt (A) 3/16 in. (5 mm) at mid-span.
7. Tighten compressor mounting hardware (B).
8. Recheck tension and readjust as required.
9. Close the hood, refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.

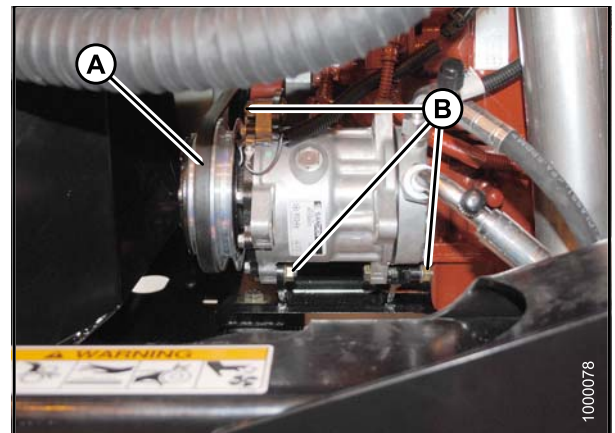


Figure 5.116: A/C Compressor

Engine Speed

The maximum and idle engine speeds are factory set.

Refer to [2.2 Specifications, page 31](#) for detailed information. If specified speeds cannot be maintained, see your MacDon Dealer.

Refer to [Engine Intermediate Speed Control \(ISC\), page 163](#) for information about engine speed.

Throttle Adjustment

The engine speed is controlled with the throttle lever that is connected to an electronic sensor inside the console.

The throttle lever in the cab should move the throttle sensor the full range between slow speed stop and full rpm stop without contacting the console at either position.

If the throttle lever is contacting the console and interferes with specified engine speeds, the sensor position may need adjustment. See your MacDon Dealer.

5.5.8 Electrical System

Preventing Electrical System Damage

To prevent electrical system damage, take the following precautions:

- Carefully observe polarity when attaching booster battery.
- Do **NOT** short across battery or alternator terminals, or allow battery positive (+) cable or alternator wire to become grounded.
- Be sure alternator connections are correct before cables are connected to battery.
- When welding on any part of the machine, disconnect battery cables and alternator wire. Refer to [1.8 Welding Precaution, page 9](#).
- Always disconnect battery ground cable when working with the alternator or regulator.
- Never attempt to polarize alternator or regulator.
- If wires are disconnected from the alternator, use the illustration to ensure proper connections.
- Never ground the alternator field terminal or field.
- Never connect or disconnect alternator or regulator wires with battery connected or alternator operating.
- Always disconnect cables from the battery when using a charger to charge battery in windrower.
- Ensure all cables are securely connected before operating engine.

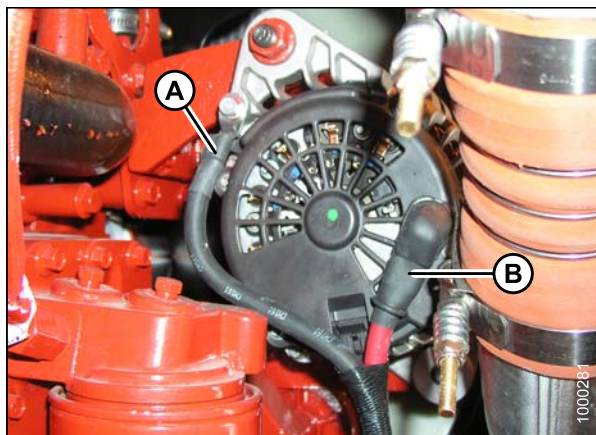


Figure 5.117: Alternator

A - Negative Terminal

B - Positive Terminal

Battery

Maintaining the Battery

CAUTION

Do NOT attempt to service battery unless you have the proper equipment and experience to perform the job. Have it done by a qualified Dealer.

- Check battery charge once a year, more often if operating in cold weather. Hydrometer readings should be 1.260 to 1.300. Readings below 1.250 indicate charging is required. Refer to [Charging the Battery, page 370](#). Add electrolyte if necessary. Refer to [Adding Electrolyte to the Battery, page 372](#).
- Keep batteries clean by wiping with a damp cloth.
- Keep all connections clean and tight. Remove any corrosion and wash terminals with a solution of baking soda and water. A light coating of grease on terminals (after cables are attached) will reduce corrosion.
- To prolong battery life, store batteries fully charged and at +20° to +80°F (-7° to +26°C). Check voltage after storage and recharge as needed according to battery and charger manufacturer recommendations.
- Do **NOT** stack storage batteries on top of each other.

Battery Main Disconnect Switch

A battery main disconnect switch is located on the right cab-forward side frame rail, just behind the batteries, and can be easily accessed by moving the maintenance platform.

Ensure the switch is in the POWER OFF position when servicing electrical components, or to prevent loss of battery charge when the windrower will not be used for long periods.

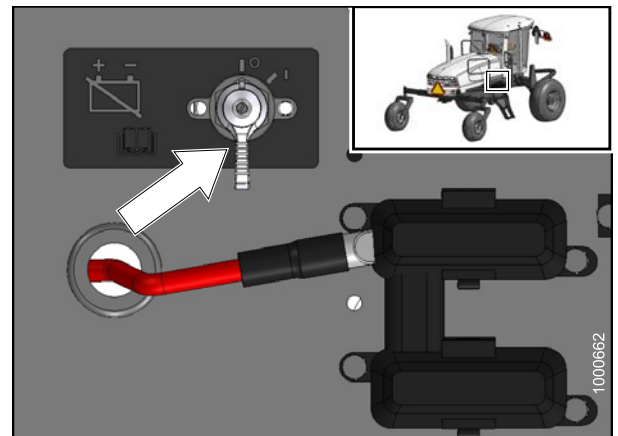


Figure 5.118: Electrical System

Charging the Battery

CAUTION

- Ventilate the area where batteries are being charged.
- Do NOT charge a frozen battery. Warm to 60°F (16°C) before charging.
- Do NOT connect or disconnect live circuits. To prevent sparks, turn off charger and connect positive cable first. PROTECT YOUR EYES.
- If charging battery in windrower, disconnect POSITIVE battery cable before connecting charger cable, then connect ground cable last, away from battery.
- Stop or cut back charging rate if battery feels hot, or is venting electrolyte. Battery temperature must NOT exceed 125°F (52°C).
- The maximum charge rate in amperes should be NO MORE than 1/3 of the battery's reserve capacity minute rating. If the terminal voltage exceeds 16.0 volts while charging, reduce the charge rate.
- Continue charging and reduce the rate as needed until a two hour period results in no increase in voltage or decrease in current.

WARNING

- Gel and AGM (Absorbed Glass Mat) batteries require a voltage-limited charger. Charging a Gel or AGM battery on a typical shop charger—even one time—may greatly shorten its life.
- If the electrolyte is accessible, verify that plates are covered before beginning to charge. At the end of charge, add distilled water as needed to bring levels to the proper height. If water is added, charge for an additional 30 minutes to mix. If electrolyte levels are low, but battery is not accessible, remove battery from service.

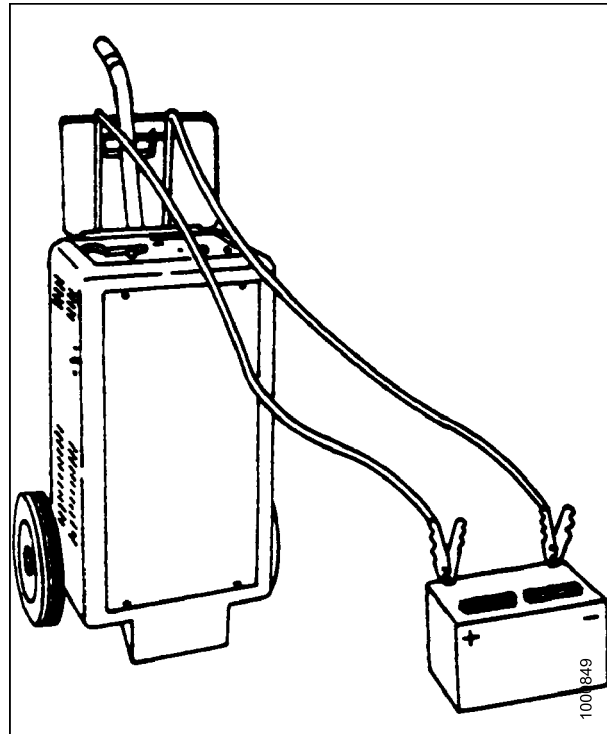


Figure 5.119: Charging Battery

Table 5.1 Voltage Chart

Voltage	State of Charge (%)	Approximate Battery Charging Time ²⁹ to Full Charge at 80°F/27°C. (Minutes)			
		Maximum Rate at (Amps)			
Standard Battery					
12 Volts		50	30	20	10
12.6	100	— FULL CHARGE —			
12.4	75	20	35	48	90
12.2	50	45	75	95	180
12.0	25	65	115	145	280
11.8	0	85	150	195	370

29. Charging time depends upon battery capacity, condition, age, temperature, and efficiency of charger.

⚠ CAUTION

Follow all instructions and precautions furnished by the battery charger manufacturer, including the following:

- Charge at recommended rates and times.
- Turn off charger prior to hook up to avoid dangerous sparks. Wear proper eye protection.
- Reduce charge rate if the terminal voltage is higher than 16.0 volts while charging. The maximum charge rate in amperes should NOT exceed 1/3 of the battery's reserve capacity minute rating.
- Continue charging if there is no change in voltage or current for a period of two-hour and reduce the rate as needed.
- If the battery case gets hot during charging or spews large amount of gasses, temporarily stop charging.

IMPORTANT:

NEVER overcharge batteries. Excessive charging will shorten battery life.

To charge battery, follow these steps:

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Move platform on right cab-forward side of machine to open position to allow access to the batteries. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 309](#).
3. Remove red plastic cover (A) from positive cable clamps.
4. Remove black plastic cover (B) from negative terminals.
5. If charging battery in windrower, disconnect **positive** battery cable (A), then connect charger cable to positive post. Connect charger ground cable to the engine block last, away from battery.
6. Charge batteries in accordance with charger manufacturer's instructions.
7. Close platform. Refer to [5.3.2 Closing Platforms \(Standard Position\), page 310](#).

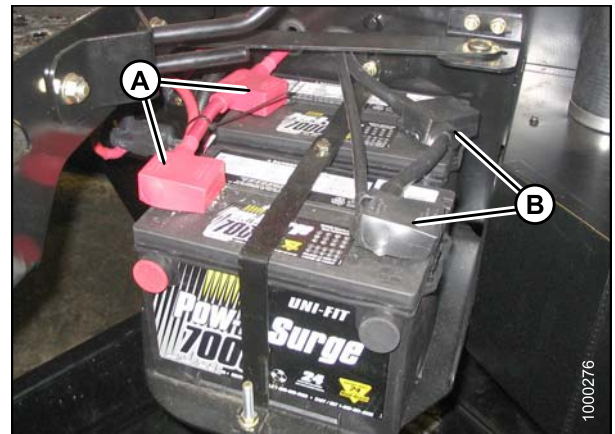


Figure 5.120: Battery Terminal Location

A - Positive Terminals

B - Negative Terminals

Boosting the Battery

A 12 volt battery can be connected in parallel (+ to +) with the windrower battery. Use heavy-duty battery cables.

CAUTION

- Gas given off by batteries is explosive. Keep sparks and flames away from batteries.
- Make last connection and first disconnection at the point furthest away from the batteries.
- Wear protective eye-wear when using a booster battery.
- Be sure everyone is clear of machine when starting engine. Start engine from operator's station only.

1. Open the hood. Refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.
2. Remove red rubber cover from boost post (A) on windrower frame.
3. Attach one end of battery cable to positive (+) terminal of booster battery, and other end to positive boost post (A) on windrower frame.
4. Attach second cable to negative (-) terminal of booster battery, and then to ground post (B) on windrower frame.
5. Turn ignition switch in cab as with normal start up.
6. After engine starts, disconnect cable from windrower ground first, and then disconnect the other cables.
7. Replace rubber cover on boost post (A).
8. Close the hood, refer to [5.2.2 Closing Hood \(Lower Position\)](#), page 307.

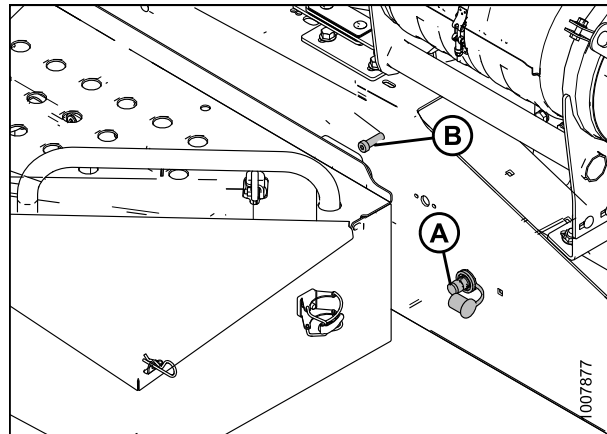


Figure 5.121: Battery Boost Posts

Adding Electrolyte to the Battery

Before servicing batteries, consult the battery manufacture's instructions for proper procedures and safety precautions.

WARNING

- Keep all smoking materials, sparks, and flames away from electrolyte container and battery, as gas given off by electrolyte is explosive.
- Battery electrolyte causes severe burns. Avoid contact with skin, eyes or clothing. Wear protective eyewear and heavy gloves.



Figure 5.122: Battery Safety

⚠ WARNING

- If electrolyte is spilled or splashed on clothing or on the body, neutralize it immediately with a solution of baking soda and water, then rinse with clean water.
- Electrolyte splashed into the eyes is extremely dangerous. Should this occur, force the eye open, and flood with cool, clean water for five minutes. Call a Doctor immediately.

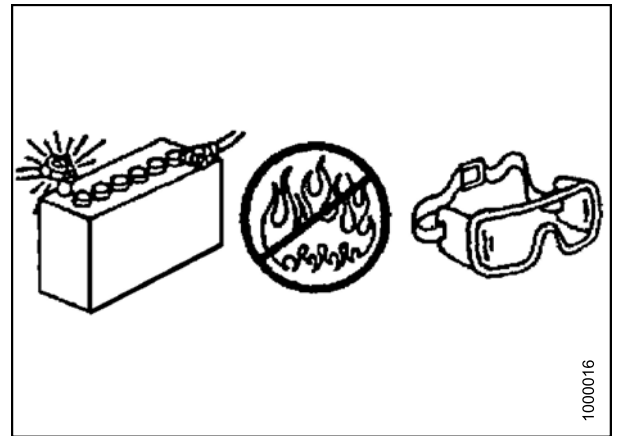


Figure 5.123: Battery Safety

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. If the batteries are installed in the windrower, stop the engine and remove the key.
2. Open the platform on the right side of the cab, refer to [5.3.1 Opening Platforms \(Standard Position\), page 309](#).
3. Add electrolyte in accordance with the battery manufacturer's instructions.
4. Close the platform, refer to [5.3.2 Closing Platforms \(Standard Position\), page 310](#).

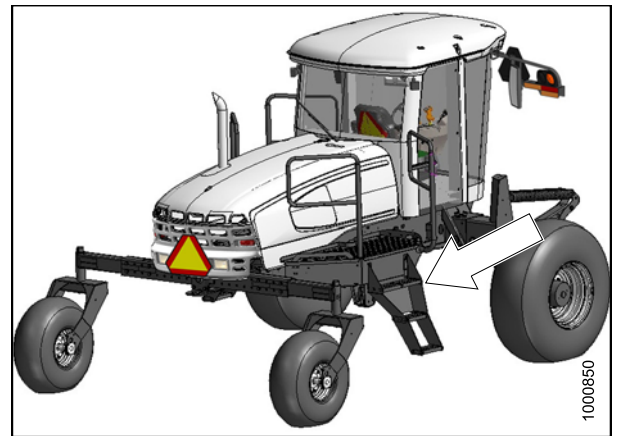


Figure 5.124: Platform Location

Removing Batteries

⚠ CAUTION

Do not attempt to service battery unless you have the proper equipment and experience to perform the job. Have it done by a qualified Dealer.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Open the right cab-forward platform to expose the batteries. Refer to [5.3.1 Opening Platforms \(Standard Position\), page 309](#).

MAINTENANCE AND SERVICING

- The battery main disconnect switch (A) is located on the right cab-forward frame rail beside the batteries. Ensure battery switch (A) is switched to POWER OFF position.

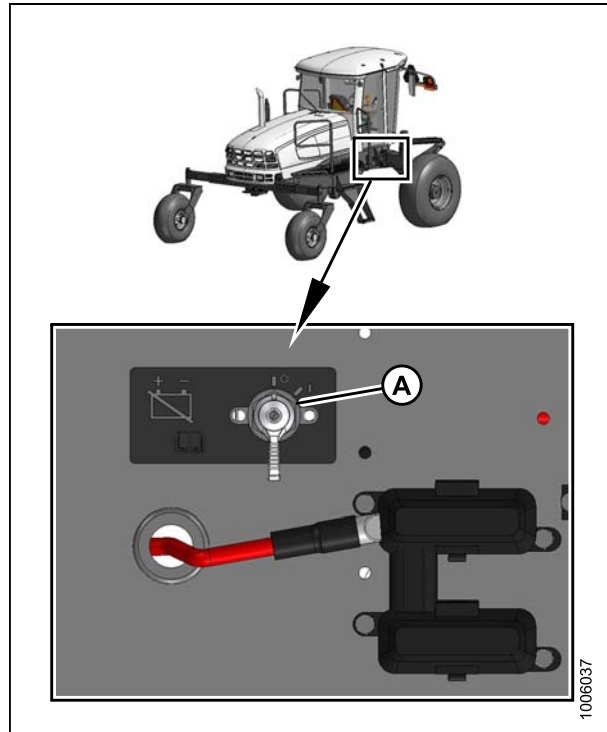


Figure 5.125: Battery Switch

- Remove the bolt (A) that secures the platform arm to the platform. Swing arm (B) out of the way.
- Remove the black plastic cover from the negative cable clamps (D). Loosen clamps and remove cable from batteries.
- Remove the red plastic cover from positive cable clamps (C). Loosen the clamps and remove cable from batteries.
- Remove bolts (E) securing strap (F) to frame, and remove strap.
- Lift batteries off holder (G).

NOTE:

Dual battery support can be removed from frame by simply lifting support, and pulling it away from frame.

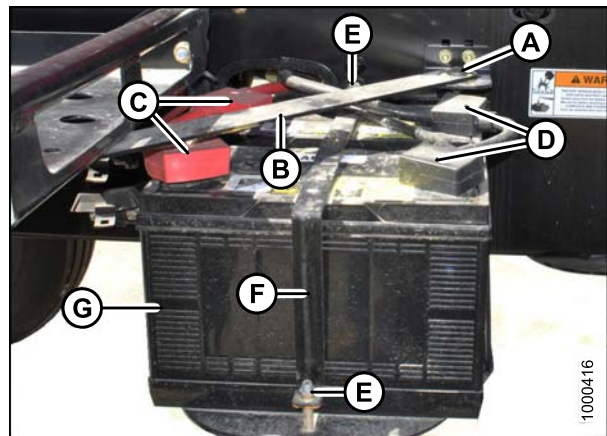


Figure 5.126: Battery

Installing Batteries

Replacement batteries must meet the specifications shown in the following table:

Table 5.2 Battery Specification

Rating	Group	CCA (min)	Volt	Maximum Dimension
Heavy duty, off-road, vibration resistant	BCI 29H or 31A	650	12	13.25 x 7.37 x 9.44 in. (334 x 188 x 232 mm)

MAINTENANCE AND SERVICING

1. The battery main disconnect switch (A) is located on the right cab-forward frame rail beside the batteries. Ensure battery switch (A) is switched to POWER OFF position.
2. Open the right cab-forward platform to expose the batteries. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
3. Remove cable ties securing battery cables to battery clamp.

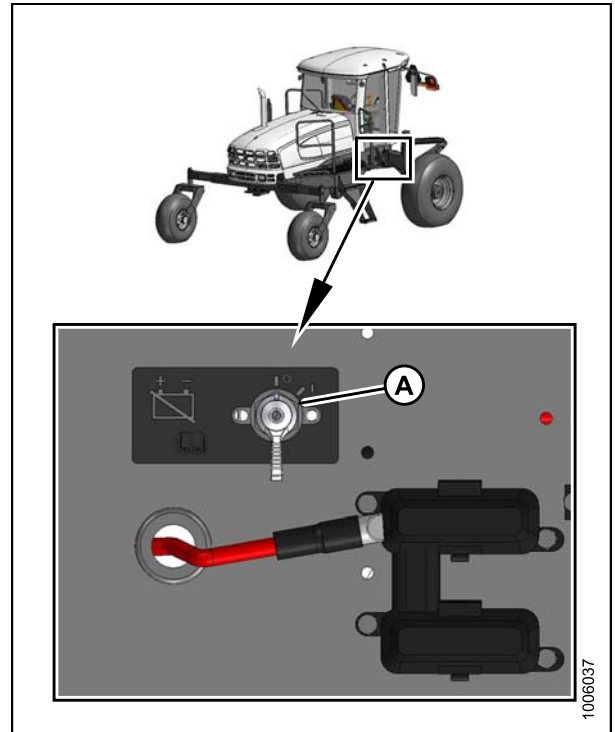


Figure 5.127: Battery Switch

4. Position new batteries (G) on dual battery support.

NOTE:

Ensure that batteries are positioned so that the positive posts (C) face aft.

5. Install strap (F) with bolts (E).
6. Rotate bar (B) into position and secure with bolt (A).
7. Connect battery cables. Refer to [Connecting Batteries](#), page 375.
8. Close the platform. Refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 310.

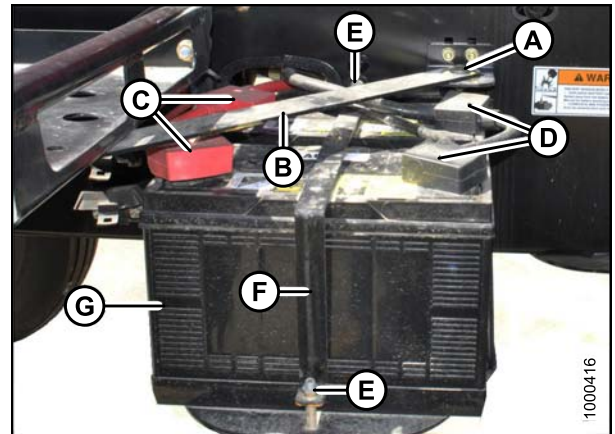


Figure 5.128: Battery

Connecting Batteries

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Stop engine and remove key from ignition.
2. Open the right-hand (cab-forward) maintenance platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.
3. Ensure the battery switch (A) is turned to the POWER OFF position (the battery switch is located on the right-hand frame rail beside the batteries).
4. Remove the cable ties securing the battery cables to the battery clamps.

IMPORTANT:

Batteries are negative grounded. Always connect red starter cables to the positive (+) terminals of the batteries and black ground cables to the negative (-) terminals of the batteries. Reversed polarity in the batteries or alternator may result in permanent damage to the electrical system.

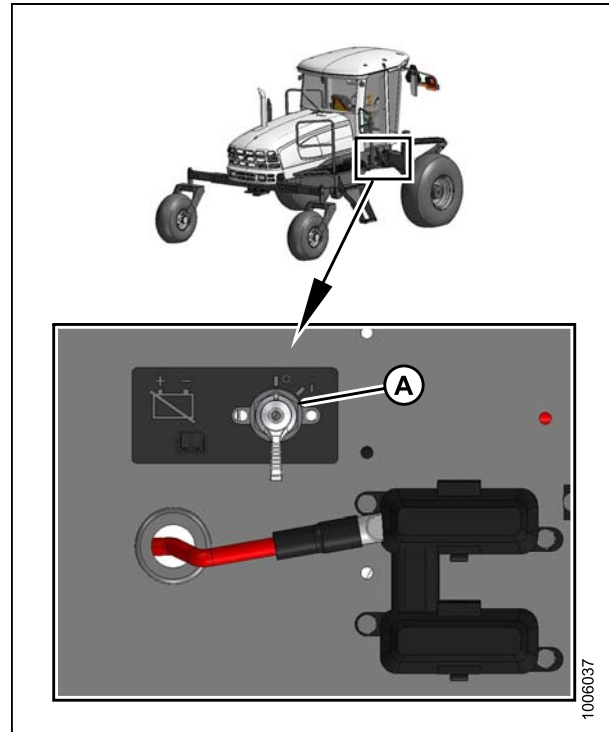


Figure 5.129: Battery Switch

5. Remove the plastic caps from the battery posts.
6. Attach the red positive (+) cable terminals to the positive posts (A) on the batteries and tighten clamps. Reposition plastic covers onto clamps.
7. Attach the black negative (-) cable terminals to the negative posts (B) on the batteries and tighten clamps. Reposition plastic covers onto clamps.
8. Turn the battery switch to the POWER ON position.
9. Close the platform, refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 310.

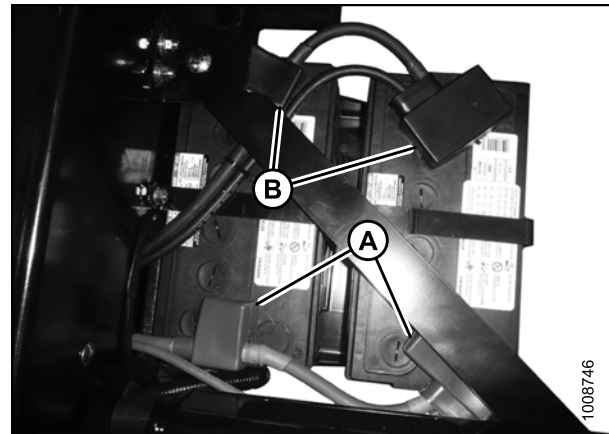


Figure 5.130: Batteries

Headlights: Engine-Forward

Aligning Headlights

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

NOTE:

Header should be attached and raised to maintain proper windrower stance.

MAINTENANCE AND SERVICING

1. Position windrower on level ground in front of a vertical surface in accordance with the illustration.
2. Shut down engine and remove key.

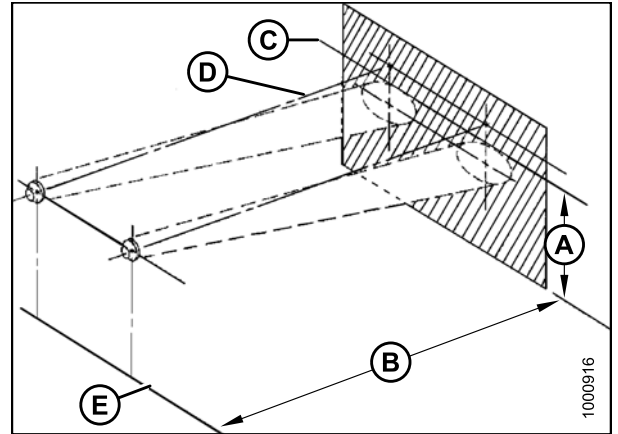


Figure 5.131: Headlight Beam Positioning

A - 49.75 in. (1263 mm) Maximum B - 25 ft (7.5 m)

C - Top Edge of Beam

D - Beam Centered on Direction
of Travel Line

E - Ground

3. Turn on ROAD lights and switch to low-beam.

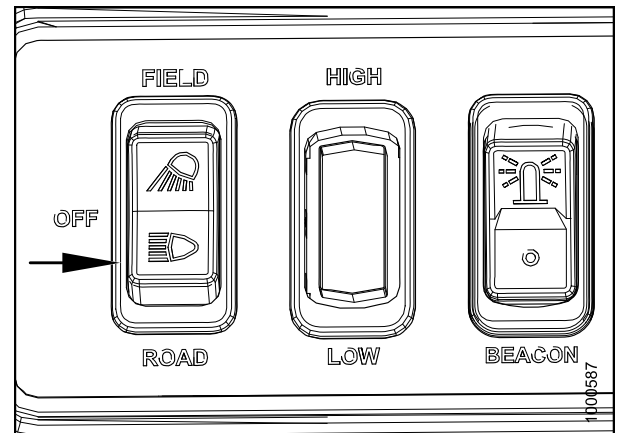


Figure 5.132: Road Light Switch

4. Align the headlights to the following specifications by turning adjusting screws (A).
 - Adjustments are for low-beam.
 - Light beams laterally centered on the direction of travel line from the headlights (that is, **NOT** skewed left or right).



Figure 5.133: Headlights

MAINTENANCE AND SERVICING

- Upper limit of the beam **NOT** higher than 49-3/4 in. (1263 mm) above ground at a distance of 25 ft. (7.5 m) from the headlight.

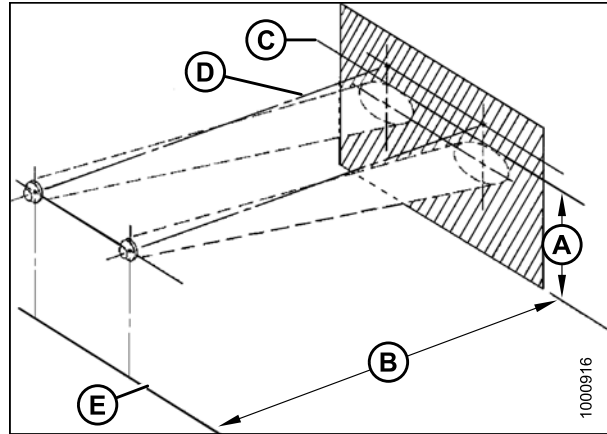


Figure 5.134: Headlight Beam Positioning

A - 49.75 in. (1263 mm) Maximum B - 25 ft (7.5 m)
C - Top Edge of Beam D - Beam Centered on Direction of Travel Line
E - Ground

Replacing Headlight Bulb

1. Remove two screws (A) and remove headlight assembly from hood.



Figure 5.135: Headlights

2. Pull wiring harness connector off the headlight assembly and remove rubber insulator boot (A).

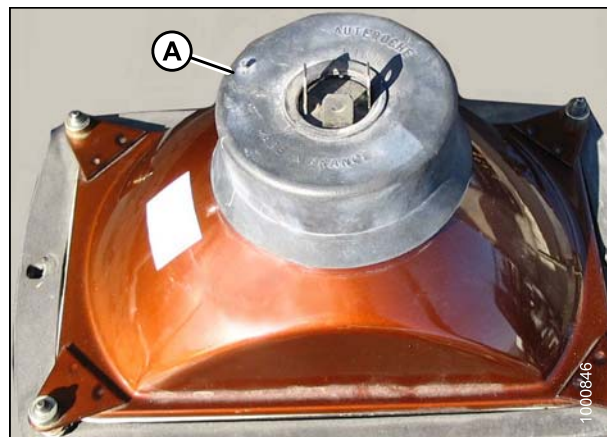


Figure 5.136: Headlight Assembly

MAINTENANCE AND SERVICING

3. Pinch the wire retainer (A) and lift away from hooks.
4. Remove bulb (B) from body.

IMPORTANT:

Do **NOT** touch the glass of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.

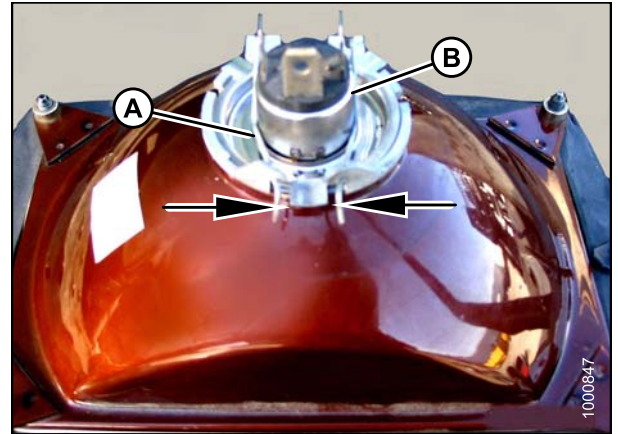


Figure 5.137: Headlight Assembly

5. Align lugs (B) on new bulb with slots (C) in body and push into place.
6. Secure bulb with wire retainer (A).

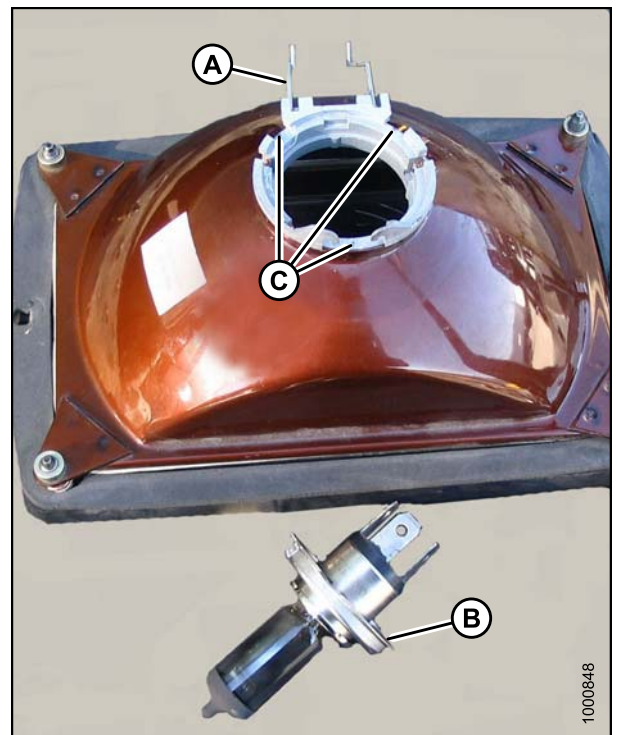


Figure 5.138: Headlight Assembly

MAINTENANCE AND SERVICING

7. Replace rubber insulator boot (A).
8. Push connector onto light bulb.

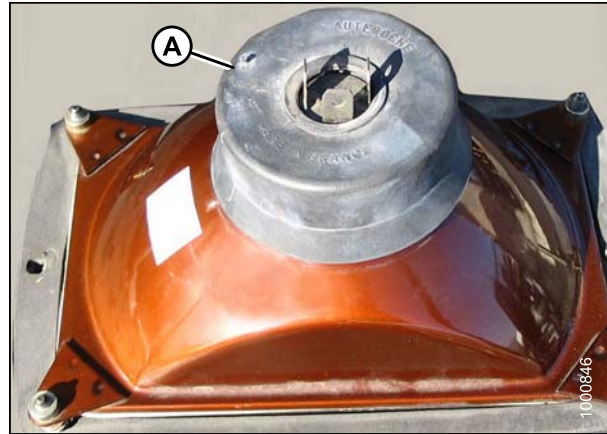


Figure 5.139: Headlight Assembly

9. Position headlight into light receptacle, ensuring top is up, and secure with screws (A).

NOTE:

Aligning of light should not be necessary.



Figure 5.140: Headlight Assembly

Field Lights: Cab-Forward

Adjusting Field Lights

The field lights are best adjusted with the machine in the field (or equivalent) to suit Operator preference.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Hold onto handholds (A) on the cab front corners, and stand on header anti-slip strips.

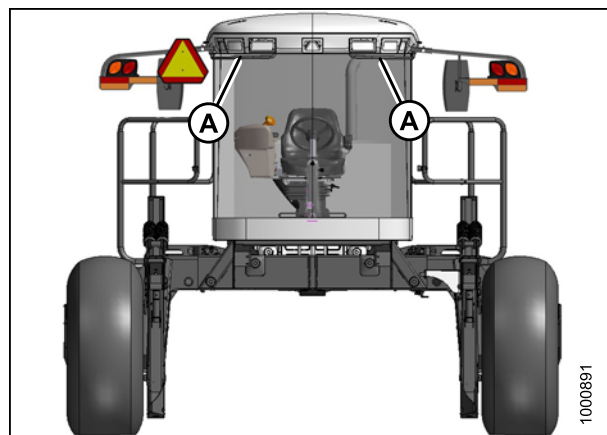


Figure 5.141: Field Lights

2. Adjust lights with screws (A).

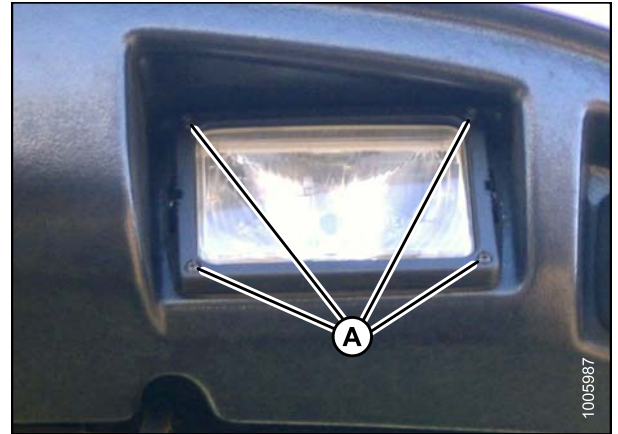


Figure 5.142: Field Lights

Replacing Field Light Bulb

1. Remove two screws (A), and remove light assembly.
2. Replace bulb as described in [Replacing Field Light Bulb, page 381](#).



Figure 5.143: Field Lights

Flood Lights: Forward

Adjusting Forward Flood Lights

The forward flood lights are **NOT** adjustable.

Replacing Bulb in Cab-Forward Flood Light

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Replace bulbs as follows:

1. Shut down engine and remove key. Turn lights OFF.

MAINTENANCE AND SERVICING

2. Hold onto the handholds (A) on the cab front corners and stand on the header anti-slip strips when removing the forward field lights.
3. Remove two screws (B) and remove light bezel (C).
4. Remove light from receptacle.

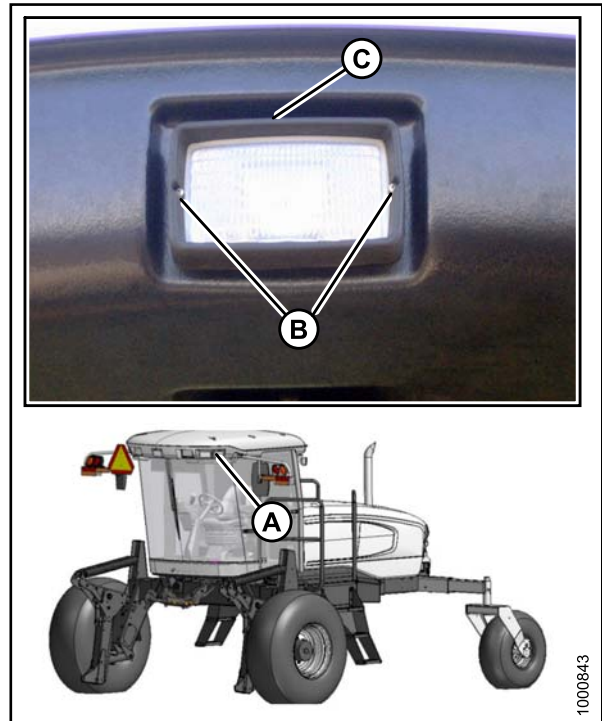


Figure 5.144: Forward Flood Lights

5. Pinch the wire retainer (A) and lift away from hooks.
6. Remove bulb (B) from body and pull wire from connector (C).

IMPORTANT:

Do **NOT** touch the glass of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.

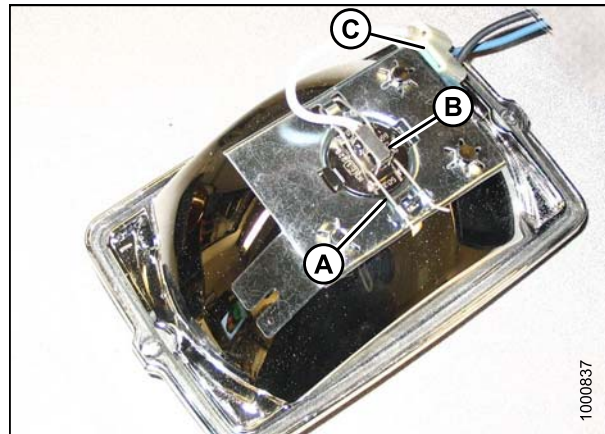


Figure 5.145: Flood Light Assembly

MAINTENANCE AND SERVICING

- Match slots on new bulb (B) with lugs (D) in optical unit and insert bulb into unit.
- Secure bulb with wire retainer (A).
- Push wire into connector (C).

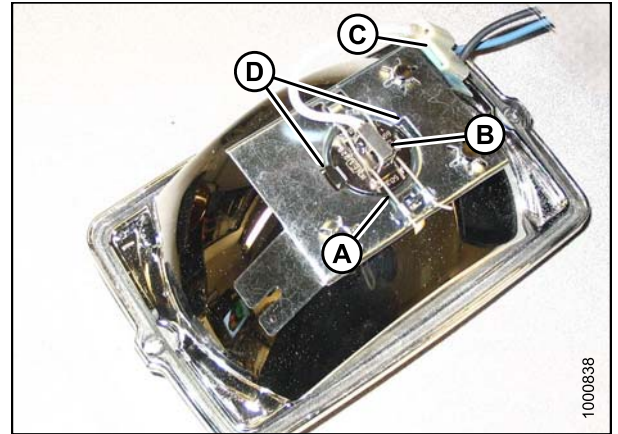


Figure 5.146: Flood Light Assembly

- Position light into light receptacle, ensuring top is up and secure with bezel (C) and screws (B).

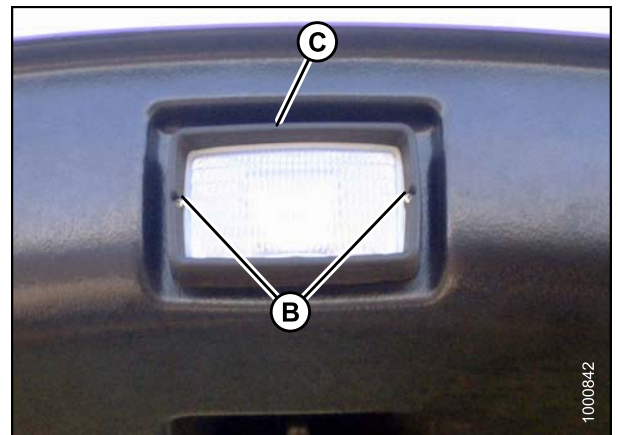


Figure 5.147: Forward Flood Light

High-Intensity Discharge (HID) Auxiliary Lighting (Optional - MD #B5596)

Two optional HID lights provide additional lighting during field operation. They operate only in cab-forward mode.

Adjusting High-Intensity Discharge (HID) Auxiliary Lights (if Installed)

If installed, HID auxiliary lights are best adjusted with the machine in the field (or equivalent) to suit Operator preference.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Shut down engine and remove key. Turn lights ON.
2. Loosen bolt (A) and nut (B) (located inside light / mirror support).
3. Position light to desired position.
4. Tighten bolt (A) and nut (B).

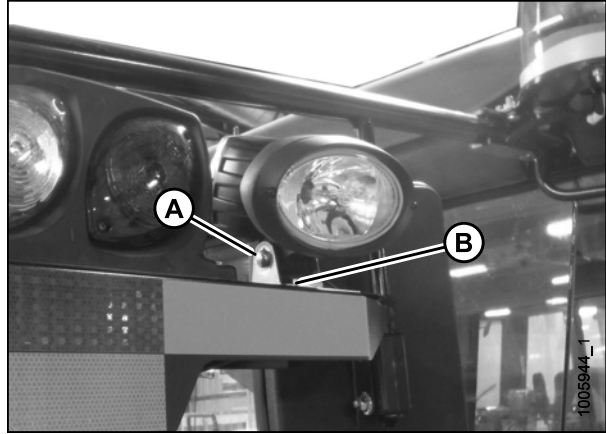


Figure 5.148: HID Auxiliary Lights

Replacing High-Intensity Discharge (HID) Lamp (if Installed)

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To remove and replace the lamp only, follow these steps:

1. Shut down engine and remove key. Turn lights OFF.

NOTE:

Hold onto the handholds (A) on the cab front corners and stand on the header anti-slip strips, or stand on the maintenance platform when accessing the HID auxiliary lights.

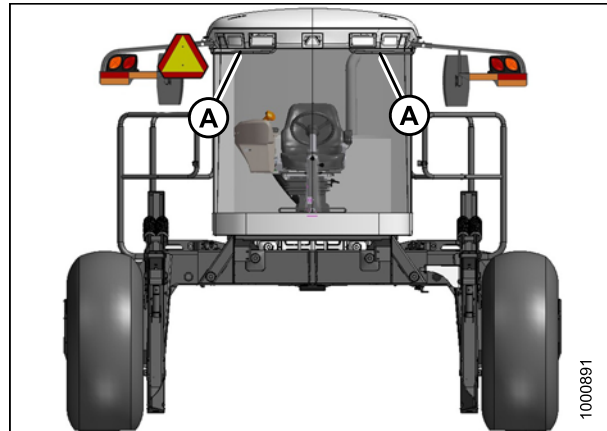


Figure 5.149: Cab Handholds

2. Remove the nut, spring washer, and bolt (A) that secure the lamp (B) to lamp bracket (C).
3. Remove lamp (B).
4. Position the new lamp (B) in lamp bracket (C) and secure with bolt (A), spring washer, and nut.
5. Adjust lamp (B) to desired position and tighten bolt (A).

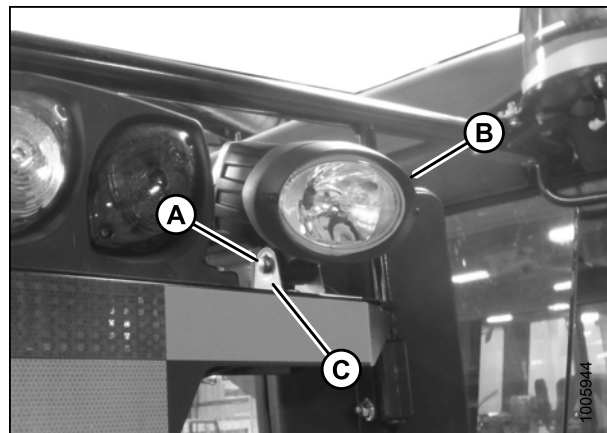


Figure 5.150: HID Auxiliary Lights

MAINTENANCE AND SERVICING

To remove and replace the HID lamp assembly, follow these steps:

1. Disconnect lamp connector (A) from electrical harness (B).

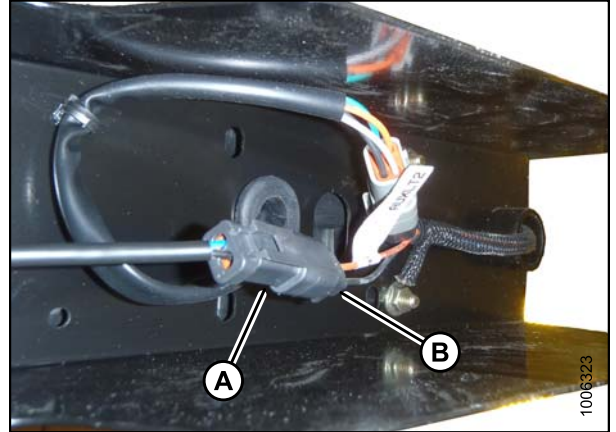


Figure 5.151: HID Auxiliary Light Harness

2. Remove grommet (A) from light support (B).
3. Remove nut (C) and spring washer from inside light support (B).
4. Remove the lamp assembly.

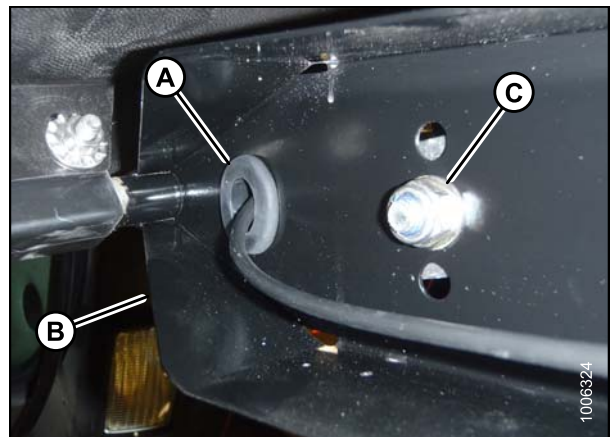


Figure 5.152: HID Light Assembly

5. Locate light in center hole in light support (B) and secure with hardware (C) provided with light assembly.
6. Adjust light assembly to desired position and tighten nut (C).
7. Route lamp harness through grommet (A) and slot in light support (B).
8. Reinstall grommet (A) in light support (B).

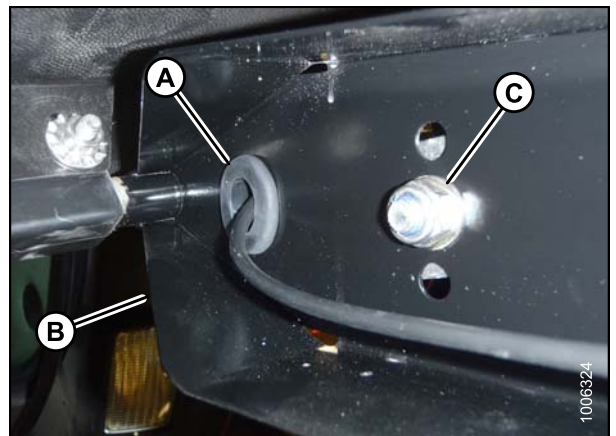


Figure 5.153: HID Light Assembly

MAINTENANCE AND SERVICING

9. Connect lamp plug (A) to main harness connector (B).

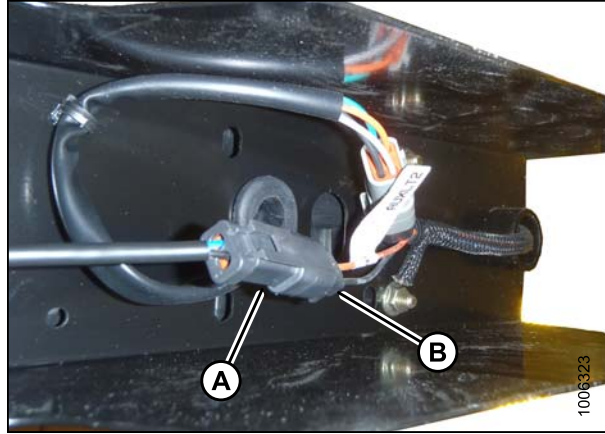


Figure 5.154: HID Auxiliary Light Harness

Flood Lights: Rear

Adjusting Rear Flood Lights

The rear flood lights are best adjusted with the machine in the field (or equivalent) to suit Operator preference.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down engine and remove key. Turn lights ON.
2. Loosen bolts (A) and (B).
3. Position light to desired position.
4. Tighten bolts (A) and (B).

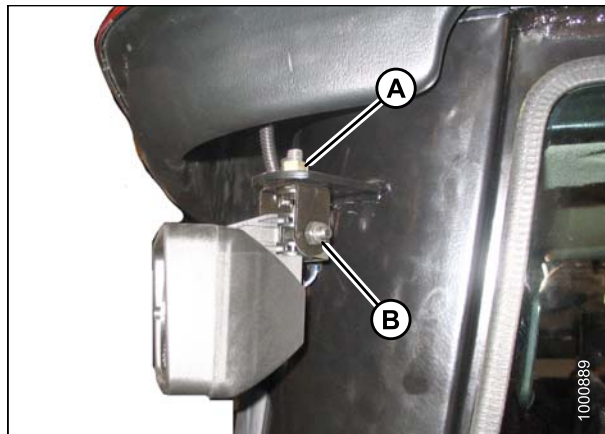


Figure 5.155: Rear Flood Lights

Replacing Bulb in Rear Flood Light

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Shut down engine and remove key. Turn lights OFF.
2. Remove two screws (A) and remove light bezel (B).
3. Remove light from receptacle.

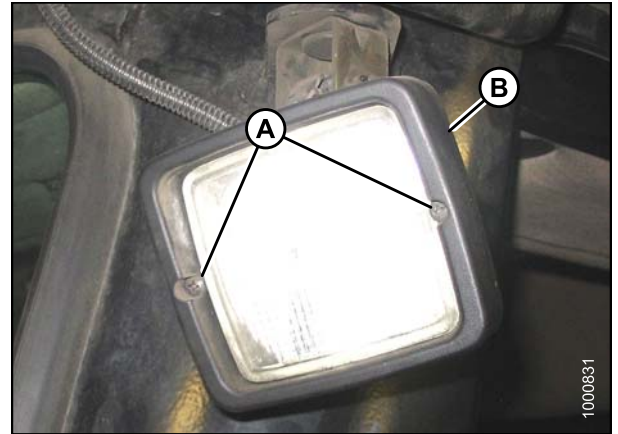


Figure 5.156: Rear Flood Light Assembly

IMPORTANT:

Do **NOT** touch the glass of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.

4. Pinch the wire retainer (A) and lift away from hooks.
5. Remove bulb (B) from body and pull wire from connector (D).
6. Match slots on new bulb (B) with lugs (C) in optical unit and insert bulb into unit.
7. Secure bulb with wire retainer (A).
8. Push wire into connector (D).

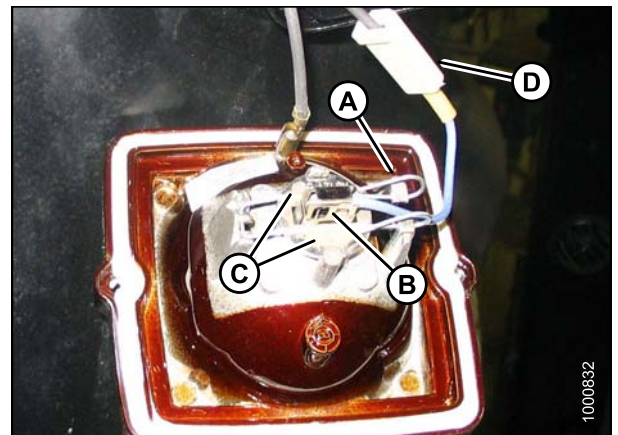


Figure 5.157: Rear Flood Light Assembly

9. Position light into light receptacle, ensuring top is up.
10. Secure with bezel (B) and screws (A).

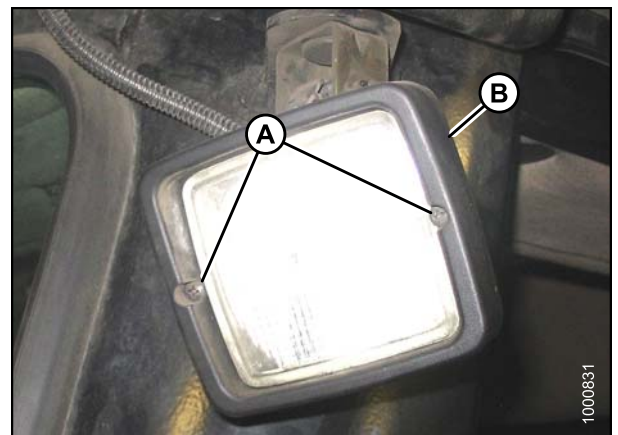


Figure 5.158: Rear Flood Light Assembly

Replacing Bulbs in Red and Amber Lights

To replace bulbs in red and amber lights, follow these steps:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down engine and remove key. Turn lights OFF.

NOTE:

Hold onto the handholds (A) on the cab front corners and stand on the header anti-slip strips, or stand on the maintenance platform when accessing the red and amber lights.

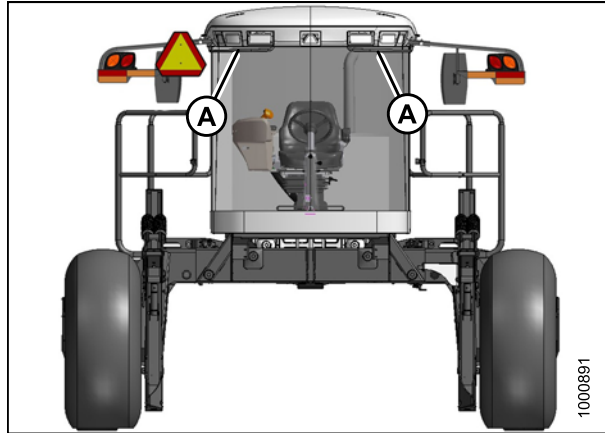


Figure 5.159: Cab Handholds

2. Remove two screws (A) from lens and remove lens.
3. Push and twist light bulb to remove from socket.
4. Install new bulb in socket ensuring that bulb base is properly engaged in socket.
 - Use Bulb Trade #1157 for red tail lights
 - Use Bulb Trade #1156 for amber lights
5. Reinstall lens with screws (B).

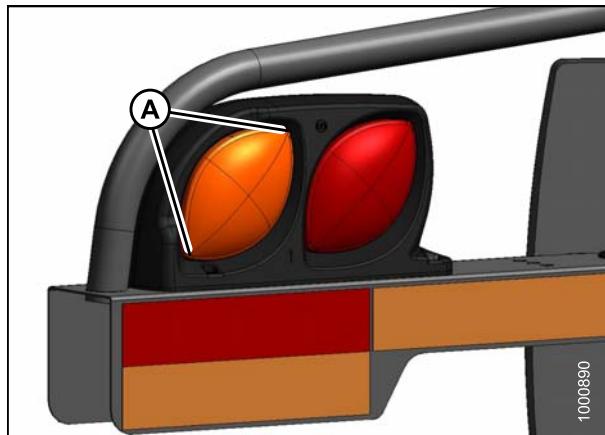


Figure 5.160: Red and Amber Lights

Replacing Red Tail Lights (if installed)

To replace the red tail lights, follow these steps:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Shut down engine and remove key. Turn lights OFF.

MAINTENANCE AND SERVICING

2. In the grill of the hood, remove two screws (A) from light (B), and remove light.
3. Remove connector from light.
4. Connect wiring harness to new light (B) and install light with screws (A).

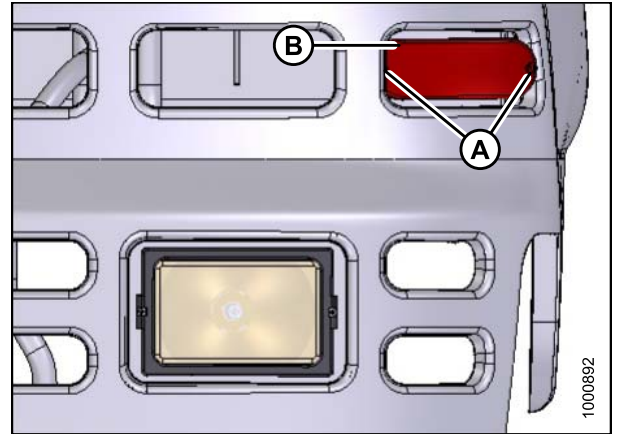


Figure 5.161: Red Tail Lights

Replacing the Bulbs in Beacon Lights (if installed)

Beacon warning lights are available as an optional Dealer-installed attachment (MD #B5582).

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

To replace the halogen bulb inside the beacon warning lights, follow these steps:

1. Shut down engine and remove key. Turn beacons OFF.

NOTE:

Hold onto the handholds (B) on the cab front corners and stand on the header anti-slip strips, or stand on the maintenance platform when accessing the beacons (A).

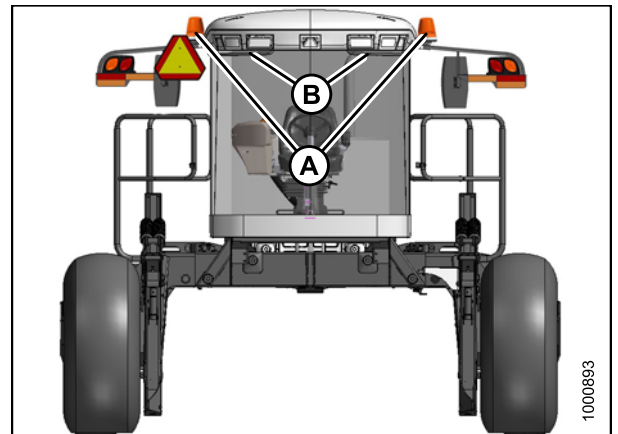


Figure 5.162: Warning Beacons

MAINTENANCE AND SERVICING

2. Turn lens (A) counterclockwise to unlock lens from base and remove lens.

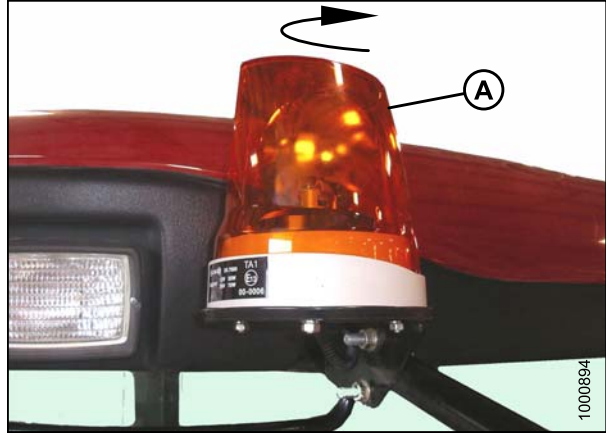


Figure 5.163: Warning Beacons

3. Pinch retainer (A) and remove it from lamp socket.
4. Pull lamp out of socket.

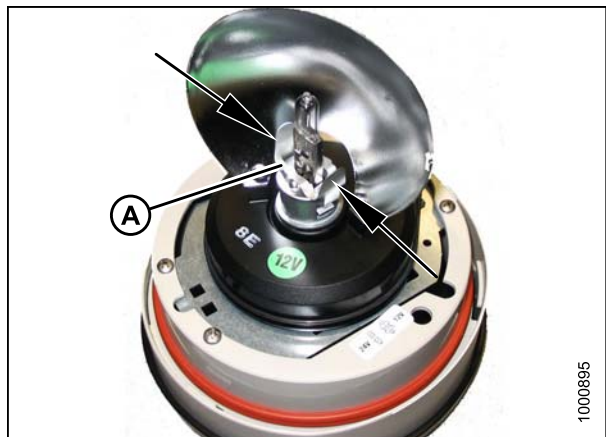


Figure 5.164: Beacon Lamp Assembly

MAINTENANCE AND SERVICING

5. Disconnect harness from lamp.

IMPORTANT:

Do **NOT** touch the glass of the halogen bulb as the oils or other chemicals from your skin will cause the bulb to fail prematurely.



Figure 5.165: Beacon Lamp Assembly

6. Connect harness to new lamp, place lamp in socket, and line up the flat side on lamp with recess in socket.



Figure 5.166: Beacon Lamp Assembly

MAINTENANCE AND SERVICING

- Place retainer (A) over lamp and pinch tabs to secure retainer to socket.

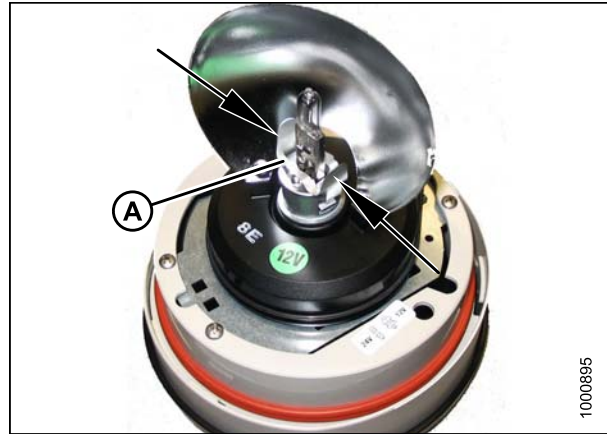


Figure 5.167: Beacon Lamp Assembly

- Line up the three lugs (one is longer) in the base with slots in lens, and seat the lens against the rubber seal.

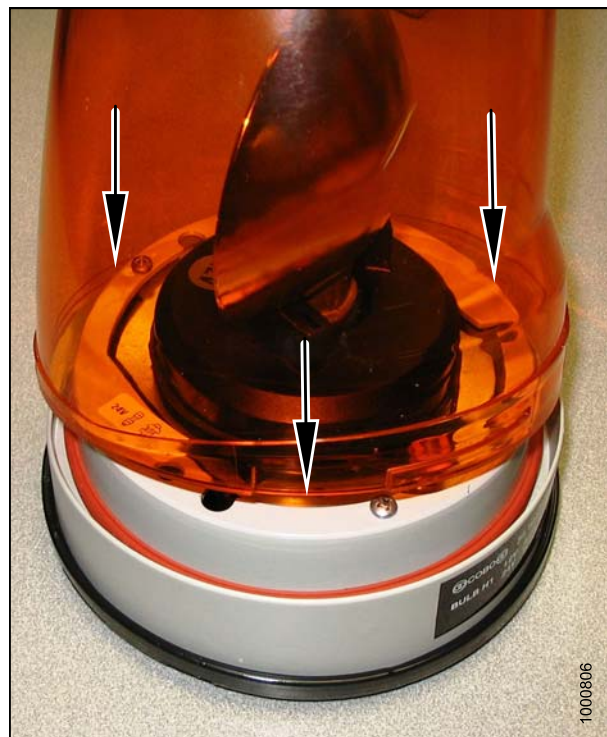


Figure 5.168: Beacon Lamp Assembly

MAINTENANCE AND SERVICING

9. Turn the lens clockwise to lock it in place.

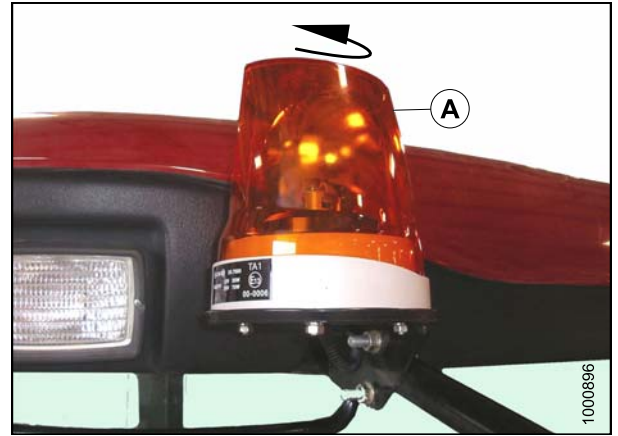


Figure 5.169: Warning Beacons

MAINTENANCE AND SERVICING

Replacing a Console Gauge Light

To replace a light inside one of the console gauges, follow these steps:

1. Shut down engine and remove key. Turn lights OFF.
2. Remove the appropriate gauge access hole decal (A) behind the operator's console.

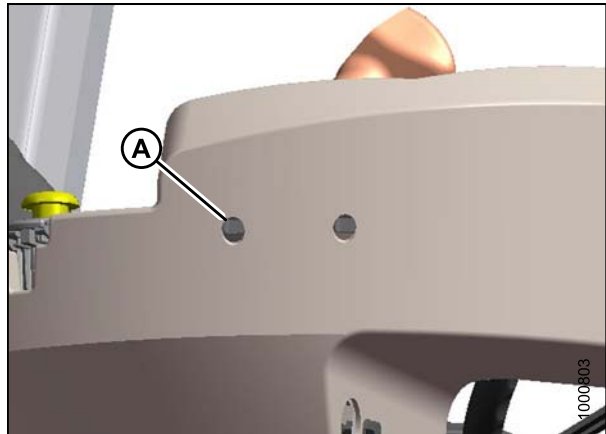


Figure 5.170: Operator Console

3. Remove nut (B) securing mounting bracket (C) to gauge inside the console.
4. Pull gauge out from console. It is **NOT** necessary to disconnect the wiring harness from the back of gauge.
5. Twist bulb holder (D) counterclockwise until loose and pull bulb holder from back of gauge.
6. Insert new bulb into gauge and turn clockwise until it locks.
7. Push gauge into console.
8. Locate bracket (C) onto back of gauge and secure with nut (B). Tighten nut.
9. Replace gauge access-hole decal.

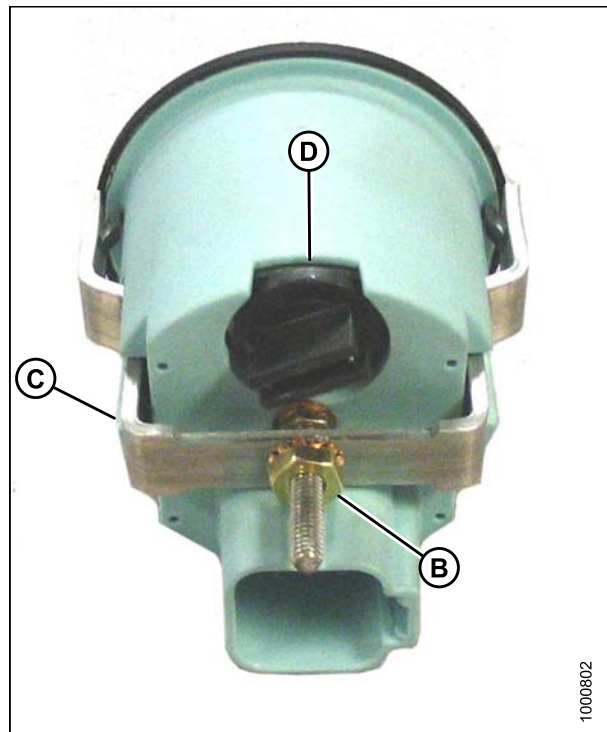


Figure 5.171: Back Of Console Gauge

Replacing the Cabin Dome Light

To replace a cabin dome light, follow these steps:

1. Shut down engine.
2. Remove two screws (A) from the dome light assembly and remove the assembly.
3. Disconnect the old dome light assembly from the wiring harness.
4. Connect the new dome light (MD #183413) to the wiring harness.
5. Install the new dome light with two screws (A).

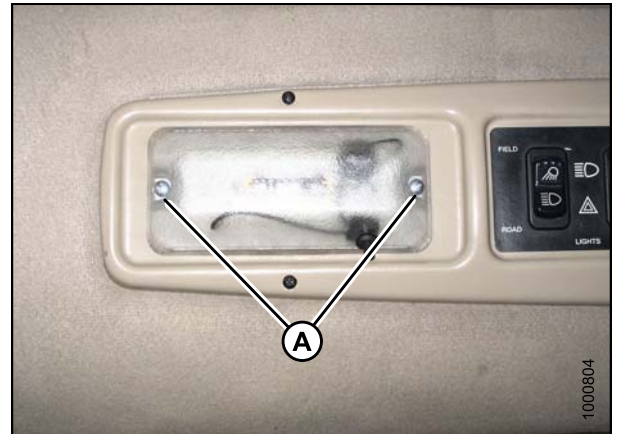


Figure 5.172: Cabin Dome Light

Replacing the Ambient Light Fixture

To replace the ambient light fixture, follow these steps:

1. Shut down engine.
2. Locate the ambient light fixture (A) in the roof liner.

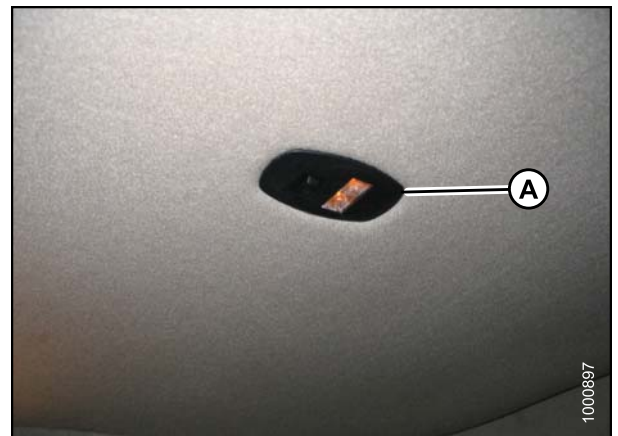


Figure 5.173: Ambient Light Fixture

3. Push against tabs (A) with a screwdriver and pull ambient light fixture out of cab roof.
4. Remove wires from connectors (B).
5. Connect wires to new light fixture.
6. Push into place in cab roof until tabs hold fixture in place.

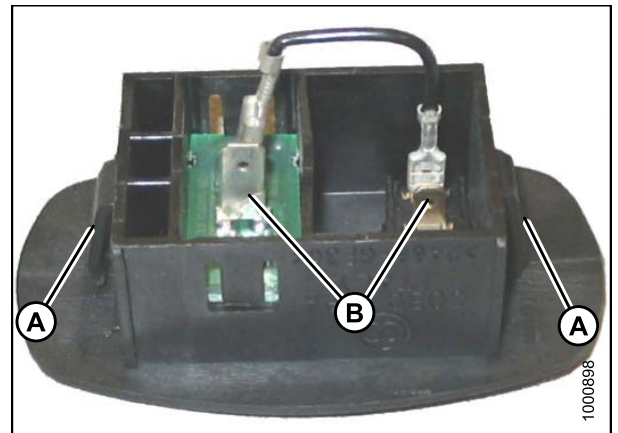


Figure 5.174: Ambient Light Fixture

MAINTENANCE AND SERVICING

Turn Signal Indicators

If the turn signal indicators on the cab display module (CDM) do not function, contact your MacDon Dealer.

Accessing Circuit Breakers and Fuses

The circuit breakers and fuses are located inside a fuse box mounted on the right (cab-forward) side of the frame under the platform.

The circuit breakers automatically reset. Fuses are the plastic blade type.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Access the breakers and fuses as follows:

1. Stop engine and remove key.
2. Move right (cab-forward) side platform rearward, refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page [309](#).
3. Remove wing nut (A) and remove fuse box cover (B).
4. Refer to the decal on inside of cover for identification of fuses and circuit breakers.
5. A cover may be installed over the circuit breaker. Remove it to access the breaker.

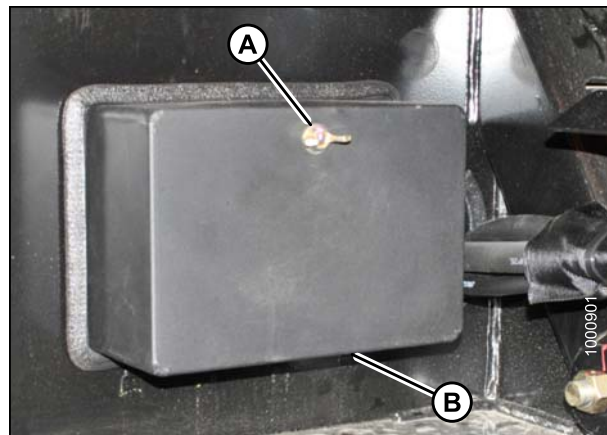


Figure 5.175: Fuse Box

Checking and Replacing Fuses

1. To check fuse, pull fuse (A) out of receptacle and visually examine.
2. To replace fuse, insert new fuse into receptacle.

IMPORTANT:

Replacement fuses should match rating on decal shown on [Fuse Box Decal](#), page [398](#).

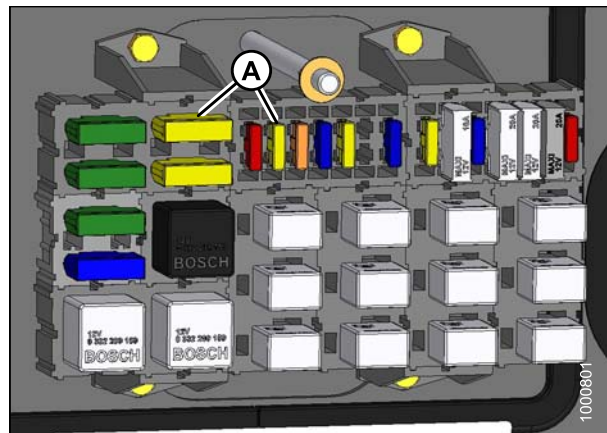


Figure 5.176: Fuses

Replacing Circuit Breakers and Relays

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Replace breakers and relays as follows:

1. Stop engine and remove key.
2. Move right cab-forward side platform rearward (cab-forward).
3. To replace circuit breaker (A), pull breaker out of receptacle and install new circuit breaker.
4. To replace relay (B), pull relay out of receptacle and install new relay.
5. Reinstall cover and secure with wing nut.

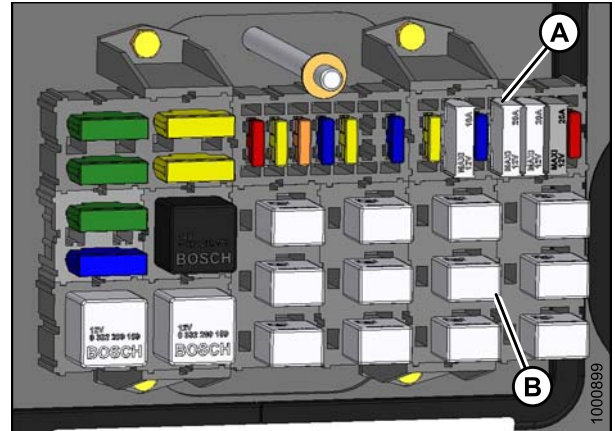


Figure 5.177: Relays and Breakers

MAINTENANCE AND SERVICING

Fuse Box Decal

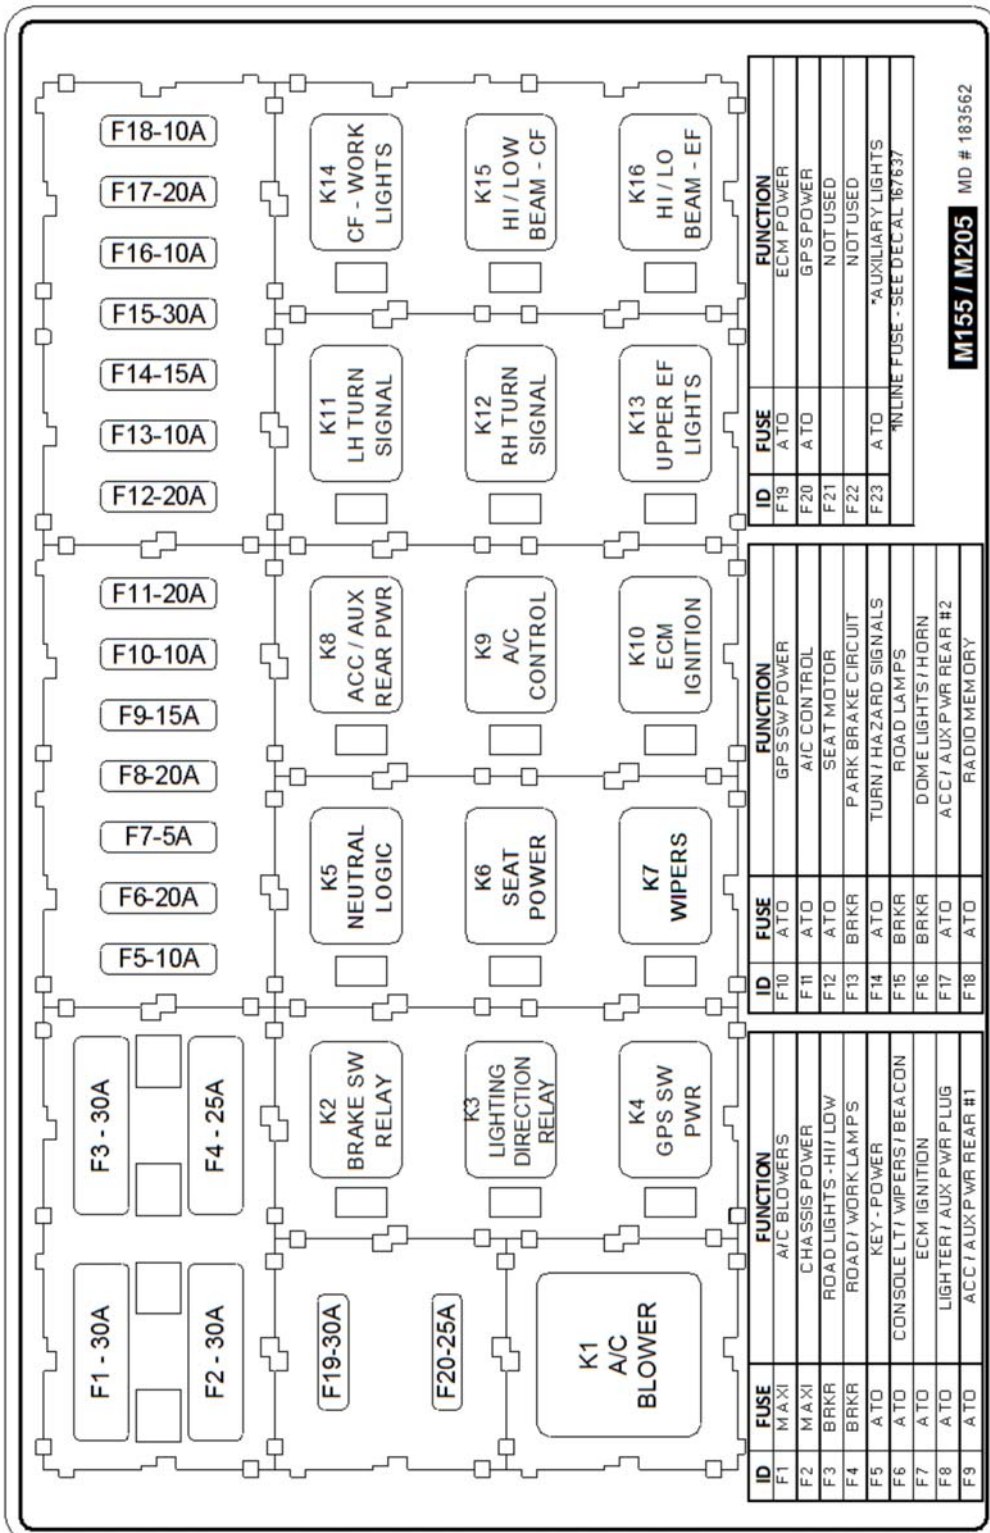


Figure 5.178: Fuse Decal

1013642

MAINTENANCE AND SERVICING

Inspecting and Replacing 125A Main Fuses

The 125A main fuse holders are located on the frame under the right cab-forward side platform beside the battery.

Access the 125A main fuses as follows:

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop engine and remove key.
2. Move right (cab-forward) side platform rearward.
3. To check condition of fuse, pull tab (A) and open cover (B).

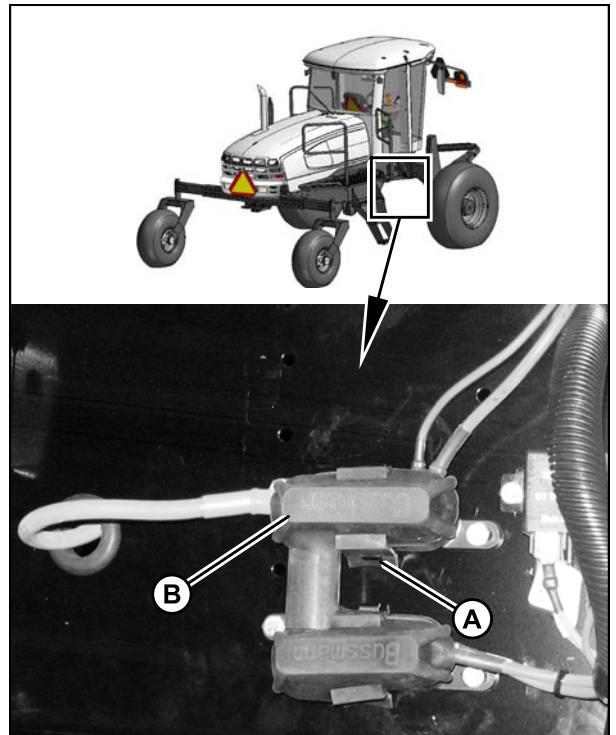


Figure 5.179: 125A Main Fuses

4. Visually examine fuse (B) for indications of melting.
5. Remove fuse (B), remove two nuts (C) and pull fuse free from holder (existing wiring may need to be pulled off the stud first).
6. Install new fuse on studs and any existing wiring that was removed.
7. Secure with nuts (C).



Figure 5.180: 125A Main Fuse

MAINTENANCE AND SERVICING

8. Close cover (B) and secure with tab (A).
9. Return platform to operating position. Ensure lock engages.

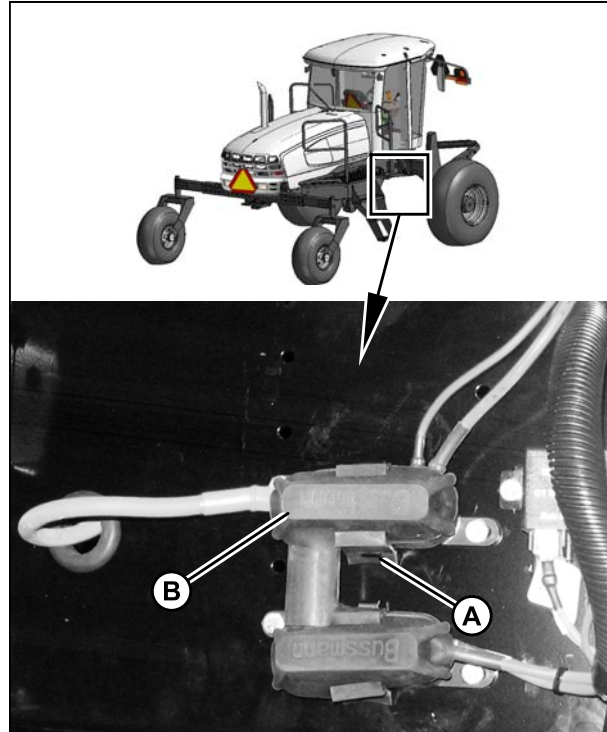


Figure 5.181: 125A Main Fuses

5.5.9 Hydraulic System

The M155 windrower hydraulic system provides oil pressure for the windrower drive system, the header lift, and header drive systems.

WARNING

- Avoid high pressure fluids. Escaping fluid can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic lines.
- Tighten all connections before applying pressure. Keep hands and body away from pin-holes and nozzles which eject fluids under high pressure.



Figure 5.182: Hydraulic Pressure Hazard

WARNING

- Use a piece of cardboard or paper to search for leaks.
- If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a Doctor familiar with this type of injury or gangrene may result.

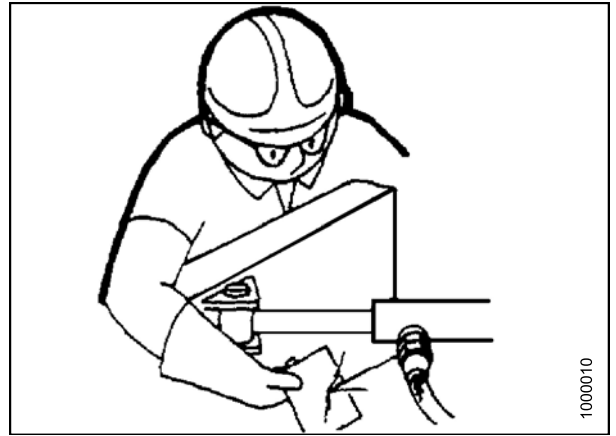


Figure 5.183: Checking Hydraulic Leaks

IMPORTANT:

Foreign material such as dirt, dust, and water is the major cause of trouble in the hydraulic system.

If hydraulic system components must be disconnected for service, protect the ends of hoses, tubing, and ports of components from contamination with clean, lint-free towels, or clean plastic bags.

Before installing any replacement hose, flush the inside with unused diesel fuel or unused commercial petroleum cleaning solvent for ten seconds minimum. Do **NOT** use water, water soluble cleaners, or compressed air.

The hydraulic system components are built to very close tolerances and have been adjusted at the factory. Do **NOT** attempt to service these components except to maintain proper oil level, change oil and filters, and to adjust relief pressures as described in this manual.

See your MacDon Dealer for all other service.

Checking and Filling Hydraulic Oil

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Park windrower on level ground and lower header and reel so that lift cylinders are fully retracted.
2. Stop the engine and remove the key.
3. Open the hood, refer to [5.2.1 Opening Hood \(Lower Position\)](#), page 306.

MAINTENANCE AND SERVICING

NOTE:

A sight glass (A) is provided under the hood on the right side of the tank. It indicates oil level and signs of contamination. No oil in the sight glass indicates oil level is below the add mark on the dipstick.

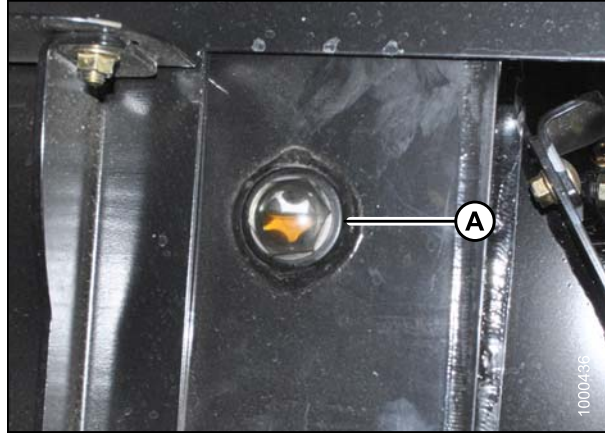


Figure 5.184: Hydraulic Oil Sight Glass

4. Stand on left (cab-forward side) platform to access the filler pipe.
5. Clean cap (A) and surrounding area.
6. Turn filler cap (A) counterclockwise to unlock cap and remove dipstick.

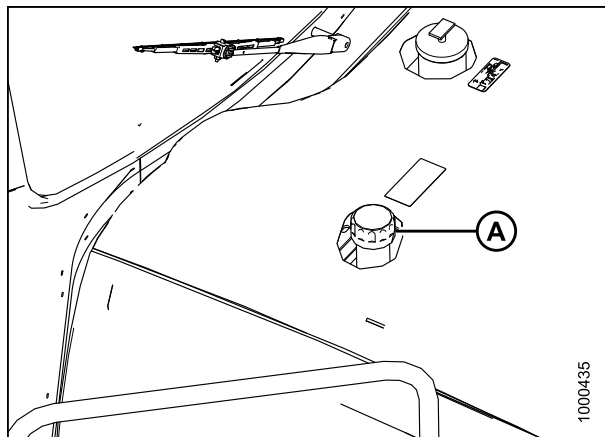


Figure 5.185: M155/M205 Engine Hood

7. If necessary, add oil to maintain a level between the low (L) and full (H) marks. Refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 466](#) for hydraulic oil specifications and quantity.

NOTE:

When dipstick is showing low (L), approximately 1 US gallon (4 liters) is required to reach the full (H) mark.

IMPORTANT:

- Use new good quality, prefiltered clean oil
 - Exercise care to prevent debris from falling into tank
8. Reinstall dipstick and filler cap, and turn clockwise to tighten/lock.
 9. Close the hood. Refer to [5.2.2 Closing Hood \(Lower Position\), page 307](#).

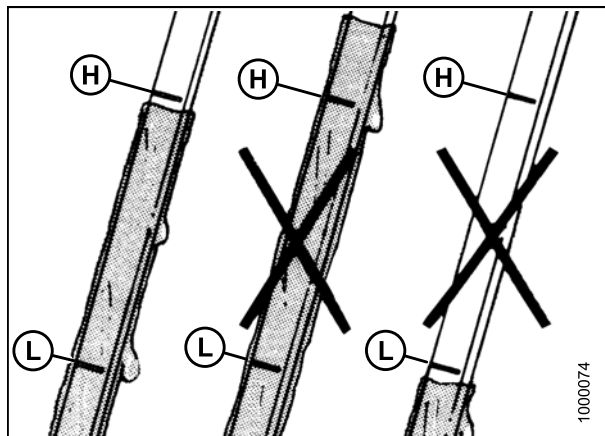


Figure 5.186: Hydraulic Oil Levels

Hydraulic Oil Cooler

The hydraulic oil cooler is located inside the cooling box behind the radiator.

It should be cleaned daily with compressed air. Refer to [Cleaning Cooler Box Components, page 360](#).

Draining Hydraulic Oil

To drain hydraulic oil, follow these steps:

Hydraulic oil should be changed every 1500 hours or every 2 years.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Park the windrower on level ground, and lower the header and reel so that the lift cylinders are fully retracted.
2. Stop the engine and remove the key.
3. Open the hood. Refer to [5.2.3 Opening Hood \(Highest Position\), page 307](#).
4. Place a clean container (at least 20 US gallons [75 liters]) under drain at the bottom of the hydraulic reservoir to collect the oil.
5. Remove drain plug (A) and allow oil to drain.
6. Inspect particles and clean off any metal debris that may have accumulated on magnetic plug. Wipe plug with a clean cloth. Check O-ring condition. Look for cracking, breakage, or deformation that may impede sealing ability and replace as required.
7. Install drain plug (A), torque 59 ft·lbf (80 N·m).
8. Fill hydraulic oil reservoir, refer to [Checking and Filling Hydraulic Oil, page 401](#).

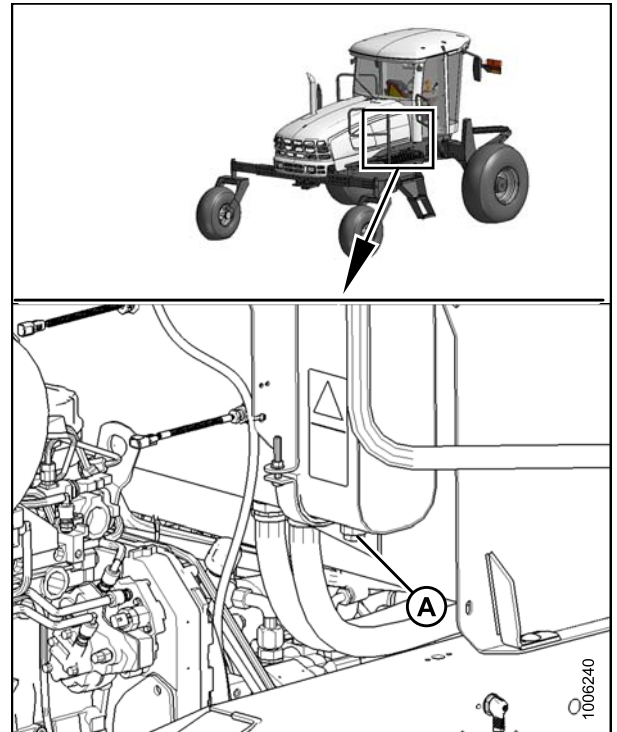


Figure 5.187: Hydraulic Oil Drain Plug

Changing Hydraulic Oil Filters

The charge filter (A) and return filter (B) are located just inside the frame on the left side and are accessible from under the windrower. Change as follows:

NOTE:

Change hydraulic oil filters after the first 50 hours of operation, and every 500 hours thereafter. Filter (A) (MD #112419) and filter (B) (MD #151975) can be obtained from your Dealer.

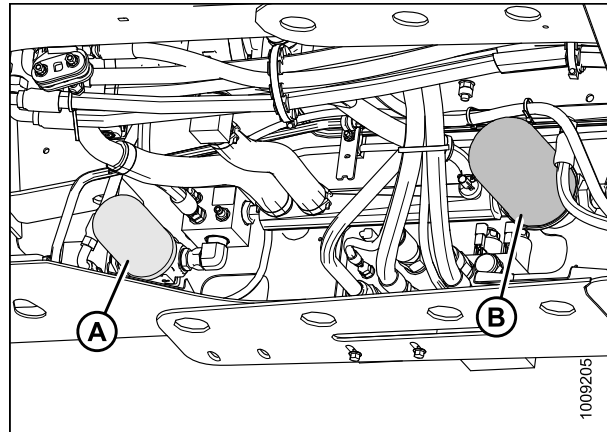


Figure 5.188: Hydraulic Oil Filters

Charge Filter

The charge filter filters the oil in the windrower hydraulic charge circuit that supplies make up oil for normal losses at motor and pump case drains and associated circuits.

Refer to the following procedures to change the charge filter:

- [Removing Charge Filter, page 404](#)
- [Installing Charge Filter, page 405](#)

Removing Charge Filter

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Clean around head of the filter.
3. Place a container beneath the filter to collect any oil that may leak out.
4. Unscrew filter (A) with a filter wrench.
5. Dispose of used oil and filter in accordance with local environmental legislation.

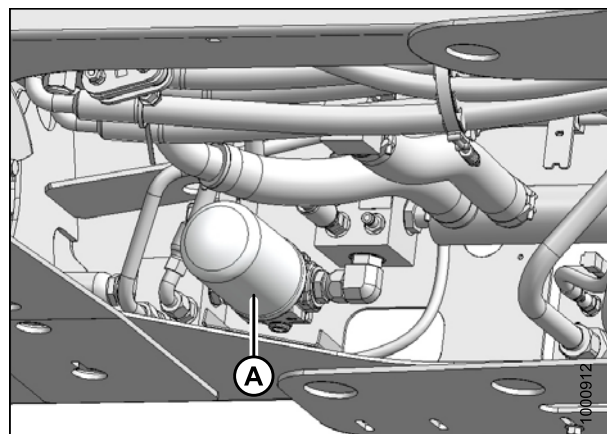


Figure 5.189: Hydraulic System

Installing Charge Filter

NOTE:

For charge filter replacement part number, refer to [8.2.4 Filter Part Numbers, page 467](#).

1. Clean the gasket surface of the filter head.
2. Apply a thin film of clean oil to the filter gasket.
3. Screw the new filter (A) onto the mount until the gasket contacts the filter head.
4. Tighten filter an additional 1/2 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install oil filter. Overtightening can damage gasket and filter.

5. Check hydraulic fluid levels, refer to [Checking and Filling Hydraulic Oil, page 401](#). For capacity level, refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 466](#).

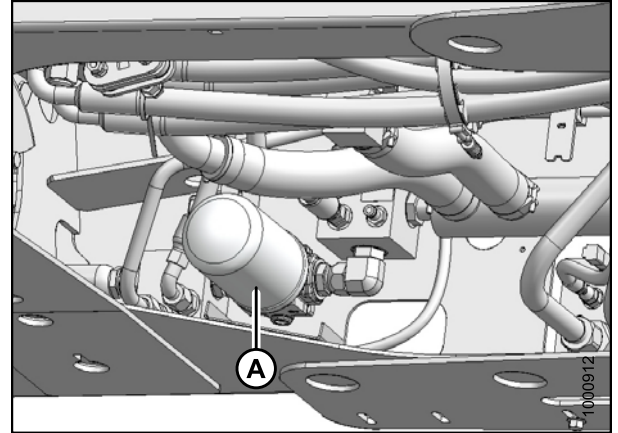


Figure 5.190: Hydraulic System

Return Filter

The return filter filters the oil in the header drive systems and should be changed after the first 50 hours and then at 500 hour intervals.

To change the return filter, refer to the following procedures:

- [Removing Return Filter, page 405](#)
- [Installing Return Filter, page 406](#)

Removing Return Filter

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Stop the engine and remove the key.
2. Clean around head of the filter (A).
3. Place a container beneath the filter (A) to collect any oil that may leak out.
4. Unscrew filter (A) with a filter wrench.
5. Dispose of used oil and filter in accordance with local environmental legislation.

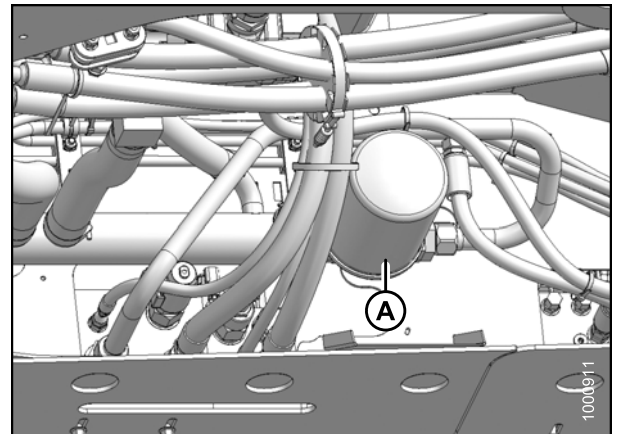


Figure 5.191: Hydraulic System

MAINTENANCE AND SERVICING

NOTE:

Image showing filter head removed to show component clarity.

6. Remove gasket (C) from groove (B) in filter head (A). Filter (D) shown for context.

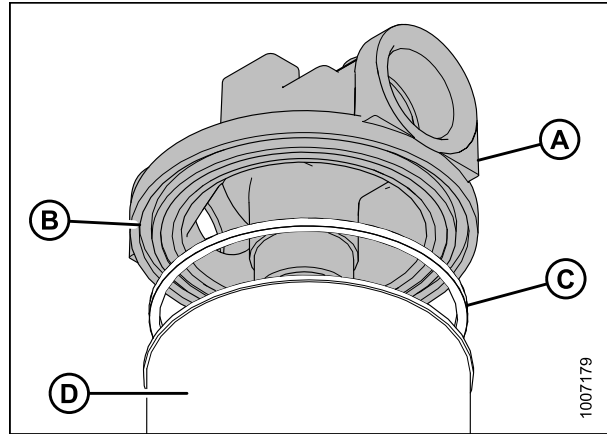


Figure 5.192: Return Filter

Installing Return Filter

NOTE:

For filter specifications, refer to [8.2.4 Filter Part Numbers, page 467](#).

1. Clean the gasket groove (B) in the filter head (A).
2. Apply a thin film of clean oil to the filter gasket (C).
3. Install new gasket (C) into the groove (B) in the filter head (A).
4. Screw the new filter (D) onto the filter head until the gasket contacts the filter.

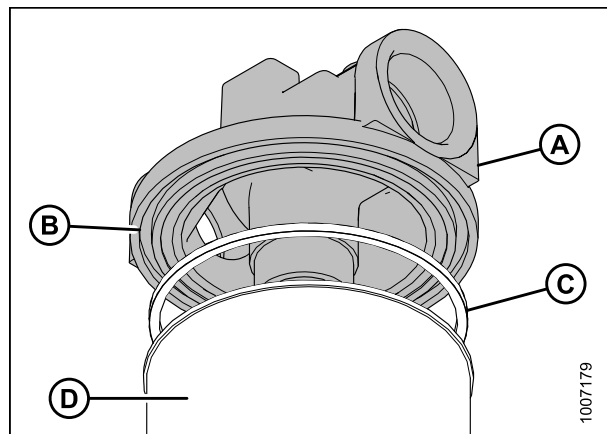


Figure 5.193: Return Filter

5. Tighten filter an additional 3/4 turn by hand.

IMPORTANT:

Do **NOT** use a filter wrench to install oil filter. Overtightening can damage gasket and filter.

6. Check hydraulic fluid levels, refer to [Checking and Filling Hydraulic Oil, page 401](#). For capacity level, refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 466](#).

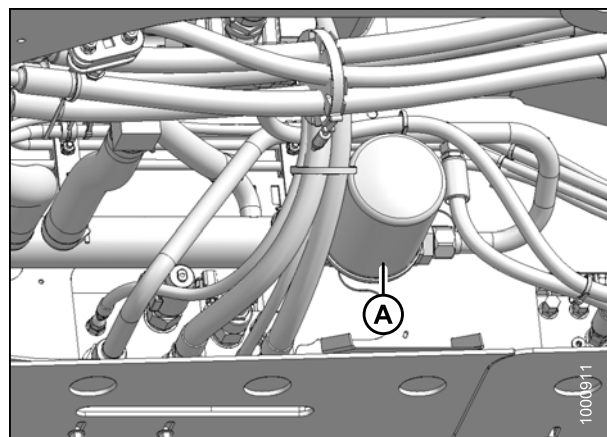


Figure 5.194: Hydraulic System

Header and Reel Hydraulics

Pressure Compensator Valve

The pressure compensator valve protects the header drive pumps from overheating under very heavy loads.

When the operating pressure reaches the absolute pressure limit setting (refer to [5.3 Header Hydraulic Pressures, page 407](#)) the compensator valve in the pump is activated and the header drive will slow down to avoid overheating the drive pumps. At this point, reduce the ground speed to maintain the correct system load and header drive operation.

NOTE:

An optional pressure sensor is available to monitor the knife or reel drive hydraulic pressure and provide a warning tone from the cab display module (CDM) if the system pressure approaches a preset limit. The system pressure limit is set during CDM programming. Refer to [7.1.16 Pressure Sensor Kit, page 449](#).

NOTE:

The warning tone is only heard if the pressure sensor is installed and enabled.

NOTE:

A warning tone is normal when the operating pressure is close to the compensator valve's pressure setting.

Table 5.3 Header Hydraulic Pressures

Header Model	Application/System	Windrower Absolute Pressure Limit Setting psi (kPa)	Suggested Overload Warning Setting psi (kPa)
R-Series	Disc pressure	4200 (28,958)	4000 (27,579)
D-Series A-Series	Reel/draper pressure	3200 (22,063)	3000 (20,684)
	Knife/conditioner pressure	4200 (28,958)	4000 (27,579)

If lift and drive capacity problems develop, the pressure compensator valve may require adjusting. Contact your MacDon Dealer or refer to the technical service manual for your windrower.

Flow Control Blocks

Two hydraulic valve blocks with multiple cartridges are used for the various windrower functions and are controlled by the windrower control module (WCM) according to the inputs from the Operator. The valve blocks are located behind the left cab-forward side platform.

The valve blocks do not require any scheduled maintenance other than to check for leaking fittings or loose electrical connections. If service is required, contact your MacDon Dealer.

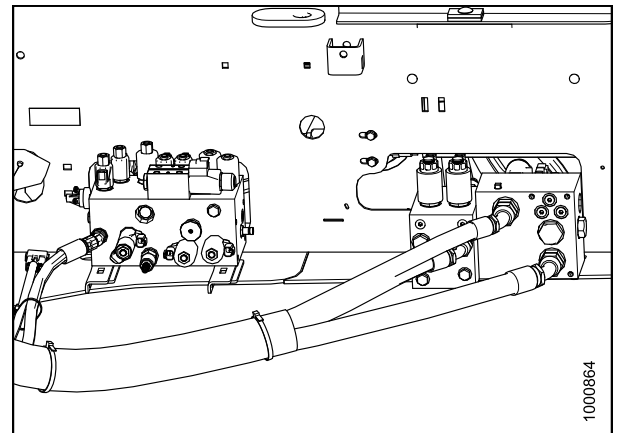


Figure 5.195: Hydraulic Valve Blocks

Adjusting Header Drop Rate

The header should lower gradually when the lower header switch is pressed. From fully raised to ground should take approximately 3–4 seconds.

NOTE:

Drop rate should **NOT** be less than 3 to 4 seconds as structural damage may result.

NOTE:

If drop rate is too slow (over 30 seconds), return to cut height or tilt or float presets will deactivate to prevent overheating the hydraulic system.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Lower header to ground, stop the engine, and remove the key.
2. Open left cab-forward side platform, refer to [5.3.1 Opening Platforms \(Standard Position\), page 309](#).
3. Loosen inner knob (B) on needle valve and then turn outer knob (A):
 - Clockwise to decrease the drop rate.
 - Counterclockwise to increase the drop rate.
4. Tighten inner knob (A).
5. Check drop rate and readjust as required.
6. Close the platform, refer to [5.3.2 Closing Platforms \(Standard Position\), page 310](#).

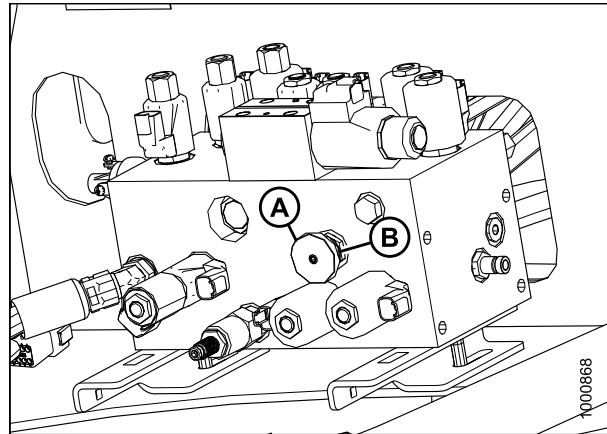


Figure 5.196: Hydraulic System

Adjusting Reel Drop Rate

The reel should lower gradually when the lower reel switch is pressed. From fully raised to fully lowered should take approximately 3–4 seconds. Drop rate is a customer preference and will vary based on crop type and cutting condition.

NOTE:

Drop speed should **NOT** be less than 3 to 4 seconds as structural damage may result.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Lower header to ground, stop the engine, and remove the key.

MAINTENANCE AND SERVICING

2. Open the left cab-forward side maintenance platform. Refer to [5.3.1 Opening Platforms \(Standard Position\)](#), page 309.

3. Locate valve (A) installed at port D, it controls the reel drop rate.

NOTE:

This valve is installed on draper ready windrowers and only affects draper headers.

4. Loosen setscrew (B) then refer to the following options:
 - Turn cap (C) clockwise to decrease the drop rate
 - Turn cap (C) counterclockwise to increase the drop rate
5. Check drop rate and adjust as required.
6. Tighten setscrew (B).

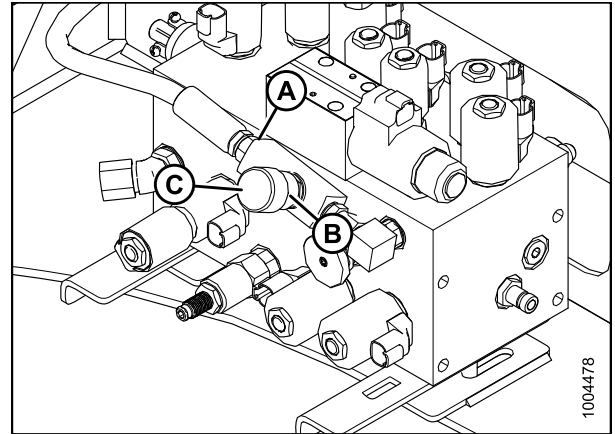


Figure 5.197: Hydraulic System

NOTE:

To reset to factory specifications, fully close the needle valve and open it four turns counterclockwise.

7. Close the platform, refer to [5.3.2 Closing Platforms \(Standard Position\)](#), page 310.

Traction Drive Hydraulics

The windrower transmission consists of two variable displacement axial piston hydraulic pumps, one for each drive wheel.

The pumps are driven through a gearbox from the engine. Each pump requires charge flow in order to

- Make up for internal leakage
- Maintain positive pressure in the main circuit
- Provide flow for cooling
- Replace any leakage losses from external valving or auxiliary systems

The charge pressure is monitored. The cab display module (CDM) sounds a tone and displays a flashing warning if charge pressure drops below 250 psi (1725 kPa). Refer to [Display Warnings and Alarms](#), page 86.

Checking Transmission Oil Pressure

IMPORTANT:

Rated charge pressure **MUST** be maintained under all conditions of operation to prevent damage to the transmission.

If the TRANS OIL PRESSURE warning is displayed, shut down engine, and proceed as follows:

1. Check the hydraulic fluid level in the tank. Refer to [Checking and Filling Hydraulic Oil](#), page 401.
2. Check the hoses and lines for leakage.
3. Check the charge pressure relief valve. Refer to [Checking Charge Pump Pressure](#), page 410.
4. If charge pressure still cannot be maintained, do **NOT** operate the windrower. Contact your MacDon Dealer.

Checking Charge Pump Pressure

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Incorrect charge pressure settings may result in the inability to build required system pressure and/or inadequate loop flushing flows.

Correct charge pressure **MUST** be maintained under all conditions to maintain pump control performance and to operate the brake release.

Check charge pump pressure as follows:

1. Open hood fully. Refer to [5.2.3 Opening Hood \(Highest Position\)](#), page 307.
2. Attach a 0–600 psi (4000 kPa) pressure gauge to a hose that is long enough to allow pressure gauge to be read from the operator's seat.
3. Locate the test port (A) which is located on the charge filter head. Clean test port fitting and attach hose to the fitting.
4. Start engine and leave at idle. Pressure should be 240–325 psi (1655–2241 kPa) with the hydraulic oil at 100°F (40°C) minimum.
5. Note reading and shut down windrower.
6. If pressure is **NOT** within this range, contact your MacDon Dealer.
7. Otherwise, remove hose from test port and close the hood. Refer to [5.2.4 Closing Hood \(Highest Position\)](#), page 308.

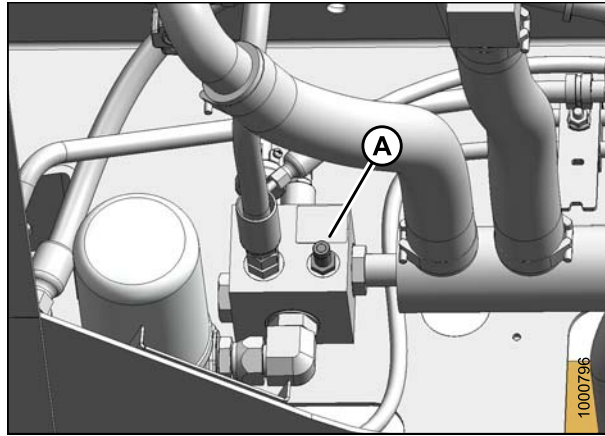


Figure 5.198: Charge Pump Test Port

Hoses and Lines

Check hydraulic hoses and lines daily for signs of leaks.

WARNING

- Avoid high-pressure fluids. Escaping fluid can penetrate the skin causing serious injury.
- Relieve pressure before disconnecting hydraulic lines. Tighten all connections before applying pressure.
- Keep hands and body away from pin-holes and nozzles which eject fluids under high pressure.
- If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a Doctor familiar with this type of injury or gangrene may result.
- Use a piece of cardboard or paper to search for leaks.

IMPORTANT:

- Keep hydraulic coupler tips and connectors clean. Dust, dirt, water, and foreign material are the major causes of hydraulic system damage.
- DO **NOT** attempt to service hydraulic system in the field. Precision fits require WHITE ROOM CARE during overhaul.

5.5.10 Wheels and Tires

Drive Wheel

Inflating Drive Wheel Tire

DANGER

- Use a safety cage if available.
- Do **NOT** stand over tire. Use a clip-on chuck and extension hose.
- **NEVER** install a tube in a cracked wheel rim.
- **NEVER** weld a wheel rim.
- Do **NOT** exceed maximum inflation pressure as per label on tire.
- Make sure all the air is removed from a tire before removing the tire from the rim.



Figure 5.199: Hydraulic Pressure Hazard

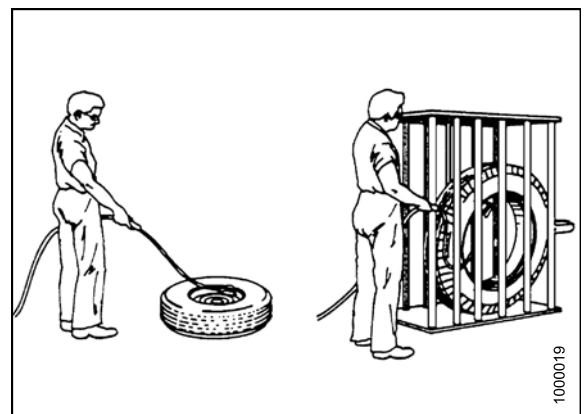


Figure 5.200: Drive Tire Inflation

MAINTENANCE AND SERVICING

DANGER

- **NEVER** use force on an inflated or partially inflated tire. Make sure the tire is correctly seated before inflating to operating pressure.
- Do **NOT** remove, install, or make repairs to a tire on a rim unless you have the proper equipment and experience to perform the job. Take the tire and rim to a qualified tire repair shop.
- If the tire is **NOT** in correct position on the rim or if over-inflated, the tire bead can loosen on one side, causing air to leak at high speed and with great force. An air leak of this nature can thrust the tire in any direction, endangering anyone in the area.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

Visually check daily that tires have not lost pressure. Adjust pressure as required. Under-inflated drive tires can cause sidewall cracks. Check tire pressure every year.

Maintain tire pressure as follows:

1. Shut down the engine and remove key.
2. Determine the type and size of tire that is installed on your machine.
3. Refer to the following table to determine the appropriate tire pressure:

Table 5.4 Drive Wheel Tire Options (Ten Bolt)

18.4-26 Bar	600 65 R28 Bar	18.4-26 Turf	23.1-26 Turf
46 psi (317 kPa)	35 psi (241 kPa)	46 psi (317 kPa)	34 psi (234 kPa)

4. Adjust tire pressure as required.

IMPORTANT:

Check maximum inflation rating on tire sidewall. Do **NOT** exceed recommendation on tire.

Tightening Drive Wheel Nuts

At first use, or when a wheel is removed, torque drive wheel nuts after one hour of operation. Continue with torque procedure every hour until two consecutive checks produce no movement of the nuts.

IMPORTANT:

- To avoid damage to wheel rims and studs, tighten nuts by hand, do **NOT** use an impact gun, do **NOT** use lubricant or Never-Seez® compound, and do **NOT** overtighten wheel nuts.
- Ensure only the manufacture's specified wheel nuts are used.

MAINTENANCE AND SERVICING

1. Tighten drive wheel nuts (A). Ensure nuts and studs are dry with no lubricant or Never-Seez® compound. Torque each to 375 lbf ft (510 N·m) using the tightening sequence shown at right.
2. Repeat tightening sequence two additional times at specified torque.
3. Repeat torque procedure every hour until two consecutive checks produce no movement of the nuts.

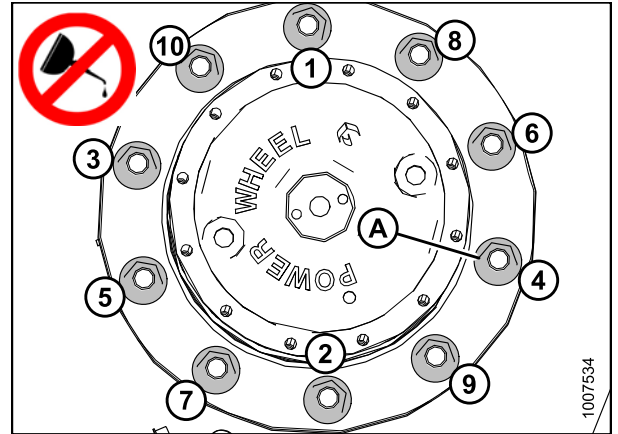


Figure 5.201: Wheel Drive Assembly

Lubricating Wheel Drive

Refer to these procedures to lubricate the wheel drive.

- [Checking Wheel Drive Lubricant Level, page 413](#)
- [Adding Wheel Drive Lubricant, page 414](#)
- [Changing Wheel Drive Lubricant, page 414](#)

Checking Wheel Drive Lubricant Level

Check the wheel drive lubricant level every 200 hours or annually.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Park the windrower on level ground.
2. Stop the engine and remove the key.
3. Position windrower so plugs (A) and (B) are horizontally aligned with the center (C) of the hub.
4. Remove plug (A) or (B). The lubricant should be visible through the port or running out slightly. If lubricant needs to be added, refer to [Adding Wheel Drive Lubricant, page 414](#).

NOTE:

The type of lubricant used after the first lubricant change is different from the factory supplied lubricant.

5. Reinstall plugs and tighten.

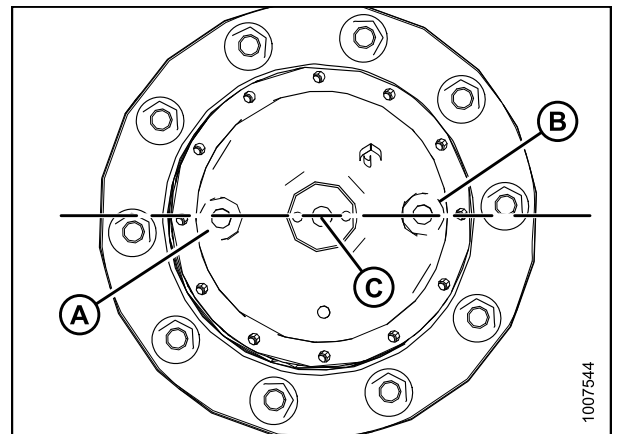


Figure 5.202: Wheel Drive Assembly

MAINTENANCE AND SERVICING

Adding Wheel Drive Lubricant

NOTE:

Do **NOT** mix lubricants of different brands or characteristics.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

1. Rotate the wheel drive so plugs (A) and (B) are horizontal (C).
2. Stop windrower and remove key from ignition.
3. Remove the two plugs (A) and (B). The oil should be visible through the hole, or slightly running out.
4. If lubricant needs to be added, remove the second plug (B), and add lubricant until lubricant runs out at (A). Refer to [8.2.3 Lubricants, Fluids, and System Capacities, page 466](#).

NOTE:

PRIOR TO FIRST CHANGE: use SAE 85W140, API Service, Class GL-5, Extreme Pressure Gear Lubricant.

NOTE:

AFTER FIRST CHANGE: use SAE 75W90, API Service, Class GL-5, Fully Synthetic Transmission Lubricant (SAE J2360 preferred).

5. Reinstall and tighten plugs (A) and (B).
6. Start up and operate the windrower for a few minutes, then stop and check the oil level. Refer to [Checking Wheel Drive Lubricant Level, page 413](#). If necessary, add more oil.

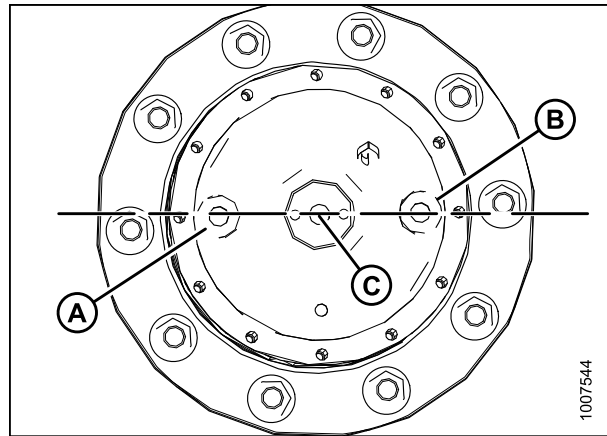


Figure 5.203: Wheel Drive Assembly

Changing Wheel Drive Lubricant

The wheel drive lubricant should be changed after the first 50 hours and then in accordance with the maintenance schedule. Change the lubricant when it is warm.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

MAINTENANCE AND SERVICING

1. Park windrower on level ground and position windrower so drain plug (B) is at the lowest point.
2. Shut down the windrower and remove key from ignition.
3. Place a large enough container (about 2 quarts [2 liters]) under the lower drain plug (B).
4. Remove plugs (A) and (B), and drain lubricant into container.

CAUTION

Dispose of oil in a manner that complies with local rules and regulations.

5. After the lubricant has drained completely, position the windrower so that ports (A) and (B) on wheel are level with the center of the hub (C) as shown.
6. Add lubricant, refer to [Adding Wheel Drive Lubricant, page 414](#).

NOTE:

The type of lubricant used after first lubricant change is different from factory supplied lubricant.

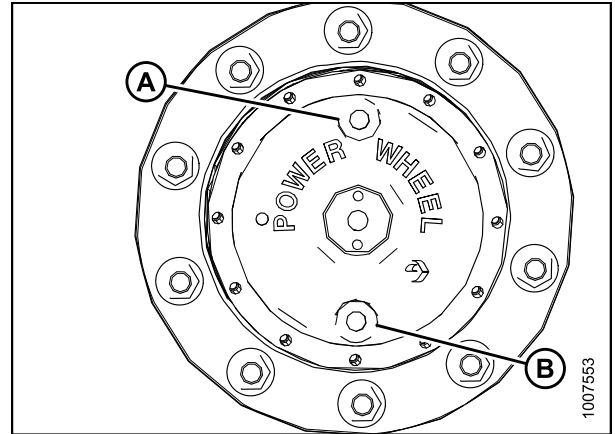


Figure 5.204: Wheel Drive Assembly

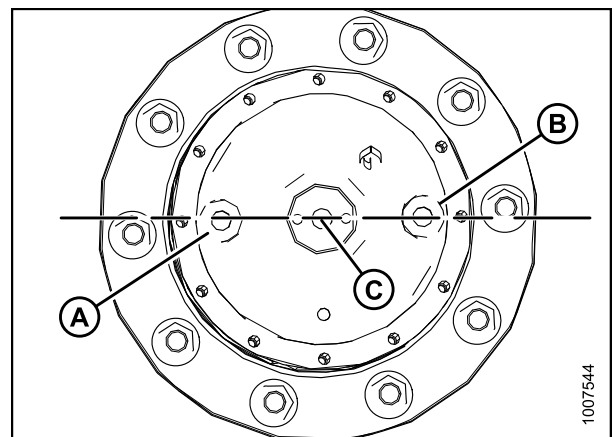


Figure 5.205: Wheel Drive Assembly

Servicing Drive Wheel

To service a drive wheel, refer to the following procedures:

- [Raising Drive Wheel, page 415](#)
- [Removing Drive Wheel, page 416](#)
- [Installing Drive Wheel, page 417](#)
- [Lowering Drive Wheel, page 417](#)

Raising Drive Wheel

This procedure can be used on both drive wheels.

CAUTION

Header **MUST** be removed and **NO** weight box installed. Use a hydraulic jack with minimum lifting capacity of 5000 lb (2268 kg) to provide adequate support for the machine.

1. Remove the header.
2. Park windrower on level ground and block all wheels.

⚠ DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

3. Place ground speed lever (GSL) in N-DETENT (A), shut down engine, and remove key.



Figure 5.206: Ground Speed Lever

⚠ CAUTION

Jack stand must be capable of supporting a minimum of 5000 lb (2268 kg).

4. Place a jack under the leg jack point (A) and raise the drive wheel until it is slightly off ground. Place a jack stand beneath the lift cylinder mount (B).

NOTE:

Do **NOT** place jack stand under the cylinder. Use a small metal plate on top of the jack stand.

5. Lower the windrower onto the jack stand.

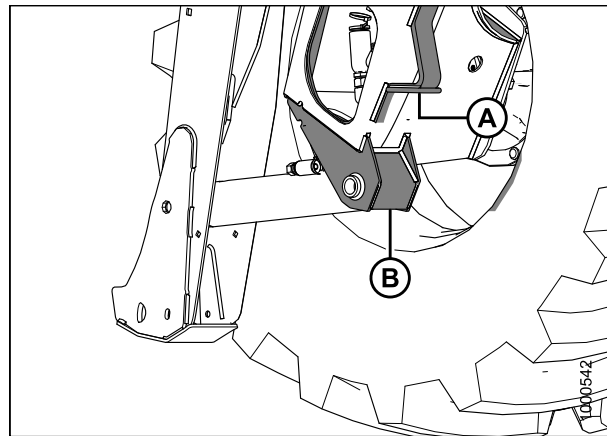


Figure 5.207: Drive Wheel Jack Point

Removing Drive Wheel

⚠ CAUTION

Use a suitable lifting device capable of supporting a minimum of 2000 lbs (907 kg) to lift the wheel assembly away from the windrower.

1. Raise the windrower drive wheel (A) off the ground. Refer to [Raising Drive Wheel, page 415](#).
2. Remove the wheel nuts (B).
3. Remove the drive wheel (A).

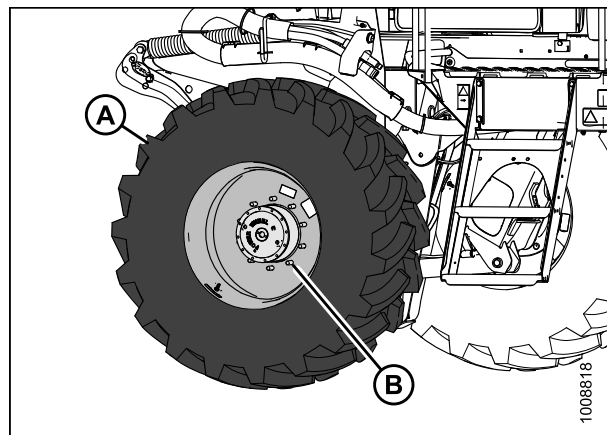


Figure 5.208: Drive Wheel Assembly

Installing Drive Wheel

NOTE:

Windrower must be supported off the ground with stands. Refer to [Raising Drive Wheel, page 415](#).

1. Position drive wheel (A) against the wheel drive hub (B) so the air valve (C) is on the outside and the tire tread (D) points forward with the windrower in cab-forward orientation.

NOTE:

For turf tires (diamond tread), be sure arrow on sidewall points in forward rotation with windrower in cab-forward orientation.

2. Lift wheel onto hub using a lifting device.
3. Lower lifting device.
4. Line up the holes in the rim with the studs on the wheel drive hub and install wheel nuts (A).

IMPORTANT:

To avoid damage to wheel rims and studs, tighten nuts by hand. Do **NOT** use an impact gun, do **NOT** use lubricant or Never-Seez® compound, and do **NOT** overtighten wheel nuts.

5. Torque drive wheel nuts, refer to [Tightening Drive Wheel Nuts, page 412](#).
6. Repeat tightening sequence two additional times ensuring the specified torque of 375 ft·lb (510 N·m) is achieved each time.
7. Lower the windrower, and remove jack, refer to [Lowering Drive Wheel, page 417](#).
8. Repeat torque procedure every hour until two consecutive checks confirm there is no movement of the nuts.

Lowering Drive Wheel

This procedure is for lowering the drive wheel when it is raised on a jack stand. This procedure can be used on both drive wheels.

CAUTION

Jack stand must be capable of supporting a minimum of 5000 lb (2268 kg).

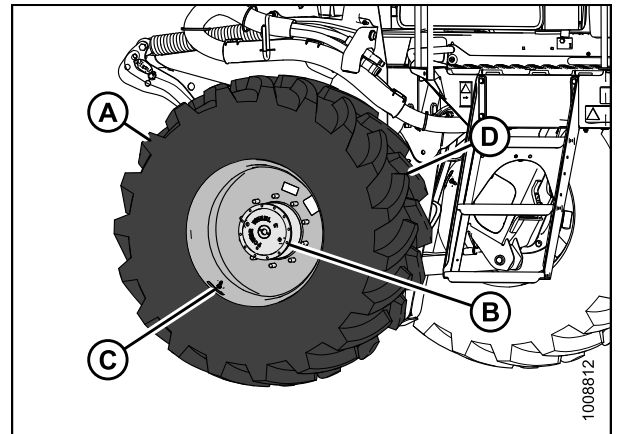


Figure 5.209: Drive Wheel Assembly

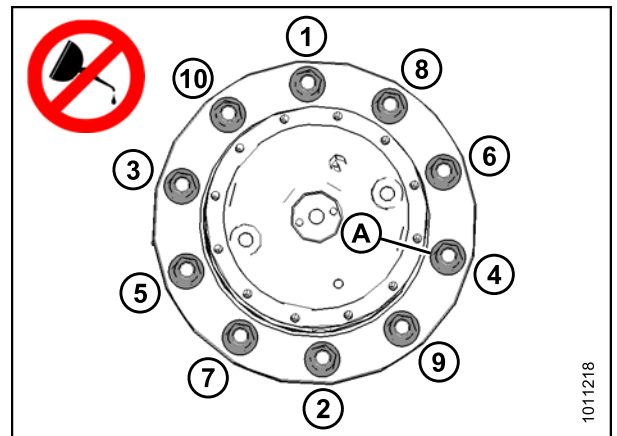


Figure 5.210: Drive Wheel Nuts

MAINTENANCE AND SERVICING

1. Place a jack under the leg jack point (A) and raise the drive wheel slightly off the jack stand.
2. Remove the jack stand from under the cylinder lift mount (B) and lower the drive wheel to the ground.
3. Remove the jack.

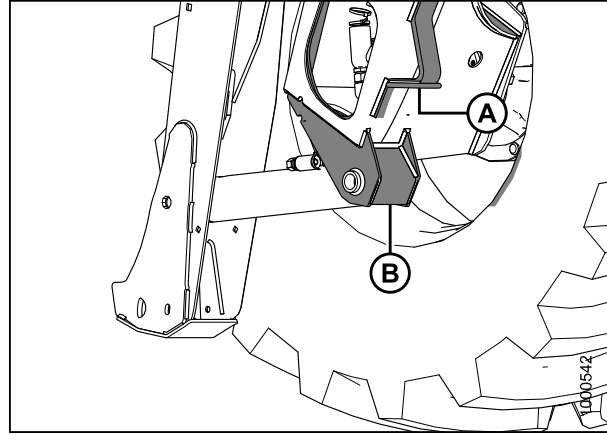


Figure 5.211: Drive Wheel Leg Jacking Point

Caster Wheel

Inflating Caster Tire

DANGER

- Do NOT exceed maximum inflation pressure as per label on tire.
- Use a safety cage if available.
- Do NOT stand over tire. Use a clip-on chuck and extension hose.
- NEVER install a tube in a cracked wheel rim.
- NEVER weld a wheel rim.
- Make sure all the air is removed from a tire before removing the tire from the rim.



Figure 5.212: Safely Filling a Tire with Air

DANGER

- NEVER use force on an inflated or partially inflated tire. Make sure the tire is correctly seated before inflating to operating pressure.
- Do NOT remove, install, or make repairs to a tire on a rim, unless you have the proper equipment and experience to perform the job. Take the tire and rim to a qualified tire repair shop.
- If the tire is NOT in correct position on the rim or if too full of air, the tire bead can loosen on one side, causing air to leak at high speed and with great force. An air leak of this nature can thrust the tire in any direction, endangering anyone in the area.
- To avoid severe personal injury or death caused by machine runaway, shut off engine and remove key before performing any of the following checks and/or adjustments.

MAINTENANCE AND SERVICING

Check tire pressure every year. Caster tire pressure should be 10 psi (69 kPa).

To maintain pressure, visually check daily that tires have not lost pressure, and adjust pressure as needed. Under-inflation of tires can cause sidewall cracks.

NOTE:

If caster wheels shimmy, a possible cause is over-inflation.

Table 5.5 Caster Tire Options

Formed Caster	Forked Caster
7.5–16SL Single Rib, 10-16 Front Steer Tire	16.5L–16.1 Rib Implement Flotation, 10–16 Front Steer Tire
10 psi (69 kPa)	10 psi (69 kPa)

Tightening Caster Wheel Nuts

At first use or when a wheel is removed, check wheel nut/bolt torque every 15 minutes on the road or 1 hour in the field until the specified torque is maintained.

Once specified torque is maintained, check wheel nut/bolt torque after 10 and 50 hours (field or road operation) and then every 200 hour intervals thereafter.

To tighten the caster wheel nuts on either forked or formed caster wheels, follow these steps:

1. Position wheel assembly on hub and install wheel bolts (A).
2. Tighten wheel nuts (A) to 120 ft·lbf (163 N·m) using the tightening sequence suitable for the type of caster wheel shown at right. Repeat the tightening sequence three times.

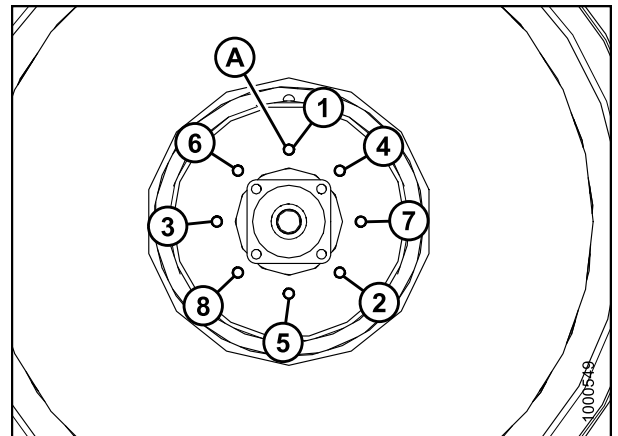


Figure 5.213: Forked Caster Wheel Tightening Sequence

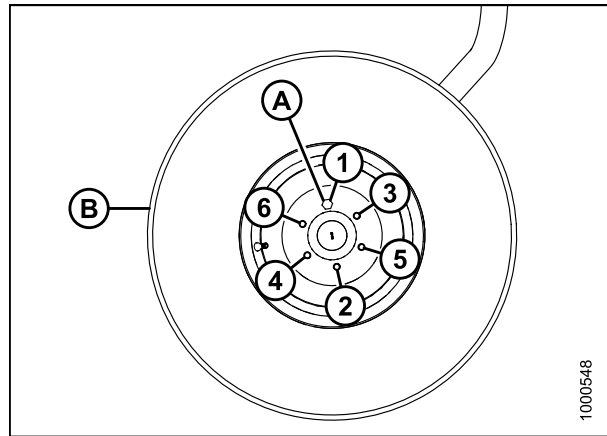


Figure 5.214: Formed Caster Wheel Tightening Sequence

Servicing Caster Wheels

Refer to the following procedures:

- [Raising Caster Wheel \(Formed and Forked\), page 420](#)
- [Lowering Caster Wheel \(Formed and Forked\), page 421](#)
- [Removing Forked Caster Wheel, page 422](#)
- [Installing Forked Caster Wheel, page 422](#)
- [Removing Formed Caster Wheel, page 423](#) [Installing Formed Caster Wheel, page 423](#)

Raising Caster Wheel (Formed and Forked)

This procedure is the same for forked and formed caster wheels.

DANGER

To avoid bodily injury or death from unexpected startup of the machine, always stop the engine and remove the key from the ignition before leaving the operator's seat for any reason.

CAUTION

Jack stand must be capable of supporting a minimum of 5000 lb (2268 kg).

MAINTENANCE AND SERVICING

1. Park windrower on level ground and block the drive wheels.
2. Place the ground speed lever (GSL) in N-DETTENT (A), stop the engine and remove the key.



Figure 5.215: GSL Position

3. Raise the end of walking beam (A) until the caster wheel assembly (B) is slightly off the ground. Use a suitable lifting device, capable of lifting 5000 lb (2268 kg) minimum.
4. Place a jack stand beneath the walking beam and lower the beam until resting on the stand.

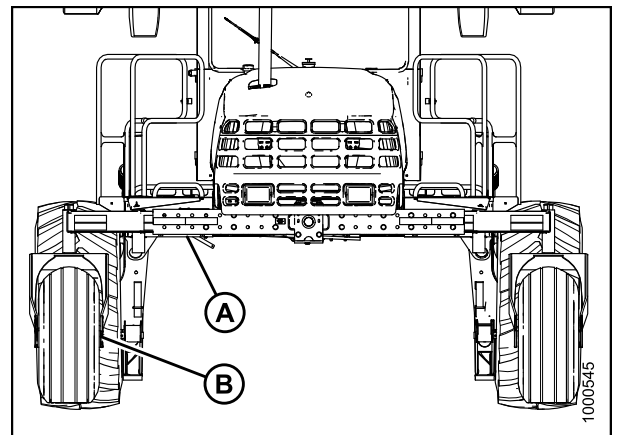


Figure 5.216: Caster Wheel Assembly and Walking Beam (Engine-Forward View)

Lowering Caster Wheel (Formed and Forked)

This procedure is for lowering the caster wheel when it is raised on a jack stand. This procedure is the same for forked and formed caster wheels.

1. Raise the end of walking beam (A) slightly, using a suitable lifting device capable of lifting minimum 5000 lb (2268 kg).
2. Remove the jack stand and lower the end of the walking beam until the caster wheel assembly (B) is on the ground.
3. Remove blocks from the drive tires.

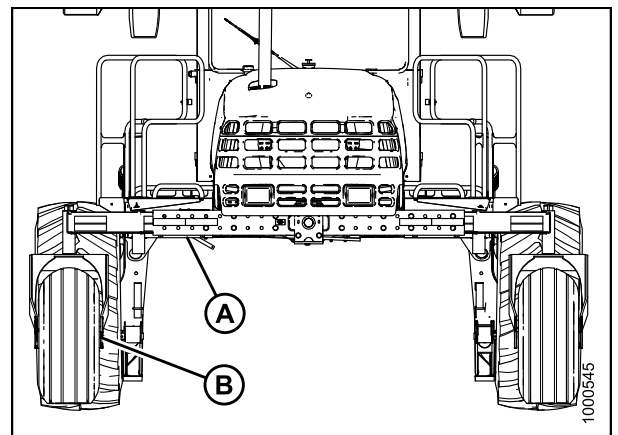


Figure 5.217: Caster Wheel Assembly and Walking Beam (Engine-Forward View)

Removing Forked Caster Wheel

CAUTION

Wheel assemblies are heavy. Support wheel assembly before removing axle bolts.

1. Raise caster wheel, refer to [Raising Caster Wheel \(Formed and Forked\)](#), page 420.
2. Remove the eight bolts (A) (four on each side of caster) attaching axle (B) and cover (C) to forked caster (E), and remove wheel assembly (D) from caster (E).

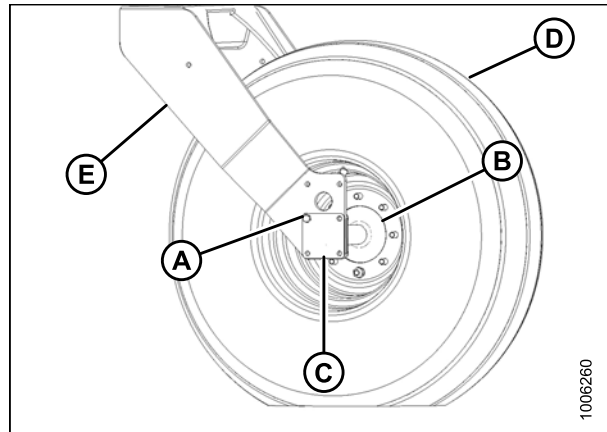


Figure 5.218: Caster Wheel Assembly

3. Remove the eight wheel nuts (A) that secure the axle (B) to the wheel (C).
4. Separate axle (B) and wheel (C).

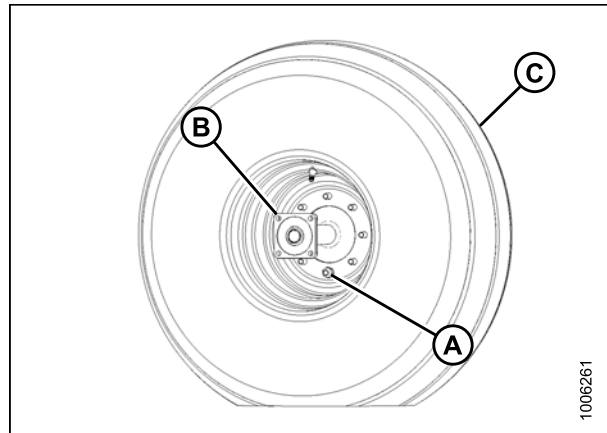


Figure 5.219: Caster Wheel Assembly

Installing Forked Caster Wheel

1. Position wheel assembly (C) on axle assembly (B) and install wheel nuts (A).
2. Torque wheel nuts (A), refer to [Tightening Caster Wheel Nuts](#), page 419.

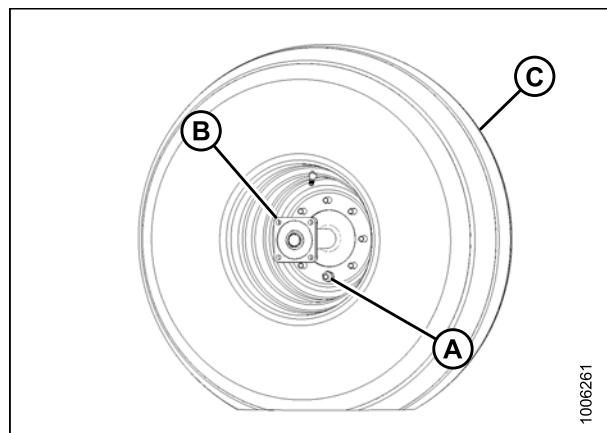


Figure 5.220: Caster Wheel Assembly

MAINTENANCE AND SERVICING

3. Position wheel assembly (D) in forked caster (E).
4. Position cover plates (C) and install eight bolts (A) (four on each side of caster) to secure axle (B) to caster (E). Torque bolts to 75–79 ft·lbf (97–107 N·m).
5. Lower caster wheel, refer to [Lowering Caster Wheel \(Formed and Forked\)](#), page 421.

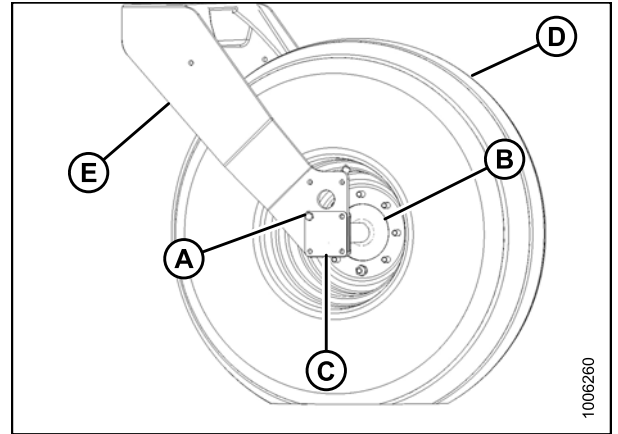


Figure 5.221: Caster Wheel Assembly

Removing Formed Caster Wheel

1. Raise caster wheel, refer to [Raising Caster Wheel \(Formed and Forked\)](#), page 420.
2. Remove the six bolts (A) that secure the wheel (B) to the hub.
3. Remove wheel (B).

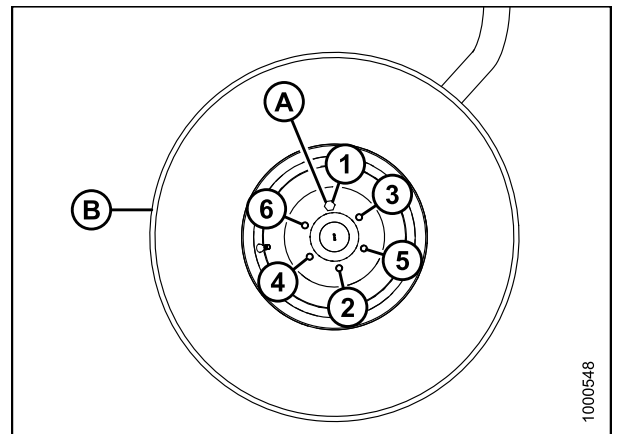


Figure 5.222: Caster Wheel Assembly

Installing Formed Caster Wheel

1. Position wheel assembly (B) on hub, and install the six wheel bolts (A).
2. Torque bolts (A), refer to [Tightening Caster Wheel Nuts](#), page 419.
3. Lower caster wheel, refer to [Lowering Caster Wheel \(Formed and Forked\)](#), page 421.

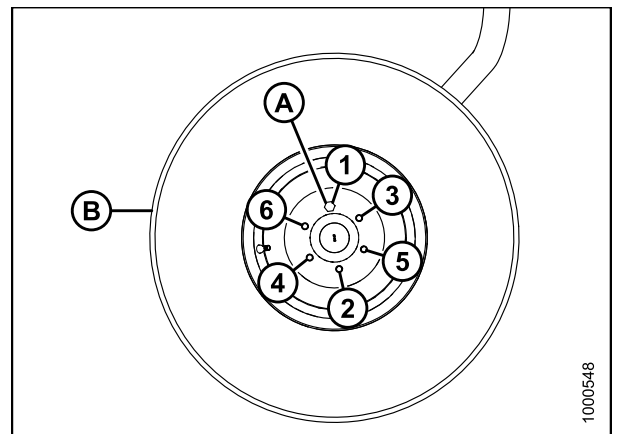


Figure 5.223: Caster Wheel Assembly

MAINTENANCE AND SERVICING

Tightening Caster Wheel Anti-Shimmy Dampeners

Each caster is equipped with a fluid-filled anti-shimmy dampener (A).

The mounting bolts (B) need to be checked periodically for security. Refer to [5.5.11 Maintenance Schedule, page 425](#).

- Inboard bolt should be tightened to 100 ft·lbf (135 N·m)
- Outboard bolt should be tightened to 85 ft·lbf (115 N·m)

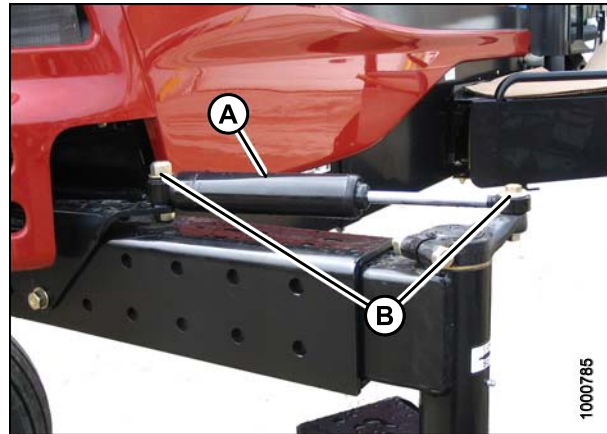


Figure 5.224: Anti-Shimmy Dampener

MAINTENANCE AND SERVICING

Ballast Requirements

Fluid ballasting of rear caster tires is recommended to provide adequate machine stability when using large headers on the windrower. Also, the stability of the machine varies with different attachments, windrower options, terrain, and the operator's driving technique.

Ballast capability per tire is at a maximum fill of 75%, or when fluid is level with valve stem when the stem is positioned at 12 o'clock. Fluid can be added to any level up to maximum fill. Always add an equal amount of fluid on both sides.

Table 5.6 Recommended Ballast Weight

Header Description		Recommended Ballast				Recommended Tire Size
		Level Ground		Hills		
Type	Size	Per Tire	Both Tires	Per Tire	Both Tires	
		US Gal (liters)	lb (kg)	US Gal (liters)	lb (kg)	
A-Series	All options	0				7.5 X 16 10 X 16 16.5 X 16.1
R-Series	13-foot ONLY					
D-Series	25-foot and down	0				
	30-foot Single or Double Reel without Conditioner. 35-foot Single Reel					
	30-foot Double Reel Steel Fingers and Conditioner. 35-foot Double Reel (5 or 6-Bat)	18 (69)	380 (170)	30 (115)	630 (288)	Level Ground: 10 X 16 Level Ground: 16.5 X 16.1 Hills: 16.5 X 16.1
	40-foot	30 (115)	630 (288)	41 (158)	830 (377)	16.5 X 16.1

5.5.11 Maintenance Schedule

The Maintenance Schedule specifies the recommended periodic maintenance procedures and service intervals. Regular maintenance is the best insurance against early wear and untimely breakdowns. Following this schedule to maximize machine life.

For detailed instructions, refer to the various procedures in this chapter. Use the fluids and lubricants specified in [8.2 Recommended Fuel, Fluids, and Lubricants, page 465](#).

Service Intervals: The recommended service intervals are in hours of operation. Where a service interval is given in more than one time frame, for example 100 hours or annually, service the machine at whichever interval is reached first.

MAINTENANCE AND SERVICING

IMPORTANT:

Recommended intervals are for average conditions. Service the machine more often if operated under adverse conditions (severe dust, extra heavy loads, etc.).

 **CAUTION**

Carefully follow safety messages given in [1 Safety, page 1](#).

Break-In Inspections

Break-in Inspections		
Hours	Item	Check
1	Drive wheel nuts	Torque: 375 ft·lbf (510 N·m) dry Repeat checks at one hour intervals until torque stabilizes at two consecutive checks
5	A/C compressor belt	Tension.
	Caster wheel nuts	Torque: 120 ft·lbf (163 N·m)
	Caster wheel anti-shimmy dampener bolts	Inboard bolt torque: 100 ft·lbf (135 N·m) Outboard bolt torque: 85 ft·lbf (115 N·m)
	Walking beam width adjustment bolts	Torque: 330 ft·lbf (448 N·m)
10	Walking beam width adjustment bolts	Torque: 330 ft·lbf (448 N·m)
	Neutral	Dealer-adjusted
50	Hose clamps: air intake / radiator / heater / hydraulic	Hand-tighten unless otherwise noted
	Walking beam width adjustment bolts	Torque: 330 ft·lbf (448 N·m)
	Caster wheel anti-shimmy dampener bolts	Inboard bolt torque: 100 ft·lbf (135 N·m) Outboard bolt torque: 85 ft·lbf (115 N·m)
	Drive wheel lubricant	Change
	Main gearbox oil	
	Charge system oil filter	
	Manifold oil filter	

MAINTENANCE AND SERVICING

Maintenance Schedule/Record

WINDROWER SERIAL NUMBER: _____

Combine this record with the record in the header operator's manual. Make copies of this page to continue the record.

Refer to [5 Maintenance and Servicing, page 305](#) for details on each maintenance procedure.

Maintenance Record	Action:	✓ - Check	⬇ - Lubricate	▲ - Change	✳ - Clean	+ - Add										
Hour meter reading																
Date																
Serviced by																
FIRST USE, Refer to Break-In Inspections, page 426																
10 HOURS OR DAILY³⁰																
✳ A/C Condenser ³¹																
✳ Charge Air Cooler ³¹																
✓ Engine Oil Level ³¹																
✓ Engine Coolant Level ³¹																
✓ Fuel Tank ³¹																
✓ Fuel Filter Water Trap ³¹																
✓ Hydraulic Hoses and Lines ³¹																
✳ Hydraulic Oil Cooler ³¹																
✓ Hydraulic Oil Level ³¹																
✳ Radiator ³¹																
✓ Tire Inflation ³¹																
ANNUALLY³²																
✓ A/C Blower																
✓ Antifreeze Concentration																
✓ Battery Charge																
✓ Battery Fluid Level																
▲ Fuel Tank Vent Line Filter																
✓ Steering Linkages																
50 HOURS																
✳ Cab Fresh Air Intake Filter																
⬇ Caster Pivots																

30. Whichever occurs first.

31. A record of daily maintenance is not normally required but is at the Owner/Operator's discretion.

32. It is recommended that annual maintenance be done prior to start of operating season.

MAINTENANCE AND SERVICING

Maintenance Record	Action:	✓ - Check	⬇ - Lubricate	▲ - Change	✳ - Clean	+ - Add													
⬇ Forked Caster Spindle Bearings																			
✓ Gearbox Oil Level																			
⬇ Top Lift Link Pivots																			
100 HOURS OR ANNUALLY^{30, 32}																			
✳ Cab Air Return Filter																			
250 HOURS OR ANNUALLY^{30, 32}																			
▲ Engine Oil and Filter																			
▲ Engine Air Cleaner Primary Filter Element																			
⬇ Formed Caster Wheel Hub Bearings																			
✓ Drive Wheel Lubricant																			
500 HOURS OR ONCE A YEAR^{30, 32}																			
▲ Fuel Filters																			
▲ Gearbox Lubricant																			
▲ Charge System and Return Oil Filters																			
✓ Safety Systems																			
1000 HOURS																			
▲ Drive Wheel Lubricant																			
1500 HOURS OR EVERY TWO YEARS³⁰																			
▲ Hydraulic Oil																			
2000 HOURS OR EVERY TWO YEARS³⁰																			
▲ Engine Coolant																			
✓ General Inspection																			
5000 HOURS OR EVERY TWO YEARS³⁰																			
✓ Engine Valve Tappet Clearance																			

6 Troubleshooting

6.1 Engine Troubleshooting

Symptom	Problem	Solution	Section
Engine hard to start or will not start	Controls not in NEUTRAL	Move GSL to NEUTRAL.	Starting the Engine, page 160
		Move steering wheel to locked position.	
		Disengage header drive switch.	4.4.4 Header Drive, page 202
	NEUTRAL Interlock misadjusted	Contact Dealer.	Contact Dealer
	No fuel to engine	Fill empty fuel tank. Replace clogged filter.	Filling the Fuel Tank, page 163 and Maintaining Fuel Filters, page 346
	Old fuel in tank	Drain tank. Refill with fresh fuel.	Fuel System, page 345
	Water, dirt, or air in fuel system	Drain, flush, fill, and prime system.	
	Improper type of fuel	Use proper fuel for operating conditions.	8.2.2 Fuel Specifications, page 465
	Crankcase oil too heavy	Use recommended oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 466
	Low battery output	Have battery tested. Check battery electrolyte level.	Battery, page 369
	Poor battery connection	Clean and tighten loose connections.	
	Faulty starter	Contact Dealer.	Contact Dealer
	Loose electrical connection at fuel pump	Ensure connector at pump is fully pushed in.	Contact Dealer
	Wiring shorted, circuit breaker open	Check continuity of wiring and breaker (manual reset).	Checking and Replacing Fuses, page 396
	ECM fuse (1 of 2) blown	Replace.	
	ECM Ignition relay faulty		
NEUTRAL Logic relay faulty			
Faulty injectors	Contact Dealer.	Contact Dealer	

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Engine knocks	Engine out of time	Contact Dealer.	Contact Dealer
	Insufficient oil	Add oil.	Adding Engine Oil, page 337
	Low or high coolant temperature	Contact Dealer.	Contact Dealer
	Improper fuel	Use proper fuel.	8.2.2 Fuel Specifications, page 465
Low oil pressure	Low oil level	Add oil.	Adding Engine Oil, page 337
	Improper type of oil	Drain and fill crankcase with proper oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 466
	Worn components	Contact Dealer.	Contact Dealer
Internal parts worn			
High oil consumption	Crankcase oil too light	Use recommended oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 466
	Oil leaks	Check for leaks around gaskets, seals, and drain plugs.	Checking Engine Oil Level, page 335
	Unsteady fuel supply	Change filter on fuel tank vent line. Replace clogged fuel filter.	Replacing Fuel Tank Vent Filter, page 345 and Fuel System, page 345
Engine runs irregularly or stalls frequently	Water or dirt in fuel system	Drain, flush, and fill fuel system.	8.2.3 Lubricants, Fluids, and System Capacities, page 466
	Low coolant temperature	Remove and check thermostat.	Contact Dealer
	Air in fuel system	Contact Dealer.	
	Dirty or faulty injectors		

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Lack of power	Incorrect timing	Contact Dealer.	Contact Dealer
	Engine oil viscosity too high	Use recommended oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 466
	Intake air restriction	Service air cleaner.	Air Intake System, page 337
	Clogged fuel filter	Replace primary fuel filter, and if necessary, replace secondary fuel filter.	Maintaining Fuel Filters, page 346
	High back pressure	Clean out or replace muffler.	Exhaust System, page 364
	Improper type of fuel	Use proper fuel.	8.2.2 Fuel Specifications, page 465
	High or low engine temperature	Remove and check thermostat.	Contact Dealer
	Improper valve clearance	Contact Dealer.	
	Faulty injectors		
Engine temperature below normal	Defective thermostat	Remove and check thermostat.	
Warning alarm sounds	Engine overheated	Check coolant level.	Checking Coolant Level, page 354
		Check thermostat.	Contact Dealer
	Low engine oil pressure	Check oil level.	Checking Engine Oil Level, page 335
	Low transmission oil pressure		Checking and Filling Hydraulic Oil, page 401

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Engine overheats	Low coolant level	Fill reserve tank to proper level. Check system for leaks.	Engine Cooling System, page 353
	Water only for coolant	Replace with antifreeze.	
	Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 168
	Defective radiator cap	Replace cap.	Inspecting Radiator Cap, page 353
	Defective fan belt	Replace belt	Replacing Fan Belt, page 365 Replacing Fan Belt, page 365
	Dirty radiator screen, rotors turning	Check for obstructions in ducting from screen to fan shroud.	Maintaining Engine Cooling Box, page 358
	Dirty radiator screen, rotors not turning	Check connections to rotor electric motor.	
	Dirty radiator core	Clean radiator.	Engine Cooling System, page 353
	Cooling system dirty	Flush cooling system.	
	Defective thermostat	Remove and check thermostat.	Contact Dealer
	Defective temperature gauge or sender	Check coolant temperature with thermometer. Replace gauge if necessary.	
Defective water pump	Contact Dealer.		
High fuel consumption	Clogged or dirty air cleaner	Service air cleaner.	Air Intake System, page 337
	Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 168
	Improper valve clearance	Contact Dealer.	Contact Dealer
	Engine out of time		
	Dirty injector nozzles		
	Low engine temperature	Check thermostat.	
Improper type of fuel	Use proper fuel.	8.2.2 Fuel Specifications, page 465	

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Engine emits black or grey exhaust	Improper type of fuel	Consult your fuel supplier, and use proper type fuel for conditions.	8.2.2 Fuel Specifications, page 465
	Engine overloaded	Reduce ground speed.	Driving Forward in Cab-Forward Mode, page 168
	Clogged or dirty air cleaner	Service air cleaner.	Air Intake System, page 337
	Defective muffler	Check muffler for possible damage that might create back pressure.	Exhaust System, page 364
	Dirty or faulty injectors	Contact Dealer.	Contact Dealer
	Engine out of time		
	Air in fuel system		
Engine emits white exhaust	Engine out of time	Contact Dealer.	Contact Dealer
	Improper type of fuel	Consult your fuel supplier, and use proper type fuel for conditions.	8.2.2 Fuel Specifications, page 465
	Cool engine	Warm engine up to normal operating temperature.	Engine Warmup, page 162
	Defective thermostat	Remove and check thermostat.	Contact Dealer

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Starter cranks slowly or will not operate	Low battery output	Check battery charge.	Maintaining the Battery, page 369
	Loose or corroded battery connections	Clean and tighten loose connections.	
	Controls not in NEUTRAL	Move GSL to NEUTRAL.	Driving Forward in Cab-Forward Mode, page 168
		Move steering wheel to CENTER position.	Driving Reverse in Cab-Forward Mode, page 169
		Disengage header.	Engaging and Disengaging the Header, page 202
	Relay not functioning	Check relay and wire connections.	5.5.8 Electrical System, page 368
	Main fuse defective/blown	Replace main fuse.	
	Key power fuse blown	Replace.	
	Key switch worn or terminals loose	Contact Dealer.	Contact Dealer
	Switch at Interlock not closed or defective	Adjust switch or replace. Contact your Dealer.	
Crankcase oil too high viscosity	Use recommended oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 466	
Air filters require frequent cleaning	Aspirator plugged	Clean out aspirator.	Air Intake System, page 337

TROUBLESHOOTING

6.2 Electrical Troubleshooting

Symptom	Problem	Solution	Section
Low voltage and/or battery will not charge	Defective battery	Have battery tested.	Battery, page 369
	Loose or corroded connections	Clean and tighten battery connections.	Maintaining the Battery, page 369
	Defective alternator belt	Replace worn belt.	Replacing Fan Belt, page 365 Replacing Fan Belt, page 365
	Alternator or voltage regulator not connected properly	Connect properly.	Battery, page 369
	Dirty or defective alternator, defective voltage regulator, or high resistance in circuit	Contact Dealer.	Contact Dealer
Lights dim	Defective light switch		
	High resistance in circuit or poor ground on lights	Check the wiring circuit for a break in a wire or a poor ground.	—
Lights do not light	Burned out or defective light bulb	Replace light bulb.	Replacing Headlight Bulb, page 378
			Replacing Bulb in Cab-Forward Flood Light, page 381
			Replacing Bulb in Rear Flood Light, page 386
	Broken wiring	Check wiring for broken wire or shorts.	—
	Poor ground on lights	Clean and tighten ground wires.	—
	Open or defective circuit breaker	Check circuit breaker	Accessing Circuit Breakers and Fuses, page 396
	Defective relay	Replace relay	Replacing Circuit Breakers and Relays, page 397
	Defective light switch	Contact Dealer	Contact Dealer
Turn signals or indicators showing wrong direction	Reversed wires	Contact Dealer	Contact Dealer
No current to cab	Broken or disconnected wire	Contact Dealer	Contact Dealer
	Circuit breaker tripped	Breaker automatically resets.	—
	Battery disconnect switch is OFF	Turn battery disconnect switch ON.	Battery Main Disconnect Switch, page 369

TROUBLESHOOTING

6.3 Hydraulics Troubleshooting

Symptom	Problem	Solution	Section
Header or reel not lifting	Appropriate solenoids not being energized by activating switch	Contact Dealer.	Contact Dealer
	Contaminant in relief valve	Clean relief valve at cylinder control valve.	Contact Dealer
Header or reel lifts but lacks power	Relief pressure too low or contaminant in relief valve	Check/adjust/clean relief valve at cylinder control valve.	
Reel and/or conveyor not turning	HEADER DRIVE switch not engaged	Engage HEADER DRIVE switch.	<i>Engaging and Disengaging the Header, page 202</i>
	Flow controls adjusted too low	Toggle speed controls on CDM to increase flow.	D-Series: <i>4.6.7 Draper Speed, page 286</i> , and <i>4.6.6 Reel Speed, page 282</i> A-Series: <i>4.7.1 Auger Speed, page 294</i> R-Series: <i>4.8.1 Disc Speed, page 302</i>
	Appropriate solenoid on flow control block not being energized	Contact Dealer.	Contact Dealer
Reel and/or conveyor turns but lacks power	Relief pressure too low	Check/adjust/clean relief valve.	
Hydraulic oil high-temperature alarm	Hydraulic oil cooling system not working properly	Check/clean cooling box.	<i>Maintaining Engine Cooling Box, page 358</i>
	Faulty bypass valve	Clean or replace.	Contact Dealer
Hydraulic oil low-temperature alarm	Hydraulic oil too cold	Run engine until hydraulic oil warms up.	—

6.4 Header Drive Troubleshooting

Symptom	Problem	Solution	Section
Header drive not engaging	Header DRIVE switch in cab not engaged	Engage HEADER DRIVE switch.	<i>Engaging and Disengaging the Header, page 202</i>
	Operator Presence switch not closed or faulty	Occupy operator's seat or replace switch. Contact your Dealer.	Contact Dealer
	Appropriate solenoid not being energized by activating switch	Contact Dealer.	
Header drive lacks power	Relief valve setting too low		
Warning alarm sounds	Header drive overload	Reduce ground speed.	<i>Driving Forward in Engine-Forward Mode, page 170</i>
	Relief valve setting too low	Contact Dealer.	Contact Dealer

TROUBLESHOOTING

6.5 Traction Drive Troubleshooting

Symptom	Problem	Solution	Section
Warning alarm sounds and transmission oil light is on	Low hydraulic oil level	Stop engine, and add oil to hydraulic system.	Checking and Filling Hydraulic Oil, page 401
	Low hydraulic pressure	Contact Dealer.	Contact Dealer
	Foreign material shorting sender		
	Short in alarm wiring		
	Faulty sender		
Wheels lack pulling ability on a grade or pulling out of a ditch	Internal pump or motor damage		
	Insufficient torque at drive wheels	Move ground speed range control to field position, and reduce ground speed.	Driving Forward in Engine-Forward Mode, page 170
	Loose or worn controls	Check controls.	5.5.3 Ground Speed Lever (GSL) Adjustments, page 317
	Air in system	Use proper oil.	8.2.3 Lubricants, Fluids, and System Capacities, page 466
		Check oil level and leaks.	Checking and Filling Hydraulic Oil, page 401
		Check hydraulic oil filters.	5.5.9 Hydraulic System, page 400
	Brakes binding or not releasing fully	Check pressure on brake release valve (min. 200 psi [1379 kPa]).	Contact Dealer
Relief valve in tandem pump dirty or damaged	Replace relief valve.		
With steering wheel centered, one wheel pulls more than the other	Leakage at pump or motor	Contact Dealer.	Contact Dealer
	Wheels not in same speed range		
	Faulty relief valve	Repair or replace valve. Contact Dealer.	

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Both wheels will not pull in forward or reverse	Pump arms have broken shaft or loose hardware	Repair or tighten.	Contact Dealer
	Brakes binding or not releasing fully	Check pressure on brake release valve (min. 200 psi [1379 kPa]).	
	Low oil level	Check oil reservoir level.	<i>Checking and Filling Hydraulic Oil, page 401</i>
	Power hubs disengaged	Engage final drives.	<i>Final Drives, page 191</i>
	Damaged hydraulic lines preventing proper oil flow	Replace damaged lines.	Contact Dealer
	Ground speed range control not working	Contact Dealer.	
	Steering controls worn or defective	Check GSL and steering for loose, worn or damaged ball joints and connecting rods.	<i>5.5.3 Ground Speed Lever (GSL) Adjustments, page 317 and 5.5.4 Steering Adjustments, page 319</i>
	Charge pressure relief valve misadjusted or damaged	Check the valve adjustment. Check valve parts and seat.	<i>Checking Charge Pump Pressure, page 410</i>
	Failed pump or motor	Contact Dealer.	Contact Dealer

TROUBLESHOOTING

Symptom	Problem	Solution	Section
One wheel does not pull in forward or reverse	Broken pump arm or shaft	Contact Dealer.	Contact Dealer
	One final drive disengaged	Engage final drive.	Final Drives, page 191
	Steering controls worn or defective	Check GSL and steering for loose, worn or damaged ball joints and connecting rods.	5.5.3 Ground Speed Lever (GSL) Adjustments, page 317 and 5.5.4 Steering Adjustments, page 319
	High pressure relief valve stuck open, damaged seat	Check valve, and clean or replace.	Contact Dealer
	Brakes binding or not releasing fully	Check pressure on brake release valve (min. 200 psi [1379 kPa]).	Contact Dealer
	Damaged hydraulic lines preventing proper oil flow	Contact Dealer.	
	Ground speed range control not working		
	Failed pump, motor or power hub		
Excessive noise from drive system	Mechanical interference in steering or ground speed linkage	Adjust, repair, and replace.	5.5.3 Ground Speed Lever (GSL) Adjustments, page 317 and 5.5.4 Steering Adjustments, page 319
	Brakes binding or not releasing fully	Check pressure on brake release valve (min. 200 psi [1379 kPa]).	Contact Dealer
	Faulty pump or motor	Contact Dealer.	
	Air in system	Check lines for leakage.	—
	Hydraulic line clamps loose	Tighten clamps.	
Hydraulic oil filter leaks at seal	Not properly tightened	Tighten filter element.	
	Damaged seal or threads	Replace filter or filter head.	

TROUBLESHOOTING

6.6 Steering and Ground Speed Control Troubleshooting

Symptom	Problem	Solution	Section
Machine will not steer straight	Linkage worn or loose	Adjust steering chain tension. Replace worn parts. Adjust linkage.	5.5.4 Steering Adjustments, page 319
Machine moves on flat ground with controls in neutral	Neutral interlock misadjusted	Contact Dealer.	Contact Dealer
	Parking brake not functioning		
	GSL servo misadjusted		
	GSL cable misadjusted		
Steering wheel will not lock with gsl in n-detent	Transmission interlock misadjusted		
Steering wheel will not unlock	Transmission interlock cylinder not working		
Insufficient road speed	Ground speed range control in field position	Move to road position.	Driving on the Road, page 175
Steering is too stiff or too loose	Steering chain tension is out of adjustment	Adjust steering chain tension.	5.5.4 Steering Adjustments, page 319

TROUBLESHOOTING

6.7 Cab Air Troubleshooting

Symptom	Problem	Solution	Section
Blower fan will not run	Burned out motor	Contact Dealer.	Contact Dealer
	Burned out switch		
	Motor shaft tight or bearings worn		
	Faulty wiring—loose or broken		
Blower fan operating but no air coming into cab	Blower rotors in contact with housing		
	Dirty fresh air filter	Clean fresh air filter.	Cleaning Engine Air Filter Primary Element, page 343
	Dirty recirculating air filter	Clean recirculating filter.	Cleaning Return Air Cleaner, page 328
	Evaporator clogged	Clean evaporator.	Cleaning Air Conditioning (A/C) Evaporator Core, page 329
	Air flow passage blocked	Remove blockage.	—
Heater not heating	Heater shut-off valve at engine closed	Open valve.	3.10.1 Heater Shut-Off, page 56
	Defective thermostat in engine water outlet manifold	Replace thermostat.	Contact Dealer
	Heater temperature control defective	Replace control.	
	No thermostat in engine water outlet manifold	Install thermostat.	
Odor from air louvers	Plugged drainage hose	Blow out hose with compressed air.	—
	Dirty filters	Clean filters.	Cleaning Engine Air Filter Primary Element, page 343 and Cleaning Return Air Cleaner, page 328

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Air conditioning not cooling	Low refrigerant level	Add refrigerant. Contact Dealer.	Contact Dealer
	Clutch coil burned out or disconnected	Contact Dealer.	
	Blower motor disconnected or burned out		
	Switch contacts in thermostat burned excessively, or sensing element defective	Replace thermostat.	
	Compressor partially or completely seized	Remove compressor for service or replacement.	
	Condenser fins plugged	Clean condenser.	<i>Air Conditioning Condenser, page 329</i>
	Loose or broken compressor drive belt	Replace drive belt and/ or tighten to specifications.	<i>Tensioning Air Conditioner (A/C) Compressor Belt, page 367 and Replacing Air Conditioner (A/C) Compressor Belt, page 367</i>
	Dirty filters	Clean fresh air and recirculation filters.	<i>Cleaning Engine Air Filter Primary Element, page 343 and Cleaning Return Air Cleaner, page 328</i>
	Broken or disconnected electrical wire	Check all terminals for loose connections; check wiring for hidden breaks.	—
	Broken or disconnected ground wire	Check ground wire to see if loose, broken, or disconnected.	
	Expansion valve stuck in open or closed position	Contact Dealer.	Contact Dealer
	Broken refrigerant line		
	Leak in system		
	Compressor shaft seal leaking		
Clogged screen in receiver-drier; plugged hose or coil			

TROUBLESHOOTING

Symptom	Problem	Solution	Section
Air conditioning not producing sufficient cooling. (sufficient cooling defined as when air temperature in cab, measured at louvered vent, can be maintained at 25°F [14°C] below ambient air temperature.)	Compressor clutch slipping	Remove clutch assembly for service or replacement.	Contact Dealer
	Thermostat defective or improperly adjusted	Replace thermostat.	
	Clogged air filters	Remove air filters, and clean or replace as necessary.	Cleaning Engine Air Filter Primary Element, page 343 and Cleaning Return Air Cleaner, page 328
	Heater circuit is open	Close temperature control in cab, and valve on engine).	3.10.3 Climate Controls, page 57 and 3.10.1 Heater Shut-Off, page 56
	Insufficient air circulation over condenser coil; fins clogged with dirt or insects	Clean condenser.	Air Conditioning Condenser, page 329
	Evaporator fins clogged	Clean evaporator fins (under cab floor).	Cleaning Air Conditioning (A/C) Evaporator Core, page 329
	Refrigerant low	Contact Dealer.	Contact Dealer
	Clogged expansion valve		
	Clogged receiver-drier		
	Excessive moisture in system		
	Air in system		
Blower motor sluggish in operation			
Air Conditioning Cools Intermittently	Unit icing up due to thermostat adjusted too low	Adjust thermostat.	Contact Dealer
	Unit icing up due to excessive moisture in system	Contact Dealer.	
	Unit icing up due to incorrect super-heat adjustment in the expansion valve		
	Thermostat defective		
	Defective blower switch or blower motor		
	Partially open, improper ground or loose connection in compressor clutch coil		
	Compressor clutch slipping		

TROUBLESHOOTING

Air Conditioning System Too Noisy	Defective winding or improper connection in compressor clutch coil or relay	Contact Dealer.	Contact Dealer
	Excessive charge in system		
	Low charge in system		
	Excessive moisture in system		
	Loose or excessively worn drive belt	Tighten or replace as required.	<i>Tensioning Air Conditioner (A/C) Compressor Belt, page 367 and Replacing Air Conditioner (A/C) Compressor Belt, page 367</i>
	Noisy clutch	Remove clutch for service or replacement as required.	Contact Dealer
	Noisy compressor	Check mountings and repair. Remove compressor for service or replacement.	
	Compressor oil level low	Add SP-15 PAG refrigerant oil.	
Blower fan noisy due to excessive wear	Remove blower motor for service or replacement as necessary.		
Windows Fog Up	High humidity	Run A/C to dehumidify air and heater to control temperature.	<i>3.10.3 Climate Controls, page 57</i>

TROUBLESHOOTING

6.8 Operator's Station Troubleshooting

Symptom	Problem	Solution	Section
Rough ride	Seat suspension not adjusted for operator's weight	Adjust seat suspension.	3.3 Operator's Seat Adjustments, page 42
Rough ride	High air pressure in tires	Deflate to proper pressure.	Inflating Drive Wheel Tire, page 411 and Inflating Caster Tire, page 418
Rough ride	Cab suspension too stiff	Adjust suspension.	Contact Dealer

7 Options and Attachments

7.1 Options and Attachments

The following options and attachments are available through your MacDon Dealer. The Dealer will require the part number (MD #) to determine pricing and availability.

7.1.1 AM/FM Radio

The cab is pre-wired for easy installation of a DIN “E”-style audio component available from your MacDon Dealer. Speakers are factory-installed.

For installation details, refer to the unloading and assembly instructions supplied with your windrower.

7.1.2 Automated Steering Systems

A MacDon-approved automated steering system is available from MacDon Dealers that provide installation and support services.

MacDon windrowers are prewired for either the Trimble® AutoPilot™ hydraulically integrated steering system or the Trimble® EZ-Pilot® wheel/column based assisted steering system. The windrower’s ground speed lever (GSL) has an automated steering (autosteer) engage switch and the Trimble® display mounting kit MD #183348 is supplied in the cab.

The Trimble® AutoPilot™ system requires the MacDon automated steering hydraulic interface kit MD #B5589. Installation instruction MD #169539 is included in the bundle.

Other GPS providers may supply parts in their vehicle specific installation packages or make installation kits available through MacDon Dealers.

7.1.3 Booster Spring Kit (External)

Available for headers over 6000 lb (2724 kg) to increase the float capacity.

MD #B4659 - Booster Spring Kit (external) includes two springs (one for each side) and mounting bracket.

Instruction MD #169032 is included in the bundle.

7.1.4 Booster Spring Kit (Internal)

An additional spring that is installed inside the header lift spring for increased float capacity.

MD #B5303 - includes one spring and castings for one side of the windrower.

Instruction MD #169316 is included in the bundle.

7.1.5 Draper Header Case Drain Kit

The Draper Header Case Drain kit must be installed when attaching a MacDon D50, D60, or D65 draper header with an upper cross auger (UCA), but without double draper drive. Case Drain Kit (MD #B5842) is **NOT** required for double draper drive headers equipped with kits (MD #B5606) and (MD #B5653).

MD #B5842

7.1.6 Double Windrow Attachment (DWA)

Allows auger and rotary headers when installed on a windrower to lay a double windrow. The kit includes a draper deck, linkage assembly, hydraulics, and installation instructions.

MD #C1987 consists of:

- MD #B4655 Deck
- MD #B5270 Linkage assembly
- MD #B5301 Hydraulic kit
- MD #169216 Double Windrow Attachment (DWA) manual

7.1.7 Draper Header Reel Drive and Lift Plumbing

Base kit required to run draper header. Includes draper header reel drive and lift plumbing (less valve) and reel fore-aft hydraulics.

NOTE:

If the last digit of windrower code is B, this bundle is already installed.

MD #B5577

Instruction MD #169537 is included in the bundle.

7.1.8 Engine Block Heater

Contact your nearest Cummins Engine Distributor, and provide your engine model and serial numbers to ensure the proper heater is supplied.

7.1.9 Engine Fan Air Baffle

Prevents the windrow from being disturbed by engine cooling fan air blast.

MD #B5440

Instruction MD #169443 is included in the bundle.

7.1.10 Header Drive Reverser

Allows the conditioner, knife, auger, and reel to reverse on the auger header, and the conditioner and knife to reverse on the draper header.

MD #B4656

Instruction MD #169213 is included with the bundle.

7.1.11 HID Auxiliary Lighting

Provides additional field lighting. The kit includes two cab-mounted high intensity discharge (HID) lamps and installation instructions.

MD #B5596

Instruction MD #169621 is included in the bundle.

7.1.12 Hydraulic Center-Link

Allows remote adjustment of the header angle using a hydraulic cylinder between the header and the windrower.

MD #B4650 (hydraulic center-link)

Instruction MD #169236 is included in the bundle.

7.1.13 Light Header Flotation

Available for headers that do not require as much spring tension for header float.

MD #B4664

Instruction MD #169033 is included in the bundle.

7.1.14 Lighting and Marking for Cab-Forward Road Travel

Allows the windrower to be compliant with vehicle lighting regulations when travelling in the cab-forward mode on public roads. The kit includes red tail lights, slow moving vehicle (SMV) markings, hardware, and installation instructions.

MD #B5412

Instruction MD #169426 is included in the bundle.

7.1.15 Mechanical Center-Link

The mechanical center-link provides a manually adjustable connection between the windrower and the header/mower conditioner.

MD #B4665

7.1.16 Pressure Sensor Kit

For enhanced monitoring of the knife drive (or reel drive) hydraulic pressure, and warns of overload conditions.

MD #B5574

Instruction MD #169031 is included in the bundle.

7.1.17 Rotary Header Drive Hydraulics (13-foot)

Used to allow operation of a 13-foot rotary header. The kit includes header drive plumbing and installation instructions.

MD #B5510

Instructions are included in the bundle.

- MD #169544 13-foot R80 and R85 attached to M150 or M155

MD #B5511

Instructions are included in the bundle.

- MD #169545 13-foot R80 and R85 attached to M200

7.1.18 Self-Aligning Center-Link

Allows the center-link cylinder to be hydraulically positioned and connected to the header without leaving the operator's station.

Hydraulic center-link (MD #B4650) must be installed.

MD #B4802

Instruction MD #169004 included in the bundle.

7.1.19 Swath Roller

An axle-mounted swath roller increases the windrow's resistance to wind disturbance, especially in canola or similar crops. It can be fitted with a hydraulic lift with in-cab controls.

Contact your MacDon Dealer for information.

7.1.20 Towing Harness

The towing harness is used together with the weight box when towing a D-Series draper header equipped with slow speed transport option behind the windrower.

MD #B5280 - Weight box harness only. Includes hitch pin and wiring for use with slow speed header transport option.

Instruction MD #169278 is included in the bundle.

7.1.21 Warning Beacons

Two rotating warning beacons that are designed for installation onto the pre-wired cab. The kit includes the beacons, a switch, mounting hardware, and instructions. The beacons are standard equipment for exported windrowers, and are optional for North America. Fits 2009 and newer machines.

MD #B5582

Instruction MD #169538 is included in the bundle.

OPTIONS AND ATTACHMENTS

7.1.22 Weight Box

To move the windrower without an attached header, attach the weight box to the header lift system. The weight box allows transporting a header behind the windrower by providing additional weight on the drive wheels.

MD #B5238 -Weight box without harness³³

MD #B5240 - Weight box without harness and concrete.³³

Instruction MD #169280 is included in the bundle.

MD #B5280 - Wiring harness for weight box. Includes hitch pin and wiring for use with slow speed transport. Use with MD #B5238 and MD #B5240. Required when towing header with SP windrower.

Instruction MD #169278 is included in the bundle.

7.1.23 Windshield Shades

Retractable sun shades for front and rear windows. Attachment hardware is included.

MD #B4866

Instruction MD #169218 is included in the bundle.

33. Wiring harness MD #B5280 is also required to tow a header. Refer to [7.1.20 Towing Harness, page 450](#).

8 Reference

8.1 Recommended Torques

8.1.1 Torque Specifications

The following tables provide the correct torque values for various bolts, cap screws, and hydraulic fittings.

- Tighten all bolts to the torque values specified in the charts (unless otherwise noted throughout this manual).
- Replace hardware with the same strength and grade of bolt.
- Use the torque value tables as a guide and periodically check tightness of bolts.
- Understand torque categories for bolts and cap screws by using their identifying head markings.

SAE Bolt Torque Specifications

Torque values shown in the following tables are valid for non-greased, or non-oiled threads and heads; therefore, do **NOT** grease or oil bolts or cap screws unless otherwise specified in this manual.

Table 8.1 SAE Grade 5 Bolt and Grade 5 Free Spinning Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N·m)	
	Min.	Max.	Min.	Max.
1/4-20	*106	*117	11.9	13.2
5/16-18	*218	*241	24.6	27.1
3/8-16	32	36	44	48
7/16-14	52	57	70	77
1/2-13	79	87	106	118
9/16-12	114	126	153	170
5/8-11	157	173	212	234
3/4-10	281	311	380	420
7/8-9	449	496	606	669
1-8	611	676	825	912

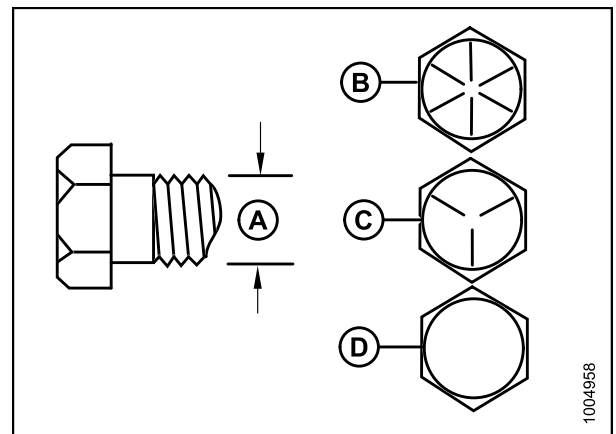


Figure 8.1: Bolt Grades

A - Nominal Size
C - SAE-5

B - SAE-8
D - SAE-2

1004958

REFERENCE

Table 8.2 SAE Grade 5 Bolt and Grade F Distorted Thread Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
1/4-20	*72	*80	8.1	9
5/16-18	*149	*164	16.7	18.5
3/8-16	22	24	30	33
7/16-14	35	39	48	53
1/2-13	54	59	73	80
9/16-12	77	86	105	116
5/8-11	107	118	144	160
3/4-10	192	212	259	286
7/8-9	306	338	413	456
1-8	459	507	619	684

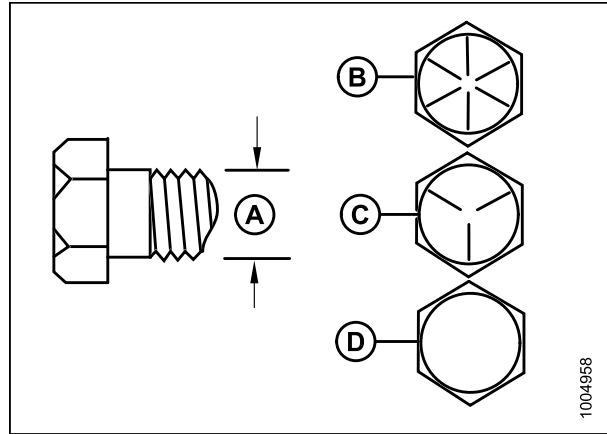


Figure 8.2: Bolt Grades

A - Nominal Size
 B - SAE-8
 C - SAE-5
 D - SAE-2

Table 8.3 SAE Grade 8 Bolt and Grade G Distorted Thread Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
1/4-20	*150	*165	16.8	18.6
5/16-18	18	19	24	26
3/8-16	31	34	42	46
7/16-14	50	55	67	74
1/2-13	76	84	102	113
9/16-12	109	121	148	163
5/8-11	151	167	204	225
3/4-10	268	296	362	400
7/8-9	432	477	583	644
1-8	647	716	874	966

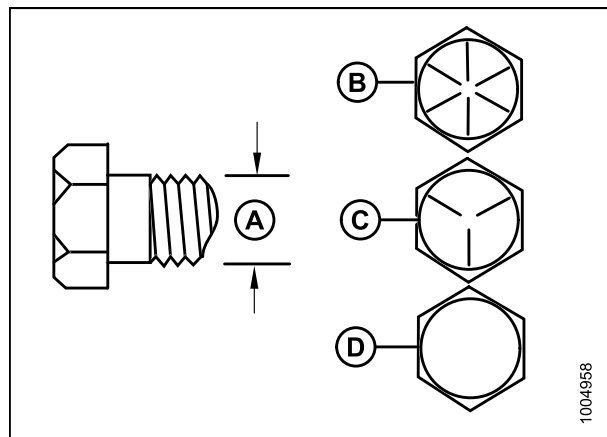


Figure 8.3: Bolt Grades

A - Nominal Size
 B - SAE-8
 C - SAE-5
 D - SAE-2

REFERENCE

Table 8.4 SAE Grade 8 Bolt and Grade 8 Free Spinning Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
1/4-20	*150	*165	16.8	18.6
5/16-18	26	28	35	38
3/8-16	46	50	61	68
7/16-14	73	81	98	109
1/2-13	111	123	150	166
9/16-12	160	177	217	239
5/8-11	221	345	299	330
3/4-10	393	435	531	587
7/8-9	633	700	855	945
1-8	863	954	1165	1288

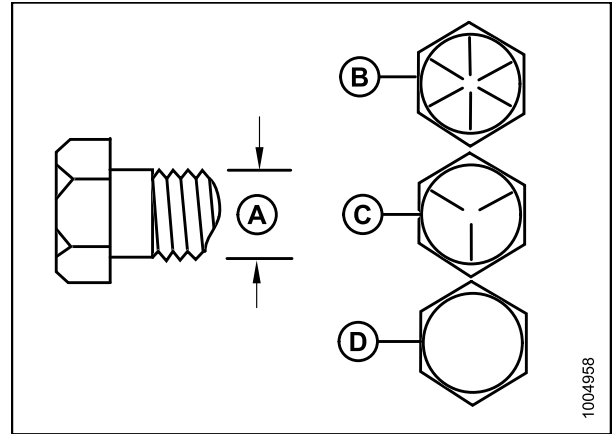


Figure 8.4: Bolt Grades

A - Nominal Size
C - SAE-5

B - SAE-8
D - SAE-2

1004958

Metric Bolt Specifications

Table 8.5 Metric Class 8.8 Bolts and Class 9 Free Spinning Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
3-0.5	*13	*14	1.4	1.6
3.5-0.6	*20	*22	2.2	2.5
4-0.7	*29	*32	3.3	3.7
5-0.8	*59	*66	6.7	7.4
6-1.0	*101	*112	11.4	12.6
8-1.25	20	23	28	30
10-1.5	40	45	55	60
12-1.75	70	78	95	105
14-2.0	113	124	152	168
16-2.0	175	193	236	261
20-2.5	341	377	460	509
24-3.0	589	651	796	879

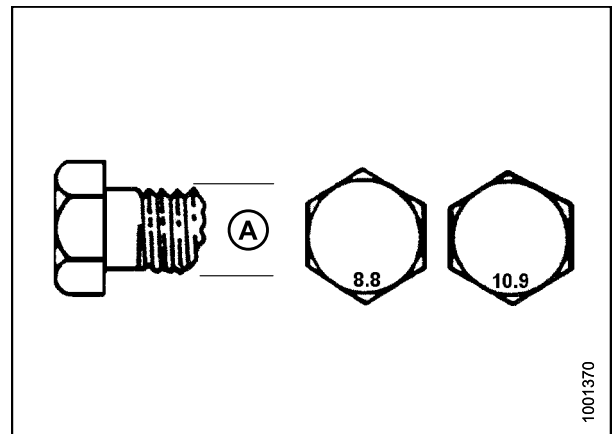


Figure 8.5: Bolt Grades

1001370

REFERENCE

Table 8.6 Metric Class 8.8 Bolts and Class 9 Distorted Thread Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
3-0.5	*9	*10	1	1.1
3.5-0.6	*14	*15	1.5	1.7
4-0.7	*20	*22	2.3	2.5
5-0.8	*40	*45	4.5	5
6-1.0	*69	*76	7.7	8.6
8-1.25	*167	*185	18.8	20.8
10-1.5	28	30	37	41
12-1.75	48	53	65	72
14-2.0	77	85	104	115
16-2.0	119	132	161	178
20-2.5	233	257	314	347
24-3.0	402	444	543	600

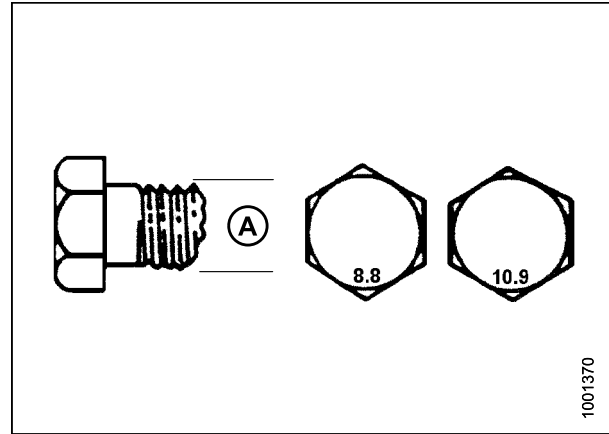


Figure 8.6: Bolt Grades

Table 8.7 Metric Class 10.9 Bolts and Class 10 Free Spinning Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
3-0.5	*18	*19	1.8	2
3.5-0.6	*27	*30	2.8	3.1
4-0.7	*41	*45	4.2	4.6
5-0.8	*82	*91	8.4	9.3
6-1.0	*140	*154	14.3	15.8
8-1.25	28	31	38	42
10-1.5	56	62	75	83
12-1.75	97	108	132	145
14-2.0	156	172	210	232
16-2.0	242	267	326	360
20-2.5	472	521	637	704
24-3.0	815	901	1101	1217

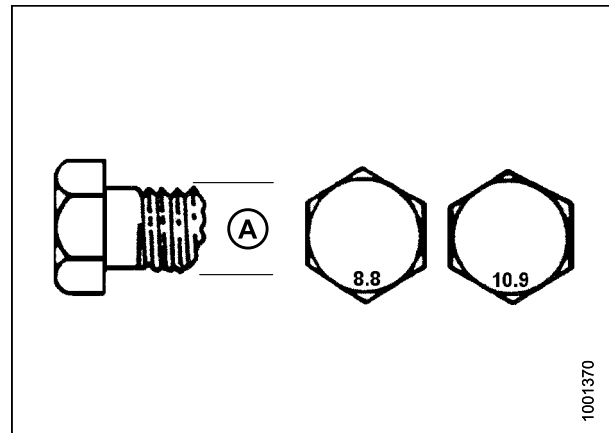


Figure 8.7: Bolt Grades

REFERENCE

Table 8.8 Metric Class 10.9 Bolts and Class 10 Distorted Thread Nut

Nominal Size (A)	Torque (ft-lbf) (*in-lbf)		Torque (N-m)	
	Min.	Max.	Min.	Max.
3-0.5	*12	*13	1.3	1.5
3.5-0.6	*19	*21	2.1	2.3
4-0.7	*28	*31	3.1	3.4
5-0.8	*56	*62	6.3	7
6-1.0	*95	*105	10.7	11.8
8-1.25	19	21	26	29
10-1.5	38	42	51	57
12-1.75	66	73	90	99
14-2.0	106	117	143	158
16-2.0	165	182	222	246
20-2.5	322	356	434	480
24-3.0	556	614	750	829

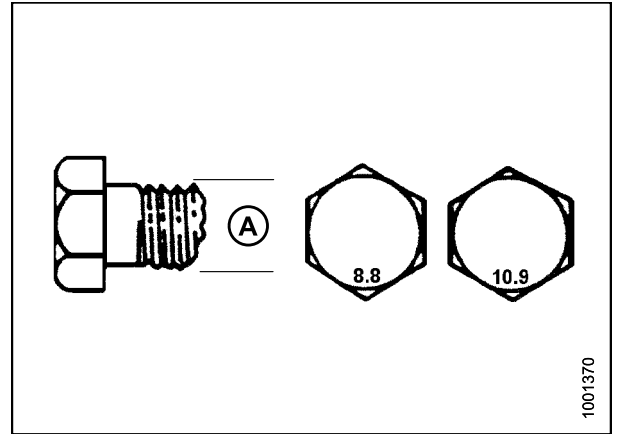


Figure 8.8: Bolt Grades

REFERENCE

Metric Bolt Specifications Bolting into Cast Aluminum

Table 8.9 Metric Bolt Bolting into Cast Aluminum

Nominal Size (A)	Bolt Torque			
	8.8 (Cast Aluminum)		10.9 (Cast Aluminum)	
	ft-lbf	N·m	ft-lbf	N·m
M3	–	–	1	–
M4	–	–	2.6	4
M5	–	–	5.5	8
M6	6	9	9	12
M8	14	20	20	28
M10	28	40	40	55
M12	52	70	73	100
M14	–	–	–	–
M16	–	–	–	–

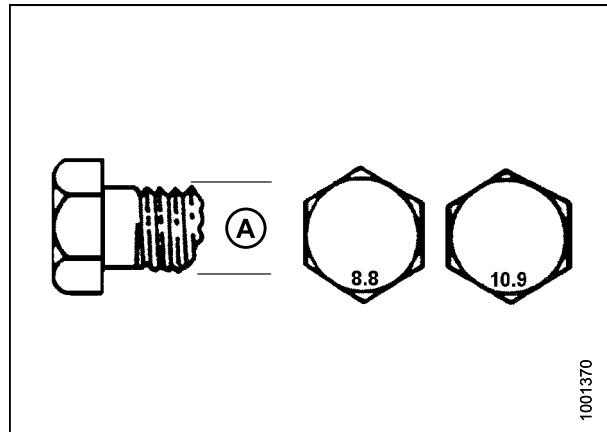


Figure 8.9: Bolt Grades

Flare-Type Hydraulic Fittings

1. Check flare (A) and flare seat (B) for defects that might cause leakage.
2. Align tube (C) with fitting (D) and thread nut (E) onto fitting without lubrication until contact has been made between the flared surfaces.
3. Torque the fitting nut (E) to the specified number of flats from finger tight (FFFT) or to a given torque value in [Table 8.10 Flare-Type Hydraulic Tube Fittings, page 459](#).
4. Use two wrenches to prevent fitting (D) from rotating. Place one wrench on the fitting body (D) and tighten nut (E) with the other wrench to the torque shown.
5. Assess the final condition of the connection.

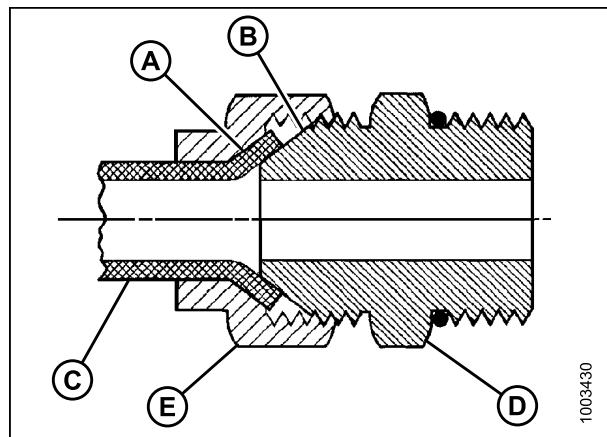


Figure 8.10: Hydraulic Fitting

REFERENCE

Table 8.10 Flare-Type Hydraulic Tube Fittings

SAE Dash Size	Thread Size (in.)	Torque Value ³⁴		Flats from Finger Tight (FFFT)	
		ft·lbf	N·m	Tube	Swivel Nut or Hose
-2	5/16-24	3-4	4-5	—	—
-3	3/8-24	5-6	7-8	—	—
-4	7/16-20	13-14	18-19	2-1/2	2
-5	1/2-20	14-15	19-21	2	2
-6	9/16-18	22-24	30-33	2	1-1/2
-8	3/4-16	42-46	57-63	2	1-1/2
-10	7/8-14	60-66	81-89	1-1/2	1-1/2
-12	1-1/16-12	83-91	113-124	1-1/2	1-1/4
-14	1-3/16-12	100-110	136-149	1-1/2	1-1/4
-16	1-5/16-12	118-130	160-176	1-1/2	1
-20	1-5/8-12	168-184	228-250	1	1
-24	1-7/8-12	195-215	264-291	1	1
-32	2-1/2-12	265-291	359-395	1	1
-40	3-12	—	—	1	1

34. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Back off the lock nut (C) as far as possible. Ensure that washer (D) is loose and is pushed toward the lock nut (C) as far as possible.
3. Check that O-ring (A) is **NOT** on the threads and adjust if necessary.
4. Apply hydraulic system oil to the O-ring (A).

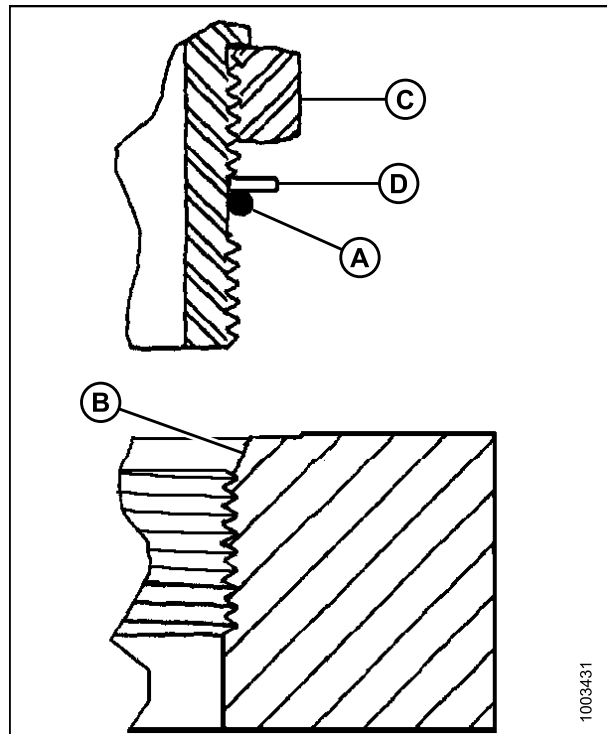


Figure 8.11: Hydraulic Fitting

5. Install fitting (B) into port until back up washer (D) and O-ring (A) contact the part face (E).
6. Position angle fittings by unscrewing no more than one turn.
7. Turn lock nut (C) down to washer (D) and tighten to torque shown. Use two wrenches, one on fitting (B) and the other on lock nut (C).
8. Check the final condition of the fitting.

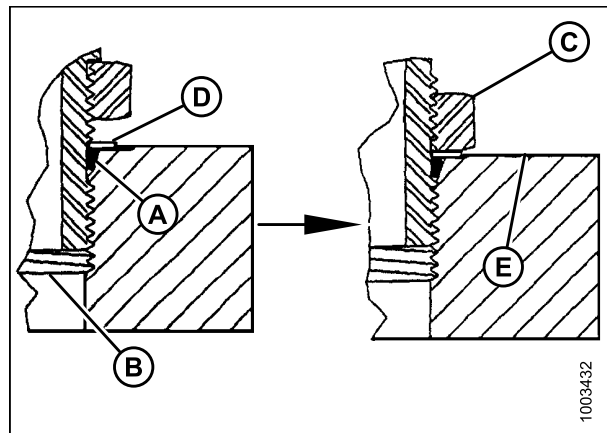


Figure 8.12: Hydraulic Fitting

REFERENCE

Table 8.11 O-Ring Boss (ORB) Hydraulic Fittings (Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ³⁵	
		ft·lbf (*in·lbf)	N·m
-2	5/16-24	*53-62	6-7
-3	3/8-24	*106-115	12-13
-4	7/16-20	14-15	19-21
-5	1/2-20	15-24	21-33
-6	9/16-18	19-21	26-29
-8	3/4-16	34-37	46-50
-10	7/8-14	55-60	75-82
-12	1-1/16-12	88-97	120-132
-14	1-3/8-12	113-124	153-168
-16	1-5/16-12	130-142	176-193
-20	1-5/8-12	163-179	221-243
-24	1-7/8-12	199-220	270-298
-32	2-1/2-12	245-269	332-365

35. Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

1. Inspect O-ring (A) and seat (B) for dirt or obvious defects.
2. Check that O-ring (A) is **NOT** on the threads and adjust if necessary.
3. Apply hydraulic system oil to the O-ring.
4. Install fitting (C) into port until fitting is hand tight.
5. Torque fitting (C) according to the values in Table 8.12 *O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)*, page 462.
6. Check the final condition of the fitting.

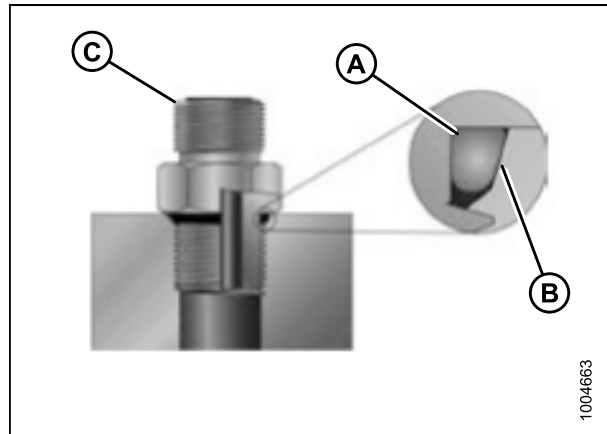


Figure 8.13: Hydraulic Fitting

Table 8.12 O-Ring Boss (ORB) Hydraulic Fittings (Non-Adjustable)

SAE Dash Size	Thread Size (in.)	Torque Value ³⁶	
		ft·lbf (*in·lbf)	N·m
-2	5/16–24	*53–62	6–7
-3	3/8–24	*106–115	12–13
-4	7/16–20	14–15	19–21
-5	1/2–20	15–24	21–33
-6	9/16–18	19–21	26–29
-8	3/4–16	34–37	46–50
-10	7/8–14	55–60	75–82
-12	1-1/16–12	88–97	120–132
-14	1-3/8–12	113–124	153–168
-16	1-5/16–12	130–142	176–193
-20	1-5/8–12	163–179	221–243
-24	1-7/8–12	199–220	270–298
-32	2-1/2–12	245–269	332–365

³⁶ Torque values shown are based on lubricated connections as in reassembly.

REFERENCE

O-Ring Face Seal (ORFS) Hydraulic Fittings

1. Check components to ensure that the sealing surfaces and fitting threads are free of burrs, nicks, scratches, or any foreign material.



Figure 8.14: Hydraulic Fitting

2. Apply hydraulic system oil to the O-ring (B).
3. Align the tube or hose assembly so that the flat face of the sleeve (A) or (C) comes in full contact with O-ring (B).
4. Thread tube or hose nut (D) until hand-tight. The nut should turn freely until it is bottomed out.
5. Torque fittings according to the values in Table [8.13 O-Ring Face Seal \(ORFS\) Hydraulic Fittings, page 464](#).

NOTE:

If applicable, hold the hex on the fitting body (E) to prevent rotation of fitting body and hose when tightening the fitting nut (D).

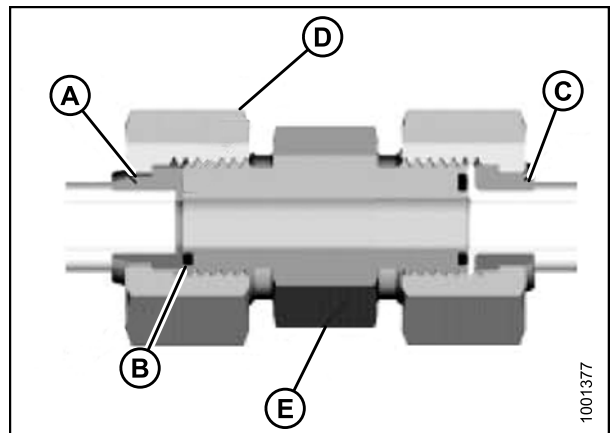


Figure 8.15: Hydraulic Fitting

6. Use three wrenches when assembling unions or joining two hoses together.
7. Check the final condition of the fitting.

REFERENCE

Table 8.13 O-Ring Face Seal (ORFS) Hydraulic Fittings

SAE Dash Size	Thread Size (in.)	Tube O.D. (in.)	Torque Value ³⁷	
			ft-lbf	N·m
-3	Note ³⁸	3/16	–	–
-4	9/16	1/4	18–21	25–28
-5	Note ³⁸	5/16	–	–
-6	11/16	3/8	29–32	40–44
-8	13/16	1/2	41–45	55–61
-10	1	5/8	59–65	80–88
-12	1-3/16	3/4	85–94	115–127
-14	Note ³⁸	7/8	–	–
-16	1-7/16	1	111–122	150–165
-20	1-11/16	1-1/4	151–167	205–226
-24	1–2	1-1/2	232–256	315–347
-32	2-1/2	2	376–414	510–561

37. Torque values and angles shown are based on lubricated connection as in reassembly.

38. O-ring face seal type end not defined for this tube size.

8.2 Recommended Fuel, Fluids, and Lubricants

8.2.1 Storing Lubricants and Fluids

Your machine can only operate at top efficiency if clean fuel and lubricants are used.

- Buy good quality, clean fuel from a reputable dealer.
- Use clean containers to handle fuel and lubricants.
- Keep containers full to avoid condensation issues
- Store in an area protected from dust, moisture, and other contaminants.
- Avoid storing fuel over long periods of time. If you have a slow fuel turnover in the windrower or supply tank, add fuel conditioner to avoid condensation problems.
- Store fuel in a convenient place away from buildings.

8.2.2 Fuel Specifications

Use good quality diesel fuel from a reputable supplier. For most year-round service a No.2 diesel fuel that meets ASTM specification D975 Grade S15 will provide good performance.

If the vehicle is exposed to extreme cold (below 20°F [-7°C]) or is required to operate at colder-than-normal conditions for prolonged periods, use climatized No.2 diesel fuel, or dilute the No.2 fuel with 50% No.1 fuel. This will provide better protection from fuel gelling or wax-plugging of the fuel filters.

Table 8.14 Fuel Specification

Fuel	Specification	Sulphur (by weight)	Water and Sediment (by volume)	Cetane no. °C	Lubricity
Grade no. 2	ASTM D975	0.5% maximum	0.05% maximum	40° minimum	520 Microns
Grade no.1 and 2 mix ³⁹	n/a	1% maximum 0.5% maximum preferred	0.1% maximum	45–55° cold weather / high altitude	460 Microns

In extreme situations, when available fuels are of poor quality or problems exist which are peculiar to certain operations, additives can be used. However, the engine manufacturer recommends consultation with the fuel supplier or engine manufacturer before using fuel additives. Situations where additives are useful include:

- A cetane improver additive can be used with low cetane fuels.
- A wax crystal modifier can help with fuels with high cold filter plugging points (CFPP).
- An anti-icer can help prevent ice formation in wet fuel during cold weather.
- An antioxidant or storage stability additive can help with fuel system deposits and poor storage stability.
- A lubricity enhancer can be used to increase the lubricity of fuels so that they meet the requirements given in the table on the previous page. Diesel fuel conditioner is available from your Dealer.

39. Optional when operating temperature is below 0°C (32°F).

REFERENCE

8.2.3 Lubricants, Fluids, and System Capacities

CAUTION

To avoid injury or death, do not allow ANY machine fluids to enter the body.

Table 8.15 System Capacities

Lubricant/Fluid	Location	Description	Capacity
Grease	As required unless otherwise specified	SAE multi-purpose.high temperature extreme pressure (EP2) performance with 1% max Molybdenum Disulphide (NLGI Grade 2) lithium base	
Diesel fuel	Fuel tank	Diesel Grade No.2, or Diesel Grade No.1 and 2 mix ⁴⁰ ; refer to 8.2.2 Fuel Specifications, page 465 for more information	97 US gallons (378 liters)
Hydraulic oil	Hydraulic reservoir	SAE 15W-40 compliant with SAE specs for API class SJ and CH-4 engine oil.	17.2 US gallons (65 liters)
Gear lubricant	Gear box	SAE 75W-90, API service class GL-5.fully synthetic gear lubricant, (SAE J2360 preferred)	2.2 US quarts (2.1 liters)
	Wheel drive ⁴¹		1.5 US quarts (1.4 liters)
Antifreeze	Engine cooling system	ASTM D-6210 and Fleetguard ES Compleat [®] See below	7.3 US gallons (27.5 liters) ⁴²
Engine oil	Engine oil pan	SAE 15W-40 compliant with SAE specs for API class SJ and CH-4 Engine Oil	11.6 US quarts (11 liters)
Air conditioning refrigerant ⁴³	Air conditioning system	R134A	5 lb (2.27 kg)
Air conditioning refrigerant oil ⁴⁴	Air conditioning system total capacity	PAG SP-15	8.1 fl. oz. (240 cc)

40. Optional when operating temperature is below 0°C. (32°F).

41. SAE 85W-140 API Service Class GL-5. Extreme Pressure Gear Lubricant is used before initial change.

42. Equal parts with water, high quality, soft, de-ionized or distilled water as recommended by Supplier.

43. For prior models who have not upgraded to 5 lbs of refrigerant order Kit MD #183180, which includes decal to advise of systems 5 lbs charge requirement. Refer to Service Bulletin 1254.

44. New compressor (MD #203013) comes filled. If installing on 2014 and prior, refer to Service Bulletin 1254.

REFERENCE

If Fleetguard ES Compleat® is unavailable, use a coolant concentrate or prediluted coolant intended for use with heavy duty diesel engines and with a minimum of the following chemical and physical properties:

- Provides cylinder cavitation protection according to fleet study run at or above 60% load capacity.
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion.

The additive package must be part of one of the following coolant mixtures:

- Ethylene glycol or propylene glycol base prediluted (40–60%) heavy duty coolant.
- Ethylene glycol or propylene glycol base heavy duty coolant concentrate in a 40–60% mixture of concentrate with quality water.

Water quality is important to the performance of the cooling system. Distilled, deionized, or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

IMPORTANT:

Do **NOT** use cooling system sealing additives or antifreeze that contains sealing additives.

8.2.4 Filter Part Numbers

Table 8.16 M155 Filter Part Numbers

Filter	Part Number
Engine oil filter	MD #111974
Charge oil filter	MD #112419
Return oil filter	MD #151975
Primary fuel filter element	MD #111972
Fuel strainer filter (Breather)	MD #111608
Secondary fuel filter element	MD #166312
Fuel filler filter	MD #163989
Return air filter	MD #109797
Primary element (Cab)	MD #111060
Primary air filter element	MD #111954
Safety air filter element	MD #111955

REFERENCE

8.3 Conversion Chart

Table 8.17 Conversion Chart

Quantity	Inch-Pound Units		Factor	SI Units (Metric)	
	Unit Name	Abbreviation		Unit Name	Abbreviation
Area	Acres	acres	$\times 0.4047 =$	Hectares	ha
Flow	US gallons per minute	gpm	$\times 3.7854 =$	Liters per minute	L/min
Force	Pounds force	lbf	$\times 4.4482 =$	Newtons	N
Length	Inch	in.	$\times 25.4 =$	Millimeters	mm
	Foot	ft.	$\times 0.305 =$	Meters	m
Power	Horsepower	hp	$\times 0.7457 =$	Kilowatts	kW
Pressure	Pounds per square inch	psi	$\times 6.8948 =$	Kilopascals	kPa
			$\times .00689 =$	Megapascals	MPa
			$\div 14.5038 =$	Bar (Non-SI)	bar
Torque	Pound feet or foot pounds	ft·lbf	$\times 1.3558 =$	Newton meters	N·m
	Pound inches or inch pounds	in·lbf	$\times 0.1129 =$	Newton meters	N·m
Temperature	Degrees Fahrenheit	°F	$(^{\circ}\text{F}-32) \times 0.56 =$	Celsius	°C
Velocity	Feet per minute	ft/min	$\times 0.3048 =$	Meters per minute	m/min
	Feet per second	ft/s	$\times 0.3048 =$	Meters per second	m/s
	Miles per hour	mph	$\times 1.6063 =$	Kilometres per hour	km/h
Volume	US gallons	US gal	$\times 3.7854 =$	Liters	L
	Ounces	oz.	$\times 29.5735 =$	Milliliters	ml
	Cubic inches	in. ³	$\times 16.3871 =$	Cubic centimeters	cm ³ or cc
Weight	Pounds	lbs	$\times 0.4536 =$	Kilograms	kg

REFERENCE

8.4 Engine Error Codes

Example: cab display module (CDM) displays the Error Code 629S 16F 28C

1. 629S - S represents the J1939 SPN column. Locate code 629 in that column.
2. 12F - F represents the FMI column. Locate code 12 in that column.
3. 28C - C is occurrences, 28 is the quantity.
4. J1939 SPN description - Controller #1. The Cummins description of this is engine control module critical internal failure - Bad intelligent device or component.
5. The Cummins Dealer will request the fault code that corresponds with the number that you have located in the J1939 SPN column.

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
111	629	12	Red	Controller #1	Engine Control Module Critical internal failure - Bad intelligent Device or Component
115	612	2	Red	System Diagnostic Code # 2	Engine Speed/Position Sensor Circuit lost both of two signals from the magnetic pickup sensor - Data Erratic, Intermittent, or incorrect
122	102	3	Amber	Boost Pressure	Intake Manifold Pressure Sensor Circuit – Voltage Above Normal, or Shorted to High Source
123	102	4	Amber	Boost Pressure	Intake Manifold Pressure Sensor Circuit – Voltage Below Normal, or Shorted to Low Source
124	102	16	Amber	Boost Pressure	Intake Manifold 1 Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
131	91	3	Red	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit - Voltage Above Normal, or Shorted to High Source
132	91	4	Red	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
133	974	3	Red	Remote Accelerator	Remote Accelerator Pedal or Lever Position Sensor Circuit – Voltage Above Normal, or Shorted to High Source
134	974	4	Red	Remote Accelerator	Remote Accelerator Pedal or Lever Position Sensor Circuit – Voltage Below Normal, or Shorted to Low Source
135	100	3	Amber	Engine Oil Pressure	Oil Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
141	100	4	Amber	Engine Oil Pressure	Oil Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
143	100	18	Amber	Engine Oil Pressure	Oil Pressure Low – Data Valid but Below Normal Operational Range - Moderately Severe Level

45. These are Cummins descriptions of the J1939 SPN and are subject to change at their discretion.

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
144	110	3	Amber	Engine Coolant Temperature	Coolant Temperature Sensor Circuit – Voltage Above Normal, or Shorted to High Source
145	110	4	Amber	Engine Coolant Temperature	Coolant Temperature Sensor Circuit – Voltage Below Normal, or Shorted to Low Source
146	110	16	Amber	Engine Coolant Temperature	Coolant Temperature High - Data Valid but Above Normal Operational Range - Moderately Severe Level
147	91	1	Red	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit – Abnormal Frequency, Pulse Width, or Period
148	91	0	Red	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit – Abnormal Frequency, Pulse Width, or Period
151	110	0	Red	Engine Coolant Temperature	Coolant Temperature High - Data Valid but Above Normal Operational Range - Most Severe Level
153	105	3	Amber	Intake Manifold #1 Temp	Intake Manifold Air Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High
154	105	4	Amber	Intake Manifold #1 Temp	Intake Manifold Air Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
155	105	0	Red	Intake Manifold #1 Temp	Intake Manifold Air Temperature High – Data Valid but Above Normal Operational Range - Most Severe Level
187	3510	4	Amber	5 Volts DC Supply	Sensor Supply Voltage #2 Circuit – Voltage Below Normal, or Shorted to Low Source
193	52019 9	3	Amber	Cruise Control	Cruise Control (Resistive) Signal Circuit - Voltage Above Normal, or Shorted to High Source
194	52019 9	4	Amber	Cruise Control	Cruise Control (Resistive) Signal Circuit - Voltage Below Normal, or Shorted to Low Source
195	111	3	Amber	Coolant Level	Coolant Level Sensor Circuit - Voltage Above Normal, or Shorted to High Source
196	111	4	Amber	Coolant Level	Coolant Level Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
197	111	18	Amber	Coolant Level	Coolant Level - Data Valid but Below Normal Operational Range - Moderately Severe Level
199	1661	4	Amber	Engine Automatic Start Lamp	Engine Automatic Start Lamp Driver Circuit - Voltage Above Normal, or Shorted to High Source
211	1484	31	None	J1939 Error	Additional Auxiliary Diagnostic Codes logged - Condition Exists
212	175	3	Amber	Oil Temperature	Engine Oil Temperature Sensor 1 Circuit - Voltage Above Normal, or Shorted to High Source
213	175	4	Amber	Oil Temperature	Engine Oil Temperature Sensor 1 Circuit - Voltage Below Normal, or Shorted to Low Source
214	175	0	Red	Oil Temperature	Engine Oil Temperature - Data Valid but Above Normal Operational Range - Most Severe Level

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
221	108	3	Amber	Barometric Pressure	Barometric Pressure Sensor Circuit – Voltage Above Normal, or Shorted to High Source
222	108	4	Amber	Barometric Pressure	Barometric Pressure Sensor Circuit – Voltage Below Normal, or Shorted to Low Source
227	3510	3	Amber	5 Volts DC Supply	Sensor Supply Voltage #2 Circuit – Voltage Above Normal, or Shorted to High Source
231	109	3	Amber	Coolant Pressure	Coolant Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
232	109	4	Amber	Coolant Pressure	Coolant Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
233	109	18	Amber	Coolant Pressure	Coolant Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level
234	190	0	Red	Engine Speed	Engine Speed High - Data Valid but Above Normal Operational Range - Most Severe Level
235	111	1	Red	Coolant Level	Coolant Level Low - Data Valid but Below Normal Operational Range - Most Severe Level
237	644	2	Amber	External Speed Input	External Speed Input (Multiple Unit Synchronization) - Data Erratic, Intermittent, or Incorrect
238	3511	4	Amber	System Diagnostic code # 1	Sensor Supply Voltage #3 Circuit – Voltage Below Normal, or Shorted to Low Source
239	3511	3	Amber	System Diagnostic code #2	Sensor Supply Voltage #3 Circuit - Voltage Above Normal, or Shorted to High Source
241	84	2	Amber	Wheel-based Vehicle Speed	Vehicle Speed Sensor Circuit - Data Erratic, Intermittent, or Incorrect
242	84	10	Amber	Wheel-based Vehicle Speed	Vehicle Speed Sensor Circuit tampering has been detected – Abnormal Rate of Change
244	623	4	Amber	Red Stop Lamp	Red Stop Lamp Driver Circuit - Voltage Below Normal, or Shorted to Low Source
245	647	4	Amber	Fan Clutch Output Device Driver	Fan Control Circuit - Voltage Below Normal, or Shorted to Low Source
249	171	3	Amber	Ambient Air Temperature	Ambient Air Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source
256	171	4	Amber	Ambient Air Temperature	Ambient Air Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
261	174	16	Amber	Fuel Temperature	Engine Fuel Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
263	174	3	Amber	Fuel Temperature	Engine Fuel Temperature Sensor 1 Circuit - Voltage Above Normal, or Shorted to High Source
265	174	4	Amber	Fuel Temperature	Engine Fuel Temperature Sensor 1 Circuit - Voltage Below Normal, or Shorted to Low Source

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
268	94	2	Amber	Fuel Delivery Pressure	Fuel Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
271	1347	4	Amber	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve Circuit – Voltage Below Normal, or Shorted to Low Source
272	1347	3	Amber	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve Circuit – Voltage Above Normal, or Shorted to High Source
281	1347	7	Amber	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve #1 – Mechanical System Not Responding Properly or Out of Adjustment
284	1043	4	Amber	Internal Sensor Voltage Supply	Engine Speed/Position Sensor (Crankshaft) Supply Voltage Circuit - Voltage Below Normal, or Shorted to Low Source
285	639	9	Amber	SAE J1939 Datalink	SAE J1939 Multiplexing PGN Timeout Error - Abnormal Update Rate
286	639	13	Amber	SAE J1939 Datalink	SAE J1939 Multiplexing Configuration Error – Out of Calibration
287	91	19	Red	Accelerator Pedal Position	SAE J1939 Multiplexing Accelerator Pedal or
					Lever Sensor System Error - Received Network
					Data In Error
288	974	19	Red	Remote Accelerator	SAE J1939 Multiplexing Remote Accelerator Pedal or Lever Data Error - Received Network Data In Error
292	441	14	Red	Auxiliary Temperature 1	Auxiliary Temperature Sensor Input 1 - Special Instructions
293	441	3	Amber	OEM Temperature	Auxiliary Temperature Sensor Input # 1 Circuit - Voltage Above Normal, or Shorted to High Source
294	441	4	Amber	OEM Temperature	Auxiliary Temperature Sensor Input # 1 Circuit - Voltage Below Normal, or Shorted to Low Source
295	108	2	Amber	Barometric Pressure	Barometric Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
296	1388	14	Red	Auxiliary Pressure	Auxiliary Pressure Sensor Input 1 - Special Instructions
297	1388	3	Amber	Auxiliary Pressure	Auxiliary Pressure Sensor Input # 2 Circuit - Voltage Above Normal, or Shorted to High Source
298	1388	4	Amber	Auxiliary Pressure	Auxiliary Pressure Sensor Input # 2 Circuit - Voltage Below Normal, or Shorted to Low Source
319	251	2	Maint	Real Time Clock Power	Real Time Clock Power Interrupt - Data Erratic,
					Intermittent, or Incorrect
322	651	5	Amber	Injector Cylinder #01	Injector Solenoid Cylinder #1 Circuit – Current Below Normal, or Open Circuit

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
323	655	5	Amber	Injector Cylinder #05	Injector Solenoid Cylinder #5 Circuit – Current Below Normal, or Open Circuit
324	653	5	Amber	Injector Cylinder #03	Injector Solenoid Cylinder #3 Circuit – Current Below Normal, or Open Circuit
325	656	5	Amber	Injector Cylinder #06	Injector Solenoid Cylinder #6 Circuit – Current Below Normal, or Open Circuit
331	652	5	Amber	Injector Cylinder #02	Injector Solenoid Cylinder #2 Circuit – Current Below Normal, or Open Circuit
332	654	5	Amber	Injector Cylinder #04	Injector Solenoid Cylinder #4 Circuit – Current Below Normal, or Open Circuit
334	110	2	Amber	Engine Coolant Temperature	Coolant Temperature Sensor Circuit – Data Erratic, Intermittent, or Incorrect
338	1267	3	Amber	Vehicle Accessories Relay Driver	Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Above Normal, or Shorted to High Source
339	1267	4	Amber	Vehicle Accessories Relay Driver	Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Below Normal, or Shorted to Low Source
341	630	2	Amber	Calibration Memory	Engine Control Module data lost - Data Erratic, Intermittent, or Incorrect
342	630	13	Red	Calibration Memory	Electronic Calibration Code Incompatibility - Out of Calibration
343	629	12	Amber	Controller #1	Engine Control Module Warning internal hardware failure - Bad Intelligent Device or Component
349	191	16	Amber	Transmission Output Shaft Speed	Transmission Output Shaft Speed - Data Valid but Above Normal Operational Range - Moderately Severe Level
351	627	12	Amber	Controller #1	Injector Power Supply - Bad Intelligent Device or Component
352	3509	4	Amber	5 Volts DC Supply	Sensor Supply Voltage #1 Circuit – Voltage Below Normal, or Shorted to Low Source
386	3509	3	Amber	5 Volts DC Supply	Sensor Supply Voltage #1 Circuit – Voltage Above Normal, or Shorted to High Source
415	100	1	Red	Engine Oil Pressure	Oil Pressure Low – Data Valid but Below Normal Operational Range - Most Severe Level
418	97	15	Maint.	Water in Fuel Indicator	Water in Fuel Indicator High - Data Valid but Above Normal Operational Range – Least Severe Level
422	111	2	Amber	Coolant Level	Coolant Level - Data Erratic, Intermittent, or Incorrect
425	175	2	Amber	Oil Temperature	Engine Oil Temperature - Data Erratic, Intermittent, or Incorrect

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
428	97	3	Amber	Water in Fuel Indicator	Water in Fuel Sensor Circuit - Voltage Above Normal, or Shorted to High Source
429	97	4	Amber	Water in Fuel Indicator	Water in Fuel Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
431	558	2	Amber	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Data Erratic, Intermittent, or Incorrect
432	558	13	Red	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Out of Calibration
435	100	2	Amber	Engine Oil Pressure	Oil Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
441	168	18	Amber	Electrical Potential (Voltage)	Battery #1 Voltage Low - Data Valid but Below Normal Operational Range – Moderately Severe Level
442	168	16	Amber	Electrical Potential (Voltage)	Battery #1 Voltage High - Data Valid but Above Normal Operational Range – Moderately Severe Level
449	157	0	Red	Injector Metering Rail 1 Pressure	Fuel Pressure High - Data Valid but Above Normal Operational Range – Moderately Severe Level
451	157	3	Amber	Injector Metering Rail 1 Pressure	Injector Metering Rail #1 Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
452	157	4	Amber	Injector Metering Rail 1 Pressure	Injector Metering Rail #1 Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
488	105	16	Amber	Intake Manifold	Intake Manifold 1 Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
489	191	18	Amber	Transmission Output Shaft Speed	Transmission Output Shaft Speed - Data Valid but Below Normal Operational Range - Moderately Severe Level
497	1377	2	Amber	Switch Circuit	Multiple Unit Synchronization Switch Circuit - Data Erratic, Intermittent, or Incorrect
523	611	2	Amber	System Diagnostic code # 1	OEM Intermediate (PTO) Speed switch Validation - Data Erratic, Intermittent, or Incorrect
527	702	3	Amber	Circuit - Voltage	Auxiliary Input/Output 2 Circuit - Voltage Above Normal, or Shorted to High Source
528	93	2	Amber	Switch - Data	Auxiliary Alternate Torque Validation Switch - Data Erratic, Intermittent, or Incorrect
529	703	3	Amber	Circuit - Voltage	Auxiliary Input/Output 3 Circuit - Voltage Above Normal, or Shorted to High Source
546	94	3	Amber	Fuel Delivery Pressure	Fuel Delivery Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
547	94	4	Amber	Fuel Delivery Pressure	Fuel Delivery Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
551	558	4	Amber	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Voltage Below Normal, or Shorted to Low Source
553	157	16	Amber	Injector Metering Rail 1 Pressure	Injector Metering Rail #1 Pressure High – Data Valid but Above Normal Operational Range - Moderately Severe Level
554	157	2	Amber	Injector Metering Rail 1 Pressure	Fuel Pressure Sensor Error - Data Erratic, Intermittent, or Incorrect
559	157	18	Amber	Injector Metering Rail 1 Pressure	Injector Metering Rail #1 Pressure Low – Data Valid but Below Normal Operational Range - Moderately Severe Level
584	677	3	Amber	Starter Solenoid Lockout Relay Driver Circuit	Starter Relay Circuit - Voltage Above Normal, or Shorted to High Source
585	677	4	Amber	Starter Solenoid Lockout Relay Driver Circuit	Starter Relay Circuit - Voltage Below Normal, or Shorted to Low Source
595	103	16	Amber	Turbocharger 1 Speed	Turbocharger #1 Speed High - Data Valid but Above Normal Operational Range – Moderately Severe Level
596	167	16	Amber	Alternate Potential (voltage)	Electrical Charging System Voltage High – Data Valid but Above Normal Operational Range - Moderately Severe Level
597	167	18	Amber	Alternate Potential (voltage)	Electrical Charging System Voltage Low – Data Valid but Below Normal Operational Range - Moderately Severe Level
598	167	1	Red	Alternate Potential (voltage)	Electrical Charging System Voltage Low – Data Valid but Below Normal Operational Range - Most Severe Level
599	640	14	Red	Engine External Protection Input	Auxiliary Commanded Dual Output Shutdown - Special Instructions
649	1378	31	Maint	Engine Oil Change Interval	Change Lubricating Oil and Filter – Condition Exists
687	103	18	Amber	Turbocharger 1 Speed	Turbocharger #1 Speed Low - Data Valid but Below Normal Operational Range – Moderately Severe Level
689	190	2	Amber	Engine Speed	Primary Engine Speed Sensor Error – Data Erratic, Intermittent, or Incorrect
691	1172	3	Amber	Turbocharger #1 Compressor Inlet Temperature	Turbocharger #1 Compressor Inlet Temperature Sensor Circuit – Voltage Above Normal, or Shorted to High Source
692	1172	4	Amber	Turbocharger #1 Compressor Inlet Temperature	Turbocharger #1 Compressor Inlet Temperature Sensor Circuit – Voltage Below Normal, or Shorted to Low Source

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
697	1136	3	Amber	Sensor Circuit - Voltage	ECM Internal Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source
698	1136	4	Amber	Sensor Circuit - Voltage	ECM Internal Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
719	22	3	Amber	Crankcase Pressure	Extended Crankcase Blow-by Pressure Circuit - Voltage Above Normal, or Shorted to High Source
729	22	4	Amber	Crankcase Pressure	Extended Crankcase Blow-by Pressure Circuit - Voltage Below Normal, or Shorted to Low Source
731	723	7	Amber	Engine Speed Sensor #2	Engine Speed/Position #2 mechanical
					misalignment between camshaft and crankshaft
					sensors - Mechanical System Not Responding
					Properly or Out of Adjustment
					Electronic Control Module data lost - Condition
757	2802	31	Amber	Electronic Control Module	Exists
778	723	2	Amber	Engine Speed Sensor #2	Engine Speed Sensor (Camshaft) Error – Data Erratic, Intermittent, or Incorrect
779	703	11	Amber	Auxiliary Equipment Sensor Input	Warning Auxiliary Equipment Sensor Input # 3 (OEM Switch) - Root Cause Not Known
951	166	2	None	Cylinder Power	Cylinder Power Imbalance Between Cylinders - Data Erratic, Intermittent, or Incorrect
1117	627	2	None	Power Supply	Power Lost With Ignition On - Data Erratic, Intermittent, or Incorrect
1139	651	7	Amber	Injector Cylinder # 01	Injector Cylinder #1 - Mechanical System Not Responding Properly or Out of Adjustment
1141	652	7	Amber	Injector Cylinder # 02	Injector Cylinder #2 - Mechanical System Not Responding Properly or Out of Adjustment
1142	653	7	Amber	Injector Cylinder # 03	Injector Cylinder #3 - Mechanical System Not Responding Properly or Out of Adjustment
1143	654	7	Amber	Injector Cylinder # 04	Injector Cylinder #4 - Mechanical System Not Responding Properly or Out of Adjustment
1144	655	7	Amber	Injector Cylinder # 05	Injector Cylinder #5 - Mechanical System Not Responding Properly or Out of Adjustment
1145	656	7	Amber	Injector Cylinder # 06	Injector Cylinder #6 - Mechanical System Not Responding Properly or Out of Adjustment
1239	2623	3	Amber	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor 2 Circuit - Voltage Above Normal, or Shorted to High Source
1241	2623	4	Amber	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor 2 Circuit - Voltage Below Normal, or Shorted to Low Source

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
1242	91	2	Red	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor 1 and 2 - Data Erratic, Intermittent, or Incorrect
1256	1563	2	Amber	Control Module Identification Input State	Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect
1257	1563	2	Red	Control Module Identification Input State	Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect
1852	97	16	Amber	Water in Fuel Indicator	Water in Fuel Indicator - Data Valid but Above Normal Operational Range - Moderately Severe Level
1911	157	0	Amber	Injector Metering Rail	Injector Metering Rail 1 Pressure - Data Valid but Above Normal Operational Range - Most Severe Level
2111	52	3	Amber	Coolant Temperature	Coolant Temperature 2 Sensor Circuit - Voltage Above Normal, or Shorted to High Source
2112	52	4	Amber	Coolant Temperature	Coolant Temperature 2 Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
2113	52	16	Amber	Coolant Temperature	Coolant Temperature 2 - Data Valid but Above Normal Operational Range - Moderately Severe Level
2114	52	0	Red	Coolant Temperature	Coolant Temperature 2 - Data Valid but Above Normal Operational Range - Most Severe Level
2115	2981	3	Amber	Coolant Pressure	Coolant Pressure 2 Circuit - Voltage Above Normal, or Shorted to High Source
2116	2981	4	Amber	Coolant Pressure	Coolant Pressure 2 Circuit - Voltage Below Normal, or Shorted to Low Source
2117	2981	18	Amber	Coolant Pressure	Coolant Pressure 2 - Data Valid but Below Normal Operational Range - Moderately Severe Level
2182	1072	3	Amber	Engine Brake Output # 1	Engine Brake Actuator Driver 1 Circuit - Voltage Above Normal, or Shorted to High Source
2183	1072	4	Amber	Engine Brake Output # 1	Engine Brake Actuator Driver 1 Circuit - Voltage Below Normal, or Shorted to Low Source
2185	3512	3	Amber	System Diagnostic code # 1	Sensor Supply Voltage #4 Circuit – Voltage Above Normal, or Shorted to High Source
2186	3512	4	Amber	System Diagnostic code # 1	Sensor Supply Voltage #4 Circuit – Voltage Below Normal, or Shorted to Low Source
2195	703	14	Red	Auxiliary Equipment Sensor	Auxiliary Equipment Sensor Input 3 Engine Protection Critical - Special Instructions
2215	94	18	Amber	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
2216	94	1	Amber	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range – Moderately Severe Level
2217	630	31	Amber	Calibration Memory	ECM Program Memory (RAM) Corruption - Condition Exists
2249	157	1	Amber	Injector Metering Rail 1 Pressure	Injector Metering Rail 1 Pressure - Data Valid but Below Normal Operational Range - Most Severe Level
2261	94	15	Maint	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range - Least Severe Level
2262	94	17	Maint	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Least Severe Level
2263	1800	16	Amber	Battery Temperature	Battery Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
2264	1800	18	Amber	Battery Temperature	Battery Temperature - Data Valid but Below Normal Operational Range - Moderately Severe Level
2265	1075	3	Amber	Electric Lift Pump for Engine Fuel	Fuel Priming Pump Control Signal Circuit – Voltage Above Normal, or Shorted to High Source
2266	1075	4	Amber	Electric Lift Pump for Engine Fuel	Fuel Priming Pump Control Signal Circuit – Voltage Below Normal, or Shorted to Low Source
2292	611	16	Amber	Fuel Inlet Meter Device	Fuel Inlet Meter Device - Data Valid but Above Normal Operational Range - Moderately Severe Level
2293	611	18	Amber	Fuel Inlet Meter Device	Fuel Inlet Meter Device flow demand lower than expected - Data Valid but Below Normal Operational Range - Moderately Severe Level
2311	633	31	Amber	Fuel Control Valve #1	Fueling Actuator #1 Circuit Error – Condition Exists
2321	190	2	None	Engine Speed	Engine Speed / Position Sensor #1 - Data Erratic, Intermittent, or Incorrect
2322	723	2	None	Engine Speed Sensor #2	Engine Speed / Position Sensor #2 - Data Erratic, Intermittent, or Incorrect
2345	103	10	Amber	Turbocharger 1 Speed	Turbocharger speed invalid rate of change detected - Abnormal Rate of Change
2346	2789	15	None	System Diagnostic Code #1	Turbocharger Turbine Inlet Temperature (Calculated) - Data Valid but Above Normal Operational Range – Least Severe Level
2347	2790	15	None	System Diagnostic Code #1	Turbocharger Compressor Outlet Temperature (Calculated) - Data Valid but Above Normal Operational Range – Least Severe Level

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
2363	1073	4	Amber	Engine Compression Brake Output # 2	Engine Brake Actuator Circuit #2 – Voltage Below Normal, or Shorted to Low Source
2365	1112	4	Amber	Engine Brake Output # 3	Engine Brake Actuator Driver Output 3 Circuit - Voltage Below Normal, or Shorted to Low Source
2367	1073	3	Amber	Engine Compression Brake Output # 2	Engine Brake Actuator Circuit #2 – Voltage Above Normal, or Shorted to High Source
2368	1112	3	Amber	Engine Brake Output # 3	Engine Brake Actuator Driver 3 Circuit - Voltage Above Normal, or Shorted to High Source
2372	95	16	Amber	Engine Fuel Filter Differential Pressure	Fuel Filter Differential Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
2373	1209	3	Amber	Exhaust Gas Pressure	Exhaust Gas Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
2374	1209	4	Amber	Exhaust Gas Pressure	Exhaust Gas Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
2375	412	3	Amber	Exhaust Gas Recirculation Temperature	Exhaust Gas Recirculation Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source
2376	412	4	Amber	Exhaust Gas Recirculation Temperature	Exhaust Gas Recirculation Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
2377	647	3	Amber	Fan Clutch Output Device Driver	Fan Control Circuit - Voltage Above Normal, or Shorted to High Source
2425	730	4		Intake Air Heater # 2	Intake Air Heater 2 Circuit - Voltage Below Normal, or Shorted to Low Source
2426	730	3		Intake Air Heater # 2	Intake Air Heater 2 Circuit - Voltage Above Normal, or Shorted to High Source
2448	111	17	Amber/Bl g	Coolant Level	Coolant Level - Data Valid But Below Normal Operating Range - Least Severe Level
2555	729	3	Amber	Inlet Air Heater Driver #1	Intake Air Heater #1 Circuit - Voltage Above Normal, or Shorted to High Source
2556	729	4	Amber	Inlet Air Heater Driver #1	Intake Air Heater #1 Circuit - Voltage Below Normal, or Shorted to Low Source
2557	697	3	Amber	Auxiliary PWM Driver #1	Auxiliary PWM Driver #1 - Voltage Above Normal, or Shorted to High Source
2558	697	4	Amber	Auxiliary PWM Driver #1	Auxiliary PWM Driver #1 - Voltage Below Normal, or Shorted to Low Source

REFERENCE

Fault Code	J1939 SPN	J1939 FMI	Lamp Color	J1939 SPN Description	Cummins Description⁴⁵
2963	110	15	None	Engine Coolant Temperature	Engine Coolant Temperature High - Data Valid but Above Normal Operational Range - Least Severe Level
2973	102	2	Amber	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect

REFERENCE

8.5 Cab Display Module (CDM) Error Codes

NOTE:

In the case of dual codes being shown for an item (primarily the solenoid valves), the first code indicates a SHORT CIRCUIT condition, while the second code indicates an OPEN CIRCUIT condition. That is, E41 would be a SHORT in the Reel Aft solenoids (P55, P59), while E141 would indicate an OPEN circuit.

Codes		CDM Display	Description
E1			
E2		RTCH NOT ALLOWED	Return to cut activated with the header off
E3		CDM CAN BUS ERROR	CANBUS error with CDM: check electrical connections
E4		HDR DRV NOT ALLOWED	Header engage switch activated while in engine-forward
E5		CHECK HEADER ID	Header ID change has been detected while the header was engaged
E6		TEMP GAUGE SHORT	Wiring / connection problem
E7		SPEED STICK SHORT	Wiring / connection problem
E8		HEADER ENABLE SHORT	Wiring / connection problem
E9		WCM ENABLE SHORT	Wiring / connection problem
E10		CDM INTERNAL ERROR	Internal hardware or software problem
E11		CDM POWER UP	CDM module did not power up correctly
E12		WCM POWER UP	WCM module did not power up correctly
E13		FUEL SOLENOID	WCM fuel solenoid output fault detected
E14			
E15		KNIFE DRIVE PWM P68	Knife drive – PWM solenoid P68 drive fault detected
E16		DRAPER DRIVE PWM P69	Draper drive – PWM solenoid P69 drive fault detected
E17		REEL DRIVE PWM P70	Reel drive – PWM solenoid P70 drive fault detected
E18			
E19	E119	Load Sense P75	Disc block valve – Solenoid P75 drive fault detected
E20			
E21	E121	REVERSER P106	Reverser solenoid P106 fault detected
E22			
E23	E123	REVERSER	Reverser – solenoid (P65, P66, P67) fault detected
E24	E124	DECK SHFT RIGHT P95	Right deck shift solenoid P95 fault detected
E25	E125	DECK SHFT LEFT P96	Left deck shift solenoid P96 fault detected
E26	E126	DWA UP	DWA raise solenoid P72, P73 fault detected
E27	E127	DWA DOWN	DWA lower solenoid P72, P73, fault detected circuit
E28	E128	TILT RETRACT	Header tilt retract solenoid P54, fault detected
E29	E129	TILT EXTEND	Header tilt extend solenoid P53, P54, fault detected
E30	E130	4 WAY VALVE P62	4-way valve solenoid P62 fault detected

REFERENCE

Codes		CDM Display	Description
E31	E131	BYPASS VALVE P52	Bypass valve solenoid P52 fault detected
E32	E132	HEADER UP/DOWN P57	Header up / down solenoid P57, fault detected
E33	E133	SCREEN CLEANERS	Screen cleaner output fault detected
E34	E134	RIGHT STOP LAMP	Right stop lamp output fault detected
E35	E135	LEFT STOP LAMP	Left stop lamp output fault detected
E36	E136	RIGHT TURN LAMP	Right turn lamp output fault detected
E37	E137	LEFT TURN LAMP	Left turn lamp output fault detected
E38	E138	MAIN DRIVE	Main header drive solenoid P71 fault detected
E39	E139	LOW RANGE P61	Low range solenoid P61 fault detected
E40	E140	HIGH RANGE P60	High range solenoid P60 fault detected
E41	E141	REEL AFT	Reel aft solenoid P55, P59, fault detected
E42	E142	REEL FORE	Reel fore solenoid P55, P59, fault detected
E43	E143	REEL UP/DOWN P58	Reel up / down solenoid P58, P52, P62 fault detected
E44	E144	FLOAT RHS P64	RHS float solenoid P64, fault detected
E45	E145	FLOAT LHS P63	LHS float solenoid P63, fault detected
E46		SENSOR VOLTS HIGH	WCM's 9V Sensor voltage output high (wire 5)
E47		SENSOR VOLTS LOW	WCM's 9V Sensor voltage output low (wire 5)
E48		WCM OVER TEMP	WCM over temp fault
E49		WCM LOW TEMP	WCM low temp fault
E50		BATT+ OUT OF RANGE	System voltage above 15.5 VDC
E51	E151	DISK DRIVE PWM P68	Disk header drive solenoid P68 fault detected
E52			
E53			
E54			
E55		DISK SPD OVERLOAD	Low disk speed detected < setpoint
Error codes E56 to E63 not allocated			
E64		HEADER OIL PRESSURE	Header drive charge pressure low (MD #112848 on return manifold)
E65		KNIFE OVERLOAD	Low knife speed detected < setpoint
E66		### LOW VOLTS	Low system voltage <11.5 VDC
E67		TRANS OIL PRESSURE	Supercharge pressure low (switch MD #139775)
E68		HYDRAULIC OIL HOT	Oil Tank temp >230°F/110°C
E69		ENGINE AIR FILTER	Engine air filter plugged
E70		HYDRAULIC FILTER	Hydraulic filter pressure too high (MD #139722)
E71		LOW HYDRAULIC OIL	Low hydraulic oil level sensor tripped (MD #138473)
E72		### HIGH VOLTS	System voltage above 15.5 VDC

REFERENCE

Codes	CDM Display	Description
Error codes E73 to E100 not allocated		
E101	SPI ERROR	J1939 Can error
E102	CAN ERROR	J1939 Can error
E103	EEPROM READ ERROR	Internal error
E104	EEPROM WRITE ERROR	Internal error
E105	TEMP SENSOR ERROR	Internal temperature sensor error

8.6 Cab Display Module (CDM) and Windrower Control Module (WCM) Fault Codes

The CDM displays fault codes when there is a fault with one of the sensors that monitor and control windrower operation, to assist the Operator or Technician in locating a specific problem with the windrower. Refer to [8.5 Cab Display Module \(CDM\) Error Codes, page 481](#).

Index

A

A-Series headers	
A30-D	
auger speed	294
knife speed “on the go”	300
reel speed	295
A40-D	
auger speed	294
knife speed “on the go”	300
reel only speed	296
reel speed	295
reel speed “on the go”	297
reel to ground speed	297
attaching an A-Series header	237
attaching header with hydraulic center-link and optional self-alignment kit	238
attaching header with mechanical center-link	245
auger speed	294
knife speed	300
air conditioning, See HVAC system	
A/C components	
evaporator core	329
A/C cover	
installing cover	330
A/C evaporator	
cleaning evaporator core	329
antenna mountings	62
API	
definitions	29
assembly	
connecting batteries	375
installing drive wheel	417
ASTM	
definitions	29
auger speed	294
A30-D header	294
A40-D header	294
auto raise height feature	209
programming auto raise height	209
using auto raise height feature	210
automated steering	447

B

batteries	
adding electrolyte	372
boosting	372
charging	370
connecting	375
installing	374

main disconnect switch	369
maintaining	369
removing	373
belts	
A/C compressor belt	
replacing	367
tensioning	367
alternator/fan belt	
replacing (2012 and prior)	365
tensioning	365
replacing alternator/fan belt	365
brakes	
park brake	322
break-in inspections	426

C

cab display module (CDM)	
calibrating header sensors	
header float sensor	100
header height sensor	95
header tilt sensor	98
CDM display settings	
backlighting	93
buzzer volume	92
contrast	94
display language	90
windrower speed	91
CDM/WCM fault codes	152, 484
displaying locked CDM buttons	127
engine and windrower functions	74
engine error codes	152, 469
engine warning lights	85
header functions	75
locking CDM buttons	
auger speed	122
draper speed	121
header float	119
header tilt	126
knife speed	117
reel fore-aft	125
reel speed	123
rotary disc speed	118
operating screens	76
programming	89
auger reel speed	113
auto raise height	112
double windrower attachment (DWA)	110
drive manifold	110
engine intermediate speed control (ISC)	115

INDEX

hay conditioner	112
header cut width	109
header index mode	107
hydraulic center-link	101
hydraulic overload pressure	106
knife overload speed	103
knife speed	105
return to cut mode	108
rotary disc hydraulics	102
rotary disc overload speed	104
tire size	114
troubleshooting	
activating hydraulic purge	142
forcing a Header ID	134
header sensors	131
sensor input signals	132
testing double windrower attachment (DWA)	151
testing draper drive	146
testing header tilt	139
testing header up/down	135
testing knife drive	144
testing reel drive	147
testing reel fore-aft	140
testing reel up/down function	137
testing rotary disc drive	149
windrower error codes	
engine error codes	129
warning/alarms	85
cab temperature, <i>See</i> HVAC system	
California proposition 65	2
CanWin	
cab display module (CDM)	
error codes	481
CanWin service tool	
cab display module (CDM)	
clearing sub-acres	116
caster wheel, <i>See</i> wheels and tires	
CDM, <i>See</i> cab display module (CDM)	
center-links	29
<i>See also</i> hydraulic links	
<i>See also</i> mechanical links	
definitions	29
self-locking center-link hook mechanism	205
circuit breakers	
accessing	396
replacing	397
climate control system, <i>See</i> HVAC system	
climate controls	57
component locations	36
consoles	39
conversion charts	468
cutting height	206

D

D-Series headers	
attaching	213
header boots	213, 280
deck shift	291
setting float options	291
definitions	29
draper index	
setting draper index	287
draper speed	286
setting draper speed	286
setting independent of ground speed	288
setting minimum draper speed	286
header float	
float options with deck shift	291
header position	281
hydraulics configuration - D-Series	279
knife speed	
setting knife speed "on the go"	290
reel fore-aft position	281
reel height	282
reel speed	282
reel index	282
reel minimum speed	282
reel only speed	285
reel to ground speed	282
setting draper to ground speed	286
decals	
fuse box decal	398
GSL header switch functions	69
location of safety signs	13
deck shift - D-Series	291
declaration of conformity	i
definition of terms	29
double windrow attachment (DWA)	211
deck position	211
draper speed	212
draper index	
setting for D-Series	287
draper speed	
setting for D-Series	286
setting independent of ground speed	288
setting minimum draper speed	286
drive wheels	
installing	417
driving the windrower	165
cab-forward operation	168
driving on road	175
engine-forward operation	170
entering/exiting	167
reverse in cab-forward mode	169
reverse in engine-forward mode	171
spin turn	172
stopping	172

INDEX

E

- electrical
 - battery
 - adding electrolyte..... 372
 - battery main disconnect switch 369
 - boosting the battery..... 372
 - charging the battery 370
 - installing the battery 374
 - removing the battery 373
 - preventing damage to electrical system 368
- electrical system..... 165, 368
 - accessing circuit breakers and fuses 396
 - battery 369
 - maintaining the battery 369
 - checking and replacing fuses 396
 - fuse box decal..... 398
 - inspecting 125A main fuse 399
 - replacing 125A main fuse..... 399
 - replacing circuit breaker/relay..... 397
- engine 332
 - air intake system 337
 - belt..... 365
 - charge air cooling..... 359
 - cleaning filter element..... 343
 - engine controls and gauges 65
 - engine cooling system 353
 - engine error codes on CDM display 152
 - engine gearbox maintenance 363
 - adding lubricant 363
 - changing lubricant..... 364
 - checking lubricant level 363
 - general engine inspection 332
 - inspecting exhaust system 364
 - manually turning the engine 333
 - manuals..... 332
 - warning lights..... 165
- engine compartment hoods
 - closing (highest position) 308
 - closing (lower position) 307
 - opening (highest position)..... 307
 - opening (lower position)..... 306
 - positions 306
- engine cooling system..... 353
 - cooler box..... 358
 - cleaning screens and coolers..... 359
 - closing screen..... 363
 - maintaining..... 360
 - opening screen 358
 - screen cleaner duct to screen clearance..... 362
- engine coolant
 - adding coolant 357
 - changing coolant..... 354
 - checking coolant level 354
 - checking coolant strength 353
 - draining coolant 355
- radiator cap
 - inspecting radiator cap 353
- engine error codes..... 469
- engine operation
 - adjusting the throttle 368
 - engine speed 368
 - engine temperature 164
 - fuelling..... 163
 - intermediate speed control (ISC) 163
 - oil pressure 165
 - shutting down the engine 163
 - starting the engine..... 160
 - cold start 162
 - engine warm-up 162
 - normal start 161
- engine warning lights 85
- evaporator core 329
 - cleaning..... 329

F

- filters
 - air filter
 - installing primary air filter 342
 - removing primary air filter 339
 - removing/installing secondary air filter 344
 - servicing air filter restriction indicator 339
 - charge filter..... 404
 - installing 405
 - removing 404
 - engine filter
 - cleaning filter element 343
 - fuel filter..... 346
 - installing primary fuel filter 347
 - installing secondary fuel filter 348
 - removing primary fuel filter..... 346
 - removing secondary fuel filter 348
 - HVAC filter
 - cleaning return air cleaner/filter 328
 - installing fresh air filter..... 326
 - removing fresh air filter 325
 - removing/installing return air filter/cleaner 327
 - hydraulic oil filters..... 404
 - return filter 405
 - installing 406
 - removing 405
- final drives..... 191
- floats, See header float
- fuel system..... 345
 - fuel filter..... 346
 - installing primary fuel filter 347

INDEX

- installing secondary fuel filter 348
- removing primary fuel filter 346
- removing secondary fuel filter 348
- fuel specifications 465
- fuel tank
 - draining the fuel tank 349
 - fuel/water separator 351
 - removing water-in-fuel sytem 351
 - removing/installing fuel tank vent filter 345
- fuel, fluids, and lubricants 465
- priming 352
- fuse box decals 398
- fuses
 - accessing 396
 - checking and replacing 396
 - inspecting and replacing 125A 399

- G**
- gearboxes
 - engine gearbox maintenance 363
- glossary 29
- gps automated steering systems 447
- GSL, *See* header controls

- H**
- header angles 203
- header controls 68
 - console header switches 72
 - deck shift/float preset switch 72
 - DWA/swath roller switch (if installed) 73
- display selector switch 70
- ground speed lever (GSL) header switches 69
- header drive reverse button 68
- header drive switch 68
- header position switches 71
- reel and disc speed switches 71
- reel position switches 70
- header drive 202
- header float 195
 - adjusting float using drawbolts 197
 - checking float 195
 - float operating guidelines 195
 - float options and presets 198
 - float options with deck shift (D-Series) 291
- header levelling 199
- header operation 193
 - engaging the header 202
 - header and reel hydraulics 407
 - header angle 203
 - header drive 202
 - header drop rate 210
 - header float 195
 - levelling the header 199
 - operating with a header
 - A-Series header 294
 - D-Series header 279
 - R-Series header 302
 - reversing the header 203
- headers
 - A-Series headers
 - attaching
 - mechanical center-link 245
 - non-self-aligning hydraulic center-link 238
 - detaching
 - hydraulic center-link 250
 - mechanical center-link 253
 - D-Series headers
 - attaching
 - header boots 213, 280
 - mechanical center-link 225
 - non-self-aligning hydraulic center-link 219
 - self-aligning hydraulic center-link 214
 - detaching
 - hydraulic center-link 230
 - mechanical center-link 233
 - definitions 29
 - drop rate 408
 - R-Series headers
 - attaching
 - mechanical center-link 267
 - non-self-aligning hydraulic center-link 262
 - self-aligning hydraulic center-link 257
 - detaching
 - hydraulic center-link 272
 - mechanical center-link 275
- heater shut-off valves 56
- heating, *See* HVAC system
- hoods
 - closing from highest position 308
 - closing from lower position 307
 - opening to highest position 307
 - opening to lowest position 306
- horns 64
- HVAC system
 - A/C compressor 331
 - coolant cycling 159
 - servicing the compressor 332
 - A/C condenser 329
 - A/C cover
 - installing cover 330
 - removing cover 329
 - A/C evaporator
 - cleaning evaporator core 329

INDEX

- air distribution 56
 - controls 57
 - fresh air filter element cleaning 326
 - fresh air intake filter 325
 - installing filter 326
 - removing filter 325
 - heater shut-off valve 56
 - return air cleaner/filter 327
 - cleaning 328
 - removing/installing 327
 - hydraulics
 - changing hydraulic oil filters 404
 - charge filter 404
 - checking and filling hydraulic oil 401
 - D-Series header hydraulics 279
 - draining hydraulic oil 403
 - filter
 - installing charge filter 405
 - installing return filter 406
 - part numbers 467
 - removing charge filter 404
 - removing return filter 405
 - fittings
 - flare-type 458
 - O-ring boss (ORB) adjustable 460
 - O-ring boss (ORB) non-adjustable 462
 - O-ring face seal (ORFS) 463
 - header and reel hydraulics 407
 - flow control blocks 407
 - header drop rate 408
 - pressure compensator valve 407
 - hydraulic hoses and lines 411
 - hydraulic oil cooler 403
 - hydraulic safety 6
 - reel drop rate
 - adjusting 408
 - return filter 405
 - traction drive hydraulics 409
 - charge pump pressure 410
 - transmission oil pressure 409
 - warnings 400
- K**
- knife speed
 - A-Series header 300
 - setting “on the go” for A-Series header 300
 - setting “on the go” for D-Series header 290
- L**
- lighting 49
 - beacons 52
 - replacing bulb 389
- cab-forward mode
 - field 49
 - road (optional) 51
 - engine-forward mode
 - field 50
 - field lights
 - adjusting field lights 380
 - replacing bulb 381
 - flood lights
 - adjusting cab-forward flood lights 381
 - adjusting rear flood lights 386
 - replacing bulb in cab-forward flood light 381
 - replacing bulb in rear flood light 386
 - headlights
 - aligning headlights 376
 - replacing bulb 378
 - HID auxiliary lighting 53, 383, 449
 - adjusting HID lights 383
 - replacing lamp 384
 - interior lights 58
 - ambient light 395
 - console gauge light 394
 - dome light 395
 - red and amber lights
 - replacing bulbs 388
 - red tail lights (if installed)
 - replacing bulb 388
 - turn signal indicators 396
 - lubricating windrowers 314
 - lubricants/fluids/system capacities 466
 - lubricating engine gearbox 363
 - lubricating wheel drive 413
 - adding lubricant 414
 - changing wheel drive lubricant 414
 - lubricating wheel drives
 - checking lubricant levels 413
 - lubrication points 315
 - lubrication procedure 314
 - recommended fuel, fluids, and lubricants 465
 - storing lubricants and fluids 465
- M**
- maintenance 305
 - A/C compressor belt
 - replacing 367
 - tensioning 367
 - battery 369
 - break-in inspections 426
 - electrical system 368
 - engine 332
 - air intake system 337
 - charge air cooling 359
 - engine oil

INDEX

checking	335	draper speed	212
general engine inspection	332	driving the windrower	165
manually turning the engine	333	operating with a header	193
engine belt	365	A-Series header	294
engine compartment		D-Series header	279
opening and closing hood	306	R-Series header	302
opening and closing platforms	309	preseason checks/annual service	158
engine cooling system	353	distributing A/C compressor coolant	159
engine exhaust system	364	return to cut feature	
engine gearbox	363	programming return to cut feature	207
engine oil	335	using return to cut feature	208
filter part numbers	467	swath roller	212
fuel system	345	operator presence system	41
priming the fuel system	352	engine and transmission	41
fuel, fluids, and lubricants	465	header drive	41
HVAC system	325	operator's seat	
fresh air filter element cleaning	326	adjusting armrest	43
lighting		adjusting armrest angle	45
aligning headlights	376	adjusting fore-aft position	42
lubricating the windrower	314	adjusting lumbar support	45
maintenance record	427	adjusting seat tilt	44
maintenance safety	5	adjusting suspension and seat height	42
maintenance schedule	425	adjusting vertical dampener	43
operator presence system	316	fore-aft isolator lock	44
operator's station	316	operator's station	39, 316
engine interlock	317	AM/FM radio	62
preparing for servicing	305	beacon lighting	52
safety systems	316	cab-forward lighting - field mode	49
system priming	352	cab-forward lighting - road (optional)	51
wheel and tire	411	climate controls	57
maintenance platforms	309	emergency exit	59
maintenance schedule	425	engine controls and gauges	65
metric bolts		engine interlock	317
torque specifications	455	engine-forward lighting - road	50
minimum reel speed	282	GSL adjustments	317
		adjusting GSL fore-aft movement	318
		adjusting GSL lateral movement	317
		header controls	68
		HID lighting (optional)	53
		horn	64
		interior light	58
		interlock switch	322
		lighting	49
		operator amenities	60
		operator console	39
		operator presence system	41, 316
		engine and transmission	41
		header drive	41
		parking brake	322
		rear view mirror	55
		safety systems	316
		seat belts	47, 316
		steering	319
		steering column	48
O			
oils (engine)	335		
adding	337		
changing engine oil	336		
checking level	335		
draining	336		
replacing engine oil filter	336		
operations	157		
<i>See also</i> engine operation			
<i>See also</i> header operation			
auto raise height feature	209		
programming auto raise height feature	209		
using auto raise height	210		
break-in period	158		
daily check	159		
double windrowing	211		
deck position	211		

INDEX

- training seat 46
- windrower controls 66
- windshield wiper 54
- options and attachments 447
 - AM/FM radio 447
 - automated steering 447
 - booster spring kit - external 447
 - booster spring kit - internal 447
 - case drain kit 447
 - center-link
 - hydraulic 449
 - mechanical 449
 - double windrow attachment (DWA) 448
 - engine block heater 448
 - fan air baffle 448
 - header drive reverser 448
 - HID auxiliary lighting 449
 - light header flotation 449
 - lighting/marketing for cab-forward travel 449
 - pressure sensor kit 449
 - rotary header drive hydraulics (13-foot) 450
 - self-aligning center-link 450
 - swath roller 212, 450
 - towing harness 450
 - warning beacons 450
 - weight box 184, 451
 - windshield shades 451
- owner/operator responsibilities 153
- P**
- platforms 309
 - closing platform (major service) 312
 - closing platform (standard position) 310
 - opening platform (major service) 311
 - opening platform (standard position) 309
- priming
 - fuel system 352
- programming
 - auto raise height feature 209
 - cab display module (CDM) 89
 - return to cut-feature 207
- R**
- R-Series headers
 - attaching 257
 - kit for 13-foot R85 302
 - setting disc speed 302–303
- radiator
 - inspecting radiator cap 353
- radios 62
- rear view mirrors 55
- reel height
 - D-Series header 282
 - reel index 282
 - reel minimum speed 282
 - reel speed
 - A30-D header 295
 - A40-D header 295
 - D-Series header 282
 - reel-to-ground speed 282
 - references
 - conversion chart 468
 - definition of terms 29
 - relays
 - replacing 397
 - return to cut feature 207
 - programming return to cut 207
 - using return to cut 208
 - revisions list v
 - rpm
 - definitions 29
- S**
- SAE
 - bolt torques 453
 - definitions 29
- safety
 - alert symbols 1
 - battery safety 8
 - engine safety 10
 - engine electronics 11
 - high pressure rails 10
 - general safety 3
 - header safety props 193
 - hydraulic safety 6
 - maintenance and servicing 5
 - operational safety 157
 - safety sign decals 12
 - installing decals 12
 - interpreting decals 17
 - sign location 13
 - signal words 2
 - tire safety 7
- screen cleaners
 - adjusting clearance 362
- seat belts 47
 - maintaining seat belts 316
- serial numbers
 - location vi
- shutting down the engine 163
- specifications 31
 - filter part numbers 467
 - fuel 465
 - torque specifications 453
 - windrower dimensions 34

INDEX

- spm
 - definitions 29
- starting the engine 160
 - cold start..... 162
 - engine warm-up 162
 - normal start..... 161
- steering 319
 - adjusting steering chain tension 321
 - adjusting steering column 48
 - checking steering link pivots..... 319
- storing windrowers..... 191
- swath rollers..... 212
- symbols
 - definition 154
 - engine function..... 154
 - header function 156
 - windrower operating 155
- T**
- temperature
 - cab 56
 - engine 164
- torque specifications 453
 - flare-type hydraulic fittings 458
 - metric bolt specifications..... 455
 - bolting into cast aluminum 458
 - O-ring boss (ORB) fittings
 - (non-adjustable) 462
 - O-ring boss (ORB) hydraulic fittings
 - (adjustable) 460
 - O-ring face seal (ORFS) fittings..... 463
 - SAE bolt torque specifications..... 453
- towing
 - attaching tow-bar to windrower 184
 - towing header with windrower 178
 - towing the windrower (emergency) 190
- tractors
 - definitions 29
- training seats..... 46
- transporting
 - attaching header transport hitch to header..... 184
 - converting from field to transport
 - mode 178, 187
 - converting from transport to field mode 181
- troubleshooting
 - cab air 442
 - electrical 435
 - engine 429
 - header drive..... 437
 - hydraulics 436
 - operator's station..... 446
 - steering and ground speed control..... 441
 - traction drive 438
- trucks
 - definitions 29
- V**
- ventilating, See HVAC system
- W**
- weight boxes
 - attaching to windrower 184
- wheels and tires 411
 - adjusting caster tread width..... 173
 - caster wheel 173, 418
 - anti-shimmy dampener 424
 - ballast requirement 425
 - caster wheel nut torque 419
 - inflating caster tire..... 418
 - installing forked caster wheel 422
 - installing formed caster wheel 423
 - lowering formed/forked caster wheel 421
 - raising forked/formed caster wheel 420
 - removing forked caster wheel 422
 - removing formed caster wheel 423
 - servicing caster wheels 420
 - drive wheel
 - drive wheel nut torque procedure 412
 - inflating drive tire..... 411
 - lowering 417
 - raising 415
 - removing 416
 - servicing..... 415
 - safety 7
 - wheel drive
 - adding lubricant 414
 - changing lubricant..... 414
 - checking lubricant levels..... 413
 - lubricating wheel drive 413
- windshield wipers 54

MacDon Industries Ltd.

680 Moray Street
Winnipeg, Manitoba
Canada R3J 3S3
t. (204) 885-5590
f. (204) 832-7749

MacDon, Inc.

10708 N. Pomona Avenue
Kansas City, Missouri
United States 64153-1924
t. (816) 891-7313
f. (816) 891-7323

MacDon Australia Pty. Ltd.

A.C.N. 079 393 721
P.O. Box 243, Suite 3, 143 Main Street
Greensborough, Victoria, Australia 3088
t. 03 9432 9982
f. 03 9432 9972

LLC MacDon Russia Ltd.

123317 Moscow, Russia
10 Presnenskaya nab, Block C
Floor 5, Office No. 534, Regus Business Centre
t. +7 495 775 6971
f. +7 495 967 7600

CUSTOMERS

MacDon.com

DEALERS

Portal.MacDon.com

Trademarks of products are the marks of their
respective manufacturers and/or distributors.

Printed in Canada